

Lynx[®] NGT-9000


MultiLink Surveillance System

Model: NGT-9000, NGT-9000+, and NGT-9000D
Part Number: 9029000-20000 (Panel Mount)

Model: NGT-9000R, NGT-9000R+, and NGT-9000RD
Part Number: 9029000-40000 (Remote Mount)

Installation Manual

This manual contains installation instructions and recommended flightline maintenance information for the Lynx NGT-9000 MultiLink Surveillance System, Configuration Module, and Directional Antenna. Guidelines for external equipment necessary for installation are included. This information is supplemented and kept current by revisions, service letters and service bulletins.

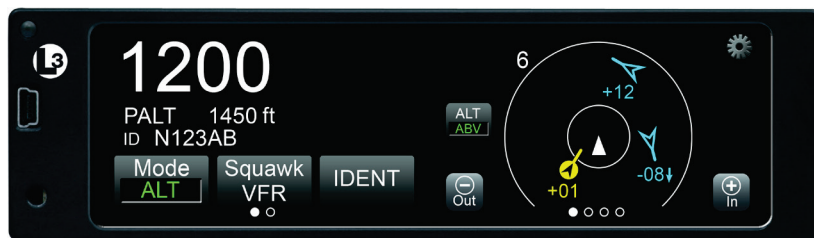

Aviation Products

0040-17001-01 (Revision D)
June 10, 2015

Foreword

This manual provides information intended for use by persons who, in accordance with current regulatory requirements, are qualified to install this equipment. Installation requirements may vary, depending on the particularities of each aircraft, and this manual is intended as a guideline for that purpose. This manual assumes familiarity with the setup and operation of the aircraft systems that interface with the Lynx NGT-9000.

If further information is required, please contact:

L-3 Avionics Systems

Attn: Field Service Engineering
5353 52nd Street, S.E.
Grand Rapids, MI USA 49512-9704
Telephone: (800) 453-0288 or (616) 949-6600
Fax: (616) 977-6898
Email: fieldservice.avionics@L-3com.com
Web: <http://www.L-3avionics.com>

This manual is distributed with permission by:

L-3 Avionics Systems

5353 52nd Street, S.E.
Grand Rapids, MI USA 49512-9704
Telephone: (800) 453-0288 or (616) 949-6600
Fax: (616) 977-6898
Email: avionics.techpubs@L-3com.com

We welcome your comments concerning this manual. Although every effort has been made to keep it free of errors, some may occur. When reporting a specific problem, please describe it briefly and include the manual part number, the paragraph/figure/table number, and the page number. Send your comments to the address or email above:

Disclaimer

This Installation Manual contains information that is considered relevant only at the time of distribution with the Avionics Systems product for which it is shipped. Information in this manual is subject to change without notice.

WARNING

INFORMATION SUBJECT TO EXPORT CONTROL LAWS

This technical data is controlled under the Export Administration Regulations (EAR) and may not be exported without proper authorization by the U.S. Department of Commerce.

© Copyright 2015
ACSS[®]

Refer to the following for additional copyright information
<https://www.l-3avionics.com/open-source.aspx>

<https://www.l-3avionics.com/customer-support/flight-data-info/open-source-software-report.aspx>

Trademarks

Lynx[®] is a registered trademark of L-3 Avionics Systems

Patent Pending

About This Manual

SECTION 1 – GENERAL INFORMATION

This section provides the following information: unit configurations, unit functionality, items required but not supplied with the unit, equipment specifications, installation approval/limitations and TSO approvals.

SECTION 2 - INSTALLATION

This section contains instructions to locate, assemble and install the Lynx NGT-9000 MultiLink Surveillance System as well as information for unpacking equipment, and inspection procedure for in-shipment damage.

SECTION 3 – INSTALLATION CHECKOUT

This section contains instructions for post installation setup, post installation and return to service checkout.

SECTION 4 – MAINTENANCE

This section contains general flightline maintenance procedures. It includes periodic maintenance, troubleshooting and instructions for the return of defective components.

APPENDIX A – SIGNAL AND CABLE CHARACTERISTICS

This appendix defines the electrical characteristics of all input and output signals.

APPENDIX B – ENVIRONMENTAL QUALIFICATION FORM

This appendix provides the environmental qualification test data.

APPENDIX C – CONFIGURATION AND CHECKOUT LOG

This appendix provides the installer a way to record configuration options.

Descriptions for Warnings, Cautions and Notes are described below and are used through the manual to highlight importuned information.

WARNING

Used to give notice to or call one's attention to beforehand especially of danger (such as a warning to a Flight Crew person or a warning to a mechanic before performing a dangerous task).

CAUTION

Statement that expresses the need for heightened awareness to conditions that can cause damage to equipment.

NOTE

Used to point out a procedure, event or practice that it is desirable to highlight.

References

Service Literature	Description
None	

PUBLICATION	DESCRIPTION
0040-17000-01	Pilot's Guide for the NGT-9000
0040-172500-01	Pilot's Guide for the CP-2500
0040-172501-01	Installation Manual for the CP-2500

To get an up-to-date listing of all Avionics Systems technical publications and service literature go to www.L-3avionics.com and click on the Customer Support tab and select Technical Publications.

Contact Avionics Systems Customer Service [1-800-453-0288] to determine availability of technical publications and directives.

Service literature and publications can be obtained by either downloading from the L-3 Technical Publications website (may require secure site access) or by receiving a copy via email. Send an email request to avionics.techpubs@l-3com.com.

List of Effective Pages

Dates of original and changed pages are:	Revision AJanuary 15, 2015
	Revision B.....February 20, 2015
	Revision C.....March 12, 2015
	Revision DJune 10, 2015

Total number of pages in this publication consists of the following:

Title page
Page A
i thru xiv
1-1 thru 1-46
2-1 thru 2-30
3-1 thru 3-40
4-1 thru 4-40
A-1 thru A-24
B-1 thru B-4
C-1 thru C-2

Revision Highlights

Revision D is a republication. This republication completely replaces the existing book. Discard all previous revisions of this manual.

Summary of Changes:

- Adding the PIM-9000 Wifi interface adapter and install kit.
- Add antenna connection removal tool p/n
- Lynx MAT part number update (-0104).
- Update interconnect drawings to update RS-422 callouts (+/-, A/B), update notes, and remove references to braid.
- Remove braiding from around mating connector harness.
- Minor corrections and additions.
- Correct indicator lamp operation details.
- Correct lamp name and CP-2500 message text.
- Remove all references to “No TIS-B Coverage” lamp.
- Correct lamp name and CP-2500 message text.
- Add Antenna Coax Ohm Check to maintenance section.
- Update troubleshooting tables in maintenance section.
- Remove SATCOM limitations.

Table of Contents

Paragraph	Page
Foreword	A
About This Manual	i
References	ii
List of Effective Pages	iii
Table of Contents	iv
List of Illustrations	viii
List of Tables	x
Abbreviations, Acronyms, and Symbols	xi

Section 1 General Information

1.1	Introduction	1-1
1.2	Functional Description	1-3
1.2.1	GPS Functional Overview	1-3
1.2.2	ADS-B System Overview	1-4
1.2.3	ADS-R System Overview	1-4
1.2.4	TIS-B System Overview	1-4
1.2.5	FIS-B System Overview	1-5
1.2.6	Traffic Awareness System (option) Overview	1-5
1.2.7	Discrete Inputs and Outputs	1-5
1.3	Equipment Descriptions	1-7
1.3.1	Panel Mount Lynx NGT-9000	1-7
1.3.2	Remote Mount Lynx NGT-9000	1-7
1.3.3	Model Options	1-8
1.3.4	Detachable Configuration Module (DCM)	1-8
1.3.5	System Unlock Code	1-8
1.4	Interfaces	1-9
1.4.1	ADS-B Out Fail	1-10
1.4.2	AHRS Input	1-10
1.4.3	Altitude Encoder Input	1-10
1.4.4	Audio Out	1-11
1.4.5	RF Suppression Input/output	1-11
1.4.6	TAS Alert	1-11
1.4.7	WiFi Interface	1-11
1.4.8	WOW Input	1-11
1.4.9	Maintenance Interface	1-11
1.4.10	GPS Antenna	1-11
1.4.11	L-Band (978/1030/1090 MHz) Antenna	1-12
1.4.12	Directional Antenna	1-12
1.4.13	Traffic Display	1-12
1.4.14	Weather Display	1-12
1.4.15	Control Panel	1-12
1.5	Installation Considerations	1-13
1.6	Specifications	1-14
1.7	TSO Information	1-19
1.7.1	Non-TSO Functions	1-19
1.7.2	Panel Mount Lynx NGT-9000	1-19
1.7.3	Remote Mount Lynx NGT-9000	1-21
1.7.4	Failure Classification	1-23
1.8	Modifications	1-24
1.9	Software Versions	1-24

Table of Contents (continued)

Paragraph	Page
-----------	------

General Information (continued)

1.10	Equipment Required Not Supplied	1-25
1.10.1	Installation Kits	1-28
1.10.2	Antenna Cables	1-32
1.11	Equipment Interfaces	1-35
1.11.1	GPS Antenna	1-35
1.11.2	L-Band Antenna	1-36
1.11.3	Directional Antenna	1-37
1.11.4	Traffic Displays	1-38
1.11.5	Weather Display	1-39
1.11.6	WiFi Serial Adapter	1-39
1.11.7	Applications (APPS)	1-39
1.11.8	Control Panel	1-39
1.12	Software Updates	1-40
1.12.1	Website Download	1-40
1.12.2	Compact Disc	1-40
1.12.3	Installation Procedure for LynxMMS USB Driver	1-41
1.13	Installation Approval and Limitations	1-45

Section 2 Installation

2.1	Introduction	2-1
2.2	Unpacking and Inspecting	2-1
2.2.1	Transport and Storage Considerations	2-1
2.3	Installation Procedures	2-2
2.3.1	Panel Mount Location	2-3
2.3.2	Remote Mount Location	2-3
2.3.3	Electrical Connections	2-8
2.3.4	Panel Mount Lynx NGT-9000 Installation	2-19
2.3.5	Remote Mounted Lynx NGT-9000 Installation	2-21
2.3.6	CP-2500 Installation Guidelines	2-22
2.3.7	Antenna Installation Guidelines	2-23

Section 3 Installation Checkout

3.1	Introduction	3-1
3.2	Basic Operation	3-1
3.2.1	Panel Mount Lynx NGT-9000	3-1
3.2.2	Remote Mount Lynx NGT-9000	3-3
3.3	Configure WiFi Serial Adapter	3-7
3.4	Maintenance PC	3-8
3.4.1	Enable MPC to Unit Communication via USB Connection	3-8
3.4.2	Enable MPC to Unit Communication via WiFi Connection	3-11
3.5	Maintenance Mode	3-12
3.6	Verify Software Version	3-13
3.7	Select Configuration Options	3-14
3.7.1	Aircraft Specific Options	3-15
3.7.2	I/O Options – AHRS and Altitude	3-18
3.7.3	I/O Options – Misc	3-19
3.7.4	Backup	3-21

Table of Contents (continued)

Paragraph	Page
Installation Checkout (continued)	
3.8 Calibration Setup	3-22
3.8.1 Audio Calibration and Test	3-22
3.8.2 Screen Calibration	3-22
3.8.3 TAS Antenna Calibration	3-23
3.8.4 Clear Fault Log	3-23
3.9 Interface Check	3-24
3.9.1 Live Data - Discrete Inputs, Altitude, and Heading	3-24
3.9.2 Live Data - GPS	3-25
3.9.3 Live Data – ADS-B	3-26
3.9.4 Live Data – Simulate	3-27
3.9.5 Configuration Check Complete	3-27
3.10 Installation Checkout	3-28
3.10.1 Functional Checks	3-28
3.10.2 Ground Checks	3-33
3.10.3 Electromagnetic Interference (E.M.I.) Check	3-39
3.10.4 Panel Mount Lynx NGT-9000 Display Check	3-40
3.10.5 Flight Test	3-40
3.10.6 Installation Checkout Complete	3-40
 Section 4 Maintenance 	
4.1 Introduction	4-1
4.2 Continued Airworthiness	4-1
4.3 Periodic Maintenance	4-1
4.3.1 Screen Calibration	4-2
4.3.2 Directional Antenna (NY156 and NY164)	4-3
4.4 Fault Isolation	4-3
4.4.1 System Status Messages	4-14
4.4.2 Antenna Coax Ohm Check	4-20
4.5 Using the Maintenance PC	4-20
4.5.1 Load Software	4-21
4.5.2 Load Databases	4-22
4.5.3 View or Retrieve Data	4-23
4.5.4 Configuration Restore	4-33
4.5.5 Service	4-34
4.6 Return to Service	4-35
4.6.1 Panel Mount Lynx NGT-9000	4-35
4.6.2 Remote Mount Lynx NGT-9000	4-35
4.6.3 Lynx NGT-9000 Functional Check Procedure	4-35
4.6.4 Detachable Configuration Module	4-36
4.6.5 Directional Antenna (NY156 and NY164)	4-37
4.6.6 L-Band (UAT/1090) Antenna	4-37
4.6.7 GPS Antenna	4-37
4.7 Disposition of Failed Items	4-38

Table of Contents (continued)

Paragraph	Page
 Appendix A Interface Signal Name & Cable Characteristics	
A.1 Introduction	A-1
A.2 Input and Output Interfaces	A-1
A.2.1 Input Power	A-1
A.2.2 RF Suppression Bus	A-1
A.2.3 Audio Output	A-1
A.2.4 Gilham Input (Altitude Input)	A-1
A.2.5 RS-232 Interface	A-2
A.2.6 RS-422 Interface	A-3
A.2.7 ARINC 429 Input	A-3
A.2.8 ARINC 429 Output	A-4
A.2.9 Discrete Input	A-5
A.2.10 Discrete Output	A-5
A.2.11 I ² C Serial Bus (Detachable Configuration Module)	A-6
A.2.12 Antenna Connections	A-6
A.3 Pin Definition Summary	A-7
A.4 [J1 connector]	A-8
 Appendix B Environmental Qualification Form	
B.1 Introduction	B-1
B.2 Lynx NGT-9000 Environmental Qualification Form	B-1
B.3 NY156 & NY164 Environmental Qualification Form	B-4
 Appendix C Configuration and Checkout Log	
Configuration and Checkout	C-1

List of Illustrations

Figure	Page
Figure 1-1: Panel Mount Lynx NGT-9000	1-1
Figure 1-2: Remote Mount Lynx NGT-9000.....	1-2
Figure 1-3: Example of Own Aircraft UAT, 1090ES, and TAS Traffic.....	1-6
Figure 1-4: System Block Diagram	1-10
Figure 2-1: Outline Dimensions for Panel Mount Lynx NGT-9000	2-4
Figure 2-2: Outline Dimensions for Panel Mount Mounting Rack.....	2-5
Figure 2-3: Outline Dimensions for Remote Mount Lynx NGT-9000	2-6
Figure 2-4: Outline Dimensions for Remote Mount Mounting Tray	2-7
Figure 2-5: Outline Dimensions for the Detachable Configuration Module (9230-17003-01)	2-9
Figure 2-6: Interconnect Wiring Diagram	2-10
Figure 2-7: Mating Connector (P1) and Pin Assignments	2-13
Figure 2-8: P1 Mating Connector Assembly	2-14
Figure 2-9: Example of P1 Mating Connector and Wiring Harness	2-15
Figure 2-10: Example of Assembled RF Cable.....	2-16
Figure 2-11: Coax Cable Preparation	2-17
Figure 2-12: Straight Coax Contact Shield Termination	2-18
Figure 2-13: Right Angle Coax Contact Installation	2-18
Figure 2-14: Connector Assembly	2-19
Figure 2-15: Panel Assembly	2-20
Figure 2-16: Remote Assembly	2-22
Figure 2-17: Example of Antenna Mounting Locations.....	2-23
Figure 2-18: Directional Antenna Mounting Location.....	2-27
Figure 2-19: NY156 / NY164 Directional Antenna Outline Dimensions.....	2-28
Figure 2-20: Antenna Mounting Holes	2-30
Figure 2-21: Directional Antenna Installation	2-30
Figure 3-1: Transponder/Traffic Screens	3-2
Figure 3-2: CP-2500 Normal Mode	3-4
Figure 3-3: Lynx MAT – WiFi Serial Adapter	3-7
Figure 3-4: Maintenance Application Tool – Main Page – Connect via USB	3-9
Figure 3-5: Lynx MAT – Main Screen	3-9
Figure 3-6: Lynx MAT – Restart Unit	3-10
Figure 3-7: Maintenance Application Tool – Main Page – Connect Via WiFi	3-11
Figure 3-8: Activate Maintenance Mode Window	3-12
Figure 3-9: Maintenance Mode Screens.....	3-12
Figure 3-10: Lynx MAT – Check Versions	3-13
Figure 3-11: Lynx MAT –Aircraft Specific Options	3-15
Figure 3-12: Lynx MAT – I/O Options – AHRS and Altitude	3-18
Figure 3-13: Lynx MAT – I/O Options – Misc.....	3-19
Figure 3-14: Lynx MAT – Configuration - Backup.....	3-21
Figure 3-15: Lynx MAT – Setup - Calibration.....	3-22
Figure 3-16: Lynx MAT – Info – Fault Log	3-23
Figure 3-17: Lynx MAT – Live Data - Inputs	3-24
Figure 3-18: Lynx MAT – Live Data - GPS	3-25
Figure 3-19: Lynx MAT – Live Data - GPS	3-26

List of Illustrations (continued)

Paragraph	Page
Figure 3-20: Lynx MAT – Live Data - Simulate	3-27
Figure 3-21: Examples of Start-up Screens	3-29
Figure 3-22: Example of Normal Operation	3-29
Figure 3-23: Example of Flight ID Input Screen	3-30
Figure 3-24: Example of System Test Results	3-30
Figure 3-25: Options Screen... ..	3-31
Figure 3-26: Lynx MAT – Ground Test	3-34
Figure 4-1: Activate Maintenance Mode Window	4-2
Figure 4-2: Maintenance Mode Screens	4-2
Figure 4-3: Lynx MAT – Update Software	4-21
Figure 4-4: Lynx MAT – Update Database	4-22
Figure 4-5: Lynx MAT – Information	4-23
Figure 4-6: Lynx MAT – Version	4-23
Figure 4-7: Lynx MAT –Configuration - Restore	4-33
Figure 4-8: Lynx MAT – Service	4-34

List of Tables

Table	Page
Table 1-1: System Components Panel Mount Lynx NGT-9000.....	1-1
Table 1-2: System Components Remote Mount Lynx NGT-9000	1-2
Table 1-3: Built-in Interfaces	1-9
Table 1-4: Specifications for Panel Mount Lynx NGT-9000.....	1-14
Table 1-5: Specifications for Remote Mount Lynx NGT-9000R.....	1-16
Table 1-6: Specifications for Detachable Configuration Module	1-18
Table 1-7: Applicable TSO & Deviations.....	1-19
Table 1-8: Applicable TSO & Deviations.....	1-21
Table 1-9: Failure Classification.....	1-23
Table 1-10: Hardware Modifications	1-24
Table 1-11: Software Revisions	1-24
Table 1-12: Equipment List	1-25
Table 1-13: Panel Mount Installation Kit P/N 9060-17000-01 for Straight RF Connector	1-28
Table 1-14: Panel Mount Installation Kit P/N 9060-17000-02 for Right Angle RF Connector	1-29
Table 1-15: Remote Mount Installation Kit P/N 9060-17500-01 for Straight RF Connector	1-30
Table 1-16: Remote Mount Installation Kit P/N 9060-17500-01 for Right Angle RF Connector.....	1-31
Table 1-17: PIM-9000 Installation Kit P/N 9060-17001-01	1-31
Table 1-18: Coaxial Cable Specifications	1-32
Table 1-19: Directional Antenna SIGMA and DELTA Port Cable Vendors	1-33
Table 1-20: Cable to Connector Reference	1-34
Table 1-21: GPS Antennas	1-35
Table 1-22: L-Band Antennas	1-36
Table 1-23: Directional Antenna Model Options and Specifications.....	1-37
Table 1-24: Directional Antenna Installation Kit 817-10009-xxx	1-38
Table 1-25: Airframe Installation Kits	1-38
Table 1-26: Traffic Displays	1-38
Table 1-27: FIS-B WX Displays	1-39
Table 1-28: RS-232 to WiFi Serial Adapter.....	1-39
Table 1-29: APPS for PED.....	1-39
Table 1-30: Control Panel	1-39
Table 1-31: CD Part Numbers and Contents	1-40
Table 4-1: Troubleshooting The Panel Mount Lynx NGT-9000	4-4
Table 4-2: Troubleshooting The Remote Mount Lynx NGT-9000R	4-11
Table 4-3: System Status Messages	4-14
Table 4-4: List of Fault Log Messages.....	4-24
Table A-1: Connector (P1) Pin Assignments	A-7
Table C-1: Log Sheet for Configuration and Checkout.....	C-1

Abbreviations, Acronyms, and Symbols

ITEM	DEFINITION
°	Degrees
°C	Degrees Celsius
°F	Degrees Fahrenheit
1090ES	1090 megahertz extended squitter
AC	Advisory Circular
ACSS	Aviation Communication and Surveillance Systems
ADS-B	Automatic Dependent Surveillance-Broadcast
ADS-R	Automatic Dependent Surveillance - Rebroadcast
AHRS	Attitude & Heading Reference System
AIRB	Basic Airborne Situation Awareness
ARINC	Aeronautical Radio, Incorporated
ASA	Aircraft Surveillance Applications
ASSAP	Airborne Surveillance and Separation Assurance Processing
ATC	Air Traffic Control
ATCRBS	Air Traffic Control Radar Beacon System
ATM	Air Traffic Management
AWG	American Wire Gauge
BIT	Built In Test
Cal	Calibration
CCW	Counter Clock Wise
CDTI	Cockpit Display of Traffic Information
CFR	Code of Federal Regulations
CONUS	Continental United States
CW	Clock Wise
dB	Decibel
dBm	Decibels referenced to one Milli-watt
dc	Direct Current
DCM	Detachable Configuration Module
DL	Data Loading
DME	Distance Measuring Equipment
DO-	RTCA Document Number Prefix (i.e., DO-160)
DTIF	Display Traffic Information File
EMI	Electro-Magnetic Interference
EVAcq	Enhanced Visual Acquisition Application
FAA	Federal Aviation Administration
FAR	Federal Aviation Regulations
FCC	Federal Communications Commission
FIS-B	Flight Information Services - Broadcast
fl	Foot-Lambert
FPGA	Field Programmable Gate-Array

Abbreviations, Acronyms, and Symbols

ITEM	DEFINITION
FSS	Flight Service Station
Ft	feet
FW	Firmware
g	Gravitational Acceleration
GPS	Global Positioning System
H/W	Hardware
hPa	Hectopascal
Hz	Hertz
i.e.	That is
IAW	In Accordance With
ID	Identification
in Hg	Inches of Mercury
Kg	Kilogram
kHz	Kilohertz
Kts	Knots
L-3 AS	L-3 Communications Avionics Systems
LLC	Limited Liability Company
LRU	Line Replaceable Unit
Lynx MAT	Maintenance Application Tool
m	Meter
Max	Maximum
MSG	Message
MHz	Megahertz
mm	Millimeter
MPC	Maintenance Personal Computer
MSS	MultiLink Surveillance System
N/A	Not Applicable
NACp	Navigation Accuracy Category for position
NAR	Non Altitude Reporting
NAS	National Airspace System
NC	Not Connected
NEXRAD	Next Generation Radar Reflectivity
NGT	Not an abbreviation
NIC	Navigation Integrity Category
No.	Number
NOTAM	Notice to Airmen
NVM	Non-Volatile Memory
Orig	Original
P/N	Part Number
PBIT	Periodic Built-In Test
PED	Personal Electronic Device

Abbreviations, Acronyms, and Symbols

ITEM	DEFINITION
PFD	Primary Flight Display
RAIM	Receiver Autonomous Integrity Monitoring
RBA	Risk-Based Authentication
RF	Radio Frequency
RTCA	RTCA, Inc.
S/N	Serial Number
S/W	Software
SBAS	Satellite Based Augmentation systems
SPI	Special Position Identification
STC	Supplemental Type Certification
STIF	Standard TCAS Intruder File
SUA	Special Use airspace
SURF	Basic Surface application
TAF	Terminal Area Forecasts
TAS	Traffic Advisory System
TCAS	Traffic Alert and Collision Avoidance System
TFR	Temporary Flight Restrictions
TIS-B	Traffic Information Service – Broadcast
TSAA	Traffic and Situational Awareness Alerts
TSO	Technical Standard Order
UAT	Universal Access Transceiver
USB	Universal Serial Bus
UTC	Coordinated Universal Time
Vdc	Volts Direct Current
VFR	Visual Flight Rules
VHF	Very High Frequency
VOR	VHF Omni-directional
W	Watts
WAAS	Wide Area Augmentation System
WiFi	Wireless Fidelity
WOW	Weight On Wheels
Wx	Weather

This page intentionally blank

Section 1

General Information

1.1 INTRODUCTION

This section includes descriptions, specifications, TSO information, equipment required but not supplied, and installation approval and limitations for the Lynx® MultiLink Surveillance System Lynx NGT-9000 family (Release 1).

Available models of the panel mount Lynx NGT-9000 are detailed in Table 1-1 and an example of the unit is shown in Figure 1-1. Available models of the remote mount Lynx NGT-9000 are detailed in Table 1-2 and an example of the unit is shown in Figure 1-2.

Included at the end of this section is a list of compatible equipment and equipment required but not supplied with the system.

Table 1-1: System Components Panel Mount Lynx NGT-9000

COMPONENT	MODELS	H/W PART NO.	S/W PART NO.
MultiLink Surveillance System	NGT-9000 NGT-9000+ ⁽¹⁾ NGT-9000D ⁽¹⁾	9029000-20000	9020010-001 ⁽²⁾ 9020010-002 ⁽²⁾
Detachable Configuration Module	DCM	9230-17003-01	--
GPS Antenna	See Table 1-21	--	--
L-Band Antenna	See Table 1-22	--	--
Directional Antenna (optional)	See Table 1-23	--	--

Notes:

- (1) The NGT-9000D and NGT-9000+ require an unlock code that is set up during installation. See paragraph 1.3.5.
- (2) Details on software releases are located in paragraph 1.9.
- (3) The “+” at the end of the model number indicates TAS functionality. The “D” at the end of the model number indicates Diversity functionality.



Figure 1-1: Panel Mount Lynx NGT-9000

Lynx NGT-9000 Installation Manual

Table 1-2: System Components Remote Mount Lynx NGT-9000

COMPONENT	MODELS	H/W PART NO.	S/W PART NO.
MultiLink Surveillance System	NGT-9000R NGT-9000R+ ⁽¹⁾ NGT-9000RD ⁽¹⁾	9029000-40000	9020010-002 ⁽²⁾
Detachable Configuration Module	DCM	9230-17003-01	--
CP-2500 Control Panel	See Table 1-30	9080-17250-01	--
GPS Antenna	See Table 1-21	--	--
L-Band Antenna	See Table 1-22	--	--
Directional Antenna (optional)	See Table 1-23	--	--

Notes:

- (1) The NGT-9000RD and NGT-9000R+ require an unlock code that is set up during installation. See paragraph 1.3.5.
- (2) Details on software releases are located in paragraph 1.9.
- (3) The “+” at the end of the model number indicates TAS functionality. The “D” at the end of the model number indicates Diversity functionality.



Figure 1-2: Remote Mount Lynx NGT-9000

1.2 FUNCTIONAL DESCRIPTION

The Lynx MultiLink Surveillance System (also referred to in this manual as the Lynx NGT-9000) is a Mode S Level 2 dens Class 1 Transponder with an integrated GPS receiver providing Automatic Dependent Surveillance-Broadcast (ADS-B) out on 1090 MHz. The unit also receives ADS-B data via 978 MHz and 1090 MHz. Some models support optional Active Traffic Awareness System (TAS) or antenna Diversity functionality.

The unit replies to Mode A, Mode C and Mode S interrogations on 1030 MHz and replies on 1090 MHz. The unit is equipped with IDENT capability that activates the Special Identification (SPI) pulse for 18 seconds.

Ground stations and airborne TCAS can interrogate Mode S Transponders individually using a 24-bit ICAO Mode S address, which is unique to the particular aircraft. In addition, ground stations may interrogate the unit for its transponder data capability and the aircraft's Flight ID.

The ADS-B provides own aircraft data with Enhanced Visual Acquisition (EVAcq) traffic information that improves situational awareness and flight safety by providing aircraft position, velocity, and heading information that is automatically transmitted to other aircraft and ground stations providing immediate surveillance of air-to-air traffic.

The ADS-B system has the following capabilities:

- 1090ES In (1090MHz) - Receive ADS-B, ADS-R and TIS-B
- 1090ES Out (1090MHz) - Transmit ADS-B
- UAT In (978MHz) - Receives ADS-B, ADS-R and TIS-B, FIS-B, NOTAMS, and TFR's

The unit also provides TAS traffic advisories when TAS configuration is enabled. A voice audio output announces relative altitude and traffic alerts. The unit has multiple transmit/receive ARINC 429, RS-422 and RS-232 data ports used to transmit data to traffic, weather, and PED displays.

The unit provides the transponder code, reply symbol and mode of operation to the display.

Maintenance and configuration setup can be accomplished via the USB port located on the front of the unit or by an optional WiFi connection.

1.2.1 GPS Functional Overview

The GPS function utilizes signals from Global Positioning System (GPS) satellite constellation and Satellite-Based Augmentation Systems (SBAS) such as the USA Wide Area Augmentation System (WAAS), European EGNOS, Indian GAGAN and the Japanese MSAS. Currently it supports WAAS and WAAS compatible SBAS systems.

The internal GPS function provides position, velocity, time, and integrity (NIC, NAC etc.) information to the ADS-B functions and meets the requirements of 14 CFR 91.227.

1.2.2 ADS-B System Overview

The Automatic Dependent Surveillance-Broadcast (ADS-B) improves situational awareness and flight safety by providing real time traffic information. The ADS-B In function is used to receive ground station supported TIS-B and ADS-R traffic, and direct communication with ADS-B out equipped aircraft. The ADS-B Out (1090MHz) function is used to periodically broadcast (without interrogation) information about the aircraft that includes aircraft identification, position, altitude, velocity and other aircraft status information.

- The traffic display shows the relative position of standard traffic using text, shapes, and colors. ADS-B also provides similar information on ADS-B out equipped ground vehicles.
- The effective surveillance range is 60 nmi. The passive-mode surveillance range is 160 nmi and maintains report messages for a minimum of 200 ADS-B (1090ES) participants and 300 ADS-B (UAT) participants simultaneously. To reduce display clutter a set number of other aircraft of the highest priority other aircraft are displayed at a time. See Figure 1-3 for an example of own aircraft traffic (UAT, 1090ES, TIS-B, and TAS).
- The Lynx NGT-9000 is equipped with a dual-link receiver. ADS-R service is unnecessary to provide a complete picture of traffic in the area.

1.2.3 ADS-R System Overview

The Automatic Dependent Surveillance – Re-broadcast (ADS-R) is a ground based broadcast service that repeats ADS-B messages from one link (1090ES or UAT) to the other link for aircraft with ADS-B In.

- ADS-R transmissions are updated at least every 2 seconds on the surface, 5 seconds in the terminal area, and 10 seconds in the en-route airspace.
- An aircraft on the ground receiving ADS-R is provided both ground aircraft and vehicles as well as airborne other aircraft within 5nm and 2,000 ft above ground level of the airport reference point.
- Other aircraft are provided by the ground station if within a 15 nm horizontal range and +/-5,000 ft of altitude of the receiving aircraft. ADS-B equipped ground aircraft and vehicles are not displayed to airborne aircraft. See Figure 1-3 for an example of own aircraft traffic (UAT, 1090ES, TIS-B, and TAS).

1.2.4 TIS-B System Overview

Traffic Information Service Broadcast (TIS-B) is a ground based broadcast service that provides secondary surveillance radar (SSR) derived traffic data (ATC transponder equipped aircraft not equipped with ADS-B Out capability) to ADS-B In equipped aircraft.

- The actual availability of services depends upon the availability of ground-based radar to support TIS-B source data.
- Receiving aircraft must be in both ATC radar coverage and ground based transceiver (GBT) coverage in a given area to receive TIS-B service in that area. When ownship is above 24,000 ft, the ground station will no longer provide TIS-B service. To reduce display clutter, the TIS-B service provides traffic information on other aircraft within 15 nmi and +/- 3500 ft of ownship.
- Other aircraft are provided by the ground station if within a 15nm horizontal range and +/-3,500 ft of altitude of the receiving aircraft. ADS-B equipped ground aircraft and vehicles are not displayed to airborne aircraft. See Figure 1-3 for an example of own aircraft traffic (UAT, 1090ES, TIS-B, and TAS).

1.2.5 FIS-B System Overview

The Flight Information Services - Broadcast (FIS-B) function provides pilots with a cockpit display of certain aviation weather and aeronautical information for awareness of own aircraft location with respect to reported weather, including hazardous meteorological conditions (CONUS/ NEXRAD /AIRMETS/ SIGMETS/ NOTAMS/ METARS, etc) and SUA status and TAF (FIS-B products).

NOTE

CONUS and Regional NEXRAD may not always contain complete data.
The data is refreshed every 15 minutes and it is likely to be updated in a future cycle.

FIS-B is advisory information only and is intended to enhance pilot decision-making during strategic flight planning. FIS-B augments traditional sources of this information such as ATC and Flight Service Station (FSS). FIS-B information is provided over the ADS-B Services network on the 978 MHz UAT link when in ground station coverage.

1.2.6 Traffic Awareness System (option) Overview

The TAS option is an active system that operates as an aircraft-to-aircraft interrogation device. The unit interrogates transponders in the surrounding airspace similar to ground based radar. When replies to these active interrogations are received, the responding aircraft's range, altitude, and closure rates are computed to plot traffic location and predict collision threats. The unit alerts the flight crew to nearby transponder equipped aircraft and assists the pilot in the visual acquisition of aircraft that may represent a danger. Traffic information, out to a selected range, is graphically displayed on the unit or alternate display. See Figure 1-3 for an example of own aircraft traffic (UAT, 1090ES, TIS-B, and TAS).

- The system display shows the relative position of traffic using text, shapes (i.e., Traffic Advisory = solid circle; Other Traffic = open diamond) and colors.
- The effective active-mode surveillance range is 35 nmi and track 35 ATRBS intruders simultaneously with the target bearing relative to the nose of own aircraft.
- The tracking of targets is in a cylindrical volume centered on own aircraft that has, at a maximum, a radius of 35 nmi and extends 10,000 ft above and 10,000 ft below own aircraft.

1.2.7 Discrete Inputs and Outputs

The Lynx NGT-9000 has discrete inputs and outputs available that can be interfaced to indicator lamps and cockpit switches. These are optional installations and are not required.

- The WOW input discrete signals the On Ground status to the unit via a squat switch, airspeed monitor, or a collective switch.
- The IDENT switch activates the IDENT pulse which highlights the aircraft's symbol on the ATC's radar screen and is identified on the Lynx NGT-9000 when active.
- The Audio Mute input is typically only used if the aircraft equipped with TAWS or other aircraft alerting systems. It is used to signal the unit to suppress all audio output. The discrete is set to GND/Open. The active position indicates audio muted. When grounded this input mutes all audio from the Lynx NGT-9000.
- The TAS Alert lamp (amber) is used to indicate Traffic Alert (TA). The discrete is set to GND/Open. The GND (active) position indicates Traffic Alert. The GND (active) position illuminates the lamp.
- The ADS-B Out Fail lamp (amber) is used to indicate that ADS-B out is not providing ADS-B output data. The discrete is set to GND/Open. The GND (active) position illuminates the lamp. The lamp operation is described in the installation checkout section.

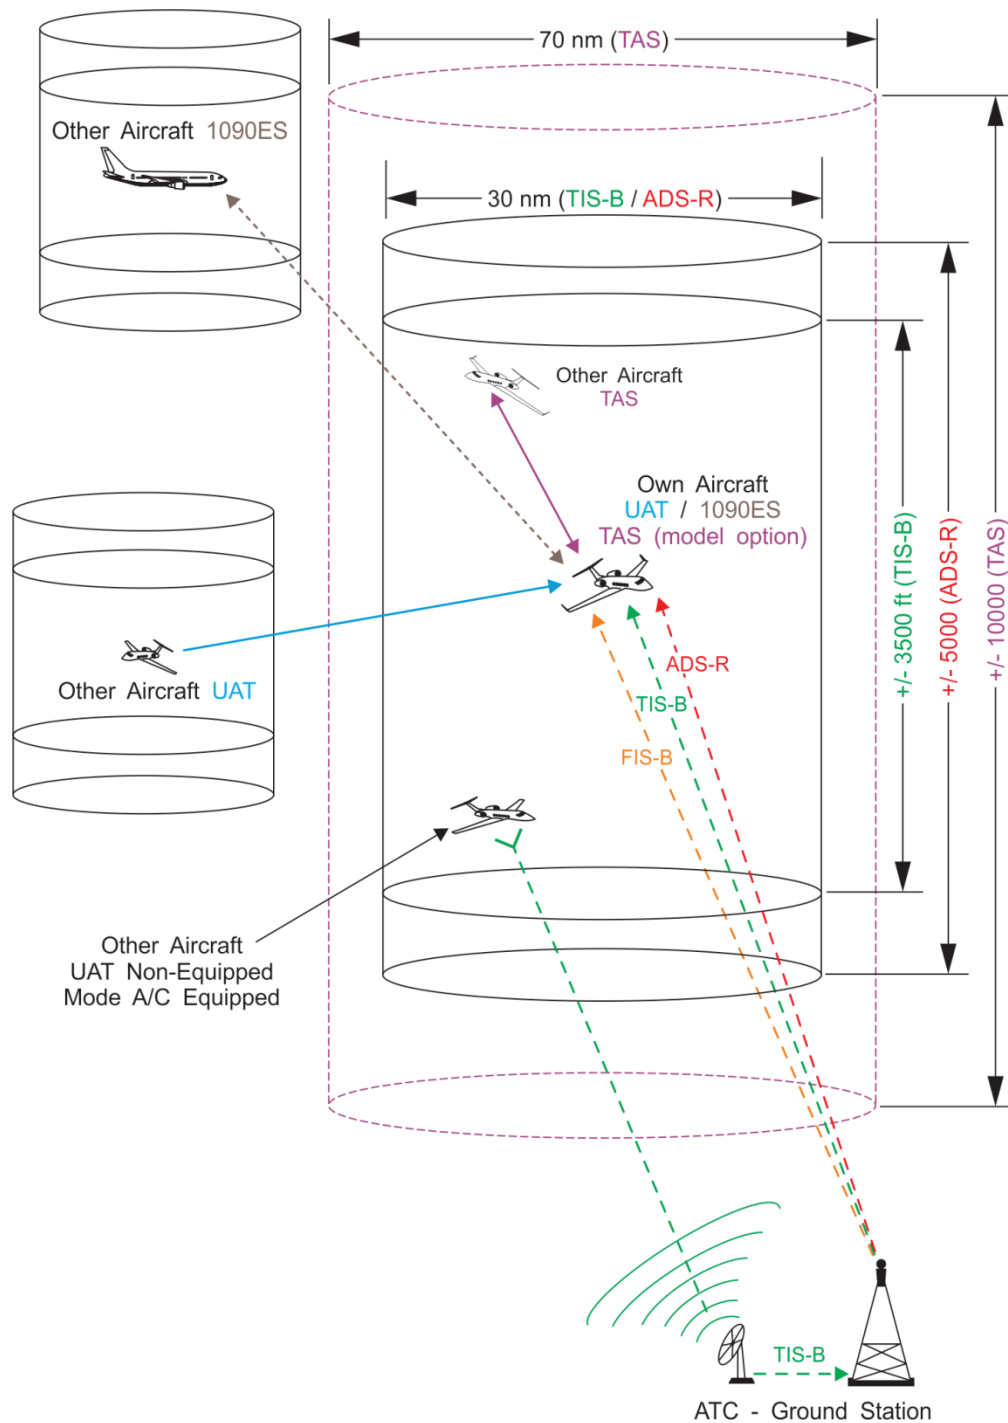


Figure 1-3: Example of Own Aircraft UAT, 1090ES, and TAS Traffic

1.3 EQUIPMENT DESCRIPTIONS

1.3.1 Panel Mount Lynx NGT-9000

The panel mount Lynx NGT-9000 includes a Detachable Configuration Module (DCM). The unit is equipped with a main sub-D connector (J1) and RF connectors. A USB port is available to establish communication between the unit and a maintenance computer for installation and maintenance activities.

A panel mounted rack is required for installation. Additional 3rd party components are necessary to complete the installation. Refer to paragraph 1.5 for component requirements and installation considerations. Details on these components are provided in paragraph 1.11.

The unit has a bezel containing a multifunction touch screen that is designed to fit into a MARK width panel. LED backlighting is controlled by either the auto-dimming functionality provided by the ambient light sensor or using the pilot adjustable brightness control.

The multifunction touch screen has full operational control providing the means to select screen views and interface with transponder, traffic, and weather information. The following information is available for display and control:

- Flight ID or aircraft Tail Number
- Transponder and Traffic Mode of Operation
- ADS-B Status
- VFR Select and Squawk Code Input
- IDENT
- Traffic (graphic and textual)
- Weather (graphic and textual)
- TAS Mode (model specific)

1.3.2 Remote Mount Lynx NGT-9000

The remote mount Lynx NGT-9000 includes a Detachable Configuration Module (DCM). The unit is equipped with a main sub-D connector (J1) and RF connectors. A USB port is available to establish communication between the unit and a maintenance computer for installation and maintenance activities.

A mounting tray is required for installation. Additional 3rd party components are necessary to complete the installation. Refer to paragraph 1.5 for component requirements and installation considerations. Details on these components are provided in paragraph 1.11.

The remote mount Lynx NGT-9000 provides the same functionality as the panel mount in regards to the available for display (traffic and weather), but is controlled using the CP-2500 Control Panel. The Control Panel transmits the following information via RS-232 to the Lynx NGT-9000:

- Pilot selectable Flight ID (optional - enabled during installation)
- Set operation mode
- VFR code select
- IDENT
- Mode A squawk code
- Activation of self test

The Control Panel receives the following information via RS-232 from the Lynx NGT-9000:

- Fault indications
- Fault messages
- Pressure Altitude

1.3.3 Model Options

The Diversity option offers enhanced traffic awareness receiving data via 1090MHz using the ADS-B service.

The Traffic Awareness System (TAS) option provides additional traffic awareness when ADS-B equipped aircraft are not in the area providing Traffic Alert (TA) warnings to the flight crew. See paragraph 1.2.6 for TAS functionality.

The Diversity and TAS options require an unlock codes that are entered using the Lynx MAT.

Models with Diversity require the installation of an additional L-Band antenna. The TAS option requires the installation of a directional antenna.

1.3.4 Detachable Configuration Module (DCM)

The DCM part number 9230-17003-01 is part of the Lynx NGT-9000 and is used for the storage of configuration data. The DCM is permanently installed with the wire harness and interfaces to the unit via a 4 wire interface from the DCM.

The configuration settings are stored in the unit's non-volatile memory and are entered via commands sent over the maintenance interface to configure such items as: input / output interface options, aircraft specific options (including TAS and Diversity), and installation calibration parameters.

When the configuration data is set, Lynx NGT-9000 units may be swapped and the configuration remains with the aircraft.

1.3.5 System Unlock Code

Unlock codes are required if installing and activating the TAS and Diversity options. The unlock codes are 10 digit codes that are entered during installation using the Lynx MAT to install either of these options. The unlock codes may be purchased and shipped with the unit. If the unlock code is not included, contact L-3 Avionics Systems Customer Service to obtain the code. Be sure to have the Mode S ID (e.g. ICAO) available for the service representative. The unlock code is associated with the aircraft ICAO address and will only work for that aircraft ID.

1.4 INTERFACES

The unit supports a number of built-in interfaces as described in Table 1-3. A system block diagram is provided in Figure 1-4. Additional information on these interfaces is detailed below. Refer to Appendix A for interface options and the installation section for an interconnect diagram.

Table 1-3: Built-in Interfaces

Interface (No.)	Function
ARINC 429 Input (4)	Receive ADC and AHRS data
ARINC 429 Output (1)	Transmit to a traffic display
Discrete Inputs (17)	Receive Gillham Altitude Encoder, Audio Mute, IDENT Command, and In Air / On Ground (WOW) status
Discrete Output (9)	Transmit ADS-B Out Fail, Traffic Alert output
RS-232 Input / Output (4)	Wi-Fi accessory port CP-2500 Control Panel interface (remote mount Lynx NGT-9000)
RS-232 Input (1)	Altitude Encoder port
RS-422 Input / Output (1)	External display port
RF Suppression Input / Output (1)	Provides on aircraft suppression of the L-band equipment
Analog Audio Output (1)	Connects to Audio Panel un-muted input.
I2C Port (1)	Detachable configuration module
GPS Antenna Port	Connect to a top mount antenna providing GPS data to support ADS-B functionality
L-Band Antenna Port	Connects to the bottom mount antenna. Provides UAT 978 MHz input, 1030/1090 MHz extended squitter input/output to support ADS-B/ATAC Transponder functionality.
Extra Antenna Ports	Connects to a top mounted antenna (L-Band or Directional) providing optional TAS or Diversity functionality.

Note: Not all interfaces are used. Some are spares, reserved for future use, or optional.

Lynx NGT-9000 Installation Manual

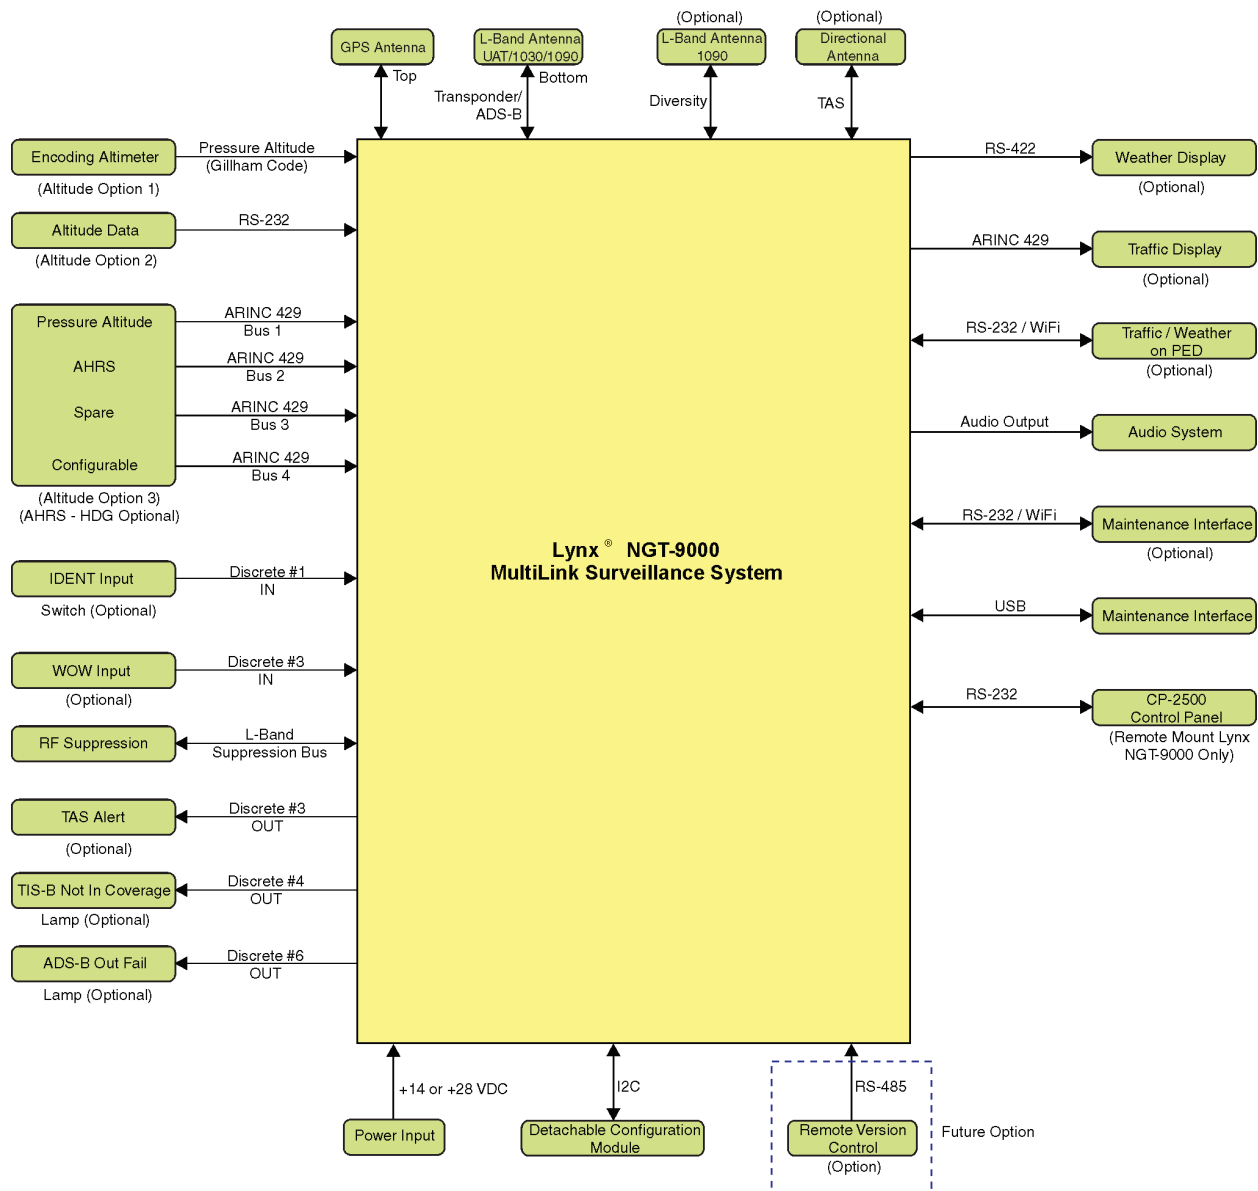


Figure 1-4: System Block Diagram

1.4.1 ADS-B Out Fail

The ADS-B Out Fail is a discrete output that provides an indication of when there is a loss of ADS-B Out. The discrete output is a ground/open type and is able to sink 250mA.

1.4.2 AHRS Input

An optional ARINC 429 input is provided to interface to an AHRS (heading) system in order to provide data for Enhanced Surveillance (EHS) and ADS-B data.

1.4.3 Altitude Encoder Input

Pressure altitude input is required on either and an RS-232 input port, 11 Wire Gillham Input Port or ARINC 429 Input Port.

1.4.4 Audio Out

One audio out discrete outputs is available that can output a 40 mW signal to equipment with a load of 600 Ohms.

1.4.5 RF Suppression Input/output

The mutual suppression input/output is used to provide suppression of L-band equipment on the aircraft. The transponder uses the signal as an input to inhibit decoding of receiver signals when other equipment on the aircraft is transmitting. When the transponder transmits, it asserts a positive voltage on the output to provide the suppression to other systems on the airplane.

1.4.6 TAS Alert

Traffic Alert is a discrete output that provides an indication of when a TAS Alert exists. Discrete outputs are ground/open type and are able to sink 250mA.

1.4.7 WiFi Interface

The unit uses a RS-232 bus to interface with a commercially available RS-232 to WiFi Serial Adapter. This interface provides traffic and weather information on a personal electronic device via a software application (APP).

1.4.8 WOW Input

The WOW input discrete is optional. The input signals the On Ground status to the unit via squat switch, Airspeed monitor, or a collective switch. The discrete input is active (ON) when the input is grounded.

- Do not connect this to a gear switch or a manual pilot switch input.
- An internal algorithmic override that uses ground speed and altitude inputs may override this input and change the air/ground state (ex. a WOW "in-air" state could get changed back to on ground if the Aircraft is sitting on the ground). This is expected behavior. If simulated in-air tested is required, use the ground test mode.

1.4.9 Maintenance Interface

The unit can interface to a maintenance computer using either the WiFi interface or the USB port located on the front of the unit. This interface is used for installation setup and fault isolation and is only available while on ground.

1.4.10 GPS Antenna

Antenna performance is critical to the operation of the Unit. The unit requires that the GPS Antenna meet performance requirements specified in TSO-145c.

1.4.11 L-Band (978/1030/1090 MHz) Antenna

The L-Band antenna is used by the Unit to receive 978 MHz, 1030 MHz, and transmit/receive 1090 MHz. If the NGT-9000 is configured for Diversity, then two L-Band antennas are required.

1.4.12 Directional Antenna

L-3 Avionics Systems has two models of Directional Antenna available: the NY156 (P/N 805-10003-001) and model NY164 (P/N 805-10890-001). The teardrop-shaped antenna is sealed against environmental extremes and used by the Unit to receive Active Traffic (TAS) information.

1.4.13 Traffic Display

Traffic information is output to a compatible traffic display from the unit using an ARINC 735B interface format. Possible traffic output format selections include Standard TCAS Intruder File (STIF or TIF) and Display Traffic Information File (DTIF). The unit allows installed configuration selection of STIF, DTIF, or both formats of output data via the ARINC 429 bus to the traffic display.

1.4.14 Weather Display

The Unit interfaces to supported FIS-B Wx displays via a RS-422 Input and Output data bus.

1.4.15 Control Panel

The remote mount Lynx NGT-9000 requires a CP-2500 Control Panel (P/N 9080-17250-01) to display messages and transmit commands using RS-232. Refer to paragraph 1.11.8.

1.5 INSTALLATION CONSIDERATIONS

The installation of the following equipment is the minimum required by the Lynx NGT-9000 to provide ADS-B functionality as well as the optional TAS and Diversity functionality.

- Each installation requires at a minimum the following equipment installed:
 1. Lynx NGT-9000
 2. Detachable configuration module
 3. GPS Antenna
 4. L-Band (978/1030/1090 MHz) Antenna
 5. Altitude Source (ARINC 429, RS-232, or Gilham Code)
 6. Remote mount models only – CP-2500 Control Panel
- A unit with TAS (model: NGT-9000+ or NGT-9000R+) also requires the following:
 1. Unlock code to unlock TAS option via the Lynx MAT
 2. Directional Antenna (NY156 or NY164)
- A unit with Diversity (model: NGT-9000D or NGT-9000RD) also requires the following:
 1. Unlock code to unlock Diversity option via the Lynx MAT
 2. Additional L-Band Antenna, located on the top of the aircraft
- The following equipment for Lynx NGT-9000 system is optional:
 1. WiFi Accessory and PED (provides traffic and weather data)
 2. Weather Display (used to display FIS-B)
 3. Traffic Display (used to display STIF on common display or DTIF on CDTI display)

1.6 SPECIFICATIONS

Table 1-4: Specifications for Panel Mount Lynx NGT-9000

PART NUMBERS:	9029000-20000
CERTIFICATION:	USA (FAA): TSO-C112d, C113a, C145c, C147, C154c, C157a, C166b, C195a. See paragraph 1.7 for specific TSO information. Listed are current authorizations at time of publication, contact Field Service Engineering for latest certification information
ADVISORY CIRCULARS:	AC20-21-46, AC20-115B, AC20-152, AC20-165A, AC20-172A
RTCA COMPLIANCE:	Environmental Category: DO-160G (See Environmental Qualification Form in Appendix B.) Software Category: DO-178B, Design Assurance Level C Hardware Category: DO-254, Design Assurance Level C Other: DO-181E, DO-197A, DO-229D, DO-260B, DO-267A, DO-282B, DO-317A, ARINC 718A-4 and SAE AS8034B.
COMPLIANCE:	ATC transponder functionality: 14 CFR 91.215, 91.217, 91.413 ADS-B Out functionality: 14 CFR 91.225, and 91.227 The Lynx NGT-9000 has been shown to meet the requirements in TSO-C166b and meets the requirements of 14 CFR 91.225a installed in accordance with these installation instructions.
SIZE:	<u>Case</u> Width 1.48 inches [128.30 mm] MAX Height: 5.75 inches [74.20 mm] MAX Depth*: 8.99 inches [38.10 mm] MAX <u>Bezel</u> Width 6.25 inches [13.44 cm]MAX Height: 1.8 inches [7.62 cm] MAX * Does not include connectors. Note: Unit Fits into a standard MARK width (6.25 in) panel.
WEIGHT:	Nominal 2.96 Lbs (1.35 kg)
CHASSIS GROUND:	Bonding impedance between aircraft ground and the Lynx NGT-9000 Chassis must be less than 2.5 milliohms.
POWER REQUIREMENTS:	+14.0 VDC nominal. 19.0 watts nominal (24.0 watts maximum) +28.0 VDC nominal. 19.0 watts nominal (24.0 watts maximum)
ELECTRICAL CONNECTORS:	78 position d-subminiature connector receptacle (shell size 5) with swaged float plate. Connector insert per MIL-DTL-24308, Appendix A, Figure A-5, Arrangement 2. Connector insert shall accommodate 22D removable crimp contacts (socket) per M39029/57-324, or equivalent. - RF Connectors: 5W5 Coax D-Sub - Mini-B USB: Maintenance Port

Lynx NGT-9000 Installation Manual

Table 1-4: Specifications for Panel Mount Lynx NGT-9000

INTERFACE (S):	• ARINC 429 • RS-422 • RS-232 • Discrete Input/Outputs • RF Suppression Bus • I²C serial interface (detachable configuration module interface) Note: Refer to Appendix A for signal names and characteristics
OPERATING TEMPERATURE:	-20° to +55°C (-4° to +131°F)
STORAGE TEMPERATURE:	-55° to +85°C (-67° to +185°F)
MAXIMUM ALTITUDE:	55,000 ft (installation environment)
FUNCTIONALITY:	• Mode S Transponder (1030/1090) • Global Positioning System (GPS) • ADS-B Receive: (1090ES/UAT) • ADS-B Transmit: (1090ES) • TIS-B (1090ES) • FIS-B (UAT) • Mode S Transponder Diversity (optional) (1090ES) • Traffic Awareness System (TAS) (optional)
OPERATION:	Start Up Time: On Ground 20 seconds or less In air 5 seconds or less. Display Luminance: Range 0.05 fl to 150 fl Built In Test: Fault Monitoring on all stages of operation from start up to power down. UAT Receiver Sensitivity (Class A1S) -95.0dBm for 90% Message Decoding for Long ADS-B Messages -96.0dBm for 90% Message Decoding for Short ADS-B Messages -93.0dBm for 90% Message Decoding for Ground Uplink Messages 1090 ADS-B Receiver Sensitivity (class A2): -79dBm for 90% message decoding for 1090MHz ADS-B messages. Mode S Transponder Power (Class 1 Transponder). 125W minimum, 250 W maximum. TAS Output Power (Class A TAS). 125W minimum, 250 W maximum.
SCHEDULED MAINTENANCE:	The Lynx NGT-9000 is a transponder device and must be tested and inspected every 24 months subject to the requirements of FAA documents 91.413.
SERVICE LIFE:	The Lynx NGT-9000 has unlimited service life.
REPAIRABILITY:	Repairs performed at the FAA certificated Repair Station co-located at the OEM (equipment) facility.

Lynx NGT-9000 Installation Manual

Table 1-5: Specifications for Remote Mount Lynx NGT-9000R

PART NUMBERS:	9029000-40000
CERTIFICATION:	USA (FAA): TSO-C112d, C145c, C147, C154c, C157a, C166b, C195a. See paragraph 1.7 for specific TSO information. Listed are current authorizations at time of publication, contact Field Service Engineering for latest certification information
ADVISORY CIRCULARS:	AC20-21-46, AC20-115B, AC20-152, AC20-165A, AC20-172A
RTCA COMPLIANCE:	Environmental Category: DO-160G (See Environmental Qualification Form in Appendix B.) Software Category: DO-178B, Design Assurance Level C Hardware Category: DO-254, Design Assurance Level C Other: DO-181E, DO-197A, DO-229D, DO-260B, DO-267A, DO-282B, DO-317A, ARINC 718A-4 and SAE AS8034B.
COMPLIANCE:	ATC transponder functionality: 14 CFR 91.215, 91.217, 91.413 ADS-B Out functionality: 14 CFR 91.225, and 91.227 The Lynx NGT-9000R has been shown to meet the requirements in TSO-C166b and meets the requirements of 14 CFR 91.227 installed in accordance with these installation instructions.
SIZE:	Width 1.46 +/-0.01 inches [37.08 +/-0.25 mm] MAX Height: 6.04 +/- 0.02 inches [153.42 +/-0.51 mm] MAX Depth*: 11.61 +/- 0.06 inches [116.10 +/-1.52 mm] MAX * Includes handle.
WEIGHT:	Nominal 2.75 Lbs (1.25 kg)
CHASSIS GROUND:	Bonding impedance between aircraft ground and the Lynx NGT-9000 Chassis must be less than 2.5 milliohms.
POWER REQUIREMENTS:	+14.0 VDC nominal. 17.0 watts nominal (24.0 watts maximum) +28.0 VDC nominal. 17.0 watts nominal (24.0 watts maximum)
ELECTRICAL CONNECTORS:	78 position d-subminiature connector receptacle (shell size 5) with swaged float plate. Connector insert per MIL-DTL-24308, Appendix A, Figure A-5, Arrangement 2. Connector insert shall accommodate 22D removable crimp contacts (socket) per M39029/57-324, or equivalent. - RF Connectors: 5W5 Coax D-Sub - Mini-B USB: Maintenance Port
INTERFACE (S):	- ARINC 429 - RS-422 - RS-232 - Discrete Input/Outputs - RF Suppression Bus - I²C serial interface (detachable configuration module interface) Note: Refer to Appendix A for signal names and characteristics
OPERATING TEMPERATURE:	-45° to +70°C (-49° to +158°F)
STORAGE TEMPERATURE:	-55° to +85°C (-67° to +185°F)

Lynx NGT-9000 Installation Manual

Table 1-5: Specifications for Remote Mount Lynx NGT-9000R

MAXIMUM ALTITUDE:	55,000 ft (installation environment)
FUNCTIONALITY:	• Mode S Transponder (1030/1090) • Global Positioning System (GPS) • ADS-B Receive: (1090ES/UAT) • ADS-B Transmit: (1090ES) • TIS-B (1090ES) • FIS-B (UAT) • Mode S Transponder Diversity (optional) (1090ES) • Traffic Awareness System (TAS) (optional)
OPERATION:	Start Up Time: On Ground 20 seconds or less In air 5 seconds or less. Built In Test: Fault Monitoring on all stages of operation from start up to power down. UAT Receiver Sensitivity (Class A1S) -95.0dBm for 90% Message Decoding for Long ADS-B Messages -96.0dBm for 90% Message Decoding for Short ADS-B Messages -93.0dBm for 90% Message Decoding for Ground Uplink Messages 1090 ADS-B Receiver Sensitivity (class A2): -79dBm for 90% message decoding for 1090MHz ADS-B messages. Mode S Transponder Power (Class 1 Transponder). 125W minimum, 250 W maximum. TAS Output Power (Class A TAS). 125W minimum, 250 W maximum.
SCHEDULED MAINTENANCE:	The Lynx NGT-9000R is a transponder device and must be tested and inspected every 24 months subject to the requirements of FAA documents 91.413.
SERVICE LIFE:	The Lynx NGT-9000R has unlimited service life.
REPAIRABILITY:	Repairs performed at the FAA certificated Repair Station co-located at the OEM (equipment) facility.

Table 1-6: Specifications for Detachable Configuration Module

PART NUMBER:	9230-17003-01
CERTIFICATION:	USA (FAA): TSO-C145c, C154c, C157a, C195a. See paragraph 1.7 for specific TSO information. Listed are current authorizations at time of publication, contact Field Service Engineering for latest certification information
RTCA COMPLIANCE:	The DCM is tested as part of the NGT-9000.
WEIGHT:	Negligible
SIZE:	Length: 6 inches (includes wires)
POWER REQUIREMENTS:	3.3 Vdc (regulated via J1 connector)
INTERFACE (S):	I ₂ C serial interface
OPERATING TEMPERATURE:	-45° to +70°C (-49° to +158°F)
STORAGE TEMPERATURE:	-55° to +85°C (-67° to +185°F)
MAXIMUM ALTITUDE:	55,000 ft (installation environment)
SCHEDULED MAINTENANCE:	None.
SERVICE LIFE:	Unlimited.
REPAIRABILITY:	Replacement only.

1.7 TSO INFORMATION

1.7.1 Non-TSO Functions

The Lynx NGT-9000 Release 1 and DCM Release 1 do not have any Non-TSO functions.

1.7.2 Panel Mount Lynx NGT-9000

NOTE

Unless otherwise specified Release 1 refers to Release 1.0, Release 1.1 and any subsequent minor changes to Release 1.0.

The NGT-9000D Release 1 and DCM Release 1 meet the requirements of the following TSO's.

Table 1-7: Applicable TSO & Deviations

HW PART NO / SW PART NO / TYPE DESIGNATION	DESCRIPTION	APPLICABLE TSO & DEVIATIONS	CLASS, COMMENTS
9029000-20000 9020010-001 NGT-9000D 1.0	Supports GPS, WiFi, and ADS-B In via 1090ES and ADS-B Out via 1090ES and UAT, Specific models support TAS and Diversity. Interfaces with traffic (RS-232 and ARINC 429 only) and weather (RS-232 and RS-422 only) displays.	TSO-C112d – Deviation Note 4, 6	Level 2 dens Class 1
		TSO-C113a – Deviation Note 2	
		TSO-C145c – Deviation Note 1, 2, 5	Class Beta 1 (GPS SBAS Output)
		TSO-C147 – Deviation Note 1, 2, 3, 5, 7	Class A
		TSO-C154c – Deviation Note 2, 5	Class A1S (UAT In)
		TSO-C157a – Deviation Note 2	Class 2
		TSO-C166b – Deviation Note 2, 4, 5	Class A2
		TSO-C195a – Deviation Note 2, 8	Class B1, B5, C1, C5
9029000-20000 / 9020010-002 / NGT-9000D 1.1	Supports GPS, WiFi, and ADS-B In via 1090ES and ADS-B Out via 1090ES and UAT, Specific models support TAS and Diversity. Interfaces with traffic (RS-232 and ARINC 429 only) and weather (RS-232 and RS-422 only) displays.	TSO-C112d – Deviation Note 4, 6	Level 2 dens Class 1
		TSO-C113a – Deviation Note 2	
		TSO-C145c – Deviation Note 1, 2, 5	Class Beta 1 (GPS SBAS Output)
		TSO-C147 – Deviation Note 1, 2, 3, 5, 7	Class A
		TSO-C154c – Deviation Note 2, 5	Class A1S (UAT In)
		TSO-C157a – Deviation Note 2	Class 2
		TSO-C166b – Deviation Note 2, 4, 5	Class A2
		TSO-C195a – Deviation Note 2, 8	Class B1, B5, C1, C5

Lynx NGT-9000 Installation Manual

Deviation Notes:

Deviation 1: TSO-C145c, TSO-C147. Require the use of DO-160E for environmental qualification testing; DO-160G was used instead.

Deviation 2: TSO-C113a, TSO-C145c, TSO-C147, TSO-C154c, TSO-C157a, TSO-C166b, TSO-C195a Per the guidance in FAA Order 8150.1c, the units are marked with the primary TSO along with a reference to the Installation Manual for the other TSO information (other applicable TSO's, deviations, etc.).

Deviation 3: TSO-C147. Due to the RF power requirement and inherent non-linearity in RF transmitters, the harmonics of the transmitter exceed the RF radiated emissions limit in DO-160G. ACSS deviates from DO-160G Section 21 Category M Radiated RF Emissions in the following frequency bands when the transmitter is active:

- 2060MHz $\pm$ 5MHz (2nd Transmitter harmonic) Exceeds Cat M by as much as 15.6dB.
- 3090MHz $\pm$ 5MHz (3rd Transmitter harmonic) Exceeds Cat M by as much as 16.7dB.
- 4120MHz $\pm$ 20MHz (4th Transmitter harmonic) Exceeds Cat M by as much as 22.7dB.
- 5150MHz $\pm$ 5MHz (5th Transmitter harmonic) Exceeds Cat M by as much as 12.2dB

Deviation 4: TSO-C112d, TSO-166b. The Lynx NGT-9000 has an RF transmitter which is used to generate both the 1030MHz and 1090MHz waveforms for Mode S Transponder, ADS-B Out, and TAS functions. Due to the RF power requirement and inherent non-linearity's in RF transmitters, the harmonics of the transmitter exceed the RF radiated emissions limit in DO-160G. ACSS deviates from DO-160G Section 21 Category M Radiated RF Emissions in the following frequency bands when the transmitter is active:

- 2180MHz $\pm$ 7MHz (2nd Transmitter harmonic) Exceeds Cat M by as much as 19.3dB
- 3270MHz $\pm$ 23MHz (3rd Transmitter harmonic) Exceeds Cat M by as much as 22.0dB
- 4360MHz $\pm$ 23MHz (4th Transmitter harmonic) Exceeds Cat M by as much as 24.4dB
- 5450MHz $\pm$ 23MHz (5th Transmitter harmonic) Exceeds Cat M by as much as 21.4dB

Deviation 5: TSO-C145c, TSO-C147, TSO-C154c, TSO-C166b. The Lynx NGT-9000 utilizes electronic part marking for the software part number, which is stored in non-volatile memory.

Deviation 6: TSO-C112d. The NGT-9000 does not perform Comm-A (broadcast or addressed) or Comm-B Air-Initiated ADLP (Airborne Data Link Processor) link operations. The NGT-9000 meets the certification of Level 2 transponders except for the support of the above listed ADLP functions.

Deviation 7: TSO-C147. The use of traffic symbology as defined in DO-317A is equivalent level of safety to the symbols define in TSO-C147. ACSS submits that the use of the 0.1 inch character size for the TAS characters (relative altitude tag) and use of 0.163 inch traffic symbols provides an equivalent level of safety to the TSO-C147 specified character and symbol sizes.

Deviation 8: TSO-C195a. The ACSS ATCRBS and ADS-B traffic in a track-up orientation when heading source is unavailable. ACSS believes that removing the ADS-B traffic or ATCRBS traffic from the display when the heading input is not available would significantly reduce the value of the CDTI's support in the pilot's see and avoid responsibilities.

ACSS proposes the DO-317A ASA AIRB application display TIS-B traffic, with a NACv of 0, as a non-directional track similar to EVAcq. This removes the contradiction between requirements and is in-line with updates in the next revision of the MOPS (i.e., DO-317B).

ACSS proposes the DO-317A ASA AIRB application display TIS-B traffic by reporting the most recent non-zero NACv reading confirmed over a 60 second interval.

ACSS will set the EVAcq and AIRB functions unavailable when ownship position is beyond 85 degrees North or South latitude. The result is a display of "Traffic Unavailable" on Panel mount units and an indication of "Standby" for remote displays. However, for NGT-9000 installations, where TAS is enabled, the range/bearing based TAS targets are displayed.

Lynx NGT-9000 Installation Manual

1.7.3 Remote Mount Lynx NGT-9000

NOTE

Unless otherwise specified Release 1 refers to any subsequent minor changes to Release 1.0.

The NGT-9000RD Release 1 and DCM Release 1 meet the requirements of the TSO's listed in Table 1-8.

Table 1-8: Applicable TSO & Deviations

HW PART NO / SW PART NO / TYPE DESIGNATION	DESCRIPTION	APPLICABLE TSO & DEVIATIONS	CLASS, COMMENTS
9029000-40000 / 9020010-002 / NGT-9000RD 1.1	Supports GPS, WiFi, and ADS-B In via 1090ES and ADS-B Out via 1090ES and UAT, Specific models support TAS and Diversity. Interfaces with traffic (RS-232 and ARINC 429 only) and weather (RS-232 and RS-422 only) displays. Interfaces with control panel (CP-2500 via RS-232).	TSO-C112d – Deviation Note 3,5	Level 2 dens Class 1
		TSO-C145c – Deviation Note 1, 2, 4	Class Beta 1 (GPS SBAS Output)
		TSO-C147 – Deviation Note 1, 2, 4	Class A
		TSO-C154c – Deviation Note 2, 4	Class A1S (UAT In only)
		TSO-C157a – Deviation Note 2, 4	Class 2 incomplete
		TSO-C166b – Deviation Note 2, 3, 4	Class A2
		TSO-C195a – Deviation Note 2, 4, 6	Class C1

Deviation Notes:

Deviation 1: TSO-C145c, TSO-C147. DO-160G was used instead of earlier versions.

Deviation 2: TSO-C145c, TSO-C147, TSO-C154c, TSO-C157a, TSO-C166b, TSO-C195a Per the guidance in FAA Order 8150.1c, the units are marked with the primary TSO along with a reference to the Installation Manual for the other TSO information (other applicable TSO's, deviations, etc.).

Deviation 3: TSO-C112d, TSO-C166b. The Lynx NGT-9000 has an RF transmitter which is used to generate both the 1030MHz and 1090MHz waveforms for Mode S Transponder, ADS-B Out, and TAS functions. Due to the RF power requirement and inherent non-linearities in RF transmitters, the harmonics of the transmitter exceed the RF radiated emissions limit in DO-160G. ACSS deviates from DO-160G Section 21 Category M Radiated RF Emissions in the following frequency bands when the transmitter is active:

TSO-C112d

- 2180 MHz ± 78 MHz (2nd Transmitter Harmonic) Exceeds Cat M by as much as 23 dB
- 3270 MHz ± 23 MHz (3rd Transmitter Harmonic) Exceeds Cat M by as much as 13 dB
- 4360 MHz ± 23 MHz (4th Transmitter Harmonic) Exceeds Cat M by as much as 14 dB

TSO-C166b

- 2180MHz ± 7MHz (2nd Transmitter harmonic) Exceeds Cat M by as much as 19.3dB
- 3270MHz ± 23MHz (3rd Transmitter harmonic) Exceeds Cat M by as much as 22.0dB
- 4360MHz ± 23MHz (4th Transmitter harmonic) Exceeds Cat M by as much as 24.4dB
- 5450MHz ± 23MHz (5th Transmitter harmonic) Exceeds Cat M by as much as 21.4d

Deviation 4: TSO-C145c, TSO-C147, TSO-C154c, TSO-157a, TSO-C166b, TSO-195a. The Lynx NGT-9000 utilizes a Maintenance Computer (i.e., a "special tool") as its primary support tool required for installation and debug effort. All installations will require that the Maintenance Computer be used to verify the software part number that is stored electronically in the unit thereby ensuring the part has been installed in compliance to the type design data. All software updates will also require that the Maintenance Computer be used to verify the software part number that is stored electronically in the unit thereby ensuring the part is in compliance to the type design data.

Lynx NGT-9000 Installation Manual

Deviation Notes:

Deviation 5: TSO- C112d. The NGT-9000 does not perform Comm-A (broadcast or addressed) or Comm-B Air-Initiated ADLP (Airborne Data Link Processor) link operations. The NGT-9000 meets the certification of Level 2 transponders except for the support of the above listed ADLP functions.

Deviation 6: TSO-C195a. When a heading source is unavailable, ATCRBS and ADS-B traffic are respectively oriented in a heading and track-up orientation. ACSS believes that removing the ADS-B traffic or ATCRBS traffic from the data sent to the display when the heading input is not available would significantly reduce the value of the CDTI's support in the pilot's see and avoid responsibilities.

DO-317A ASA AIRB application will send TIS-B traffic display data, with a NACv of 0, as a non-directional track similar to EVAcq. This is in-line with updates in the next revision of the MOPS (i.e., DO-317B).

DO-317A ASA AIRB application will send TIS-B traffic display data by reporting the most recent non-zero NACv reading confirmed over a 60 second interval.

ACSS will set the EVAcq and AIRB functions unavailable when ownship position is beyond 85 degrees North or South latitude. The result is an indication of "Standby" for remote displays. However, for NGT-9000 installations, where TAS is enabled, the range/bearing based TAS targets are sent to the display.

1.7.4 Failure Classification

Table 1-9 summarizes the potential hazards associated with the Lynx NGT-9000 functions and the associated failure condition severity classifications per AC 23.1309-1E. Hazards with classifications less than Major are not listed in this table.

Table 1-9: Failure Classification

Functional Description	Hazard Classification	Failure Condition
TAS Traffic Advisory	Major AC 120-55C, §12.b.(1)	Relative position of traffic associated with Traffic Advisory is incorrectly indicating (either visually or aurally or both). Per operational procedures crew will not deviate from assigned clearance based only on TA information. Confusion of crew to locate traffic associated with advisory. Significant increase in workload on crew.
Mode S Transponder Response to SSR and TCAS Interrogations	Major TSO-C112d §3.b.	Incorrect reply to an SSR or TCAS interrogation. Significant reduction in safety margins or functional capabilities
ADS-B Output	Major AC 20-165A, Appendix 1, §cc TSO-C166b, § 3.b TSO-C154c, § 3.b.	Incorrect position or velocity data reported to ground surveillance system providing aircraft separation services. Significant reduction in safety margins.
Enhanced Visual Acquisition (EVAcq) Basic Airborne Traffic Situational Awareness (AIRB)	Major AC 20-172A, § 2-7.d. TSO-C166b, § 3.b TSO-C154c, § 3.b. TSO-C195a, § 3.b	Traffic is incorrectly displayed relative to own ship position on the CDTI or displayed traffic information is incorrect. Crew confusion with traffic situation. Flight crew uses visual cues and ATC traffic advisories or instructions to avoid traffic. Significant increase in crew workload.

1.8 MODIFICATIONS

Modifications (MODS) are identified by an entry on the I.D tag on individual units. A list of modifications to the Lynx NGT-9000 is identified below:

Table 1-10: Hardware Modifications

MOD #	EFFECTIVITY / COMPLIANCE	DESCRIPTION
None		

1.9 SOFTWARE VERSIONS

Flight and Firmware versions are displayed on the splash screen when power is cycled. Additional Software and database versions can be viewed using the MPC via the Maintenance Application Tool. A list of current software revisions is identified below.

Table 1-11: Software Revisions

DESCRIPTION	REVISION	PART NUMBER	COMPATIBLE⁽¹⁾ LYNX MAT
NGT-9000 Ops SW (includes flight & maint)	1.0	9020010-001	8010-17002-0104
NGT-9000 Ops SW (includes flight & maint)	1.1	9020010-002	8010-17002-0104

Note (1): The listed Lynx MAT are current at time of publication; contact Field Service Engineering at L-3 Avionics Systems for latest information.

1.10 EQUIPMENT REQUIRED NOT SUPPLIED

Use Table 1-12 to identify equipment required for installation, calibration, and testing.

NOTE

Equivalent tools, equipment and hardware may be used.

Table 1-12: Equipment List

ITEM	DESCRIPTION
Cables and Wiring:	The installer supplies all system wires and cables. <u>Mating Connector (P1)</u> - Wires are #22 or #24 AWG as noted on interconnect wiring diagram in section 2. Use M22759 or equivalent wire and use M27500 or equivalent for twisted shielded wire for installation. <u>WiFi Serial Adapter Connector</u> 9-Pin Sub-D Connector, P/N M24308/2-1 or equivalent. Use M27500 or equivalent for twisted shielded wire for installation as noted on interconnect wiring diagram. <u>Antenna Cables</u> - L-Band and GPS Antenna Require M17/128-RG400 or equivalent coaxial cable. For the L-Band antenna the attenuation must not exceed 1.5 dB per cable (including the connectors). For the GPS antenna the attenuation should not exceed 10 dB per cable (including the connectors). NOTE RG type coaxial cable insertion loss can vary significantly between manufacturers. Refer to the cable manufacturer's specification sheet for actual attenuation (insertion loss) for the cable being used. - Directional Antenna (Required only for models with TAS) The Directional Antenna (NY156 or NY164) requires three cable assemblies; sum (Sigma Port), bit probe (Probe Port) and difference (Delta Port). Cable attenuation for the sum and difference ports must not exceed 1.5 dB. Table 1-19 identifies U. S. vendors who sell approved cables by the foot. Table 1-20 provides a cable to connector cross-reference. M17/128-RG-400 or equivalent may be used for the bit probe cable. Attenuation for the bit probe cable must not exceed 6 dB.
Circuit Breaker:	Installer is responsible for determining appropriate circuit breakers needed to protect aircraft wiring. Manufacturer recommends the following: 2.0 Amp circuit breaker for the unit with 28Vdc input 5.0 Amp circuit breaker for the unit with 14Vdc input
Consumables:	<u>Antenna Sealant</u> - For pressurized aircraft, use a sealant that meets the requirements of SAE AMS-S-8802 such as Flamemaster® CS3204 class B. For non-pressurized aircraft, use a non-corrosive sealant that meets the physical requirements of MIL-A-46146 such as General Electric RTV162. <u>Surface Preparation</u> - Alodine® No. 1001 required for installation of the antenna. <u>Tie Wraps or Lacing Cord</u> - Commercially available.

Lynx NGT-9000 Installation Manual

Table 1-12: Equipment List

ITEM	DESCRIPTION
Hardware:	The following items are commercially available and are the responsibility of the installer: - Cockpit Switch Switch is optional and is dependent on the installation. IDENT Input (momentary switch) Placard is recommended. - Ring Terminals (For Grounding). - Solder Sleeves. - Cable tie/Tie wrap. - Coaxial connectors. - Fusion tape. - Status Indicator Lamps. Lamps are optional and are dependent on the installation. See the general information section for details. (1) Amber colored "ADS-B Out Fail" lamp (2) Amber colored "Traffic Alert" (TA) lamp Placards are recommended. Use a Type 313 Lamp. (Colored as described above). Lamps can be 12 or 28V dc with maximum current 250 mA. An isolation relay is required for ac operation. - Four #8-32 fasteners (screws) and lockwashers to secure mounting tray for the remote mount models.
Installation Kits:	Installation kits are a customer option and are ordered separately. Refer to the following paragraph for ordering information and a list of components: - Panel Mount Lynx NGT-9000, Paragraph 1.10.1.1 - Remote Mount Lynx NGT-9000, Paragraph 1.10.1.2 - PIM-9000, Paragraph 1.10.1.3 - Directional Antenna, Paragraph 1.11.3.
Installation Tools:	<u>Twisted Shield Wire Stripper Tool:</u> Used for preparing wires for the P1 mating connector. - Manufacturer: EDMO Distributors, TSK-7000 (P/N 12-02031) <u>Crimp Hand Tools:</u> - Crimp Tool: M22520/2-01. For mating connector (P1) Positioner M22520/2-06 Insert / Extract M81969/1-02 - Crimp Tool: M22520/5-01. For coaxial contact shield crimp termination. Die Set (HX4) Insert M22520/5-05 (hex crimp die is .213 flat-to-flat) - Coax Removal Tool: Daniels Manufacturing Corp. (DMC) P/N DRK38 Tools can be purchased from: Amphenol Industrial; 40-60 Delaware Avenue; Sidney, NY 13838 Phone: 800-678-0141 Fax: 607-563-5157 <u>Panel Retainer Tool:</u> - Allen Hex Socket Screwdriver, 3/32 head. Used to secure and remove the unit from the rack.

**Lynx NGT-9000
Installation Manual**

Table 1-12: Equipment List

ITEM	DESCRIPTION
Software:	Software can be obtained over the internet or via CD. Refer to paragraph 1.12 for details.
System Components:	The following system components must be purchased separately and do not come with the unit: DCM, GPS antenna, L-Band antenna, Directional antenna, install kits, any display, and CP-2500 Control Panel (remote mounts only). A list of compatible components is found in paragraph 1.11.
Test Equipment:	<u>Air Data Test Set</u> Required to test altitude inputs. <u>Maintenance Computer (MPC)</u> • The MPC is a laptop computer used to operate the Lynx MAT for system setup, post installation checkout and troubleshooting. The computer should be using Windows XP or 7 as the operating system, 1.3 GHz processor or greater and 512 MB or more of RAM. Other configurations may operate normally, but they have not been tested. The computer must also have an USB connection and the installation of the correct Lynx MSS USB driver (versions for Windows XP or 7). <u>Mini-b USB Cable</u> • Required if using the USB port to interface the MPC to the Lynx NGT-9000. <u>DB9 F/F Standard Null Modem Cable (optional)</u> • Required to configure WiFi Serial Adapter. <u>Flightline Tester</u> • IFR-6000 Ramp Test Set (with upgrade package Option #3 (1090) & #5 (UAT)), Manufacturer: AEROFLEX. <u>Milliohm Meter</u> Required to check installation bonding to aircraft structure.

1.10.1 Installation Kits

Ordering Installation Kits is a customer option. Item numbers are identified in the installation section. Refer to the following for ordering information:

1.10.1.1 Panel Mount Lynx NGT-9000

See Table 1-13 or Table 1-14 for a list of components. Total installed rack weight = 361 grams / .796 pound (includes the mounting rack, connectors (all contact positions loaded), attaching hardware, contacts, and ground strap). The weight total does not include RF cables or fasteners to attach the rack to the aircraft.

Table 1-13: Panel Mount Installation Kit P/N 9060-17000-01 for Straight RF Connector

DESCRIPTION	PART NUMBER	QTY	ITEM
Panel Mount Rack Assembly	9010-17022-01	1	1
Rack Rear Plate Panel Mount	9000-17025-02	1	2
Screw, F100 4-40 x 0.438	NAS514-P-440-7	4	3
Screw, F100 4-40 x 0.312	NAS514-P-440-5	4	4
Floating Nut Plate D-Sub Shell Size 3	9000-17036-01	1	5
Floating Nut Plate D-Sub Shell Size 5	9000-17034-01	1	6
Screw F100 2-56 X 0.250 SS Pass W/ Vibra-Tite	2000-10085-01	8	7
Shield Clamp .55 Mounting Center	9010-17012-01	1	9
Wire Clamp	9000-17076-01	2	10
Contact Socket Crimp Size 22D	M39029/57-354	78	11
Screw, Machine	MS35206-230	6	12
Connector D-Sub 78 Position Float Mount Assembly	9080-17006-01	1	14
Connector D-Sub 5 Position 5W5 Float Mount Assembly	9080-17007-01	1	15
Grounding Clip Copper Spring With Ground Finger Stock	9001963-001	1	16
Screw 4-40 X 0.312 SS Pass W/ Vibra-Tite	2000-10087-01	10	22
Contact D-Sub Combo 50 Ohm Plug solder/Crimp	3050-10124-01	5	23
Float RF backshell 5W5 d-sub shell size 3	9000-17106-01	1	24
Cable Tie 4.1x0.098 NYL 6.6 Black Low Pro PBF	1040-10002-01	15	26
Cable Ground Strap	9020-17002-01	2	27
Wire Clamp Pad	9000-17132-01	2	30

Lynx NGT-9000 Installation Manual

Table 1-14: Panel Mount Installation Kit P/N 9060-17000-02 for Right Angle RF Connector

DESCRIPTION	PART NUMBER	QTY	ITEM
Panel Mount Rack Assembly	9010-17022-01	1	1
Rack Rear Plate Panel Mount	9000-17025-02	1	2
Screw, F100 4-40 x 0.438	NAS514-P-440-7	4	3
Screw, F100 4-40 x 0.312	NAS514-P-440-5	4	4
Floating Nut Plate D-Sub Shell Size 3	9000-17036-01	1	5
Floating Nut Plate D-Sub Shell Size 5	9000-17034-01	1	6
Screw F100 2-56 X 0.250 SS Pass W/ Vibra-Tite	2000-10085-01	8	7
Enclosed Backshell, Shell Size 5	9010-17012-01	1	9
Wire Clamp	9000-17076-01	2	10
Contact Socket Crimp Size 22D	M39029/57-354	78	11
Screw, Machine	MS35206-230	6	12
Connector D-Sub 78 Position Float Mount Assembly	9080-17006-01	1	14
Connector D-Sub 5 Position 5W5 Float Mount Assembly	9080-17007-01	1	15
Grounding Clip Copper Spring With Ground Finger Stock	9001963-001	1	16
Float RF Backshell 5W5 D-Sub Shell Size 3 90deg Right Angle	9000-17105-01	1	17
Contact D-Sub Combo 50 Ohm Plug solder/Crimp	3050-10123-01	5	18
Screw 4-40 X 0.312 SS Pass W/ Vibra-Tite	2000-10087-01	8	22
Cable Tie 4.1x0.098 NYL 6.6 Black Low Pro PBF	1040-10002-01	15	26
Cable Ground Strap	9020-17002-01	2	27
Screw, 4-40 x 0.188 with Vibra-Tite	101-10114-011	2	29
Wire Clamp Pad	9000-17132-01	2	30

1.10.1.2 Remote Mount Lynx NGT-9000R

See Table 1-15 or Table 1-16 for a list of components. Total installed tray weight = 559 grams / 1.232 pounds (includes the mounting rack, connectors (all contact positions loaded), attaching hardware, contacts, and ground strap). The weight total does not include RF cables or fasteners to attach the rack to the aircraft.

Table 1-15: Remote Mount Installation Kit P/N 9060-17500-01 for Straight RF Connector

DESCRIPTION	PART NUMBER	QTY	ITEM
Mounting Tray Assembly NGT-9000 Remote Mount	9002018-001	1	1
Rear Plate Panel Mount Rack	9000-17025-02	1	2
Screw P F100 4-40 X .438 ALY Steel Cad	NAS514-P-440-7	4	3
Screw P F100 4-40 X .312 ALY Steel Cad	NAS514-P-440-5	4	4
Floating Nut Plate D-Sub Shell Size 3	9000-17036-01	1	5
Floating Nut Plate D-Sub Shell Size 5	9000-17034-01	1	6
Screw F100 2-56 X .250 Ss Pass W/ Vibra-tite	2000-10085-01	8	7
Enclosed Backshell, Shell Size 5	9010-17012-01	1	9
Wire Clamp	9000-17076-01	2	10
Contact Socket Crimp Size 22d	M39029/57-354	78	11
Assembly Connector D-Sub 78 Position Float Mount	9080-17006-01	1	14
Assembly Connector D-Sub 5 Position 5w5 Float Mount	9080-17007-01	1	15
Grounding Clip Copper Spring With Ground Finger Stock	9001963-001	1	16
Screw Pp 4-40 X .312 Ss Pass W/ Vibra-tite	2000-10087-01	10	22
Contact DSUB Coax Plug Str 50 Ohm Solder/Crimp	3050-10124-01	5	23
Float RF Backshell 5w5 D-Sub Shell Size 3	9000-17106-01	1	24
Cable Tie 4.1x0.098 NYL 6.6 Black Low Pro	1040-10002-01	15	26
Cable Ground Strap	9020-17002-01	2	27
Wire Clamp Pad	9000-17132-01	2	30

Lynx NGT-9000 Installation Manual

Table 1-16: Remote Mount Installation Kit P/N 9060-17500-02 for Right Angle RF Connector

DESCRIPTION	PART NUMBER	QTY	ITEM
Mounting Tray Assembly NGT-9000 Remote Mount	9002018-001	1	1
Rear Plate Panel Mount Rack	9000-17025-02	1	2
Screw P F100 4-40 X .438 ALY Steel Cad	NAS514-P-440-7	4	3
Screw P F100 4-40 X .312 ALY Steel Cad	NAS514-P-440-5	4	4
Floating Nut Plate D-Sub Shell Size 3	9000-17036-01	1	5
Floating Nut Plate D-Sub Shell Size 5	9000-17034-01	1	6
Screw F100 2-56 X .250 Ss Pass W/ Vibra-tite	2000-10085-01	8	7
Enclosed Backshell, Shell Size 5	9010-17012-01	1	9
Wire Clamp	9000-17076-01	2	10
Contact Socket Crimp Size 22d	M39029/57-354	78	11
Assembly Connector D-Sub 78 Position Float Mount	9080-17006-01	1	14
Assembly Connector D-Sub 5 Position 5w5 Float Mount	9080-17007-01	1	15
Grounding Clip Copper Spring With Ground Finger Stock	9001963-001	1	16
Float RF Backshell 5W5 D-SUB Shell Size 3 90DEG Right Angle	9000-17105-01	1	17
Contact DSUB Coax Plug RA 50 Ohm Solder/Crimp	3050-10123-01	1	18
Screw Pp 4-40 X .312 SS Pass W/ Vibra-tite	2000-10087-01	10	22
Cable Tie 4.1x0.098 NYL 6.6 Black Low Pro	1040-10002-01	15	26
Cable Ground Strap	9020-17002-01	2	27
Screw 4-40 X .188 PP SS W/Vibra-tite	101-10114-011	2	29
Wire Clamp Pad	9000-17132-01	2	30

1.10.1.3 PIM-9000

Table 1-17: PIM-9000 Installation Kit P/N 9060-17001-01

DESCRIPTION	PART NUMBER	QTY	ITEM
Connector D-Sub 9 Pin Female	614A0022	1	1
Backshell 9 POS w/ Slide Lock	3050-10081-01	1	1

1.10.2 Antenna Cables

For L-Band and GPS antenna cables, Table 1-18 lists examples of the recommended antenna cable vendors and the type of cable to be used for specific lengths of cable.

For Directional antenna cables, Table 1-19 identifies U. S. vendors who sell approved cables by the foot. Table 1-20 provides a cable to connector cross-reference.

Any cable meeting specifications is acceptable for the installation.

Table 1-18: Coaxial Cable Specifications

INSERTION LOSS (DB/100FT) [1]	CARLISLE IT TYPE [2]	MIL-C-17 TYPE [3]	RG TYPE
18.5	N/A	M17/128-RG400	RG-400
11.1	N/A	M17/112-RG304	RG-304
9.2	N/A	M17/127-RG393	RG-393
15.2	3C142B	N/A	N/A
9.2	311601	N/A	N/A
7.5	311501	N/A	N/A
5.8	311201	N/A	N/A
3.8	310801	N/A	N/A
[1] RG type coaxial cable insertion loss can vary significantly between manufacturers. The insertion loss for RG type cables shown in this column is considered 'worst case'. Refer to the cable manufacturer's specification sheet for actual attenuation (insertion loss) for the cable being used. [2] Supplier information (for reference only): Carlisle IT 5300 W. Franklin Drive Franklin, WI 53132 Tel: 800-327-9473 414-421-5300 Fax: 414-421-5301 www.carlisle.com Alternate cable suppliers: Pic Wire (www.picwire.com) and EMTEQ (www.emteq.com) [3] Supplier information: See current issue of Qualified Products List QPL-17.			

Lynx NGT-9000 Installation Manual

Table 1-19: Directional Antenna SIGMA and DELTA Port Cable Vendors

Manufacturer: Electrical & Mechanical Technologies (EMTEQ)				
Part Number	Attenuation (dB/100 ft 1.0 GHz)	Weight (lb) (per 100 ft)	Maximum Length (ft)	Minimum Bend Radius (in)
Polyethylene				
PFLX195-500	10.93	2.6	10	0.50
PFLX240-500	8.79	3.8	12	0.75
PFLX240-501	7.9	4.5	13	0.85
PFLX340-500	5.25	7.4	20	1.00
PFLX400-500	4.0	6.8	27	1.00
PFLX500-500	3.31	11.8	35	1.25
Teflon				
TFLX130-100	16.7	1.4	6	0.50
TFLX165-100	13.8	2.2	8	0.85
TFLX205-100	9.9	3.2	11	0.75
TFLX225-100	7.9	4.1	14	2.0
TFLX295-100	5.95	7.2	18	1.5
TFLX480-100	3.5	19	31	4.5
Frequency: 1030 MHz Loss: <1.5 dB at 1030 MHz (includes all cables and connectors) VSWR: <1.5:1 at 1030 MHz Connectors have 0.2dB loss each				
Manufacturer: Carlisle IT				
Part Number	Attenuation (dB/100 ft 1.0 GHz)	Weight (lb) (per 100 ft)	Maximum Length (ft)	Minimum Bend Radius (in)
352001	12.2	2.7	9	0.81
311601	8.7	5.5	12	1.15
311201	5.56	8.5	19	1.59
310801	3.63	16.1	30	2.26
Manufacturer: PIC Wire and Cable				
Part Number	Attenuation (dB/100 ft 1.0 GHz)	Weight (lb) (per 100 ft)	Maximum Length (ft)	Minimum Bend Radius (in)
S33141	7.2	6.5	15	1.5
S55122	5.7	8.2	19	1.6
S22089	3.8	18	29	2.5

NOTE

If cable weight is not a consideration, select lowest loss cable. Contact cable vendors before installation. New low-loss light-weight cables may be available.

Lynx NGT-9000 Installation Manual

Table 1-20: Cable to Connector Reference

Electrical & Mechanical Technologies (EMTEQ)				
Cable Part Number	TNC Straight	TNC Right Angle	BNC Straight	BNC Right Angle
Polyethylene				
PFLX195-500	TMS195-1	TMR195-1	BMS195-1	BMR195-1
PFLX240-500	TMS240-1	TMR240-1	BMS240-1	BMR240-1
PFLX240-501	TMS240-1	TMR240-1	BMS240-1	BMR240-1
PFLX340-500	TMS340-1	TMR340-1	BMS340-1	BMR340-1
PFLX400-500	TMS400-1	TMR400-1	BMS400-1	BMR400-1
PFLX500-500	TMS500-1	TMR500-1	BMS500-1	BMR500-1
Teflon				
TFLX130-100	TMS130-1	TMR130-1	BMS130-1	BMR130-1
TFLX165-100	TMS165-1	TMR165-1	BMS165-1	BMR165-1
TFLX205-100	TMS205-1	TMR205-1	BMS205-1	BMR205-1
TFLX225-100	TMS225-1	TMR225-1	BMS225-1	BMR225-1
TFLX295-100	TMS295-1	TMR295-1	BMS295-1	BMR295-1
TFLX480-100	TMS488-1	TMR488-1	BMS488-1	BMR488-1
Electronic Cable Specialists				
Cable Part Number	TNC Straight	TNC Right Angle	BNC Straight	BNC Right Angle
311601	CTS922	CTR922	CBS922	CBR922
311201	CTS122	CTR122	CBS122	CBR122
310801	CTS022	CTR022	CBS022	CBR022
352001	CTS3522	CTR3522	CBS3522	CBR3522
PIC Wire and Cable				
Cable Part Number	TNC Straight	TNC Right Angle	BNC Straight	BNC Right Angle
S33141	190308	190309	190312	190313
S55122	190608	190609	190612	190613
S22089	190408	190409	190412	190413

1.11 EQUIPMENT INTERFACES

The equipment listed here is compatible with the Lynx NGT-9000. Equipment interfaces not listed in this section can still be found to be compatible for installation, but must meet the same requirements. When interfacing to compatible equipment there may be set-up steps for the equipment that need to be done before it can communicate with the unit.

NOTE

Listed software versions are the versions that were tested by the manufacturer.

1.11.1 GPS Antenna

The antenna performance is critical to the operation of GPS in the unit. The antennas listed in Table 1-21 meet the requirements of TSO-C190. The unit may be installed on aircraft with existing antenna if that antenna complies with TSO-C144a and has been tested for compatibility. All listed GPS antennas have a TNC connector.

Table 1-21: GPS Antennas

MANUFACTURER	PART NUMBER
AeroAntenna	AT575-326W-TNCF-000-RG-30-NM
AeroAntenna	AT575-343W-TNCF-000-RG-33-NM
AeroAntenna	AT575-493W-TNCF-000-RG-29.5-NM
AeroAntenna	AT575-516W-TNCF-000-RG-29-NM
AeroAntenna	AT575-93
AeroAntenna	AT575-43F
AeroAntenna	AT575-516
AeroAntenna	AT135-3
Comant	CI-2580-200
Comant	CI-2728-410
Comant	CI 428-200
Comant	CI 429-200
Comant	CI 429-410
Sensor Systems	S67-1575-135
Sensor Systems	S67-1575-137
Sensor Systems	S67-1575-145
Sensor Systems	S67-1575-160

1.11.2 L-Band Antenna

The L-Band antenna listed in Table 1-22 meet the requirements of TSO-C66b (or more recent) and TSO-C74c (or more recent). The unit may be installed on aircraft with existing antenna if that antenna complies with TSO-C66b and TSO-C74c and has been tested for compatibility. Antennas not listed may still be used. Contact L-3 Communications for further information regarding compatibility.

Table 1-22: L-Band Antennas

MANUFACTURER	PART NUMBER	CONNECTOR TYPE
Comant	CI-105 *	BNC
Comant	CI-105-11	TNC
Comant	CI-105-16	BNC
RAMI	AV-74	BNC
RAMI	AV-22	BNC
Sensor Systems	S65-5366-895L	TNC

1.11.3 Directional Antenna

The antennas listed in Table 1-23 have been tested for compatibility. Antennas not listed below can still be approved for installation but must meet the specifications for Directional antenna that support TCAS or TAS operation and meet the specifications required by the Lynx NGT-9000+ or NGT-9000R+.

NOTE

The NY156 and NY164 Directional Antenna may not be used for non-TAS functions.

To fit specific airframes, a special adapter plate is also required. The adapter plate is included in the installation kit shipped with each system. Table 1-24 lists the contents of each installation kit. The installation kits differ only in the size of the special airframe adapter plate.

Table 1-25 lists of installation kits associated with various airframes. For aircraft not listed, contact the aircraft manufacturer for information relative to the radius of the area where the antenna is to be mounted.

Table 1-23: Directional Antenna Model Options and Specifications

PART NUMBER:	805-10003-001 (NY156 - White Paint). Used for Installations with TCAS1 or TAS. 805-10890-001 (NY164 - White Paint). Used for Installations with TAS. 805-10890-002 (NY164 - Black Paint). Used for Installations with TAS.
MANUFACTURER	L-3 Avionics Systems
CERTIFICATION:	TSO-C118 and TSOC147
RTCA COMPLIANCE:	DO-160C (For further details refer to Appendix B - Environmental Qualification Form.)
SIZE:	1.3 inches (3.25 cm) high 6.23 in (15.82 cm) wide 11.12 in (27.94 cm) deep
WEIGHT:	2.3 lb (1.04 kg)
SPEED:	Rated to 600 knots (0.9 Mach) @ 25,000 feet.
FREQUENCY:	1030-1090 MHz
FINISH:	Gloss white or black Skydrol resistant polyurethane paint.
OPERATING TEMPERATURE:	-55° to +70°C (-67° to +185°F)
STORAGE TEMPERATURE:	-55° to +85°C (-67° to +185°F)
MAXIMUM ALTITUDE:	55,000 ft (installation environment)
SCHEDULED MAINTENENACE:	None.
SERVICE LIFE:	Unlimited.
REPAIRABILITY:	Replacement only.

Table 1-24: Directional Antenna Installation Kit 817-10009-xxx

KIT PART NUMBER	SUPPLIED PARTS *		
	PART NUMBER	DESCRIPTION	QUANTITY
817-10009-001	800-10066-001	Special Adapter Plate, 40 Inch (101.6 cm) Radius	1
817-10009-002	800-10066-002	Special Adapter Plate, 63 Inch (160.0 cm) Radius	1
817-10009-003	800-10066-004	Special Adapter Plate, 80 Inch (203.2 cm) Radius	1
817-10009-004	800-10066-003	Special Adapter Plate, 32 Inch (81.3 cm) Radius	1
817-10009-005	800-10066-005	Special Adapter Plate, 47 Inch (119.4 cm) Radius	1
817-10009-006 (No Adapter Plate)	100-10022-001*	Screw, 10-32 x 1 PPH SS (MS51958-67)	4
	101-10027-001*	Stop Nut, 10-32 (MS21044C3)	4

* Hardware supplied with all kits.

Table 1-25: Airframe Installation Kits

MANUFACTURER	AIRFRAME	INSTALLATION KIT P/N
Cessna	CITATION III, VI, VII	817-10009-001
	CITATIONJET, CITATION I, II, V	817-10009-004
	182, 210, 337, 401, 414, 425, 441	817-10009-006
MOONEY	M20	817-10009-006

1.11.4 Traffic Displays

Traffic information is output to a compatible traffic display from the unit using an ARINC 735B interface format. Possible traffic output format selections include Standard TCAS Intruder File (STIF or TIF) and Display Traffic Information File (DTIF). The unit allows installed configuration selection of STIF, DTIF, or both formats of output data via the ARINC 429 bus to the traffic display. Displays not listed below can still be found to be compatible for installation, but must meet the same specifications.

Table 1-26: Traffic Displays

MANUFACTURER	MODEL	SW VERSION
Garmin	GNS 430W (Standard traffic only)	5.0 GPS SW / Version 5.10
Garmin	G 500 (Standard traffic only)	GDU-620 Version 6.11 FPGA and I/O Version – 2.1
Garmin	GTN 650 (Standard traffic only)	4.0 GPS / SW Version – 5.0
Garmin	GMX 200 ⁽¹⁾	2.13
Garmin	MX 20 ⁽¹⁾	Version – 5.7

Note:

- (1) Information regarding ARINC 429 card: Can be installed using RS-422 or ARINC 429 (if optional ARINC 429 card is installed).

1.11.5 Weather Display

Table 1-27: FIS-B WX Displays

MANUFACTURER	MODEL	SW VERSION
Garmin	GMX 200	2.13

1.11.6 WIFI Serial Adapter

The WiFi Serial Adapter provides a WiFi connection from the Lynx MSS UAT Device and the Lynx MAT and a PED.

Table 1-28: RS-232 to WiFi Serial Adapter

DESCRIPTION	MODEL - PART NUMBER /MANUFACTURER
WiFly Serial Adapter ⁽¹⁾	RN370M / Roving Networks P/N 9080-10024-01 / L-3 Avionics Systems
Lynx PED Interface Module ⁽²⁾	PIM-9000 / P/N 9230-17005-01 / L-3 Avionics Systems

Notes:

- (1) The WiFly Serial Adapter is powered by two AAA batteries (Nickel Metal Hydride, **not** Lithium or Alkaline) and 5VDC (only) on pin 9 of the DB9 connector. Rechargeable NiMH batteries are trickle charged when used with an external 5VDC (only) power source. The unit operates for up to 8 hours while connected over WiFi on a fully charged set of batteries. A blinking blue light indicates that the WiFly Serial Adapter is receiving data.
- (2) The voltage input for the PIM-9000 is rated from 4.5VDC to 32VDC. Input power is rated at 0.75W max. The Lynx PED Interface Module PIM-9000 is preconfigured by the manufacturer. An Installation Kit is available P/N 9060-17001-01. Refer to paragraph Table 1-12 for details.

1.11.7 Applications (APPS)

APPS are used with the PED (e.g. tablet or smartphone). Other apps may also operate, but have not been tested.

Table 1-29: APPS for PED

MANUFACTURER	MODEL
Sky Radar Radenna LLC	Sky Radar
Hilton Software LLC	Wing X PRO

1.11.8 Control Panel

The CP-2500 is required for installation of the remote mount Lynx NGT-9000.

Table 1-30: Control Panel

MANUFACTURER	MODEL	SW VERSION
L-3 Aviation Products	CP-2500 (9080-17250-01)	FW Rev 09 and HW Rev 01

1.12 SOFTWARE UPDATES

Software for the unit, Lynx MAT, databases (Navigation and Cultural Features) can be obtained by either downloading from the L-3 Technical Publications website or by receiving a compact disc by contacting L-3 Avionics Systems at (616) 285-6457.

1.12.1 Website Download

If you have access to the Technical Publications website go to <https://www.avionicttechpubs.com> and do a basic search on the unit model or part number. If you do not have access go to <https://www.l-3avionics.com/customer-support/technical-publications/> download the *Secure Site Access Request* complete the form and return it to avionics.techpubs@l-3com.com.

Files are downloaded to a temp folder on the user's computer as a .zip file.

1.12.2 Compact Disc

Compact Disks (CD) available for the Lynx NGT-9000 are listed in Table 1-31. The Lynx MAT is installed on the Maintenance PC and is used to transfer application software and database data to the Lynx NGT-9000.

Table 1-31: CD Part Numbers and Contents

PART NUMBER	CONTENTS
9230-17007-0002	Lynx Maintenance Application Tool (Lynx MAT), P/N 8010-17002-0104 Tool used for diagnostics, set up configuration options, and software downloading. LynxMSS USB Drivers (versions for Windows 7 & Windows XP) • P/N 8010-17004-0001 (for Windows 7) • P/N 8010-17006-0001 (for Windows XP) This driver is required for communication between the MPC and the Lynx NGT-9000 via the USB interface. The driver comes with the Lynx MAT tool software. Procedures to install the Lynx MAT and LynxMSS USB Driver are found in paragraph 1.12.3.
9230-23001-0001	68DC Airport Database – North America, P/N 8010-22310-0201, (68.bin) The airport database expires every 28days; however there is no requirement to update this because it is used only for informational purposes.
9230-12001-0001	72DC Cultural Features Database – North American Extended, P/N 8010-12004-0001, (72.bin). The 72DC Cultural Features Database contains geographic boundaries for both states and countries including lakes and rivers. There is no expiration associated to this database.

1.12.3 Installation Procedure for LynxMSS USB Driver

Typically the computer device manager pops up when the Lynx NGT-9000 is connected to the MPC. Follow the device manager instructions to install the driver. The procedure here is typical, but may differ per settings on the computer being used.

The following procedures assume the following:



- The Lynx NGT-9000 and MPC have power applied.
- The driver has been downloaded from the internet or is available via CD.
- The Lynx NGT-9000 is connected to the MPC via USB cable.

1.12.3.1 Windows XP Installation

1. After the Lynx NGT-9000 and MPC are connected a “Found New Hardware Wizard” window should pop up on the MPC.





2. A new hardware wizard dialog is then shown on the MPC.
3. Select “Install from a list or specific location (Advanced)” and Press the “Next” button. See Below.
4. Press the “Have Disk” button.

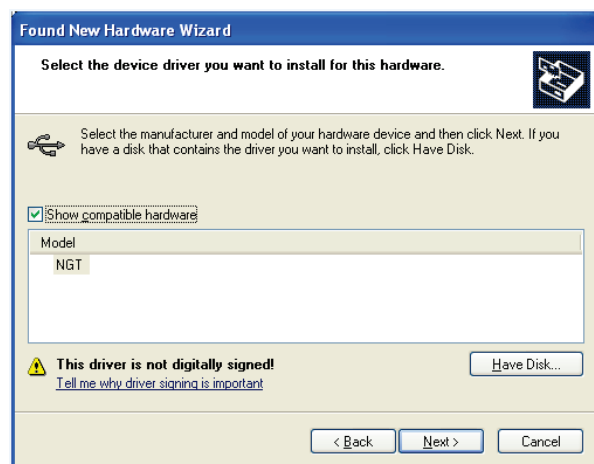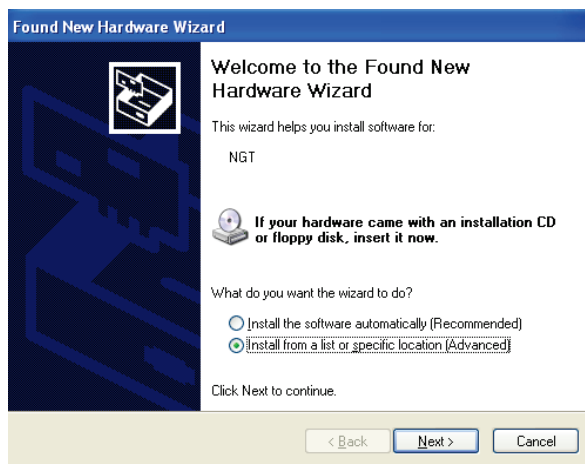


Lynx NGT-9000 Installation Manual



5. Press the “Browse” button and navigate to the location of the LynxMSS Driver file. See Below.
6. Select the LynxMSS Driver file and press the “Open” button.

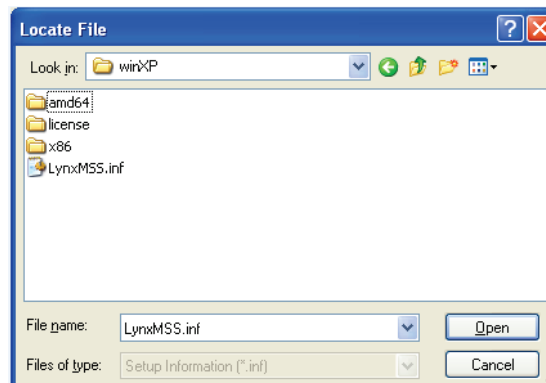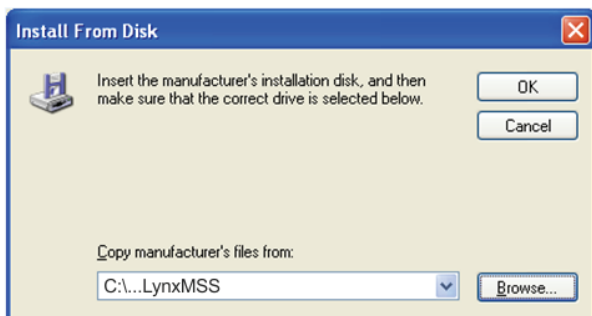

7. Press the “OK” button. A screen with “Lynx MSS” as the Model is shown. See Below.

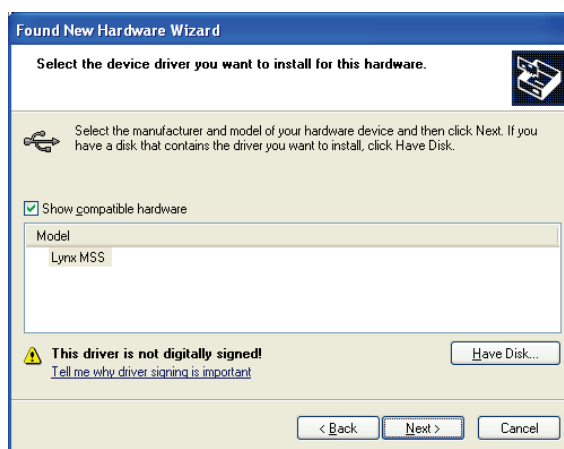


8. Press the “Next” button. The driver installation process begins. See Below.
9. When the installation completes a completed dialog is shown. Press the “Finish” button.

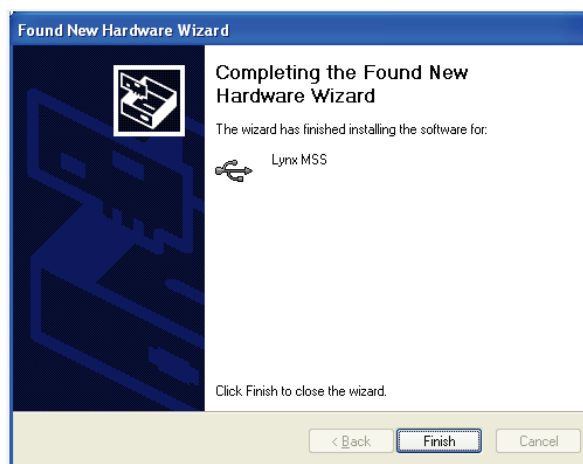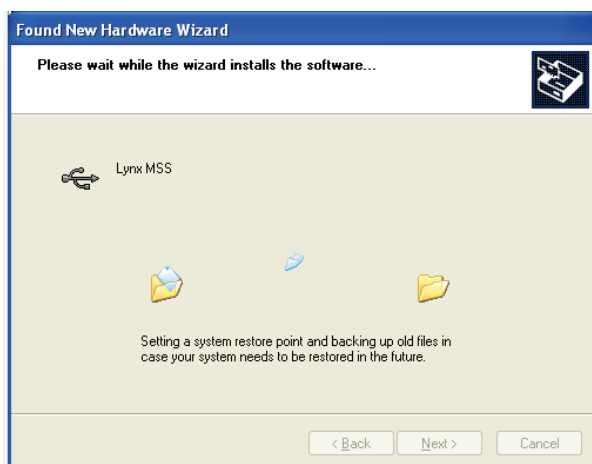


1.12.3.2 Windows 7 Installation


1. After the Lynx NGT-9000 and MPC are connected, an “Installing device driver software” is shown on the tray.

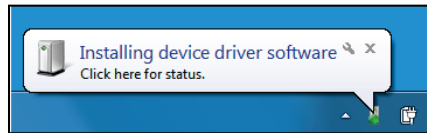



2. If the Driver Software Installation fails a dialog window is shown. Close out of that window.
3. Open the Devices and Printers from the Start menu. An “unspecified” device with the label “NGT” should be available. See below.
4. Double click on the “unspecified” device icon.

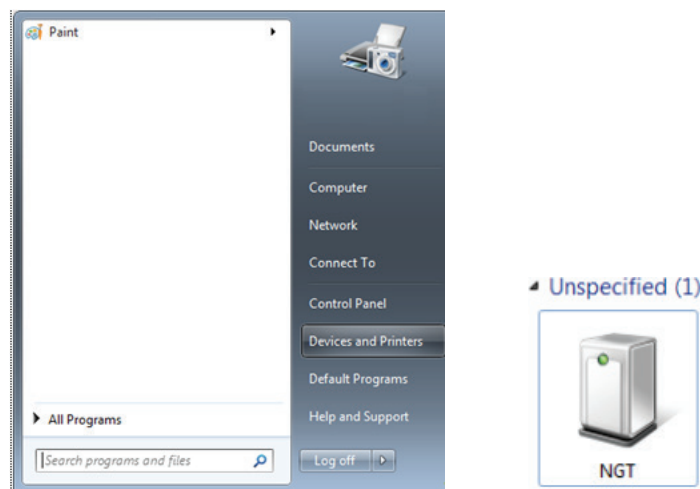



5. In the NGT Properties window select the “Hardware” tab. See below.
6. Select the “Properties” button.

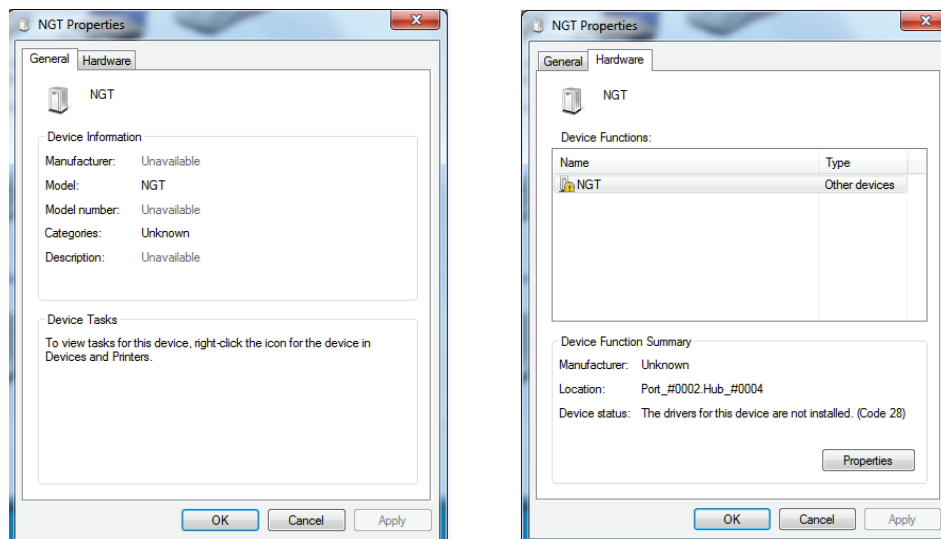

7. Select the “Change Settings” button. See below.
8. Select the “Update Driver” button.
9. Select the “Browse my computer for driver software”.

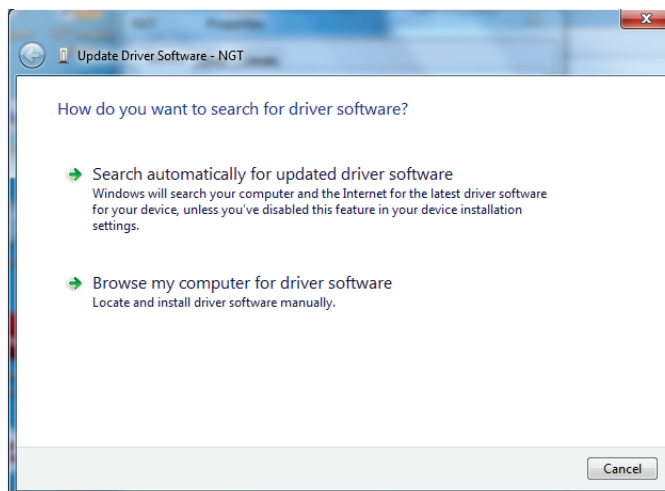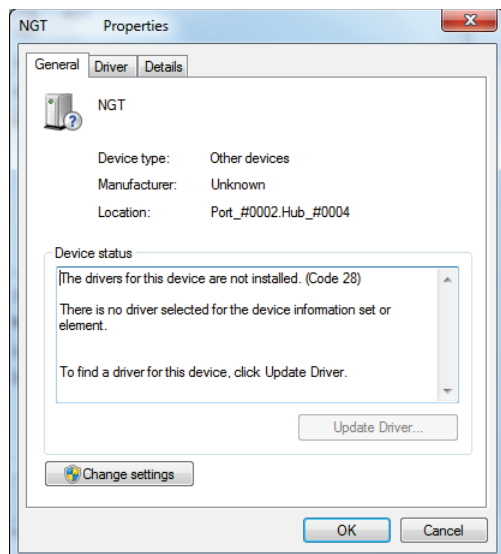

10. Browse to the Windows 7 USB Driver folder and select “Open”. See below.
11. Select “Next”. The driver installation process begins.
12. When the installation completes a completed dialog is shown. Press the “Close” button.

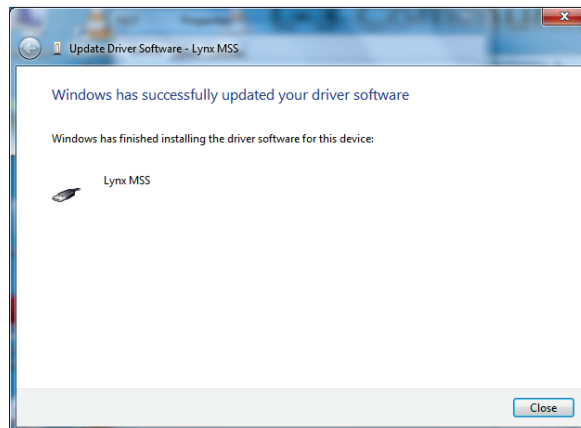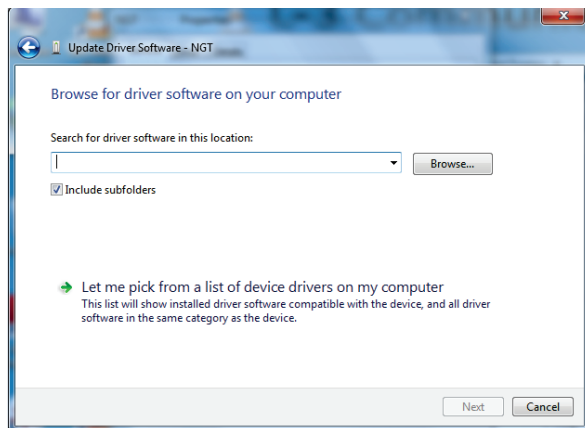

1.13 INSTALLATION APPROVAL AND LIMITATIONS

1. This article meets the minimum performance and quality control standards required by the applicable technical standard orders (TSOs). Those installing this article, on or in a specific type or class of aircraft, must determine that the aircraft installation conditions are within the applicable TSOs standards. TSO articles must have separate approval for installation in an aircraft. The article may be installed only according to 14 CFR parts 43 or the applicable airworthiness requirements.
2. All antennas used in the installation must meet the requirements specified in this manual.
3. The GPS receiver must use antenna meeting the requirements specified in this manual.
4. The use of a frequency diplexer is not supported and as such the L-Band antenna cannot be diplexed with another L band antenna.
5. It is the installer's responsibility to ensure the ADS-B Out system is compliant with AC 20-165A, 14 CFR 91.225 (b) and 91.227 when installed in accordance with L-3's installation instructions.
6. If aircraft ground speed is less than 7 knots, and there is not a valid heading input into the unit, then TAS traffic data only may be displayed. No traffic is displayed if TAS is in standby.
7. The Lynx NGT-9000 may be optionally configured to support the TAS function or the Diversity function, but both options may not be selected at the same time and is not supported by the FAA TSO Approval.

Lynx NGT-9000 Installation Manual

This page intentionally blank

Section 2

Installation

2.1 INTRODUCTION

This section describes the installation of the Lynx NGT-9000 Multilink Surveillance System. Installation must be made by qualified personnel, in conformance with applicable government regulations. The information furnished is for convenience only.

Tolerances (unless otherwise indicated):

ANGLES ARE	$\pm 0.5^{\circ}$
0.00 TWO PLACE DECIMALS ARE	± 0.02
0.000 THREE PLACE DECIMALS ARE	± 0.010

2.2 UNPACKING AND INSPECTING

Carefully unpack the unit and note any damage to shipping containers or equipment. Visually inspect each component for evidence of damage. Compare the equipment received with that noted on the packing list. Report immediately any missing items or evidence of damage to the carrier making the delivery. To justify a claim, retain the original shipping container and all packing materials.

Every effort should be made to retain the original shipping containers for storage. If the original containers are not available, a separate cardboard container should be prepared that is large enough to accommodate sufficient packing material to prevent movement.

2.2.1 Transport and Storage Considerations

Transport of the avionics equipment should be done in accordance with standard procedures, i.e. hand carried or transported in the original container. The container limits the shock to the indicator at a maximum of 20g's when dropped from a distance of 36 inches.

Storage of avionics equipment must be consistent with industry standards for avionics equipment and performs satisfactorily after periods of storage up to 24 months. The ambient temperature of the storage area should not fall below -55°C (-65°F) or rise above $+85^{\circ}\text{C}$ ($+185^{\circ}\text{F}$).

2.3 INSTALLATION PROCEDURES

1. The installer must take the following into consideration prior to installation. Specific procedures for installation of the Lynx NGT-9000, Detachable Configuration Module, Mounting Rack or tray, and Directional Antenna (for TAS option) are detailed in their respective paragraphs below.
 - The installer must obtain installation approval (i.e. Supplemental Type Certification).
 - Follow the acceptable avionics installation practices in FAA Advisory Circulars AC 43.13-1B and AC 43.13-2B or later revision of these documents.
 - It is the responsibility of the equipment installer to determine that the required aircraft viewing envelope for the panel mount Lynx NGT-9000 is within the specified display viewing envelope(s). Refer to paragraph 2.3.1.
 - Bonding impedance between aircraft ground and the unit chassis must be less than 2.5 milliohms.
 - It is recommended that the aircraft battery be disconnected before performing installation procedure.
 - Installers are responsible for obtaining installation hardware (i.e. screws, supporting plates, etc) beyond those parts that come with the installation kits.
 - All antenna cables should be clearly marked to prevent inadvertent installation into the wrong connector position.
 - Tighten all screws to snug (i.e. only such torque that can be applied by hand) unless specific torque instructions are given.
 - After installation, refer to the Installation Checkout section for calibration, power-up and ground testing procedures.
 - When installing a remote mount Lynx NGT-9000 a CP-2500 Control Panel is required. Refer to the CP-2500 Installation Manual (0040-17251-01) for installation procedures.
2. Electrical equipment chassis, shield/ground terminations, antennas, supporting brackets, and racks must be electrically bonded to the aircraft's main structure (metallic aircraft) or instrument panel (composite aircraft). Compliance of the electrical bonding should be verified by inspection using a calibrated milliohm meter. An equivalent OEM procedure may also be substituted.
 - The electrical bond should achieve direct current (DC) resistance less than or equal to 2.5 milliohms to structure local to where the equipment is mounted for metallic aircraft or tube and fabric aircraft.
 - The electrical bond should achieve direct current (DC) resistance less than or equal to 5.0 milliohms to the instrument panel for composite aircraft.

The antenna ground plane must be electrically bonded to the antenna baseplate. Do not remove paint on outer skin of aircraft under the footprint of the antenna baseplate unless necessary to meet bonding requirements. Refer to antenna manufacturer's installation instructions.


2.3.1 Panel Mount Location

1. The unit is mounted in the instrument panel where the touch screen display can be used to view aircraft flight information and provide operational control.
2. The unit should be accessible for inspection, maintenance, or removal, and free from instrument panel structural flexure and excessive vibration or heat.
3. The wiring and antenna cables should not run adjacent to heaters, engine exhaust, or heat sources.
4. The display viewing envelope has a viewing angle of at least $\pm 45^\circ$ in the horizontal plane and at least -10° to $+30^\circ$ in the vertical plane as seen from an eye position of 30 inches from the front of the display.
5. The unit should be located in an area where the touch screen control is within easy reach of the pilot and cannot be obstructed from continuous view (i.e. behind a control yoke).
6. A Mounting Rack is required to install the panel mount NGT-9000. Two installation kits are available each with their own mounting rack. See details below:
 - Installation Kit P/N 9060-17000-01 for Mounting Rack Assembly with Straight Connector
 - Installation Kit P/N 9060-17000-02 for Mounting Rack Assembly with Right Angle ConnectorOrdering information and a parts list for the installation kits are found in the General Information section.
7. Compare the space requirements of the Mounting Rack with the installation area being considered. The outline drawing for the unit is located in Figure 2-1. The outline drawing of the Rack Assembly is located in Figure 2-2. The installer is advised to consider the space requirements (2-3 inches) needed for the connector backshell and the cable bend radius.

2.3.2 Remote Mount Location

1. The unit should be accessible for inspection, maintenance, or removal, and free from instrument panel structural flexure and excessive vibration or heat.
2. The wiring and antenna cables should not run adjacent to heaters, engine exhaust, or heat sources.
3. A Mounting Tray is required to install the remote mount NGT-9000R. Two installation kits are available each with their own mounting tray. Four #8-32 fasteners with lockwashers are required to secure the Mounting Tray. See details below:
 - Installation Kit P/N 9060-17500-01 for Mounting Tray with Straight Connector
 - Installation Kit P/N 9060-17500-02 for Mounting Tray with Right Angle ConnectorOrdering information and a parts list for the installation kits are found in the General Information section.
4. The remote mount Lynx NGT-9000R is designed with a front and rear attachment plate.
5. Compare the space requirements of the Mounting Tray with the installation area being considered. The outline drawing for the NGT-9000R is located in Figure 2-3. The outline drawing of the Tray Assembly is located in Figure 2-4. The installer is advised to consider the space requirements (2-3 inches) needed for the connector backshell and the cable bend radius.


Lynx NGT-9000 Installation Manual

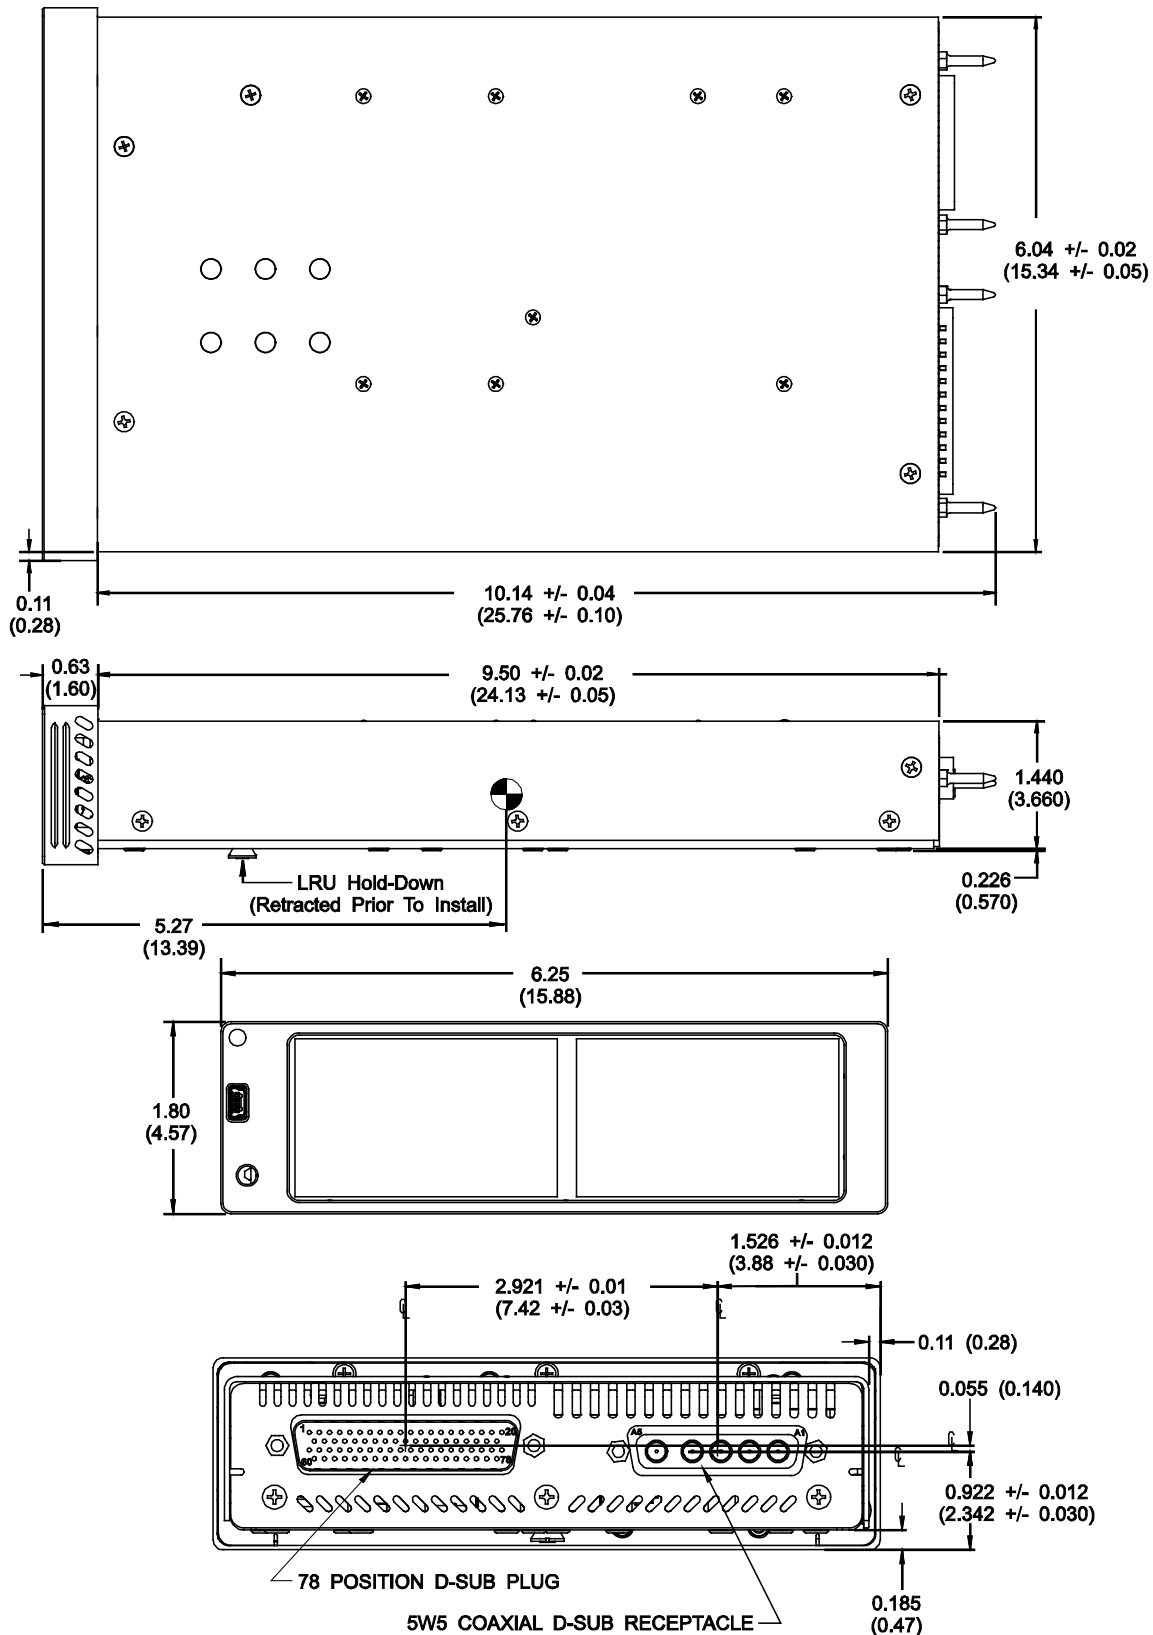

NOTE
ALL DIMENSIONS ARE IN INCHES (CENTIMETERS).

Figure 2-1: Outline Dimensions for Panel Mount Lynx NGT-9000

Lynx NGT-9000 Installation Manual

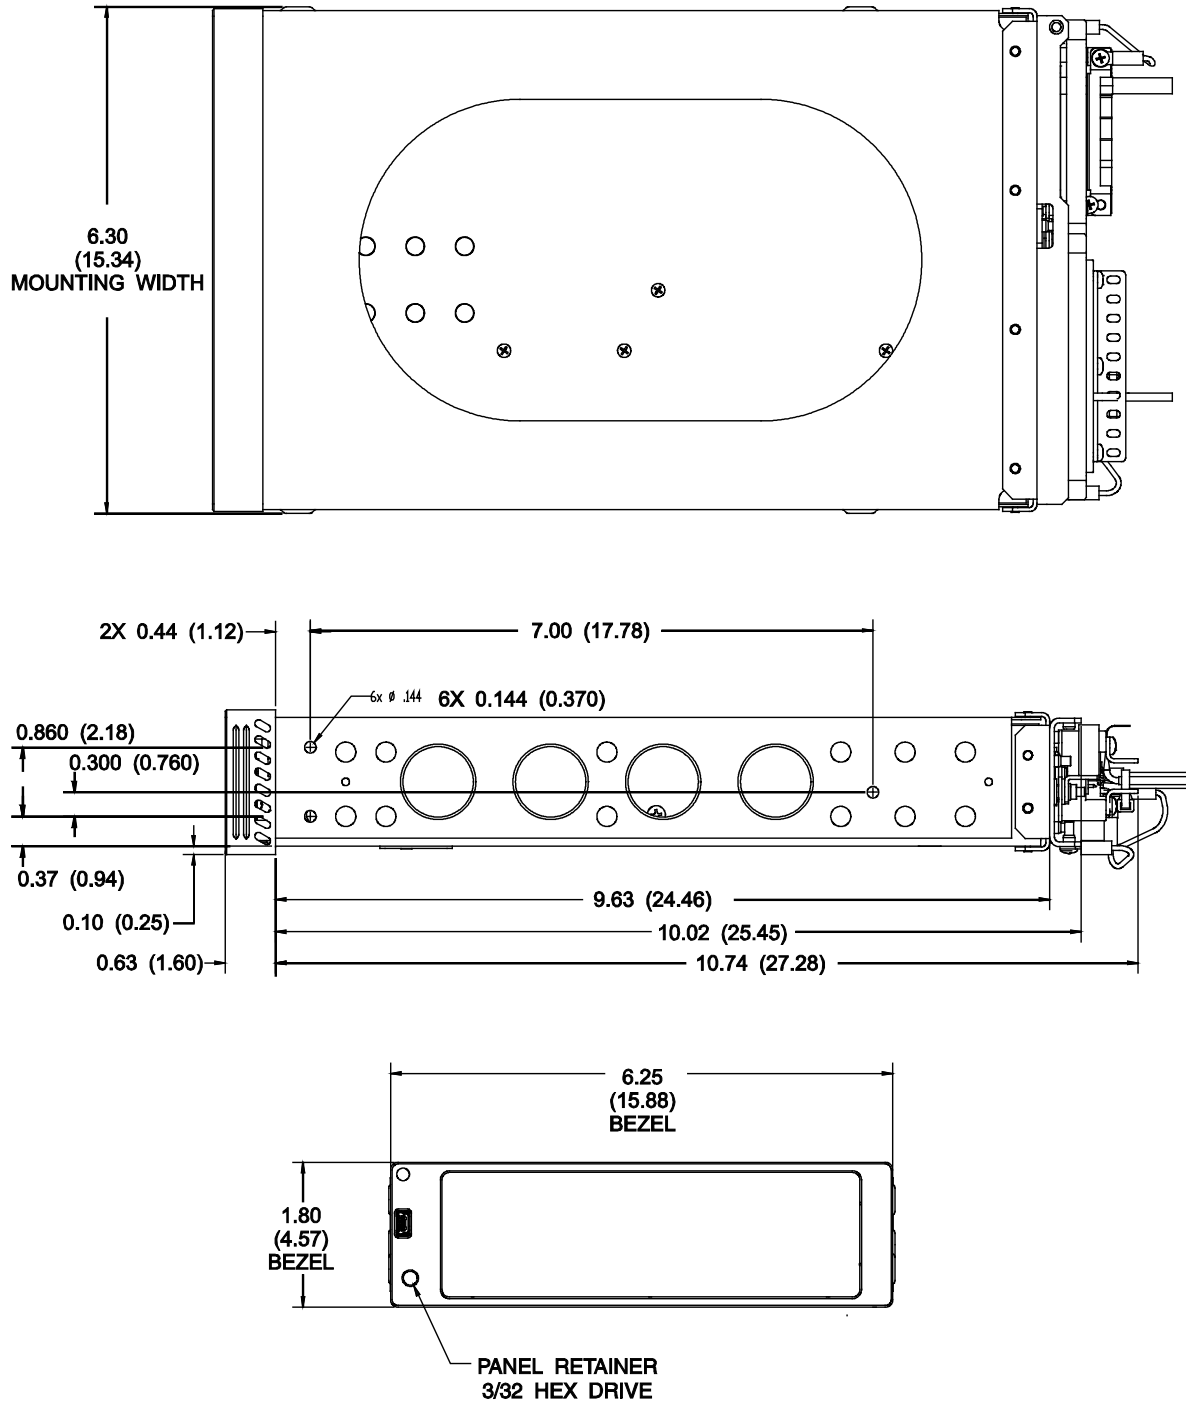


NOTE
ALL DIMENSIONS ARE IN INCHES (CENTIMETERS).

CAUTION
DO NOT EXCEED 5.0 INCH LBS WHEN TURNING THE PANEL RETAINER HEX DRIVE DURING INSERTION OR EXTRACTION OF THE LRU.

Part of Installation Kit 9060-17000-().

Figure 2-2: Outline Dimensions for Panel Mount Mounting Rack


Lynx NGT-9000 Installation Manual

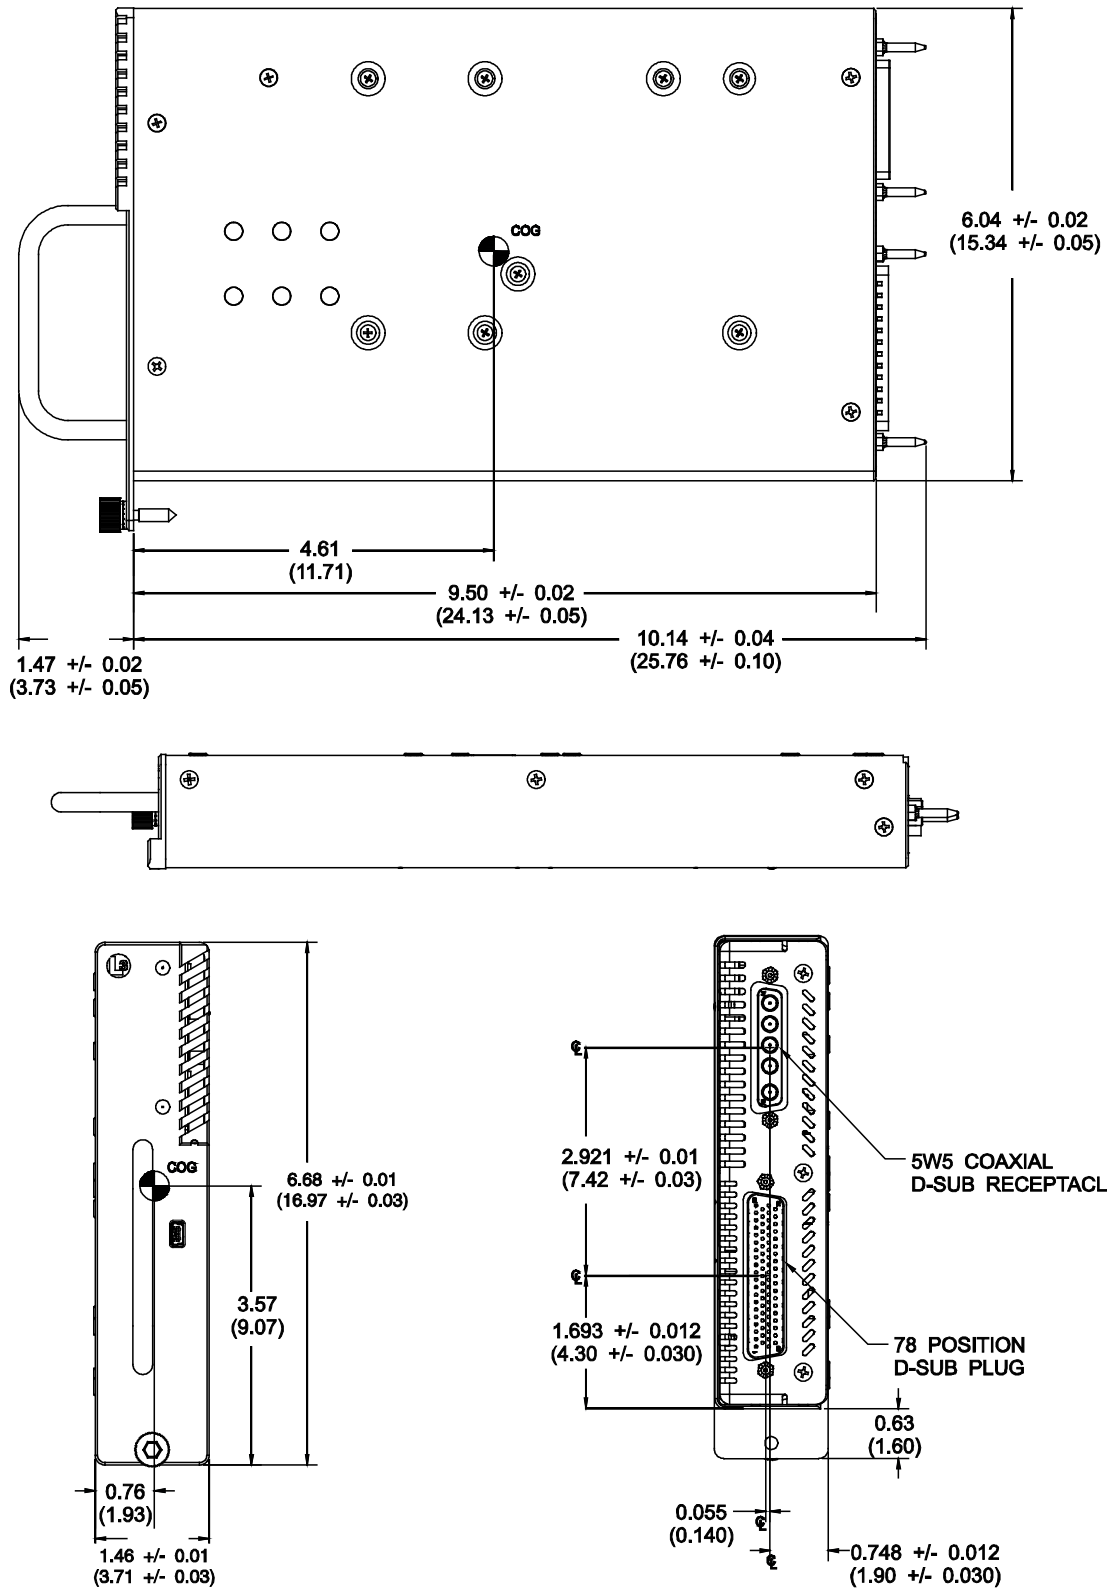

NOTE
ALL DIMENSIONS ARE IN INCHES (CENTIMETERS).

Figure 2-3: Outline Dimensions for Remote Mount Lynx NGT-9000R

Lynx NGT-9000 Installation Manual

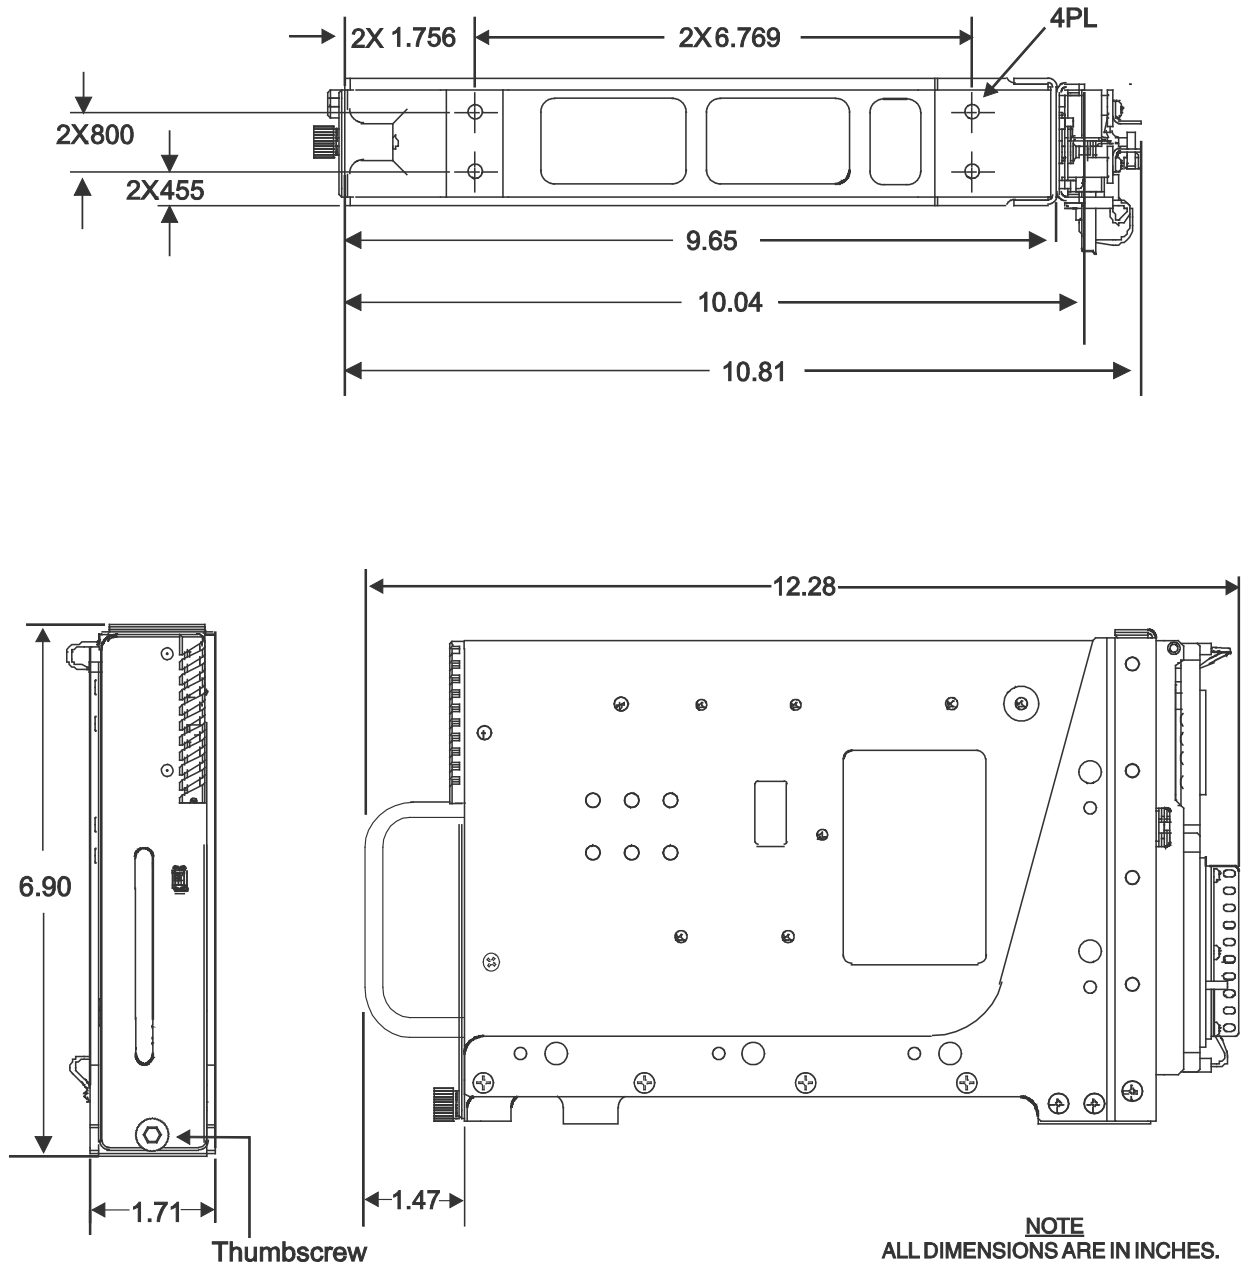


Part of Installation Kit 9060-17500-().

Figure 2-4: Outline Dimensions for Remote Mount Mounting Tray

2.3.3 Electrical Connections

1. The installer must take the following into consideration before installation:
 - Use of any wire or cable not meeting specification voids all warranties.
 - The installer is responsible for supplying wires, cables and connectors.
 - Wire-marking identification is at the discretion of the installer.
 - All wiring must be in accordance with industry-accepted methods, techniques, and practices.
 - The assembly guidelines for the antenna cables are detailed in paragraph 2.3.3.2.
 - Refer to Appendix A for signal name and cable characteristics prior to wiring installation.
 - The length and routing of the external cables must be carefully studied and planned before attempting installation of the equipment.
 - The wiring harness should not run adjacent to heaters, engine exhaust, and heat sources or be located near fuel lines, high electrical capacity lines, flight control cables, and protected areas of the aircraft or be exposed to wire chafing.
 - Avoid sharp bends while routing the cables.
 - Keep the cables run as short as possible. Grounding pigtails (if installed) should not exceed more than 3 inches in length. Terminate shields in the backshell of the mating connector (at P1).
 - Required connectors and contact pins are supplied in the installation kits (paragraph 1.7).
 - All wires should be 24 AWG unless otherwise noted in the interconnect diagram. Use M22759 or equivalent wire and Tefzel Wire M27500 or equivalent for twisted shielded wired for installation.
 - Installer is responsible for determining appropriate circuit breakers needed to protect aircraft wiring. Manufacturer recommends the following:
 - 5.0 amp circuit breaker for the installations with 14VDC input.
 - 2.0 amp circuit breaker for the installations with 28VDC input.
 - For installations with a CP-2500 Control Panel a single circuit breaker can be used for the CP-2500 and the NGT-9000R, RD, & R+.
 - Cable specifications and approved vendors are provided in Equipment Required Not Supplied.
 - The L-Band and GPS Cables must be RG-400 or equivalent. Refer to paragraph 2.3.3.2 for location and fabrication information. Cable attenuation must not exceed 1.5 dB (including the connectors).
 - The Directional Cables (required only for models with TAS) requires three cable assemblies; sum (Sigma Port – blue band), bit probe (Probe Port) and difference (Delta Port – red band). Cable attenuation for the sum and difference ports must not exceed 1.5 dB.
2. Refer to Figure 2-6 (sheet 1 thru 3) for Interconnect Wiring Diagram. Interconnect diagrams for alternate equipment is provided when available.
3. Refer to Figure 2-7 for pin locations, signal names, and function. Connector information for P1 is supplied in the recommended installation kit. The assembly requirements for the P1 mating connector are shown in Figure 2-8. An example of the assembled wiring harness is provided in Figure 2-9.

4. The WiFi interface requires configuration prior to installation if using the Roving Networks RN370M (L-3 P/N 9080-10024-01) WiFi Serial Adapter (Dongle). Refer to the Installation Checkout section (para. 3.3) for details. Note – The PIM-9000 WiFi Serial Adapter is preconfigured by the manufacturer.
 - The PIM-9000 WiFi Serial Adapter may be connected to the NGT-9000 circuit breaker through a 1/4 amp in line fuse.
5. When installing the status lamps in the cockpit, an amber colored lamp is required for the “ADS-B Out Fail” and the “Traffic Alert” indicators. Lamp power should be connected to dimming bus or day/night switch. Label lamps as “ADS-B Fail” and “Traffic Alert” as applicable.
6. It is recommended that the installer perform the following wiring checks during installation:
 - Check all wiring, point-to-point, for continuity before connecting components.
 - Ensure voltages are not applied to signal wires.
 - Inspect cables for correct connection.
7. The DCM is permanently attached to the mating connector during wire installation. Outline dimensions for the configuration module are shown in Figure 2-5.

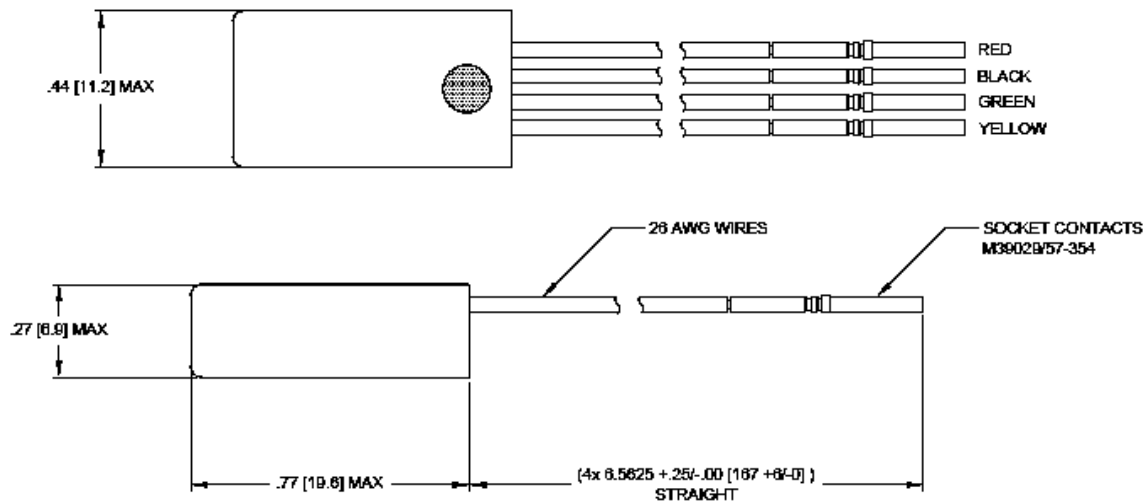


Note: Dimensions are in Inches [mm]

Figure 2-5: Outline Dimensions for the Detachable Configuration Module (9230-17003-01)

8. Use the information in this section for interfacing compatible equipment. Additional information may be found in the General Information section under Equipment Interfaces.

Lynx NGT-9000 Installation Manual

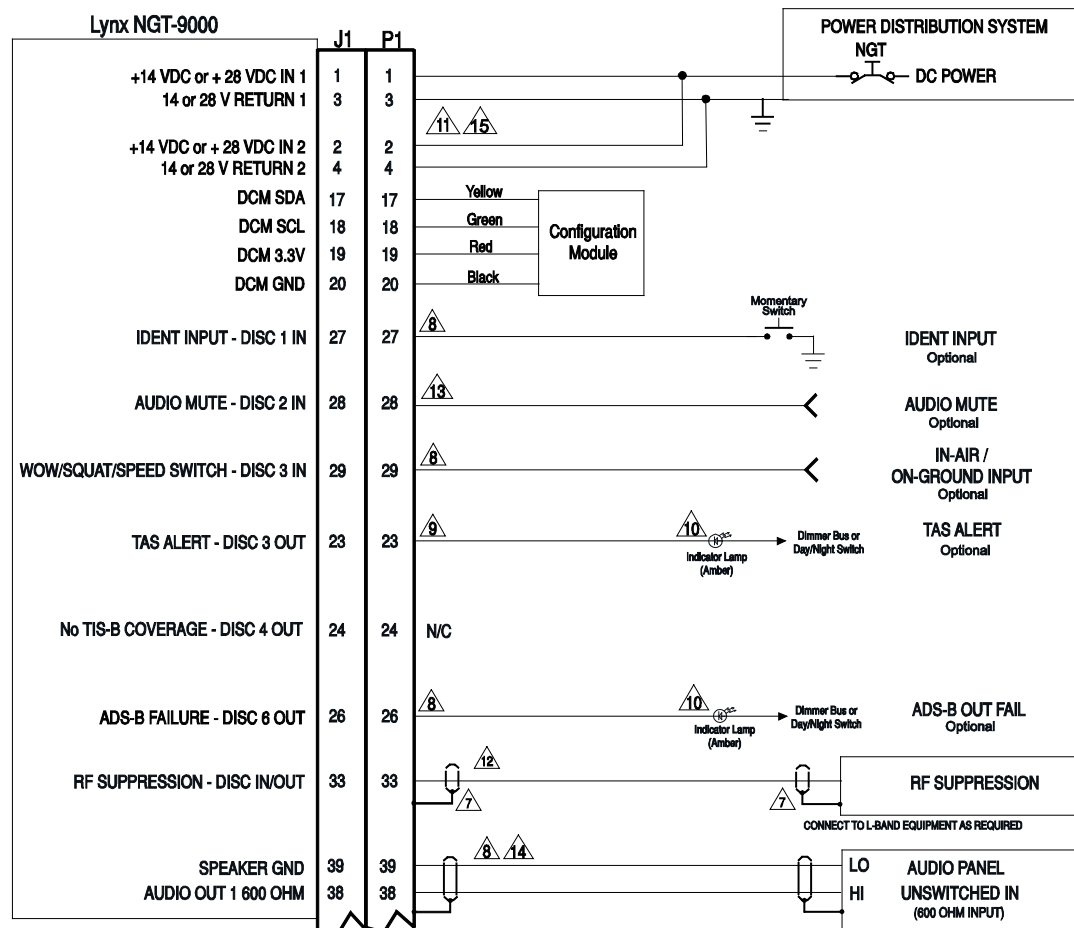


NOTES:

1. ALL WIRES ARE 24AWG UNLESS OTHERWISE NOTED. REFER TO P1 MATING CONNECTOR ASSEMBLY FOR WIRING DETAILS.
2. INDICATES TWISTED SHIELDED WIRE.
3. DENOTES POWER RETURN GROUND.
4. DENOTES CHASSIS OR AIRFRAME GROUND. CHASSIS GROUND WIRES MUST BE AS SHORT AS PRACTICAL MEETING COMMON INDUSTRY STANDARDS AND PRACTICES.
5. DC POWER RETURNS & CHASSIS/SIGNAL GROUNDS TO BE CONNECTED TO AIRFRAME GROUND USING SEPARATE TERMINATING POINTS.
6. DISC IN RETURN ARE CONNECTED INTERNALLY TO POWER GROUND.
7. GROUNDED PIGTAILS MUST NOT EXCEED 3 INCHES IN LENGTH. TERMINATE INSIDE BACKSHELL.
8. CONNECTION IS OPTIONAL. SEE APPENDIX A FOR DETAILS.
9. CONNECTION DEPENDENT ON THE MODEL OF THE LYNX NGT-9000.
10. LAMP MUST BE COMPATIBLE WITH AIRCRAFT VOLTAGE. AN EXISTING ANNUNCIATOR DIMMER MAY BE USED OR DIMMING SWITCH (DAY/NIGHT) MAY BE INSTALLED. CLEARLY LABEL LAMPS AS INDICATED.
11. THE RECOMMENDED CIRCUIT BREAKER RATING IS 5A FOR 14VDC INSTALLATIONS AND 2A FOR 28 VDC INSTALLATIONS. 28VDC INSTALLATIONS USE 22 AWG WIRE FOR LENGTHS OF 30 FT OR LESS. 14VDC INSTALLATIONS USE 22 AWG WIRE FOR LENGTH OF 6 FT OR LESS. IF WIRE RUN MUST EXCEED 6FT, IT IS THE RESPONSIBILITY OF THE INSTALLER TO DETERMINE ACCEPTABLE WIRE SIZE IAW AC 43.13-1B.
12. UNSHIELDED PORTION OF SUPPRESSION LINE NOT TO EXCEED 1 INCH.
13. AUDIO MUTE IS ONLY AS REQUIRED IF INSTALLED WITH OTHER CAWS ALERTING SYSTEM (IE. TAWS, GPWS) THAT NEEDS TO MUTE THE TRAFFIC SYSTEM FOR A HIGHER PRIORITY AUDIO ANNUNCIATION.
14. AUDIO CONNECTION TO AN UN-MUTED AUDIO INPUT IS REQUIRED IF THE TAS OPTION IS INSTALLED.
15. TWO POWER AND TWO INPUT PINS ARE PROVIDED FOR EASE OF CONNECTING LARGER WIRES SIZES (OPTIONAL). POWER AND GROUND ARE ONLY REQUIRED TO BE PROVIDED TO ONE SET OF INPUTS.

**Figure 2-6: Interconnect Wiring Diagram
(Sheet 1 of 3)**

Lynx NGT-9000 Installation Manual

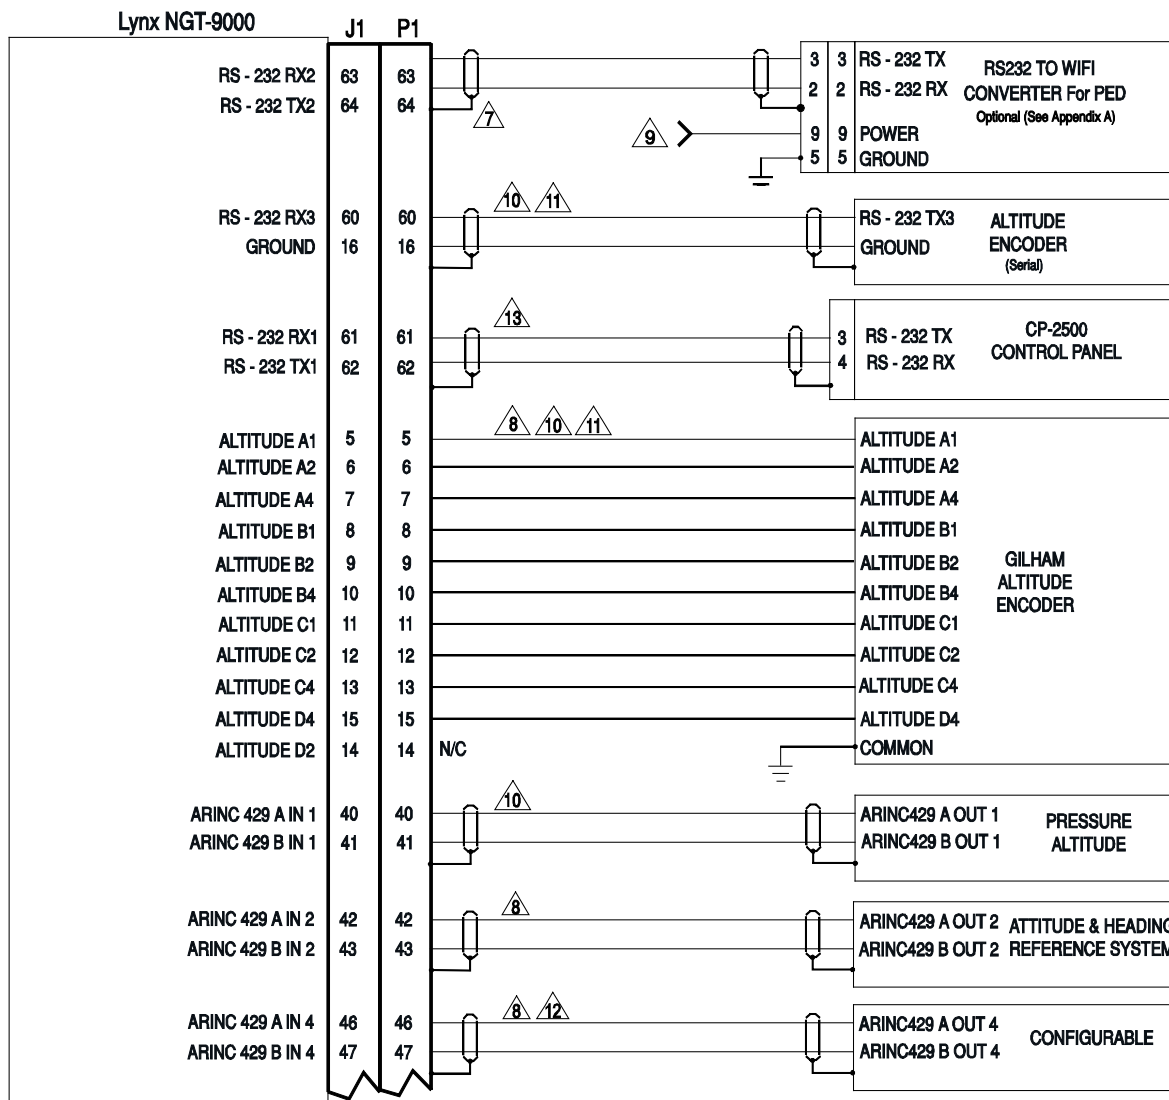


NOTES:

1. ALL WIRES ARE 24AWG UNLESS OTHERWISE NOTED. REFER TO P1 MATING CONNECTOR ASSEMBLY FOR WIRING DETAILS.
2. INDICATES TWISTED SHIELDED WIRE.
3. DENOTES POWER RETURN GROUND.
4. DENOTES CHASSIS OR AIRFRAME GROUND. CHASSIS GROUND WIRES MUST BE AS SHORT AS PRACTICAL MEETING COMMON INDUSTRY STANDARDS AND PRACTICES.
5. DC POWER RETURNS & CHASSIS/SIGNAL GROUNDS TO BE CONNECTED TO AIRFRAME GROUND USING SEPARATE TERMINATING POINTS.
6. DISC IN RETURN ARE CONNECTED INTERNALLY TO POWER GROUND.
7. GROUNDED PIGTAILS MUST NOT EXCEED 3 INCHES IN LENGTH. TERMINATE INSIDE BACKSHELL.
8. PIN-OUT & INTERCONNECT INFORMATION IS DEPENDENT ON THE EQUIPMENT CHOSEN FOR INSTALLATION. A LIST OF APPROVED EQUIPMENT IS PROVIDED IN THE GENERAL INFORMATION SECTION.
9. ROVING NETWORKS RN370M (L-3 P/N 9060-10024-01) OR L-3 PIM-9000 (P/N 9230-17005-01)
RN-370M: 4.75 TO 5.25 VDC INPUT
L-3 PIM-9000: 4.5 TO 32 VDC INPUT
10. PRESSURE ALTITUDE REQUIRED - MAY BE EITHER SERIAL RS-232 OR GILHAM GRAYCODE OR ARINC 429.
11. REFER TO THE INSTALLATION MANUAL OF THE ALTITUDE ENCODER SELECTED FOR PIN-OUT & INTERCONNECT INSTRUCTIONS.
12. CONNECTION IS OPTIONAL. SEE APPENDIX A FOR DETAILS.
13. CP-2500 CONTROL PANEL IS ONLY REQUIRED FOR THE REMOTE MOUNT LYNX NGT-9000.

**Figure 2-6: Interconnect Wiring Diagram
(Sheet 2 of 3)**

Lynx NGT-9000 Installation Manual

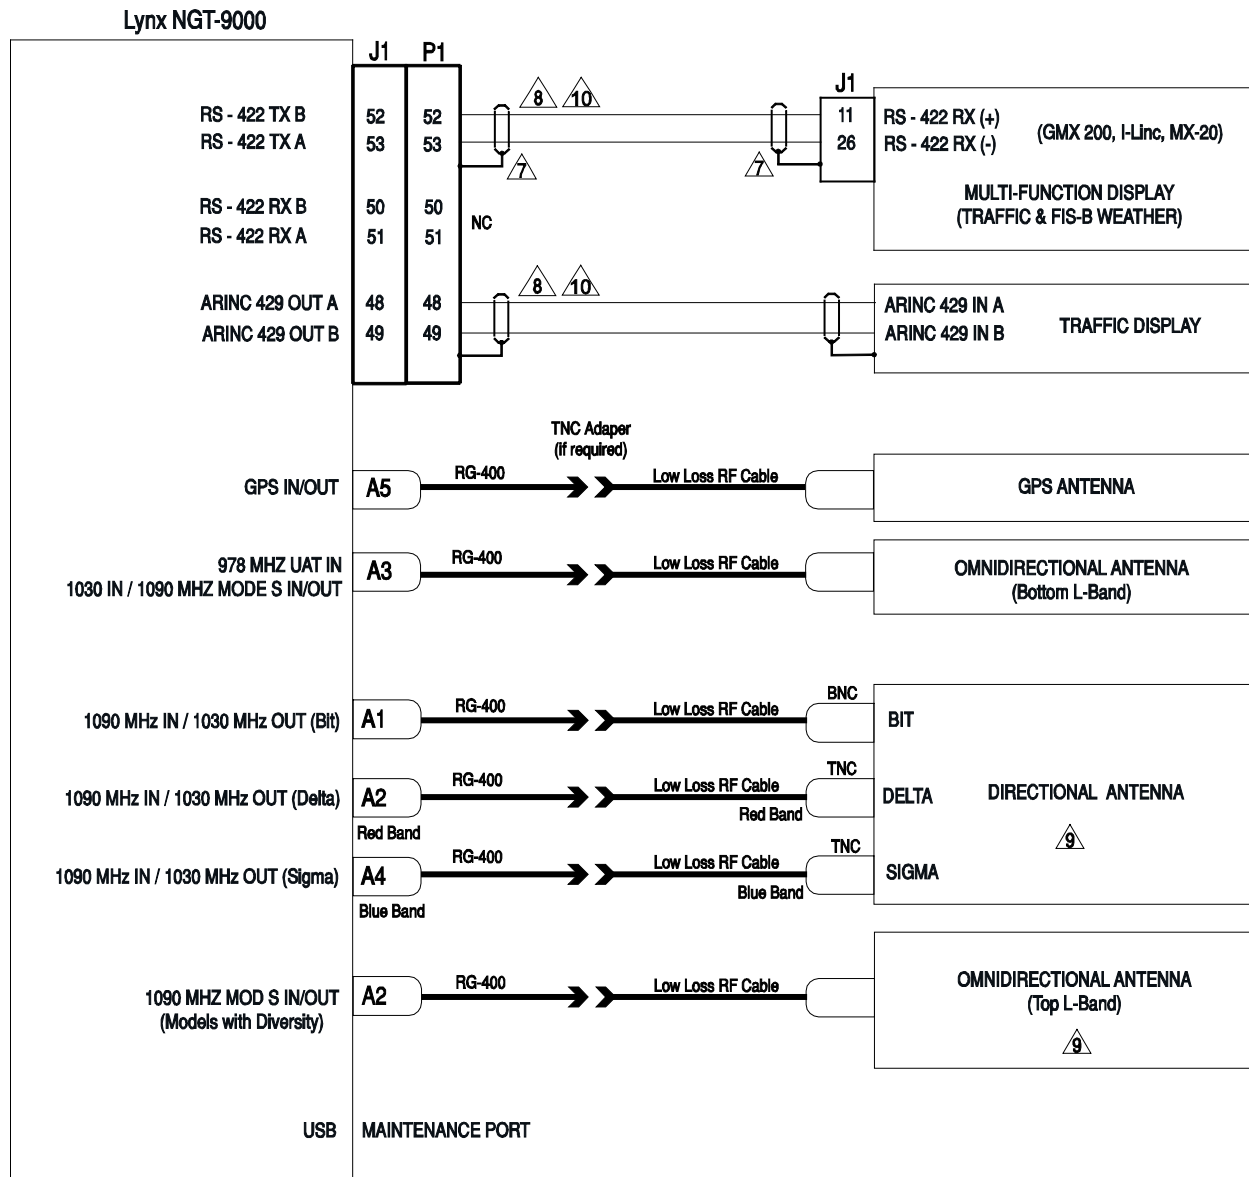

NOTES:

1. ALL WIRES ARE 24 AWG UNLESS OTHERWISE NOTED. REFER TO P1 MATING CONNECTOR ASSEMBLY FOR WIRING DETAILS.
2. INDICATES TWISTED SHIELDED WIRE.
3. DENOTES POWER RETURN GROUND.
4. DENOTES CHASSIS OR AIRFRAME GROUND. CHASSIS GROUND WIRES MUST BE AS SHORT AS PRACTICAL MEETING COMMON INDUSTRY STANDARDS AND PRACTICES.
- 5 DC POWER RETURNS & CHASSIS/SIGNAL GROUNDS TO BE CONNECTED TO AIRFRAME GROUND USING SEPARATE TERMINATING POINTS.
- 6 DISC IN RETURN ARE CONNECTED INTERNALLY TO POWER GROUND.
- GROUNDED PIGTAILS MUST NOT EXCEED 3 INCHES IN LENGTH. TERMINATE INSIDE BACKSHELL.
- PIN-OUT & INTERCONNECT INFORMATION IS DEPENDENT ON THE EQUIPMENT CHOSEN FOR INSTALLATION. A LIST OF APPROVED EQUIPMENT IS PROVIDED IN THE GENERAL INFORMATION SECTION.
- CONNECTION DEPENDENT ON THE MODEL OF THE LYNX NGT-9000.
- CONNECTION IS OPTIONAL. SEE APPENDIX A FOR DETAILS.

**Figure 2-6: Interconnect Wiring Diagram
(Sheet 3 of 3)**

Lynx NGT-9000 Installation Manual

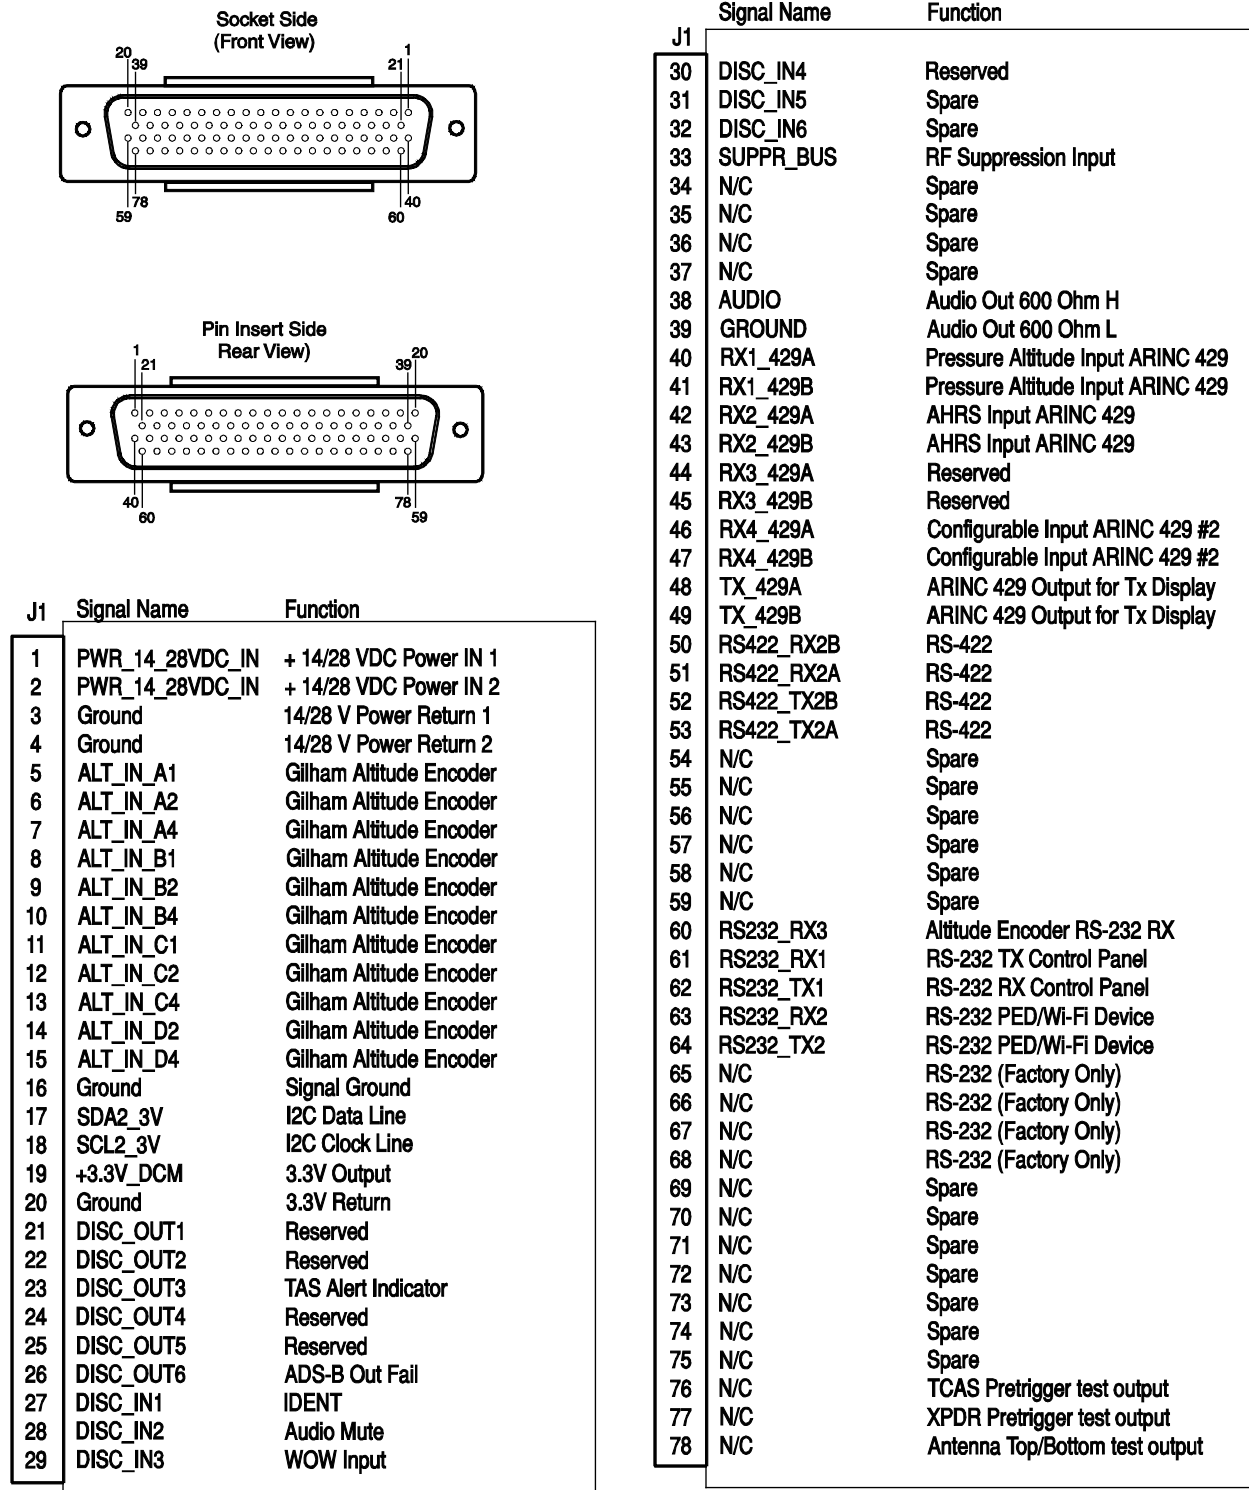


Figure 2-7: Mating Connector (P1) and Pin Assignments

2.3.3.1 P1 Mating Connector Assembly

Installer must take into consideration the length of the wiring harness to ensure an adequate service loop before installing the unit. Refer to Figure 2-8.

1. Assemble Connector Pins P/N M39029/57-354 (item 11) to wires using Crimp Tool M22520/5-01 and Insert M22520/5-05.
2. Secure Backshell P/N 9010-17012-01 (item 9) to P1 Mating Connector P/N 9080-17006-01 (item 14) using 4 Screws P/N 2000-10085-01 (item 7).
3. Remove liners from two Wire Clamp Pads P/N 9000-17132-01 (item 30) and attach to back of both Wire Clamps P/N 9000-17076-01 (item 10).
4. Insert aircraft wiring and wires of the DCM to the P1 Mating Connector (item 14).
5. Route wire shields between Wire Clamp Pads (item 30) and Backshell (item 9).
6. Secure two Wire Clamps P/N 9000-17076-01 (item 10) and 1 Cable Ground Strap P/N 9020-17002-01 (item 27) to Backshell (item 9) using 6 Screws P/N 2000-10087-01 (item 22). (Refer to Figure 2-15 for the installation location of the other side of the cable ground strap.)
7. Secure Wires to Wire Clamps (item 10) using Cable Ties P/N 1040-10002-01 (item 26) as required.

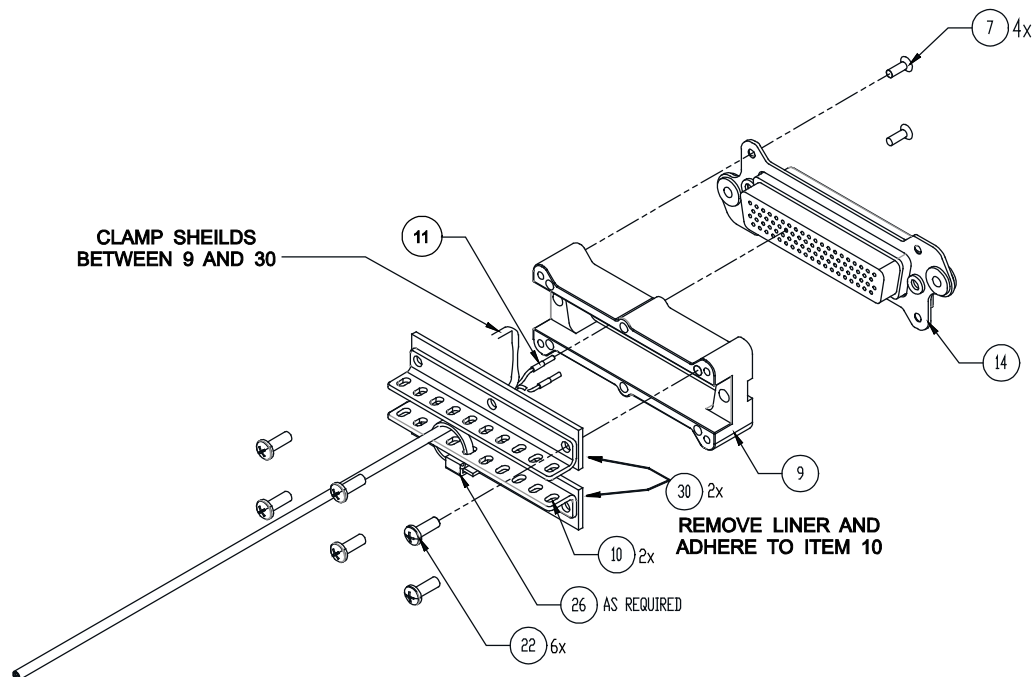


Figure 2-8: P1 Mating Connector Assembly

8. Secure the wires and the DCM using Cable Ties as shown in Figure 2-9.
9. If WiFi is being used A 9 Pin Sub-D Connector P/N M24308/2-1 or equivalent is required for installations intending to use the WiFi interface. Installation Kit 9060-17001-01 is available for from L-3 Avionics Systems. Refer to the installation kits in the general information section.
10. If applicable to the installation, connect the WiFi Serial Adapter.

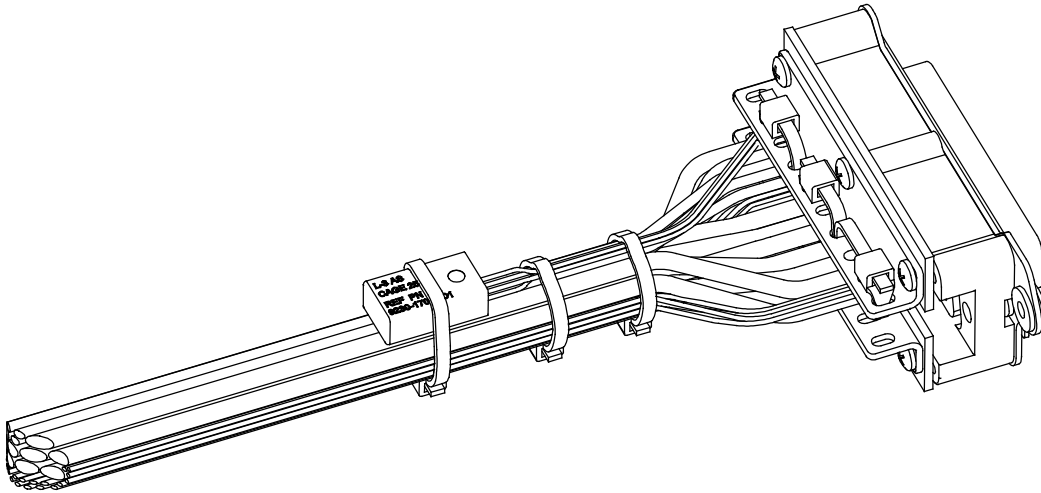


Figure 2-9: Example of P1 Mating Connector and Wiring Harness

2.3.3.2 Antenna Cable Assembly

The instructions below provide the information necessary to assemble the contacts required to connect the coaxial cable to the unit. If low loss cables are required, the opposite/other end of the cables typically have TNC Adapters installed that connect to low loss RF cables. See Figure 2-10.

All models of the Lynx NGT-9000 are required to have GPS and Omnidirectional (UAT) cable connections (A3 & A5). Models with TAS have three cables connecting to A1, A2, and A4. Models with Diversity have one cable connecting to A2.

NOTES

1. The cable attenuation and VSWR ratings must be verified to not exceed the specified values.
2. Place 4-6 inches (10.2 to 15.2 cm) of heat shrink tubing over each antenna connector and cable to add strain relief and alleviate stress caused by aircraft vibration.

When routing antenna cables, observe the following precautions:

- All cable routing should be kept as short (do not exceed maximum cable length detailed in the vendor tables, paragraph 1.6, in the General Information section) and direct as possible.
- Avoid sharp bends (do not exceed maximum bend radius detailed in the vendor tables in the General Information section, paragraph 1.6).
- Avoid routing cable near power sources (e.g., 400 Hz generators, trim motors, etc.) and near power for fluorescent lighting.
- Avoid routing cable near ADF antenna cable (allow at least a 12-inch (30.5) separation).

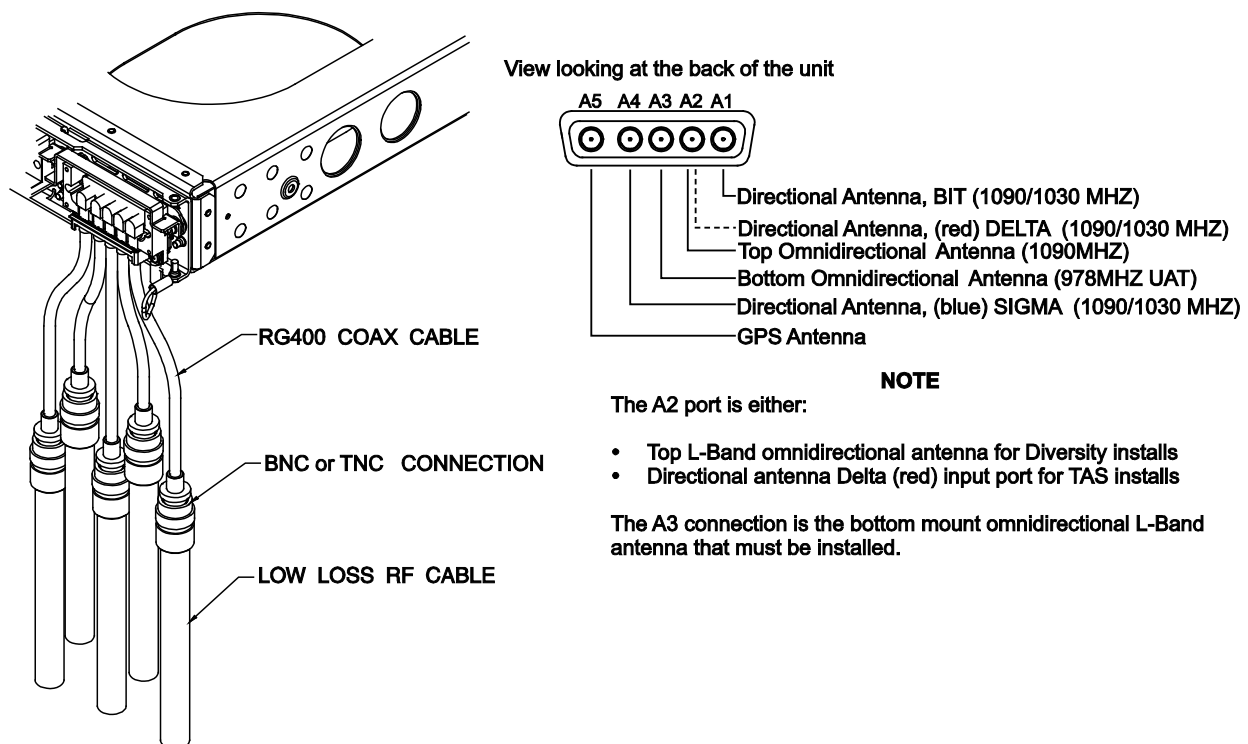


Figure 2-10: Example of Assembled RF Cable

2.3.3.2.1 Directional Antenna Cables

The directional antenna installation is optional and used only for models with Traffic Alert System (TAS).

1. The directional antenna requires three cable assemblies; sum (Sigma Port), bit probe (Probe Port) and difference (Delta Port). Cable attenuation for the sum and difference ports must not exceed 1.5 dB. Attenuation for the bit probe cable must not exceed 6 dB. VSWR, on cables attached to the sum, bit probe, and difference ports, must not exceed 1.5:1. (See paragraph 1.6 for antenna cable vendors and specifications.)
2. At the antenna, each connector has an identifying color band. To ensure the cables are connected to the correct port, affix the following marking at the termination points of each cable:
 - **Sum (Sigma) Port** The Sum (Sigma) port is the forward antenna connector. It is marked with a blue band. Fabricate the sum antenna cable with a TNC connector at each end. Affix a blue marking band on each connector. At the NGT-9000, the sum port (A4) must be identified with blue marking.
 - **Bit Probe Port** The Bit Probe port (A1) is the center antenna connector. Fabricate the probe cable with a BNC connector at each end.
 - **Difference (Delta) Port** The Difference (Delta) port is the rear antenna connector. It is marked with a red band. Fabricate the difference antenna cable with a TNC connector at each end. Affix red marking band on each connector. At the NGT-9000, the difference port (A2) must be identified with red marking.

2.3.3.2.2 Coax Cable Assembly Guidelines

The cable manufacture's cable prep specifications take precedence over the guidance provided in this manual. Use the following procedures to assembly straight or right angle coax connectors.

1. Cut back outer plastic sheath and inner insulator to expose the copper shield and copper core as shown in Figure 2-11.
2. Slide Crimp Contact over coaxial cable.

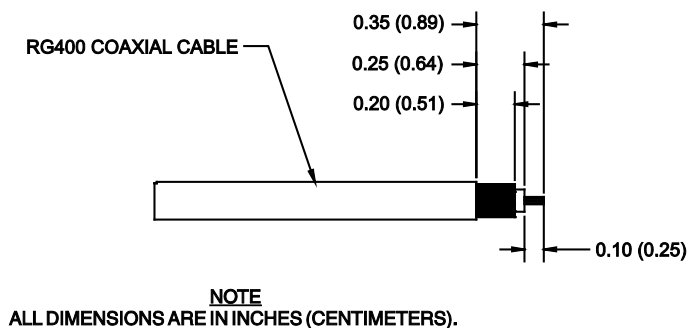


Figure 2-11: Coax Cable Preparation

2.3.3.2.3 Straight Coax Contact Assembly

Refer to Figure 2-12 for the following instructions.

1. Slide Plug Crimp Contact (item 23 of install kit) over inner insulator. The copper shield must be over the Contact sleeve.
2. Slide Crimp Contact to contact barrel end of Plug Crimp Contact.
3. Use Crimp Hand Tool P/N M22520/5-01 and Insert P/N M22520/5-05 to crimp Contact.

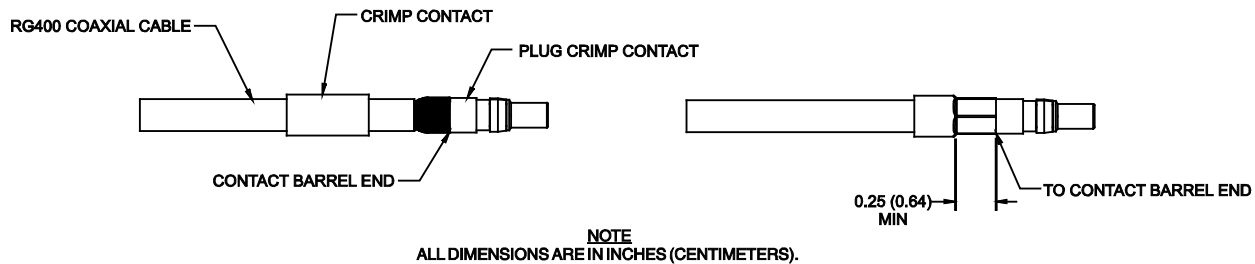


Figure 2-12: Straight Coax Contact Shield Termination

2.3.3.2.4 Right Angle Coax Contact Assembly

Refer to Figure 2-13 for the following instructions.

1. Twist center conductor tight and bend wire end slight upwards.
2. Slide Contact over inner insulator. The copper shield must be over the Contact sleeve and the coax center conductor must be inside the connector solder cup. Solder the center conductor to the contact.
3. Slide Crimp Contact (item 18 of install kit) over the step on contact body.
4. Use Crimp Hand Tool P/N M22520/5-01 and Insert P/N M22520/5-05 to crimp Contact. The crimped area must be on the side furthest from the connector (over the cable).

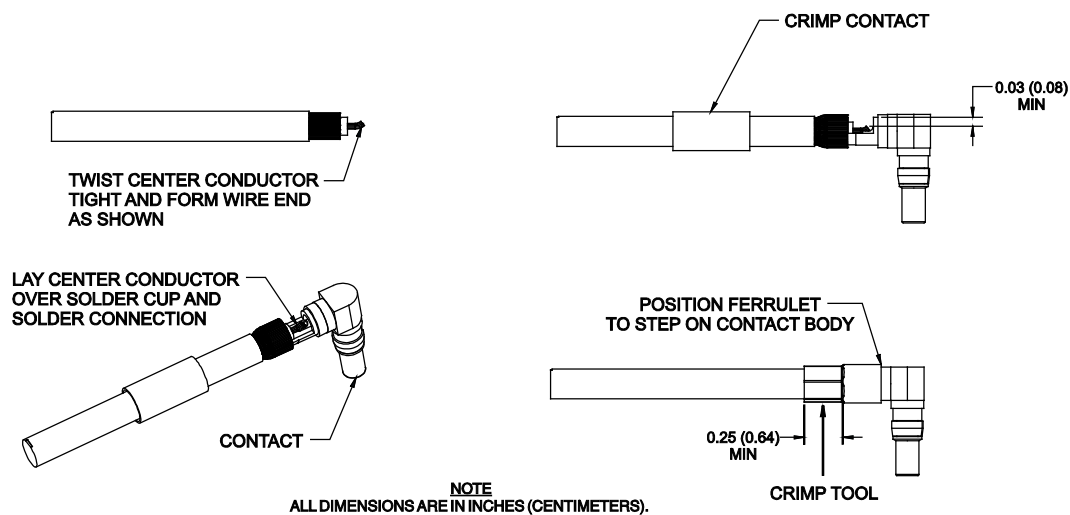


Figure 2-13: Right Angle Coax Contact Installation

2.3.3.3 Coax Connector Assembly

The number of antenna cables required for installation is based on the model of Lynx NGT-9000. The basic model has a GPS and omnidirectional (bottom mounted L-Band) antenna connection. Models with Diversity only have a secondary top mounted L-Band antenna connection. Models with TAS have three directional antenna connections.

2.3.3.3.1 Straight Coax Connector

1. Refer to Figure 2-14.
2. Secure Backshell P/N 9000-17106-01 (item 24) to Connector P/N 9080-17007-01 (item 15) using 4 Screws P/N 2000-10085-01 (item 7).
3. Insert Cables into the appropriate slots of Connector P/N 9080-17007-01 (item 15).
4. Secure 1 Spring Clip P/N 90001963-001 (item 16) and 1 Cable Ground Strap P/N 9020-17002-01 (item 27) to Backshell P/N 9000-17106-01 (item 24) using 2 Screws P/N 2000-10087-01 (item 22).

2.3.3.3.2 Right Angle Coax Connector

1. Refer to Figure 2-14.
2. Secure Backshell P/N 9000-17105-01 (item 17) to Connector P/N 9080-17007-01 (item 15) using 4 screws P/N 2000-10085-01 (item 7).
3. Insert Cables into the appropriate slots of Connector (item 15).
4. Secure 1 Spring Clip P/N 9001963-001 (item 16) and 1 Cable Ground Strap P/N 9020-17002-01 (item 27) to Backshell (item 17) using 2 Screws P/N 101-10114-011 (item 29).

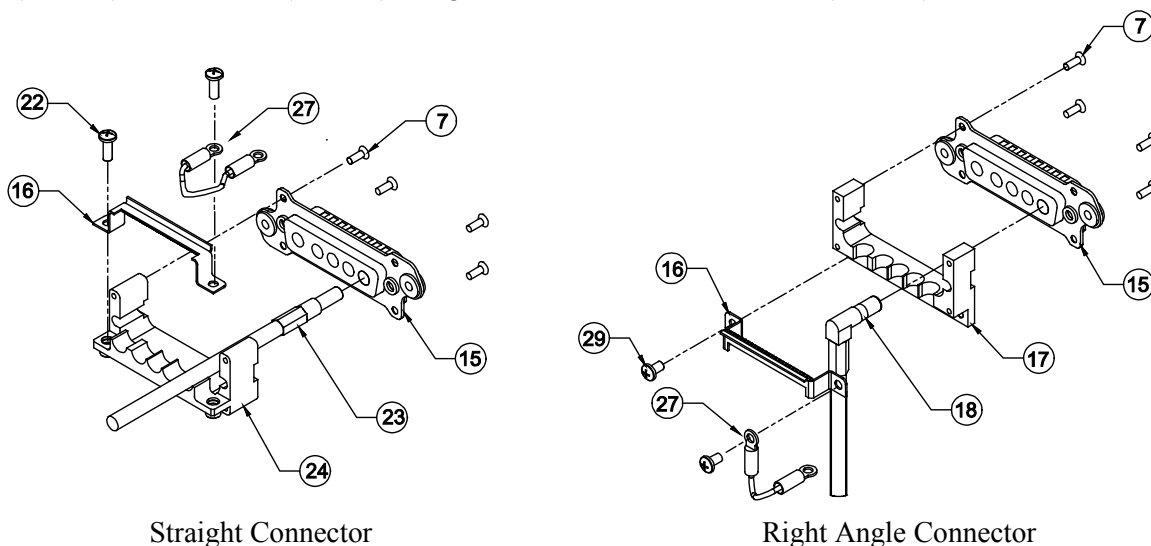


Figure 2-14: Connector Assembly

2.3.4 Panel Mount Lynx NGT-9000 Installation

This procedure assumes that the mating connector and Antenna Cables are assembled. Refer to Figure 2-15.

1. Secure P1 Mating Connector to Rear Plate P/N 9000-17025-02 (item 2) using Nut Plate P/N 9000-17034-01 (item 6) and 2 Screws P/N NAS514-P-440-7 (item 3).
2. Secure assembled Antenna Connector to Rear Plate P/N 9000-17025-02 (item 2) using Nut Plate P/N 9000-17036-01 (item 5) and 2 Screws P/N NAS514-P-440-7 (item 3).
3. Attach end of Cable Ground Straps P/N 9020-17002-01 (item 27) to Rear Plate (item 2) using 2 screws P/N 2000-10087-01 (item 22).

4. Secure Rear Plate (item 2) to Panel Rack P/N 9010-17022-01 (item 1) using 4 Screws P/N NAS514-P-440-5 (item 4).
5. Place the assembled Panel Rack P/N 9010-17022-01 (item 1) in the location selected in paragraph 2.3.1.
6. Secure Panel Rack using 6 Screws P/N MS35206-230 (item 12).

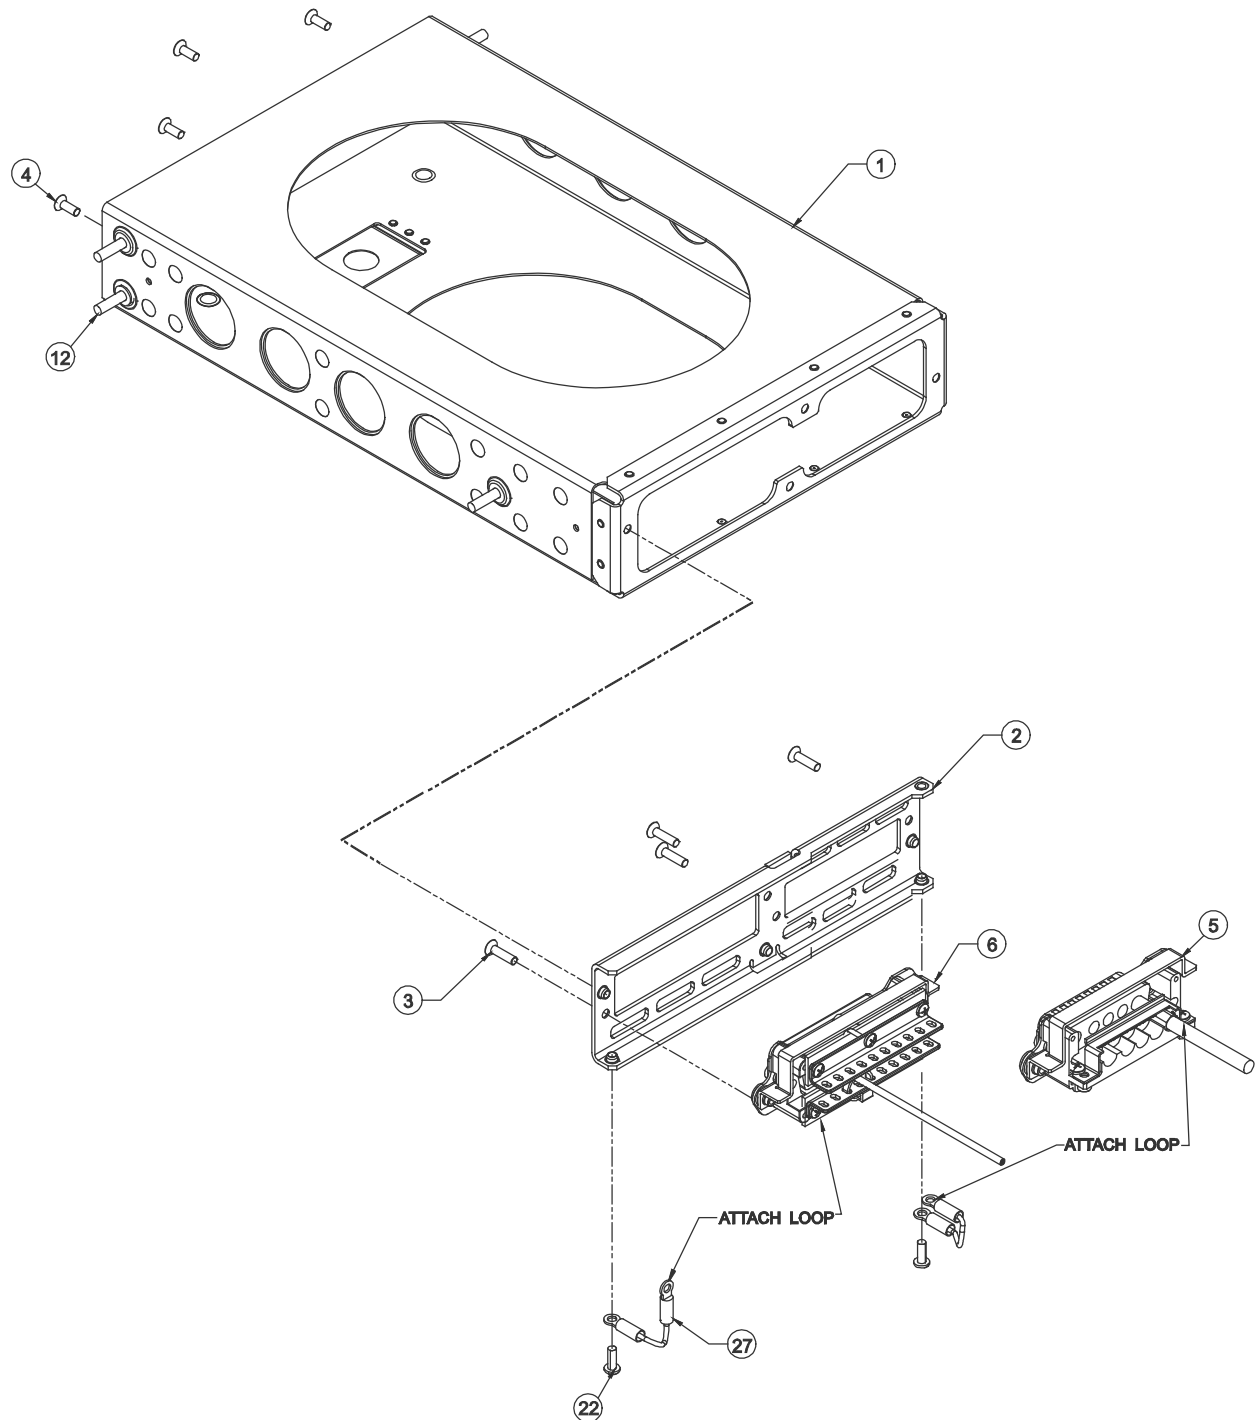


Figure 2-15: Panel Assembly

2.3.4.1 Installation

CAUTIONS

1. Do not press or contact the display surface of the unit when inserting into the Rack.
 2. Panel Retainer torque limit is 5.0 inch-pounds.
-
1. Prior to inserting unit in panel ensure that the Panel Retainer screw is fully disengaged. Use a 3/32 Hex Head Driver and insert into the Panel Retainer access on the bottom left of the unit bezel. Rotate the Hex Driver counterclockwise until it stops.
 2. Insert the unit in rack allowing the alignment guides to settle the unit into place. Press the sides of the unit until the back side of the bezel is against the rack.
 3. Rotate the Panel Retainer clockwise until the unit is fully seated (approximately 40 turns). The unit is fully seated when the display backplate contacts the lower front edge of the panel.

2.3.5 Remote Mounted Lynx NGT-9000 Installation

This procedure assumes that the mating connector and Antenna Cables are assembled.

NOTES

1. Tighten all screws to snug unless specific torque instructions are given.
 2. The ruggedized mounting tray must be channel mounted for installations in a high vibration environment.
-
1. Place the Mounting Tray P/N 9002018-001 (item 1) in the location selected in paragraph 2.3.2.
 2. Determine centers for mounting holes, and drill for required fasteners. See Figure 2-16.
 3. Secure the Mounting Tray P/N 9002018-001 (item 1) in place using #8-32 fasteners and lockwashers. Torque fasteners (screws) to 20 In-Lbs.
 4. Secure P1 Mating Connector to Rear Plate P/N 9000-17025-02 (item 2) using Nut Plate P/N 9000-17034-01 (item 6) and 2 Screws P/N NAS514-P-440-7 (item 3).
 5. Secure assembled Antenna Connector to Rear Plate P/N 9000-17025-02 (item 2) using Nut Plate P/N 9000-17036-01 (item 5) and 2 Screws P/N NAS514-P-440-7 (item 3).
 6. Attach end of Cable Ground Straps P/N 9020-17002-01 (item 27) to Rear Plate (item 2) using 2 screws P/N 2000-10087-01 (item 22).
 7. Secure Rear Plate (item 2) to Mounting Tray P/N 9002018-001 (item 1) using 4 Screws P/N NAS514-P-440-5 (item 4).
 8. Lay unit flat against the base of the tray. Push unit into the connectors allowing the alignment guides to settle the unit into place.
 9. Secure the unit to the tray using the thumbscrew in front of the unit. Tighten thumbscrew (3/16 hex) until unit front plate contacts the tray face.

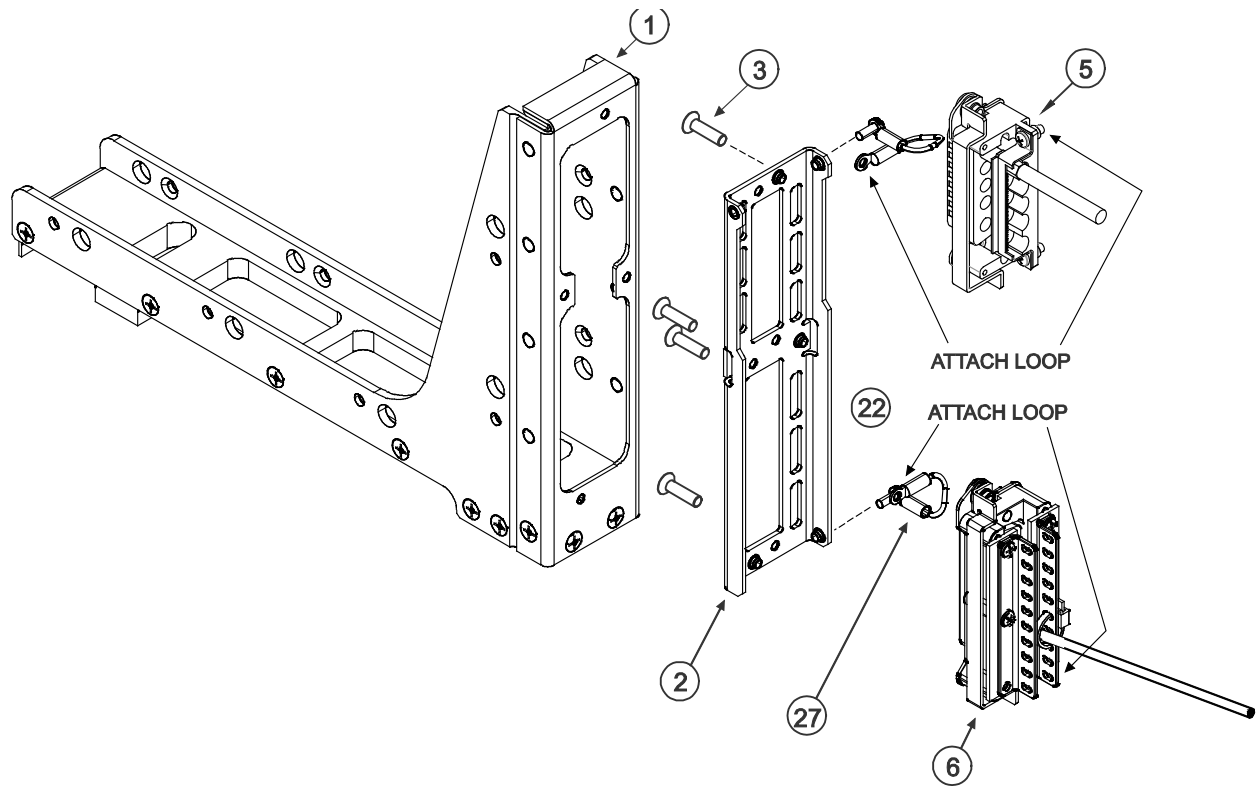


Figure 2-16: Remote Assembly

2.3.6 CP-2500 Installation Guidelines

Use the following guidelines if the CP-2500 Control Panel is used with the NGT-9000R, RD, and R+. For additional installation instructions see the CP-2500 Installation Manual, P/N 0040-17251-01.

- The ADS-B Out Fail (amber) lamp installation is optional.

2.3.7 Antenna Installation Guidelines

This information provides general installation guidance to ensure the installed antennas meet the requirements for the Lynx NGT-9000. Installation approval for the GPS and L-band antennas is not provided by the instructions provided in this manual.

- Installation approval for the GPS and L-band antennas is not provided by the instructions provided in this manual.
- All antenna cables should be clearly marked as both connections use TNC connectors.
- Cable requirements are located in paragraph 2.3.3. Cable vendors and approved antenna manufactures are located in the General Information section.
- An example of antenna placement is shown in Figure 2-17. Refer to the aircraft manufacturer's data and the antenna manufacturer's installation instructions to mount the antenna. The installer may use other FAA approved data to gain a separate antenna installation approval. Four L-band antenna location configurations are available and are detailed below:
- Single bottom omnidirectional (L-band) antenna (no TAS, no diversity)
- Bottom omnidirectional (L-band), top omnidirectional (no TAS, diversity capable)
- Bottom omnidirectional (L band), top directional (TAS capable, No diversity)
- Bottom omnidirectional (L-band), bottom directional (TAS capable, no diversity)- due to both being bottom mount (Helicopter)
- All configurations have a top GPS antenna

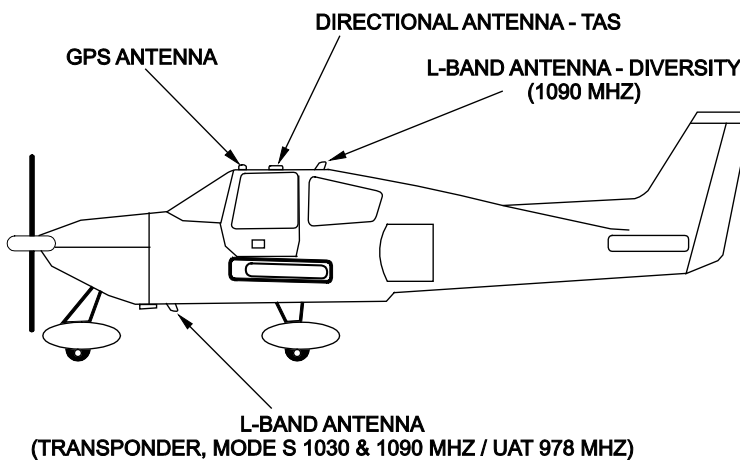


Figure 2-17: Example of Antenna Mounting Locations

2.3.7.1 GPS Antenna

The GPS antenna performance is critical to the performance of the Lynx NGT-9000. The antenna must meet the minimum performance requirements for the Lynx NGT-9000.

- The recommended antenna is a DO-301 compliant antenna meeting the requirements of TSO-C190. For installations where the aircraft has an existing antenna complying with DO-228 (TSO-C144a), the unit may be installed utilizing this antenna, as per DO-229D Note 1, Section 2.1.1.10. Use the antenna location information below to verify an existing antenna location is acceptable for use.
- The performance of the unit is affected by the gain, noise figure, impedance, and frequency selectivity characteristics of the antenna. The unit should be used only with the recommended antenna and cable. Use of other antennas or cables may not meet all the performance characteristics specified in DO-229D.
- The cable including connectors, loss should not exceed 10dB.

2.3.7.1.1 GPS Antenna Location

The following guidance provides information to aid the installer in determining the best location is selected for the installation of the GPS Antenna.

The installation guidelines presented here meet the intent of AC 20-138C Chapter 12, Section 12-1.

NOTE

Not all the listed installation guidelines may be possible on all aircraft.
The guidelines are listed in order of importance. The chances of optimal
signal strength are decreased if the guidelines are not followed.

1. The antenna must be located on the top of the aircraft and should be mounted in a location to minimize the effects of airframe shadowing during typical maneuvers. Typically mounting farther away from the tail section reduces signal blockage seen by the antenna.
2. Mount the antenna as close to level as possible with respect to the normal cruise flight attitude of the aircraft. If the normal flight attitude is not known, substitute with the waterline, which is typically referenced as level while performing a weight and balance check. A shim may be used to level the antenna.
3. The antenna should be mounted no closer than 3 feet from any VHF COM antenna or any other antenna, which may emit harmonic interference at the L1 frequency of 1575.42 MHz. An EMI check can verify the degradation of GPS in the presence of interference signals.
 - If an EMI check reveals unacceptable interference, either insert a GPS notch filter in line with the offending VHF COM or select a different GPS Antenna location.
4. The antenna should be mounted no closer than 15 inches from the SATCOM antenna.
 - An EMI check can be used to verify if interference signals cause GPS degradation.
5. To maintain a constant gain pattern and limit degradation by the windscreen, avoid mounting the antenna closer than 3 inches from the windscreen.
6. It is permissible to temporarily locate the GPS Antenna with a coaxial cable connected to the unit and check the GPS performance as described in the installation checkout section. Permanently mount the antenna once a suitable location has been verified.
7. Once the antenna mounting position has been established, route the coaxial cable from the antenna to the Lynx NGT-9000. Proper selection of coaxial cable and assembly of connectors is critical to GPS signal performance.
8. For installations on rotorcraft, ensure that the rotor blades do not interfere with the GPS received signal. This problem has been experienced in some rotorcraft and varies with rotation rate.

2.3.7.1.2 GPS Antenna Installation

Refer to the aircraft manufacturer's data and the antenna manufacturer's installation instructions to mount the antenna. The installer may use other FAA approved data to gain a separate antenna installation approval.

1. Electrical Bonding Requirements:

The GPS/WAAS antenna requires a minimum ground plane radius of 7.5 inches around the perimeter of the antenna. For metal aircraft, the surrounding metal skin on which the antenna is mounted supplies the ground plane. For non-metal aircraft, the ground plane can be composed of heavy duty aluminum foil tape, such as 3M PIN 438 or other adhesive backed dead soft aluminum foil minimum 0.012 inches thick. It should be noted that if the antenna is struck by lightning, the foil by itself may not be sufficient to dissipate lightning currents. Additional protection may be needed depending on the construction of the structure to which the antenna is mounted.

- The electrical bonding requirements stated in paragraph 2.3.3 must be met.
- To prepare an aluminum surface for proper bonding, refer to SAE ARP1870.

2. Connection to the antenna should be made in accordance with the system interconnect diagram Figure 2-6.

2.3.7.2 L-Band Antenna

The L-band antenna is used to must meet the minimum performance requirements for the Lynx NGT-9000. Antennas meeting the minimum performance specifications needed by the Lynx NGT-9000 may already be installed in the aircraft and may be available for use. Use the antenna location information below to verify an existing antenna location is acceptable for use.

2.3.7.2.1 L-band Antenna Location

The L-band antenna installation should be installed in accordance with AC 43.12-2A Chapter 3. The following guidance provides information to aid the installer in determining that the best location is selected for the installation of the L-band Antenna.

- The primary L-Band antenna (978 MHz /1030 & 1090 MHz) must be mounted vertically on the bottom of the aircraft fuselage. The antenna shall be located to minimize obstruction to fields in the horizontal plane.
- The optional Diversity L-Band antenna (1090 MHz) must be mounted vertically on the top of the aircraft as shown in Figure 2-17. Horizontal separation from the bottom mounted L-band antenna must be no more than 25 feet (7.6 meters).
- The total attenuation including connectors shall not exceed 1.5 dB. Based on this, the length of the cable can be decided assuming RG-400 cable. RG type coaxial cable insertion loss can vary significantly between manufacturers. Refer to the cable manufacturer's specification sheet for actual attenuation (insertion loss) for the cable being used.
- The Antenna(s) should be located away from major protrusions, such as engine(s), propeller(s), and antenna masts. It should be as far as practical from landing gear doors, access doors, or other openings that could affect its radiation pattern.
- The Antenna(s) must be mounted no closer than 20 inches from any FADEC (Full Authority Digital Engine Control).
- The bottom L-Band must be mounted no closer than 7 feet to any DME antenna.
- The Antenna(s) must be mounted no closer than 36 inches to any TAS/TCAS antenna.
- The Antenna(s) should be mounted no closer than 3 feet from any GPS antenna.

2.3.7.2.2 L-Band Antenna Installation

Refer to the aircraft manufacturer's data and the antenna manufacturer's installation instructions to mount the antenna(s). The installer may use other FAA approved data to gain a separate antenna installation approval.

- **Electrical Bonding Requirements:**

Each L-Band antenna requires a minimum ground plane radius of 12 inches of contiguous metal (no access panels, etc.) around the perimeter of the antenna. For metal aircraft, the surrounding metal skin on which the antenna is mounted supplies the ground plane. For non-metal aircraft, the ground plane can be composed of heavy duty aluminum foil tape, such as 3M PIN 438 or other adhesive backed dead soft aluminum foil minimum 0.012 inches thick. It should be noted that if the antenna is struck by lightning, the foil by itself may not be sufficient to dissipate lightning currents. Additional protection may be needed depending on the construction of the structure to which the antenna is mounted.

The electrical bonding requirements stated in paragraph 2.3.3 must be met.

- Connection to the antenna should be made in accordance with the system interconnect diagram Figure 2-6.
- All antenna cables should be clearly marked as both connections use TNC connectors.
- Acceptable coaxial cable attenuation including connectors shall be less than 1.5 dB at 978 MHz.
- Reference General Information Section – Antenna Cables for L-Band Antenna cable loss and minimum antenna spacing requirements.
- Refer to General Information Section - lists some suitable cable types. Any 50ohm, double-shielded coaxial cable assembly that meets airworthiness requirements and the acceptable attenuation requirements (including connectors) may be used. When computing cable loss, a typical loss of 0.2 dB can be used for each connection. Refer to paragraph 2.3 step 2 for antenna electrical bonding requirements.

2.3.7.3 Installation Guidelines for NY156 (TCAS) or NY164 (TCAS) Directional Antenna

Connections are made through two TNC and one BNC connector. To ensure a tight seal between the airframe and antenna, an O-ring seal (i.e., an O-ring groove for an MS28775-044 O-ring) has been incorporated into the design. An O-ring is supplied with each antenna and must be installed when mounting the antenna. Installation kits associated with various airframes are described in the General Information section along with the contents of each kit.

2.3.7.3.1 Directional Antenna Location

Location is an important factor for maximum antenna performance. Optimum location for a particular aircraft type is usually available from the aircraft manufacturer. See Figure 2-19 for Antenna Outline dimensions.

1. In selecting a location, consider the following:

- The mounting site should be on the top forward fuselage, as close to the centerline as possible, and within -10° of the in-flight horizon (see Figure 2-18).
- The optimum mounting point for maximum coverage is as far forward as possible without exceeding the -10° forward pitch.
- If necessary, consideration should be given to relocating other antennas to obtain the furthest forward location for the directional antenna.
- The antenna should be mounted on the aircraft with at least 20 dB isolation (about 30 inches (76.2 cm)) from other L-band frequency antennas and 24 inches (61.0 cm) from other antennas or obstructions.
- The ground-plane should be as large as possible, a 30-inch (76.2 cm) ground-plane diameter is recommended.
- Refer to the guidelines given for the GPS Antenna and L-Band (UAT/1090) Antennas for additional spacing requirements.
- The directional antenna can be bottom mounted only if a suitable top mount location is not available. Each bottom mount installation must be evaluated on a case-by-case basis. Before starting a bottom mount installation, contact Field Service Engineering at 1-800-453-0288 or 1-616-949-6600. Note - The bottom mount directional antenna eliminates the diversity option.

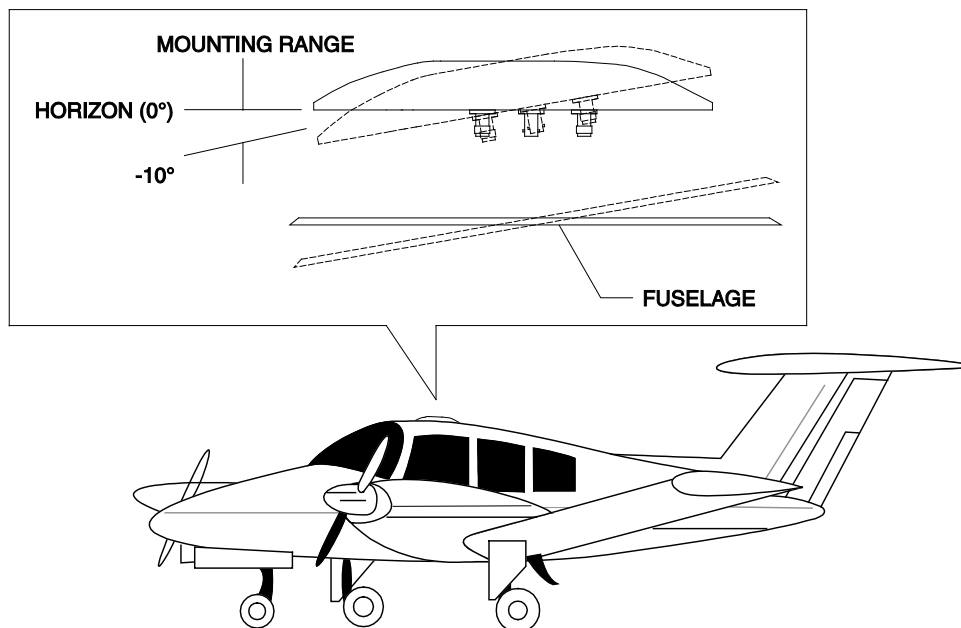


Figure 2-18: Directional Antenna Mounting Location

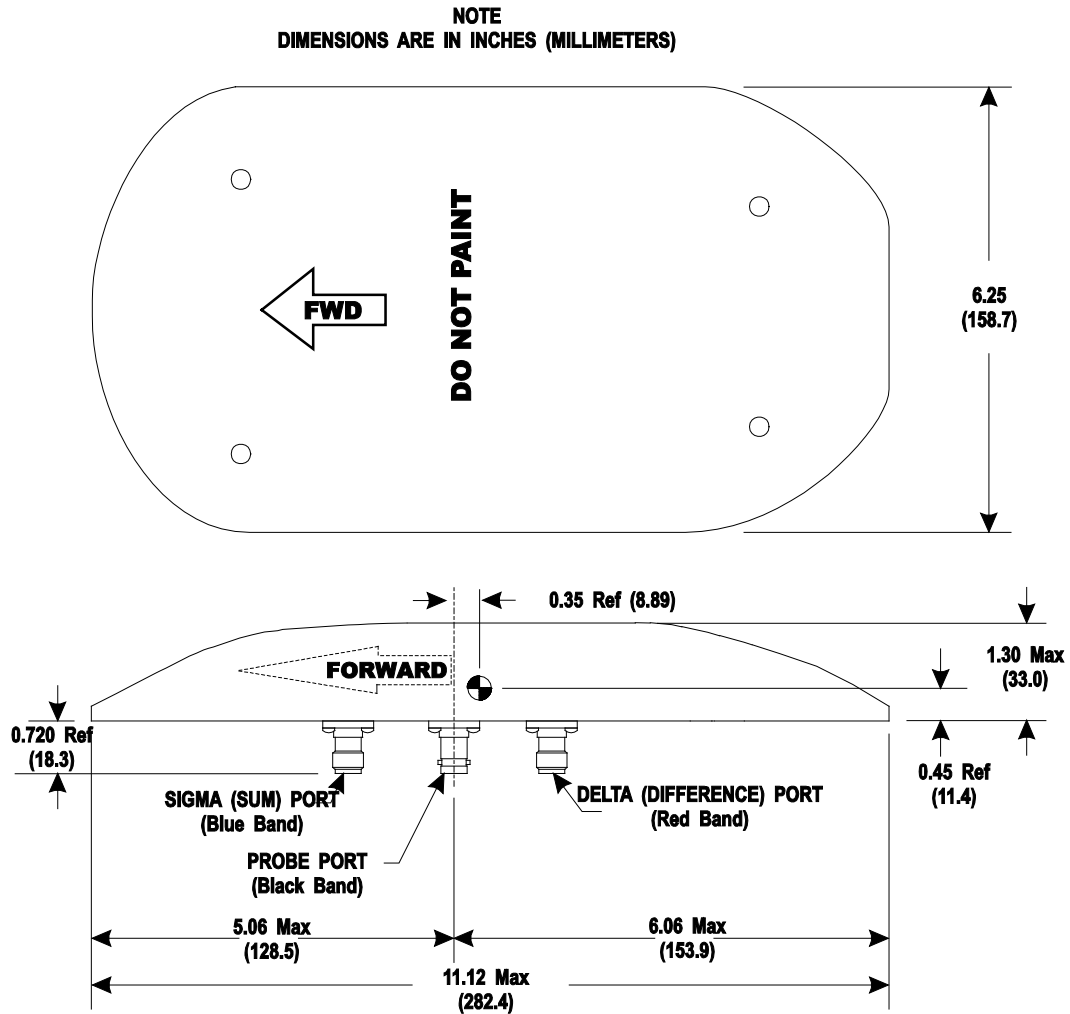


Figure 2-19: NY156 / NY164 Directional Antenna Outline Dimensions

2.3.7.4 Installation

1. Use the following information to the extent necessary to install the directional antenna.
 - Standard installation practices prescribed in FAA Advisory Circular 43.13 must be followed.
 - The installer must ensure the immediate antenna installation area is clean and prepared so that the antenna is electrically bonded (metal-to-metal contact) to the aircraft. To provide optimum bonding through the mounting holes, prepare the surfaces with Alodine No. 1001.
 - To facilitate mounting to the airframe, the dimensions shown in Figure 2-20 can be used to locate and drill mounting and connector access holes.
 - Connection to the antenna should be made in accordance with the system interconnect diagram Figure 2-6.

NOTE

A doubler plate (not supplied) is required to reinforce the aircraft skin.

2. Connect each of the three antenna cables. Check to ensure that each cable is connected to the correct antenna connector. Each connector/cable has a matching color band (see note paragraph.).
3. Attach the antenna to the aircraft, with the special adapter plate and o-ring, using 10-32 hardware provided. See Figure 2-21.

NOTES

1. Before installing the antenna on an aircraft remove the tape, which holds the O-RING gasket in place during shipment (refer to SL-206). If the O-ring is in a separate bag, remove and install it in the O-ring groove on the bottom of the antenna.
2. For pressurized aircraft, use a sealant that meets the requirements of SAE AMS-S-8802 such as Flamemaster CS3204 class B. For non-pressurized aircraft, use a non-corrosive sealant that meets the physical requirements of MIL-A-46146 such as General Electric RTV162.

Lynx NGT-9000 Installation Manual

NOTE
DIMENSIONS ARE IN INCHES (MILLIMETERS)

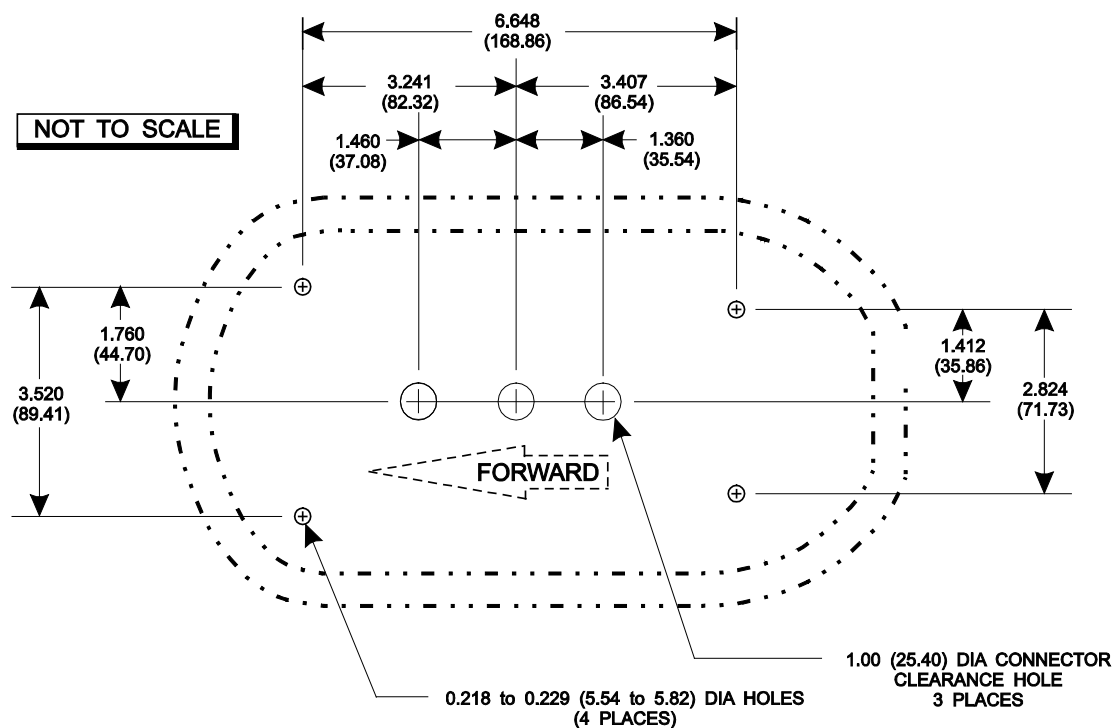


Figure 2-20: Antenna Mounting Holes

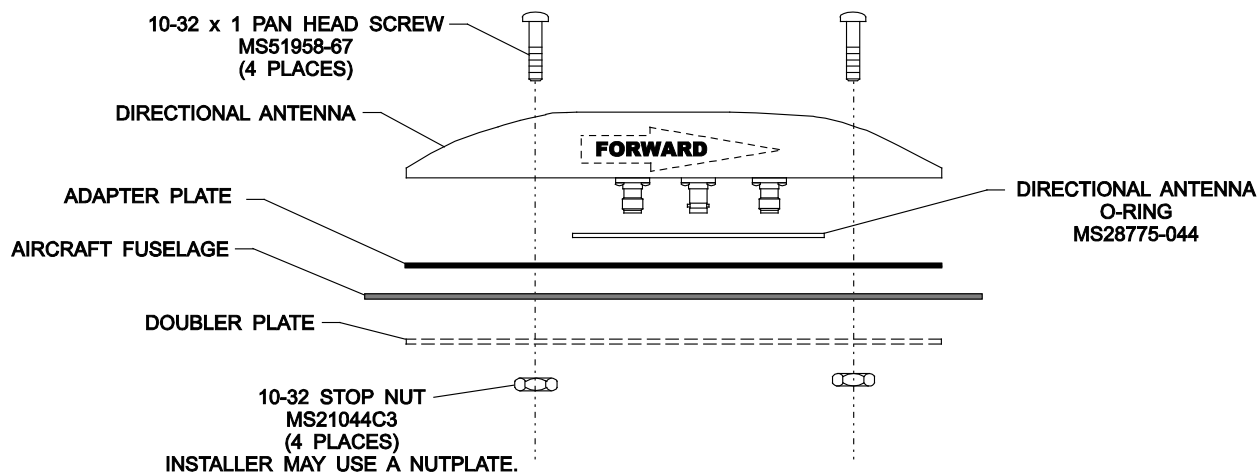


Figure 2-21: Directional Antenna Installation

Section 3 Installation Checkout

3.1 INTRODUCTION

This section contains instructions for the configuration and checkout of the Lynx NGT-9000. Refer to the fault isolation information provided in the maintenance manual for help in correcting installation issues found during checkout. Refer to the General Information section - Equipment Required Not Supplied for details on equipment used in this section.

A Log Sheet is available in Appendix C to record the Configuration and Checkout information. It should be filled out prior to performing this procedure.

NOTE

These procedures assume that the mounting, wiring, power, and antenna requirements have been checked out according to the instructions given in the installation section.

CAUTIONS

1. Operating the unit with the GPS antenna connected and the L-Band antenna NOT connected may damage the unit.
2. All antenna connections must be connected prior to operation.

3.2 BASIC OPERATION

3.2.1 Panel Mount Lynx NGT-9000

The panel mount Lynx NGT-9000 uses a touch screen display to select, input, and adjust information on the screen using gestures (actions); such as tap, momentary press, drag, or swipe. See Figure 3-1. The figure below is not a typical screen and is meant to provide instructions of display information only.

- Buttons are typically gray background color with white or green text. When a button is pressed the background highlights in blue. A button function that is inhibited has its button label grayed out. Buttons with an amber background color is inactive.
- The display for the unit is divided into a left and right screen. Each screen has access to a particular application. Accessing the applications is done using a horizontal Slide action to drag the desired application screen into view.

An Application indicator is located at the bottom of the left and right screen. The indicator shows the number of available applications for that side of the display as well as the current application setting. Each application can slide into view using both Drag and Swipe actions.

The left screen applications are designated as “Transponder” and “Alternate Traffic”. The right screen applications are designated as “Traffic”, FIS-B Graphic”, FIS-B Graphic Winds & Temp”, and FIS-B Text Data”. The left screen also shows the information screens (GPS, brightness control, etc.)

- A version screen is shown at start up. It identifies version information for the units Application Software (Flight Sw), Firmware (Platform and GPS), GPS/UAT Receiver SW, Airport Database (Airport DB), and Map Database (Map DB).

- The display brightness is automatically adjusted using an ambient light sensor and can also be adjusted pressing the Options icon on the right application screen followed by the dimming button.
- An optional cockpit switch and status lamps may be installed to initiate commands or provide operational status. See paragraph 3.2.2.3 for operational details.

NOTE

The Lynx NGT-9000 can also be interfaced to compatible cockpit displays or a Personal Electronic Device (PED) used to view traffic and weather. The operation of other 3rd party equipment (i.e. PED or display) is not provided in this manual. Refer to the operations manual for the 3rd party equipment for command instructions.

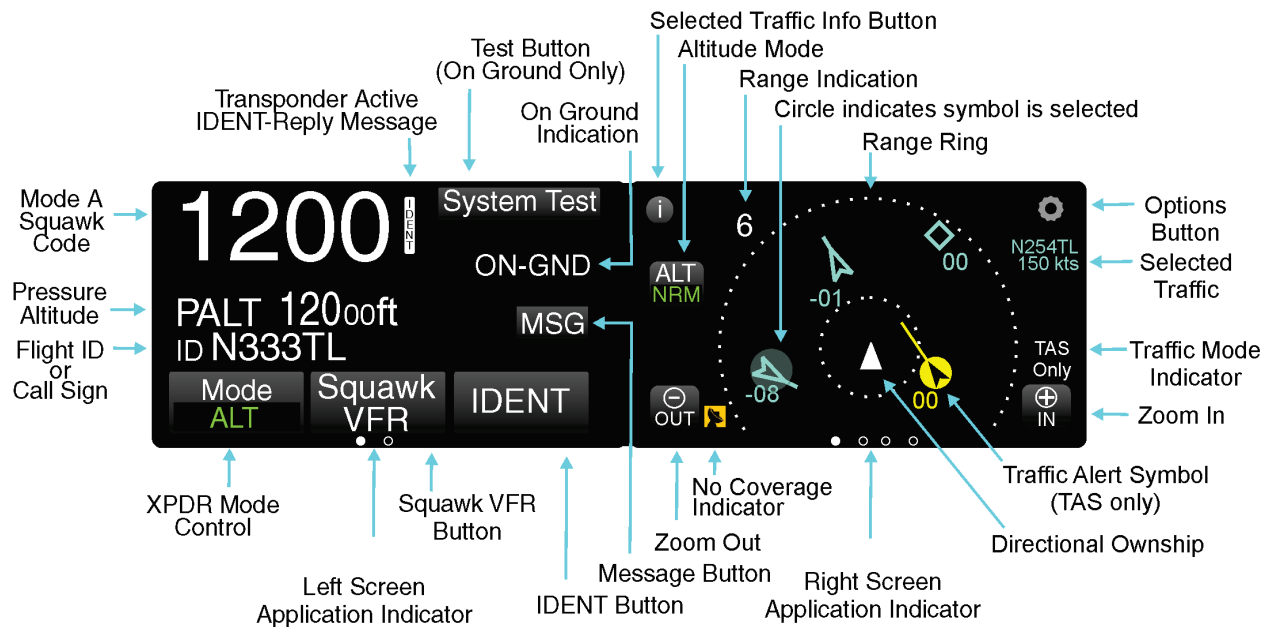


Figure 3-1: Transponder/Traffic Screens

3.2.1.1 Power On

1. Verify the circuit breaker for the Lynx NGT-9000 is closed.
2. Connect aircraft to external power source to conserve aircraft battery power.
3. Apply power to the unit and system component using applicable essential or emergency electrical buses.
 - Initialization and self-tests begin.
4. The splash screen is displayed in less than 5 seconds.
 - The company name/Logo is shown on the left side and the product name on the right.
5. The System Status is shown on the left side in less than 20 seconds
 - If a System Status is “System Fail” or “System Degraded” message is shown, then tap the Continue button to proceed to normal operation. See Figure 3-21.

3.2.2 Remote Mount Lynx NGT-9000

The remote version of the NGT-9000 uses a compatible display and a control panel to view and initiate commands. An optional cockpit switch and status lamps may be installed to initiate commands or provide operational status.

- The CP-2500 Control Panel provides all the necessary command and annunciation functions. Refer to paragraph 3.2.2.2 for operating instructions. Detailed operating instructions for the CP-2500 are provided in the Pilot Guide for the CP-2500.

The CP-2500 displays GPS INIT, indicating that the GPS is initializing. After 2 minutes the CP-2500 displays ADS-B SYSTEM FAIL if the GPS position was not acquired. If the CP-2500 displays ADS-B SYSTEM FAIL in less than 2 minutes then a different problem has been detected. Cycle power to the unit. If the problem continues refer to the troubleshooting section for possible corrective actions.

- The Lynx NGT-9000 can also be interfaced to compatible cockpit displays or a Personal Electronic Device (PED) used to view traffic and weather. The operation of other 3rd party equipment (i.e. PED or display) is not provided in this manual. Refer to the operations manual for the 3rd party equipment for command instructions.

3.2.2.1 Power On

There is no power on/off switch for the Lynx NGT-9000. Depending on the aircraft, use either the battery switches or avionics master switch to apply power.

NOTE

The CP-2500 Control Panel has a power on/off button. Press the small knob button to apply power to the control panel.

1. Verify the circuit breaker for the Lynx NGT-9000 is closed.
2. Connect aircraft to external power source to conserve aircraft battery power.
3. Apply power to the unit and system components using applicable essential or emergency electrical buses.
4. Normal operation begins within 10 seconds of applying power. During start up the unit checks for valid configuration data and initializes self tests. Refer to the CP-2500 operating instructions in paragraph 3.2.2.2 for startup messages.

3.2.2.2 CP-2500 Control Panel

The operational information provided in this section is limited. Refer to the CP-2500 Pilot's Guide or Installation Manual for details. Refer to the References information in the front section for details.

1. Press the small knob button to apply power to the control panel. To remove power to the unit press and hold the small knob button until the message "Power Down" is shown on the display.
2. After power is applied, if the self test passes, the CP-2500 briefly displays "OK". That is followed by the scrolling of the firmware and hardware levels of the CP-2500 (approximately 15 seconds). The CP-2500 then reverts to normal operation.
3. The display of the CP-2500 shows the operational mode on the left side of the display and the squawk code on the right side of the display as shown in Figure 3-2.

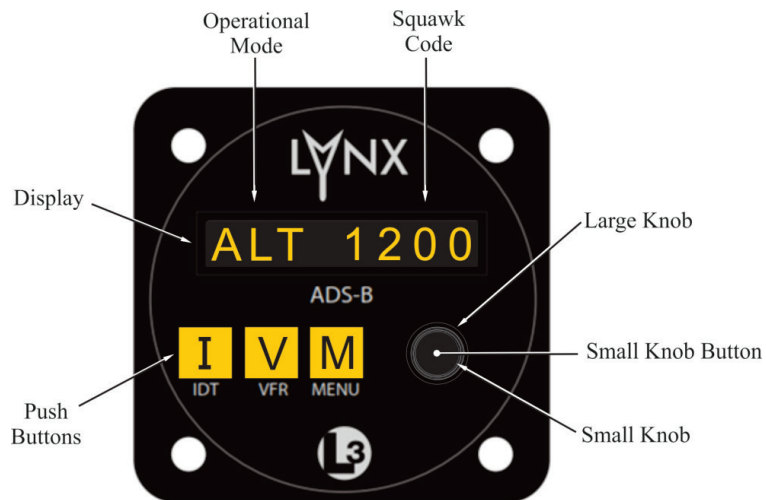


Figure 3-2: CP-2500 Normal Mode

4. In normal operation the user can change the operational mode, set the squawk code, view the current pressure altitude, and optionally set a flight ID. (The flight ID function is optional and is part of the configuration options set during installation of the Lynx NGT-9000.) Select these items by rotating the large knob.
 - The operational mode is changed by rotating the small knob and can be set to Altitude, On, or Standby. The Altitude (ALT) mode should always be selected unless Air Traffic Control (ATC) requests a change or if there is a known problem with the control panel or Lynx NGT-9000. Note – If the CP-2500 operational mode is set to Standby the ADS-B Out Fail lamp (if installed) is ON and the ADS-B Out Fail message is displayed on the CP-2500 screen.
 - Change the squawk code by rotating the large knob to select and press the small knob. Observe that the left most digit blinks. Rotate the small knob to change the number, rotate the large knob to select the next digit. Repeat until all digits are changed. Press the small knob or allow the screen to time out to commit the change.
 - View the pressure altitude by rotating the large knob until the “Altitude” is shown. Press the small knob to view. Press the small knob again to return to normal operation.
 - If configured rotate the large knob to select flight ID. Press the small knob to select the first digit. Rotate the small knob to change the digit (CCW) or character (CW). Rotate the large knob clockwise to move the cursor to the next digit. Press the small knob to commit. Deactivate the Flight ID by rotating the large knob CW to move the cursor off the right side of the display. Continue rotating until only dashes fill the display. Press the small knob to commit.

5. The CP-2500 has three buttons identified as I (Ident), V (VFR), and M (Menu).
 - Pressing the “I” button activates the IDENT message to be sent by the ADS-B unit for 18 sec. IDENT is momentarily displayed while this message is being sent. The use of this button is directed by Air Traffic Control (ATC).
 - Pressing the “V” button sets the squawk code to a programmed VFR code that is set in the menu. Pressing the button again returns the code to the previous squawk code.
 - Pressing the “M” button gains access the menu, as well as the hardware and firmware status. Rotating the large knob allows the pilot to access different modes. The Menu button also allows access to the Maintenance Mode, where the pilot can conduct a self test. Press the M button to exit to normal operation.
 - Self Test operation:
 - a. Turn the small knob to select "Self Test". The display shows "Disabled".
 - b. Press the small knob button to change display to “Enable”.
 - c. Press small knob again to activate self test. The display shows "TEST PROG". The following messages may be seen during the test. Each lasting for 5 seconds.
 - “TEST PASS”. Unit returns to previous operation.
 - “TEST FAIL”. After this message is seen additional messages are shown for each test that failed. Possible messages: TAS FAIL, XPDR FAIL, ADIN FAIL, ADOU FAIL, FISB FAIL, and, GPS FAIL. Each message remains on the display for 5 seconds.
 - d. While the test is in progress observe that 3 targets are shown on the PED or traffic display (if installed) used by the Lynx MSS. If installed the ADS-B Out Fail lamp (located on instrument panel) will flash for a couple of seconds.
 - If no targets are seen or the lamp does not flash, then troubleshoot the installation, including the Lynx MSS and associated systems to determine cause. Refer to section 4 of this manual for assistance.
6. A messages being received from the Lynx NGT-9000 has priority over normal display operation and is seen scrolling across the display. Rotating the large knob scrolls through unseen messages and the normal display operation (showing operational mode and squawk code). The display begins showing the high priority message again after 10 seconds of no activity. The priority of the messages is discussed in the CP-2500 product manuals.
 - ADS-B SYSTEM FAIL: The ADS-B out is not being transmitted by the Lynx NGT-9000.
 - NO ADS-B COVERAGE: Indicates that no ground station signal (TIS-B) is being detected by the Lynx NGT-9000. (This message is suppressed if TAS is equipped and enabled.)
 - GPS FAIL: The GPS derived position input is not functioning.
 - IDENT: The IDENT message is being sent by the Lynx NGT-9000 via ADS-B Out.
 - GPS INIT: GPS Initialization –The GPS contained within the Lynx NGT-9000 is not ready.
 - XPDR FAIL: The transponder function of the Lynx NGT-9000 has failed.

3.2.2.3 Cockpit Switch and Status Lamps

The IDENT switch and status lamps are optional installations.

- Pressing the remote IDENT switch activates the IDENT message to be sent by the unit via ADS-B Out. An IDENT pulse highlights the aircraft's symbol on the ATC's radar screen and is identified on the control panel when active.
- The TAS Alert lamp (amber) will illuminate when:
 - TAS is enabled and there is a Traffic Alert condition (only possible when TAS is activated).
 - TAS is enabled and Self-test is run, the lamp will be "ON" for approx. 8-10 seconds.
- The ADS-B Out Fail lamp primarily indicates when the Lynx NGT-9000 is not providing ADS-B output data. The lamp may be illuminated (ON) for any of the following reasons:
 1. When Lynx NGT-9000 is not powered, lamp defaults to "ON".
 2. When the aircraft is On-Ground and the self-test is run, the lamp is "ON" for approx. 8-10 seconds.
 3. When the aircraft is On-Ground the lamp is "ON" until the Lynx NGT-9000 has started and is operational after which the lamp will extinguish.
 4. When the GPS has "failed", the lamp is "ON". GPS failures happen when:
 - a. The Lynx NGT-9000 internal GPS indicates a failure.
 - b. Aircraft is On-Ground and the GPS has acquired position, but the signal is lost for more than 2 minutes.
 - c. Aircraft is In-Air and the GPS has not acquired position within 2 minutes (either startup or had position and lost it).
 5. The lamp begins to flash for the following reasons:
 - a. Aircraft On-Ground, there is a 2 minute "quiet period" when the GPS is expected to acquire position. After 2 minutes, the lamp will flash indefinitely while the GPS has never acquired, but is not failed.
 - b. Aircraft In-Air, at startup or if GPS had position and then lost it, then the lamp will flash for 2 minutes while trying to acquire position, then become failed (see 4.c. above).

3.3 CONFIGURE WIFI SERIAL ADAPTER

NOTE

The Lynx PED Interface Module PIM-9000 is preconfigured by the manufacturer.

This procedure is required if using the Roving Networks RN370M (L-3 P/N 9080-10024-01) WiFi Serial Adapter. This procedure requires a Maintenance PC (MPC), Lynx Maintenance Appliance Tool (Lynx MAT), and a standard Null Modem cable (DB9 F/F).

These procedures assume the following:

- The Lynx MAT is active on the MPC.
1. Connect WiFi Serial Adapter (dongle) to the MPC via the Com Port that the Adapter is connected to using a standard Null Modem cable.
 2. From the Lynx MAT menu select Tools→Configure WiFi Dongle. See Figure 3-3.

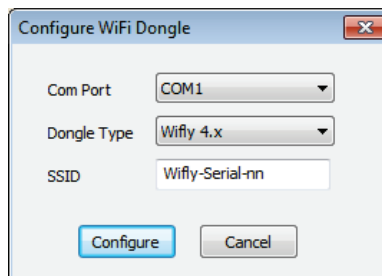


Figure 3-3: Lynx MAT – WiFi Serial Adapter

3. Verify the following:
 - Dip switches 1 -4 are in the off position (i.e. towards the connector side of the Adapter).
 - Com Port: Typically COM1.
 - Dongle type is set to WiFly 4.x
 - SSID is set to WiFly-GSX-nn. Where “nn” is variable per dongle.
4. Click “Configure” to begin. The message “WiFi Dongle Configuration Complete” is shown to indicate configuration complete.
5. If the configuration could not be completed, then check the following:
 - Cable connection
 - Com port connection
 - Check batteries for the WiFi Serial Adapter
6. After the configuration is complete remove the serial cable and cycle power to adapter.
7. Connect the WiFi Serial Adapter to the aircraft wiring harness connecting to the Lynx NGT-9000.
8. Verify that the SSID name can be seen with a WiFi device such as laptop or PED.
Note - The SSID will show the default SSID being used, which is typically Wifly-Serial-nn, where nn is variable per Adapter.

3.4 MAINTENANCE PC

The procedures for installation checkout require the use of a Maintenance PC (MPC), Lynx Maintenance Appliance Tool (Lynx MAT), LynxMSS USB Driver, and a USB cable.

A compatible Lynx MAT revision must be used to successfully communicate with Lynx NGT-9000. Refer to the Software Revisions information in the General information section for details.

NOTES

1. The revision of the Lynx MAT must be compatible with the unit's software release. Refer to software revisions in the General information section for details. The revision of the Lynx MAT can be found in the Help/About menu item at the top of the screen.
2. The screen information for Lynx MAT is very similar between the panel and remote mount models of the Lynx NGT-9000. Differences in appearance are either noted or will be shown in the following procedures.

Persons performing the checkout should monitor the Lynx MAT status bar. The bottom left corner of the screen provides information on connection type and communication status.

- The communication status is either “Connected – green indicator” or “Not Connected – red indicator”.
- Messages are also shown on the right side of the status bar providing guidance to the user.
- The operational status of the unit is shown on the Lynx MAT and is located at the top of the panel (next to the model ID) and on the status bar.
The operational status is either “Flight” or “Maint”. When “Flight” status is shown the unit is in either “Normal Operation” or in “Ground Test” modes. When “Maint” status is shown the unit is in “Maintenance” mode, with or without Wifi. The Restart function of the Lynx MAT may be used to restart into Normal Operational mode, Maintenance mode (with or without Wifi), or Ground Test mode.
- Maintenance mode (Maint) can be entered within the first 2 minutes from power-on irrespective of Air/Ground state. After 2 minutes, maintenance mode can only be entered if the Air/Ground state is On-Ground.
- The Air/Ground state is determined through an optional Weight On Wheels (WOW) input and GPS Groundspeed. The air/ground state is initially determined based on the last known air/ground state saved in non-volatile memory. When sensor inputs have become available and the state may be determined based on sensors, the installed configuration is used to guide the air/ground algorithm to update the current air/ground state.

NOTE

When the unit is restarted in maintenance mode the cooling fan is enabled and the ADS-B discrete output is set to ground, which enables the ADS-B Out Fail Annunciator lamp if installed.

3.4.1 Enable MPC to Unit Communication via USB Connection

Do the following to connect and establish communication.

1. Apply power to the unit as indicated in paragraph 3.2.1.1.
2. Connect USB cable between MPC and the unit.
3. From the Lynx MAT menu select Connect→NGT9000 → USB. See Figure 3-4.

Lynx NGT-9000

Installation Manual


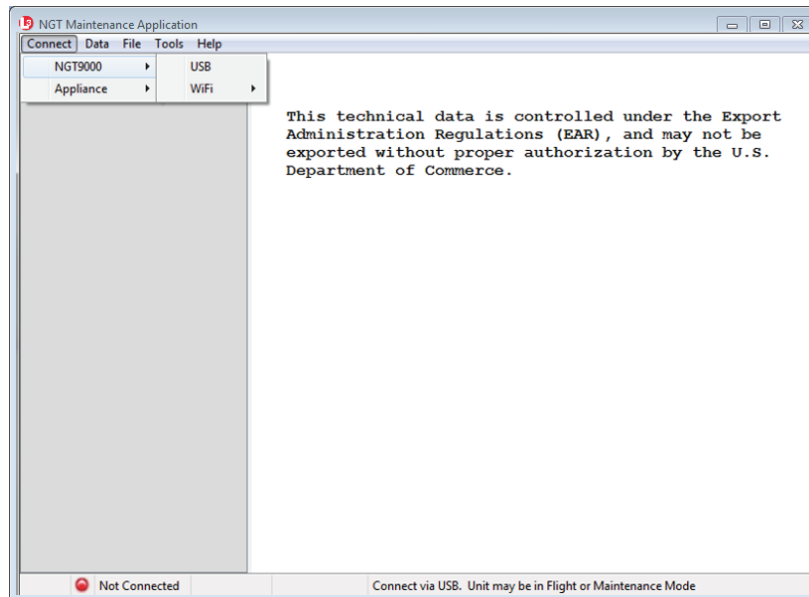


Figure 3-4: Maintenance Application Tool – Main Page – Connect via USB

4. Communication is established when the Lynx MAT left view panel changes from grey to tan and the message “Connected” is shown in the lower communication bar. See Figure 3-5.
 - If “Not Connected – red indicator” is shown, then check the USB cable for proper connection.
 - If a “Response timeout for write request” message is seen on the status bar, then the unit is not responding to requests. Cycle power to the unit.
 - When the unit is in maintenance mode the ADS-B Out Fail lamp is ON (if installed).

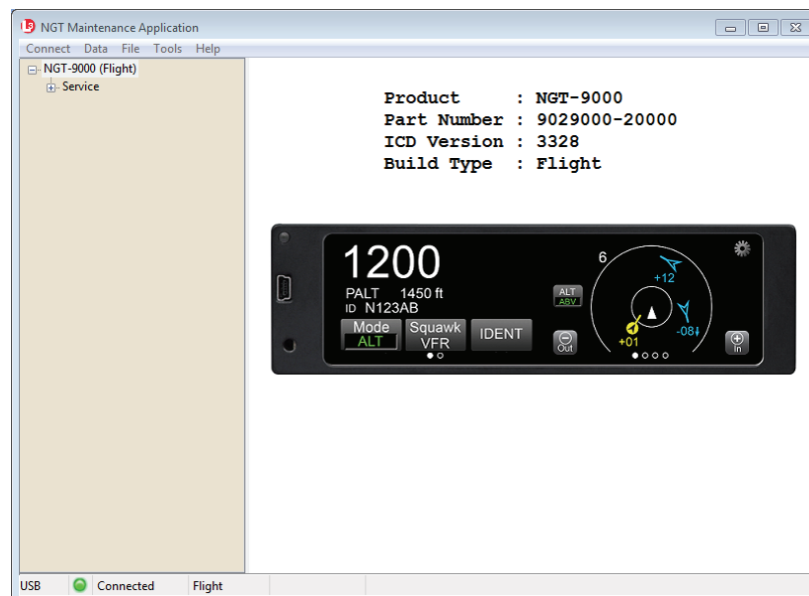

Panel Mount page showing

Figure 3-5: Lynx MAT – Main Screen

5. Communication begins with the unit in Flight mode as indicated by the (Flight) message in the panel and at the bottom status bar.

6. Restart the unit in maintenance mode (power cycled) without a WiFi connection (step a) or with a WiFi connection (step b).
 - a. No WiFi connection (maintain USB connection)
 - (1) From the Lynx MAT panel select Service→Restart Unit. See Figure 3-6.
 - (2) From the Restart Unit screen select Maintenance (No WiFi)
 - (3) Click on the Restart Unit button at the bottom of the main screen.
 - (4) The unit is ready for configuration setup when the maintenance screen is shown on the unit display.

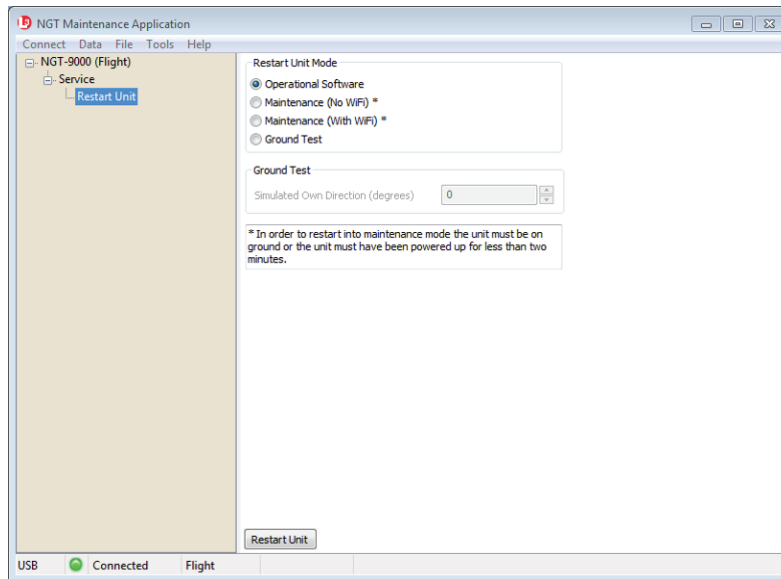


Figure 3-6: Lynx MAT – Restart Unit

- b. WiFi Connection

The WiFi connection is optional and requires a WiFi Serial Adapter as part of the installation.

NOTE

The Configure WiFi Serial Adapter procedure described in 3.3 must be completed before the unit can establish a WiFi connection.

- (1) From the Lynx MAT panel select Service→ Restart Unit.
- (2) Select Maintenance (With WiFi)
- (3) Press the Restart Unit button.
- (4) From the Lynx MAT menu select Connect→NGT9000 →WiFi→ Connect to Maintenance Mode.
- (5) Connection should be established. If not, than restart the process begun in step (1).
- (6) Remove USB cable.

3.4.2 Enable MPC to Unit Communication via WiFi Connection

The WiFi connection is optional and requires a WiFi Serial Adapter as part of the installation. Do the following to connect and establish communication between the MPC and the unit via the WiFi. This procedure bypasses the WiFi connection that started out using the USB connection in paragraph 3.4.1.

NOTES

1. The Configure WiFi Serial Adapter procedure described in 3.3 must be completed before the unit can establish a WiFi connection.
 2. The MPC wireless connection must be set to the dongle WiFi network.
-
1. Apply power to the unit as indicated in paragraph 3.2.1.1. The unit starts up in normal flight mode.
 2. Verify that WiFi Serial Adapter (dongle) is receiving data (blinking blue light for the RN370M).
 3. From the Lynx MAT menu select Connect→NGT9000 → WiFi→Restart into Maintenance Mode. See Figure 3-7. This must be accomplished within 2 minutes of the Lynx NGT-9000 having power applied while on ground.


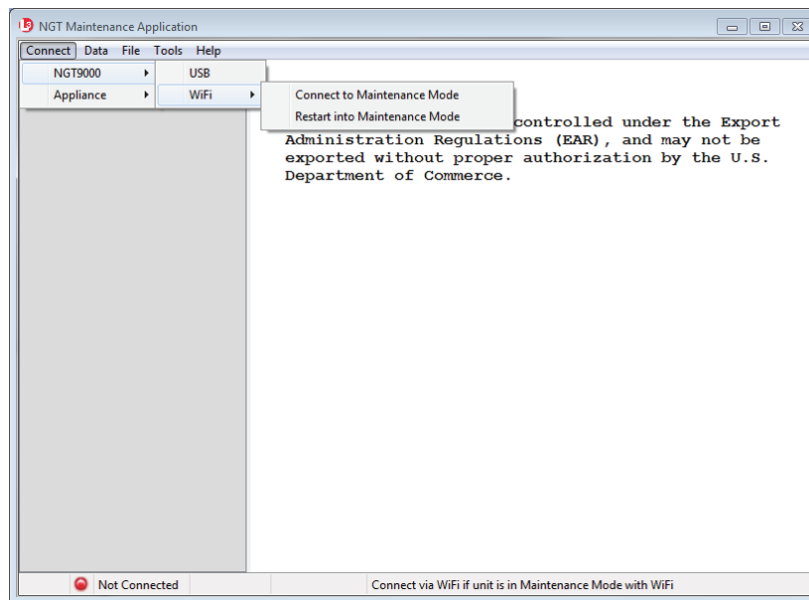


Figure 3-7: Maintenance Application Tool – Main Page – Connect Via WiFi

4. The following Info box is shown on the screen. Select “OK”.

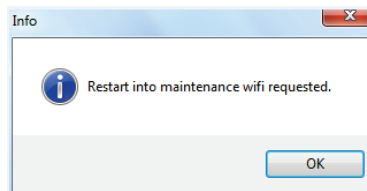

5. From the Lynx MAT menu select Connect→NGT9000 →WiFi→ Connect to Maintenance Mode.

3.5 MAINTENANCE MODE

The unit can enter Maintenance mode without the use of a MPC using the following procedure. This procedure may only be used while the unit is on ground and within the first two minutes of operation.

1. Apply power to the unit as indicated in paragraph 3.2.1.1.
2. With the splash screen showing press and hold (continue holding when the status and version screens are showing) in the lower left corner of the display until the Activate Maintenance Mode window is shown on the right screen. See Figure 3-8.

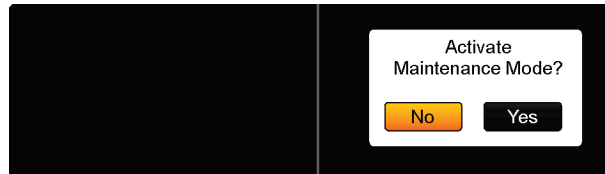


Figure 3-8: Activate Maintenance Mode Window

3. Tap the Yes button to restart the unit in Maintenance Mode. Note - Tapping the No screen button or 10 seconds of inactivity starts normal operation mode. The Maintenance Mode windows are shown in Figure 3-9.
 - Note: Some failure conditions automatically activate the maintenance mode. The reason for the automatic activation is shown on the screen.



Figure 3-9: Maintenance Mode Screens

4. From the Main Screen tap the Reboot text.
5. From the Reboot menu tap the Maint No-WiFi >.
 - A maintenance screen is shown on the unit while in maintenance mode.

3.6 VERIFY SOFTWARE VERSION

The Maintenance PC (MPC) and Maintenance Application Tool (Lynx MAT) are used to interface with the unit to load software/firmware/databases, view factory / version data, and retrieve fault / event logs.

These procedures assume the following:

- Power is being supplied to the aircraft and unit.
 - The Lynx MAT is active on the MPC.
 - The MPC is connected to the unit via the USB interface
 - The MPC and unit are communicating. From the Lynx MAT panel select Connect→NGT9000→USB. This is required each time the unit power is cycled.
1. From the Lynx MAT select Info→Versions. See Figure 3-10.
 2. Use the versions screen to verify that the field loadable software is correct for this installation. Details on software part numbers and versions are available in the General Information section under paragraph heading “Software Versions”.
 - If a software version is found to be incorrect, update using the procedures located in the maintenance section of this manual.

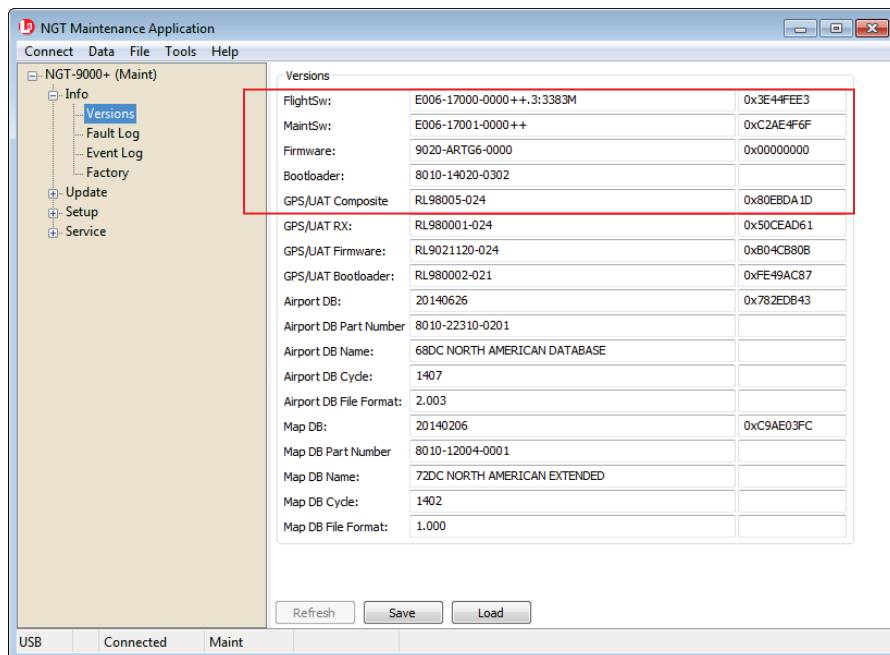


Figure 3-10: Lynx MAT – Check Versions

3.7 SELECT CONFIGURATION OPTIONS

This procedure is used to configure the Lynx NGT-9000 and must be completed prior to performing the Installation Checkout for first time installations. The Log Sheet provided in Appendix C should be filled out in preparation for this procedure and maintained with the aircrafts permanent records.

CAUTION

A “Warning” message is shown when the user first attempts an operation that requires confirmation from the user stating “Changes should be done by trained service personnel”. The user will need to press the confirm button to acknowledge this warning.

This message is to warn unauthorized or untrained personnel to stop what they are doing before they mis-configure or damage the unit.

- If a configuration file has already been created using the Lynx MAT Backup function, then it may be used to load the data options. The configuration restore procedure is located in the maintenance section of this manual.
- Unlock codes are required to enable TAS and Diversity configuration selections. The unlock codes are typically shipped with the unit. If the unlock codes are not included, contact L-3 Avionics Systems Customer Service to obtain the codes.
- If the Lynx MAT is not connected or is disconnected the left side panel color changes to a light grey and the “Not Connected” message is displayed at the bottom of the tool screen. Re-connect by doing the following - from the Lynx MAT panel select Connect→NGT9000→USB. This is required each time the unit power is cycled.
- Place the curser over option titles to view tool tips (not always available).
- No configuration changes take effect until they are entered, applied, and the unit is restarted.
- Pressing "Apply" from any setup/configuration/modify screen will apply, or save, all changes from all screens. Successful saving of data to DCM is indicated by the following message being displayed in the lower communication bar of the MPC, "Write to DCM succeeded. Write to NVM backup succeeded"

These procedures assume the following:

- Power is being supplied to the aircraft and unit.
- The Lynx MAT is active on the MPC.
- The MPC is connected to the unit via the USB interface
- The MPC and unit are communicating.

3.7.1 Aircraft Specific Options

From the Lynx MAT select Setup... Configuration → Modify → Aircraft Specific. See Figure 3-11. Enter the information specific to the installation for the intended certification.

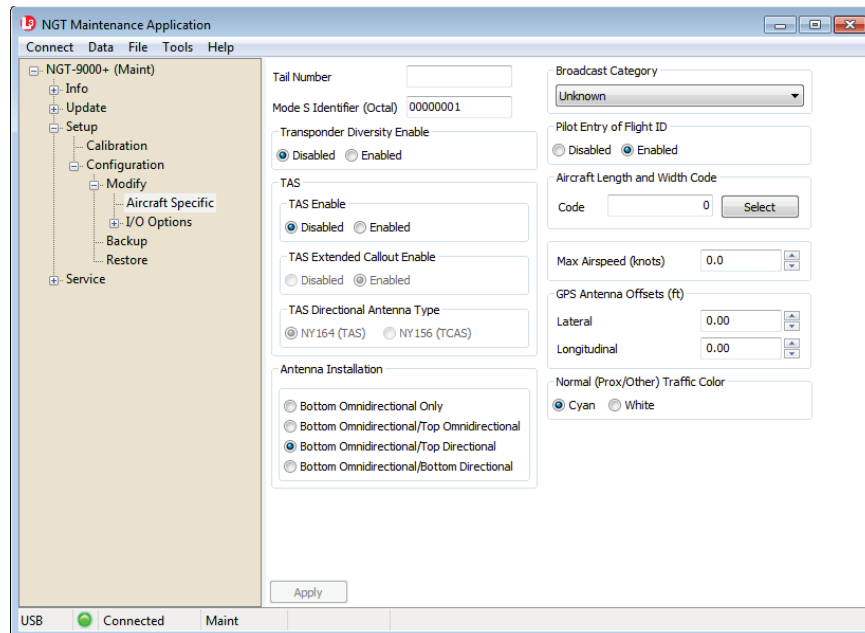


Figure 3-11: Lynx MAT –Aircraft Specific Options

1. **Tail Number:** Enter the tail number the aircraft that the unit is being installed in.
2. **Mode S Identifier:** 24 bit ICAO address code. Eight octal digits. The code can be obtained from either the aircraft registration certificate or the N number inquiry page <http://registry.faa.gov/aircraftinquiry/>.
3. **Transponder Diversity Enable:** Select Disabled or Enabled. This function must be enabled for installation with Diversity (NGT-9000D or NGT-9000RD).
 - This feature requires a Mode S Identifier to be entered.
 - This feature requires a unlock code. Refer to the general information section of this manual for details on how to obtain this code.
4. **TAS**
 - a. **TAS Enable:** Select Disabled or Enabled. This function must be enabled for installation with TAS (NGT-9000+ or NGT-9000R+). When enabled the aural alert “Traffic, Traffic” is heard over the audio system when traffic advisory (TA) is first detected.
 - This feature requires a Mode S Identifier to be entered. If the Mode S Identifier is modified the diversity and TAS enable options, if currently enabled, will be disabled. See the maintenance section for details.
 - This feature requires a unlock code. Refer to the general information section of this manual for details on how to obtain this code.
 - b. **TAS Extended Callout Enable:** Select Disabled or Enabled. When enabled, the aural alert “Traffic, Traffic” is heard over the audio system when traffic advisory (TA) is first detected along with the following aural information: relative clock bearing (e.g. “12 O’clock”), relative altitude (“High” if $\geq$ to 50ft or “Low” if $\leq$ to -50ft or “Same Altitude” if $>$ -50ft and $<$ 50ft of own altitude), and range in nautical miles (slant range if TA is NAR or Flat range if TA is not NAR).
 - This feature requires “TAS Enable” to be enabled.

c. **TAS Directional Antenna Type:**

- This feature requires “TAS Enable” to be enabled.
- Select either NY164 (TAS) or NY156 (TCAS).

5. **Antenna Installation:** This setting is dependent on both the TAS enabled and diversity enabled settings. The options available change depending on current Diversity enabled and TAS enabled settings. Select the antenna installation using the following guidelines.

- When Diversity is enabled and TAS is disabled, then the only valid antenna selection is Bottom Omnidirectional/Top Omnidirectional.
- When Diversity is disabled and TAS is enabled, then antenna install may be either Bottom Omnidirectional/Top Directional or Bottom Omnidirectional/Bottom Direction.

Note - When changes are applied validation occurs and if a valid option is not selected then a warning message is shown. No changes are applied.

- **Broadcast Category:** This information provides an indication of the aircrafts size and performance capabilities. Emitter categories are defined below:

EMITTER CATEGORY	DESCRIPTION
Unknown	No aircraft type information. If no emitter category fits the installation, seek guidance from the FAA.
Light	Light (ICAO) < 15,500 lbs. This includes very light aircraft (light sport aircraft) that do not meet the requirements of 14 CFR 103.1.
Small	Small – 15,500 to 75,000 lbs.
Large	Large – 75,000 to 300,000 lbs.
High Vortex Large	High Vortex Large - 75,000 to 300,000 lbs. that has been determined to generate a high wake vortex. (e.g. B757).
Heavy	Heavy (ICAO) - > 300,000 lbs
High Performance	Highly Maneuverable > 5G acceleration and > TAS high speed.
Rotorcraft	Any rotorcraft regardless of weight.
Glider/Sailplane	Any Glider/Sailplane regardless of weight.
Lighter than Air	Any lighter than air (airship or balloon) regardless of weight.
Parachutist	Sky diver
Ultra Light	A vehicle that meets the requirements of 14 CFR 103.1. Light sport aircraft should not use the ultra light emitter category unless they meet 14 CFR 103.1.
UAV	Any unmanned aerial vehicle or unmanned aircraft system regardless of weight.
Space	Trans-atmospheric vehicle
Surface - Emergency	Emergency vehicle
Surface - Service	Service vehicle
Point Obstacle	Includes tethered balloons
Cluster Obstacle	Cluster Obstacle
Line Obstacle	Line Obstacle

6. **Pilot Entry of Flight ID:** Select Disabled or Enabled.
 - Selecting Enabled provides an entry box at start up.
7. **Aircraft length and Width Code:** Click on the Select button to open a code selection window.
 - Options for No data and from 49.2 up to 295.3 (feet).
8. **Max Airspeed (knots):** Enter the maximum allowable airspeed of the aircraft.
9. **GPS Antenna Offsets (ft).** (Width offset) The GPS antenna offset indicates the longitudinal distance between the nose of the aircraft and the GPS antenna and the lateral distance between the longitudinal center line of the aircraft and the GPS. See AC 20-165A, Appendix 1.
 - **GPS Antenna Offset Longitudinal (feet).** (Length offset) See GPS Antenna Offset Lateral (feet) above.
 - **GPS Antenna Offset Lateral (feet).** This is to provide the position offset of the GPS antenna from the ground.
10. **Normal Traffic Color:** Select Cyan or White (default). This selection is used for the panel mount version of the unit. External displays cannot be configured with this setting.
11. Click on the Apply button after all information is entered. This information is saved to the configuration module. Note – The apply button saves all configuration options from each of the pages.
12. Ensure the "Write to DCM succeeded. Write to NVM backup succeeded message" message is displayed in the lower communications bar.

3.7.2 I/O Options – AHRS and Altitude

From the Lynx MAT select Setup → Configuration → Modify → I/O Options → AHRS and Altitude. See Figure 3-12. Enter the information specific to the installation for the intended certification.


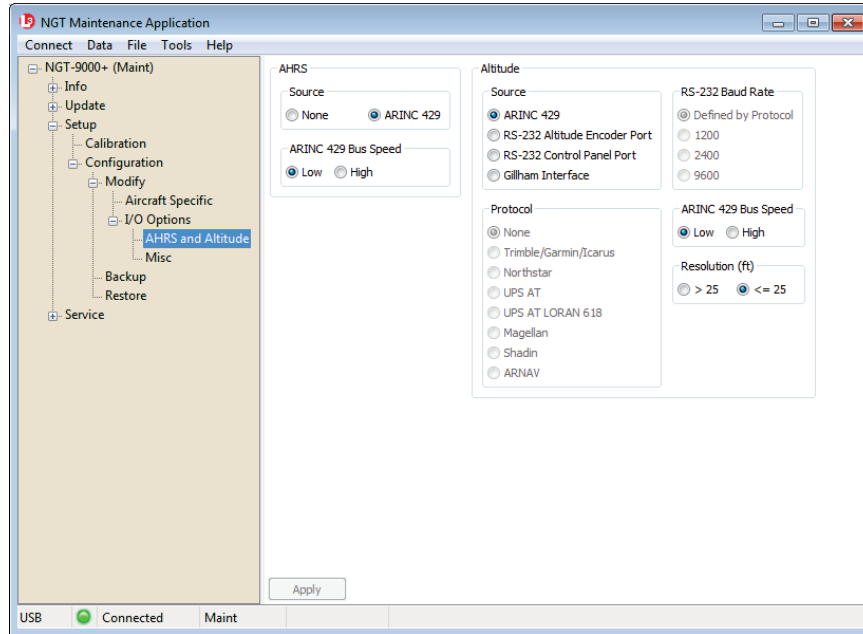


Figure 3-12: Lynx MAT – I/O Options – AHRS and Altitude


1. AHRS
 - a. **Source:** Select None or ARINC 429.
 - b. **ARINC 429 Bus Speed:** If the source selected is ARINC 429 select Low (12.0 to 14.5 Kbps) or High (100 kbps) bus speed.
2. Altitude
 - a. **Source:** Select from one of the following:
 - ARINC 429
 - RS-232 Altitude Encoder Port
 - RS-232 Control Panel Port
 - Gilham Interface
 - b. **Protocol:** These options are available only when the selected source is “RS-232 Altitude Encoder Port”.
 - c. **RS-232 Baud Rate:** These options are available only when the selected source is “RS-232 Altitude Encoder Port” or “RS-232 Control Panel Port”.
 - d. **ARINC 429 Bus Speed:** If the source selected is ARINC 429 select Low (12.0 to 14.5 Kbps) or High (100 kbps) bus speed.
 - e. **Resolution (ft):** Select >25 or <=25 based on the encoder increment rate.
3. Click on the Apply button after all information is entered. This information is saved to the configuration module.
4. Ensure the "Write to DCM succeeded. Write to NVM backup succeeded message" message is displayed in the lower communications bar.

3.7.3 I/O Options – Misc

From the Lynx MAT select Setup...Configuration → Modify → I/O Options → Misc. See Figure 3-13. Enter the information specific to the installation for the intended certification.

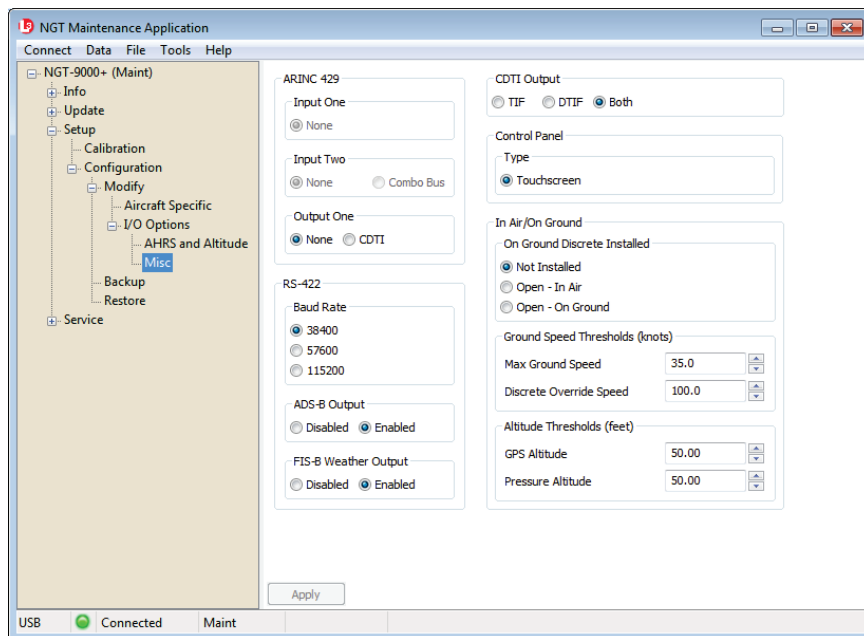

Panel Mount

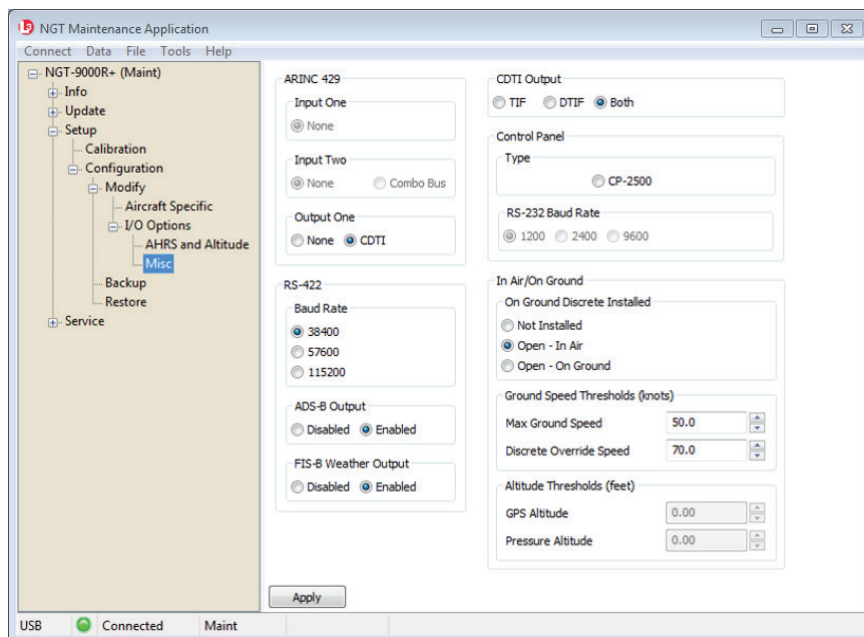

Remote Mount

Figure 3-13: Lynx MAT – I/O Options – Misc

1. ARINC 429: Set up the ARINC Input and Output bus using the following:
 - a. **Input One:** None.
 - b. **Input Two:** None.
 - c. **Output One:** Select either None or CDTI. Selecting CDTI sets the ARINC 429 Output to transmit traffic data from the unit to an approved traffic display.
2. RS-422: Set up the RS-422 interface as follows:
 - a. **Baud Rate:** Select a baud rate appropriate to the equipment connected via the RS-422 bus.
 - b. **ADS-B Output:** This option enables or disables output of traffic on the RS-422 output bus. Note: Must be enabled for RS-232 WiFi option.
 - c. **FIS-B Weather Output:** This option enables or disables output of weather on the RS-422 output bus. Note: Must be enabled for RS-232 WiFi option.
3. **CDTI Output:** This option enables or disables output of TIF or DTIF data to a CDTI ARINC 429 interface.
4. **Control Panel:** Only one choice is available.
 - Touch screen (panel mount).
 - CP-2500 (remote mount)

5. In Air / On Ground

The following options are setup based on the emitter category selected (aircraft type) and the In Air / On Ground selections.

- A fixed wing aircraft with a ground discrete installed requires the following options: “Max Ground Speed” and “Discrete Override Speed”.
 - A fixed wing without discrete requires the following options: “Max Ground Speed”, “GPS Altitude”, and “Pressure Altitude”.
 - A rotorcraft with discrete requires the following option: “Max Ground Speed”.
 - A rotorcraft without discrete requires the following options: “Max Ground Speed”, “GPS Altitude”, and “Pressure Altitude”.
- a. **On Ground Discrete Installed:** This is the WOW input, Discrete 3 input. See J1 Pin 29.
 - Not Installed
 - Open – Ground on Ground
 - Open – On Ground
 - b. **Ground Speed Thresholds (knots)**
 - **Max Ground Speed:** The valid range is 30 to 100. Typically 70% of Vs0. Must be less than or equal to the Discrete Override Speed.

This is the upper threshold speed which aircraft is considered on ground. Ground speeds below this level place the unit in the Ground state. Fields that become inhibited get set to zeros. As fields become uninhibited the values are reset to defaults.
 - **Discrete Override Speed:** Applicable only when On Ground Discrete installed and not a Rotorcraft. When applicable, the valid range is 30 to 100, typically 130% of Vs1, and must be greater than or equal to Max Ground Speed.

This is the lower threshold speed which aircraft is considered in air. Ground speeds above this level place the unit in the In Air state, overriding the discrete switch.

c. Altitude Thresholds (feet)

- **GPS Altitude:** The valid range is 0 to 500.

This value is used for fixed wing and rotorcraft installs that do not have an air/ground discrete. This is the lower limit threshold difference in GPS altitude after Power ON at which aircraft is considered in air. A change in GPS altitude above this level places the unit in the In Air state.

- **Pressure Altitude:** The valid range is 0 to 500.

This value is used for fixed wing and rotorcraft installs that do not have an air/ground discrete. This is the lower limit threshold difference in pressure altitude after Power ON at which aircraft is considered in air. A change in pressure altitude above this level places the unit in the In Air state.

6. Click on the Apply button after all information is entered. This information is saved to the configuration module.
7. Ensure the "Write to DCM succeeded. Write to NVM backup succeeded message" message is displayed in the lower communications bar.

3.7.4 Backup

1. From the Lynx MAT select Setup→ Configuration→ Backup.
 - When this screen is entered the MPC makes a backup copy of the configuration file, if it is not already loaded.
2. Click "Save" to copy the configuration information to a file on the MPC. See Figure 3-14.
 - If operation worked... status bar indicates: "Save of DCM succeeded"
 - If the DCM data is not loaded after the Save button is pressed a message is shown on the screen to indicate this. Instructions are given on how to attempt to get the data loaded. If MAINT mode cannot be entered, then cycle power to the unit and try again.
 - After saving these settings, the file acquired can then be used to restore an aircraft's configuration settings later. The restore command instructions are found in section 4.4.3 of this document.

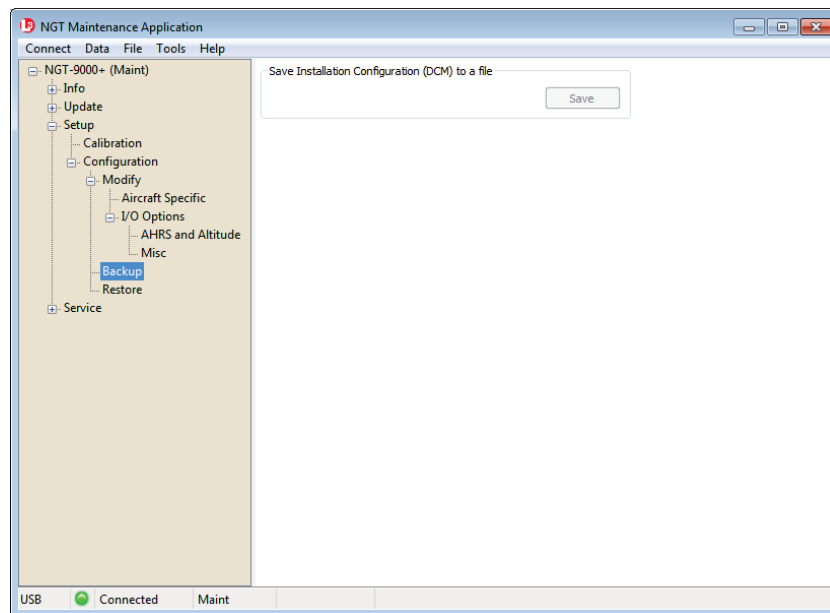


Figure 3-14: Lynx MAT – Configuration - Backup

3.8 CALIBRATION SETUP

This procedure is used to calibrate the unit and must be completed prior to performing the Installation Checkout for first time installations. The Log Sheet provided in Appendix C should be filled out during this procedure and maintained with the aircrafts permanent records.

These procedures assume the following:

- Power is being supplied to the aircraft and the unit.
- The Lynx MAT is active on the MPC.
- The MPC is connected to the unit via the USB or WiFi interface
- The MPC and unit are communicating.

3.8.1 Audio Calibration and Test

1. From the Lynx MAT select Setup→Calibration. See Figure 3-15.
2. Set the Audio Volume Level % and click on the Apply button.
3. Click “Test” to listen to the audio level selected.
4. Repeat step 2 and 3 until audio volume is set to the level desired.
 - The audio test may need evaluation with both low and high cockpit noise present.

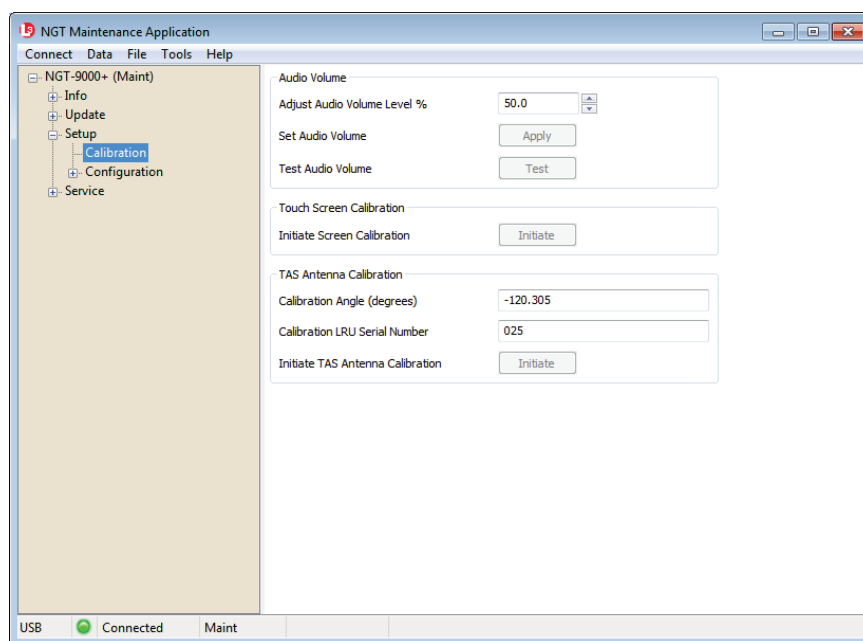


Figure 3-15: Lynx MAT – Setup - Calibration

3.8.2 Screen Calibration

When performing this calibration the user must be as accurate as possible. For best results a stylus is recommended.

1. From the Lynx MAT select Setup→Calibration.
2. Press the Initiate button within the “touch Screen Calibration” box on the Lynx MAT and observe that the maintenance screen on the unit is showing the calibration screen.
3. In the Calibration screen touch and release each target shown. (Four calibration targets and two verification targets). Each target must be touched within 15 seconds of the last touch or a Calibration Timeout message is shown. The unit returns to the main screen.

3.8.3 TAS Antenna Calibration

This calibration is available only if the Lynx NGT-9000 with TAS option is installed and the TAS option is selected in the aircraft specific options. If information is showing in the Calibration angle and LRU S/N fields then the calibration has already been accomplished.

1. From the Lynx MAT select Setup→Calibration.
2. Press the Initiate button within the TAS Antenna Calibration box to activate the “TAS Antenna Calibration” status dialog window.
 - A dialog window is shown stating “The request succeeded and the calibration will be performed on the next boot of operational software”.
3. Restart the unit by selecting Service → Restart Unit Mode in Operational Software Mode.
4. When the unit is calibrating in normal operation the message “Calibrating Antenna” is shown on the traffic application screen (right side).
 - If the calibration passes, the LRU serial number (obtained from the factory configuration) and calibration angle is written into the configuration module for subsequent use.
 - If calibration fails, then the message “Calibration Failed” is shown on the traffic application screen for a short duration. The system continues to try to calibrate the antenna once each boot until it is successful.

Refer to the troubleshooting information in the maintenance section if the TAS continues to fail. A TAS fail will also be shown on the message screen. The MSG button does not appear on the screen until after 2 minutes of the unit being in normal operation.

3.8.4 Clear Fault Log

It is recommended that the fault log be cleared after completion of installation and service.

1. Clear the fault log from the Lynx MAT by selecting Info → Fault Log See Figure 3-16.
2. Select Clear button.
3. Answer “Yes” to confirmation dialogs.
4. Cycle power to the unit.
5. The calibration and configuration setup is complete.

Index	Hobbs Time	Powerup Count	Date	Time	ID	Count	Threat
1	1237	97	05/28/14	13:14:30	0x00000036	1	28
2	1256	97	05/28/14	13:32:53	0x00004003	1	28
3	1256	97	05/28/14	13:32:56	0x00004803	1	28
4	1256	97	05/28/14	13:32:57	0x00000005	1	31
5	1256	97	05/28/14	13:32:57	0x00000001	1	31
6	1259	97	05/28/14	13:36:29	0x00002008	1	36
7	1259	97	05/28/14	13:36:32	0x00003003	1	36
8	1260	97	05/28/14	13:37:11	0x00003006	1	36
9	1260	97	05/28/14	13:37:11	0x00002004	1	28
10	1260	97	05/28/14	13:37:11	0x00002003	1	28
11	1332	97	05/28/14	14:49:52	0x00004003	2	28
12	1332	97	05/28/14	14:50:02	0x00004803	1	28
13	1364	98	05/28/14	15:23:00	0x00002008	1	36
14	1365	98	05/28/14	15:23:02	0x00003003	1	36
15	1365	98	05/28/14	15:23:43	0x00003006	1	36
16	1365	98	05/28/14	15:23:43	0x00002004	1	28
17	1365	98	05/28/14	15:23:43	0x00002003	1	28

Figure 3-16: Lynx MAT – Info – Fault Log

3.9 INTERFACE CHECK

Use this procedure to check input and output signals. These procedures assume the following:

- Power is being supplied to the aircraft and the unit.
- The Lynx MAT is active on the MPC.
- The MPC is connected to the unit via the USB interface
- After configuration options and calibration procedures where completed, power has been cycled to the unit.
- The MPC and unit are communicating and the Lynx MAT has been restarted the unit in Maintenance (no WiFi).

3.9.1 Live Data - Discrete Inputs, Altitude, and Heading

1. From the Lynx MAT select Service→Live Data→Discrete Inputs, Altitude, and Heading. An example of this page is shown in Figure 3-17.

- Review the information seen on the inputs page.
 - The True/False indication of the current state of the discrete (e.g. True for the squat on ground means that the aircraft is on ground. A false would mean that the aircraft was not on the ground, at least according to the discrete).
- Note – When the audio mute discrete is grounded it is considered active (i.e. muted). The Audio Mute Inactive indication shows “True” when this discrete is active (grounded).
- The Overall Discretes Validity is an indication of the remaining discrete states. A “True” indicating that these indications are valid. A “False” indication with red text indicates that the input is not being detected by the unit and a problem exists. If a problem is noted do the following.
 - Check the configuration setup options for correct settings.
 - Check the fault log (Info→Fault Log) for issues.
 - Check wiring or equipment.
 - Compare the altitude and heading values to an outside source.

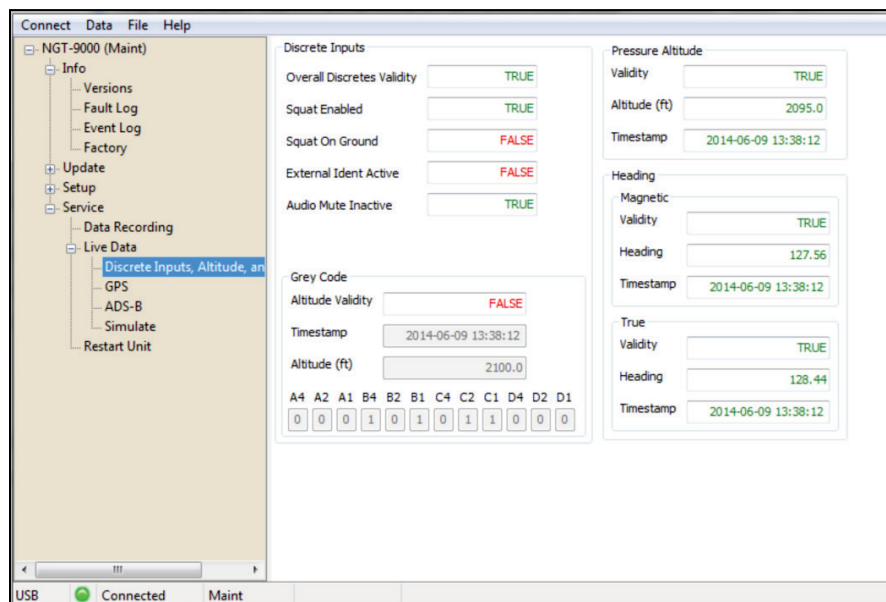


Figure 3-17: Lynx MAT – Live Data - Inputs

3.9.2 Live Data - GPS

1. From the Lynx MAT select Service→Live Data→GPS. An example of this page is shown in Figure 3-18.
2. Observe that the GPS data is being received.
3. If data is being received verify that the Day, Month, and Year data is correct.
 - Observe that the GPS data is being received and signal strength is within 30 to 50 db. Note – the Navigation State always shows “RAIM” even though the device is actually in WAAS mode.
4. If data is not being received do the following:
 - The GPS signal may be blocked; move the aircraft to an open environment or input a GPS signal using test equipment.
 - Check the fault log (Info→Fault Log) for issues.
 - Check wiring or GPS antenna for installation issues.

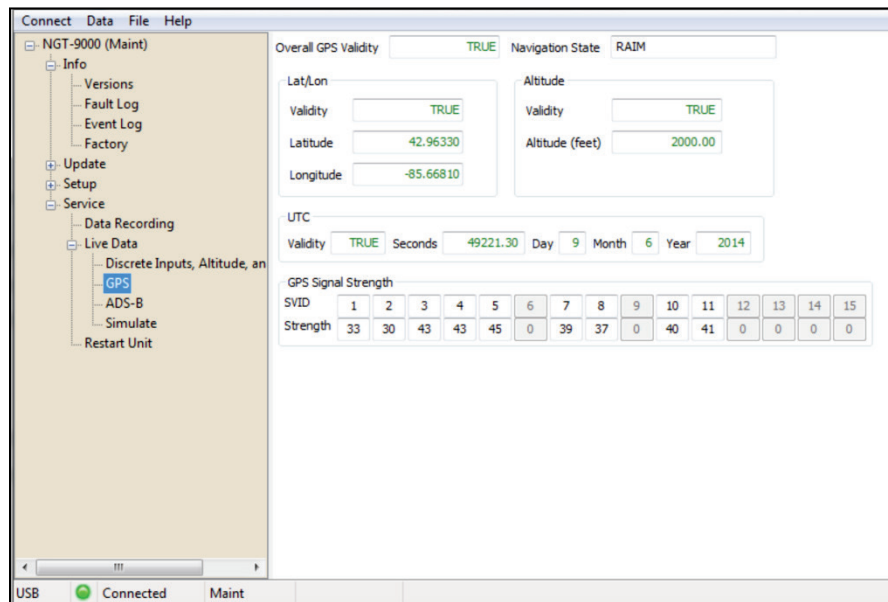


Figure 3-18: Lynx MAT – Live Data - GPS

3.9.3 Live Data – ADS-B

1. From the Lynx MAT select Service→Live Data→ADS-B. An example of this page is shown in Figure 3-19.
2. Observe that both data fields are showing a count tally of received messages (A zero is a valid number if the unit is not in range of a signal). If data is not being received do the following:
 - The signal may be blocked; move the aircraft to an open environment or input a signal using test equipment.
 - Check the fault log (Info→Fault Log) for issues.
3. Check wiring or antenna for installation issues.

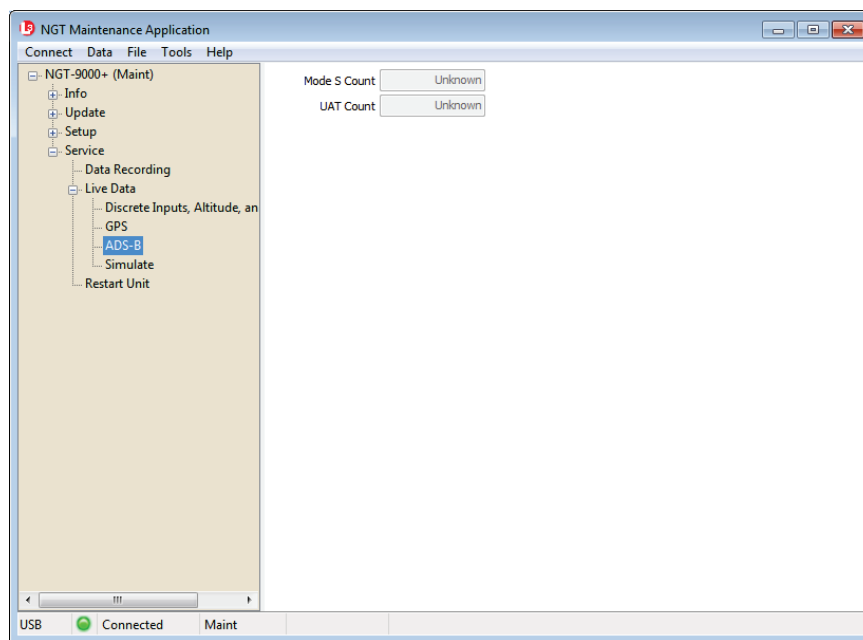


Figure 3-19: Lynx MAT – Live Data – ADS-B

3.9.4 Live Data – Simulate

1. From the Lynx MAT select Service→Live Data→Simulate. An example of this page is shown in Figure 3-20.
2. Check the following. Perform only the checks necessary for the installation.
 - Click either simulated “ground” or “open” (per the installation – typically ground activates the lamp) from the ADS-B Out inoperative to check the ADS-B Out Fail lamp is working correctly. Click “Not simulating” to remove simulated data.
 - Setup a cockpit audio signal. Click either simulated “ground” or “open” (per the installation – typically ground mutes the signal) from the Audio Mute Out to check the Audio Mute is working correctly. Click “Not simulating” to remove simulated data.
 - Click either simulated “ground” or “open” (per the installation– typically ground activates the lamp) from the Traffic Alert to check the Traffic Alert lamp is working correctly. Click “Not simulating” to remove simulated data.

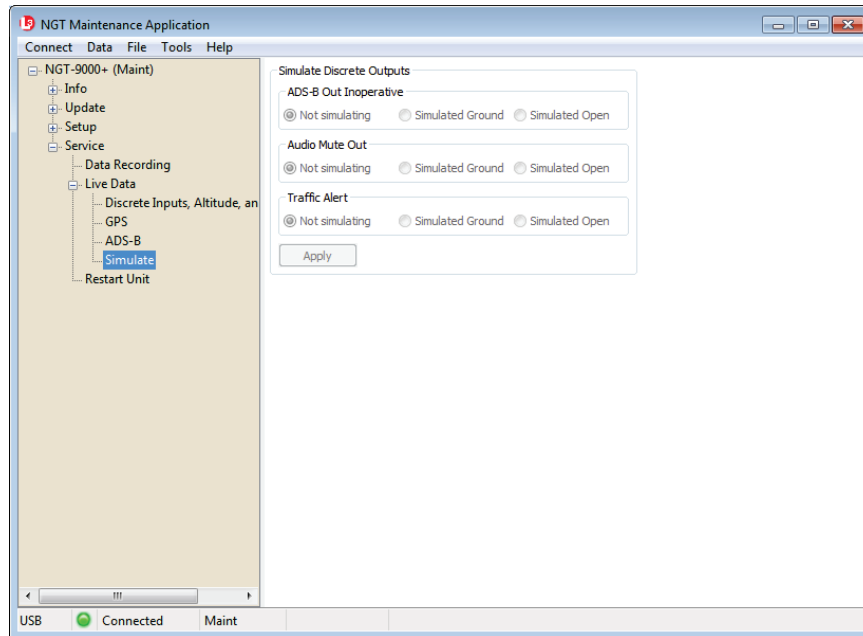


Figure 3-20: Lynx MAT – Live Data - Simulate

3.9.5 Configuration Check Complete

1. If needed, clear the fault log from the Lynx MAT by selecting Info → Fault Log and selecting the Clear button. See Figure 3-16.
2. Disconnect the MPC from the unit.
3. Cycle power to the unit.
4. Proceed to the Installation Checkout procedure paragraph 3.10.

3.10 INSTALLATION CHECKOUT

This procedure validates the installation, calibration, and configuration setup of the Lynx NGT-9000 and secondary equipment. Installers are advised to read through the entire procedure and ensure all the necessary tool, equipment, and data are available before performing the checkout.

Installations using the remote mount version of the NGT-9000 require a CP-2500 Control Panel and depending on the installation an approved display for checkout. Note that approved display may not operate exactly as stated in this checkout. Refer to the operating instructions for the display for details.

NOTE

When a procedure calls out to verify data on the Lynx NGT-9000 it is assumed that the remote mount is verifying this same data via the display.

Take the following into consideration prior to installation.

- Perform the installation checkout procedure with aircraft on ground.
- Perform only those checks that are applicable to the installation.
- To conserve aircraft battery power, it is recommended that the aircraft be connected to an external aircraft power source during installation and checkout.
- An IFR-6000 (or equivalent) Ramp Test Set is required. These checks assume familiarity with the set up and operation of the ramp test set.
- All test equipment shall be calibrated in accordance with the manufacturer's recommendations.
- If the ADS-B Out Fail lamp is installed it flashes ON/OFF while the unit is starting and GPS is initializing (acquiring signal).
- Make sure that power is cycled to the unit and that the unit is in normal operation.

3.10.1 Functional Checks

Use the following procedure to check that the Lynx NGT-9000 (the unit) and secondary equipment is operating properly.

3.10.1.1 WiFi Check

This check required only if the WiFi option is installed and requires a WiFi Serial Adapter (i.e. WiFi dongle) connected to the wiring harness. The PED requires an approved APP be installed.

NOTE

This check requires a valid signal (ADS-B In with TIS-B and/or FIS-B service).
It is also possible to use an IFR-6000 set up and simulate the information.

1. The PED, unit WiFi interface, and WiFi Dongle must be configured.
2. Verify that the PED is receiving data from the unit and that traffic and weather (if available) data is being displayed.

3.10.1.2 System Status Check

Use the following procedure to check equipment interfaces and operation of the panel mount Lynx NGT-9000. (This check is not required for the remote mount unit).

1. Cycle power to the unit.
 - Initialization and self-tests begin.
2. The splash screen is displayed in less than 5 seconds. See Figure 3-21.
 - The company name/Logo is shown on the left side and the product name on the right.

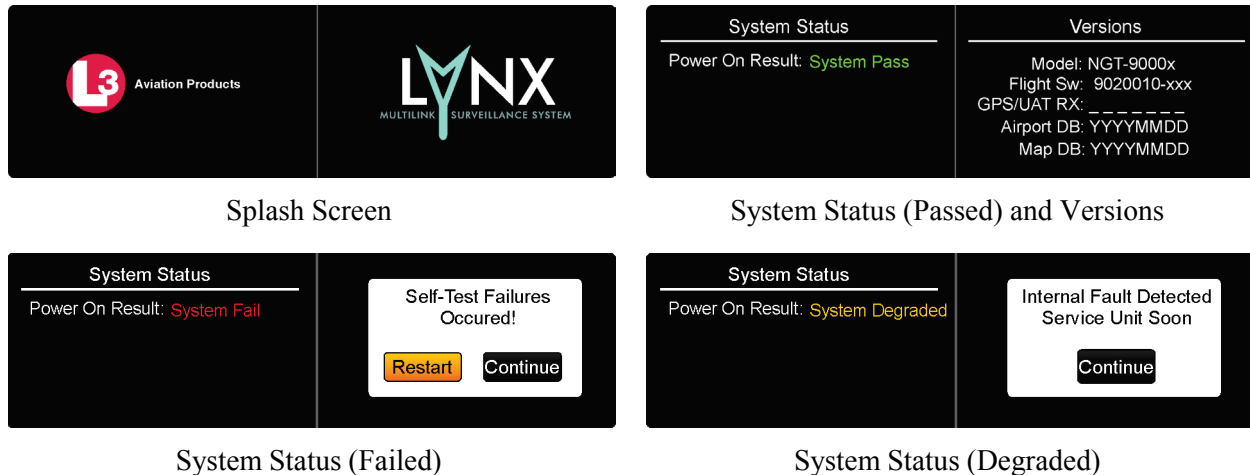


Figure 3-21: Examples of Start-up Screens

3. The System Status is shown on the left side in less than 20 seconds
 - If System Status is “System Pass”, then the Versions screen is shown on the right of the display. The version screen identifies software and database information currently loaded on the unit. Verify that the information is correct for this installation.
 - If System Status is “System Fail”, then the message “Self-Test Failures Occurred” is shown on the right side of the display. The option to restart the unit or to continue start up in a degraded mode is shown on the right side of the display. Press the Restart or Continue button to proceed.
 - If System Status is “System Degraded”, then the message “Internal Fault Detected Service Unit Soon” is shown on the right side of the display. Press the Continue button to proceed.
4. When normal operation begins the left screen shows the Transponder Application screen and the right screen shows the Traffic screen. See Figure 3-22.

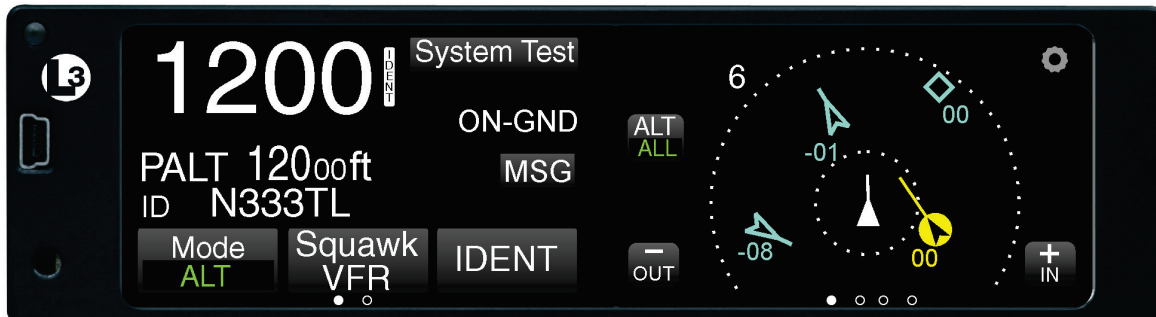


Figure 3-22: Example of Normal Operation

- If configured the Flight ID Screen is shown before the normal operation screen is shown See Figure 3-23.

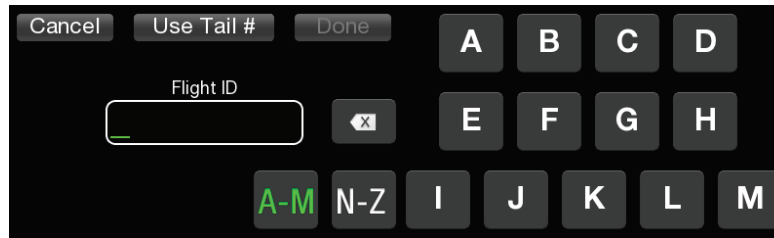


Figure 3-23: Example of Flight ID Input Screen

5. Press the System Test button located on the left screen. See Figure 3-24. The system test is used to check the operation of external data inputs.
6. During the System Test the user functions are disabled and the right screen shows a preset traffic display with the message “Self Test In Progress” at the top of the screen. See Figure 3-24. The left screen shows the test results of the functional areas indicated and not specific test failures.

NOTE

Functions that are not part of the installation are not shown.



Figure 3-24: Example of System Test Results

7. The unit returns to normal operation if no failures are detected and a “System Test Pass” message is heard through the aircraft audio system.
 - If a “Fail” or External Fail” is shown for any of the system functions, then the message “Self-Test Failure” is shown on the right side of the display (and is heard through the aircraft audio system) as well as the option to restart the unit or to continue start up in a degraded mode. Press the “Restart” button and perform the System Test again. If the failures continue press the “Continue” button to proceed.
 - If “Degraded” is shown for any of the system functions, then the message “Service Unit Soon” is shown on the right side of the display (and is heard through the aircraft audio system). Press Continue screen button to proceed.

8. Correct failures before going any further with the functional check.
 - A “Fail” indicates an internal unit error. Refer to the fault isolation information provided in the maintenance manual for detailed information.
 - An “External Fail” indicates an external signal loss. Check antenna and data source signals and connections. Refer to the fault isolation information provided in the maintenance manual for detailed information.
 - Press the “MSG” button located on the Transponder Application screen to view fail messages. A No TIS-B Coverage Indicator, located on the traffic screen next to the zoom out button, may be seen due to the unit being out of range of a ground station. This is normal and the checks may proceed.
 - If the problem is persistent it may be necessary to connect the MPC and use the Lynx MAT to view live data, see paragraph 3.9 for details.

3.10.1.3 Options Screen

Use the following procedure to check the operation of the panel mount Lynx NGT-9000. (This check is not required for the remote mount unit).

1. Press the gear shaped “Options” button located at the top right of the traffic screen. See Figure 3-25.
2. Press the Done button when the checks below are complete.

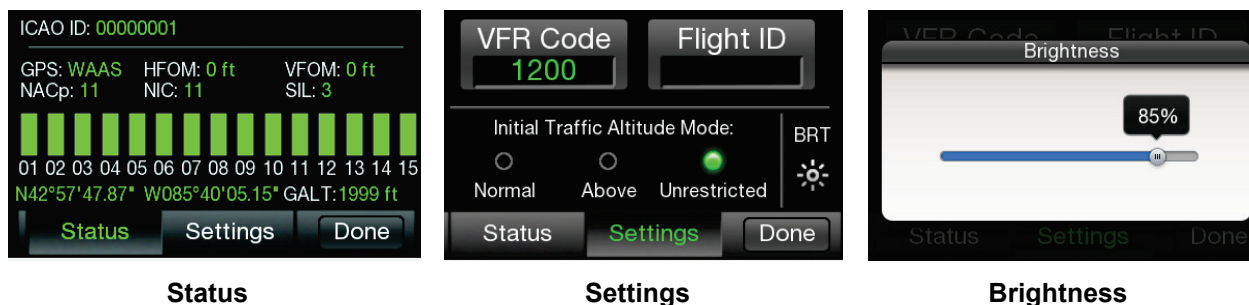


Figure 3-25: Options Screen...

3.10.1.3.1 GPS Operation Check

1. Press the Status button to open the GPS Status screen.
2. Verify that GPS information is being displayed and that the “GPS” operating mode is “WAAS”. If the information is missing perform the following:
 - The unit may not be able to establish communication with a satellite due to an obstruction of the GPS reception. Either move the aircraft to an area with better GPS reception or use a GPS Simulator to generate the necessary signal.
 - If the GPS reception continues to be a problem, check the GPS antenna installation.
3. Verify that the GPS position agrees with a known reference point.
4. Verify that the signal bars are showing at least 40 -50% in the GPS Receiver Information Packet for all the GPS/SBAS satellites in view.
5. Power ON other avionics and verify that the signal bars are showing at least 40 -50% in the GPS Receiver Information Packet for the satellites do not degrade significantly and position remains steady.
6. Power ON VHF Com radios (if applicable also power ON the SATCOM System). Verify that the signal bars are showing at least 40 -50% in the GPS Receiver Information Packet for the satellites do not degrade significantly and position remains steady.

7. If the aircraft is TAS/TCAS equipped, turn on the TAS/TCAS system and verify that the signal bars are showing at least 40 -50% in the GPS Receiver Information Packet for the satellites do not degrade significantly and position remains steady.
8. Any GPS interference (significant degrade in signal strength) must be resolved prior to completing the installation. Use the troubleshooting procedures in the maintenance section for help.

3.10.1.3.2 Initial Traffic Altitude Mode

1. Press the Settings button.
2. Verify that unrestricted traffic Altitude Mode annunciator is green. Change the setting if needed by pressing the indicator near the unrestricted text to select. Note - This is how the pilot selects the default traffic altitude filter mode.

3.10.1.3.3 Set Display Brightness

1. Press the BRT button located on the right side of the screen to open the brightness scale bar.
2. Press and slide the scale button to adjust the Display Brightness Trim to the desired percentage.
3. The brightness screen times out after a few moments returning to the settings screen.

NOTE

This dimming setting only affects the NGT-9000 display brightness.
Optional lamps (if installed) required external dimming control.

3.10.1.4 Status Lamp Check

Verify the following status lamps functioning properly (if installed) during the checkout.

- TAS Alert
 - ADS-B Out Fail
1. If a lamp dimming switch was installed, verify all lamps are illuminated full bright when BRT is selected.
 2. Verify all lamps are illuminated at the desired dimming level when DIM is selected.
 3. TAS Alert – This lamp is ON when a TA (Traffic Advisory) is detected by the TAS system. Verify the operation of this lamp when performing tests for the TAS system.
 4. ADS-B Out Fail – This amber lamp does the following depending on the situation:
 - Flashes at a slow rate (1 sec On and 1 sec Off) while the GPS is initializing. Check by cycling power to the unit. Lamp continues flashing until GPS position is acquired.
 - The lamp is ON when the ADS B has failed, GPS has failed or if installed, the lamp self test is active.

3.10.1.5 Discrete Switch Checks

Verify the following external switches are functioning properly (if installed). Note: The MPC can be used to validate the inputs for the external checks. See paragraph 3.9 for details.

1. If installed verify that the Audio Mute switch inhibits audio messages sent by the unit.
2. Verify that the IDENT Input switch causes the unit transponder to transmit the "ident" flag in transponder interrogation replies. This check may be skipped if verified during the configuration setup procedure.
3. The On-Ground switch function is verified by the operation of the System Test button is available on the Transponder Application screen and the ON-GND message located on the transponder screen.

3.10.1.6 Alternate Display Check

The Lynx NGT-900 may be interfaced to a compatible traffic display (ARINC 429 or RS-422) and weather display (RS-422). The instructions provided in this manual are generic. Refer to the manufacturers display manual for operation and checkout procedures.

- A functional check with the Lynx NGT-9000 is accomplished during the check of the ADS-B In, TIS-B, FIS-B and any other checks requiring the use of the alternate display.

3.10.1.7 CP-2500 Control Panel Check

The check out of the CP-2500 Control Panel is accomplished using the instructions found in the CP-2500 Installation Manual. Refer to the References information in the front section for details.

3.10.2 Ground Checks

Perform only those checks that are applicable to the installation. An IFR-6000 (or equivalent) Ramp Test Set is required.

NOTES

1. These checks assume familiarity with the set up and operation of the ramp test set.
2. All test equipment used in completing these tests shall be calibrated in accordance with the manufacturer's recommendations.

3.10.2.1 Ground Test Mode

Placing the unit in the Ground Test Mode does the following:

- Simulation of heading or track (pointing the traffic on the screen in the correct orientation).
- Sets the unit to “In-Air” status allowing Mode C (altitude) output and additional ADS-B output messages (sent at a higher rate).
 - In-Air status also allows Mode A (i.e. squawk code). While on-ground, both Mode A, all calls, and mode C replies are inhibited.
 - This allows the IFR-6000 to test the encoding altimeter input (mode C).

These procedures assume the following:

- Power is being supplied to the aircraft and the unit.
 - The Lynx MAT is active on the MPC.
 - The MPC is connected to the unit via the USB interface
 - The MPC and unit are communicating. From the Lynx MAT panel select Connect→NGT9000→USB. This is required each time power is cycled.
1. From the Lynx MAT panel select Service→Restart Unit in Ground Test. See Figure 3-26.

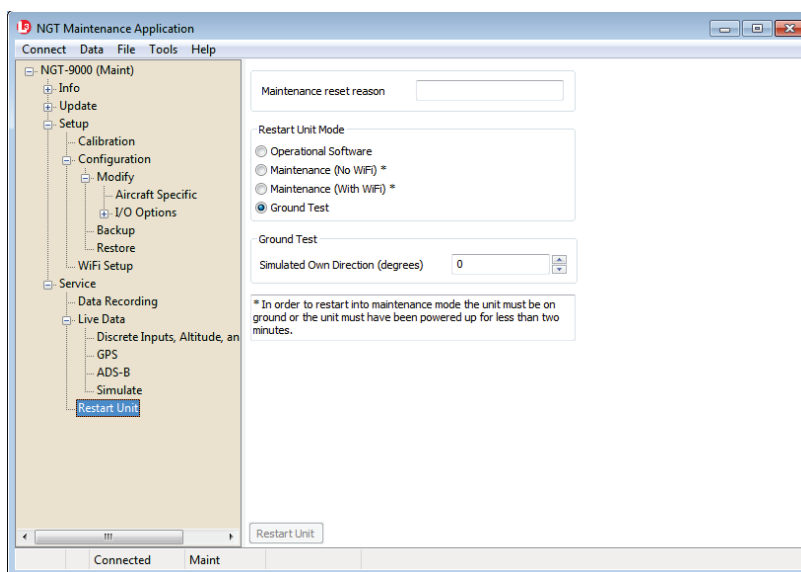


Figure 3-26: Lynx MAT – Ground Test

2. If heading is not being input to the Lynx NGT-9000, then select Ground Test and enter a Simulated Own Direction (0 – 359 deg.). The own direction is the current **true heading** of the aircraft. A unit with a heading input can ignore this step. (Note – A heading input will overwrite a simulated heading).

NOTES

1. When entering heading information into the IFR-6000 UUT HDG entry field make sure to enter either the same simulated heading as was entered into the Lynx MAT own direction field or the actual aircraft heading (true heading) as appropriate.
 2. Determine true heading by adding and East Variation to the aircraft current magnetic heading or subtracting the West Variation to the aircraft current magnetic heading (e.g. airport KGRR has a 04W variation so with a magnetic heading of 290 the true heading would be 286). Go to AirNav.com and type in the airport location to find the variation for that area.
3. Click on the Restart Unit button.
 4. The unit starts up in normal operation, but an amber “Ground Test” message is shown below the options button on the right side of the display.
 - Cycling power at anytime takes the unit out of Ground Test Mode. (Note: Ground Test Mode is automatically, without cycling power, exited if aircraft flight is detected.)
 5. Continue with the checkout procedures below.

3.10.2.2 Altitude Check

1. Perform the altitude check per 14 CFR Part 91.411 and 14 CFR Part 43 Appendix E & F.
2. Verify that the displayed altitudes of the panel mount Lynx NGT-9000 or alternate display or CP-2500 and the primary display (PFD) or equivalent instrument are within the required range shown below (per the installation):
 - Gilham Code altitude source the range is +/- 100 ft.
 - Other altitude source the range is +/- 25 ft.

3.10.2.3 Transponder Output Check (In Air)

Verify that the Transponder test performed by the test set is successful and that the test set is receiving the correct transponder information (i.e. Mode S Identifier, Flight ID, etc). This check requires an IFR-6000 (or equivalent) Ramp Test Set and the Lynx MAT. The Transponder check while in ground test mode will load the ICAO address automatically into the IFR-6000.

1. Set NGT-9000 to **Ground Test mode** (in air) (see para. 3.10.2.1) using Lynx MAT.
2. Enter the XPDR setup page of the IFR-6000 and ensure that the antenna/cable loss setup is correct.
3. Run the Generic Mode S test and verify “PASS” (in air).
 - The IFR-6000 must be located in the nominal position or the power/frequency test may fail.

3.10.2.4 ADS-B In Check

Before performing this check ensure that the GPS position on the NGT-9000 is acquired, and that the NGT-9000 is in **Ground Test mode** (in air). If installed, the ADS-B Out Fail lamp is OFF and the display/PED/CP-2500 is showing standby mode. Perform the ADS-B In check using an IFR-6000 (or equivalent) Ramp Test Set using the latest ADS-B update.

- Perform the ADS-B In check using an IFR-6000 (or equivalent) Ramp Test Set using the latest ADS-B update.
 - The test set simulates ADS-B intruders by manually defining a position over the earth. Intruding flight parameters are programmed from the IFR-6000 screen.
 - If the WiFi option is installed, per the below configuration, a WiFi Serial Adapter connected to the wiring harness. The PED requires a compatible APP be installed. The PED and Lynx NGT 90000 WiFi interface must be configured. Refer to paragraph 3.3.
1. From the ADS-B/GICB/UAT screen on the IFR-6000, select UAT, then GPS Status, and allow the unit to acquire a GPS position (GPS SYNC).
 2. Verify 978 MHz ADS-B In traffic information is being displayed on the unit/display/PED with that being transmitted by the test set.
 - a. From the ADS-B/GICB/UAT, select UAT main, then UAT GEN, then ADS-B.
 - Ensure targets are defined and UUT heading is equal to aircraft **true heading**.
 - Ensure that IFR-6000 ALT is equal to the current pressure ALT shown on the Lynx NGT-9000 or CP-2500.
 - Ensure UUT LAT and UUT LON match aircraft's present position (use GPS Status Screen on the panel mount Lynx NGT-9000).
 - Select Run Test.
 - b. Observe that targets on the IFR-6000 are showing in the correct location on the display (s).
 3. Verify 978 MHz TIS-B In traffic information is being displayed on the unit/display/PED with that being transmitted by the test set.
 - a. Using the IFR-6000, from the UAT GEN LIST, Select TIS-B. (This is from the ADS-B/GICB/UAT main screen).
 - Ensure targets are defined and UUT heading is equal to aircraft **true heading**.
 - Ensure that IFR-6000 ALT is equal to the current pressure ALT shown on the Lynx NGT-9000 or CP-2500.
 - Ensure UUT LAT and UUT LON match aircraft's present position (use GPS Status Screen on the panel mount Lynx NGT-9000).
 - Ensure TIS-B SITE ID is set to 1 (or any number between 1 and 15).
 - Select Run Test
 - b. Observe that targets are showing in the correct location on the display (s). A difference of 100ft between the test set data and the displayed information is acceptable.

4. Verify 1090 MHz ADS-B In traffic information is being displayed on the unit/display/PED with that being transmitted by the test set.
 - a. Using the IFR-6000, from the UAT GEN LIST, Select ADS-B GEN. (This is from the ADS-B/GICB/UAT main screen).
 - b. Enable at least item 1 - Airborne Position and item 4 - Airborne Velocity making sure the NACv is set to a valid number (1 or greater).
 - Enabling Item #3 - Ident & Cat makes it easy to determine that the target you have defined is the one being displayed, especially if using a PED to double check.
 - Ensure targets are defined and UUT heading is equal to aircraft **true heading**.
 - c. Observe that targets are showing in the correct location on the display (s).

3.10.2.5 FIS-B Uplink Check

Before performing this check ensure the following:

- GPS position is acquired
 - The Lynx NGT-9000 is in **Ground Test mode** (in air)
 - If installed the ADS-B Out Fail lamp is OFF
 - If installed weather display/PED is in ON operational mode
 - If installed the CP-2500 mode is in ALT
1. Perform the FIS-B check using the IFR-6000 (or equivalent) Ramp Test Set. The test set simulates FIS-B ground base uplink (such as a METAR).
 2. Set the unit to each of the FIS-B screens listed below and verify that information (such as a METAR). is being displayed.
 - FIS-B Graphic Application screen (requires an ADS-B ground station in range)
 - FIS-B Graphic Winds and Temp (requires an ADS-B ground station in range)
 - FIS-B Text data

3.10.2.6 TAS Traffic Check

Test required only for models with TAS. The TAS antenna calibration needs to be completed prior to this test.

Before performing this check, ensure that the NGT-9000 is in **Ground Test mode** (in air).

1. Perform the TAS check using the IFR-6000 (or equivalent) Ramp Test Set. The test set simulates TAS intruders by manually defining a scenario and can then verify the correct Traffic Advisories have occurred on the unit. Intruding flight patterns are programmed from the IFR-6000 screen.
2. Verify that Traffic information displayed on the unit or alternate display/PED with that being transmitted by the test set.
3. Compare and verify the heading data transmitted by the test set is being displayed correctly on the unit or alternate display/PED.
4. Verify audio alerts are being heard through the audio system. Adjustment of the audio volume may be required. Refer to the configuration setup for instructions.

3.10.2.7 Transponder Output Check (On Ground)

Verify that the Transponder test performed by the test set is successful and that the test set is receiving the correct transponder information (i.e. Mode S Identifier, Flight ID, etc). This check requires an IFR-6000 (or equivalent) Ramp Test Set and the Lynx MAT.

1. Set the Lynx NGT-9000 to **Normal Mode** (on ground) using the Lynx MAT (restart unit in operational software mode) or cycling power to the Lynx NGT-9000.
2. Enter the XPDR setup page of the IFR-6000 and ensure that the antenna/cable loss setup is correct.
3. Run Generic Mode S test using the IFR-6000. Verify that a “PASS” is shown at the top of the IFR-6000 on-ground results page.
 - It may be necessary (if the Transponder Output Check (On Ground) portion of this checkout was not completed) to manually enter the aircraft’s ICAO code in the XPDR setup page of the IFR-6000 when the Lynx NGT-9000 is in normal mode (on ground).

3.10.2.8 ADS-B Out Check

Before performing this check ensure that the GPS position on the Lynx NGT-9000 is acquired. If installed the ADS-B Out Fail lamp is OFF, and the external display/PED/CP-2500 is set to ALT (if installed).

1. Set Lynx NGT-9000 to **Normal Mode** (on ground) using the Lynx MAT (restart unit in operational software mode) or cycling power to the Lynx NGT-9000.
2. From the ADS-B/GICB/UAT main screen on the IFR-6000, select ADS-B MON.
 - It may be necessary to ensure correct AA (Aircraft ICAO Address) in HEX and OCTAL is entered into the IFR-6000 set-up screen.
3. Verify that the ADS-B Out test performed by the test set is successful.

3.10.3 Electromagnetic Interference (E.M.I.) Check

Check the following applicable aircraft systems, as well as any other system or device that is not listed, for interference. Initial tests are to be conducted with the aircraft operating on external ground power. Disregard any system or device that does not apply.

NOTE

The Electromagnetic Interference Check is required only for initial system installations and not required if the unit is removed or replaced.

1. Communications

a. Cockpit Intercom

Using the cockpit intercom, verify interference free communications between the crew while monitoring the effects of the unit.

b. VHF Communications

Set VHF communications radios to multiple frequencies and monitor effects of unit while transmitting and receiving. At a minimum, the frequencies listed below should be tested, in addition to locally available frequencies:

Check the GPS signal status of the each satellite being received does not drop while transmitting each frequency for a period of 35 seconds. Degradation of individual received satellite signals below a point where navigation is no longer possible is not acceptable and will require that additional isolation measures be taken.

For installations on rotorcraft, ensure that the rotor blades do not interfere with the received GPS signals. This problem has been experienced in some rotorcraft and varies with the rotation rate.

Test the following frequencies for 25 kHz COM channel spacing:

121.150 MHz	121.200 MHz	121.250 MHz	131.225 MHz	131.275 MHz	131.325 MHz
121.175 MHz	121.225 MHz	131.200 MHz	131.250 MHz	131.300 MHz	131.350 MHz

In addition test the following frequencies for VHF radios with 8.33 kHz channel spacing:

121.185 MHz	121.190 MHz	130.285 MHz	131.290 MHz
-------------	-------------	-------------	-------------

c. SATCOM Communications

If aircraft is equipped with a SATCOM system, operate the SATCOM equipment while monitoring the GPS Satellite Status Page. Verify GPS position remains valid.

2. Navigation

a. VOR / ILS

Verify the operation of each VHF Nav receiver in both VOR and ILS modes (including glideslope) while monitoring the effects of the unit.

b. DME

Verify the operation of each DME while monitoring the effects of the unit. The same frequencies used for VOR and ILS testing may be used for this test.

c. Marker Beacon

Verify the operation of the Marker Beacon Receiver while monitoring the effects of the unit.

d. ADF

Verify the operation of the ADF receiver while monitoring the effects of the unit. Frequencies from each band should be tested when possible. Public broadcast stations are acceptable for conducting test.

3. Flight Director / Autopilot

Operate the flight director/autopilot system and verify it responds to commands from the flight guidance panel while monitoring the effects of the unit.

4. Compass System

Verify each compass system is presenting correct information while monitoring the effects of the unit.

5. Attitude System

Verify each attitude system is presenting correct information while monitoring the effects of the unit.

6. Safety Equipment

a. TAWS (If Installed)

Verify the function of the TAWS and Terrain Display while monitoring the effects of the unit.

b. Weather Monitoring System (If Installed)

Verify the function of the weather monitoring system while monitoring the effects of the unit.

3.10.4 Panel Mount Lynx NGT-9000 Display Check

1. Position the aircraft outside with an unobstructed view of the sky. Apply power to the unit and supporting equipment.
2. Verify that system status has passed.
3. Verify that there are no new system messages, indicated by a blinking MSG button.
4. Verify that the Transponder Application (left screen) and the Traffic Application (right screen) are providing data. Note – The data may be degraded until the GPS has acquired a position fix.

3.10.5 Flight Test

It is recommended that a flight test be conducted after installation to verify proper operation of the Lynx NGT-9000 system per the AML STC.

3.10.6 Installation Checkout Complete

This completes the Checkout procedure.

Section 4 Maintenance

4.1 INTRODUCTION

This chapter contains general flightline maintenance and fault isolation procedures. Fault isolation is intended to aid in identifying and correcting invalidities or isolating failures to a defective assembly.

4.2 CONTINUED AIRWORTHINESS

Regular maintenance of the Lynx NGT-9000 is not required except as included in this section and is to be maintained on a “Condition Monitored” basis. Condition monitoring is based upon the following:

- Visual observation by the user.
- All units have unlimited service life, where service life is defined as that point in time when repair is no longer economical.

The unit is subject to the following requirements:

- Title 14 CFR Part 91.411 (Altimeter)
- Title 14 CFR Part 91.413 (Transponder)
- Title 14 CFR Part 43 Appendix E & F

The Directional Antennas (NY156 or NY164) do not require scheduled maintenance or scheduled overhaul and shall be maintained on a “Condition Monitored” basis.

4.3 PERIODIC MAINTENANCE

Perform the following at regular aircraft inspection intervals:

- Visually inspect for signs of corrosion.
- Visually Inspect for condition of wiring, shield terminations for proper grounding, routing, and attachment/clamping.
- Visually inspect the unit mounting to the aircraft, verify visually that the screw heads are in full contact with the mounting holes etc. Re-torque the screws if required.
- Panel Mount Lynx NGT-9000 only. Check the display for cleanliness. The bezel, ambient light sensor, and display glass can be cleaned with a damp lint-free, static-free cloth. If necessary, clean with a soft cloth moistened with a mild solution of soap and water. Care should be taken to avoid scratching the surface of the display or getting water inside the USB maintenance port. Do not spray cleaner directly on the screen.
- If the touch screen does not respond to a tap in the right location perform the screen calibration in paragraph 4.3.1.
- It is recommended that an electrical bond check be performed between the unit and nearby exposed portion of the aircraft metallic structure and verify that the measured value is less than or equal to 2.5 milliohms.

In the event of bonding check failure, remove the unit and clean it and its mounting holes at both the unit and the aircraft structure and reattach the unit. Re-verify the resistance between the unit and nearby exposed portion of aircraft metallic structure, and ensure it is less than or equal to 2.5 milliohms.

4.3.1 Screen Calibration

Use this procedure to calibrate the panel mount Lynx NGT-9000 touch screen for more accurate display control. When performing this calibration the user must be as accurate as possible. For best results a stylus is recommended. This procedure can also be accomplished using the MPC and Lynx MAT. Refer to procedure in Calibration and Test in the installation checkout section. Note: If the screen is severely out of calibration, this procedure will not work and the screen calibration procedure in the Lynx MAT will need to be performed.

1. Apply power to the unit using applicable essential or emergency electrical buses.
 - Initialization and self-tests begin.
2. The splash screen is displayed in less than 5 seconds.
3. With the splash screen showing press and hold (continue holding when the status and version screens are showing) in the lower left corner of the screen (see red target below) until the Activate Maintenance Mode window is shown on the right screen. See Figure 4-1.



Figure 4-1: Activate Maintenance Mode Window

4. Tap the Yes button to restart the unit in Maintenance Mode. Note - Tapping the No screen button or 10 seconds of inactivity starts normal operation mode.
5. The Maintenance Mode windows are shown in Figure 4-2.



Figure 4-2: Maintenance Mode Screens

6. Tap the Screen Calibration text.
7. In the Calibration screen touch and release each target shown. (Four calibration targets and two verification targets). This must be completed within 15 seconds for each touch or the Calibration Timeout message is shown. The unit returns to the main screen.
8. If normal operation is desired cycle power to the unit or tap the Reboot text on the main screen followed by tapping the Main App > text to perform a warm startup.
9. When in normal operation check that the touch screen accuracy has improved. If the accuracy has not improved, try the calibration procedure again. If the issue continues contact L-3 Avionics Systems Field Service for help in resolving the issue prior to removing the unit for repair.

4.3.2 Directional Antenna (NY156 and NY164)

CAUTION

Do not paint the antennas. Do not use cleaning solvents on the antennas.

- Check for dents, cracks, and punctures.
- Remove all dirt and grease from surface areas. Clean with a soft cloth moistened with mild soap and water.
- Visually inspect sealant around the antenna base. Reapply sealant if required.

4.4 FAULT ISOLATION

Use the following information for initial installations and debugging issues that may appear during operation.

For the panel mount Lynx NGT-9000 use Table 4-1 to view observed failures or conditions and possible cause and corrective actions. The symptoms listed are for all the possible equipment installations. It is up to the user to identify their particular installation.

For the panel mount Lynx NGT-9000 use Table 4-3 to review system status messages that may be seen on the screen during start up or when the system test button is pressed.

For the remote mount Lynx NGT-9000 use Table 4-2 to view observed failures or conditions and possible cause and corrective actions. The symptoms listed are for all the possible equipment installations. It is up to the user to identify their particular installation. Failures are typically observed via messages displayed on the CP-2500 Control Panel or indicator lamps (ADS-B Fail) or display screens depending on the particular installation.

NOTE

The information listed in the Symptoms column encompass all the possible issues that a technician may observe, but only some of the items may actually be seen depending on model options and secondary equipment being used.

A MPC connected to the USB port of the Lynx NGT-9000 is essential in troubleshooting. Refer to paragraph 4.5.3.2 (list of fault log messages) and Table 4-4 for instructions on viewing fault logs and using the service functions of the Lynx MAT. The information provided here should be in conjunction with the information provided in Table 4-1 and Table 4-3.

It should be noted that the ADS-B Out Fail Lamp will be ON when the unit is in maintenance mode (via the Lynx MAT).

If the only corrective action left is to contact L 3 Field Service, then L 3 Field service personnel may request that a file be created using the MPC that would provide them with information on the unit (i.e. version, faults, and configuration). Create this file by going to the File menu of the Lynx MAT, selecting Save, and placing the file in a location that can be easily located for transfer to L 3 Field Service.

Lynx NGT-9000 Installation Manual

Table 4-1: Troubleshooting The Panel Mount Lynx NGT-9000

SYMPTOM	SCREEN	CAUSE/CORRECTIVE ACTIONS
- Blank display. - ADS-B Fail lamp is OFF.	All	Loss of power or damaged unit. 1. Check power connections, breakers, and main avionics switch. 2. Verify Battery (BAT) Master switch is on. 3. Check the Lynx MAT fault log. 4. Contact L-3 Field Service before removal of unit.
The unit has manual brightness adjustment only. Note: it may take several seconds for the display to fully dim after covering the ambient light sensor. This is normal operation.	All	Loss of light sensor data. 1. Try clearing the failure by restarting the unit by tapping the Restart button. 2. Check System Status Messages. 3. Check the Lynx MAT fault log. 4. Contact L-3 Field Service before removal of unit.
When touching the screen the command function seems to be slightly off from the center of the screen symbol or area.	All	The screen calibration is out of tolerance. 1. Perform the Screen Calibration has described in paragraph 4.3.1. 2. Contact L-3 Field Service before removal of unit.
Internal fan is always active. MSG button on screen.	N/A	Loss of temperature sensor data. The message seen is "Unit Over Temp Service Soon". 1. Try clearing the failure by restarting the unit by tapping the Restart button. 2. If in maintenance mode the fan remains active. This is normal. 3. Check System Status Messages. 4. Check the Lynx MAT fault log. 5. Contact L-3 Field Service before removal of unit.
Message page contains messages that do not indicate a functional failure on the system status page.	N/A	The following internal tests do not create a fail message in the system status page. • Configuration Module Test • Configuration Module Configuration Validity • Mutual Suppression Bus Self-Test • Over-Temperature Monitor (in air) • Power Fail Monitor Although no immediate loss of function is occurring, an undesired condition is taking place. At the earliest convenience, perform the following action: 1. Try clearing the failure by restarting the unit by tapping the Restart button (or cycling power). 2. Contact L-3 Field Service before removal of unit.

Lynx NGT-9000 Installation Manual

Table 4-1: Troubleshooting The Panel Mount Lynx NGT-9000

SYMPTOM	SCREEN	CAUSE/CORRECTIVE ACTIONS
Unit does not operate in normal mode and starts in Bootloader or maintenance mode. MSG button on screen.	N/A	The following internal hardware test failures cause the unit to automatically reset. This happens without cycling power to the unit. If the hardware failure being detected does not clear, a system fail message is sent. • ARINC 429 Receiver Loop Back Self-Test • Panel Mount Refresh Display Test • Panel Mount Frozen Display Test • SDRAM Self-Test • Persistent Memory Self-Test • FPGA CBIT Test/Monitor • System Clock Test/Monitor • RAM Continuous Monitor • NVM Copy Test • Flash Copy OPS Test • Flash Copy Airport DB Test • Flash Copy Map DB Test • SW Exception Interrupt Monitor 1. Cycle power to the unit. 2. Contact L-3 Field Service before removal of unit.
Display indicator CALIBRATING ANTENNA	Traffic	This indication is shown on the traffic map and all other screen information is not shown. • A Calibration Complete indicator is shown after calibration is finished. • A CALIBRATION FAILED indicator is shown after calibration is complete, but it did not work. • Perform calibration again. Check antenna installation. • Contact L-3 Field Service before removal of unit.
Display indicator GROUND TEST	Traffic	This indication is shown where the Flight ID location on the traffic screen. It is shown when the unit is connected to the MPC and the Lynx MAT is active with the ground test function started. Cycle power to the NGT-9000 to return to normal operation.
Display indicator TRK (Track)	Traffic	Indicates that the traffic display orientation is true track. 1. This is a normal condition used for pilot information.
• Display indicator ADS ONLY (Models with TAS only) showing on traffic screen. • MSG button on screen.	Traffic	A traffic mode indicator that is shown when TAS is failed (or not available) and ADS-B is operating. 1. Possible problem with directional antenna or internal hardware. 2. Cycle power to the unit. 3. Check System Status Messages. 4. Check the Lynx MAT fault log. 5. Contact L-3 Field Service before removal of unit.

Lynx NGT-9000 Installation Manual

Table 4-1: Troubleshooting The Panel Mount Lynx NGT-9000

SYMPTOM	SCREEN	CAUSE/CORRECTIVE ACTIONS
- Display indicator TAS ONLY (Models with TAS only) showing on traffic screen. - MSG button on screen.	Traffic	A traffic mode indicator that is shown when TAS is in operation but ADS-B traffic information is not available - The TAS is operational but ADS-B Data is not available e.g. on the ground with no heading or track input (track invalid when ground speed is < 7kts). - Check System Status Messages possible for cause of loss of ADS-B data. - The GPS is failed (GPS has not acquired). - Possible problem with L-Band antenna or internal hardware. - Cycle power to the unit. - Check the Lynx MAT fault log. - Contact L-3 Field Service before removal of unit.
Display indicator TAS STBY (Models with TAS only) showing on traffic screen.	Traffic	A traffic mode indicator that is shown when the Traffic Awareness (TAS) system is in standby. - This is a normal condition when the aircraft is on ground. - If the indication is seen during flight. Contact L-3 Field Service before removal of unit.
- Display indicator TRAFFIC FAILED (Amber text) showing on traffic screen. - MSG button on screen.	Traffic	Displayed if both ADS-B and TAS (optional) have failed. - Cycle power to the unit. - Check the secondary equipment (antenna) for problems. (May need to calibrate TAS antenna.) - Check System Status Messages. - Check the Lynx MAT fault log. - Contact L-3 Field Service before removal of unit.
Display indicator TRAFFIC UNAVAILABLE (Amber text) showing on traffic screen. Indicates both TAS and ADS-B traffic sources are not available for a variety of reasons: However, both are not failed. If all available traffic sources are unavailable due to failure, 'Traffic Failed' will be indicated. This will be the normal indication for units on the ground with no heading input. (TAS in standby).	Traffic	ADS-B is operational but heading and track are invalid or GPS is failed. TAS is in Standby. Transponder Mode Control is "ON" which inhibits the display of relative altitude so traffic is unavailable. - View the GPS page under the information button and verify GPS is operational. If not, check the GPS antenna location and ensure that the aircraft is not inside the hangar or repeater is on if inside the hangar, GPS antenna is exposed to clear sky. - Cycle power to the unit. - Check the GPS antenna for problems. - Check System Status Messages. - Check the Lynx MAT fault log. - Contact L-3 Field Service before removal of unit.
- Other aircraft are not shown on the traffic screen. - Ownship data is displayed. - Alternate display shows normal operation. - ADS-B Out Fail lamp is OFF. - No Coverage Indicator is showing on the display.	Traffic	The aircraft is not in an ADS-B (UAT / 1090ES) coverage area, or the targets are not transmitting ADS-B data, or the ground station is not transmitting TIS-B data. - The symptoms are normal if the target or ground station is not transmitting TIS-B data. - The target or ground station needs to be within line-of-site range. - Contact L-3 Field Service before removal of unit.

Lynx NGT-9000 Installation Manual

Table 4-1: Troubleshooting The Panel Mount Lynx NGT-9000

SYMPTOM	SCREEN	CAUSE/CORRECTIVE ACTIONS
- Other aircraft are not shown on the traffic screen. - Ownship data may or may not be displayed on the weather screen. - MSG button on screen.	Traffic	Possible hardware problem with the unit. - Cycle power to the unit. - Check System Status Messages. - Check the Lynx MAT fault log. - Contact L-3 Field Service before removal of unit.
- Ownship is shown, but no traffic is being displayed. - ADS-B Out Fail lamp is OFF.	Traffic	Possible problem with the UAT/1090 antenna or RF cables. - Cycle power to the unit. - Check cable connections. - Check System Status Messages. - Check the Lynx MAT fault log. - Contact L-3 Field Service before removal of unit.
The traffic symbols on the traffic display are non-directional (diamond shape).	Traffic	Non-directional traffic symbols on the traffic display is due to one of the following reasons: - The traffic information that is being received by the unit does not have directional data. The unit continues to transmit non-directional data to the traffic display. Note - TAS traffic is not displayed as directional. A TAS / ADS-B correlated target will use the ADS-B/TIS-B directional information. - An alternate (secondary STIF) traffic display does not support the DTIF data format necessary to show directional data provided by ADS-B.
Traffic display is working correctly, but some aircraft are not showing up on the display.	Traffic	Lack of data as described below: - The ADS-B In requires other aircraft to be equipped with ADS-B Out. - The TIS-B and ADS-R services are supported when in range of ground stations and are providing the service. - If receiving the TIS-B service, but the Mode C and Mode S transponder equipped aircraft that do not provide altitude information are not seen on the traffic display. - If receiving the TIS-B service, but aircraft not equipped with a transponder, or equipped with a Mode A transponder are not part of the TISB data and will not be seen on the traffic display. Refer to the NGT-9000 Pilot guide for more information regarding what traffic can be displayed.
Traffic display is working correctly, but TAS aircraft are not showing up on the display.	Traffic	Lack of data as described below: - Aircraft is out of the selected TAS altitude range. (Above/Below/Unrestricted). - The installed Lynx NGT-9000 does not have the TAS functionality. - The TAS Configuration option is not active. - The TAS requires other aircraft to be equipped with equipped with an active ATCRABS transponder.

Lynx NGT-9000 Installation Manual

Table 4-1: Troubleshooting The Panel Mount Lynx NGT-9000

SYMPTOM	SCREEN	CAUSE/CORRECTIVE ACTIONS
No TIS-B Coverage Indicator  It is located on the traffic screen next to the Zoom Out button. Note: The indicator is suppressed when TAS is operational (i.e. installed, not failed, not in standby).	Traffic	The No Coverage Indicator is shown on the traffic display for the following reasons: - No TIS-B / ADS-R data available in the area - Aircraft is not within range of an ADS-B ground station. Move aircraft in location where information can be received. - UAT-In test fails (indicator seen after 60 seconds of test failure) 1090 Receiver fails - Try clearing the failure by cycling power to the unit. - Check the L-Band antenna or cables for possible errors. - If the problem continues, replacement of the L-Band antenna or the unit may be required. Contact L-3 Field Service before removal.
Display indicator ON-GND showing on transponder screen.	Transponder	Transponder is operating in the on-ground mode. - This is a normal condition when the aircraft is on ground. - If the indication is seen during flight. Contact L-3 Field Service.
- Display indicator XPDR FAIL (Amber text) showing on transponder screen. - MSG button on screen.	Transponder	Transponder data is invalid. This indication is shown on the transponder screen and alternate traffic screen. - Possible problem with internal hardware. - Cycle power to the unit. - Check System Status Messages. - Check the Lynx MAT fault log. - Contact L-3 Field Service before removal of unit.
Pressure Altitude digits replaced with amber dashes.	Transponder	Invalid Pressure Altitude. Note: Some altitude encoders may not provide pressure altitude until after 1-3 minutes of operation. - Cycle power to the unit. - Check System Status Messages. - Check the Lynx MAT fault log. - Check the wiring between the unit and the secondary equipment supplying the pressure altitude. - Check the secondary equipment for problems. - Contact L-3 Field Service before removal of unit.
- No data on the weather display. - ADS-B Out Fail lamp is OFF.	Weather	The FIS-B data is not being transmitted to the weather display. Note: NEXRAD data is only transmitted every 5 minutes. CONUS data is only transmitted every 15 minutes. - No ground station is in range. - The ground station may not provide FIS-B service.

Lynx NGT-9000 Installation Manual

Table 4-1: Troubleshooting The Panel Mount Lynx NGT-9000

SYMPTOM	SCREEN	CAUSE/CORRECTIVE ACTIONS
No FIS-B Coverage Indicator  It is located on the Weather screens at the bottom center.	Weather	The No Coverage Indicator is shown on the weather display for the following reasons: - No FIS-B data available in the area - Aircraft is not within range of an ADS-B ground station. Move aircraft in location where information can be received. - UAT-In test fails (indicator seen after 15 minutes of test failure) - Try clearing the failure performing a warm startup by tapping the Restart button or cycling power to the unit. - Check the L-Band antenna or cables for possible errors. - If the problem continues, replacement of the L-Band antenna or the unit may be required. Contact L-3 Field Service before removal.
- Display indicator INITIALIZING (white text) showing on FIS-B application screen. - ADS-B Out Fail lamp is Off for 2 minutes and then flashes (1 second On/Off) indefinitely until a GPS position is acquired. - Compatible displays may indicate "STANDBY" or "DATA-FAIL" and WI-FI information is not available.	Weather	The indication is shown on the weather map indicating that GPS is Acquiring (On Ground – no previous position fix). - This is a normal condition. It continues to be shown until internal operations have completed. The GPS may need up to 4 minutes to provide a position after power is applied to the unit. - The GPS signal may be weak. Move the aircraft into an area where the unit can acquire the GPS signal. - Make sure nothing is covering or blocking the GPS antenna. - Cycle power to the unit. - Check System Status Messages. - Check the Lynx MAT fault log. - Check that GPS Antenna Short pin doesn't get grounded. - Observe the GPS Receiver Information MPC (Service – GPS) for correct signal strength (C/No) of the GPS satellites. This has a range from 30 dB to 50 dB. If this is not the case, then check if the antenna cable loss is more than 10 dB. - Check if 12V power is available at GPS antenna port, when the unit is powered on. - Contact L-3 Field Service before removal of unit.
- ADS-B Out Fail lamp flashes (1 second On/Off) for 2 minutes, and then remains ON indefinitely until a GPS position is acquired. - Compatible displays may indicate "STANDBY" or "DATA-FAIL" and WI-FI information is not available.	Weather	GPS is Acquiring (In Air – no previous position fix). - The GPS may need up to 4 minutes to provide a position after power is applied to the unit. - The GPS signal may be weak. Move the aircraft into an area where the unit can acquire the GPS signal. - Cycle power to the unit. - Contact L-3 Field Service before removal of unit.

Lynx NGT-9000 Installation Manual

Table 4-1: Troubleshooting The Panel Mount Lynx NGT-9000

SYMPTOM	SCREEN	CAUSE/CORRECTIVE ACTIONS
• Display indicator MAP FAIL (red text) showing on FIS-B application screen. • ADS-B Out Fail lamp is Flashing (1 second On/Off) for 2 minutes and then remains ON. • Compatible displays may indicate "STANDBY" or "DATA-FAIL" and WI-FI information is not available.	Weather	GPS-Acquiring (previous position fix - On Ground or In Air) This means only GPS data is not available however, the GPS position was available once during this power ON or it is shown when a fault is detected that prevents the FIS-B data from showing on the screen. 1. The GPS signal may be weak. Move the aircraft into an area where the unit can reacquire the GPS signal. 2. Cycle power to the unit. 3. Possible problem with L-Band antenna or internal hardware. 4. Check System Status Messages. 5. Check the Lynx MAT fault log. 6. Observe the GPS Receiver Information using the Lynx MAT (Service – GPS) for correct signal strength. Verify that the signal bars are showing at least 40 -50% in the GPS Receiver Information Packet. If this is not the case, then check if the antenna cable loss is more than 10 dB. 7. Check if 12V power is available at GPS antenna port, when the unit is powered ON. 8. Contact L-3 Field Service before removal of unit.

Lynx NGT-9000 Installation Manual

Table 4-2: Troubleshooting The Remote Mount Lynx NGT-9000R

SYMPTOMS	CAUSE / CORRECTIVE ACTIONS
- No sign of power: - CP-2500 displays "XPDR FAIL". - Cannot communicate to the unit with the MAT tool. - ADS-B Out Fail lamp is ON. - Traffic (STIF) displays indicate "DATA-FAIL" and no WI-FI information is available.	The Lynx NGT-9000R is not operating. 1. Verify that the mating connector is secure. 2. Verify the breaker is closed. Check and reset the circuit breaker. 3. Verify power and ground supplied to the unit. 4. If lamps do not illuminate, but you can connect to the unit with the MAT, then verify that the lamps have power from the aircraft dimming circuit. 5. Replacement of the unit may be required. Contact L-3 Field Service before removal of the unit.
The CP-2500 menu Initiated Self Test shows Fail.	A fail condition is detected on the Lynx NGT-9000R. 1. Cycle power to the NGT-9000R and the CP-2500. 2. Replacement of the unit may be required. Contact L-3 Field Service before removal of the unit.
- CP-2500 displays "ADS-B SYSTEM FAIL". - ADS-B Out Fail lamp flashes for 2 minutes and then remains ON or ADS-B Out Fail lamp illuminates without flashing - Traffic (STIF) displays indicate "DATA-FAIL" and WI-FI information is not available.	The unit is operating, but has failed. <u>If installation was previously operational:</u> 1. Connect to MAT and view fault logs and status screens to troubleshoot cause of the failure. 2. Replacement of the Unit may be required. Contact L-3 Field Service before removal of the unit. <u>In new installation (Assuming wiring has been verified):</u> 1. Verify DCM was configured properly, applied, and the power to the Unit was cycled to apply those settings. 2. Connect to MAT and view fault logs and status screens to troubleshoot cause of the failure. 3. Replacement of the Unit may be required. Contact L-3 Field Service before removal of the unit.
- CP-2500 displays "NO ADS-B COVERAGE". - Displays – Normal operation. NOTE The lamp does not illuminate and the CP-2500 message is not shown if TAS is active, if so equipped.	A ground station is not being detected by the Lynx NGT-9000R. 1. Aircraft may not be within range of a local ground station. 2. Replacement of the Unit may be required. Contact L-3 Field Service before removal of the unit. NOTE When crossing boundaries between ground station coverage areas, out of coverage indications are normal.

Lynx NGT-9000 Installation Manual

Table 4-2: Troubleshooting The Remote Mount Lynx NGT-9000R

SYMPTOMS	CAUSE / CORRECTIVE ACTIONS
- CP-2500 displays no message for first 2 minutes, than displays "GPS-INIT" indefinitely until a GPS position is acquired. - ADS-B Out Fail lamp is Off for 2 minutes and then flashes (1 second On/Off) indefinitely until a GPS position is acquired. - Compatible displays may indicate "STANDBY" or "DATA-FAIL" and WI-FI information is not available.	GPS is Acquiring (On Ground – no previous position fix). - The GPS may need up to 4 minutes to provide a position after power is applied to the unit. - The GPS signal may be weak. Move the aircraft into an area where the unit can acquire the GPS signal. - Make sure nothing is covering or blocking the GPS antenna. - Cycle power to the unit. - Check System Status Messages. - Check the Lynx MAT fault log. - Check that GPS Antenna Short pin doesn't get grounded. - Observe the GPS Receiver Information MPC (Service – GPS) for correct signal strength (C/No) of the GPS satellites. This has a range from 30 dB to 50 dB. If this is not the case, then check if the antenna cable loss is more than 10 dB. - Check if 12V power is available at GPS antenna port, when the unit is powered on. - Contact L-3 Field Service before removal of unit.
- CP-2500 displays "GPS-INIT" for first 2 minutes and then changes to "ADS-B System Fail" and "GPS Fail" indefinitely until a GPS position is acquired. - ADS-B Out Fail lamp flashes (1 second On/Off) for 2 minutes, and then remains ON indefinitely until a GPS position is acquired.	GPS is Acquiring (In Air – no previous position fix). - The GPS may need up to 4 minutes to provide a position after power is applied to the unit. - The GPS signal may be weak. Move the aircraft into an area where the unit can acquire the GPS signal. - Cycle power to the unit. - Contact L-3 Field Service before removal of unit.
- CP-2500 displays "GPS-INIT" for 2 minutes, and then displays "ADS-B System Fail" and "GPS Fail". - ADS-B Out Fail lamp is Flashing (1 second On/Off) for 2 minutes and then remains ON. - Compatible displays may indicate "STANDBY" or "DATA-FAIL" and WI-FI information is not available.	GPS-Acquiring (previous position fix - On Ground or In Air) This means only GPS data is not available however, the GPS position was available once during this power ON or it is shown when a fault is detected that prevents the FIS-B data from showing on the screen. - The GPS signal may be weak. Move the aircraft into an area where the unit can reacquire the GPS signal. - If inside a hangar, verify GPS repeater is operational and is within line of site of the aircraft GPS antenna. - Verify correct wiring of the GPS antenna. Verify that the GPS and L-band antenna cables are not swapped. - Observe the GPS Receiver Information using the Lynx MAT (Service – GPS) for correct signal strength. Verify that the signal bars are showing at least 40 -50% in the GPS Receiver Information Packet. If this is not the case, then check if the antenna cable loss is more than 10 dB. - Remove the GPS antenna connector from the Unit, and verify that approx +12 VDC is available at the center pin of the GPS connector of the Unit. - Remove power from other broadcasting equipment and wait 2 minutes for the GPS to acquire a signal. - Replacement of the Unit may be required. Contact L-3 Field Service before removal of the unit.

Lynx NGT-9000 Installation Manual

Table 4-2: Troubleshooting The Remote Mount Lynx NGT-9000R

SYMPTOMS	CAUSE / CORRECTIVE ACTIONS
- CP-2500 - Normal operation. - Lamps - Normal operation. - Traffic (STIF) displays continues to show "DATA-FAIL" even though no ADS-B Out Fail lamp or message is indicated.	Display is not receiving 429 STIF data. Normal operation is that "DATA-FAIL" is displayed until GPS is acquired, and then the STIF display should indicate Standby mode. 1. Verify DCM and display are configured for STIF traffic only (not set to both, i.e. not set to DTIF or Both) and the correct speed. The Unit emulates L-3 Avionics System SKY497 format. This is a high speed 429 bus. Consult display manufacturer's installation manual for proper set-up procedures. 2. Replacement of the Unit may be required. Contact L-3 Field Service before removal of the unit.
- CP-2500 - Normal operation. - Lamps - Normal operation. - Traffic symbols on the Traffic display are open diamonds and not directional traffic (arrowheads or triangles).	This is normal for all STIF displays. Directional symbology can only be displayed on a DTIF display. 1. The traffic display does not support the DTIF format necessary to show directional data provided by ADS-B. 2. The directional information that is being received by the Unit does not have directional data. The Unit continues to transmit non-directional data to the traffic display.
The four digit squawk code is missing from the "ALT" and "ON" screen of the CP-2500. NOTE: Code appears OK in "STB" mode.	This is an indication that the Lynx NGT-9000R has failed and may also be seen if the aircraft is in the hanger with no GPS signal for > 2 minutes. 1. Move the aircraft into an area with access to a GPS signal. 2. Cycle power to the Lynx MSS. 3. Replacement of the Lynx MSS or system component may be required. Contact L-3 Field Service before removal of the unit.
- CP-2500 displays "XPDR FAIL". - The CP-2500 altitude page displays "INVLD PA". - Baro Altitude (Pressure altitude) is not being transmitted as indicated by the IFR-6000 in Monitor mode. - Geometric altitude is being transmitted from the Unit, and all other information is available. - Lamps - Normal operation. - Display/PED – Altitude information is shown as dashes.	Either the Unit is not receiving BARO-ALT (Pressure altitude), or the control panel is set to ON mode. 1. Verify that the CP-2500 is set to ALT Mode. 2. Verify that the Unit is receiving BARO-ALT (Pressure altitude). On the CP-2500 go to the Altitude page. The page should display the altitude for example as: 800PA (for 800 ft pressure altitude). In the case of missing altitude, it displays "INVLD PA". Pressure altitude is a required output for FAA compliance. In the event of the loss of Pressure altitude, the UAT device continues to operate by reverting to GPS altitude as a back-up. The GPS altitude can be viewed with the MAT device. NOTE Some altitude encoders can take 1-3 minutes to output data after initial power on.

Lynx NGT-9000 Installation Manual

Table 4-2: Troubleshooting The Remote Mount Lynx NGT-9000R

SYMPTOMS	CAUSE / CORRECTIVE ACTIONS
• CP-2500 - Normal operation. • Lamps - Normal operation. • No traffic or weather information is being displayed on the PED over WI-FI.	1. Verify WI-FI module is receiving data from the Unit. For example, on the RN-370M models, this is indicated from visually seeing the blue flashing light on the unit. If indicator light is not flashing, verify WI-FI is configured properly in the DCM settings. Also verify the device has power (batteries) and that the connections between the WI-FI module and the Unit are correct. 2. If WI-FI module is indicating it is receiving data, verify that the PED WI-FI connection is configured to receive the correct device name. (I.E. "WI-FLY-100"). 3. Verify PED App is compatible with the Unit. 4. Verify the configuration setting for the PED App being used. 5. Replacement of the Unit may be required. Contact L-3 Field Service before removal of the unit.
• CP-2500 - Normal operation. • Lamps - Normal operation. • FIS-B weather (such as METARS, NEXRAD, CONUS Data) is not being seen on the weather displays.	Ground testing with the IFR-6000 can only simulate textural data such as METARS. 1. When used in flight, the aircraft must be within range of a ground station NEXRAD information is only transmitted every 5 minutes, and CONUS information is only available from certain ground stations, and is only transmitted every 15 minutes.
• Cannot connect to the Unit with the MPC/MAT tool. • Lamps - Normal operation. • CP-2500 - Normal operation. • Displays - Normal operation.	1. Verify that the Lynx NGT-9000R is on ground. It is only possible to connect to the maintenance mode for the first 2 minutes after power on if the unit is "in-air". 2. The USB connection to the unit requires special drivers that must be installed on the MPC being used (see the general information section for details). If that has been successfully accomplished, replacement of the Unit may be required. Contact L-3 Field Service before removal of the unit. 2. Verify that the MAT being used is compatible with the software in the Unit being serviced. Contact L-3 Field service for more information.
• CP-2500 displays "XPDR FAIL". • If installed, ADS-B Fail lamp is OFF.	The transponder function of the Lynx NGT-9000R has failed or is not communicating with the CP-2500. 1. At next power cycle if symptoms persist, contact L-3 Field Service before removal of the unit or other equipment.

4.4.1 System Status Messages

The system status messages are seen on the panel mount Lynx NGT-9000 either during start up or when the System Test button is pressed. The typical meanings of the messages are detailed in the bullets below. Use the information in Table 4-3 to help determine cause and corrective actions.

- A “Fail” message is caused by something internal to the unit.
- An “External Fail” message is caused by a problem with the external equipment input signals. The unit continues to attempt to acquire the signal without rebooting. These messages automatically clear once communications has been restored to the external equipment.
- A “Degraded” message indicates a function has limited capability due to an internal failure.
- An “External Degraded” message indicates a function has limited capability due to an external failure.
- A “Coverage” or “No Signal” message indicates that no signal is being received from a ground station.

Attempt to clear fail or degraded messages by cycling power to the unit. View the message list and use the Lynx MAT to access the configuration and fault logs to isolate this issue.

The Continue button is active whenever a failure or degraded window message is shown. It may be used to begin normal operation with degraded performance.

The unit continues to operate non-fatal failures detected during the System Test by providing any functionality unaffected by the failures. If one or more of the secondary faults are detected, then the unit displays the "Service Unit Soon" as part of the message. (That information is recorded in the maintenance log, but is not displayed. These faults do not directly impact the operation and function of the NGT-9000.)

Tap the MSG button located on the Transponder Application screen to view fail messages during normal operation. The MSG button blinks when new messages have been received and have not yet been viewed. When all the faults are cleared the MSG button is removed from the screen.

Table 4-3: System Status Messages

SYMPTOM	CAUSE/CORRECTIVE ACTIONS
ADS-B In – External Degraded	The message is seen if there is an ARINC 429 AHRS Input Failure. 1. Cycle power to the unit to try clearing the failure. 2. If the problem continues check the interface devices listed above for possible errors. 3. If the problem continues, replacement or the listed input device may be required. Contact L-3 Field Service before removal.
ADS-B In – Fail *	The message is seen if any of the following tests fail: • GPS Antenna Failure • Bus Monitor 1. Try clearing the failure performing a warm startup by tapping the Restart button. 2. Check GPS equipment for errors. 3. If the problem continues, replacement of the unit or GPS antenna may be required. Contact L-3 Field Service before removal.

Lynx NGT-9000
Installation Manual

Table 4-3: System Status Messages

SYMPTOM	CAUSE/CORRECTIVE ACTIONS
ADS-B In – External Fail	The message is seen if any of the following tests fail: • GPS Antenna/Cable • Altimeter – Gilham Altitude Input • Altimeter – RS-232 Input • Altimeter – ARINC 429 Input 1. A reboot may clear the failure. Tap the Restart screen button to perform a warm startup. 2. Incorrect configuration options have been selected. 3. If the problem continues check the interface devices listed above for possible errors. 4. If the problem continues, replacement of the interface device may be required. Contact L-3 Field Service before removal.
ADS-B In – Degraded	The message is seen if any of the following signals are failed: • 1090 ADS-B In Receiver. • GPS Signal still searching. • UAT In 1. Wait 2-3 minutes for the GPS signal to acquire. 2. Move aircraft in area where the GPS signal is not being blocked. 3. Cycle power to the unit to try clearing the failure. 4. If the problem continues check the interface devices listed above for possible errors. 5. If the problem continues, replacement of the unit or the listed input device may be required. Contact L-3 Field Service before removal.
ADS-B Out – External Degrade	The message is seen if a failure of the GPS Antenna/Cable is detected. 1. Try clearing the failure performing a warm startup by tapping the Restart button. 2. If the problem continues, check the GPS equipment for errors. Contact L-3 Field Service before removal.
ADS-B Out - Degrade	The message is seen if a failure of the GPS Sensor is detected. 1. Try clearing the failure performing a warm startup by tapping the Restart button. 2. If the problem continues, replacement of the unit may be required. Contact L-3 Field Service before removal.

Lynx NGT-9000 Installation Manual

Table 4-3: System Status Messages

SYMPTOM	CAUSE/CORRECTIVE ACTIONS
ADS-B Out –Fail *	The message is seen if any of the following tests fail: • 1090 Transmitter • GPS Sensor • Bus Monitor • Transponder Rate • Invalid Mode S ID (ICAO Code) 1. Try clearing the failure performing a warm startup by tapping the Restart button. 2. If the problem continues, replacement of the unit may be required. Contact L-3 Field Service before removal.
Airport DB Fail	Airport Database compatibility failure. 1. Try clearing the failure performing a warm startup by tapping the Restart button. 2. Reload the airport database using the Lynx MAT. 3. If the problem continues. Contact L-3 Field Service.
Ambient Light Sensor Fail	Ambient Light Sensor communication failure 1. Try clearing the failure performing a warm startup by tapping the Restart button or cycling power. 2. If the problem continues, replacement of the unit may be required. Contact L-3 Field Service before removal.
Audio External fail	The message is seen if a failure of the Audio Mute Discrete (audio suppression) is detected. This only occurs when aircraft is On Ground. 1. Try clearing the failure performing a warm startup by tapping the Restart button. 2. Check the audio mute wiring or interface for possible errors. 3. Contact L-3 Field Service if problem continues.
Audio fail	The message is seen if the Internal audio test fails: 1. Try clearing the failure performing a warm startup by tapping the Restart button. 2. If the problem continues, replacement of the unit may be required. Contact L-3 Field Service before removal.
Config Module Service soon	Configuration module is not attached, signal is intermittent or the data on Configuration Module failed has failed. 1. Use the Lynx MAT (via the MPC) to retrieve configuration data and verify that the Configuration Module is attached and working correctly. 2. Use the Lynx MAT (via the MPC) to save configuration data to DCM. 3. If the problem continues, replacement of the DCM or unit may be required. Contact L-3 Field Service before removal.

Lynx NGT-9000 Installation Manual

Table 4-3: System Status Messages

SYMPTOM	CAUSE/CORRECTIVE ACTIONS
FIS-B - Fail *	The message is seen if the following test fails or signal is lost: • L-Band (UAT/1090) Antenna • UAT Module Failure 1. Try clearing the failure performing a warm startup by tapping the Restart button. 2. Check the L-Band antenna or cables for possible errors. 3. If the problem continues, replacement of the L-Band antenna or the unit may be required. Contact L-3 Field Service before removal.
FIS-B Degraded	Airport or Map Database compatibility failure. 1. Try clearing the failure performing a warm startup by tapping the Restart button or cycling power to the unit. 2. Reload the Databases using the Lynx MAT. 3. If the problem continues. Contact L-3 Field Service.
GPS – Acquiring	The message is seen if the GPS is searching for a signal: 1. Move the aircraft in an area that does not block the GPS signal. 2. Wait for signal to connect. New installations can take longer than normal operation. 3. Try clearing the failure performing a warm startup by tapping the Restart button. 4. If the problem continues, check the GPS Antenna or cable for problems. Replacement of the GPS antenna or unit may be required. Contact L-3 Field Service before removal.
GPS – External Fail	The message is seen if the follow test fails: • GPS Antenna/Cable 1. Try clearing the failure performing a warm startup by tapping the Restart button. 2. If the problem continues check the GPS antenna or cables for possible errors. 3. If the problem continues, replacement of the GPS antenna may be required. Contact L-3 Field Service before removal.
GPS – Fail *	The message is seen if any of the following tests fail: • GPS Sensor • Bus Monitor 1. Try clearing the failure performing a warm startup by tapping the Restart button. 2. If the problem continues, replacement of the unit may be required. Contact L-3 Field Service before removal.

Lynx NGT-9000 Installation Manual

Table 4-3: System Status Messages

SYMPTOM	CAUSE/CORRECTIVE ACTIONS
Map DB Fail	Map Database compatibility failure. 1. Try clearing the failure performing a warm startup by tapping the Restart button or cycling power. 2. Reload the map database using the Lynx MAT. 3. If the problem continues. Contact L-3 Field Service.
Suppression Bus Fault	External Transponder Suppression Input is not activating or is held active. 1. Try clearing the failure performing a warm startup by tapping the Restart button or cycling power. 2. Check the connections and wiring to other units that maybe attached to the suppression bus. 3. If the problem continues, replacement of the unit may be required. Contact L-3 Field Service before removal.
System Degraded (This message is not indicated in the system message window but on the status screen after system startup or self test has executed)	The message is seen during start up if any of the following tests fail: • CRC Failure • Configuration • Other system functions indicated as degraded 1. Cycle power to the unit to clear the failure. 2. The configuration module data may be corrupted or missing. The original configuration settings are still present, but the backup copy is corrupt. Using the instructions provided in this manual to load the configuration data. 3. Replacement of the configuration module may be required. Contact L-3 Field Service before removal.
System Fail (This message is not indicated in the system message window but on the status screen after system startup or self test has executed)	The message is seen during start up if any of the following tests fail: • AHRS ARINC 429 Receiver • ADC ARINC 429 Receiver • Mode S Address • Factory Data CRC or Compatibility • Config Data NVM CRC or Compatibility • Other system functions indicated as failed. 1. Clear the failure by tapping the Restart button to perform a warm startup. 2. The unit configuration data may be corrupted or missing. Using the instructions provided in this manual to load the configuration data 3. Replacement of the unit may be required. Contact L-3 Field Service before removal.

Lynx NGT-9000 Installation Manual

Table 4-3: System Status Messages

SYMPTOM	CAUSE/CORRECTIVE ACTIONS
TAS – External Degrade	The message is seen if any of the following signals are degraded: • AHRS - ARINC 429 Input Bus 1. Try clearing the failure performing a warm startup by tapping the Restart button. 2. If the problem continues, replacement of the unit may be required. Contact L-3 Field Service before removal.
TAS – External Fail	The message is seen if any of the following test fails: • TAS Antenna (directional antenna) 1. Try clearing the failure performing a warm startup by tapping the Restart button. 2. If the problem continues check the directional antenna or cables for possible errors. 3. If the problem continues, replacement of the directional antenna may be required. Contact L-3 Field Service before removal.
TAS - Fail *	The message is seen if any of the following tests fail: • 1090 ADS-B In Receiver • 1030 Transmission • 1030 Transponder Receiver • TAS 1030 Transmission • TAS 1090 Receiver 1. Try clearing the failure performing a warm startup by tapping the Restart button. 2. If the problem continues, replacement of the unit may be required. Contact L-3 Field Service before removal.
Transponder – External Fail	The message is seen if any of the following tests fail: • 1090 Invalid Mode S Address • Altimeter – Gilham Altitude Input • Altimeter – RS-232 Input • Altimeter – ARINC 429 Input 1. Try clearing the failure performing a warm startup by tapping the Restart button. 2. Check that the equipment listed above is operational. 3. If the problem continues, replacement or the listed input device may be required. Contact L-3 Field Service before removal.
Transponder – Fail *	The message is seen if any of the following tests fail: • 1090 Transmission • 1030 Transponder Receiver 1. Try clearing the failure performing a warm startup by tapping the Restart button. 2. An invalid Mode S Address fault may indicate that the address was not properly entered during configuration setup. Refer to the Installation checkout for details. 3. If the problem continues, replacement of the unit may be required. Contact L-3 Field Service before removal.

Table 4-3: System Status Messages

SYMPTOM	CAUSE/CORRECTIVE ACTIONS
Unit Over Temp Service Soon	Internal over temperature condition detected. 1. Make sure the ventilation holes are clear to permit sufficient airflow for cooling. 2. If the problem continues, replacement of the unit may be required. Contact L-3 Field Service before removal.

* Note: There are internal hardware failures that could occur, which will cause all of the system functions to indicate failure.

4.4.2 Antenna Coax Ohm Check

Use the following procedure to check the TAS directional antenna (i.e. NY 156 or NY 164).

The following Ohm check is accomplished by using a typical Ohmmeter and placing one lead on the center pin and the second lead on the outer shield of the coax.

PORT NAME	DESCRIPTION	TEST RESULT
Sum (Sigma) Port	The Sum (Sigma) port is the forward antenna connector marked with a blue band. Connected to the NGT-9000 (A4) Sum Port	< 1 ohm
Bit Probe Port	The Bit Probe port is the center antenna connector. Connected to the NGT-9000 (A1) Bit Port.	85 +/- 5 ohms
Difference (Delta) Port	Difference (Delta) port is the rear antenna connector marked with a red band. Connected to the NGT-9000 (A2) Difference Port.	< 1 ohm

4.5 USING THE MAINTENANCE PC

The Maintenance PC (MPC) and Lynx Maintenance Application Tool (Lynx MAT) are used to interface with the Lynx NGT-9000 to load software/firmware/databases, view factory / version data, retrieve fault / event logs, data recording, and simulating live data.

These procedures assume the following:

- Power is being supplied to the aircraft and unit and system components.
- The correct Lynx MAT software is being used to load software. See the General Information section (Software Versions) for software details. Note - Each version of software for the Lynx NGT-9000 requires a specific MAT software version that is compatible.
- The software to be loaded is available on the MPC being used.
- The Lynx MAT is active on the MPC.
- The MPC is interfaced to the unit.
- The MPC and unit are communicating and the unit is in Maintenance Mode.

Additional instructions on using the MPC are given in the Installation Checkout section.

4.5.1 Load Software

This procedure is used to update the system software used by the unit. The MPC must be connected via the USB connection for this procedure. The WiFi interface is not supported.

1. From the Lynx MAT select Update→Load Software. See Figure 4-3. The tool has the option of loading either of the following software files. Note - Do not remove power to the unit or disconnect the MPC during this procedure.
 - Lynx NGT-9000 Software Package File (composed of Flight and Maintenance)
 - GPS/UAT Composite Binary file (composed of CCA Operation SW and Firmware)
 - Press the Browse button to open a file window. Select the appropriate file. (i.e. 1090MSS.pkg / GPS-UAT.bin or similar looking file). The MAT verifies the contents of the file to be loaded. This takes approximately 5 seconds.
 - Press the Upload button to begin loading the software to the unit. A progress bar is shown for each SW load.

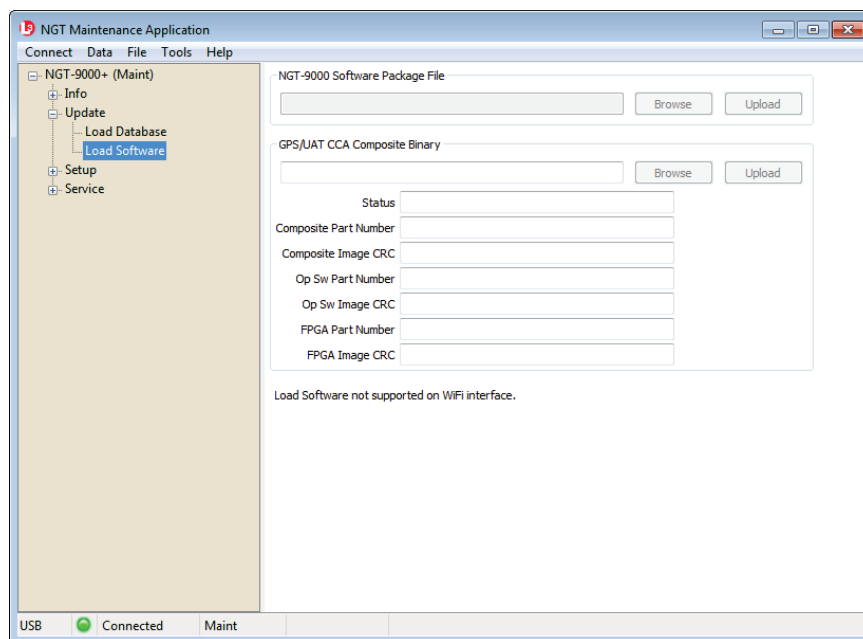


Figure 4-3: Lynx MAT – Update Software

2. An upload completed message is shown when the procedure has finished.
 - A failure message is shown if a problem loading the Lynx NGT-9000 Software Package File is detected. Check that the file being loaded is correct and try the procedure again. If the problem continues cycle power to the unit.
 - A problem is detected for the GPS/UAT Composite Binary File if the validation check of the file has failed. Check that the file being loaded is correct and try the procedure again. If the problem continues cycle power to the unit and try again.
 - When upload of Lynx NGT-9000 Software Package File is complete the unit will automatically reset into maintenance mode. When upload of GPS/UAT Composite Binary File is complete a dialog will instruct the operator to cycle power on the unit.
3. After the unit restarts, re-connect the unit to the Lynx MAT.
4. This step is only required only when uploading GPS/UAT Composite Binary File. Re-connect the unit to the Lynx MAT. From the Lynx MAT select Service→Restart Unit Mode→ Maintenance.

5. Verify that the software was updated by going to the Versions page. From the Lynx MAT select Info→Versions.
6. Cycle power to the unit. (Note –The Lynx MAT and PC may be disconnected at this time if no other maintenance is required.
7. Perform a functional check (paragraph 3.6.1) to verify unit is functioning correctly. Refer to the fault isolation section if errors are detected.

4.5.2 Load Databases

This procedure is used to update the databases used by the Lynx NGT-9000. Updates to the databases are not mandatory and are updated at the discretion of the user. Refer to Software Updates in the General Information section for details on obtaining new database files.

1. From the Lynx MAT select Update→ Load Database. See Figure 4-4. The tool has the option of loading any of the following database files.
 - 68.bin - Airport Database
 - 72.bin - Map Database
2. Press the Browse button to open a file window. Select the appropriate file.
3. Press the Upload button to begin loading the database to the unit.
4. An upload completed message is shown when the procedure has finished.
 - A failure message is shown if a problem loading the database is detected. Check that the file being loaded is correct and try the procedure again. If the problem continue cycle power to the unit.
5. The procedure can be repeated for the other available databases.
6. When the procedures are complete cycle power to the unit and perform a functional check (paragraph 3.6.1) to verify unit is functioning correctly. Refer to the fault isolation section if errors are detected.

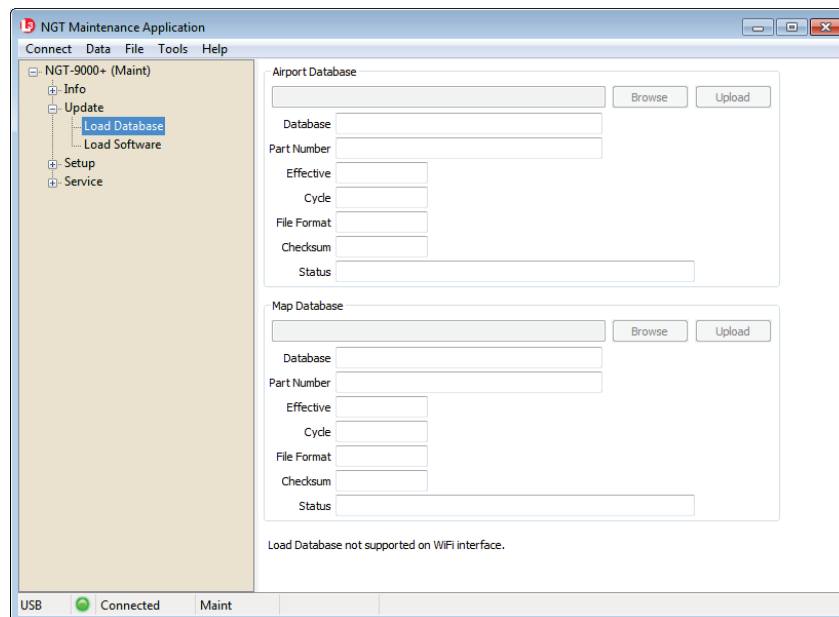


Figure 4-4: Lynx MAT – Update Database

4.5.3 View or Retrieve Data

Use the Lynx MAT to view versions and factory information and retrieve fault and event logs. See Figure 4-5. The versions data, event log, and factory log can be saved to a file for later viewing.

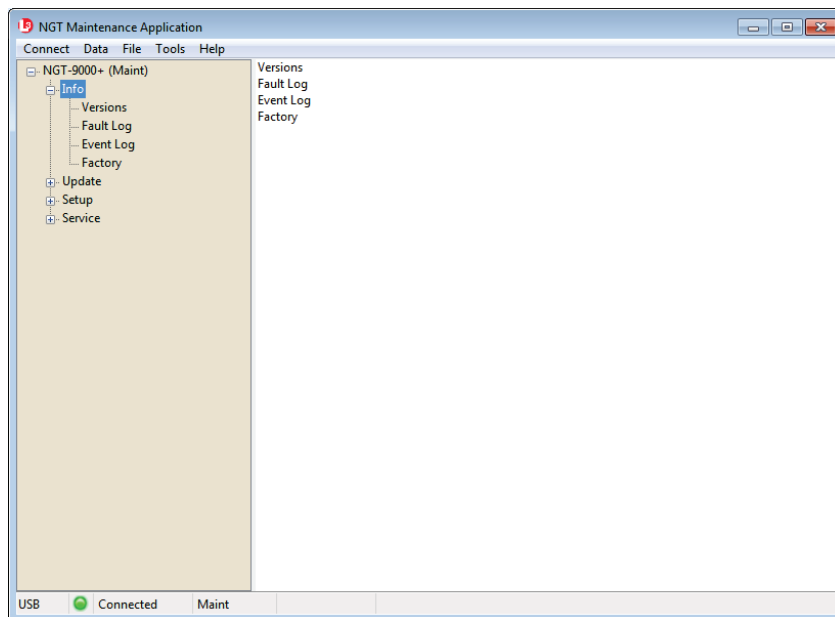


Figure 4-5: Lynx MAT – Information

4.5.3.1 Versions

The Versions page shows the current software and database versions on the unit. Buttons on the bottom of the page provide the user the options of 'Refresh', 'Save', and 'Load'.

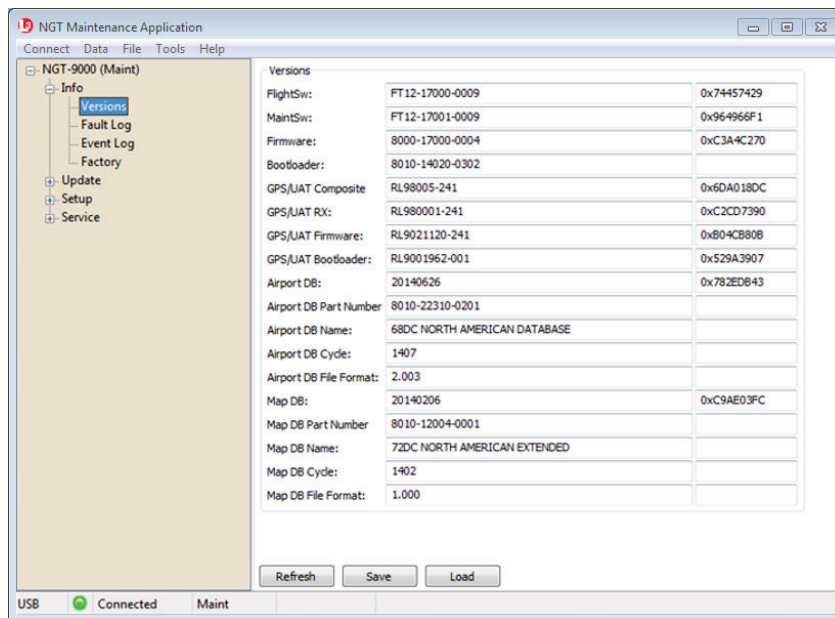


Figure 4-6: Lynx MAT – Version

4.5.3.2 Fault Log

The Fault Log can be used for troubleshooting. Each fault is entered on its own indexed row, with details for date, time, etc. Clicking on a row provides the user with additional information at the top of the page. This information includes a fault description and a possible description of the loss of functionality. Buttons on the bottom of the page provide the user the options of 'Refresh', 'Clear', 'Filter', 'Save', 'Load', and 'Export to CSV'. The fault data can be cleared at the option of the user.

NOTE

Typically the fault log should not be cleared unless instructed by L-3 AS Field Service personnel.

A saved fault log can be viewed by the Lynx MAT when the unit is not connected by using the Load function.

Table 4-4: List of Fault Log Messages

FAULT ID/ CODE (HEX)	FAULT DESCRIPTION	CORRECTIVE ACTION
0x00000001	Kernel Fault Wd Expire	Reboot the unit and check if the fault persists. Contact L-3 Field Service before removal.
0x00000002	Kernel Fault Process Term	Reboot the unit and check if the fault persists. Contact L-3 Field Service before removal.
0x00000003	Kernel Fault Thread Term	Reboot the unit and check if the fault persists. Contact L-3 Field Service before removal.
0x00000004	Kernel Fault Thread Timeout	Reboot the unit and check if the fault persists. Contact L-3 Field Service before removal.
0x00000005	Kernel Fault Trap	Reboot the unit and check if the fault persists. Contact L-3 Field Service before removal.
0x00000006	Kernel Fault BIT Wd	Reboot the unit and check if the fault persists. Contact L-3 Field Service before removal.
0x00000007	Kernel Fault BIT Clock	Reboot the unit and check if the fault persists. Contact L-3 Field Service before removal.
0x00000008	Kernel Fault CBIT CRC	Reboot the unit and check if the fault persists. Contact L-3 Field Service before removal.
0x00000009	Kernel Fault ISR Limit	Reboot the unit and check if the fault persists. Contact L-3 Field Service before removal.
0x0000000A	Kernel Fault CBIT FPGA	Reboot the unit and check if the fault persists. Contact L-3 Field Service before removal.
0x0000000B	Kernel Fault CBIT SW Exception	Reboot the unit and check if the fault persists. Contact L-3 Field Service before removal.

Lynx NGT-9000 Installation Manual

Table 4-4: List of Fault Log Messages

FAULT ID/ CODE (HEX)	FAULT DESCRIPTION	CORRECTIVE ACTION
0x00000021	Touch INIT Fault	Reboot the unit and check if the fault persists. Contact L-3 Field Service before removal.
0x00000033	IODC INIT Fault	Reboot the unit and check if the fault persists. Contact L-3 Field Service before removal.
0x00000034	IODC Read Fault	Reboot the unit and check if the fault persists. Contact L-3 Field Service before removal.
0x00000035	IODC Overflow Fault	Reboot the unit and check if the fault persists. Contact L-3 Field Service before removal.
0x00000036	IODC Buffer Overflow Fault	Reboot the unit and check if the fault persists. Contact L-3 Field Service before removal.
0x00000037	IODC Parity Fault	Reboot the unit and check if the fault persists. Contact L-3 Field Service before removal.
0x00000047	Fault ID for the watchdog test failure	Reboot the unit and check if the fault persists. Contact L-3 Field Service before removal.
0x00000048	Fault ID for the memory test failure	Reboot the unit and check if the fault persists. Contact L-3 Field Service before removal.
0x00000049	Fault ID for the DSP Clock test failure	Reboot the unit and check if the fault persists. Contact L-3 Field Service before removal.
0x0000004A	Fault ID for the FPGA test failure	Reboot the unit and check if the fault persists. Contact L-3 Field Service before removal.
0x0000004B	Fault ID for the Power management test failure	Reboot the unit and check if the fault persists. Contact L-3 Field Service before removal.
0x0000004C	Fault ID for the Primary Image failure	Reboot the unit and check if the fault persists. Contact L-3 Field Service before removal.
0x0000004D	Fault ID for the Secondary Image failure	Reboot the unit and check if the fault persists. Contact L-3 Field Service before removal.
0x00001001	Oscillator Synthesizer Out of Lock <u>Possible Cause</u> ADS-B In Internal Degraded ADS-B Out Internal Failure TAS Internal Failure Transponder Internal Failure	Reboot the unit and check if the fault persists. Contact L-3 Field Service before removal.

Lynx NGT-9000 Installation Manual

Table 4-4: List of Fault Log Messages

FAULT ID/ CODE (HEX)	FAULT DESCRIPTION	CORRECTIVE ACTION
0x00001002	Mutual Supp Bus Failed to Assert No failures of the box only log the fault	Reboot the unit and check if the fault persists. Contact L-3 Field Service before removal.
0x00001003	Mutual Supp Bus Stuck High No failures of the box only log the fault	Reboot the unit and check if the fault persists. Contact L-3 Field Service before removal.
0x00001004	DCM CRC Failure No failures of the box only log the fault	Reboot the unit and check if the fault persists. Contact L-3 Field Service before removal.
0x00001006	DCM Configuration Failure	Reboot the unit and check if the fault persists. May need to update or load configuration data. Contact L-3 Field Service before removal.
0x00001007	Over Temp on Ground <u>Possible Cause</u> ADS-B In Internal failure ADS-B Out Internal failure TAS Internal failure Transponder Internal failure GPS Internal failure FIS-B Internal failure	Log the fault and allow the unit to cool down. If the fault continues to be seen contact L-3 Field Service before removal.
0x00001008	Over Temp in Air No failures of the box only log the fault	Log the fault and allow the unit to cool down. If the fault continues to be seen contact L-3 Field Service before removal.
0x00001009	Failure of Power Monitor	Reboot the unit and check if the fault persists. May need to update or load configuration data. Contact L-3 Field Service before removal.
0x0000100A	Power Out of Tolerance <u>Possible Cause</u> ADS-B In Internal failure ADS-B Out Internal failure TAS Internal failure Transponder Internal failure GPS Internal failure FIS-B Internal failure	Reboot the unit and check if the fault persists. May need to update or load configuration data. Contact L-3 Field Service before removal.
0x0000100B	Airport DB Flash CRC Failure <u>Possible Cause</u> Airport database failure FIS-B internal degraded	Reboot the unit and check if the fault persists. May need to update or load navigation database data. Contact L-3 Field Service before removal.
0x0000100C	Airport DB Flash Compatibility Failure Airport database failure FIS-B internal degraded	Reboot the unit and check if the fault persists. May need to update or load navigation database data. Contact L-3 Field Service before removal.

Lynx NGT-9000 Installation Manual

Table 4-4: List of Fault Log Messages

FAULT ID/ CODE (HEX)	FAULT DESCRIPTION	CORRECTIVE ACTION
0x0000100D	Map DB Flash CRC Failure Map database failure FIS-B internal degraded	Reboot the unit and check if the fault persists. May need to update or load map database data. Contact L-3 Field Service before removal.
0x0000100E	Map DB Flash Compatibility Failure Map database failure FIS-B internal degraded	Reboot the unit and check if the fault persists. May need to update or load map database data. Contact L-3 Field Service before removal.
0x00001011	Operational SW RAM CRC Failure Failure causes a reset	Log the fault.
0x00001012	Airport DB RAM CRC Failure Failure causes a reset	Reboot the unit and check if the fault persists. May need to update or load airport database data. Contact L-3 Field Service before removal.
0x00001013	Map DB RAM CRC Failure Failure causes a reset	Log the fault.
0x00001015	Factory Data RAM CRC Failure Failure causes a reset	Log the fault.
0x00001016	Config Data RAM CRC Failure Failure causes a reset	Reboot the unit and check if the fault persists. Contact L-3 Field Service before removal.
0x00001017	Factory Data NVM CRC Failure Failure causes a reset	Reboot the unit and check if the fault persists. Contact L-3 Field Service before removal.
0x00001018	Factory Data Compatibility Failure Failure causes a reset	Reboot the unit and check if the fault persists. Contact L-3 Field Service before removal.
0x00001019	Config Data NVM CRC Failure Failure causes a reset	Reboot the unit and check if the fault persists. Contact L-3 Field Service before removal.
0x0000101A	Config Data NVM Compatibility Failure Failure causes a reset	Reboot the unit and check if the fault persists. Contact L-3 Field Service before removal.
0x0000101B	Power Loss In Air	Check Table 4-1, Table 4-2, or Table 4-3
0x0000101C	Ambient Light Sensor Failure	Reboot the unit and check if the fault persists. Contact L-3 Field Service before removal.
0x00001801	Clear Oscillator Synthesizer Out of Lock	Reboot the unit and check if the fault persists. Contact L-3 Field Service before removal.
0x00001802	Clear Mutual Supp Bus Failed to Assert	Reboot the unit and check if the fault persists. Contact L-3 Field Service before removal.
0x00001803	Clear Mutual Supp Bus Stuck High	Reboot the unit and check if the fault persists. Contact L-3 Field Service before removal.

Lynx NGT-9000 Installation Manual

Table 4-4: List of Fault Log Messages

FAULT ID/ CODE (HEX)	FAULT DESCRIPTION	CORRECTIVE ACTION
0x00001804	Clear DCM CRC Failure	Log the fault.
0x00001806	Clear DCM Configuration Fail	Log the fault.
0x00001807	Clear Over Temp on Ground	Log the fault.
0x00001808	Clear Over Temp in Air	Log the fault.
0x00001809	Clear Failure of Power Monitor	Log the fault.
0x0000180A	Clear Power Out of Tolerance	Log the fault.
0x0000180B	Clear Airport DB Flash CRC Failure	Log the fault.
0x0000180C	Clear Airport DB Flash Compatibility Failure	Log the fault.
0x0000180D	Clear Map DB Flash CRC Failure	Log the fault.
0x0000180E	Clear Map DB Flash Compatibility Failure	Log the fault.
0x00001811	Clear Operational SW RAM CRC Failure	Log the fault.
0x00001812	Clear Airport DB RAM CRC Failure	Log the fault.
0x00001813	Clear Map DB RAM CRC Failure	Log the fault.
0x00001815	Clear Factory Data RAM CRC Failure	Log the fault.
0x00001816	Clear Config Data RAM CRC Failure	Log the fault.
0x00001817	Clear Factory Data NVM CRC Failure	Log the fault.
0x00001818	Clear Factory Data Compatibility Failure	Log the fault.
0x00001819	Clear Config Data NVM CRC Failure	Log the fault.
0x0000181A	Clear Config Data NVM Compatibility Failure	Log the fault.
0x0000181B	Clear Power Loss In Air	Log the fault.
0x0000181C	Clear Ambient Light Sensor Failure	Log the fault.
0x00002001	Audio Mute While On Ground Audio external failure	Log the fault.
0x00002002	TAS Antenna Failure TAS External failure	Check Table 4-1, Table 4-2, or Table 4-3
0x00002003	1090 ADSB Rcvr Btm Power Failure ADS-B In Internal degraded TAS Internal failure	Reboot the unit and check if the fault persists. Contact L-3 Field Service before removal.
0x00002004	1090 ADSB Rcvr Top Power Failure ADS-B In Internal degraded TAS Internal failure	Reboot the unit and check if the fault persists. Contact L-3 Field Service before removal.
0x00002005	TAS 1090 (ATCRBS) Receiver Data Failure TAS Internal failure	Reboot the unit and check if the fault persists. Contact L-3 Field Service before removal.

Lynx NGT-9000 Installation Manual

Table 4-4: List of Fault Log Messages

FAULT ID/ CODE (HEX)	FAULT DESCRIPTION	CORRECTIVE ACTION
0x00002008	FPGA TAS 1030 transmission failure TAS Internal failure	Reboot the unit and check if the fault persists. Contact L-3 Field Service before removal.
0x00002009	TAS 1030 Transmission Power Failure TAS Internal failure	Reboot the unit and check if the fault persists. Contact L-3 Field Service before removal.
0x00002801	Clear audio Mute While On Ground	Log the fault.
0x00002802	Clear AS Antenna Failure	Log the fault.
0x00002803	Clear 1090 ADSB Rcvr Btm Power Failure	Log the fault.
0x00002804	Clear 1090 ADSB Rcvr Top Power Failure	Log the fault.
0x00002805	Clear TAS 1090 (ATCRBS) Receiver Failure	Log the fault.
0x00002808	Clear FPGA TAS 1030 transmission failure	Log the fault.
0x00002809	Clear TAS 1030 Transmission Power Failure	Log the fault.
0x00003001	Invalid Mode S Address Transponder External failure ADS-B Out Internal failure	Change DCM setting (ICAO address should be other than 00000 or FFFFFFF in hex). See installation checkout for details.
0x00003002	FPGA 1090 Transmission Failure Transponder Internal failure ADS-B Out Internal failure	Reboot the unit and check if the fault persists. Contact L-3 Field Service before removal.
0x00003003	Squitter rate failure ADS-B Out Internal failure	Reboot the unit and check if the fault persists. Contact L-3 Field Service before removal.
0x00003004	Squitter scheduler process not running at expected rate ADS-B Out Internal failure	Reboot the unit and check if the fault persists. Contact L-3 Field Service before removal.
0x00003005	1090 ATCRBS Rx Failure(loopback without TAS antenna) Transponder Internal failure ADS-B Out Internal failure	Reboot the unit and check if the fault persists. Contact L-3 Field Service before removal.
0x00003006	1030 Rcvr Btm Power Failure Transponder Internal failure TAS Internal failure	Reboot the unit and check if the fault persists. Contact L-3 Field Service before removal.
0x00003007	1030 Rcvr Top Power Failure Transponder Internal failure TAS Internal failure	Reboot the unit and check if the fault persists. Contact L-3 Field Service before removal.
0x00003008	1030 Rcvr Btm PIN Isolation Failure Transponder Internal failure TAS Internal failure	Reboot the unit and check if the fault persists. Contact L-3 Field Service before removal.

Lynx NGT-9000 Installation Manual

Table 4-4: List of Fault Log Messages

FAULT ID/ CODE (HEX)	FAULT DESCRIPTION	CORRECTIVE ACTION
0x00003009	1030 Rcvr Top PIN Isolation Failure Transponder Internal failure TAS Internal failure	Reboot the unit and check if the fault persists. Contact L-3 Field Service before removal.
0x0000300A	1030 Rcvr Btm TR Isolation Failure Transponder Internal failure TAS Internal failure	Reboot the unit and check if the fault persists. Contact L-3 Field Service before removal.
0x0000300B	1030 Rcvr Top TR Isolation Failure Transponder Internal failure TAS Internal failure	Reboot the unit and check if the fault persists. Contact L-3 Field Service before removal.
0x0000300C	1030 XPDR ATCRBS Receiver Failure Transponder Internal failure TAS Internal failure	Reboot the unit and check if the fault persists. Contact L-3 Field Service before removal.
0x0000300D	XPDR 1090 XMIT Bottom Power Failure Transponder Internal failure ADS-B Internal failure	Reboot the unit and check if the fault persists. Contact L-3 Field Service before removal.
0x0000300E	XPDR 1090 XMIT Top Power Failure Transponder Internal failure ADS-B Internal failure	Reboot the unit and check if the fault persists. Contact L-3 Field Service before removal.
0x00003801	Clear Invalid Mode S Address	Log the fault.
0x00003802	Clear FPGA 1090 Transmission Failure	Log the fault.
0x00003803	Clear Squitter rate failure	Log the fault.
0x00003804	Clear Squitter scheduler process not running at expected rate	Log the fault.
0x00003805	Clear 1090 ATCRBS rx Failure(without TAS antenna)	Log the fault.
0x00003806	Clear 1030 Rcvr Btm Power Failure	Log the fault.
0x00003807	Clear 1030 Rcvr Top Power Failure	Log the fault.
0x00003808	Clear 1030 Rcvr Btm PIN Isolation Failure	Log the fault.
0x00003809	Clear 1030 Rcvr Top PIN Isolation Failure	Log the fault.
0x0000380A	Clear 1030 Rcvr Btm TR Isolation Failure	Log the fault.
0x0000380B	Clear 1030 Rcvr Top TR Isolation Failure	Log the fault.
0x0000380C	Clear 1030 XPDR ATCRBS Receiver Failure	Log the fault.
0x0000380D	Clear XPDR 1090 XMIT Bottom Power Failure	Log the fault.

Lynx NGT-9000 Installation Manual

Table 4-4: List of Fault Log Messages

FAULT ID/ CODE (HEX)	FAULT DESCRIPTION	CORRECTIVE ACTION
0x0000380E	Clear XPDR 1090 XMIT Top Power Failure	Log the fault.
0x00004001	GPS Sensor Fail ADS-B In Internal failure ADS-B Out Internal Degraded GPS Internal failure	Check Table 4-1, Table 4-2, or Table 4-3
0x00004002	GPS Antenna Open/Short ADS-B In External failure ADS-B Out External Degraded GPS External failure	Check if GPS antenna is properly connected.
0x00004003	GPS/UAT LVDS Bus ADS-B In Internal failure ADS-B Out Internal Degraded GPS Internal failure FIS-B Internal failure	Check Table 4-1, Table 4-2, or Table 4-3
0x00004801	Clear GPS Sensor Fail	Log the fault.
0x00004802	Clear GPS Antenna Open/Short	Log the fault.
0x00004803	Clear GPS/UAT LVDS Bus	Log the fault.
0x00005001	UAT Sensor Failure ADS-B In Internal degraded FIS-B Internal failure	Reboot the unit and check if the fault persists. Contact L-3 Field Service before removal.
0x00005801	Clear UAT Sensor Failure	Log the fault.
0x00006003	Gillham C Bit Error ADS-B In External failure TAS External failure Transponder External failure	Check wiring Reboot the unit and check if the fault persists. Contact L-3 Field Service before removal.
0x00006004	RS232 Altitude Input Fail ADS-B In External failure TAS External failure Transponder External failure	Check wiring Reboot the unit and check if the fault persists. Contact L-3 Field Service before removal.
0x00006005	ARINC 429 Altitude Input Fail ADS-B In External failure TAS External failure Transponder External failure	Check wiring Reboot the unit and check if the fault persists. Contact L-3 Field Service before removal.
0x00006006	ARINC 429 AHRS Input Fail ADS-B In External degraded TAS External degraded	Check wiring Reboot the unit and check if the fault persists. Contact L-3 Field Service before removal.
0x00006007	ARINC 429 Receiver #1 Loop Back Failure causes a reset	Log the fault.
0x00006008	ARINC 429 Receiver #2 Loop Back Failure causes a reset	Log the fault.

Lynx NGT-9000
Installation Manual

Table 4-4: List of Fault Log Messages

FAULT ID/ CODE (HEX)	FAULT DESCRIPTION	CORRECTIVE ACTION
0x00006009	Control Panel Input Fail Transponder External failure	Check Control Panel wiring. (future) Reboot the unit and check if the fault persists. Contact L-3 Field Service before removal.
0x00006803	Clear Gillham C Bit Error	Log the fault.
0x00006804	Clear RS232 Altitude Input Fail	Log the fault.
0x00006805	Clear ARINC 429 Altitude Input Fail	Log the fault.
0x00006806	Clear ARINC 429 AHRS Input Fail	Log the fault.
0x00006807	Clear ARINC 429 Receiver #1 Loop Back	Log the fault.
0x00006808	Clear ARINC 429 Receiver #2 Loop Back	Log the fault.
0x00006809	Clear Control Panel Input Fail	Log the fault.

4.5.4 Configuration Restore

This procedure is used to automatically fill in the configuration options from a backup file. See Figure 4-7. Perform the following procedure using a MPC and Lynx MAT. This procedure assumes that the unit is in Maintenance Mode and the MPC is interfaced to the unit using either the USB.

These procedures assume the following:

- Power is being supplied to the aircraft and Lynx NGT-9000.
- The Lynx MAT is active on the MPC.
- The MPC is connected to the unit.
- A DCM is connected (via the mating connector)
- The MPC and unit are communicating. If not then from the Lynx MAT panel select Connect→NGT9000→USB. This is required each time the unit power is cycled.

1. From the Lynx MAT select Setup → Configuration → Restore. See Figure 4-7.
2. Click on the Load button to 'Load a Pre-Existing Configuration File' to load the configuration data into the Lynx MAT. After the file is loaded into the Lynx MAT click on any of the Apply buttons to save all the configuration options (see Note below). Note - A dialog window is shown asking if changes should be saved immediately. See instructions given in the Installation Checkout section.

NOTE

The Tail Number and Mode S Identifier are unique for every aircraft. From the Lynx MAT select Setup → Configuration → Modify → Aircraft Specific and enter the new data before pressing the Apply button.

3. Click on the Restore button to Restore Installation Configuration from Backup (NVM) to save the backup configuration module data stored in the unit's memory to the configuration module.
4. Click on the Set Defaults button to load default information to the configuration module.
5. From the Lynx MAT select Service→Restart Unit Mode→ Maintenance.
6. Validate the restoration of the configuration options by comparing the configuration data in the setup pages with the log sheet for configuration and checkout created during initial installation.

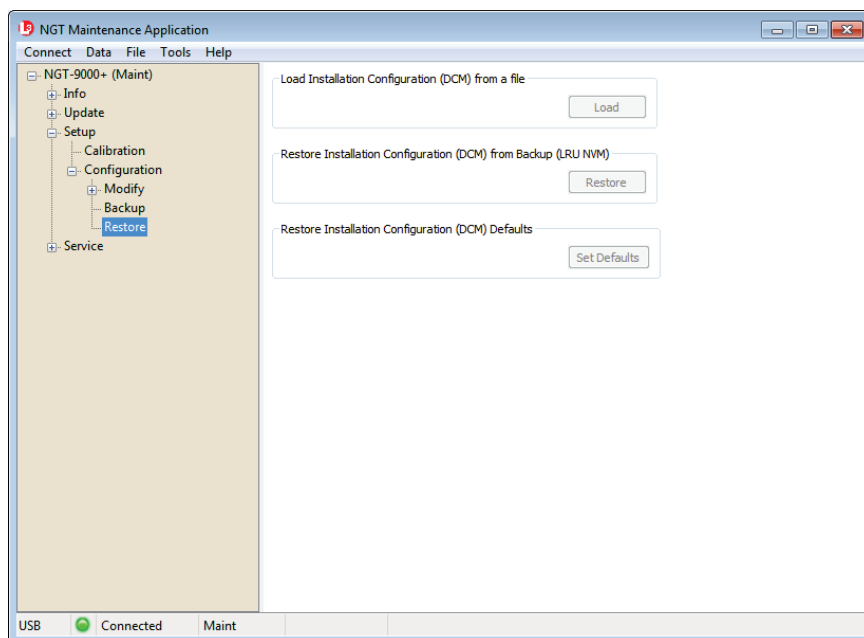


Figure 4-7: Lynx MAT –Configuration - Restore

4.5.5 Service

This procedure is used to service and troubleshoot the Lynx NGT-9000. See Figure 4-8.

4.5.5.1 Data Recording

The information generated by the Data Recording page is not typically used unless requested by the factory during service.

1. From the Lynx MAT select Service→Data Recording.
2. Select the MMC Mode.
 - Selecting Truncate restarts the recording.
 - Selecting Append adds any new recording to the end of the current data recording.
3. Click on the “Enable” button.
4. From the Lynx MAT select Service→Restart Unit Mode→ Operational Mode.
5. Data recording begins. Recording continues until the unit is restarted again.
6. From the Lynx MAT select Service→Restart Unit Mode→ Maintenance mode.
7. From the Lynx MAT select Service→Data Recording.
8. Selecting “Disable” will stop recording of data at the next cycle of power. This will need to be “Enabled” to start recording again.
9. When needed use the ‘Clear’ button’ to erase the current recorded data.
10. The data can be stored to a file using the ‘Browse’ and “Download’ buttons.

4.5.5.2 Live Data

The Live Data function is used for troubleshooting. Instructions on how to use live data are located in the Installation Checkout section under configuration check.

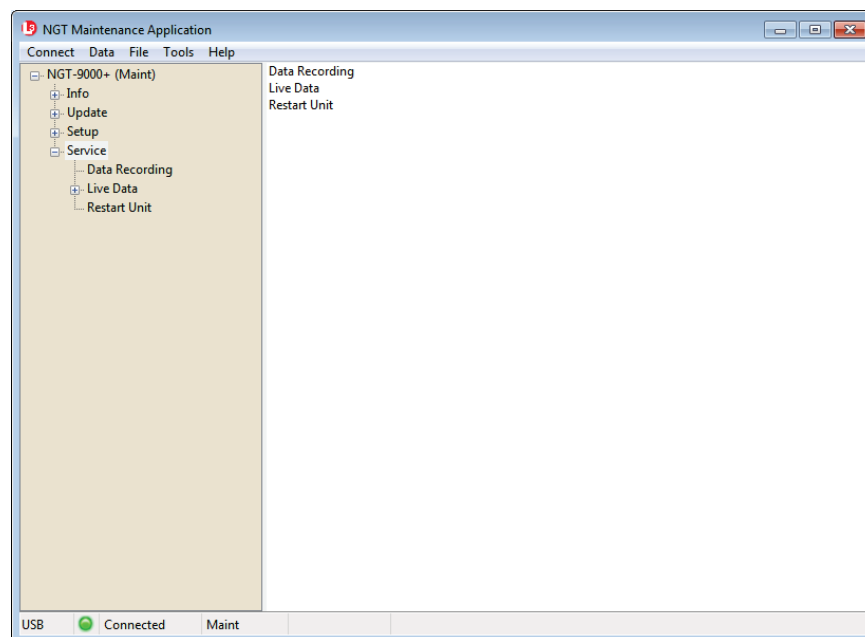


Figure 4-8: Lynx MAT – Service

4.6 RETURN TO SERVICE

Use this section to validate the return to service of the Lynx NGT-9000 and system components.

4.6.1 Panel Mount Lynx NGT-9000

Use this procedure to remove and replace all models of the panel mount Lynx NGT-9000. The instructions herein are generic in scope. The best established methods, techniques and practices should be used where no specific procedure is given.

1. Removal Procedure
 - a. Locate the Panel Retainer access on the bottom left of the bezel.
 - b. Rotate the Panel Retainer CCW using 3/32 Allen Hex Socket Screw Driver. Rotate Panel Retainer, approximately 40 turns, until it stops. Do not exceed 5.0 inch-pounds of torque.
 - c. Pull the unit from panel separating the main connector and antenna connections.
2. Installation Procedure
 - a. Use 3/32 Allen Hex Socket Screw Driver to rotate the Panel Retainer CCW to avoid interference with the bottom edge of the panel.
 - b. Insert the unit in panel allowing the alignment guides to settle the unit into place.
 - c. Press the sides of the unit until the back side of the bezel is against the panel.
 - d. Rotate the Panel Retainer CW (approximately 40 turns) to lock the unit in place. The Panel Retainer torque limit is 5.0 inch-pounds.

4.6.2 Remote Mount Lynx NGT-9000

Use this procedure to remove and replace all models of the remote mount Lynx NGT-9000. The instructions herein are generic in scope. The best established methods, techniques and practices should be used where no specific procedure is given.

1. Removal Procedure
 - a. Rotate the Retainer Knob CCW until loose.
 - b. Pull the unit from tray separating the main connector and antenna connections.
2. Installation Procedure
 - a. Insert the unit in tray allowing the alignment guides to settle the unit into place.
 - b. Rotate the Retainer Knob CW to snug.

4.6.3 Lynx NGT-9000 Functional Check Procedure

1. Cycle power to the unit and system components.
2. The Lynx NGT-9000 contain a GPS receiver that requires a full functional check (paragraph 3.10, Installation Checkout) be performed to verify unit is functioning correctly.
3. Models of NGT-9000 with the TAS function must perform the TAS Antenna Calibration (installation checkout paragraph 3.8.3) prior to doing a functional check.
4. Refer to the fault isolation section if errors are detected.

4.6.4 Detachable Configuration Module

Use this procedure to remove and replace the DCM. The instructions herein are generic in scope. The best established methods, techniques and practices should be used where no specific procedure is given.

NOTE

Before removal (and if possible) the configuration data should be saved.
Refer to the Lynx MAT Backup instructions located in the installation checkout section.

1. Removal Procedure

- a. Locate the Panel Retainer access on the bottom left of the Lynx NGT-9000 bezel.
- b. Rotate the Panel Retainer CCW using 3/32 Allen Hex Socket Screw Driver.
- c. Pull the unit from panel separating the main connector and antenna connections.
- d. Remove 6 screws securing panel rack and remove panel.
- e. Remove 4 screws securing rear plate to panel rack.
- f. Remove 2 screws securing P1 mating connector and nut plate. Remove screw securing ground strap to rear plate.
- g. From the wire bundle remove tie wraps securing overbraid.
- h. Slide overbraid to expose configuration module.
- i. Remove configuration module contacts from the P1 mating connector.

2. Installation Procedure

- a. Insert contacts of new configuration module into P1 mating connector. Refer to Installation Guidelines for the Configuration Module in the installation section for details on the configuration module and configuration module electrical interface.
- b. Slide overbraid back into position, and use a new tie wraps to secure overbraid.
- c. Secure P1 mating connector to rear plate using nut plate and 2 screws.
- d. Secure cable ground strap to rear plate using 1 screw.
- e. Secure rear plate to panel rack using 4 screws.
- f. Insert panel in installation location and secure panel using 6 screws.
- g. Secure panel rack using 6 screws.
- h. On the Lynx NGT-9000 use 3/32 Allen Hex Socket Screw Driver to rotate the panel retainer counterclockwise to avoid interference with the bottom edge of the panel.
- i. Insert the Lynx NGT-9000 in panel allowing the alignment guides to settle the unit into place.
- j. Press the sides of the unit until the back side of the bezel is against the panel.
- k. Rotate the panel retainer clockwise to lock the Lynx NGT-9000 in place. The Panel Retainer torque limit is 5.0 inch-pounds.

3. Functional Check Procedure

- a. Cycle power to the Lynx NGT-9000 and system components.
- b. Ensure no failure messages are annunciated on the controller/display/PED and fail lamp is extinguished after GPS has acquired a signal.
- c. Use the installation checkout section to perform the select configuration options procedure or use the maintenance sections configuration restore is the original configuration (.bin) file can be retrieved from the original installer of the configuration module.
- d. Perform the checkout procedure provided in the installation checkout to verify unit is functioning correctly.
 - Refer to the fault isolation section if errors are detected.

4.6.5 Directional Antenna (NY156 and NY164)

The TAS Antenna Calibration (installation checkout paragraph 3.10.2.8) must be performed anytime the Lynx NGT-9000 or Directional Antenna is removed from the aircraft. Specific details on the installation of the antenna can be found in the installation section.

1. Removal Procedure

- a. Remove 10-32 hardware (nut and bolts) Qty 4, O-ring, and adapter plate.
- b. Disconnect three antenna cables.

2. Installation Procedure

- a. Connect each of the three antenna cables. Check to ensure that each cable is connected to the correct antenna connector. Each connector/cable has a matching color band.
- b. Attach the antenna to the aircraft, with the special adapter plate and o-ring, using 10-32 hardware. Ensure correct direction of antenna. Refer to Figure 2-15 for details.
 - Before installing the antenna on an aircraft remove the tape, which holds the O-RING gasket in place during shipment (refer to SL-206). If the O-ring is in a separate bag, remove and install it in the O-ring groove on the bottom of the antenna.
 - For pressurized aircraft, use a sealant that meets the requirements of SAE AMS-S-8802 such as Flamemaster CS3204 class B. For non-pressurized aircraft, use a non-corrosive sealant that meets the physical requirements of MIL-A-46146 such as General Electric RTV162.

3. Functional Check Procedure

- a. Cycle power to the Lynx NGT-9000 and system components.
- b. Perform the TAS Antenna Calibration (installation checkout paragraph 3.10.2.8) prior to doing a functional check.
- c. Perform a functional check (paragraph paragraph 3.10, Installation Checkout) to verify unit is functioning correctly.
 - Refer to the fault isolation section if errors are detected.

4.6.6 L-Band (UAT/1090) Antenna

1. Refer to the aircraft manufacturer's data and the antenna manufacturer's installation instructions to remove and replace the antenna(s).
 - a. Perform a functional check (paragraph paragraph 3.10, Installation Checkout) to verify unit is functioning correctly.
 - Refer to the fault isolation section if errors are detected.

4.6.7 GPS Antenna

1. Refer to the aircraft manufacturer's data and the antenna manufacturer's installation instructions to remove and replace the antenna(s).
 - a. Perform a functional check (paragraph paragraph 3.10, Installation Checkout) to verify unit is functioning correctly.
 - Refer to the fault isolation section if errors are detected.

4.7 DISPOSITION OF FAILED ITEMS

1. The Lynx NGT-9000 can only be repaired by a FAA Certified Repair Station Facility.
2. The configuration module, NY156, and NY164 cannot be repaired and must be replaced.
3. Contact L-3 Avionics Systems Customer Service to obtain a Return Material Authorization (RMA). Shipping Instructions will be provided with the RMA.
4. Refer to the manufactures data for external displays, controllers, and antennas interfaced to the Lynx NGT-9000.
5. If available, pack components in their original shipping container. If the original container is not available, pack them as follows:

CAUTION

Do not use desiccant crystals when packaging electronic assemblies. Since the assembly must be packed tightly, crystals in bag form cannot be used. The use of loose crystals may cause unnecessary damage resulting in a cleaning problem.

- a. Ensure that conductive covers/caps are installed on the exposed terminals of connector, if applicable.
- b. LRU's that are marked as electrostatic discharge sensitive (ESDS) must be wrapped in static protective materials.
- c. Wrap with bubble pack. Secure bubble pack with reinforced tape.
- d. Place assembly in a cardboard box.
- e. Wrap any accessories in tissue and place in the box. Fill spaces with bubble pack.
- f. Place an explanation letter in the box with the following information.
 - Your name, address, and telephone number.
 - Purchase order number.
 - Description of component including, when applicable, model and serial number.
 - A brief description of the difficulty.
- g. Shut box, and seal with reinforced tape.
- h. Attach packing list to outside of box.

This page intentionally blank

Appendix A

Interface Signal Name & Cable Characteristics

A.1 INTRODUCTION

This appendix defines digital interface label information and electrical characteristics of all input and output signal names to the Lynx NGT-9000. Sufficient data is included to use a bus reader for the purpose of identifying signal input and output characteristics and perform an electrical load analysis for the aircraft. The input and output interfaces are sometimes configurable as noted in the following paragraphs.

The interface characteristics contained in this appendix are fully compatible with ARINC specifications where noted. Connection information identifies the connector-pin and signal names as shown on the external interconnect wiring diagram in the installation section.

A.2 INPUT AND OUTPUT INTERFACES

A.2.1 Input Power

The unit has two power inputs available for either +14 VDC or +28VDC operation. The inputs are not diode isolated and are intended to be tied to the same power input device in order to handle the required current.

A.2.2 RF Suppression Bus

The transmission asserts a positive voltage on the output to provide the suppression to other L-band equipment on the airplane. The suppression pulse output is DC coupled, and drives positive pulses not less than 18 Vdc or greater than 70 Vdc into system loads from 300 to 2000 Ohms with a shunt capacitance of up to 1850 pF. The signal meets the hardware characteristics as defined in ARINC 735B Attachment 8.

The Suppression pulse (Discrete #2 out) is 100 μ s $\pm$ 5 μ s, +28V dc when the unit is transmitting TAS data. There are 2 other lengths of suppression pulses that will be seen when the transponder is operating (1 longer and 1 shorter than 100us)

A.2.3 Audio Output

The audio output is capable of supplying up to 40 milli Watts (RMS) at 1000 Hz into a 600 Ohm audio distribution system. This output is directly compatible with industry standard audio panels.

A.2.4 Gilham Input (Altitude Input)

The Gillham interface is optional. Only one altimeter input source (gray code, ARINC-429 or RS-232) may be connected. The Gillham interface consists of 11 discrete lines. These 11 discrete lines represent 11 binary digits representing the Gillham encoded pressure altitude. The Gillham code uses a modified Gray code algorithm to ensure that no more than one bit changes between adjacent altitudes. The three lowest significant bits represent 100 foot increments. The eight highest significant bits represent 500 foot increments.

The digits are labeled as follows beginning with the most significant bit to the least significant bit (D2, D4, A1, A2, A4, B1, B2, B4, C1, C2, C4).

A.2.5 RS-232 Interface

The RS-232 is a serial interface used to receive and transmit altitude data, interface with the CP-2500 Control Panel, and interface with Wi-Fi Device. The altitude data and Wi-Fi are optional depending on the installation. The CP-2500 is required when installing a remote mount Lynx NGT-9000R.

A.2.5.1 RS-232 WiFi Output

The RS-232 WiFi interface is optional. When configured the NGT-9000 outputs the following information to a WiFi connection:

- FIS-B Weather Data
- ADS-B Traffic Data
- Ownship Data

A.2.5.2 RS-232 Altitude Data

The RS-232 Altitude Data interface is optional. Only one altimeter input source (gray code, ARINC-429 or RS-232) should be connected.

1. When the Trimble/Garmin/Icarus protocol option is used, the following characteristics are set:
 - Requires Altitude Encoder and Control Panel interface
 - Baud rate is set to 9600 bps
 - Data bits 8
 - Parity none
2. When the Northstar protocol option is used, the following characteristics are set:
 - Requires Altitude Encoder and Control Panel interface
 - Baud rate is set to 2400 bps
 - Data bits 8
 - Parity none
3. When the UPS AT protocol option is used, the following characteristics are set:
 - Requires Altitude Encoder and Control Panel interface
 - Baud rate is set to 1200 bps
 - Data bits 8
 - Parity none
4. When the UPS AT Loran 618 protocol option is used, the following characteristics are set:
 - Requires Altitude Encoder and Control Panel interface
 - Baud rate is set to 1200 bps
 - Data bits 7
 - Parity odd
5. When the MAGELLAN protocol option is used, the following characteristics are set:
 - Requires Altitude Encoder and Control Panel interface
 - Baud rate is set to 1200 bps
 - Data bits 8
 - Parity even
6. When the SHADIN protocol option is used, the following characteristics are set:
 - Requires Altitude Encoder and Control Panel interface
 - Baud rate is set to 9600 bps
 - Data bits 8
 - Parity odd
7. When the ARNAV protocol option is used, the following characteristics are set:
 - Requires Altitude Encoder interface
 - Baud rate is set to 9600 bps
 - Data bits 8
 - Parity odd

A.2.6 RS-422 Interface

The RS-422 is a serial interface used to output weather data to a compatible display. The RS-422 standard used in this manual matches the ANSI Standard (i.e. the data lines on the RS-422 signals are labeled with and “A” for negative (inverting), or “B” for positive (non-inverting)).

A.2.7 ARINC 429 Input

Four ARINC 429 Input receivers are available. The ARINC 429 input can be configured to receive data at low (12.0 to 14.5 kbps) or high (100 kbps). The ARINC Bus is dedicated to the functions listed below:

- ARINC 429 Bus 1 used to input Pressure Altitude data.
- ARINC 429 Bus 2 used to input AHRS data.
- ARINC 429 Bus 3 is spare.
- ARINC 429 Bus 4 is configurable.

A.2.7.1 ARINC 429 Input Labels

1. The following ARINC 429 labels are inputs from Pressure Altitude on Bus #1:
 - Label 203 – Pressure Altitude Uncorrected (BNR)
 - Label 204 – Baro Corrected Altitude (BNR)
 - Label 205 – Mach (BNR)
 - Label 206 – Computed Airspeed (BNR)
 - Label 210 – True Airspeed (BNR)
 - Label 212 – Altitude Rate (BNR)
 - Label 234 – Baro Correction, mB (BNR)
2. The following ARINC 429 labels are inputs from an Attitude and Heading Reference System (AHRS) on Bus #2:
 - Label 314 – True Heading
 - Label 320 – Magnetic Heading
 - Label 325 – Roll Angle (BNR)
 - Label 335 – Track Angle Rate
3. The following ARINC 429 labels are inputs on bus #4 when configured for Combo Bus:
 - Label 101 – Selected Heading
 - Label 102 – FMS Selected Altitude (SDI set to FMS)
 - Label 102 – MCP Selected Altitude (SDI set to MCP)

A.2.8 ARINC 429 Output

The unit has one ARINC 429 Output that transmits data at high (100 kbps). The Lynx NGT-9000 have the option of interfacing to the Traffic display over the ARINC 429 bus using the standard traffic display (STIF) format as defined in ARINC 735 and the Display Traffic Information File (DTIF) as described in ARINC 735B. The specific display format is configurable through the DCM.

NOTE

The Lynx NGT-9000 follows the same STIF display as the L-3 SKY-497 TAS system. Select that option (if available) in the STIF display configuration settings.

A.2.8.1 ARINC 429 Output Labels

The following ARINC 429 labels are output to a Traffic Display on Bus #1:

- Label 013 - TCAS Display Control (DSC)
- Label 015 - Altitude Select Limits (DSC)
- Label 016 - Mode S Control Panel Data (DSC)
- Label 163 - Application Availability (DSC)
- Label 270 - Vertical Resolution Advisories (DSC)
- Label 274 - Selected Sensitivity Level (DSC)
- Label 350 - TCAS Fault Summary (DSC)
- Label 371 - GA Equipment ID (DSC)
- Label 377 - Equipment ID (DSC)
- Label 110 - Own Aircraft Latitude - Coarse (BNR)
- Label 111 - Own Aircraft Longitude - Coarse (BNR)
- Label 120 - Own Aircraft Latitude - Fine (BNR)
- Label 121 - Own Aircraft Longitude - Fine (BNR)
- Label 203 – Own Aircraft Barometric Altitude (Uncorrected) (BNR)
- Label 310 - Own Aircraft Latitude - Coarse (BNR)
- Label 311 - Own Aircraft Longitude - Coarse (BNR)
- Label 312 - Own Aircraft Ground Speed (BNR)
- Label 313 - Own Aircraft True Track Angle (BNR)
- Label 314 - Own Aircraft True Heading (BNR)
- Label 320 - Own Aircraft Magnetic Heading (BNR)
- Standard TCAS Intruder File (when enabled)
- Display Traffic Information File (when enabled)

A.2.9 Discrete Input

The unit has 6 discrete inputs that are set to GND/Open. The GND position is typically (depending on configuration options) the active (ON) position.

The discrete inputs provide 1.0 ± 0.25 ma of current when the input is grounded. The input is in the ground state when input voltage is less than or equal to 3.5Vdc, or there is less than 10 Ohms impedance to ground. The input is in the open state when the input voltage is greater than or equal to 18.0Vdc, or there is greater than 100K Ohms impedance to ground. The discretes are dedicated or reserved as stated below:

- Discrete #1 is used for IDENT command which is used to signal the unit to identify itself with IDENT signal. The discrete is set to GND/Open. The GND position indicates IDENT being transmitted.
- Discrete #2 is used is used to Mute Audio (traffic) coming from the Lynx NGT-9000. Audio mute is required if installed with other CAWS alerting system (i.e. TAWS) that needs to mute the traffic system for a higher priority audio annunciation. The discrete is set to GND/Open. The active position mutes the audio.
- Discrete #3 is used for On Ground status which used to determine whether ownship is in air or on ground. The discrete is called Weight On Wheels (WOW) which can be connected to either a squat switch, airspeed monitor, or a collective switch. The discrete can be set in the DCM settings to either ground on ground, open on ground, or not used.
- Discrete #4 is reserved
- Discrete #5 is reserved
- Discrete #6 is reserved

A.2.10 Discrete Output

The unit has 6 discrete outputs that are set to GND/Open.

The ground logic state has an output voltage of < 3.0Vdc when sinking 250mA of current. The open logic state has an output impedance of > 100K ohms to ground for voltages applied to the output of 0.0 to 36.0Vdc.

The outputs have the capability of driving a Type 313 lamp. The lamp must have an initial resistance at turn ON (cold) of 28Ω minimum and a steady state ON resistance of 280Ω minimum.

The discretes are dedicated or reserved as stated below:

- Discrete #1 is reserved
- Discrete #2 is reserved.
- Discrete #3 is used for TAS Alert. The discrete is set to GND/Open. The active position indicates Traffic Alert.
- Discrete #4 is reserved.
- Discrete #5 is reserved.
- Discrete #6 is used for ADS-B Out Fail. The discrete is set to GND/Open.

A.2.11 I²C Serial Bus (Detachable Configuration Module)

The I²C serial bus is used to communicate with the Detachable Configuration Module to store the following configuration options:

1. Configuration module Config Version
2. Configuration module Configuration Data CRC
3. Installation Calibration Parameters (non-box specific)
 - Audio Volume Level
 - TAS Antenna Calibration and Serial Number
4. Aircraft Specific Configuration Options
 - Aircraft Tail Number
 - Mode S Identifier
 - Transponder Diversity Enable
 - TAS Enable
 - TAS Extended Callout Enable
 - TAS Directional Antenna Type
 - Antenna Installation
 - TAS Directional Antenna Type
 - Aircraft Emitter Category Type Code
 - Broadcast Category
 - Pilot Entry of Flight ID
 - Aircraft Length and Width Code
 - Aircraft Maximum Airspeed
 - Normal Traffic Color
5. AHRS and Altitude Configuration Options
 - AHRS Source
 - AHRS ARINC 429 Bus Speed
 - Altitude Source
 - RS-232 Altitude Protocol
 - RS-232 Altitude Baud Rate
 - ARINC 429 Altitude Bus Speed
 - Resolution
6. Misc Configuration Options
 - ARINC Input #1
 - ARINC Input #2
 - ARINC Output #1
 - RS-422 Baud Rate
 - RS-422 ADS-B Output
 - RS-422 FIS-B Weather Output
 - CDTI Output
 - Control Panel Type
 - In Air /On Ground - On Ground Discrete Installed
 - In Air /On Ground – Ground Speed Threshold
 - In Air /On Ground - Altitude Threshold

A.2.12 Antenna Connections

The unit has 5 TNC connections labeled A1 thru A5. All models of the Lynx NGT-9000 are required to have GPS and Omnidirectional (UAT) cable connections (A5 & A3). Models with TAS have three cables connecting to A1, A2, and A4. Models with Diversity have one cable connecting to A2.

Lynx NGT-9000 Installation Manual

A.3 PIN DEFINITION SUMMARY

Table A-1: Connector (P1) Pin Assignments

Pin	Function Name	Type*	Pin	Function Name	Type*
1	+14/28VDC POWER IN 1	P	40	ARINC 429 1 INPUT A (PRES. ALT.)	I
2	+14/28VDC POWER IN 2	P	41	ARINC 429 1 INPUT B (PRES. ALT.)	I
3	+14/28VDC POWER RETURN 1	C	42	ARINC 429 2 INPUT A (AHRS)	I
4	+14/28VDC POWER RETURN 2	C	43	ARINC 429 2 INPUT B (AHRS)	I
5	GILHAM ALTITUDE ENCODER A1	I	44	RESERVED	R
6	GILHAM ALTITUDE ENCODER A2	I	45	RESERVED	R
7	GILHAM ALTITUDE ENCODER A4	I	46	ARINC 429 4 INPUT A (CONFIG.)	I
8	GILHAM ALTITUDE ENCODER B1	I	47	ARINC 429 4 INPUT B (CONFIG.)	I
9	GILHAM ALTITUDE ENCODER B2	I	48	ARINC 429 OUTPUT A (CDTI DIS.)	O
10	GILHAM ALTITUDE ENCODER B4	I	49	ARINC 429 OUTPUT B (CDTI DIS.)	O
11	GILHAM ALTITUDE ENCODER C1	I	50	RS-422 INPUT B	I
12	GILHAM ALTITUDE ENCODER C2	I	51	RS-422 INPUT A	I
13	GILHAM ALTITUDE ENCODER C4	I	52	RS-422 OUTPUT B	O
14	GILHAM ALTITUDE ENCODER D2	I	53	RS-422 OUTPUT A	O
15	GILHAM ALTITUDE ENCODER D4	I	54	SPARE	S
16	GROUND	C	55	SPARE	S
17	I2C DATA LINE	I	56	SPARE	S
18	I2C CLOCK LINE	I	57	SPARE	S
19	3.3V OUTPUT	O	58	SPARE	S
20	3.3V RETURN	C	59	SPARE	S
21	RESERVED	R	60	RS-232 RX3 (ALT. ENCODER)	I
22	RESERVED	R	61	RS-232 RX1 (CONT. PAN. INTER.)	I
23	TAS ALERT INDICATOR	O	62	RS-232 TX1 (CONT. PAN. INTER.)	O
24	RESERVED	O	63	RS-232 RX2 (PED/WI-FI DEVICE)	I
25	RESERVED	R	64	RS-232 TX2 (PED/WI-FI DEVICE)	O
26	ADS-B FAIL INDICATOR	O	65	RS-232 (FACTORY ONLY)	R
27	IDENT	I	66	RS-232 (FACTORY ONLY)	R
28	AUDIO MUTE	I	67	RS-232 (FACTORY ONLY)	R
29	SQUAT / AIR SPEED MONITOR	I	68	RS-232 (FACTORY ONLY)	R
30	RESERVED	R	69	SPARE	S
31	SPARE	S	70	SPARE	S
32	SPARE	S	71	SPARE	S
33	RF SUPPRESSION INPUT	I	72	SPARE	S
34	SPARE	S	73	SPARE	S
35	SPARE	S	74	SPARE	S
36	SPARE	S	75	SPARE	S
37	SPARE	S	76	TCAS PRETRIGGER TEST OUTPUT	R
38	AUDIO OUT 600 OHM H	O	77	XPDR PRETRIGGER TEST OUTPUT	R
39	AUDIO OUT 600 OHM L	C	78	ANT. TOP/BOTTOM TEST OUTPUT	R

* Signal Functions: I = Signal Input O = Signal Output B = Bidirectional Signal P = Power Input
 C = Common or Ground S = Spare Pin R = Reserved (Do Not Connect)

A.4 [J1 CONNECTOR]

PIN 1

Signal Name:	PWR_14_28VDC_IN
Signal Function:	+ 14/28 VDC Power IN 1
Electrical Characteristics:	30.0 watts maximum average
Connection:	Aircraft 28V BUS. 22 AWG wire
Comments:	

PIN 2

Signal Name:	PWR_14_28VDC_IN
Signal Function:	+ 14/28 VDC Power IN 2
Electrical Characteristics:	30.0 watts maximum average
Connection:	Aircraft 28V BUS. 22 AWG wire
Comments:	

PIN 3

Signal Name:	Ground
Signal Function:	14/28 V Power Return 1
Electrical Characteristics:	-----
Connection:	Aircraft 14 or 28V Return BUS 22 AWG wire
Comments:	

PIN 4

Signal Name:	Ground
Signal Function:	14/28 V Power Return 2
Electrical Characteristics:	-----
Connection:	Aircraft 14 or 28V Return BUS 22 AWG wire
Comments:	

PIN 5

Signal Name:	ALT_IN_A1
Signal Function:	Gilham Altitude Encoder
Electrical Characteristics:	+30 V input max, < 1 mA sourced per line Frequency: 20 Hz, Source Z: > 10 k Ω per line Max Capacitance: < 20 pF per line
Connection:	See paragraph A.2.4 24 AWG wire
Comments:	

Lynx NGT-9000
Installation Manual

[J1 connector] (Continued)

PIN 6

Signal Name:	ALT_IN_A2
Signal Function:	Gilham Altitude Encoder
Electrical Characteristics:	+30 V input max, < 1 mA sourced per line Frequency: 20 Hz, Source Z: > 10 k Ω per line Max Capacitance: < 20 pF per line
Connection:	See paragraph A.2.4 24 AWG wire
Comments:	

PIN 7

Signal Name:	ALT_IN_A4
Signal Function:	Gilham Altitude Encoder
Electrical Characteristics:	+30 V input max, < 1 mA sourced per line Frequency: 20 Hz, Source Z: > 10 k Ω per line Max Capacitance: < 20 pF per line
Connection:	See paragraph A.2.4 24 AWG wire
Comments:	

PIN 8

Signal Name:	ALT_IN_B1
Signal Function:	Gilham Altitude Encoder
Electrical Characteristics:	+30 V input max, < 1 mA sourced per line Frequency: 20 Hz, Source Z: > 10 k Ω per line Max Capacitance: < 20 pF per line
Connection:	See paragraph A.2.4 24 AWG wire
Comments:	

PIN 9

Signal Name:	ALT_IN_B2
Signal Function:	Gilham Altitude Encoder
Electrical Characteristics:	+30 V input max, < 1 mA sourced per line Frequency: 20 Hz, Source Z: > 10 k Ω per line Max Capacitance: < 20 pF per line
Connection:	See paragraph A.2.4 24 AWG wire
Comments:	

Lynx NGT-9000
Installation Manual

[J1 connector] (Continued)

PIN 10

Signal Name:	ALT_IN_B4
Signal Function:	Gilham Altitude Encoder
Electrical Characteristics:	+30 V input max, < 1 mA sourced per line Frequency: 20 Hz, Source Z: > 10 k Ω per line Max Capacitance: < 20 pF per line
Connection:	See paragraph A.2.4 24 AWG wire
Comments:	

PIN 11

Signal Name:	ALT_IN_C1
Signal Function:	Gilham Altitude Encoder
Electrical Characteristics:	+30 V input max, < 1 mA sourced per line Frequency: 20 Hz, Source Z: > 10 k Ω per line Max Capacitance: < 20 pF per line
Connection:	See paragraph A.2.4 24 AWG wire
Comments:	

PIN 12

Signal Name:	ALT_IN_C2
Signal Function:	Gilham Altitude Encoder
Electrical Characteristics:	+30 V input max, < 1 mA sourced per line Frequency: 20 Hz, Source Z: > 10 k Ω per line Max Capacitance: < 20 pF per line
Connection:	See paragraph A.2.4 24 AWG wire
Comments:	

PIN 13

Signal Name:	ALT_IN_C4
Signal Function:	Gilham Altitude Encoder
Electrical Characteristics:	+30 V input max, < 1 mA sourced per line Frequency: 20 Hz, Source Z: > 10 k Ω per line Max Capacitance: < 20 pF per line
Connection:	See paragraph A.2.4 24 AWG wire
Comments:	

[J1 connector] (Continued)

PIN 14

Signal Name:	ALT_IN_D2
Signal Function:	Gilham Altitude Encoder
Electrical Characteristics:	+30 V input max, < 1 mA sourced per line Frequency: 20 Hz, Source Z: > 10 k Ω per line Max Capacitance: < 20 pF per line
Connection:	Not Connected
Comments:	This input used for high altitude aircraft.

PIN 15

Signal Name:	ALT_IN_D4
Signal Function:	Gilham Altitude Encoder
Electrical Characteristics:	+30 V input max, < 1 mA sourced per line Frequency: 20 Hz, Source Z: > 10 k Ω per line Max Capacitance: < 20 pF per line
Connection:	See paragraph A.2.4 24 AWG wire
Comments:	

PIN 16

Signal Name:	GROUND
Signal Function:	Signal Ground
Electrical Characteristics:	---
Connection:	Ground
Comments:	

PIN 17

Signal Name:	CM SDA
Signal Function:	SDA Serial Data
Electrical Characteristics:	See paragraph A.2.11
Connection:	Detachable Configuration Module – Yellow wire
Comments:	

PIN 18

Signal Name:	CM SCL
Signal Function:	SCL Serial Clock
Electrical Characteristics:	See paragraph A.2.11
Connection:	Detachable Configuration Module – green wire
Comments:	

Lynx NGT-9000 Installation Manual

[J1 connector] (Continued)

PIN 19

Signal Name:	CM 3.3V
Signal Function:	SPWR Serial Power (3.3 Vdc Power), 50ma max
Electrical Characteristics:	See paragraph A.2.11
Connection:	Detachable Configuration Module – red wire
Comments:	

PIN 20

Signal Name:	CM GND
Signal Function:	SGND Serial Ground
Electrical Characteristics:	See paragraph A.2.11
Connection:	Detachable Configuration Module – Black wire
Comments:	

PIN 21

Signal Name:	DISC_OUT1 (Discrete Output No. 1)
Signal Function:	Reserved (TAWS Caution)
Electrical Characteristics:	GND/Open (GND active) Ground State < 3.0Vdc when sinking 250mA. Open State has an impedance of >100K ohms to ground for voltages applied to the output of 0.0 to 36.0Vdc.
Connection:	No Connection
Comments:	See paragraph A.2.10.

PIN 22

Signal Name:	DISC_OUT2 (Discrete Output No. 2)
Signal Function:	Reserved (TAWS Warning)
Electrical Characteristics:	GND/Open (GND active) Ground State < 3.0Vdc when sinking 250mA. Open State has an impedance of >100K ohms to ground for voltages applied to the output of 0.0 to 36.0Vdc.
Connection:	No Connection
Comments:	See paragraph A.2.10.

PIN 23

Signal Name:	DISC_OUT3 (Discrete Output No. 3)
Signal Function:	TAS Alert.
Electrical Characteristics:	GND/Open (GND active) Ground State < 3.0Vdc when sinking 250mA. Open State has an impedance of >100K ohms to ground for voltages applied to the output of 0.0 to 36.0Vdc.
Connection:	Indicator Lamp 24 AWG wire
Comments:	See paragraph A.2.10.

Lynx NGT-9000
Installation Manual

[J1 connector] (Continued)

PIN 24

Signal Name:	DISC_OUT4 (Discrete Output No. 4)
Signal Function:	Reserved (TSAA)
Electrical Characteristics:	GND/Open (GND active) Ground State < 3.0Vdc when sinking 250mA. Open State has an impedance of >100K ohms to ground for voltages applied to the output of 0.0 to 36.0Vdc.
Connection:	No Connection
Comments:	See paragraph A.2.10.

PIN 25

Signal Name:	DISC_OUT5 (Discrete Output No. 5)
Signal Function:	Reserved (Audio Mute Command)
Electrical Characteristics:	GND/Open (GND active) Ground State < 3.0Vdc when sinking 250mA. Open State has an impedance of >100K ohms to ground for voltages applied to the output of 0.0 to 36.0Vdc.
Connection:	No Connection
Comments:	See paragraph A.2.10.

PIN 26

Signal Name:	DISC_OUT6 (Discrete Output No. 6)
Signal Function:	ADS-B Fail Indicator
Electrical Characteristics:	GND/Open (GND active) Ground State < 3.0Vdc when sinking 250mA. Open State has an impedance of >100K ohms to ground for voltages applied to the output of 0.0 to 36.0Vdc.
Connection:	Indicator Lamp 24 AWG wire
Comments:	See paragraph A.2.10.

PIN 27

Signal Name:	DISC_IN1 (Discrete Input No. 1)
Signal Function:	IDENT
Electrical Characteristics:	GND/Open (GND active) Ground State $\leq$ 3.5Vdc, Open State $\geq$ 18Vdc
Connection:	Momentary Switch 24 AWG wire
Comments:	See paragraph A.2.9.

Lynx NGT-9000
Installation Manual

[J1 connector] (Continued)

PIN 28

Signal Name:	DISC_IN2 (Discrete Input No. 2)
Signal Function:	Audio Mute
Electrical Characteristics:	GND/Open (GND active) Ground State $\leq 3.5\text{Vdc}$, Open State $\geq 18\text{Vdc}$
Connection:	24 AWG wire
Comments:	When active all traffic alerts are suppressed. Typically connected to TAWS or other aircraft warning device with a higher audio priority. See paragraph A.2.9.

PIN 29

Signal Name:	DISC_IN3 (Discrete Input No. 3)
Signal Function:	WOW (Squat / Air Speed Monitor input)
Electrical Characteristics:	DCM selectable for GND active or Open active. Ground State $\leq 3.5\text{Vdc}$, Open State $\geq 18\text{Vdc}$
Connection:	On/Off Switch 24 AWG wire
Comments:	See paragraph A.2.9.

PIN 30

Signal Name:	DISC_IN4 (Discrete Input No. 4)
Signal Function:	Reserved (TSAA Inhibit)
Electrical Characteristics:	GND/Open (GND active) Ground State $\leq 3.5\text{Vdc}$, Open State $\geq 18\text{Vdc}$
Connection:	No Connection
Comments:	See paragraph A.2.9.

PIN 31

Signal Name:	DISC_IN5 (Discrete Input No. 5)
Signal Function:	Spare
Electrical Characteristics:	GND/Open (GND active) Ground State $\leq 3.5\text{Vdc}$, Open State $\geq 18\text{Vdc}$
Connection:	No Connection
Comments:	See paragraph A.2.9.

PIN 32

Signal Name:	DISC_IN6 (Discrete Input No. 6)
Signal Function:	Spare
Electrical Characteristics:	GND/Open (GND active) Ground State $\leq 3.5\text{Vdc}$, Open State $\geq 18\text{Vdc}$
Connection:	No Connection
Comments:	See paragraph A.2.9.

[J1 connector] (Continued)

PIN 33

Signal Name:	SUPPR_BUS
Signal Function:	RF Suppression Output
Electrical Characteristics:	See paragraph A.2.2
Connection:	Aircraft Suppression Bus 24 AWG twisted shielded wire
Comments:	

PIN 34

Signal Name:	Spare
Signal Function:	Spare pin
Electrical Characteristics:	---
Connection:	No Connection
Comments:	

PIN 35

Signal Name:	Spare
Signal Function:	Spare pin
Electrical Characteristics:	---
Connection:	No Connection
Comments:	

PIN 36

Signal Name:	Spare
Signal Function:	Spare pin
Electrical Characteristics:	---
Connection:	No Connection
Comments:	

PIN 37

Signal Name:	Spare
Signal Function:	Spare pin
Electrical Characteristics:	---
Connection:	No Connection
Comments:	

Lynx NGT-9000
Installation Manual

[J1 connector] (Continued)

PIN 38

Signal Name:	AUDIO OUT
Signal Function:	Audio Out 600 Ohm H
Electrical Characteristics:	40 milli Watts (RMS) at 1000 Hz into a 600 Ohm audio distribution system.
Connection:	Audio Panel 24 AWG twisted shielded pair wire
Comments:	See paragraph A.2.3

PIN 39

Signal Name:	GROUND
Signal Function:	Audio Out 600 Ohm L
Electrical Characteristics:	Ground
Connection:	Audio Panel 24 AWG twisted shielded pair wire
Comments:	See paragraph A.2.3

PIN 40

Signal Name:	RX1_429A (ARINC 429_1_IN A)
Signal Function:	Pressure Altitude Input ARINC 429
Electrical Characteristics:	Configuration Option: Low Speed ARINC 429 (12.0 to 14.5 kbps) High Speed ARINC 429 (100 kbps)
Connection:	24 AWG twisted shielded pair wire
Comments:	See paragraph A.2.7.

PIN 41

Signal Name:	RX1_429B (ARINC 429_1_IN B)
Signal Function:	Pressure Altitude Input ARINC 429
Electrical Characteristics:	Configuration Option: Low Speed ARINC 429 (12.0 to 14.5 kbps) High Speed ARINC 429 (100 kbps)
Connection:	24 AWG twisted shielded pair wire
Comments:	See paragraph A.2.7.

PIN 42

Signal Name:	RX2_429A (ARINC 429_2_IN A)
Signal Function:	AHRS Input ARINC 429
Electrical Characteristics:	Configuration Option: Low Speed ARINC 429 (12.0 to 14.5 kbps) High Speed ARINC 429 (100 kbps) Combo Bus
Connection:	24 AWG twisted shielded pair wire
Comments:	See paragraph A.2.7.

Lynx NGT-9000 Installation Manual

[J1 connector] (Continued)

PIN 43

Signal Name:	RX2_429B (ARINC 429_2_IN B)
Signal Function:	AHRS Input ARINC 429
Electrical Characteristics:	Configuration Option: Low Speed ARINC 429 (12.0 to 14.5 kbps) High Speed ARINC 429 (100 kbps) Combo Bus
Connection:	24 AWG twisted shielded pair wire
Comments:	See paragraph A.2.7.

PIN 44

Signal Name:	RX3_429A (ARINC 429_3_IN A)
Signal Function:	Reserved
Electrical Characteristics:	Configuration Option: Low Speed ARINC 429 (12.0 to 14.5 kbps) High Speed ARINC 429 (100 kbps)
Connection:	24 AWG twisted shielded pair wire
Comments:	See paragraph A.2.7.

PIN 45

Signal Name:	RX3_429B (ARINC 429_3_IN B)
Signal Function:	Reserved
Electrical Characteristics:	Configuration Option: Low Speed ARINC 429 (12.0 to 14.5 kbps) High Speed ARINC 429 (100 kbps)
Connection:	24 AWG twisted shielded pair wire
Comments:	See paragraph A.2.7.

PIN 46

Signal Name:	RX4_429A (ARINC 429_4_IN A)
Signal Function:	Configurable – Combo Bus 429 #2
Electrical Characteristics:	High Speed ARINC 429 (100 kbps)
Connection:	24 AWG twisted shielded pair wire
Comments:	See paragraph A.2.7.

PIN 47

Signal Name:	RX4_429B (ARINC 429_4_IN B)
Signal Function:	Configurable – Combo Bus 429 #2
Electrical Characteristics:	High Speed ARINC 429 (100 kbps)
Connection:	24 AWG twisted shielded pair wire
Comments:	See paragraph A.2.7.

Lynx NGT-9000
Installation Manual

[J1 connector] (Continued)

PIN 48

Signal Name:	TX_429A (ARINC 429_OUT A)
Signal Function:	ARINC 429 Output for CDTI display
Electrical Characteristics:	High Speed ARINC 429 (100 kbps) L-3 Sky-497 STIF format
Connection:	24 AWG twisted shielded pair wire
Comments:	See paragraph A.2.8

PIN 49

Signal Name:	TX_429B (ARINC 429_OUT B)
Signal Function:	ARINC 429 Output for CDTI display
Electrical Characteristics:	High Speed ARINC 429 (100 kbps) L-3 Sky-497 STIF format
Connection:	24 AWG twisted shielded pair wire
Comments:	See paragraph A.2.8

PIN 50

Signal Name:	RS422_RXB
Signal Function:	RS-422 Input
Electrical Characteristics:	Data bits 8, Parity none, Stop bit 1, Start bit 1, Data format is ASCII, Flow control is none. Baud Rate: (configuration option) 38400, 57600, or 115200. Depending on the equipment manufacturer
Connection:	Optional. 24 AWG twisted shielded pair wire
Comments:	See paragraph A.2.6

PIN 51

Signal Name:	RS422_RXA
Signal Function:	RS-422 Input
Electrical Characteristics:	Data bits 8, Parity none, Stop bit 1, Start bit 1, Data format is ASCII, Flow control is none. Baud Rate: (configuration option) 38400, 57600, or 115200. Depending on the equipment manufacturer
Connection:	Optional. 24 AWG twisted shielded pair wire
Comments:	See paragraph A.2.6

PIN 52

Signal Name:	RS422_TXB
Signal Function:	RS-422 Output
Electrical Characteristics:	Data bits 8, Parity none, Stop bit 1, Start bit 1, Data format is ASCII, Flow control is none. Baud Rate: (configuration option) 38400, 57600, or 115200. Depending on the equipment manufacturer
Connection:	Optional. 24 AWG twisted shielded pair wire
Comments:	See paragraph A.2.6

Lynx NGT-9000 Installation Manual

[J1 connector] (Continued)

PIN 53

Signal Name:	RS422_TXA
Signal Function:	RS-422 Output
Electrical Characteristics:	Data bits 8, Parity none, Stop bit 1, Start bit 1, Data format is ASCII, Flow control is none. Baud Rate: (configuration option) 38400, 57600, or 115200. Depending on the equipment manufacturer
Connection:	Optional. 24 AWG twisted shielded pair wire
Comments:	See paragraph A.2.6

PIN 54

Signal Name:	Spare
Signal Function:	Spare pin
Electrical Characteristics:	---
Connection:	No Connection
Comments:	

PIN 55

Signal Name:	Spare
Signal Function:	Spare pin
Electrical Characteristics:	---
Connection:	No Connection
Comments:	

PIN 56

Signal Name:	Spare
Signal Function:	Spare pin
Electrical Characteristics:	---
Connection:	No Connection
Comments:	

PIN 57

Signal Name:	Spare
Signal Function:	Spare pin
Electrical Characteristics:	---
Connection:	No Connection
Comments:	

Lynx NGT-9000 Installation Manual

[J1 connector] (Continued)

PIN 58

Signal Name:	Spare
Signal Function:	Spare pin
Electrical Characteristics:	---
Connection:	No Connection
Comments:	

PIN 59

Signal Name:	Spare
Signal Function:	Spare pin
Electrical Characteristics:	---
Connection:	No Connection
Comments:	

PIN 60

Signal Name:	RS232_RX3
Signal Function:	Altitude Encoder RS-232 RX (Encoder Input)
Electrical Characteristics:	Data bits (configuration option) 7 or 8, Parity none, Stop bit 1, Start bit 1, Data format is ASCII, Flow control is none. Baud Rate: (configuration option) 1200, 2400, 4800, 9600, 12000, 19200, 28800, 38400, 57600, or 115200 bps. Depending on the equipment manufacturer and selected in the DCM.
Connection:	Optional. 24 AWG twisted shielded pair wire
Comments:	See paragraph A.2.5.2

PIN 61

Signal Name:	RS232_RX1
Signal Function:	RS-232 Control Panel Interface
Electrical Characteristics:	Data bits 8, Parity none, Stop bit 1, Start bit 1, Data format is ASCII, Flow control is none. Baud Rate: 1200 bps.
Connection:	CP-2500 (remote mount Lynx NGT-9000 only). 24 AWG twisted shielded pair wire
Comments:	See paragraph A.2.5.2

PIN 62

Signal Name:	RS232_TX1
Signal Function:	RS-232 Control Panel Interface
Electrical Characteristics:	Data bits 8, Parity none, Stop bit 1, Start bit 1, Data format is ASCII, Flow control is none. Baud Rate: 1200 bps.
Connection:	CP-2500 (remote mount Lynx NGT-9000 only). 24 AWG twisted shielded pair wire
Comments:	See paragraph A.2.5.2

[J1 connector] (Continued)

PIN 63

Signal Name:	RS232_RX2
Signal Function:	RS-232 PED/Wi-Fi Device
Electrical Characteristics:	Data bits 8, Parity none, Stop bit 1, Start bit 1, Data format is ASCII, Flow control is none. Baud Rate: 115200 bps.
Connection:	Optional. 24 AWG twisted shielded pair wire
Comments:	See paragraph A.2.5.1

PIN 64

Signal Name:	RS232_TX2
Signal Function:	RS-232 PED/Wi-Fi Device
Electrical Characteristics:	Data bits 8, Parity none, Stop bit 1, Start bit 1, Data format is ASCII, Flow control is none. Baud Rate: 115200 bps.
Connection:	Optional. 24 AWG twisted shielded pair wire
Comments:	See paragraph A.2.5.1

PIN 65

Signal Name:	RESERVED
Signal Function:	RS-232 (Factory Only)
Electrical Characteristics:	---
Connection:	No Connection
Comments:	

PIN 66

Signal Name:	RESERVED
Signal Function:	RS-232 (Factory Only)
Electrical Characteristics:	---
Connection:	No Connection
Comments:	

PIN 67

Signal Name:	RESERVED
Signal Function:	RS-232 (Factory Only)
Electrical Characteristics:	---
Connection:	No Connection
Comments:	

[J1 connector] (Continued)

PIN 68

Signal Name:	RESERVED
Signal Function:	RS-232 (Factory Only)
Electrical Characteristics:	---
Connection:	No Connection
Comments:	

PIN 69

Signal Name:	Spare
Signal Function:	Spare pin
Electrical Characteristics:	---
Connection:	No Connection
Comments:	

PIN 70

Signal Name:	Spare
Signal Function:	Spare pin
Electrical Characteristics:	---
Connection:	No Connection
Comments:	

PIN 71

Signal Name:	Spare
Signal Function:	Spare pin
Electrical Characteristics:	---
Connection:	No Connection
Comments:	

PIN 72

Signal Name:	Spare
Signal Function:	Spare pin
Electrical Characteristics:	---
Connection:	No Connection
Comments:	

PIN 73

Signal Name:	Spare
Signal Function:	Spare pin
Electrical Characteristics:	---
Connection:	No Connection
Comments:	

[J1 connector] (Continued)

PIN 74

Signal Name:	Spare
Signal Function:	Spare pin
Electrical Characteristics:	---
Connection:	No Connection
Comments:	

PIN 75

Signal Name:	Spare
Signal Function:	Spare pin
Electrical Characteristics:	---
Connection:	No Connection
Comments:	

PIN 76

Signal Name:	RESEARVED
Signal Function:	TCAS Pretrigger test output
Electrical Characteristics:	---
Connection:	No Connection
Comments:	FACTORY ONLY

PIN 77

Signal Name:	RESEARVED
Signal Function:	XPDR Pretrigger test output
Electrical Characteristics:	---
Connection:	No Connection
Comments:	FACTORY ONLY

PIN 78

Signal Name:	RESEARVED
Signal Function:	Antenna Top/Bottom test output
Electrical Characteristics:	---
Connection:	No Connection
Comments:	FACTORY ONLY

This page intentionally blank

Appendix B

Environmental Qualification Form

B.1 INTRODUCTION

This appendix includes the environmental qualifications form required for the Lynx NGT-9000, Detachable Configuration Module, NY156, and NY164 Directional Antenna.

B.2 LYNX NGT-9000 ENVIRONMENTAL QUALIFICATION FORM

PRODUCT DESCRIPTION:	Multilink Surveillance System Panel Mount	Multilink Surveillance System Remote Mount
TYPE DESIGNATION:	NGT-9000D Release 1	NGT-9000RD Release 1
MODEL:	NGT-9000, NGT-9000+, NGT-9000D	NGT-9000R, NGT-9000R+, NGT-9000RD
HARDWARE PART NO.:	9029000-20000	9029000-40000
MANUFACTURER:	Aviation Communication and Surveillance Systems	
ADDRESS:	ACSS 19810 N. 7th Avenue Phoenix, AZ 85027-4741	

PRODUCT DESCRIPTION::	Detachable Configuration Module
PART NUMBERS:	9230-17003-01
MANUFACTURER:	Aviation Communication and Surveillance Systems
ADDRESS:	ACSS 19810 N. 7th Avenue Phoenix, AZ 85027-4741

DESCRIPTION		SECT. NO.	CAT.	DESCRIPTION
Temperature and Altitude	Low Temperature	4.5.1 4.5.2	F1	Panel Mount: -20° C Operating Remote Mount: -45° C Operating -40° C Short Time Operating. -55° C Ground Survival
	High Temperature	4.5.3 4.5.4		Panel Mount: +55° C Operating Remote Mount: +70° C Operating +70° C Short Time Operating +85° C Ground Survival
	In-Flight Loss of Cooling	4.5.5		Not Applicable, Not Tested. External Cooling Not Required
	Altitude	4.6.1		Tested to 55,000 ft Maximum Operating Altitude
	Decompression	4.6.2	A1	8,000 ft to 55,000 ft.
	Overpressure	4.6.3		-15,000 ft.
Temperature Variation		5.3.1	B	5° C/min Non-controlled temperature, Equipment mounted internal in aircraft

Lynx NGT-9000
Installation Manual

DESCRIPTION		SECT. NO.	CAT.	DESCRIPTION
Humidity		6.3.1	A	Standard Humidity Environment
Operational Shocks and Crash Safety	Operational Shocks	7.2	B	3 shocks of 6g for 11 mS.
	Crash Safety	7.3	B	One 20g Impulse shock in both directions of each orthogonal axis for a total of 6 shocks. Sustained Aircraft Type 5 (Helicopter and All Fixed-Wing) Test Type R (Random Orientation) per Table 7-1 of DO-160F.
Vibration		8	S	Fixed Wing, Curve M, Sine
			R	Robust Fixed Wing, Curves B & B1, Random
			U2	Rotorcraft, Curve F and F1
Explosive Atmosphere		9	X	Not Applicable, Not Tested.
Waterproofness		10	X	Not Applicable, Not Tested.
Fluids Susceptibility		11	X	Not Applicable, Not Tested.
Sand and Dust		12	X	Not Applicable, Not Tested.
Fungus Resistance		13	X	Not Applicable, Not Tested.
Salt Spray		14	X	Not Applicable, Not Tested.
Magnetic Effect		15	Z	<0.3m for deflection of D _c .
Power Input		16	BXX	14V and 28V DC inputs
Voltage Spike		17	A	600 V/2 μ s from 50 Ω source impedance
Audio Frequency Conducted Susceptibility		18	Z	Engine driven alternator / generator with battery.
Induced Signal Susceptibility		19	ZC	Interference free operation
RF Susceptibility (Radiated and Conducted)		20	TT	

Lynx NGT-9000
Installation Manual

DESCRIPTION	SECT. NO.	CAT.	DESCRIPTION
Emission of RF Energy	21	M	Interference free operation
Lightning Induced Transient Susceptibility	22	A3J3L3	<u>A3: Pin Injection Waveform Tests:</u> Waveform 3 600 VOC/24 ISC Waveform 4 300 VOC/60 ISC <u>J3: Cable Bundle Single Stroke:</u> Waveform 3 600 VT/120IL Waveform 3 600 VT/120IL <u>J3: Cable Bundle Multiple Stroke:</u> Waveform 1 First Stroke 300 VL/300 IT Sub Strokes 150 VL/150IT Waveform 3 First Stroke 600 VL/120 IL Sub Strokes 300 VL/60IL <u>L3: Cable Bundle Multiple Burst:</u> Waveform 3: 360 VT/6IL
Lightning Direct Effects	23	X	Not Applicable, Not Tested.
Icing	24	X	Not Applicable, Not Tested.
Electro Static Discharge	25	A	15 kv/330 Ω /150pf
Fire, Flammability	26	X	
Other Tests			None

Lynx NGT-9000
Installation Manual

B.3 NY156 & NY164 ENVIRONMENTAL QUALIFICATION FORM

MANUFACTURER: Sensor Systems, Inc.
ADDRESS: 8929 Fullbright Ave., Chatsworth, CA 91311 USA (818) 341-5366
APPLICABLE SPEC. NO.:
REVISION & CHANGE NUMBER OF DO-160: C

PRODUCT DESCRIPTION: Antenna
MODEL: NY156 NY164
PART NUMBERS: 805-10003-001 805-10890-001

CONDITIONS	SECTION	TEST DESCRIPTION
Temperature and Altitude	4.0	Equipment tested to Categories F2.
Low Temperature	4.5.1	-55° Degrees Celsius
High Temperature	4.5.2 & 4.5.3	+70° Degrees Celsius
In-Flight Loss of Cooling	4.5.4	- Not Applicable -
Altitude	4.6.1	55,000 Feet
Decompression	4.6.2	- Not Applicable -
Overpressure	4.6.3	- Not Applicable -
Temperature Variation	5.0	Equipment tested to Category A.
Humidity	6.0	Equipment tested to Category A.
Operational Shock and Crash Safety	7.0	Operation and Crash
Vibration	8.0	Equipment tested to Category C, L, M, and Y.
Explosion	9.0	Category X - No test performed.
Waterproofness	10.0	Equipment tested to Category S.
Fluids Susceptibility	11.0	Equipment tested to Category F.
Sand and Dust	12.0	Equipment tested to Category D.
Fungus	13.0	Equipment tested to Category F.
Salt Spray	14.0	Equipment tested to Category S.
Magnetic Effect	15.0	Category X - No test performed.
Power Input	16.0	Category X - No test performed.
Voltage Spike	17.0	Category X - No test performed.
Audio Frequency Susceptibility	18.0	Category X - No test performed.
Induced Signal Susceptibility	19.0	Category X - No test performed.
Radio Frequency Susceptibility	20.0	Category X - No test performed.
Radio Frequency Emission	21.0	Category X - No test performed.
Lightning Induced Transient Susceptibility	22.0	Equipment tested to Category L.
Lightning Direct Effects	23.0	Equipment tested to Category 2A.
Icing	24.0	Category X - No test performed.
Other Tests		No test required

Appendix C

Configuration and Checkout Log

Date: _____ By: _____

Installation Information

- | | |
|--|---|
| ☐ Model NGT-9000 P/N 9029000-20000 | ☐ Model NGT-9000R P/N 9029000-40000 |
| ☐ Model NGT-9000+ P/N 9029000-20000 | ☐ Model NGT-9000R+ P/N 9029000-40000 |
| ☐ Model NGT-9000D P/N 9029000-20000 | ☐ Model NGT-9000RD P/N 9029000-40000 |

Unit S/N: _____

Mod Level: _____

Aircraft Model: _____

Composite S/W: _____

Aircraft S/N: _____

Firmware S/W: _____

Unlock Code: _____ TAS

Unlock Code: _____ Diversity

Configuration

Aircraft Specific

Tail Number: _____

Mode S Identifier (Octal): _____

Transponder Diversity: ☐ Disabled ☐ Enabled

TAS Enable: ☐ Disabled ☐ Enabled

TAS Extended Callout Enable: ☐ Disabled ☐ Enabled

TAS Directional Antenna Type: ☐ Disabled ☐ Enabled

Antenna Installation: ☐ Bottom Omnidirectional Only

☐ Bottom Omnidirectional/ Top
Omnidirectional

☐ Bottom Omnidirectional/ Bottom
Directional

Broadcast Category: _____

Pilot Entry of Flight ID: ☐ Disabled ☐ Enabled

Aircraft Length and Width (ft): _____

Max Airspeed (knots): _____

GPS Antenna Offset Lateral (ft): _____

GPS Antenna Offset Longitudinal (ft): _____

Normal Traffic Color: ☐ Cyan ☐ White

Table C-1: Log Sheet for Configuration and Checkout
(Sheet 1 of 2)

Configuration (continued)

AHRS and Altitude

AHRS Source: ☐ None ☐ ARINC 429

AHRS ARINC 429 Bus Speed: ☐ Low ☐ High

Altitude Source: ☐ ARINC 429 ☐ RS-232 Altitude Encoder Port

☐ Gilham Interface ☐ RS-232 Control Panel Port

Altitude Protocol: ☐ None ☐ UPS AT LORAN 618

☐ Trimble/Garmin/Icarus ☐ Magellan

☐ Northstar ☐ Shadin

☐ UPS AT ☐ ARNAV

Altitude RS-232 Baud Rate: ☐ Defined by Protocol ☐ 1200 ☐ 2400 ☐ 4800 ☐ 9600

Altitude ARINC 429 Bus Speed: ☐ Low ☐ High

Altitude Resolution (ft): ☐ > 25 ☐ < = 25

Misc

ARINC 429 Input 1: ☒ None (not available)

ARINC 429 Input 2: ☐ None ☐ Combo Bus (not available)

ARINC 429 Output 1: ☐ None ☐ CDTI

RS-422 Baud Rate: ☐ 38400 ☐ 57600 ☐ 115200

RS-422 ADS-B Output: ☐ Disabled ☐ Enabled

RS-422 Weather Output: ☐ Disabled ☐ Enabled

CDTI Output: ☐ TIF ☐ DTIF ☐ Both

Control Panel: ☒ Touch Screen (panel mount) Control Panel: ☒ CP-2500 (remote mount)

On Ground Discrete Installed: ☐ Not Installed ☐ Open – In Air ☐ Open – On Ground

Ground Speed Threshold (knots): Max Ground Speed: _____

Discrete Override Speed: _____

Altitude Threshold (feet): GPS Altitude: _____

Pressure Altitude: _____

Calibration

Audio Volume Level %: _____

TAS Antenna Calibration

Calibration Angle (degrees): _____

Calibration LRU Serial number: _____

WiFi Serial Adapter Configuration

WiFi Module (RN 370M) SSID: WiFly-_____

WiFi Module (PIM-9000) SSID: Lynx-_____

Table C-1: Log Sheet for Configuration and Checkout
(Sheet 2 of 2)