Cessna®

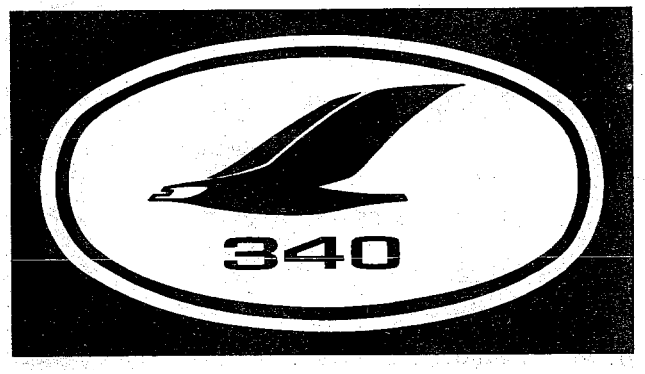

MODEL 340

PARTS CATALOG

This reprint of basic Parts Catalog P498-12 dated September 1973 incorporates Change 1 dated January 1974, Change 2 dated May 1974, Change 3 dated October 1974, Change 4 dated February 1975, Change 5 dated December 1975 and Change 6 dated March 1976.

CESSNA AIRCRAFT COMPANY, WICHITA, KANSAS

P498-12–RAND–200–5/76

SEPTEMBER 1973

LIST OF EFFECTIVE PAGES

Dates of original and changed pages are:

Original	0	Sep 73	Change	4	Feb 75
Change	1	Jan 74	Change	5	Dec 75
Change	2	May 74	Change	6	Mar 76
Change	3	Oct 74			

TOTAL NUMBER OF PAGES IN THIS PUBLICATION IS 650, CONSISTING OF THE FOLLOWING:

Page No.	Change No.	Page No.	Change No.	Page No.	Change No.
*Title	6	2-56 - 2-59	0	2-123	5
*A - C	6	2-60	3	2-124	4
i - vii	5	2-61	4	2-125 Blank	0
viii Blank	0	2-62	3	2-126	0
1-1	0	2-63 Blank	0	2-127 - 2-128	5
1-2	5	2-64 - 2-65	0	2-129 - 2-130	0
1-3 - 1-4	0	2-66	1	2-131 - 2-132	5
1-5 - 1-8	1	2-67	0	2-133 Blank	0
1-8A - 1-8B	5	2-68	1	2-134 - 2-136	3
1-9	5	2-69 Blank	0	*2-137 - 2-141	6
1-10 Blank	5	2-70	0	2-142	5
1-10A	3	*2-71	6	2-142A	5
1-10B	4	2-72	3	*2-142B	6
1-10C	3	2-73 - 2-75	0	2-143 - 2-144	5
1-10D - 1-10G	5	2-76	5	2-145 Blank	0
1-10H Blank	5	2-77	2	2-146	0
1-11	0	*2-78	6	2-146A - 2-146B	5
1-12	5	2-79 Blank	0	2-147 Blank	5
1-13 - 1-16	0	2-80 - 2-84	0	2-148	0
2-1	0	2-85 Blank	0	*2-149	6
2-2	5	2-86 - 2-87	0	2-150 - 2-156	0
2-3 - 2-5	0	2-88	4	*2-157 - 2-158	6
2-6	3	2-89 Blank	0	2-159 Blank	0
*2-7 - 2-8	6	2-90	3	2-160 - 2-167	0
*2-8A - 2-8B	6	*2-91	6	*2-168 - 2-169	6
*2-9	6	2-92	0	2-170 - 2-175	0
2-10 - 2-18	0	*2-93 - 2-94	6	*2-176 - 2-177	6
2-19	1	2-95 Blank	0	2-178 - 2-180	0
2-20	0	2-96	0	2-181 Blank	0
*2-20A - 2-20B	6	2-97	5	2-182 - 2-184	5
2-21 - 2-23	0	2-98	3	2-184A Blank	5
2-24	3	2-99	0	2-184B	5
2-25	4	*2-100	6	*2-184C - 2-184D	6
2-26 - 2-27	5	2-101	3	2-185 Blank	0
2-28	0	2-102 - 2-105	0	2-186	0
2-29	3	*2-106 - 2-109	6	2-187	2
2-30	0	2-110	3	2-188	5
2-31 - 2-32	3	2-111	0	*2-189	6
2-33 Blank	0	*2-112	6	2-190	5
2-34	0	*2-112A - 2-112B		2-190A Blank	5
*2-35	6	Added	6	2-190B - 2-190C	5
2-36 - 2-41	0	*2-113 Blank	6	*2-190D	6
2-42	3	2-114	2	2-191 Blank	0
2-43 Blank	0	2-114A	3	2-192 - 2-193	0
2-44 - 2-46	0	2-114B	4	2-194	4
2-47 - 2-48	5	*2-115	6	2-195	5
2-49 Blank	0	2-116	0	*2-196	6
2-50	0	2-117	5	2-197 Blank	0
2-51	5	2-118	0	2-198 - 2-199	5
2-52	4	2-119	5	*2-200 - 2-203	6
2-53 Blank	0	2-120	0	2-204 - 2-205	0
2-54	3	2-121	3	2-206	5
2-55	4	2-122	0	2-207	4

LIST OF EFFECTIVE PAGES

Page No.	Change No.
2-208	2
2-209 Blank	0
2-210	0
2-211	5
*2-212 - 2-215	6
2-216 - 2-221	0
2-222 - 2-226	5
2-227 Blank	0
2-228	0
2-229	4
2-230 - 2-231	1
2-232	3
2-233	5
2-234	1
2-235	5
2-236	0
*2-237	6
2-238	0
*2-239	6
2-240	5
2-240A Blank	5
2-240B	5
2-241 - 2-244	5
*2-245	6
2-246	0
2-247	5
2-248	0
2-249 - 2-250	5
2-251 Blank	0
2-252 - 2-257	0
2-258	4
2-259	5
2-260	4
2-261 Blank	0
2-262	3
2-263 - 2-265	0
2-266	3
2-267	0
2-268	3
2-269	5
2-270	2
2-271	4
2-272 - 2-273	5
2-274	3
2-275 - 2-277	5
2-278	0
2-279	3
2-280	4
2-281	5
2-282 - 2-287	0
2-288	3
2-289	4
2-290	5
2-291 Blank	0
2-292 - 2-293	5
2-294	3
2-295 Blank	0
2-296 - 2-297	3
*2-298 - 2-299	6
2-300	3
*2-301	6
2-302	0
2-303	5
2-304	0
*2-305	6
2-306	0
2-307	4
2-308 - 2-310	5
2-310A Blank	5
2-310B - 2-310C	5
*2-310D	6
*2-311	6
2-312 - 2-316	5
2-316A	5
*2-316B - 2-316C	6
2-316D	5
2-317 - 2-318	5
*2-318A - 2-318B	6
2-319 Blank	3
2-320	0
*2-321	6
2-322	5
2-322A - 2-322B	5
2-323	5
2-324 - 2-325	0
*2-326	6
2-327 Blank	0
2-328	1
2-329	0
2-330	1
2-331 Blank	0
2-332	5
*2-333	6
2-334	0
*2-335	6
2-336	4
*2-337	6
2-338 - 2-345 Deleted	4
2-346 - 2-347	4
2-348	5
2-348A	5
2-348B Blank	5
2-349	4
*2-350 - 2-353	6
2-354	0
2-355	1
2-356 - 2-357	0
*2-358 - 2-359	6
2-360 - 2-362	5
2-362A	5
*2-362B - 2-362D	6
*2-362E - 2-362F Added	6
*2-363 Blank	6
2-364	3
2-365	0
2-366	3
2-366A	5
*2-366B - 2-366D	6
*2-366E - 2-366F Added	6
*2-367 Blank	6
2-368 - 2-369	4
2-370 - 2-372	5
2-372A - 2-372B	5
2-373 Blank	4
2-374	0
2-375 - 2-376	1
2-377 Blank	0
2-378 - 2-379	0
2-380	4
2-381	5
*2-382	6
2-383	5
*2-384	6
*2-384A	6
2-384B	4
*2-384C - 2-384D	6
2-385 Blank	0
2-386 - 2-387	0
*2-388 - 2-389	6
2-390	5
2-390A - 2-390B	5
2-391 Blank	3
2-392	3
2-392A	3
*2-392B	6
2-393 Blank	3
2-394	4
2-395	0
2-396	5
2-397 - 2-400	4
2-400A Blank	2
2-400B - 2-400C	4
2-400D	5
2-401	5
2-402 - 2-408	3
2-409 Blank	3
2-410 - 2-413	3
2-414 - 2-418	5
2-418A - 2-418C	5
*2-418D	6
2-418E	5
*2-418F	6
2-419 Blank	5
2-420 - 2-422	5
2-422A - 2-422F	5
2-423 Blank	5
2-424	5
2-424A - 2-424B	5
2-425	5
2-426	0
2-427	3
2-428	0
2-429	1
2-430 - 2-431	5
2-432 - 2-434	3
2-435	0
2-436	4
2-437	5
2-438 - 2-439	0
*2-440	6

LIST OF EFFECTIVE PAGES

Page No.	Change No.
2-441	3
2-442	4
*2-443	6
2-444	5
2-444A - 2-444B	5
*2-445	6
2-446 - 2-447	3
2-448	0
*2-449	6
2-450	3
2-451	5
*2-452 - 2-453	6
2-454	5
*2-455	6
2-456	0
2-457	2
2-458	0
2-459	2
*2-460	6
2-461 Blank	0
2-462	5
2-462A - 2-462B	5
2-463	5
2-464 - 2-466	0
2-467	5
2-468 Blank	0
2-469 - 2-470	0
*2-471	6
2-472 - 2-474	5
*2-475 - 2-476	6
2-477 - 2-478	0
2-479	2
2-480	0
2-480A - 2-480B	4
*2-480C - 2-480D Added	6
*2-481	6
2-482 - 2-483	0
2-484	4
2-485 - 2-486	5
2-486A - 2-486B	5
2-487 - 2-488	5
2-488A - 2-488B	5
*2-489	6
2-490	3
2-490A - 2-490B	5
2-491 Blank	2
2-492	4
2-493	5
2-494	2
2-495 - 2-496	5
*2-497 - 2-498	6
*2-499 Added	6
*2-500 Blank Added	6
3-1	0
*3-2 - 3-30	6
*3-31 Added	6
*3-32 Blank Added	6

ALPHABETICAL INDEX

DESCRIPTION	FIGURE NO.
A	
ACCESS PANEL-ELECTRICAL	9
ACCUMULATOR-PROP UNFEATHERING	113
ACTUATOR ASSY-AILERON SERVO ROLL	156
ACTUATOR ASSY-AILERON SERVO ROLL	158
ACTUATOR ASSY-AILERON TRIM TAB	91
ACTUATOR ASSY-ELECTRIC TRIM	90
ACTUATOR ASSY-ELEVATOR TRIM TAB	91
ACTUATOR ASSY-ELEVATOR TRIM	156A
ACTUATOR ASSY-PROP SYNCHRONIZER	112
ACTUATOR ASSY-RUDDER TRIM TAB	91
ACTUATOR INSTL-LANDING GEAR	78
ACTUATOR SUPPORTS & CABLES-CESSNA 400A	157
ACTUATOR-DOOR WARNING SWITCH	141
ACTUATOR-ELEVATOR SERVO PITCH	156
ACTUATOR-ELEVATOR SERVO PITCH	156A
ACTUATOR-ELEVATOR SERVO PITCH	158
ACTUATOR-ELEVATOR TRIM FOLLOW UP	156
ADAPTER ASSY-DEFROST	9
ADAPTER ASSY-DEFROST	128
ADAPTER-AIRSPEED INDICATOR	124
ADAPTER-ALTIMETER	124
ADAPTER-DIRECTIONAL GYRO VACUUM	137
ADAPTER-HORIZON GYRO VACUUM	137
AFT CABIN SECTION STRINGERS	15
AFT FACING SEAT ASSY PASSENGER	60
AFT FACING SEAT ASSY PASSENGER	60A
AFT PRESSURE BULKHEAD	10
AILERON ASSY	40
AILERON CONTROL SYSTEM	84
AILERON HINGE ASSY-INBD	40
AILERON HINGE ASSY-OUTBD	33
AILERON SERVO ACTUATOR ASSY ROLL	156
AILERON SERVO ACTUATOR ASSY ROLL	156A
AILERON TRIM CONTROL SYSTEM	88
AILERON TRIM TAB ACTUATOR ASSY	91
AIR & LIGHT ESCUTCHEON ASSY	129
AIR CONDITIONING COMPRESSOR FUSE	145
AIR CONDITIONING DUCT	129
AIR CONDITIONING SYSTEM	130
AIR CONDITIONING EQUIPMENT	131
AIR CONDITIONING EQUIPMENT	133
AIR CONDITIONING EQUIPMENT	133A
AIR CONDITIONING NACELLE ASSY-RH	380
AIR CONDITIONING PRESSURE SWITCH	130
AIR CONDITIONING SERVICE VALVE	130
AIR CONDITIONING SWITCH & RHEOSTAT	61
AIR CONDITIONING SWITCH & RHEOSTAT	62
AIR CONDITIONING SYSTEM	130
AIR CONDITIONING SYSTEM	132
AIR CONDITIONING SYSTEM	132A
AIR CONDITIONING-MANIFOLD ASSY	130
AIR FILTER-VACUUM SYSTEM	137
AIR LOUVER	129
AIR OIL SEPARATOR DEICE	98
AIR SPACE INDUCTION TRANSITION	104
AIR VALVE & LIGHT WEMAC ASSY	147
AIR VALVE ASSY	134
AIR VALVE-CABIN	129
AIRSPEED INDICATOR	63
AIRSPEED INDICATOR	64
AIRSPEED INDICATOR ADAPTER	124
ALTERNATE AIR CONTROL	61
ALTERNATE AIR CONTROL BRACKET ASSY	20
ALTERNATOR 100 AMP	99
ALTERNATOR 50 AMP	99
ALTERNATOR OUT SENSOR	145
ALTIMETER	63
ALTIMETER	64
ALTIMETER ADAPTER	124
AMMETER	144
AMMETER SELECT SWITCH	144
AMMETER-PROP DEICE	63
AMMETER-PROP DEICE	64
ANGLE OF ATTACK SYSTEM	149
ANGLE ASSY-DORSAL	27
ANNUNCIATOR PANEL ASSY	63
ANNUNCIATOR PANEL ASSY	64
ANTENNA-AVQ47 RADAR	153
ANTENNAS	151
ARMREST ASSY-SIDE	47
ATTITUDE DIRECTOR INDICATOR	158
AUDIO AMPLIFIER ASSY-CESSNA 800	152
AUX FUEL RELAY	141
AUXILIARY FUEL CELL ASSY	118
AUXILIARY FUEL CELL ASSY	118A
AUXILIARY FUEL CELL ASSY	119
AUXILIARY FUEL CELL ASSY	119A
AUXILIARY FUEL CELL DRAIN VALVE	118
AUXILIARY FUEL CELL DRAIN VALVE	119
AUXILIARY FUEL CELL DRAIN VALVE	118A

DESCRIPTION	FIGURE NO.
A	
AUXILIARY FUEL CELL DRAIN VALVE	119A
AUXILIARY FUEL CELLS CAP & ADAPTER ASSY	118
AUXILIARY FUEL CELLS CAP & ADAPTER ASSY	119
AUXILIARY FUEL CELLS CAP & ADAPTER ASSY	118A
AUXILIARY FUEL CELLS CAP & ADAPTER ASSY	119A
AUXILIARY FUEL SYSTEM	118
AUXILIARY FUEL SYSTEM	119A
AUXILIARY FUEL SYSTEM	118A
AUXILIARY FUEL TANK UNIT SENSOR	118
AUXILIARY FUEL TANK UNIT SENSOR	118A
AUXILIARY FUEL TANK UNIT SENSOR	119
AUXILIARY FUEL TANK UNIT SENSOR	119A
AVIONICS COOLING BLOWER ASSY	161
AVIONICS PANEL	61
AVQ47 RADAR ANTENNA	153
AVQ47 RADAR INDICATOR	153
AVQ47 RADAR INDICATOR HOOD	153
AVQ47 RADAR INSTL	153
AVQ47 RADAR RADOME ASSY	153
AVQ47 RADAR RECEIVER TRANSMITTER	153
AVQ47 RADAR SUPPORT	153
AVQ47 RADAR WAVE GUIDE ASSY	153
B	
BAFFLE ASSY-ENGINE	101
BAGGAGE & ACCESS DOORS-NOSE	5
BAGGAGE COMPARTMENT-NACELLE	37
BAGGAGE NOSE LIGHT	146
BAGGAGE SHELVES & PARTITIONS-NOSE	6
BAGGAGE NOSE LIGHT SWITCH	146
BAGGAGE TIE DOWN	46
BALANCE WEIGHT RUDDER	42
BALANCE WEIGHT-ELEVATOR	45
BAROMETRIC SWITCH-CABIN PRESSURE	141
BATTERY 12 VOLT	141
BATTERY 24 VOLT	141
BATTERY-RELAY	141
BATTERY BOX INSTL	38A
BEACON INSTL-LOCATOR	155
BELLCRANK ASSY-ELEVATOR	45
BELT-POWER BANK COMPRESSOR	131
BLOWER ASSY-AVIONICS COOLING	161
BLOWER ASSY-CABIN AIR	129
BLOWER ASSY-COMBUSTION AIR	128
BOOM MICROPHONE ASSY	46
BOOT-DEICE PROP	111
BOOT-NOSE GEAR RETRACTION	9
BOOT-SURFACE DEICE	138
BRACKET ASSY-ALTERNATE AIR CONTROL	20
BRACKET ASSY-PROP DEICE	111
BRACKET-FUEL SELECTOR VALVE	122
BRACKETS-WING CONTROL SUPPORT	34
BRAKE MASTER CYLINDER ASSY	83
BRAKE SYSTEM	94
BRUSH BLOCK ASSY-PROP DEICE	111
BULB-CYLINDER HEAD TEMPERATURE	98
BULB-O.A.T.	13
BULB-OIL TEMPERATURE	98
BULKHEAD ASSY-SPINNER DOME PROP	108
BULKHEAD-AFT PRESSURE	10
BULKHEAD-FORWARD PRESSURE	9
BULKHEADS-CABIN SECTION	8
BUMPER-TIE DOWN LUG	27
C	
CABIN AIR BLOWER ASSY	129
CABIN AIR CONTROL	61
CABIN AIR CONTROL	62
CABIN ALTITUDE RATE CONTROLLER	127
CABIN CARPET INSTL	49
CABIN DOOR FRAME STRUCTURE	15
CABIN DOOR LIGHT ASSY	147
CABIN DOOR LIGHT SWITCH	147
CABIN DOOR SCUFF PLATE	47
CABIN FAN SWITCH	61
CABIN FAN SWITCH	62
CABIN FLOORBOARDS	21
CABIN HEAT CONTROL	61

ALPHABETICAL INDEX

DESCRIPTION	FIGURE NO.
C	
CABIN HEAT CONTROL	62
CABIN HEAT SWITCH	61
CABIN HEAT SWITCH	62
CABIN PRESSURIZATION & HEATING SYSTEM	125
CABIN PRESSURIZATION CONTROL SYSTEM	126
CABIN PRESSURIZE-DEPRESSURIZE SWITCH	61
CABIN PRESSURIZE-DEPRESSURIZATION SWITCH	62
CABIN SECTION BULKHEADS	8
CABIN SECTION STRUCTURE ASSY	7
CABIN SKINS	16
CABIN STEREO	142
CABIN VENTILATION SYSTEM	129
CABIN VENTILATION SYSTEM	129A
CABIN WINDOWS	25
CABLE INSTL-LWR CABIN DOOR	23
CAP & ADAPTER ASSY-AUX FUEL CELLS	118
CAP & ADAPTER ASSY-AUX FUEL CELLS	119
CARD-COMPASS	61
CARD-COMPASS	62
CARPET INSTL-CABIN	49
CARPET-NOSE BAGGAGE SHELVES	6
CELL ASSY-WING LOCKER AUX FUEL	120
CENTER CABIN SECTION STRINGERS	14
CESSNA 400A ACTUATOR SUPPORTS & CABLES	157
CESSNA 400B ACTUATOR SUPPORTS & CABLES	157A
CESSNA 400A NAV-O-MATIC AUTOPILOT	156
CESSNA 400B NAV-O-MATIC AUTOPILOT	156A
CESSNA 800 AUDIO AMPLIFIER ASSY	152
CHAIN ASSY-UPR CABIN DOOR	22
CHAIN-KEY	46
CHANNEL ASSY-TIE DOWN LUG	27
CHECKLIST ASSY	46
CIRCUIT BREAKER PANEL INSTL	144
CLOCK	63
CLOCK	64
COAT HANGER	46
COLUMN SUPPORT ASSY CONTROL WHEEL	86
COMBUSTION AIR BLOWER ASSY	128
COMPASS	61
COMPASS	62
COMPASS CARD	61
COMPASS CARD	62
COMPUTER-INTEGRATED FLIGHT CONTROL	158
COMPUTER-400A AUTOPILOT	156
COMPUTER-400B AUTOPILOT	156A
CONTROL ASSY-ALTERNATE AIR	61
CONTROL ASSY-ALTERNATE AIR	62
CONTROL ASSY-LIGHT DIMMING	144
CONTROL ASSY-OXYGEN	61
CONTROL ASSY-OXYGEN	62
CONTROL ASSY-PARKING BRAKE	61
CONTROL ASSY-PARKING BRAKE	62
CONTROL ASSY-RAM AIR	61
CONTROL ASSY-RAM AIR	62
CONTROL BOX ASSY-PROP SYNCHRONIZER	112
CONTROL LOCK ASSY	46
CONTROL PEDESTAL STRUCTURE ASSY	20
CONTROL QUADRANT ASSY	107
CONTROL SUPPORT BRACKETS-WING	34
CONTROL VALVE-DEICE	139
CONTROL WHEEL ASSY-FLIGHT	86
CONTROL-CABIN AIR	61
CONTROL-CABIN AIR	62
CONTROL-CABIN HEAT	61
CONTROL-CABIN HEAT	62
CONTROL-DEFROST	61
CONTROL-DEFROST	62
CONTROL-PRESS AIR HEAT	61
CONTROL-PRESS AIR HEAT	62
CONTROL-PRESSURIZATION AIR DUMP	61
CONTROL-PRESSURIZATION AIR DUMP	62
CONTROLLER-AMPLIFIER-400A AUTOPILOT	156
CONTROLLER-AMPLIFIER-400B AUTOPILOT	156A
CONTROLLER-CABIN ALTITUDE RATE	127
CONTROLLER-DUAL PRESSURE	97
CONTROLLER-INTEGRATED FLIGHT	144A
COOLING BLOWER ASSY-AVIONICS	161
COPILOT ELECTRICALLY ADJUSTABLE SEAT ASSY	55
COPILOT ELECTRICALLY ADJUSTABLE SEAT ASSY	56
COPILOT MANUALLY ADJUSTABLE SEAT ASSY	53
COPILOT MANUALLY ADJUSTABLE SEAT ASSY	54
COPILOT SEAT ASSY	51
COPILOT SEAT ASSY	52
CORRECTOR-DIRECTION INTEGRATED FLT CONT	158
COURTESY LIGHT-NACELLE BAGGAGE	146
COVER ASSY-FWD & AFT PRESSURE BULKHEADS	47
COVER STRIP-WING AFT	28
COVER-FUEL SELECTOR TRIM	49
COVER-FUEL SELECTOR PAN	21
COWL ASSY-ENGINE	95

DESCRIPTION	FIGURE NO.
C	
COWL FLAPS & CONTROL-ENGINE	96
CURTAIN ASSY	46
CURTAIN TRACK	46
CYLINDER & REGULATOR ASSY-OXYGEN	135
CYLINDER HEAD TEMPERATURE BULB	98
D	
DAMPENER INSTALLATION-YAW	159
DEFROST ADAPTER ASSY	128
DEFROST ADAPTER ASSY	9
DEFROST CONTROL	61
DEFROST CONTROL	62
DEICE COMPONENTS-ENGINE COMPARTMENT	139
DEICE CONTROL VALVE	139
DEICE FILTER ASSY	139
DEICE SHUTTLE VALVE	139
DIFFERENTIAL PRESSURE GAGE	62
DIMMER ASSY-LIGHT FUEL QUANITY	46
DIRECTION CORRECTOR INTEGRATED FLT CONT	158
DIRECTIONAL GYRO	63
DIRECTIONAL GYRO SLAVED	156
DIRECTIONAL GYRO SLAVED	156A
DIRECTIONAL GYRO SLAVED	158
DIRECTIONAL GYRO VACUUM ADAPTER	137
DISCHARGE WICK AILERON	40
DISCHARGE WICK ELEVATOR	45
DISCHARGE WICK RUDDER	42
DOOR ASSY-LWR CABIN	23
DOOR ASSY-UPR CABIN	22
DOOR FRAME STRUCTURE-CABIN	15
DOOR RETRACTION LINKAGE	72
DOOR WARNING SWITCH	141
DOOR WARNING SWITCH ACTUATOR	141
DOORS-MAIN LANDING GEAR	80
DOORS-NOSE LANDING GEAR	81
DORSAL ANGLE ASSY	27
DORSAL ASSY	27
DORSAL RIB ASSY AFT	27
DORSAL SKIN FWD	27
DORSAL TIP	16
DOUBLER-INSPECTION OPENING	31
DOUBLER-TIE DOWN LUG	27
DRAIN-CONDENSATE AIR CONDITIONING	131
DUAL PRESSURE CONTROLLER	97
DUCT ASSY-HEATER & PRESSURIZATION	9
DUCT-AIR CONDITIONING	131
DUCT-AIR CONDITIONING	129
E	
E.G.T. GAGE	63
E.G.T. GAGE	62
ELECTRIC TRIM ACTUATOR ASSY	90
ELECTRICAL COMPONENTS-FUSELAGE	141
ELECTRICAL COMPONENTS-LANDING GEAR	143
ELECTRICAL COMPONENTS-WING & TIP TANK	145
ELECTRICAL EQUIPMENT	141
ELECTRONIC EQUIPMENT	150
ELEVATOR ASSY	45
ELEVATOR BALANCE WEIGHT	45
ELEVATOR BELLCRANK ASSY	45
ELEVATOR CONTROL SYSTEM	85
ELEVATOR SERVO ACTUATOR PITCH	156
ELEVATOR SERVO ACTUATOR PITCH	156A
ELEVATOR TRIM CONTROL SYSTEM	89
ELEVATOR TRIM FOLLOW UP ACTUATOR	156
ELEVATOR TRIM FOLLOW UP MOTOR	158
ELEVATOR TRIM FOLLOW UP SENSOR	156
ELEVATOR TRIM FOLLOW UP SENSOR	158
ELEVATOR TRIM TAB	45
ELEVATOR TRIM TAB ACTUATOR ASSY	91
EMERGENCY EXIT	24
EMERGENCY WINDOW FRAME STRUCTURE	14
EMERGENCY WINDOW TRIM	47
ENGINE ASSY	98
ENGINE ASSY	98A
ENGINE BAFFLES ASSY	101
ENGINE COMPARTMENT DEICE COMPONENTS	139
ENGINE COMPARTMENT FIRE EXTINGUISHER	105

ALPHABETICAL INDEX

DESCRIPTION	FIGURE NO.
E	
ENGINE COMPARTMENT FUEL SYSTEM	117
ENGINE CONTROL SYSTEM	106
ENGINE COWL ASSY	95
ENGINE COWL FLAPS & CONTROL SYSTEM	96
ENGINE EXHAUST SYSTEM	100
ENGINE GAGE	61
ENGINE HOSES	97
ENGINE HOSES	97A
ENGINE HOSES	98
ENGINE HOSES	98A
ENGINE INSTALLATION	97
ENGINE INSTALLATION	97A
ENGINE LINE ASSY	97
ENGINE LINE ASSY	97A
ENGINE LINES	98
ENGINE LINES	98A
ESCUTCHEON ASSY-AIR & LIGHT	129
ESCUTCHEON ASSY-STEREO HEADSET	142
EVAPORATOR RELAY	141
EXCHANGER ASSY-HEAT	125
EXHAUST MIXTURE PROBE & LEAD	145
EXHAUST SHIELD ASSY	100
EXIT-EMERGENCY	24
EXTERIOR LIGHTING	146
EXTINGUISHER-FIRE	46
F	
FAIRING ASSY-HORIZONTAL STABILIZER	43
FAIRING-STUB WING	7
FENDER ASSY-NOSE WHEEL	73
FILTER ASSY-DEICE	139
FILTER-HEATER FUEL	116
FILTER-RADIO NOISE	141
FIN ASSY VERTICAL STABILIZER	41
FIN ASSY-VENTRAL	27
FIN TIP ASSY VERTICAL STABILIZER	41
FIRE EXTINGUISHER	46
FIRE EXTINGUISHER-ENGINE COMPARTMENT	105
FIREWALL ASSY-NACELLE	36
FITTING-SEAT BELT	11
FLAP ASSY-WING	39
FLAP CONTROL SYSTEM	92
FLAP GEAR BOX ASSY	93
FLAP LIMIT SWITCH	93
FLAP MOTOR	93
FLAP PRESELECT	61
FLASHER ASSY-STROBE LIGHT	146
FLASHER-WARNING HORN	141
FLIGHT CONTROL WHEEL ASSY	86
FLIGHT HOUR RECORDER	63
FLIGHT HOUR RECORDER	64
FLIGHT INSTRUMENT PANEL-LH & RH	63
FLIGHT INSTRUMENT PANEL-LH & RH	64
FLOOR ASSY-AIR CONDITIONING	131
FLOORBOARD SUPPORTS	17
FLOORBOARDS-CABIN	21
FLUX DETECTOR	160
FLUX SENSOR INTEGRATED FLIGHT CONTROL	158
FORMER-FUEL CAP OPENING	31
FORWARD CABIN SECTION STRINGER	13
FORWARD FACING SEAT ASSY PASSENGER	57
FORWARD FACING SEAT ASSY PASSENGER	58
FORWARD FACING SEAT ASSY PASSENGER	58A
FORWARD PRESSURE BULKHEAD	9
FRONT SEAT SUPPORT	18
FRONT SPAR ASSY-WING	32
FRONT SPAR-FUSELAGE	11
FUEL CAP OPENING FORMER	31
FUEL CELL ASSY-AUX FUEL	118
FUEL CELL ASSY-AUX FUEL	119
FUEL CELL ASSY-AUX FUEL	118A
FUEL CELL ASSY-AUX FUEL	119A
FUEL FLOW GAGE	61
FUEL FLOW SYSTEM	115
FUEL PRESSURE SWITCH ENGINE	97
FUEL PUMP SHROUD HEATER	128
FUEL QUANITY INDICATOR	63
FUEL QUANTITY INDICATOR	64
FUEL QUANITY LIGHT	63
FUEL QUANTITY LIGHT	64
FUEL SELECTOR COVER TRIM	49
FUEL SELECTOR KNOB	122
FUEL SELECTOR LIGHT ASSY	147
FUEL SELECTOR MICRO SWITCH AUX FUEL	122
F	
FUEL SELECTOR PAN ASSY	21
FUEL SELECTOR PAN COVER	21
FUEL SELECTOR SUPPORT ASSY	21
FUEL SELECTOR VALVE ASSY	122
FUEL SELECTOR VALVE BRACKET	122
FUEL SELECTOR VALVE GEAR BOX ASSY	122
FUEL SHUT OFF VALVE ASSY-RH	114
FUEL SYSTEM	114
FUEL TANK WELL	31
FUEL TRANSFER SWITCH	61
FUEL TRANSFER SWITCH	62
FUSE-COMPRESSOR AIR CONDITIONING	145
FUSELAGE ELECTRICA COMPONENTS	141
FUSELAGE FRONT SPAR	11
FUSELAGE REAR SPAR	12
FUSELAGE STRUCTURE ASSY	2
FWD & AFT PRESSURE BULKHEAD COVER ASSY	47
FWD CABIN AIR GRILL	9
G	
GAGE-DIFFERENTIAL PRESSURE	61
GAGE-E.G.T.	63
GAGE-E.G.T.	62
GAGE-ENGINE	61
GAGE-ENGINE	62
GAGE-FUEL FLOW	61
GAGE-FUEL FLOW	62
GAGE-O.A.T.	63
GAGE-O.A.T.	64
GAGE-VACUUM	63
GAGE-VACUUM	64
GEAR BOX ASSY-FLAP	93
GEAR BOX ASSY-FUEL SELECTOR VALVE	122
GEAR INDICATOR UNLOCKED	61
GEAR INDICATOR UNLOCKED	62
GEAR SWITCH	61
GEAR SWITCH	62
GEAR WARNING ADJUSTMENT SCREW	107
GEAR WARNING HORN	141
GENERATOR-TACHOMETER	98
GLARESHIELD ASSY	61
GLARESHIELD ASSY	62
GLOVE BOX ASSY	65
GOVERNOR ASSY-PROP UNFEATHERING	113
GOVERNOR-PROP	98
GRILL-FWD CABIN AIR	9
GROUND SERVICE PLUG RECEPTACLE	141
GUST LOCK ASSY-RUDDER PEDALS	83
GYRO-DIRECTIONAL	63
GYRO-DIRECTIONAL	64
GYRO-HORIZON	63
GYRO-REMOTE INTEGRATED FLIGHT CONTROL	158
GYRO-SLAVED DIRECTIONAL 400A AUTOPILOT	156
GYRO-SLAVED DIRECTIONAL 400B AUTOPILOT	156A
GYRO-SLAVED DIRECTIONAL INTEGRATED FLT CO	158
H	
HANGER-COAT	46
HEADLINER	47
HEADLINER RETAINER	47
HEADSET-STEREO	142
HEAT EXCHANGER ASSY	125
HEATER & PRESSURIZATION DUCT ASSY	9
HEATER ASSY	128
HEATER FUEL FILTER	116
HEATER FUEL PUMP	116
HEATER FUEL SHUT OFF VALVE	116
HEATER FUEL SOLENOID VALVE	116
HEATER FUEL SYSTEM	116
HEATER PLENUM ASSY	128
HEATSINK ASSY-LIGHT DIMMING CONTROLS	141
HINGE ASSY-AILERON INBD	40
HINGE ASSY-AILERON OUTBD	33
HOOD-INDICATOR AVQ47 RADAR	153
HORIZON GYRO	63
HORIZON GYRO VACUUM ADAPTER	137
HORIZONTAL SITUATION INDICATOR	158
HORIZONTAL STABILIZER ASSY	43

ALPHABETICAL INDEX

DESCRIPTION	FIGURE NO.
H	
HORIZONTAL STABILIZER FAIRING ASSY	43
HORN-GEAR WARNING	141
HORN-STALL WARNING	141
HOSES-ENGINE	97
HOSES-ENGINE	97A
HOSES-ENGINE	98
I	
ICE PROTECTION PANEL	3
INDICATOR-AIRSPEED	63
INDICATOR-AIRSPEED	64
INDICATOR-ATTITUDE DIRECTOR	158
INDICATOR-AVQ47 RADAR	153
INDICATOR-FUEL QUANITY	63
INDICATOR-FUEL QUANTITY	64
INDICATOR-GEAR UNLOCKED	61
INDICATOR-GEAR UNLOCKED	62
INDICATOR-HORIZONTAL SITUATION	158
INDICATOR-MANIFOLD PRESSURE	61
INDICATOR-MANIFOLD PRESSURE	62
INDICATOR-RATE OF CHANGE	61
INDICATOR-RATE OF CHANGE	62
INDICATOR-TRUE AIRSPEED	63
INDICATOR-TRUE AIRSPEED	64
INDICATOR-TURN & BANK	63
INDICATOR-TURN & BANK	64
INDICATOR-TURN COORDINATOR	63
INDICATOR-TURN COORDINATOR	64
INDICATOR-VERTICAL SPEED	63
INDICATOR-VERTICAL SPEED	64
INSPECTION OPENING DOUBLER	31
INSTRUMENT PANEL LIGHTING FIXTURES	148
INTEGRATED FLIGHT CONTROL SYSTEM	158
INVERTER-PWR SUPPLY INTEGRATED FLT CONT	158
INTERIOR LIGHTING	147
K	
KEY CHAIN	46
KNOB-FUEL SELECTOR	122
L	
LANDING GEAR ACTUATOR DOWN LIMIT SWITCH	143
LANDING GEAR ACTUATOR INSTL	78
LANDING GEAR ACTUATOR UP LIMIT SWITCH	143
LANDING GEAR ELECTRICAL COMPONENTS	143
LANDING GEAR MANUAL EXTENSION MECHANISM	79
LANDING GEAR RELAY	143
LANDING GEAR RELAY	141
LANDING GEAR RESISTOR	143
LANDING GEAR SAFETY SWITCH	143
LANDING GEAR SYSTEM	66
LANDING LIGHT ASSY	146
LEADING EDGE ASSY-WING	32
LH & RH FLIGHT INSTRUMENT PANEL	63
LIGHT ASSY-BAGGAGE NOSE	146
LIGHT ASSY-CABIN DOOR	147
LIGHT ASSY-FUEL SELECTOR	147
LIGHT ASSY-LANDING	146
LIGHT ASSY-NAVIGATION TAIL	146
LIGHT ASSY-NAVIGATION WING	146
LIGHT ASSY-OVERHEAD FLOOD	147
LIGHT ASSY-PROP SYNCH	61
LIGHT ASSY-ROTATING BEACON	146
LIGHT ASSY-STROBE TIP TANK	146
LIGHT ASSY-TAXI	146
LIGHT ASSY-WING ICE	146
LIGHT DIMMER ASSY FUEL QUANITY	46
LIGHT DIMMING CONTROL ASSY	144
LIGHT DIMMING CONTROLS HEATSINK ASSY	141
LIGHT-FUEL QUANITY	63
LIGHT-FUEL QUANTITY	64
LIGHTING FIXTURES-INSTRUMENT PANEL	148
LIGHTING-EXTERIOR	146
LIGHTING-INTERIOR	147
LINE ASSY-ENGINE	97
LINER-NACELLE	49
LINES-ENGINE	98
LITTER BAG ASSY	46
LOCATOR BEACON INSTALLATION	155
LOCATOR BEACON PLACARD	63
LOCATOR BEACON PLACARD	58A
LOCATOR BEACON SUPPORT ASSY	155
LOCATOR BEACON SWITCH	63
LOCATOR BEACON SWITCH	64
LOCATOR BEACON TRANSMITTER	155
LOCK ASSY-CONTROL	46
LOUVER-AIR	129
LOWER CABIN DOOR ASSY	23
LOWER CABIN DOOR CABLE INSTL	23
M	
MAA PLATE RETAINER	47
MAGNETO SWITCH	61
MAGNETO SWITCH	62
MAIN GEAR DOWN & LOCKED SWITCH	143
MAIN GEAR RETRACTION LINKAGE	71
MAIN GEAR WHEEL TIRE & BRAKE	70
MAIN LANDING GEAR DOORS	80
MAIN LANDING GEAR INSTL	67
MAIN LANDING GEAR STRUT ASSY	68
MAIN LANDING GEAR STRUT ASSY	69
MANIFOLD & CHECK VALVE-VACUUM	137
MANIFOLD ASSY-AIR CONDITIONING	130
MANIFOLD DRAIN VALVE ASSY	97
MANIFOLD PRESSURE INDICATOR	61
MANIFOLD PRESSURE INDICATOR	62
MANIFOLD PRESSURE SYSTEM	123
MANUAL EXTENSION MECHANISM-LANDING GEAR	79
MASK & LINE ASSY-PILOT & COPILOT	134
MASTER CYLINDER ASSY-BRAKE	83
MASTER PANEL SWITCH	144
METER-SLAVING	63
METER-SLAVING	64
METER-SLAVING INTEGRATED FLIGHT CONTROL	158
MICROPHONE ASSY-BOOM	46
MICROPHONE ASSY-PILOT	46
MODE SELECTOR INTEGRATED FLT CONTROL	158
MOLDING-WINDOW	13
MOTOR ASSY-ELEVATOR TRIM FOLLOW UP	158
MOTOR-FLAP	93
N	
NACELLE ASSY-RH AIR CONDITIONING	104
NACELLE BAGGAGE COMPARTMENT	37
NACELLE BAGGAGE COURTESY LIGHT	146
NACELLE FIREWALL ASSY	36
NACELLE LINER	49
NACELLE STRUCTURE	35
NACELLE STRUCTURE AIR CONDITIONING	38
NAMEPLATES PLACARDS & EXTERIOR MARKINGS	1
NAVIGATION LIGHT ASSY-TAIL	146
NAVIGATION LIGHT ASSY-WING	146
NOSE BAGGAGE & ACCESS DOORS	5
NOSE BAGGAGE SHELVES & PARTITIONS	6
NOSE BAGGAGE SHELVES CARPET	6
NOSE GEAR DOWN & LOCKED SWITCH	143
NOSE GEAR RETRACTION BOOT	9
NOSE GEAR RETRACTION LINKAGE	77
NOSE GEAR SHIMMY DAMPENER ASSY	75
NOSE GEAR STRUT ASSY	74
NOSE GEAR WHEEL & TIRE	76
NOSE LANDING GEAR DOORS	81
NOSE LANDING GEAR INSTL	73
NOSE RADIO SHELVES	154
NOSE SECTION OXYGEN SYSTEM	135
NOSE STRUCTURE ASSY	3
NOSE WHEEL FENDER ASSY	73
NOSE WHEEL WELL STRUCTURE	4

ALPHABETICAL INDEX

DESCRIPTION	FIGURE NO.
O	
O.A.T. BULB	13
O.A.T. GAGE	63
O.A.T. GAGE	64
OIL PRESSURE SYSTEM	103
OIL TEMPERATURE BULB	98
OUTFLOW VALVE ASSY-FIXED ISOBARIC	126
OVERHEAD FLOOD LIGHT ASSY	147
OVERHEAD PANEL ASSY	147
OVERVOLTAGE RELAY	141
OXYGEN CONTROL	61
OXYGEN CONTROL	62
OXYGEN CYLINDER & REGULATOR ASSY	135
OXYGEN CYLINDER & REGULATOR SUPPORT	135
OXYGEN FILLER VALVE ASSY	135
OXYGEN SYSTEM	134
P	
PAN ASSY-FUEL SELECTOR	21
PANEL ASSY-ANNUNCIATOR	63
PANEL ASSY-ANNUNCIATOR	64
PANEL ASSY-OVERHEAD	147
PANEL-ACCESS ELECTRICAL	9
PANEL-AVIONICS	61
PANEL-AVIONICS	62
PANELS-UPHOLSTERY	47
PARKING BRAKE VALVE ASSY	94
PARKING BRAKE-CONTROL ASSY	61
PARKING BRAKE-CONTROL ASSY	62
PEDALS-RUDDER	83
PILOT & COPILOT OXYGEN MASK & LINE ASSY	134
PILOT & COPILOT SEAT BELT	53
PILOT & COPILOT SEAT BELT	54
PILOT & COPILOT SEAT BELT	51
PILOT & COPILOT SEAT BELT	52
PILOT & COPILOT SEAT BELT	55
PILOT & COPILOT SEAT BELT	56
PILOT & COPILOT SHOULDER HARNESS	55
PILOT & COPILOT SHOULDER HARNESS	56
PILOT & COPILOT SHOULDER HARNESS	53
PILOT & COPILOT SHOULDER HARNESS	54
PILOT ELECTRICALLY ADJUSTED SEAT ASSY	55
PILOT ELECTRICALLY ADJUSTED SEAT ASSY	56
PILOT MANUALLY ADJUSTABLE SEAT ASSY	53
PILOT MANUALLY ADJUSTABLE SEAT ASSY	54
PILOT MICROPHONE ASSY	46
PILOT SEAT ASSY	51
PILOT SEAT ASSY	52
PITOT & STATIC SYSTEM	124
PLACARD-LOCATOR BEACON	63
PLENUM ASSY-HEATER	128
PORT-STATIC HEATED	124
POWER SUPPLY-INVERTER INTEGRATED FLT CONT	158
POWER SUPPLY-STROBE LIGHT	146
PRESELECT-FLAP	61
PRESELECT-FLAP	62
PRESS AIR HEAT CONTROL	61
PRESS AIR HEAT CONTROL	62
PRESSURIZATION AIR DUMP CONTROL	61
PRESSURIZATION AIR DUMP CONTROL	62
PRESSURIZATION SAFETY VALVE	126
PRIME SWITCH	61
PRIME SWITCH	62
PROBE & LEAD-EXHAUST MIXTURE	145
PROP DEICE AMMETER	63
PROP DEICE AMMETER	64
PROP SYNCH LIGHT ASSY	61
PROP SYNC LIGHT ASSY	62
PROPELLER ASSEMBLY 2 BLADE	109
PROPELLER ASSEMBLY 3 BLADE	110
PROPELLER DEICE BOOT	111
PROPELLER DEICE BRACKET ASSY	111
PROPELLER DEICE BRUSH BLOCK ASSY	111
PROPELLER DEICE SLIP RING ASSY	111
PROPELLER DEICE TIMER	141
PROPELLER GOVERNOR	98
PROPELLER SPINNER DOME	108
PROPELLER SYNCHRONIZER ACTUATOR ASSY	112
PROPELLER SYNCHRONIZER CONTROL BOX ASSY	112
PROPELLER UNFEATHERING ACCUMULATOR	113
PROPELLER UNFEATHERING GOVERNOR ASSY	113
PROTECTION PANEL-ICE	3
PUMP ASSY-DRY VACUUM	98
PUMP ASSY-DRY VACUUM	97A
PUMP ASSY-VACUUM DEICE	98
PUMP ASSY-VACUUM DEICE	97A
PUMP-HEATER FUEL	116
PUMP-WINDSHIELD ANTI-ICE	140
Q	
QUADRANT ASSY-CONTROL	107
R	
RADAR INSTL-AVQ47	153
RADIO NOISE FILTER	141
RADIO SHELVES-NOSE	154
RADOME ASSY-AVQ47 RADAR	153
RAILS-SEAT	17
RAM AIR CONTROL ASSY	61
RAM AIR CONTROL ASSY	62
RAM AIR VALVE ASSY	128
RATE OF CHANGE INDICATOR	61
RATE OF CHANGE INDICATOR	62
RDR 130 WEATHER RADAR	153A
REAR FACING SEAT ASSY PASSENGER	59
REAR SPAR ASSY-WING	33
REAR SPAR-FUSELAGE	12
RECEIVER-TRANSMITTER AVQ47 RADAR	153
RECEPTACLE-GROUND SERVICE PLUG	141
RECORDER-FLIGHT HOUR	63
RECORDER-FLIGHT HOUR	64
REGULATOR ASSY-STEREO	142
REGULATOR-VOLTAGE	141
RELAY-AUX FUEL	141
RELAY-BATTERY	141
RELAY-EVAPORATOR	141
RELAY-LANDING GEAR	141
RELAY-LANDING GEAR	143
RELAY-OVERVOLTAGE	141
RELIEF TUBE	46
REMOTE GYRO INTEGRATED FLIGHT CONTROL	158
RESISTOR-LANDING GEAR	143
RETAINER-HEADLINER	47
RETAINER-M.AA PLATE	47
RETRACTION LINKAGE-DOOR	72
RETRACTION LINKAGE-MAIN GEAR	71
RETRACTION LINKAGE-NOSE GEAR	77
RIB ASSY-DORSAL AFT	27
RIBS-WING INTERSPAR	30
RIBS-WING TRAILING EDGE	33
ROTATING BEACON LIGHT ASSY	146
RUDDER & NOSE WHEEL STEERING SYSTEM	82
RUDDER ASSY	42
RUDDER BALANCE WEIGHT	42
RUDDER PEDALS	83
RUDDER TENSION SPRING	83
RUDDER TIP ASSY	42
RUDDER TRIM CONTROL SYSTEM	87
RUDDER TRIM TAB ACTUATOR ASSY	91
S	
SCREW-GEAR WARNING ADJUSTMENT	107
SCREWDRIVER	46
SCUFF PLATE-CABIN DOOR	47
SEAT ASSY-AFT FACING PASSENGER	60
SEAT ASSY-AFT FACING PASSENGER	60A
SEAT ASSY-COPILOT	51
SEAT ASSY-COPILOT MANUALLY ADJUSTABLE	53
SEAT ASSY-FWD FACING PASSENGER	57
SEAT ASSY-FWD FACING PASSENGER	58
SEAT ASSY-FWD FACING PASSENGER	58A
SEAT ASSY-PILOT	51
SEAT ASSY-PILOT	52
SEAT ASSY-PILOT ELECTRICALLY ADJUSTED	55
SEAT ASSY-PILOT ELECTRICALLY ADJUSTED	56
SEAT ASSY-PILOT MANUALLY ADJUSTABLE	53
SEAT ASSY-PILOT MANUALLY ADJUSTABLE	54

ALPHABETICAL INDEX

DESCRIPTION	FIGURE NO.
S	
SEAT ASSY-REAR FACING PASSENGER	59
SEAT BELT FITTING	11
SEAT BELT-PILOT & COPILOT	51
SEAT BELT-PILOT & COPILOT	52
SEAT BELT-PILOT & COPILOT	53
SEAT BELT-PILOT & COPILOT	54
SEAT BELT-PILOT & COPILOT	55
SEAT BELT-PILOT & COPILOT	56
SEAT RAILS	17
SEATING ARRANGEMENTS INSTL	50
SECONDARY INSTRUMENT PANEL	63
SECONDARY INSTRUMENT PANEL	64
SECONDARY STATIC SYSTEM	124A
SELECTOR-MODE INTEGRATED FLT CONTROL	158
SELECTOR VALVE-STATIC SOURCE	124
SENSOR-ALTERNATOR OUT	145
SENSOR-ALTITUDE	156A
SENSOR-ELEVATOR TRIM FOLLOW UP	156
SENSOR-ELEVATOR TRIM FOLLOW UP	158
SENSOR-FLUX INTEGRATED FLIGHT CONTROL	158
SENSOR-TANK UNIT AUX FUEL	118
SENSOR-TANK UNIT AUX FUEL	118A
SENSOR-TANK UNIT AUX FUEL	119A
SEPARATOR-AIR OIL DEICE	98
SEPARATOR-AIR OIL DEICE	97A
SHELVES-NOSE RADIO	154
SHIELD ASSY-EXHAUST	100
SHIELD-WATER BATTERY RELAYS	141
SHIMMY DAMPENER ASSY-NOSE GEAR	75
SHOULDER HARNESS-PILOT & COPILOT	55
SHOULDER HARNESS-PILOT & COPILOT	53
SHROUD-FUEL PUMP HEATER	128
SHUTTLE VALVE-DEICE	139
SIGNAL CONDITIONER	145
SKIN STRIP-WING FWD	28
SKIN-DORSAL FWD	27
SKIN-WINDOW	14
SKIN-WING UPR & LWR CTR	28
SKINS-CABIN	16
SKINS-WING INTERSPAR	31
SKINS-WING TRAILING EDGE	33
SLAVING METER	63
SLAVING METER	64
SLAVED DIRECTIONAL GYRO-400A AUTOPILOT	156
SLAVED DIRECTIONAL GYRO-400B AUTOPILOT	156A
SLAVED DIRECTIONAL GYRO-INTEGRATED FLT CONT	158
SLAVING METER-INTEGRATED FLIGHT CONTROL	158
SLIP RING ASSY-DEICE PROP	111
SPEAKER-STEREO	142
SPINNER DOME BULKHEAD ASSY PROP	108
SPINNER DOME-PROP	108
SPRING ASSY-IDLER AIR CONDITIONING	131
SPRING-RUDDER TENSION	83
STABILIZER ASSY-HORIZONTAL	43
STALL WARNING HORN	141
STALL WARNING TRANSMITTER	145
START SWITCH	61
START SWITCH	62
STARTER-VIBRATOR	141
STATIC PORT-HEATED	124
STATIONARY INSTRUMENT PANEL STRUCTURE	19
STEREO HEADSET	142
STEREO HEADSET ESCUTCHEON ASSY	142
STEREO HEADSET TRANSDUCE ASSY	142
STEREO REGULATOR ASSY	142
STEREO SELECT SWITCH	142
STEREO SPEAKER	142
STEREO SPEAKER SUPPORT	142
STEREO-CABIN	142
STINGER ASSY	44
STOP-FWD FACING SEAT PASSENGER	57
STOP-FWD FACING SEAT PASSENGER	58
STOP-REAR FACING SEAT PASSENGER	59
STOP-REAR FACING SEAT PASSENGER	60
STRINGER-WINDOWS	15
STORAGE CABNET	46
STRINGERS-AFT CABIN SECTION	15
STRINGERS-CTR CABIN SECTION	14
STRINGERS-FWD CABIN SECTION	13
STRINGERS-WINDOW	14
STRINGERS-WING INTERSPAR	31
STROBE LIGHT ASSY-TIP TANK	146
STROBE LIGHT FLASHER ASSY	146
STROBE LIGHT POWER SUPPLY	146
STRUCTURE ASSY-CABIN	7
STRUCTURE ASSY-CONTROL PEDESTAL	20
STRUCTURE ASSY-FUSELAGE	2
STRUCTURE ASSY-NOSE	3
STRUCTURE ASSY-WING	29
STRUCTURE INSTALLATION-TAILCONE	27
STRUCTURE-EMERGENCY WINDOW FRAME	14
STRUCTURE-NACELLE	35
STRUCTURE-NACELLE AIR CONDITIONING	38
STRUCTURE-STATIONARY INSTRUMENT PANEL	19
STRUCTURE-STUB WING	26
STRUT ASSY-MAIN LANDING GEAR	68
STRUT ASSY-MAIN LANDING GEAR	69
STRUT ASSY-NOSE GEAR	74
STUB WING FAIRING	7
STUB WING STRUCTURE	26
SUNVISOR ASSY	46
SUPPORT ASSY-COLUMN CONTROL WHEEL	86
SUPPORT ASSY-FUEL SELECTOR	21
SUPPORT ASSY-LOCATOR BEACON	155
SUPPORT-AVQ47 RADAR	153
SUPPORT-FRONTSEAT	18
SUPPORT-OXYGEN CYLINDER & REGULATOR	135
SUPPORT-STEREO SPEAKER	142
SUPPORTS-FLOORBOARD	17
SURFACE DEICE BOOT	138
SURFACE DEICE SYSTEM	138
SWITCH & RHEOSTAT-AIR CONDITIONING	61
SWITCH ASSY-THERMOSTAT	128
SWITCH-AMMETER SELECT	144
SWITCH-BAROMETRIC CABIN PRESSURE	141
SWITCH-CABIN DOOR LIGHT	147
SWITCH-CABIN FAN	61
SWITCH-CABIN FAN	62
SWITCH-CABIN HEAT	61
SWITCH-CABIN HEAT	62
SWITCH-CABIN PRESSURIZE-DEPRESSURIZE	61
SWITCH-CABIN PRESSURIZATION	62
SWITCH-DOOR WARNING	141
SWITCH-DOWN LIMIT LANDING GEAR ACTUATOR	143
SWITCH-FUEL PRESSURE ENGINE	97
SWITCH-FUEL PRESSURE WING LOCKER	120
SWITCH-FUEL TRANSFER	61
SWITCH-FUEL TRANSFER	62
SWITCH-GEAR	61
SWITCH-GEAR	62
SWITCH-LANDING GEAR SAFETY	143
SWITCH-LIMIT FLAP	93
SWITCH-LOCATOR BEACON	63
SWITCH-LOCATOR BEACON	64
SWITCH-MAGNETO	61
SWITCH-MAGNETO	62
SWITCH-MAIN AUX	63
SWITCH-MAIN AUX	64
SWITCH-MAIN GEAR DOWN & LOCKED	143
SWITCH-MASTER PANEL	144
SWITCH-MICRO FUEL SELECTOR AUX	122
SWITCH-NOSE BAGGAGE LIGHT	146
SWITCH-NOSE GEAR DOWN & LOCKED	143
SWITCH-PRESSURE AIR CONDITIONING	130
SWITCH-PRIME	61
SWITCH-PRIME	62
SWITCH-SELECT STEREO	142
SWITCH-START	61
SWITCH-START	62
SWITCH-UP LIMIT LANDING GEAR ACTUATOR	143
SWITCH-WEMAC BLOWER	61
SWITCH-WEMAC BLOWER	62
SWITCHES & CIRCUIT BREAKERS	144
SYSTEM-AILERON CONTROL	84
SYSTEM-AILERON TRIM CONTROL	88
SYSTEM-AIR CONDITIONING	130
SYSTEM-AIR CONDITIONING	132
SYSTEM-AIR CONDITIONING	132A
SYSTEM-ANGLE OF ATTACK	139
SYSTEM-AUXILIARY FUEL	118
SYSTEM-AUXILIARY FUEL	119A
SYSTEM-AUXILIARY FUEL	119
SYSTEM-AUXILIARY FUEL	118A
SYSTEM-BRAKE	94
SYSTEM-CABIN PRESSURIZATION & HEATING	125
SYSTEM-CABIN PRESSURIZATION CONTROL	126
SYSTEM-CABIN VENTILATION	129
SYSTEM-ELEVATOR CONTROL	85
SYSTEM-ELEVATOR TRIM CONTROL	89
SYSTEM-ENGINE COMPARTMENT FUEL	117
SYSTEM-ENGINE CONTROL	106
SYSTEM-ENGINE COWL FLAPS & CONTROL	96
SYSTEM-ENGINE EXHAUST	100
SYSTEM-FLAP CONTROL	92
SYSTEM-FUEL	114
SYSTEM-FUEL FLOW	115
SYSTEM-HEATER FUEL	116
SYSTEM-INTEGRATED FLIGHT CONTROL	158
SYSTEM-INSTRUMENT PANEL VACUUM	137
SYSTEM-LANDING GEAR	66

ALPHABETICAL INDEX

DESCRIPTION	FIGURE NO.
S	
SYSTEM-MANIFOLD PRESSURE	123
SYSTEM-OIL PRESSURE	103
SYSTEM-OXYGEN	134
SYSTEM-OXYGEN NOSE SECTION	135
SYSTEM-PITOT & STATIC	124
SYSTEM-RUDDER & NOSE WHEEL STEERING	82
SYSTEM-RUDDER TRIM CONTROL	87
SYSTEM-STATIC SECONDARY	124A
SYSTEM-SURFACE DEICE	138
SYSTEM-TURBOCHARGER CONTROL OIL	102
SYSTEM-TURBOCHARGER CONTROL OIL	102A
SYSTEM-VACUUM	136
SYSTEM-VARIABLE CABIN PRESSURE CONTROL	127
SYSTEM-WINDSHIELD ANTI-ICE ALCOHOL	140
SYSTEM-WING LOCKER AUXILIARY FUEL	120
T	
TACHOMETER	61
TACHOMETER	62
TACHOMETER GENERATOR	98
TAILCONE SECTION STRUCTURE INSTL	27
TANK ASSY-WINDSHIELD ANTI-ICE	140
TANK ASSY-WING TIP FUEL	121
TAXI LIGHT ASSY	146
THERMOSTAT SWITCH ASSY	128
TIE DOWN ASSY-BAGGAGE	46
TIE DOWN LUG BUMPER	27
TIE DOWN LUG CHANNEL ASSY	27
TIE DOWN LUG DOUBLER	27
TIMER-PROP DEICE	141
TIP ASSY-FIN VERTICAL STABILIZER	41
TIP ASSY-RUDDER	42
TIP-DORSAL	16
TOW BAR	46
TRANSDUCER ASSY-STEREO HEADSET	142
TRANSITION-AIR INDUCTION	104
TRANSMITTER-LOCATOR BEACON	155
TRANSMITTER-STALL WARNING	145
TRIM ASSY-EMERGENCY WINDOW	47
TRIM TAB-ELEVATOR	45
TRIM-UPHOLSTERY	48
TRUE AIRSPEED INDICATOR	63
TUBE-RELIEF	46
TURBOCHARGER	97
TURBOCHARGER CONTROL OIL SYSTEM	102
TURN & BANK INDICATOR	63
TURN COORDINATOR INDICATOR	63
U	
UPHOLSTERY PANELS	47
UPHOLSTERY TRIM	48
UPPER CABIN DOOR ASSY	22
UPPER CABIN DOOR CHAIN ASSY	22
V	
VACUUM ADAPTER-DIRECTIONAL GYRO	137
VACUUM ADAPTER-HORIZON GYRO	137
VACUUM GAGE	63
VACUUM MANIFOLD & CHECK VALVE	137
VACUUM PUMP ASSY-DEICE	98
VACUUM PUMP ASSY-DEICE	97A
VACUUM PUMP ASSY-DRY	98
VACUUM PUMP ASSY-DRY	97A
VACUUM SYSTEM	136
VACUUM SYSTEM AIR FILTER	137
VACUUM SYSTEM-INSTRUMENT PANEL	137
VALVE ASSY-AIR	134
VALVE ASSY-FILLER OXYGEN	135
VALVE ASSY-FUEL SELECTOR	122
VALVE ASSY-MANIFOLD DRAIN	97
VALVE ASSY-OUTFLOW FIXED ISOBARIC	126
VALVE ASSY-PARKING BRAKE	94
V	
VALVE ASSY-PRESSURIZATION SAFETY	126
VALVE ASSY-RAM AIR	128
VALVE ASSY-REMOTE CONTROL ISOBARIC	127
VALVE ASSY-RH FUEL SHUT OFF	114
VALVE-CABIN AIR	129
VALVE-DRAIN AUX FUEL CELL	118
VALVE-DRAIN AUX FUEL CELL	118A
VALVE-DRAIN AUX FUEL CELL	119
VALVE-DRAIN AUX FUEL CELL	119A
VALVE-SELECTOR STATIC SOURCE	124
VALVE-SERVICE AIR CONDITIONING	130
VALVE-SHUT OFF HEATER FUEL	116
VALVE-SOLENOID HEATER FUEL	116
VARIABLE CABIN PRESSURE CONTROL SYSTEM	127
VENTRAL FIN ASSY	27
VERTICAL SPEED INDICATOR	63
VIBRATOR-STARTER	141
VOLT AMMETER ASSY-LIGHTED	144
VOLTAGE REGULATOR	141
W	
WARNING HORN FLASHER	141
WATER SHIELD-BATTERY RELAYS	141
WAVE GUIDE ASSY-AVQ47 RADAR	153
WEATHER RADAR RDR 130	153A
WELL-FUEL TANK	31
WEMAC ASSY-AIR VALVE & LIGHT	147
WEMAC BLOWER SWITCH	61
WEMAC BLOWER SWITCH	62
WHEEL & TIRE-NOSE GEAR	76
WHEEL TIRE & BRAKE-MAIN GEAR	70
WHEEL WELL STRUCTURE-NOSE	4
WICK-DISCHARGE AILERON	40
WICK-DISCHARGE ELEVATOR	45
WICK-DISCHARGE RUDDER	42
WINDOW MOLDING	13
WINDOW SKIN	14
WINDOW STRINGERS	14
WINDOW STRINGERS	15
WINDOWS-CABIN	25
WINDSHIELD	25
WINDSHIELD ANTI-ICE PUMP	140
WINDSHIELD ANTI-ICE SYSTEM ALCOHOL	140
WINDSHIELD ANTI-ICE TANK ASSY	140
WING & TIP TANK ELECTRICAL COMPONENTS	145
WING ASSY	28
WING CONTROL SUPPORT BRACKETS	34
WING COVER STRIP-AFT	28
WING FLAP ASSY	39
WING FRONT SPAR ASSY	32
WING ICE LIGHT ASSY	146
WING INSTL	28
WING INTERSPAR RIBS	30
WING INTERSPAR SKINS & STRINGERS	31
WING LEADING EDGE ASSY	32
WING LOCKER AUXILIARY FUEL CELL ASSY	120
WING LOCKER AUXILIARY FUEL PRESSURE SWITCH	120
WING LOCKER AUXILIARY FUEL SYSTEM	120
WING REAR SPAR ASSY	33
WING SKIN STRIP-FWD	28
WING SKIN-UPR & LWR CTR	28
WING STRUCTURE ASSY	29
WING TIP FUEL TANK ASSY	121
WING TRAILING EDGE RIBS	33
WING TRAILING EDGE SKINS	33
Y	
YAW DAMPENER INSTALLATION	159
400A AUTOPILOT COMPUTER	156
400A AUTOPILOT CONTROLLER-AMPLIFIER	156

SECTION I

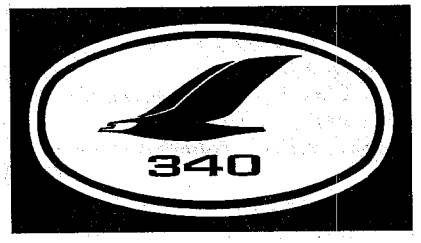

INTRODUCTION

INTRODUCTION

PURPOSE

The purpose of this technical manual is to illustrate and identify replacement parts and assemblies necessary for the support of the 340 aircraft. DO NOT USE this technical manual to determine removal and installation procedures. Refer to the applicable Service Manual.

GENERAL

This illustrated parts catalog has been prepared by the electromatic accounting machine process and provides quick and easy identification of parts and assemblies of the Cessna Aircraft covered in this catalog.

SERIAL LISTINGS

The Model 340 Serials are as follows:

1972 - 340-0001 Thru 340-0150
1973 - 340-0151 Thru 340-0300
1974 - 340-0301 Thru 340-0500
1975 - 340-0501 & On

This catalog is divided into sections as follows:

Section I - Introduction
Alphabetical Index
How to Use This Book
Section II
Part 1 - Airplane Assembly
Part 2 - Electronics
Section III - Numerical Index

STANDARD PARTS

Many parts having standard usage have been incorporated into the Cessna Standard System. Parts in this group are designated with the part number prefix "S", "CM" or "C".

For standard hardware items such as screws, nuts, clamps, etc., AN, NAS, MS, and AF standard numbers are listed.

NON-INTERCHANGABLE PARTS

When a part of later design is not interchangeable with the part it replaces, both parts applicable to the particular usage are listed. The individual part usage is listed in the usable on code column. Care should be exercised in determining proper serial effectivity when ordering to insure receipt of the correct part.

INTERCHANGEABLE PARTS

When a part of later design is completely interchangeable with the part it replaces, both parts will be serialized and the notation "WEU" (when exhausted use) or "FSO" (for spares order) will be entered following the listing of the earlier design part. "WEU" means that the earlier design part should be used on airplanes to which they apply until the supply of these parts is exhausted --- after which time the later design part must be used. This is done to simplify stocking of parts by our distributors and dealers. "FSO" means that the earlier designed part cannot be ordered for this application, order the later design part. The later part is as good, physically and functionally, as the earlier design part, or better --- the difference being the later design part can be used on more than one block of airplane serials.

BULK ITEMS

Certain items such as flexible air hose, rubber mouldings and channels, windshield sealing strips,etc., are noted in the catalog listing as bulk items. These listings also note the cut length of these materials for one installation. When an item is listed as a bulk item, it will be supplied to the dealer in the most convenient bulk length or quantity. Reference to the cut length or quantity per installation provides for the most satisfactory disbursement to the customer. A miscellaneous bulk item tabular listing appears in Section I.

SECTION II

This section lists all replaceable items in the airplane and these items are detailed on illustrations throughout the section. The index numbers on the illustration are keyed to the list of parts and assemblies on each figure. The purpose of the index number is to provide complete and positive identification of the article, but should not be used for procurement purposes. All higher assembly or installation figures list a quantity for all lower assembly or installation figures that are required to complete that group, system, installation or assembly. All groups or systems are complete whether entries are required or referenced. In addition each illustration contains a listing of each "See Fig" entry in that figure.

a. FIGURE AND INDEX COLUMN. The figure number is listed once at the beginning of the text list followed by a dash and the indexed number. The remaining index numbers are preceded by only a dash.

b. PART NUMBER COLUMN. This column contains the part number used to identify the item.

c. DESCRIPTION COLUMN. The relationship of the items listed is shown by the degree of indention of each item, for example: the wing installation is listed in column 1 of the description column. The fillet assembly is the next lower assembly and is therefore listed in column 2.

If two or more assemblies contain a majority of identical parts or if the assemblies are left or right hand, the assemblies are listed together and the next lower assemblies or detail parts are listed as common for both assemblies, with the differing parts coded for usage on the correct assembly.

Attaching parts are listed immediately beneath the item to be attached and preceding any detail parts of the item. They are listed in the same indention as the item they attach and are preceded by the caption "Attaching

Parts". The end of the attaching parts listing is followed by a separating symbol ---*---.

Component parts of the complete airplane which are not included in any assembly, but which are used in conjunction with, or attach to certain assemblies, are listed either preceding the first detail or following the last detail of the assembly or installation, and in the same indent as the major assembly or installation.

d. UNITS PER ASSEMBLY COLUMN. The quantities listed in the units per assembly column are the quantity used per figure. The quantity listed for attaching parts denotes the quantity necessary to attach only one item. The total quantity necessary to attach more than one item may be obtained by multiplying the quantity of attaching parts by the number of items to be attached.

e. USABLE ON CODE COLUMN. The letter symbols appearing in this column identify parts which have limited aircraft serial effectivity. Where no symbol appears, the parts listed apply to all aircraft unless the parts are components of a serialized installation or assembly. A list of codes and their related serial effectivity appears at the end of the text of each applicable figure. Serial numbers appear in bold type at the top of each illustration and first page of text of figures which have limited serial effectivity.

SECTION III

Part numbers in the numerical index are first arranged in order according to the extreme left hand digit, then the next digit to the right, etc. The digits are used in the following sequence: Space, decimal, slash (/), symbols (such as #), letters of the alphabet, then numbers in numerical order.

SYMBOLS AND PART NUMBER TERMS

A blank entry in the part number column appears before an unprocurable part or installation.

See Figure - When the term "SEE FIG ---", appears in the part number column and the units per assy column indicates "REF", the figure referred to will be the next higher assembly of the referred item. If the units per assy column shows a quantity, the figure referred to will be the breakdown.

Deleted Not Used - When the term "DELETED - NOT USED", appears in the description column, it signifies that the index number was used but is no longer required.

ALT - The abbreviation "ALT" following the nomenclature of an item is used to denote an alternate part.

LH & RH - The abbreviations "LH or RH" are used following the part nomenclature to denote either left hand or right hand parts of the next higher assembly.

Other abbreviations spaced apart from and following the part nomenclature are for cataloging and manufacturing purposes and are not to be considered by the customer.

AR - The abbreviation "AR" appearing in the units per assy column denotes "As Required" and is used to indicate bulk quantity where an indefinite amount is used.

NP - the abbreviation "NP" appearing in the units per assy column denotes the item is not procurable.

ABBREVIATIONS COMMONLY USED

ALT - Alternate
& - And
AR - As required
ASSY - Assembly
BHD - Bulkhead
BKI - Bulk item
CKT BKR - Circuit Breaker
COMPN - Components
CTR - Center
CU FT - Cubic Foot
ELEC - Electric
EQUIP - Equipment
FIG - Figure
FSO - For spares order
FT - Foot or Feet
FUS - Fuselage
FWD - Forward
GAL - Gallon
IN - Inch
INBD - Inboard
IND - Indicator
INSTL - Installation
LB - Pound
LH - Left hand
LWR - Lower
NP - Not procurable
OBS - Obsolete
OUTBD - Outboard
PKG - Package
PN - Part number
PT - Pint
QT - Quart
REF - Reference
RH - Right hand
STA - Station
SYS - System or Systems
UPR - Upper
VAC - Vacuum
WEU - When exhausted use

SERIAL, COLOR AND CORROSION PROOFING

Be sure to indicate model and serial number of the airplane. Serial number is very important to properly identify parts used on each airplane.

When color, upholstery material, royalite or interior trim is involved, include the complete finish and trim plate number. See the Finish and Trim Plate information for an example of the numbers to be supplied. Part numbers used to identify these parts are not complete without the finish and trim numbers. These parts are noted in Section II, Part 1 with the symbol @ or a combination of this symbol.

If corrosion proofing is required, add the letters "CP" following the part number.

When stainless steel control cables are desired, use the designated part number for the standard cable and add the letters "CR" following it.

HOW TO ORDER

USE YOUR CATALOG TO ORDER PARTS (See How To Use Pages). Use Parts and Accessories Order Form Number P-312-12 to be supplied by Cessna on request. Give complete information on addresses and make sure the part number and part name are as shown in the catalog. Be sure to specify quantities. Specify how the order is to be shipped, otherwise, it will be sent out in the manner that seems best to the shipper.

All parts in the pressurization cell that must be sealed on installation are noted with the % symbol following the part number. See the bulk item listing in the introduction for the sealants and packaging offered.

DISTRIBUTOR ORDERS

Distributors will send all orders to the factory with instructions as to the shipping destination. The factory prefers not to make C. O. D. shipments for the distributor and all billing will be made to the distributor in the case of direct shipments.

DEALER ORDERS

Dealers will place all of their part order requirements with their distributor. The factory will not honor orders received directly from a dealer. It will be necessary for us to forward it to the distributor for his action. Therefore, dealers orders sent direct to the distributor will result in much faster delivery on any parts that are required.

RETAIL ORDERS

Retail orders will not be honored by the factory. They are to be placed with the dealer in the owners' territory and when received directly by the factory will be forwarded to the dealer from whose territory it was received. Considerable saving in time will result to the owner if his orders are placed with his dealer.

Cessna®

Cessna Aircraft Company reserves the right to cancel, add or change the parts and assemblies as described in this catalog without notice.

SERVICE KITS.

The following is a list of Service Kits applicable to this Technical Manual. When a Service Kit is initially incorporated into this Technical Manual, information applicable to the change is referenced in the group assembly parts list, and the Service Kit is listed below.

KIT NUMBER	TITLE	CHANGE/REVISION DATE

FINISH AND TRIM INFORMATION

The "FINISH AND TRIM" plate is installed on the inboard side of RH gearwell web.

The following diagram is an example showing the sequence and definition of each code symbol on the finish and trim plate.

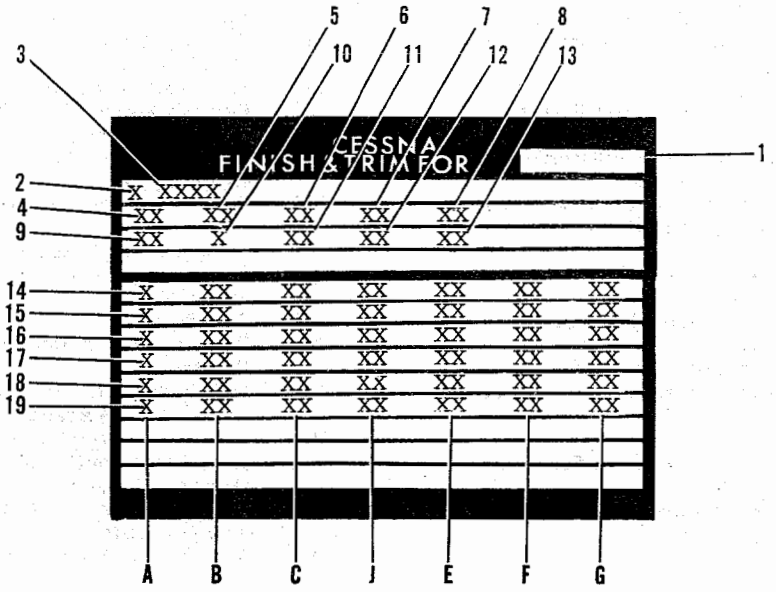

FINISH AND TRIM NUMBER CODES

1. Aircraft Number
2. Model Year
3. * Paint Type, Exterior Colors
4. Carpet
5. Radio, Instrument & Stationary Panels & Glove Box
6. * Standard Interior Paint
7. * Heat & Vent Grill & Fire Extinguisher Bracket
8. Circuit Breaker Panel & Plug Buttons on Panel
9. Circuit Breaker Panel Silkscreen
10. Side Panel, Emergency Exit Panel, Armrest Top & Side
11. Lower Cabin Door Trim, Pilot & Copilot Armrest
12. Door Support Cable Cover
13. Cabin Door Step

Pilot Seat

14A. Seat & Headrest Insert, Armrest Top & Seat Back
14B. Seat Seams
14C. Seat, Armrest & Headrest Risers & Bolsters
14J. Seat Support Structure & Emergency Crank Stowage Bracket
14E. Seat Skirt, Electrical Cover & Manual Gear Extension Chain Cover & Air Condition Cover
14F. Exposed Parts - Seat, Seat Track & Armrest Bottom
14G. Seat Belts & Shoulder Harness

Copilot Seat

15A. Seat & Headrest Insert, Armrest Top & Seat Back

Copilot Seat (Cont.)

15B. Seat Seams
15C. Seat, Armrest & Headrest Risers & Bolsters
15J. Seat Support Structure & Emergency Crank Stowage Bracket
15E. Seat Skirt, Electrical Cover & Manual Gear Extension Chain Cover & Air Condition Cover
15F. Exposed Parts - Seat, Seat Track & Armrest Bottom
15G. Seat Belts & Shoulder Harness

Left Forward Passenger Seat

16A. Seat & Headrest Insert, Armrest Top & Seat Back
16B. Seat Seams
16C. Seat, Armrest & Headrest Risers & Bolsters
16J. Seat Support Structure & Emergency Crank Stowage Bracket
16E. Seat Skirt, Electrical Cover & Manual Gear Extension Chain Cover & Air Condition Cover
16F. Exposed Parts - Seat, Seat Track & Armrest Bottom
16G. Seat Belts & Shoulder Harness

Right Forward Passenger Seat

17A. Seat & Headrest Insert, Armrest Top & Seat Back
17B. Seat Seams
17C. Seat, Armrest & Headrest Risers & Bolsters
17J. Seat Support Structure & Emergency Crank Stowage Bracket
17E. Seat Skirt, Electrical Cover & Manual Gear Extension Chain Cover & Air Condition Cover
17F. Exposed Parts - Seat, Seat Track & Armrest Bottom
17G. Seat Belts & Shoulder Harness

Left Rear Passenger Seat

18A. Seat & Headrest Insert, Armrest Top & Seat Back
18B. Seat Seams
18C. Seat, Armrest & Headrest Risers & Bolsters
18J. Seat Support Structure & Emergency Crank Stowage Bracket
18E. Seat Skirt, Electrical Cover & Manual Gear Extension Chain Cover & Air Condition Cover
18F. Exposed Parts - Seat, Seat Track & Armrest Bottom
18G. Seat Belts & Shoulder Harness

Right Rear Passenger Seat

19A. Seat & Headrest Insert, Armrest Top & Seat Back
19B. Seat Seams
19C. Seat, Armrest & Headrest Risers & Bolsters
19J. Seat Support Structure & Emergency Crank Stowage Bracket
19E. Seat Skirt, Electrical Cover & Manual Gear Extension Chain Cover & Air Condition Cover
19F. Exposed Parts - Seat, Seat Track & Armrest Bottom
19G. Seat Belts & Shoulder Harness

* NOTE: These parts are painted various colors as coded on the finish trim plate. All paints used on this model aircraft are listed, by finish and trim code, on the paint color chart.

NOTE: When Codes "SP," "O" or "DUP" appear in any of the indexed positions of the Finish & Trim Plate, "SP," is "Special Colors or Material," "O" is "Omitted From This Airplane," "DUP" is "Duplicate of Line Above."

FINISH AND TRIM INFORMATION

The "FINISH AND TRIM" plate is installed on the inboard side of RH gearwell web.

The following diagram is an example showing the sequence and definition of each code symbol on the finish and trim plate.

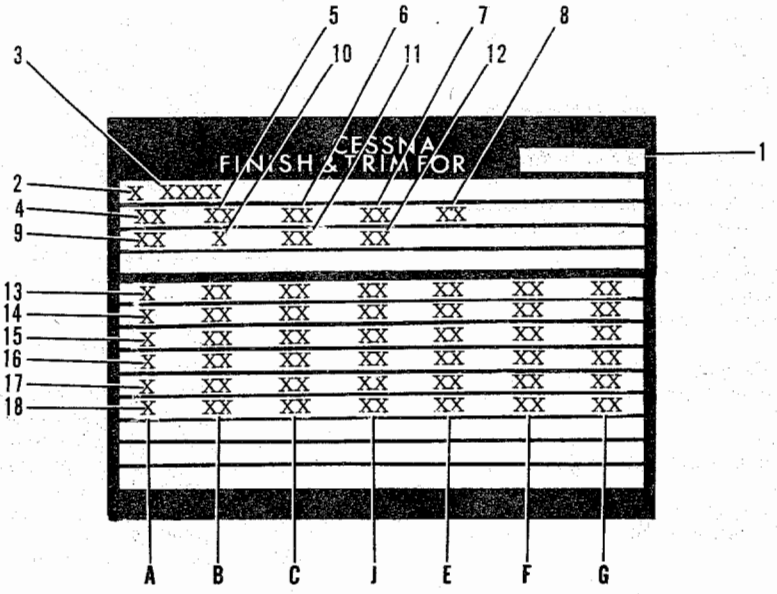

FINISH AND TRIM NUMBER CODES

1.		Aircraft Number
2.		Model Year
3.	*	Paint Type, Exterior Colors
4.		Carpet
5.		Curtains
6.	*	Standard Interior Paint
7.	*	Heat & Vent Grill & Fire Extinguisher Bracket
8.		Circuit Breaker Panel & Plug Buttons on Panel
9.		Cabin Door Step
10.		Side Panel, Emergency Exit Panel, Armrest Top & Side & Removable Armrest
11.		Lower Cabin Door Trim, Pilot & Copilot Armrest
12.		Door Support Cable Cover

Pilot Seat

13A.	Seat & Headrest Insert, Armrest Top & Seat Back
13B.	Seat Seams
13C.	Seat, Armrest & Headrest Risers & Bolsters
13J.	Seat Support Structure & Emergency Crank Stowage Bracket
13E.	Seat Skirt, Electrical Cover & Manual Gear Extension Chain Cover & Air Condition Cover
13F.	Exposed Parts - Seat, Seat Track & Armrest Bottom
13G.	Seat Belts & Shoulder Harness

Copilot Seat

14A.	Seat & Headrest Insert, Armrest Top & Seat Back

Copilot Seat (Cont.)

14B. Seat Seams
14C. Seat, Armrest & Headrest Riser & Bolsters
14J. Seat Support Structure & Emergency Crank Stowage Bracket
14E. Seat Skirt, Electrical Cover & Manual Gear Extension Chain Cover & Air Condition Cover
14F. Exposed Parts - Seat, Seat Track & Armrest Bottom
14G. Seat Belts & Shoulder Harness

Left Forward Passenger Seat

15A. Seat & Headrest Insert, Armrest Top & Seat Back
15B. Seat Seams
15C. Seat, Armrest & Headrest Risers & Bolsters
15J. Seat Support Structure & Emergency Crank Stowage Bracket
15E. Seat Skirt, Electrical Cover & Manual Gear Extension Chain Cover & Air Condition Cover
15F. Exposed Parts - Seat, Seat Track & Armrest Bottom
15G. Seat Belts & Shoulder Harness

Right Forward Passenger Seat

16A. Seat & Headrest Insert, Armrest Top & Seat Back
16B. Seat Seams
16C. Seat, Armrest & Headrest Risers & Bolsters
16J. Seat Support Structure & Emergency Crank Stowage Bracket

Right Forward Passenger Seat (Cont.)

16E. Seat Skirt, Electrical Cover & Manual Gear Extension Chain Cover & Air Condition Cover
16F. Exposed Parts - Seat, Seat Track & Armrest Bottom
16G. Seat Belts & Shoulder Harness

Left Rear Passenger Seat

17A. Seat & Headrest Insert, Armrest Top & Seat Back
17B. Seat Seams
17C. Seat, Armrest & Headrest Risers & Bolsters
17J. Seat Support Structure & Emergency Crank Stowage Bracket
17E. Seat Skirt, Electrical Cover & Manual Gear Extension Chain Cover & Air Condition Cover
17F. Exposed Parts - Seat, Seat Track & Armrest Bottom
17G. Seat Belts & Shoulder Harness

Right Rear Passenger Seat

18A. Seat & Headrest Insert, Armrest Top & Seat Back
18B. Seat Seams
18C. Seat, Armrest & Headrest Risers & Bolsters
18J. Seat Support Structure & Emergency Crank Stowage Bracket
18E. Seat Skirt, Electrical Cover & Manual Gear Extension Chain Cover & Air Condition Cover
18F. Exposed Parts - Seat, Seat Track & Armrest Bottom
18G. Seat Belts & Shoulder Harness

* NOTE: These parts are painted various colors as coded on the finish trim plate. All paints used on this model aircraft are listed, by finish and trim code, on the paint color chart. See Service Manual.

NOTE: When Codes "SP", "O" or "DUP" appear in any of the indexed positions of the Finish & Trim Plate, "SP," is "Special Colors or Material," "O" is "Omitted From This Airplane," "DUP" is "Duplicate of Line Above."

FINISH AND TRIM INFORMATION

The "FINISH AND TRIM" plate is installed on the inboard side of RH gearwell web.

The following diagram is an example showing the sequence and definition of each code symbol on the finish and trim plate.

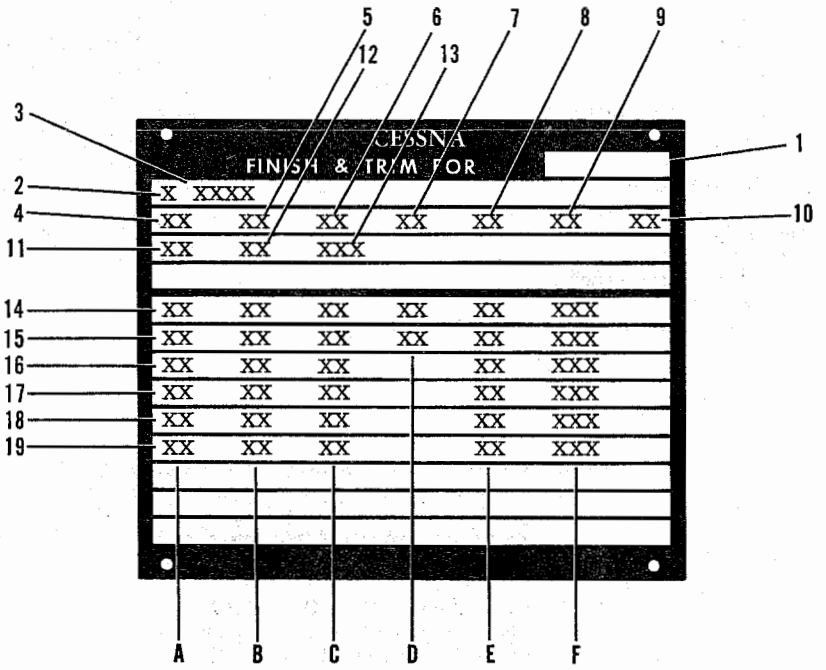

FINISH AND TRIM NUMBER CODES

1. Aircraft Number
2. Model Year
3. * Paint Type, Exterior Colors
4. Carpet
5. Electrical Cover, Airconditioner Cover Manual Gear Extend Cover
6. Seat Support Structure & Emergency Crank Stowage Bracket.
7. * Heat & Vent Grill & Fire Extinguisher Bracket
8. Curtains
9. Side Panel, Emergency Exit Panel, Armrest Top & Side & Removable Armrest
10. Lower Cabin Door Trim, Pilot & Copilot Armrest & Secondary Instrument Panel
11. Cabin Door Step Carpet
12. Door Support Cable Covers
13. Standard Interior Paint & Material

PILOT SEAT

14A. Seat & Headrest Inserts, Armrest Insert & Seat Back
14B. Seat & Armrest Seams
14C. Seat Armrest, Headrest, Riser, Bolsters & Skirt
14D. Seat Indicator Tabs
14E. Exposed Parts, Seat Track & Armrest Bottom
14F. Seat Belt & Shoulder Harness

COPILOT SEAT

15A. Seat & Headrest Inserts, Armrest Insert & Seat Back
15B. Seat & Armrest Seams
15C. Seat Armrest, Headrest, Risers, Bolsters & Skirt
15D. Seat Indicator Tabs
15E. Exposed Parts, Seat Track & Armrest Bottom

COPILOT SEAT (Cont.)

15F. Seat Belt & Shoulder Harness

LEFT FORWARD PASSENGER SEAT

16A. Seat & Headrest Inserts Armrest Insert & Seat Back
16B. Seat & Armrest Seams
16C. Seat Armrest, Headrest, Risers, Bolsters & Skirt
16D. Seat Indicator Tabs
16E. Exposed Parts, Seat Track & Armrest Bottom
16F. Seat Belt & Shoulder Harness

RIGHT FORWARD PASSENGER SEAT

17A. Seat & Headrest Inserts Armrest Insert & Seat Back
17B. Seat & Armrest Seams
17C. Seat Armrest, Headrest, Risers, Bolsters & Skirt
17D. Seat Indicator Tabs
17E. Exposed Parts, Seat Track & Armrest Bottom
17F. Seat Belt & Shoulder Harness

LEFT REAR PASSENGER SEAT

18A. Seat & Headrest Inserts Armrest Insert & Seat Back
18B. Seat & Armrest Seams
18C. Seat Armrest, Headrest, Risers, Bolsters & Skirt
18D. Seat Indicator Tabs
18E. Exposed Parts, Seat Track & Armrest Bottom
18F. Seat Belt & Shoulder Harness

RIGHT REAR PASSENGER SEAT

19A. Seat & Headrest Inserts Armrest Insert & Seat Back
19B. Seat & Armrest Seams
19C. Seat Armrest, Headrest, Risers, Bolsters, & Skirts
19D. Seat Indicator Tabs
19E. Exposed Parts, Seat Track & Armrest Bottom
19F. Seat Belt & Shoulder Harness

* NOTE: These parts are painted various colors as coded on the finish trim plate. All paints used on this model aircraft are listed, by finish and trim code on the paint color chart. See Service Manual

NOTE: When Codes "SP", "O" or "DUP" appear in any of the indexed positions of the Finish & Trim Plate, "SP", is "Special Colors or Material," "O" is "Omitted From This Airplane," "DUP" is "Duplicate of Line Above."

FINISH AND TRIM INFORMATION
340A0001 & ON

The following finish and trim plate breakdown provides important materials and colors information which is required when ordering replacement interior finish and trim equipment for your aircraft.

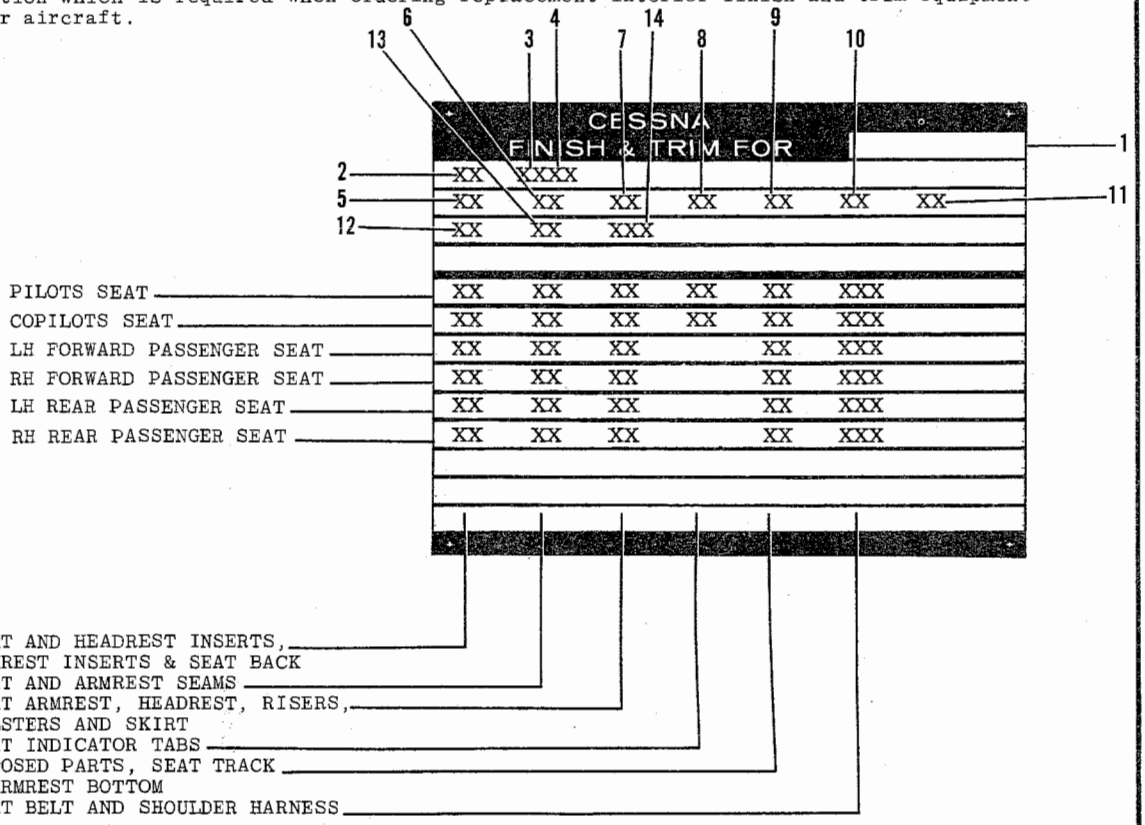

1. Aircraft Number
2. Model Year
3. Paint Type
4. Exterior Colors
5. Carpet
6. Electrical Cover, Airconditioner Cover Manual Gear Extend Cover
7. Seat Support Structure & Emergency Crank Stowage Bracket
8. Heat & Vent Grill & Fire Extinguisher Bracket
9. Curtains
10. Side Panel, Emergency Exit Panel, Armrest Top & Side Removable Armrest
11. Lower Cabin Door Trim, Pilot & Copilot Armrest & Secondary Instrument Panel
12. Cabin Door Step Carpet
13. Door Support Cable Covers
14. Standard Interior Paint & Material

NOTE:
Code "SP" instead of individual code numbers in the finish and trim plate are shown for materials and colors which are not standard. Code "O" instead of individual code number indicate the part is not installed on the aircraft; such as options.

WHAT INFORMATION IS REQUIRED WHEN ORDERING INTERIOR EQUIPMENT:

1. Aircraft Model
2. Aircraft Serial number
3. Basic Part Number (available in applicable Figure)
4. Applicable codes from Finish and Trim Plate of your aircraft

SAMPLE OF HOW TO ORDER PILOTS SEAT BELT:

1. Refer to applicable Figure and obtain Basic Part Number (CM4009).
2. Check the Finish and Trim Plate Codes for material and color information code.

Pilots Seat X XX XX XX XXX — SEAT BELT AND SHOULDER HARNESS

3. Provide the following information on order: (1) Model 340A, (2) Serial 340A0079, (3) CM4009-XX Pilots Seat Belt.

PAINT COLOR CHART

1972 MODEL 340-0001 TO 340-0151

Finish & Trim Code	EXTERIOR PAINT COLOR	Vinyl	Poly-ure-thane
A	VESTAL WHITE	-170	-2113
B	OLIVE	-2147	
		-2163	
C	SUN GLO RED	-492	-2137
D	EMPRESS BLUE	-605	-2120
E	ASCOT YELLOW	-432	-2117
F	GOLDEN OCHRE	-452	-2164
G	CORK BROWN	-464	-2116
H	TROPICA ORANGE	-819	-2118
J	DEEP MAHOGANY	-285	-2119
K	VELVET BLACK	-171	-2114
L	CRANBERRY	-880	-2115
M	ARISTO BLUE	-655	-2121

Finish & Trim Code	INTERIOR PAINT COLOR	CES 1054	CES 2800
	EPOXY PAINT		
43	AVOCADO GREEN		-2162
44	CARMEN RED		-2159
45	MUSTARD GOLD		-2160
46	MARINA BLUE		-2158
47	VELVET BLACK	-308	
48	BEIGE		-2161
49	CLOUD GRAY	-534	
	LACQUER PAINT		
50	AVOCADO GREEN		-2157
51	CARMEN RED		-2154
52	MUSTARD GOLD		-2155
53	MARINA BLUE		-2153
54	VELVET BLACK	-151	
55	BEIGE		-2156
56	CLOUD GRAY	-531	
57	DULL BLACK	-193	
58	CADET GRAY		-2106

INTERIOR TRIM PAINT USAGE

42	BLACK - SEMI-GLOSS	-156			CLOUD GRAY - EPOXY	-534	
	USED ON:				USED ON:		
	BRAKE LINKS & MASTER CYLINDER				SUNVISOR - EXPOSED PARTS		
	CONTROL COLUMN				END FITTINGS - CURTAIN TRACK DIVIDER		
	PARKING BRAKE BRACKET						
	QUADRANT - VISIBLE PARTS ON INSIDE				DUSTY PEACH	-535	
	RUDDER PEDALS				USED ON:		
					BUTTONS - UPHOL SNAP		
	BLACK - DULL	-193			WING LOCKER		
	USED ON:				CLOUD GRAY - ACRYLIC	-857	
	DEFROST DUCTS				USED ON:		
	PEDESTAL ASSY				NAC BAGGAGE DOOR FRAME - EXPOSED PARTS		
	WINDSHIELD RETAINERS						
	VELVET BLACK	-308			NAC BAGGAGE DOOR INSIDE SURFACE		
	USED ON:						
	QUADRANT COVER						
	TRIM WHEEL				VELVET BLACK - COATING	-882	
					USED ON:		
	CLOUD GRAY - LACQUER	-531			DECK SKIN & PANELS		
	USED ON:				COMPASS		
	FOUL WEATHER WINDOW FRAME						

PAINT COLOR CHART

1973 MODEL 340-0151 TO 340-0301

Finish & Trim Code	EXTERIOR PAINT COLOR	Vinyl	Poly-ure-thane
A	VESTAL WHITE	-170	-2113
B	GOLDEN OCHRE	-452	-2173
C	LAGOON BLUE	-584	-2193
D	SUNGLOW RED	-492	-2174
E	TROPICAL ORANGE	-819	-2118
F	PALM GREEN	-2196	-2190
G	OLIVE	-2147	-2172
H	ADMIRAL BLUE	-457	-2192
J	BOMBAY BRONZE	-925	-2191
K	ITALIAN GOLD	-517	-2194
M	VELVET BLACK	-171	-2114
P	GROVE GREEN	-2195	-2189
	EXTERIOR PROTECTIVE PAINT		
	GRAY	-142	
SP	SPECIAL COLORS		

Finish & Trim Code	INTERIOR PAINT COLOR	CES 1054	CES 2800
55	EPOXY PAINT		
56	AVOCADO GREEN		-2162
57	CARMEN RED		-2159
58	MUSTARD GOLD		-2160
59	MARINA BLUE		-2158
60	BEIGE		-2161
	VELVET BLACK	-308	
61	LACQUER		
62	AVOCADO GREEN		-2157
63	CARMEN RED		-2154
64	MUSTARD GOLD		-2155
65	MARINA BLUE		-2153
66	BEIGE		-2156
	VELVET BLACK	-151	

INTERIOR TRIM PAINT USAGE

54	BLACK - SEMI-GLOSS USED ON: BRAKE LINKS & MASTER CYLINDER CONTROL COLUMN PARKING BRAKE BRACKET QUADRANT - VISIBLE PARTS ON INSIDE RUDDER PEDALS	-156			CLOUD GRAY - EPOXY USED ON: SUNVISOR - EXPOSED PARTS END FITTINGS - CURTAIN TRACK DIVIDER	-534	
	BLACK - DULL USED ON: DEFROST DUCTS PEDESTAL ASSY WINDSHIELD RETAINERS	-193			DUSTY PEACH USED ON: BUTTONS - UPHOL SNAP WING LOCKER	-535	
	VELVET BLACK USED ON: QUADRANT COVER TRIM WHEEL	-308			CLOUD GRAY - ACRYLIC USED ON: NAC BAGGAGE DOOR FRAME - EXPOSED PARTS NAC BAGGAGE DOOR INSIDE SURFACE	-857	
	CLOUD GRAY - LACQUER USED ON: FOUL WEATHER WINDOW FRAME	-531			VELVET BLACK - COATING USED ON: DECK SKIN & PANELS COMPASS	-882	
					CLOUD GRAY USED ON: TRIM CAPS AFT BULKHEAD	-2102	

PAINT COLOR CHART

1974 MODEL 340-0301 THRU 340-0500

Finish & Trim Code	EXTERIOR PAINT COLOR	Vinyl	Poly-urethane
A	VESTAL WHITE	-170	-2113
B	BOMBAY BRONZE	-925	-2191
C	INCA GOLD	-2247	-2246
D	AWARD BLUE	-2260	-2259
E	HUNTER GREEN	-611	-2252
F	VELVET BLACK	-171	-2114
G	REBEL RED	-2241	-2240
H	LIME	-2250	-2249
J	FESTIVAL YELLOW	-2270	-2269
K	VIVID ORANGE	-2244	-2243
L	SHADOW BLUE	-2263	-2262
M	GRAY	-2266	-2265
N	BEIGE	-2257	-2256
P	EXECUTIVE BROWN	-2254	-2253
	EXTERIOR PROTECTIVE PAINT		
	GRAY	-142	
SP	SPECIAL COLORS		

Finish & Trim Code	INTERIOR PAINT COLOR	CES 1054	CES 2800
	EPOXY PAINT		
89	PALM GREEN		-2233
90	CORAL RED		-2232
91	TOPAZ GOLD		-2234
92	ROYAL BLUE		-2231
93	BEIGE		-2161
94	ONYX BLACK	-308	
95	CLOUD GRAY	-534	
	LACQUER PAINT		
98	PALM GREEN		-2229
99	CORAL RED		-2228
100	TOPAZ GOLD		-2230
101	ROYAL BLUE		-2227
102	BEIGE		-2256
103	VELVET BLACK	-151	

INTERIOR TRIM PAINT USAGE

115	BLACK - SEMI - GLOSS	-156			DUSTY PEACH LACQUER	-535	
	USED ON:				USED ON:		
	BRAKE LINKS AND MASTER CYLINDER				BUTTONS - UPHOL SNAP		
	PARKING BRAKE BRACKET				WING LOCKER		
	QUADRANT - VISABLE PARTS ON INSIDE				CLOUD GRAY - ACRYLIC LACQUER USED ON:	-857	
	RUDDER PEDALS				NAC BAGGAGE DOOR FRAME - EXPOSED		
	BLACK DULL	-193			PARTS		
	USED ON:				NAC BAGGAGE DOOR		
	COMPASS				INSIDE SURFACE		
	DEFROST DUCTS						
	PEDESTAL ASSY				BLACK - SUEDE COATING	-882	
	WINDSHIELD ASSY				USED ON:		
					DECK SKIN AND PNL		
	ONYX BLACK - EPOXY	-308					
	USED ON:				CLOUD GRAY - VINYL		-2102
	QUADRANT COVER				USED ON:		
	TRIM WHEEL				AFT BHD - TRIM CAPS		
	CLOUD GRAY - EPOXY	-534					
	USED ON:				CADET GRAY - LACQUER		-2106
	SUNVISOR - EXPOSED PARTS				USED ON:		
	END FITTINGS - CURTAIN TRACK DIVIDER				CIRCUIT BREAKER PNL AND SILKSCREEN		
	NOSE BAGGAGE DOOR INSIDE				CIRCUIT BREAKER PNL AND PLUG BUTTONS		

1975 MODEL 340-0501 TO 340A0001

EXTERIOR PAINT COLOR CHART

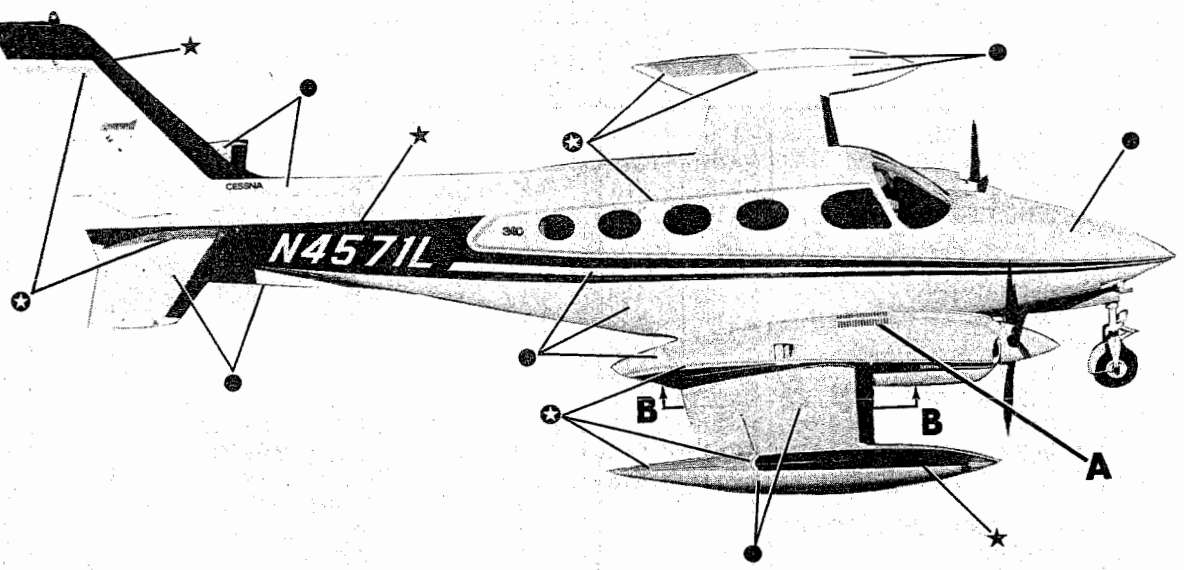

EXTERIOR COLOR CHART				
	PAINT TYPE PER CES1054 OR CES2800			
COLOR SYMBOL	VINYL	POLYURETHANE	COLOR NAME	FINISH AND TRIM CODE
BASE ● COLOR	-170	-2113	Vestal White	A
MAJOR ★ COLOR	-2247	-2246	Inca Gold	B
	-2281	-2280	Heartwood Brown	C
	-819	-A65	Tropical Orange	D
	-2275	-2274	Valencia Orange	E
	-2241	-2240	Rebel Red	F
	-2260	-2259	Award Blue	G
	-2290	-2289	Del Mar Blue	H
	-2284	-2283	Island Green	J
ACCENT ✪ COLOR	-2278	-2277	Bold Yellow	K
	-819	-A65	Tropical Orange	D
	-2275	-2274	Valencia Orange	E
	-2281	-2280	Heartwood Brown	C
	-171	-2114	Velvet Black	L
	-2257	-2256	Beige	M
	-2241	-2240	Rebel Red	F
	-2290	-2289	Del Mar Blue	H
	-2287	-2286	Apio Green	N

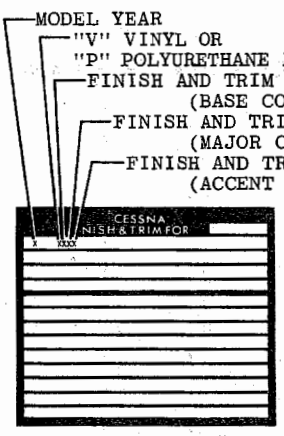

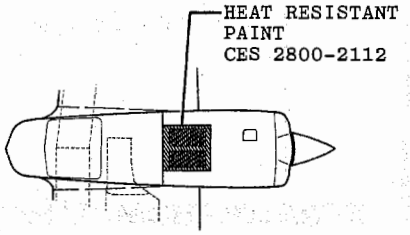

Detail **A**

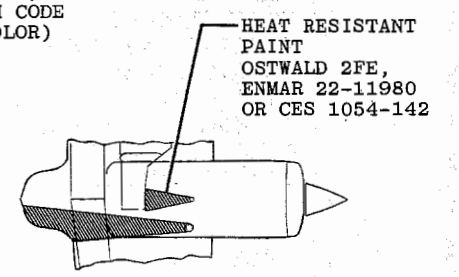

Detail **B**

READ THIS BEFORE ORDERING

EXAMPLE OF ORDERING EXTERIOR COLOR CODE LETTER "A" ON FINISH AND TRIM PLATE:

CES1054-170G (VESTAL WHITE — GALLON) OR CES2800-2113G (VESTAL WHITE — GALLON)

NOTE: When ordering paint specify CES1054- (3 numbers or 1 letter and 2 numbers) or CES 2800- (4 numbers). Add letter "Q" (for quart), "G" (for gallon) or "S" (for spray can) to the paint dash No. (see example).

NOTE: All landing gear components including wheel and brakes shall be painted white epoxy CES2800-2212. Except main landing gear retraction torque tube assembly to be painted gull gray baked enamel CES1054-114. Alternate paint for wheel and brake is vestal white lacquer CES1054-398.

INTERIOR PAINT COLOR CHART

1975 MODEL 340-0501 TO 340A0001

Finish & Trim Code	INTERIOR PAINT COLOR	CES 1054	CES 2800	Finish & Trim Code	INTERIOR PAINT COLOR	CES 1054	CES 2800
	EPOXY PAINT				LACQUER PAINT		
89	PALM GREEN		-2233	98	PALM GREEN		-2229
90	CORAL RED		-2232	99	CORAL RED		-2228
91	TOPAZ GOLD		-2234	100	TOPAZ GOLD		-2230
92	ROYAL BLUE		-2231	101	ROYAL BLUE		-2227
93	BEIGE		-2161	102	BEIGE		-2156
94	ONYX BLACK	-308		103	VELVET BLACK	-151	
95	CLOUD GRAY	-534					
SP	SPECIAL COLORS						

INTERIOR TRIM PAINT USAGE

115	BLACK SEMI-GLOSS USED ON: BRAKE LINKS AND MASTER CYLINDER PARKING BRAKE BRACKET QUADRANT-VISIBLE PARTS ON INSIDE OFF RUDDER PEDALS	-156			DUSTY PEACH LACQUER USED ON: BUTTONS-UPHOL SNAP WING LOCKER	-535	
	BLACK DULL USED ON: COMPASS DEFROST DUCTS PEDESTAL ASSY WINDSHIELD ASSY	-193			CLOUD GRAY-ACRYLIC LACQUER USED ON: NAC BAGGAGE DOOR FRAME - EXPOSED PARTS NAC BAGGAGE DOOR INSIDE SURFACE	-857	
	ONYX BLACK-EPOXY USED ON: QUADRANT COVER TRIM WHEEL	-308			BLACK-SUEDE COATING USED ON: DECK SKIN AND PNL	-882	
	CLOUD GRAY-EPOXY USED ON: END FITTINGS-CURTAIN TRACK DIVIDER NOSE BAGGAGE DOOR INSIDE	-534			CLOUD GRAY-VINYL USED ON: AFT BHD-TRIM CAPS		-2102
					CADET GRAY-LACQUER USED ON: CIRCUIT BREAKER PNL AND SILKSCREEN CIRCUIT BREAKER PNL AND PLUG BUTTONS		-2106

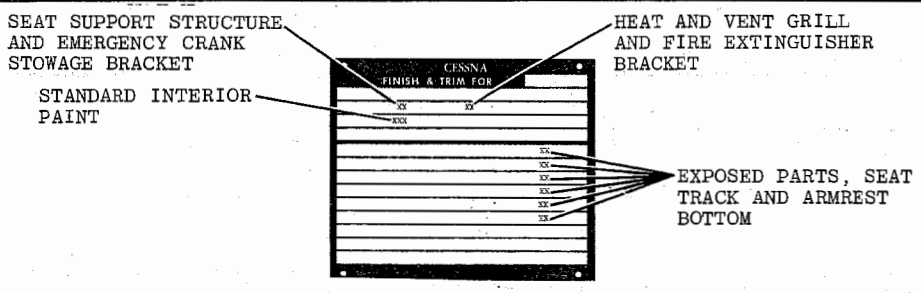

NOTE: For procedures on ordering paint, refer to exterior paint color chart.

1976 MODEL 340A0001 AND ON

EXTERIOR PAINT COLOR CHART

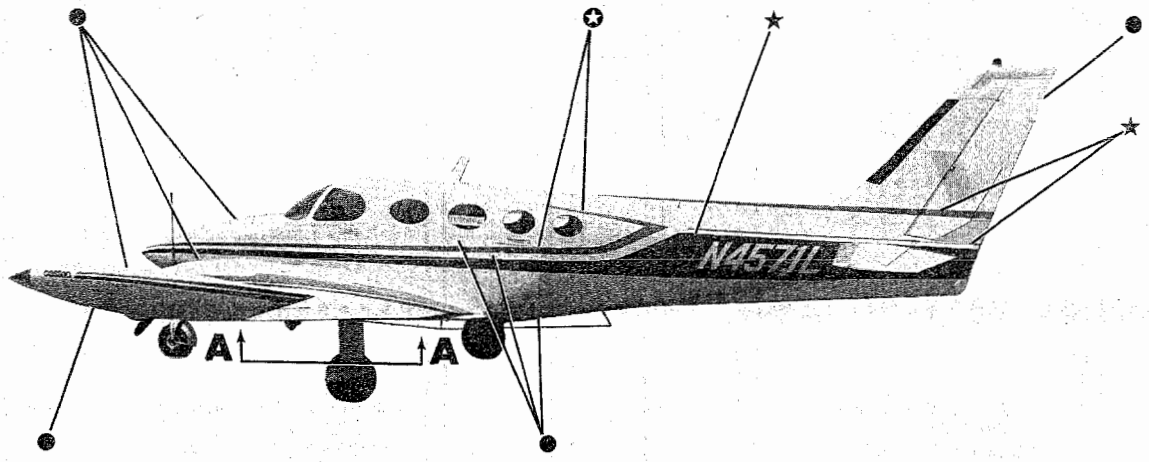

EXTERIOR COLOR CHART				
	PAINT TYPE PER CES1054 OR CES2800			
COLOR SYMBOL	VINYL	POLYURETHANE	COLOR NAME	FINISH AND TRIM CODE
BASE ● COLOR	-170	-2113	Vestal White	A
MAJOR ★ COLOR	-2260	-2259	Award Blue	B
	-171	-2114	Velvet Black	C
	-2284	-2283	Island Green	D
	-2254	-2253	Executive Brown	E
	-517	-2194	Italian Gold	F
	-2275	-2274	Valencia Orange	G
	-925	-2191	Bombay Bronze	H
	-2311	-2312	Fleet Blue	J
ACCENT ○ COLOR	-2241	-2240	Rebel Red	K
	-819	-2118	Tropical Orange	L
	-517	-2194	Italian Gold	F
	-2270	-2269	Festival Yellow	M
	-2257	-2256	Beige	N
	-2196	-2190	Palm Green	P

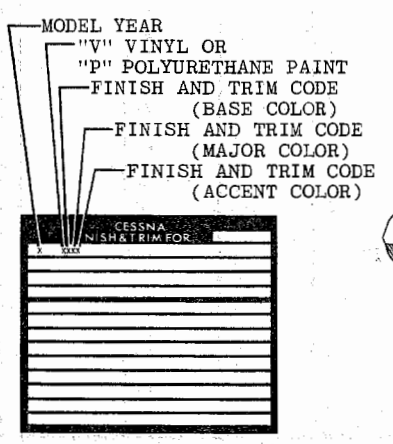

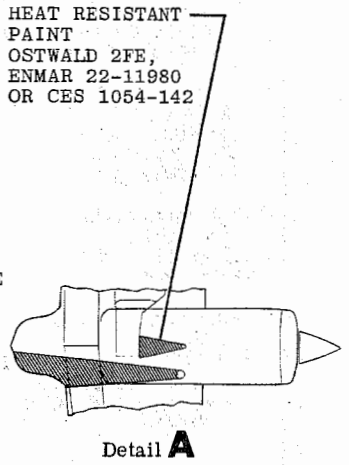

READ THIS BEFORE ORDERING

EXAMPLE OF ORDERING EXTERIOR COLOR CODE LETTER "A" ON FINISH AND TRIM PLATE:

CES1054-170G (VESTAL WHITE / GALLON) OR CES2800-2113G (VESTAL WHITE / GALLON)

NOTE: When ordering paint specify CES1054- (3 numbers or 1 letter and 2 numbers) or CES 2800- (4 numbers). Add letter "Q" (for quart), "G" (for gallon) or "S" (for spray can) to the paint dash No. (see example).

NOTE: All landing gear components including wheel and brakes shall be painted white epoxy CES2800-2212. Except main landing gear retraction torque tube assembly to be painted gull gray baked enamel CES1054-114. Alternate paint for wheel and brake is vestal white lacquer CES1054-398.

INTERIOR PAINT COLOR CHART

1976 MODEL 340A0001 AND ON

Finish & Trim Code	INTERIOR PAINT COLOR	CES 1054	CES 2800	Finish & Trim Code	INTERIOR PAINT COLOR	CES 1054	CES 2800
	EPOXY PAINT				LACQUER PAINT		
122	SAGUARO GREEN		-2233	132	MOJAVE RED		-2296
123	MOJAVE RED		-2301	133	MESA GOLD		-2294
124	MESA GOLD		-2299	134	TETON BLUE		-2295
125	TETON BLUE		-2300	135	DESERT BEIGE		-2236
126	DESERT BEIGE		-2161	136	BLACK	-151	
127	VELVET BLACK	-308		137	SAGUARO GREEN		-2229
128	CLOUD GRAY	-534		138	TERRA COTTA (RUST)		-2228
129	TERRA COTTA (RUST)		-2232	139	CLOUD GRAY	-531	
SP	SPECIAL COLORS						

INTERIOR TRIM PAINT USAGE

143	BLACK SEMI-GLOSS USED ON: BRAKE LINKS AND MASTER CYLINDER, PARKING BRAKE BRACKET, QUADRANT-VISIBLE PARTS ON INSIDE, RUDDER PEDALS	-156			DUSTY PEACH LACQUER USED ON: BUTTONS-UPHOL SNAP, WING LOCKER	-535	
	BLACK DULL USED ON: COMPASS, DEFROST DUCTS, PEDESTAL ASSY, WINDSHIELD ASSY	-193			CLOUD GRAY-ACRYLIC LACQUER USED ON: NAC BAGGAGE DOOR FRAME-EXPOSED PARTS, NAC BAGGAGE DOOR INSIDE SURFACE	-857	
	VELVET BLACK-EPOXY USED ON: QUADRANT COVER, TRIM WHEEL	-308			BLACK-SUEDE COATING USED ON: DECK SKIN AND PNL	-882	
					CLOUD GRAY-VINYL USED ON: AFT BHD-TRIM CAPS		-2102
	CLOUD GRAY-EPOXY USED ON: END FITTINGS-CURTAIN TRACK DIVIDER, NOSE BAGGAGE DOOR INSIDE	-534			CADET GRAY-LACQUER USED ON: CIRCUIT BREAKER PNL AND SILKSCREEN, CIRCUIT BREAKER PNL AND PLUG BUTTONS		-2106

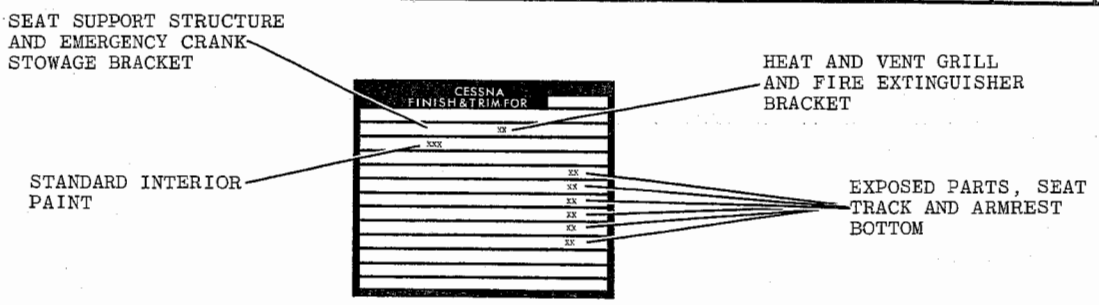

NOTE: For procedures on ordering paint, refer to exterior paint color chart.

MISCELLANEOUS BULK ITEMS

PART NUMBER	DESCRIPTION	USAGE	UNITS OF MEASURE
CM2002	SEAL Rubber, weather resistant	Seal - Baggage door	FT
CM2003	SEAL Rubber channel	Seal - Windows	FT
CM2666T6	DUCT - Flexible Fiberglass cloth impregnated with neoprene rubber 1 ply 1. 50 in. I. D.	Heating & Ventilation	FT
CM2666T8	DUCT - Flexible Fiberglass cloth impregnated with neoprene rubber 1 ply 2. 00 in I. D.	Heating & Ventilation	FT
CM2914-3	SLEEVE - Heat shrinkable Polyolfin base compound . 039 in I. D.	Electrical Insulation	FT
CM2914-9	SLEEVE - Heat shrinkable Polyolfin base compound . 141 in I. D.	Electrical Insulation	FT
CM3213-10	SLEEVE - Flexible Fabric impregnated with neoprene rubber & abrasion resistant coating 2. 50 in I. D.	Sleeving - Air ducts	FT
EC2216	ADHESIVE Epoxy base	Cementing Plastic to plastic Plastic to metal Fiberglass to fiberglass Fiberglass to metal Metal to metal	PT KIT
EC1300LP	CEMENT	General Purpose Rubber to rubber Rubber to metal Rubber to plastic Rubber, leather, metal, plastic Gaskets Soundproofing to metal Upholstery to metal Cement deice boots	PT
EC539	COATING	Deice Boot Trim	PT, QT
EXER7G-TER4	PRIMER - Kit	Acrylic Primer for Vinyl Acrylic Enamel	GAL
EX2016G	WASH - Primer	Acrylic Primer for Polyurethane Paint and Enmar Enamel	GAL
EX2414	PRIMER - Zinc chromate Yellow	Corrosion Proofing	QT, GAL
LOCQUIC 47	PRIMER - Adhesive Primer and Cleaner (20 Grams)	Cleaning & Priming for adhesion of gasket	SPRAY CAN
LOCTITE 49	PLASTIC GASKET - Instant seal (1/8 Pt.)	Mounting Alternator to Engine	PT

MISCELLANEOUS BULK ITEMS Continued . . . . . .

PART NUMBER	DESCRIPTION	USAGE	UNITS OF MEASURE
MIL-C-5044	COATING - Non skid	Wing Walk	QT, GAL
MIL-T-713A	TWINE	Tying	FT
MS20426AD3-11	RIVET	Fastener	LB
MS20426AD6-7	RIVET	Fastener	LB
MS20470AD6-14	RIVET	Fastener	LB
MS20470B4-4	RIVET	Fastener	LB
MS20615-4M4	RIVET	Fastener	LB
P618001	SLEEVE Flexible plastic	Electrical Insulation	FT
RTV154	COMPOUND Silicone rubber sealant	Cement seal to fuel weather window	TUBE CARTRIDGE or PAIL
RTV732	COMPOUND Silicone rubber sealant	High Temperature Insulation (Specify color) (-65° to 425°)	TUBE CARTRIDGE or PAIL
"SPRAYON" 708	PARTING AGENT - Teflon	Prevent adhesion	PT
S1053	DUCT Wire supported flexible fiberglass	Heating & Ventilation	FT
S1071	HOSE Polyethylene - flexible	Air, vacuum, oxygen, pitot	FT
S1078-1	TAPE Synthetic rubber, fabric reinforced .06 in thick .50 in wide	Windshield Sealing	ROLL
S1078-2	TAPE Synthetic rubber, fabric reinforced .12 in thick .50 in wide	Windshield Sealing	ROLL
S1078-4	TAPE Synthetic rubber, fabric reinforced .06 in thick 2.00 in wide	Windshield Sealing	ROLL
S1078-6	TAPE Synthetic rubber, fabric reinforced .03 in thick .50 in wide	Windshield Sealing	ROLL
S1078-7	TAPE Synthetic rubber, fabric reinforced .06 in thick 1.50 in wide	Windshield Sealing	ROLL
S1427	SEAL Extruded rubber	Seal - Doors	FT
S181	TRACK Extruded	Seat Rail	FT
S202RB	CHANNEL Black extruded rubber	Seal - Windows	FT
S292	SLEEVE Flexible, transparent	Electrical Insulation	FT
S307	HOSE Rubber, flexible		FT
S51	HOSE Rubber, flexible	Fuel, oil	FT

MISCELLANEOUS BULK ITEMS Continued . . . . . .

PART NUMBER	DESCRIPTION	USAGE	UNITS OF MEASURE
T3871Q	THINNER		QT
X783	EXTRUSION Rubber channel	Seal - Window	FT
0811751-1	MOLDING Sponge rubber grey	Window	FT
1/4-035-5052	LINE - Aluminum	Fuel, oil, air	FT
1/4-630	MYLAR TAPE - Chrome	Pressure sensitive	
1/2-630	MYLAR TAPE - Chrome	For exterior and	
3/4-630	MYLAR TAPE - Chrome	Interior trim	
3350	DOR TITE	Seal - Window	FT
361-1-1/2	TAPE, Glass fabric Flame, high temperature resistant	Sealing, fire protection	ROLL
471-3/4	TAPE .75 in wide	Windshield Sealing	ROLL
5210-1/4-1/8	SEALANT - Extruded	Seal Windshield or Cabin	FT
5210-1/8-1-1/2	SEALANT - Extruded	Seal Windshield or Cabin	FT
5210-1/16-1/2	SEALANT - Extruded	Seal Windshield or Cabin	FT
550	SOUND DEADENER - Liquid vibration dampener	Vibration dampening can be brushed or sprayed	GAL
5504	SEALANT	Seal Nose Section	PT, QT, GAL
700	SEALANT COMPOUND Withstands 2000 degrees for 5 min.	Seal Firewall, Muffler, Exhaust	PT
890A-1/2	SEALANT - Liquid	Brush Coating	PT, QT, GAL
890A-2	SEALANT - Liquid	Brush Coating	PT, QT, GAL
890B-1/2	SEALANT - Filleting	Fay Sealing - Small areas	SEM KIT
890B-2	SEALANT - Filleting	Fay Sealing - Small areas	SEM KIT

NOTE: When ordering bulk items whose unit of measure is pint, quart, or gallon, add the letter P (for pint), Q (for quart), or G (for gallon) to the part numbers.

Example: EC2141PQ = 1 Quart of EC2141P Cement.

When ordering bulk items where a variety of widths is available, add dash number to part number to indicate width wanted.

Example: 181-44 = 181 Glass Fabric, 44 inches wide.

BULK ELECTRICAL TERMINALS AND WIRE

PART NUMBER	DESCRIPTION
S-1369-1	SPLICE-Disconnect 22-18 GA 2 PC 1 Tip & Coupler
S-1369-2	SPLICE-Disconnect 16-14 GA 2 PC 1 Tip & Coupler
S-341-1	QUICK DISCONNECT 14 & 16 GA 2 per connection
S-341-2	QUICK DISCONNECT 18-22 GA 2 per connection
RA333	TERMINAL-Ring tongue Insulated 22-16 GA #6 Stud
RA713	TERMINAL-Ring tongue Insulated 22-16 GA #1/4 Stud
RA863	TERMINAL-Ring tongue Insulated 22-16 GA #8 Stud
RA873	TERMINAL-Ring tongue Insulated 22-16 GA #10 Stud
RC363	TERMINAL-Ring tongue Insulated 12-10 GA #10 Stud
RC713	TERMINAL-Ring tongue Insulated 12-10 GA #1/4 Stud
RC733	TERMINAL-Ring tongue Insulated 12-10 GA #3/8 Stud
RC863	TERMINAL-Ring tongue Insulated 12-10 GA #8 Stud
S-1367-1-4	TERMINAL-Ring tongue Insulated 22-18 GA #3 or 4
S-1367-1-8	TERMINAL-Ring tongue Insulated 22-18 GA #8 Stud
S-1367-1-6	TERMINAL-Ring tongue Insulated 22-18 GA #5 or 6
S-1367-1-10	TERMINAL-Ring tongue Insulated 22-18 GA #10 Stud
S-1367-1-12	TERMINAL-Ring tongue Insulated 22-18 GA #1/4 Stud
S-1367-2-8	TERMINAL-Ring tongue Insulated 14 & 16 GA #8
S-1367-2-12	TERMINAL-Ring tongue Insulated 16-14 GA #1/4 Stud
S-1367-2-6	TERMINAL-Ring tongue Insulated 16-14 GA #5 or 6
S-1367-3-8	TERMINAL-Ring tongue Insulated 12-10 GA #8 Stud
S-1367-3-10	TERMINAL-Ring tongue Insulated 12-10 GA #10 Stud
S-1367-3-12	TERMINAL-Ring tongue Insulated 12-10 GA #1/4 Stud
S-1367-3-14	TERMINAL-Ring tongue Insulated 12-10 GA #3/8 Stud
S-1367-4-14	TERMINAL-Ring tongue Non-Insul 8 GA #3/8 Stud
S-1367-6-14	TERMINAL-Ring tongue Insulated 4 GA #3/8
S-1367-4-8	TERMINAL-Ring tongue Non-Insul 8 GA #8
S-1367-4-12	TERMINAL-Ring tongue Non-Insul 8 GA # 1/4 Stud
S-1367-6-12	TERMINAL-Ring tongue Insulated 4 GA # 1/4 Stud
S-1367-7-12	TERMINAL-Ring tongue Non-Insul 2 GA # 1/4 Stud
S-1367-7-14	TERMINAL-Ring tongue Non-Insul 2 GA #3/8
322059	TERMINAL-Ring tongue Non-Insul 3-0 GA #3/8
S-1367-7-13	TERMINAL-Ring tongue Non-Insul 2 GA #5/16
S-1367-4-10	TERMINAL-Ring tongue Non-Insul 8 GA #10
S-1370-1	BUTT CONNECTOR Insulated 22-18 GA
S-1370-2	BUTT SPLICE Insulated 16-&14 GA
30956	BUTT SPLICE Non-Insul 22-&16 GA
WS5C/U	WIRE
11318	CABLE
6GA-S	WIRE-Shielded
10GA	WIRE-Insulated electrical 10 GA Non-shielded
12GA	WIRE-Insulated electrical 12 GA Non-shielded
14GA	WIRE-Insulated electrical 14 GA Non-shielded
16GA	WIRE-Insulated electrical 16 GA Non-shielded
18GA	WIRE-Insulated electrical 18 GA Non-shielded
18GA-S-PT	WIRE-Shielded twisted pair
22GA-S-PT	WIRE-Shielded twisted pair
RG-62/U	COAXIAL CABLE
RG-58A/U	COAXIAL CABLE
RG-114/U	COAXIAL CABLE

How to use this book.....

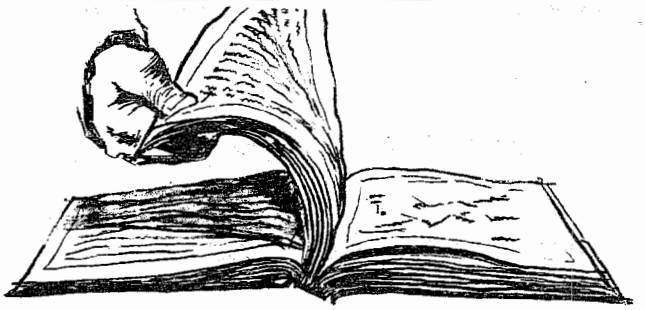

* if part number is known ****

Use the NUMERICAL INDEX in Section III to find Part Number, which is listed in alpha-numerical order.

Example: The desired part is known to be 0841106-5

Find this number in the PART NUMBER COLUMN of the NUMERICAL INDEX. Opposite this number to the right, is 64-1. This is figure 64 index 1 where the part is listed in the PARTS BREAKDOWN and shown in the ILLUSTRATION

See Examples for the listings of this part as described.

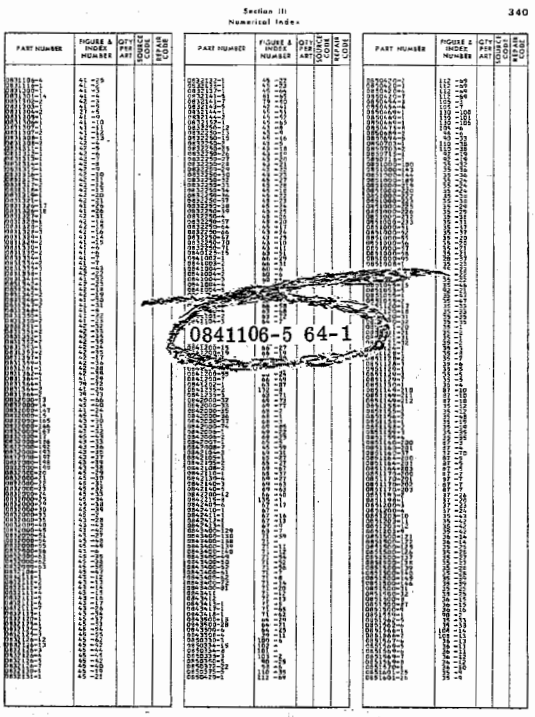

NUMERICAL INDEX

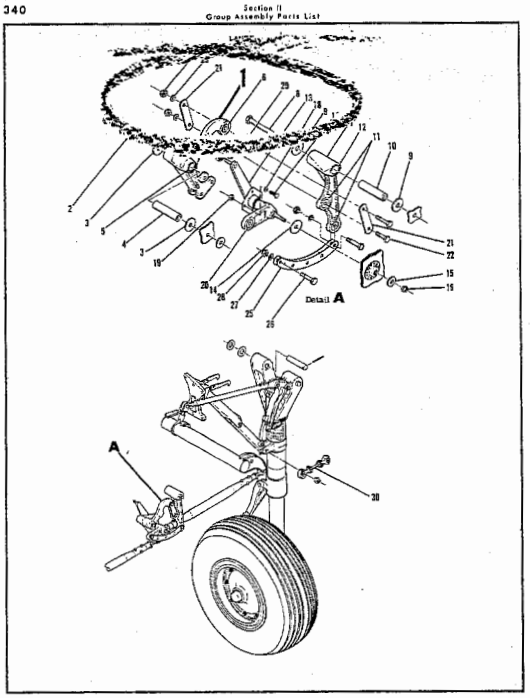

Figure 64. Door Retraction Linkage Installation

ILLUSTRATION

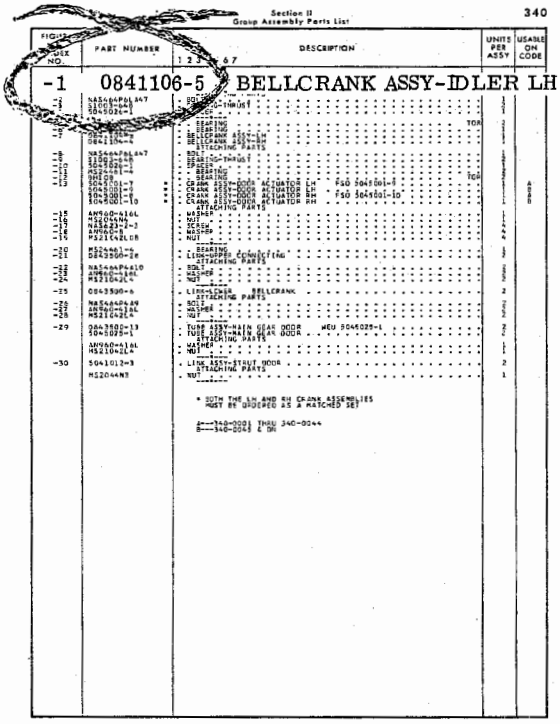

PARTS BREAKDOWN

.....how to use this book (CONT.)

340

ALPHABETICAL INDEX

DESCRIPTION	FIGURE NO.	DESCRIPTION	FIGURE NO.
C		E	
D		F	
E			

DOOR RETRACTION LINKAGE INSTL 64

ALPHABETICAL INDEX

* if part number is not known

The User should determine the description of the part by usage, or functional system to which it belongs. Then the appropiate figure may be located by using the Alphabetical Index.

Example: Desired part is IDLER BELLCRANK ASSY used in the Door Retraction Linkage Instl.

Using the Alphabetical Index, find the Idler Bellcrank Assy, Figure 64. The Part Number is 0841106-5 as shown in Figure 64 index 1.

340

Section II
Group Assembly Parts List

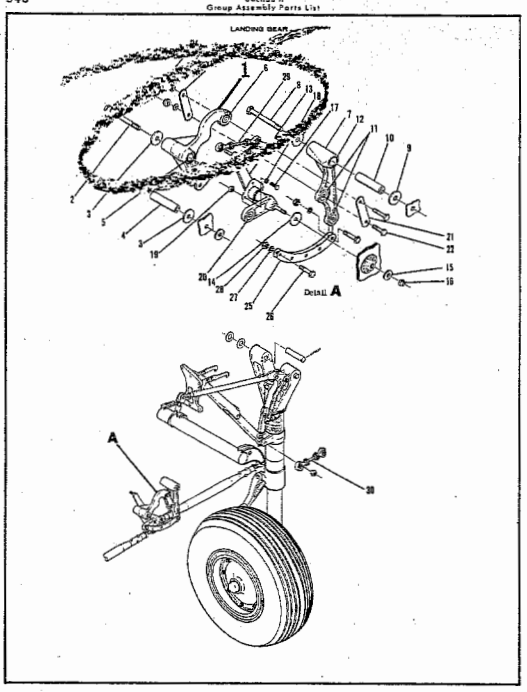

Figure 64. Door Retraction Linkage Installation

2-180

ILLUSTRATION

Group Assembly Parts List

340

FIGURE AND INDEX NO.	PART NUMBER	1 2 3 4 5 6 7 DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
64 -1	0841106-5	BELLCRANK ASSY-IDLER LH		

2-181

PARTS BREAKDOWN

SECTION II

GROUP ASSEMBLY PARTS LIST

Part 1 Airplane Assembly

PLACARDS

1

3

3A

1A

2

5

4

6

4A

7

4B

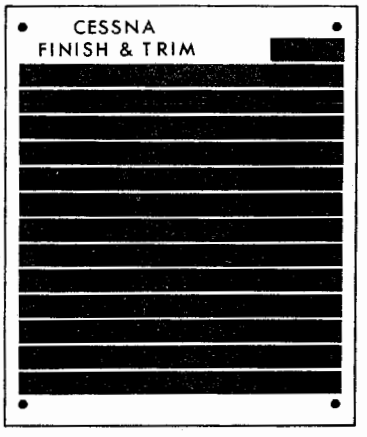

9

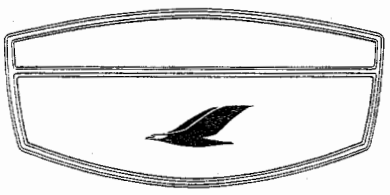

8

8A

14148002
51148005

Figure 1. Nameplates, Placards & Exterior Markings (Sheet 1 of 8)

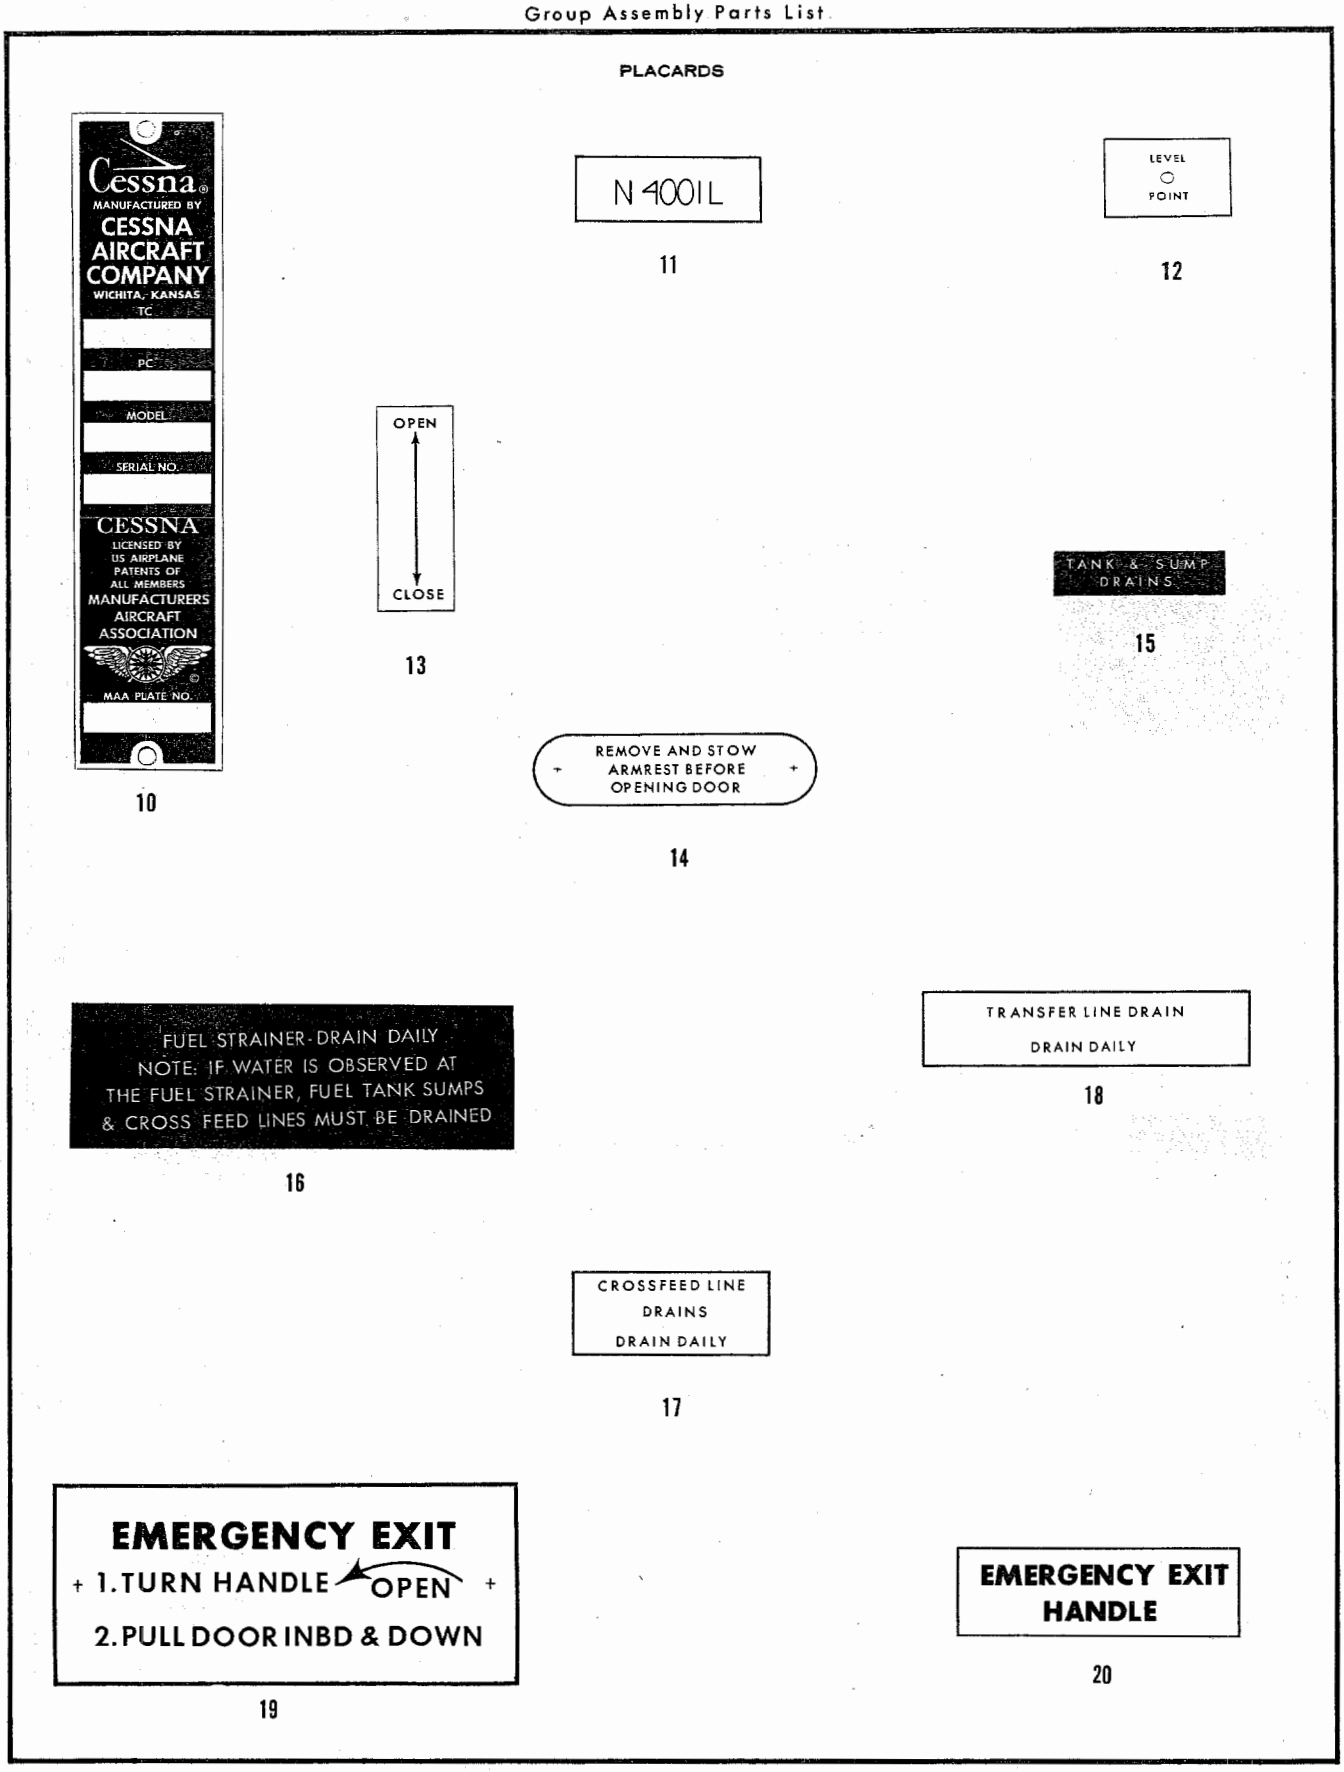

Figure 1. Nameplates, Placards & Exterior Markings (Sheet 2)

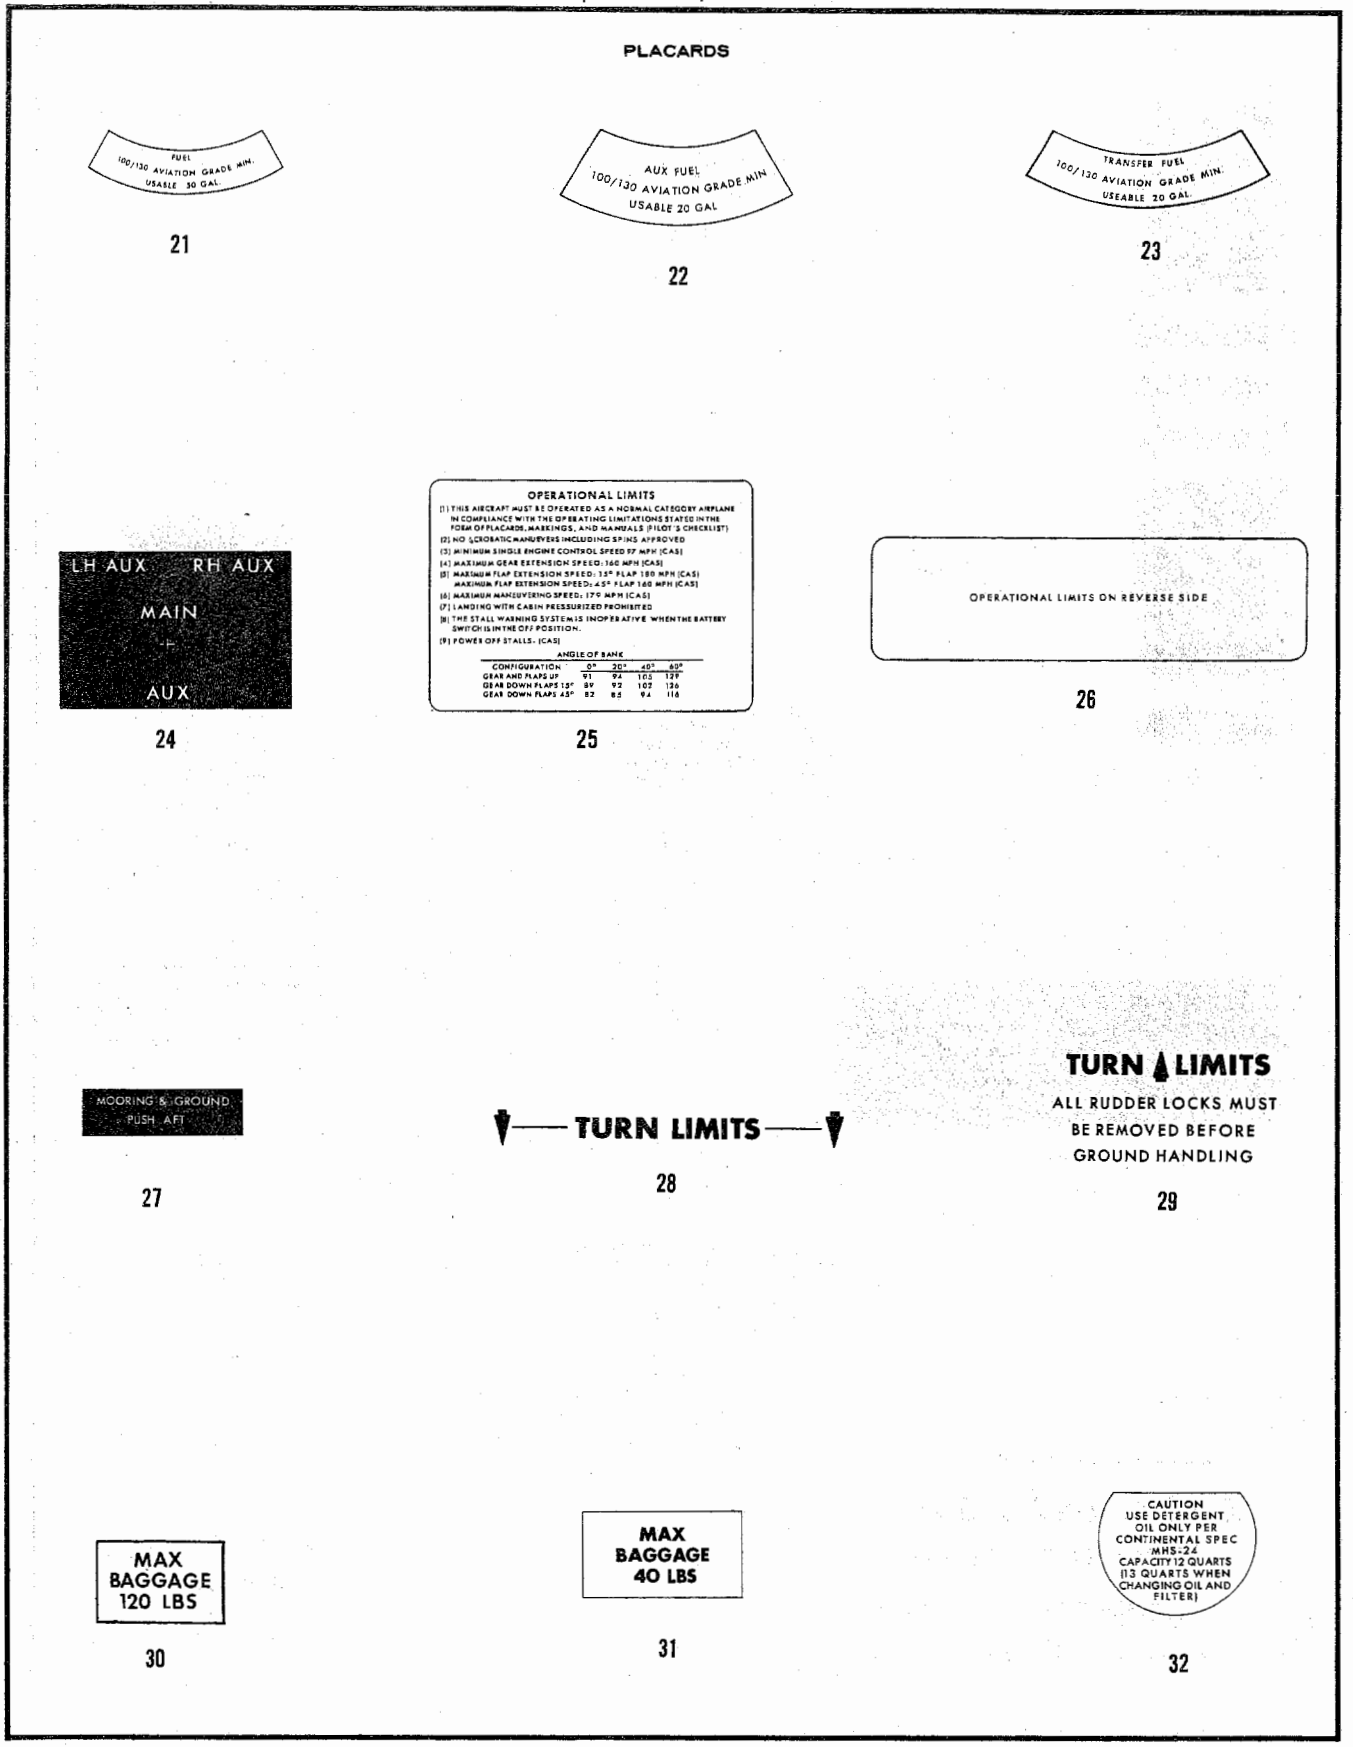

Figure 1. Nameplates, Placards & Exterior Markings (Sheet 3)

PLACARDS

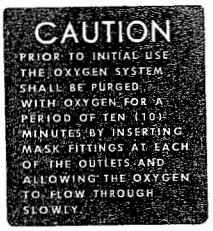

33

34

35

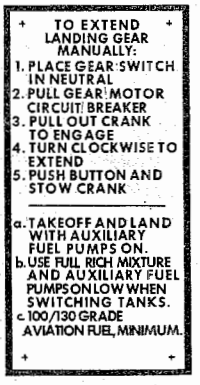

38

36

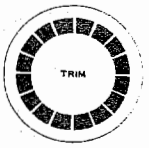

37

39

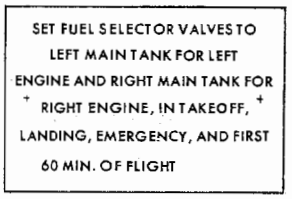

40

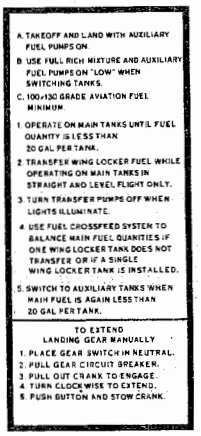

41

Figure 1. Nameplates, Placards & Exterior Markings (Sheet 4)

PLACARDS



42

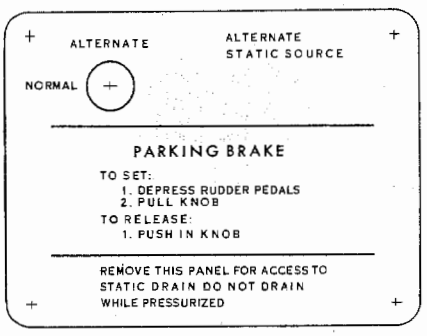

43

44

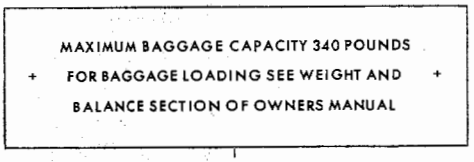

45

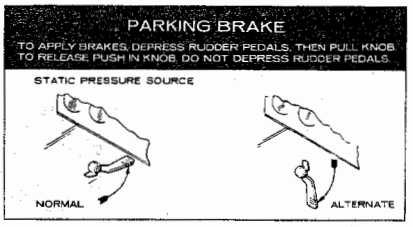

43A

47

46

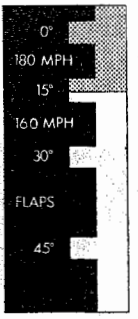

50

48

49

51148004
51142023
54148003
51148002

Figure 1. Nameplates, Placards & Exterior Markings (Sheet 5)

PLACARDS



51

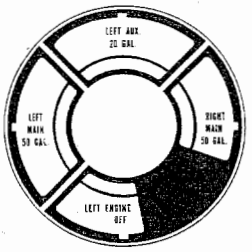

52

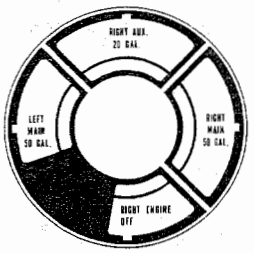

53

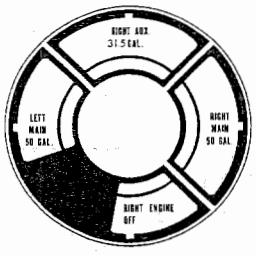

54



55

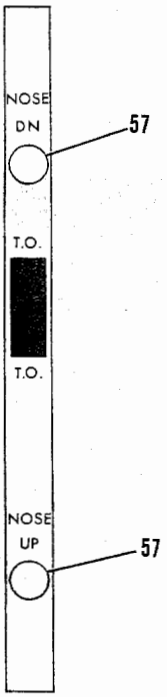

57

57

56

USE BLUE OXYGEN CONNECTOR ONLY

58

11 CU. FT.

60

RELIEF TUBE

61

ALCOHOL ANTI-ICE
FILL WITH ISOPROPYL ALCOHOL MIL-F-5566
TANK CAP. 2.0 GAL.

62

PROP SYNC
ON
+
OFF
MUST BE OFF FOR TAKE-OFF, LDG AND ONE ENG OPERATION

59

CODE T

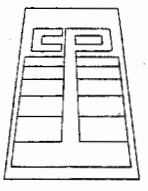

63

CESSNA 340

64

51148005
14148001
54148003
54148001

Figure 1. Nameplates, Placards & Exterior Markings (Sheet 6)

PLACARDS

65

66
CODE S

67
CODE S

68
CODE S

69
CODE S

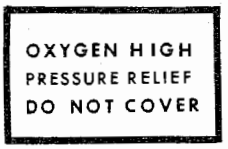

70



71

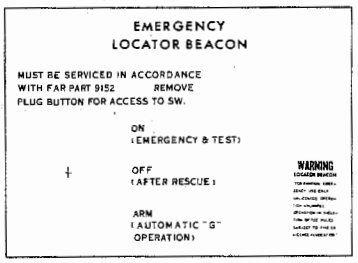

72

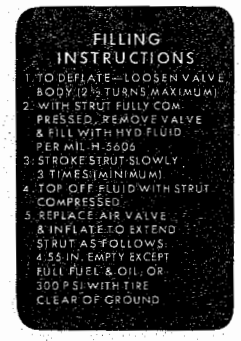

73

74

75

54148004
51148004
54148001
54148003

Figure 1. Nameplates, Placards & Exterior Markings (Sheet 7)

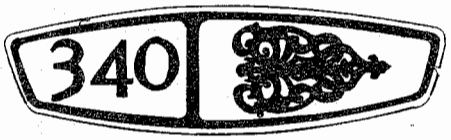

76
CODE R

77
CODE R

78
CODE R

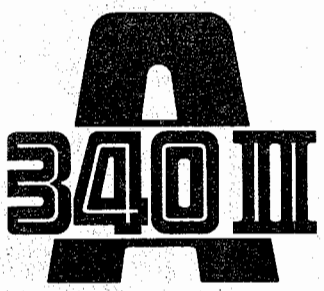

79
CODE R

turbo system

80
CODE R

PROP SYNC
PHASE SYNC OFF

81
CODE R

MUST BE OFF FOR TAKEOFF,
LDG. AND ONE ENG. OPER.

82
CODE R

10148002
14148001

Figure 1. Nameplates, Placards & Exterior Markings (Sheet 8)

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
1 -			NAMEPLATES PLACARDS AND EXTERIOR MARKINGS	062	
	SEE FIG 20		. PLACARD-CONTROL PEDESTAL COVER	REF	
	SEE FIG 86		. PLACARD-FLIGHT CONTROL WHEEL	REF	
	SEE FIG 19		. PLACARD-INSTRUMENT PANEL STATIONARY	REF	
	SEE FIG 68		. PLACARD-LANDING GEAR STRUT MAIN	REF	
	SEE FIG 74		. PLACARD-LANDING GEAR STRUT NOSE	REF	
	SEE FIG 63		. PLACARD-MANIFOLD PRESSURE LIMITS	REF	
	SEE FIG 109		. PLACARD-PROPELLER	REF	
-1	5300315-3		. PLACARD-LH MODEL NUMBER 340	1	A
	5300315-4		. PLACARD-RH MODEL NUMBER 340	1	A
-1A	5200044-1		. PLACARD-LH & RH MODEL NUMBER 340	1	H
-2	5300315-5		. PLACARD-LH NACELLE BIRD INSIGNIA	1	D
	5300315-6		. PLACARD-RH NACELLE BIRD INSIGNIA	1	D
-3	5300315-7		. PLACARD-NAMEPLATE CESSNA	2	A
-3A	5200044-3		. PLACARD-NAMPLATE CESSNA	2	H
-4	5300315-1		. PLACARD-LH NACELLE TURBO SYSTEM	1	A
	5300315-2		. PLACARD-RH NACELLE TURBO SYSTEM	1	A
-4A	5200044-5		. PLACARD-LH & RH NACELLE TURBO SYSTEM	2	H
-4B	5200046-7		. PLACARD-LH & RH NACELLE TURBO SYSTEM	2	P
-5	5100313-9	*	. PLACARD-COMFORT CAPSULE LH SIDE ONLY	1	
-6	5100313-11	*	. PLACARD-RADAR EQUIPPED LH SIDE ONLY	1	
-7	5100313-13	*	. PLACARD-AIR CONDITIONED LH SIDE ONLY	1	
-8	5300310-1		. INSIGNIA-CONTROL WHEEL FACE	1	D
-8A	9910169-1		. INSIGNIA-CONTROL WHEEL 340	1	Q
	9910192-1		. INSIGNIA-CONTROL WHEEL 340II	1	Q
-9	0800165-1		. PLATE-FINISH & TRIM	1	
-10	S1112-3		. PLATE-MAA	1	
			ATTACHING PARTS		
	MS35206-230		. SCREW	2	
	NAS1329A06K		. NUT	2	
			---*---		
-11	5119404-1		. PLACARD-RADIO CALL	1	
-12	5017130-3	*	. PLACARD-LEVELING POINT RH FUSELAGE ONLY BLACK	1	
	5017130-4	*	. PLACARD-LEVELING POINT RH FUSELAGE ONLY WHITE	1	
-13	5111504-34	*	. PLACARD-CABIN DOOR DARK BACK GROUND	1	
	5111504-35	*	. PLACARD-CABIN DOOR LIGHT BACK GROUND	1	
-14	5300181-14		. PLACARD-ARMREST REMOVE & STOW	1	J
			ATTACHING PARTS		
	S1021A4-4		. SCREW	2	
			---*---		
-15	5026015-7	*	. PLACARD-WING TANK & SUMP DRAIN BLACK	2	
	5026015-8	*	. PLACARD-WING TANK & SUMP DRAIN WHITE	2	
-16	0822510-57	*	. PLACARD-FUEL VALUE DRAIN WHITE	2	
	0822510-58	*	. PLACARD-FUEL VALUE DRAIN BLACK	2	
-17	0800056-33	*	. PLACARD-CROSS FEED LINE DRAIN BLACK	2	
	0800056-34	*	. PLACARD-CROSS FEED LINE DRAIN WHITE	2	
-18	5200022-2	*	. PLACARD-TRANSFER FUEL DRAIN BLACK	2	
	5200022-3	*	. PLACARD-TRANSFER FUEL DRAIN WHITE	2	
-19	5111566-6		. PLACARD ASSY-EMERGENCY EXIT	1	D
	5119564-6		. PLACARD ASSY-EMERGENCY EXIT	1	E
			ATTACHING PARTS		
	S1021A4-8C		. SCREW	2	E
			---*---		
-20	5111566-5		. PLACARD-EMERGENCY EXIT HANDLE	1	
-21	5026015-5	*	. PLACARD-TIP TANK ADAPTER BLACK	2	
	5026015-6	*	. PLACARD-TIP TANK ADAPTER WHITE	2	
-22	0820006-1	*	. PLACARD-AUX FUEL TANK BLACK	2	
	0820006-2	*	. PLACARD-AUX FUEL TANK WHITE	2	
-23	5226001-14	*	. PLACARD-WING LOCKER FUEL BLACK	1	
	5226001-21	*	. PLACARD-WING LOCKER FUEL WHITE	1	
-24	5300181-1		. PLACARD-CAPACITANCE FUEL QUANITY SWITCH WHITE	1	
-25	5300181-8		. PLACARD-OPERATIONAL LIMITATIONS	1	D
	5300181-20		. PLACARD-OPERATIONAL LIMITATIONS	1	Q
	5300181-35		. PLACARD-OPERATIONAL LIMITS	1	R
-26	5300181-9		. PLACARD-OPERATIONAL LIMITATIONS	1	
-27	5026015-11	*	. PLACARD-MOORING & GROUND LEFT WING ONLY BLACK	1	M
	5026015-12		. PLACARD-MOORING & GROUND LEFT WING ONLY WHITE	1	M
	5026015-12	*	. PLACARD-MOORING & GROUND LH & RH WING WHITE	2	N
	5026015-11		. PLACARD-MOORING & GROUND LH & RH WING BLACK	2	N
-28	5300181-34		. PLACARD-TURN LIMITS NOSE GEAR WHITE	1	
	5300181-34	*	. PLACARD-TURN LIMITS NOSE GEAR WHITE	1	
-29	5300181-6	*	. PLACARD-TURN LIMITS NOSE GEAR WHITE	1	
-30	0851795-1		. PLACARD-BAGGAGE LIMITATION NACELLE	1	
-31	5226008-1		. PLACARD-BAGGAGE LIMITATION NACELLE	1	
			USED WITH WING LOCKER FUEL		
-32	0800181-15		. PLACARD-OIL	2	
-33	0800102-2		. PLACARD-OXYGEN PURGING	1	
-34	0812480-97		. PLACARD-OXYGEN BOTTLE REMOVAL	1	
-35	5050200-3		. PLACARD-PROP UNFEATHERING ACCUMULATORS	1	
-36	0861334-1		. PLACARD-TENSION KNOB ENGINE CONTROLS	1	
-37	0861333-1		. PLACARD-ELEVATOR TRIM WHEEL	1	
-38	5217559-6		. PLACARD ASSY-MAIN LANDING GEAR MANUAL EXTEND & FUEL	1	J
	5300181-27		. PLACARD ASSY-MAIN LANDING GEAR MANUAL EXTEND & FUEL	1	K
-39	0812209-4		. PLACARD-FUEL SELECT	1	
-40	5300181-10		. PLACARD-FUEL SELECTOR	1	J
	5300181-28		. PLACARD-FUEL SELECTOR	1	K
	5300181-19		. PLACARD-FUEL SELECTOR 63 GAL OPT	1	L
	5300181-29		. PLACARD-FUEL SELECTOR 63 GAL OPT	1	K
			ATTACHING PARTS		
	S1021A4-4		. SCREW	2	
			---*---		
-41	5200023-17		. PLACARD ASSY-FUEL & GEAR WING LOCKER	1	J
	5300181-26		. PLACARD ASSY-FUEL & GEAR WING LOCKER	1	K
			ATTACHING PARTS		
	S1021A4-4		. SCREW	4	
			---*---		

CONTINUED

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
1 -42	5111566-1		PLACARD-TABLE STOWED FOR TAKEOFF & LANDING	1	
-43	5300181-7		PLACARD-STATIC DRAIN ACCESS & PARKING BRAKE	1	J
			ATTACHING PARTS		
	S1021Z4-8C		SCREW	4	
			---*---		
-43A	5300181-30		PLACARD-PARKING BRAKE & ALTERNATE STATIC	1	K
	0819007-5		FRAME-PARKING BRAKE & ALTERNATE STATIC PLACARD	1	K
-44	5119406-1		PLACARD ASSY-STATIC SOURCE DRAIN RH	1	J
	5300181-22		PLACARD ASSY-STATIC SOURCE DRAIN RH	1	K
			ATTACHING PARTS		
	S1021A4-4C		SCREW	2	J
	0819007-4		FRAME	1	K
			---*---		
-45	5300181-12		PLACARD-BAGGAGE ALLOWANCE AFT CABIN WALL	1	J
	5300181-23		PLACARD-BAGGAGE ALLOWANCE AFT CABIN WALL	1	K
			ATTACHING PARTS		
	S1021A4-4		SCREW	2	
			---*---		
-46	5300181-11		PLACARD-NOSE BAGGAGE FSO 5013118-2	1	A
	5013118-2		PLACARD-BAGGAGE	1	B
			ATTACHING PARTS		
	S1021A4-4		SCREW	2	
			---*---		
-47	5300181-13		PLACARD-STEREO	1	
-48	0800181-23	*	PLACARD-LOCATOR BEACON TEST & EMER WHITE	1	
	0800181-25	*	PLACARD-LOCATOR BEACON TEST & EMER BLACK	1	
-49	0800181-22	*	PLACARD-LOCATOR BEACON DISARM WHITE	1	
	0800181-24	*	PLACARD-LOCATOR BEACON DISARM BLACK	1	
-50	5115227-2		PLACARD-FLAP PRESELECT MPH	1	D
	5115227-5		PLACARD-FLAP PRESELECT KNOTS	1	Q
	5200181-12		PLACARD-FLAP PRESELECT KNOTS	1	R
-51	9754036-1		PLACARD-F.A.A REGULATION	1	
-52	0811133-1		PLACARD-FUEL SELECTOR LH STD	1	
	0811133-2		PLACARD-FUEL SELECTOR RH STD	1	
-53	0811133-4		PLACARD-FUEL SELECTOR RH AUX-20 GAL	1	
	0811133-3		PLACARD-FUEL SELECTOR LH AUX-20 GAL	1	
-54	0811133-10		PLACARD-FUEL SELECTOR RH AUX-31.5 GAL	1	B
	0811133-9		PLACARD-FUEL SELECTOR LH AUX-31.5 GAL	1	B
-55	5300181-15	*	PLACARD-AUX FUEL	2	B
-56	5300181-16		PLACARD-ELEVATOR TAB POSITION MARKER	1	F
	5215090-1		PLACARD-ELEVATOR TAB POSITION MARKER	1	G
-57	0861175-1		MARKER-ELEVATOR TAB POSITION	2	B
-58	5300181-17		PLACARD-OXYGEN	1	B
-59	5300181-18		PLACARD-PROP SYNC	1	T
-60	5114212-6		PLACARD-OXYGEN GAGE 11 CU FT	1	C
	0800181-34		PLACARD-OXYGEN GAGE 48.3 CU. FT	1	
	0800181-35		PLACARD-OXYGEN GAGE 76.6 CU FT	1	
-61	5119291-1		PLACARD-RELIEF TUBE	1	
			ATTACHING PARTS		
	S1021Z4-6		SCREW	2	
			---*---		
-62	5626015-8		PLACARD-WINDSHIELD ANTI-ICE ALCOHOL	1	
-63	5100315-1	*	PLACARD-CESSNA PRESSURIZATION	1	
-64	5300316-2		PLACARD-CABIN CESSNA 340	1	P
	5300316-4		PLACARD-CABIN CESSNA 340II	1	P
-65	0822012-1		PLACARD-BATTERY BOX	1	J
-66	5300105-1	*	PLACARD-CABIN CESSNA 340 II	AR	S
-67	5300104-5	*	PLACARD-CABIN CESSNA 340	AR	S
-68	5300104-1	*	PLACARD-NAMEPLATE CESSNA	2	S
-69	5300104-3	*	PLACARD-NACELLE TURBO SYSTEM	4	S
-70	0800181-13	*	PLACARD-OXYGEN OVERBOARD VENT	1	
-71	5017130-6	*	PLACARD-EXTERNAL POWER	1	
-72	9754037-11	*	PLACARD-LOCATOR BEACON ON, OFF & ARM	1	
-73	SEE FIG 69	*	PLACARD-MAIN GEAR FILLING	2	
-74	SEE FIG 74	*	PLACARD-NOSE GEAR FILLING	1	
-75	SEE FIG 42	*	PLACARD-RUDDER BALANCE ROTATING BEACON	1	
-76	9910231-9		PLACARD-CONTROL WHEEL	1	R
-77	5300101-1	*	INSIGNIA CESSNA TIP TANK	2	R
-78	5300101-3	*	INSIGNIA 340A FUSELAGE	2	R
-79	5300101-5	*	INSIGNIA 340A II FUSELAGE	1	R
-80	0800351-7	*	INSIGNIA TURBO SYSTEM NACELLE	4	R
-81	5314116-7		PLACARD-PHASE PROP SYNC OFF	1	R
-82	5114146-4		PLACARD-PHASE PROP SYNC OFF TAKE-OFF, LDG AND ONE ENG OPER.	1	R
	5390350-1		KIT-EXTERNAL PLACARDS	1	

*---DENOTES PLACARDS FURNISHED IN 5390350-1 EXTERNAL PLACARD KIT

A---340-0001 THRU 340-0150
B---340-0151 & ON
C---340-0018 & ON
D---340-0001 THRU 340-0300
E---340-0301 & ON
F--340-0151 THRU 340-0202
G---340-0203 & ON
H---340-0151 THRU 340-0300
J---340-0001 THRU 340-0500
K---340-0501 & ON
L---340-0151 THRU 340-0500
M---340-0001 THRU 340-0234
N---340-0235 & ON
P---340-0301 THRU 340-0500
Q---340-0301 TO 340A0001
R---340A0001 & ON
S---340-0501 TO 340A0001
T---340-0151 TO 340A0001

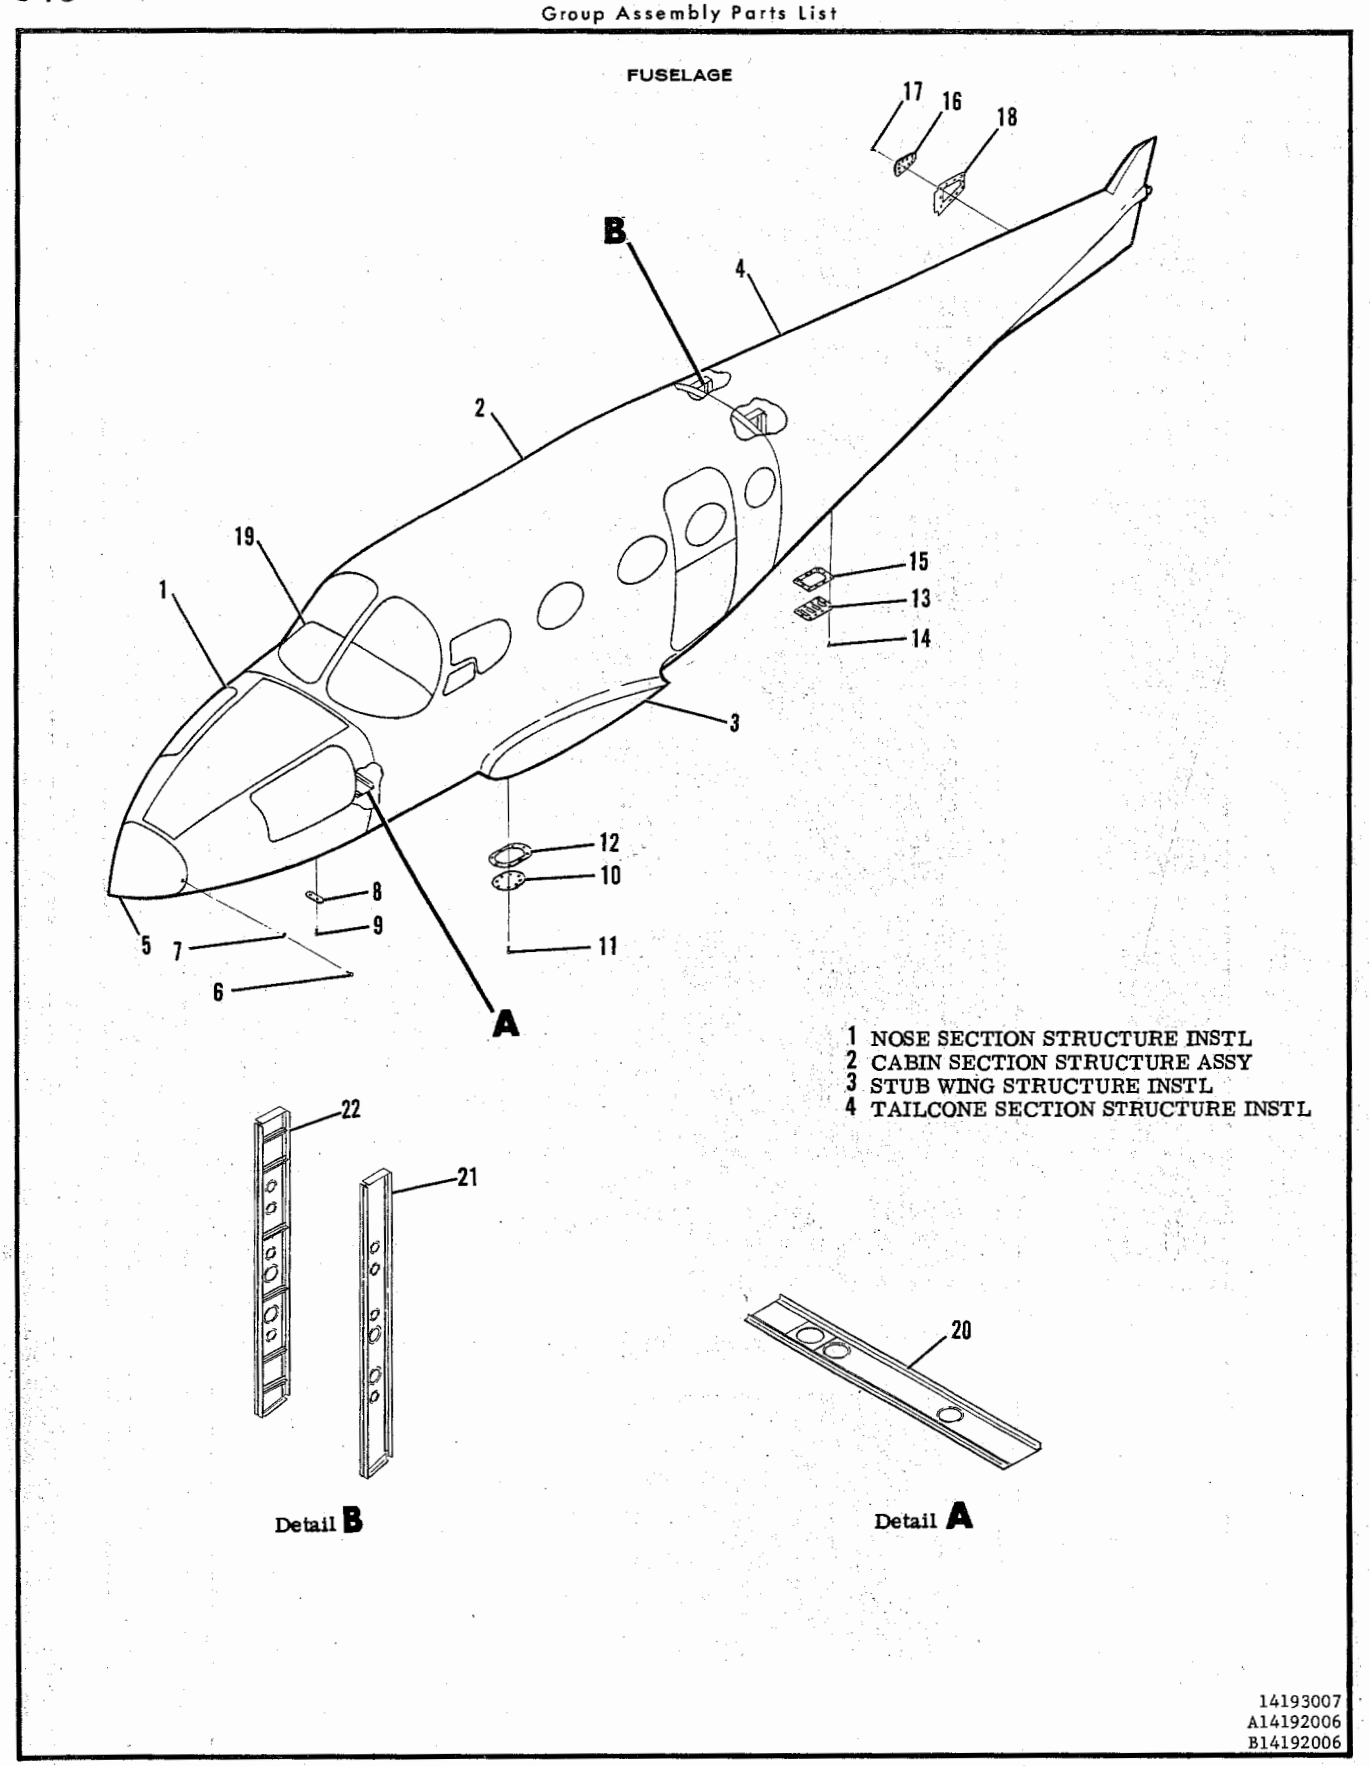

Figure 2. Fuselage Structure Assembly

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
2 -		FUSELAGE STRUCTURE ASSEMBLY	NP	
-1	SEE FIG 3	. NOSE SECTION STRUCTURE INSTL	1	
-2	SEE FIG 7	. CABIN SECTION STRUCTURE ASSY	1	
-3	SEE FIG 26	. STUB WING STRUCTURE INSTL	1	
-4	SEE FIG 27	. TAILCONE SECTION STRUCTURE INSTL	1	
-5	5313080-2	. CAP ASSY-NOSE	1	
	SEE FIG 153	. RADOME-AVQ 47 RADAR	REF	
		ATTACHING PARTS		
-6	MS24694S48	. SCREW	11	
-7	S2900I032	. WASHER	11	
		---*---		
-8	0811500-1	. PAD-JACK	1	
		ATTACHING PARTS		
-9	MS24694S52	. SCREW	2	
		---*---		
-10	5311012-2	. PANEL ASSY-ACCESS FWD CONTROLS	1	
		ATTACHING PARTS		
-11	MS24694S49	. SCREW	10	
		---*---		
-12	5311012-5	. DOUBLER ASSY	1	
-13	5312038-2	. PANEL-ACCESS TAILCONE RH FWD	1	
		ATTACHING PARTS		
-14	AN526-832R8	. SCREW	10	
		---*---		
-15	5312038-3	. DOUBLER	1	
-16	5312039-3	. PANEL-ACCESS TAILCONE RH AFT	1	
		ATTACHING PARTS		
-17	MS27039-0806	. SCREW	10	
		---*---		
-18	5312039-2	. DOUBLER	1	
-19	5311285-2	. DECK ASSY	1	
-20	5310010-2	. BEAM ASSY-FWD PRESSURE BULKHEAD	1	
-21	5310015-3	. BEAM ASSY-LH AFT PRESSURE BULKHEAD	1	
-22	5310015-2	. BEAM ASSY-RH AFT PRESSURE BULKHEAD	1	

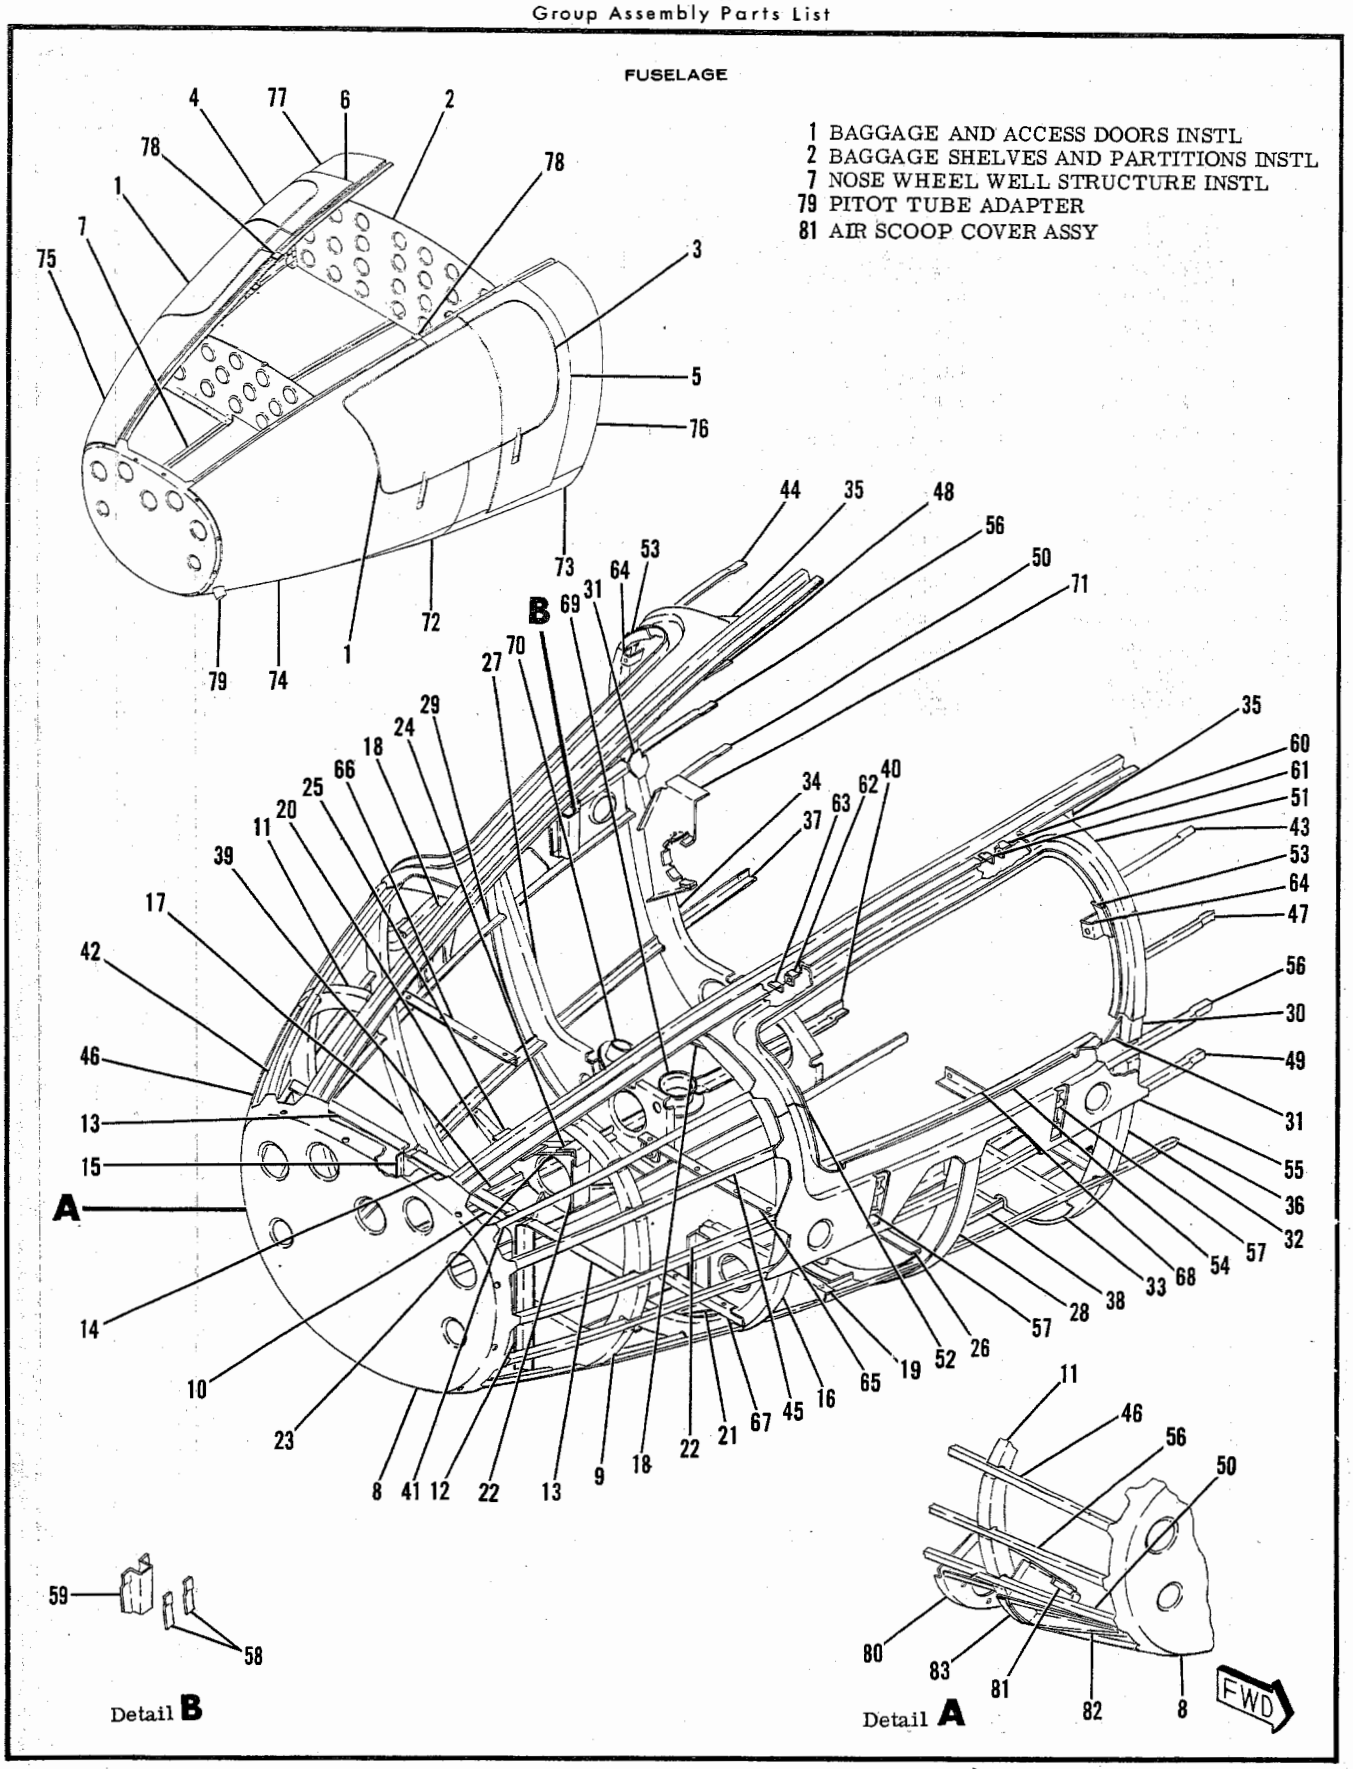

Figure 3. Nose Section Structure Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
3 -		NOSE SECTION STRUCTURE INSTALLATION	NP	
-1	SEE FIG 5	. BAGGAGE & ACCESS DOORS INSTL	1	
-2	SEE FIG 6	. BAGGAGE SHELVES & PARTITIONS INSTL	1	
-3	5313062-9	. PANEL-ICE PROTECTION LH BAGGAGE DOOR	1	
-4	5313062-8	. PANEL-ICE PROTECTION RH BAGGAGE DOOR	1	
-5	5313062-7	. PANEL-ICE PROTECTION LH NOSE	1	
-6	5313062-6	. PANEL-ICE PROTECTION RH NOSE	1	
	5393000-1	. NOSE STRUCTURE ASSY	1	
-7	SEE FIG 4	. . NOSE WHEEL WELL STRUCTURE INSTL		
-8	5313020-2	. . BULKHEAD ASSY STA 41.00	1	
	212-12N	. . . RECEPTACLE	CLC 11	
-9	5313024-3	. . BULKHEAD-LH STA 51.00	1	
-10	5313024-5	. . BULKHEAD-CTR STA 51.00	1	
-11	5313024-4	. . BULKHEAD-RH STA 51.00	1	
-12	5313024-9	. . CHANNEL-LH	1	
	5313024-10	. . CHANNEL-RH	1	
-13	5313024-7	. . ANGLE-LH	1	
	5313024-8	. . ANGLE-RH	1	
-14	5313024-6	. . ANGLE-CTR	1	
-15	5313024-11	. . ANGLE-RH		
-16	5313026-3	. . BULKHEAD-LH STA 62.00	1	
-17	5313026-4	. . BULKHEAD-RH STA 62.00	1	
-18	5313026-2	. . SPLICE	2	
-19	5313033-3	. . BULKHEAD-LH STA 62.80	1	
-20	5313033-4	. . BULKHEAD-RH STA 62.80	1	
-21	5313033-5	. . DOUBLER-LH	1	
	5313033-6	. . DOUBLER-RH	1	
-22	5313033-9	. . SUPPORT-LH	1	
	5313033-12	. . SUPPORT-RH	1	
-23	5313033-11	. . ANGLE-RH	1	
-24	5313033-10	. . CLIP-ANGLE RH	1	
-25	5313033-13	. . SUPPORT-RH HEATER MOUNT	1	
-26	5313031-3	. . BULKHEAD-LH STA 77.00	1	
-27	5313031-2	. . BULKHEAD-RH STA 77.00	1	
-28	5313031-9	. . DOUBLER-LH	1	
-29	5313031-10	. . DOUBLER-RH	1	
-30	5313028-5	. . BULKHEAD-UPR LH STA 91.50	1	
	5313028-4	. . BULKHEAD-UPR RH STA 91.50	1	
-31	5313028-7	. . SPLICE-LH	1	
	5313028-6	. . SPLICE-RH	1	
-32	5313028-3	. . BULKHEAD-LWR LH STA 91.50	1	
-33	5313028-8	. . SUPPORT-LH LWR	1	
-34	5313028-2	. . BULKHEAD-LWR RH STA 91.50	1	
-35	5313026-2	. . SPLICE-UPR LH & RH	2	
-36	5313005-13	. . STRINGER-BOTTOM LH OUTBD	1	
-37	5313005-14	. . STRINGER-BOTTOM RH OUTBD	1	
-38	5313005-15	. . STRINGER-BOTTOM LH INBD	1	
-39	5313005-17	. . STRINGER-BOTTOM RH INBD FWD	1	
-40	5313005-18	. . STRINGER-BOTTOM RH INBD AFT	1	
-41	5313005-7	. . STRINGER-SIDE LH FWD	1	
-42	5313005-8	. . STRINGER-SIDE RH FWD	1	
-43	5313005-3	. . STRINGER-SIDE LH AFT	1	
-44	5313005-4	. . STRINGER-SIDE RH AFT	1	
-45	5313005-9	. . STRINGER-SIDE LH FWD	1	
-46	5313005-10	. . STRINGER-SIDE RH FWD	1	
-47	5313005-5	. . STRINGER-SIDE LH AFT	1	
-48	5313005-6	. . STRINGER-SIDE RH AFT	1	
-49	5313005-11	. . STRINGER-SIDE LH	1	
-50	5313005-12	. . STRINGER-SIDE RH	1	
-51	5313040-5	. . CHANNEL-DRAIN LH UPR	1	
	5313040-6	. . CHANNEL-DRAIN RH UPR	1	
-52	5313040-11	. . SPLICE-LH FWD	1	
	5313040-12	. . SPLICE-RH FWD	1	
-53	5313040-17	. . SPLICE-LH AFT	1	
	5313040-18	. . SPLICE-RH AFT	1	
-54	5313040-9	. . CHANNEL-LH	1	
	5313040-10	. . CHANNEL-RH	1	
-55	5313040-3	. . CHANNEL-DRAIN LH LWR	1	
	5313040-4	. . CHANNEL-DRAIN RH LWR	1	
-56	5313040-7	. . STRINGER-LH	1	
	5313040-8	. . STRINGER-RH	1	
-57	H26-13	. . HOUSING-LATCH LH & RH	4	
-58	5313041-3	. . RETAINER-HOUSING LH & RH	4	
-59	5313041-2	. . CUP-SEAL LH & RH	8	

CONTINUED

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
3 -60	5313065-15	. . BRACKET-LH BAGGAGE DOOR FWD	1	
	5313065-16	. . BRACKET-RH BAGGAGE DOOR FWD	1	
-61	5313065-17	. . BRACKET-LH BAGGAGE DOOR FWD	1	
	5313065-18	. . BRACKET-RH BAGGAGE DOOR FWD	1	
-62	5313065-11	. . BRACKET-LH BAGGAGE DOOR AFT	1	
	5313065-12	. . BRACKET-RH BAGGAGE DOOR AFT	1	
-63	5313065-13	. . BRACKET-LH BAGGAGE DOOR AFT	1	
	5313065-14	. . BRACKET-RH BAGGAGE DOOR AFT	1	
-64	5313065-30	. . SUPPORT-LH & RH BAGGAGE DOOR LATCH	2	
-65	5313085-7	. . ANGLE-LH UPR BAGGAGE SHELF SUPPORT	1	
-66	5313085-6	. . ANGLE-RH UPR BAGGAGE SHELF SUPPORT	1	
-67	5313085-16	. . SUPPORT-FWD LWR BAGGAGE SHELF FSO 5313085-32	1	A
	5313085-32	. . SUPPORT-FWD LWR BAGGAGE SHELF	1	B
-68	5313085-17	. . SUPPORT-AFT LWR BAGGAGE SHELF	1	
-69	5316502-5	. . GUIDE ASSY-SHROUD HEATER	1	
-70	5316502-6	. . INTAKE ASSY-HEATER	1	
-71	5316509-2	. . BRACKET-BLOWER SUPPORT HEATER	1	
-72	5313000-3	. . SKIN-LH LWR FWD	1	
	5313000-4	. . SKIN-RH LWR FWD	1	
-73	5313000-5	. . SKIN-LH LWR AFT	1	
	5313000-6	. . SKIN-LH LWR AFT	1	
-74	5313000-7	. . SKIN-LH FWD	1	
-75	5313000-8	. . SKIN-RH FWD	1	
-76	5313000-9	. . SKIN-LH AFT	1	
-77	5313000-10	. . SKIN-RH AFT	1	
-78	5313000-11	. . DOUBLER-SPLICE	2	
-79	SEE FIG 129	. . ADAPTER-PITOT TUBE	1	
-80	5313035-2	. . BULKHEAD ASSY-AIR SCOOP	1	
-81	SEE FIG 124	. . COVERASSY-AIR SCOOP	1	
-82	5313035-5	. . SCOOP-AIR	1	
-83	5313035-6	. . DOUBLER-AIR SCOOP	1	

A---340-0001 THRU 340-0240
B---340-0241 & ON

FUSELAGE

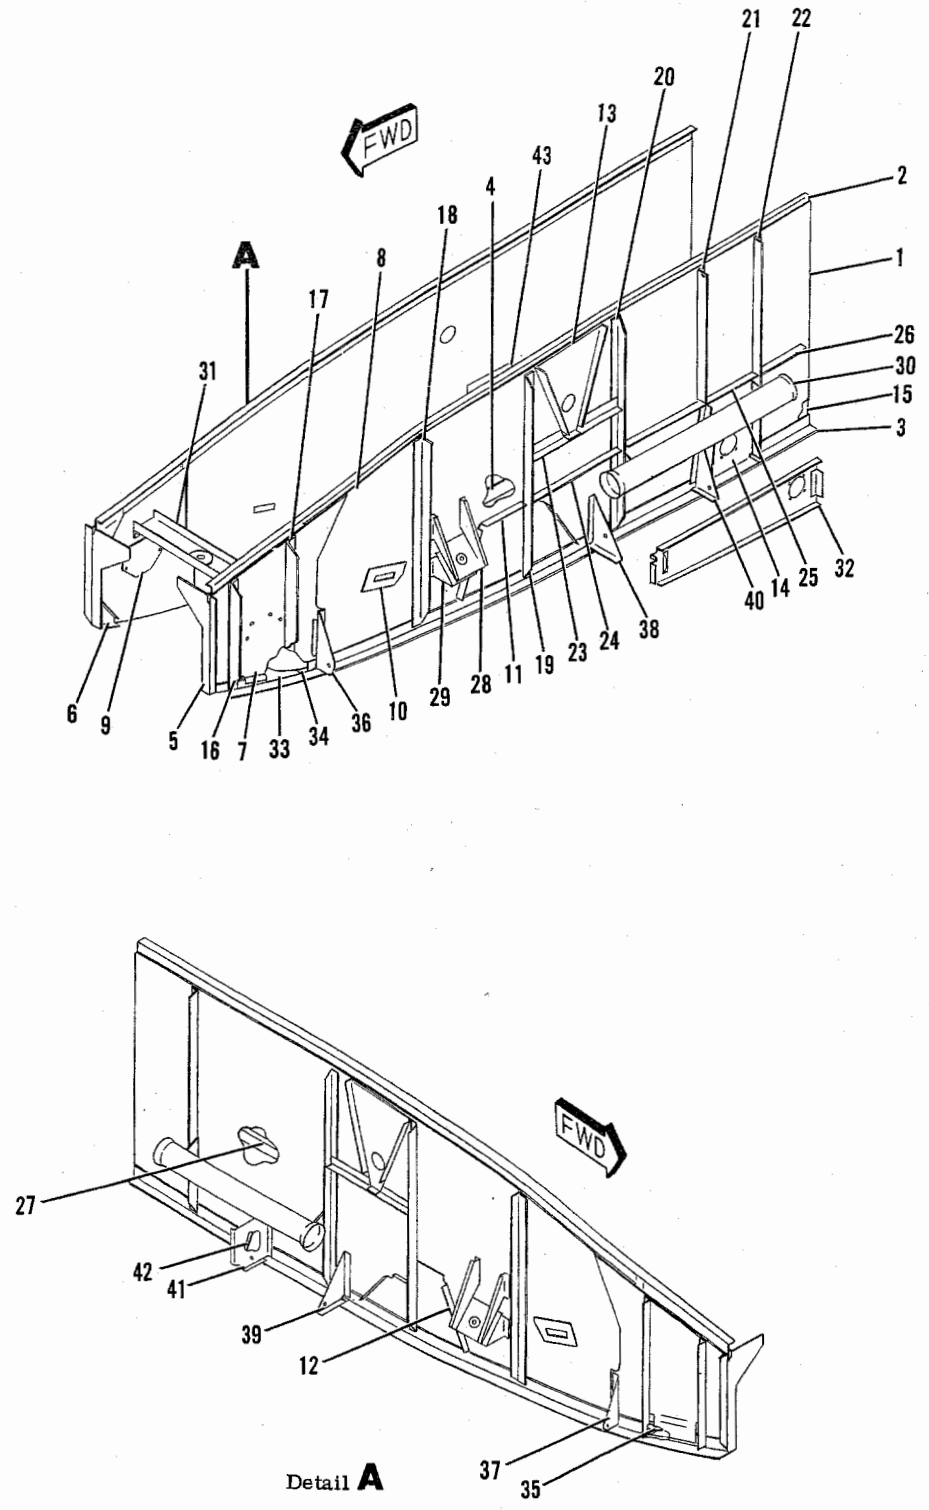

43 FINISH & TRIM PLATE ASSY

Figure 4. Nose Wheel Well Structure Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
4 -		NOSE WHEEL WELL STRUCTURE INSTALLATION	NP	
-1	5313010-5	WEB-LH	1	
	5313010-6	WEB-RH	1	
-2	5313010-7	ANGLE-LH UPR	1	
	5313010-8	ANGLE-RH UPR	1	
-3	5313010-9	ANGLE-LH LWR	1	
	5313010-10	ANGLE-RH LWR	1	
-4	5313010-11	DOUBLER-LH UPR	1	
-5	5313011-7	STIFFENER-LH UPR FWD	1	
	5313011-8	STIFFENER-RH UPR FWD	1	
-6	5313011-33	GUSSET-LH LWR FWD	1	
	5313011-34	GUSSET-RH LWR FWD	1	
-7	5313011-29	DOUBLER-LH LWR FWD	1	
	5313011-30	DOUBLER-RH LWR FWD	1	
-8	5313011-9	WEB-LH FWD	1	
	5313011-10	WEB-RH FWD	1	
-9	5013049-1	SHIM-STEERING BRACKET ASSY LH & RH	2	
-10	5013501-1	RUB BLOCK LH & RH	2	
-11	5313011-1	DOUBLER-LH	1	
-12	5313011-28	DOUBLER-RH	1	
-13	5313011-3	DOUBLER-LH	1	
	5313011-4	DOUBLER-RH	1	
-14	5313011-22	DOUBLER-LH	1	
-15	5313011-5	GUSSET-LH LWR AFT	1	
	5313011-6	GUSSET-RH LWR AFT	1	
-16	5313011-32	STIFFENER-LH & RH FWD	2	
-17	5313011-31	STIFFENER-LH & RH FWD	1	
-18	5313011-13	STIFFENER-LH STA 62.00	1	
	5313011-14	STIFFENER-RH STA 62.00	1	
-19	5313011-15	STIFFENER-LH STA 70.00	1	
	5313011-16	STIFFENER-RH STA 70.00	1	
-20	5313011-17	STIFFENER-LH STA 79.00	1	
	5313011-18	STIFFENER-RH STA 79.00	1	
-21	5313011-27	STIFFENER-LH STA 86.50	1	
-22	5313011-19	STIFFENER-LH STA 92.19	1	
	5313011-20	STIFFENER-RH STA 92.19	1	
-23	5313011-21	ANGLE-LH & RH	2	
-24	5313011-24	ANGLE-LH CTR	1	
-25	5313011-25	ANGLE-LH CTR	1	
-26	5313011-23	ANGLE-LH CTR	1	
-27	5313011-26	STIFFENER-RH CTR AFT	1	
-28	5013500-7	BRACKET-LH & RH STEERING CONTROL	2	
-29	5013500-8	BRACKET-LH & RH STEERING CONTROL	2	
-30	5013502-16	COVER ASSY-LH & RH STEERING SPRING	2	
		ATTACHING PARTS		
	MS35206-229	SCREW	4	
	MS21046C06	NUT	4	
-31	5013040-41	BRACKET ASSY-NOSE GEAR STEERING	1	
	5013027-1	SPACER-NOSE GEAR STEERING BRACKET LH & RH	2	
-32	5313055-2	BRACKET ASSY-NOSE GEAR	1	
-33	5313050-10	STOP-FWD NOSE GEAR DOOR HINGE BRACKET	1	
-34	5313050-11	STOP-LH NOSE GEAR DOOR HINGE BRACKET	1	
-35	5313050-12	STOP-RH NOSE GEAR DOOR HINGE BRACKET	1	
-36	5313050-9	BRACKET-HINGE LH STA 51.25	1	
-37	5313050-8	BRACKET-HINGE RH STA 51.25	1	
-38	5313050-7	BRACKET-HINGE LH STA. 76.50	1	
-39	5313050-6	BRACKET-HINGE RH STA 76.50	1	
-40	5313050-3	BRACKET-HINGE LH STA 86.75	1	
-41	5313050-2	BRACKET-HINGE RH FWD STA 86.75	1	
-42	5313050-4	BRACKET-HINGE RH AFT STA. 86.7	1	
-43	SEE FIG 1	PLATE ASSY-FINISH & TRIM	1	

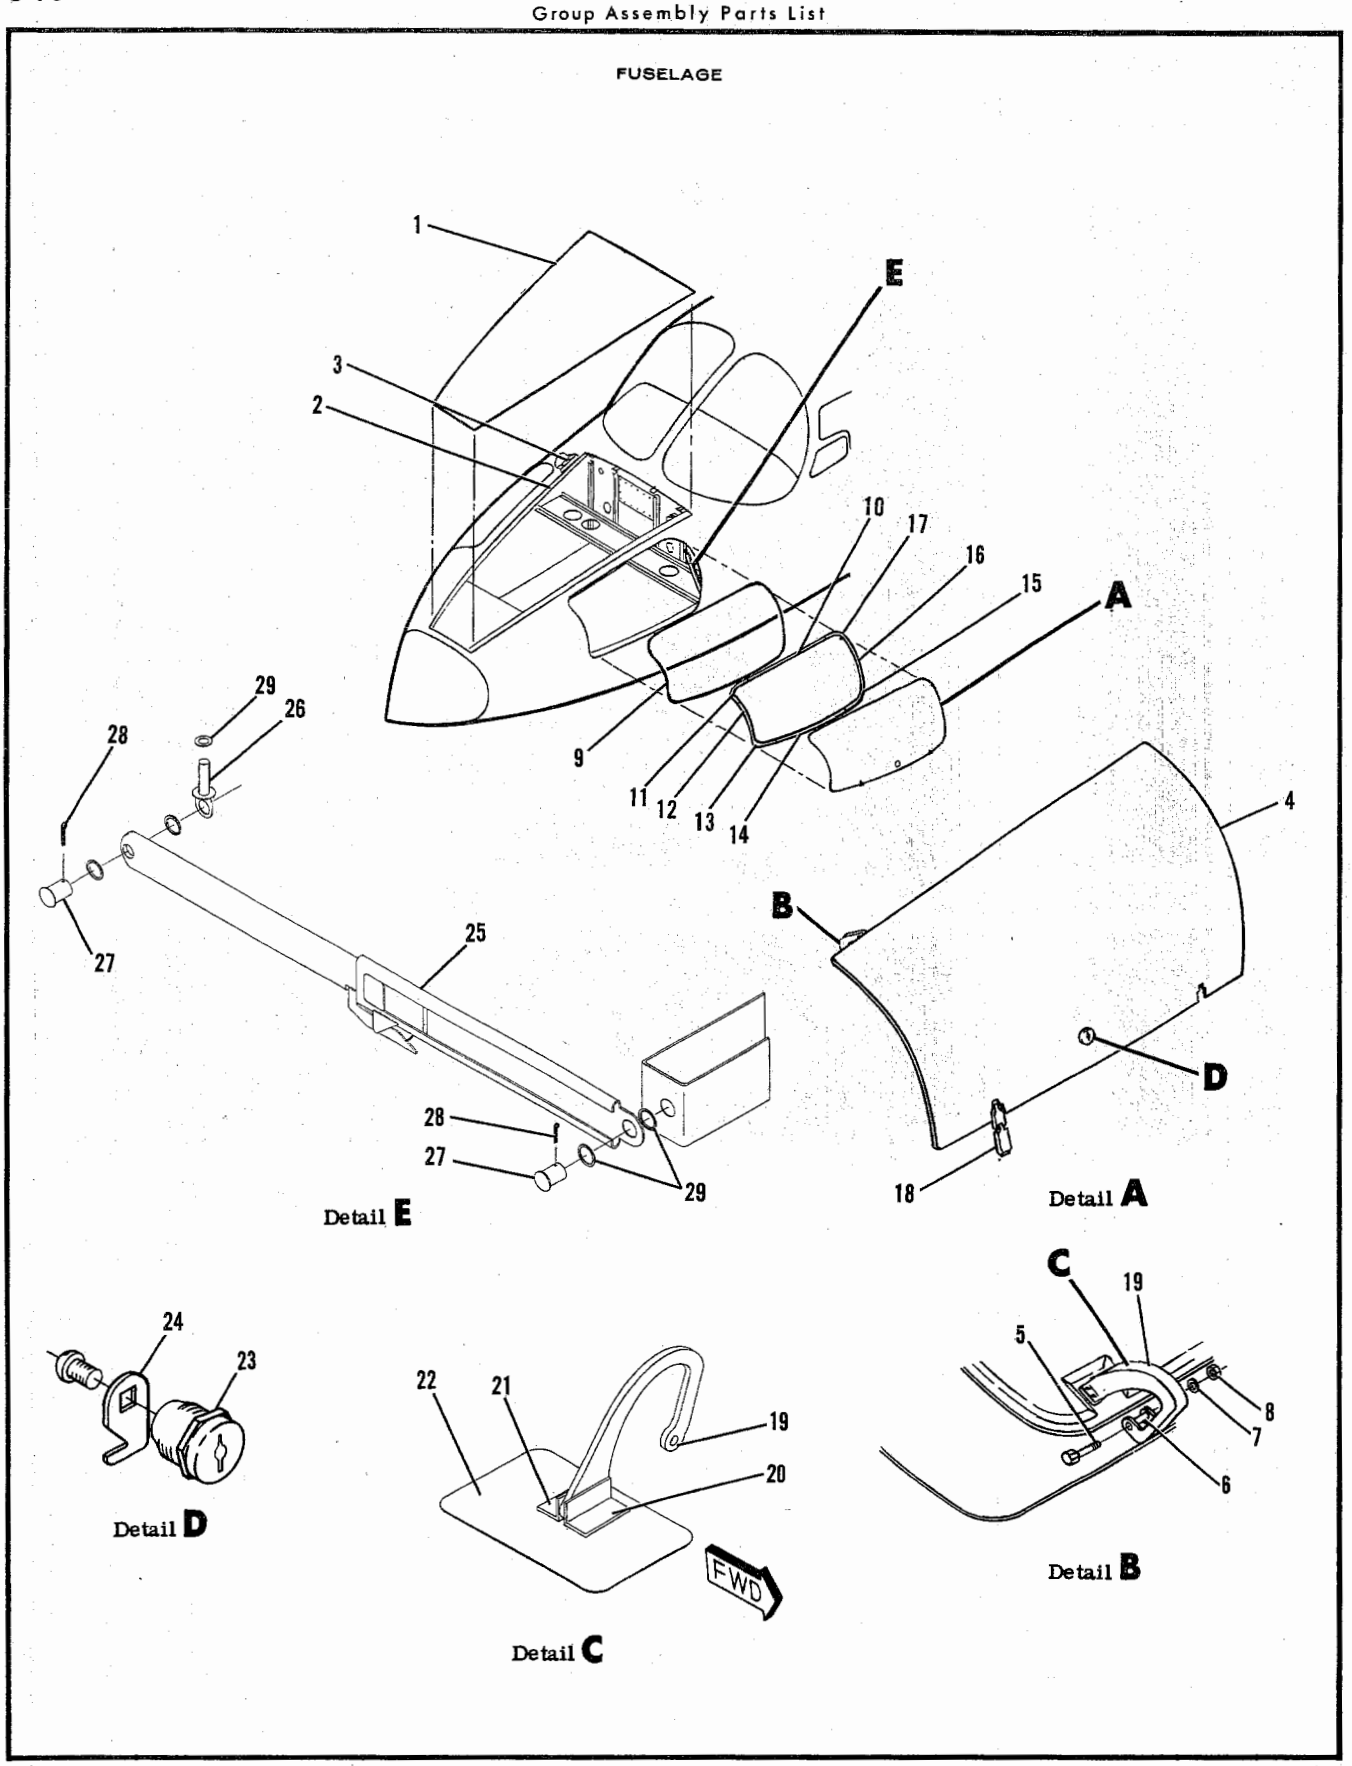

Figure 5. Baggage and Access Doors Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
5 -		BAGGAGE AND ACCESS DOORS INSTALLATION	NP	
-1	5313060-3	. PANEL ASSY-ACCESS	1	
-2	5313060-5	. STRINGER-LH FSO 5313060-13	1	A
	5313060-13	. STRINGER ASSY-LH	1	B
	5313060-12	. STRINGER ASSY-RH	1	
-3	5313060-7	. DOUBLER-LH	1	
	5313060-8	. DOUBLER-RH	1	
-4	5313065-3	. DOOR ASSY-LH BAGGAGE	1	
	5313065-4	. DOOR ASSY-RH BAGGAGE	1	
		ATTACHING PARTS		
-5	AN3-10A	. BOLT	1	
-6	NAS75-3-014	. SPACER	1	
-7	AN960PD10	. WASHER	2	
-8	MS21042-3	. NUT	1	
		---*---		
-9	5313065-35	. . SEAL-LH & RH	2	
-10	5313065-29	. . RETAINER-SEAL UPR LH & RH	2	
-11	5313065-36	. . RETAINER-SEAL UPR FWD CORNER LH & RH	2	
-12	5313065-37	. . RETAINER-SEAL CTR FWD LH	1	
	5313065-28	. . RETAINER-SEAL CTR FWD RH	1	
-13	5313065-44	. . RETAINER-SEAL LWR CTR CORNER LH & RH	2	
-14	5313065-41	. . RETAINER-SEAL LWR CTR LH	1	
	5313065-42	. . RETAINER-SEAL LWR CTR RH	1	
-15	5313065-43	. . RETAINER-SEAL LWR AFT CORNER LH & RH	2	
-16	5313065-39	. . RETAINER-SEAL CTR AFT LH	1	
	5313065-40	. . RETAINER-SEAL CTR AFT RH	1	
-17	5313065-38	. . RETAINER-SEAL UPR AFT CORNER LH & RH	2	
-18	H2163-3	. . HANDLE ASSY	HWL	
-19	5313045-1	. . HINGE	2	
-20	5313065-23	. . SUPPORT-HINGE FWD LH	1	
	5313065-24	. . SUPPORT-HINGE FWD RH	1	
-21	5313065-25	. . SUPPORT-HINGE FWD LH	1	
	5313065-26	. . SUPPORT-HINGE FWD RH	1	
	5313065-19	. . SUPPORT-HINGE AFT LH	1	
	5313065-20	. . SUPPORT-HINGE AFT RH	1	
	5313065-21	. . SUPPORT-HINGE AFT LH	1	
	5313065-22	. . SUPPORT-HINGE AFT RH	1	
-22	5313065-27	. . DOUBLER-HINGE SUPPORT	2	
-23	F6500M	. . LOCK-DOOR	YMT	
-24	5213085-1	. . CAM-DOOR LOCK	1	
-25	5211183-1	. LATCH ASSY-LH FSO 5211185-1	1	C
	5211185-1	. LATCH ASSY-LH	1	D
	5211183-2	. LATCH ASSY-RH FSO 5211185-2	1	C
	5211185-2	. LATCH ASSY-RH	1	D
		ATTACHING PARTS		
-26	AN428-3A	. EYE BOLT-UPR	1	
-27	MS20392-2C7	. PIN	2	
-28	MS24665-130	. PIN-COTTER	2	
-29	AN960PD10L	. WASHER	AR	
		---*---		

A---340-0001 THRU 340-0046
B---340-0047 & ON
C---340-0001 THRU 340-0304
D---340-0305 & ON

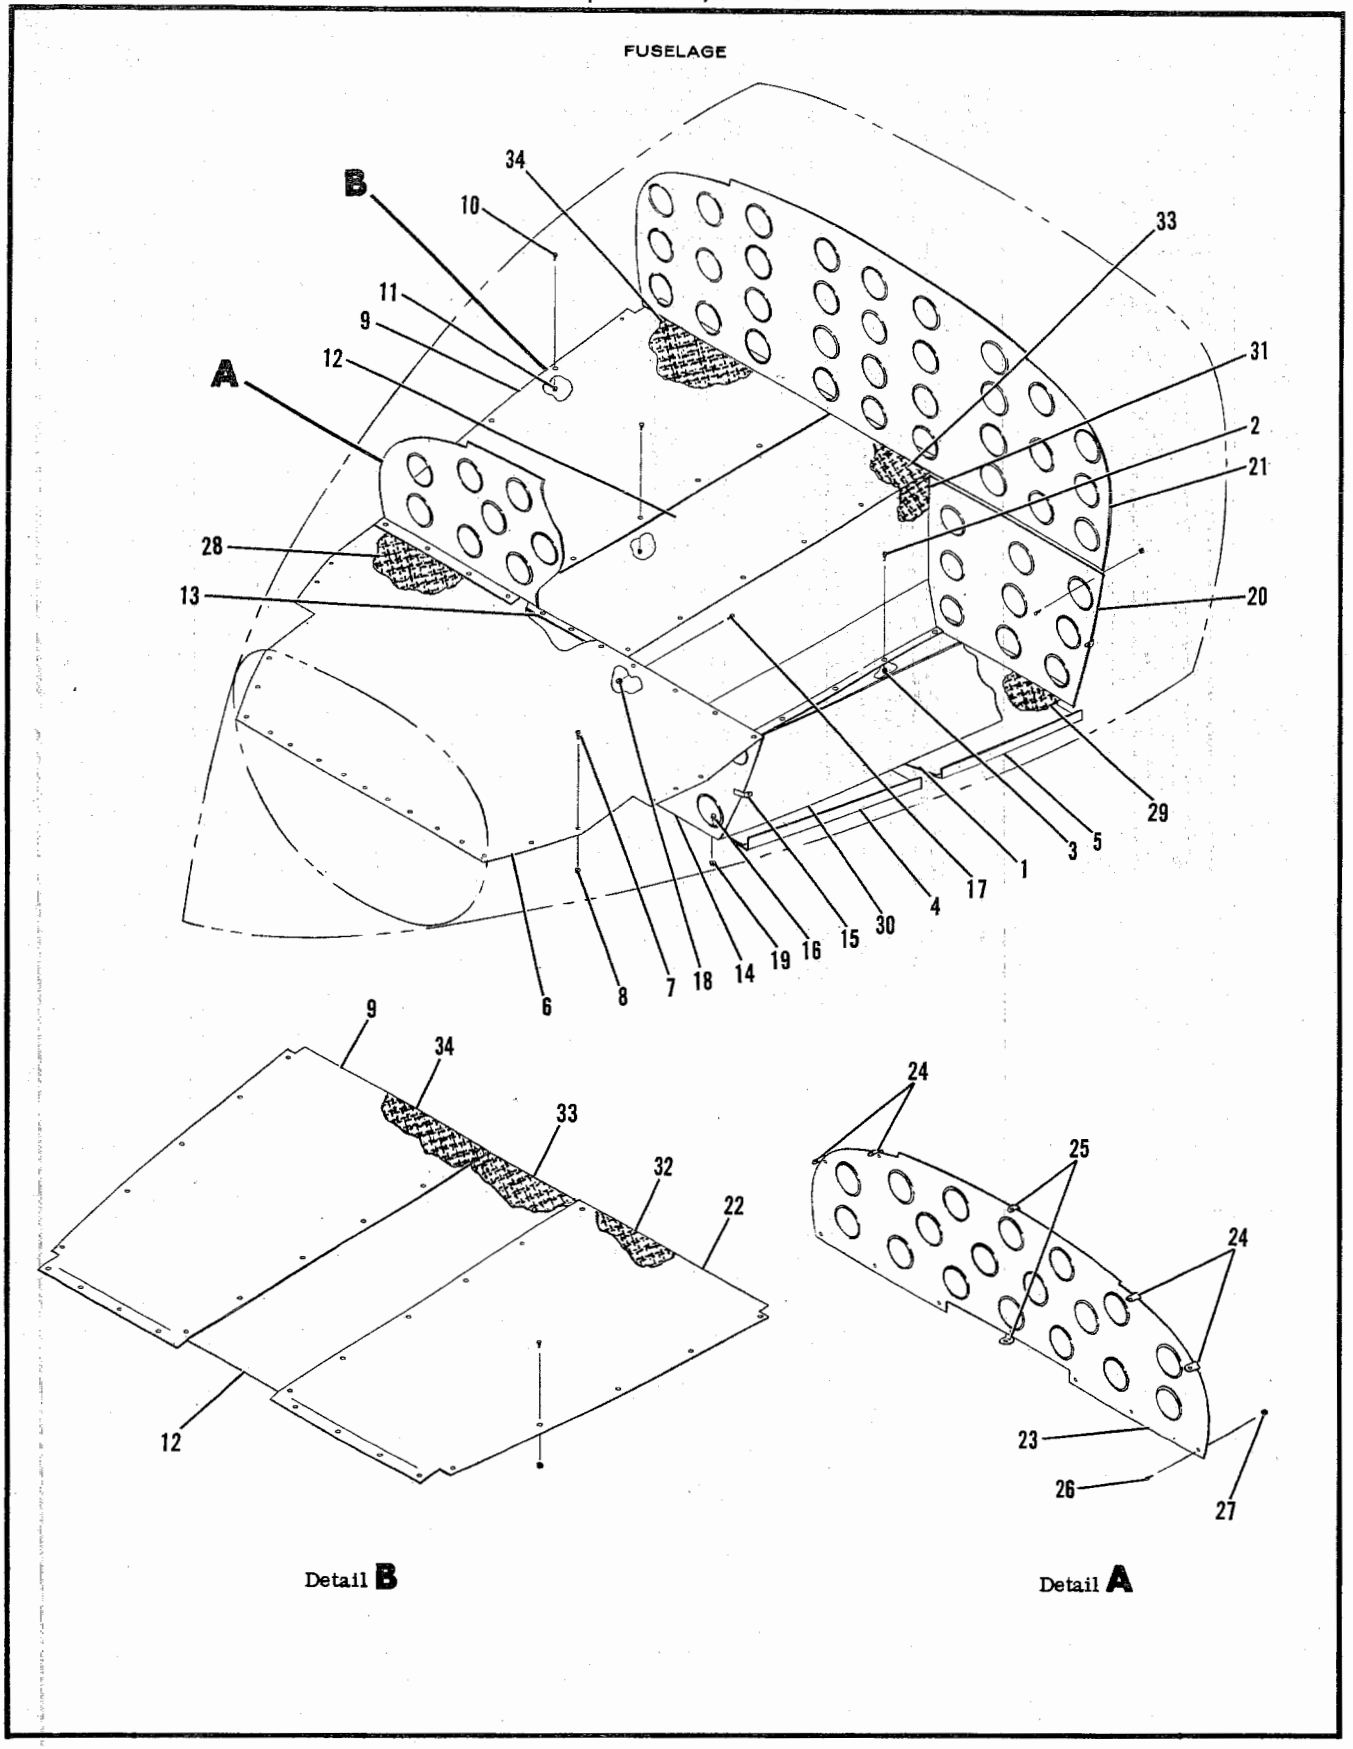

Figure 6. Baggage Shelves and Partitions Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
6 -		BAGGAGE SHELVES AND PARTITIONS INSTALLATION	NP	
-1	5313085-15	. SHELF-LH LWR	1	
		ATTACHING PARTS		
-2	MS27039-0807	. SCREW	17	
-3	S1477-08	. NUT	MKL 17	
		---*---		
-4	5313085-20	. SUPPORT-LWR SHELF FWD LH	1	
-5	5313085-19	. SUPPORT-LWR SHELF AFT LH	1	
-6	5313085-12	. SHELF-UPR FWD	1	
		ATTACHING PARTS		
-7	MS27039-0807	. SCREW	AR	
-8	S1477-08	. NUT	MKL AR	
		---*---		
-9	5313085-4	. SHELF-RH UPR	1	
		ATTACHING PARTS		
-10	MS27039-0807	. SCREW	AR	
-11	130007	. NUT	MKL 4	
		---*---		
-12	5313085-13	. PANEL-UPR CTR FSO 5313085-30	1	A
	5313085-30	. PANEL-UPR CTR	1	B
		ATTACHING PARTS		
	MS27039-0807	. SCREW	AR	
	S1477-08	. NUT	MKL AR	
		---*---		
-13	5313085-14	. ANGLE-CTR FSO 5313085-31	1	A
	5313085-31	. ANGLE-CTR	1	B
-14	5313085-22	. DIVIDER ASSY-BAGGAGE LH LWR FWD		
		ATTACHING PARTS		
-15	AN743-13	. BRACKET	1	
-16	MS27039-0807	. SCREW	AR	
-17	MS27039-0806	. SCREW	3	
-18	130007	. NUT	MKL 1	
-19	S1477-08	. NUT	MKL AR	
		---*---		
-20	5313085-23	. DIVIDER ASSY-BAGGAGE LWR LH AFT	1	
		ATTACHING PARTS		
	AN743-13	. BRACKET	1	
	MS27039-0807	. SCREW	AR	
	S1477-08	. NUT	MKL AR	
		---*---		
-21	5313085-24	. DIVIDER ASSY-BAGGAGE UPR AFT	1	
		ATTACHING PARTS		
	AN743-13	. BRACKET	4	
	AN743-12	. BRACKET	3	
	MS27039-0807	. SCREW	AR	
	S1477-08	. NUT	MKL AR	
		---*---		
-22	5313085-5	. SHELF-BAGGAGE LH UPR	1	
		ATTACHING PARTS		
	MS27039-0807	. SCREW	18	
	130007	. NUT	MKL 8	
		---*---		
-23	5313068-3	. DIVIDER-BAGGAGE UPR FWD	1	
		ATTACHING PARTS		
-24	AN743-13	. BRACKET	4	
-25	AN743-12	. BRACKET	2	
-26	MS27039-0807	. SCREW	8	
-27	130007	. NUT	MKL 6	
		---*---		
-28	5313090-10	. CARPET-FWD BAGGAGE SHELF WEU 5313090-25	1	C
	5313090-25	. CARPET-FWD BAGGAGE SHELF	1	D
		ATTACHING PARTS		
	MS51959-45	. SCREW	AR	
	S1067C1	. WASHER	AR	
		---*---		
-29	5313090-14	. CARPET-LH LWR BAGGAGE SHELF WEU 5313090-29	1	C
	5313090-29	. CARPET-LH LWR BAGGAGE SHELF	1	D
		ATTACHING PARTS		
	S1023Z6-6C	. SCREW	AR	
	MS51959-45	. SCREW	AR	
	S1067C1	. WASHER	AR	
		---*---		
-30	5313090-5	. PANEL ASSY-LWR OUTBD CARPETED	1	
	5313090-9	. . CARPET WEU 5313090-24	1	C
	5313090-24	. . CARPET	1	D
-31	5313090-4	. PANEL ASSY-LWR INBD CARPETED	1	
	5313090-8	. . CARPET WEU 5313090-23	1	C
	5313090-23	. . CARPET	1	D
-32	5313090-13	. CARPET-LH UPR BAGGAGE SHELF WEU 5313090-28	1	C
	5313090-28	. CARPET-LH UPR BAGGAGE SHELF	1	D
		ATTACHING PARTS		
	MS51959-45	. SCREW	AR	
	S1067C1	. WASHER	AR	
		---*---		

CONTINUED

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
6 -33	5313090-11	. CARPET-CTR UPR BAGGAGE SHELF WEU 5313090-26	1	C
	5313090-26	. CARPET-CTR UPR BAGGAGE SHELF	1	D
		ATTACHING PARTS		
	MS51959-45	. SCREW	AR	
	S1067C1	. WASHER	AR	
		---*---		
-34	5313090-12	. CARPET-RH UPR BAGGAGE SHELF WEU 5313090-27	1	C
	5313090-27	. CARPET-RH UPR BAGGAGE SHELF	1	D
		ATTACHING PARTS		
	MS51959-45	. SCREW	AR	
	S1067C1	. WASHER	AR	
		---*---		
		A---340-0001 THRU 340-0199		
		B---340-0200 & ON		
		C---340-0001 TO 340A0001		
		D---340A0001 & ON		

FUSELAGE

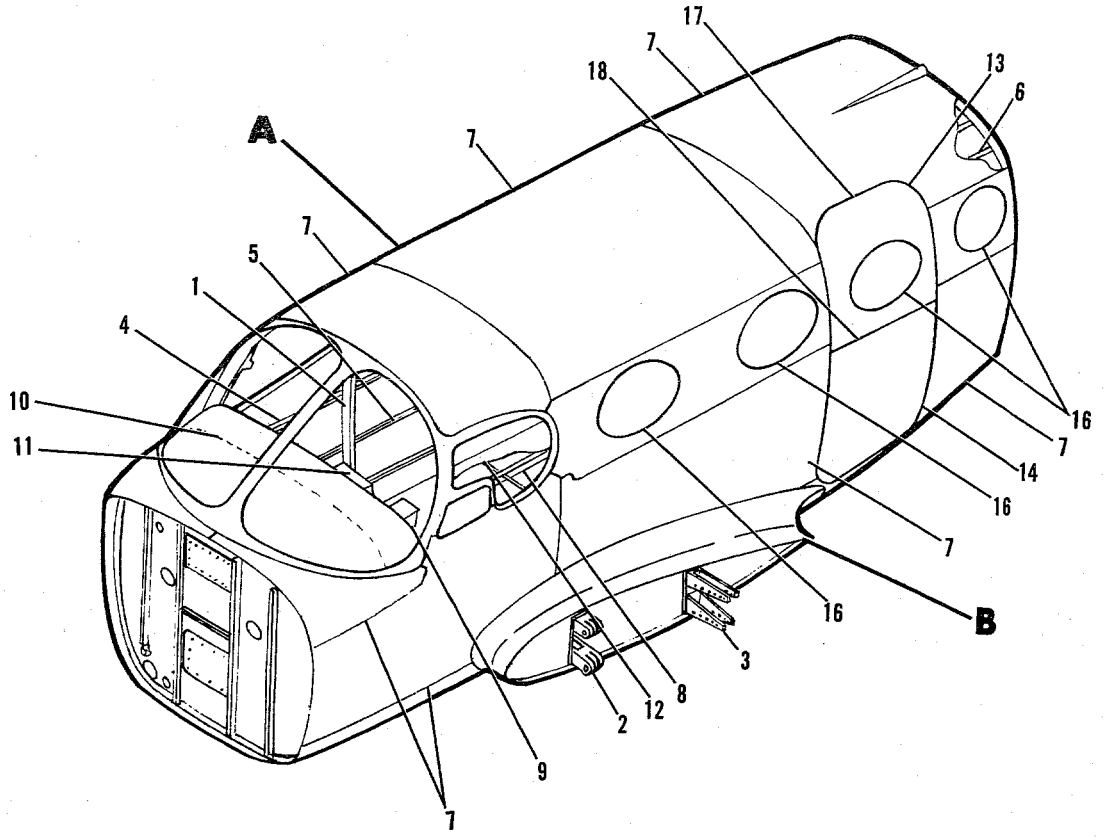

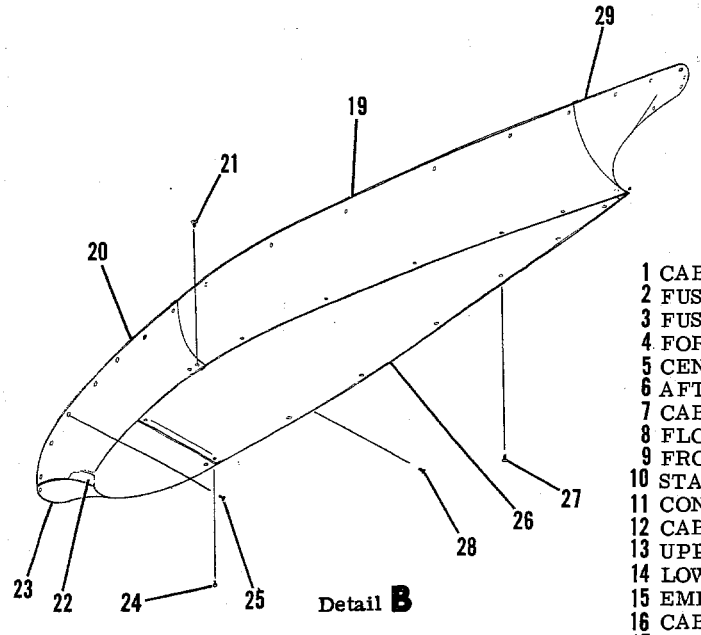

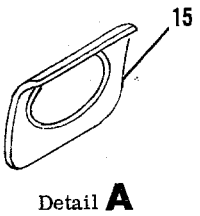

1 CABIN SECTION BULKHEADS INSTL
2 FUSELAGE FRONT SPAR INSTL
3 FUSELAGE REAR SPAR INSTL
4 FORWARD CABIN SECTION STRINGERS INSTL
5 CENTER CABIN SECTION STRINGERS INSTL
6 AFT CABIN SECTION STRINGERS INSTL
7 CABIN SKINS INSTL
8 FLOORBOARD SUPPORTS INSTL
9 FRONT SEAT SUPPORTS INSTL
10 STATIONARY INSTRUMENT PANEL STRUCTURE INSTL
11 CONTROL PEDESTAL STRUCTURE INSTL
12 CABIN FLOORBOARDS INSTL
13 UPPER CABIN DOOR INSTL
14 LOWER CABIN DOOR INSTL
15 EMERGENCY EXIT INSTL
16 CABIN WINDOWS INSTL
17 CABIN DOOR SEAL
18 CABIN DOOR SEAL

Figure 7. Cabin Section Structure Assembly

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
7 -		CABIN SECTION STRUCTURE ASSEMBLY	NP	
-1	SEE FIG 8	. CABIN SECTION BULKHEADS INSTL	1	
-2	SEE FIG 11	. FUSELAGE FRONT SPAR INSTL	1	
-3	SEE FIG 12	. FUSELAGE REAR SPAR INSTL	1	
-4	SEE FIG 13	. FORWARD CABIN SECTION STRINGERS INSTL	1	
-5	SEE FIG 14	. CENTER CABIN SECTION STRINGERS INSTL	1	
-6	SEE FIG 15	. AFT CABIN SECTION STRINGERS INSTL	1	
-7	SEE FIG 16	. CABIN SKINS INSTL	1	
-8	SEE FIG 17	. FLOORBOARD SUPPORTS INSTL	1	
-9	SEE FIG 18	. FRONT SEAT SUPPORTS INSTL	1	
-10	SEE FIG 19	. STATIONARY INSTRUMENT PANEL STRUCTURE INSTL	1	
-11	SEE FIG 20	. CONTROL PEDESTAL STRUCTURE INSTL	1	
-12	SEE FIG 21	. CABIN FLOORBOARDS INSTL	1	
-13	SEE FIG 22	. UPPER CABIN DOOR INSTL	1	
-14	SEE FIG 23	. LOWER CABIN DOOR INSTL	1	
-15	SEE FIG 24	. EMERGENCY EXIT INSTL	1	
-16	SEE FIG 25	. CABIN WINDOWS INSTL	1	
-17	SEE FIG 15	. SEAL-CABIN DOOR	1	
-18	SEE FIG 23	. SEAL-CABIN DOOR	1	
-19	5311035-7	. FAIRING ASSY-LH STUB WING UPR	1	A
	5311035-17	. FAIRING ASSY-LH STUB WING UPR	1	B
	5311035-8	. FAIRING ASSY-RH STUB WING UPR	1	A
	5311035-18	. FAIRING ASSY-RH STUB WING UPR	1	B
-20	5311037-7	. FAIRING-LH STUB WING FWD UPR	1	A
	5311037-15	. FAIRING-LH STUB WING FWD UPR WEU 5311037-19	1	C
	5311037-19	. FAIRING-LH STUB WING FWD UPR	1	D
	5311037-8	. FAIRING-RH STUB WING FWD UPR	1	A
	5311037-16	. FAIRING-RH STUB WING FWD UPR WEU 5311037-20	1	C
	5311037-20	. FAIRING-RH STUB WING FWD UPR	1	D
		ATTACHING PARTS		
-21	MS24694S49	. SCREW	26	
		---*---		
-22	5311037-11	. STRAP-LH	1	
	5311037-12	. STRAP-RH	1	
-23	5311037-9	. FAIRING-LH STUB WING FWD LWR	1	A
	5311037-17	. FAIRING-LH STUB WING FWD LWR	1	B
	5311037-10	. FAIRING-RH STUB WING FWD LWR	1	A
	5311037-18	. FAIRING-RH STUB WING FWD LWR	1	B
		ATTACHING PARTS		
-24	MS24694S49	. SCREW	17	
-25	AN525-10R8	. SCREW	4	
		---*---		
-26	5311037-5	. FAIRING-STUB WING LWR LH	1	A
	5311037-13	. FAIRING-STUB WING LWR LH	1	B
	5311037-6	. FAIRING-STUB WING LWR RH	1	A
	5311037-14	. FAIRING-STUB WING LWR RH	1	B
		ATTACHING PARTS		
-27	MS24694S49	. SCREW	27	
-28	AN525-10R8	. SCREW	29	
		---*---		
-29	5311035-12	. FAIRING ASSY-STUB WING LH AFT	1	A
	5311035-21	. FAIRING ASSY-STUB WING LH AFT	1	B
	5311035-13	. FAIRING ASSY-STUB WING RH AFT	1	A
	5311035-22	. FAIRING ASSY-STUB WING RH AFT	1	B

A---340-0001 THRU 340-0096
B---340-0097 & ON
C---340-0097 THRU 340-0330
D---340-0331 & ON

FUSELAGE

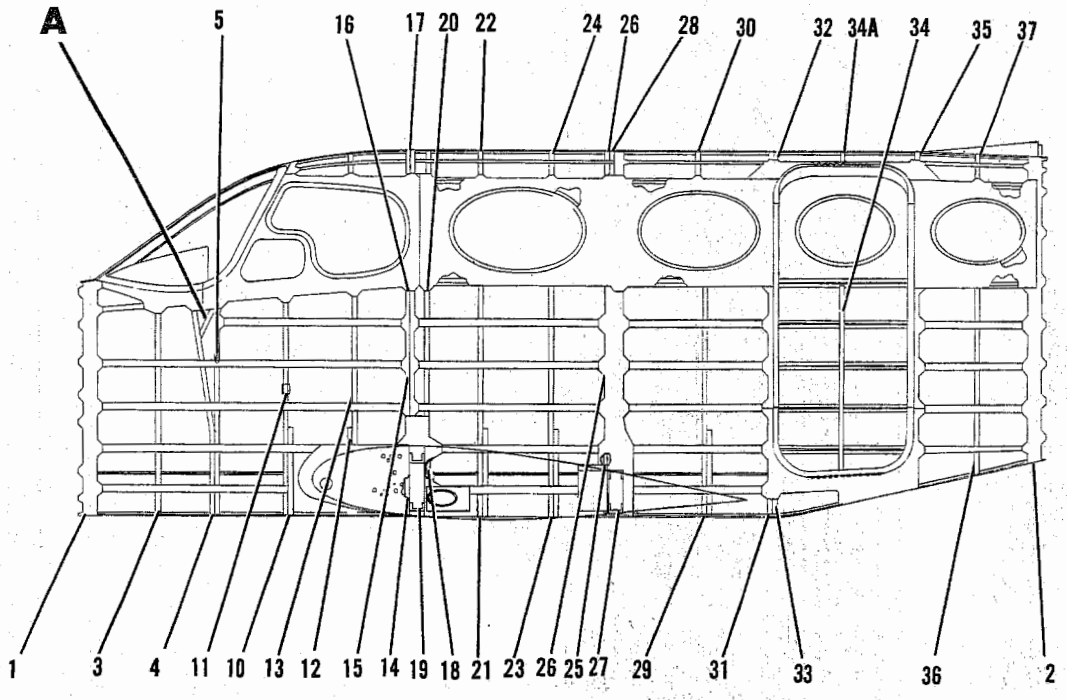

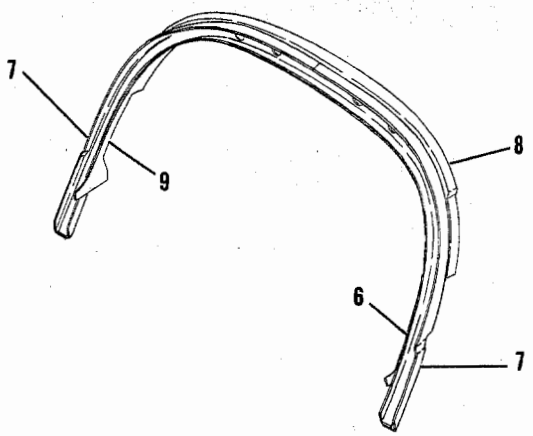

Detail **A**

1 FORWARD PRESSURE BULKHEAD

2 AFT PRESSURE BULKHEAD

19 FUSELAGE FRONT SPAR

27 FUSELAGE REAR SPAR

14193004
A14111001

Figure 8. Cabin Section Bulkheads Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
9 -		CABIN SECTION BULKHEADS INSTALLATION	NP	
-1	SEE FIG 9	. FORWARD PRESSURE BULKHEAD STA 100.00	REF	
-2	SEE FIG 10	. AFT PRESSURE BULKHEAD STA 252.00	REF	
	SEE FIG 10	. PANEL ASSY-AFT BULKHEAD	REF	
-3	5311080-2	. BULKHEAD ASSY STA 111.00	1	
-4	5311082-2	. BULKHEAD ASSY STA 120.00	1	
-5	312-12	. . RECEPTACLE-GLARESHIELD	2	
-6	5311145-6	. BULKHEAD-CANTED WINDSHIELD	1	
-7	5311145-7	. BULKHEAD-LH CANTED WINDSHIELD	1	
	5311145-8	. BULKHEAD-RH CANTED WINDSHIELD	1	
-8	5311145-2	. BULKHEAD-AFT WINDSHIELD	1	A
	5311145-10	. BULKHEAD-AFT WINDSHIELD	1	B
-9	5311145-3	. CAP STRIP-LH CANTED BULKHEAD	1	A
	5311145-9	. CAP STRIP-LH CANTED BULKHEAD	1	E
	5311145-13	. CAP STRIP-LH CANTED BULKHEAD	1	F
	5311145-11	. DOUBLER-LH	1	F
	5311145-4	. CAP STRIP-RH CANTED BULKHEAD	1	E
	5311145-14	. CAP STRIP-RH CANTED BULKHEAD	1	F
	5311145-12	. DOUBLER-RH	1	F
-10	5311084-2	. BULKHEAD ASSY STA 132.00 CLC	1	
-11	5311084-7	. . BRACKET ASSY-CIRCUIT BREAKER PANEL	1	
-12	5311086-2	. BULKHEAD ASSY-LWR STA 142.00	1	
-13	5311086-6	. BULKHEAD-UPR STA 142.00	1	
-14	5311092-9	. BULKHEAD-LH LWR FWD STA 151.55	1	
	5311092-8	. BULKHEAD-RH LWR FWD STA 151.55	1	
-15	5311092-5	. BULKHEAD-LH SIDE FWD STA 151.55 FSO 5311092-21	1	C
	5311092-21	. BULKHEAD-LH SIDE FWD STA 151.55	1	D
	5311092-6	. BULKHEAD-RH SIDE FWD STA 151.55	1	
-16	5311092-3	. BULKHEAD SEGMENT-LH SIDE AFT STA 151.55 FSO 5311092-19	1	C
	5311092-19	. BULKHEAD SEGMENT-LH SIDE AFT STA 151.55	1	D
	5311092-4	. BULKHEAD SEGMENT-RH SIDE AFT STA 151.55	1	
-17	5311092-7	. BULKHEAD-UPR AFT STA 151.55	1	
-18	5311090-5	. BULKHEAD ASSY-LH STA 153.96 FSO 5311090-7	1	C
	5311090-7	. BULKHEAD ASSY-LH STA 153.96	1	D
	5311090-4	. BULKHEAD ASSY-RH STA 153.96	1	
-19	SEE FIG 11	. FUSELAGE FRONT SPAR	REF	
-20	5311094-4	. BULKHEAD STA 154.90	1	
-21	5311098-3	. BULKHEAD ASSY STA 165.25	1	
-22	5311098-20	. BULKHEAD-UPR STA 165.25	1	
-23	5311098-22	. BULKHEAD ASSY STA 174.30	1	
-24	5311098-20	. BULKHEAD-UPR STA 174.30	1	
-25	5311094-3	. BULKHEAD STA 182.50	1	
-26	5311102-9	. BULKHEAD-LH STA 183.10	1	
	5311102-2	. BULKHEAD ASSY-RH STA 183.10	1	
-27	SEE FIG 12	. FUSELAGE REAR SPAR	REF	
-28	5311104-29	. BULKHEAD ASSY STA 184.86	1	
-29	5311106-2	. BULKHEAD ASSY STA 197.14	1	
-30	5311106-8	. BULKHEAD-UPR STA 197.14	1	
-31	5311110-3	. BULKHEAD-LH FWD STA 209.41	1	
	5311110-4	. BULKHEAD-RH FWD STA 209.41	1	
-32	5311110-5	. BULKHEAD SEGMENT-UPR AFT STA 209.41	1	
-33	5311110-6	. BULKHEAD SEGMENT-LWR AFT STA 209.41	1	
-34	5311112-2	. BULKHEAD ASSY STA 221.00	1	
-34A	5311112-5	. BULKHEAD SEGMENT-UPR STA 221.00	1	
-35	5311114-2	. BULKHEAD ASSY STA 232.61	1	
-36	5311116-2	. BULKHEAD ASSY STA 242.50	1	
-37	5311116-4	. BULKHEAD SEGMENT-UPR STA. 242.50	1	

A---340-0001 THRU 340-0300
B---340-0301 & ON
C---340-0001 THRU 340-0365
D---340-0366 & ON
E---340-0301 THRU 340-0500
F---340-0501 & ON

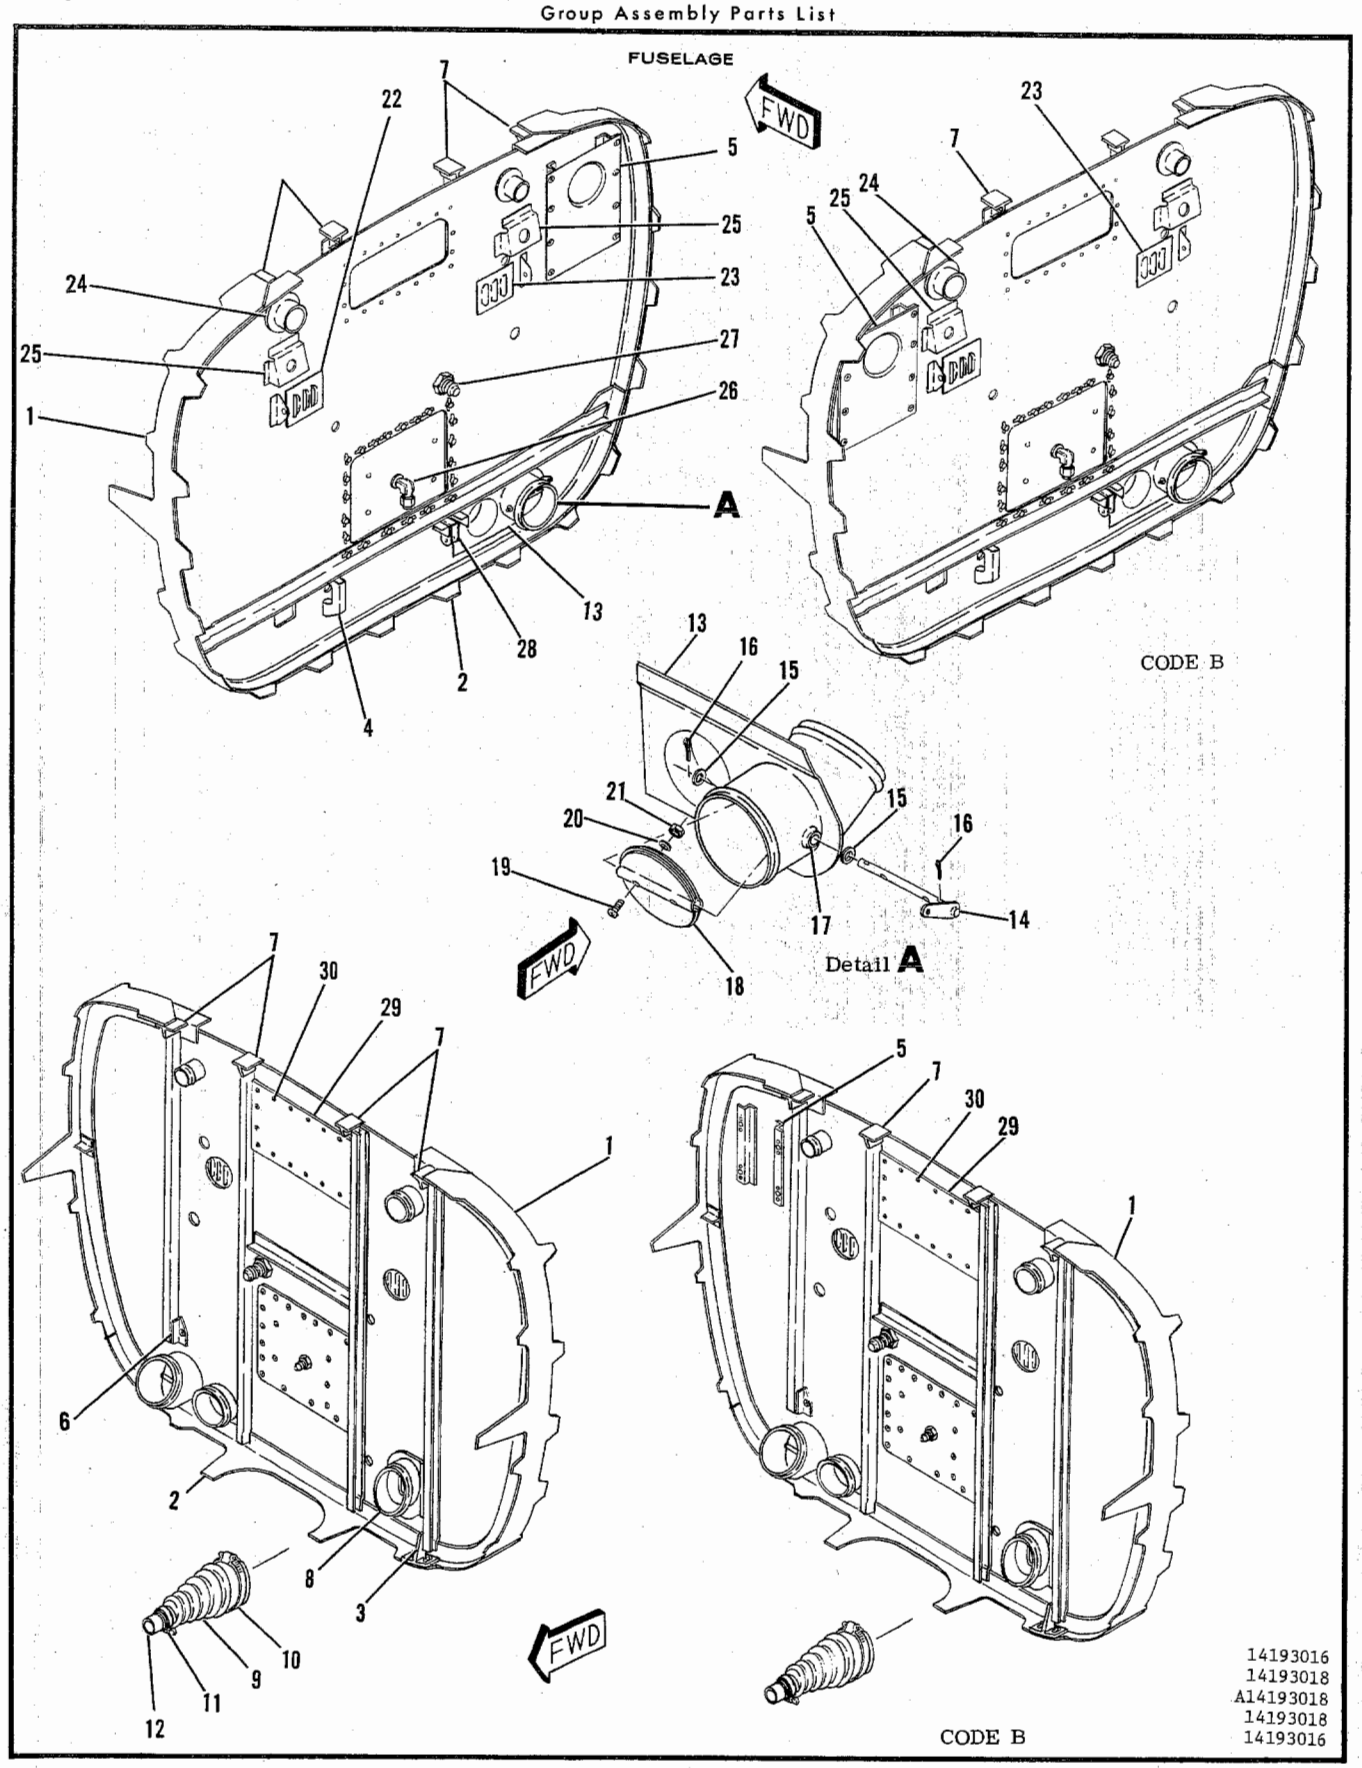

Figure 9. Forward Pressure Bulkhead Installation

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
9 -			FORWARD PRESSURE BULKHEAD INSTALLATION	NP	
-1	5311040-3		. BAND-SIDE	2	
-2	5311040-7		. BAND-LWR	1	
	5311040-2	NHM	. BULKHEAD ASSY	1	A
	5311040-8	NHM	. BULKHEAD ASSY	1	B
-3	5311041-1		. . SUPPORT ASSY-JACKPOINT LH SIDE ONLY	1	
			ATTACHING PARTS		
	AN4-6A		. . BOLT	2	
	AN960-416		. . WASHER	2	
	MS21042-4		. . NUT	2	
			---*---		
-4	5311041-21		. . BRACKET-PULLEY NOSE STEERING	1	
-5	5318100-3		. . PLATE ASSY-RH ELECTRICAL EQUIPMENT	1	A
	5111126-67		. . SUPPORT-HEAT SINK RH	2	A B
	5318100-6		. . PLATE ASSY-LH ELECTRICAL EQUIPMENT	1	B
			ATTACHING PARTS		
	MS27039-1-09		. . SCREW	8	
			---*---		
-6	5311041-8		. . ANGLE-SUPPORT	1	
			ATTACHING PARTS		
	MS27039-1-06		. . SCREW	2	
	MS21044N3		. . NUT	2	
			---*---		
-7	5311041-9		. . SUPPORT-LH UPR OUTBD	1	
	5311041-10		. . SUPPORT-RH UPR OUTBD	1	
	5311041-11		. . SUPPORT-LH UPR INBD	1	
	5311041-12		. . SUPPORT-RH UPR INBD	1	
			ATTACHING PARTS		
	MS27039-1-06		. . SCREW	1	
	MS21044N3		. . NUT	1	
			---*---		
-8	5311041-17	NHM	. ADAPTER-LH NOSE GEAR RETRACTION BOOT	1	
-9	B4147	NHM	. BOOT-NOSE GEAR RETRACTION CESSNA SPEC 9910011-2 KH	1	
			ATTACHING PARTS		
-10	C64P		. CLAMP WIT	1	
-11	AN737TW56		. CLAMP	1	
			---*---		
-12	5111130-5		. SPACER	1	
	5316501-2	BKR	. DUCT ASSY-HEATER & PRESSURIZATION	1	
-13	5316501-4	BKR	. . DOUBLER ASSY-HEATER & PRESSURIZATION DUCT	1	
-14	5316501-7	BKR	. . SHAFT ASSY-HEATER AIR DUCT	1	
			ATTACHING PARTS		
-15	AN960PD416L		. . WASHER	2	
-16	MS24665-69		. . PIN-COTTER	2	
			---*---		
-17	FAD250		. . BEARING-SHAFT SPLO	2	
-18	5316501-10	BKR	. . VALVE ASSY-HEATER AIR DUCT	1	
			ATTACHING PARTS		
-19	NAS601-9		. . SCREW	2	
-20	AN960-6L		. . WASHER	2	
-21	MS21042L06		. . NUT	2	
			---*---		
-22	5117202-3		. GRILL-FWD CABIN AIR LH	1	
-23	5117202-5		. GRILL-FWD CABIN AIR RH	1	
-24	5117201-7	NHM	. ADAPTER ASSY-DEFROST LH	1	
	5117201-8	NHM	. ADAPTER ASSY-DEFROST RH	1	
-25	5360901-2		. BRACKET-CONTROL SHAFT BEARING LH & RH WEU 5360901-24	2	D
	5360901-24		. BRACKET-CONTROL SHAFT BEARING LH & RH	2	E
-26	AN833-6D	NP	. ELBOW	1	
			ATTACHING PARTS		
	AN924-6D		. NUT	1	
			---*---		
	250-215-6		. LOCK-O-SEAL PRESSURE SIDE PKSC	1	
	AN929-6D		. CAP ASSY FWD SIDE	1	
-27	AN832-16D	NP	. UNION	1	
			ATTACHING PARTS		
	AN924-16D		. NUT	1	
			---*---		
	250-215-16		. LOCK-O-SEAL PRESSURE SIDE PKSC	1	
	AN929-16D		. CAP ASSY FWD SIDE	1	
-28	5360701-40		. BRACKET-RH NOSE STEERING	1	
-29	5310110-2		. PANEL-ACCESS ELECTRICAL	1	A
	5310110-3		. PANEL-ACCESS ELECTRICAL	1	B
			ATTACHING PARTS		
-30	NAS220-6		. SCREW	18	
			---*---		
-31	5614212-1		. MOUNT ASSY-FILTER	1	C
	MS35426-13		. NUT	1	C
	5614212-4		. ROD	1	C

% THIS PART MUST HAVE PRESSURIZATION SEALANT APPLIED UPON INSTALLATION TO AIRCRAFT SEE MISCELLANEOUS BULK ITEMS FOR LISTING OF AVAILABLE SEALANT COMPOUNDS

A---340-0001 THRU 340-0550
B---340-0551 & ON
C---340A0001 & ON
D---340-0001 THRU 340-0553
E---340-0554 & ON

FUSELAGE

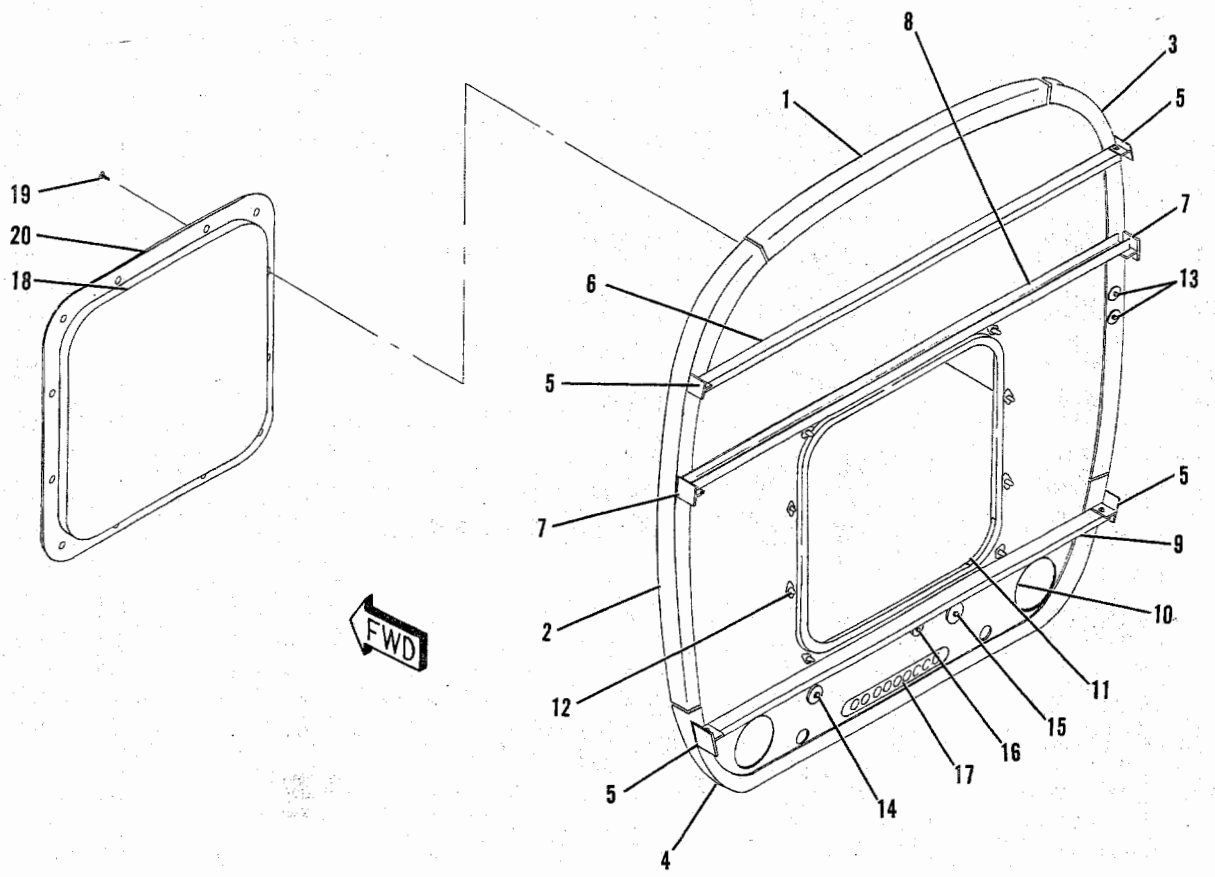

Figure 10. Aft Pressure Bulkhead Installation

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
10 -			AFT PRESSURE BULKHEAD INSTALLATION	NP	
-1	5311050-7		. BAND-UPR	1	
-2	5311050-8		. BAND-SIDE LH	1	
-3	5311050-9		. BAND-SIDE RH	1	
-4	5311050-10		. BAND-LWR	1	
	5311050-2		. BULKHEAD ASSY	1	A
	5311050-14		. BULKHEAD ASSY	1	C
	5311050-16		. BULKHEAD ASSY	1	D
-5	5311051-7		. . SUPPORT-LH	2	
	5311051-8		. . SUPPORT-RH	2	
-6	5311051-3		. . CHANNEL	1	
			ATTACHING PARTS		
	MS27039-0807		. . SCREW	2	
	MS21042L3		. . NUT	2	
			---*---		
-7	5311051-9		. . SUPPORT-LH	1	
	5311051-10		. . SUPPORT-RH	1	
-8	5311051-1		. . CHANNEL	1	
			ATTACHING PARTS		
	MS27039-0807		. . SCREW	2	
	MS21042L3		. . NUT	2	
			---*---		
-9	5311051-2		. . CHANNEL	1	
			ATTACHING PARTS		
	MS27039-0807		. . SCREW	2	
	MS21042L3		. . NUT	2	
			---*---		
-10	5311052-1		. . WEB	1	A
	5311052-2		. . WEB	1	C
	5311052-4		. . WEB	1	D
-11	CM2670-4		. . SEAL-ACCESS PANEL BKI	AR	
-12	26R16-1	%	. . RECEPTACLE CLC	12	
-13	5311051-17	%	. . PATCH-RH	4	
	5311051-18		. . FILLER-RH	4	
			ATTACHING PARTS		
	MS27039-0809		. . SCREW	1	
	MS21042L08		. . NUT	1	
			---*---		
-14	5311051-19	%	. . PATCH-LH	2	
	5311051-20		. . FILLER-LH	2	
			ATTACHING PARTS		
	MS27039-0809		. . SCREW	1	
	MS21042L08		. . NUT	1	
			---*---		
-15	5311051-15	%	. . PATCH-RH	2	A
	5311051-23	%	. . PATCH-RH	2	B
	5311051-16		. . FILLER-RH	1	A
	5311051-24		. . FILLER-RH	1	B
			ATTACHING PARTS		
	MS27039-0809		. . SCREW	1	
	MS21042L08		. . NUT	1	
			---*---		
-16	5311051-17	%	. . PATCH-RH	2	
	5311051-18		. . FILLER-RH	1	
			ATTACHING PARTS		
	MS27039-0809		. . SCREW	1	
	MS21044L08		. . NUT	1	
			---*---		
-17	5362402-3		. . PLATE-CABLE SEAL	1	
-18	5310125-1		. PANEL-ACCESS	1	
			ATTACHING PARTS		
-19	2700-16		. STUD CLC	AR	
			---*---		
-20	5310120-2	@	. RETAINER-ACCESS PANEL	1	A
	5310120-4	@	. RETAINER-ACCESS PANEL	1	B

% THIS PART MUST HAVE PRESSURIZATION SEALANT APPLIED UPON INSTALLATION TO AIRCRAFT
SEE MISCELLANEOUS BULK ITEMS FOR LISTING OF AVAILABLE COMPOUND

@ WHEN ORDERING THIS PART THE ORDER MUST BE ACCOMPANIED BY THE COMPLETE FINISH & TRIM PLATE NUMBER AND AIRCRAFT SERIAL NUMBER

A---340-0001 THRU 340-0150
B---340-0151 & ON
C---340-0151 THRU 340-0500
D---340-0501 & ON

FUSELAGE

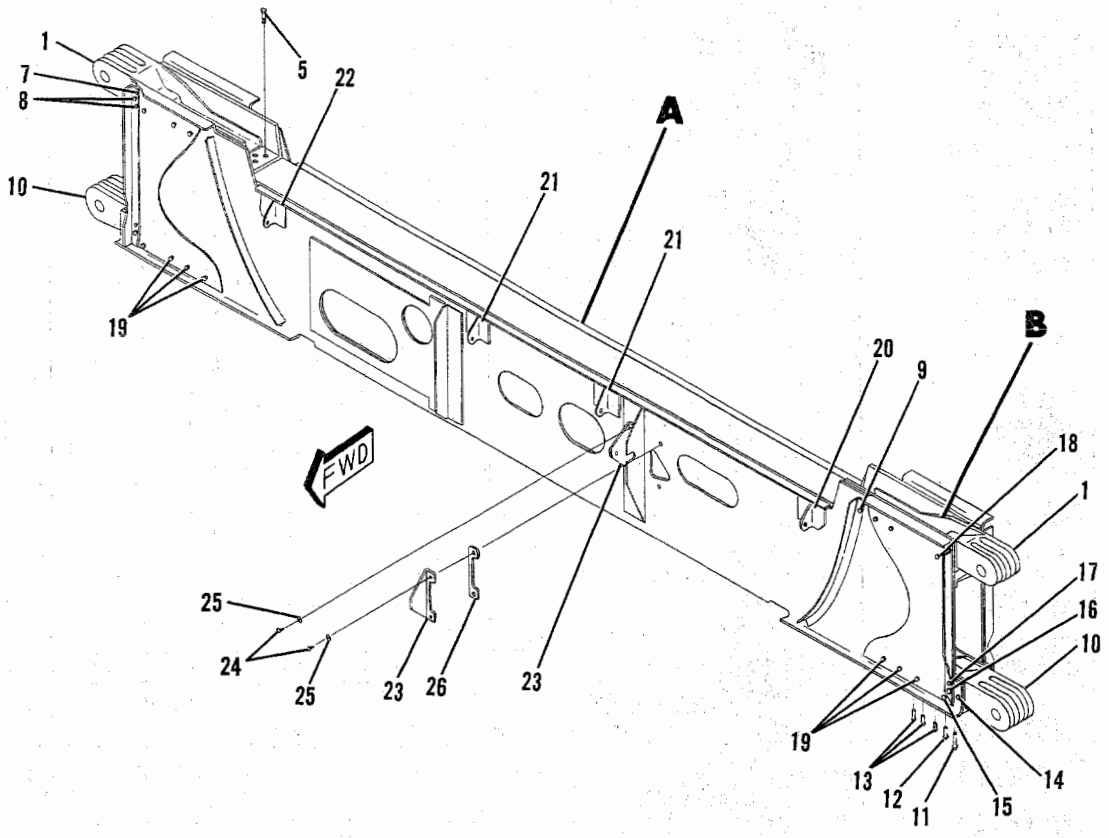

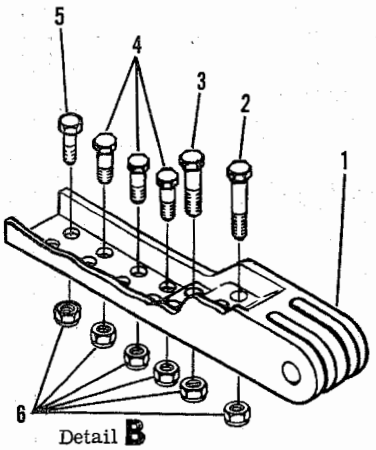

Detail **B**

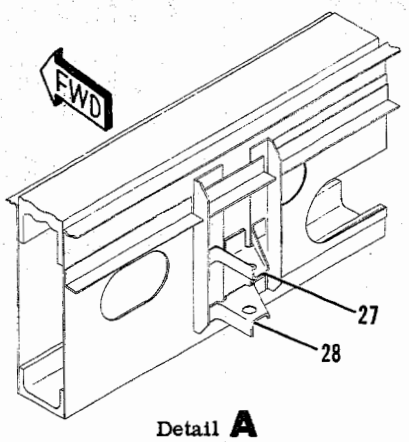

Detail **A**

Figure 11. Fuselage Front Spar Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
11 -		FUSELAGE FRONT SPAR INSTALLATION	NP	
-1	0811350-1	. FITTING-UPR FSO 0811350-7	2	
	0811350-7	. FITTING-UPR	2	
		ATTACHING PARTS		
-2	NAS1104-27	. BOLT	2	
-3	NAS1104-17	. BOLT	2	
-4	NAS1104-16	. BOLT	6	
-5	NAS1104-13	. BOLT	3	
-6	MS21042N4	. NUT		
-7	NAS1104-46	. BOLT	2	
	MS21042N4	. NUT	2	
-8	NAS1103-10	. BOLT	4	
	MS21042N3	. NUT	4	
-9	NAS1103-9	. BOLT	2	
	MS21042N3	. NUT	2	
		---*---		
-10	0811350-2	. FITTING-LWR FSO 0811350-8	2	
	0811350-8	. FITTING-LWR	2	
		ATTACHING PARTS		
-11	NAS1054-8-19	. RIVET-HI SHEAR	2	
-12	NAS1054-8-9	. RIVET-HI SHEAR	2	
-13	NAS1054-8-7	. RIVET-HI SHEAR	6	
	NAS179-8	. COLLAR	1	
-14	NAS1104-42	. BOLT	1	
	MS21042N4	. NUT	1	
-15	NAS1104-44	. BOLT	2	
	MS21042N4	. NUT	2	
-16	NAS1104-46	. BOLT	1	
	MS21042N4	. NUT	1	
-17	NAS1103-10	. BOLT	1	
	MS21042N3	. NUT	1	
-18	NAS1104-44	. BOLT	2	
	MS21042N4	. NUT	2	
-19	NAS1103-11	. BOLT	10	
	MS21042N3	. NUT	10	
		---*---		
-20	5311021-17	. FITTING-SEAT BELT PILOT	1	
		ATTACHING PARTS		
	NAS1104-42	. BOLT	2	
	NAS43HT4-122	. SPACER	2	
	AN960-416L	. WASHER	2	
	MS21042N4	. NUT	2	
		---*---		
-21	5311021-14	. FITTING-SEAT BELT PILOT & COPILOT	2	
		ATTACHING PARTS		
	NAS1104-42	. BOLT	2	
	NAS43HT4-122	. SPACER	2	
	AN960-416L	. WASHER	2	
	MS21042N4	. NUT	2	
		---*---		
-22	5311021-18	. FITTING-SEAT BELT COPILOT	1	
		ATTACHING PARTS		
	NAS1104-42	. BOLT	2	
	NAS43HT4-122	. SPACER	2	
	AN960-416L	. WASHER	2	
	MS21042N4	. NUT	2	
		---*---		
-23	5311020-16	. BRACKET-SUPPORT EMERGENCY GEAR CHAIN SPROCKET	1	
		. ATTACHING PARTS		
-24	MS27039-*	. SCREW	2	
-25	AN960-10L	. WASHER	2	
		---*---		
-26	5311020-17	. FILLER-SUPPORT BRACKET	1	
-27	5311021-16	. BRACKET-BELLCRANK UPR	1	
-28	5311021-15	. BRACET-BELLCRANK LWR	1	

FUSELAGE

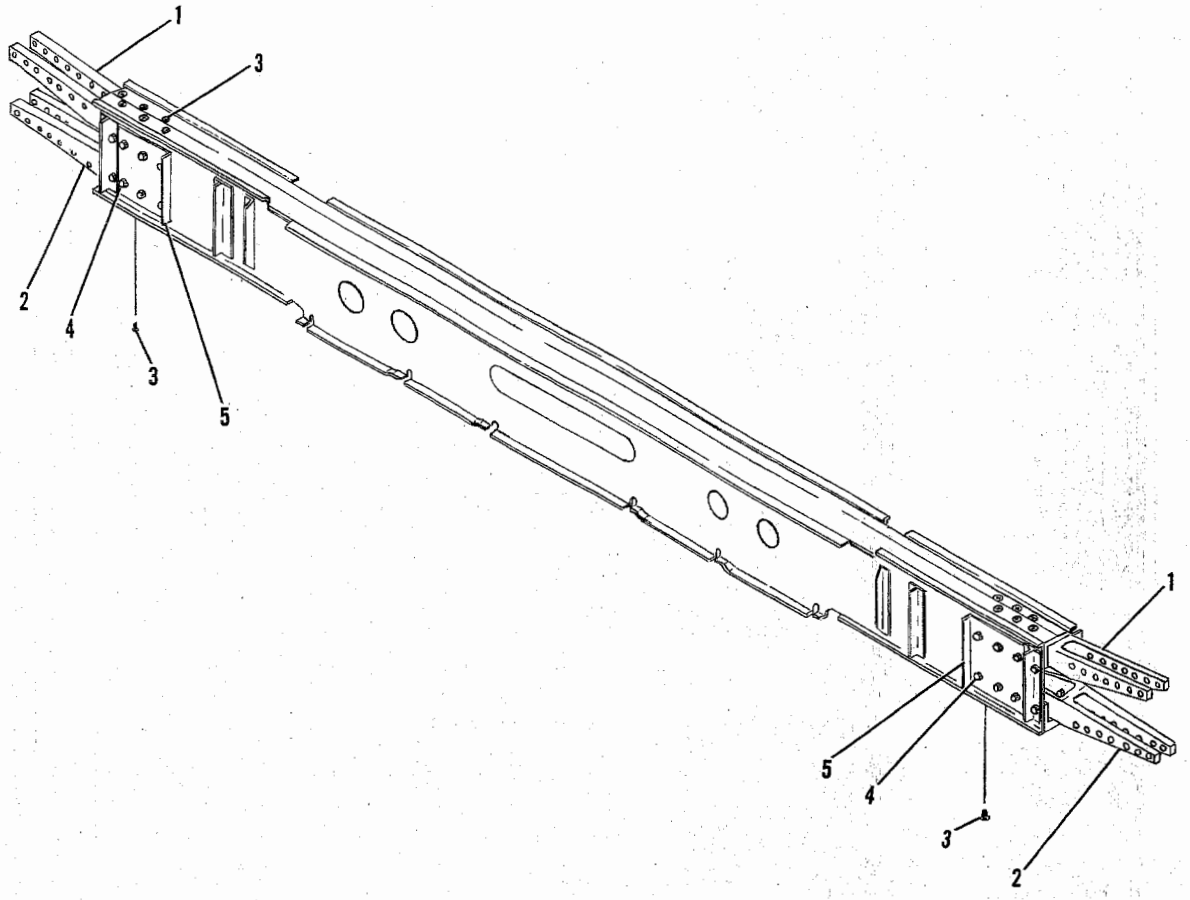

Figure 12. Fuselage Rear Spar Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
12 -		FUSELAGE REAR SPAR INSTALLATION	NP	
-1	5011023-1	. FITTING-UPR	2	
-2	5011024-1	. FITTING-LWR	2	
		ATTACHING PARTS		
-3	MS24694S151	. SCREW	12	
	MS21042L3	. NUT	12	
-4	AN5-7A	. BOLT	20	
	AN960-516	. WASHER	40	
	MS21044N5	. NUT	20	
		---*---		
-5	5011021-9	. DOUBLER	2	

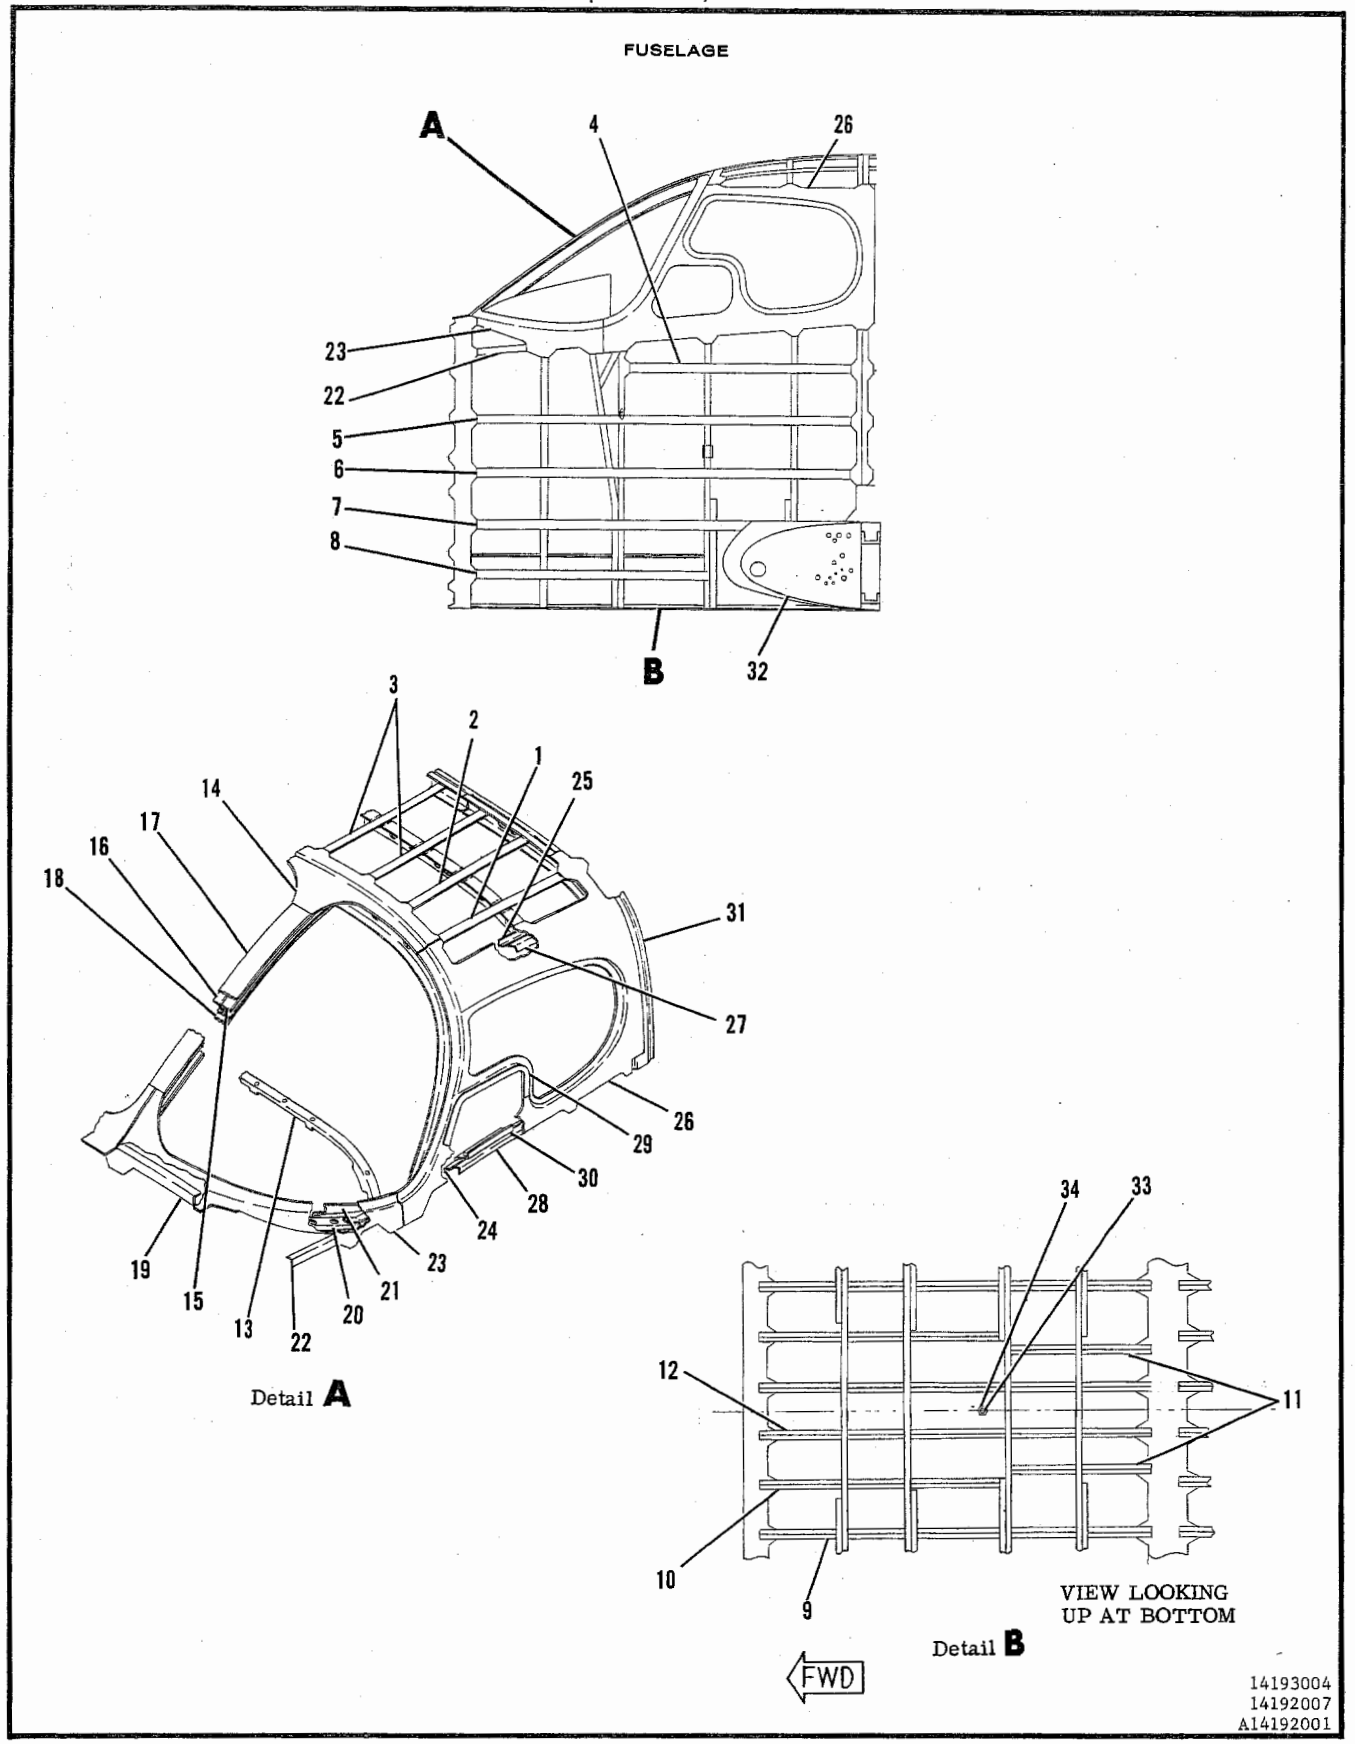

Figure 13. Forward Cabin Section Stringers Installation

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
13 -			FORWARD CABIN SECTION STRINGERS INSTALLATION	NP	
-1	5311015-12		STRINGER-TOP OUTBD LH & RH	2	
-2	5311015-11		STRINGER-TOP OUTBD INTERMEDIATE LH & RH	2	
-3	5311015-10		STRINGER-TOP INBD LH & RH	2	
-4	5311015-4		STRINGER-SIDE LH & RH	2	
-5	5311015-39		STRINGER-SIDE LH	1	
	5311015-49		STRINGER-SIDE RH	1	
-6	5311015-35		STRINGER-SIDE LH	1	
	5311015-48		STRINGER-SIDE RH	1	
-7	5311015-41		STRINGER-SIDE LH & RH	2	
-8	5311015-42		STRINGER-SIDE LH & RH	2	
-9	5311015-18		STRINGER-BOTTOM OUTBD LH	1	
	5311015-45		STRINGER-BOTTOM OUTBD RH	1	
-10	5311015-17		STRINGER-BOTTOM INTERMEDIATE LH FWD	1	
	5311015-44		STRINGER-BOTTOM INTERMEDIATE RH FWD	1	
-11	5311015-19		STRINGER-BOTTOM INTERMEDIATE LH & RH AFT	2	
-12	5311015-16		STRINGER-BOTTOM INBD LH	1	
	5311015-55		STRINGER-BOTTOM INBD RH	1	
-13	5311290-4		SUPPORT ASSY-GLARESHIELD	1	A
	5311290-6		SUPPORT ASSY-GLARESHIELD	1	B
-14	5311150-14	%	DOUBLER-WINDSHIELD UPR	1	
-15	5311150-9		CHANNEL-CTR LH WINDSHIELD	1	
-16	5311150-8		CHANNEL-CTR RH WINDSHIELD	1	
-17	5311150-16	%	CAP-OUTER	1	
-18	5311150-15		CAP-INNER	1	E
	5311150-30		CAP-INNER	1	F
-19	5311150-20	%	DOUBLER-WINDSHIELD LWR CTR	1	
-20	5311150-27		BULKHEAD ASSY-LH	1	
	5311150-28		BULKHEAD ASSY-RH	1	
-21	5311150-13	%	FLANGE-BHD SUPPORT LH	1	
	5311150-12	%	FLANGE-BHD SUPPORT RH	1	
-22	5311150-5		STRINGER-WINDSHIELD LH	1	
	5311150-4		STRINGER-WINDSHIELD RH	1	
-23	5311150-3	%	DOUBLER-WINDSHIELD LWR LH SIDE	1	
	5311150-2	%	DOUBLER-WINDSHIELD LWR RH SIDE	1	
-24	5311016-17		STRINGER-LWR LH WINDOW	1	
	5311016-16		STRINGER-LWR RH WINDOW	1	
-25	5311016-15		STRINGER-UPR LH WINDOW	1	
	5311016-14		STRINGER-UPR RH WINDOW	1	
-26	5311140-3		DOUBLER-WINDOW LH	1	C
	5311140-11		DOUBLER-WINDOW LH	1	D
	5311140-4		DOUBLER-WINDOW RH	1	
-27	5311140-7		MOLDING-UPR LH WINDOW	1	
	5311140-8		MOLDING-UPR RH WINDOW	1	
-28	5311140-5		STRINGER-LWR LH WINDOW	1	
	5311140-6		STRINGER-LWR RH WINDOW	1	
-29	5311140-9		SPACER-SKIN	1	C
-30	5311140-10		SUPPORT	1	C
-31	5311142-3		SPLICE-LH	1	
	5311142-4		SPLICE-RH	1	
-32	5311157-3		WEB ASSY-LH EQUIPMENT FEED THRU	1	G
	5311157-11		WEB ASSY-LH EQUIPMENT FEED THRU	1	H
	5311157-4		WEB ASSY-RH EQUIPMENT FEED THRU	1	G
	5311157-12		WEB ASSY-RH EQUIPMENT FEED THRU	1	H
-33	0813601-8		BULB-O A T	1	
			ATTACHING PARTS		
-34	0411849	%	NUT	1	
			---*---		

% THIS ITEM MUST HAVE PRESSURIZATION SEALANT APPLIED UPON INSTALLATION TO AIRCRAFT SEE MISCELLANEOUS BULK ITEMS FOR LISTING OF AVAILABLE SEALANT COMPOUNDS

A---340-0001 THRU 340-0150
B---340-0151 & ON
C---340-0001 THRU 340-0300
D---340-0301 & ON
E---340-0001 THRU 340-0500
F---340-0501 & ON
G---340-0001 THRU 340A0072
H---340A0073 & ON

FUSELAGE

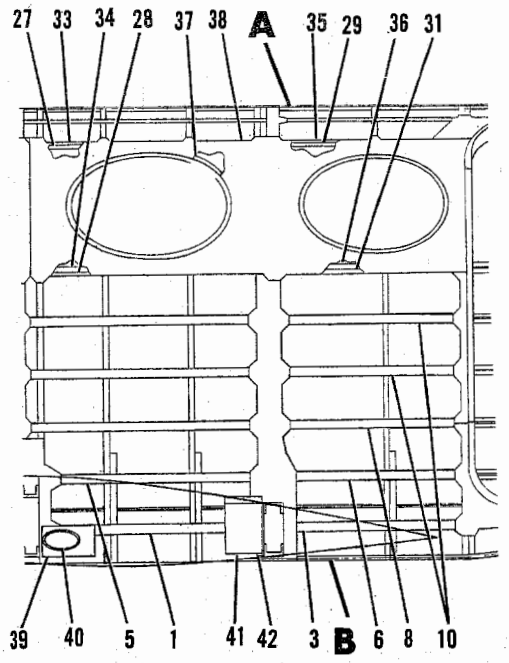

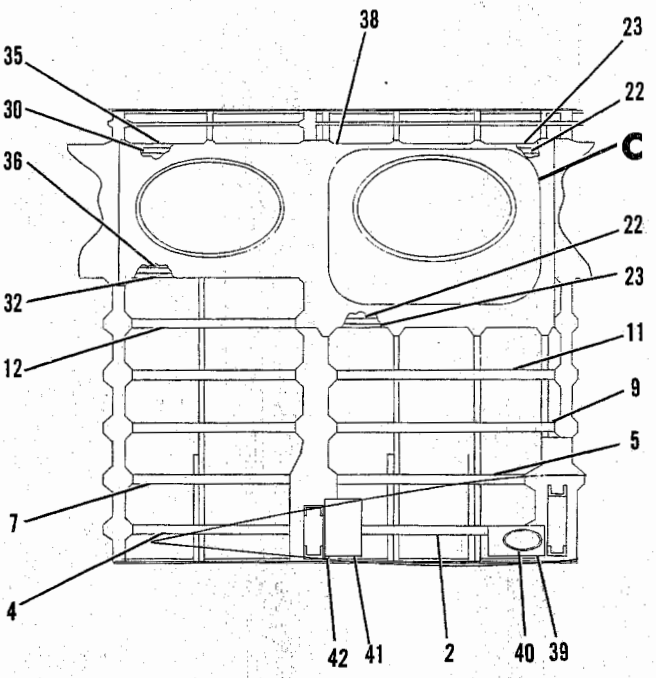

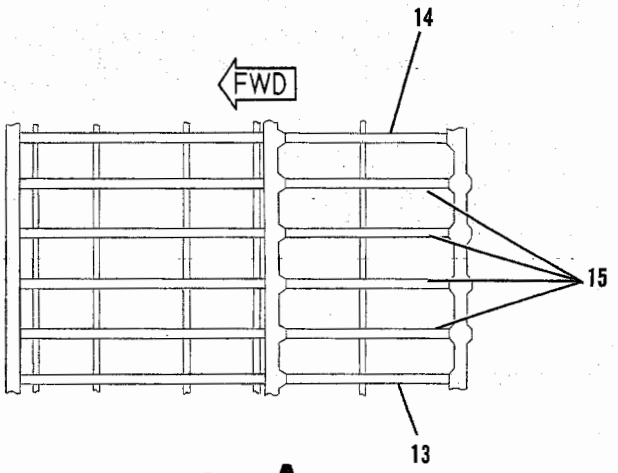

Detail **A**

VIEW LOOKING
DOWN AT TOP

40 PRESSURE SEAL BOOT

Figure 14. Center Cabin Section Stringers Installation (Sheet 1 of 2)

FUSELAGE

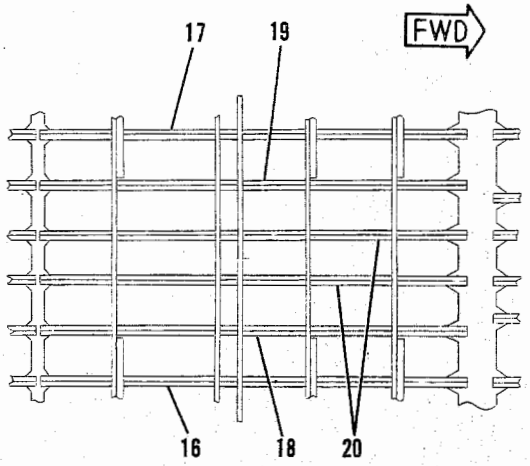

Detail **B**

VIEW LOOKING
UP AT BOTTOM

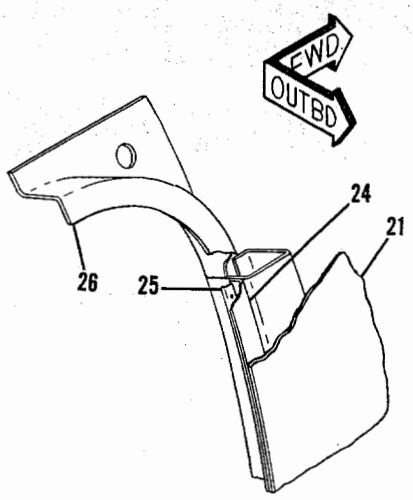

Detail **C**

Figure 14. Center Cabin Section Stringers Installation (Sheet 2)

FIGURE AND INDEX NO.	PART NUMBER		1 2 3 4 5 6 7 DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
14 -			CENTER CABIN SECTION STRINGERS INSTALLATION	NP	
-1	5311015-7		• STRINGER-SIDE LH	1	
-2	5311015-43		• STRINGER-SIDE RH	1	
-3	5311015-24		• STRINGER-SIDE LH	1	
-4	5311015-28		• STRINGER-SIDE RH	1	
-5	5311015-6		• STRINGER-SIDE LH & RH	2	
-6	5311015-52		• STRINGER-SIDE LH	1	
-7	5311015-56		• STRINGER-SIDE RH	1	
-8	5311015-36		• STRINGER-SIDE LH	1	
-9	5311015-37		• STRINGER-SIDE RH	1	
-10	5311015-5		• STRINGER-SIDE LH	2	
-11	5311015-25		• STRINGER-SIDE RH	1	
-12	5311015-27		• STRINGER-SIDE RH	1	
-13	5311015-13		• STRINGER-TOP OUTBD LH	1	
-14	5311015-33		• STRINGER-TOP OUTBD RH	1	
-15	5311015-38		• STRINGER-TOP INTERMEDIATE & INBD LH & RH	2	
-16	5311015-21		• STRINGER-BOTTOM OUTBD LH	1	
-17	5311015-57		• STRINGER-BOTTOM OUTBD RH	1	
-18	5311015-20		• STRINGER-BOTTOM INTERMEDIATE LH	1	
-19	5311015-46		• STRINGER-BOTTOM INTERMEDIATE RH	1	
-20	5311015-20		• STRINGER-BOTTOM INBD LH & RH	2	
-21	5311136-2	%	• DOUBLER-EMERGENCY EXIT	1	
-22	5311136-3	%	• CHANNEL-LWR EMERGENCY EXIT	1	
	5311136-18	%	• CHANNEL ASSY-UPR EMERGENCY EXIT	1	
-23	5311136-11	%	• ANGLE-LWR EMERGENCY EXIT	1	
	5311136-12	%	• ANGLE-UPR EMERGENCY EXIT	1	
-24	5311136-10	%	• ANGLE-FWD EMERGENCY EXIT	1	
	5311136-9	%	• ANGLE-AFT EMERGENCY EXIT	1	
-25	5311136-13	%	• STRIKER-FWD EMERGENCY EXIT		
	5311136-14	%	• STRIKER-AFT EMERGENCY EXIT		
-26	5311136-7	%	• GUSSET-UPR FWD EMERGENCY EXIT	1	
	5311136-8	%	• GUSSET-UPR AFT EMERGENCY EXIT	1	
	5311136-5	%	• GUSSET-LWR FWD EMERGENCY EXIT	1	
	5311136-6	%	• GUSSET-LWR AFT EMERGENCY EXIT	1	
-27	5311016-13		• STRINGER-UPR LH WINDOW	1	
-28	5311016-12		• STRINGER-LWR LH WINDOW	1	
-29	5311016-9		• STRINGER-UPR LH WINDOW	1	
-30	5311016-8		• STRINGER-UPR RH WINDOW	1	
-31	5311016-11		• STRINGER-LWR LH WINDOW	1	
-32	5311016-10		• STRINGER-LWR RH WINDOW	1	
-33	5311134-13		• STRINGER-UPR LH WINDOW	1	
-34	5311134-12		• STRINGER-LWR LH WINDOW	1	
-35	5311134-10		• STRINGER-UPR LH WINDOW	1	
	5311134-23		• STRINGER-UPR RH WINDOW	1	
-36	5311134-9		• STRINGER-LWR LH WINDOW	1	
	5311134-22		• STRINGER-LWR RH WINDOW	1	
-37	5311134-11		• DOUBLER-WINDOW SKIN LH & RH	3	
-38	5311134-15		• SKIN-WINDOW LH	1	
	5311134-24		• SKIN-WINDOW RH	1	
-39	5311158-3		• DOUBLER ASSY-LH	1	
	5311158-4		• DOUBLER ASSY-RH	1	
-40	SEE FIG 80		• BOOT-PRESSURE SEAL MAIN GEAR PUSH PULL	REF	
-41	5311158-15		• DOUBLER ASSY-CONTROL LH	1	
	5311158-10		• DOUBLER ASSY-CONTROL RH	1	
-42	5311158-20		• SPACER-CONTROL DOUBLER	1	

% THIS PART MUST HAVE PRESSURIZATION SEALANT APPLIED UPON INSTALLATION IN AIRCRAFT SEE MISCELLANEOUS BULK ITEMS FOR LISTING OF AVAILABLE SEALANT COMPOUNDS

FUSELAGE

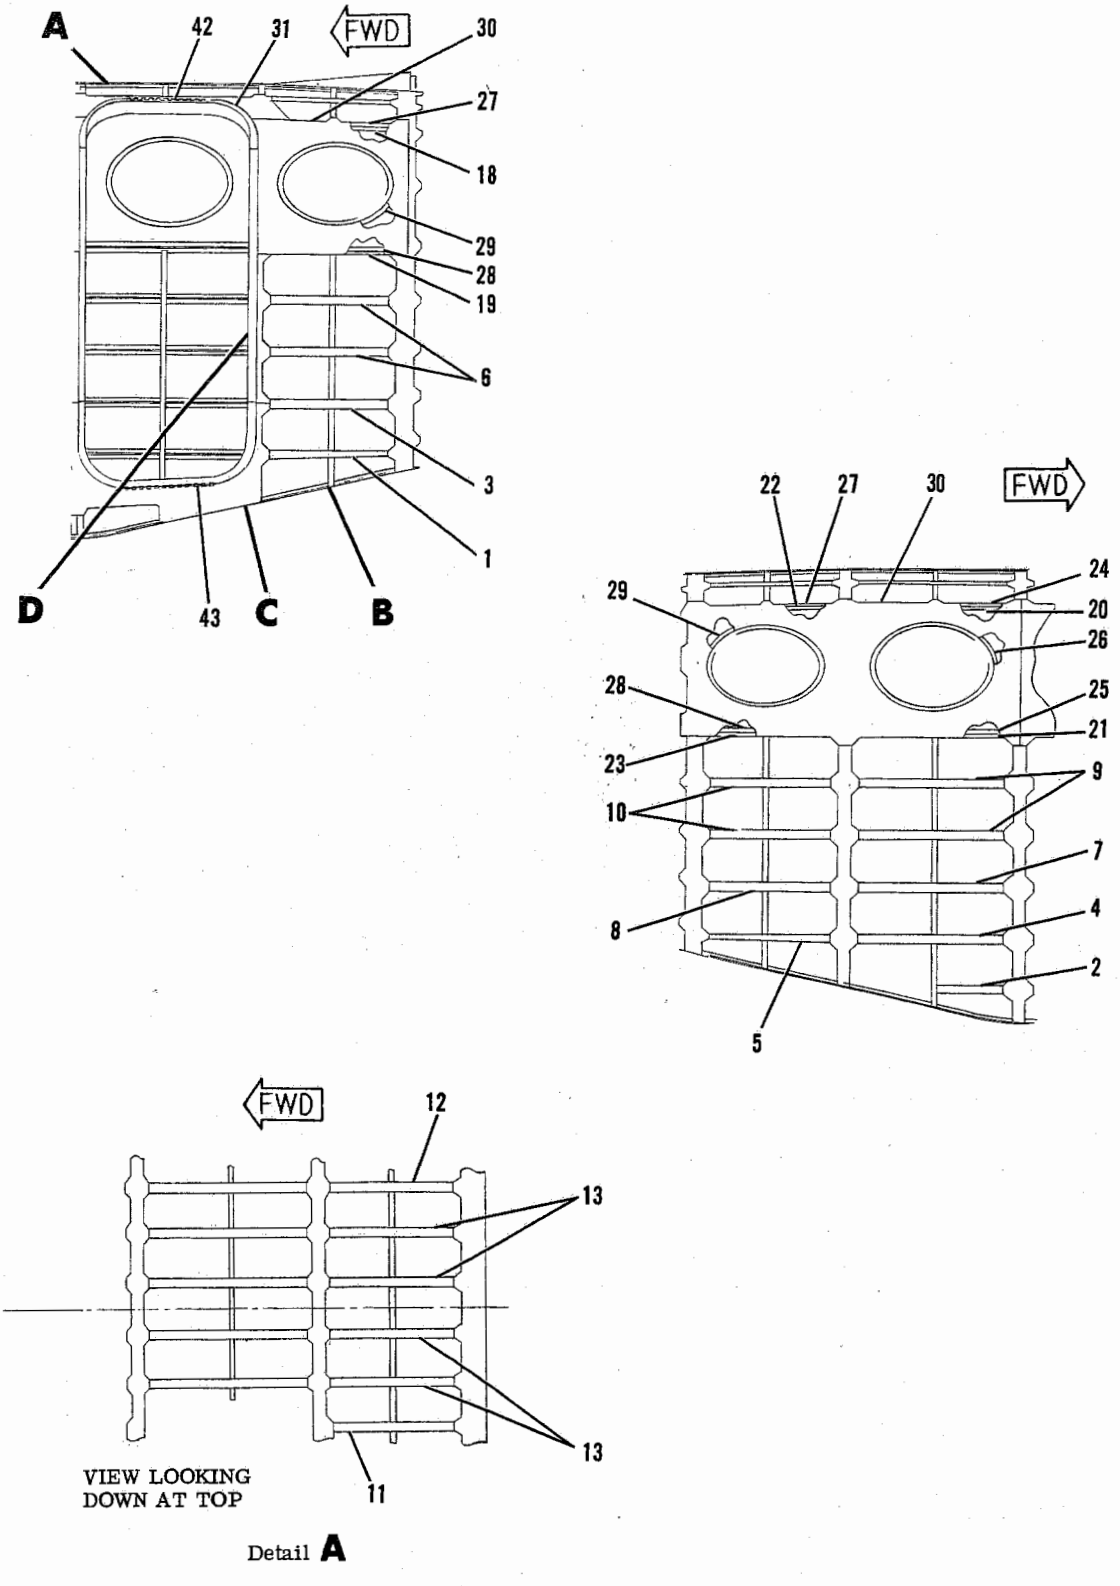

Figure 15. Aft Cabin Section Stringers Installation (Sheet 1 of 2)

FUSELAGE

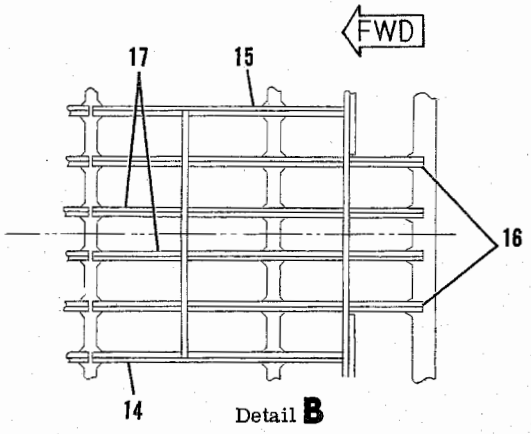

Detail **B**

VIEW LOOKING
UP AT BOTTOM

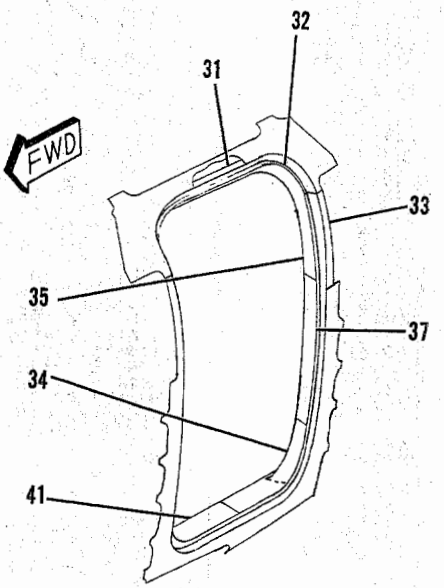

Detail **C**

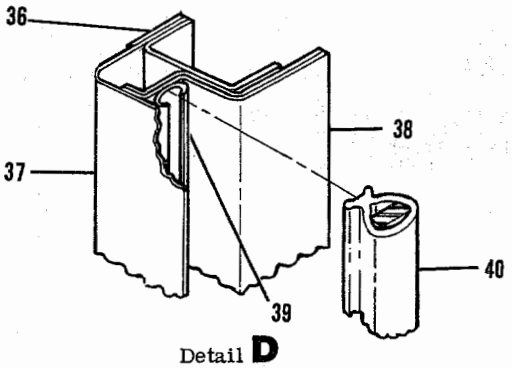

Detail **D**

B14192008
C14192015
D

Figure 15. Aft Cabin Section Stringers Installation (Sheet 2)

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
15 -		AFT CABIN SECTION STRINGERS INSTALLATION	NP	
-1	5311015-9	STRINGER-SIDE LH	1	
-2	5311015-40	STRINGER-SIDE RH	1	
-3	5311015-54	STRINGER-SIDE LH	1	
-4	5311015-30	STRINGER-SIDE RH	1	
-5	5311015-32	STRINGER-SIDE RH	1	
-6	5311015-8	STRINGER-SIDE LH	2	
-7	5311015-50	STRINGER-SIDE RH	1	
-8	5311015-51	STRINGER-SIDE RH	1	
-9	5311015-29	STRINGER-SIDE RH	2	
-10	5311015-31	STRINGER-SIDE RH	2	
-11	5311015-15	STRINGER-TOP LH OUTBD	1	
-12	5311015-34	STRINGER-TOP RH OUTBD	1	
-13	5311015-14	STRINGER-TOP LH & RH INTERMEDIATE & INBD	4	
-14	5311015-23	STRINGER-BOTTOM LH OUTBD	1	
-15	5311015-47	STRINGER-BOTTOM RH OUTBD	1	
-16	5311015-22	STRINGER-BOTTOM LH & RH INTERMEDIATE	2	
-17	5311015-53	STRINGER-BOTTOM LH & RH INBD	2	
-18	5311016-5	STRINGER-WINDOW LH UPR	1	
-19	5311016-19	STRINGER-WINDOW LH LWR	1	
-20	5311016-7	STRINGER-WINDOW RH UPR	1	
-21	5311016-6	STRINGER-WINDOW RH LWR	1	
-22	5311016-4	STRINGER-WINDOW RH UPR	1	
-23	5311016-18	STRINGER-WINDOW RH LWR	1	
-24	5311134-19	STRINGER-RH WINDOW UPR	1	
-25	5311134-18	STRINGER-RH WINDOW LWR	1	
-26	5311134-20	DOUBLER-RH WINDOW	1	
-27	5311134-6	STRINGER-LH WINDOW UPR	1	
	5311134-17	STRINGER-RH WINDOW UPR	1	
-28	5311134-5	STRINGER-LH WINDOW LWR	1	
	5311134-16	STRINGER-RH WINDOW LWR	1	
-29	5311134-7	DOUBLER-LH & RH WINDOW	2	
-30	5311134-8	SKIN-LH WINDOW	1	
-31	5311132-2 %	LINTEL-CABIN DOOR	1	
-32	5311132-5 %	RETAINER-SEAL UPR	1	
-33	5311132-4 %	SUPPORT-SEAL RETAINER UPR	1	
-34	5311125-6 %	ANGLE-DOOR POST LWR AFT	1	
	5311120-6 %	ANGLE-DOOR POST LWR FWD	1	
-35	5311125-5 %	ANGLE-DOOR POST UPR AFT	1	
	5311120-5 %	ANGLE-DOOR POST UPR FWD	1	
-36	5311125-7 %	DOUBLER-DOOR POST AFT	1	
	5311120-7 %	DOUBLER-DOOR POST FWD	1	
-37	5311125-4 %	ANGLE-DOOR POST AFT	1	
	5311120-4 %	ANGLE-DOOR POST FWD	1	
-38	5311125-2 %	SUPPORT-SEAL RETAINER AFT	1	
	5311120-2 %	SUPPORT-SEAL RETAINER FWD	1	
-39	5311125-3 %	RETAINER-SEAL AFT	1	
	5311120-3 %	RETAINER-SEAL FWD	1	
-40	9910017-1	SEAL-DOOR FRAME LASR	1	
-41	5311130-2 %	THRESHOLD-DOOR	1	
	5311130-3 %	SUPPORT-SEAL RETAINER	1	
	5311130-4 %	RETAINER-SEAL LWR	1	
-42	5311236-1	HINGE-UPR CABIN DOOR	1	A
	5311236-4	HINGE-UPR CABIN DOOR	1	B
	5311235-6	SHIM-UPR CABIN DOOR	1	B
		ATTACHING PARTS		
	AN3-4	SCREW	10	
	MS21042L3	NUT	10	
		---*---		
	MS20253-4-1162	PIN-HINGE	1	
-43	5311236-1	HINGE-LWR CABIN DOOR	1	A
	5311236-4	HINGE-LWR CABIN DOOR	1	B
	5311235-6	SHIM-LWR CABIN DOOR	1	B
		ATTACHING PARTS		
	AN3-4	BOLT	10	
	NAS679A3	NUT	10	
		---*---		
	MS20253-4-1162	PIN-HINGE	1	
	5311235-4	DOUBLER-LH LWR DOOR HINGE	1	
	5311235-5	DOUBLER-RH LWR DOOR HINGE	1	

%---THIS PART MUST HAVE PRESSURIZATION SEALANT APPLIED UPON INSTALLATION TO AIRCRAFT SEE MISCELLANEOUS BULK ITEMS FOR LISTING OF AVAILABLE SEALANT COMPOUNDS

A---340-0001 THRU 340-0235
B---340-0236 & ON

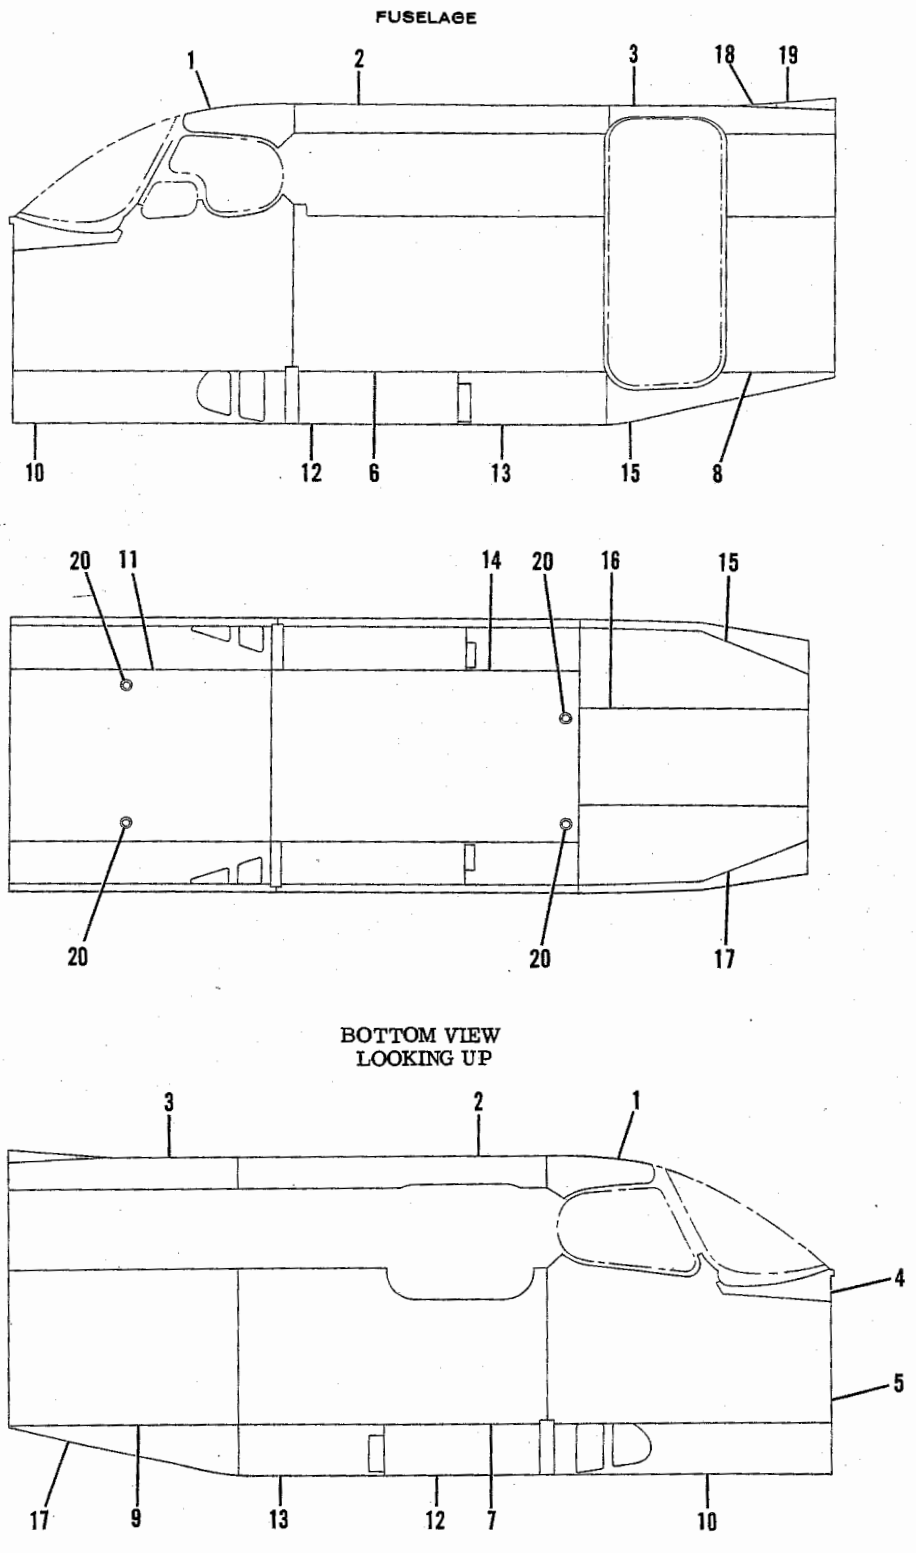

Figure 16. Cabin Skins Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
16 -		CABIN SKINS INSTALLATION	NP	
-1	5311010-19	. SKIN-TOP FWD	1	
-2	5311010-18	. SKIN-TOP CTR	1	
-3	5311010-17	. SKIN-TOP AFT	1	
-4	5311010-5	. SKIN-LH FWD UPR	1	
	5311010-6	. SKIN-RH FWD UPR	1	
-5	5311010-1	. SKIN-LH SIDE FWD	1	C
	5311010-23 %	. SKIN-LH SIDE FWD	1	D
	5311010-2	. SKIN-RH SIDE FWD	1	
-6	5311010-7	. SKIN-LH SIDE CTR	1	
-7	5311010-8	. SKIN RH SIDE CTR	1	
-8	5311010-15	. SKIN-LH SIDE AFT	1	
-9	5311010-16	. SKIN-RH SIDE AFT	1	
-10	5311010-3	. SKIN-LH LWR FWD	1	
	5311010-4	. SKIN-RH LWR FWD	1	
-11	5311010-20	. SKIN-BOTTOM FWD	1	
-12	5311010-9	. SKIN-LH LWR CTR FWD	1	
	5311010-10	. SKIN-RH LWR CTR FWD	1	
-13	5311010-11	. SKIN-LH LWR CTR AFT	1	
	5311010-12	. SKIN-RH LWR CTR AFT	1	
-14	5311010-21	. SKIN-BOTTOM CTR	1	
-15	5311010-13	. SKIN-LH LWR AFT	1	
-16	5311010-22	. SKIN-BOTTOM AFT	1	
-17	5311010-14	. SKIN-RH LWR AFT	1	
-18	5312045-13	. TIP-DORSAL FWD	1	
-19	SEE FIG 26	. SKIN-DORSAL	1	
-20	CM3575-1	. SEAL-MOISTURE DRAIN	4	A
	CM3575-2	. SEAL-MOISTURE DRAIN	4	B

% THIS PART MUST HAVE PRESSURIZATION SEALANT APPLIED UPON INSTALLATION TO AIRCRAFT SEE MISCELLANEOUS BULK ITEMS FOR LISTING OF AVAILABLE SEALANT COMPOUNDS

A---340-0001 THRU 340-0166
B---340-0167 & ON
C---340-0001 THRU 340-0300
D---340-0301 & ON

FUSELAGE

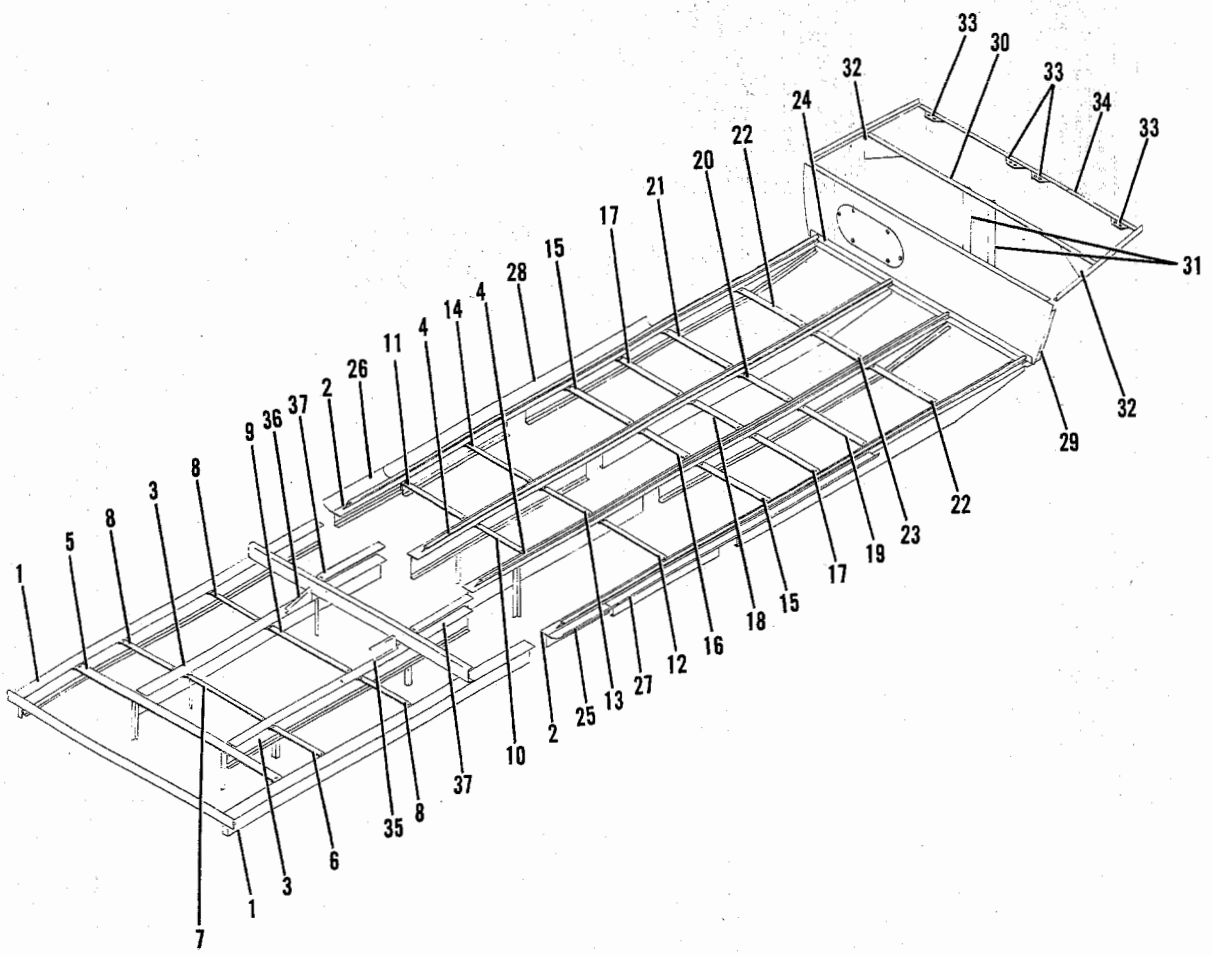

14113003

Figure 17. Floorboard Supports Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
17 -		FLOORBOARD SUPPORTS INSTALLATION	NP	
-1	5311060-3	. SEAT RAIL ASSY-LH FWD OUTBD	1	
	5311060-4	. SEAT RAIL ASSY-RH FWD OUTBD	1	
-2	5311060-5	. SEAT RAIL ASSY-LH AFT OUTBD	1	G
	5311060-32	. SEAT RAIL ASSY-LH AFT OUTBD	1	H
	5311060-6	. SEAT RAIL ASSY-RH AFT OUTBD	1	G
	5311060-33	. SEAT RAIL ASSY-RH AFT OUTBD	1	H
	5311066-3	. . RAIL-SEAT AFT	2	G
	5311066-5	. . RAIL-SEAT AFT	2	H
-3	5311065-3	. SEAT RAIL ASSY-LH FWD INBD	1	
	5311065-4	. SEAT RAIL ASSY-RH FWD INBD	1	
-4	5311065-5	. SEAT RAIL ASSY-LH AFT	1	G
	5311065-51	. SEAT RAIL ASSY-LH AFT	1	H
	5311065-6	. SEAT RAIL ASSY-RH AFT FSD 5311065-46	1	A
	5311065-46	. SEAT RAIL ASSY-RH AFT	1	B
	5311065-52	. SEAT RAIL ASSY-RH AFT	1	H
	5311066-2	. . RAIL-SEAT AFT LH & RH	2	G
	5311066-4	. . RAIL-SEAT AFT LH & RH	2	H
-5	5311060-13	. TEE STA 111.00	1	
-6	5311070-45	. SUPPORT ASSY-LH STA 117.90	1	J
		ATTACHING PARTS		
	MS27039-1-08	. SCREW	2	
		---*---		
-7	5311070-3	. SUPPORT ASSY-CTR STA 118.10	1	E
	5311070-34	. SUPPORT ASSY-CTR STA 118.10	1	F
		ATTACHING PARTS		
	MS27039-1-08	. SCREW	2	
		---*---		
-8	5311070-20	. SUPPORT ASSY-LH & RH STA 117.90 RH & 132.00 LH & RH	3	E
	5311070-40	. SUPPORT ASSY-LH & RH STA 117.90 RH & 132.00 LH & RH	3	F
		ATTACHING PARTS		
	MS27039-1-08	. SCREW	2	
		---*---		
-9	5311070-2	. SUPPORT ASSY-CTR STA 132.00	1	E
	5311070-34	. SUPPORT ASSY-CTR STA 132.00	1	K
	5311070-44	. SUPPORT ASSY-CTR STA 132.00	1	L
		ATTACHING PARTS		
	MS27039-1-08	. SCREW	2	
		---*---		
-10	5311070-5	. SUPPORT ASSY-CTR STA 163.85	1	E
	5311070-38	. SUPPORT ASSY-CTR STA 163.85	1	F
		ATTACHING PARTS		
	MS24694S50	. SCREW	2	
		---*---		
-11	5311070-13	. SUPPORT ASSY-RH STA 163.85	1	E
	5311070-36	. SUPPORT ASSY-RH STA 163.85	1	F
		ATTACHING PARTS		
	MS24694S50	. SCREW	2	
		---*---		
-12	5311070-14	. SUPPORT ASSY-LH STA 175.10	1	E
	5311070-36	. SUPPORT ASSY-LH STA 175.10	1	F
		ATTACHING PARTS		
	MS27039-1-08	. SCREW	2	
		---*---		
-13	5311070-5	. SUPPORT ASSY-CTR STA 175.10	1	E
	5311070-38	. SUPPORT ASSY-CTR STA 175.10	1	F
		ATTACHING PARTS		
	MS24694S50	. SCREW	2	
		---*---		
-14	5311070-13	. SUPPORT ASSY-RH STA 175.10	1	E
	5311070-36	. SUPPORT ASSY-RH STA 175.10	1	F
		ATTACHING PARTS		
	MS24694S50	. SCREW	2	
		---*---		
-15	5311070-14	. SUPPORT ASSY-LH & RH STA 192.00	2	F
	5311070-36	. SUPPORT ASSY-LH & RH STA 192.00	2	F
		ATTACHING PARTS		
	MS27039-1-08	. SCREW	2	
		---*---		
-16	5311070-4	. SUPPORT ASSY-CTR STA 192.00	1	F
	5311070-38	. SUPPORT ASSY-CTR STA 192.00	1	F
		ATTACHING PARTS		
	MS27039-1-08	. SCREW	2	
		---*---		
-17	5311070-13	. SUPPORT ASSY-LH & RH STA 200.25	2	E
	5311070-36	. SUPPORT ASSY-LH & RH STA 200.25	2	F
		ATTACHING PARTS		
	MS24694S50	. SCREW	2	
		---*---		
-18	5311070-5	. SUPPORT ASSY-CTR STA 200.25	1	E
	5311070-38	. SUPPORT ASSY-CTR STA 200.25	1	F
		ATTACHING PARTS		
	MS24694S50	. SCREW	2	
		---*---		
-19	5311070-14	. SUPPORT ASSY-LH STA 211.16	1	E
	5311070-36	. SUPPORT ASSY-LH STA 211.16	1	F
		ATTACHING PARTS		
	MS27039-1-08	. SCREW	2	
		---*---		
-20	5311070-5	. SUPPORT ASSY-CTR STA 211.16	1	E
	5311070-38	. SUPPORT ASSY-CTR STA 211.16	1	F
		ATTACHING PARTS		
	MS24694S50	. SCREW	2	
		---*---		

CONTINUED

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
17 -21	5311070-13	. SUPPORT ASSY-RH STA 211.16	1	E
	5311070-36	. SUPPORT ASSY-RH STA 211.16	1	F
		ATTACHING PARTS		
	MS24694S50	. SCREW	2	
		---*---		
-22	5311070-13	. SUPPORT ASSY-LH & RH STA 221.00	2	E
	5311070-36	. SUPPORT ASSY-LH & RH STA 221.00	2	F
		ATTACHING PARTS		
	MS24694S50	. SCREW	2	
		---*---		
-23	5311070-5	. SUPPORT ASSY-CTR STA 221.00	1	E
	5311070-38	. SUPPORT ASSY-CTR STA 221.00	1	F
		ATTACHING PARTS		
	MS24694S50	. SCREW	2	
		---*---		
-24	5311060-25	. SUPPORT-AFT	1	
		ATTACHING PARTS		
	MS27039-1-08	. SCREW	8	
	S1477-08	. NUT-CLIP CIN	8	
		---*---		
-25	5311070-11	. FAIRING-LH	1	
-26	5311070-12	. FAIRING-RH	1	E
	5311070-32	. FAIRING-RH	1	F
		ATTACHING PARTS		
	MS35206-244	. SCREW	7	F
		---*---		
-27	5311070-19	. FAIRING-LH	1	
-28	5311070-10	. FAIRING-RH	1	E
	5311070-33	. FAIRING-RH	1	F
-29	5311075-2	. PANEL ASSY-AFT FSO 5311075-23	1	C
	5311075-23	. PANEL ASSY-AFT	1	D
	5311075-24	. PANEL ASSY-AFT USE WITH AIRCONDITIONING	1	
-30	5311075-10	. ANGLE-AFT CTR	1	
		ATTACHING PARTS		
	MS27039-1-08	. SCREW	4	
	MS21044N3	. NUT	4	
		---*---		
-31	5311075-12	. TEE-AFT CTR	2	
-32	5311075-19	. GUSSET-LH AFT	1	
	5311075-19	. GUSSET-RH AFT	1	
-33	5311075-20	. TAB-AFT	4	
-34	5311075-26	. REINFORCEMENT-AFT	1	
-35	5311295-12	. SUPPORT ASSY-FLOOR AIRCONDITIONING	1	
-36	5311295-17	. SUPPORT-FLOORBOARD PILOT & COPILOT SEAT	1	
-37	5311295-3	. SUPPORT-ASSY-FLOORBOARD PILOT & COPILOT SEAT	2	

A---340-0001 THRU 340-0014
B---340-0015 & THRU 340-0300
C---340-0001 THRU 340-0049
D---340-0050 & ON
E---340-0001 THRU 340-0174
F---340-0175 & ON
G---340-0001 THRU 340-0300
H---340-0301 & ON
J---340-0001 & ON
K---340-0175 THRU 340-0315
L---340-0316 & ON

FUSELAGE

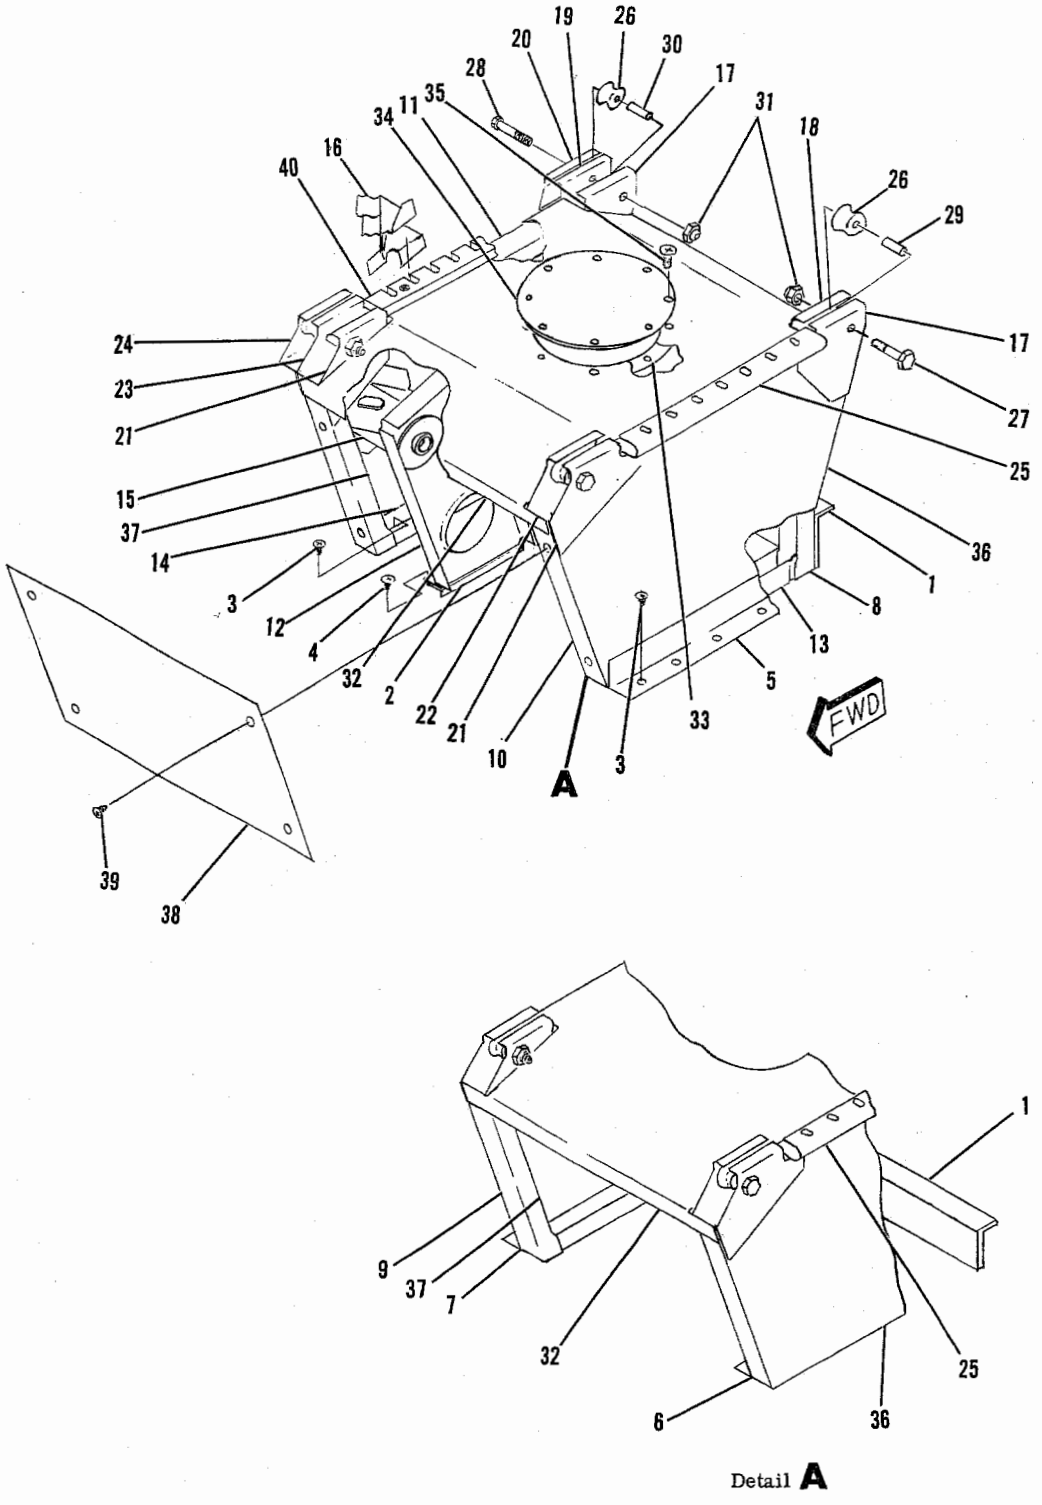

Figure 18. Front Seat Supports Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
18 -		FRONT SEAT SUPPORT INSTALLATION	NP	
-1	5311295-14	. CHANNEL ASSY-AFT	1	
		ATTACHING PARTS		
	MS27039-1-08	. SCREW	AR	
		---*---		
-2	5311295-10	. SUPPORT ASSY-PILOTS SEAT	1	
	5311296-1	. SUPPORT ASSY-PILOTS SEAT	1	
	5311296-2	. SUPPORT ASSY-COPILOTS SEAT	1	
		ATTACHING PARTS		
-3	MS27039-1-08	. SCREW	AR	
-4	MS27039-1-10	. SCREW	3	
		---*---		
-5	5311296-5	. . ANGLE-PILOT SEAT	1	
-6	5311296-9	. . ANGLE-COPILOT SEAT	1	
-7	5311296-6	. . ANGLE-COPILOT SEAT	1	
-8	5015020-1	. . CHANNEL-AFT PILOT & COPILOT	2	
-9	5015020-7	. . ANGLE ASSY-FWD PILOT	1	
	NAS77A8-6	. . . BUSHING	1	
	5015020-3	. . CHANNEL-FWD COPILOT	1	
-10	5015020-5	. . ANGLE ASSY	1	
-11	5015020-8	. . CHANNEL-UPR	2	
-12	5015020-1	. . BRACKET ASSY-PILOT	1	
	NAS77A8-6	. . . BUSHING	1	
-13	5015019-1	. . CHANNEL-LWR LH	1	
-14	5015019-3	. . CHANNEL-LWR RH PILOT SEAT	1	
	5015019-2	. . CHANNEL-LWR RH COPILOT SEAT	1	
-15	5015078-2	. . BRACKET-PILOT SEAT	2	
-16	5015103-1	. . BRACKET ASSY-PILOT SEAT	1	
-17	5015073-1	. . BRACKET-AFT LH PILOT SEAT	1	A
	5015073-7	. . BRACKET-AFT LH PILOT SEAT	1	B
	5015073-1	. . BRACKET AFT LH COPILOT SEAT	1	
-18	5015073-1	. . BRACKET-AFT RH PILOT SEAT LH SIDE & COPILOT SEAT LH & RH SIDE	2	
-19	5015073-5	. . BRACKET-AFT RH PILOT SEAT RH SIDE	1	
-20	5311296-4	. . BRACKET-AFT RH PILOT SEAT RH SIDE	1	
-21	5015073-3	. . BRACKET-FWD LH PILOT SEAT	1	A
	5015073-8	. . BRACKET-FWD LH PILOT SEAT	1	B
	5015073-3	. . BRACKET-FWD LH COPILOT SEAT	1	
-22	5015073-4	. . BRACKET-FWD RH PILOT SEAT LH SIDE & COPILOT SEAT LH & RH SIDE	2	
-23	5015073-6	. . BRACKET-FWD RH PILOT SEAT RH SIDE	1	
-24	5311296-3	. . BRACKET-FWD RH PILOT SEAT RH SIDE	1	
-25	5015012-1	. . LOCK-SEAT ADJUST STANDARD SEAT	1	A
-26	CM2941-1	. . ROLLER	4	
		ATTACHING PARTS		
-27	AN3-11A	. . BOLT	1	
-28	AN3-17A	. . BOLT-PILOT SEAT RH SIDE	1	
-29	CM2942-1	. . BUSHING	1	
-30	NAS43DD3-39	. . SPACER-PILOT SEAT RH SIDE	1	
-31	MS21044L3	. . NUT	1	
		---*---		
-32	5015084-7	. . COVER ASSY-PILOT SEAT	1	
	5015084-2	. . COVER ASSY-COPILOT SEAT	1	
-33	5015084-3	. . . DOUBLER ASSY	1	
-34	5015084-4	. . . PLATE-COVER	1	
		ATTACHING PARTS		
-35	MS35206-245	. . . SCREW	8	
		---*---		
-36	5015008-3	. . WEB-LH PILOT SEAT	1	
	5015008-2	. . WEB-LH COPILOT SEAT	1	
-37	5015008-5	. . WEB-RH PILOT SEAT	1	
	5015008-4	. . WEB-RH COPILOT SEAT	1	
-38	5311296-7	. . COVER-FRONT PILOT SEAT	1	
	5311296-8	. . COVER-FRONT COPILOT SEAT	1	
	SEE FIG 46	. . COVER-FRONT COPILOTS SEAT USED WITH FIRE EXTINGUISHER	REF	C
		ATTACHING PARTS		
-39	MS35206-263	. . SCREW	4	
		---*---		
-40	0812757-1	. . LOCK-SEAT ADJUSTMENT MECHANICAL & ELECTRICAL SEAT	1	A
	0812757-16	. . LOCK-SEAT ADJUSTMENT STANDARD, MECHANICAL & ELECTRICAL SEAT	1	B
		ATTACHING PARTS		
	MS24694S54	. . SCREW	2	
	MS21045L3	. . NUT	2	
		---*---		

A---340-0001 THRU 340-0300
B---340-0301 & ON
C---340AC006 & ON

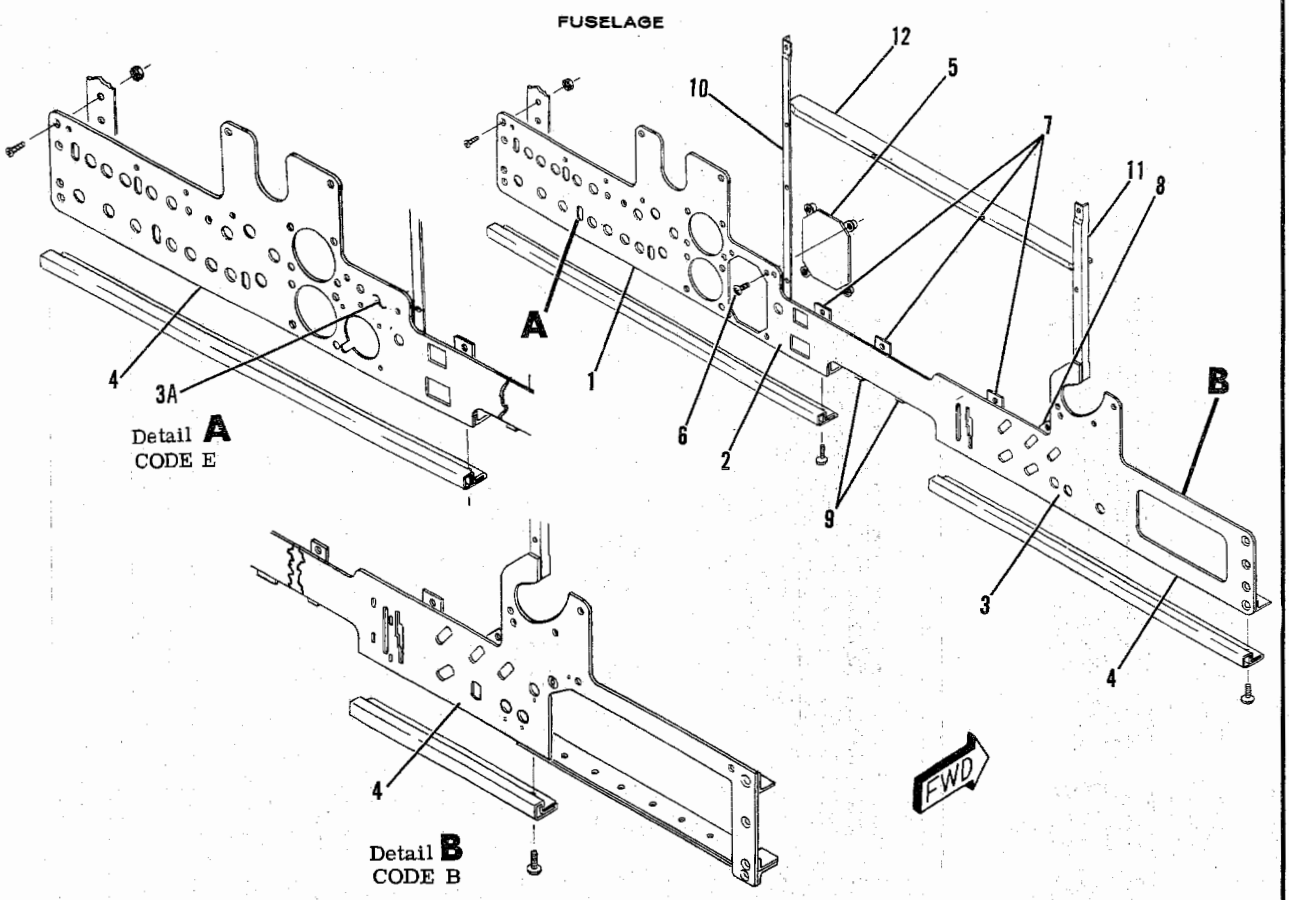

A14192024
14192004
B14192021

Figure 19. Stationary Instrument Panel Structure Installation

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
19 -			STATIONARY INSTRUMENT PANEL STRUCTURE INSTALLATION	NP	
-1	5314105-46	*	. PLACARD-LH	1	
-2	5314105-47	*	. PLACARD-CTR	1	
-3	5314105-22	*	. PLACARD-RH	1	
-3A	5314105-48	*	. PLACARD-CABIN PRESSURIZE DEPRESSURIZE	1	F
	5314105-75	*	. PLACARD-CABIN PRESSURIZE DEPRESSURIZE	1	G
	5314105-42		. PANEL ASSY	1	A
	5314105-52		. PANEL ASSY	1	B
	5314105-68		. PANEL ASSY	1	C
	5314105-74		. PANEL ASSY	1	E
-4	5314105-43		. . PANEL	1	A
	5314105-53		. . PANEL	1	B
	5314105-69		. . PANEL	1	C
	5314105-73		. . PANEL	1	E
-5	5314105-28		. . PLATE ASSY	1	D
			ATTACHING PARTS		
-6	MS24693S5		. . SCREW	4	
			---*---		
	5314105-48	*	. . PLACARD	1	
-7	5314105-33		. . TAB ASSY-NUTPLATE	3	
-8	5314105-30		. . TAB ASSY-NUTPLATE	1	
-9	5314105-45		. . TAB ASSY-NUTPLATE	2	
-10	5314105-36		. . ANGLE ASSY-LH	1	
-11	5314105-38		. . ANGLE ASSY-RH	1	
-12	5314105-40		. . ANGLE ASSY-UPR	1	

* PLACARDS FOR REPLACEMENT OF SILKSCREEN LETTERING

A---340-0001 THRU 340-0150
B---340-0151 THRU 340-0300
C---340-0301 THRU 340-0500
D---340-0001 THRU 340-0500
E---340-0501 & ON
F---340-0301 THRU 340-0513
G---340-0514 & ON

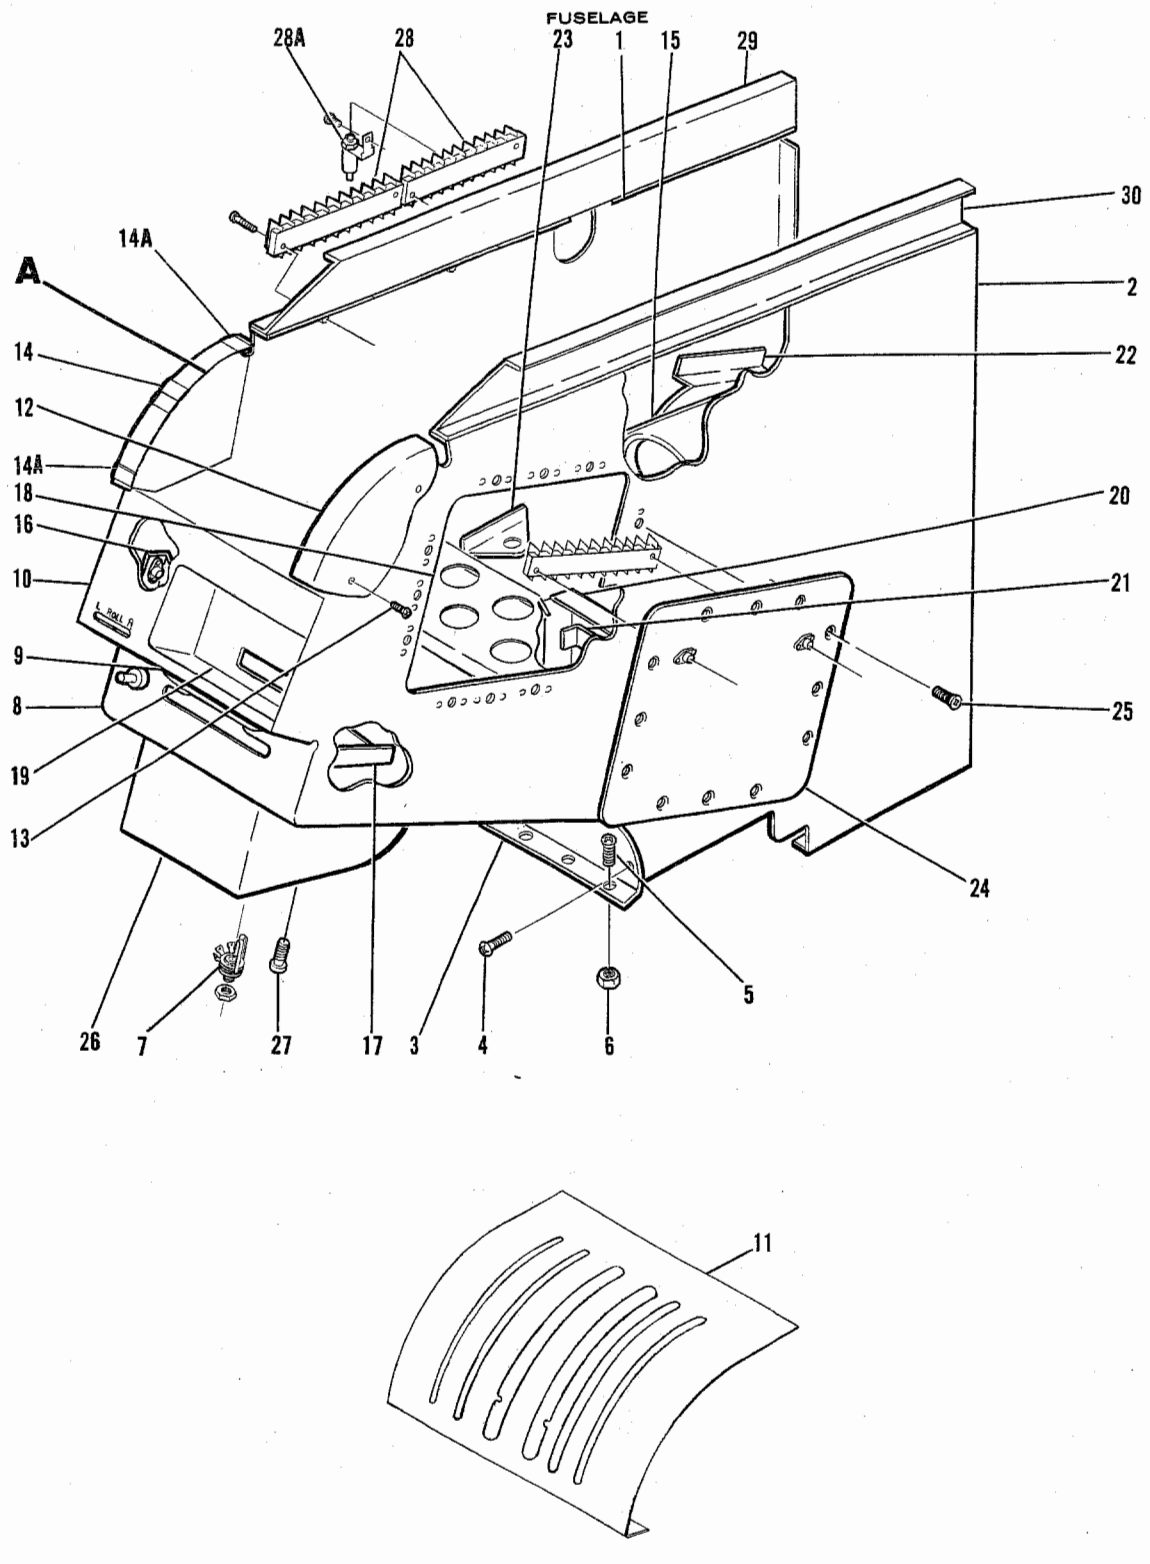

Figure 20. Control Pedestal Structure Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
20 -		CONTROL PEDESTAL STRUCTURE INSTALLATION	NP	
	5318500-2	. PEDESTAL STRUCTURE ASSY	1	
-1	5311300-1	. . SIDE ASSY-LH	1	
-2	5311300-2	. . SIDE ASSY-RH	1	
-3	5311300-15	. . COVER ASSY-LWR FRONT	1	
		ATTACHING PARTS		
-4	MS24694S4	. . SCREW	12	
-5	MS27039-1-07	. . SCREW	3	
-6	S1477-3	. . NUT	3	
		---*---		
-7	S1102-1	. . JACK-MICROPHONE	1	
-8	5011555-20	. . BEARING ASSY	1	
	S1004-44A	. . . BEARING	1	
	FAD250	. . . BEARING	SPLO 1	
-9	5015064-3	. . GUIDE BLOCK ASSY	1	
-10	5011555-3	. . COVER ASSY STANDARD	1	B
	5011555-5	. . COVER ASSY PROP SYNCH STANDARD	1	A
	5011555-13	. . COVER ASSY NAV-O-MATIC 400A & PROP SYNCH	1	A
	5011555-22	. . COVER ASSY YAW DAMPENER & 400A AUTOPILOT	1	B
	5011555-25	. . COVER ASSY 400A AUTOPILOT	1	
	5011555-27	. . COVER ASSY YAW DAMPER	1	B
	5011508-21	. . . PLACARD-ROLL	1	
	MST405N	. . . SWITCH PROP SYNC	ALEM 1	A
	7401	. . . SWITCH PROP SYNC ALT FOR MST405N	CANK 1	A
-11	5015106-4	. . COVER ASSY-QUADRANT	1	
-12	5015108-6	. . PANEL-LH	1	A
	5318510-1	. . PANEL-LH	1	B
	5015108-8	. . PANEL-RH	1	
		ATTACHING PARTS		
-13	S1021Z6-6B	. . SCREW	2	
		---*---		
	5015107-1	. . RETAINER-LH PANEL	1	
	5015107-2	. . RETAINER-RH PANEL	1	
-14	0861161-1	. . MARKER	1	C
	0861108-5	. . MARKER	2	D
-14A	0861108-5	. . MARKER	2	E
-15	5311300-10	. . BULKHEAD-AFT	1	
-16	5011508-8	. . BRACKET ASSY-AILERON POINTER AFT	1	
	S1004-44A	. . . BEARING	1	
	5011508-9	. . BRACKET-AILERON POINTER FWD	1	
		ATTACHING PARTS		
	MS27039-0805	. . SCREW	2	
	AN960-8L	. . WASHER	2	
	MS21083N08	. . NUT	2	
		---*---		
-17	5011508-27	. . BRACKET ASSY-AILERON POINTER	1	
	FAD250	. . . BEARING	SPLO 1	
-18	5011508-29	. . BRACKET-ENGINE CONTROLS	1	
-19	5015062-2	. . BRACKET-AUTOPILOT CONTROL	1	
-20	5311300-5	. . BRACKET ASSY-AILERON TRIM SPROCKET	1	F
	5311300-17	. . BRACKET ASSY-AILERON TRIM SPROCKET	1	G
	S1004-44A	. . . BEARING	1	
-21	5318500-4	. . GUARD-CHAIN	1	
-22	5311300-8	. . BRACKET-PULLEY ELEVATOR TRIM	1	
-23	5318500-6	. . BRACKET	1	
-24	5015061-2	. PLATE-COVER	1	
		ATTACHING PARTS		
-25	MS24694S4	. SCREW	12	
		---*---		
-26	5318509-1	. BRACKET ASSY-ALTERNATE AIR CONTROL	1	
		ATTACHING PARTS		
-27	MS27039-0808	. SCREW	8	
		---*---		
-28	353-11-10-001	. BLOCK-TERMINAL TB5 & TB6	CIN 2	
	363-11-10-010	. STRIP-MARKER	CIN 2	
		ATTACHING PARTS		
	MS35206-216	. SCREW	2	
		---*---		
-28A	5318108-3	. MOUNT-HEATER DIODE	1	H
	IN1201	. DIODE-HEATER	1	H
-29	5360901-18	. CONTROL SUPPORT ASSY-LH	1	
-30	5360901-21	. CONTROL SUPPORT ASSY-RH	1	

A---340-0001 THRU 340-0150
B---340-0151 & ON
C---340-0001 THRU 340-0024
D---340-0025 THRU 340-0150
E---340-0065 THRU 340-0150
F---340-0001 THRU 340-0007
G---340-0008 & ON
H---340-0320 & ON

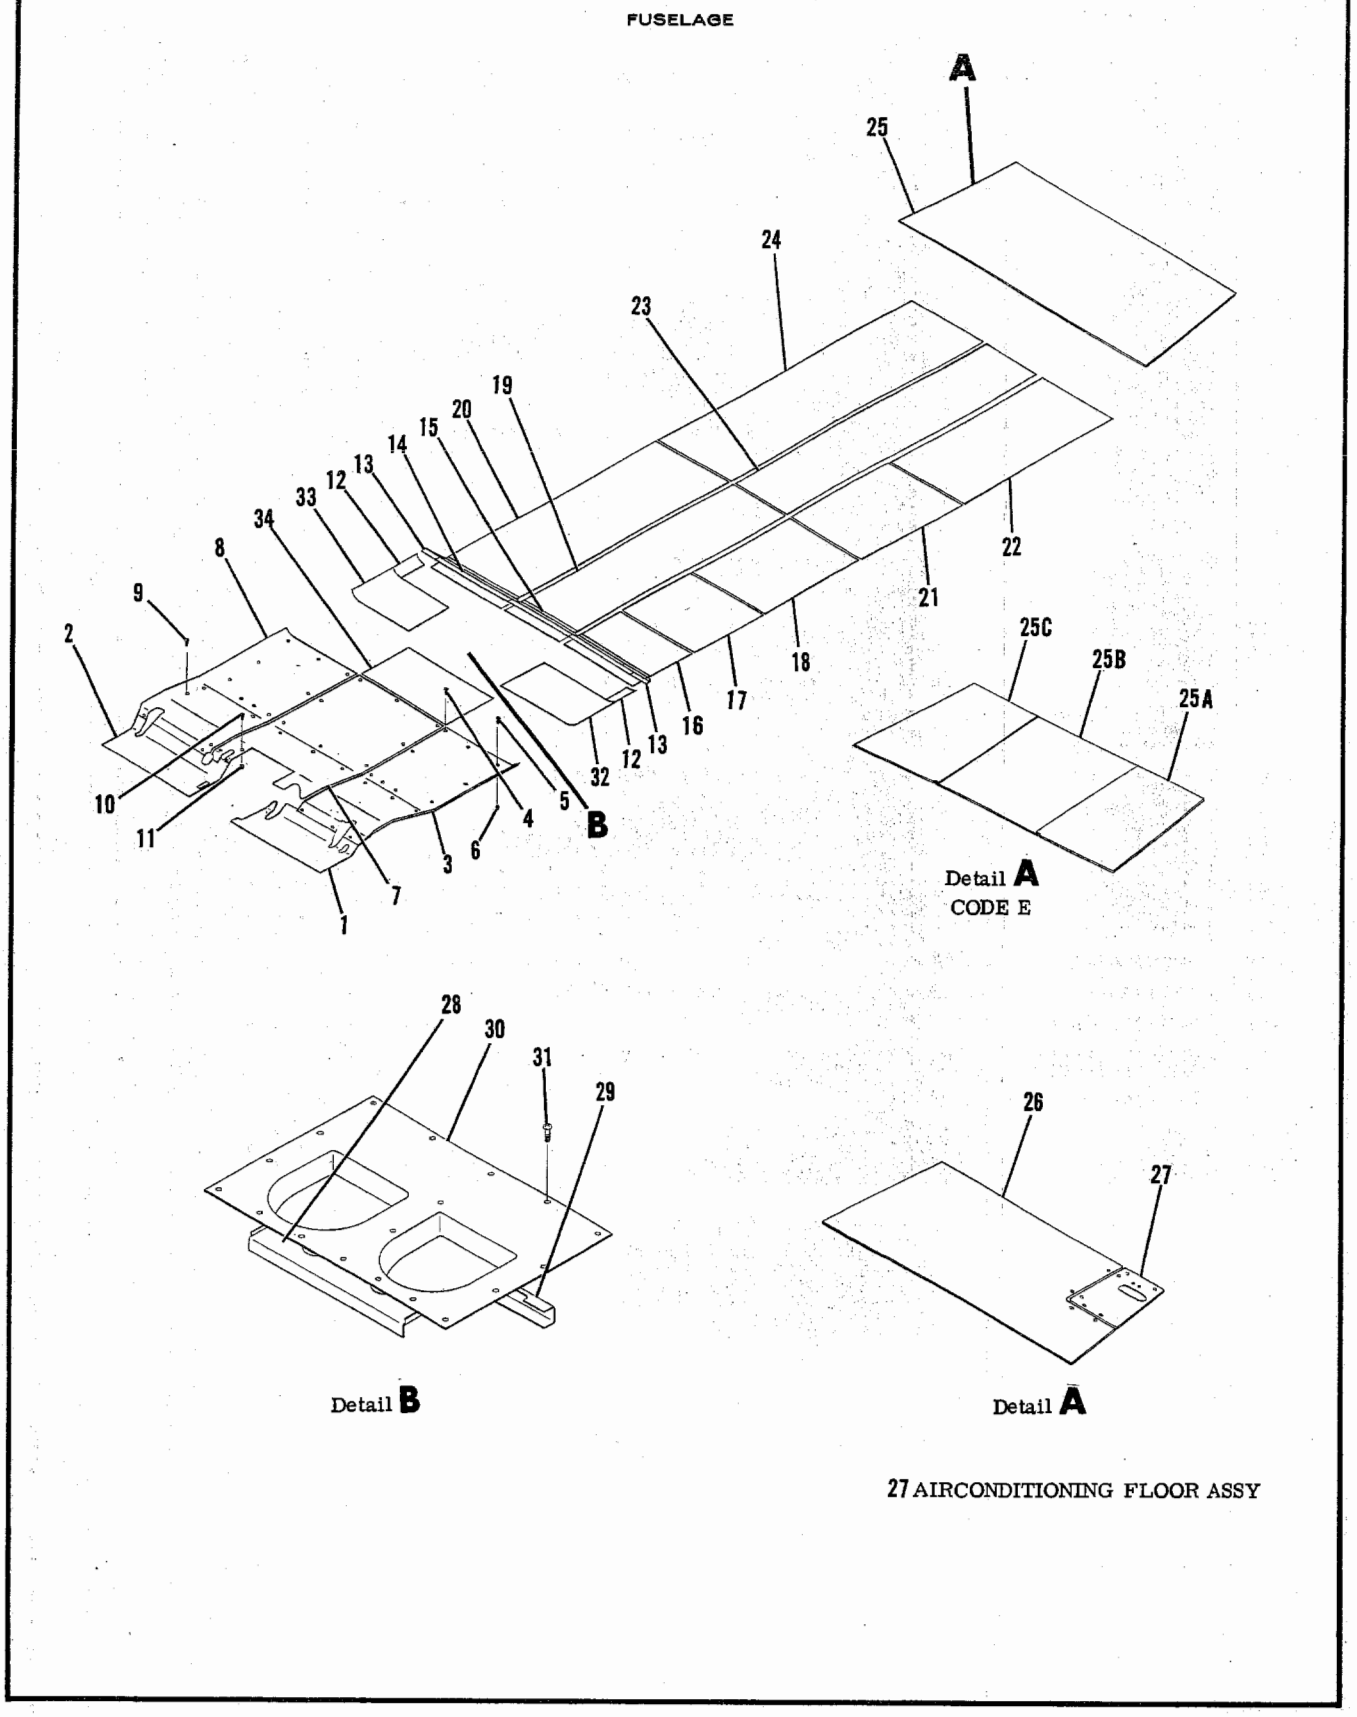

Figure 21. Cabin Floorboards Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
21 -		CABIN FLOORBOARDS INSTALLATION	NP	
-1	5311534-9	. PANEL-LH	1	
		ATTACHING PARTS		
	S1021Z8-7	. SCREW	2	
	S1477-3	. NUT TIN	2	
		---*---		
-2	5311534-10	. PANEL-RH	1	
		ATTACHING PARTS		
	S1021Z8-7	. SCREW	2	
	S1477-3	. NUT TIN	2	
		---*---		
-3	5311534-3	. FLOORBOARD ASSY-LH	1	
		ATTACHING PARTS		
-4	S1021Z8-7	. SCREW	AR	
-5	MS27039-0807	. SCREW	3	
-6	294672L	. NUT TIN	3	
	294671L	. NUT TIN	AR	
		---*---		
-7	5311534-6	. FLOORBOARD-CTR	1	
		ATTACHING PARTS		
	S1021Z8-7	. SCREW	AR	
	294671L	. NUT TIN	AR	
		---*---		
-8	5311534-2	. FLOORBOARD ASSY-RH	1	
		ATTACHING PARTS		
-9	MS27039-0807	. SCREW	2	
	294672L	. NUT TIN	2	
-10	S1021Z8-7	. SCREW	AR	
-11	294671L	. NUT TIN	AR	
		---*---		
-12	5311534-14	. FAIRING-RH	1	
		ATTACHING PARTS		
	MS27039-0807	. SCREW	4	
	294672L	. NUT TIN	4	
		---*---		
-13	5311070-23	. RAMP-LH OUTBD	1	
	5311070-24	. RAMP-RH OUTBD		
		ATTACHING PARTS		
	MS35206-243	. SCREW	3	
		---*---		
-14	5311070-25	. RAMP-LH & RH INTERMEDIATE	2	
-15	5311070-22	. RAMP-INBD	1	
		ATTACHING PARTS		
	MS27039-0808	. SCREW	7	
	S1477-08	. NUT TIN	7	
		---*---		
-16	5311071-19	. FLOORBOARD-LH	1	
		ATTACHING PARTS		
	MS27039-1-08	. SCREW	AR	
	S1477-3	. NUT-CLIP ON CIN	AR	
		---*---		
-17	5311071-20	. FLOORBOARD-LH	1	
		ATTACHING PARTS		
	MS27039-1-08	. SCREW	AR	
		---*---		
-18	5311071-21	. FLOORBOARD-LH	1	A
	5311071-32	. FLOORBOARD-LH	1	B
		ATTACHING PARTS		
	MS27039-1-08	. SCREW	AR	
		---*---		
-19	5311071-16	. FLOORBOARD-CTR	1	A
	5311071-31	. FLOORBOARD-CTR	1	B
		ATTACHING PARTS		
	MS27039-1-08	. SCREW	AR	
		---*---		
-20	5311071-15	. FLOORBOARD-RH	1	A
	5311071-30	. FLOORBOARD-RH	1	B
		ATTACHING PARTS		
	MS27039-1-08	. SCREW	AR	
		---*---		
-21	5311071-22	. FLOORBOARD-LH	1	
		ATTACHING PARTS		
	MS27039-1-08	. SCREW	AR	
		---*---		
-22	5311071-23	. FLOORBOARD-LH	1	
		ATTACHING PARTS		
	MS27039-1-08	. SCREW	AR	
		---*---		
-23	5311071-18	. FLOORBOARD-CTR	1	
		ATTACHING PARTS		
	MS27039-1-08	. SCREW	AR	
		---*---		
-24	5311071-17	. FLOORBOARD-RH	1	
		ATTACHING PARTS		
	MS27039-1-08	. SCREW	AR	
		---*---		

CONTINUED

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
21 -25	5311075-13	. FLOORBOARD ASSY-AFT FSO 5311075-29	1	C
	5311075-29	. FLOORBOARD-AFT	1	D
		ATTACHING PARTS		
	MS27039-1-07	. SCREW	AR	
	S1477-3	. NUT-CLIP ON . . . . . CIN	AR	
		---*---		
-25A	5311075-31	. FLOORBOARD-AFT LH	1	E
-25B	5311075-32	. FLOORBOARD ASSY-CTR	1	E
-25C	5311075-30	. FLOORBOARD-AFT RH	1	E
		ATTACHING PARTS		
	MS27039-1-07	. SCREW	AR	E
	294617L	. NUT-CLIP-ON . . . . . CIN	AR	E
		---*---		
-26	53C0927-19	. FLOORBOARD-AFT USED WITH AIRCONDITIONING	1	
		ATTACHING PARTS		
	MS27039-1-07	. SCREW	AR	
		---*---		
-27	SEE FIG 131	. FLOOR ASSY USED WITH AIRCONDITIONING	1	
-28	5316002-11	. PAN ASSY-FUEL SELECTOR	1	
-29	5316002-13	. SUPPORT ASSY-FUEL SELECTOR PAN	1	
-30	5316002-2	. COVER-FUEL SELECTOR PAN	1	
		ATTACHING PARTS		
-31	MS27039-1-09	. SCREW	18	
		---*---		
-32	5311071-25	. FLOORBOARD-LH PILOT SEAT	1	F
	5311071-33	. FLOORBOARD-LH PILOT SEAT	1	G
-33	5311071-26	. FLOORBOARD-RH COPILOT SEAT	1	
		ATTACHING PARTS		
	MS27039-1-08	. SCREW	11	
		---*---		
-34	5311295-18	. FLOORBOARD-CTR PILOT & COPILOT SEAT	1	

A---340-0001 THRU 340-0174
B---340-0175 & ON
C---340-0001 THRU 340-0047
D---340-0048 THRU 340-0091
E---340-0092 & ON
F---340-0001 THRU 340-0210
G---340-0211 & ON

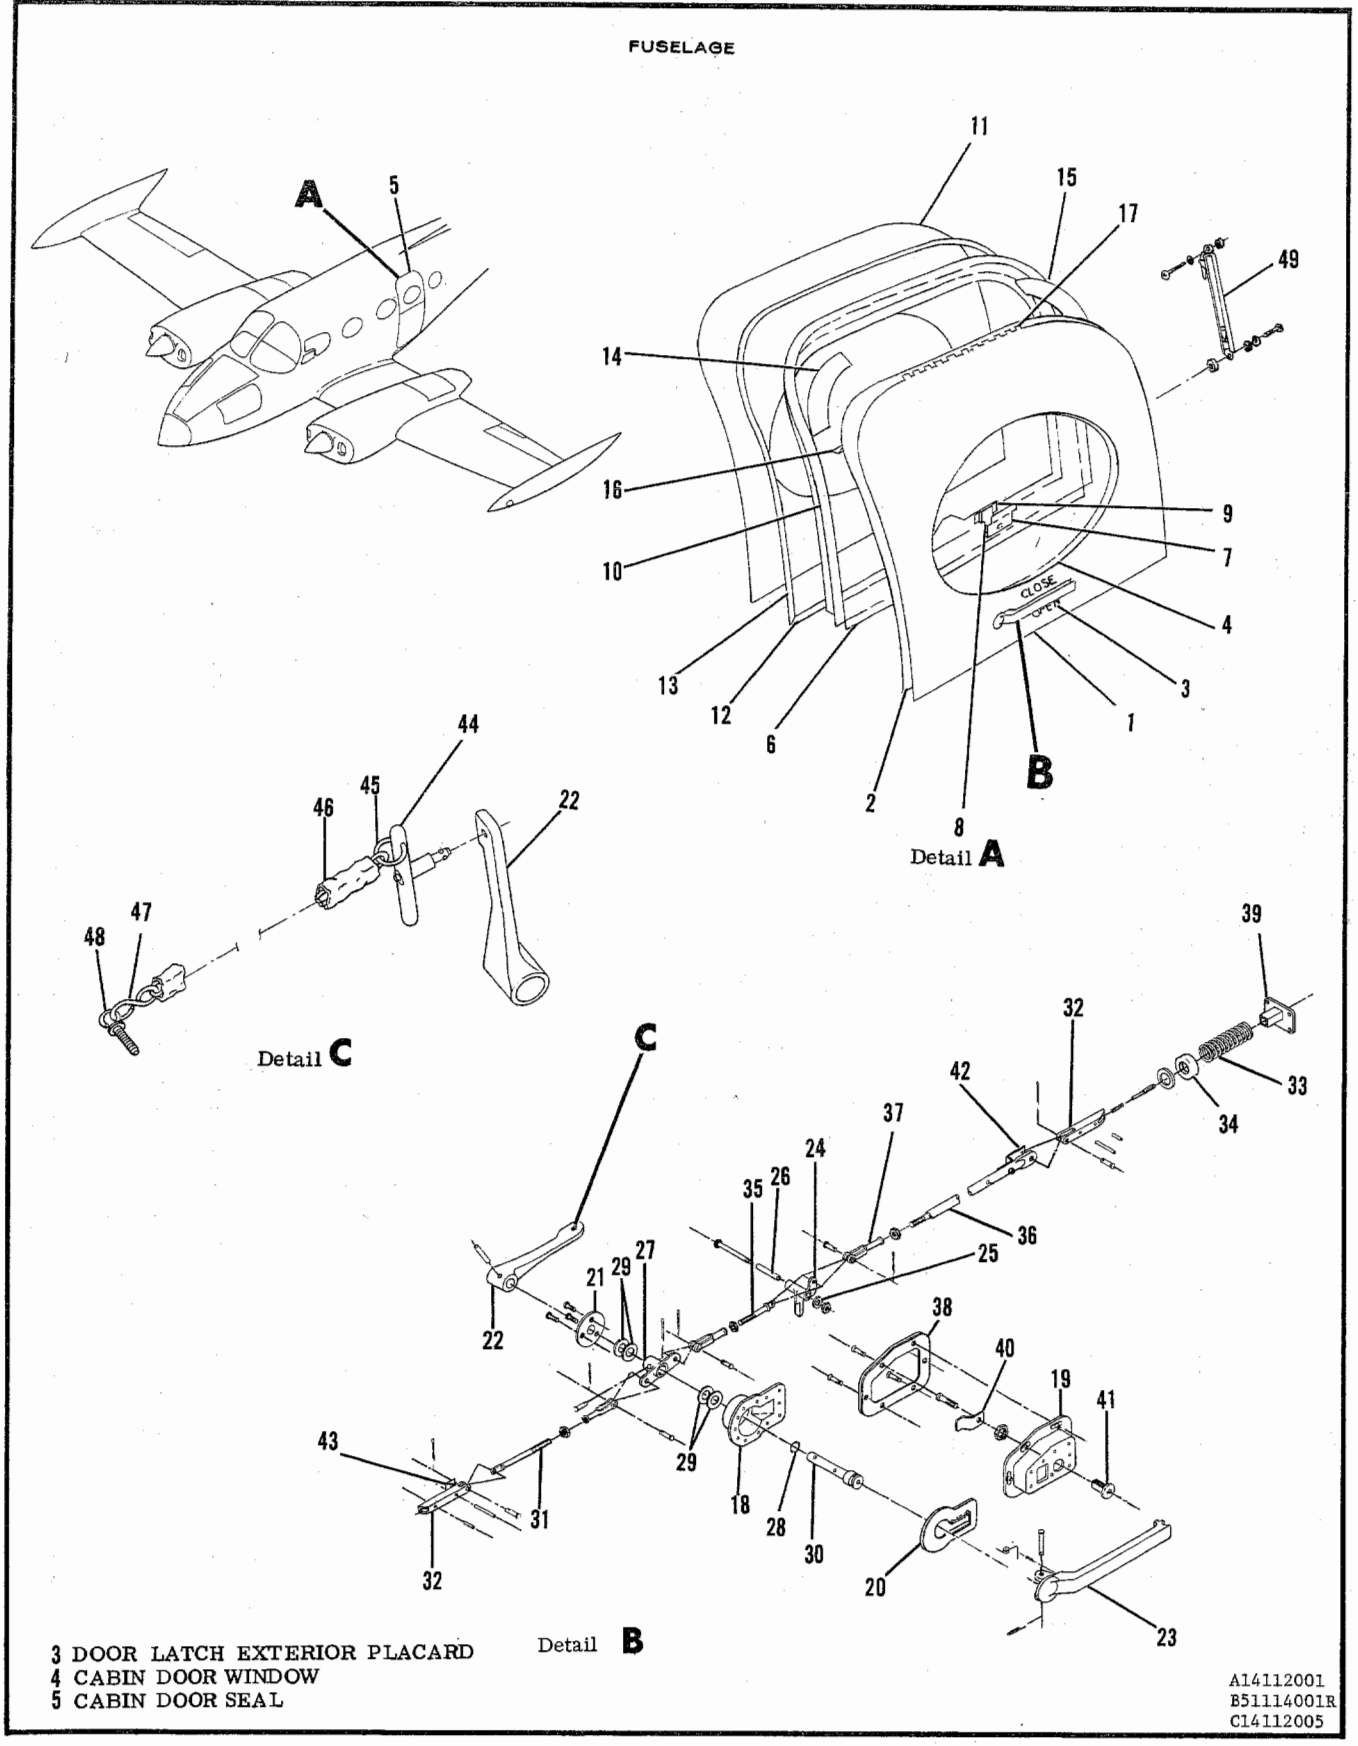

Figure 22. Upper Cabin Door Installation

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
22 -			UPPER CABIN DOOR INSTALLATION	NP	
	5311220-1		. DOOR ASSY	1	A
	5311220-14		. DOOR ASSY	1	B
-1	5311220-3		. . SKIN	1	A
	5311220-15		. . SKIN	1	B
-2	5311220-4		. . DOUBLER	1	A
	5311220-16		. . DOUBLER	1	B
-3	SEE FIG 1		. . PLACARD-DOOR LATCH EXTERIOR	1	
-4	SEE FIG 25		. . WINDOW-CABIN DOOR	1	
-5	SEE FIG 15		. . SEAL-CABIN DOOR	1	
	5311220-7	###	. . FRAME ASSY-LWR	1	
-6	5311220-8	###	. . . FRAME-LWR	1	
-7	5111504-16		. . . BRACKET	1	
-8	5111504-37		. . . RUB BLOCK	1	
-9	5111504-36		. . . BRACKET	1	
-10	5311220-6		. . FRAME	1	
-11	5311220-5		. . CLOSURE-CABIN DOOR WINDOW	1	
-12	5311220-10	###	. . STRIKER-LWR	1	
-13	5311220-11	###	. . STRIKER	1	
-14	5311220-13	###	. . FILLER-FWD	1	
-15	5311220-12	###	. . FILLER-AFT	1	
-16	5311220-9		. . STIFFENER	1	
-17	5311236-3		. . HINGE-UPR	1	
-18	5111513-1		. . HOUSING-DOOR LATCH HANDLE	1	A
-19	5111514-1		. . HOUSING-DOOR LATCH LOCK	1	A
	0811894-1		. . HOUSING ASSY	1	B
	5311553-1		. . SUPPORT ASSY	1	B
-20	5111504-33		. . RUB PLATE-DOOR LATCH	1	A
	0811870-1		. . SCUFF PLATE	1	B
			. . LATCH MECHANISM INSTALLATION	NP	
-21	5111521-1		. . . BASE ASSY-LATCH	1	
			ATTACHING PARTS		
	MS24694S4		. . . SCREW	3	
			---*---		
-22	5111559-2		. . . HANDLE-INNER	1	
			ATTACHING PARTS		
	NAS561CF6-16		. . . ROLL PIN	2	
			---*---		
-23	5111525-2		. . . HANDLE-OUTER	1	A
	0811893-7		. . . HANDLE-OUTER	1	B
	0811893-6		. . . HANDLE ASSY-OUTER ALT FOR 0811893-7	1	B
			ATTACHING PARTS		
	MS20392-2C49		. . . PIN	1	
	MS24665-168		. . . PIN-COTTER	1	
	5111520-1		. . . SPRING	1	
			---*---		
-24	5111567-1		. . . BELLCRANK ASSY	1	A
	5111567-5		. . . BELLCRANK ASSY	1	B
			ATTACHING PARTS		
	AN3H16A		. . . BOLT	1	A
	AN3H14A		. . . BOLT	1	B
			---*---		
-25	AN960C516L		. . . WASHER	2	
-26	S1003-80A		. . . BEARING	1	A
	S1003-87A		. . . BEARING	1	B
-27	5311226-1		. . . BELLCRANK ASSY	1	
			ATTACHING PARTS		
	MS20392-2C25		. . . PIN	1	
	MS24665-168		. . . PIN-COTTER	1	
			---*---		
-28	AN6227B10		. . . O-RING	1	
-29	AN960C816L		. . . WASHER	4	
-30	5111518-1		. . . SPINDLE	1	A
	5111518-3		. . . SPINDLE	1	B
-31	5311226-14		. . . LINK-FWD	1	
			ATTACHING PARTS		
	MS20392-2C13		. . . PIN	1	
	MS24665-168		. . . PIN-COTTER	1	
			---*---		
-32	5111545-6		. . . PIN ASSY-UPR	2	
			ATTACHING PARTS		
	MS20392-2C13		. . . PIN	1	
	MS24665-168		. . . PIN-COTTER	1	
			---*---		
-33	5111527-1		. . . SPRING	1	
	NAS561CF4-14		. . . ROLL PIN	1	
	AN960C816L		. . . WASHER	1	
-34	5111506-8		. . . CUP	1	
-35	5111516-2		. . . LINK-AFT	1	
			ATTACHING PARTS		
	MS20392-2C13		. . . PIN	1	
	MS24665-168		. . . PIN-COTTER	1	
			---*---		
-36	5311226-4		. . . TUBE ASSY	1	
			ATTACHING PARTS		
	MS20392-2C17		. . . PIN	1	
	MS24665-168		. . . PIN-COTTER	1	
			---*---		

CONTINUED

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
22 -37	AN486-3	. . . CLEVIS	1	
	AN316-4	. . . NUT	1	
-38	5111519-1	. . . COVER ASSY	1	A
	0811895-1	. . . COVER ASSY	1	B
		ATTACHING PARTS		
	MS24694S4	. . . SCREW	5	
		---*---		
	5111555-1	. . . . GASKET	1	A
	5111555-2	. . . . GASKET	1	B
-39	5111531-1	. . . GUIDE ASSY	2	
		ATTACHING PARTS		
	MS27039-0806	. . . SCREW	2	
	MS24694S4	. . . SCREW	2	
	AN960C8L	. . . WASHER	4	
	MS21044N08	. . . NUT	4	
		---*---		
-40	5011185-5	. . . CAM-CABIN DOOR LOCK	1	A
	5011185-9	. . . CAM-CABIN DOOR LOCK	1	B
-41	F6500H	. . . LOCK INCLUDES KEYS YTM	1	
-42	5111560-11	. . . INDICATOR-LATCH POSITION AFT	1	
-43	5111560-10	. . . INDICATOR-LATCH POSITION FWD	1	
		ATTACHING PARTS		
	MS35206-231	. . . SCREW-FWD INDICATOR	1	
	MS35206-232	. . . SCREW-AFT INDICATOR	1	
	AN960-6	. . . WASHER	1	
	MS21042L06	. . . NUT	1	
		---*---		
	5190016-2	. CHAIN ASSY-CABIN DOOR	1	
-44	5190016-5	. . PIN-LOCKING	1	
-45	5190016-4	. . RING	1	
-46	5190016-3	. . CHAIN	1	
-47	CM3220-1	. . S-HOOK	1	
-48	5011179-1	. . HOOK ASSY	1	
-49	5211185-2	. DOOR STOP ASSY	1	
		ATTACHING PARTS		
	MS27039-1-12	. SCREW	2	
	NAS43HT3-8	. SPACER	2	
	AN960-516	. WASHER	2	
	AN970-3	. WASHER	2	
		---*---		
		% THIS PART MUST HAVE PRESSURIZATION SEALANT APPLIED UPON INSTALLATION TO AIRCRAFT SEE MISCELLANEOUS BULK ITEMS FOR LISTING OF AVAILABLE SEALANT COMPOUNDS		
		A---340-0001 THRU 340-05D0 B---340-0501 & ON		

FUSELAGE

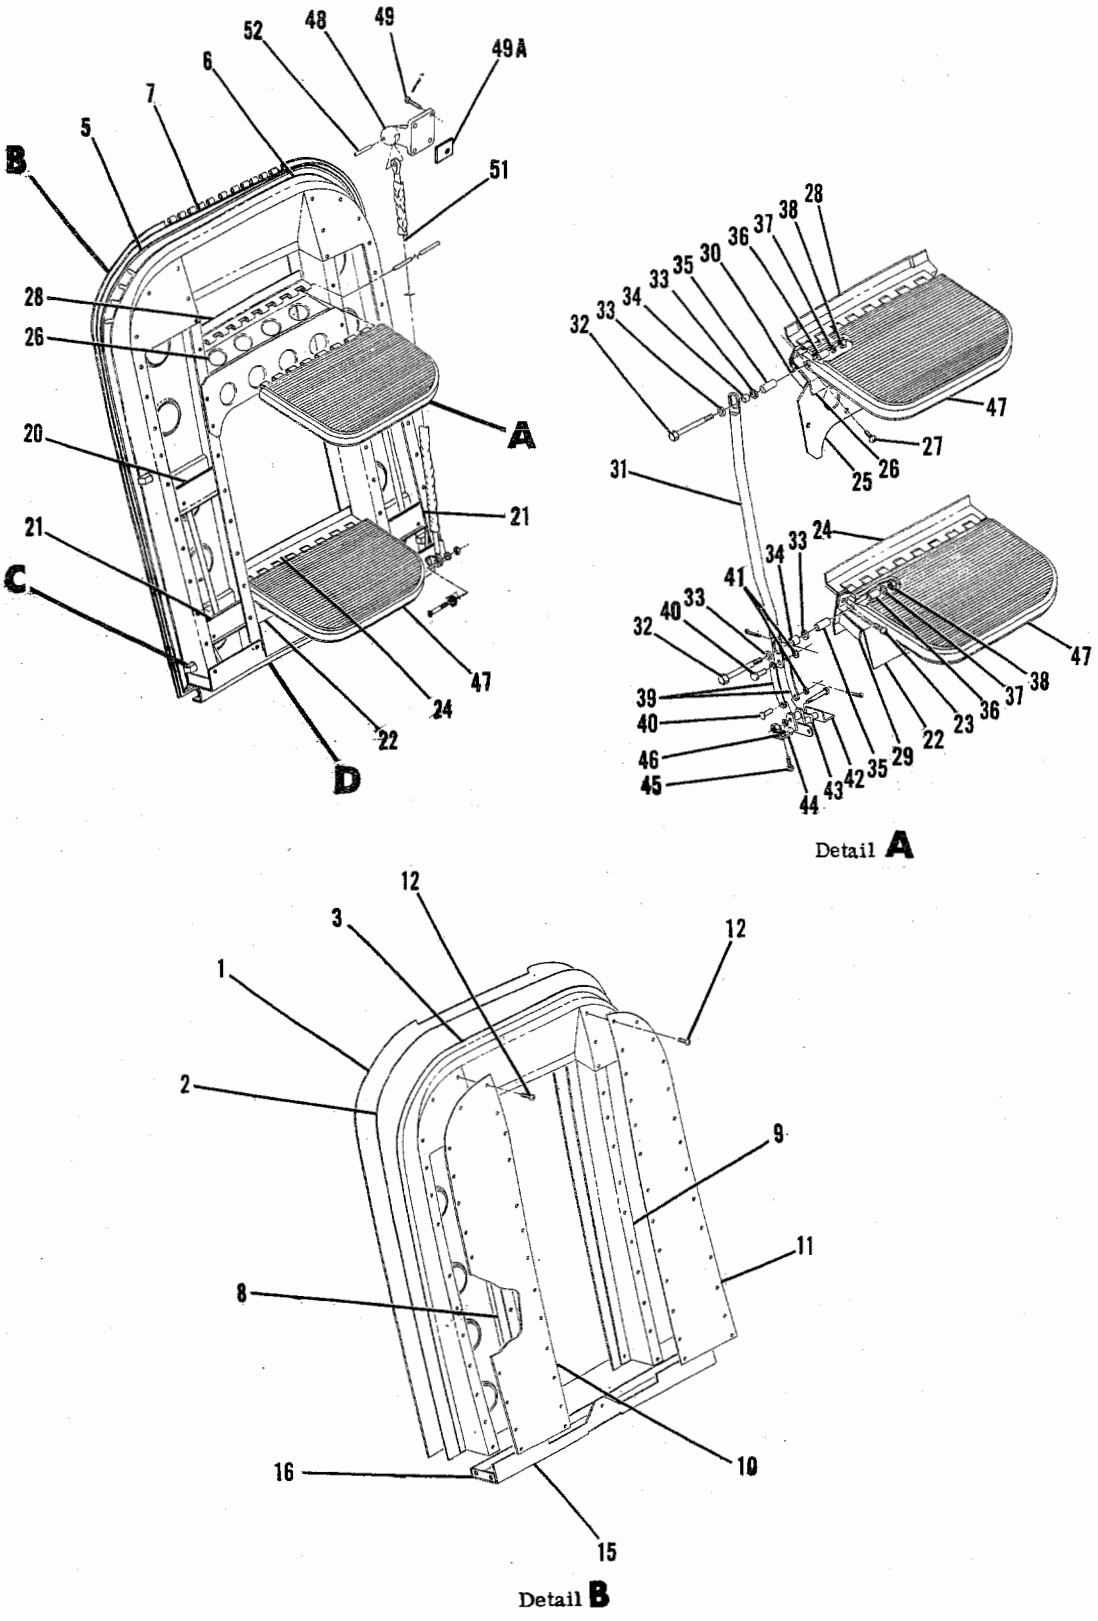

Detail A

Detail B

Figure 23. Lower Cabin Door Installation (Sheet 1 of 2)

FUSELAGE

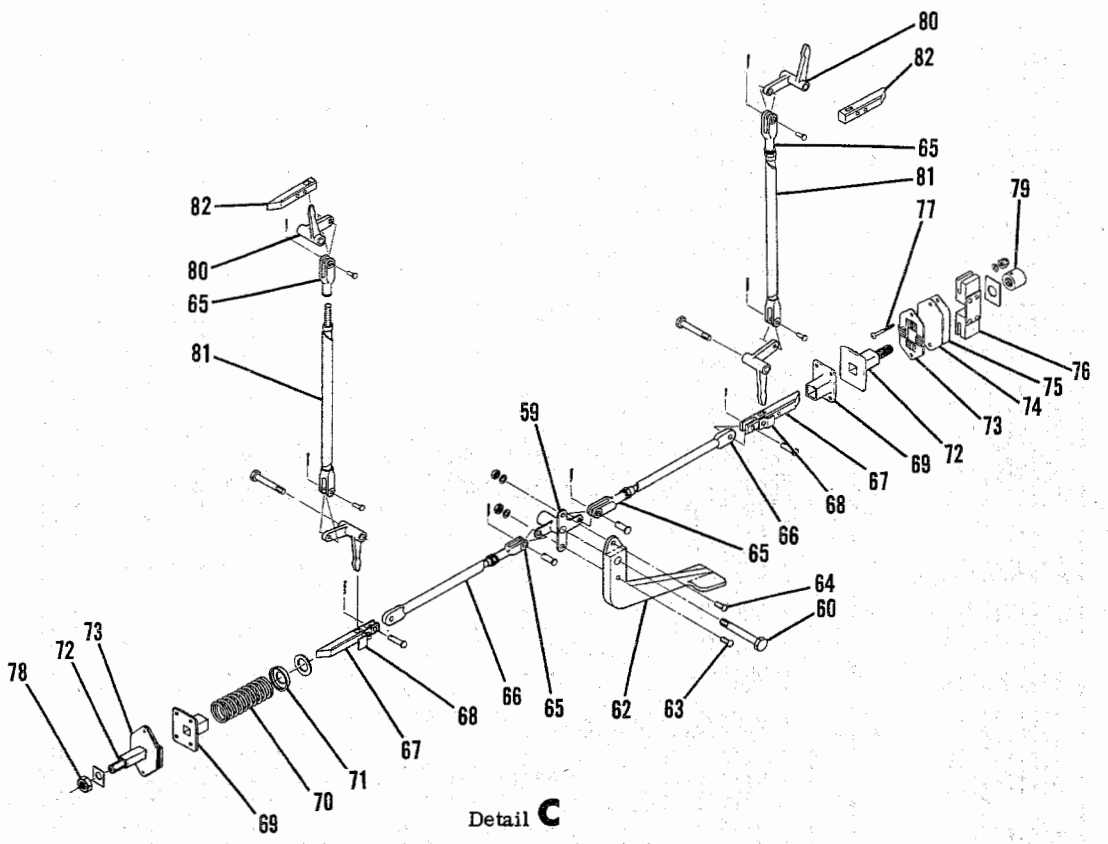

Detail **C**

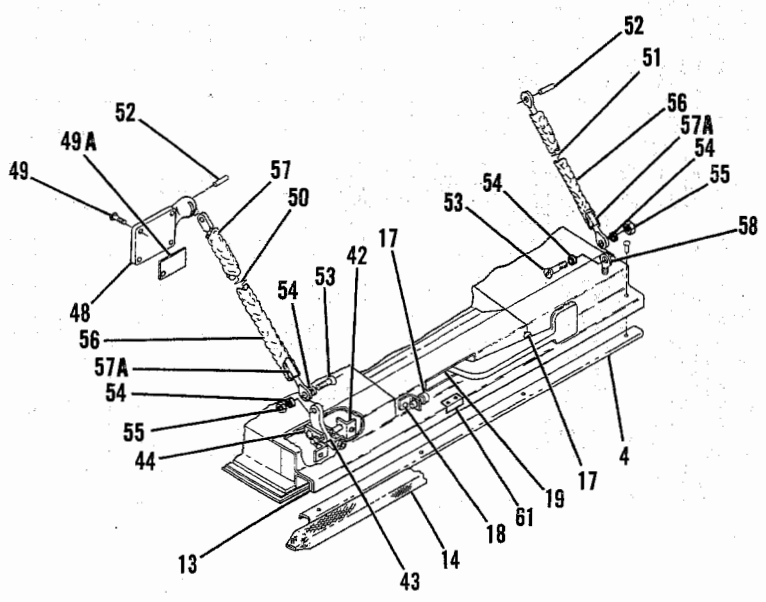

Detail **D**

Figure 23. Lower Cabin Door Installation (Sheet 2)

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
23 -			LOWER CABIN DOOR INSTALLATION	NP	
	5311200-1		. DOOR ASSY	1	
-1	5311200-2		. . SKIN	1	
-2	5311200-3		. . DOUBLER	1	
-3	5311201-11		. . FRAME	1	E
	5311201-22		. . FRAME	1	F
-4	5311200-4		. . SEAL-RETAINER	1	
-5	5311200-5		. . STRIKER-FWD	1	
-6	5311200-6		. . STRIKER-AFT	1	
	5311201-12		. . FILLER-FWD	1	
	5311201-13		. . FILLER-AFT	1	
-7	5311236-2		. . HINGE	1	
-8	5311201-9		. . STIFFENER-FWD	1	
-9	5311201-10		. . STIFFENER-AFT	1	
-10	5311200-8		. . COVER-FWD	1	
-11	5311200-9		. . COVER-AFT	1	
			ATTACHING PARTS		
-12	AN509-8R6		. . SCREW	30	
			---*---		
-13	5311201-2		. . RETAINER-SEAL SUPPORT	1	
	5311201-1		. . CAP-SEAL SUPPORT RETAINER	1	
-14	9910017-3		. . SEAL	1	
-15	5311201-3		. . CHANNEL-UPR	1	
-16	5311201-14		. . ANGLE-UPR	2	
-17	5111552-1		. . CAP	2	
	MS27039-0815		. . SCREW	2	
-18	5111505-50		. . STOP ASSY	1	
	5111505-51		. . . ANGLE	1	
-19	5111505-23		. . BRACKET ASSY-HANDLE	1	
-20	5311201-21		. . BRACKET ASSY-DOOR LATCH OUTBD FWD UPR & AFT LWR	2	
	5311201-22	AK	. . BRACKET-DOOR LATCH INBD FWD UPR & AFT LWR	2	
-21	5311201-19		. . BRACKET ASSY-DOOR LATCH OUTBD FWD LWR & AFT UPR	2	
	5311201-16		. . BRACKET-DOOR LATCH OUTBD FWD LWR & AFT UPR	2	
			. . STEP INSTALLATION	NP	
-22	5311211-17		. . . STOP-UPR STEP	1	
			ATTACHING PARTS		
-23	MS24694S5		. . . SCREW	6	
	MS27039-0806		. . . SCREW	6	
			---*---		
-24	5311211-28	AK	. . . SUPPORT-HINGE UPR	1	
-25	5311211-29		. . . GUSSET	1	
-26	5311211-31		. . . STOP-LWR STEP	1	
			ATTACHING PARTS		
-27	MS24694S5		. . . SCREW	5	
	MS27039-0806		. . . SCREW	6	
			---*---		
-28	5311211-2		. . . SUPPORT-HINGE LWR FSO 5311211-32	1	C
	5311211-32	AK	. . . SUPPORT-HINGE LWR	1	D
-29	5311210-8		. . . ANGLE ASSY-UPR	2	
-30	5311210-10		. . . ANGLE-LWR	2	
-31	5311211-30		. . . LINK-STEP FSO 5311211-35	1	H
	5311211-35		. . . LINK-STEP	1	J
			ATTACHING PARTS		
-32	AN3-17A		. . . BOLT	2	
-33	5111508-2		. . . WASHER	4	
-34	5111508-19		. . . SPACER	2	
-35	5111508-18		. . . SPACER	2	
-36	NAS43DD3-32		. . . SPACER	1	
-37	AN960-10		. . . WASHER	2	
-38	MS21044N3		. . . NUT	2	
			---*---		
-39	5311211-21		. . . LINK-PIVOT	2	
			ATTACHING PARTS		
-40	MS20392-209		. . . PIN	2	
-41	AN960-10		. . . WASHER	2	
	MS24665-132		. . . PIN-COTTER	2	
			---*---		
-42	5311210-2		. . . CLIP	1	
-43	5311211-26		. . . BELLCRANK ASSY-FWD CABLE ATTACH	1	K
	5311211-49		. . . BELLCRANK ASSY-FWD CABLE ATTACH	1	L
-44	5311211-4		. . . BRACKET ASSY-FWD CABLE ATTACH	1	
			ATTACHING PARTS		
-45	NAS221-11		. . . SCREW	2	
-46	MS21044N3		. . . NUT	2	
			---*---		
-47	5311211-1		. . . STEP ASSY-UPR & LWR	2	K
	5311211-43		. . . STEP ASSY-UPR & LWR	2	L
			. CABLE INSTALLATION	NP	
-48	5311242-3		. . FITTING-SUPPORT FWD	1	A
	5311242-5		. . FITTING-SUPPORT FWD FSO 5311242-7	1	B
	5311242-7		. . FITTING-SUPPORT FWD	1	T
	5311242-4		. . FITTING-SUPPORT AFT	1	A
	5311242-6		. . FITTING-SUPPORT AFT FSO 5311242-8	1	B
	5311242-8		. . FITTING-SUPPORT AFT	1	T
			ATTACHING PARTS		
-49	MS27039-1-11		. . SCREW-FWD FITTING	3	
	MS27039-1-11		. . SCREW-AFT FITTING	4	
-49A	5311240-12		. . SPACER	2	G
			---*---		
	MS35675-18		. . . PIN-GROOV	1	A

CONTINUED

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
23 -50	5311240-5		. . CABLE ASSY-FWD	1	R
	5311240-15		. . CABLE ASSY-FWD	1	R
-51	5311240-10		. . CABLE ASSY-AFT	1	S
	5311240-13		. . CABLE ASSY-AFT	1	S
			ATTACHING PARTS		
-52	NAS561CF6-18		. . PIN UPR	1	
-53	MS27039-1-16		. . SCREW LWR HHA	1	
-54	NAS43DD3-9		. . SPACER LWR	2	
-55	NF10-32		. . CAP NUT LWR HHA	1	
			---*---		
-56	5311240-11	@	. . . UPHOLSTERY	1	
			ATTACHING PARTS		
-57	5111508-14		. . . RETAINER-UPHOLSTERY HHA	1	
-57A	5111561-8		. . . RETAINER ASSY-UPHOLSTERY	1	P
	5211106-8		. . . RETAINER ASSY-UPHOLSTERY	1	Q
			---*---		
-58	AN43B C4A		. . EYE BOLT-LWR AFT	1	
			. DOOR LATCH MECHANISM INSTL	NP	
-59	5311226-3		. . BELLCRANK ASSY	1	
			ATTACHING PARTS		
-60	AN3H20A		. . BOLT	1	
			---*---		
	S1003-81A		. . BEARING	1	
	AN960C516L		. . WASHER	2	
-61	5111539-1		. . STRIKER	1	K
			ATTACHING PARTS		
	MS24694S4		. . SCREW	2	K
	MS35335-31		. . WASHER	2	K
	CM3224-08		. . CAP NUT	2	K
	5311225-5		. . SHIM	AR	K
			---*---		
-62	5111537-1		. . HANDLE-LWR	1	M
	5111537-2		. . HANDLE-LWR	1	N
			ATTACHING PARTS		
-63	MS27039-1-09		. . SCREW	1	
-64	MS24694S57		. . SCREW	1	
	MS21044N3		. . NUT	2	
			---*---		
-65	AN486-4		. . CLEVIS	1	
			ATTACHING PARTS		
	MS20392-2C11		. . PIN	1	
	MS24665-168		. . PIN-COTTER	1	
			---*---		
	AN316-4		. . CHECK NUT	1	
-66	5311226-5		. . TUBE ASSY-LWR	2	
			ATTACHING PARTS		
	MS20392-2C13		. . PIN	1	
	MS24665-168		. . PIN-COTTER	1	
			---*---		
-67	5111545-4		. . PIN-CTR DOOR LATCH	2	
			ATTACHING PARTS		
	MS20392-2C13		. . PIN	1	
	MS24665-168		. . PIN-COTTER	1	
			---*---		
-68	5111560-11		. . INDICATOR-DOOR LATCH POSITION	4	
			ATTACHING PARTS		
	MS35206-231		. . SCREW	1	
	AN960-6		. . WASHER	1	
	MS21042L06		. . NUT	1	
			---*---		
-69	5111531-1		. . GUIDE ASSY	4	
			ATTACHING PARTS		
	MS27039-0806		. . SCREW	2	
	MS24694S4		. . SCREW	2	
	AN960C8L		. . WASHER	6	
	MS21044N08		. . NUT	4	
			---*---		
-70	5111527-1		. . SPRING	1	
	AN960C816L		. . WASHER	1	
-71	5111506-8		. . CUP	1	
	NAS561CF14		. . ROLL PIN	1	
-72	5111532-2		. . RECEPTACLE ASSY	4	
-73	5111533-1		. . LOCKPLATE	4	
-74	5111565-1		. . SPACER	1	
-75	5111565-2		. . SPACER	1	
-76	5111506-4		. . SPACER ASSY	2	
			ATTACHING PARTS		
-77	MS27039-1-25		. . SCREW	2	
	AN960-10L		. . WASHER	2	
	5111541-1		. . WASHER	1	
	MS21044N3		. . NUT	2	
-78	MS21083N6		. . NUT FWD DOOR FRAME	1	
-79	5111538-1		. . NUT ASSY	2	
			---*---		
-80	5111542-1		. . BELLCRANK ASSY-FWD	2	
	5311226-2		. . BELLCRANK ASSY-AFT	2	
			ATTACHING PARTS		
	AN3H15A		. . BOLT	1	
	S1003-80A		. . BEARING	1	
	AN960C516L		. . WASHER	2	
			---*---		

CONTINUED

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
23 -81	NAS359-84-915	. . TUBE ASSY	2	
		ATTACHING PARTS		
	MS20392-2C11	. . PIN	1	
	MS24665-168	. . PIN-COTTER	1	
		---*---		
-82	5111545-2	. . PIN-LWR LATCH	2	
		@ WHEN ORDERING THIS PART THE ORDER MUST BE ACCOMPANIED BY THE COMPLETE FINISH & TRIM PLATE NUMBER AND AIRCRAFT SERIAL NUMBER OF AVAILABLE SEALANT COMPOUNDS		
		A---340-0001 THRU 340-0044 B---340-0045 THRU 340-0343 C---340-0001 THRU 340-0033 D---340-0034 & ON E---340-0001 THRU 340-0058 F---340-0059 & ON G---340-0151 & ON H---340-0001 THRU 340-0066 J---340-0067 & ON K---340-0001 THRU 340-0300 L---340-0301 & ON M---340-0001 THRU 340-0204 N---340-0205 & ON P---340-0001 THRU 340-0178 Q---340-0179 & ON R---340-0001 THRU 340-0316 S---340-0317 & ON T---340-0344 & ON		

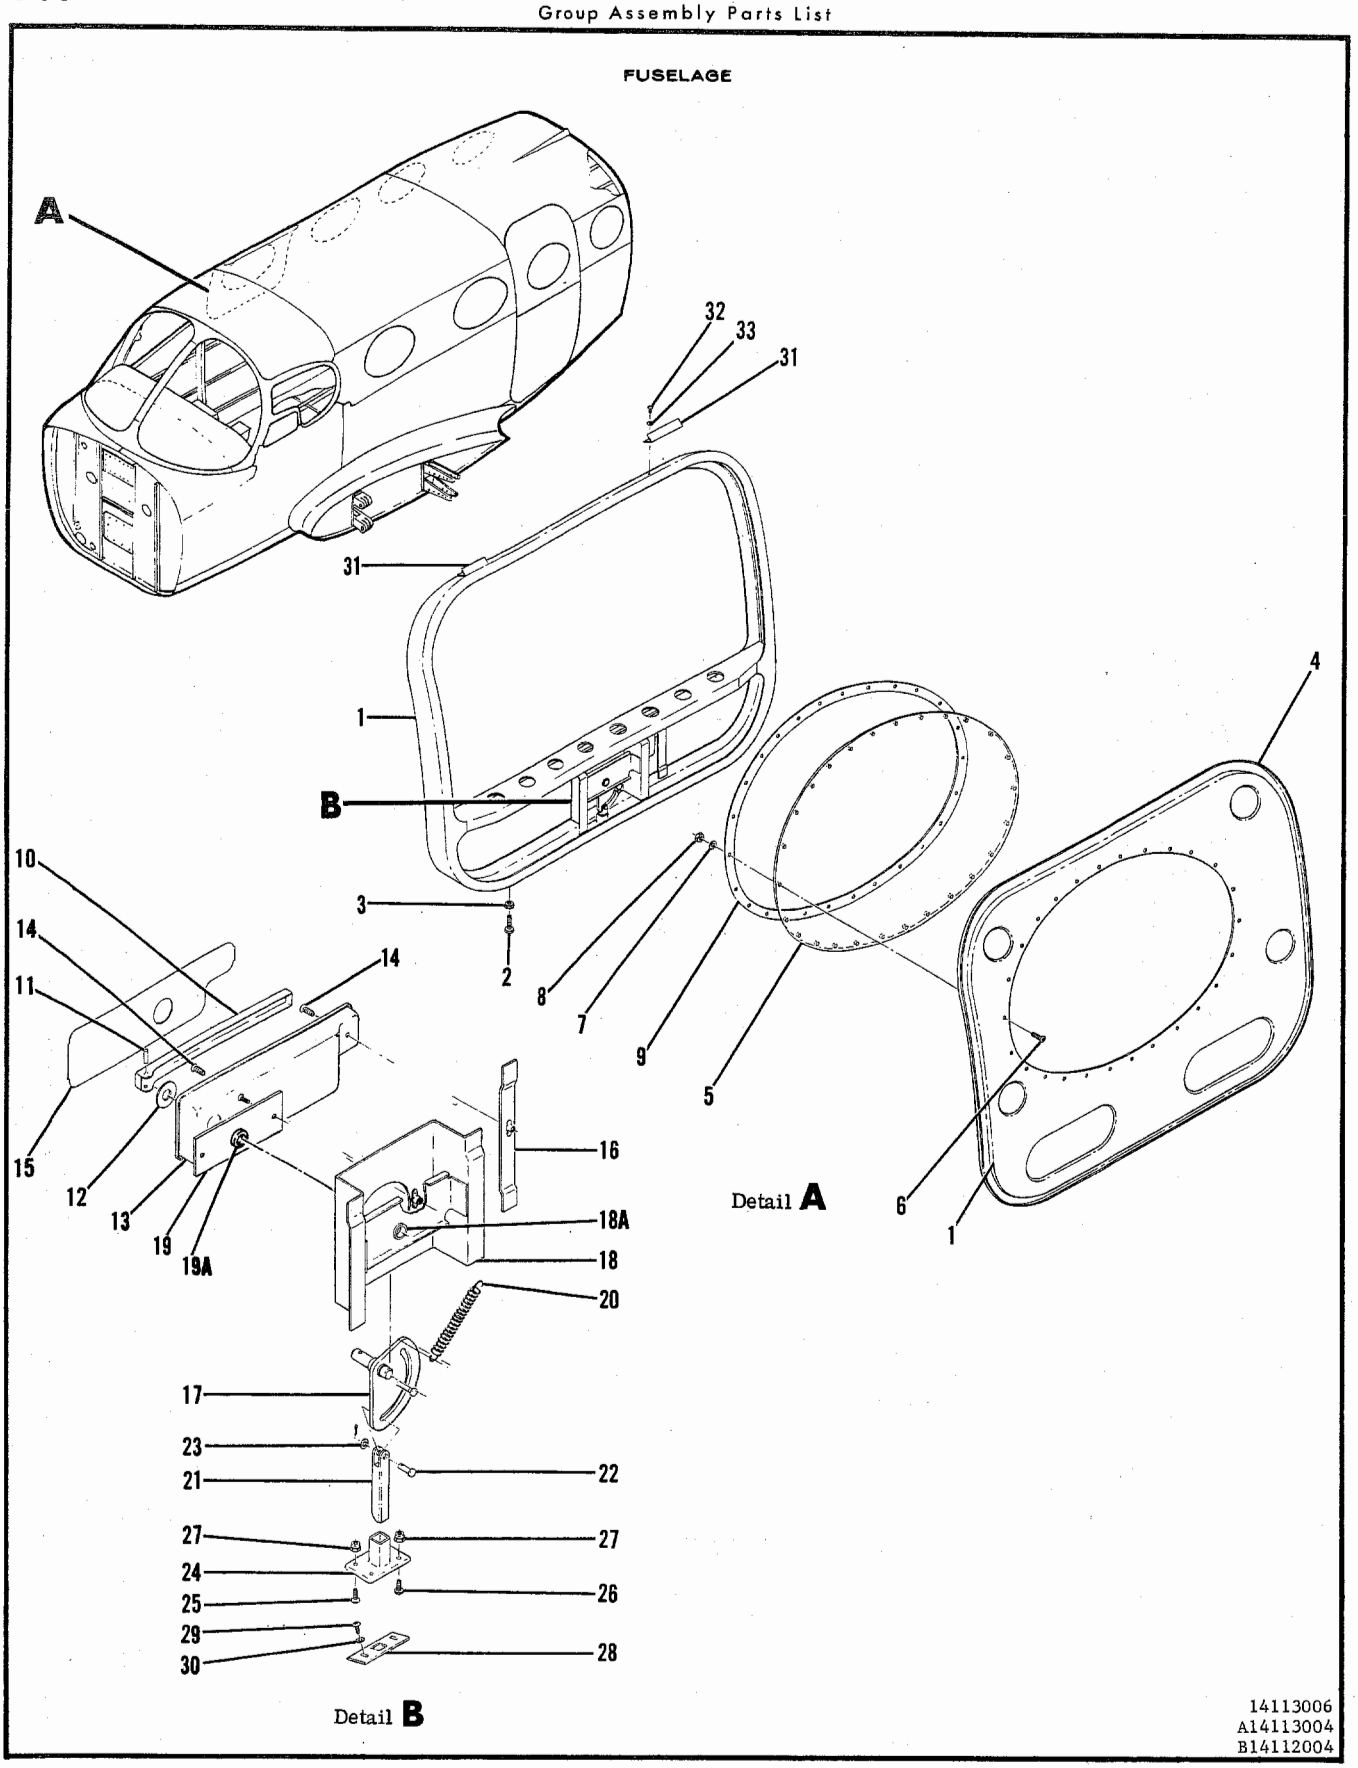

Figure 24. Emergency Exit Installation

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
24 -			EMERGENCY EXIT INSTALLATION	NP	
-1	5311250-2	%	. STRUCTURE ASSY-HATCH	1	
-2	NAS428-3-7		. . BOLT-LEVELING	2	
-3	AN315-3		. . NUT-LEVELING	2	
-4	5311251-1		. SEAL ASSY	1	
-5	5111605-2	%%	. WINDOW	1	
	5111605-8	%%	. WINDOW TINTED	1	A
			ATTACHING PARTS		
-6	MS24694S8		. SCREW	26	
	MS24694S8		. SCREW USED WITH TINTED WINDOW	22	A
	MS24694S12		. SCREW USED WITH TINTED WINDOW	4	A
-7	AN960CL8		. WASHER	26	
-8	MS21044N08		. NUT	26	
	5119115-2		. CLIP	4	A
			---*---		
	CM2919-2-25		. SEAL BKI	AR	A
-9	5311260-9		. RING-INNER WINDOW	1	
-10	5311263-1		. HANDLE	1	
			ATTACHING PARTS		
-11	NAS561CF6-10		. ROLL PIN	1	
			---*---		
-12	AN960C616L		. WASHER	1	
-13	5311264-1	%@	. PAN	1	B
	5311264-3	%@	. PAN	1	C
	5311264-4	%@	. PAN	1	D
			ATTACHING PARTS		
-14	S1021Z6-6C		. SCREW	2	
			---*---		
-15	5311264-2	@	. COVER-PAN	1	
-16	5311255-12		. SUPPORT-PAN	1	
-17	5311256-1		. CAM ASSY	1	
-18	5311255-2		. SUPPORT ASSY-CAM	1	
-18A	S1004-57A		. . BEARING	1	
-19	5311255-3		. SUPPORT-BEARING	1	
			ATTACHING PARTS		
	MS24694C7		. SCREW	2	
			---*---		
-19A	S1004-57A		. . BEARING	1	
-20	5311257-1		. SPRING	1	
-21	5311255-6		. PIN	1	
			ATTACHING PARTS		
-22	MS20392-2C13		. PIN-CLEVIS	1	
-23	AN960PD10L		. WASHER	1	
	MS24665-132		. PIN-COTTER	1	
			---*---		
-24	5111531-1		. GUIDE	1	
			ATTACHING PARTS		
-25	MS24694C5		. SCREW	2	
-26	MS27039-0807		. SCREW	2	
-27	MS21044N08		. NUT	4	
			---*---		
-28	0811088-1		. PLATE-STRIKER	1	
			ATTACHING PARTS		
-29	MS27039-0807		. SCREW	2	
-30	MS35335-31		. WASHER	2	
			---*---		
-31	5111510-15	%	. HANGER	2	
			ATTACHING PARTS		
-32	MS27039-0807	%	. SCREW	2	
-33	MS35335-31		. WASHER	2	
			---*---		

% THIS PART MUST HAVE PRESSURIZATION SEALANT APPLIED ON INSTALLATION TO THE AIRCRAFT SEE MISCELLANEOUS BULK ITEM FOR LISTING OF AVAILABLE SEALANT COMPOUNDS

@ WHEN ORDERING THIS PART THE ORDER MUST BE ACCOMPANIED BY THE COMPLETE FINISH AND TRIM PLATE NUMBER AND AIRCRAFT SERIAL NUMBER

A---340-0151 & ON
B---340-0001 THRU 340-0150
C---340-0151 TO 340A0001
D---340A0001 & ON

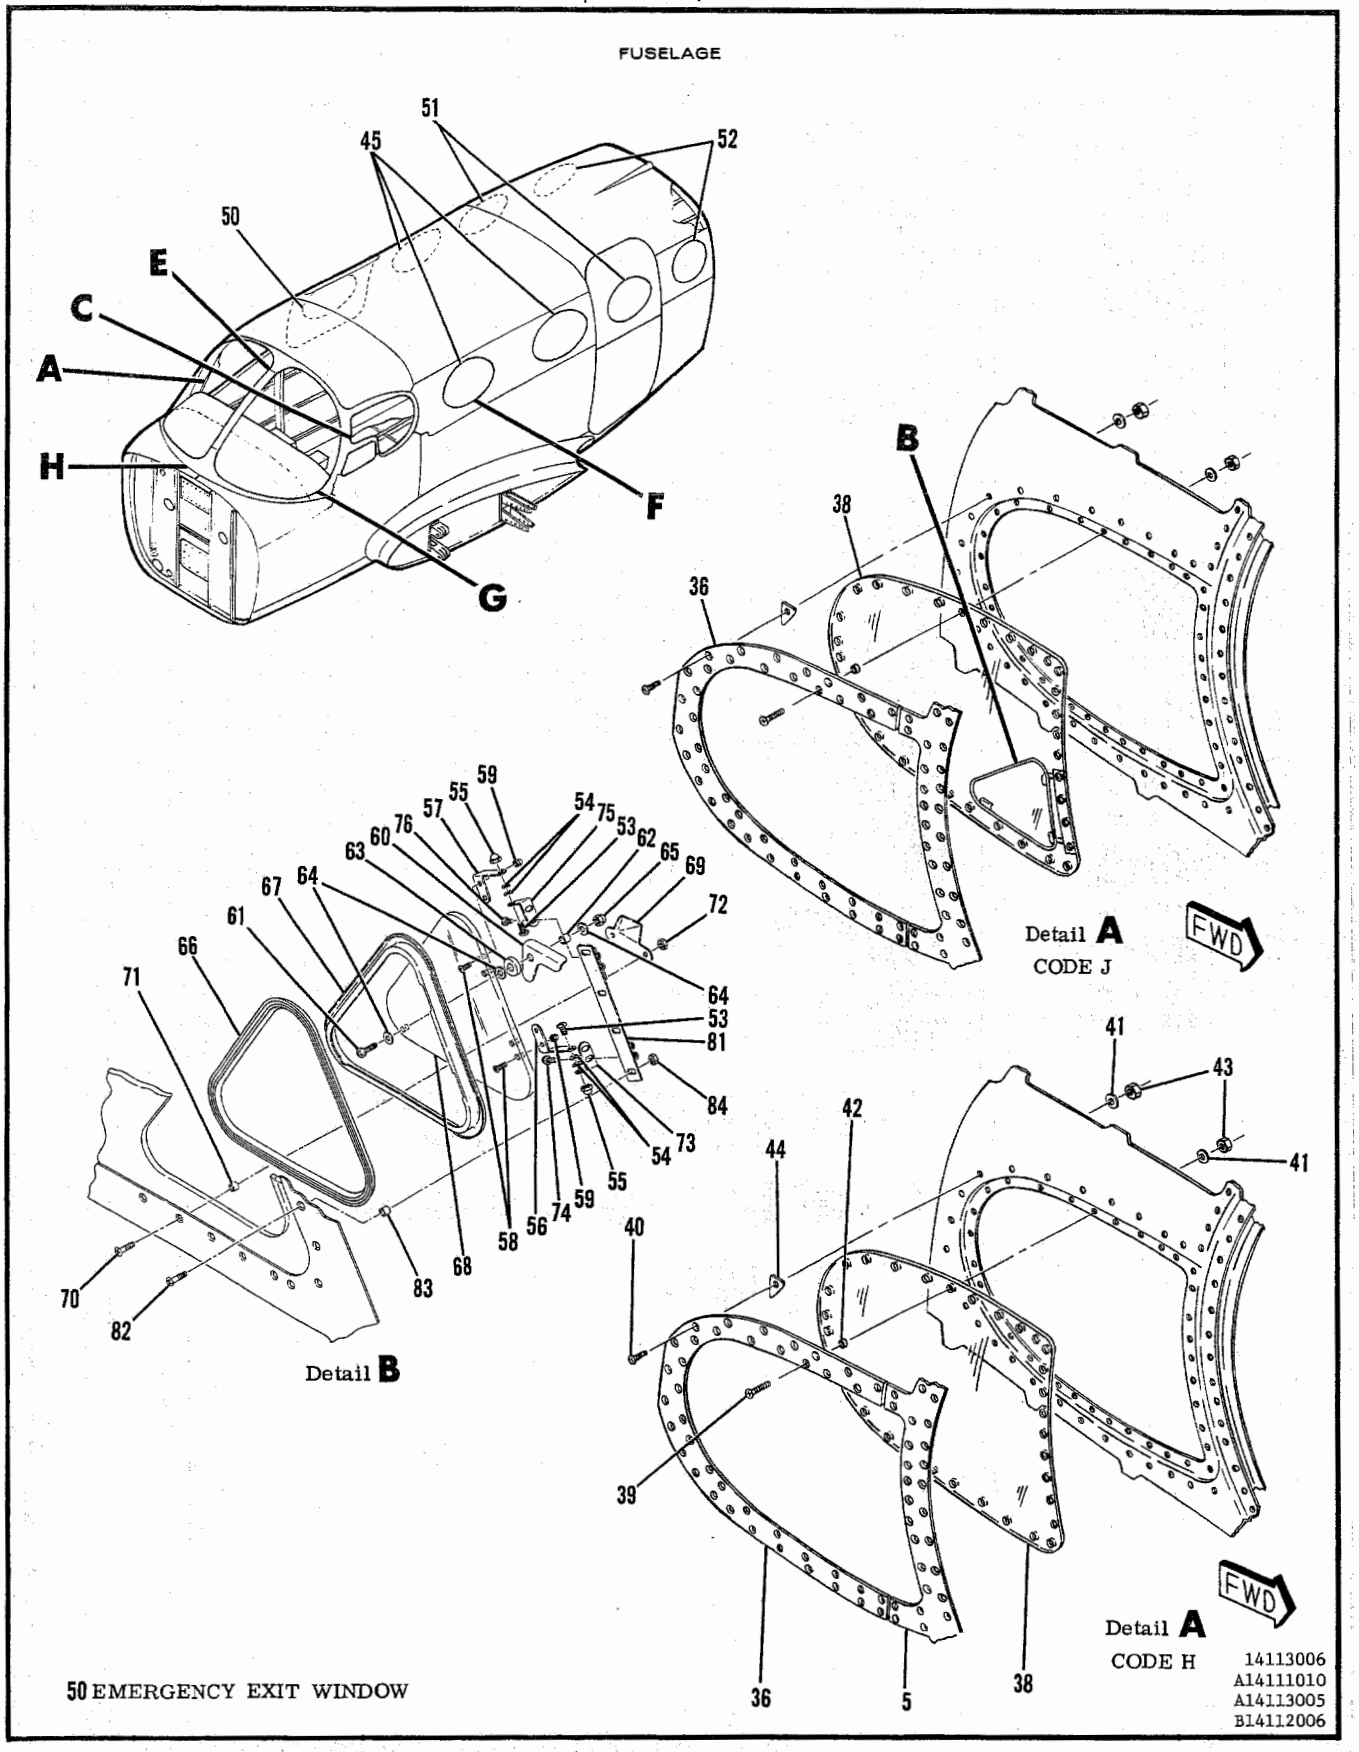

Figure 25. Cabin Windows Installation (Sheet 1 of 3)

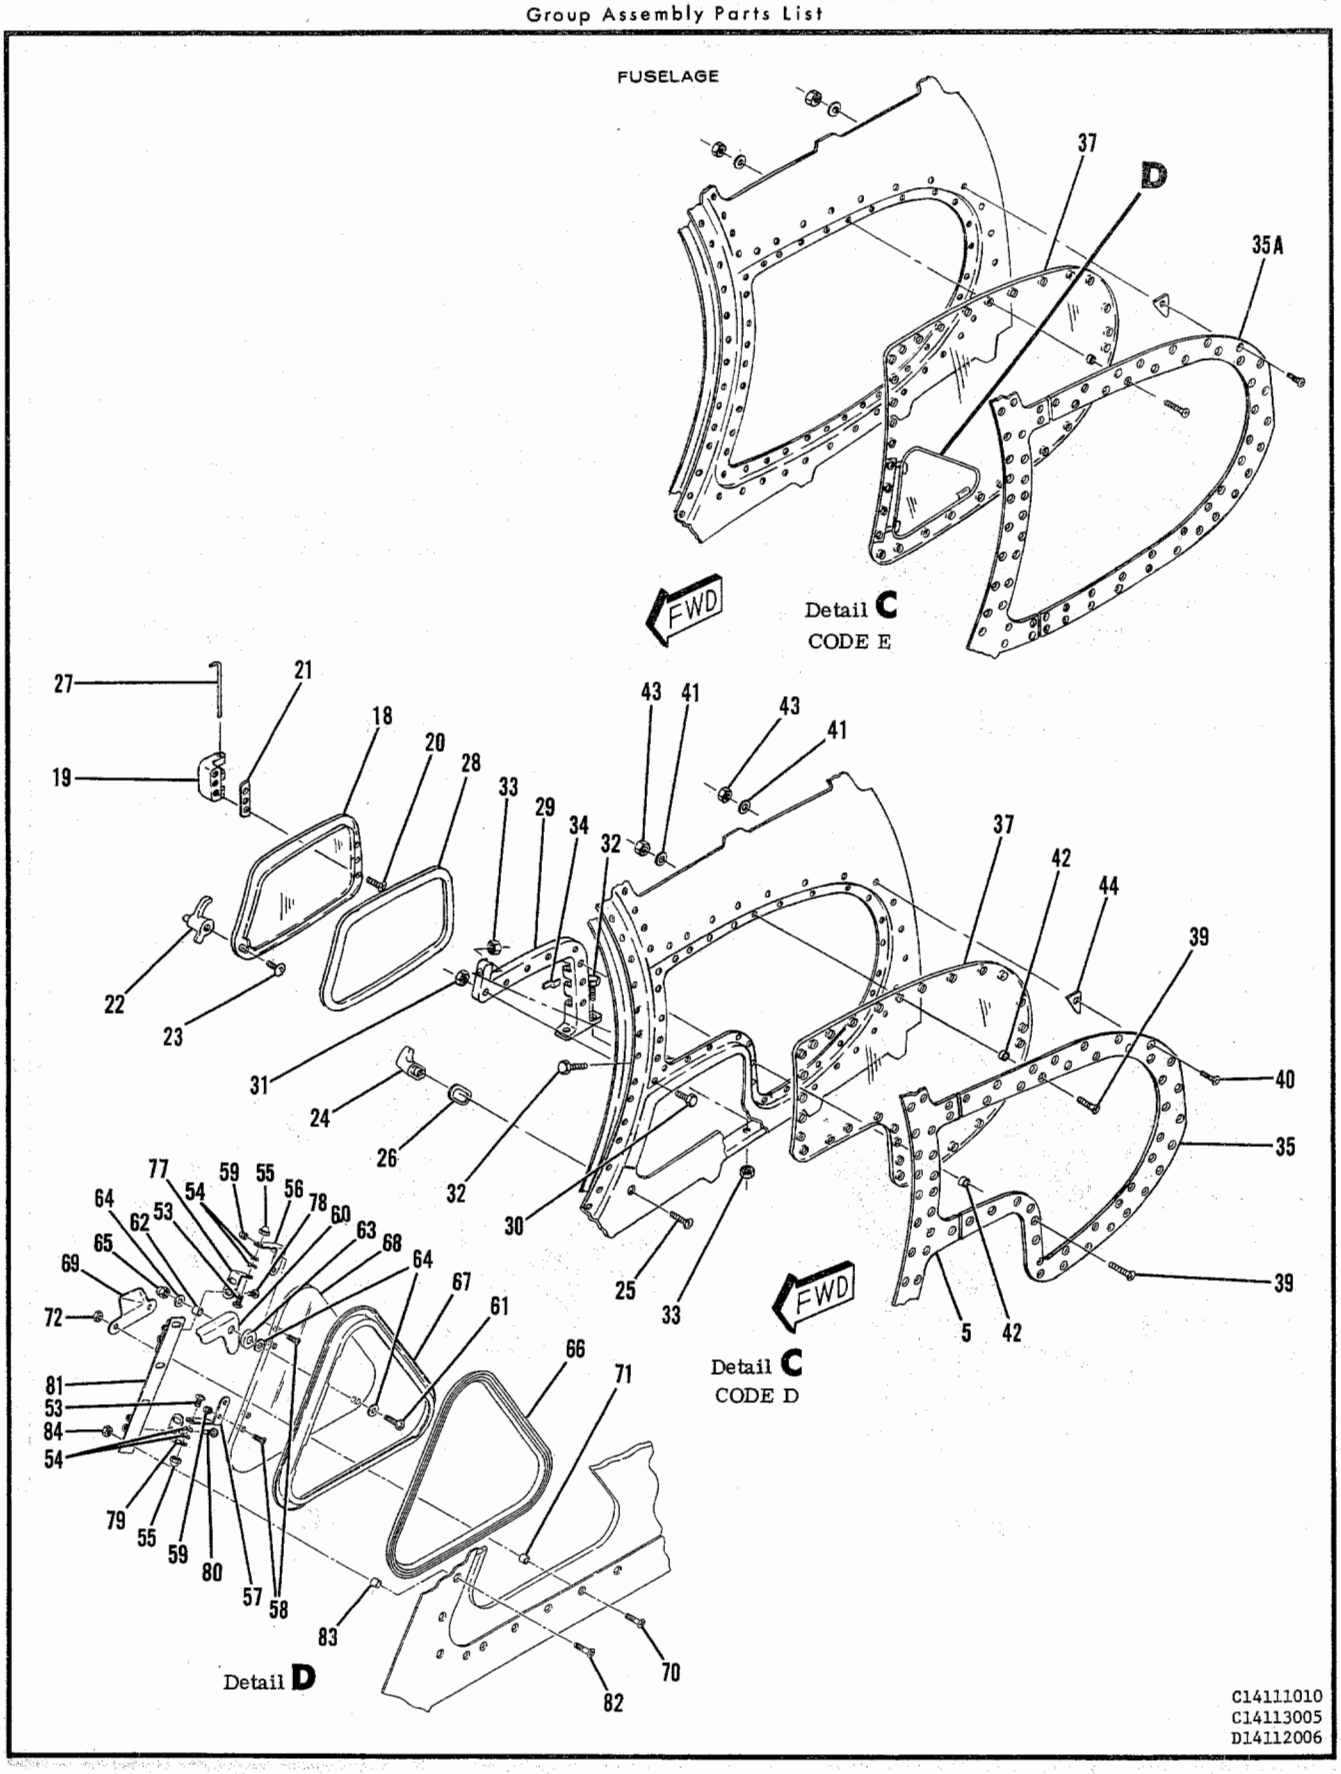

Figure 25. Cabin Windows Installation (Sheet 2)

FUSELAGE

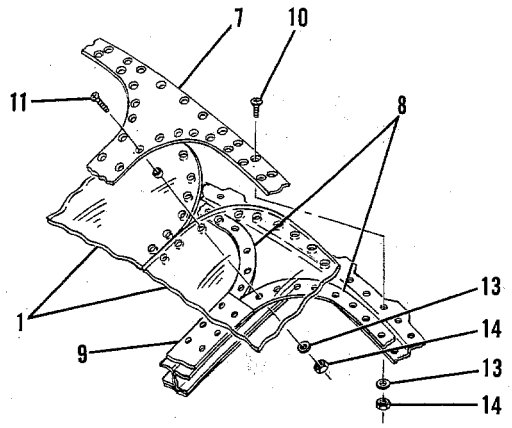

Detail **E**

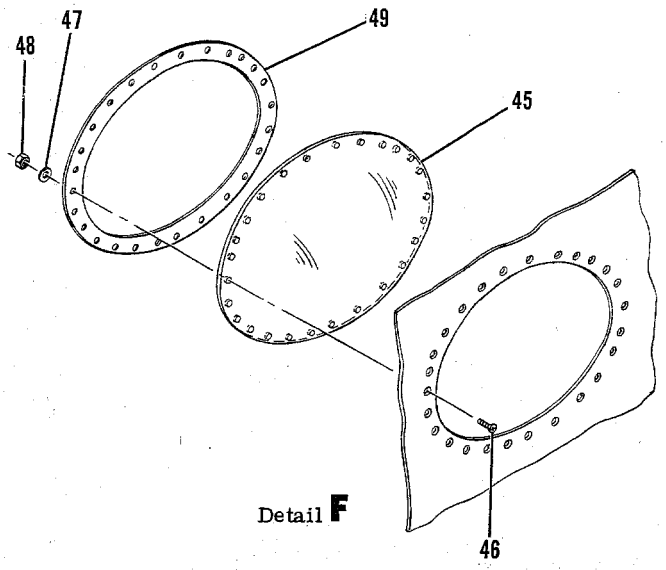

Detail **F**

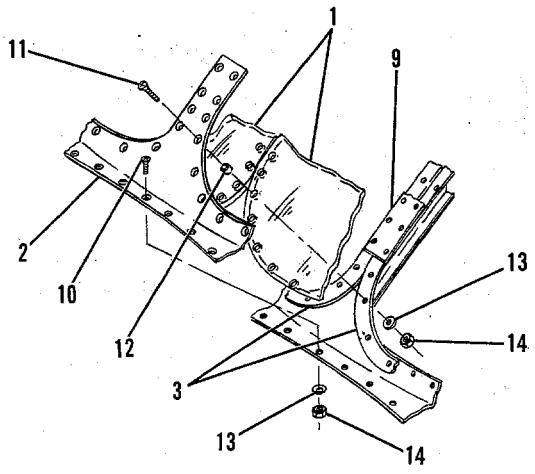

Detail **H**

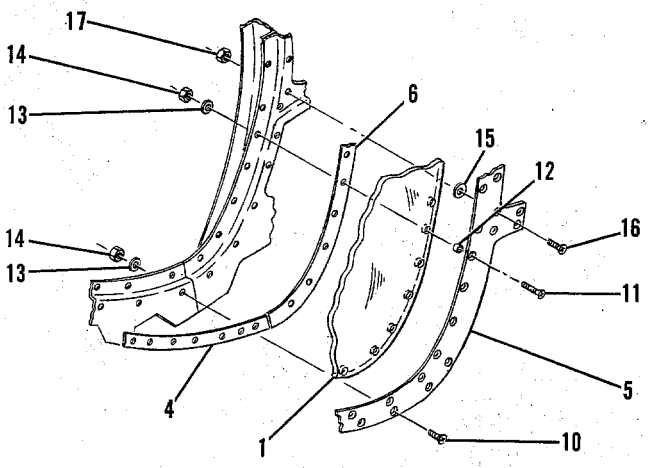

Detail **G**

14113005

Figure 25. Cabin Windows Installation (Sheet 3)

FIGURE AND INDEX NO.	PART NUMBER	1 2 3 4 5 6 7 DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
25 -		CABIN WINDOWS INSTALLATION	NP	
-1	5311266-1	. WINDSHIELD-LH	1	
	5311266-2	. WINDSHIELD-RH	1	
-2	5311265-2	. RETAINER-LWR CTR FSO 5311265-16 5311265-17 5311265-18	1	A
	5311265-16	. RETAINER-LWR CTR	1	B
	5311265-17	. RETAINER-LH	1	B
	5311265-18	. RETAINER-RH	1	B
-3	5311265-9	. DOUBLER-LH	1	
	5311265-8	. DOUBLER-RH	1	
-4	5311265-11	. DOUBLER-LH	1	
	5311265-10	. DOUBLER-RH	1	
-5	5311265-3	. RETAINER-LH	1	D
	5311265-19	. RETAINER-LH	1	E
	5311265-4	. RETAINER-RH	1	
-6	5311265-13	. DOUBLER-LH	1	
	5311265-12	. DOUBLER-RH	1	
-7	5311265-5	. RETAINER-CTR	1	
-8	5311265-6	. DOUBLER-UPR LH & RH	2	
-9	5311265-7	. DOUBLER-CTR	1	
		ATTACHING PARTS		
-10	MS24694S51	. SCREW	70	
-11	MS24694S58	. SCREW	114	
-12	5311268-2	. SLEEVE	114	
-13	AN960C10L	. WASHER	184	
-14	MS21083N3	. NUT	184	
		---*---		
-15	5311267-1	. SPACER	1	
		ATTACHING PARTS		
-16	MS24694S63	. SCREW	1	
-17	MS21044N3	. NUT	1	
		---*---		
	5311270-3	. WINDOW ASSY-FDUL WEATHER	1	D
-18	5311271-1	. . WINDOW	1	D
-19	5311272-1	. . HINGE ASSY	1	D
		ATTACHING PARTS		
-20	AN509-8-11	. . SCREW	3	D
		---*---		
-21	5311272-3	. . SHIM	1	D
-22	5211347-2	. . HANDLE ASSY	1	D
		ATTACHING PARTS		
-23	5011167-5	. . SCREW	1	D
		---*---		
-24	0811723-5	. HOOK	1	D
		ATTACHING PARTS		
-25	5011167-5	. SCREW	1	D
-26	5311272-5	. SPACER	1	D
		---*---		
-27	5311272-4	. PIN-HINGE	1	D
-28	5311273-1	. SEAL	1	D
-29	5311275-1	. FITTING-HINGE	1	D
		ATTACHING PARTS		
-30	AN3-10A	. BOLT	1	D
-31	MS21042L3	. NUT	1	D
-32	AN4-5A	. BOLT	3	D
-33	MS21042L4	. NUT	3	D
		---*---		
-34	5311274-1	. SPRING	1	D
-35	5311262-3	. RETAINER-LH PILOTS WINDOW	1	D
-35A	5311262-7	. RETAINER-LH PILOTS WINDOW	1	E
-36	5311262-4	. RETAINER-RH COPILOTS WINDOW	1	
-37	5311261-1	. WINDOW-PILOTS	1	D
	5211261-11	. WINDOW-PILOTS	1	E
-38	5311261-2	. WINDOW-COPILOTS	1	H
	5311261-10	. WINDOW-COPILOTS	1	J
		ATTACHING PARTS		
-39	MS24694S10	. SCREW	AR	
-40	MS24694S6	. SCREW	AR	
-41	AN960C8L	. WASHER	AR	
-42	5311268-1	. SLEEVE	AR	
-43	MS21042L08	. NUT	AR	
		---*---		
-44	5311267-2	. SPACER	2	
-45	5111605-2	. WINDOW-SECOND LH & THIRD LH & RH	3	
	5111605-8	. WINDOW-SECOND LH & THIRD LH & RH TINTED	3	C
		ATTACHING PARTS		
-46	MS24694S8	. SCREW	26	
	MS24694S8	. SCREW USED WITH TINTED WINDOW	22	C
	MS24694S12	. SCREW USED WITH TINTED WINDOW	4	C
-47	AN960C8L	. WASHER	26	
-48	MS21044N08	. NUT	26	
	5119115-2	. CLIP	4	C
		---*---		
	CM2919-2-25	. SEAL BKI	AR	C
-49	5311260-9	. RING-INNER	3	
-50	SEE FIG 24	. WINDOW-SECOND RH EMERGENCY EXIT	REF	

CONTINUED

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
25 -51	5311261-5	AH	WINDOW-CABIN DOOR LH & FOURTH RH	2	
	5111605-12	AH	WINDOW-CABIN DOOR LH & FOURTH RH TINTED	2	C
			ATTACHING PARTS		
	MS24694S8	AH	SCREW	20	
	AN960C8L		WASHER	20	
	MS21044N08		NUT	20	
	5119115-2		CLIP	4	C
			---*---		
	5311260-11		RING-INNER	2	
-52	5111605-1	AH	WINDOW-FIFTH LH & RH	2	
	5111605-7	AH	WINDOW-FIFTH LH & RH TINTED	2	C
			ATTACHING PARTS		
	MS24694S8	AH	SCREW	20	
	AN960C8L		WASHER	20	
	MS21044N08		NUT	20	
	5119115-2		CLIP	4	C
			---*---		
	5311260-12		RING-INNER	2	
	CM2919-2-25		SEAL BKI	AR	C
	5311277-3		WINDOW ASSY-FOUL WEATHER LH	1	E
	5311277-4		WINDOW ASSY-FOUL WEATHER RH	1	J
			ATTACHING PARTS		
-53	MS27039-1-05		SCREW	2	
-54	3515-09-01		WASHER	4	
-55	CM3224-3B		NUT	2	
			---*---		
-56	5311278-5		. BRACKET-HINGE	1	
-57	5311278-6		. BRACKET-HINGE	1	
			ATTACHING PARTS		
-58	MS24693S28		. SCREW	4	
-59	CM3224-06B		. NUT	4	
			---*---		
-60	5311278-9		. HANDLE-LH	1	
	5311278--2		. HANDLE-RH	1	
			ATTACHING PARTS		
-61	MS27039-1-13		. SCREW	1	
-62	NAS43DD3-21		. SPACER	1	
-63	5311278-7		. SPACER	1	
-64	AN960-10L		. WASHER	3	
-65	CM3224-3B		. NUT	1	
			---*---		
-66	5311277-7		. SEAL RH	1	F
	5311269-1		. SEAL RH	1	G
	5311269-1		. SEAL LH	1	E
-67	5311279-1		. RETAINER-SEAL LH	1	
	5311279-2		. RETAINER-SEAL RH	1	
-68	5311277 5		. WINDOW-LH	1	
	5311277-6		. WINDOW-RH	1	
-69	5311278-11		. STOP-LH	1	F
	5311278-4		. STOP-RH	1	E
			ATTACHING PARTS		
-70	MS24694S11		. SCREW	2	
-71	5311268-1		. SLEEVE	2	
-72	MS21042L08		. NUT	2	
			---*---		
-73	5311278-3		. BRACKET-HINGE RH	1	F
	5311278-17		. BRACKET-HINGE RH	1	G
			ATTACHING PARTS		
-74	MS24694S3		. SCREW	1	F
	CM3558-8-8G		. SCREW	2	G
			---*---		
-75	5311278-3		. BRACKET-HINGE RH	1	F
	5311278-18		. BRACKET-HINGE RH	1	G
			ATTACHING PARTS		
-76	MS24694S3		. SCREW	1	F
	CM3558-8-8G		. SCREW	2	G
			---*---		
-77	5311278-17		. BRACKET-HINGE LH	1	E
			ATTACHING PARTS		
-78	CM3558-8-8G		. SCREW	2	
			---*---		
-79	5311278-18		. BRACKET-HINGE LH	1	E
			ATTACHING PARTS		
-80	CM3558-8-8G		. SCREW	2	
			---*---		
-81	5311278-12		. BRACKET-LH	1	F
	5311278-15		. BRACKET-LH	1	G
	5311278-1		. BRACKET-RH	1	F
	5311278-16		. BRACKET-RH	1	G
			ATTACHING PARTS		
-82	MS24694S11		. SCREW	4	
-83	5311268-1		. SLEEVE	4	
-84	MS21042L08		. NUT	4	
			---*---		

CONTINUED

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
25		% THIS PART MUST HAVE PRESSURIZATION SEALANT APPLIED UPON INSTALLATION TO THE AIRCRAFT SEE MISCELLANEOUS BULK ITEMS FOR LISTING OF AVAILABLE SEALANT COMPOUNDS A---340-0001 THRU 340-0052 B---340-0053 & ON C---340-0151 & ON D---340-0001 THRU 340-0300 E---340-0301 & ON F---340-0211 THRU 340-0254 G---340-0255 & ON H---340-0001 THRU 340-0210 J---340-0211 & ON & AIRCRAFT MODIFIED BY SK340-7		

FUSELAGE

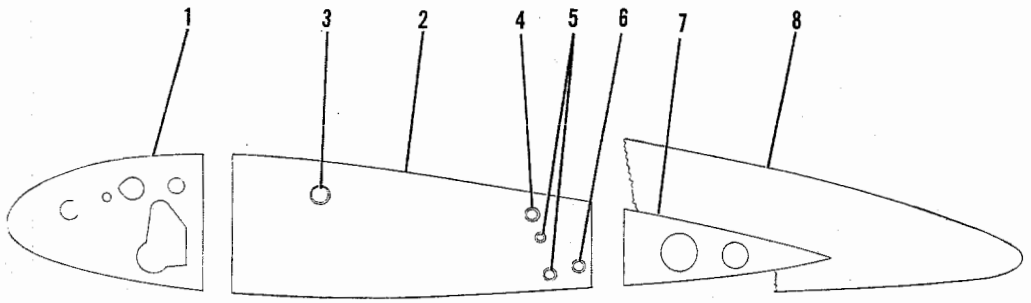

Figure 26. Stub Wing Structure Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
26 -		STUB WING STRUCTURE INSTALLATION	NP	
-1	5311036-5	. RIB ASSY-LH FWD	1	A
	5311036-37	. RIB ASSY-LH FWD WEU 5311036-53	1	C
	5311036-53	. RIB ASSY-LH FWD	1	D
	5311036-6	. RIB ASSY-RH FWD	1	A
	5311036-38	. RIB ASSY-RH FWD WEU 5311036-54	1	C
	5311036-54	. RIB ASSY-RH FWD	1	D
-2	5311036-3	. RIB ASSY-LH CTR	1	A
	5311036-35	. RIB ASSY-LH CTR	1	B
	5311036-4	. RIB ASSY-RH CTR	1	A
	5311036-36	. RIB ASSY-RH CTR	1	B
-3	S1050-1	. . GROMMET-POWER CABLES LH ONLY BKI	AR	
-4	S1050-1	. . GROMMET-AILERON TRIM CONTROL LH ONLY BKI	AR	
-5	S1050-1	. . GROMMET-FLAP & AILERON CONTROLS LH & RH BKI	AR	
-6	S1050-3	. . GROMMET-AILERON CONTROL LH & RH BKI	AR	
-7	5311036-31	. RIB ASSY-LH AFT	1	A
	5311036-51	. RIB ASSY-LH AFT	1	B
	5311036-32	. RIB ASSY-RH AFT	1	A
	5311036-52	. RIB ASSY-RH AFT	1	B
-8	SEE FIG 7	. FAIRING-STUB WING	1	
		A---340-0001 THRU 340-0096 B---340-0097 & ON C---340-0097 THRU 340A0072 D---340A0073 & ON		

FUSELAGE

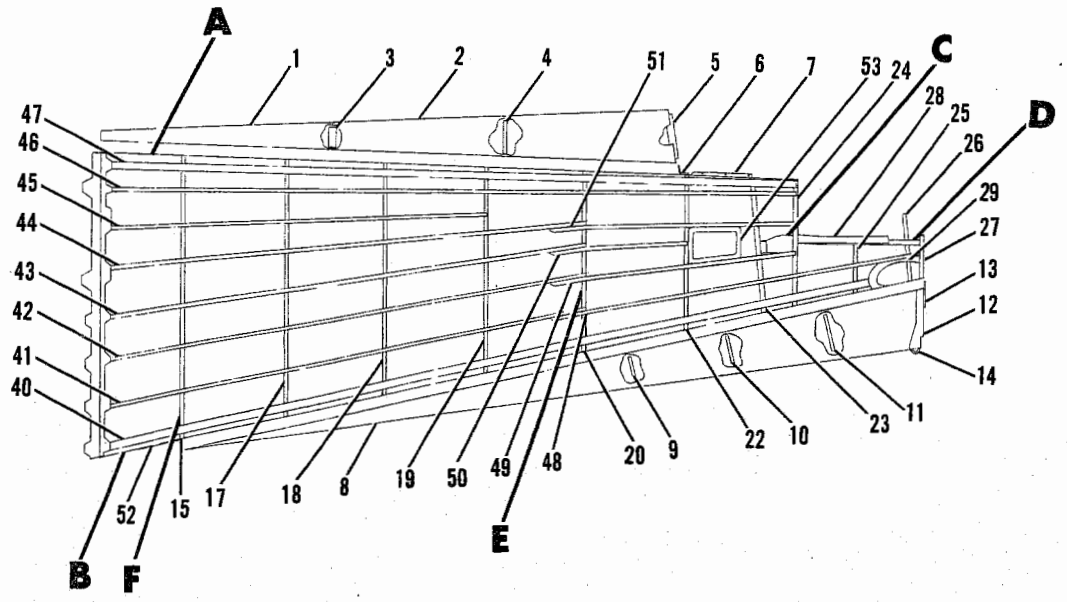

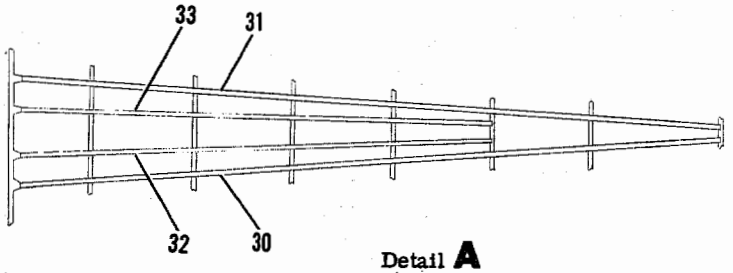

Detail **A**
TOP

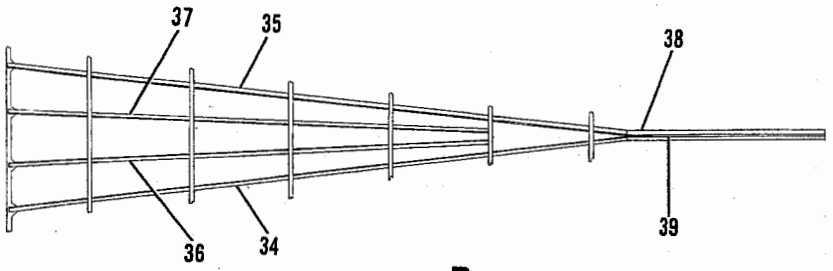

Detail **B**
BOTTOM

14193010
A14193012
B14193012

Figure 27. Tailcone Section Structure Installation (Sheet 1 of 3)

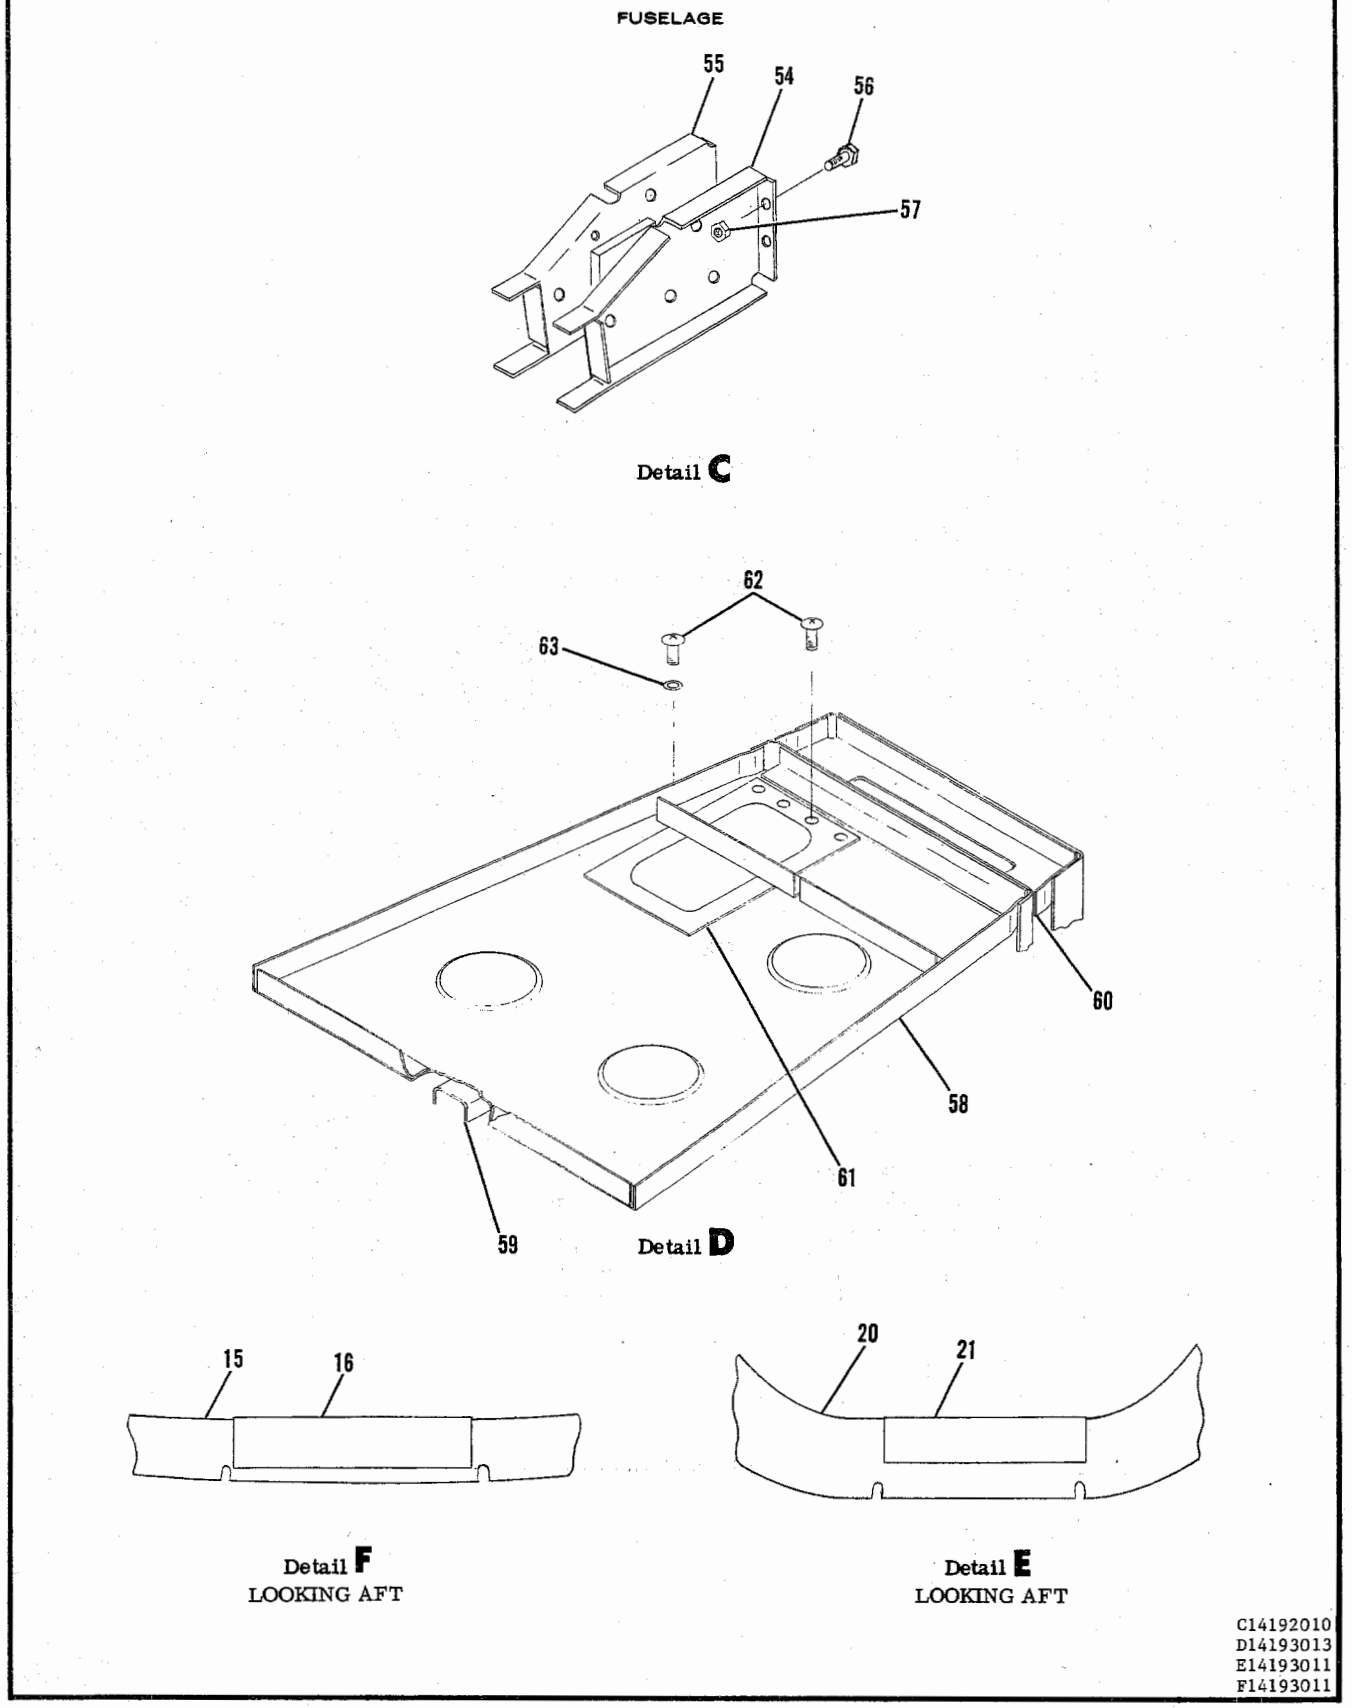

Figure 27. Tailcone Section Structure Installation (Sheet 2)

FUSELAGE

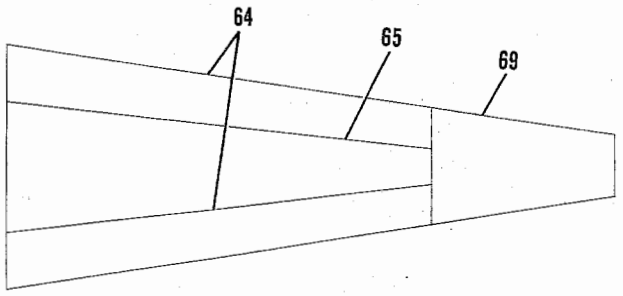

TOP VIEW

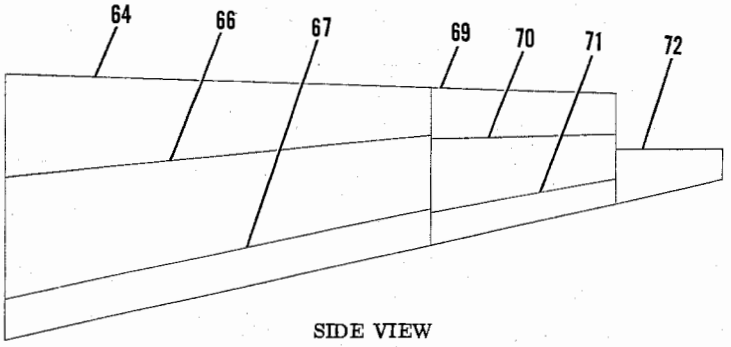

SIDE VIEW

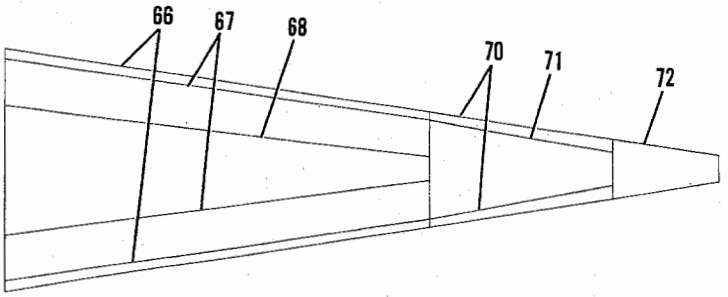

BOTTOM VIEW

14193009
14193008
14193009

Figure 27. Tailcone Section Structure Installation (Sheet 3)

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
27 -		TAILCONE SECTION STRUCTURE INSTALLATION	NP	
-1	5312045-11	. SKIN-DORSAL FWD	1	
	5312045-2	. DORSAL ASSY FSO 5312045-14	1	E
	5312045-14	. DORSAL ASSY	1	F
-2	5312045-5	. . SKIN	1	F
	5312045-15	. . SKIN	1	
-3	5312045-3	. . RIB-FWD STA 288.50	1	
-4	5312045-4	. . RIB-AFT STA 316.50	1	
-5	0831304-2	. RIB ASSY-DORSAL AFT	1	
-6	5312045-6	. ANGLE-ATTACH DORSAL	1	
-7	5312045-9	. ANGLE ASSY-LH DORSAL	1	
	5312045-10	. ANGLE ASSY-RH DORSAL	1	
	5312034-2	. FIN ASSY-VENTRAL	1	
-8	5312034-3	. . FIN-VENTRAL	1	
-9	5312034-4	. . BULKHEAD	1	
-10	5312034-5	. . BULKHEAD	1	
-11	5312034-6	. . BULKHEAD	1	
-12	5312041-2	. CHANNEL ASSY-TIE DOWN LUG	1	
-13	5312041-4	. DOUBLER-TIE DOWN LUG	1	
-14	0814118-1	. BUMPER-TIE DOWN LUG	1	
	5312000-2	. TAILCONE ASSY	1	
-15	5312018-4	. . BULKHEAD ASSY STA 266.00	1	
-16	5215022-2	. . SHIELD-CABLE STA 266.00	1	
-17	5312018-3	. . BULKHEAD ASSY STA 282.00	1	
-18	5312012-3	. . BULKHEAD ASSY STA 298.00	1	
-19	5312012-4	. . BULKHEAD ASSY STA 314.00	1	
-20	5312004-2	. . BULKHEAD STA 330.00	1	
-21	5215022-7	. . SHIELD-CABLE STA 330.00	1	
-22	5312010-2	. . BULKHEAD STA 346.00	1	
-23	5312020-2	. . BULKHEAD ASSY-CANTED STA 358.70	1	
-24	5312014-2	. . BULKHEAD ASSY STA 363.70	1	C
	5312014-15	. . BULKHEAD ASSY STA 363.70	1	D
-25	5312016-2	. . BULKHEAD STA 373.00 FSO 5312016-3	1	G
	5312016-3	. . BULKHEAD STA 373.00	1	H
-26	5312005-2	. . BULKHEAD ASSY-CANTED AFT STA 381.68	1	
-27	5312008-2	. . BULKHEAD ASSY STA 383.70	1	
-28	5312040-7	. . FAIRING-HORIZONTAL STABILIZER LWR LH	1	
	5312040-8	. . FAIRING-HORIZONTAL STABILIZER LWR RH	1	
-29	5312028-3	. . FAIRING-LH FIN REAR SPAR	1	
	5312028-2	. . FAIRING-RH FIN REAR SPAR	1	
-30	5312022-33	. . STRINGER-LH TOP OUTBD	1	
-31	5312022-32	. . STRINGER-RH TOP OUTBD	1	
-32	5312022-31	. . STRINGER-LH TOP INBD	1	
-33	5312022-30	. . STRINGER-RH TOP INBD	1	
-34	5312022-29	. . STRINGER-LH BOTTOM OUTBD	1	
-35	5312022-28	. . STRINGER-RH BOTTOM OUTBD	1	
-36	5312022-27	. . STRINGER-LH BOTTOM INBD	1	
-37	5312022-26	. . STRINGER-RH BOTTOM INBD	1	
-38	5312022-34	. . TEE-STRINGER BOTTOM CTR	1	
-39	5312022-35	. . FILLER	2	
-40	5312022-3	. . TEE-STRINGER LH LWR	1	
	5312022-2	. . TEE-STRINGER RH LWR	1	
-41	5312022-5	. . STRINGER-LH	1	
	5312022-4	. . STRINGER-RH	1	
-42	5312022-7	. . STRINGER-LH	1	
	5312022-6	. . STRINGER-RH	1	
-43	5312022-9	. . STRINGER-LH	1	
	5312022-8	. . STRINGER-RH	1	
-44	5312022-11	. . STRINGER-LH	1	
	5312022-10	. . STRINGER-RH	1	
-45	5312022-13	. . STRINGER-LH	1	
	5312022-12	. . STRINGER-RH	1	
-46	5312022-15	. . STRINGER-LH	1	
	5312022-14	. . STRINGER-RH	1	
-47	5312022-17	. . TEE-STRINGER LH UPR	1	
	5312022-16	. . TEE-STRINGER RH UPR	1	
-48	5312022-19	. . STRINGER-LH	1	
	5312022-18	. . STRINGER-RH	1	
-49	5312022-21	. . STRINGER-LH	1	
	5312022-20	. . STRINGER-RH	1	
-50	5312022-23	. . STRINGER-LH	1	
	5312022-22	. . STRINGER-RH	1	
-51	5312022-25	. . STRINGER-LH FSO 5312022-37	1	A
	5312022-37	. . STRINGER-LH	1	B
	5312022-24	. . STRINGER-RH FSO 5312022-36	1	A
	5312022-36	. . STRINGER-RH	1	B
-52	5312038-3	. . DOUBLER-FWD ACCESS PANEL	1	
-53	5312039-2	. . DOUBLER-AFT ACCESS PANEL RH SIDE ONLY	1	
-54	5312044-3	. . BRACKET ASSY-ELEVATOR BELLCRANK LH	1	
-55	5312044-2	. . BRACKET ASSY-ELEVATOR BELLCRANK RH	1	
		ATTACHING PARTS		
-56	AN3-10A	. . BOLT	2	
-57	MS17825-3	. . NUT	2	
		---*---		

CONTINUED

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
27 -58	5312025-5	. . PAN ASSY-FWD	1	
-59	5312025-4	. . CHANNEL	1	
-60	5312025-2	. . PAN-AFT	1	
-61	5312025-7	. . DOOR ASSY-ACCESS ELEVATOR & RUDDER RIGGING ATTACHING PARTS	1	
-62	MS27039-1-06	. . SCREW	14	
-63	AN960-10L	. . WASHER ---*---	2	
-64	5312000-21	. . SKIN-LH UPR FWD	1	
	5312000-20	. . SKIN-RH UPR FWD	1	
-65	5312000-25	. . SKIN-TOP CTR	1	
-66	5312000-23	. . SKIN-LH SIDE FWD	1	
	5312000-22	. . SKIN-RH SIDE FWD	1	
-67	5312000-9	. . SKIN-LH LWR FWD	1	
	5312000-8	. . SKIN-RH LWR FWD	1	
-68	5312000-26	. . SKIN-BOTTOM CTR	1	
-69	5312000-10	. . SKIN-UPR AFT	1	
-70	5312000-11	. . SKIN-LH CTR AFT	1	
	5312000-12	. . SKIN-RH CTR AFT	1	
-71	5312000-13	. . SKIN-LWR AFT	1	
-72	5312000-14	. . SKIN-LWR AFT	1	
		A---340-0001 THRU 340-0012 B---340-0013 & ON C---340-0001 THRU 340-0150 D---340-0151 & ON E---340-0001 THRU 340-0031 F---340-0032 & ON G---340-0001 THRU 340-0171 H---340-0172 & ON		

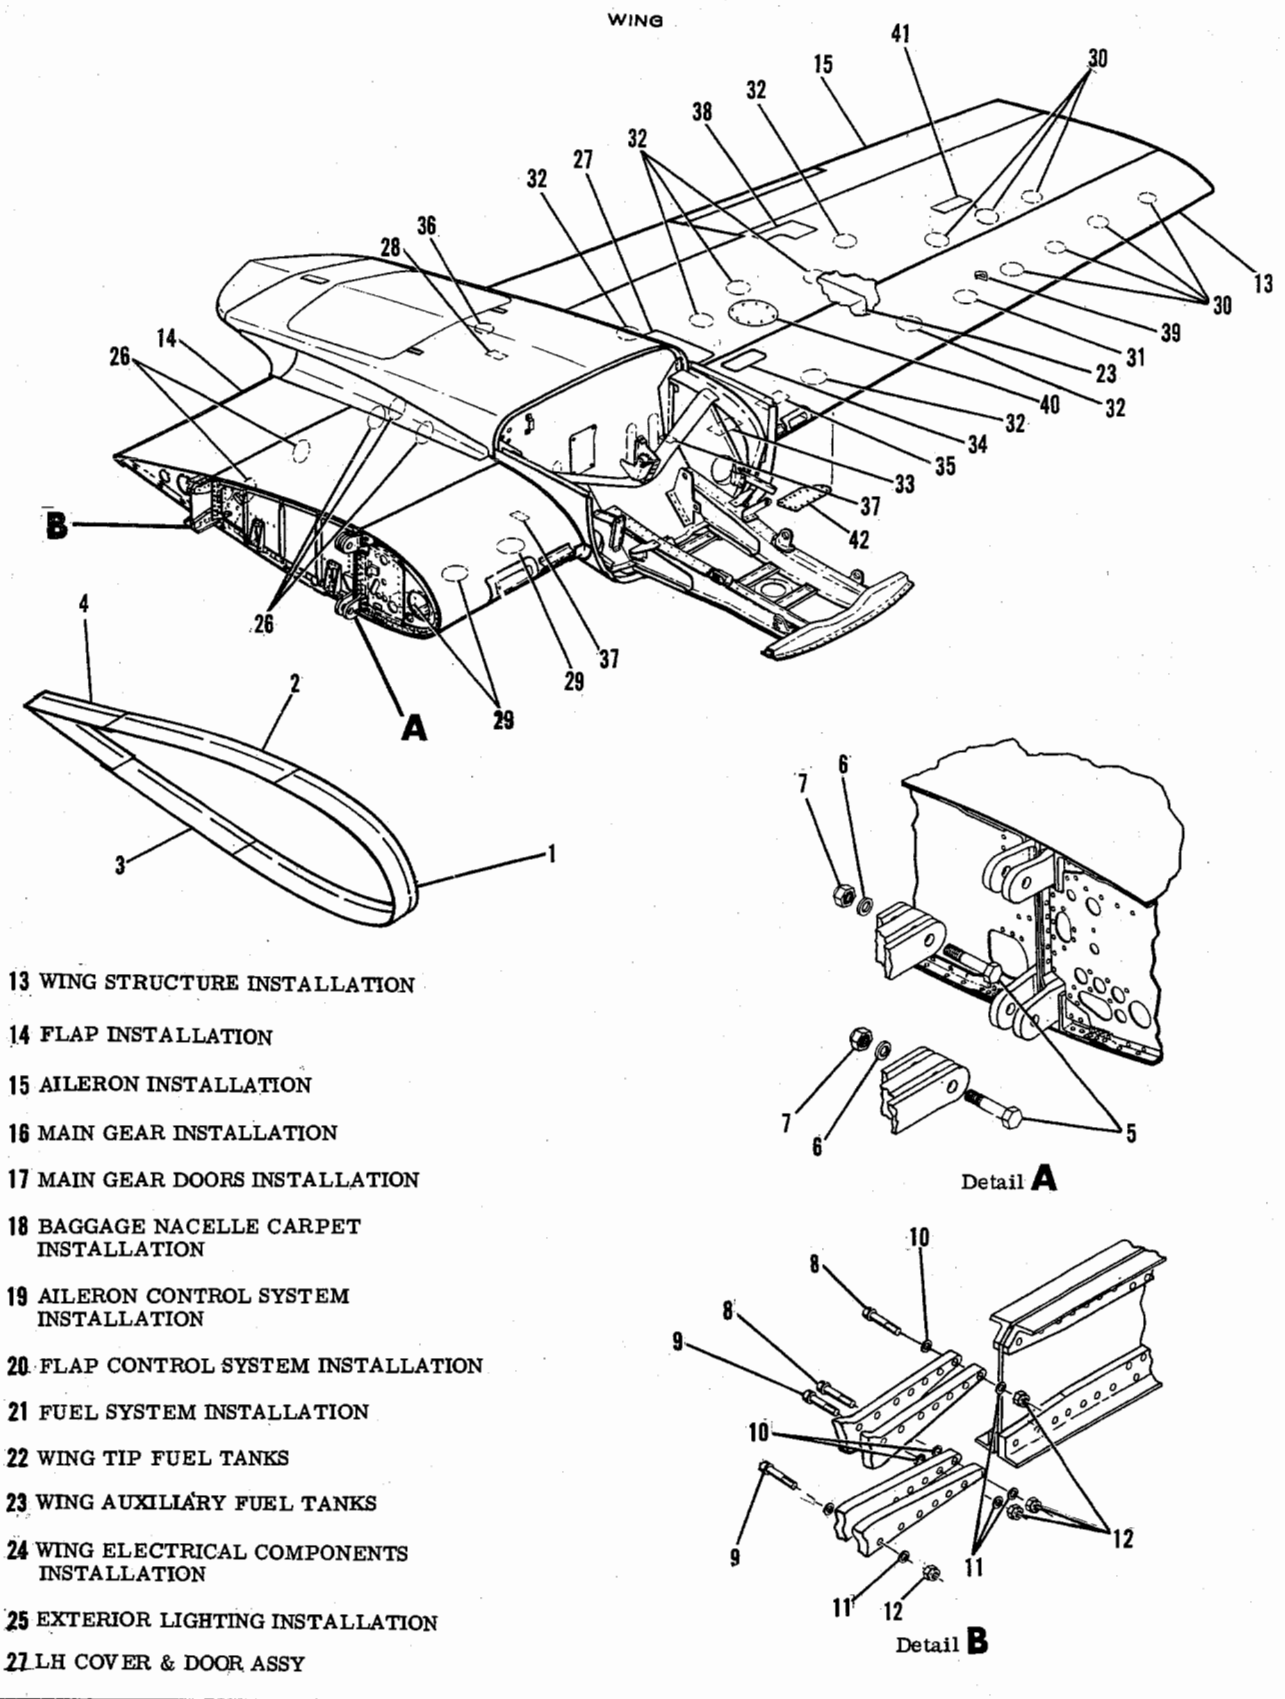

13 WING STRUCTURE INSTALLATION

14 FLAP INSTALLATION

15 AILERON INSTALLATION

16 MAIN GEAR INSTALLATION

17 MAIN GEAR DOORS INSTALLATION

18 BAGGAGE NACELLE CARPET INSTALLATION

19 AILERON CONTROL SYSTEM INSTALLATION

20 FLAP CONTROL SYSTEM INSTALLATION

21 FUEL SYSTEM INSTALLATION

22 WING TIP FUEL TANKS

23 WING AUXILIARY FUEL TANKS

24 WING ELECTRICAL COMPONENTS INSTALLATION

25 EXTERIOR LIGHTING INSTALLATION

27 LH COVER & DOOR ASSY

Figure 28. Wing Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
28 -		WING INSTALLATION	NP	
-1	5122013-201	. SKIN STRIP-FORWARD LH	1	
	5122013-202	. SKIN STRIP-FORWARD RH	1	
		ATTACHING PARTS		
	MS24694S49	. SCREW	17	
	MS24694S50	. SCREW	21	
		---*---		
-2	5622013-200	. SKIN-UPR CTR LH	1	
	5622013-201	. SKIN-UPR CTR RH	1	
-3	5622013-202	. SKIN-LWR CTR LH	1	
	5622013-203	. SKIN-LWR CTR RH	1	
		ATTACHING PARTS		
	MS24694S49	. SCREW	AR	
		---*---		
-4	5021502-205	. COVER STRIP-AFT LH	1	
	5021502-206	. COVER STRIP-AFT RH	1	
		ATTACHING PARTS		
	MS24694S49	. SCREW	17	
	MS24694S48	. SCREW	18	
		---*---		
		. WING ASSY-LH	1	
		. WING ASSY-RH	1	
		ATTACHING PARTS		
-5	NAS464P10L32A	. BOLT	2	
-6	AN960-1016	. WASHER	2	
-7	MS20364-1018C	. NUT	2	
-8	NAS146-47	. BOLT	12	
-9	NAS146-49	. BOLT	2	
-10	MS20002C6	. WASHER	14	
-11	MS20002-6	. WASHER	14	
-12	MS21045L6	. NUT	14	
		---*---		
-13	SEE FIG 29	. . WING STRUCTURE INSTL	1	
-14	SEE FIG 39	. . FLAP INSTL	1	
-15	SEE FIG 40	. . AILERON INSTL	1	
-16	SEE FIG 67	. . MAIN LANDING GEAR INSTL	REF	
-17	SEE FIG 80	. . MAIN GEAR DOORS INSTL	REF	
-18	SEE FIG 49	. . BAGGAGE NACELLE CARPET INSTL	REF	
-19	SEE FIG 84	. . AILERON CONTROL SYSTEM INSTL	REF	
-20	SEE FIG 92	. . FLAP CONTROL SYSTEM INSTL	REF	
-21	SEE FIG 114	. . FUEL SYSTEM INSTL	REF	
-22	SEE FIG 121	. . WING TIP FUEL TANKS	REF	
-23	SEE FIG 120	. . WING AUXILIARY FUEL TANKS	REF	
-24	SEE FIG 145	. . WING ELECTRICAL COMPONENTS INSTL	REF	
-25	SEE FIG 146	. . EXTERIOR LIGHTING INSTL	REF	
-26	0822275-85	. . COVER PLATE-WHEEL WELL	4	
	5021028-18	. . COVER PLATE-WHEEL WELL	1	
		ATTACHING PARTS		
	MS35207-261	. . SCREW	AR	
		---*---		
-27	SEE FIG 37	. . COVER & DOOR ASSY-LH	1	
	C822005-44	. . COVER ASSY-RH	1	
	0822005-8	. . SEAL-COVER LH	1	
	0822005-38	. . SEAL-COVER RH	1	
-28	0822275-165	. . PLATE-INSPECTION LH	1	
	0822275-164	. . PLATE-INSPECTION RH	1	
		ATTACHING PARTS		
	MS24693S270	. . SCREW	AR	
		---*---		
-29	0822361-1	. . PLATE-INSPECTION	1	
	0822367-1	. . PLATE-INSPECTION	2	
	5022014-48	. . PLATE-INSPECTION	1	
		ATTACHING PARTS		
	MS24693S270	. . SCREW	AR	
		---*---		
-30	0822380-23	. . PLATE-INSPECTION	7	
-31	0822380-23	. . PLATE-INSPECTION LH ONLY	1	
-32	0822380-24	. . PLATE-INSPECTION	6	
		ATTACHING PARTS		
	MS24693S270	. . SCREW	AR	
	MS24694S50	. . SCREW	18	
		---*---		
-33	C822510-15	. . COVER PLATE ASSY-FUEL STRAINER	1	
		ATTACHING PARTS		
	AN507-1032R6	. . SCREW	AR	
		---*---		
	SEE FIG 1	. . PLACARD-FUEL STRAINER DRAIN DAILY	1	
-34	5222514-3	. . DOOR ASSY-LH UPR	1	
	5222514-4	. . DOOR ASSY-RH UPR	1	
-35	0822513-9	. . DOOR-ACCESS LH LWR	1	
	C822513-13	. . DOOR-ACCESS RH LWR	1	
		ATTACHING PARTS		
	MS24693S270	. . SCREW	12	
		---*---		

CONTINUED

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
28 -36	CM2692-24-1H	. . PLUG BUTTON	1	
-37	0851000-95	. . PLATE-INSPECTION	2	
		ATTACHING PARTS		
	S102278-6	. . SCREW	AR	
		---*---		
-38	5021013-9	. . DOOR-ACCESS LH	1	
	5021013-10	. . DOOR-ACCESS RH	1	
		ATTACHING PARTS		
	MS24693S271	. . SCREW	AR	
		---*---		
-39	0523615-1	. . RING-MOORING	1	
		ATTACHING PARTS		
	AN3-14A	. . BOLT	1	
	0523616-1	. . SPRING	1	
	MS21042-3	. . NUT	1	
		---*---		
	MS20392-1C39	. . PIN	1	
	AN960-4	. . WASHER	1	
	MS24665-132	. . PIN COTTER	1	
-40	5026016-1	. . COVER PLATE ASSY STD FUEL	1	
	5026016-7	. . COVER PLATE ASSY AUX FUEL	1	A
-41	0822380-43	. . DOOR-ACCESS 60 GAL FUEL SYSTEM	1	A
		ATTACHING PARTS		
	MS24693S270	. . SCREW	10	A
		---*---		
	0822380-42	. . DOUBLER	1	A
-42	5322110-12	. . DOOR-ACCESS LH SIGNAL CONDITIONER	1	B
		ATTACHING PARTS		
	AN52510R10	. . SCREW	18	B
		---*---		
	5322110-13	. . DOUBLER ASSY-LH	1	B

A---340-0151 & ON
B---340-0009 & ON

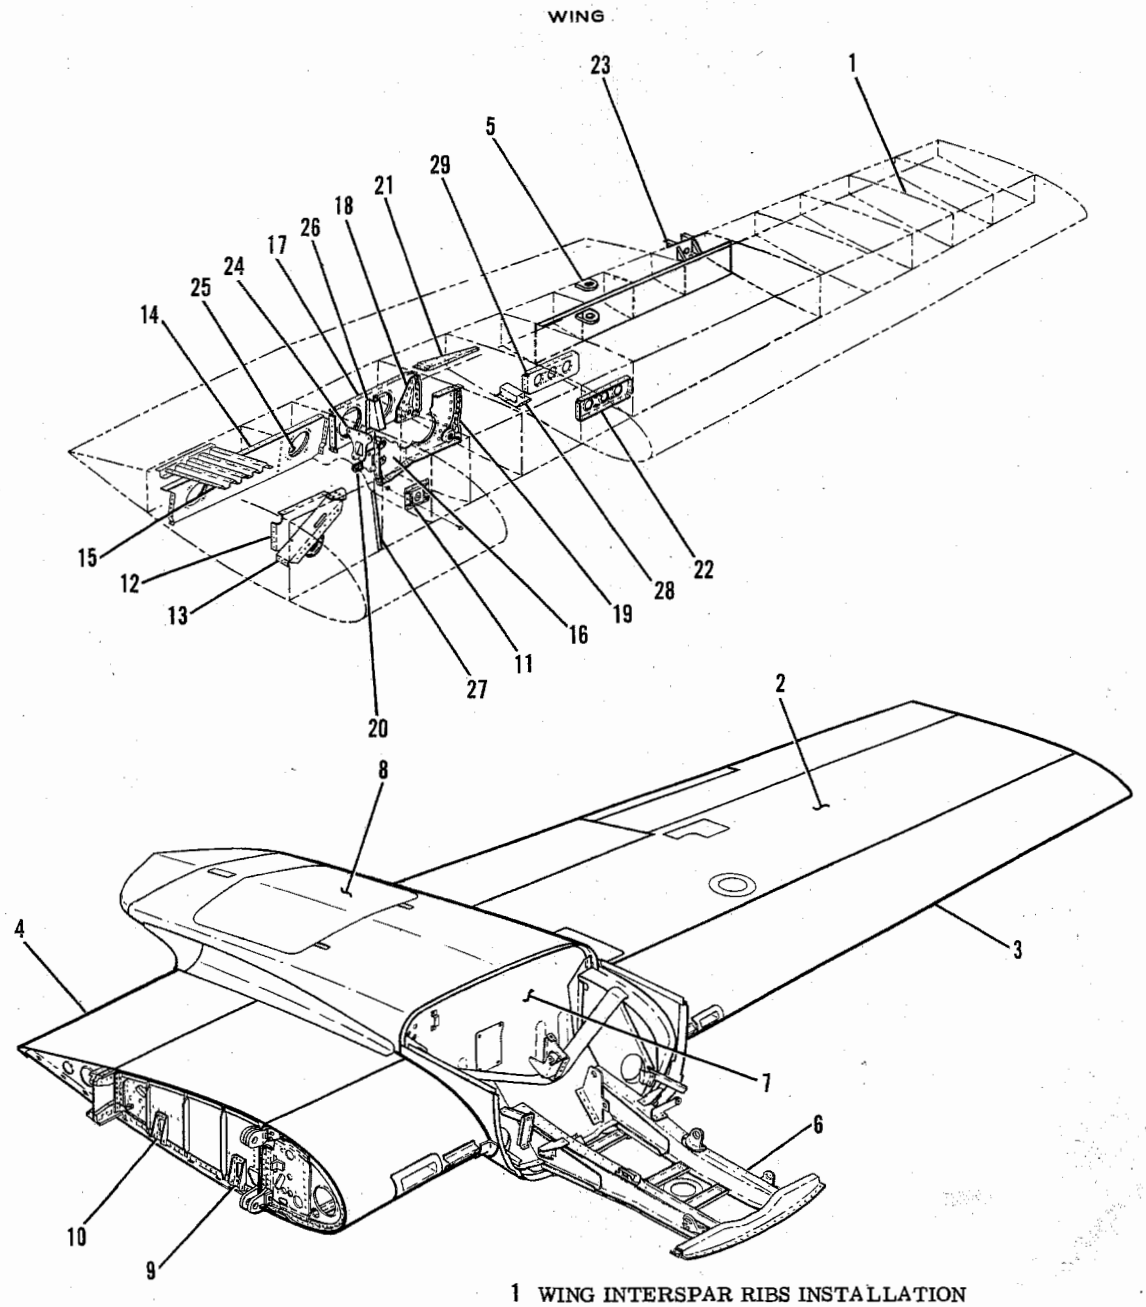

1 WING INTERSPAR RIBS INSTALLATION

2 WING INTERSPAR SKINS AND STRINGERS INSTALLATION

3 FRONT SPAR AND LEADING EDGE ASSEMBLY

4 REAR SPAR AND TRAILING EDGE ASSEMBLY

5 CONTROL SUPPORT BRACKETS INSTALLATION

6 NACELLE STRUCTURE INSTALLATION

7 FIREWALL INSTALLATION

8 NACELLE BAGGAGE COMPARTMENT INSTALLATION

24 GEAR SUPPORT

Figure 29. Wing Structure Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
29 -		WING STRUCTURE INSTALLATION	NP	
	0822038-43 *	. WING STRUCTURE ASSY-LH STANDARD FUEL	1	
	0822038-44 *	. WING STRUCTURE ASSY-RH STANDARD FUEL	1	
	5620100-18 *	. WING STRUCTURE ASSY-LH AUXILIARY FUEL	1	B
	5620100-23 *	. WING STRUCTURE ASSY-LH AUXILIARY FUEL	1	C
	5620100-19 *	. WING STRUCTURE ASSY-RH AUXILIARY FUEL	1	B
	5620100-22 *	. WING STRUCTURE ASSY-RH AUXILIARY FUEL	1	C
-1	SEE FIG 30	. . WING INTERSPAR RIBS INSTL	1	
-2	SEE FIG 31	. . WING INTERSPAR SKINS AND STRINGERS INSTL	1	
-3	SEE FIG 32	. . WING FRONT SPAR AND LEADING EDGE ASSY	1	
-4	SEE FIG 33	. . WING REAR SPAR AND TRAILING EDGE ASSY	1	
-5	SEE FIG 34	. . CONTROL SUPPORT BRACKETS INSTL	1	
-6	SEE FIG 35	. . NACELLE STRUCTURE INSTL	1	
-7	SEE FIG 36	. . NACELLE FIREWALL INSTL	1	
-8	SEE FIG 37	. . NACELLE BAGGAGE COMPARTMENT INSTL	1	
-9	0822100-45	. . BRACKET-GEAR DOOR FORWARD HINGE	1	
-10	0822100-46	. . BRACKET-GEAR DOOR AFT HINGE	1	
		ATTACHING PARTS		
	MS24693S273	. . SCREW	2	
	MS21044N3	. . NUT	2	
		---*---		
-11	0843508-4	. . SUPPORT ASSY-GEAR	1	
		ATTACHING PARTS		
	AN3-5A	. . BOLT	2	
	MS21044N3	. . NUT	2	
		---*---		
	MS20200KP6	. . . BEARING	1	
	NAS69-143	. . . RETAINER-BEARING	1	
-12	5021023-9	. . WEB ASSY-DOOR ACTUATOR ROD LH	1	
	5021023-8	. . WEB ASSY-DOOR ACTUATOR ROD RH	1	
		ATTACHING PARTS		
	MS27039-1-06	. . SCREW	5	
		---*---		
	5021023-7	. . . STOP	1	
-13	0822000-45	. . BRACKET-DOOR ACTUATOR REINFORCEMENT LH	1	
	0822000-46	. . BRACKET-DOOR ACTUATOR REINFORCEMENT RH	1	
		ATTACHING PARTS		
	CR163C5-8	. . RIVET CY	3	
		---*---		
-14	5021028-15	. . SPAR ASSY-AUXILIARY LH	1	
	5021028-14	. . SPAR ASSY-AUXILIARY RH	1	
-15	0822000-25	. . REINFORCEMENT-WALK LH	1	
	0822000-26	. . REINFORCEMENT-WALK RH	1	
-16	5222100-3	. . SPAR ASSY-AUXILIARY LH	1	
	5222100-4	. . SPAR ASSY-AUXILIARY RH	1	
-17	5221027-11	. . SPAR ASSY-LH	1	
	5221027-12	. . SPAR ASSY-RH	1	
-18	0822724-11	. . FORGING ASSY-AFT LH	1	
	0822724-10	. . FORGING ASSY-AFT RH	1	
-19	0822720-19	. . FORGING ASSY-FWD LH	1	
	0822720-18	. . FORGING ASSY-FWD RH	1	
		ATTACHING PARTS		
	AN4-5A	. . BOLT FWD UPR	2	
	AN4-6A	. . BOLT FWD LWR	2	
	AN4-6A	. . BOLT AFT	4	
	MS2044N4	. . NUT AFT	4	
		---*---		
	MS24461-12	. . . BEARING-NEEDLE	1	
-20	5027002-1	. . BRACKET ASSY-GEAR TORQUE TUBE	1	
	5027002-3	. . BRACKET ASSY-GEAR TORQUE TUBE ALT FOR 5027002-1	1	
	MS24461S	. . . BEARING	1	
	5NBC713YJ	. . . BEARING USE WITH 5027002-3 TCR	1	
-21	5222105-1	. . GUSSET-UPPER INBOARD	1	
	5222105-2	. . GUSSET-LOWER INBOARD	1	
-22	0822005-25	. . SUPPORT ASSY-BATTERY BOX FWD	1	
-23	5022053-2	. . BRACKET ASSY-TAB ACTUATOR AILERON	1	
-24	SEE FIG 67	. . SUPPORT-GEAR LH & RH	1	
-25	0811500-1	. . PLATE ASSY-JACKING	1	
		ATTACHING PARTS		
	MS24694S55	. . SCREW	2	
	MS21044N3	. . NUT	2	
		---*---		
-26	5222107-1	. . BRACE-AFT ENGINE BEAM LH	1	
	5222107-2	. . BRACE-AFT ENGINE BEAM RH	1	
-27	5220510-1	. . SEAL RETAINER LH	1	
	5220510-2	. . SEAL RETAINER RH	1	
-28	0312155-4	. . DOOR ASSY-GROUND SERVICE PLUG	1	A
	0822032-1	. . DOUBLER-GROUND SERVICE PLUG DOOR	1	A
-29	0822005-52	. . SUPPORT ASSY-BATTERY BOX AFT	1	

*---SEE SERVICE MANUAL FOR MODIFICATION REQUIREMENTS PRIOR TO INSTALLATION OF WING

A---340-0001 THRU 340-0500
B---340-0001 THRU 340-0150
C---340-0151 & ON

WING

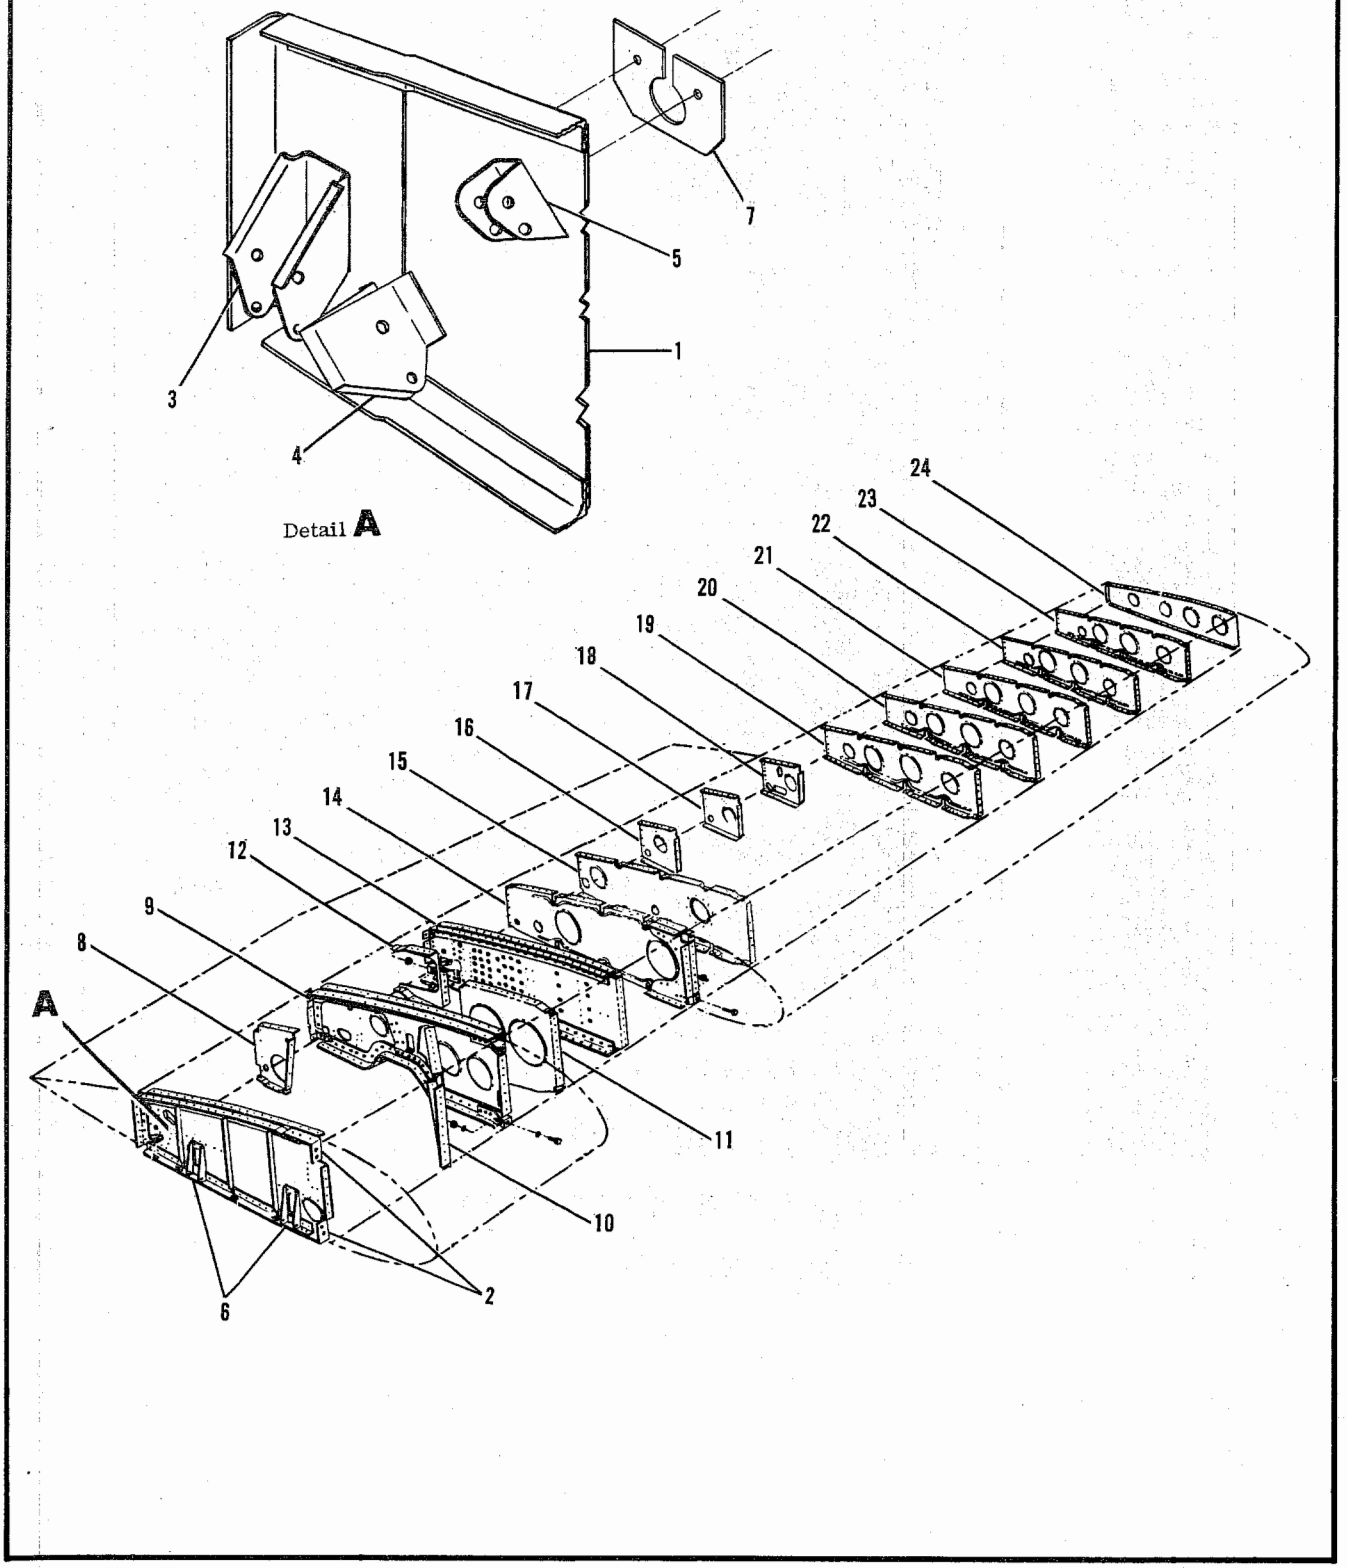

Figure 30. Wing Interspar Ribs Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
30 -		WING INTERSPAR RIBS INSTALLATION	NP	
-1	5022104-65	. RIB ASSY-CTR ROOT LH	1	
	5022104-66	. RIB ASSY-CTR ROOT RH	1	
-2	0822790-1	. . FITTING-LH UPR	1	
	0822790-2	. . FITTING-RH UPR	1	
	0822790-10	. . FITTING-RH LWR	1	
	0822790-11	. . FITTING-LH LWR	1	
		ATTACHING PARTS		
	AN4-22A	. . BOLT	2	
	MS2044N4	. . NUT	2	
		---*---		
-3	5025014-1	. . BRACKET-AILERON PULLEY	1	
-4	5011500-9	. . BRACKET-AILERON PULLEY LH	1	
	5011500-10	. . BRACKET-AILERON PULLEY RH	1	
-5	5025016-1	. . BRACKET-TRIM TAB PULLEY WEU 5025016-2	1	J
	5025016-2	. . BRACKET-TRIM TAB PULLEY	1	K
-6	0822100-45	. . BRACKET-LANDING GEAR DOOR FWD HINGE	1	
	0822100-46	. . BRACKET-LANDING GEAR DOOR AFT HINGE	1	
		ATTACHING PARTS		
	AN507-10R10	. . SCREW	2	
	MS21044N3	. . NUT	2	
		---*---		
-7	0822100-59	. . RUB BLOCK	2	
		ATTACHING PARTS		
	MS35206-245	. . SCREW	2	
	MS21044N08	. . NUT	2	
		---*---		
-8	0822275-153	. RIB-CTR LH	1	
	0822275-152	. RIB-CTR RH	1	
-9	0822175-79	. RIB ASSY-CTR LH FSO 0822175-83	1	G
	0822175-83	. RIB ASSY-CTR LH	1	H
	0822175-74	. RIB ASSY-CTR RH FSO 0822175-84	1	G
	0822175-84	. RIB ASSY-CTR RH	1	H
		ATTACHING PARTS		
	AN5-12A	. BOLT	2	
	AN960-516	. WASHER	4	
	MS21044N5	. NUT	2	
		---*---		
	NAS1054-6-5	. . RIVET-HI SHEAR	8	
	NAS179-6	. . COLLAR	8	
	0822350-170	. . BRACKET-AILERON PULLEY	1	
-10	0822275-173	. RIB-CTR DIAGONAL LH	1	
	0822275-174	. RIB-CTR DIAGONAL RH	1	
-11	5222106-3	. RIB-CTR LH FSO 5222106-27	1	C
	5222106-27	. RIB-CTR LH	1	C
	5222106-4	. RIB-CTR RH FSO 5222106-28	1	D
	5222106-28	. RIB-CTR RH	1	D
-12	5222108-1	. RIB-CTR UPR LH	1	
	5222108-3	. RIB-CTR LWR LH	1	
	5222108-2	. RIB-CTR UPR RH	1	
	5222108-4	. RIB-CTR LWR RH	1	
-13	5022104-51	. RIB ASSY-CTR LH	1	
	5022104-52	. RIB ASSY-CTR RH	1	
		ATTACHING PARTS		
	AN4-10A	. BOLT	2	
	MS2044N4	. NUT	2	
	AN960-16L	. WASHER	2	
		---*---		
	0822350-170	. . BRACKET-AILERON PULLEY	1	
	0310113	. . BRACKET-TRIM TAB PULLEY	1	
-14	0822275-131	. RIB ASSY-CTR LH STD FUEL	1	
	0822275-132	. RIB ASSY-CTR RH STD FUEL	1	
	0822035-7	. RIB ASSY-CTR LH AUX FUEL	1	
	0822035-2	. RIB ASSY-CTR RH AUX FUEL	1	
		ATTACHING PARTS		
	AN4-11A	. BOLT	2	
	MS2044N4	. NUT	2	
		---*---		
	NAS178-6-3	. . RIVET-HI SHEAR	3	
	NAS179-6	. . COLLAR	6	
-15	0822350-307	. RIB ASSY-CTR LH STD FUEL	1	
	0822350-308	. RIB ASSY-CTR RH STD FUEL	1	
	0822022-9	. RIB ASSY-CTR LH AUX FUEL	1	
	0822022-10	. RIB ASSY-CTR RH AUX FUEL	1	
-16	0822350-311	. RIB ASSY-CTR LH STD FUEL	1	
	0822350-312	. RIB ASSY-CTR RH STD FUEL	1	
	0823332-7	. RIB ASSY-CTR STUB LH AUX FUEL	1	
	0823332-6	. RIB ASSY-CTR STUB RH AUX FUEL	1	
	0412467	. . BRACKET-TRIM TAB PULLEY	1	
-17	0822350-315	. RIB ASSY-CTR LH STD FUEL	1	
	0822350-316	. RIB ASSY-CTR RH STD FUEL	1	
	0823333-5	. RIB ASSY-CTR STUB LH AUX FUEL	1	
	0823333-6	. RIB ASSY-CTR STUB RH AUX FUEL	1	
	0412467	. . BRACKET-TRIM TAB PULLEY	1	
-18	0822350-283	. RIB-CTR LH STD FUEL	1	
	0822350-320	. RIB-CTR RH STD FUEL	1	
	0822027-5	. RIB-CTR LH AUX FUEL	1	
	0822027-8	. RIB-CTR RH AUX FUEL	1	

CONTINUED

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
30 -19	0822350-281	. RIB-CTR LH STD FUEL WEU 0822350-321	1	E
	0822350-321	. RIB-CTR LH STD FUEL	1	F
	0822350-280	. RIB-CTR RH STD FUEL WEU 0822350-320	1	E
	0822350-320	. RIB-CTR RH STD FUEL	1	F
	0822023-1	. RIB ASSY-LH AUX FUEL	1	A
	0822023-9	. RIB ASSY-LH AUX FUEL	1	B
	0822023-2	. RIB ASSY-RH AUX FUEL	1	A
	0822023-10	. RIB ASSY-RH AUX FUEL	1	B
-20	0822350-93	. RIB-CTR LH STD FUEL	1	
	0822350-94	. RIB-CTR RH STD FUEL	1	
	0822040-1	. RIB-CTR LH AUX FUEL	1	A
	0822040-13	. RIB-CTR LH AUX FUEL	1	B
	0822040-2	. RIB-CTR RH AUX FUEL	1	A
	0822040-14	. RIB-CTR RH AUX FUEL	1	B
-21	0822350-95	. RIB-CTR LH STD FUEL	1	
	0822350-96	. RIB-CTR RH STD FUEL	1	
	0822040-3	. RIB-CTR LH AUX FUEL	1	A
	0822040-19	. RIB-CTR LH AUX FUEL	1	B
	0822040-4	. RIB-CTR RH AUX FUEL	1	A
	0822040-20	. RIB-CTR RH AUX FUEL	1	B
-22	0822350-97	. RIB-CTR LH STD FUEL	1	
	0822350-98	. RIB-CTR RH STD FUEL	1	
	0822040-5	. RIB-CTR LH AUX FUEL	1	A
	0822040-6	. RIB-CTR RH AUX FUEL	1	A
-23	0822350-99	. RIB-CTR LH STD FUEL	1	
	0822350-100	. RIB-CTR RH STD FUEL	1	
	0822040-7	. RIB-CTR LH AUX FUEL	1	A
	0822040-8	. RIB-CTR RH AUX FUEL	1	A
-24	0822350-201	. RIB-CTR LH STD FUEL	1	
	0822350-202	. RIB-CTR RH STD FUEL	1	
	0822040-9	. RIB ASSY-CTR LH AUX FUEL	1	A
	0822040-17	. RIB ASSY-CTR LH AUX FUEL	1	B
	0822040-10	. RIB ASSY-CTR RH AUX FUEL	1	A
	0822040-18	. RIB ASSY-CTR RH AUX FUEL	1	B

A---340-0001 THRU 340-0150
B---340-0151 & ON
C---340-0001 THRU 340-0211
D---340-0212 & ON
E---340-0001 THRU 340-0542
F---340-0543 & ON
G---340-0001 THRU 340A0002
H---340A0003 & ON
J---340-0001 THRU 340A0030
K---340A0031 & ON

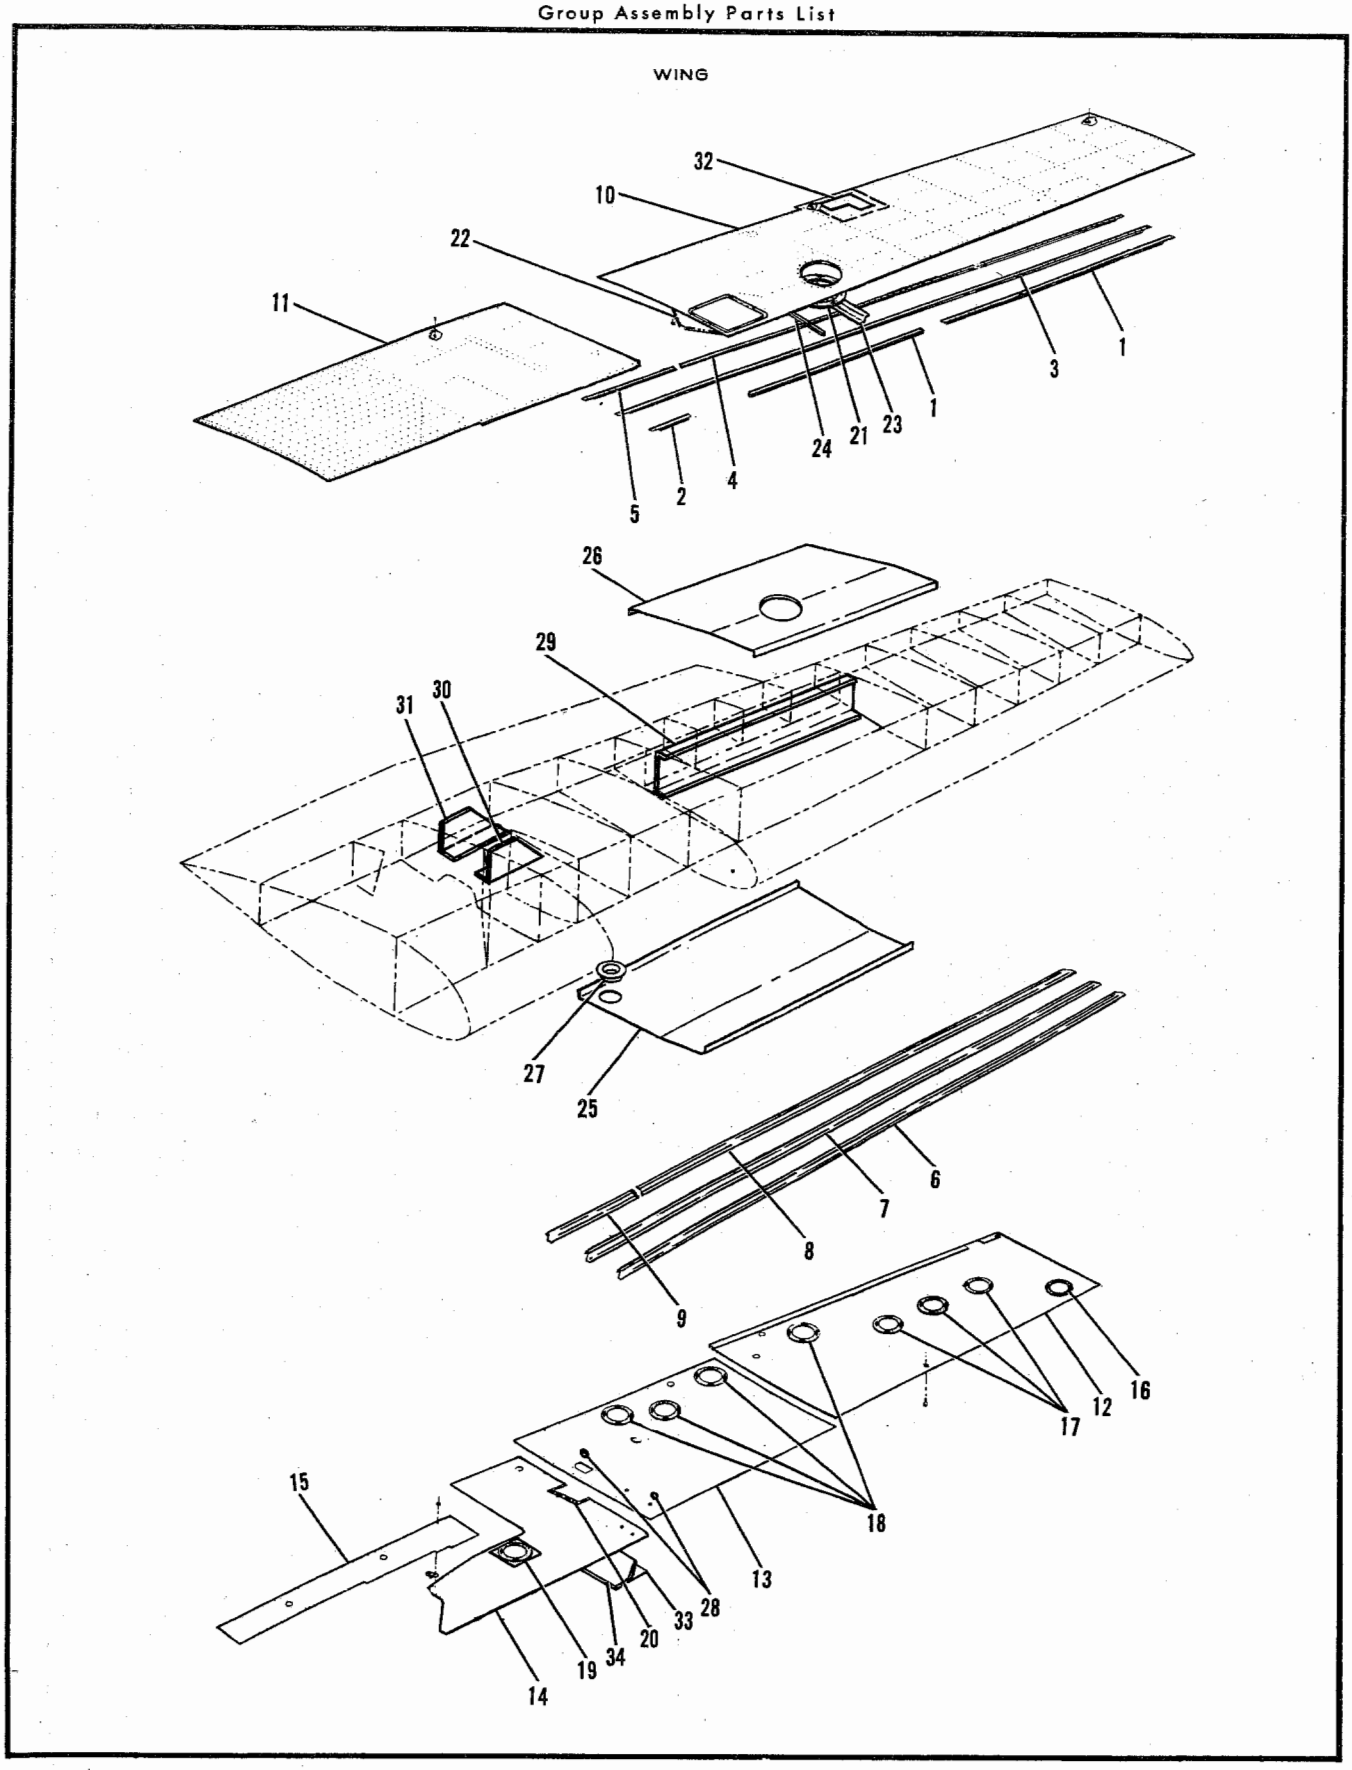

Figure 31. Wing Interspar Skins & Stringers Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
31 -		WING INTERSPAR SKINS & STRINGERS INSTALLATION	NP	
-1	0822815-19	. STRINGER-UPR FWD OUTBD LH STD FUEL	1	
	0822815-20	. STRINGER-UPR FWD OUTBD RH STD FUEL	1	
	0822030-1	. STRINGER-UPR FWD OUTBD LH AUX FUEL	1	
	0822030-3	. STRINGER-UPR FWD CTR LH AUX FUEL	1	
	0822030-2	. STRINGER-UPR FWD OUTBD RH AUX FUEL	1	
	0822030-4	. STRINGER-UPR FWD CTR RH AUX FUEL	1	
-2	0822815-5	. STRINGER-UPR FWD INBD LH	1	
	0822815-6	. STRINGER-UPR FWD INBD RH	1	
-3	0822815-9	. STRINGER-UPR CTR LH STD FUEL	1	
	0822815-10	. STRINGER-UPR CTR RH STD FUEL	1	
	0822030-5	. STRINGER-UPR CTR LH AUX FUEL	1	
	0822030-6	. STRINGER-UPR CTR RH AUX FUEL	1	
-4	0822815-43	. STRINGER-UPR AFT OUTBD LH	1	A
	0822815-51	. STRINGER-UPR AFT OUTBD LH	1	B
	0822815-44	. STRINGER-UPR AFT OUTBD RH	1	A
	0822815-52	. STRINGER-UPR AFT OUTBD RH	1	B
-5	0822815-47	. STRINGER-UPR AFT INBD LH	1	
	0822815-48	. STRINGER-UPR AFT INBD RH	1	
-6	0822815-35	. STRINGER-LWR LH STD FUEL	1	
	0822815-36	. STRINGER-LWR FWD RH STD FUEL	1	
	0822030-7	. STPINGER-LWR FWD LH AUX FUEL	1	
	0822030-8	. STRINGER-LWR FWD RH AUX FUEL	1	
-7	0822815-37	. STRINGER-LWR CTR LH STD FUEL	1	
	0822815-38	. STRINGER-LWR CTR RH STD FUEL	1	
	0822030-9	. STRINGER-LWR CTR LH AUX FUEL	1	
	0822030-10	. STRINGER-LWR CTR RH AUX FUEL	1	
-8	0822815-45	. STRINGER-LWR AFT OUTBD LH	1	
	0822815-46	. STRINGER-LWR AFT OUTBD RH	1	
-9	0822815-49	. STRINGER-LWR AFT INBD LH	1	
	0822815-50	. STRINGER-LWR AFT INBD RH	1	
-10	0822038-11	. SKIN-UPR OUTBD STD FUEL	1	
	5620100-9	. SKIN-UPR OUTBD AUX FUEL	1	
-11	0822000-9	. SKIN-UPR INBD	1	
	5154023-4	. DOUBLER USED WITH HYD AIRCONDITIONING	2	C
-12	0822038-9	. SKIN-LWR OUTBD STD FUEL	1	
	5620100-10	. SKIN-LWR OUTBD AUX FUEL	1	
-13	0822038-18	. SKIN-LWR CTR LH STD FUEL	1	
	5620100-11	. SKIN-LWR CTR LH AUX FUEL	1	
	0822038-18	. SKIN-LWR CTR RH STD FUEL	1	
	5620100-12	. SKIN-LWR CTR RH AUX FUEL	1	
-14	0822037-13	. SKIN-LWR INBD STD FUEL	1	
	5620100-15	. SKIN-LWR INBD AUX FUEL FSO 0822037-13	1	A
	0822037-13	. SKIN-LWR INBD AUX FUEL	1	B
-15	0822037-18	. SKIN-LWR WHEEL WELL AFT STD FUEL	1	
	5620100-8	. SKIN-LWR WHEEL WELL AFT AUX FUEL	1	
-16	0822380-1	. DOUBLER-INSPECTION OPENING	1	
	0822380-19	. DOUBLER-INSPECTION OPENING AUX FUEL	1	
-17	0822380-1	. DOUBLER-INSPECTION OPENING	3	
	0822380-19	. DOUBLER-INSPECTION OPENING	3	
-18	0822380-2	. DOUBLER-INSPECTION OPENING	4	
	0822380-20	. DOUBLER-INSPECTION OPENING	4	
-19	0822037-14	. DOUBLER-INSPECTION OPENING	1	
	5620100-14	. DOUBLER-INSPECTION OPENING AUX FUEL	1	
-20	0822275-29	. DOUBLER-EXTERNAL POWER RECEPTACLE LH	1	
	0822275-30	. DOUBLER-EXTERNAL POWER RECEPTACLE RH	1	
-21	0721304-1	. DOUBLER-FUEL CAP & ADAPTER AUX FUEL	1	
-22	0822005-25	. DOUBLER ASSY-ACCESS DOOR LH	1	
	0822005-29	. DOUBLER ASSY-ACCESS DOOR RH	1	
-23	0822028-1	. FORMER-FUEL CAP OPENING OUTBD LH AUX FUEL	1	
	0822028-2	. FORMER-FUEL CAP OPENING OUTBD RH AUX FUEL	1	
-24	0822029-1	. FORMER-FUEL CAP OPENING INBD LH AUX FUEL	1	
	0822029-2	. FORMER-FUEL CAP OPENING INBD RH AUX FUEL	1	
-25	0822024-1	. FLOOR-FUEL TANK WELL LH AUX FUEL	1	
	0822024-2	. FLOOR-FUEL TANK WELL RH AUX FUEL	1	
-26	0822025-1	. TOP-FUEL TANK WELL LH AUX FUEL	1	
	0822025-2	. TOP-FUEL TANK WELL RH AUX FUEL	1	
-27	0823340-2	. DRAIN SUPPORT-SUMP AUX FUEL	1	
-28	0823337-2	. GROMMET-DRAIN AUX FUEL	1	
-29	0822026-1	. TANK WALL-AFT LH AUX FUEL	1	
	0822026-2	. TANK WALL-AFT RH AUX FUEL	1	
-30	5222103-1	. DOUBLER	1	
	5222103-2	. DOUBLER	1	
-31	5222102-1	. DOUBLER STD FUEL	1	
	5222102-2	. DOUBLER STD FUEL	1	
-32	0822031-5	. DOUBLER ASSY-LH ACCESS OPENING	1	
	0822031-6	. DOUBLER ASSY-RH ACCESS OPENING	1	
-33	0822042-1	. DOUBLER-SKIN PROTECTION LH STEEL	1	
	0822042-2	. DOUBLER-SKIN PROTECTION RH STEEL	1	
-34	0822042-3	. INSULATION-ASBESTOS	1	

A---340-0001 THRU 340-0150
B---340-0151 & ON
C---340-0301 & ON

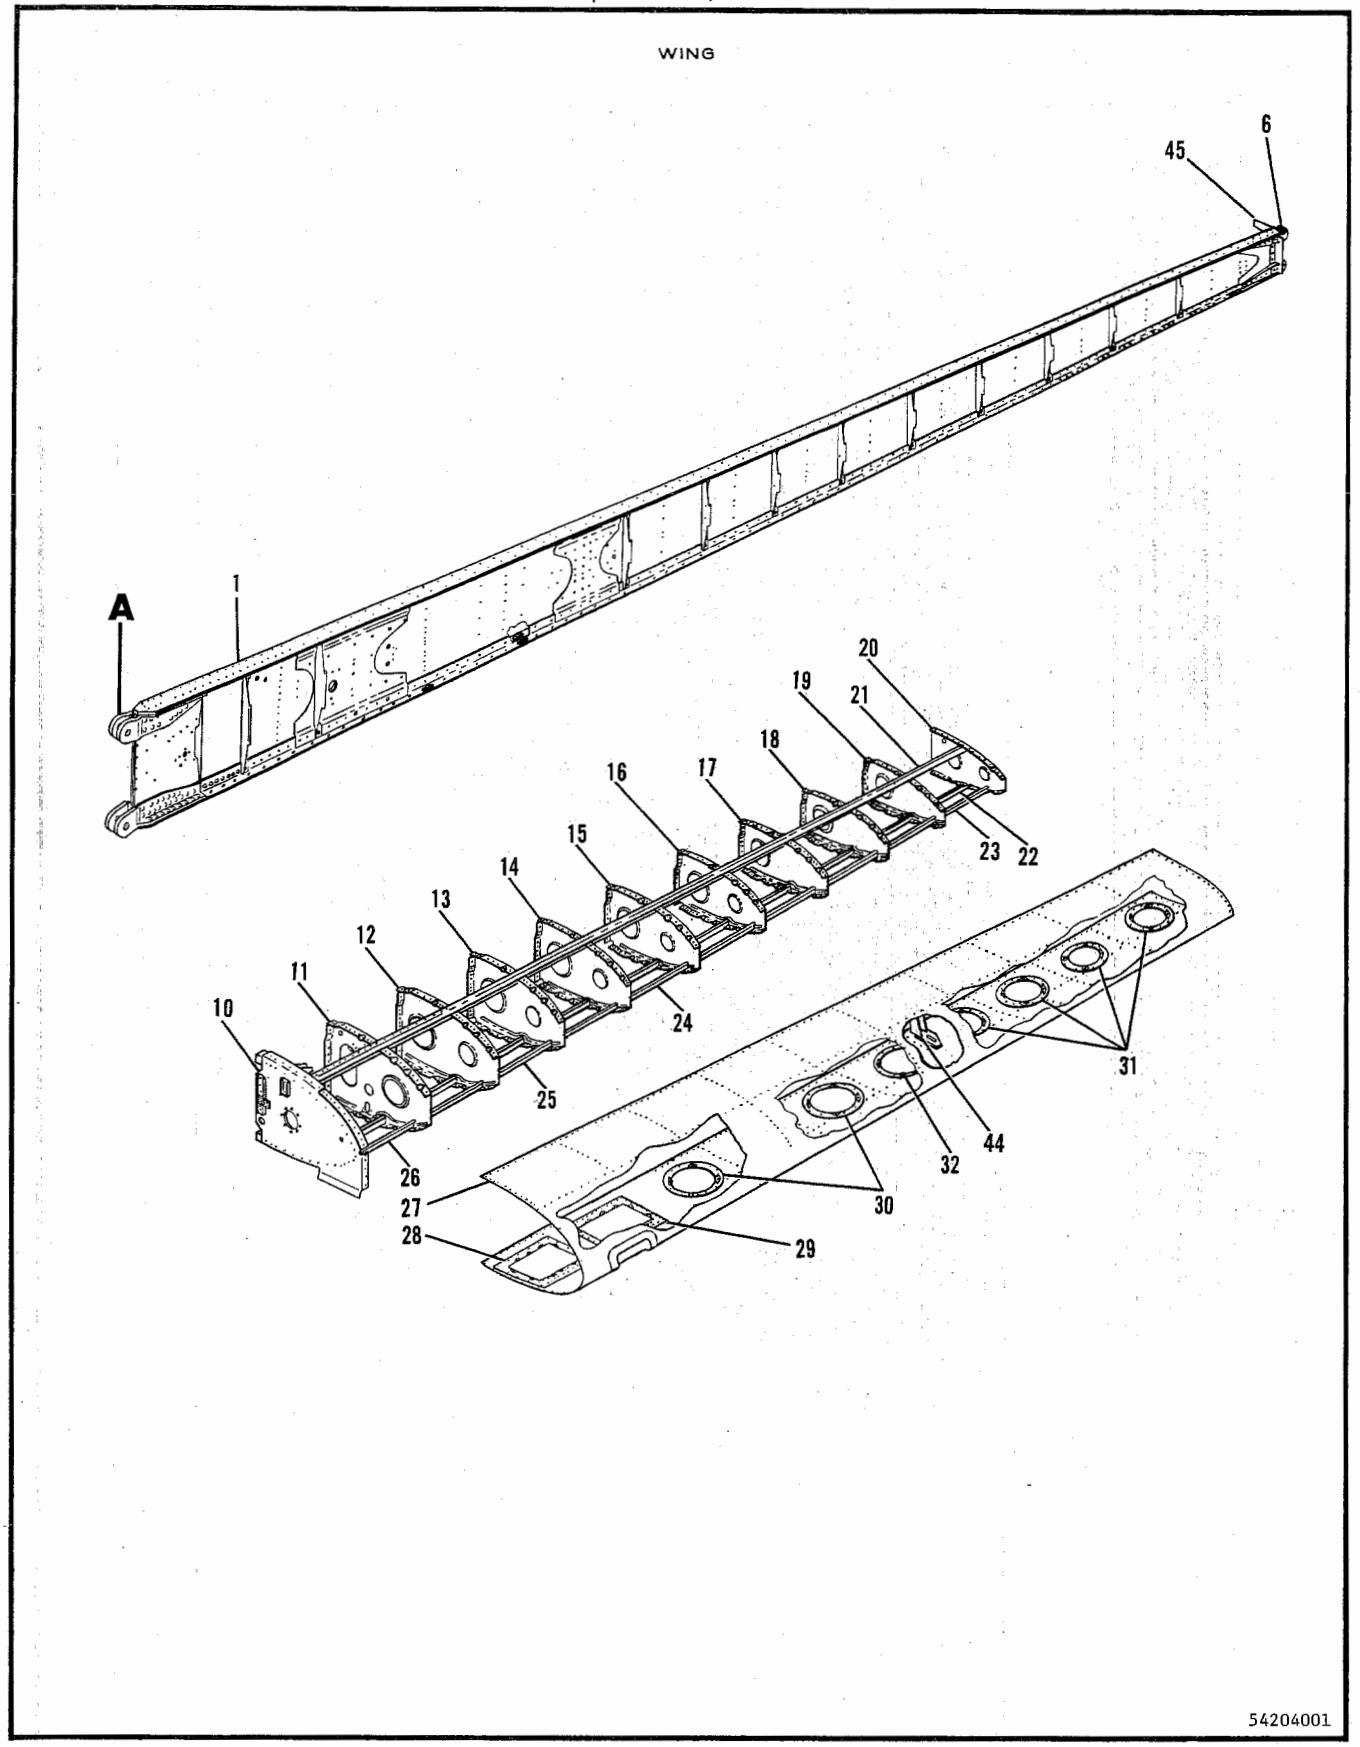

Figure 32. Wing Front Spar & Leading Edge Assembly (Sheet 1 of 2)

WING

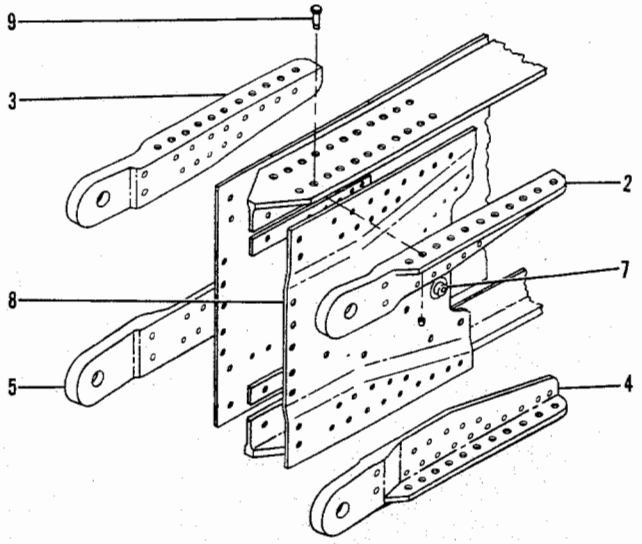

Detail **A**

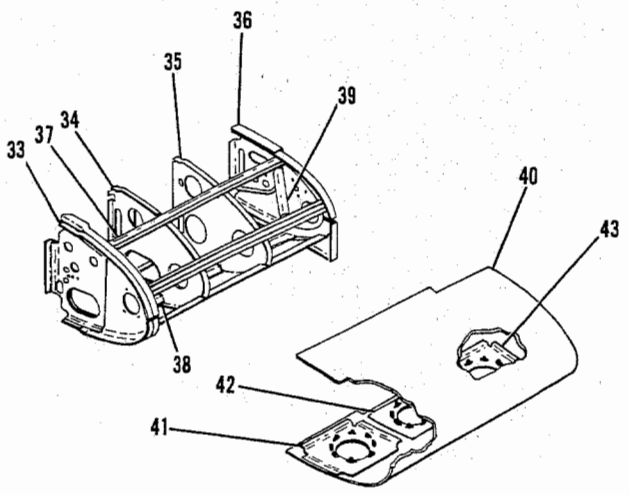

INBOARD LEADING EDGE

Figure 32. Wing Front Spar & Leading Edge Assembly (Sheet 2)

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
32 -		WING FRONT SPAR AND LEADING EDGE ASSEMBLY	NP	
-1	0822500-49 *	. SPAR ASSY-FRONT LH	1	A
	0822500-57 *	. SPAR ASSY-FRONT LH	1	AB
	0822500-50 *	. SPAR ASSY-FRONT RH	1	A
	0822500-56 *	. SPAR ASSY-FRONT RH	1	AB
-2	0822550-5 *	. . FITTING-INBD UPR FWD LH WEU 0822550-13	1	E
	0822550-13 *	. . FITTING-INBD UPR FWD LH	1	EN
	0822550-6 *	. . FITTING-INBD UPR FWD RH WEU 0822550-14	1	F
	0822550-14 *	. . FITTING-INBD UPR FWD RH	1	FP
-3	0822550-7 *	. . FITTING-INBD UPR AFT LH WEU 0822550-15	1	G
	0822550-15 *	. . FITTING-INBD UPR AFT LH	1	GQ
	0822550-8 *	. . FITTING-INBD UPR AFT RH WEU 0822550-16	1	H
	0822550-16 *	. . FITTING-INBD UPR AFT RH	1	HR
-4	0822550-9 *	. . FITTING-INBD LWR FWD LH WEU 0822550-17	1	J
	0822550-17 *	. . FITTING-INBD LWR FWD LH	1	JS
	0822550-10 *	. . FITTING-INBD LWR FWD RH WEU 0822550-18	1	K
	0822550-18 *	. . FITTING-INBD LWR FWD RH	1	KT
-5	0822550-11 *	. . FITTING-INBD LWR AFT LH WEU 0822550-19	1	L
	0822550-19 *	. . FITTING-INBD LWR AFT LH	1	LU
	0822550-12 *	. . FITTING-INBD LWR AFT RH WEU 0822550-20	1	M
	0822550-20 *	. . FITTING-INBD LWR AFT RH	1	MV
-6	0822500-40	. . FITTING-TIP	4	
-7	MS202181	. . BEARING-MAIN GEAR	1	
-8	0822500-5	. . DOUBLER-LH	1	
	0822500-34	. . DOUBLER-RH	1	
-9	NAS1055-6-8	. . RIVET-HI SHEAR	AR	
	NAS179-6	. . COLLAR-RIVET	AR	
	5621000-3	. LEADING EDGE ASSY-OUTBD LH	1	
	5621000-4	. LEADING EDGE ASSY-OUTBD RH	1	
-10	0822275-155	. . RIB ASSY-LEADING EDGE LH	1	
	0822275-154	. . RIB ASSY-LEADING EDGE RH	1	
	0826013-2	. . . SUPPORT-FUEL SELECTOR CONTROL	1	
-11	5222350-21	. . RIB ASSY-LEADING EDGE LH	1	
	5222350-22	. . RIB ASSY-LEADING EDGE RH	1	
-12	5222350-19	. . RIB-LEADING EDGE LH	1	
	5222350-20	. . RIB-LEADING EDGE RH	1	
-13	5222350-5	. . RIB-LEADING EDGE LH	1	
	5222350-6	. . RIB-LEADING	1	
-14	5222350-7	. . RIB ASSY-LEADING EDGE LH	1	
	5222350-8	. . RIB ASSY-LEADING EDGE RH	1	
-15	5222350-9	. . RIB-LEADING EDGE LH	1	
	5222350-10	. . RIB-LEADING EDGE RH	1	
-16	5222350-11	. . RIB-LEADING EDGE LH	1	
	5222350-12	. . RIB-LEADING EDGE RH	1	
-17	5222350-13	. . RIB ASSY-LEADING EDGE LH	1	
	5222350-14	. . RIB ASSY-LEADING EDGE RH	1	
-18	5222350-15	. . RIB-LEADING EDGE LH	1	
	5222350-16	. . RIB-LEADING EDGE RH	1	
-19	5222350-17	. . RIB-LEADING EDGE LH	1	
	5222350-18	. . RIB-LEADING EDGE RH	1	
-20	5022017-3	. . RIB ASSY-LEADING EDGE LH	1	
	5022017-4	. . RIB ASSY-LEADING EDGE RH	1	
-21	0822815-1	. . STRINGER-LEADING EDGE UPR LH	1	
	0822815-2	. . STRINGER-LEADING EDGE UPR RH	1	
	0822511-13	. . CHANNEL-REINFORCEMENT	2	
-22	0822815-3	. . STRINGER-LEADING EDGE LWR LH	1	
	0822815-4	. . STRINGER-LEADING EDGE LWR RH	1	
-23	0822815-33	. . STRINGER-INTERCOSTAL OUTBD	1	
-24	0822815-32	. . STRINGER-INTERCOSTAL CTR	1	
-25	0822815-31	. . STRINGER-INTERCOSTAL CTR	8	
-26	0822815-34	. . STRINGER-INTERCOSTAL INBD	2	
-27	5621000-5	. . SKIN-OUTBD LEADING EDGE LH	1	
	5621000-6	. . SKIN-OUTBD LEADING EDGE RH	1	
-28	0822510-11	. . DOUBLER ASSY-LEADING EDGE	1	
-29	0822513-17	. . DOUBLER ASSY-LEADING EDGE LH	1	
	0822513-16	. . DOUBLER ASSY-LEADING EDGE RH	1	
-30	0822380-30	. . DOUBLER-INSPECTION OPENING	2	
-31	0822380-32	. . DOUBLER-INSPECTION OPENING	5	
-32	0822380-32	. . DOUBLER-INSPECTION OPENING LH ONLY	1	
	5621100-1	. LEADING EDGE ASSY-INBD LH	1	
	5621100-2	. LEADING EDGE ASSY-INBD RH	1	
-33	5122010-13	. . RIB ASSY-LEADING EDGE LH	1	
	5122010-14	. . RIB ASSY-LEADING EDGE RH	1	
-34	5621103-3	. . RIB ASSY-LEADING EDGE LH	1	
	5621103-4	. . RIB ASSY-LEADING EDGE RH	1	
-35	5621102-3	. . RIB-LEADING EDGE LH	1	
	5621102-4	. . RIB-LEADING EDGE RH	1	
-36	5621101-3	. . RIB ASSY-LEADING EDGE LH	1	C
	5621101-15	. . RIB ASSY-LEADING EDGE LH	1	CD
	5621101-4	. . RIB ASSY-LEADING EDGE RH	1	C
	5621101-16	. . RIB ASSY-LEADING EDGE RH	1	CD
-37	0822569-12	. . STRINGER-LEADING EDGE UPR	1	
-38	0822569-7	. . STRINGER-LEADING EDGE LWR	1	
-39	5222509-9	. . STIFFENER	1	
-40	5621100-3	. . SKIN-LEADING EDGE INBD LH	1	
	5621100-4	. . SKIN-LEADING EDGE INBD RH	1	
-41	0822574-5	. . DOUBLER ASSY-LEADING EDGE LH	1	
	0822574-6	. . DOUBLER ASSY-LEADING EDGE RH	1	
-42	5622564-1	. . DOUBLER ASSY-LEADING EDGE LH & RH	2	

CONTINUED

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
32 -43	0822565-5	. . DOUBLER ASSY-LEADING EDGE LH	1	
	0822565-6	. . DOUBLER ASSY-LEADING EDGE RH	1	
-44	5022010-3	. . CHANNEL-MOORING RING LH	1	
	5022010-4	. . CHANNEL-MOORING RING RH	1	
-45	5022018-1	. . ANGLE AFT-LH	1	B
	5022018-2	. . ANGLE AFT-RH	1	B
		*---SEE SERVICE MANUAL FOR MODIFICATION REQUIREMENTS PRIOR TO INSTALLATION OF WING		
		A---340-0001 THRU 340-0150 B---340-0151 & ON C---340-0001 THRU 340-0318 D---340-0319 & ON E---340-0001 THRU 340-0359 & 340-0501 F---340-0001 THRU 340-0510 G---340-0001 THRU 340-0508 H---340-0001 THRU 340-0506 J---340-0001 THRU 340-0511 K---340-0001 THRU 340-0518 L---340-0001 THRU 340-0517 M---340-0001 THRU 340-0509 N---340-0360 THRU 340-0500, 340-0502 & ON P---340-0511 & ON Q---340-0509 & ON R---340-0507 & ON S---340-0512 & ON T---340-0519 & ON U---340-0518 & ON V---340-0510 & ON		

WING

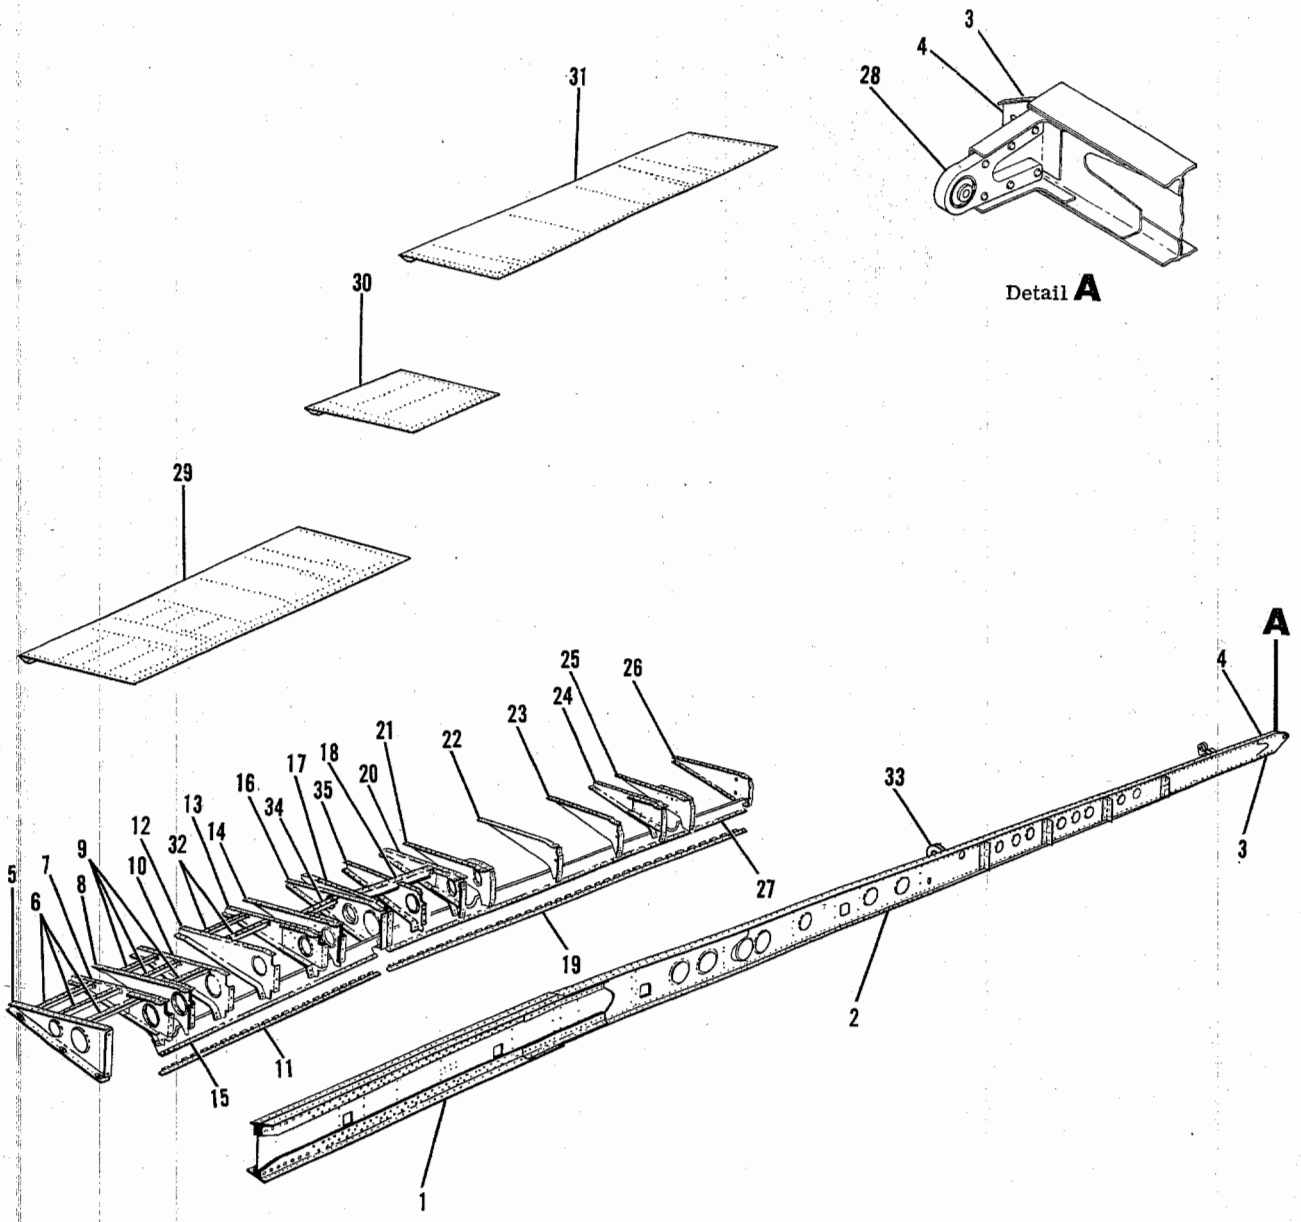

33 AILERON INBOARD HINGE ASSY

Figure 33. Wing Rear Spar & Trailing Edge Assembly

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
33 -		WING REAR SPAR AND TRAILING EDGE ASSEMBLY	NP	
-1	0822600-39	. SPAR ASSY-INBD LH	1	
	0822600-40	. SPAR ASSY-INBD RH	1	
-2	0822600-59	. SPAR ASSY-OUTBD LH	1	A
	0822600-69	. SPAR ASSY-OUTBD LH	1	B
	0822600-60	. SPAR ASSY-OUTBD RH	1	A
	0822600-70	. SPAR ASSY-OUTBD RH	1	B
-3	0822600-29	. . FITTING-TIP TANK FORWARD	1	
-4	0822600-30	. . FITTING-TIP TANK AFT	1	
-5	0822100-79	. RIB ASSY-TRAILING EDGE LH	1	
	0822100-80	. RIB ASSY-TRAILING EDGE RH	1	
-6	0822350-173	. CHANNEL	3	
-7	0822350-1	. RIB ASSY-TRAILING EDGE LH	1	
	0822350-2	. RIB ASSY-TRAILING EDGE RH	1	
-8	0822350-7	. RIB ASSY-TRAILING EDGE LH	1	
	0822350-8	. RIB ASSY-TRAILING EDGE RH	1	
-9	0822350-172	. CHANNEL	3	
-10	0822350-23	. RIB-TRAILING EDGE LH	1	
	0822350-24	. RIB-TRAILING EDGE RH	1	
-11	0822275-170	. HINGE HALF-FLAP INBOARD	1	
-12	0822350-25	. RIB TRAILING EDGE LH	1	
	0822350-26	. RIB TRAILING EDGE RH	1	
-13	0822350-9	. RIB ASSY-TRAILING EDGE LH	1	
	0822350-10	. RIB ASSY-TRAILING EDGE RH	1	
-14	0822350-11	. RIB ASSY-TRAILING EDGE LH	1	
	0822350-12	. RIB ASSY-TRAILING EDGE RH	1	
-15	0822275-77	. STIFFENER-TRAILING EDGE INBD LH	1	
	0822275-78	. STIFFENER-TRAILING EDGE INBD RH	1	
-16	0822350-269	. RIB-TRAILING EDGE LH	1	
	0822350-270	. RIB-TRAILING EDGE RH	1	
-17	0822350-271	. RIB-TRAILING EDGE LH	1	
	0822350-272	. RIB-TRAILING EDGE RH	1	
-18	0822613-1	. CHANNEL-TRAILING EDGE	1	
-19	0822275-52	. HINGE HALF-FLAP OUTBD	1	
-20	0822350-287	. RIB ASSY-TRAILING EDGE LH	1	
	0822350-288	. RIB ASSY-TRAILING EDGE RH	1	
-21	0822350-291	. RIB ASSY-TRAILING EDGE LH	1	
	0822350-292	. RIB ASSY-TRAILING EDGE RH	1	
-22	0822608-19	. RIB-TRAILING EDGE LH	1	
	0822608-20	. RIB-TRAILING EDGE RH	1	
-23	0822608-3	. RIB-TRAILING EDGE LH	1	
	0822608-4	. RIB-TRAILING EDGE RH	1	
-24	0822608-1	. RIB-TRAILING EDGE LH	1	
	0822608-2	. RIB-TRAILING EDGE RH	1	
-25	0822608-7	. RIB-TRAILING EDGE LH	1	
	0822608-8	. RIB-TRAILING EDGE RH	1	
-26	5022050-67	. RIB-TRAILING EDGE LH	1	
	5022050-68	. RIB-TRAILING EDGE RH	1	
-27	0822275-123	. STIFFENER-TRAILING EDGE OUTBD LH	1	
	0822275-124	. STIFFENER-TRAILING EDGE OUTBD RH	1	
-28	5021002-12	. HINGE ASSY-AILERON OUTBD LH	1	
	5021002-13	. HINGE ASSY-AILERON OUTBD RH	1	
	B4	. . BEARING SHA	1	
-29	C822610-39	. SKIN-TRAILING EDGE INBD LH	1	
	0822610-40	. SKIN-TRAILING EDGE INBD RH	1	
-30	0822609-11	. SKIN-TRAILING EDGE CTR LH	1	
	0822609-12	. SKIN-TRAILING EDGE CTR RH	1	
-31	0822609-5	. SKIN-TRAILING EDGE OUTBD LH	1	
	0822609-6	. SKIN-TRAILING EDGE OUTBD RH	1	
-32	0822611-3	. CHANNEL-LH	2	
	0822611-4	. CHANNEL-RH	2	
-33	SEE FIG 40	. HINGE ASSY-AILERON INBD LH & RH	1	
-34	0822613-2	. CHANNEL-TRAILING EDGE	1	
-35	0822176-1	. RIB-TRAILING EDGE LH	1	
	0822176-2	. RIB-TRAILING EDGE RH	1	

A---340-0001 THRU 340-0150
B---340-0151 & ON

WING

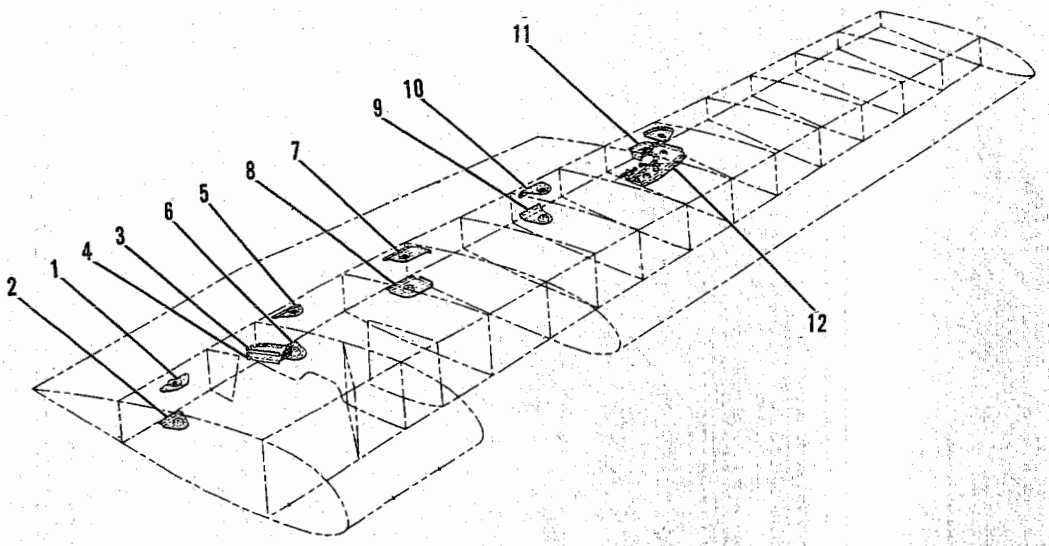

Figure 34. Control Support Brackets Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
34 -		CONTROL SUPPORT BRACKETS INSTALLATION	NP	
-1	0822275-43	. BRACKET ASSY-FLAP PULLEY UPR LH	1	
	0822275-44	. BRACKET ASSY-FLAP PULLEY UPR RH	1	
-2	0822275-55	. BRACKET-FLAP PULLEY LWR	1	
-3	0822275-61	. BRACKET-FLAP PULLEY UPR LH	1	
	0822275-62	. BRACKET-FLAP PULLEY UPR RH	1	
-4	0822275-169	. BRACKET-FLAP PULLEY LWR LH	1	
	0822275-168	. BRACKET-FLAP PULLEY LWR RH	1	
-5	0822275-47	. BRACKET ASSY-FLAP BELLCRANK UPR	1	
-6	0822275-79	. BRACKET-FLAP BELLCRANK LWR	1	
-7	0822275-39	. BRACKET ASSY-FLAP BELLCRANK UPR LH	1	
	0822275-40	. BRACKET ASSY-FLAP BELLCRANK UPR RH	1	
-8	0822275-57	. BRACKET-FLAP BELLCRANK LWR LH	1	
	0822275-58	. BRACKET-FLAP BELLCRANK LWR RH	1	
-9	0822275-59	. BRACKET-OUTBD FLAP BELLCRANK LWR	1	
-10	0822275-35	. BRACKET ASSY-OUTBD FLAP BELLCRANK UPR	1	
-11	0822350-275	. BRACKET ASSY-UPR AILERON BELLCRANK LH	1	
	0822350-274	. BRACKET ASSY-UPR AILERON BELLCRANK RH	1	
	5021014-5	. . DOUBLER	1	
-12	5025011-9	. BRACKET ASSY-AILERON PULLEY LWR LH	1	
	5025011-10	. BRACKET ASSY-AILERON PULLEY LWR RH	1	
	5025012-1	. . SUPPORT-AILERON BELLCRANK	1	
	5025010-1	. . STOP ASSY-AILERON BELLCRANK	1	
	5025010-2	. . STOP ASSY-AILERON BELLCRANK	1	
	NAS428H3-6	. . . BOLT	1	
	MS25082-3	. . . NUT	1	

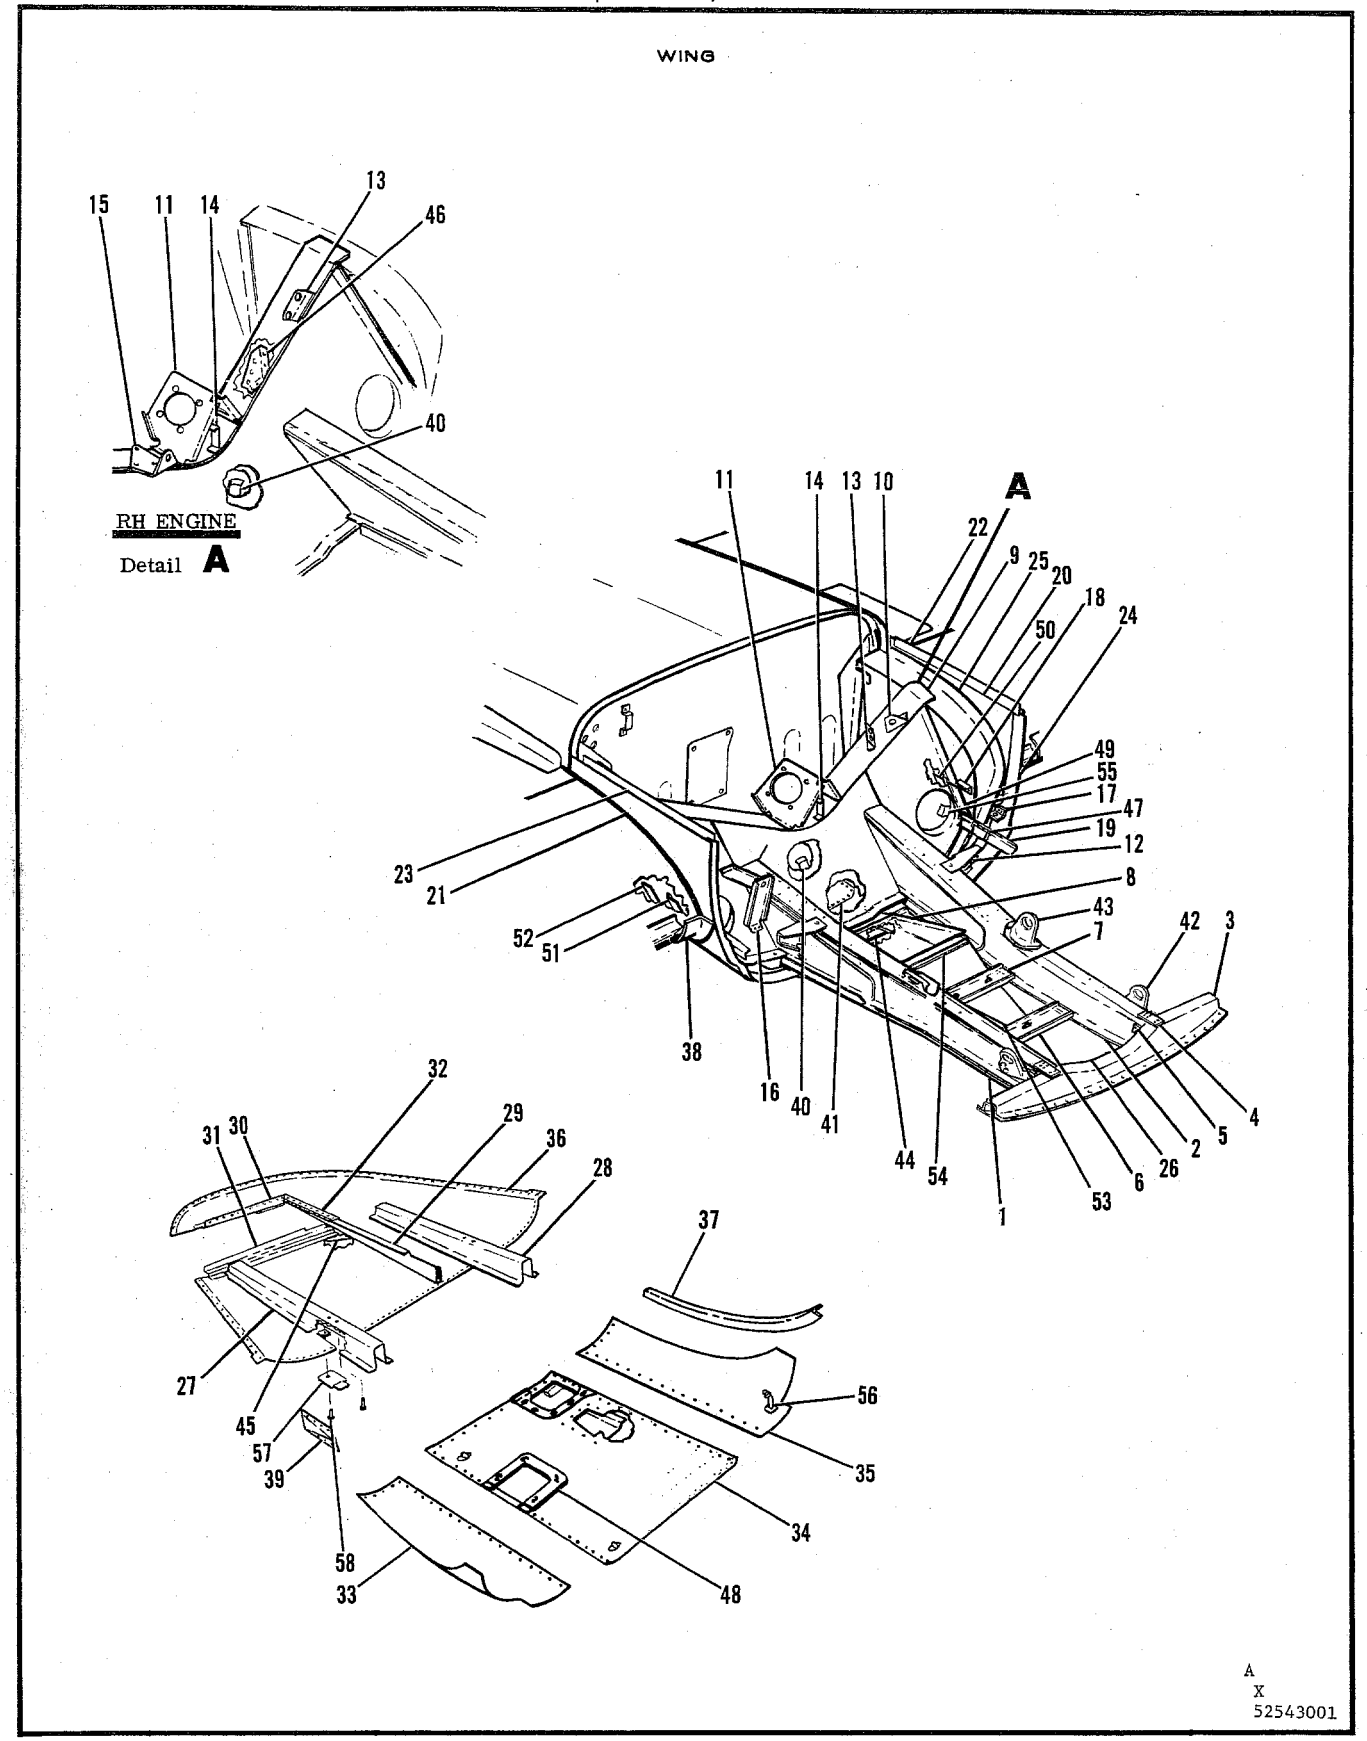

Figure 35. Nacelle Structure Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
35 -		NACELLE STRUCTURE INSTALLATION	NP	
-1	0851121-31	. BEAM ASSY-LH OUTBD	1	
	0851121-20	. BEAM ASSY-RH INBD	1	
-2	0851121-21	. BEAM ASSY-LH INBD	1	
	0851121-32	. BEAM ASSY-RH OUTBD	1	
-3	0851124-1	. CROSS BEAM ASSY-FWD FSO 0851124-2	1	E
	0851124-2	. CROSS BEAM ASSY-FWD	1	F
-4	0851130-1	. STRAP	2	
-5	0851129-1	. CLIP-INNER OUTBD	1	
	0851129-7	. CLIP-INNER INBD	1	L
	0851129-2	. CLIP-INNER	1	M
	0851129-3	. CLIP-OUTER	2	
-6	0851128-3	. STIFFENER	1	L
	5654003-1	. STIFFENER	1	M
-7	0851128-2	. STIFFENER	1	L
	5654004-3	. STIFFENER	1	M
-8	0851128-1	. STIFFENER	1	L
	5654005-1	. STIFFENER	1	M
-9	0851601-31	. BULKHEAD ASSY-LH	1	L
	0851601-25	. BULKHEAD ASSY-LH	1	M
	0851601-32	. BULKHEAD ASSY-RH	1	L
	0851601-26	. BULKHEAD ASSY-RH	1	M
-10	5654017-5	. BRACKET-COWL FLAP LH ONLY FSO 5654017-7	1	J
	5654017-7	. BRACKET-COWL FLAP LH ONLY	1	K
	5654017-3	. BRACKET-COWL FLAP LH ONLY	1	M
	5654017-2	. BRACKET-COWL FLAP RH ONLY	1	M
-11	5655202-1	. TURBO-MOUNT BRACKET LH WEU 5655202-5	1	G
	5655202-5	. TURBO-MOUNT BRACKET LH WEU 5655202-11	1	HN
	5655202-11	. TURBO-MOUNT BRACKET LH	1	G
	5655202-2	. TURBO-MOUNT BRACKET RH WEU 5655202-4	1	H
	5655202-4	. TURBO-MOUNT BRACKET RH WEU 5655202-10	1	N
	5655202-10	. TURBO-MOUNT BRACKET RH	1	
		ATTACHING PARTS		
	AN3C4A	. SCREW	4	
	AN960C10	. WASHER	4	
	NAS679A3	. NUT	4	
		---*---		
-12	0851155-1	. BRACKET ASSY-MANIFOLD SHIELD OUTBD LH INBD RH	1	
	0851155-2	. BRACKET ASSY-MANIFOLD SHIELD OUTBD LH INBD RH	1	
-13	5654013-3	. BRACKET-OUL LINE RH	1	M
	5654013-2	. BRACKET-OIL LINE LH	1	M
-14	5654554-1	. BRACKET	2	
-15	5654017-2	. BRACKET-CONTROL LH NACELLE	1	M
	5654017-3	. BRACKET-CONTROL RH NACELLE	1	M
-16	5655308-5	. BRACKET-LH FSO 5655308-7	1	C
	5655308-7	. BRACKET ASSY	1	D
	5655308-6	. BRACKET-RH FSO 5655308-8	1	C
	5655308-8	. BRACKET ASSY-RH	1	D
-17	0851618-1	. ANGLE ASSY-MANIFOLD SHIELD INBD LH	1	
	0851618-2	. ANGLE ASSY-MANIFOLD SHIELD OUTBD RH	1	
-18	0851618-5	. ANGLE ASSY-MANIFOLD SHIELD	2	
-19	0851158-1	. ANGLE ASSY-HINGE OUTBD LH INBD RH	1	
	0851158-2	. ANGLE ASSY-HINGE INBD LH OUTBD RH	1	
-20	0851000-55	. SKIN-SIDE OUTBD LH	1	
	0851000-56	. SKIN-SIDE OUTBD RH	1	
-21	0851000-57	. SKIN-SIDE INBD LH	1	
	0851000-58	. SKIN-SIDE INBD RH	1	
-22	0851009-1	. DOUBLER-SKIN OUTBD LH	1	
	0851009-2	. DOUBLER-SKIN OUTBD RH	1	
-23	0851008-1	. DOUBLER-SKIN INBD LH	1	
	0851008-2	. DOUBLER-SKIN INBD RH	1	
-24	0851000-219	. DOUBLER-SKIN OUTBD	1	
	0851000-220	. DOUBLER-SKIN INBD	1	
	0851000-189	. RUBSTRIP	2	
-25	0851500-31	. COVER-RIB OUTBD LH	1	
	0851500-126	. COVER-RIB OUTBD RH	1	
	0851500-125	. COVER-RIB INBD LH	1	
	0851500-32	. COVER-RIB INBD RH	1	
-26	5354000-3	. SKIN ASSY-FWD LH	1	L
	5354000-11	. SKIN ASSY-FWD RH	1	L
	5654000-4	. SKIN ASSY-FWD LH & RH	1	M
	5654000-3	. SKIN ASSY-AFT LH & RH	1	M
-27	0851500-137	. SUPPORT ASSY-INBD LH	1	
	0851500-138	. SUPPORT ASSY-INBD RH	1	
-28	0851500-139	. SUPPORT ASSY-OUTBD LH	1	
	0851500-140	. SUPPORT ASSY-OUTBD RH	1	
		ATTACHING PARTS		
	AN3H5A	. BOLT	4	
	MS21045L3	. NUT	4	
		---*---		
-29	0851000-225	. SUPPORT-LH	1	
	0851000-226	. SUPPORT-RH	1	
-30	5222104-1	. FORMER-GEAR WELL OPENING AFT LH	1	
	5222104-2	. FORMER-GEAR WELL OPENING AFT RH	1	
-31	0851000-233	. FORMER-GEAR WELL OPENING FWD LH	1	
	0851000-232	. FORMER-GEAR WELL OPENING FWD RH	1	
-32	0851000-100	. HINGE HALF-MAIN GEAR DOOR	1	
		ATTACHING PARTS		
	MS27039-0806	. SCREW	8	
	MS27039-0805	. SCREW	1	
		---*---		
-33	0851120-17	. SKIN ASSY-LWR CTR INBD LH	1	
	0851120-18	. SKIN ASSY-LWR CTR INBD RH	1	
	0851562-5	. . FORMER-SKIN LH	1	
	0851562-6	. . FORMER-SKIN RH	1	

CONTINUED

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
35 -34	5354000-9	SKIN-CTR LH	1	L
	5654000-11	SKIN-CTR LH	1	M
	5354000-10	SKIN-CTR RH	1	L
	5654000-10	SKIN-CTR RH	1	M
	0823337-2	GORMMET-DRAIN	1	
-35	0851120-31	SKIN ASSY-LWR CTR OUTBD LH	1	
	0851159-3	DOUBLER-SKIN LH EXHAUST EXIT	1	
	0851120-32	SKIN ASSY-LWR CTR OUTBD RH	1	
	0851159-4	DOUBLER-SKIN RH EXHAUST EXIT		
-36	0851000-143	SKIN-LWR AFT LH	1	
	0851000-144	SKIN-LWR AFT RH	1	
-37	0851000-51	FILLET-OUTBD LH	1	
	0851000-52	FILLET-OUTBD RH	1	
-38	0851000-223	FILLET-INBD LH	1	
	0851000-222	FILLET-INBD RH	1	
-39	0851500-145	FILLET-LH	1	L
	0851500-151	FILLET-LH	1	M
	0851500-146	FILLET-RH	1	L
	0851500-150	FILLET-RH	1	M
-40	5354001-2	BRACKET-LH & RH	2	L
	5654025-1	BRACKET-LH WASTEGATE EXHAUST	1	M
	5654024-1	BRACKET-RH WASTEGATE EXHAUST	1	M
		ATTACHING PARTS		
	MS35206-244	SCREW	3	
	AN960-8	WASHER	3	
		---*---		
-41	5354006-1	DOOR ASSY-ACCESS-LH & RH	2	
		ATTACHING PARTS		
	27S3-1	STUD CLC	16	
		---*---		
	5354007-1	DOUBLER-ACCESS DOOR LH & RH	2	
-42	0851203-11	FITTING-ENGINE MOUNT LH FWD	1	
	0851203-12	FITTING-ENGINE MOUNT RH FWD	1	
	0851203-9	FITTING-ENGINE MOUNT LH AFT	1	
-43	0851203-10	FITTING-ENGINE MOUNT RH AFT	1	
		ATTACHING PARTS		
	AN4-24A	BOLT FWD	4	A
	AN4-25A	BOLT FWD	4	B
	AN4H12A	BOLT AFT	4	
	AN960-416	WASHER AFT	AR	
	MS21045L4	NUT FWD	4	
	5354009-1	SHIM	2	B
		---*---		
-44	5654000-9	SPACER	2	
-45	0822037-17	GUSSET	2	
-46	0851045-15	FILLER	2	
-47	0851055-1	FILLET	1	
	0851055-2	FILLET	1	
-48	0851156-2	DOUBLER ASSY	1	
-49	0851608-1	DOUBLER-LH	1	
	0851608-2	DOUBLER-RH	1	
-50	0851609-1	STRIP-LH	1	
	0851609-2	STRIP-RH	1	
-51	0851610-1	DOUBLER-LH	1	
	0851610-2	DOUBLER-RH	1	
-52	0851611-1	STRAP-LH	1	
	0851611-2	STRAP-RH	1	
-53	5654006-1	ACCESS DOOR	1	
-54	5654007-1	INDUCTION ASSY	1	
-55	5250101-3	BRACKET-EXHAUST OUTBD LH & INBD RH	1	
	5250101-4	BRACKET-EXHAUST INBD LH & OUTBD RH	1	
		ATTACHING PARTS		
	MS24694S3	SCREW	2	
	MS21044N08	NUT	2	
		---*---		
-56	5654022-3	FITTING-BREATHER OVERBOARD LH	1	
	5654022-2	FITTING-BREATHER OVERBOARD RH	1	
	5659008-1	FITTING-OVERBOARD RH SURFACE DEICE	1	
-57	0851000-95	PLATE-INSPECTION LH & RH	2	
		ATTACHING PARTS		
-58	S1022Z4-6	SCREW	2	
		---*---		

A---340-0001 THRU 340-0029
B---340-0030 & ON
C---340-0001 THRU 340-0307
D---340-0308 & ON
E---340-0001 THRU 340-0526
F---340-0001 & ON
G---340-0001 THRU 340-0533
H---340-0534 TO 340A0023
J---340-0001 THRU 340-0500
K---340-0501 TO 340A0001
L---340-0001 TO 340A0001
M---340A0001 & ON
N---340A0024 & ON

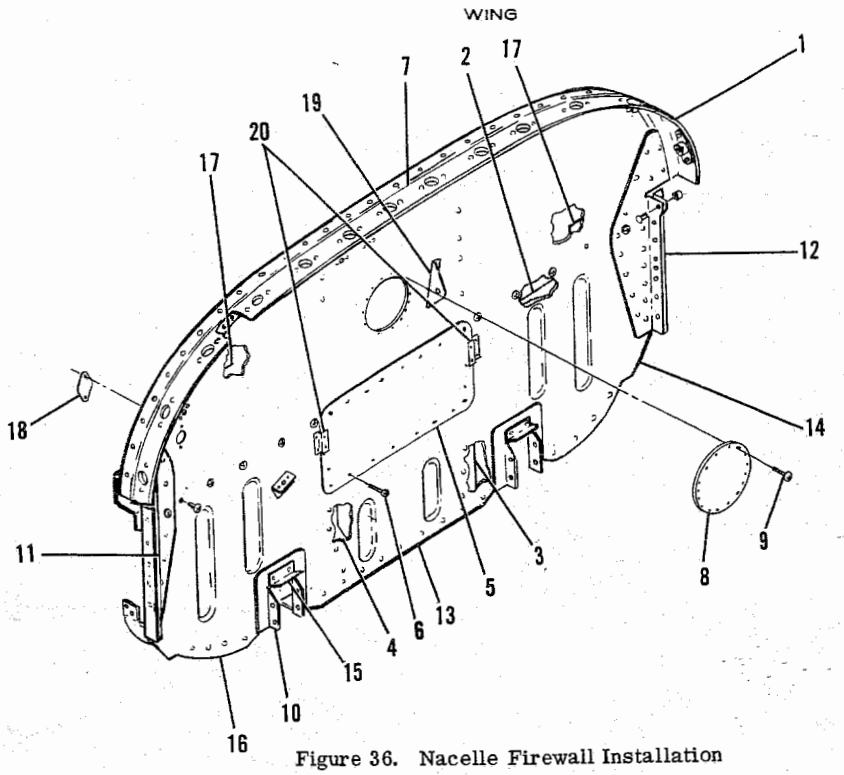

Figure 36. Nacelle Firewall Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
36 -		NACELLE FIREWALL INSTALLATION	NP	
-1	5653005-1	. FIREWALL ASSY-LH	1	
	5653005-2	. FIREWALL ASSY-RH	1	
	5653005-7	. FIREWALL ASSY-RH AIRCONDITIONING	1	A
	5653005-9	. FIREWALL ASSY-RH AIRCONDITIONING	1	B
	5653005-11	. FIREWALL ASSY-RH AIRCONDITIONING	1	D
-2	5653002-1	. ANGLE ASSY	1	
	5653002-2	. ANGLE ASSY	1	
-3	5653001-1	. ANGLE ASSY	1	
-4	5653001-2	. ANGLE ASSY	1	
	5654018-5	. ANGLE USED WITH AIRCONDITIONING	1	
-5	5653004-1	. DOOR	1	
		ATTACHING PARTS		
-6	MS35207-260	. SCREW	26	
		---*---		
-7	0851813-9	. ANGLE ASSY	1	
	0851813-10	. ANGLE ASSY	1	
	244-16D	. . RECEPTACLE	CML 14	
-8	0851794-1	. DOOR	1	
		ATTACHING PARTS		
-9	MS35206242	. SCREW	16	
		---*---		
-10	0851570-1	. DOUBLER	2	
-11	0851569-5	. DOUBLER-INBD LH	1	
	0851569-6	. DOUBLER-INBD RH	1	
-12	0851569-7	. DOUBLER-OUTBD LH	1	
	0851569-8	. DOUBLER-OUTBD RH	1	
-13	0851567-6	. ANGLE	1	
-14	0851500-121	. ANGLE	1	
	0851500-122	. ANGLE	1	
-15	0851500-87	. ANGLE	2	
	0851500-8	. ANGLE	1	
-16	0851500-9	. ANGLE	1	
-17	5254104-1	. CLIP	6	E
-18	0851708-1	. PLATE-COVER LH USED WITH WING LOCKER FUEL	2	
	0851708-1	. PLATE-COVER RH USED WITH WING LOCKER FUEL	4	
-19	5654030-1	. BRACKET-OVERBOARD STACK RETENTION LH & RH	2	C
		ATTACHING PARTS		
	MS27039-1-07	. SCREW	3	C
	AN960-10L	. WASHER	3	C
		---*---		
-20	5653006-1	. BRACKET-ENGINE CONTROL CABLES	2	F

A---340-0001 THRU 340-0066
B---340-0067 340-0300
C---340-0151 & ON
D---340-0301 & ON
E---340-0001 THRU 340-0362
F---340A0024 & ON

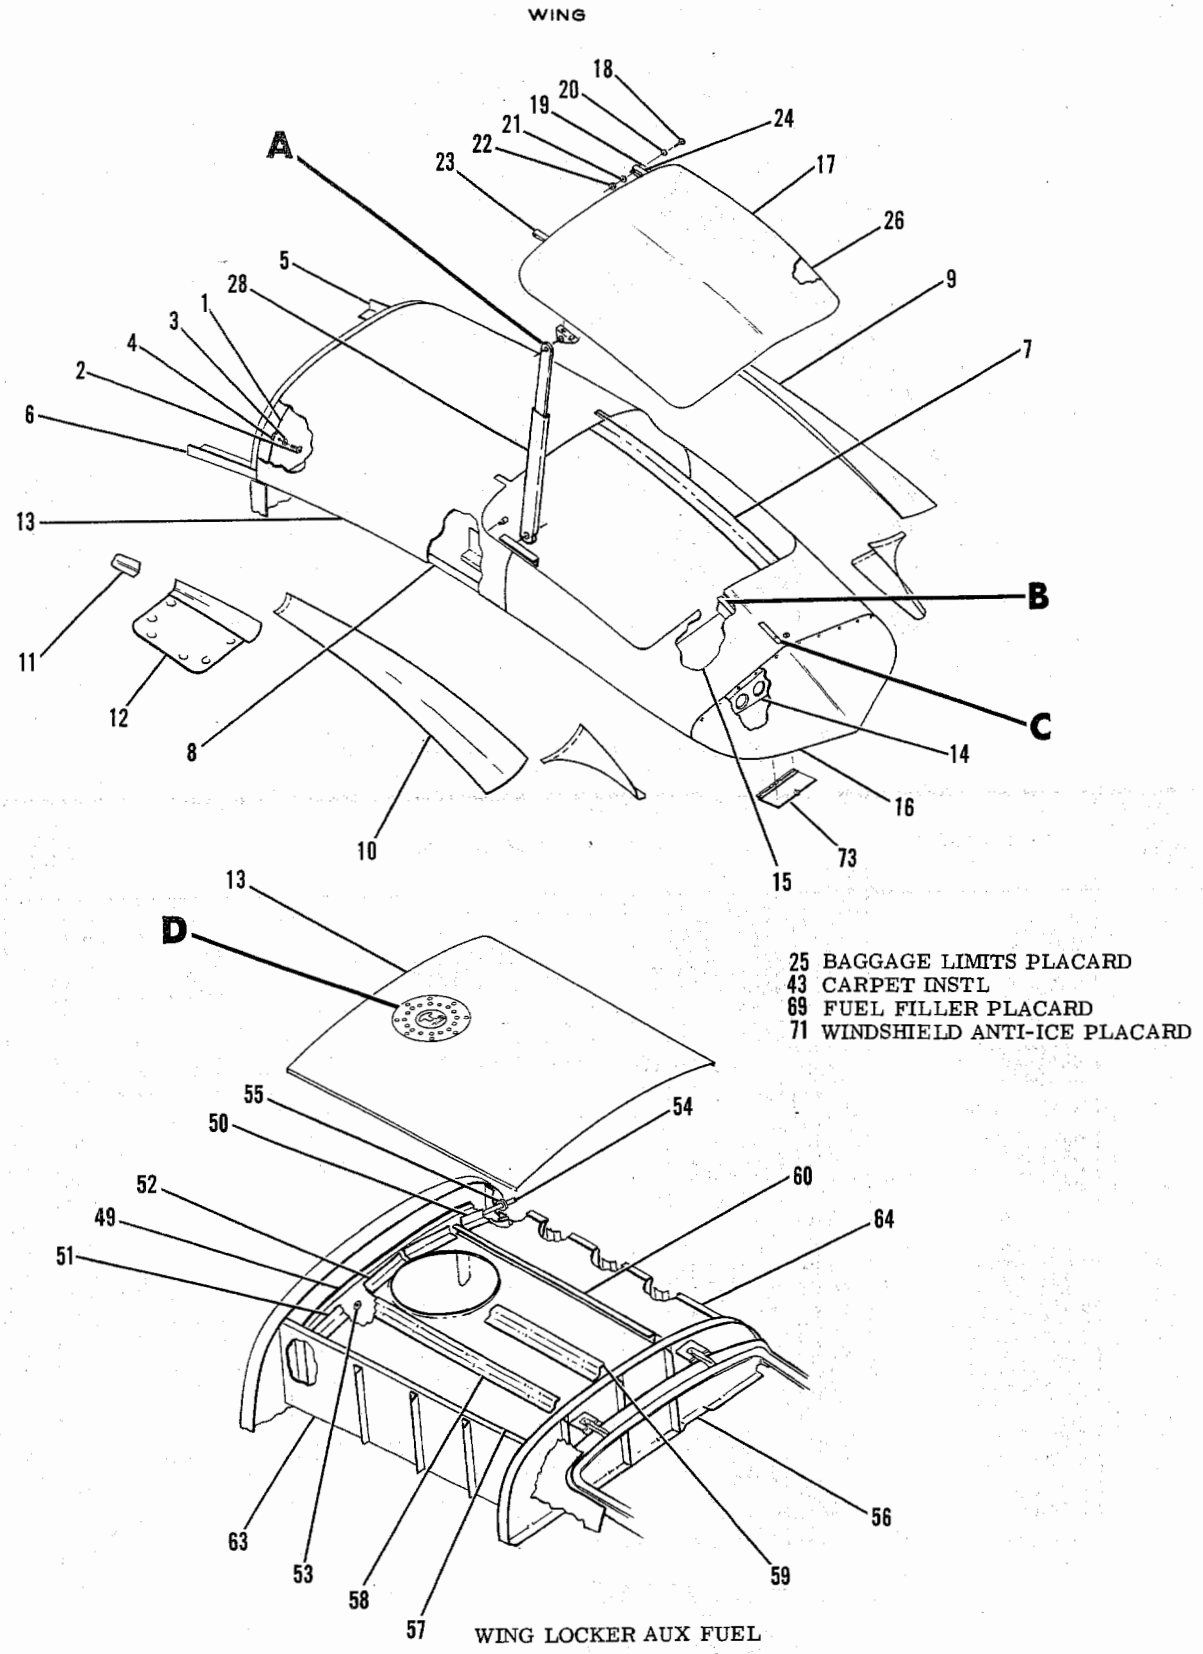

Figure 37. Nacelle Baggage Compartment Installation (Sheet 1 of 2)

WING

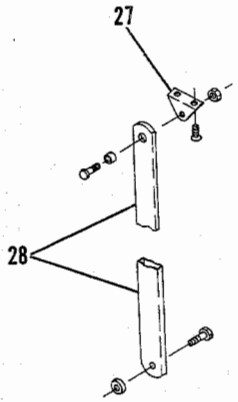

Detail **A**

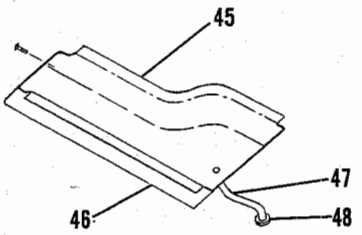

Detail **B**

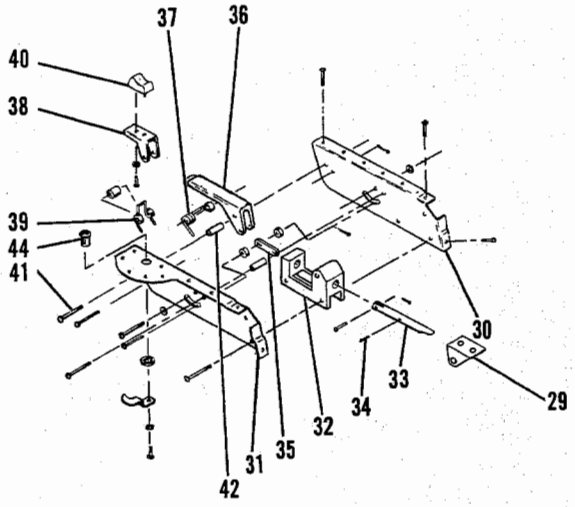

Detail **C**

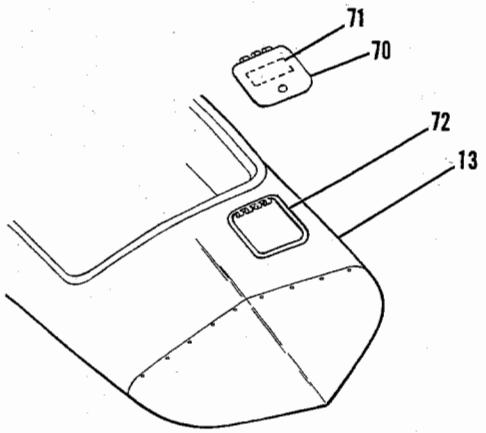

WINDSHIELD ANTI-ICE

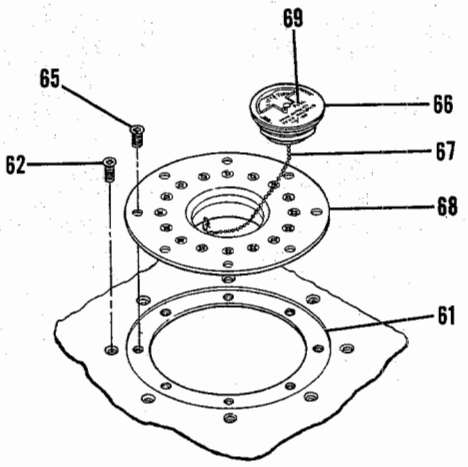

Detail **D**

Figure 37. Nacelle Baggage Compartment Installation (Sheet 2)

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
37 -		NACELLE BAGGAGE COMPARTMENT INSTALLATION	NP	
-1	5254103-3 **	. PANEL ASSY-LH FWD	1	E
	5254108-3 **	. BULKHEAD-LH FWD	1	F
	5254108-5 **	. ANGLE-LH	1	F
	5254103-4 **	. PANEL ASSY-RH FWD	1	E
	5254108-4 **	. BULKHEAD-RH FWD	1	F
	5254108-6 **	. ANGLE-RH	1	F
		ATTACHING PARTS		
-2	MS35206-243	. SCREW	9	E
-3	AN960-10L	. WASHER	9	E
-4	NAS395-13	. NUT	9	E
		---*---		
-5	0851780-15	. ANGLE-FWD INBD LH	1	
	0851780-16	. ANGLE-FWD INBD RH	1	
-6	0851780-13	. ANGLE-FWD OUTBD LH	1	
	0851780-14	. ANGLE-FWD OUTBD RH	1	
-7	0851780-5	. ANGLE-AFT INBD LH	1	
	0851780-6	. ANGLE-AFT INBD RH	1	
-8	0851780-3	. ANGLE-AFT OUTBD LH	1	
	0851780-4	. ANGLE-AFT OUTBD RH	1	
-9	0851792-11	. FAIRING-INBD LH	1	
	0851792-12	. FAIRING-INBD RH	1	
-10	0851792-9	. FAIRING-AFT OUTBD LH	1	
	0851792-10	. FAIRING-AFT OUTBD RH	1	
-11	0851792-17	. FAIRING-FWD OUTBD LH	1	
	0851792-14	. FAIRING-FWD OUTBD RH	1	
-12	0851792-15	. FAIRING & DOOR ASSY-CTR OUTBD LH	1	
		ATTACHING PARTS		
	S3-175	. SPRING DZ	4	
	AN960-2	. WASHER	8	
		---*---		
	0822005-47	. . COVER ASSY-BATTERY BOX	1	G
	0822005-60	. . COVER ASSY-BATTERY BOX	1	H
	AJ3-25	. . FASTENER NACELL SKIN DZ	5	
	F4-35	. . FASTENER WING DZ	AR	
	GA3-200	. . GROMMET NACELLE SKIN DZ	5	
	GF4-150	. . GROMMET WING DZ	AR	
-13	5254101-1	. SKIN ASSY-LH	1	J
	5254101-29	. SKIN ASSY-LH	1	H
	5295101-1	. SKIN ASSY-LH	1	B
	5254101-2	. SKIN ASSY-RH	1	A
	5295101-2	. SKIN ASSY-RH	1	B
-14	0851790-8	. . BULKHEAD ASSY-TIP	1	G
	0851790-13	. . BULKHEAD ASSY-TIP	1	H
-15	0851780-9	. SKIN-AFT LWR LH	1	G
	0851780-29	. SKIN-AFT LWR LH	1	H
	0851780-10	. SKIN-AFT LWR RH	1	
-16	0851790-4	. TIP-FAIRING	1	
-17	0851738-201	. DOOR ASSY-BAGGAGE	1	A
	0851738-200	. DOOR ASSY-BAGGAGE	1	B
		ATTACHING PARTS		
-18	AN3-17A	. BOLT	2	
-19	600-015-10	. STRATO SEAL UNDER BOLT & NUT HEAD PKSC	2	
-20	0851198-1	. WASHER	2	
-21	AN960-10L	. WASHER UNDER NUT	AR	
-22	MS21083C3	. NUT	2	
		---*---		
-23	0851200-3	. HINGE STRAP-LH	1	
-24	0851200-4	. HINGE STRAP-RH	1	
		ATTACHING PARTS		
	MS24694S3	. SCREW-FWD	1	
	MS24694S42	. SCREW-AFT	2	
	MS21042L08	. NUT-FWD	1	
	MS21042L3	. NUT-AFT	2	
		---*---		
-25	SEE FIG 1	. PLACARD-BAGGAGE LIMITS	1	
-26	0851193-2	. SEAL-BAGGAGE DOOR	1	
-27	0851823-1	. BRACKET-DOOR STOP	1	
		ATTACHING PARTS		
	NAS603-7	. SCREW	2	
		---*---		
-28	5211185-1	. STOP ASSY-BAGGAGE DOOR	1	
		ATTACHING PARTS		
	MS27039-1-6	. SPACER	1	
	22NKTM02	. NUT EN	1	
	MS27039-1-10	. SCREW	1	
	0851861-1	. SPACER	1	
		---*---		
-29	0851781-18	. CHANNEL ASSY-LATCH	1	
		ATTACHING PARTS		
	MS27039-1-08	. SCREW	2	
	0851781-21	. SHIM	AR	
		---*---		

CONTINUED

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
37	0851781-26		. LATCH ASSY-BAGGAGE DOOR	1	C
	0851781-35		. LATCH ASSY-BAGGAGE DOOR ALT FOR 0851781-35 HWL	1	D
	H966-1	#	. LATCH ASSY-BAGGAGE DOOR	1	D
			ATTACHING PARTS		
	MS27039-0808		. SCREW	2	
	MS24694S5		. SCREW	2	
	MS24694S3		. SCREW	13	
	MS21044N08		. NUT	15	
			---*---		
-30	0851781-29		. . SUPPORT ASSY-LATCH LH	1	C
	0851781-37		. . SUPPORT ASSY-LATCH LH	1	D
-31	0851781-28		. . SUPPORT ASSY-LATCH RH	1	C
	0851781-36		. . SUPPORT ASSY-LATCH RH	1	D
-32	0851781-32		. . BLOCK-GUIDE	1	
			ATTACHING PARTS		
	MS27039-0821		. . SCREW	3	
			---*---		
-33	0851781-9		. . BOLT-LATCH	1	
-34	MS16562-10		. . PIN-SPRING	2	
-35	0851781-10		. . LINK	1	
			ATTACHING PARTS		
	MS20392-1C15		. . PIN	1	
	MS20392-1C29		. . PIN	1	
	NAS43DD3-15		. . SPACER	2	
	MS24665-132		. . PIN-COTTER	2	
			---*---		
-36	0851781-3		. . HANDLE ASSY-LATCH	1	
			ATTACHING PARTS		
	MS27039-1-21		. . SCREW	2	
	AN960-10		. . WASHER	1	
-37	0851781-6		. . SPRING	1	
	NAS43DD3-26		. . SPACER	1	
			---*---		
-38	0851781-15		. . RETAINER-LATCH HANDLE	1	
			ATTACHING PARTS		
	MS20392-1C35		. . PIN	1	
	NAS43DD4-34		. . SPACER	1	
-39	0851781-7		. . SPRING	1	
	MS24665-132		. . PIN-COTTER	1	
			---*---		
-40	0851781-22		. . BUTTON-LATCH HANDLE RETAINER	1	
			ATTACHING PARTS		
	MS35206-242		. . SCREW	1	
	AN935-8L		. . WASHER	1	
			---*---		
-41	MS27039-0821		. . SCREW-SPRING RETENTION	2	
-42	NAS43DD3-64		. . SPACER-SPRING RETENTION	2	
-43	SEE FIG 49		. CARPET INSTL	REF	
-44	F6500H		. LOCK-BAGGAGE DOOR	1	
	5011185-7		. CAM-LOCK	1	
			ATTACHING PARTS		
	5011196-1		. SCREW	1	
			---*---		
-45	5254105-5		. CUP-DOOR LATCH SEAL	1	
			ATTACHING PARTS		
	MS27039-0806		. SCREW	2	
			---*---		
-46	5254102-2		. DRAIN ASSY	1	
-47	S307-5		. HOSE-DRAIN BKI	AR	
-48	MS35489-11		. GROMMET	1	
-49	5222600-5	*	. BULKHEAD-LH FWD	1	
	5222600-6	*	. BULKHEAD-RH FWD	1	
-50	5226007-8	*	. ANGLE	2	
-51	5226007-7	*	. ANGLE	1	
-52	5226007-33	*	. ANGLE	1	
-53	5226000-34	*	. SHIM-VENT	1	
-54	5226007-9	*	. VENT ASSY	1	
-55	0823337-2	*	. GROMMET-VENT INBD LWR & OUTBD UPR	2	
-56	5222601-9	*	. BULKHEAD ASSY-LH AFT	1	
	5222601-10	*	. BULKHEAD ASSY-RH AFT	1	
-57	5222600-35	*	. SKIN-INNER	1	
-58	5222601-17	*	. STIFFENER-OUTBD LH & RH NACELLE	2	
-59	5222601-19	*	. STIFFENER-CTR LH NACELLE	1	
	5222601-20	*	. STIFFENER-CTR RH NACELLE	1	
-60	5222601-18	*	. STIFFENER-INBD LH & RH NACELLE	2	
-61	5222601-16	*	. DOUBLER ASSY-FUEL FILLER CAP	1	
			ATTACHING PARTS		
-62	MS24693S272		. SCREW	8	
	NAS500WKDD10		. NUT SPACER	8	
			---*---		
-63	5222601-7	*	. PANEL ASSY-OUTBD LH NACELLE	1	
	5222601-8	*	. PANEL ASSY-OUTBD RH NACELLE	1	
-64	5222601-5	*	. PANEL ASSY-INBD LH NACELLE		
	5222601-6	*	. PANEL ASSY-INBD RH NACELLE		
	0721303-37	*	. CAP & ADAPTER ASSY	2	
			ATTACHING PARTS		
-65	MS24693S293		. SCREW	8	
			---*---		

CONTINUED

FIGURE AND INDEX NO.	PART NUMBER	1 2 3 4 5 6 7 DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
37 -66	0721303-7 *	CAP	1	
-67	0721303-3	CHAIN ASSY	1	
-68	0721303-38 **	ADAPTER	1	
-69	SEE FIG 1 *	PLACARD-FUEL FILLER	2	
-70	5626015-13	DOOR ASSY-ACCESS USE WITH WINDSHIELD ANTI-ICE	1	
	0851160-37	DOUBLER-ACCESS DOOR USE WITH WINDSHIELD ANTI-ICE	1	
-71	SEE FIG 1	PLACARD-WINDSHIELD ANTI-ICE	1	
-72	5626015-14	DOUBLER-ACCESS DOOR USE WITH WINDSHIELD ANTI-ICE	1	
-73	0851871-1	DOOR ASSY-GROUND SERVICE PLUG	1	H

*---USED WITH WING LOCKER AUX FUEL
#---THIS ASSEMBLY MUST BE PURCHASED COMPLETE

**---NOT USED WITH WING LOCKER AUX FUEL AND/OR AIRCONDITIONING

A---340-0001 THRU 340-0011 & 340-0169 & ON
B---340-0012 THRU 340-0168
C---340-0001 THRU 340-0090
D---340-0091 & ON
E---340-0001 THRU 340-0362
F---340-0363 & ON
G---340-0001 THRU 340-0500
H---340-0501 & ON
J---340-0001 THRU 340-0011 & 340-0169 THRU 340-0500

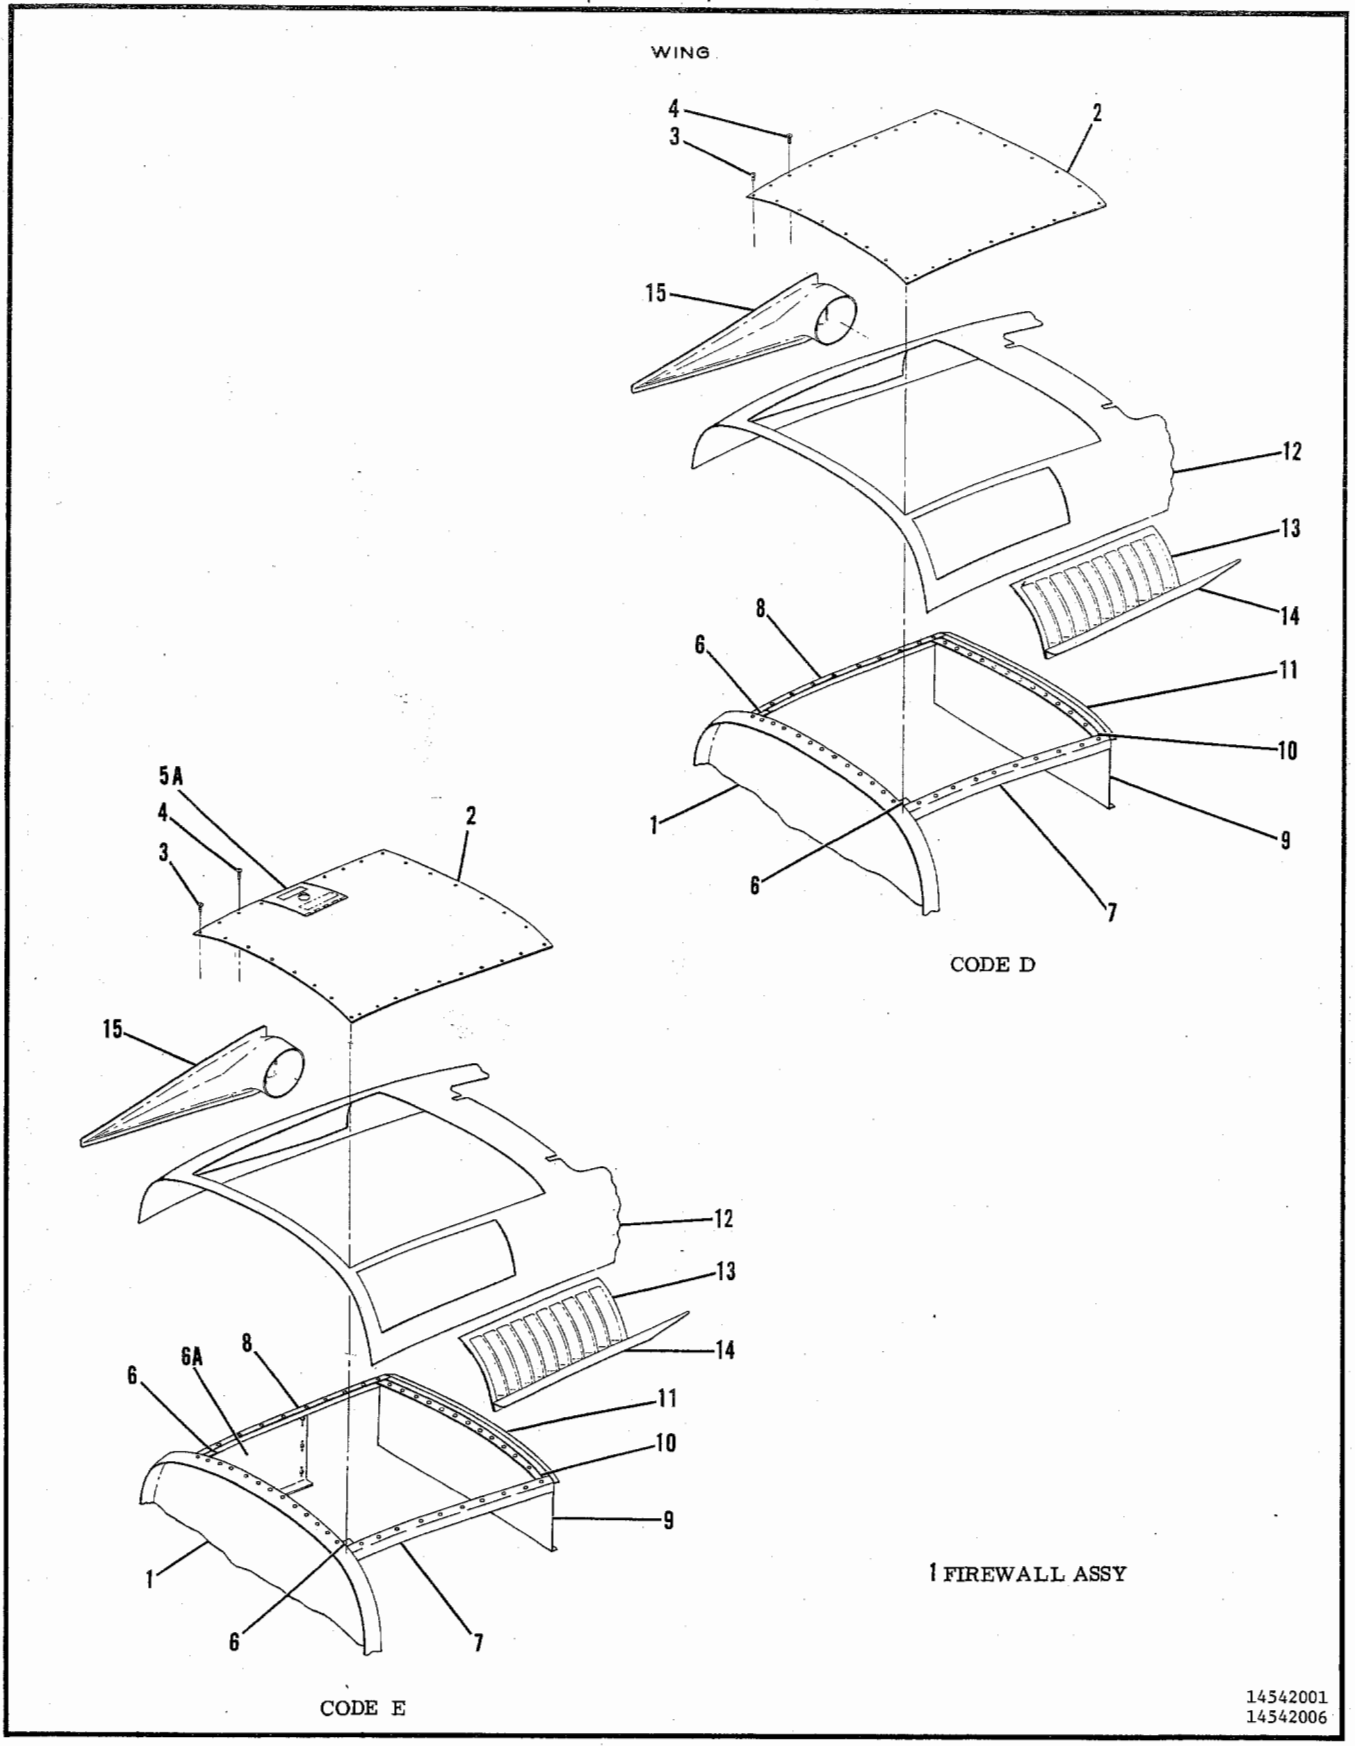

Figure 38. Nacelle Structure Installation - Air Conditioning

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
38 -		NACELLE STRUCTURE INSTALLATION-AIRCONDITIONING	NP	
-1	SEE FIG 36	. FIREWALL ASSY	1	
-2	5654026-14	. COVER ASSY	1	D
	5654026-36	. COVER ASSY	1	E
		ATTACHING PARTS		
-3	MS27039-0807	. SCREW	8	
-4	MS24694S4	. SCREW	20	
		----*---		
-5		. DELETED NOT USED		
-5A	5654026-35	. . DOOR ASSY	1	E
	0851160-43	. . . HINGE HALF DOOR	1	E
	0851160-42	. . . HINGE HALF NACELLE SKIN	1	E
	MS20253P2-400	. . . PIN-HINGE	1	E
	MS24665-22	. . . PIN-COTTER	2	E
	1552010-1	. . . SPRING	1	E
	5654026-34	. . . DOOR FSD 5654026-39	1	H
	5654026-39	. . . DOOR	1	J
	KM610-51	. . . LATCH	1	E
	5154031-1	. . . PLACARD A/C HYDRAULIC RESERVOIR	1	E
	5154031-5	. . . PLACARD HYDRAULIC FLUID FILLING INSTRUCTIONS	1	E
-6	5654026-17	. ANGLE-FWD LH & RH	2	
-6A	5154005-5	. MOUNT ASSY-HYDRAULIC RESERVOIR	1	E
-7	5654026-26	. STIFFENER-INBD	1	
-8	5654026-27	. STIFFENER-OUTBD	1	
-9	5222601-31	. BULKHEAD ASSY-AFT	1	D
	5222601-44	. BULKHEAD ASSY-AFT	1	E
-10	5654026-16	. ANGLE-AFT	1	
-11	5654026-23	. STIFFENER-AFT	1	
-12	5254101-25	. SKIN ASSY	1	A
	5295101-3	. SKIN ASSY	1	B
	5254101-27	. SKIN ASSY	1	C
-13	5654027-2	. LOUVER-INBD	1	
-14	5654027-3	. STRAKE-INBD	1	
-15	5654028-2	. DUCT ASSY-AIRSCOOP OUTBD	1	F
	5654028-8	. DUCT ASSY-AIRSCOOP OUTBD	1	G

A---340-0001 THRU 340-0011 & 340-0169 THRU 340-0176
B---340-0012 THRU 340-0168
C---340-0177 & ON
D---340-0001 THRU 340-0300
E---340-0301 & ON
F---340-0001 THRU 340-0261
G---340-0262 & ON
H---340-0301 THRU 340-0351
J---340-0352 & ON

WING

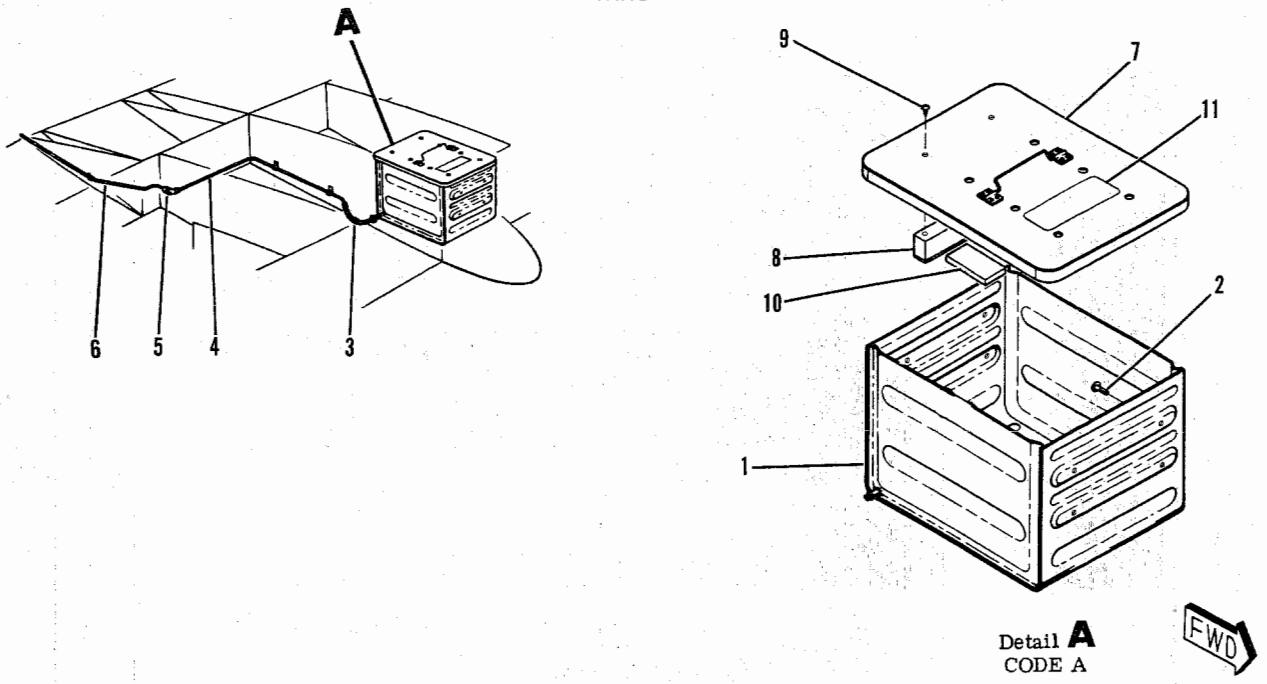

Detail **A**
CODE A

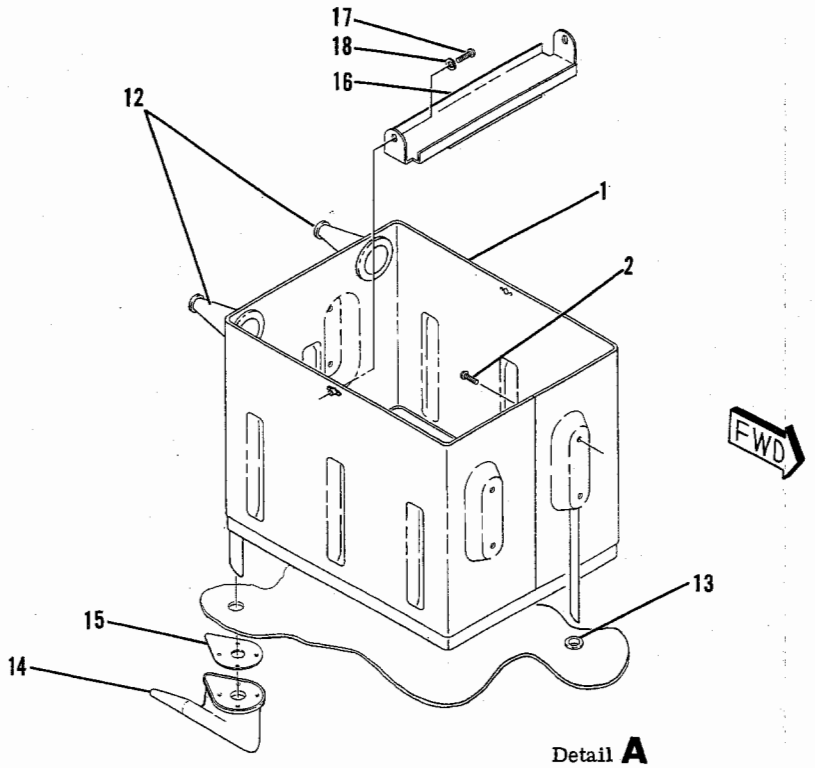

Detail **A**
CODE B

11 BATTERY BOX COVER PLACARD

14222001
A14222001
A14222002

Figure 38A. Battery Box Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
38A-		BATTERY BOX INSTALLATION	NP	
-1	0822010-8	. BATTERY BOX ASSY-LEFT WING	1	A
	0818105-1	. BATTERY BOX ASSY-LEFT WING	1	B
		ATTACHING PARTS		
-2	MS35206-244	. SCREW	8	A
	MS35206-242	. SCREW	8	B
		---*---		
-3	S1495-4	. HOSE BKI	AR	A
		ATTACHING PARTS		
	NAS397-8	. CLAMP	2	A
		---*---		
-4	0800106-209	. LINE-DRAIN	1	A
		ATTACHING PARTS		
	MS21919DG4	. CLAMP	2	A
	S1021Z8-8	. SCREW	2	A
		---*---		
-5	AN833-4D	. ELBOW	1	A
	AN924-4D	. NUT	1	A
-6	0800106-210	. LINE-DRAIN	1	A
	NAS435-4	CLAMP	1	A
	S1021Z8-8	. SCREW	1	A
		---*---		
-7	0822011-1	. COVERY ASSY-BATTERY BOX	1	A
-8	0413307-6	. . INSULATOR-BATTERY BOX COVER	4	A
	0413307-5	. . SPACER	4	A
		ATTACHING PARTS		
-9	S1021A8-12	. . SCREW	8	A
		---*---		
-10	0822011-3	. . INSULATOR-BATTERY BOX COVER	2	A
-11	SEE FIG 1	. . PLACARD-BATTERY BOX COVER	REF	A
-12	NO.48	. GROMMET	2	B
-13	MS35489-14	. GROMMET	1	B
-14	5118419-2	. FAIRING ASSY-DRAIN PORT	1	B
-15	5118419-6	. SEAL-FUME DRAIN PORT	1	B
-16	5118348-1	. TIE DOWN-BATTERY	1	B
		ATTACHING PARTS		
-17	MS35206-246	. SCREW	2	B
-18	AN960-8	. WASHER	2	B
		---*---		
		A---340-0001 THRU 340-0500 B---340-0501 & ON		

WING

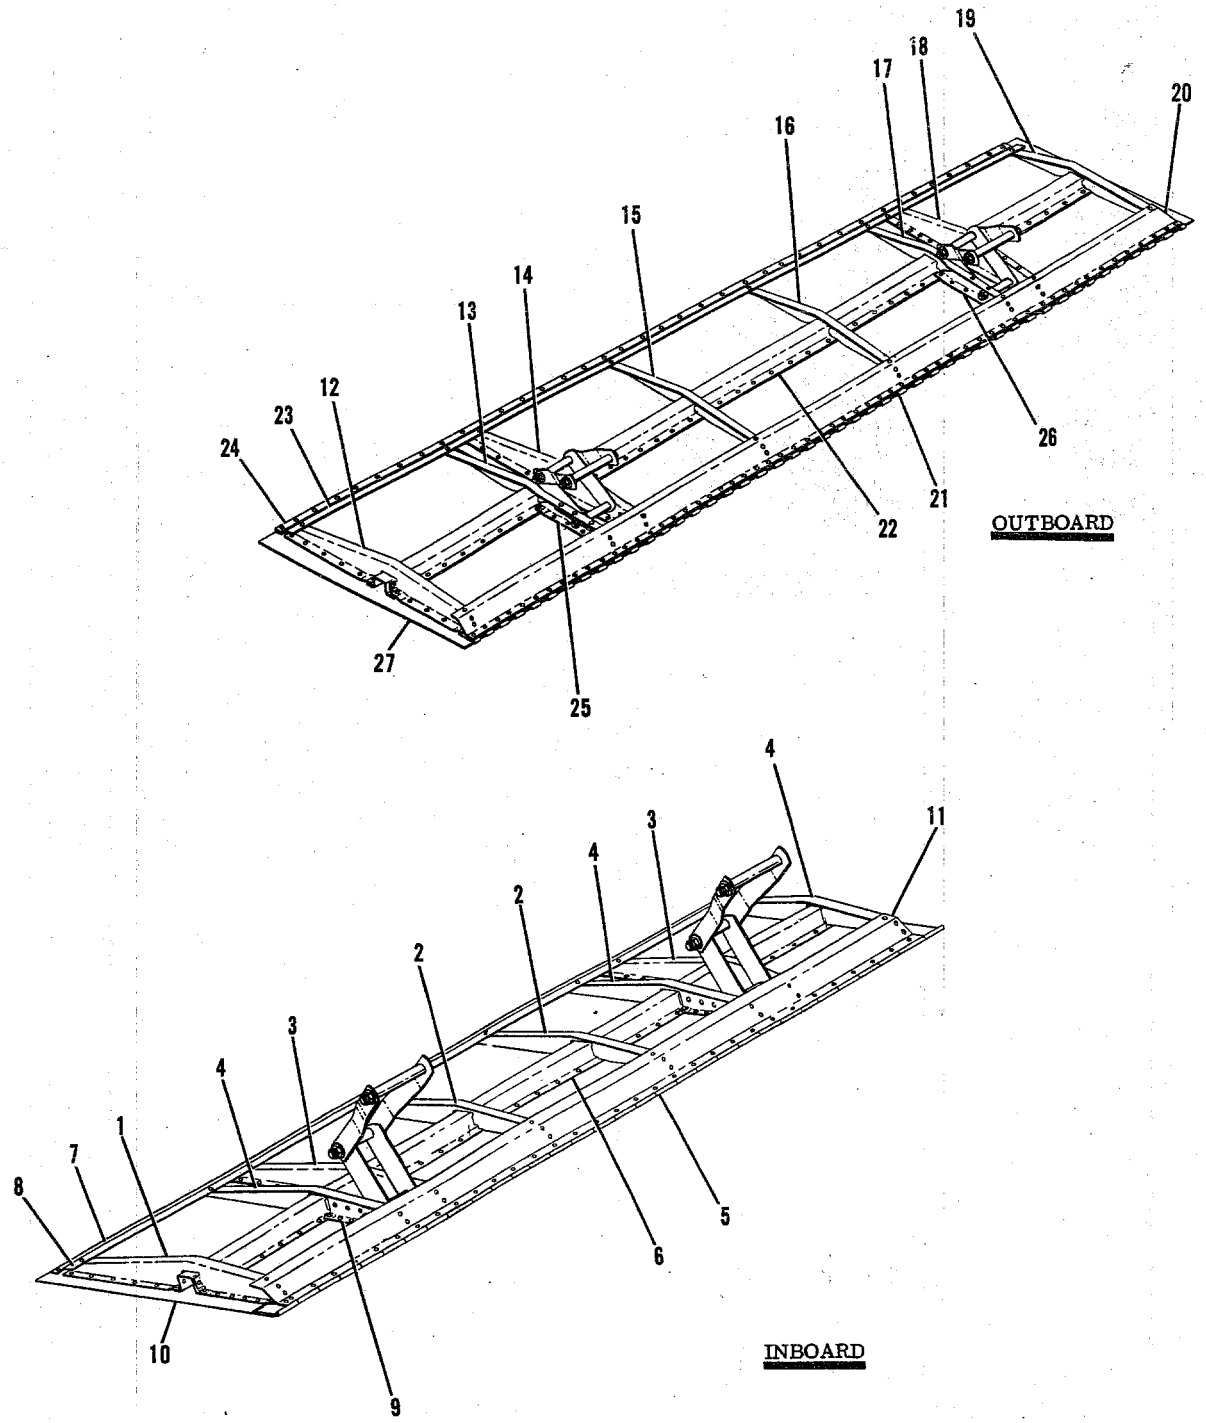

Figure 39. Wing Flap Structure Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
39 -		WING FLAP STRUCTURE INSTALLATION	NP	
	0825000-75	. FLAP ASSY-INBD LH	1	
	0825000-74	. FLAP ASSY-INBD RH	1	
		ATTACHING PARTS		
	0820027-2	. PIN-HINGE ---*---	1	
-1	0825000-17	. . RIB-FLAP LH	1	
	0825000-18	. . RIB-FLAP RH	1	
-2	0825000-18	. . RIB-FLAP LH	2	
	0825000-17	. . RIB-FLAP RH	2	
-3	0825000-19	. . RIB-FLAP LH	2	
	0825000-20	. . RIB-FLAP RH	2	
-4	0825000-20	. . RIB-FLAP LH	3	
	0825000-19	. . RIB-FLAP RH	3	
-5	0825000-57	. . HINGE HALF-FLAP LH	1	
	0825000-58	. . HINGE HALF-FLAP RH	1	
-6	0825000-15	. . STRINGER-FLAP	1	
-7	0825000-63	. . RUB STRIP-FLAP	1	
-8	0825000-65	. . TRAILING EDGE-INBD FLAP LH	1	
	0825000-66	. . TRAILING EDGE-INBD FLAP RH	1	
-9	0825000-50	. . DOUBLER-FLAP	2	
	0825000-49	. . DOUBLER-FLAP	2	
-10	0825000-73	. . SKIN-INBD FLAP LH	1	
	0825000-72	. . SKIN-INBD FLAP RH	1	
-11	0825000-7	. . LEADING EDGE-INBD FLAP LH	1	
	0825000-8	. . LEADING EDGE-INBD FLAP RH	1	
	0825000-71	. FLAP ASSY-OUTBD LH	1	
	0825000-70	. FLAP ASSY-OUTBD RH	1	
		ATTACHING PARTS		
	0820027-1	. PIN-HINGE ---*---	1	
-12	0825000-33	. . RIB-FLAP LH	1	
	0825000-34	. . RIB-FLAP RH	1	
-13	0825000-35	. . RIB-FLAP LH	1	
	0825000-36	. . RIB-FLAP RH	1	
-14	0825000-37	. . RIB-FLAP LH	1	
	0825000-38	. . RIB-FLAP RH	1	
-15	0825000-39	. . RIB-FLAP LH	1	
	0825000-40	. . RIB-FLAP RH	1	
-16	0825000-41	. . RIB-FLAP LH	1	
	0825000-42	. . RIB-FLAP RH	1	
-17	0825000-43	. . RIB-FLAP LH	1	
	0825000-44	. . RIB-FLAP RH	1	
-18	0825000-45	. . RIB-FLAP LH	1	
	0825000-46	. . RIB-FLAP RH	1	
-19	0825000-47	. . RIB-FLAP LH	1	
	0825000-48	. . RIB-FLAP RH	1	
-20	0825000-9	. . LEADING EDGE-OUTBD FLAP LH	1	
	0825000-10	. . LEADING EDGE-OUTBD FLAP RH	1	
-21	0825000-55	. . HINGE HALF-FLAP LH	1	
	0825000-56	. . HINGE HALF-FLAP RH	1	
-22	0825000-13	. . STRINGER-FLAP LH	1	
	0825000-14	. . STRINGER-FLAP RH	1	
-23	0825000-67	. . TRAILING EDGE-OUTBD FLAP LH	1	
	0825000-68	. . TRAILING EDGE-OUTBD FLAP RH	1	
-24	0825000-64	. . RUB STRIP-FLAP	1	
-25	0825000-52	. . DOUBLER-FLAP	1	
	0825000-51	. . DOUBLER-FLAP	1	
-26	0825000-54	. . DOUBLER-FLAP	1	
	0825000-53	. . DOUBLER-FLAP	1	
-27	0825000-59	. . SKIN-OUTBD FLAP LH	1	
	0825000-60	. . SKIN-OUTBD FLAP RH	1	

WING

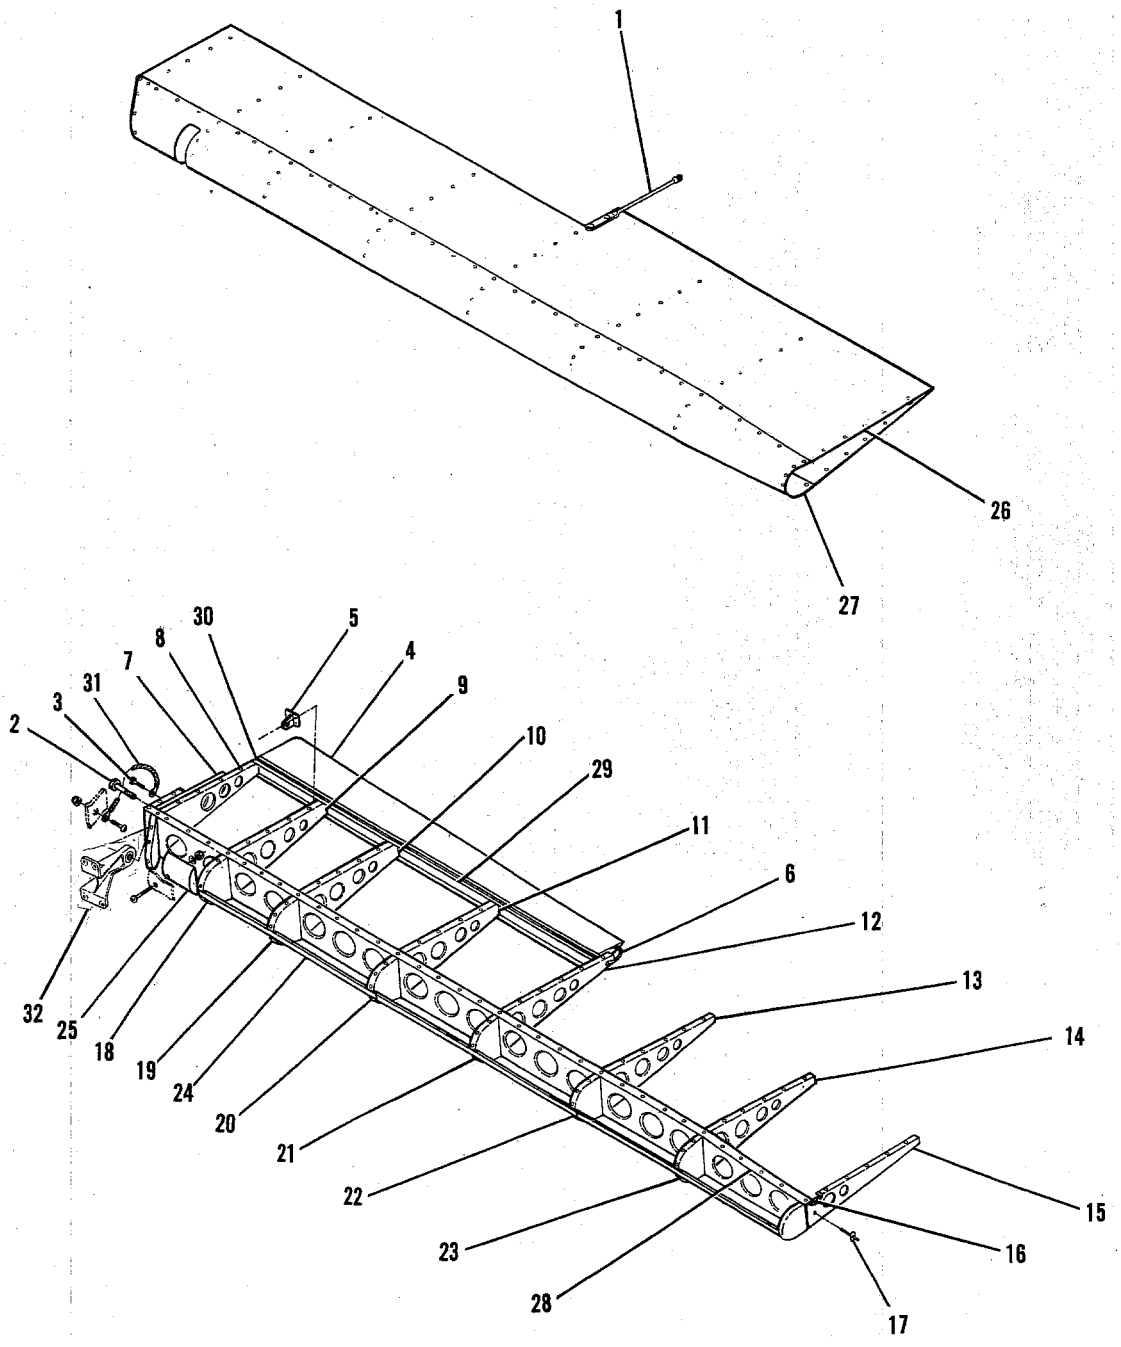

Figure 40. Aileron Structure Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
40 -		AILERON STRUCTURE INSTALLATION	NP	
-1	2-6	. WICK-DISCHARGE CLTD	2	
		ATTACHING PARTS		
	MS27039-0807	. SCREW	2	
	NAS1329S08K75	. NUT-BLIND RIVET	2	
		---*---		
	5024000-63	. AILERON ASSY-COMPLETE LH	1	
		. AILERON ASSY-COMPLETE RH	1	
		ATTACHING PARTS		
-2	AN4C11A	. BOLT	1	
-3	MS35206-243	. SCREW-BONDING STRAP	1	
	MS21044N06	. NUT	1	
		---*---		
-4	5024000-61	. . TAB ASSY-TRIM LH	1	
		ATTACHING PARTS		
	MS20253-2-3400	. . PIN-HINGE	1	
		---*---		
	5024000-60	. . HINGE-HALF	1	
-5	5024000-40	. . . BRACKET-TAB ACTUATOR	1	A
	5024000-82	. . . BRACKET-TAB ACTUATOR	1	B
-6	MS25083-2BB3	. . STRAP-BONDING LH	1	
		ATTACHING PARTS		
	MS35206-243	. . SCREW	2	
		---*---		
	5024000-65	. . AILERON ASSY-LH LESS TRIM TAB	1	
	5024000-2	. . AILERON ASSY-RH	1	
-7	5024000-49	. . . RIB ASSY	1	
-8	5024000-3	. . . RIB ASSY-LH	1	
	5024000-4	. . . RIB ASSY-RH	1	
-9	5024000-23	. . . RIB-LH	1	
	5024000-24	. . . RIB-RH	1	
-10	5024000-54	. . . RIB-LH	1	
	5024000-25	. . . RIB-RH	1	
-11	5024000-55	. . . RIB-LH	1	
	5024000-26	. . . RIB-RH	1	
-12	5024000-62	. . . RIB ASSY-LH	1	
	5024000-27	. . . RIB-RH	1	
-13	5024000-28	. . . RIB	1	
-14	5024000-29	. . . RIB	1	
-15	5024000-81	. . . RIB ASSY	1	
-16	5024005-1	. . . . BLOCK ASSY-BEARING	1	
-17	5024003-1	. . . . PIN-HINGE	1	
-18	5024000-74	. . . RIB ASSY-NOSE	1	
-19	5024000-75	. . . RIB ASSY-NOSE	1	
-20	5024000-76	. . . RIB ASSY-NOSE	1	
-21	5024000-77	. . . RIB ASSY-NOSE	1	
-22	5024000-78	. . . RIB ASSY-NOSE	1	
-23	5024000-79	. . . RIB ASSY-NOSE	1	
-24	5024004-1	. . . WEIGHT-BALANCE INBOARD LH	1	
	5024004-2	. . . WEIGHT-BALANCE INBOARD RH	1	
	5024004-4	. . . WEIGHT-BALANCE CENTER LH	1	
	5024004-10	. . . WEIGHT-BALANCE CENTER RH	1	
	5024004-7	. . . WEIGHT-BALANCE OUTBOARD LH	1	
		ATTACHING PARTS		
	MS24694S54	. . . SCREW	AR	
		---*---		
-25	5024004-11	. . . WEIGHT-FINAL BALANCE LH	1	
	5024004-9	. . . WEIGHT-FINAL BALANCE LH ALT FOR 5024004-11	1	
	5024004-8	. . . WEIGHT-FINAL BALANCE LH ALT FOR 5024004-11	1	
	5024004-3	. . . WEIGHT-FINAL BALANCE RH	1	
		ATTACHING PARTS		
	MS27039-	. . . SCREW LENGTH VARIES	2	
	AN960-10L	. . . WASHER	2	
	MS21044N3	. . . NUT	2	
		---*---		
-26	5024000-64	. . . SKIN-LH	1	
	5024000-14	. . . SKIN-RH	1	
-27	5024000-15	. . . SKIN-LH	1	
	5024000-16	. . . SKIN-RH	1	
-28	5024000-18	. . . SPAR-LH	1	
-29	5024000-56	. . . SPAR-TAB LH	1	
-30	5024000-66	. . . HINGE HALF-LH	1	
-31	MS25083-2BB5	. . . STRAP-BONDING	1	
		ATTACHING PARTS		
	MS35206-243	. . . SCREW	1	
		---*---		
-32	5024002-7	. HINGE ASSY-AILERON INBD LH	1	
	5024002-8	. HINGE ASSY-AILERON INBD RH	1	
		ATTACHING PARTS		
	AN3-5A	. BOLT	4	
	MS21044N3	. NUT	4	
		---*---		
	BR4	. . . BEARING SHA	1	

A---340-C001 THRU 340-0553
B---340-0554 & ON

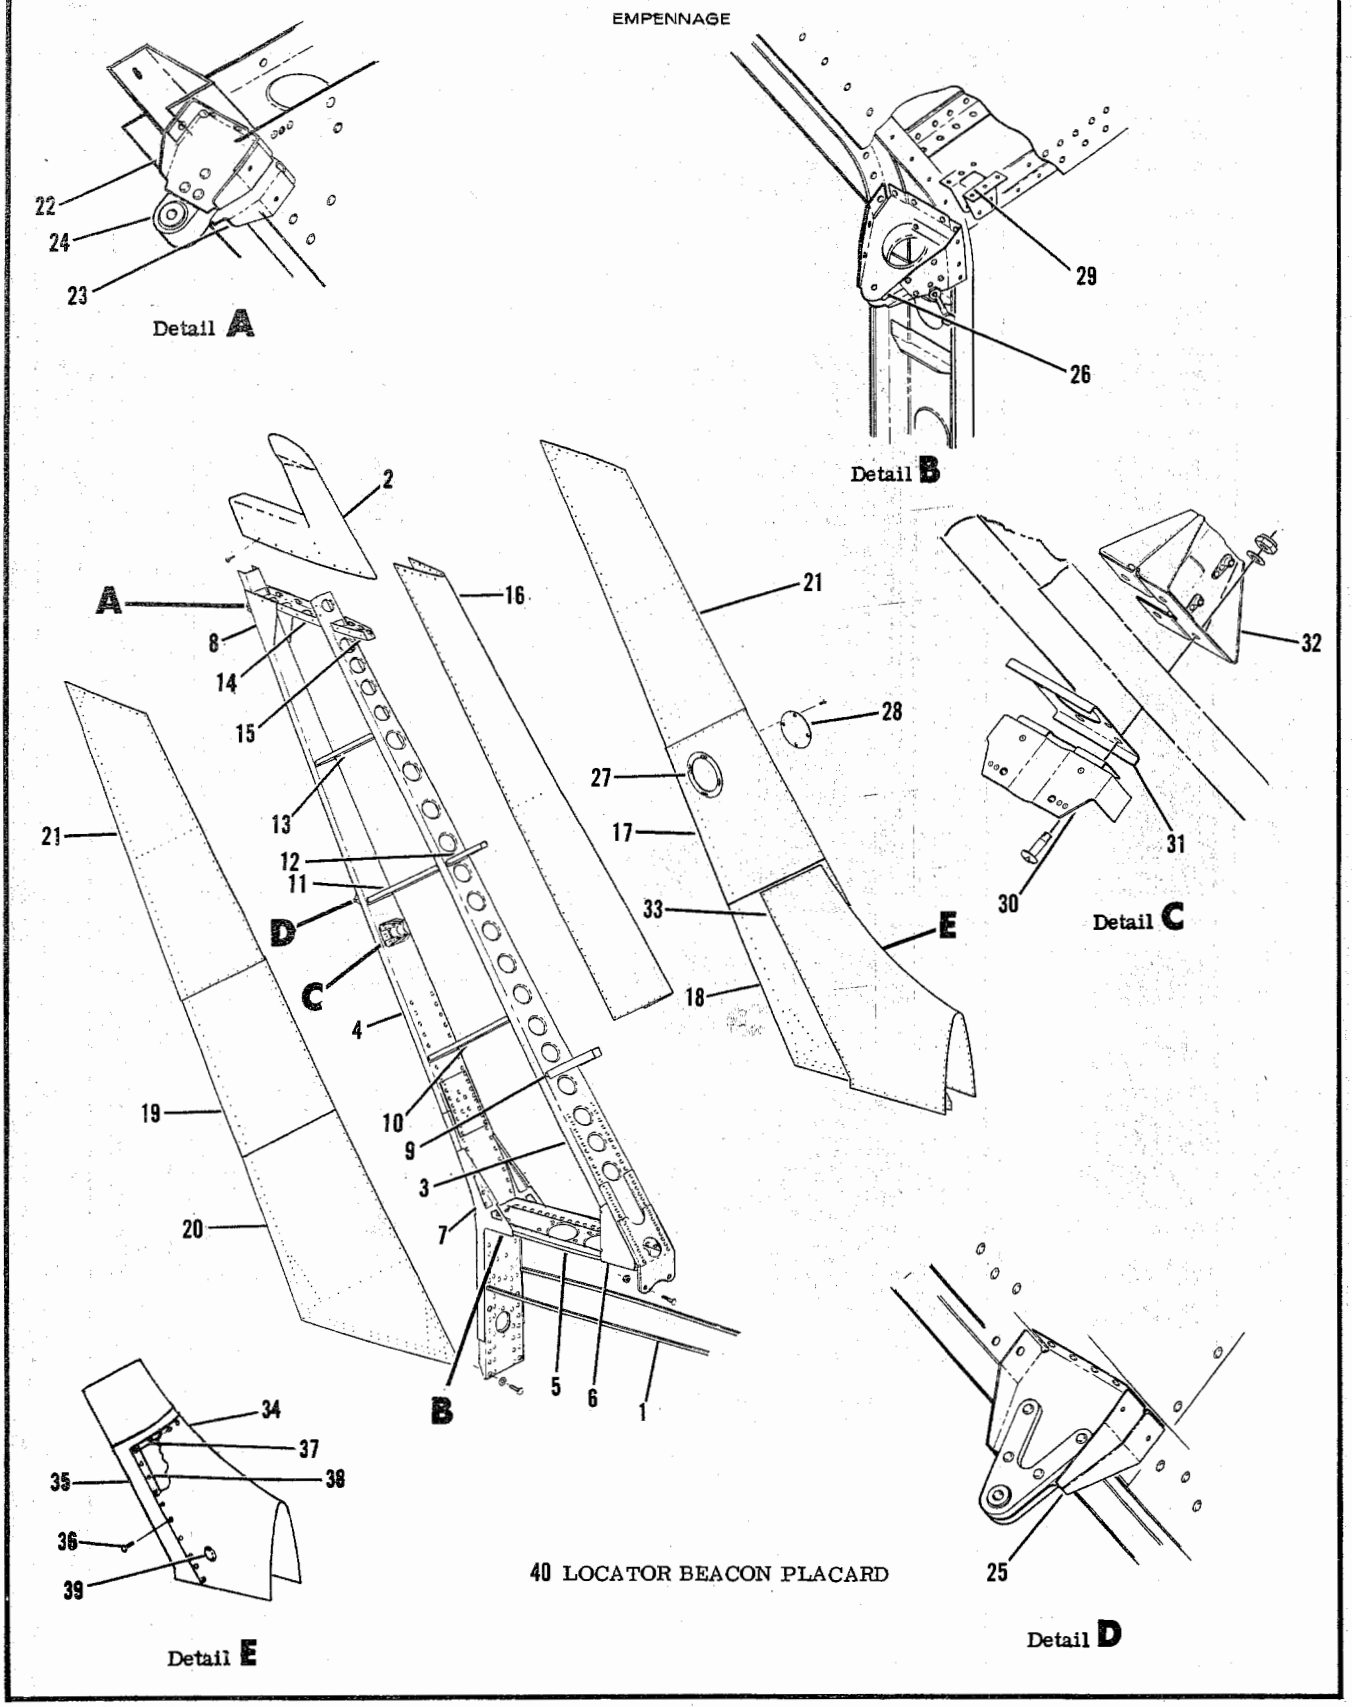

Figure 41. Vertical Stabilizer Structure Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
41 -		VERTICAL STABILIZER STRUCTURE INSTALLATION	NP	
-1	S202RB	. MOULDING BKI	AR	
-2	0831116-1	. TIP ASSY-FIN	1	
		ATTACHING PARTS		
	MS35206-228	. SCREW	20	
		---*---		
	0831002-205	. FIN ASSY	1	
		ATTACHING PARTS		
	MS35207-263	. SCREW AFT	40	
	NAS464P6LA13	. BOLT FWD	2	
	MS21044N3	. NUT AFT	4	
	NAS464P6LA5	. BOLT	6	
	AN960-616	. WASHER UNDER NUT	8	
	MS21042L6	. NUT FWD & AFT	8	
		---*---		
-3	0831300-1	. . SPAR ASSY-FIN FRONT	1	
		---*---		
-4	0831301-14	. . SPAR ASSY-FIN REAR	1	
-5	0831303-1	. . RIB ASSY-FIN ROOT	1	
-6	0831330-1	. . DOUBLER-LH LWR FWD	1	
	0831330-2	. . DOUBLER-RH LWR FWD	1	
-7	0831334-1	. . DOUBLER-LH LWR AFT	1	
	0831334-2	. . DOUBLER-RH LWR AFT	1	
-8	0831348-1	. . GUSSET-UPR	2	
-9	0831305-1	. . RIB-FIN NOSE	1	
-10	0831306-1	. . RIB-FIN LWR	1	
-11	0831307-1	. . RIB-FIN CTR	1	
-12	0831307-2	. . RIB-FIN NOSE	1	
-13	0831308-1	. . RIB-FIN CTR	1	
-14	0831329-1	. . RIB ASSY-FIN TIP	1	
-15	0831329-2	. . RIB ASSY-FIN TIP	1	
-16	0831002-7	. . SKIN-LEADING EDGE	1	
-17	5031000-21	. . SKIN-CTR LH FIN	1	
-18	5031000-15	. . SKIN-LWR LH FIN	1	
		ATTACHING PARTS		
	AN525-832-6	. . SCREW	14	
		---*---		
-19	5031000-18	. . SKIN-CTR RH FIN	1	
-20	5031000-16	. . SKIN-LWR RH FIN	1	
-21	0831002-10	. . SKIN-UPR FIN	2	
-22	0831350-1	. . BRACKET-FIN UPR HINGE	1	
-23	0831350-2	. . BRACKET-FIN UPR HINGE	1	
-24	0832000-147	. . BEARING ASSY-FIN UPR HINGE	1	
	MS24462-4	. . . BEARING	1	
-25	0831106-4	. . HINGE ASSY-FIN CTR	1	
	MS24462-4	. . . BEARING	1	
-26	0831326-18	. . HINGE ASSY-FIN LWR	1	
	NAS428-4-6	. . . BOLT-STOP	2	
	CM2023-2	. . . NUT-SELF ALIGNING	2	
	CM2024-2	. . . WASHER-SELF ALIGNING	2	
	AN960-416L	. . . WASHER	2	
	0831326-17	. . . BRACKET-HINGE LWR	1	
-27	0822380-20	. . DOUBLER ASSY-ACCESS OPENING	1	
-28	0822380-26	. . PLATE-ACCESS	1	
		ATTACHING PARTS		
	MS24693S272	. . SCREW	4	
		---*---		
-29	0831364-1	. . BRACKET-PULLEY LH	1	
	0831364-2	. . BRACKET-PULLEY RH	1	
-30	0831346-3	. . BRACKET ASSY-TAB ACTUATOR AFT	1	
-31	0831347-2	. . ANGLE	2	
-32	0831341-1	. . BRACKET ASSY-TAB ACTUATOR FWD	1	
		ATTACHING PARTS		
	MS35207-263	. . SCREW	4	
	AN960-10L	. . WASHER	4	
	MS21044N3	. . NUT	4	
		---*---		
-33	0831002-48	. . FAIRING-DORSAL	1	
-34	5300919-4	. . FAIRING-DORSAL USED WITH LOCATOR BEACON	1	
-35	5300919-5	. . FAIRING-DORSAL USED WITH LOCATOR BEACON	1	
		ATTACHING PARTS		
-36	MS27039-1-05	. . SCREW		
		---*---		
-37	0831006-7	. . DOUBLER USED WITH LOCATOR BEACON	1	
-38	0831006-5	. . DOUBLER USED WITH LOCATOR BEACON	1	
-39	CM2692-32-1S	. . PLUG BUTTON USED WITH LOCATOR BEACON	2	
-40	SEE FIG 1	. . PLACARD-LOCATOR BEACON CHG RH	2	

EMPENNAGE

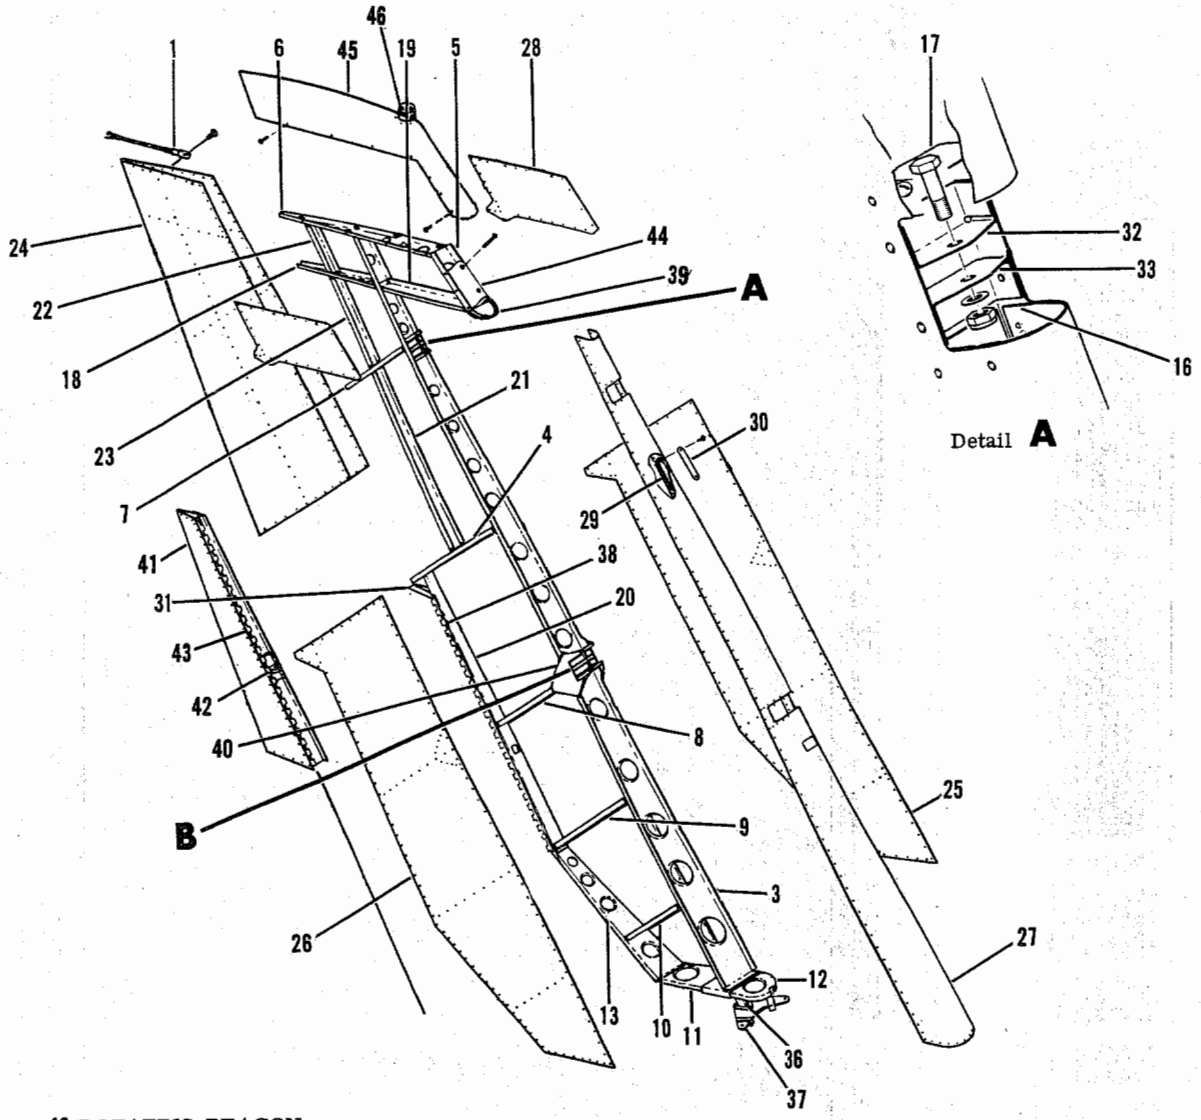

46 ROTATING BEACON

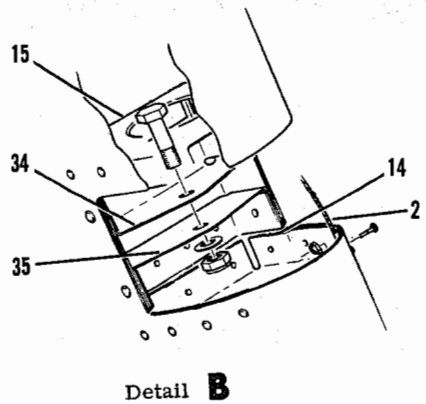

Figure 42. Rudder Structure Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
42 -		RUDDER STRUCTURE INSTALLATION	NP	
-1	2-6	. WICK-DISCHARGE . . . . . CLTD	1	
		ATTACHING PARTS		
	NAS1329A08K75	. RIVNUT	2	
	MS35206-246	. SCREW	2	
		---*---		
-2	0831005-1	. STRAP-BONDING	2	
		ATTACHING PARTS		
	MS35206-230	. SCREW	2	
	MS21044N06	. NUT	2	
		---*---		
	0831002-206	. RUDDER & TAB ASSY FSO 0831002-52	1	A
	0831002-52	. RUDDER & TAB ASSY	1	B
		ATTACHING PARTS		
	AN4-11A	. BOLT	2	
	AN960-416	. WASHER	AR	
	AN960-416L	. WASHER	AR	
	MS21044N4	. NUT	2	
		---*---		
	0831002-207	. . RUDDER ASSY FSO 0831002-53	1	A
	0831002-53	. . RUDDER ASSY	1	B
-3	0831302-2	. . . SPAR-RUDDER	1	
-4	0831308-2	. . . RIB-RUDDER	1	
-5	0831311-1	. . . RIB ASSY-RUDDER TIP	1	
-6	0831312-1	. . . RIB ASSY-RUDDER	1	
-7	0831313-1	. . . RIB-RUDDER UPR HINGE	1	
-8	0831314-1	. . . RIB-RUDDER CTR	1	
-9	0831315-1	. . . RIB ASSY-RUDDER LWR	1	
-10	0831316-1	. . . RIB-RUDDER LWR	1	
-11	0831317-1	. . . RIB-RUDDER BOTTOM	1	
-12	0831317-2	. . . RIB-RUDDER BOTTOM	1	
-13	0831318-1	. . . RIB-RUDDER DIAGONAL	1	
-14	0831328-1	. . . RIB-CENTER HINGE NOSE	1	
-15	0831328-2	. . . RIB-CENTER HINGE NOSE	1	
-16	0831328-3	. . . RIB-UPR HINGE NOSE	1	
-17	0831357-1	. . . RIB-UPR HINGE TOP	1	
		ATTACHING PARTS		
	MS35206-226	. . . SCREW	2	
		---*---		
-18	0831345-1	. . . RIB-RUDDER	1	
-19	0831345-2	. . . RIB-RUDDER	1	
-20	0831319-1	. . . CHANNEL-RUDDER TAB SUPPORT	1	
-21	0831321-1	. . . CHANNEL-RUDDER STIFFENER	1	
-22	0831338-1	. . . CHANNEL-RUDDER STIFFENER UPPER	1	
-23	0831342-1	. . . CHANNEL-RUDDER STIFFENER CENTER	1	
-24	0831002-11	. . . SKIN-RUDDER	1	
-25	0831002-13	. . . SKIN-LWR RUDDER LH	1	
-26	0831002-18	. . . SKIN-LWR RUDDER RH	1	
-27	0831002-14	. . . SKIN-RUDDER NOSE	1	
-28	0831002-15	. . . SKIN	2	
-29	0831000-22	. . . DOUBLER-RUDDER ACCESS OPENING	2	
-30	0831000-86	. . . PLATE-ACCESS OPENING	2	
		ATTACHING PARTS		
	S1022Z6-6	. . . SCREW	2	
		---*---		
-31	0831327-1	. . . BLOCK-FILLER	1	
-32	0831351-1	. . . HINGE HALF-RUDDER UPR	1	
-33	0831351-2	. . . HINGE HALF-RUDDER UPR	1	
-34	0831353-1	. . . HINGE BRACKET-RUDDER CTR	1	
-35	0831353-2	. . . HINGE BRACKET-RUDDER CTR	1	
	0831352-1	. . . DOUBLER-RUDDER CTR HINGE LH	1	
	0831352-2	. . . DOUBLER-RUDDER CTR HINGE RH	1	
-36	0831359-1	. . . TORQUE TUBE ASSY	1	A
	0831359-9	. . . TORQUE TUBE ASSY	1	B
-37	0813017-1	. . . BELLCRANK ASSY-RUDDER STEERING	1	A
	0813017-2	. . . BELLCRANK ASSY-RUDDER STEERING	1	B
		ATTACHING PARTS		
	AN3-5A	. . . BOLT	3	A
	AN4-51	. . . BOLT	3	B
	AN960-10	. . . WASHER	3	A
	AN960-416	. . . WASHER	3	B
	MS21044N3	. . . NUT	3	A
	MS21044N4	. . . NUT	3	B
		---*---		
-38	MS20257Y3-2480	. . . HINGE HALF-RUDDER TRIM	1	
-39	0831361-1	. . . RIB ASSY	1	
-40	0831362-4	. . . DOUBLER-REINFORCEMENT	1	
-41	0831002-5	. . TRIM TAB ASSY-RUDDER	1	
		ATTACHING PARTS		
	MS20253-2-245C	. . HINGE PIN	1	
	MS24665-132	. . PIN	2	
		---*---		

CONTINUED

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
42 -42	0832143-5	. . . HORN ASSY-TAB	1	
	S1003-7A	. . . . BEARING	1	
-43	AN257Y3-2480	. . HINGE-HALF	1	
-44	0831335-3	. WEIGHT-RUDDER BALANCE	1	
		ATTACHING PARTS		
	MS27039-4-44	. SCREW	2	
		---*---		
-45	0831018-2	. TIP ASSY-RUDDER	1	
		ATTACHING PARTS		
	MS35206-226	. SCREW	2	
	MS35206-228	. SCREW	14	
		---*---		
	0831019-1	. . PLACARD-RUDDER BALANCE	1	C
	0800181-56	. PLACARD-RUDDER BALANCE	1	D
-46	SEE FIG 146	. ROTATING BEACON	REF	
		A---340-0001 THRU 340-0240 B---340-0241 & ON C---340-0001 THRU 340-0500 D---340-0501 & ON		

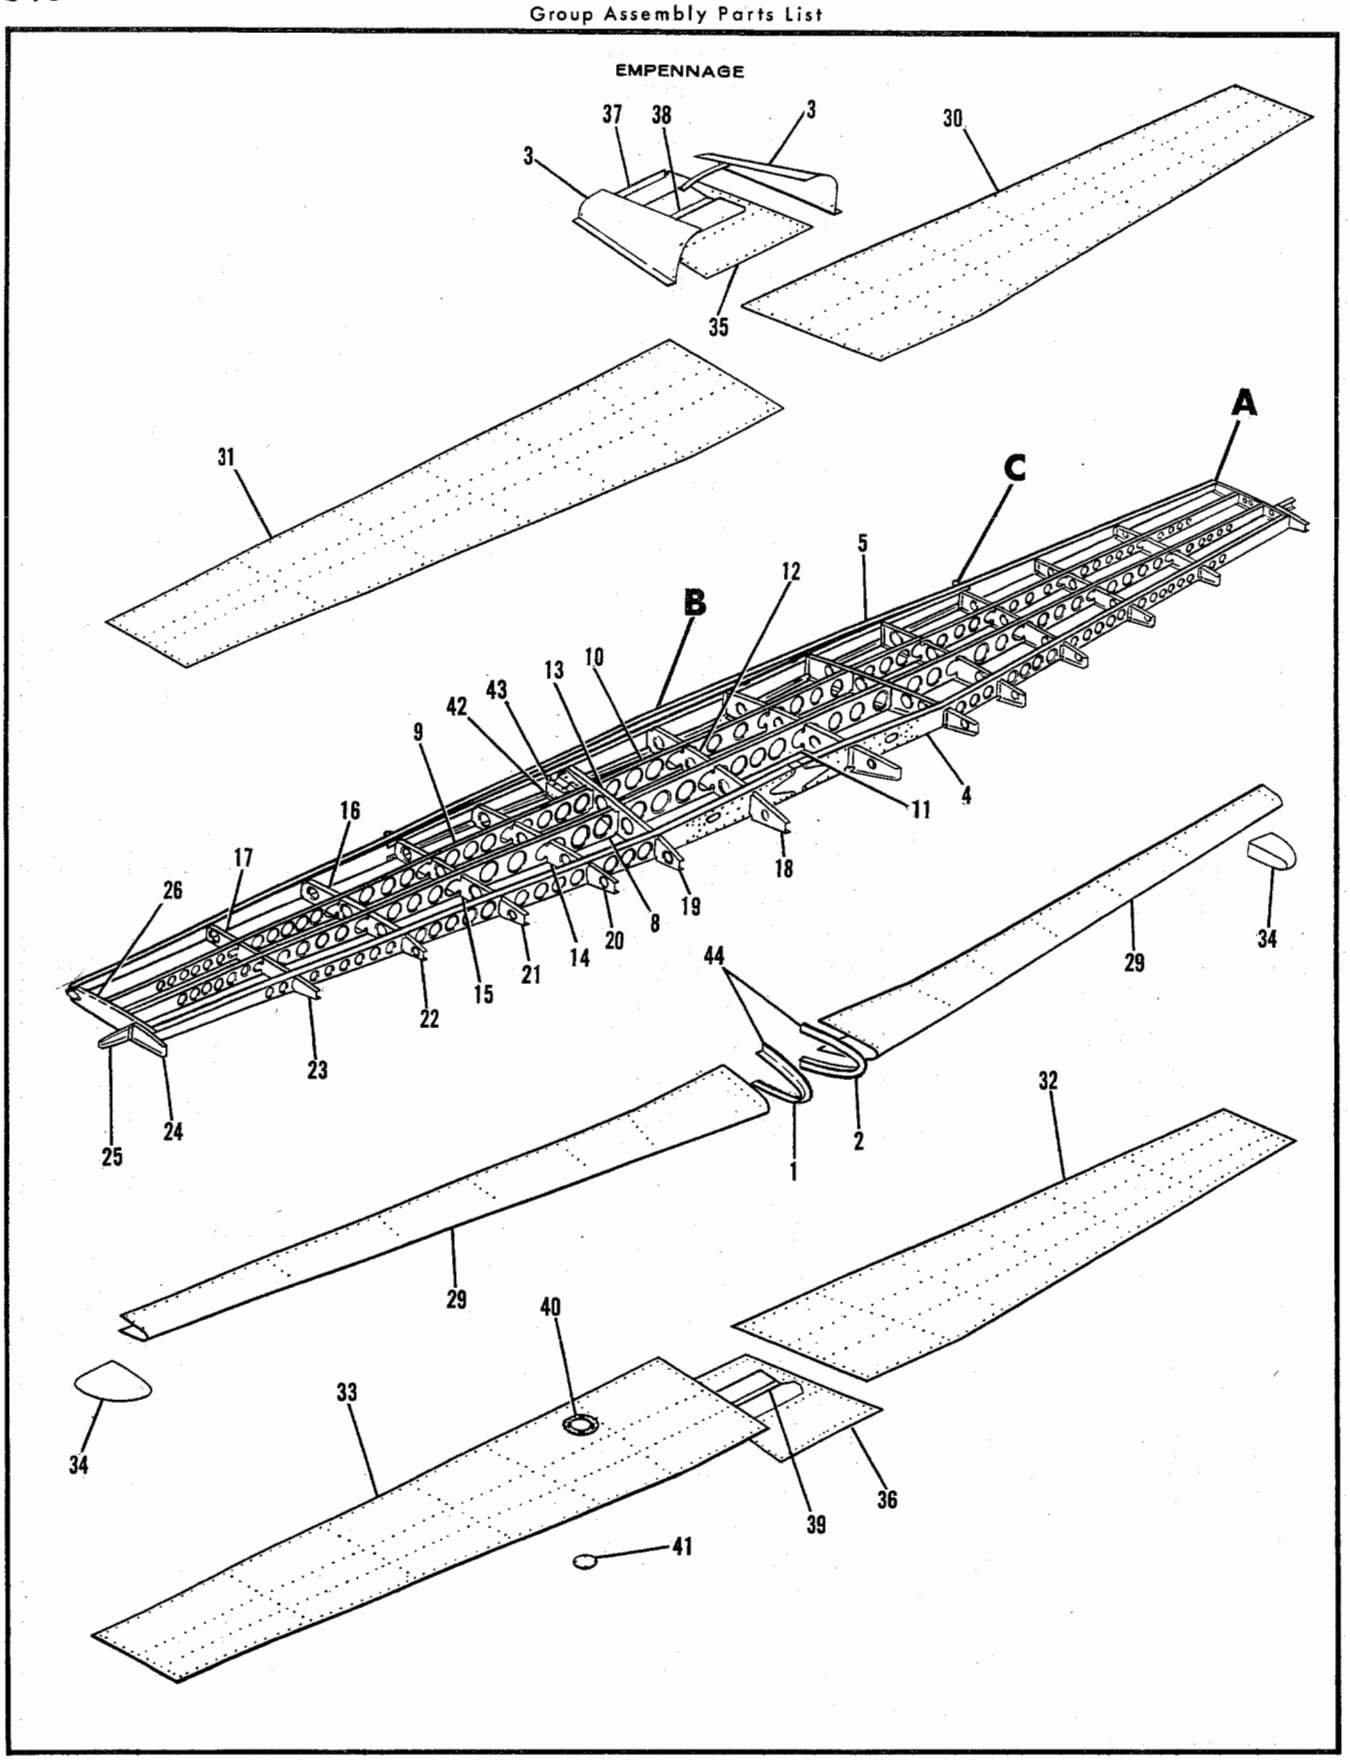

Figure 43. Horizontal Stabilizer Structure Installation (Sheet 1 of 2)

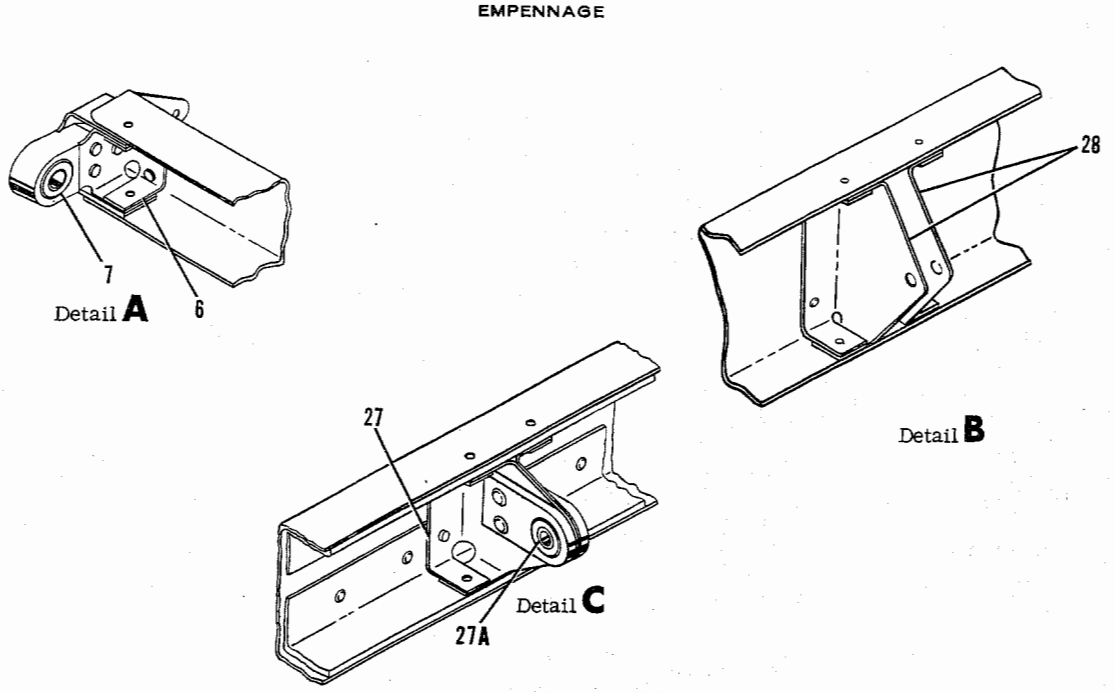

Figure 43. Horizontal Stabilizer Structure Installation (Sheet 2)

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
43 -		HORIZONTAL STABILIZER STRUCTURE INSTALLATION	NP	
-1	5312040-17	. FAIRING ASSY-LH LEADING EDGE WELD	1	
-2	5312040-18	. FAIRING ASSY-RH LEADING EDGE WELD	1	
		ATTACHING PARTS		
	MS35206-243	. SCREW	6	
		---*---		
-3	5312040-5	. SKIN-LH	1	
	5312040-6	. SKIN-RH	1	
		ATTACHING PARTS		
	MS35206-243	. SCREW	AR	
	AN525-8-6	. SCREW-AFT	3	
	130008	. CLIPNUT-AFT	3	
		---*---		
	0893002-8	. STABILIZER ASSY	1	
		ATTACHING PARTS		
	AN6-7A	. BOLT-FWD	2	
	AN5-6A	. BOLT-AFT	4	
	MS21042L6	. NUT-FWD	2	
	MS21042L6	. NUT-AFT	4	
	AN960-616	. WASHER UNDER NUT	6	
		---*---		
-4	5032001-6	. . SPAR ASSY-STABILIZER FRONT FSO 5032001-11	1	C
	5032001-10	. . SPAR ASSY-STABILIZER FRONT WEU 5032001-11	1	D
	5032001-11	. . SPAR ASSY-STABILIZER FRONT	1	E
-5	0832250-2	. . SPAR ASSY-STABILIZER REAR FSO 0832250-70	1	A
-6	0832000-56	. . . BRACKET ASSY-STABILIZER HALF OUTBOARD HINGE FSO 5132013-5	2	A
-7	MS24461-4	. . . BEARING	1	
	0832250-70	. . SPAR-STABILIZER REAR	1	B
	5132013-5	. . HINGE ASSY	2	B
	NAS506-4	. . . BEARING	1	B
-8	0832250-12	. . SPAR-FWD AUXILIARY	2	
-9	0832250-13	. . SPAR-REAR AUXILIARY	2	
-10	0832250-70	. . SPAR-REAR CARRY THRU	1	
-11	0832250-71	. . SPAR-FWD CARRY THRU	1	
-12	0832111-1	. . RIB-STABILIZER	2	
-13	0832111-2	. . RIB-STABILIZER	2	

CONTINUED

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
43 -14	0832111-3	. . RIB-STABILIZER	2	
-15	0832111-4	. . RIB-STABILIZER	2	
-16	0832111-5	. . RIB-STABILIZER	2	
-17	0832111-6	. . RIB-STABILIZER	2	
-18	0832250-25	. . RIB-STABILIZER NOSE	2	
-19	0832250-26	. . RIB-STABILIZER NOSE	2	
-20	0832250-27	. . RIB-STABILIZER NOSE	2	
-21	0832250-28	. . RIB-STABILIZER NOSE	2	
-22	0832250-29	. . RIB-STABILIZER NOSE	2	
-23	0832250-30	. . RIB-STABILIZER NOSE	2	
-24	0832250-66	. . RIB-STABILIZER NOSE	2	
-25	0832250-67	. . RIB-STABILIZER	2	
-26	0832111-7	. . RIB ASSY-STABILIZER	2	
-27	0832000-51	. . BRACKET ASSY-STABILIZER HALF HINGE	1	
-27A	MS24461-4	. . . BEARING	1	
-28	0832000-35	. . BRACKET-STABILIZER HALF CTR HINGE	2	
-29	5032000-3	. . SKIN-STABILIZER LEADING EDGE	2	
-30	0832000-165	. . SKIN-STABILIZER UPR LH	1	
-31	0832000-166	. . SKIN-STABILIZER UPR RH	1	
-32	0832000-167	. . SKIN-STABILIZER LWR LH	1	
-33	0832000-186	. . SKIN-STABILIZER LWR-RH	1	
-34	0832115-1	. . TIP-STABILIZER	2	
-35	0832000-193	. . SKIN ASSY-STABILIZER UPR CTR	1	
-36	0832000-192	. . SKIN-STABILIZER LWR CTR	1	
-37	0832000-197	. . ANGLE-SUPPORT	1	
-38	0832000-199	. . DOUBLER-SKIN UPR	1	
-39	0832000-198	. . DOUBLER-SKIN LWR	1	
-40	0822380-28	. . DOUBLER ASSY-SKIN LWR-RH	1	
-41	0822380-26	. . PLATE-ACCESS	1	
		ATTACHING PARTS		
	MS24693S271	. . SCREW	4	
		---*---		
-42	0832000-45	. . ANGLE-TAB ACTUATOR SUPPORT	1	
-43	0832000-40	. . SUPPORT ASSY-TAB ACTUATOR	1	
-44	S202RB	. MOULDING BKI	AR	

A---340-0001 THRU 340-0300
B---340-0301 & ON
C---340-0001 THRU 340-0321
D---340-0322 THRU 340-0548
E---340-0549 & ON

EMPENNAGE

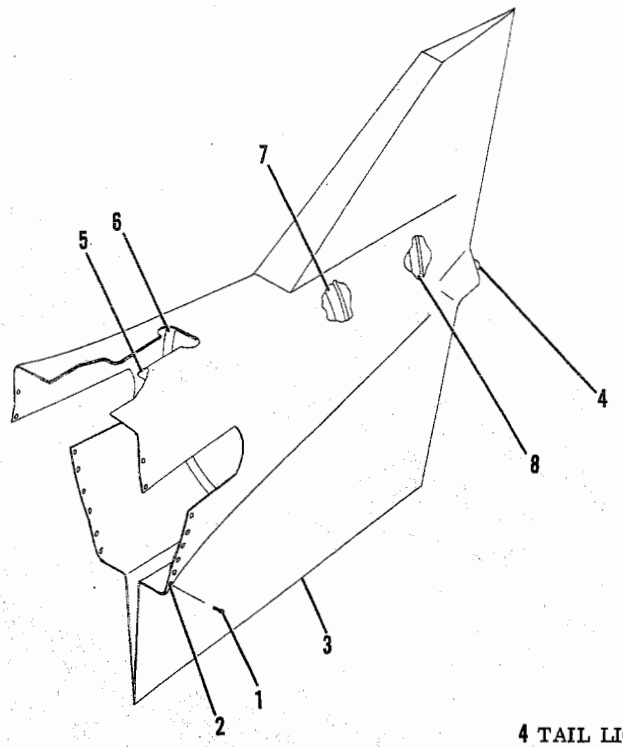

4 TAIL LIGHT ASSEMBLY

Figure 44. Stinger Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
44 -		STINGER INSTALLATION	NP	
	5312032-3	. STINGER ASSY COMPLETE	1	
		ATTACHING PARTS		
-1	MS35206-243	. SCREW	20	
		---*---		
-2	S1589-3	. . EYELET	20	
-3	5312032-5	. . STINGER HALF-LH	1	
	5312032-4	. . STINGER HALF-RH	1	
-4	SEE FIG 146	. . TAIL LIGHT ASSY	1	
-5	5312032-12	. . DOUBLER-RUDDER TORQUE TUBE	1	
-6	5312033-4	. . BULKHEAD ASSY STA 391.00	1	
-7	5312033-5	. . BULKHEAD ASSY STA 399.00	1	
-8	5312033-6	. . BULKHEAD ASSY STA 406.50	1	

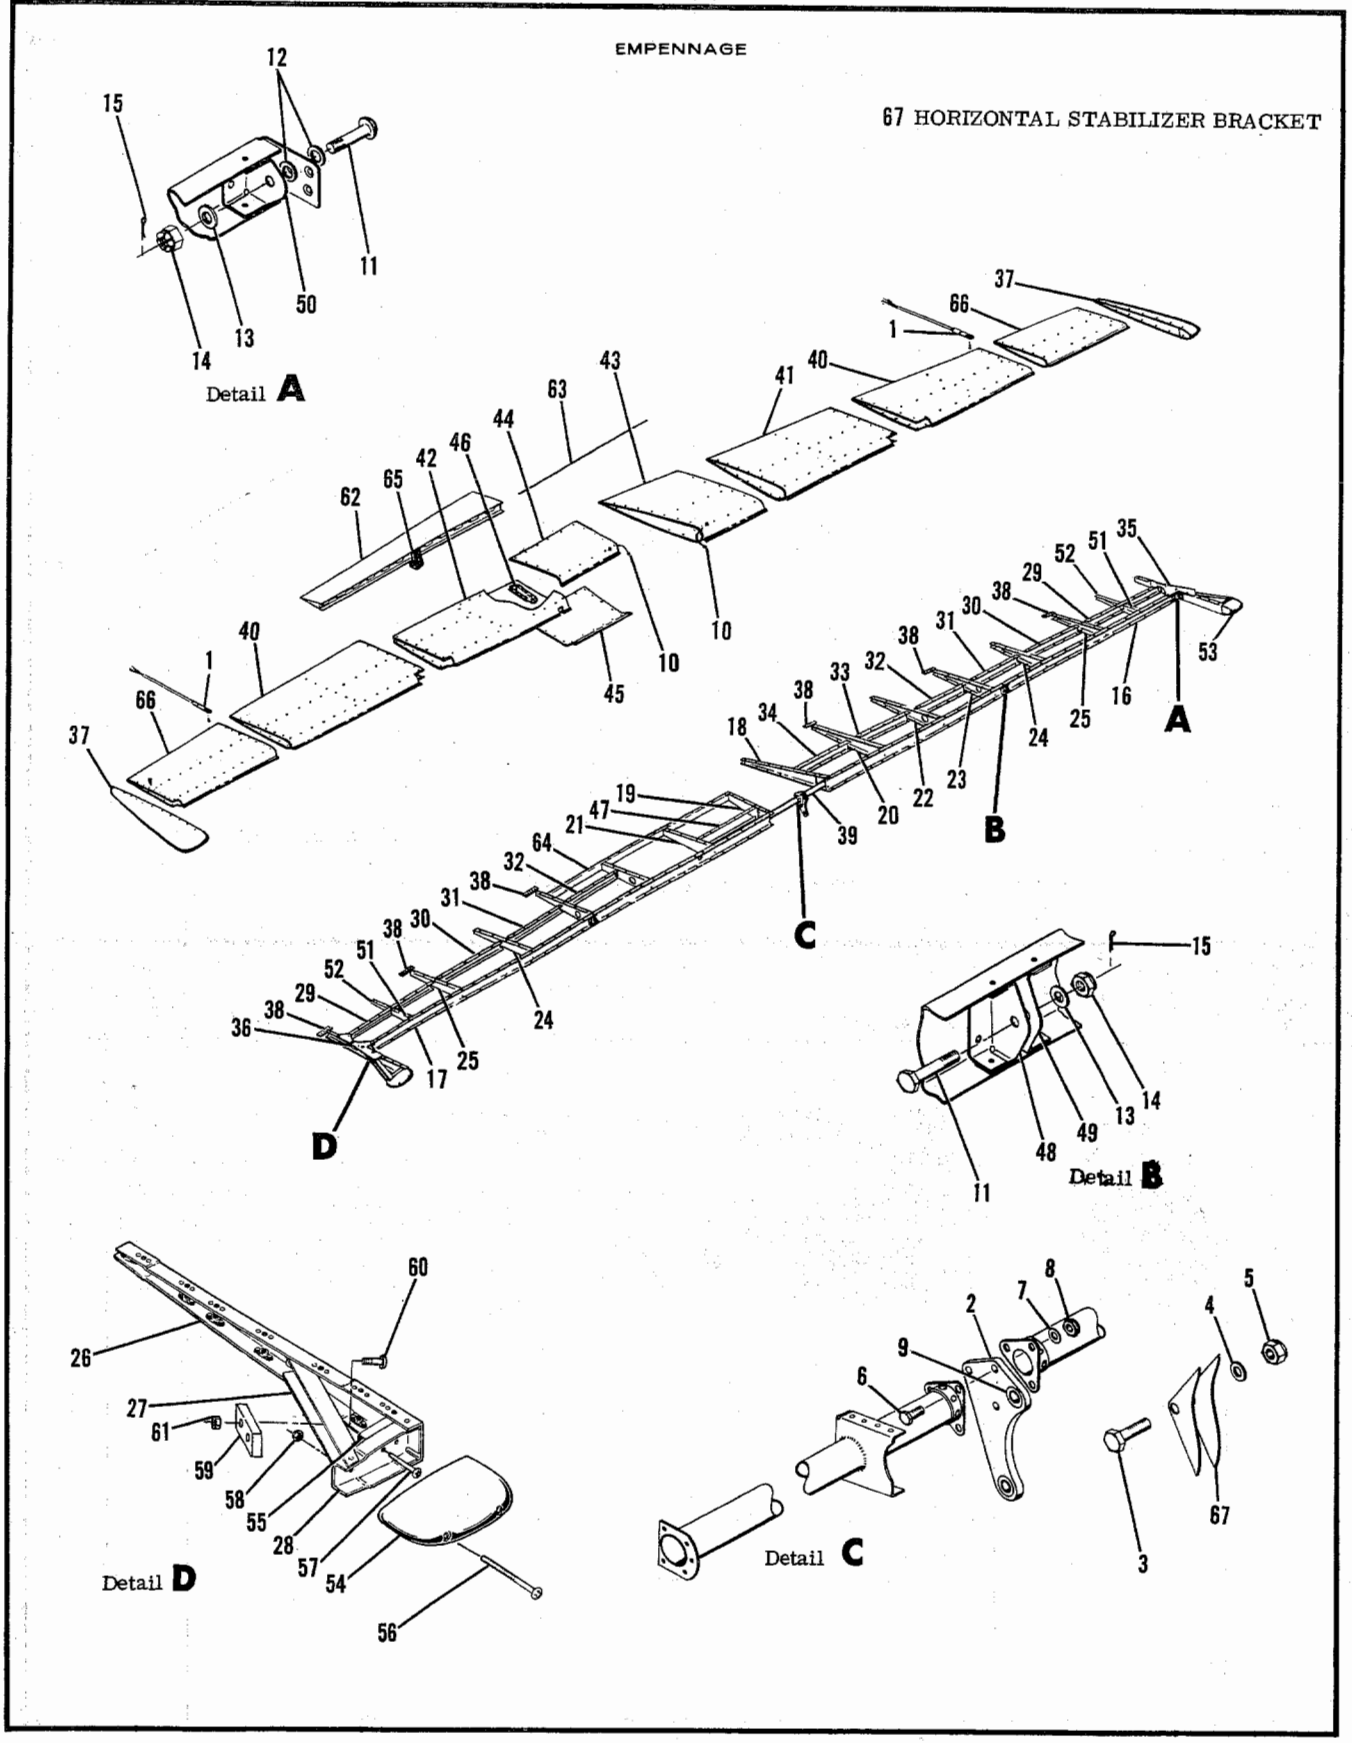

Figure 45. Elevator Structure Installation (Sheet 1)

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
45 -		ELEVATOR STRUCTURE INSTALLATION	NP	
-1	2-6	. WICK-DISCHARGE CLTD	2	
-2	0832000-33	. BELLCRANK ASSY-ELEVATOR	1	A
	0832000-303	. BELLCRANK ASSY-ELEVATOR	1	B
		ATTACHING PARTS		
-3	AN4-11A	. BOLT	1	
-4	AN960-416	. WASHER	2	
-5	MS21044N4	. NUT	1	
-6	AN3-7A	. BOLT	3	A
	AN4-7A	. BOLT	3	B
-7	AN960-10L	. WASHER	3	A
	AN960-416	. WASHER	3	B
-8	MS21044N3	. NUT	3	A
	MS21044N4	. NUT	3	B
		---*---		
-9	MS20200KP4	. . BEARING	2	
-10	0831005-1	. STRAP-BONDING	2	
		ATTACHING PARTS		
	MS35206-230	. SCREW	2	
	MS21044N6	. NUT	2	
		---*---		
	0893200-1	. ELEVATOR ASSY-LH	1	A
	0893200-3	. ELEVATOR ASSY-LH	1	B
	0893200-2	. ELEVATOR ASSY-RH	1	A
	0893200-4	. ELEVATOR ASSY-RH	1	B
		ATTACHING PARTS		
-11	AN4-11	. BOLT	2	
-12	AN960-416L	. WASHER	2	
-13	AN960-416	. WASHER	2	
-14	AN320-4	. NUT	2	
-15	MS24665-134	. PIN-COTTER	2	
		---*---		
-16	0832250-15	. . SPAR-ELEVATOR FRONT LH	1	
-17	0832250-64	. . SPAR-ELEVATOR FRONT RH WEU 0832250-72	1	E
	0832250-72	. . SPAR-ELEVATOR FRONT RH	1	F
-18	0832250-34	. . RIB-ELEVATOR INBD LH	1	
-19	0832130-1	. . RIB-ELEVATOR INBD RH	1	
-20	0832250-57	. . RIB ASSY-ELEVATOR LH	1	
-21	0832131-1	. . RIB ASSY-ELEVATOR RH	1	
-22	0832250-36	. . RIB-ELEVATOR LH	2	
	0832132-1	. . RIB-ELEVATOR RH	1	
-23	0832250-37	. . RIB-ELEVATOR LH	1	
	0832133-1	. . RIB-ELEVATOR RH	1	
-24	0832250-38	. . RIB-ELEVATOR	2	
-25	0832250-39	. . RIB-ELEVATOR	2	
-26	0832250-4	. . RIB ASSY-ELEVATOR-TIP	2	
-27	0832250-32	. . RIB-ELEVATOR TIP CANTED	2	
-28	0832250-33	. . RIB-ELEVATOR TIP WEIGHT ATTACHMENT	2	
-29	0832000-20	. . SPAR-ELEVATOR AUX	2	
-30	0832000-21	. . SPAR-ELEVATOR AUX	2	
-31	0832000-22	. . SPAR-ELEVATOR AUX	2	
-32	0832000-23	. . SPAR-ELEVATOR AUX	2	
-33	0832000-24	. . SPAR-ELEVATOR AUX LH	1	
-34	0832000-25	. . SPAR-ELEVATOR AUX LH	1	
-35	0832000-61	. . GUSSET-ELEVATOR UPR LH & LWR RH	1	
-36	0832000-62	. . GUSSET-ELEVATOR UPR RH & LWR LH	1	
-37	0832120-1	. . TIP ASSY-ELEVATOR	2	
		ATTACHING PARTS		
	MS27039-0806	. . SCREW	12	
	MS27039-0805	. . SCREW	2	
		---*---		
-38	0832000-29	. . BLOCK-ELEVATOR TRAILING EDGE REINFORCEMENT	3	
-39	0832000-30	. . TUBE ASSY-TORQUE	1	A
	0832000-302	. . TUBE ASSY-TORQUE	1	B
-40	0832000-14	. . SKIN-ELEVATOR CTR LH	1	
	0832126-7	. . SKIN-ELEVATOR CTR RH	1	
-41	0832000-15	. . SKIN-ELEVATOR CTR LH	1	
-42	0832126-5	. . SKIN-ELEVATOR CTR UPR RH WEU 0832126-19	1	E
	0832126-19	. . SKIN-ELEVATOR CTR UPR RH	1	F
	0832126-13	. . SKIN-ELEVATOR CTR LWR RH WEU 0832126-20	1	E
	0832126-20	. . SKIN-ELEVATOR CTR LWR RH	1	F
-43	0832000-17	. . SKIN-ELEVATOR INBD LH	1	
-44	0832126-3	. . SKIN-ELEVATOR INBD UPR RH	1	
-45	0832126-4	. . SKIN-ELEVATOR INBD LWR LH	1	
-46	0831000-43	. . COVER-PUSH PULLTUBE	1	
-47	0832106-1	. . STIFFENER-RH SKIN	1	
-48	0832000-54	. . BRACKET-CTR ELEVATOR HINGE INBD	1	
-49	0832000-55	. . BRACKET-CTR ELEVATOR HINGE OUTBD	1	
-50	0832000-63	. . BRACKET-OUTBD ELEVATOR HINGE	1	
-51	0832144-1	. . RIB	1	
-52	0832144-2	. . RIB	1	
-53	0832125-1	. WEIGHT-ELEVATOR BALANCE LH	1	
-54	0832125-2	. WEIGHT-ELEVATOR BALANCE RH	1	
-55	0832125-3	. WEIGHT-ELEVATOR BALANCE RH WEU 0832125-6	1	C
	0832125-6	. WEIGHT-ELEVATOR BALANCE RH	1	D
		ATTACHING PARTS		
-56	MS35207-275	. SCREW-RH WEIGHT	1	
	MS35207-275	. SCREW-LH WEIGHT	2	
-57	MS35207-267	. SCREW-RH WEIGHT	1	
	NAS603-56	. SCREW-RH WEIGHT	1	
-58	MS21044N3	. NUT-RH WEIGHT	3	
	MS21044N3	. NUT-LH WEIGHT	2	
	AN960-10	. WASHER-RH WEIGHT	2	
		---*---		

CONTINUED

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
45 -59	0842008-7	. WEIGHT-RH	2	
		ATTACHING PARTS		
-60	MS35207-264	. SCREW	2	
-61	MS21044N3	. NUT	2	
		---*---		
-62	0832126-12	. TRIM TAB ASSY-ELEVATOR	1	
		ATTACHING PARTS		
-63	MS20253-2-4210	. PIN-HINGE	1	
		---*---		
-64	0832137-1	. . SPAR-TRIM TAB	1	
-65	0831000-50	. . HORN ASSY-ELEVATOR	1	
		ATTACHING PARTS		
	0832152-1	. . SPACER-TAB BAR	2	
	MS35206-251	. . SCREW	2	
	AN515-8R22	. . SCREW	2	
	AN960-8L	. . WASHER	4	
	MS21044N08	. . NUT	4	
	AN257Y3-4250	. . HINGE-TAB HALF	1	
		---*---		
	PN3A	. . . BEARING	TOR	1
-66	0832000-13	. . SKIN-ELEVATOR OUTBD	2	
-67	SEE FIG 43	. BRACKET-HORIZONTAL STABILIZER	REF	
		A---340-0001 THRU 340-0214 B---340-0215 & ON C---340-0001 TO 340A0001 D---340A0001 & ON E---340-0001 THRU 340-0550 F---340-0551 & ON		

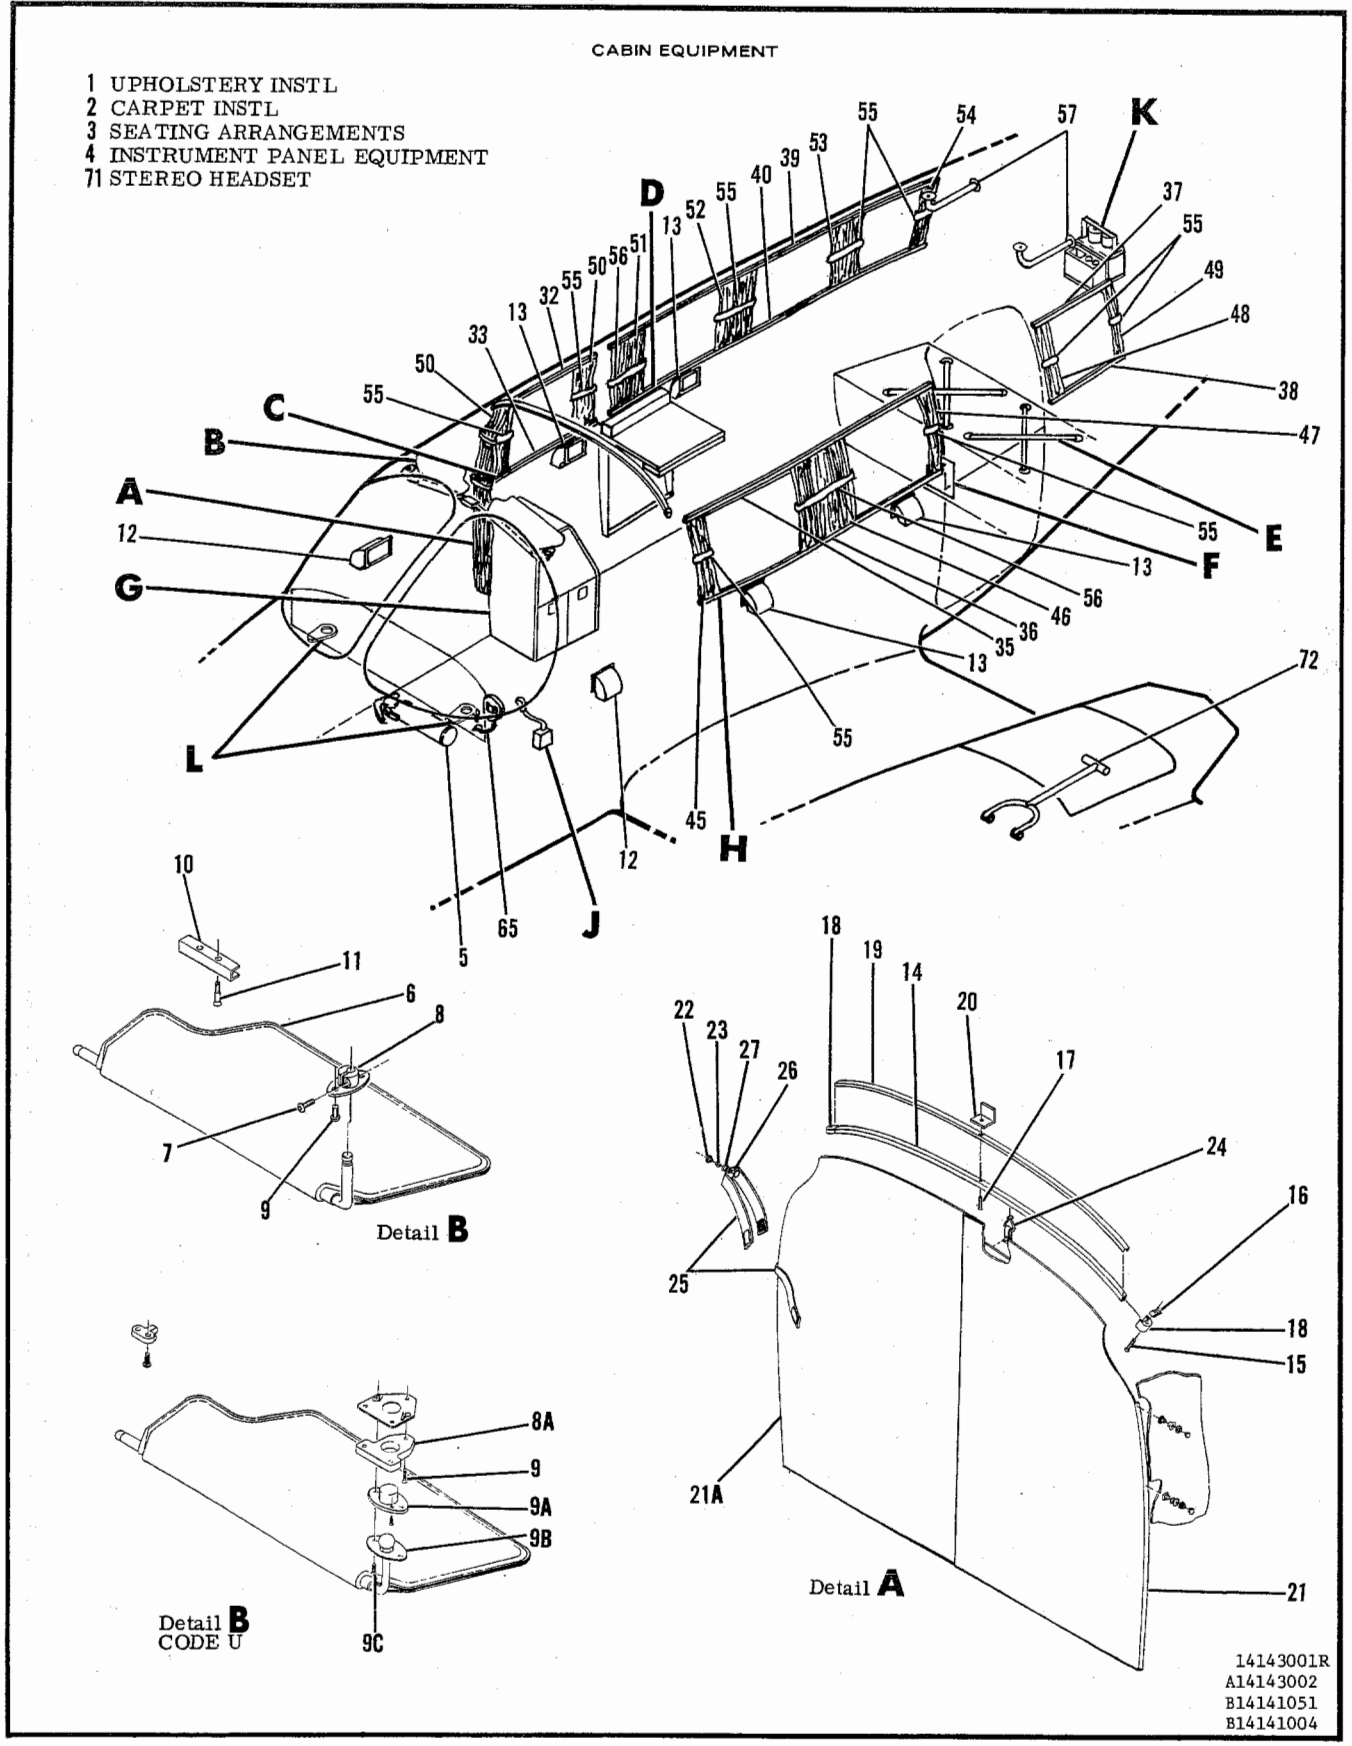

Figure 46. Cabin Equipment and Furnishings (Sheet 1 of 3)

CABIN EQUIPMENT

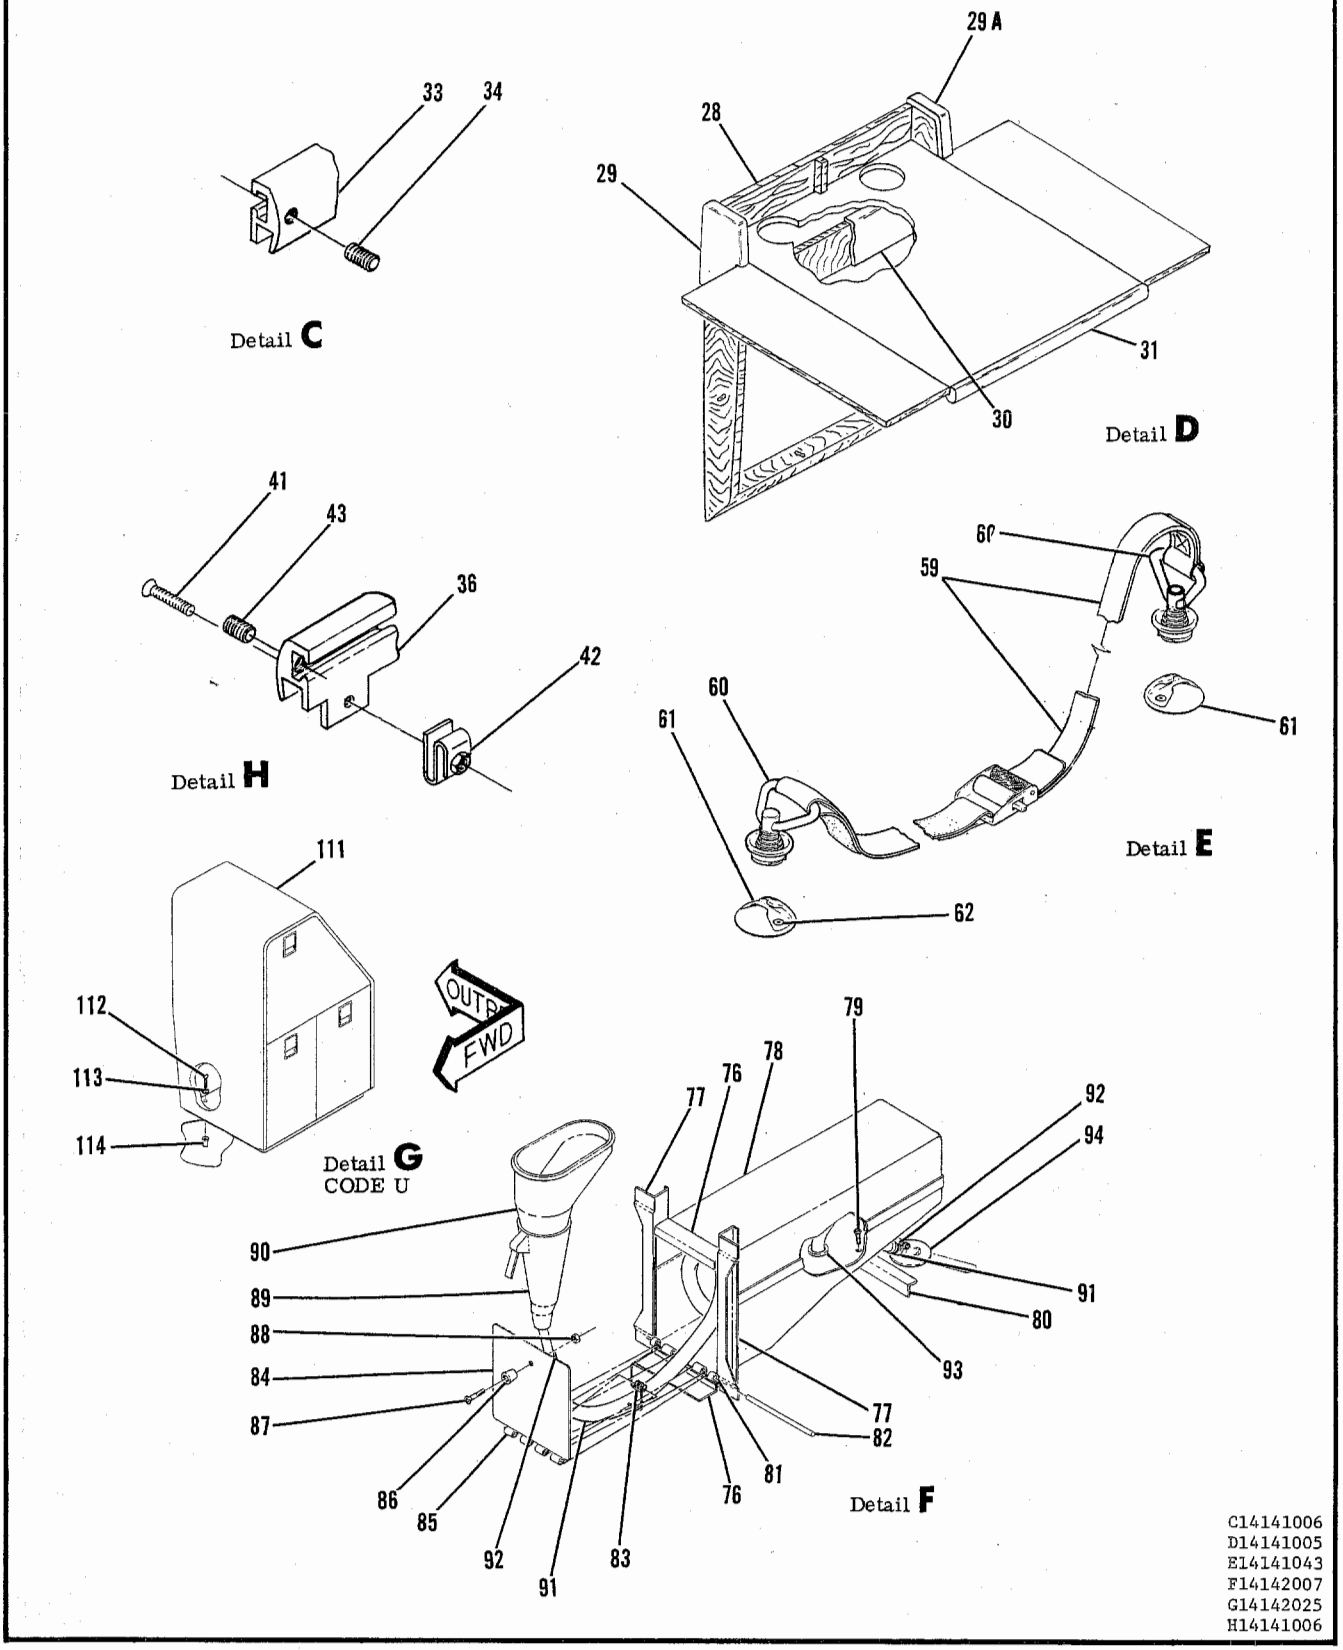

C14141006
D14141005
E14141043
F14142007
G14142025
H14141006

Figure 46. Cabin Equipment and Furnishings (Sheet 2)

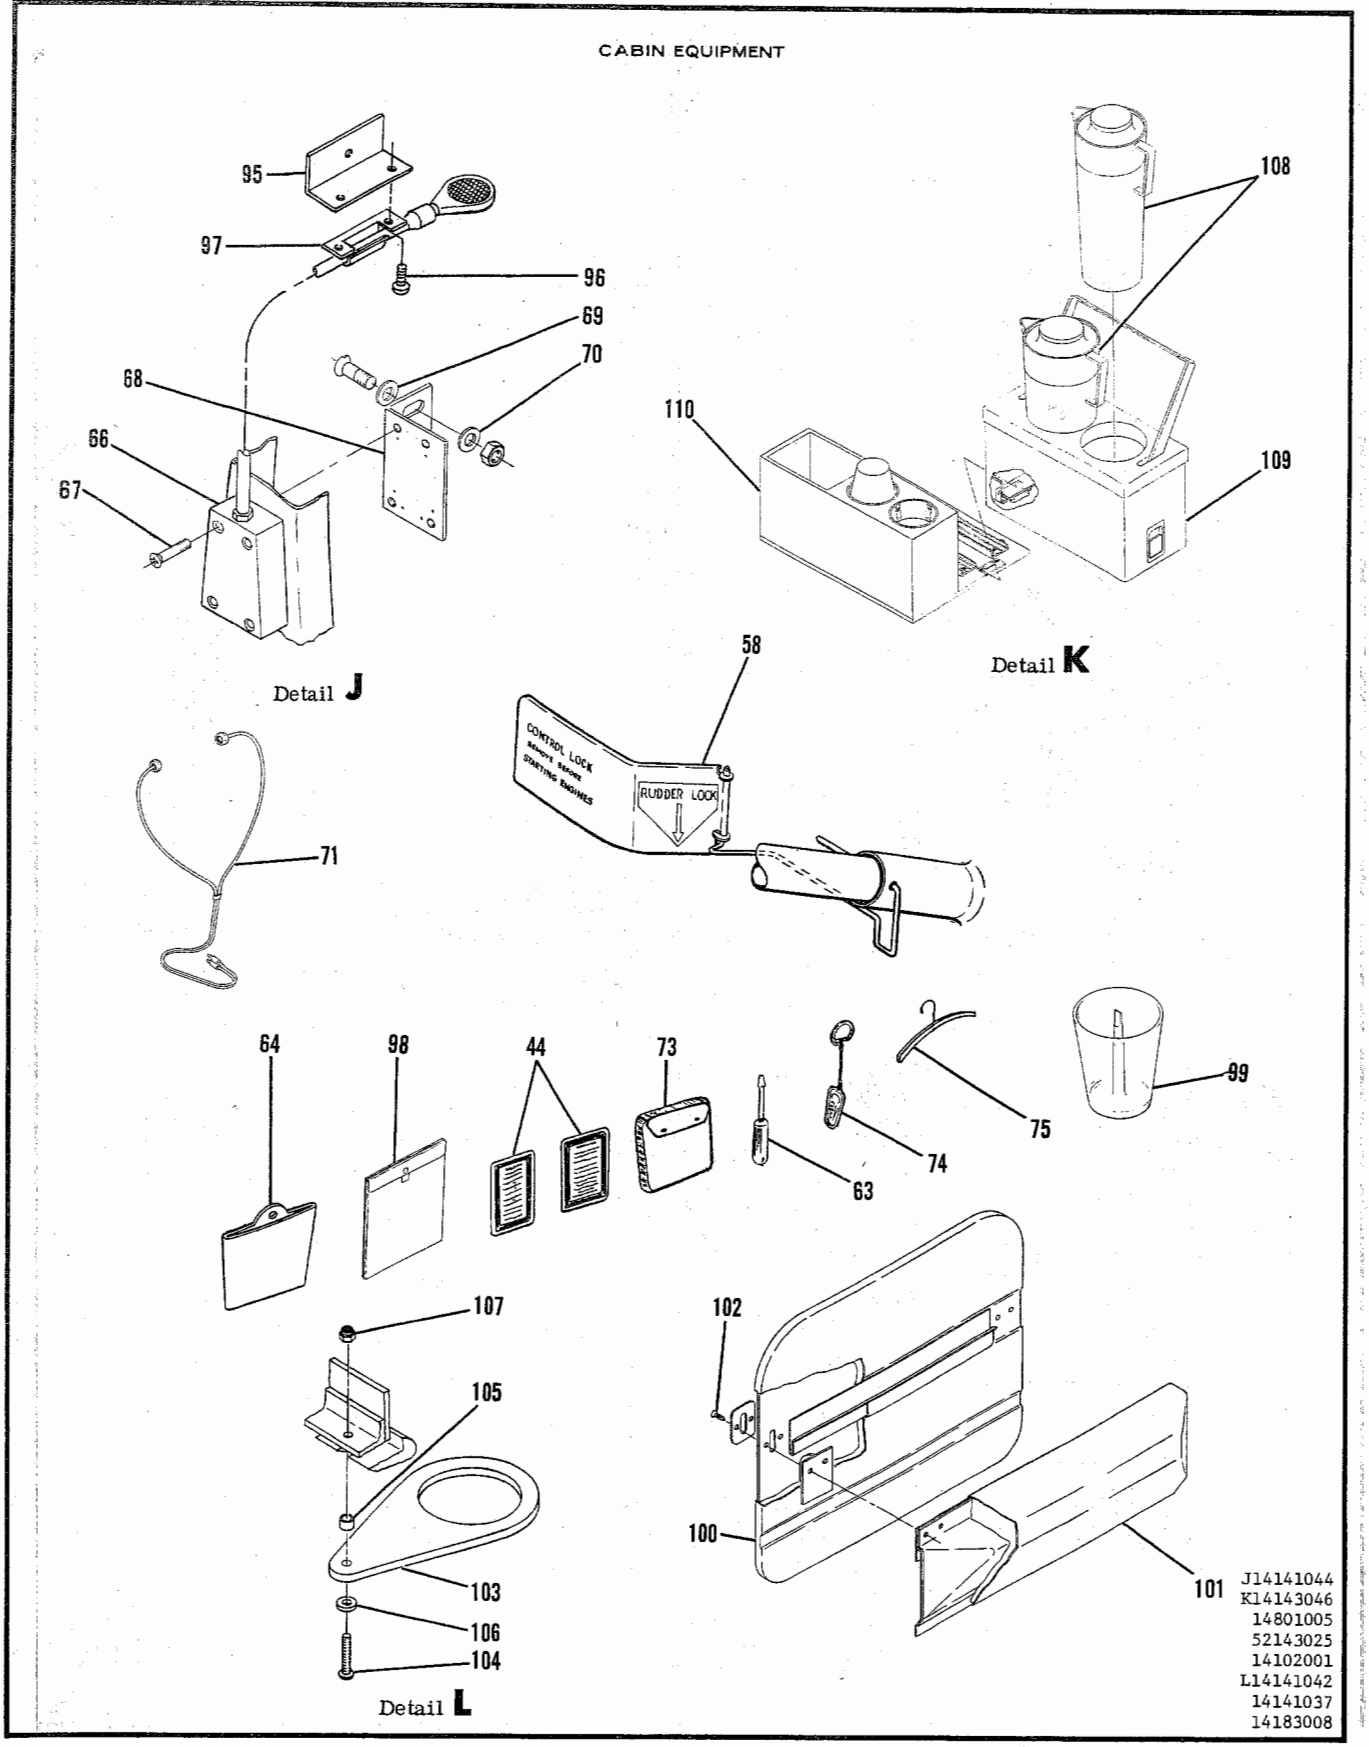

Figure 46. Cabin Equipment and Furnishings (Sheet 3)

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
46 -		CABIN EQUIPMENT AND FURNISHINGS	NP	
-1	SEE FIG 47	. UPHOLSTERY INSTL	1	
-2	SEE FIG 49	. CARPET INSTL	1	
-3	SEE FIG 50	. SEATING ARRANGEMENTS INSTL	1	
-4	SEE FIG 61	. INSTRUMENT PANEL EQUIPMENT INSTL	1	
-5	23-4P	. EXTINGUISHER-FIRE WITH MOUNTING BRACKETS FFC	1	AB
	CP2 3-4B	. EXTINGUISHER-FIRE WITH MOUNTING BRACKETS GFET	1	AC
	CP2-3-4	. EXTINGUISHER-FIRE WITH MOUNTING BRACKETS GFET ALT FOR 23-4P	1	AB
	2 1-2DCK	. EXTINGUISHER-FIRE WITH MOUNTING BRACKETS KWE ALT FOR 23-4P & CP2 3-4B	1	
	2 3-4DCK6	. EXTINGUISHER-FIRE WITH MOUNTING BRACKETS KWE ALT FOR 23-4P & CP2 3-4B	1	
	23-4P	. EXTINGUISHER-FIRE WITH MOUNTING BRACKETS FFC ALT FOR CP2 3-4B	1	AC
		ATTACHING PARTS		
	MS35207-264	. SCREW	4	AB
	MS35207-0807	. SCREW	4	AC
	MS21045L3	. NUT	4	AB
		---*---		
	5114243-1	. COVER ASSY-FIRE EXTINGUISHER MOUNT COPILOT SEAT	1	AC
-6	5311522-1	. SUNVISOR ASSY-LH & RH	2	A
	5311522-12	. SUNVISOR ASSY-LH & RH	2	N
	5311522-16	. SUNVISOR ASSY-LH & RH	2	T
	5311522-17	. SUNVISOR ASSY-LH & RH	2	U
		ATTACHING PARTS		
-7	MS27039-1-08	. SCREW	1	
		---*---		
-8	5311521-2	. MOUNT-LH & RH	2	W
-8A	5319005-1	. PLATE ASSY-LH & RH	2	U
	5319005-3	. SPACER-LH & RH	2	U
		ATTACHING PARTS		
-9	MS24693S50	. SCREW	2	W
	MS24693S50	. SCREW	3	U
		---*---		
	5311521-5	. SPACER	AR	W
-9A	0819005-6	. PLATE ASSY-BOTTOM SOCKET	1	U
-9B	0819005-1	. PLATE-TOP SOCKET	1	U
-9C	MS24693S258	. SCREW	2	U
	S1022A4-6	. SCREW	1	U
-10	5311521-4	. BLOCK-STOP FSO 5311549-1	1	A
	5311549-1	. BLOCK-STOP	2	K
	0819006-1	. BLOCK-STOP	2	U
		ATTACHING PARTS		
-11	MS24693S55	. SCREW	2	A
	MS27039-0809	. SCREW	4	V
		---*---		
	5519028-5	. SHIM STOP BLOCK	AR	U
-12	0811419-1	. ASH RECEIVER ASSY-PILOT & COPILOT	2	
-13	0811419-4	. ASH RECEIVER ASSY-PASSENGER	4	C
	0811419-1	. ASH RECEIVER ASSY-PASSENGER	4	D
		ATTACHING PARTS		
	S1021A6-8C	. SCREW	2	C
	NAS395-5-3	. NUT	2	
		---*---		
	0811419-5	. . ASH RECEIVER	1	
	0811419-6	. . RETAINER	1	
-14	5311543-8	. TRACK-FLIGHT DECK CURTAIN	1	
		ATTACHING PARTS		
-15	MS35190-241	. SCREW	2	
	S1021A6-6C	. SCREW	2	D
-16	294667	. NUT-CLIP ON MKL	2	
-17	S1022A6-8	. SCREW	1	
		---*---		
-18	0811388-3	. END FITTING-TRACK	2	
-19	0811575-7	. RETAINER-TRACK	1	
-20	5311543-9	. CLIP-TRACK	1	
-21	5311543-2	. CURTAIN ASSY-FLIGHT DECK LH	1	
-21A	5311543-10	. CURTAIN ASSY-FLIGHT DECK RH	1	
		ATTACHING PARTS		
-22	MS27981-1N	. BUTTON	4	
-23	MS27981-3N	. SOCKET GALI	4	
-24	G2	. GUIDE GALI	16	
		---*---		
-25	5311543-3	. . STRAP ASSY	2	
-26	MS27981-5N	. . EYELET	4	
-27	MS27981-4N	. . STUD	4	
	5311545-2	. TABLE ASSY-EXECUTIVE LH OR RH SIDE	1	C
	5311545-8	. TABLE ASSY-EXECUTIVE LH OR RH SIDE	1	D
	9910238-1	. TABLE ASSY-EXECUTIVE LH	1	Y
		ATTACHING PARTS		
	MS27039-0818	. SCREW-UPR	2	
	MS27039-0809	. SCREW-LWR	2	
		---*---		
-28	8710-1	. . TABLE PRPA	1	C
	8710-2	. . TABLE PRPA	1	D
	HW0004-1	. . TABLE ALT FOR 8710-2 HICW	1	D
-29	5311545-3	. . PAD FSO 5311545-7	1	A
	5311545-7	. . PAD	1	B
	5311545-9	. . PAD FWD FSO 5311545-12	1	P
	5311545-12	. . PAD FWD	1	Q
-29A	5311545-3	. . PAD FSO 5311545-7	1	A
	5311545-7	. . PAD	1	B
	5311545-10	. . PAD AFT FSO 5311545-13	1	P
	5311545-13	. . PAD AFT	1	Q

CONTINUED

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
46 -30	5311545-5		. . PAD	1	
-31	5311545-4		. . PAD	1	
-32	5311536-7		. TRACK-UPR EMERGENCY WINDOW CURTAIN	1	C
	5311536-8		. TRACK-UPR EMERGENCY WINDOW CURTAIN	1	E
-33	5311536-6		. TRACK-LWR EMERGENCY WINDOW CURTAIN	1	C
	5311536-9		. TRACK-LWR EMERGENCY WINDOW CURTAIN	1	F
-34	AN565A6H6		. SCREW-SET	2	
			---*---		
-35	5311531-8		. TRACK-UPR LH FWD & CTR	1	
-36	5311531-3		. TRACK-LWR LH FWD & CTR	1	C
	5311531-12		. TRACK-LWR LH FWD & CTR	1	D
-37	5311531-4		. TRACK-UPR LH AFT	1	
-38	5311531-5		. TRACK-LWR LH AFT	1	C
	5311531-13		. TRACK-LWR LH AFT	1	D
-39	5311531-10		. TRACK-UPR RH	1	C
	5311531-11		. TRACK-UPR RH	1	D
-40	5311531-7		. TRACK-LWR RH	1	
			ATTACHING PARTS		
-41	MS24693S28		. SCREW	AR	
	NAS43DD1-8		. SPACER USED ON 5311531-10 & - 11	4	
-42	294667		. NUT-CLIP-ON	MKL AR	
-43	AN565A6H8		. SCREW-SET	AR	
			---*---		
-44	SEE FIG 46A		. CHECKLIST ASSEMBLIES	REF	
-45	5311530-3	@	. CURTAIN ASSY-LH FWD	1	
-46	5311530-7	@	. CURTAIN ASSY-LH FWD INTERMEDIATE	1	
-47	5311530-3	@	. CURTAIN ASSY-LH CTR	1	
-48	5311530-6	@	. CURTAIN ASSY-CABIN DOOR	1	
-49	5311530-4	@	. CURTAIN ASSY-LH AFT	1	
-50	5311530-5	@	. CURTAIN ASSY-RH FWD EMERGENCY WINDOW	1	
-51	5311530-3	@	. CURTAIN ASSY-RH FWD INTERMEDIATE	1	
-52	5311530-7	@	. CURTAIN ASSY-RH CTR	1	
-53	5311530-3	@	. CURTAIN ASSY-RH CTR	1	
-54	5311530-4	@	. CURTAIN ASSY-RH AFT	1	
-55	5119501-29	@	. STRAP ASSY-CURTAIN TIE BACK	9	
-56	5119501-30		. STRAP ASSY-CURTAIN TIE BACK	2	
			ATTACHING PARTS		
	MS27981-4N		. STUD	AR	
	MS27981-5N		. EYELET	AR	
			---*---		
-57	5311535-3		. COAT HANGER ASSY-LH	1	T
	5319149-3		. COAT HANGER ASSY-LH	1	U
	5311535-2		. COAT HANGER ASSY-RH	1	T
	5319149-2		. COAT HANGER ASSY-RH	1	U
	5319149-6		. BRACKET ASSY-LH & RH	2	U
			ATTACHING PARTS		
	MS27039-0809		. SCREW	2	
	S1021Z8-6C		. SCREW	2	
			---*---		
-58	5314111-1		. LOCK ASSY-CONTROL	1	
	5215026-3		. . PLACARD-RUDDER LOCK	1	
	5311539-3		. TIE DOWN ASSY-BAGGAGE	2	
	5311539-4		. . STRAP ASSY	1	
-59	5311539-5		. . STRAP ASSY	1	
	5311539-6		. . . STRAP	1	
	5311539-7		. . . STRAP		
	FDA1480-2		. . . ADJUSTER-WEB	DAPI 1	
-60	32100		. . . ANCHOR-TIE DOWN	AEPT 2	
-61	20050-52		. . PLATE-ANCHOR	BGDA 8	
			ATTACHING PARTS		
-62	MS24694C53		. . SCREW	2	
			---*---		
-63	0800007-3		. SCREWDRIVER FSO CM3	1	R
	CM3		. SCREWDRIVER	AIRT 1	S
-64	5119309-1		. LITTER BAG ASSY	AR	
-65	C596502-0202		. MICROPHONE ASSY-PILOT	1	C
	62800-00		. MICROPHONE ASSY-PILOT	TCD 1	D
	C596501-0103		. MOUNT ASSY-MICROPHONE	1	C
	62802-00		. BRACKET	TCD 1	D
			ATTACHING PARTS		
	MS35207-225		. SCREW	2	
			---*---		
	S1102-1		. JACK-MICROPHONE	1	
-66	C596503-0101		. MICROPHONE ASSY-PILOTS BOOM	1	
			ATTACHING PARTS		
-67	AN507PB632-16		. SCREW	4	
			---*---		
-68	5300918-2		. BRACKET-MICROPHONE MOUNT	1	
-69	6526		. WASHER	GCE 2	
-70	6514		. WASHER	GCE 2	
	S13B		. JACK-MICROPHONE	SWIN 1	
-71	SEE FIG 142		. HEADSET-STEREO	1	
-72	C173001-0101		. TOW BAR	1	H
	C173001-0103		. TOW BAR	1	J
-73	0800030-19		. CASE-OXYGEN MASK STOWAGE	AR	
-74	SPA66253-07		. CHAIN-KEY	ASCT 1	
-75	SPA66232-07		. HANGER-COAT	ASCT 2	
-76	5311541-6		. ANGLE-RELIEF TUBE SUPPORT UPR & LWR	2	
-77	5311541-5		. SUPPORT-RELIEF TUBE LH & RH	2	
-78	5311541-10		. HOUSING ASSY-RELIEF TUBE WEU 5311541-16	1	Z
	5311541-16		. HOUSING ASSY-RELIEF TUBE	1	AA
			ATTACHING PARTS		
-79	MS35206-230		. SCREW	2	
			---*---		

CONTINUED

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
46 -80	5311541-7		. SUPPORT ASSY-RELIEF TUBE AFT	1	
-81	5311541-4		. HINGE-HALF	1	
-82	MS20253P2-410		. PIN-HINGE	1	
-83	0812808-1		. SPRING	1	
	5311541-2		. DOOR ASSY-RELIEF TUBE	1	
-84	5311541-3		. . DOOR	1	
-85	5311541-14		. . HINGE-HALF	1	
	4.10				
-86	5017519-2		. . KNOB	1	
			ATTACHING PARTS		
-87	AN515-4S10		. . SCREW	1	
-88	MS20314-4S		. . NUT	1	
			---*---		
-89	WM203		. TUBE ASSY-RELIEF VDIA	1	
-90	5619193-1		. ADAPTER-RELIEF TUBE	1	
-91	5311541-9		. HOSE	1	
-92	AN737TW26		. CLAMP	2	
-93	MS35489-46		. GROMMET	1	
-94	5119541-2		. TUBE ASSY	1	
-95	5300918-4		. CLIP-MICROPHONE SUPPORT	1	
			ATTACHING PARTS		
-96	S1022Z4-6C		. SCREW	2	
			---*---		
-97	5272424-1		. CLIP-MICROPHONE HANGER	1	
	5300918-4		. CLIP-MICROPHONE SUPPORT	1	
-98	0813674-1		. CASE-STEREO HEADSET	AR	
-99	F391MS		. CUP-FUEL SAMPLER FSO CM3 MFDI	1	E
	CM3		. SCREWDRIVER AIRT	1	S
-100	5314511-9	@	. PANEL ASSY-ARMREST CABIN DOOR	1	
	5314511-11	@@	. . COVER ASSY-PANEL	1	
-101	5314511-2	@	. ARMREST ASSY-CABIN DOOR	1	
			ATTACHING PARTS		
-102	S1022Z4-12C		. SCREW	4	
			---*---		
	5314511-4	@	. . COVER ASSY-ARMREST	1	
-103	0812876-3		. CUP HOLDER-PILOT & COPILOT	2	L
			ATTACHING PARTS		
-104	MS27039-1-11		. SCREW	1	L
-105	NAS43HT3-16A		. SPACER	1	L
-106	3502-18-00		. WASHER WCLK	1	L
-107	MS21083N3		. NUT	1	L
			---*---		
-108	P4460W		. BEVERAGE BUTLER	1	
-109	9910176-1		. THERMOS CARRIER ASSY	1	
	8636-20		. . CARRIER 1 TRACK PRPA	1	
	HW0015-1		. . CARRIER 2 TRACK HICW	1	
-110	9910175-1		. DISPENSER & BASE ASSY	1	
			ATTACHING PARTS		
	MS24693S280		. SCREW	4	
			---*---		
-111	9910227-1		. STORAGE CABINET USED WITH CLUB SEATING	1	U
			ATTACHING PARTS		
-112	MS27039-0816		. SCREW	4	U
-113	S1450-4-10-032		. WASHER	4	U
-114	NAS1329C08-120		. NUT-BLIND RIVET	4	U
	AN970-3		. WASHER USE AT INBD LOCATION	AR	U
			---*---		

@---WHEN ORDERING THIS PART THE ORDER MUST BE ACCOMPANIED BY THE COMPLETE FINISH & TRIM PLATE NUMBER AND AIRCRAFT SERIAL NUMBER

A---340-0001 THRU 340-0059
B---340-0060 THRU 340-0150
C---340-0001 THRU 340-0150
D---340-0151 TO 340A0001
E---340-0154 THRU 340-0352
F---340-0090 & ON
H---340-0001 THRU 340-0250
J---340-0251 & ON
K---340-0060 THRU 340-0500
L---340-0301 & ON
N---340-0060 THRU 340-0300
P---340-0151 THRU 340-0255
Q---340-0256 & ON
R---340-0001 THRU 340-0352
S---340-0353 & ON
T---340-0301 THRU 340-0500
U---340-0501 & ON
V---340-0060 & ON
W---340-0001 THRU 340-0500
Y---340A0001 & ON
Z---340-0001 THRU 340A0007
AA--340A0008 & ON
AB--340-0001 THRU 340A0005
AC--340A0006 & ON

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
46A-			CHECKLIST ASSEMBLIES	NP	
-1			. CHECKLIST ASSY-PILOT WITH OR WITHOUT WING LOCKER FUEL	1	A
	5319000-1		. . CARD-NORMAL PROCEDURES	1	
	5319000-2		. . CARD-NORMAL PROCEDURES	1	
	5319000-3		. . CARD-EMERGENCY PROCEDURES CARD 1	1	
	5319000-4		. . CARD-EMERGENCY PROCEDURES CARD 2	1	
	5319000-5		. . CARD-EMERGENCY PROCEDURES CARD 3	1	
	5319000-6		. . CARD-EMERGENCY PROCEDURES CARD 4	1	
	5119311-55		. . CARD-EMERGENCY PROCEDURES CARD 5	1	
	5319000-7		. . CARD-TEMP RISE DUE TO RAM EFFECT	1	
	CM3547-1		. . ENVELOPE	AR	
			. . SPLIT RING 3/4 IN DIA	1	
-2			. CHECKLIST ASSY-PILOT WITH OR WITHOUT WING LOCKER FUEL	NP	B
	5319000-8		. . CARD-NORMAL PROCEDURES	1	
	5319000-9		. . CARD-NORMAL PROCEDURES	1	
	5319000-10		. . CARD-EMERGENCY PROCEDURES FSO 5319000-23,-24 -25,-26 & 5119311-55	1	
	5319000-23		. . CARD-EMERGENCY PROCEDURES CARD 1	1	
	5319000-11		. . CARD-EMERGENCY PROCEDURES FSO 5319000-23,-24 -25,-26 & 5119311-55	1	
	5319000-24		. . CARD-EMERGENCY PROCEDURES CARD 2	1	
	5319000-12		. . CARD-EMERGENCY PROCEDURES FSO 5319000-23,-24 -25-26 & 5119311-55	1	
	5319000-25		. . CARD-EMERGENCY PROCEDURES CARD 3	1	
	5319000-13		. . CARD-EMERGENCY PROCEDURES FSO 5319000-23,-24 -25-26 & 5119311-55	1	
	5319000-26		. . CARD-EMERGENCY PROCEDURES CARD 4	1	
	5119311-55		. . CARD-EMERGENCY PROCEDURES CARD 5	1	
	5319000-7		. . CARD-TEMP RISE DUE TO RAM EFFECT	1	
	CM3547-1		. . ENVELOPE	AR	
			. . SPLIT RING 3/4 IN DIA	1	
-3			. CHECKLIST ASSY-PILOT WITH OR WITHOUT WING LOCKER FUEL	NP	C
	5319000-16		. . CARD-NORMAL PROCEDURES CARD 1	1	
	5319000-17		. . CARD-NORMAL PROCEDURES CARD 2	1	
	5319000-18		. . CARD-EMERGENCY PROCEDURES CARD 1	1	
	5319000-19		. . CARD-EMERGENCY PROCEDURES CARD 2	1	
	5319000-20		. . CARD-EMERGENCY PROCEDURES CARD 3	1	
	5319000-21		. . CARD-EMERGENCY PROCEDURES CARD 4	1	
	5319000-22		. . CARD-TEMP RISE DUE TO RAM EFFECT	1	
	CM3547-1		. . ENVELOPE	AR	
			. . SPLIT RING 3/4 IN DIA	1	
-4			. CHECKLIST ASSY-PILOT WITH OR WITHOUT WING LOCKER FUEL	NP	D
	1200-1		. . CARD-NORMAL PROCEDURES CARD 1	1	
	1200-2		. . CARD-NORMAL PROCEDURES CARD 2	1	
	1200-3		. . CARD-EMERGENCY PROCEDURES CARD 1	1	
	1200-4		. . CARD-EMERGENCY PROCEDURES CARD 2	1	
	1200-8		. . CARD-SECONDARY STATIC SYSTEM REPLACES 1200-4	1	
	1200-5		. . CARD-EMERGENCY PROCEDURES CARD 3	1	
	1200-6		. . CARD-EMERGENCY PROCEDURES CARD 4	1	
	1200-7		. . CARD-TEMP RISE DUE TO RAM EFFECT	1	
	CM3547-1		. . ENVELOPE	AR	
			. . SPLIT RING 3/4 IN DIA	1	
	5319000-51		. CHECKLIST-PILOT 400A AUTOPILOT CARD 1	1	E
	5319000-52		. CHECKLIST-PILOT 400A AUTOPILOT CARD 2	1	E
	5319000-59		. CHECKLIST-PILOT 400A AUTOPILOT	1	C
	1200-9		. CHECKLIST-PILOT 400A AUTOPILOT	1	F
	5319000-53		. CHECKLIST-PILOT AUTOPILOT & FLIGHT DIRECTOR CARD 1	1	A
	5319000-54		. CHECKLIST-PILOT AUTOPILOT & FLIGHT DIRECTOR CARD 2	1	A
	5319000-14		. CHECKLIST-PILOT INTEGRATED FLIGHT CONTROL SYSTEM CARD 1	1	B
	5319000-15		. CHECKLIST-PILOT INTEGRATED FLIGHT CONTROL SYSTEM CARD 2	1	B
	5319000-60		. CHECKLIST-PILOT INTEGRATED FLIGHT CONTROL SYSTEM CARD 1	1	C
	1200-10		. CHECKLIST-PILOT INTEGRATED FLIGHT CONTROL SYSTEM CARD 1	1	F
	5319000-61		. CHECKLIST-PILOT INTEGRATED FLIGHT CONTROL SYSTEM CARD 2	1	C
	1200-11		. CHECKLIST-PILOT INTEGRATED FLIGHT CONTROL SYSTEM CARD 2	1	F
	5319000-55		. CHECKLIST-PILOT SPERRY STAR FLIGHT	1	G
	1200-15		. CHECKLIST ASSY-PILOT SPERRY STAR FLIGHT	1	F
	0811875-15		. CHECKLIST-PILOT KN74 AREA NAVIGATION	1	G
	1200-13		. CHECKLIST-PILOT KN74 AREA NAVIGATION	1	F
	0811876-16		. CHECKLIST-PILOT KNC610 AREA NAVIGATION	1	G
	1200-14		. CHECKLIST-PILOT KNC610 AREA NAVIGATION	1	F
	5619300-36	*	. CHECKLIST-PILOT YAW DAMPER	1	H
	1200-12	*	. CHECKLIST-PILOT YAW DAMPER	1	F
	CM3547-1		. ENVELOPE	AR	

CONTINUED

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
46A-5		. CHECKLIST ASSY-PILOT WITH OR WITHOUT WING LOCKER FUEL	1	J
	1201-1	. . CARD-NORMAL PROCEDURES CARD 1	1	
	1201-2	. . CARD-NORMAL PROCEDURES CARD 2	1	
	1201-3	. . CARD-NORMAL PROCEDURES CARD 3	1	
	1201-4	. . CARD-EMERGENCY PROCEDURES CARD 1	1	
	1201-5	. . CARD-EMERGENCY PROCEDURES CARD 2	1	
	1201-6	. . CARD-EMERGENCY PROCEDURES CARD 3	1	
	1201-7	. . CARD-EMERGENCY PROCEDURES CARD 4	1	
	1201-8	. . CARD-EMERGENCY PROCEDURES CARD 5	1	
	1201-9	. . CARD-EMERGENCY PROCEDURES CARD 6	1	
	CM3547-1	. . ENVELOPE	AR	
		. . SPLIT RING 3/4 IN DIA	1	
	1000-19 #	. CHECKLIST-400B AUTOPILOT CARD 1	1	
	1000-20	. CHECKLIST-400B AUTOPILOT CARD 2	1	
	1000-21	. CHECKLIST-400B AUTOPILOT CARD 3	1	
	1000-22 ##	. CHECKLIST-INTEGRATED FLIGHT CONTROL SYSTEM CARD 1	1	
	1000-23	. CHECKLIST-INTEGRATED FLIGHT CONTROL SYSTEM CARD 2	1	
	1000-24	. CHECKLIST-INTEGRATED FLIGHT CONTROL SYSTEM CARD 3	1	
	1000-25	. CHECKLIST-INTEGRATED FLIGHT CONTROL SYSTEM CARD 4	1	
	1100-19	. CHECKLIST-YAW DAMPER	1	
	1100-20	. CHECKLIST-400 AREA NAVIGATION	1	
	1400-20	. CHECKLIST-ELECTRIC ELEVATOR TRIM	1	

* THIS CHECKLIST ALSO REQUIRED WITH 800 INTEGRATED FLIGHT CONTROL SYSTEM

ELEVATOR ELECTRIC TRIM CHECKLIST IS ALSO REQUIRED

IF 800B IFCS IS INSTALLED YAW DAMPER AND ELEVATOR ELECTRIC TRIM CHECKLIST IS ALSO REQUIRED

A---340-0001 THRU 340-0150
B---340-0151 THRU 340-0300
C---340-0301 THRU 340-0500
D---340-0501 TO 340A0001
E---340-0001 THRU 340-0300
F---340-0501 & ON
G---340-0001 THRU 340-0500
H---340-0151 THRU 340-0500
J---340A0001 THRU 340A0200

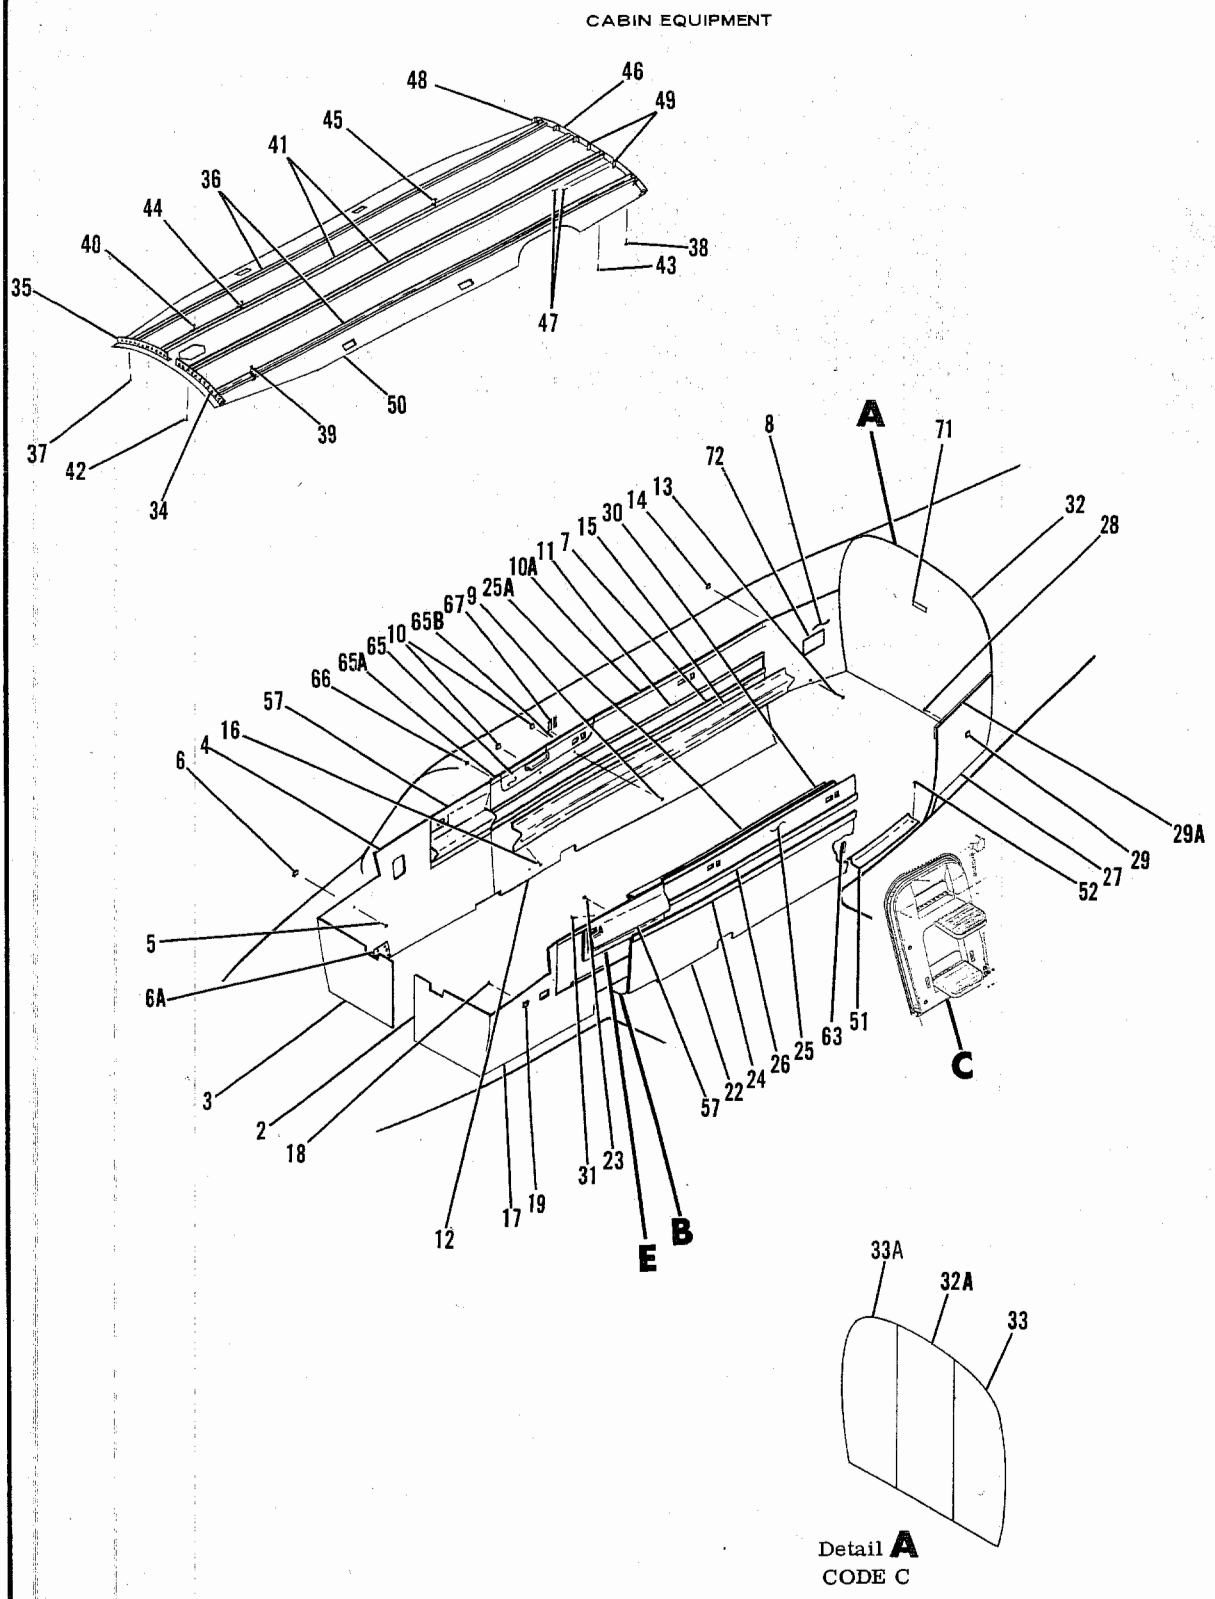

1 UPHOLSTERY TRIM INSTALLATION
64 MAA PLATE

14141019
14143034R
A14143034

Figure 47. Upholstery Installation (Sheet 1 of 2)

CABIN EQUIPMENT

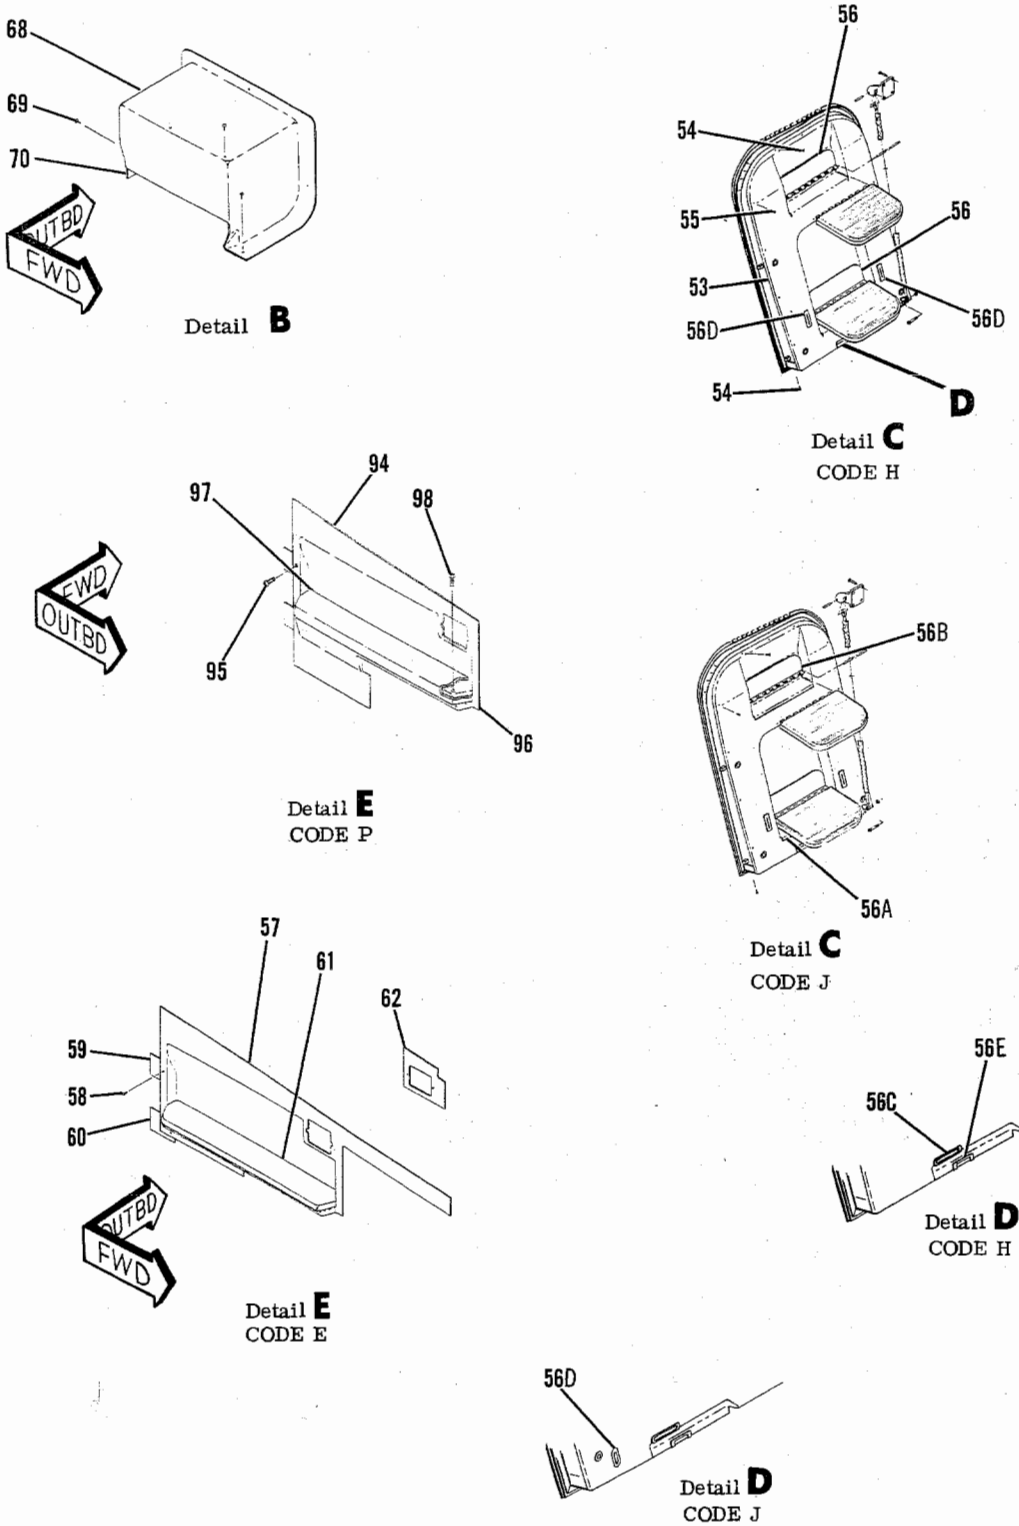

B14141035
C14141018
C14141041
D14141018
D14141041
E14141034
E14141059

Figure 47. Upholstery Installation (Sheet 2)

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
47 -			UPHOLSTERY INSTALLATION	NP	
-1	SEE FIG 48		. UPHOLSTERY TRIM INSTALLATION	1	
-2	5311518-3	@	. COVER ASSY-LH FWD PRESSURE BULKHEAD	1	
-3	5311518-2	@@	. COVER ASSY-RH FWD PRESSURE BULKHEAD	1	
-4	5311514-2	@@	. SIDE PANEL ASSY-RH	1	B
	5311514-27	@	. SIDE PANEL ASSY-RH	1	R
			ATTACHING PARTS		
-5	S1022A6-8C		. SCREW	20	
-6	5311510-11		. BRACKET	1	
			---*---		
-6A	5311514-14	@	. PANEL ASSY-ACCESS STATIC SOURCE DRAIN	1	
			ATTACHING PARTS		
	S1022A6-8C		. SCREW	AR	
			---*---		
-7	5311514-8		. RETAINER	1	
-8	5311514-10	@	. SIDE PANEL ASSY-RH UPR	1	B
	5311514-24	@@	. SIDE PANEL ASSY-RH UPR	1	K
	5311514-31	@	. SIDE PANEL ASSY-RH UPR	1	U
			ATTACHING PARTS		
-8A	5214017-14		. . HOLDER-LICENSE	1	U
-9	S1022A6-8C		. SCREW	2	
-10	5311510-11		. BRACKET	2	
			---*---		
-10A	5311514-23	@	. TRIM ASSY-RH UPR	1	B
-11	5311514-9		. SUPPORT	1	
-12	5311514-19	@	. SIDE PANEL ASSY-RH LWR	1	Q
			ATTACHING PARTS		
-13	S1022A6-8C		. SCREW	4	
-14	5311510-11		. BRACKET	1	
			---*---		
-15	5311511-16	@	. ARMREST ASSY-RH	1	
			ATTACHING PARTS		
-16	S1022A6-8C		. SCREW	8	
			---*---		
-17	5311510-12	@	. SIDE PANEL ASSY-LH FWD FSO 5311510-39 & 5311510-40	1	F
	5311510-39	@@	. SIDE PANEL ASSY-LH AFT	1	S
	5311510-40	@@	. SIDE PANEL ASSY-LH FWD	1	S
	5311510-41	@@	. SIDE PANEL ASSY-LH FWD	1	L
	5311510-43	@	. SIDE PANEL ASSY-LH FWD	1	L
			ATTACHING PARTS		
-18	S1022A6-8C		. SCREW	6	F
	MS35190-238		. SCREW	1	G
	S1067B1		. WASHER	1	G
-19	5311510-11		. BRACKET	1	
			---*---		
-20			. DELETED NOT USED		
-21			. DELETED NOT USED		
-22	5311510-2	@	. SIDE PANEL ASSY-LH CTR	1	Q
			ATTACHING PARTS		
-23	S1022A6-8C		. SCREW	13	
			---*---		
-24	5311510-5		. RETAINER	1	
-25	5311510-7	@	. SIDE PANEL ASSY-LH UPR CTR	1	B
	5311510-28	@@	. SIDE PANEL ASSY-LH UPR CTR	1	R
-25A	5311510-27	@	. TRIM ASSY-LH CTR	1	8
-26	5311510-6		. SUPPORT	1	
-27	5311510-15	@	. SIDE PANEL ASSY-LH AFT	1	H
			ATTACHING PARTS		
-28	S1022A6-8C		. SCREW	3	
-29	5311510-11		. BRACKET	1	
			---*---		
	5214017-14		. . HOLDER-LICENSE	1	Q
-29A	5311510-24	@	. TRIM ASSY-LH AFT	1	B
-30	5311511-2	@@	. ARMREST ASSY-LH	1	H
	5311511-46	@@	. ARMREST ASSY-LH	1	J
	5311511-16	@@	. ARMREST ASSY-RH	1	H
	5311511-50	@@	. ARMREST ASSY-RH STANDARD	1	J
	5311511-55	@	. ARMREST ASSY-RH USED WITH STORAGE CABINET	1	M
			ATTACHING PARTS		
-31	S1022A6-8C		. SCREW	6	
			---*---		
-32	5311517-2	@	. COVER ASSY-AFT PRESSURE BULKHEAD	1	B
-32A	5311554-4	@@	. PANEL ASSY-AFT PRESSURE BULKHEAD CTR	1	N
	5311554-16	@@	. PANEL ASSY-AFT PRESSURE BULKHEAD CTR	1	M
-33	5311554-2	@@	. PANEL ASSY-AFT PRESSURE BULKHEAD LH	1	C
-33A	5311554-3	@@	. PANEL ASSY-AFT PRESSURE BULKHEAD RH	1	C
-34	5311505-9		. RETAINER-HEADLINER FWD LH	1	A
-35	5311505-8		. RETAINER-HEADLINER FWD RH	1	A
-36	5311505-12		. CHANNEL ASSY-HEADLINER LH & RH	2	
			ATTACHING PARTS		
-37	MS27039-0807		. SCREW FWD	1	
-38	S1021A8-6		. SCREW AFT	1	
-39	0811790-1		. CLIP-HANGER-LH	8	
-40	0811790-3		. CLIP-HANGER RH	8	
			---*---		
-41	5311505-13		. CHANNEL ASSY-HEADLINER CTR	2	
			ATTACHING PARTS		
-42	MS27039-0807		. SCREW FWD	1	
-43	S1021A8-6		. SCREW AFT	1	
-44	0811790-4		. CLIP-HANGER LH	8	
	0811790-5		. CLIP-HANGER RH	8	
-45	5311505-14		. CLIP-HANGER	8	
			---*---		

CONTINUED

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
47 -46	5311505-10		. RETAINER-HEADLINER AFT	1	A
			ATTACHING PARTS		
-47	S1021A4-4		. SCREW	12	A
			---*---		
-48	5311505-15		. CLIP	2	
-49	5119007-15		. CLIP-LH	3	A
	5119007-16		. CLIP-RH	3	A
-50	5119505-6	a	. HEADLINER	1	
-51	5311533-2		. SCUFF PLATE-CABIN DOOR	1	
			ATTACHING PARTS		
-52	MS27039-1-08		. SCREW	4	
			---*---		
-53	5311527-2		. PANEL ASSY-LWR CABIN DOOR	1	H
	5311527-9		. PANEL ASSY-LWR CABIN DOOR	1	L
	5311527-15		. PANEL ASSY-LWR CABIN DOOR	1	M
			ATTACHING PARTS		
-54	MS35206-230		. SCREW	5	
-55	MS35206-245		. SCREW	8	
			---*---		
-56	5311527-5		. . PLATE-SCUFF	2	H
	5311527-12		. . PLATE-SCUFF	2	J
-56A	5311527-10		. . PLATE-SCUFF	1	J
-56B	5311527-11		. . PLATE-SCUFF	1	J
-56C	5311557-1		. . SHIELD-DOOR HANDLE	1	J
-56D	5311527-6		. PLATE-TRIM	2	
			ATTACHING PARTS		
	MS24693S50		. SCREW	2	
			---*---		
-56E	5311556-1		. PLATE-STRIKER TRIM	1	J
			ATTACHING PARTS		
	MS24694-9		. SCREW	4	J
	MS35335-31		. WASHER	2	J
	MS21083-8		. NUT	2	J
	CM3224-8		. CAP NUT	2	J
			---*---		
-56F	A646/C233		. GROMMET-OBLONG STM	1	J
-57	5311513-19	a	. PANEL-ARMREST PILOT	1	D
	5311513-25	a	. PANEL ASSY-ARMREST PILOT	1	E
	5311513-18	a	. PANEL-ARMREST COPILOT	1	D
	5311513-26	a	. PANEL ASSY-ARMREST COPILOT	1	E
			ATTACHING PARTS		
-58	S1022A6-8C		. SCREW-PILOT PANEL	2	
	S1022A6-8C		. SCREW-COPILOT PANEL	4	
			---*---		
-59	5311513-7		. TAB-PILOT & COPILOT AFT	2	
-60	5311513-8		. TAB-PILOT & COPILOT AFT	2	
	5311513-11		. TIP-COPILOT FWD	2	
-61	5311513-21	a	. ARMREST ASSY-PILOT	1	D
	5311513-22	a	. ARMREST ASSY-COPILOT	1	D
	5311513-9	a	. . COVER ASSY-PILOT ARMREST	1	
	5311513-10	a	. . COVER ASSY-COPILOT ARMREST	1	
-62	5311513-14		. BRACKET-ASH RECEIVER PILOT & COPILOT ARMREST	2	
-63	5011046-2		. RETAINER-MAA PLATE	1	
			ATTACHING PARTS		
	MS35206-230		. SCREW	2	
	NAS1329A06K 200		. NUT	2	
			---*---		
-64	SEE FIG 1		. MAA PLATE	1	
-65	5311528-3	a	. TRIM ASSY-LWR EMERGENCY WINDOW	1	B
	5311528-14	a	. TRIM ASSY-LWR EMERGENCY WINDOW	1	C
			ATTACHING PARTS		
-65A	5311528-13		. TRIM ASSY-LWR LH EMERGENCY WINDOW	1	B
-65B	5311528-10		. TRIM ASSY-LWR RH EMERGENCY WINDOW	1	B
-66	807.2		. CLIP-TRIM	4	
			---*---		
-67	5311528-7		. SUPPORT-ASH RECEIVER	2	
-68	5311532-2	a	. COVER-ELECTRICAL LH ONLY	1	
			ATTACHING PARTS		
-69	S1022A6-8C		. SCREW	4	
			---*---		
-70	5311532-3		. BRACKET-ELECTRICAL COVER LH ONLY	1	
-71	1205085-1		. PLACARD-LOCATOR BEACON SERVICING	1	
-72	5319006-4	a	. SIDE PANEL ASSY-LH FWD	1	P
-73	5319006-20	a	. SIDE PANEL ASSY-RH FWD	1	P
			ATTACHING PARTS		
	S1022A6-8C		. SCREW	8	P
			---*---		
-74	5319006-6	a	. SIDE PANEL ASSY LH CTR FWD	1	P
			ATTACHING PARTS		
	S1022A6-8C		. SCREW	5	P
			---*---		
-75	5319006-8	a	. SIDE PANEL ASSY LH CTR AFT LWR	1	P
-76	5319006-18	a	. SIDE PANEL ASSY-RH CTR LWR	1	P
			ATTACHING PARTS		
	S1022A6-8C		. SCREW	28	
			---*---		
	5311510-5		. RETAINER-LH	1	P
	5311514-8		. RETAINER-RH	1	P

CONTINUED

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
47 -77	5319006-10	@	. SIDE PANEL ASSY-LH CTR UPPER	1	P
-78	5319006-22	@	. SIDE PANEL ASSY-RH CTR UPPER	1	P
	5311510-6		. RETAINER-LH	1	P
	5311514-9		. RETAINER-RH	1	P
-79	5319006-12	@	. SIDE PANEL ASSY-LH AFT	1	P
			ATTACHING PARTS		
	S1022A6-8C		. SCREW	2	P
			---*---		
-80	5319006-14	@	. DADO STRIP-LH AFT	1	P
-81	5319006-16	@	. DADO STRIP-LH CTR UPPER	1	P
-82	5319006-24	@	. DADO STRIP-RH CTR UPPER	1	P
-83	5319006-28	@	. DADO STRIP-RH FWD CTR UPPER USE WITH	1	P
			EXECUTIVE TABLE		
-84	5319006-17	@	. TRIM STRIP-LH CTR UPPER	1	P
-85	5319006-25	@	. TRIM STRIP-RH CTR UPPER	1	P
-86	5319006-29	@	. TRIM STRIP-RH FWD CTR UPPER USE WITH	1	P
			EXECUTIVE TABLE		
-87	5319006-15	@	. TRIM STRIP LH AFT	1	P
-88	NO807		. TRIM CLIP	1	P
-89	5119056-1		. HOLDER-LICENSE RH AFT SIDE	1	P
-90	5311514-16		. COVER ASSY RH FWD	1	P
-91	5311510-42		. COVER LH FWD	1	P
			ATTACHING PARTS		
	S1022A6-8C		. SCREW	4	P
			---*---		
-92	5311514-14		. PANEL-ACCESS	1	P
-93	5311510-11		. BRACKET	5	P
-94	5311559-19	@	. PANEL ASSY-LH STD	1	P
	5311559-20	@	. PANEL ASSY-RH STD	1	P
	5311559-41	@	. PANEL ASSY-LH USE WITH OXYGEN & MIKE & PHONE JACKS	1	P
	5311559-42	@	. PANEL ASSY-RH USE WITH OXYGEN & MIKE & PHONE JACKS	1	P
	5311559-43	@	. PANEL ASSY-LH USE WITH MIKE & PHONE JACKS	1	P
	5311559-44	@	. PANEL ASSY-RH USE WITH MIKE & PHONE JACKS	1	P
			ATTACHING PARTS		
-95	S1022A6-8C		. SCREW	2	P
			---*---		
-96	5311559-5	@	. . COVER ASSY-RH STD	1	P
	5311559-8	@	. . COVER ASSY-RH STD	1	P
	5311559-25	@	. . COVER ASSY-LH USED WITH 5311559-41	1	P
	5311559-26	@	. . COVER ASSY-RH USED WITH 5311559-42	1	P
	5311559-39	@	. . COVER ASSY-LH USED WITH 5311559-43	1	P
	5311559-36	@	. . COVER ASSY-RH USED WITH 5311559-44	1	P
-97	5311559-15	@	. . ARMREST ASSY-LH STD	1	P
	5311559-16	@	. . ARMREST ASSY-RH STD	1	P
	5311559-33	@	. . ARMREST ASSY-LH USED WITH 5311559-41&5311559-43	1	P
	5311559-32	@	. . ARMREST ASSY-RH USED WITH 5311559-42&5311559-44	1	P
			ATTACHING PARTS		
-98	S1021Z4-3		. . SCREW	6	P
			---*---		
	5311559-18		. . . COVER-LH & RH STD	1	P
	5311559-29		. . . COVER-LH & RH USED ON 5311559-41 5311559-42	1	P
			5311559-43 5311559-44		

@---WHEN ORDERING THIS PART THE ORDER MUST BE ACCOMPANIED BY THE COMPLETE FINISH AND TRIM PLATE NUMBER AND AIRCRAFT SEPIAL NUMBER

A---340-0001 THRU 340-0034
B---340-0001 THRU 340-0150
C---340-0151 & ON
D---340-0001 THRU 340-0089
E---340-0090 TO 340A0001
F---340-0001 THRU 340-0166
G---340-0167 & ON
H---340-0001 THRU 340-0300
J---340-0301 & ON
K---340-0151 THRU 340-0300
L---340-0301 THRU 340-0500
M---340-0501 & ON
N---340-0151 THRU 340-0500
P---340A0001 & ON
Q---340-C001 TO 340A0001
R---340-0151 TO 340A0001
S---340-0167 TO 340A0001
T---340-0501 TO 340A0001
U---340-0301 TO 340A0001

CABIN EQUIPMENT

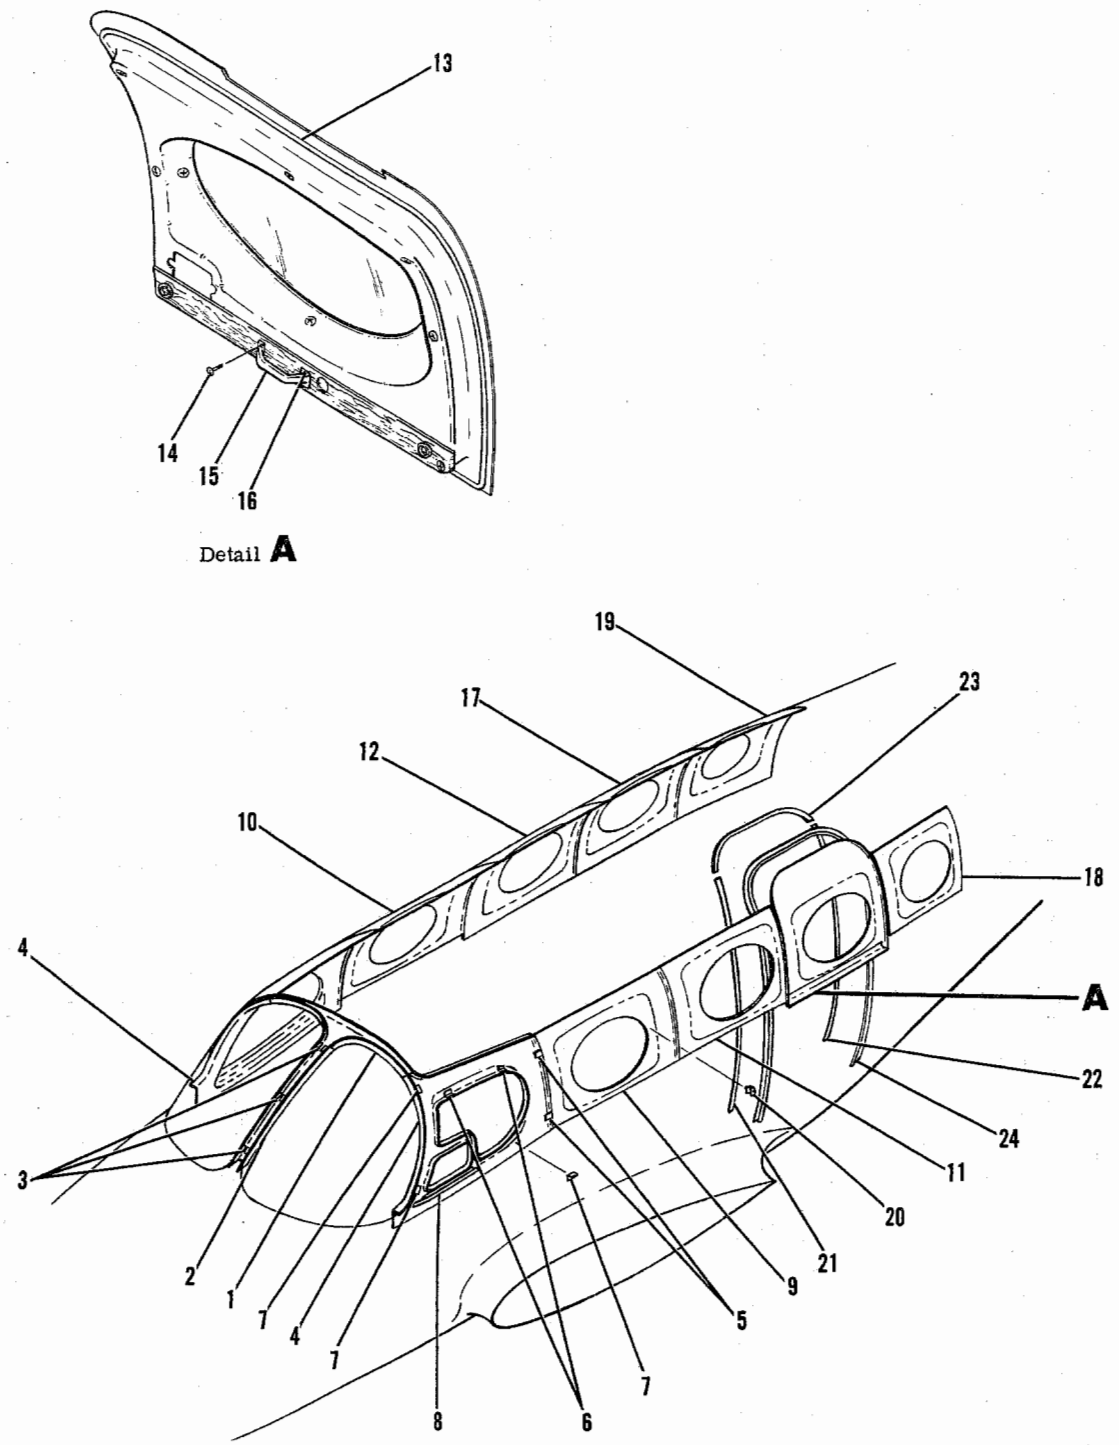

Figure 48. Upholstery Trim Installation

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
48 -			UPHOLSTERY TRIM INSTALLATION	NP	
-1	5311516-3	@	. TRIM-WINDSHIELD UPR	1	G
-2	5311516-2	@	. TRIM-WINDSHIELD CTR	1	
			ATTACHING PARTS		
	S1021Z4-4C		. SCREW	24	E
	CM3657-1		. SCREW GRAY	24	F
			---*---		
	S202VW		. CHANNEL BKI	AR	A
	CM3609		. CHANNEL BKI ALUMN	AR	B
-3	5311150-24		. CLIP	6	
-4	5311516-5	@	. TRIM-PILOT WINDOW	1	C
	5311516-15	@@	. TRIM-PILOT WINDOW	1	H
	5311516-18	@@	. TRIM-PILOT WINDOW	1	J
	5311516-13	@@	. TRIM-PILOT WINDOW USED WITH INERTIA SHOULDER STRAP	1	H
	5311516-19	@@	. TRIM-PILOT WINDOW USED WITH INERTIA SHOULDER STRAP	1	J
	5311516-4	@@	. TRIM-COPILOT WINDOW	1	G
	5311516-17	@@	. TRIM-COPILOT WINDOW	1	J
	5311516-14	@@	. TRIM-COPILOT WINDOW USED WITH INERTIA SHOULDER STRAP	1	H
	5311516-20	@	. TRIM-COPILOT WINDOW USED WITH INERTIA SHOULDER STRAP	1	J
			ATTACHING PARTS		
	S1021Z4-4C		. SCREW	7	E
	CM3657-1		. SCREW GRAY	7	F
			---*---		
	S202VW		. CHANNEL BKI	AR	A
	CM3609		. CHANNEL BKI ALUMN	AR	B
-5	5311516-8		. CLIP-LH & RH	4	
-6	5311516-9		. CLIP-LH & RH	4	
-7	5311516-12		. CLIP-LH & RH	6	
-8	5311516-7		. TROUGH-DRAIN	1	C
	5311516-16		. TROUGH-DRAIN	1	D
			ATTACHING PARTS		
	S1021Z4-4C		. SCREW	2	E
	CM3657-1		. SCREW GRAY	2	F
			---*---		
-9	5311515-3	@	. TRIM-WINDOW LH FWD	1	
	S202VW		. CHANNEL BKI	AR	A
	CM3609		. CHANNEL BKI ALUMN	AR	B
-10	5311515-4	@	. TRIM-EMERGENCY WINDOW	1	
	S202VW		. CHANNEL BKI	AR	A
	CM3609		. CHANNEL BKI ALUMN	AR	B
-11	5311515-5	@	. TRIM-WINDOW LH CTR	1	
	S202VW		. CHANNEL BKI	AR	A
	CM3609		. CHANNEL BKI ALUMN	AR	B
-12	5311515-6	@	. TRIM-WINDOW RH CTR FWD	1	
	S202VW		. CHANNEL BKI	AR	A
	CM3609		. CHANNEL BKI ALUMN	AR	B
-13	5311529-8	@	. TRIM ASSY-UPR CABIN DOOR	1	
			ATTACHING PARTS		
-14	MS35206-243		. SCREW	7	E
	CM3658-1		. SCREW GRAY	7	F
			---*---		
	S202VW		. CHANNEL BKI	AR	A
	CM3609		. CHANNEL BKI ALUM	AR	B
-15	S1362-6		. HANDLE	1	
			ATTACHING PARTS		
-16	S1021Z4-4C		. SCREW	2	E
	CM3657-1		. SCREW GRAY	2	F
			---*---		
-17	5311515-8	@	. TRIM-WINDOW RH CTR AFT	32	
	S202VW		. CHANNEL BKI	AR	A
	CM3609		. CHANNEL BKI ALUM	AR	B
-18	5311515-9	@	. TRIM-WINDOW LH AFT	1	
	S202VW		. CHANNEL BKI	AR	A
	CM3609		. CHANNEL BKI ALUMN	AR	B
-19	5311515-10	@	. TRIM-WINDOW RH AFT	1	
	S202VW		. CHANNEL BKI	AR	A
	CM3609		CHANNEL BKI ALUMN	AR	B
	S1021Z4-4C		. SCREW	32	E
	CM3657-1		. SCREW GRAY	32	F
			---*---		
-20	5311515-11		. CLIP-TRIM ATTACH	32	
-21	5311512-5		. RETAINER-CABIN DOOR FWD	1	A
	5311512-9		. RETAINER-CABIN DOOR FWD	1	B
			ATTACHING PARTS		
	MS24693S28		. SCREW	6	
	NAS1329A06-120		. NUT	6	
			---*---		
-22	5311512-6		. RETAINER-CABIN DOOR AFT	1	A
	5311512-8		. RETAINER-CABIN DOOR AFT	1	B
			ATTACHING PARTS		
	MS24693S28		. SCREW	6	
	NAS1329A06-120		. NUT	6	
			---*---		
-23	5311512-2		. CLIP ASSY-CABIN DOOR	1	
			ATTACHING PARTS		
	MS35206-230		. SCREW	6	
	NAS1329A06-120		. NUT	6	
			---*---		
-24	5311512		. WINDLACE-CABIN DOOR	1	

CONTINUED

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
48		@---WHEN ORDERING THIS PART THE ORDER MUST BE ACCOMPANIED BY THE COMPLETE FINISH AND TRIM PLATE NUMBER AND AIRCRAFT SERIAL NUMBER A---340-0001 THRU 340-0150 B---340-0151 & ON C---340-0001 THRU 340-0300 D---340-0301 & ON E---340-0001 THRU 340-0306 F---340-0307 & ON G---340-0001 TO 340A0001 H---340-0301 TO 340A0001 J---340A0001 & ON		

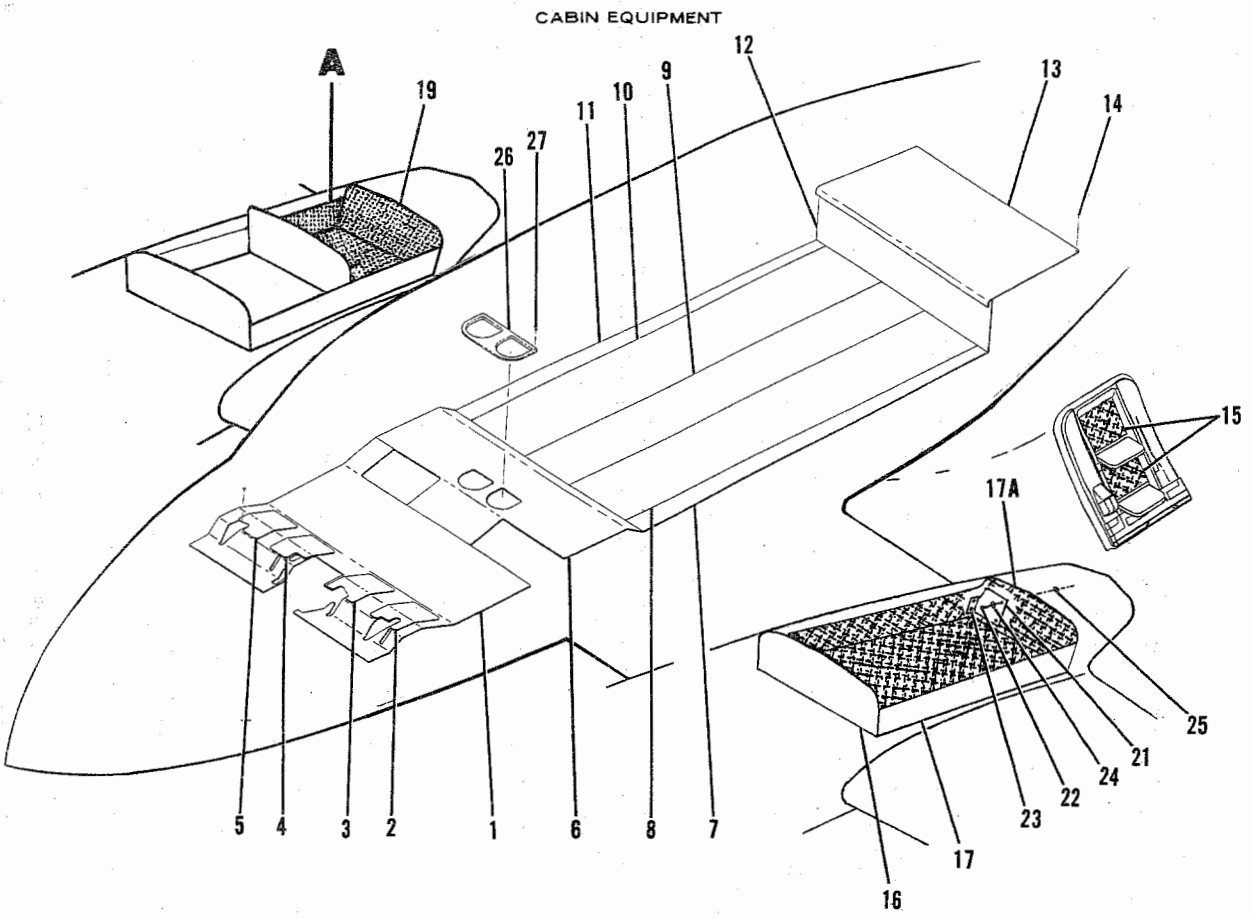

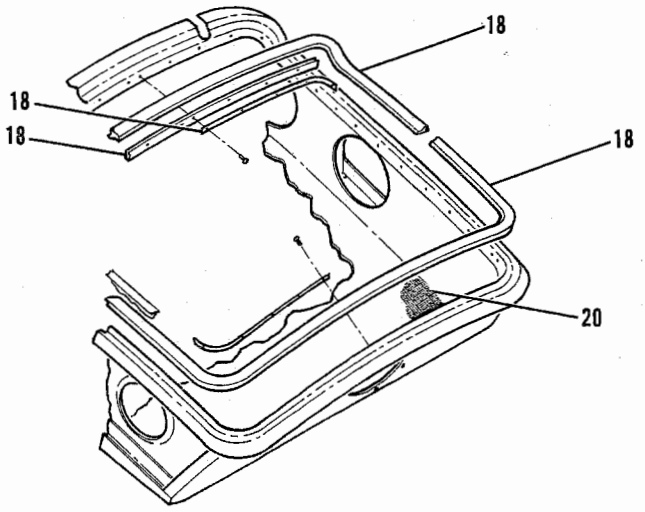

Detail **A**

Figure 49. Carpet Installation

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
49 -			CARPET INSTALLATION	NP	
-1	5311520-10	@	. CARPET ASSY-FWD CABIN	1	
-2	5311534-15		. PLATE-SCUFF RUDDER	1	
			ATTACHING PARTS		
	S1021Z8-7		. SCREW	4	
			---*---		
-3	5311534-16		. PLATE-SCUFF RUDDER	1	
			ATTACHING PARTS		
	S1021Z8-7		. SCREW	4	
			---*---		
-4	5311534-17		. PLATE-SCUFF RUDDER	1	
			ATTACHING PARTS		
	S1021Z8-7		. SCREW	4	
			---*---		
-5	5311534-18		. PLATE-SCUFF RUDDER	1	
			ATTACHING PARTS		
	S1021Z8-7		. SCREW	4	
			---*---		
-6	5311520-9	@	. CARPET ASSY-CABIN	1	
-7	5311520-5	@	. CARPET ASSY-LH OUTBD	1	
-8	5311520-7	@	. CARPET ASSY-LH INBD	1	
-9	5311520-8	@	. CARPET ASSY-CENTER	1	
-10	5311520-6	@	. CARPET ASSY-RH INBD STANDARD	1	
	5311520-16	@	. CARPET ASSY-RH INBD USED WITH STORAGE CABINET	1	A
-11	5311520-4	@	. CARPET ASSY-RH OUTBD STANDARD	1	
	5311520-14	@	. CARPET ASSY-RH OUTBD USED WITH STORAGE CABINET	1	A
-12	5311520-3	@	. CARPET ASSY-AFT STEP	1	
-13	5311520-2	@	. CARPET ASSY-AFT	1	
			ATTACHING PARTS		
-14	S1021A4-10		. SCREW	AR	
			---*---		
-15	5311527-7	@	. CARPET-LWR CABIN DOOR	2	
-16	5254102-17		. PANEL-FWD LH & RH NACELLE	2	
	5254102-18		. LINER-FWD LH & RH NACELLE WEU 5254102-29	2	B
	5254102-29	@	. LINER-FWD LH & RH NACELLE	2	C
-17	5254102-5		. LINER-LH NACELLE WEU 5254102-21	1	B
	5254102-21	@	. LINER-LH NACELLE	1	C
	5254102-7	@	. LINER-LH NACELLE USED WITH WING LOCKER FUEL	1	B
			WEU 5254102-23		
	5254102-23	@	. LINER-LH NACELLE USED WITH WING LOCKER FUEL	1	C
	5254102-6		. LINER-RH NACELLE WEU 5254102-20	1	B
	5254102-20	@	. LINER-RH NACELLE	1	C
			ATTACHING PARTS		
	0811581-5		. SNAP-BUTTON	AR	
			---*---		
-17A	5254102-15		. PANEL-AFT LH & RH NACELLE	2	
	5254102-16		. LINER-AFT LH & RH NACELLE WEU 5254102-28	2	B
	5254102-28	@	. LINER-AFT LH & RH NACELLE	2	C
-18	CM2613-1		. CHANNEL BKI LH & RH NACELLE	AR	
-19	5254102-8	@	. LINER-RH NACELLE USED WITH WING LOCKER FUEL	1	B
			WEU 5254102-22		
	5254102-22	@	. LINER-RH NACELLE USED WITH WING LOCKER FUEL	1	C
			OR AIRCONDITIONING		
			ATTACHING PARTS		
	0811581-5		. SNAP-BUTTON	AR	
			---*---		
-20	5254102-11		. LINER-RH NACELLE USED WITH WINDSHIELD ANTI-ICE	1	B
	5254102-27		. LINER-RH NACELLE USED WITH WINDSHIELD ANTI-ICE	1	C
	5254102-12		. LINER-RH NACELLE USED WITH WINDSHIELD ANTI-ICE	1	B
	5254102-26		. LINER-RH NACELLE USED WITH WINDSHIELD ANTI-ICE	1	C
			WHEN AIRCONDITIONING OR WING LOCKER FUEL IS INSTLD		
-21	5254102-13		. PLATE-INBD USED WITH WINDSHIELD ANTI-ICE	1	
	5254102-14		. PLATE-OUTBD USED WITH WINDSHIELD ANTI-ICE	1	
			ATTACHING PARTS		
-22	S1023Z6-8C		. SCREW AFT	2	
-23	S1023Z6-6C		. SCREW SIDE	2	
-24	S1067C1		. WASHER	4	
-25	NAS395-7-1		. NUT AFT	2	
			---*---		
-26	5311523-2		. COVER-FUEL SELECTOR TRIM	1	
			ATTACHING PARTS		
-27	S1022A6-10		. SCREW	9	
			---*---		

@---WHEN ORDERING THIS PART THE ORDER MUST BE ACCOMPANIED BY THE COMPLETE FINISH AND TRIM PLATE NUMBER AND AIRCRAFT SERIAL NUMBER

A---340-0501 & ON
B---340-0001 TO 340A0001
C---340A0001 & ON

CABIN EQUIPMENT

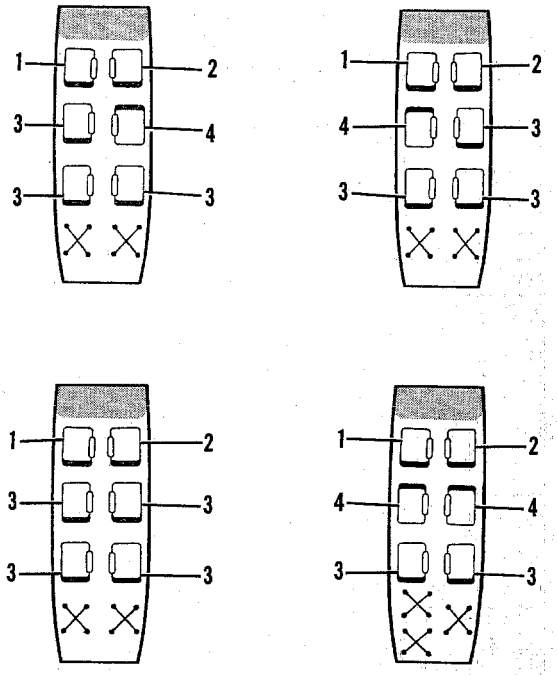

1 PILOT SEAT INSTL

2 COPILOT SEAT INSTL

3 FWD FACING PASSENGER SEAT INSTL

4 REAR FACING PASSENGER SEAT INSTL

Figure 50. Seating Arrangements Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
50 -		SEATING ARRANGEMENTS INSTALLATION	NP	
-1	SEE FIG 51	. PILOT SEAT INSTL	1	
	SEE FIG 55	. PILOT POWER SEAT INSTL	AR	
-2	SEE FIG 51	. COPILOT SEAT INSTL	1	
	SEE FIG 55	. COPILOT POWER SEAT INSTL	AR	
-3	SEE FIG 57	. PASSENGER SEAT INSTL-FWD FACING LH & RH FWD & AFT	AR	
-4	SEE FIG 59	. PASSENGER SEAT INSTL-REAR FACING LH FWD & RH FWD	AR	

Figure 50. Seating Arrangements Installation

CABIN EQUIPMENT

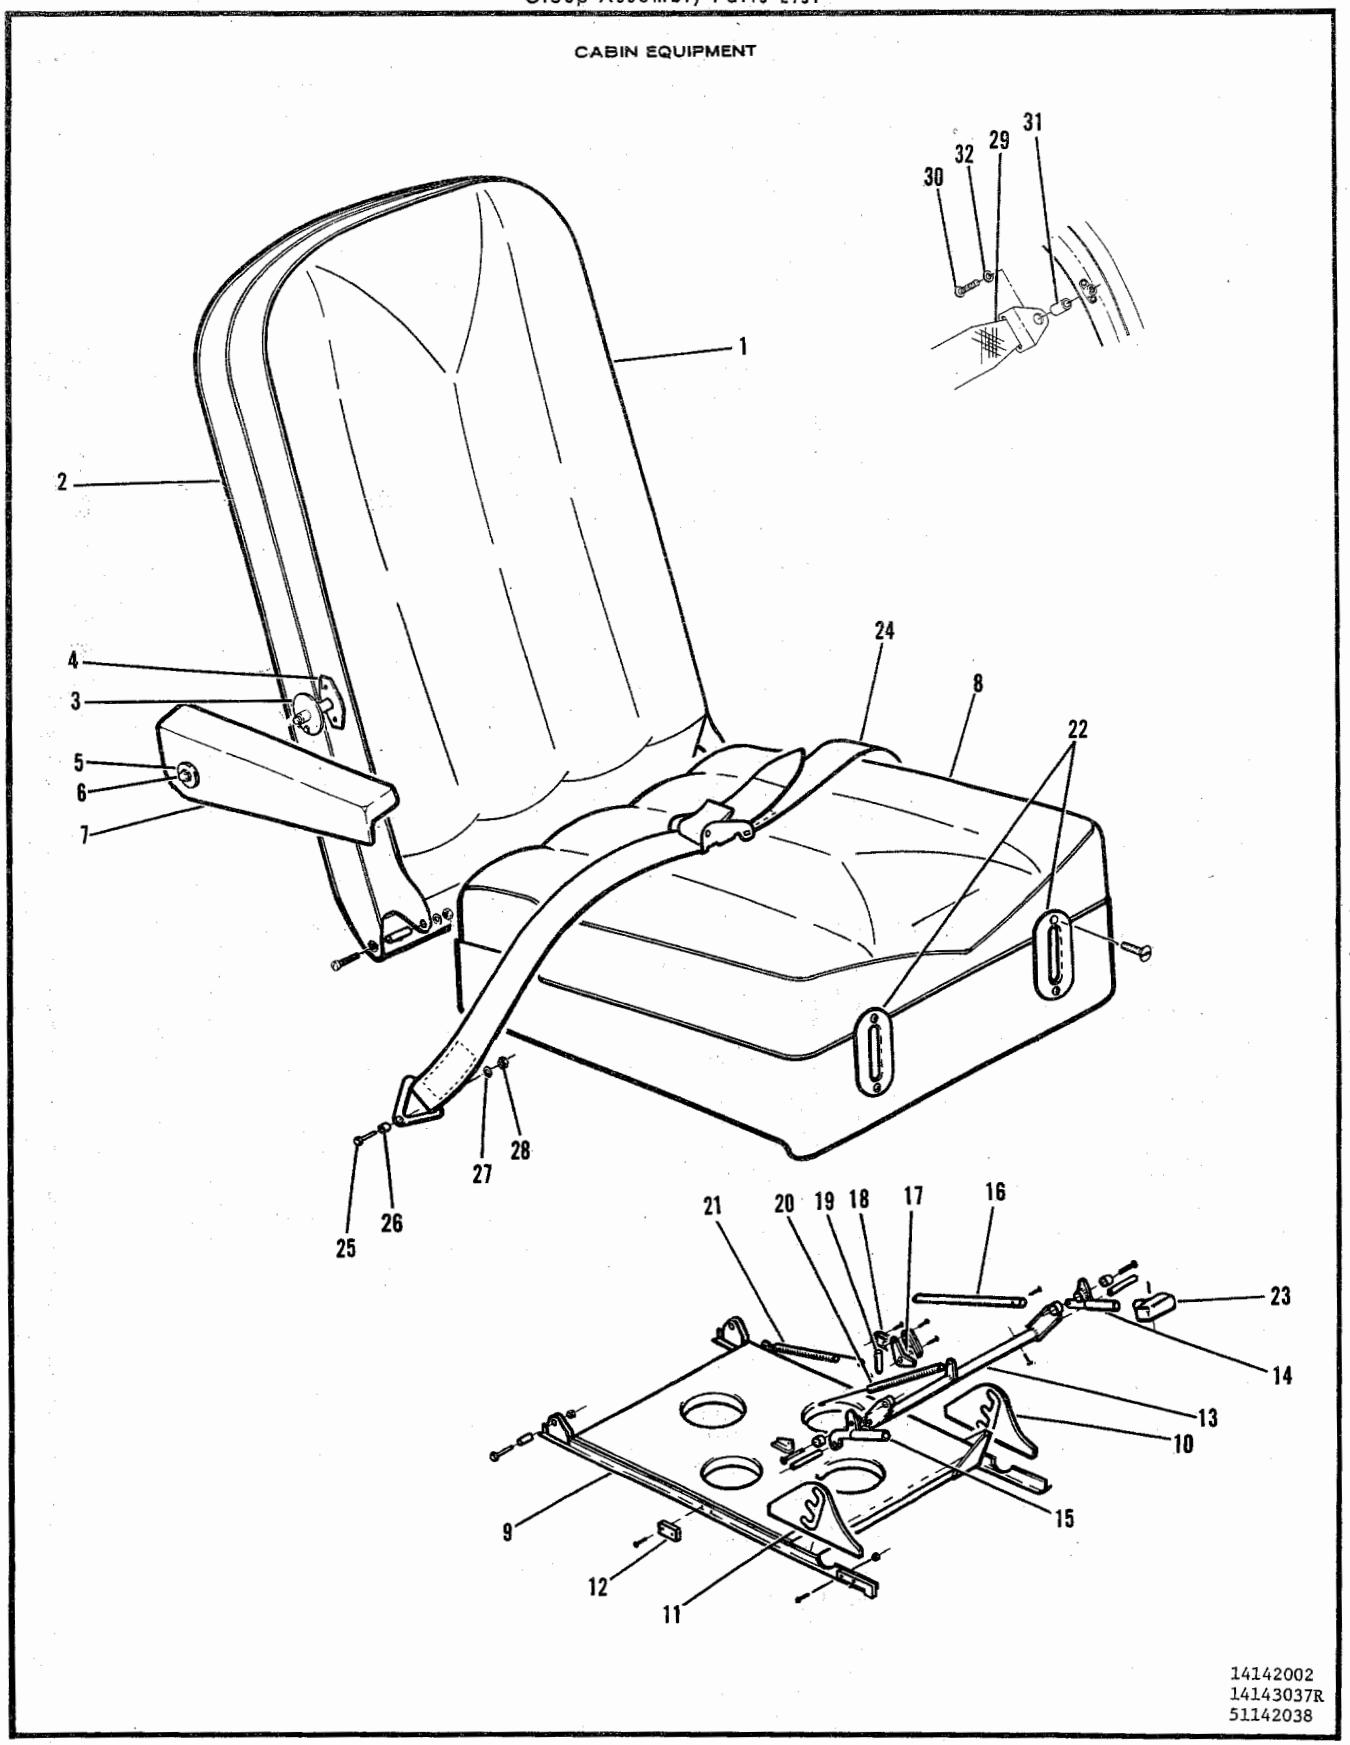

Figure 51. Pilot and Copilot Seat Installation

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
51 -			PILOT AND COPILOT SEAT INSTALLATION	NP	C
	5014047-39	a	. SEAT ASSY-PILOT	1	A
	5014047-57	aa	. SEAT ASSY-PILOT	1	B
	5014047-40	aa	. SEAT ASSY-COPILOT	1	A
	5014047-56	aa	. SEAT ASSY-COPILOT	1	B
	5014047-45	aa	. . BACK ASSY-PILOT SEAT UPHOLSTERED	1	A
	5014047-59	aa	. . BACK ASSY-PILOT SEAT UPHOLSTERED	1	B
	5014047-46	aa	. . BACK ASSY-COPILOT SEAT UPHOLSTERED	1	A
	5014047-58	a	. . BACK ASSY-COPILOT SEAT UPHOLSTERED	1	B
			ATTACHING PARTS		
	MS24694S64		. . SCREW	2	
	S290D1032		. . WASHER	2	
	NAS43HT3-24		. . SPACER	2	
	AN960-10		. . WASHER	2	
	MS21044N3		. . NUT	2	
			---*---		
-1	5014047-7	a	. . . COVER-PILOT SEAT BACK	1	A
	5014047-61	a	. . . COVER-PILOT SEAT BACK	1	B
	5014047-8	aa	. . . COVER-COPILOT SEAT BACK	1	A
	5014047-60	aa	. . . COVER-COPILOT SEAT BACK	1	B
-2	5619232-7	a	. . . COVER ASSY-PILOT AND COPILOT BACK PANEL	2	A
	5619232-15	a	. . . COVER ASSY-PILOT AND COPILOT BACK PANEL	2	B
			ATTACHING PARTS		
	S1021Z6-6C		. . . SCREW	5	
			---*---		
-3	0812224-1		. . . STOP ASSY-ARMREST	2	A
	0812224-5		. . . STOP ASSY-ARMREST	2	B
			ATTACHING PARTS		
	NAS561P3-10		. . . PIN-SPRING	1	
			---*---		
-4	0812966-1		. . . ESCUTCHEON PLATE-ARMREST	2	
			ATTACHING PARTS		
	S1021A4-8C		. . . SCREW	2	
			---*---		
-5	0812978-1		. . . WASHER	1	A
	AN970-3		. . . WASHER	1	B
-6	0812977-1		. . . NUT	1	A
	5314537-1		. . . BOLT	1	B
-7	5014047-9	a	. . ARMREST ASSY-PILOT SEAT UPHOLSTERED	1	
	5014047-10	aa	. . ARMREST ASSY-COPILOT SEAT UPHOLSTERED	1	
	5014047-11	aa	. . . COVER-PILOT SEAT ARMREST	1	
	5014047-12	a	. . . COVER-COPILOT SEAT ARMREST	1	
			ATTACHING PARTS		
	S1022Z6-6		. . . SCREW	4	
			---*---		
	5014047-49	a	. . BOTTOM ASSY-PILOT & COPILOT SEAT UPHOLSTERED	1	
			ATTACHING PARTS		
	AN3-6A		. . BOLT	2	
	NAS43HT3-21		. . SPACER	2	
	MS21044N3		. . NUT	2	
			---*---		
-8	5014047-14	a	. . . COVER ASSY-BOTTOM UPHOLSTERY	2	
-9	0812200-142		. . . PAN ASSY-PILOT & COPILOT SEAT BOTTOM	2	
-10	0812200-129		. . . . BRACKET-ADJUST LH	2	
-11	0812200-130		. . . . BRACKET-ADJUST RH	2	
-12	0812200-111		. . . . PLATE-STOP	2	
			ATTACHING PARTS		
	AN525-832R12		. . . . SCREW	2	
			---*---		
-13	0812200-38		. . . ACTUATOR ASSY	2	
			ATTACHING PARTS		
	0812200-49		. . . PIN-LH	1	
	0812200-50		. . . PIN-RH	1	
	MS20392-1C13		. . . PIN	2	
	MS24665-132		. . . PIN-COTTER	2	
			---*---		
-14	0812200-103		. . . ARM-LH	2	
-15	0812200-102		. . . ARM-RH	2	
			ATTACHING PARTS		
	NAS43-4-12		. . . SPACER	1	
	MS20392-3C43		. . . PIN-LH ARM	1	
	MS20392-3C37		. . . PIN-RH ARM	1	
	MS24665-132		. . . PIN-COTTER	1	
			---*---		
-16	0812200-47		. . . TUBE-SLIDE RELEASE	2	
			ATTACHING PARTS		
	MS20392-1C11		. . . PIN	1	
	AN960-6L		. . . WASHER	1	
	MS20392-1C15		. . . PIN	1	
	AN960-4		. . . WASHER	1	
	MS24665-132		. . . PIN-COTTER	2	
			---*---		
-17	0812201-1		. . . PIN-STOP	2	

CONTINUED

FIGURE AND INDEX NO.	PART NUMBER		1 2 3 4 5 6 7 DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
51 -18	0812200-52		. . . PIVOT-ARM	2	
			ATTACHING PARTS		
	MS20392-1C13		. . . PIN	1	
	AN960-10L		. . . WASHER	1	
	MS24665-132		. . . PIN-COTTER	1	
			---*---		
-19	0812200-135		. . . PIN-LOCK	2	
			ATTACHING PARTS		
	MS20392-1C11		. . . PIN	1	
	MS24665-132		. . . PIN-COTTER	1	
			---*---		
-20	0310196-4		. . . SPRING	2	
-21	0310196-3		. . . SPRING	2	
-22	0812200-81		. . . PLATE-ESCUTCHEON	4	
			ATTACHING PARTS		
	S1023Z4-4		. . . SCREW	4	
			---*---		
-23	0811835-1		. . . HANDLE-SEAT ADJUST	2	
	0811835-2		. . . HANDLE-SEAT ADJUST	2	
			ATTACHING PARTS		
	S1023Z6-8		. . . SCREW	2	
			---*---		
-24	CM4009	a	. BELT ASSY-SEAT	2	
			ATTACHING PARTS		
-25	AN4C7		. BOLT	2	
-26	NAS43HT4-8		. SPACER	2	
-27	AN960C416		. WASHER	4	
-28	MS21044N4		. NUT	2	
			---*---		
-29	CM4010	a	. STRAP-SHOULDER	1	
			ATTACHING PARTS		
-30	MS27039-4-11		. SCREW PRPA	2	B
-31	NAS43HT4-13		. SPACER	2	B
-32	0812978-1		. WASHER	2	B
			---*---		

a---WHEN ORDERING THIS PART THE ORDER MUST BE ACCOMPANIED BY THE COMPLETE FINISH AND TRIM PLATE NUMBER AND AIRCRAFT SERIAL NUMBER

A---340-0001 THRU 340-0150
B---340-0151 THRU 340-0300
C---340-0001 THRU 340-0300

CABIN EQUIPMENT

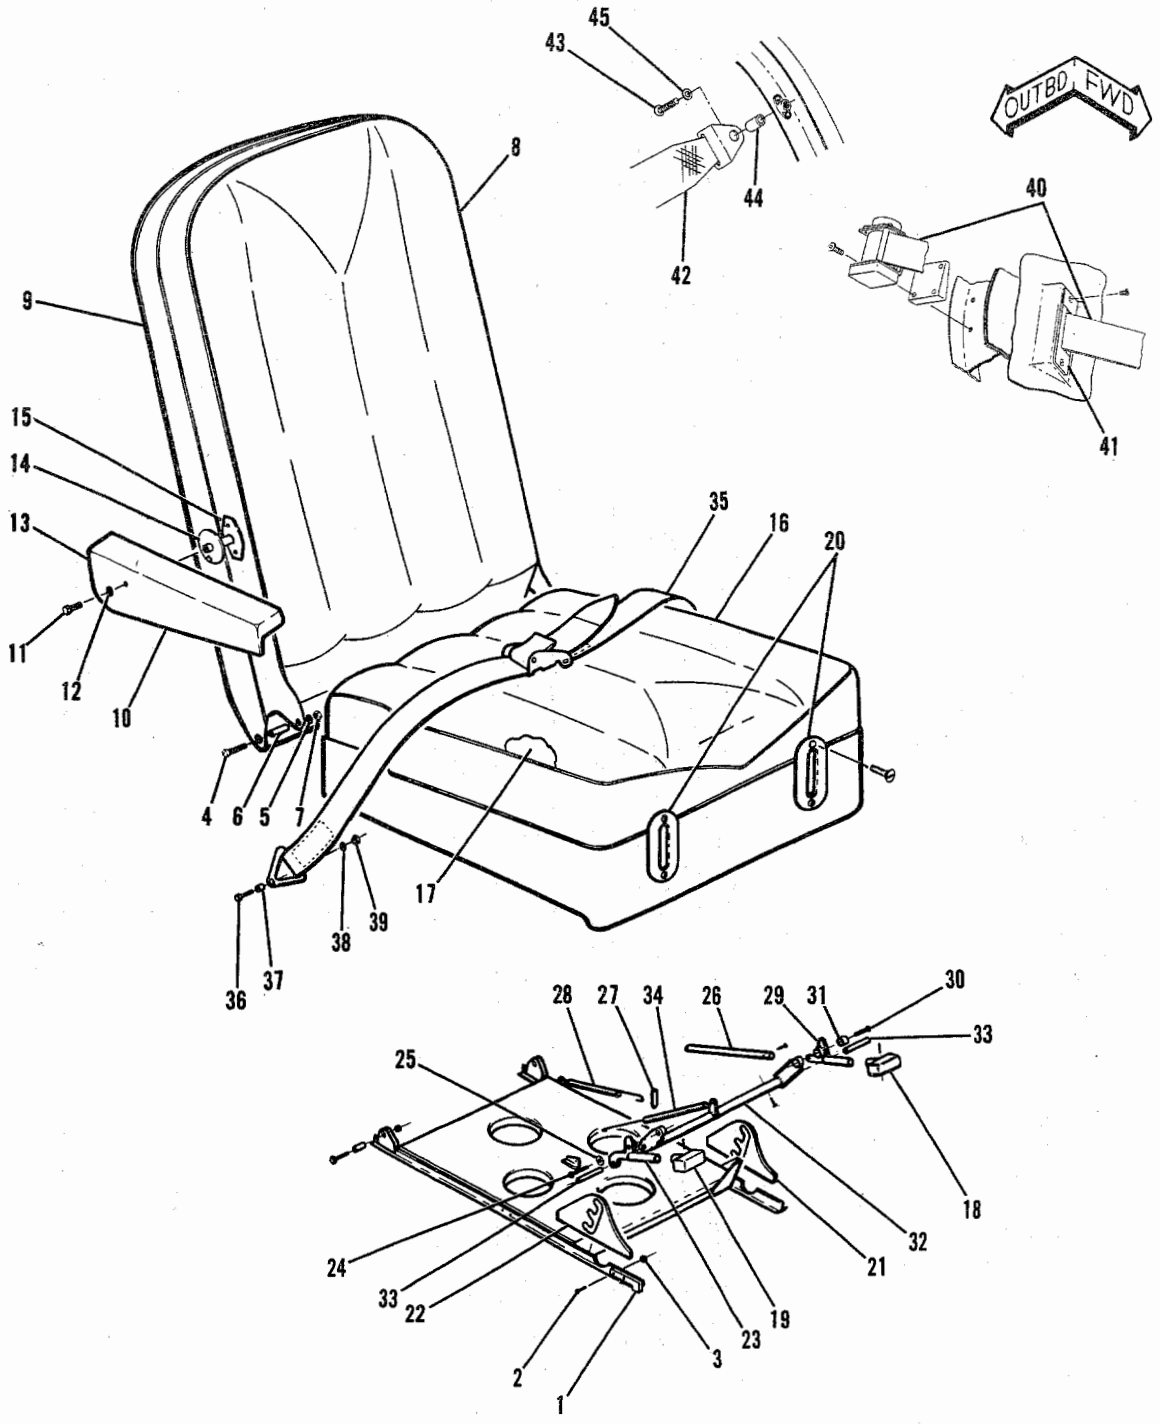

14142002
14141038
14143037

Figure 52. Pilot and Copilot Seat Installation

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
52 -			PILOT AND COPILOT SEAT INSTALLATION	NP	A
	0812782-9	@	. SEAT ASSY-PILOT	1	C
	0812782-3	@@@	. SEAT ASSY-PILOT	1	B
	0812782-4	@@	. SEAT ASSY-COPILOT	1	B
	0812782-10	@	. SEAT ASSY-COPILOT	1	C
			ATTACHING PARTS		
-1	0811993-3		. STOP	2	
-2	MS27039-1-10		. BOLT	2	
-3	MS21044N3		. NUT	2	
			---*---		
	5314538-1	@@	. . BACK ASSY-PILOT SEAT UPHOLSTERED	1	B
	5314538-7	@@@	. . BACK ASSY-PILOT SEAT UPHOLSTERED	1	B
	5314538-2	@@	. . BACK ASSY-COPILOT SEAT UPHOLSTERED	1	C
	5314538-8	@	. . BACK ASSY-COPILOT SEAT UPHOLSTERED	1	C
			ATTACHING PARTS		
-4	MS24694-64		. . SCREW	2	
-5	S290D1032		. . WASHER	2	
-6	NAS43HT3-24		. . SPACER	2	
	AN960-10		. . WASHER	2	
-7	MS21044N3		. . NUT	2	
			---*---		
-8	5314538-3	@@	. . . COVER ASSY-UPHOLSTERED	1	B
	5314538-6	@@@	. . . COVER ASSY-UPHOLSTERED	1	C
-9	5619232-15	@@@@	. . . BACK ASSY-SNAP ON	1	C
	5319155-5	@@@	. . . BACK ASSY-SNAP ON	1	C
-10	0812730-17	@@@@	. . . ARMREST ASSY-LH	1	B
	5319158-1	@@@	. . . ARMREST ASSY-LH	1	C
	0812730-16	@@@@	. . . ARMREST ASSY-RH	1	B
	5319158-2	@@	. . . ARMREST ASSY-RH	1	C
			ATTACHING PARTS		
-11	5314537-1		. . . BOLT	1	
-12	AN970-3		. . . WASHER	1	
			---*---		
-13	0812809-11	@@	. . . . COVER ASSY-UPHOLSTERY LH	1	B
	5319158-5	@@@	. . . . COVER ASSY-UPHOLSTERY LH	1	C
	0812809-12	@@@	. . . . COVER ASSY-UPHOLSTERY RH	1	B
	5319158-6	@@	. . . . COVER ASSY-UPHOLSTERY RH	1	C
			ATTACHING PARTS		
	S1022Z6-4		. . . . SCREW	4	
			---*---		
-14	0812224-5		. . . STOP ASSY	1	B
	5319161-9		. . . ROD ASSY WELD WEU 5319161-12	1	D
	5319161-12		. . . ROD ASSY WELD	1	E
	AN565A832F3		. . . SET SCREW USED WITH 5319161-12	1	
	NAS561P3-10		. . . PIN-SPRING	1	
-15	0812966-1		. . . PLATE	1	
			ATTACHING PARTS		
	S1021A4-8C		. . . SCREW	2	
			---*---		
	0812809-35	@@	. . BOTTOM ASSY-SEAT LH	1	
	0812809-36	@@@	. . BOTTOM ASSY-SEAT RH	1	
-16	0812809-32	@@	. . . COVER ASSY-UPHOLSTERY BOTTOM	1	
-17	0812809-34	@@	. . . CUSHION ASSY-BOTTOM	1	
	0812809-15		. . . COVER-DIAPHRAGM	1	
-18	0811835-1		. . . KNOB-SEAT ADJUSTMENT FWD & AFT	1	
-19	0811835-2		. . . KNOB-SEAT ADJUSTMENT RECLINE	1	
-20	0812200-81		. . . ESCUTCHEON	2	
-21	0812200-129		. . . BRACKET ASSY-ADJUSTMENT LH	1	
-22	0812200-130		. . . BRACKET ASSY-ADJUSTMENT RH	1	
-23	0812200-147		. . . ARM ASSY-ADJUSTMENT	1	
			ATTACHING PARTS		
-24	MS20392-3C37		. . . PIN	1	
-25	AN960-416		. . . WASHER	1	
	MS24665-132		. . . PIN-COTTER	1	
			---*---		
-26	0812113-1		. . . TUBE-ADJUSTMENT RELEASE		
			ATTACHING PARTS		
	MS20392-1C11		. . . PIN FWD	1	
	MS20392-1C13		. . . PIN AFT	1	
	AN960-4L		. . . WASHER FWD	1	
	AN960-4		. . . WASHER AFT	1	
	MS24665-132		. . . PIN-COTTER	2	
			---*---		
-27	0812115-3		. . . PIN-ADJUSTMENT LOCK	1	
			ATTACHING PARTS		
	MS20392-1C11		. . . PIN	1	
	AN960-4L		. . . WASHER	1	
	MS24665-132		. . . PIN-COTTER	1	
			---*---		
-28	0310196-3		. . . SPRING-TENSION ADJUSTMENT	1	
-29	0812200-102		. . . ARM ASSY-ADJUSTMENT	1	
			ATTACHING PARTS		
-30	MS20392-3C43		. . . PIN	1	
-31	NAS43HT4-7		. . . SPACER	1	
	NAS43HT4-17		. . . SPACER	1	
	MS24665-132		. . . PIN-COTTER	1	
			---*---		

CONTINUED

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
52 -32	0812200-38		. . . ACTUATOR ASSY WELD	1	
			ATTACHING PARTS		
-33	0812200-50		. . . PIN	2	
	MS20392-1C13		. . . PIN	2	
	AN960-416L		. . . WASHER	2	
	MS24665-132		. . . PIN-COTTER	2	
			---*---		
-34	0310196-13		. . . SPRING-TENSION ADJUSTMENT	1	
-35	CM4009	@	. BELT ASSY-SEAT	2	
			ATTACHING PARTS		
-36	AN4C7		. BOLT	2	
-37	NAS43HT4-8		. SPACER	2	
-38	AN960C416		. WASHER	4	
-39	MS21044N4		. NUT	2	
			---*---		
-40	CM4020	@	. INERTIA REEL ASSY INCLUDING STRAP	2	
			ATTACHING PARTS		
	MS24693S277		. SCREW	3	
	5300948-3		. SPACER-BLOCK	1	
	CM2024-1		. WASHER	3	
	CM2023-1		. NUT	3	
			---*---		
-41	0811296-1		. SEGMENT-GUIDE	2	
			ATTACHING PARTS		
	S1022Z6-8C		. SCREW	2	
	NAS395-4-3		. NUT	2	
			---*---		
-42	CM4010	@	. STRAP-SHOULDER	2	
			ATTACHING PARTS		
-43	MS27039-4-11		. SCREW	1	
-44	NAS43HT4-13		. SPACER	1	
-45	0812978-1		. WASHER	1	
			---*---		

@---WHEN ORDERING THIS PART THE ORDER MUST BE ACCOMPANIED BY THE COMPLETE FINISH AND TRIM PLATE NUMBER AND AIRCRAFT SERIAL NUMBER

A---340-0301 & ON
B---340-0301 TO 340A0000
C---340A0001 & ON
D---340A0001 THRU 340A0040
E---340A0041 & ON

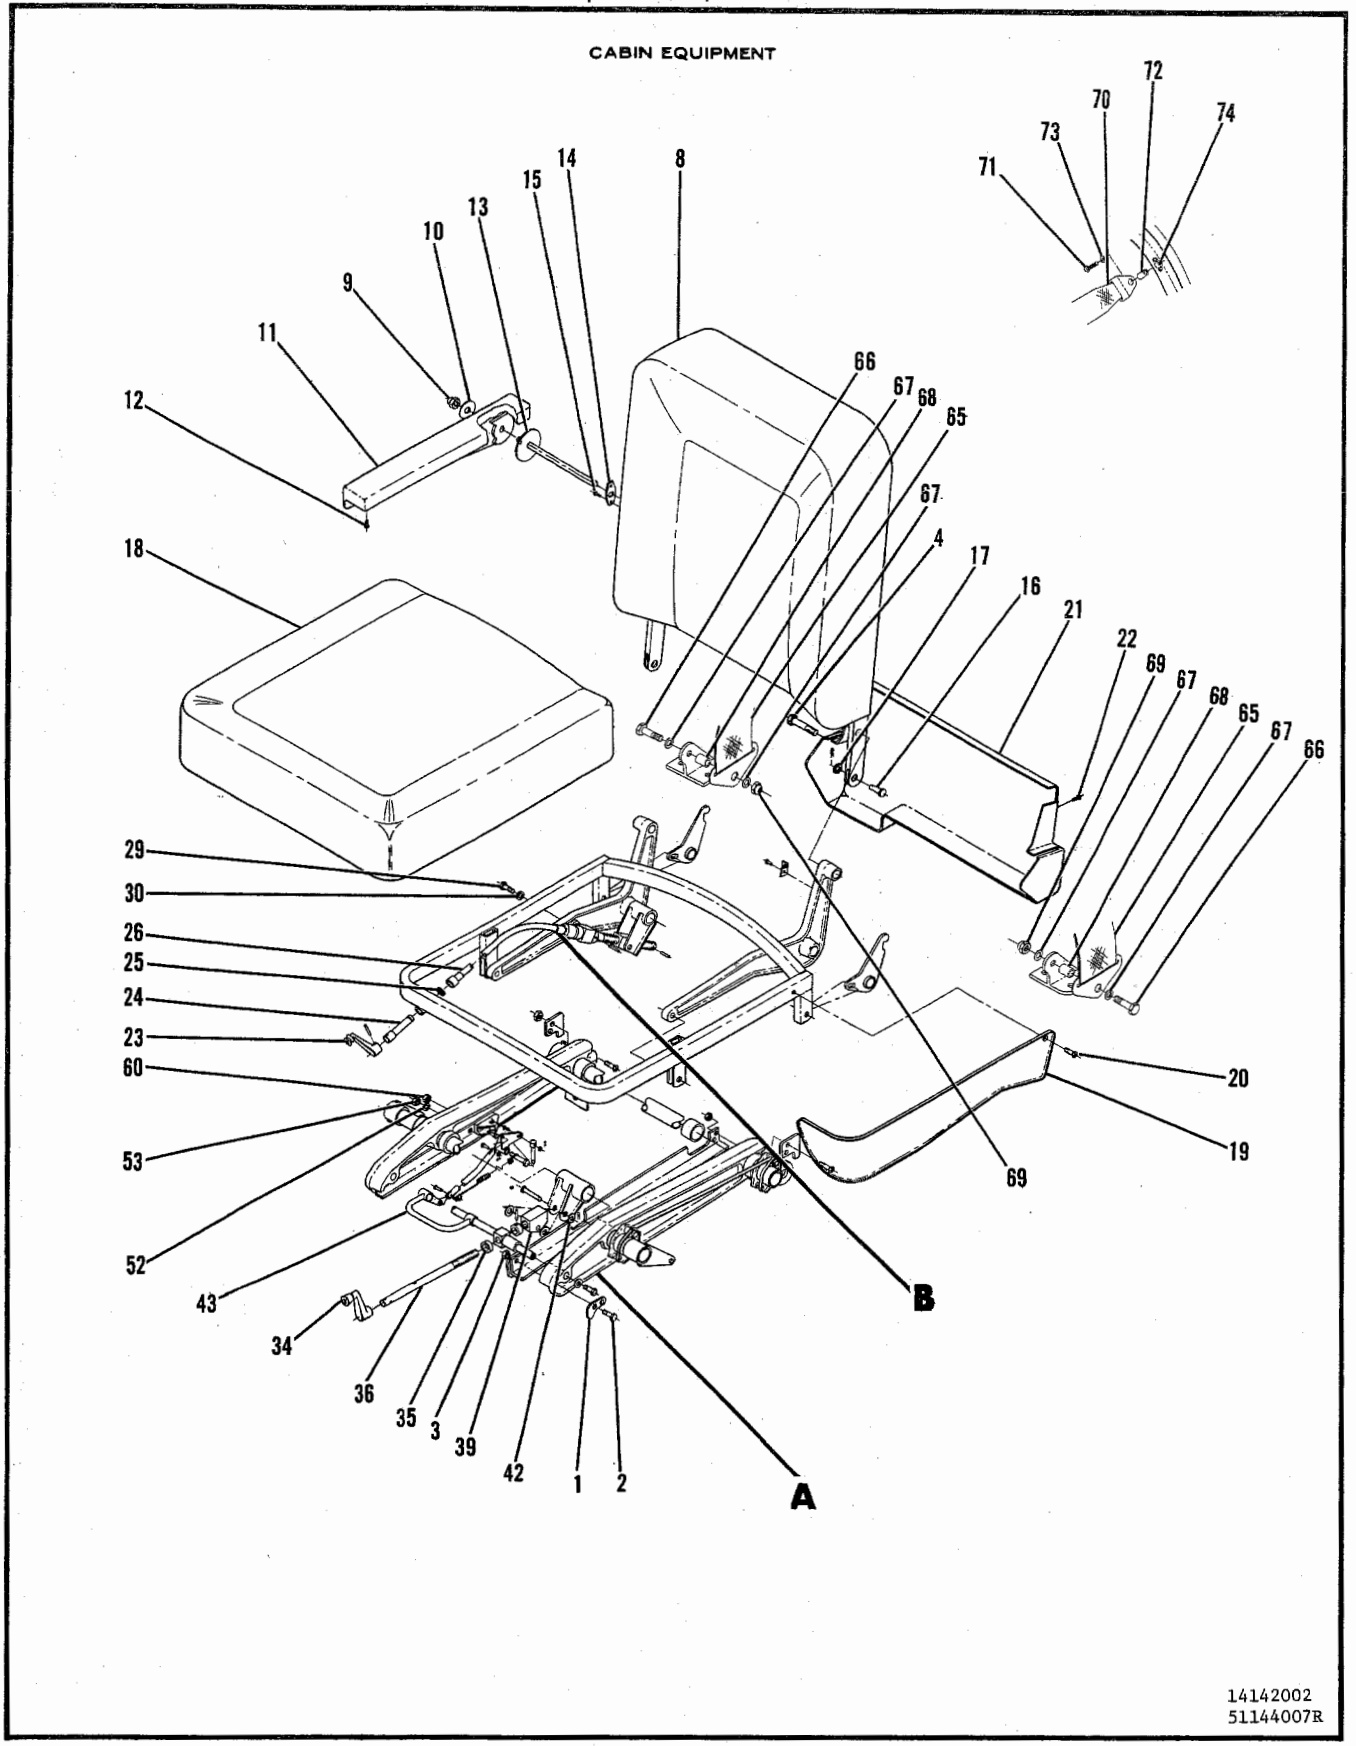

Figure 53. Pilot and Copilot Manually Adjustable Seat Installation (Sheet 1 of 2)

CABIN EQUIPMENT

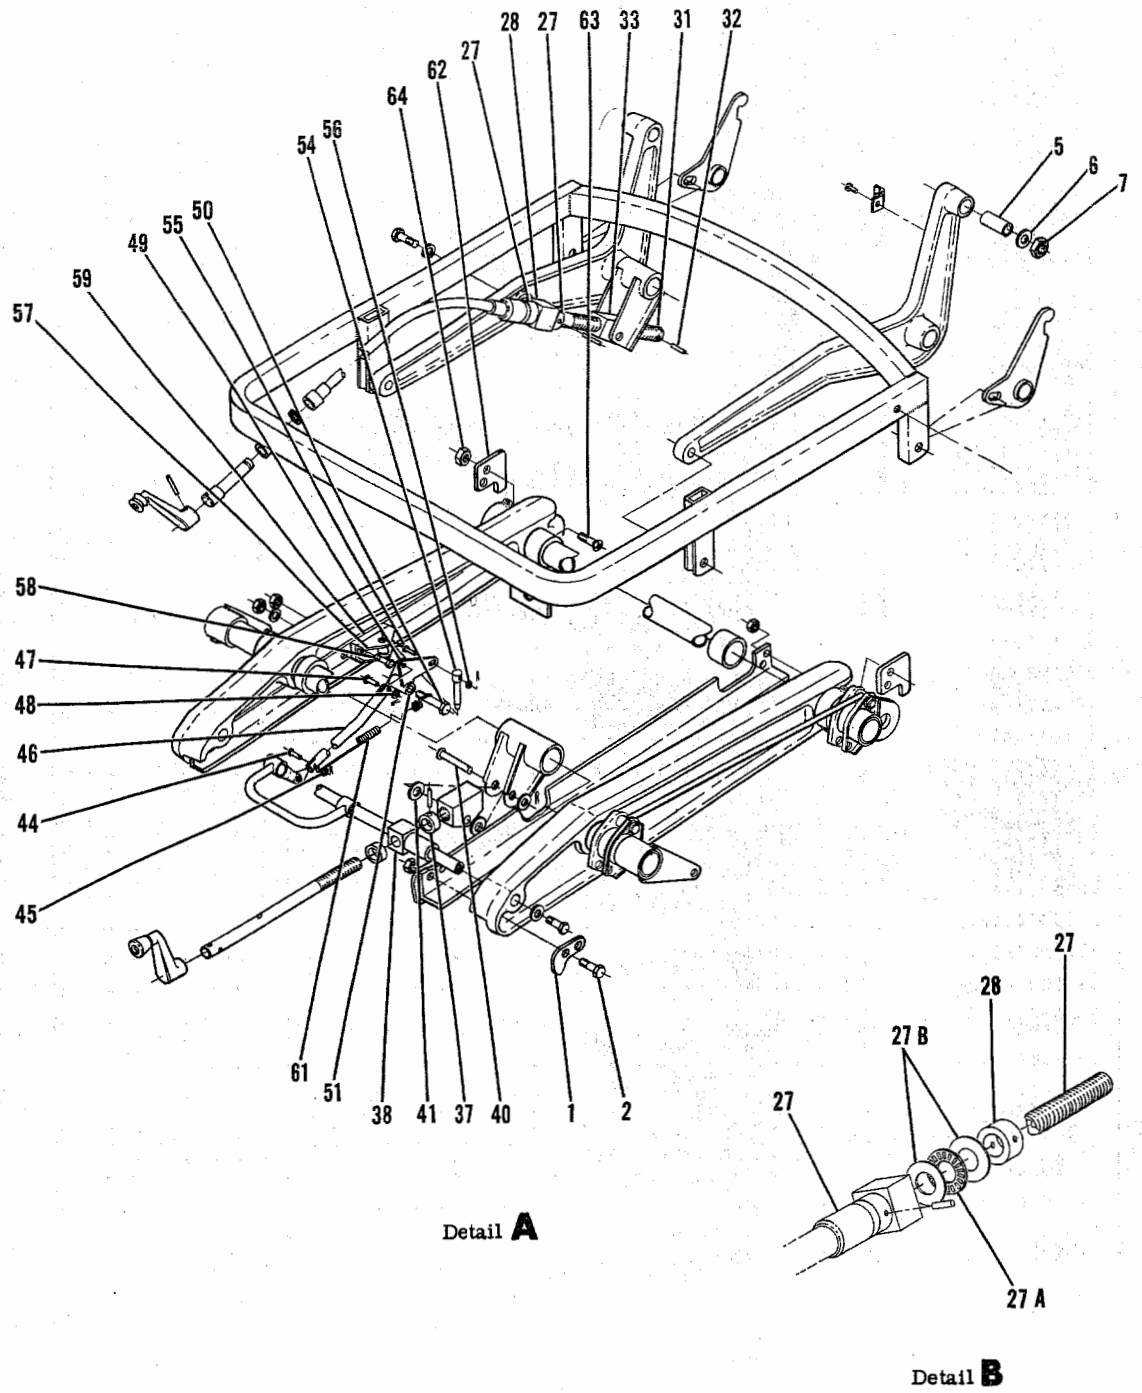

A51144007R
B14141013

Figure 53. Pilot and Copilot Manually Adjustable Seat Installation (Sheet 2)

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
53 -			PILOT AND COPILOT MANUALLY ADJUSTABLE SEAT INSTALLATION	NP	H
	0812730-31	a	. SEAT ASSY-PILOT	1	E
	0812730-49	a	. SEAT ASSY-PILOT	1	F
	0812730-57	a	. SEAT ASSY-PILOT	1	C
	0812730-32	a	. SEAT ASSY-COPILOT	1	E
	0812730-50	a	. SEAT ASSY-COPILOT	1	F
	0812730-58	a	. SEAT ASSY-COPILOT	1	C
			ATTACHING PARTS		
-1	0812745-1		. STOP-END	2	
-2	AN3-5A		. BOLT	4	
-3	MS21042-3		. NUT	4	
			---*---		
	0812730-35	a	. . BACK ASSY-PILOT UPHOLSTERED	1	E
	0812730-53	a	. . BACK ASSY-PILOT UPHOLSTERED	1	F
	0812730-59	a	. . BACK ASSY-PILOT UPHOLSTERED	1	C
	0812730-36	a	. . BACK ASSY-COPILOT UPHOLSTERED	1	E
	0812730-54	a	. . BACK ASSY-COPILOT UPHOLSTERED	1	F
	0812730-60	a	. . BACK ASSY-COPILOT UPHOLSTERED	1	C
			ATTACHING PARTS		
-4	AN3-17A		. . BOLT	2	E
	AN3-20A		. . BOLT	2	G
-5	0812755-1		. . SPACER	2	E
	0812755-2		. . SPACER	2	G
-6	AN960-10L		. . WASHER	4	
-7	MS21042-3		. . NUT	2	
			---*---		
-8	0812730-41	a	. . . COVER-SEAT BACK PILOT & COPILOT	2	D
	0812730-61	a	. . . COVER ASSY-SEAT BACK PILOT & COPILOT	2	C
	5619232-11	a	. . . COVER-SEAT BACK PILOT & COPILOT	2	D
	5619232-19	a	. . . COVER-ASSY-SEAT BACK PILOT & COPILOT	2	C
	0812730-17	a	. . . ARMREST ASSY-PILOT SEAT	1	
	0812730-16	a	. . . ARMREST ASSY-COPILOT SEAT	1	
			ATTACHING PARTS		
-9	0812977-1		. . . NUT	1	D
	5314537-1		. . . BOLT	1	C
-10	0812978-1		. . . WASHER	1	D
	AN970-3		. . . WASHER	1	C
			---*---		
-11	0812809-11	a	. . . . COVER-ARMREST PILOT SEAT	1	
	0812809-12	a	. . . . COVER-ARMREST COPILOT SEAT	1	
			ATTACHING PARTS		
-12	S1022Z6-6		. . . . SCREW	4	
			---*---		
-13	0812224-1		. . . STOP ASSY-ARMREST	1	D
	0812224-5		. . . STOP ASSY-ARMREST	1	C
-14	0812966-1		. . . ESCUTCHEON PLATE-ARMREST	1	
			ATTACHING PARTS		
-15	S1021A4-8C		. . . SCREW	2	
			---*---		
-16	MS20392-2C11		. . . PIN-SEAT BACK STOP	2	E
	MS20392-2C17		. . . PIN-SEAT BACK STOP	2	G
-17	AN960-10L		. . . WASHER	2	
	MS24665-132		. . . PIN-COTTER	2	
	0812730-37	a	. . BOTTOM ASSY-LH & RH UPHOLSTERED	2	E
	0812730-55	a	. . BOTTOM ASSY-LH & RH UPHOLSTERED	2	G
-18	0812730-45	a	. . . COVER	1	
-19	0812751-3	a	. . . SKIRT-LH	1	
	0812751-4	a	. . . SKIRT-RH	1	
			ATTACHING PARTS		
-20	S1021Z4-8C		. . . SCREW	4	
			---*---		
-21	0812751-5		. . . SKIRT-AFT	1	
			ATTACHING PARTS		
-22	S1021Z4-8C		. . . SCREW	4	
			---*---		
	0812756-1		. . . CLIP	4	
-23	0514036-1		. . . HANDLE	1	
			ATTACHING PARTS		
	NAS561P4-12		. . . PIN	1	
			---*---		
	0812732-2		. . . SEAT BASE ASSY	1	E
	0812732-6		. . . SEAT BASE ASSY	1	G
-24	0812746-1		. . . . SHAFT	1	
-25	MS16624-1035		. . . . SNAP RING	1	
-26	3XR34-12		. . . . SHAFT-FLEXIBLE	1	
-27	1200138-1		. . . . COLLAR	2	
			ATTACHING PARTS		
	NAS561P4-10		. . . . PIN	2	
			---*---		
-27A	S2013-3		. . . . BEARING	1	B
-27B	S2014-3		. . . . RACE	2	B
-28	0812743-9		. . . . BEARING BLOCK	1	
			ATTACHING PARTS		
-29	NAS1223-1L		. . . . BOLT	1	
-30	AN960-10L		. . . . WASHER	1	
			---*---		

CONTINUED

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
53 -31	0812742-2		SCREW ASSY WEU 0812742-7	1	A
	0812742-7		SCREW ASSY	1	B
-32	NAS561P4-8		PIN	1	
-33	1200139-1		NUT	1	
-34	1200159-1		HANDLE ASSY	1	
			ATTACHING PARTS		
	NAS561P4-12		PIN	2	
			---*---		
-35	NAS43DD8-16		SPACER	1	
-36	0812742-1		SCREW ASSY	1	
-37	1200138-2		COLLAR	1	
			ATTACHING PARTS		
	NAS561P5-12		PIN	1	
			---*---		
-38	0812743-5		BEARING BLOCK ASSY	1	
-39	0514037-1		NUT	1	
			ATTACHING PARTS		
-40	MS20392-2C35		PIN	1	
-41	AN960-10L		WASHER	1	
-42	AN960-10		WASHER	2	
	MS24665-132		PIN-COTTER	1	
			---*---		
-43	0812757-2		HANDLE ASSY	1	
			ATTACHING PARTS		
-44	MS20392-1C13		PIN	1	
-45	AN960-4L		WASHER	1	
	MS24665-132		PIN-COTTER	1	
			---*---		
-46	0812757-13		PUSH ROD-SLIDE RELEASE	1	
			ATTACHING PARTS		
-47	MS20392-1C13		PIN	1	
-48	AN960-4L		WASHER	1	
	MS24665-132		PIN-COTTER	1	
			---*---		
-49	0812757-15		ARM ASSY-SEAT ADJUSTMENT PIVOT	1	
			ATTACHING PARTS		
-50	AN3-12A		BOLT	1	
-51	0812757-8		SPACER	1	
-52	AN960-10		WASHER	1	
-53	MS21044N3		NUT	1	
			---*---		
-54	0812115-2		PIN-SEAT STOP	1	
			ATTACHING PARTS		
-55	MS20392-1C13		PIN	1	
-56	AN960-4L		WASHER	1	
	MS24665-132		PIN-COTTER	1	
			---*---		
-57	0812200-128		GUIDE ASSY-SEAT STOP PIN	1	
			ATTACHING PARTS		
-58	AN3-6A		BOLT	2	
-59	0812757-8		SPACER	1	
-60	MS21044N3		NUT	2	
			---*---		
-61	0310196-4		SPRING	1	
-62	0812745-2		END STOP-AFT	2	
			ATTACHING PARTS		
-63	MS27039-0809		SCREW	4	
-64	MS21042-08		NUT	4	
			---*---		
			SEAT BELT INSTL	NP	
-65	CM4009	a	BELT ASSY-SEAT	1	
			ATTACHING PARTS		
-66	AN4C7		BOLT	2	
-67	AN960C416		WASHER	4	
-68	NAS43HT4-8		SPACER	2	
-69	MS21044N4		NUT	2	
			---*---		
-70	CM4010	a	STRAP-SHOULDER	1	
			ATTACHING PARTS		
-71	MS27039-4-11		SCREW	2	
-72	NAS43HT4-13		SPACER	2	
-73	0812978-1		WASHER	2	
-74	MS21069-4		NUTPLATE	1	
			---*---		

CONTINUED

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
53		a WHEN ORDERING THIS PART THE ORDER MUST BE ACCOMPANIED BY THE COMPLETE FINISH & TRIM PLATE NUMBER AND AIRCRAFT SERIAL NUMBER A---340-0001 THRU 340-0008 B---340-0009 THRU 340-0220 C---340-0151 THRU 340-0220 D---340-0001 THRU 340-0150 E---340-0001 THRU 340-0063 F---340-0064 THRU 340-0150 G---340-0064 THRU 340-0220 H---340-0001 THRU 340-0220		

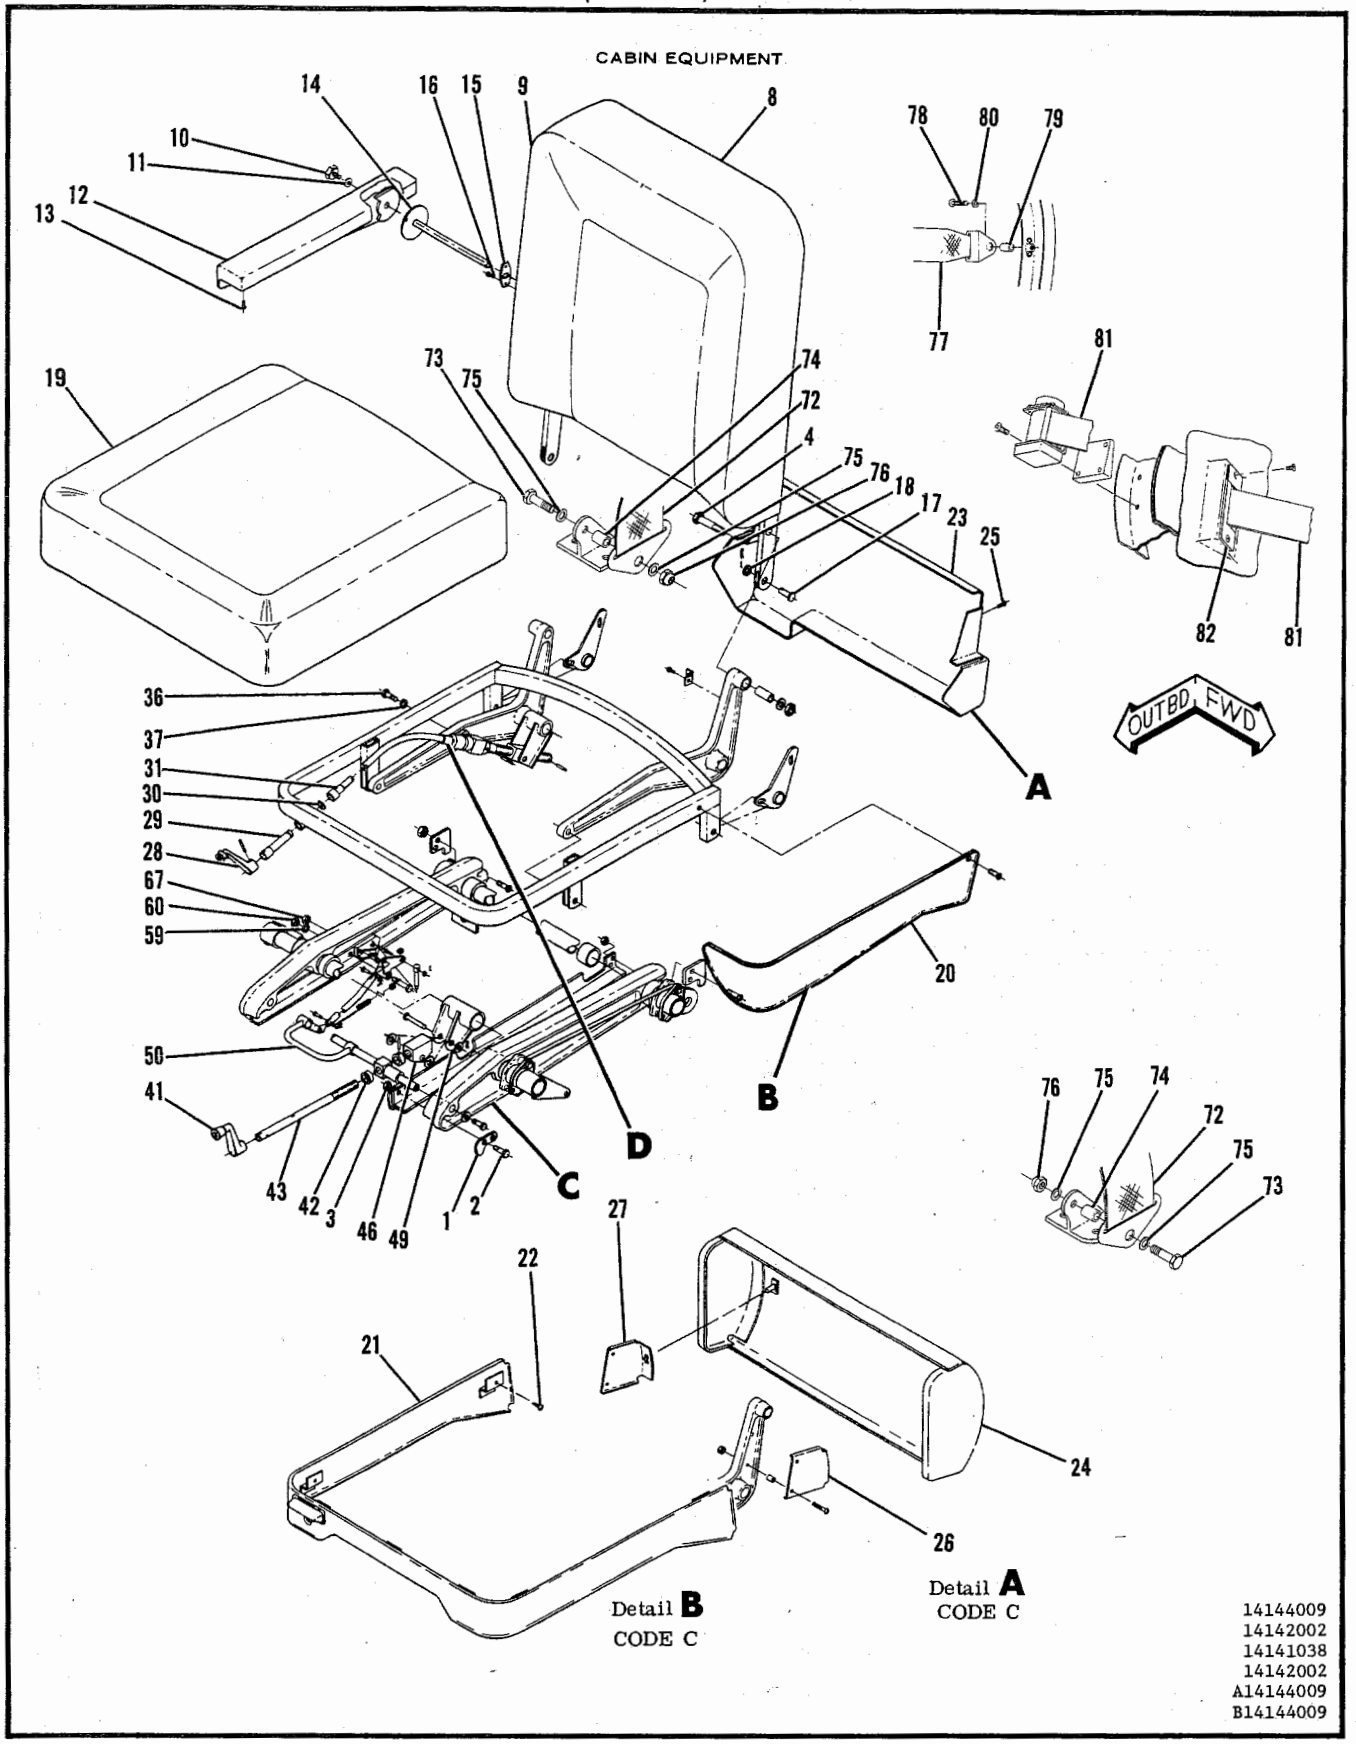

Figure 54. Pilot and Copilot Manually Adjustable Seat Installation (Sheet 1 of 2)

CABIN EQUIPMENT

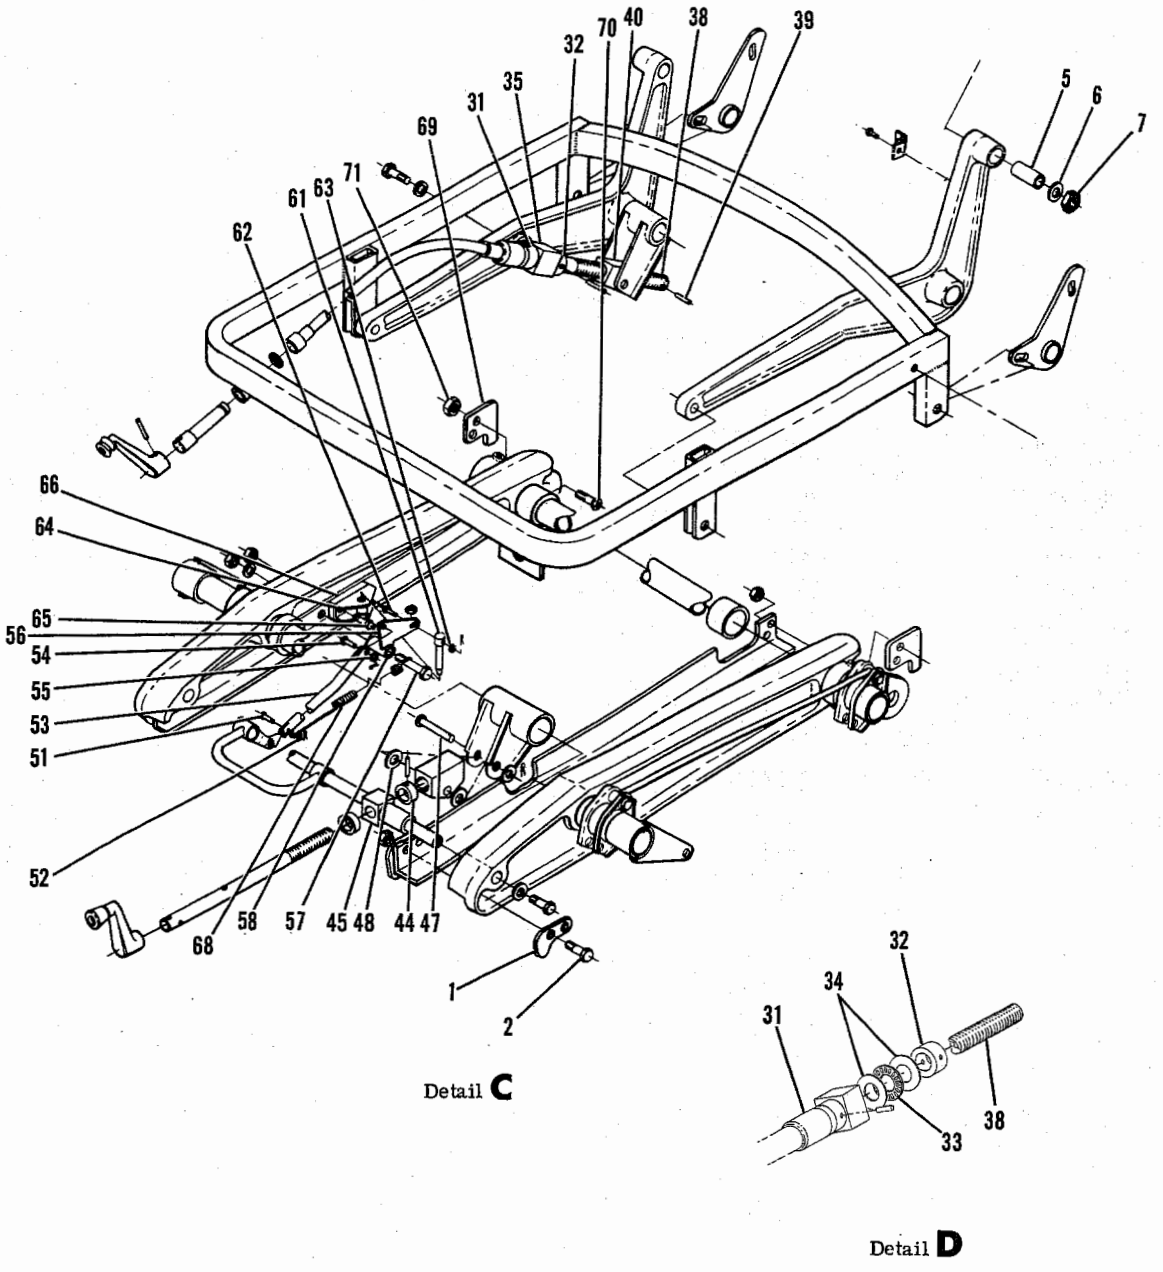

C14144009
D14141013

Figure 54. Pilot and Copilot Manually Adjustable Seat Installation (Sheet 2)

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
54 -			PILOT AND COPILOT MANUALLY ADJUSTABLE SEAT INSTALLATION	NP	A
	0812780-7		. SEAT ASSY-PILOT	1	F
	0812780-15		. SEAT ASSY-PILOT	1	G
	0812780-8		. SEAT ASSY-COPILOT	1	F
	0812780-16		. SEAT ASSY-COPILOT	1	G
			ATTACHING PARTS		
-1	5114554-1		. STOP-END	2	
-2	AN3-5A		. BOLT	4	
-3	MS21042-3		. NUT	4	
			---*---		
	0812730-59	@	. . BACK ASSY-PILOT UPHOLSTERED	1	F
	0812730-67	@	. . BACK ASSY-PILOT UPHOLSTERED	1	G
	0812730-60	@	. . BACK ASSY-COPILOT UPHOLSTERED	1	F
	0812730-68	@	. . BACK ASSY-COPILOT UPHOLSTERED	1	G
			ATTACHING PARTS		
-4	AN3-20A		. . BOLT	2	
-5	0812755-2		. . SPACER	2	
-6	AN960-10L		. . WASHER	2	
-7	MS21042-3		. . NUT	2	
			---*---		
-8	0812730-61	@	. . . COVER ASSY-SEAT BACK PILOT & COPILOT	2	F
	0812730-70	@	. . . COVER ASSY-SEAT BACK PILOT & COPILOT	2	G
-9	5619232-19	@	. . . COVER ASSY-SEAT BACK PILOT & COPILOT	2	B
	5319156-14	@	. . . COVER ASSY	2	G
	5619232-29	@	. . . COVER ASSY-SEAT BACK PILOT & COPILOT	2	H
	0812730-17	@	. . . ARMREST ASSY-PILOT SEAT	1	F
	5319158-1	@	. . . ARMREST ASSY-PILOT SEAT	1	G
	0812730-16	@	. . . ARMREST ASSY-COPILOT SEAT	1	F
	5319158-2	@	. . . ARMREST ASSY-COPILOT SEAT	1	G
			ATTACHING PARTS		
-10	5314537-1		. . . BOLT	1	F
	MS27039C1-06		. . . SCREW	4	F
-11	AN970-3		. . . WASHER	1	F
	MS35333-39		. . . WASHER	4	G
	MS35675-1		. . . PIN	2	G
			---*---		
-12	0812809-11		. . . . COVER-ARMREST PILOT SEAT	1	F
	5319158-5		. . . . COVER-ARMREST PILOT SEAT	1	G
	0812809-12		. . . . COVER-ARMREST COPILOT SEAT	1	F
	5319158-6		. . . . COVER-ARMREST COPILOT SEAT	1	G
			ATTACHING PARTS		
-13	NAS514P632-8		. . . . SCREW	4	
			---*---		
-14	0812224-5		. . . STOP ASSY-ARMREST	1	F
	5319161-9		. . . ROD ASSY-ARMREST WEU 5319161-12	1	L
	5319161-12		. . . ROD ASSY-ARMREST	1	M
	AN565A832F3		. . . SET SCREW USED WITH 5319161-12	1	M
-15	0812966-1		. . . ESCUTCHEON PLATE-ARMREST	1	J
	5319020-1		. . . ESCUTCHEON PLATE-ARMREST	1	K
			ATTACHING PARTS		
-16	S1021A4-8C		. . . SCREW	2	
			---*---		
-17	MS20392-2C17		. . . PIN-SEAT BACK STOP	2	
-18	AN960-10L		. . . WASHER	2	
	MS24665-132		. . . PIN-COTTER	2	
	0812730-56		. . BOTTOM ASSY-LH & RH UPHOLSTERED	2	
-19	0812730-45	@	. . . COVER	1	
-20	0812751-7	@	. . . SKIRT-LH	1	B
	0812751-6	@	. . . SKIRT-RH	1	B
-21	0812786-1	@	. . . SKIRT FRONT & SIDE FSO 0812786-15	1	D
	0812786-15	@	. . . SKIRT FRONT & SIDE	1	E
			ATTACHING PARTS		
-22	S1021Z4-8C		. . . SCREW	AR	
			---*---		
-23	5119299-1	@	. . . SKIRT-AFT	1	B
-24	0812785-1	@	. . . SKIRT-AFT		C
			ATTACHING PARTS		
-25	S1021Z4-8C		. . . SCREW	AR	
			---*---		
-26	0812787-1		. . . BRACKET ASSY-LH	1	C
-27	0812787-2		. . . BRACKET ASSY-RH		C
			ATTACHING PARTS		
	MS35206-337		. . . SCREW	2	
	NAS43DD3-24		. . . SPACER	2	
	MS21042L3		. . . NUT	2	
			---*---		
-28	0514036-1		. . . HANDLE	1	
			ATTACHING PARTS		
	NAS561P4-12		. . . PIN		
			---*---		
	0812732-8		. . . SEAT BASE ASSY	1	B
	0812732-10		. . . SEAT BASE ASSY	1	C
-29	0812746-1		. . . . SHAFT	1	
-30	MS16624-1035		. . . . SNAP RING	1	
-31	3X834-12		. . . . SHAFT-FLEXIBLE	1	
-32	1200138-1		. . . . COLLAR	2	
			ATTACHING PARTS		
	NAS561P4-10		. . . . PIN	2	
			---*---		
-33	S2013-3		. . . . BEARING	1	
-34	S2014-3		. . . . RACE	2	
-35	0812743-9		. . . . BLOCK-BEARING	1	
			ATTACHING PARTS		
-36	NAS1223-1L		. . . . BOLT	1	
-37	AN960-10L		. . . . WASHER	1	
			----*----		
-38	0812742-7		. . . . SCREW ASSY	1	
-39	NAS561P4-8		. . . . PIN	1	
-40	1200139-1		. . . . NUT	1	
			CONTINUED		

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
54 -41	1200159-3		HANDLE ASSY	1	
			ATTACHING PARTS		
	NAS561P5-12		PIN	2	
			---*---		
-42	NAS43DD8-16		SPACER	1	
-43	0812742-1		SCREW ASSY	1	
-44	1200138-2		COLLAR	1	
			ATTACHING PARTS		
	NAS561P5-12		PIN	1	
			---*---		
-45	0812743-5		BLOCK ASSY-BEARING	1	
-46	0514037-1		NUT	1	
			ATTACHING PARTS		
-47	MS20392-2C35		PIN	1	
-48	AN960-10L		WASHER	1	
-49	AN960-10		WASHER	2	
	MS24665-132		PIN-COTTER	1	
			---*---		
-50	0812757-2		HANDLE ASSY	1	
			ATTACHING PARTS		
-51	MS20392-1C13		PIN	1	
-52	AN960-4L		WASHER	1	
	MS24665-132		PIN-COTTER	1	
			---*---		
-53	0812757-13		ROD-SLIDE RELEASE PUSH	1	
			ATTACHING PARTS		
-54	MS20392-1C13		PIN	1	
-55	AN960-4L		WASHER	1	
	MS24665-132		PIN-COTTER	1	
			---*---		
-56	0812757-15		ARM ASSY-SEAT ADJUSTMENT PIVOT	1	
			ATTACHING PARTS		
-57	AN3-12A		BOLT	1	
-58	0812757-8		SPACER	1	
-59	AN960-10		WASHER	1	
-60	MS21044N3		NUT	1	
			---*---		
-61	0812115-2		PIN-SEAT STOP	1	
			ATTACHING PARTS		
-62	MS20392-1C13		PIN	1	
-63	AN960-4L		WASHER	1	
	MS24665-132		PIN-COTTER	1	
			---*---		
-64	0812200-128		GUIDE ASSY-SEAT STOP PIN	1	
			ATTACHING PARTS		
-65	AN3-6A		BOLT	2	
-66	0812757-8		SPACER	1	
-67	MS21044N3		NUT	2	
			---*---		
-68	0310196-4		SPRING	1	
-69	0812745-2		STOP-END AFT	2	
			ATTACHING PARTS		
-70	MS27039-0809		SCREW	4	
-71	MS21042-08		NUT	4	
			---*---		
-72	CM4009	@	BELT ASSY-SEAT	2	
			ATTACHING PARTS		
-73	AN4C7		BOLT	2	
-74	NAS43HT4-8		SPACER	2	
-75	0812978-1		WASHER	2	
-76	MS21044N4		NUT	2	
			---*---		
-77	CM4010	@	STRAP-SHOULDER	2	
			ATTACHING PARTS		
-78	MS27039-4-11		SCREW	2	
-79	NAS43HT4-13		SPACER	2	
-80	0812978-1		WASHER	2	
			---*---		
-81	CM4020	@	INERTIA REEL ASSY INCLUDING STRAP	2	C
			ATTACHING PARTS		
	MS24693S277		SCREW	3	C
	5300948-3		SPACER-BLOCK	1	C
	CM2024-1		WASHER	3	C
	CM2023-1		NUT	3	C
			---*---		
-82	0811296-1		SEGMENT-GUIDE	2	C
			ATTACHING PARTS		
	S1022Z6-8C		SCREW	2	C
	NAS395-4-3		NUT	2	C
			---*---		

@---WHEN ORDERING THIS PART THE ORDER MUST BE ACCOMPANIED BY THE COMPLETE FINISH AND TRIM PLATE NUMBER AND AIRCRAFT SERIAL NUMBER

A---340-0221 & ON
B---340-0221 THRU 340-0300
C---340-0301 & ON
D---340-0301 THRU 340-0313
E---340-0314 & ON
F---340-0221 TO 340A0001
G---340A0001 & ON
H---340-0301 TO 340A0001
J---340-0221 THRU 340A0058
K---340A0059 & ON
L---340A0001 THRU 340A0040
M---340A0041 & ON

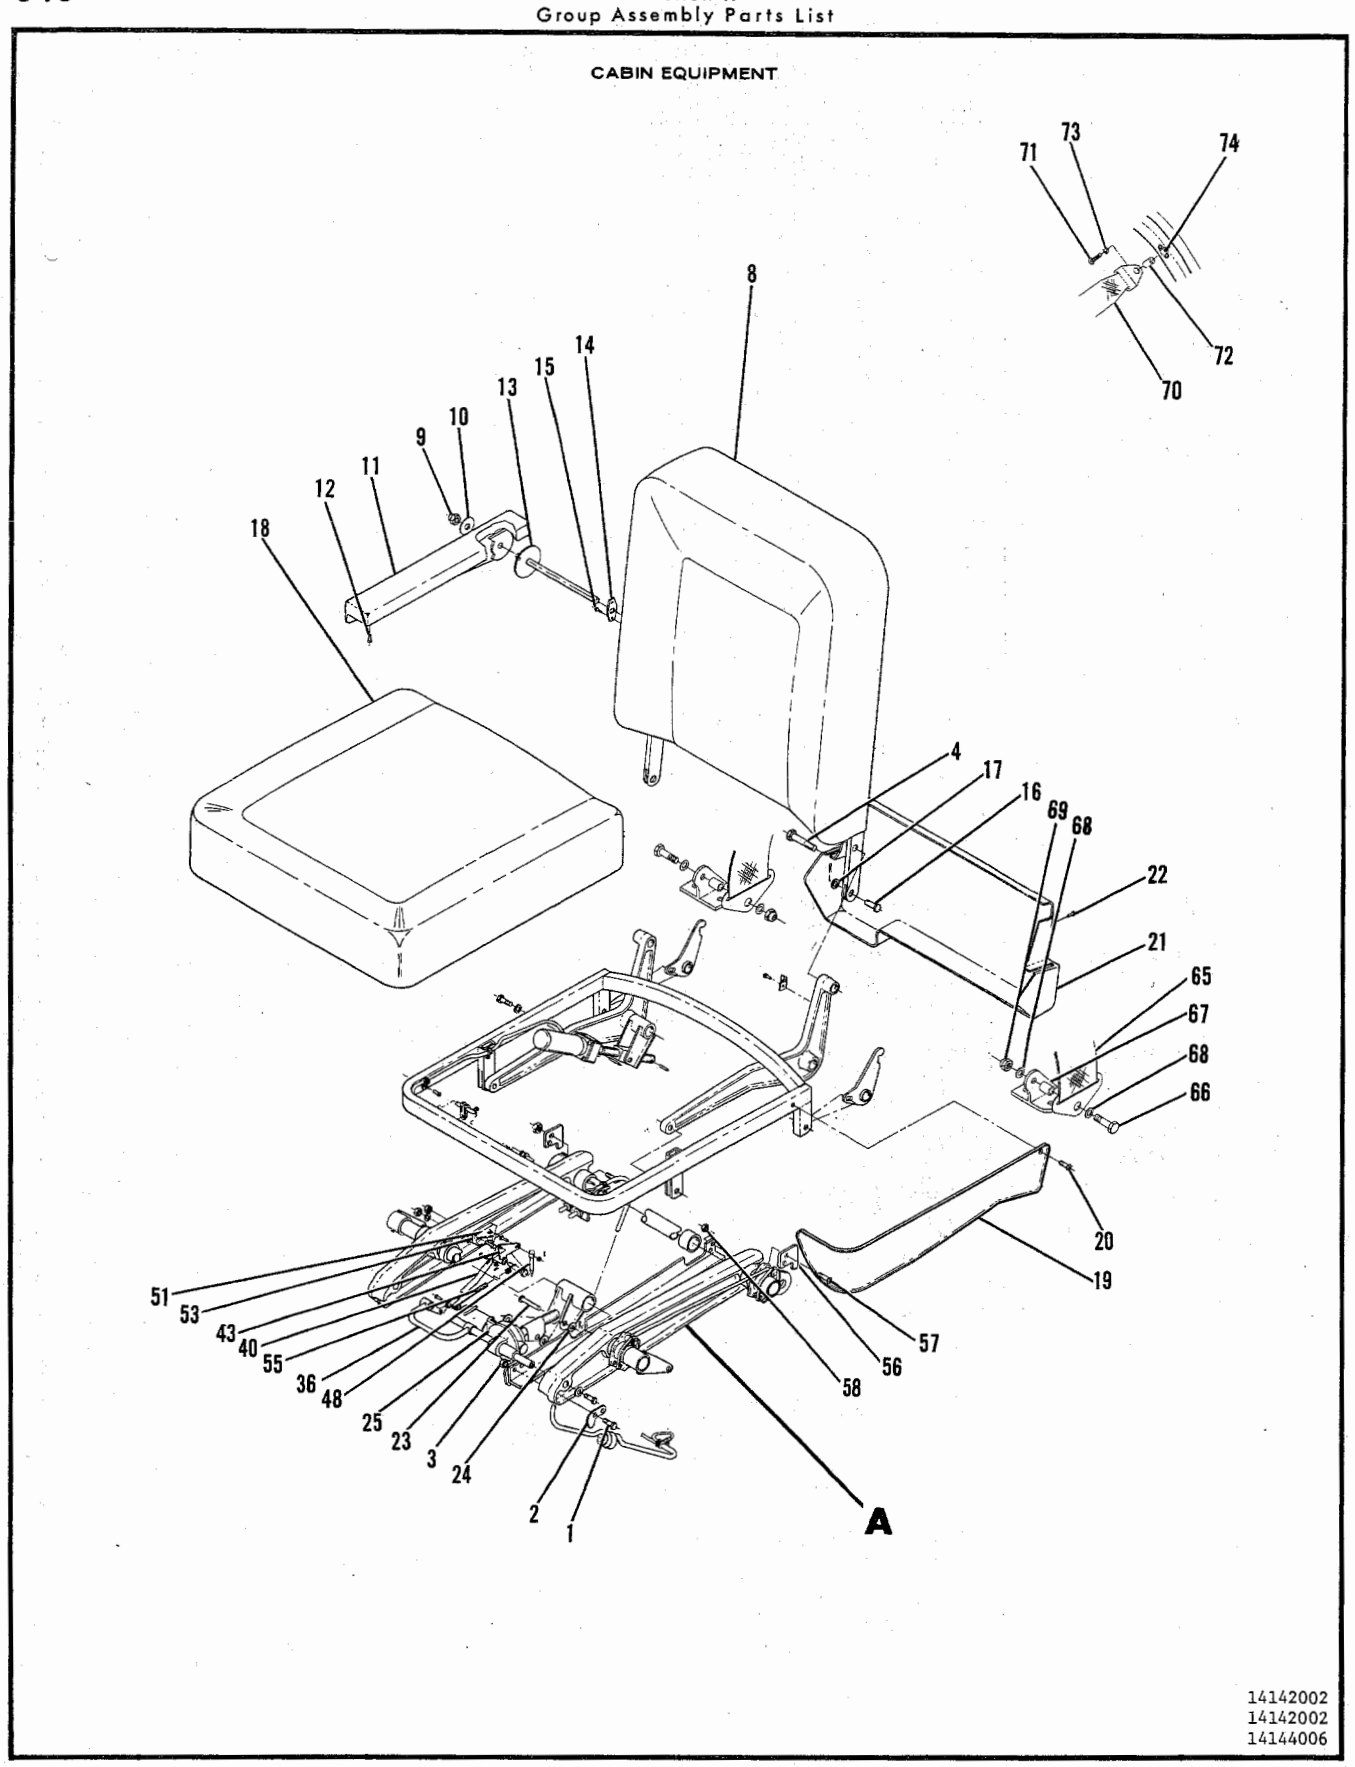

Figure 55. Pilot and Copilot Electrically Adjusted Seat Installation (Sheet 1 of 2)

CABIN EQUIPMENT

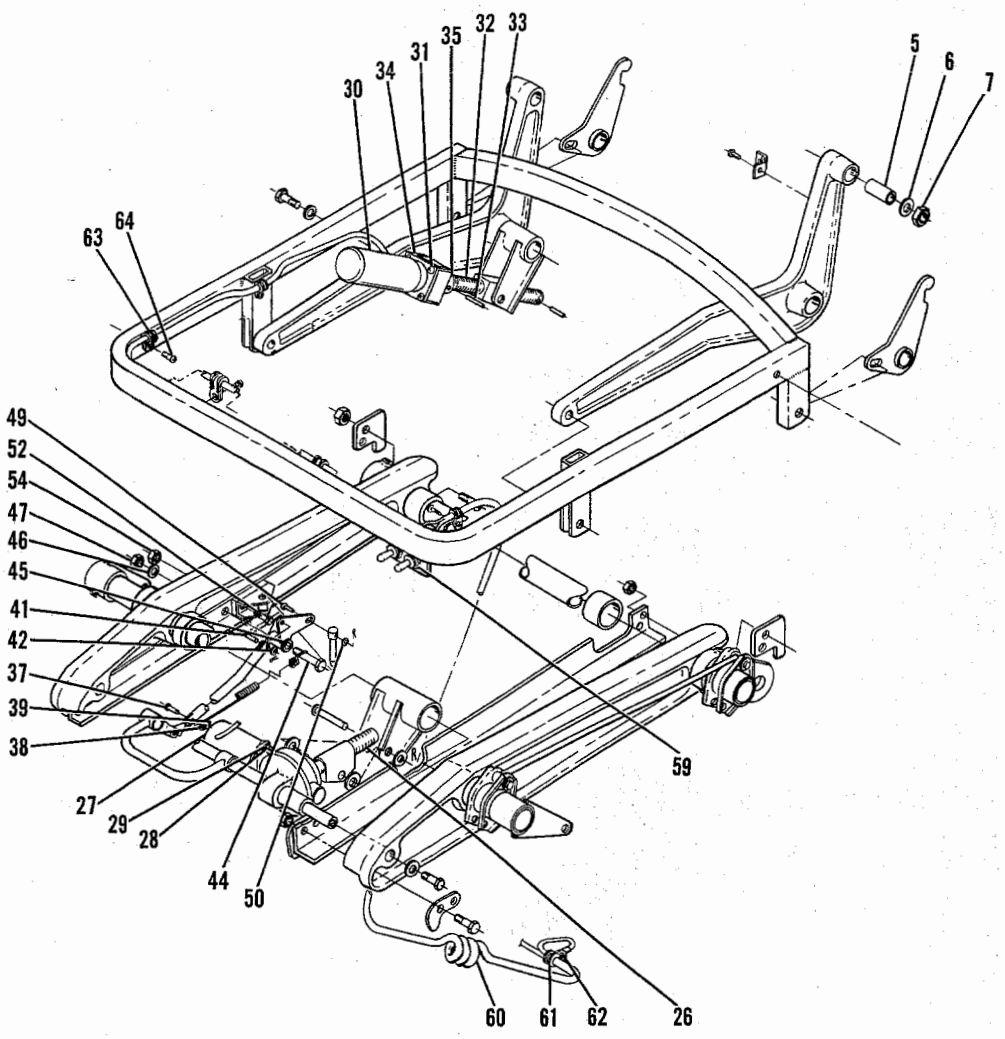

Detail **A**

A14144006

Figure 55. Pilot and Copilot Electrically Adjusted Seat Installation (Sheet 2)

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
55 -			PILOT AND COPILOT ELECTRICALLY ADJUSTED SEAT INSTALLATION	NP	F
	0812760-21	a	. SEAT ASSY-LH	1	B
	0812760-29	aa	. SEAT ASSY-LH	1	C
	0812760-35	aa	. SEAT ASSY-LH	1	A
	0812760-22	aa	. SEAT ASSY-RH	1	B
	0812760-28	aa	. SEAT ASSY-RH	1	C
	0812760-34	a	. SEAT ASSY-RH	1	A
			ATTACHING PARTS		
-1	AN3-5A		. BOLT	4	
-2	0812745-1		. END STOP	2	
-3	MS21042-3		. NUT	4	
			---*---		
	0812730-35	a	. . BACK ASSY-LH UPHOLSTERED	1	B
	0812730-53	aa	. . BACK ASSY-LH UPHOLSTERED	1	C
	0812730-59	aa	. . BACK ASSY-LH UPHOLSTERED	1	A
	0812730-36	aa	. . BACK ASSY-RH UPHOLSTERED	1	B
	0812730-54	aa	. . BACK ASSY-RH UPHOLSTERED	1	C
	0812730-60	a	. . BACK ASSY-RH UPHOLSTERED	1	A
			ATTACHING PARTS		
-4	AN3-17A		. . BOLT	2	B
	AN3-20A		. . BOLT	2	D
-5	0812755-1		. . SPACER	2	B
	0812755-2		. . SPACER	2	D
-6	AN960-10L		. . WASHER	2	
-7	MS21042-3		. . NUT	2	
			---*---		
-8	0812730-41	a	. . . COVER-SEAT BACK LH & RH	2	E
	0812730-61	aa	. . . COVER ASSY-SEAT BACK LH & RH	2	A
	5619232-11	aa	. . . COVER-SEAT BACK LH & RH	1	E
	5619232-19	aa	. . . COVER-SEAT BACK LH & RH	1	A
	0812730-17	aa	. . . ARMREST ASSY-LH SEAT	1	
	0812730-16	a	. . . ARMREST ASSY-RH SEAT	1	
			ATTACHING PARTS		
-9	0812977-1		. . . NUT	1	E
	5314537-1		. . . BOLT	1	A
-10	0812978-1		. . . WASHER	1	E
	AN970-3		. . . WASHER	1	A
			---*---		
-11	0812809-11	a	. . . . COVER-ARMREST LH SEAT	1	
	0812809-12	a	. . . . COVER-ARMREST RH SEAT	1	
			ATTACHING PARTS		
-12	S1022Z6-6		. . . . SCREW	4	
			---*---		
-13	0812224-1		. . . STOP ASSY-ARMREST	1	E
	0812224-5		. . . STOP ASSY-ARMREST	1	A
-14	0812966-1		. . . ESCUTCHEON PLATE-ARMREST	1	
			ATTACHING PARTS		
-15	S1021A4-8C		. . . SCREW	2	
			---*---		
-16	MS20392-2C11		. . . PIN-SEAT BACK STOP	2	B
	MS20392-2C17		. . . PIN-SEAT BACK STOP	2	D
-17	AN960-10L		. . . WASHER	2	
	MS24665-132		. . . PIN-COTTER	2	
	0812760-25	a	. . BOTTOM ASSY-LH & RH UPHOLSTERED	2	B
	0812760-32	aa	. . BOTTOM ASSY-LH & RH UPHOLSTERED	1	D
-18	0812730-45	aa	. . . COVER-SEAT BOTTOM	1	
-19	0812751-8	aa	. . . SKIRT-LH	1	
	0812751-9	a	. . . SKIRT-RH	1	
			ATTACHING PARTS		
-20	S1021Z4-8C		. . . SCREW	4	
			---*---		
-21	0812751-5	a	. . . SKIRT-AFT	1	
			ATTACHING PARTS		
-22	S1021Z4-8C		. . . SCREW	4	
			---*---		
	0812756-1		. . . CLIP	4	
	0812732-3		. . . SEAT BASE ASSY	1	B
	0812732-7		. . . SEAT BASE ASSY	1	D
	0812764-2		. . . . DRIVE-POWERED VERTICAL ADJUST	1	
			ATTACHING PARTS		
-23	MS20392-2C35		. . . . PIN	1	
-24	AN960-10L		. . . . WASHER	1	
	MS24665-132		. . . . PIN-COTTER	1	
			---*---		
	9910086-3		. . . . . ACTUATOR ASSY-VERTICAL ADJUST	1	
-25	9910086-2		. . . . . TRANSMISSION	1	
-26	9910087-6		. . . . . SCREW ASSY	1	
-27	9510090-1		. . . . . MOTOR-VERTICAL ADJUST	1	
			ATTACHING PARTS		
-28	MS21042-3		. . . . . NUT	2	
-29	AN960-10L		. . . . . WASHER	2	
			---*---		
	0812765-1		. . . . DRIVE-POWERED RECLINE ADJUST	1	
-30	9510091-1		. . . . . MOTOR	1	
			ATTACHING PARTS		
-31	MS35265-30		. . . . . SCREW	4	
			---*---		

CONTINUED

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
55 -32	9910087-1		SCREW ASSY	1	
			ATTACHING PARTS		
-33	NAS561P4-11		PIN	1	
			---*---		
-34	0812743-8		BLOCK-BEARING	1	
-35	0812767-1		BEARING	1	
-36	0812757-2		HANDLE ASSY	1	
			ATTACHING PARTS		
-37	MS20392-1C13		PIN	1	
-38	AN960-4L		WASHER	1	
-39	MS24615-132		PIN-COTTER	1	
			---*---		
-40	0812757-13		PUSH ROD-SLIDE RELEASE	1	
			ATTACHING PARTS		
-41	MS20392-1C13		PIN	1	
-42	AN960-4L		WASHER	1	
	MS24665-132		PIN-COTTER	1	
			---*---		
-43	0812757-15		ARM ASSY-SEAT ADJUSTMENT PIVOT	1	
			ATTACHING PARTS		
-44	AN3-12A		BOLT	1	
-45	0812757-8		SPACER	1	
-46	AN960-10		WASHER	1	
-47	MS21044N3		NUT	1	
			---*---		
-48	0812115-2		PIN-SEAT STOP	1	
			ATTACHING PARTS		
-49	MS20392-1C13		PIN	1	
-50	AN960-4L		WASHER	1	
	MS24665-132		PIN-COTTER	1	
			---*---		
-51	0812200-128		GUIDE ASSY-SEAT STOP PIN	1	
			ATTACHING PARTS		
-52	AN3-6A		BOLT	2	
-53	0812757-5		SPACER	2	
-54	MS21044N3		NUT	2	
			---*---		
-55	0310196-4		SPRING	1	
-56	0812745-2		END STOP-AFT	2	
			ATTACHING PARTS		
-57	MS27039-0809		SCREW	4	
-58	MS21042-08		NUT	4	
			---*---		
-59	MS35059-27		SWITCH	2	
-60	5618111-2		CORD-POWER	1	
-61	MS21919DG7		CLAMP	1	
			ATTACHING PARTS		
-62	NAS220-7		SCREW	1	
			---*---		
-63	MS21919DG3		CLAMP	3	
			ATTACHING PARTS		
-64	S1021Z8-6		SCREW	3	
			---*---		
			SEAT BELT INSTALLATION	NP	
-65	CM4009	a	BELT ASSY-SEAT	1	
			ATTACHING PARTS		
-66	AN4C7		BOLT	2	
-67	NAS43HT4-8		SPACER	2	
-68	AN960C416		WASHER	4	
-69	MS21044N4		NUT	2	
			---*---		
-70	CM4010	a	STRAP-SHOULDER	1	
			ATTACHING PARTS		
-71	MS27039-4-11		SCREW	2	
-72	NAS43HT4-13		SPACER	2	
-73	0812978-1		WASHER	2	
-74	MS21069-4		NUTPLATE	1	
			---*---		

a WHEN ORDERING THIS PART THE ORDER MUST BE ACCOMPANIED BY THE COMPLETE FINISH & TRIM PLATE NUMBER AND AIRCRAFT SERIAL NUMBER

A---340-0151 THRU 340-0220
B---340-0001 THRU 340-0063
C---340-0064 THRU 340-0150
D---340-0064 THRU 340-0220
E---340-0001 THRU 340-0150
F---340-0001 THRU 340-0220

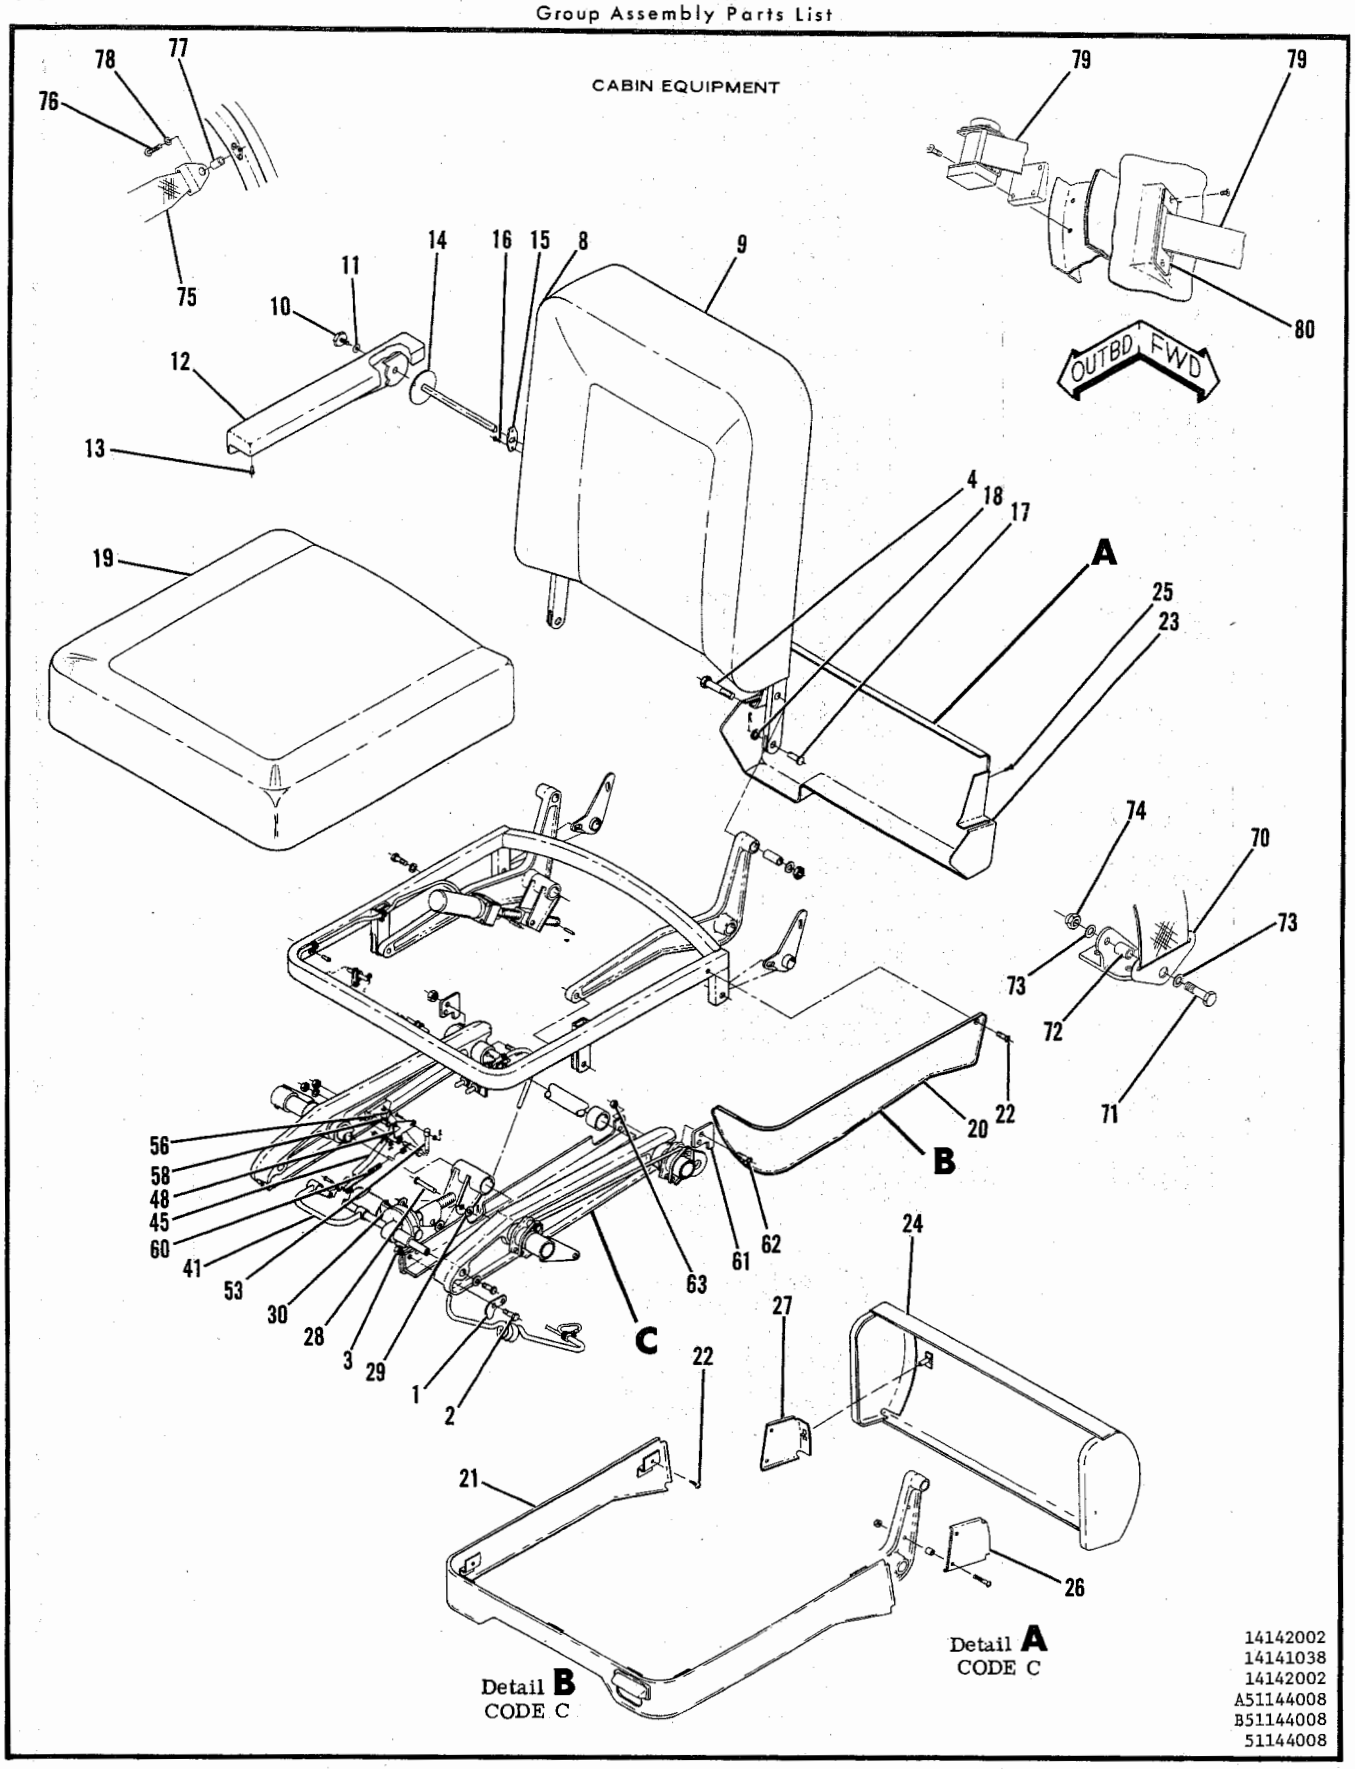

Figure 56. Pilot and Copilot Electrically Adjusted Seat Installation (Sheet 1 of 2)

CABIN EQUIPMENT

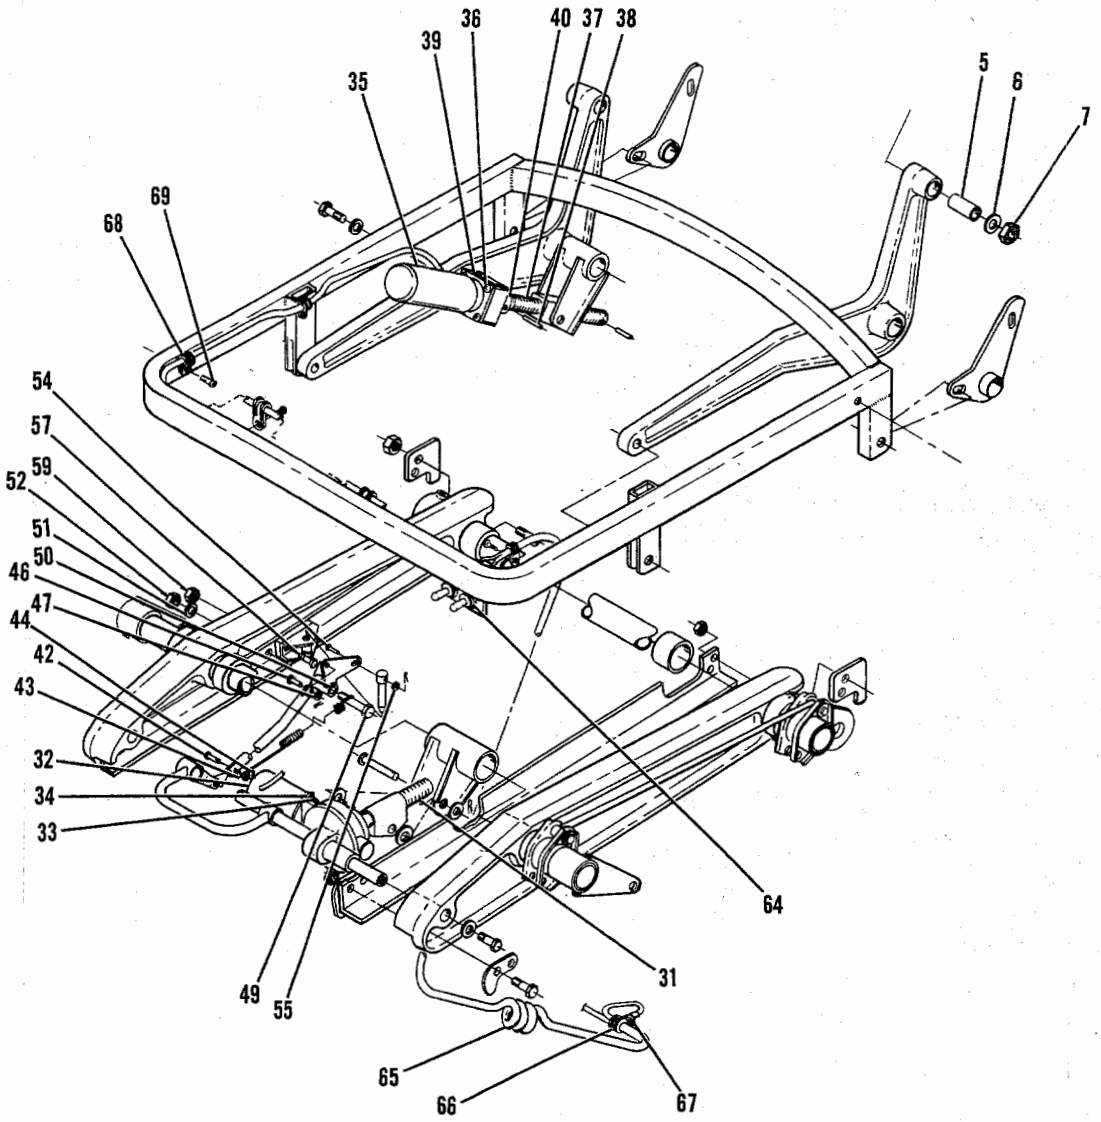

Detail **C**

C51144008

Figure 56. Pilot and Copilot Electrically Adjusted Seat Installation (Sheet 2)

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
56 -			PILOT AND COPILOT ELECTRICALLY ADJUSTED SEAT INSTALLATION	NP	A
	0812781-9		. SEAT ASSY-PILOT	1	F
	0812781-15		. SEAT ASSY-PILOT	1	G
	0812781-10		. SEAT ASSY-COPILOT	1	F
	0812781-16		. SEAT ASSY-COPILOT	1	G
			ATTACHING PARTS		
-1	5114554-1		. STOP-END	2	
-2	AN3-5A		. BOLT	4	
-3	MS21042-3		. NUT	4	
			---*---		
	0812730-59	@	. . BACK ASSY-PILOT UPHOLSTERED	1	F
	0812730-67	@@	. . BACK ASSY-PILOT UPHOLSTERED	1	G
	0812730-60	@@	. . BACK ASSY-COPILOT UPHOLSTERED	1	F
	0812730-68	@	. . BACK ASSY-COPILOT UPHOLSTERED	1	G
			ATTACHING PARTS		
-4	AN3-20A		. . BOLT	2	
-5	0812755-2		. . SPACER	2	
-6	AN960-10L		. . WASHER	2	
-7	MS21042-3		. . NUT	2	
			---*---		
-8	0812730-61	@	. . . COVER ASSY-SEAT BACK PILOT & COPILOT	2	F
	0812730-70	@@	. . . COVER ASSY-SEAT BACK PILOT & COPILOT	2	G
-9	5619232-19	@	. . . COVER ASSY-SEAT BACK PILOT & COPILOT	2	B
	5619232-29	@@	. . . COVER ASSY-SEAT BACK PILOT & COPILOT	2	H
	5319156-14	@@	. . . COVER ASSY-SEAT BACK PILOT & COPILOT	2	G
	0812730-17	@@	. . . ARMREST ASSY-PILOT SEAT	1	F
	5319158-1	@@	. . . ARMREST ASSY-PILOT SEAT	1	G
	0812730-16	@@	. . . ARMREST ASSY-COPILOT SEAT	1	F
	5319158-2	@	. . . ARMREST ASSY-COPILOT SEAT	1	G
			ATTACHING PARTS		
-10	5314537-1		. . . BOLT	1	F
	MS27039C1-06		. . . SCREW	1	G
-11	AN970-3		. . . WASHER	1	F
	MS35333-39		. . . WASHER	1	G
	MS35675-1		. . . PIN	1	G
			---*---		
-12	0812809-11		. . . . COVER-ARMREST PILOT SEAT	1	F
	5319158-5		. . . . COVER-ARMREST PILOT SEAT	1	G
	0812809-12		. . . . COVER-ARMREST COPILOT SEAT	1	F
	5319158-6		. . . . COVER-ARMREST COPILOT SEAT	1	G
			ATTACHING PARTS		
-13	NAS514P632-8		. . . . SCREW	4	
			---*---		
-14	0812224-5		. . . STOP ASSY-ARMREST	1	F
	5319161-9		. . . ROD ASSY-ARMREST WEU 5319161-12	1	L
	5319161-12		. . . ROD ASSY-ARMREST	1	M
	AN565A832F3		. . . SET SCREW USED WITH 5319161-12	1	M
-15	0812966-1		. . . ESCUTCHEON PLATE-ARMREST	1	J
	5319020-1		. . . ESCUTCHEON PLATE-ARMREST	1	K
			ATTACHING PARTS		
-16	S1021A4-8C		. . . SCREW	2	
			---*---		
-17	MS20392-2C17		. . . PIN-SEAT BACK STOP	2	
-18	AN960-10L		. . . WASHER	2	
	MS24665-132		. . . PIN-COTTER	2	
	0812760-33		. . BOTTOM ASSY-LH & RH UPHOLSTERED	2	
-19	0812730-45	@@	. . . COVER-SEAT BOTTOM	1	
-20	0812751-8	@@	. . . SKIRT-LH	1	B
	0812751-9	@@	. . . SKIRT-RH	1	B
-21	0812786-3		. . . SKIRT FRONT & SIDE FSO 0812786-16	1	D
	0812786-16	@	. . . SKIRT FRONT & SIDE	1	E
			ATTACHING PARTS		
-22	S1021Z4-8C		. . . SCREW	AR	
			---*---		
-23	0812751-5	@	. . . SKIRT-AFT	1	B
-24	0812785-1	@	. . . SKIRT-AFT	1	C
			ATTACHING PARTS		
-25	S1021Z4-8C		. . . SCREW	AR	
			---*---		
-26	0812787-1		. . . BRACKET ASSY-LH	1	C
-27	0812787-2		. . . BRACKET ASSY-RH	1	C
			ATTACHING PARTS		
	MS35206-337		. . . SCREW	2	
	NAS43DD3-24		. . . SPACER	2	
	MS21042L3		. . . NUT	2	
			---*---		
	0812732-9		. . . SEAT BASE ASSY		B
	0812732-11		. . . SEAT BASE ASSY		C
	0812764-2		. . . . DRIVE-POWERED VERTICAL ADJUST	1	
			ATTACHING PARTS		
-28	MS20392-2C35		. . . . PIN	1	
-29	AN960-10L		. . . . WASHER	1	
	MS24665-132		. . . . PIN-COTTER	1	
			---*---		
	9910086-3		. . . . . ACTUATOR ASSY-VERTICAL ADJUST	1	
-30	9910086-2		. . . . . TRANSMISSION	1	
-31	9910087-6		. . . . . SCREW ASSY	1	
-32	9910090-1		. . . . . MOTOR-VERTICAL ADJUST	1	
			ATTACHING PARTS		
-33	MS21042-3		. . . . . NUT	2	
-34	AN960-10L		. . . . . WASHER	2	
			---*---		
	0812765-1		. . . . DRIVE-POWERED RECLINE ADJUST	1	
-35	9910091-1		. . . . . MOTOR	1	
			ATTACHING PARTS		
-36	MS35265-3C		. . . . . SCREW	4	
			---*---		

CONTINUED

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
56 -37	9910087-1	. . . . . SCREW ASSY	1	
		ATTACHING PARTS		
-38	NAS561P4-11	. . . . . PIN	1	
		---*---		
-39	0812743-8	. . . . . BLOCK-BEARING	1	
-40	0812767-1	. . . . . BEARING	1	
-41	0812757-2	. . . . HANDLE ASSY	1	
		ATTACHING PARTS		
-42	MS20392-1C13	. . . . PIN	1	
-43	AN960-4L	. . . . WASHER	1	
-44	MS24615-132	. . . . PIN-COTTER	1	
		---*---		
-45	0812757-13	. . . . ROD-PUSH SLIDE RELEASE	1	
		ATTACHING PARTS		
-46	MS20392-1C13	. . . . PIN	1	
-47	AN960-4L	. . . . WASHER	1	
	MS24665-132	. . . . PIN-COTTER	1	
		---*---		
-48	0812757-15	. . . . ARM ASSY-SEAT ADJUSTMENT PIVOT	1	
		ATTACHING PARTS		
-49	AN3-12A	. . . . BOLT	1	
-50	0812757-8	. . . . SPACER	1	
-51	AN960-10	. . . . WASHER	1	
-52	MS21044N3	. . . . NUT	1	
		---*---		
-53	0812115-2	. . . . PIN-SEAT STOP	1	
		ATTACHING PARTS		
-54	MS20392-1C13	. . . . PIN	1	
-55	AN960-4L	. . . . WASHER	1	
	MS24665-132	. . . . PIN-COTTER	1	
		---*---		
-56	0812200-128	. . . . GUIDE ASSY-SEAT STOP PIN	1	
		ATTACHING PARTS		
-57	AN3-6A	. . . . BOLT	2	
-58	0812757-5	. . . . SPACER	2	
-59	MS21044N3	. . . . NUT	2	
		---*---		
-60	0310196-4	. . . . SPRING	1	
-61	0812745-2	. . . . STOP-END AFT	2	
		ATTACHING PARTS		
-62	MS27039-0809	. . . . SCREW	4	
-63	MS21042-08	. . . . NUT	4	
		---*---		
-64	MS35059-27	. . SWITCH	2	
-65	5618111-2	. . CORD-POWER	1	
-66	MS21919DG7	. . CLAMP	1	
		ATTACHING PARTS		
-67	NAS220-7	. . SCREW	1	
		---*---		
-68	MS21919DG3	. . CLAMP	3	
		ATTACHING PARTS		
-69	S1021Z8-6	. . SCREW	3	
		---*---		
-70	CM4009 @	. BELT ASSY-SEAT	2	
		ATTACHING PARTS		
-71	AN4C7	. BOLT	2	
-72	NAS43HT4-8	. SPACER	2	
-73	AN960C416	. WASHER	4	
-74	MS21044N4	. NUT	2	
		---*---		
-75	CM4010	. STRAP-SHOULDER	2	
		ATTACHING PARTS		
-76	MS27039-4-11	. SCREW	2	
-77	NAS43HT4-13	. SPACER	2	
-78	0812978-1	. WASHER	2	
		---*---		
-79	CM4020 @	. INERTIA REEL ASSY INCLUDING STRAP	2	C
		ATTACHING PARTS		
	MS24693S277	. SCREW	3	C
	5300948-3	. SPACER-BLOCK	1	C
	CM2024-1	. WASHER	3	C
	CM2023-1	. NUT	3	C
		---*---		
-80	0811296-1	. SEGMENT-GUIDE	2	C
		ATTACHING PARTS		
	S1022Z6-8C	. SCREW	2	C
	NAS395-4-3	. NUT	2	C
		---*---		

@---WHEN ORDERING THIS PART THE ORDER MUST BE ACCOMPANIED BY THE COMPLETE FINISH AND TRIM PLATE NUMBER AND AIRCRAFT SERIAL NUMBER

A---340-0221 & ON
B---340-0221 THRU 340-0300
C---340-0301 & ON
D---340-0301 THRU 340-0313
E---340-0314 & ON
F---340-0221 TO 340A0001
G---340A0001 & ON
H---340-0301 TO 340A0001
J---340-0221 THRU 340A0058
K---340A0059 & ON
L---340A0001 THRU 340A0040
M---340A0041 & ON

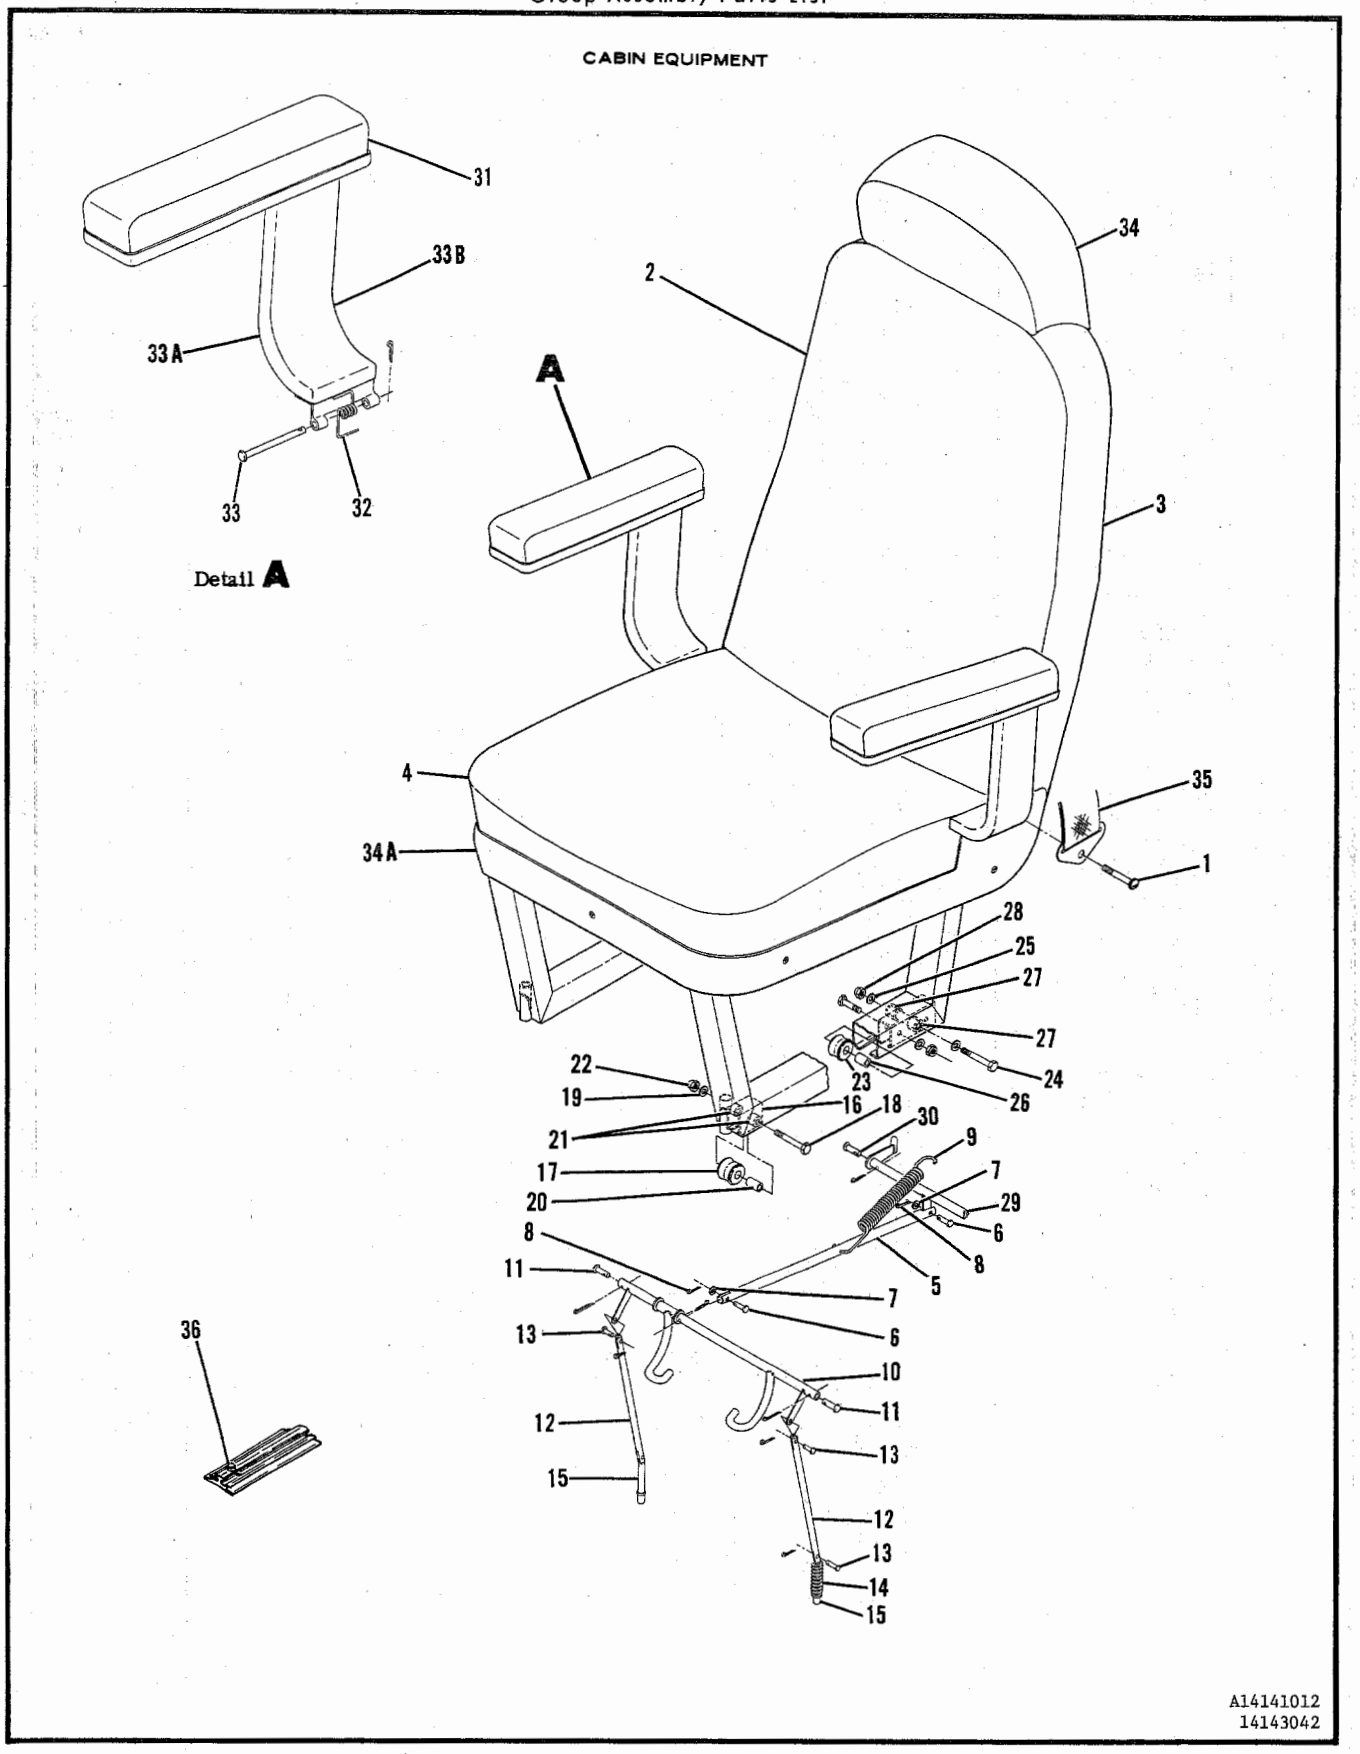

Figure 57. Passenger Forward Facing Seat Installation

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
57 -			PASSENGER FORWARD FACING SEAT INSTALLATION	NP	C
	5314510-1	@	. SEAT ASSY-LH	1	
	5314510-2	@	. SEAT ASSY-RH	1	
	5314510-11	@	. SEAT ASSY-LH AFT	1	
	5314510-5	@	. . BACK ASSY-LH & RH	2	
	5314510-12	@	. . BACK ASSY-LH AFT	1	
			ATTACHING PARTS		
-1	AN24-23A		. . BOLT	2	
	NAS43HT4-8		. . SPACER	2	
	NAS43HT4-56		. . SPACER	2	
	0812999-1		. . SPACER	2	
	0812998-1		. . SPRING	2	
	0812977-1		. . NUT	2	
			---*---		
-2	5314510-6	@	. . . COVER ASSY-SEAT BACK	1	
-3	5619102-1	@	. . . COVER ASSY-SEAT BACK	1	A
	5619102-9	@	. . . COVER ASSY-SEAT BACK	1	B
	5619102-6	@	. . . COVER ASSY-SEAT BACK WITH ARMREST STOWAGE	1	A
	5619102-11	@	. . . COVER ASSY-SEAT BACK WITH ARMREST STOWAGE	1	B
	5314510-3	@	. . BOTTOM ASSY-LH UPHOLSTERED	1	
	5314510-4	@	. . BOTTOM ASSY-RH UPHOLSTERED	1	
-4	5314510-7	@	. . . COVER-SEAT BOTTOM LH & RH	2	
-5	5314512-38		. . . LINKAGE-SEAT ADJUST	1	
			ATTACHING PARTS		
-6	MS20392-1C11		. . . PIN	2	
-7	AN960-4L		. . . WASHER	2	
-8	MS24665-130		. . . PIN-COTTER	2	
			---*---		
-9	0310196-4		. . . SPRING	1	
-10	5314512-20		. . . RELEASE ASSY	1	
			ATTACHING PARTS		
-11	MS20392-3C11		. . . PIN	2	
	MS24665-208		. . . PIN-COTTER	2	
			---*---		
-12	5314512-30		. . . ROD	1	
			ATTACHING PARTS		
-13	MS20392-1C9		. . . PIN	2	
	MS24665-130		. . . PIN-COTTER	2	
			---*---		
-14	LC042E15		. . . SPRING LSCI	2	
-15	5314512-37		. . . PIN-TRACK STOP	2	
-16	0812938-2		. . . GUIDE-ROLLER	2	
-17	CM2941-1		. . . ROLLER FWD	2	
			ATTACHING PARTS		
-18	AN23-28A		. . . BOLT	1	
-19	AN960-10L		. . . WASHER	1	
-20	5119208-1		. . . BUSHING	1	
-21	NAS43DD5-20		. . . SPACER	2	
-22	CM3224-3		. . . CAPNUT	1	
			---*---		
-23	5119204-3		. . . ROLLER ASSY REAR	2	
			ATTACHING PARTS		
-24	AN24-28A		. . . BOLT	1	
-25	AN960-416L		. . . WASHER	1	
-26	5119208-2		. . . BUSHING	1	
-27	NAS43DD6-20		. . . SPACER	2	
-28	CM3224-4		. . . CAPNUT	1	
			---*---		
-29	5014005-6		. . . TUBE ASSY-TORQUE LH	1	
	5014005-8		. . . TUBE ASSY-TORQUE RH	1	
			ATTACHING PARTS		
-30	MS20392-4C15		. . . PIN	1	
	MS24665-283		. . . PIN-COTTER	1	
			---*---		
-31	5314518-1	@	. . ARMREST ASSY-LH SEAT	1	
	5314518-2	@	. . ARMREST ASSY-RH SEAT	1	
			ATTACHING PARTS		
-32	0812808-1		. . SPRING	1	
-33	MS20392-2C71		. . PIN	1	
	MS24665-132		. . PIN-COTTER	1	
			---*---		
	5314518-3	@	. . . COVER-ARMREST	1	
-33A	0812863-1	@	. . COVER-ARMREST SUPPORT LH INBD	1	
	0812863-2	@	. . COVER-ARMREST SUPPORT RH INBD	1	
-33B	0812863-3	@	. . COVER-ARMREST SUPPORT LH OUTBD	1	
	0812863-4	@	. . COVER-ARMREST SUPPORT RH OUTBD	1	
			ATTACHING PARTS		
	MS24621-11		. . SCREW	4	
			---*---		
-34	0812821-12	@	. . HEADREST ASSY	1	
	0812821-15	@	. . . COVER ASSY	1	
	A2099		. . GROMMET-HEADREST STM	2	
-34A	5619145-10	@	. . SKIRT ASSY	1	
			ATTACHING PARTS		
	MS24621-11		. . SCREW	5	
			---*---		

CONTINUED

FIGURE AND INDEX NO.	PART NUMBER	1 2 3 4 5 6 7 DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
57 -35	CM4005 @	. . BELT-SEAT	1	
-36	5011050-2	. STOP-SEAT	AR	
		ATTACHING PARTS		
	MS24665-134	. PIN-COTTER	1	
		---*---		
		@---WHEN ORDERING THIS PART THE ORDER MUST BE ACCOMPANIED BY THE COMPLETE FINISH AND TRIM PLATE AND AIRCRAFT SERIAL NUMBER		
		A---340-0001 THRU 340-0150 B---340-0151 & THRU 340-0300 C---340-0001 THRU 340-0300		

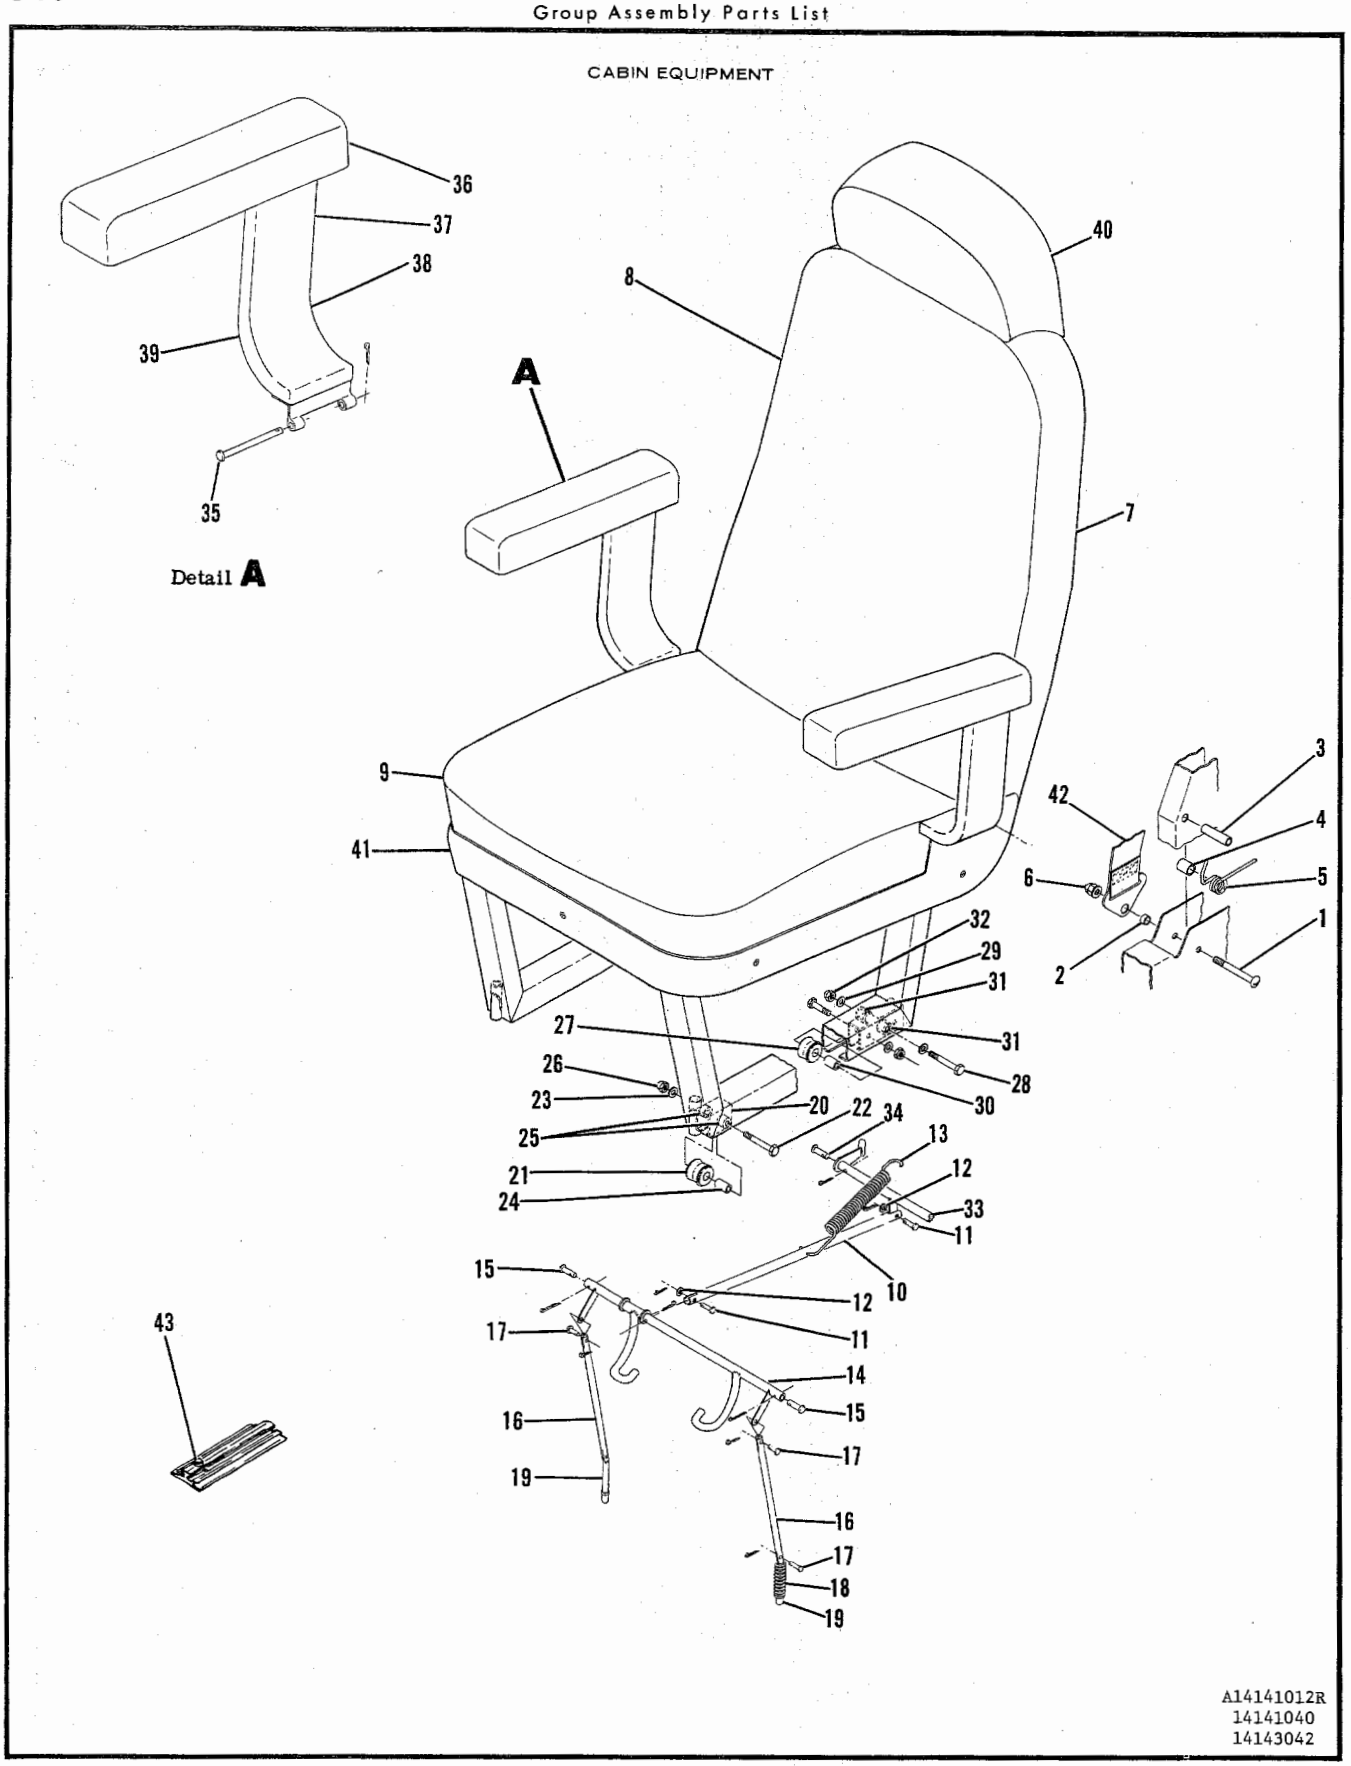

Figure 58 Passenger Forward Facing Seat Installation

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
58 -			PASSENGER FORWARD FACING SEAT INSTALLATION	NP	A
	5314513-1	@@@@@	. SEAT ASSY-LH	1	B
	5314513-11	@@@@@	. SEAT ASSY-LH	1	C
	5314513-2	@@@@@	. SEAT ASSY-RH	1	B
	5314513-12	@@@@@	. SEAT ASSY-RH	1	C
	5314513-7	@@@@@	. . BACK ASSY-LH & RH UPHOLSTERED	1	B
	5314513-13	@@@@@	. . BACK ASSY-LH & RH UPHOLSTERED	1	C
			ATTACHING PARTS		
-1	AN24-23A		. . BOLT	2	
-2	NAS43HT4-8		. . SPACER	2	
-3	NAS43HT4-56		. . SPACER	2	
-4	0812999-1		. . SPACER	2	
-5	0812998-1		. . SPRING	2	
-6	0812977-1		. . NUT	2	
			---*---		
-7	5314501-1	@@@@@	. . . COVER ASSY-BACK	1	
-8	5314513-9	@@@@@	. . . COVER ASSY-CUSHION BACK	1	
	5314513-3	@@@@@	. . BOTTOM ASSY-LH UPHOLSTERED	1	
	5314513-4	@@@@@	. . BOTTOM ASSY-RH UPHOLSTERED	1	
-9	5314513-6	@@@@@	. . . COVER ASSY-SEAT BOTTOM	1	
-10	5314512-38		. . . LINKAGE-SEAT ADJUST	1	
			ATTACHING PARTS		
-11	MS20392-1C11		. . . PIN	2	
-12	AN960-4L		. . . WASHER	2	
	MS24665-130		. . . PIN-COTTER	2	
			---*---		
-13	0310196-4		. . . SPRING	1	
-14	5314512-20		. . . RELEASE ASSY	1	
			ATTACHING PARTS		
-15	MS20392-3C11		. . . PIN	2	
	MS24665-208		. . . PIN-COTTER	2	
			---*---		
-16	5314512-3C		. . . ROD	1	
			ATTACHING PARTS		
-17	MS20392-1C9		. . . PIN	2	
	MS24665-130		. . . PIN-COTTER	2	
			---*---		
-18	LC042E15		. . . SPRING LSCI	2	
-19	5314512-37		. . . PIN-TRACK STOP	2	
-20	0812938-2		. . . GUIDE-ROLLER	2	
-21	CM2941-1		. . . ROLLER FWD	2	
			ATTACHING PARTS		
-22	AN23-28A		. . . BOLT	1	
-23	AN960-10L		. . . WASHER	1	
-24	51192D8-1		. . . BUSHING	1	
-25	NAS43DD5-20		. . . SPACER	2	
-26	CM3224-3		. . . CAPNUT	1	
			---*---		
-27	5119204-3		. . . ROLLER ASSY REAR	2	
			ATTACHING PARTS		
-28	AN24-28A		. . . BOLT	1	
-29	AN960-416L		. . . WASHER	1	
-30	5119208-2		. . . BUSHING	1	
-31	NAS43DD6-20		. . . SPACER	2	
-32	CM3224-4		. . . CAPNUT	1	
			---*---		
-33	5014005-6		. . . TUBE ASSY-TORQUE LH	1	
	5014005-8		. . . TUBE ASSY-TORQUE RH	1	
			ATTACHING PARTS		
-34	MS20392-4C15		. . . PIN	1	
	MS24665-283		. . . PIN-COTTER	1	
			---*---		
	5314532-1	@	. . ARMREST ASSY-LH SEAT	1	
	5314532-2	@	. . ARMREST ASSY-RH SEAT	1	
			ATTACHING PARTS		
-35	MS20392-2C71		. . PIN	1	
	MS24665-132		. . PIN-COTTER	1	
			---*---		
-36	5314532-200	@	. . . ARMREST ASSY	1	
			ATTACHING PARTS		
	MS35215-53		. . . SCREW	3	
			---*---		
	5314532-9		. . . CHANNEL	1	
			ATTACHING PARTS		
	MS35206-234		. . . SCREW	3	
	MS9320-06		. . . WASHER	3	
	MS21042-06		. . . NUT	3	
			---*---		
-37	0812816-20		. . . SUPPORT ASSY-ARMREST LH	1	
	0812816-21		. . . SUPPORT ASSY-ARMREST RH	1	
-38	0812863-1	@@@@@	. . COVER-ARMREST SUPPORT LH INBD	1	
	0812863-2	@@@@@	. . COVER-ARMREST SUPPORT RH INBD	1	
-39	0812863-7	@@@@@	. . COVER-ARMREST SUPPORT LH OUTBD	1	
	0812863-8	@@@@@	. . COVER-ARMREST SUPPORT RH OUTBD	1	
			ATTACHING PARTS		
	MS24621-11		. . SCREW	4	
			---*---		
-40	5314505-1	@	. . HEADREST ASSY	1	
	A2099		. . GROMMET STM	2	B
	9910182-3		. . GROMMET	2	C

CONTINUED

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
58 -41	5314503-28	@	. . SKIRT ASSY	1	
			ATTACHING PARTS		
	MS24621-11		. . SCREW	4	
			---*---		
-42	CM4005	@	. . BELT-SEAT	1	
-43	5011050-2		. STOP-SEAT	AR	
	5311062-1		. STOP-SEAT INBD RAILS AFT USE WHEN EXECUTIVE	1	
			TABLE IS INSTALLED		
	5311062-2		. STOP-SEAT INBD RAILS FWD USE WHEN EXECUTIVE	1	
			TABLE IS INSTALLED		

@ SEE FINISH & TRIM PLATE INFORMATION IN THE INTRODUCTION BEFORE ORDERING THIS PART

A---340-0301 TO 340A0001
B---340-0301 THRU 340-0500
C---340-0501 TO 340A0001

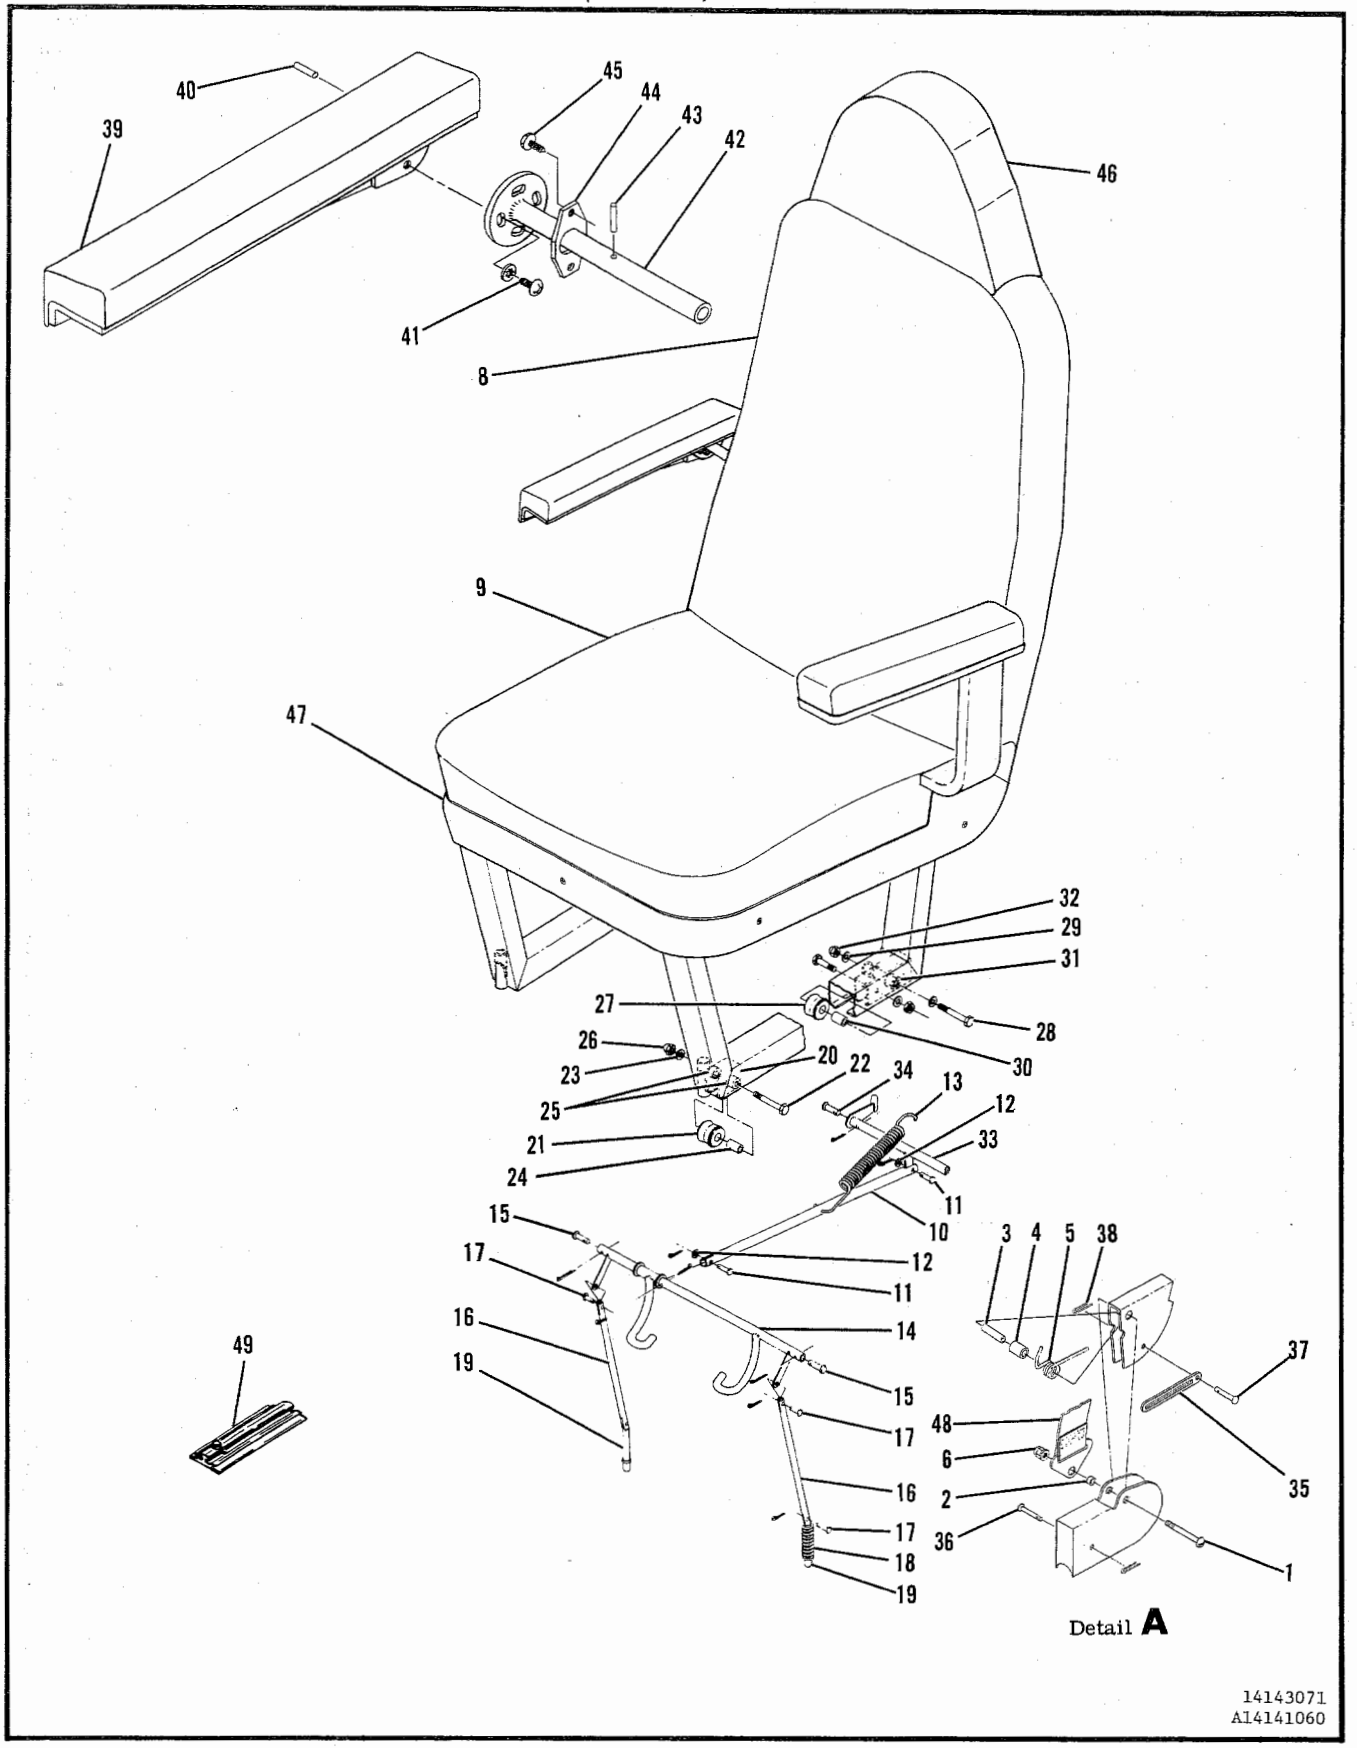

Figure 58A. Passenger Forward Facing Seat Installation

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
58A-			PASSENGER FORWARD FACING SEAT INSTALLATION	NP	A
	5314513-17	@	. SEAT ASSY-LH	1	
	5314513-18	@	. SEAT ASSY-RH	1	
			ATTACHING PARTS		
-1	AN24-23A		. BOLT	2	
-2	NAS43HT4-8		. SPACER	2	
-3	NAS43HT4-56		. SPACER	2	
-4	0812999-1		. SPACER	2	
-5	0812998-1		. SPRING	2	
-6	0812977-1		. NUT	2	
			---*---		
-7			. . DELETED NOT USED		
-8	5319154-11	@	. . COVER ASSY-SEAT BACK LH & RH	2	
-9	5314513-19	@@@@	. . BOTTOM ASSY-LH	1	
	5314513-20		. . BOTTOM ASSY-RH	1	
	5314513-6		. . . COVER ASSY-LH & RH	2	
-10	5314512-38		. . . LINKAGE-SEAT ADJUST LH & RH	2	
			ATTACHING PARTS		
-11	MS20392-1C11		. . . PIN	2	
-12	AN960-4L		. . . WASHER	2	
	MS24665-132		. . . PIN-COTTER	2	
			---*---		
-13	0310196-4		. . . SPRING-LH & RH	2	
-14	5314512-20		. . . RELEASE ASSY-LH & RH	2	
			ATTACHING PARTS		
-15	MS20392-3C11		. . . PIN	2	
	MS24665-208		. . . PIN-COTTER	2	
			---*---		
-16	5314512-30		. . . ROD-LH & RH	2	
			ATTACHING PARTS		
-17	MS20392-1C9		. . . PIN	2	
	MS24665-132		. . . PIN-COTTER	2	
			---*---		
-18	LC042E15		. . . SPRING-LH & RH LSCI	4	
-19	5314512-37		. . . PIN-TRACK STOP LH & RH	4	
-20	0812938-2		. . . GUIDE-ROLLER LH & RH	4	
-21	CM2941-1		. . . ROLLER FWD LH & RH	4	
			ATTACHING PARTS		
-22	AN23-28A		. . . BOLT	1	
-23	AN960-10L		. . . WASHER	1	
-24	5119208-1		. . . BUSHING	1	
-25	5314544-1		. . . SPACER	2	
-26	CM3224-3		. . . CAP NUT	1	
			---*---		
-27	5119204-3		. . . ROLLER ASSY REAR LH & RH	4	
			ATTACHING PARTS		
-28	AN24-28A		. . . BOLT	1	
-29	AN960-416L		. . . WASHER	1	
-30	5119208-2		. . . BUSHING	1	
-31	5314544-1		. . . SPACER	2	
-32	CM3224-1		. . . CAP NUT	1	
			---*---		
-33	5014005-6		. . . TUBE ASSY-TORQUE LH	1	
	5014005-8		. . . TUBE ASSY-TORQUE RH	1	
			ATTACHING PARTS		
-34	MS20392-4C15		. . . PIN	1	
	MS24665-283		. . . PIN-COTTER	1	
			---*---		
-35	5319162-1		. . LINK-SEAT LIMIT LH & RH	2	
			ATTACHING PARTS		
-36	MS20392-2C23		. . PIN	1	
-37	MS20392-2C33		. . PIN	1	
-38	MS24665-170		. . PIN-COTTER	2	
			---*---		
-39	5319158-1	@@	. . ARMREST ASSY-LH	1	
	5319158-2	@	. . ARMREST ASSY-RH	1	
			ATTACHING PARTS		
-40	MS35675-1		. . PIN	1	
-41	MS27039C1-06		. . SCREW	4	
	MS35333-39		. . WASHER	4	
			---*---		
	5319158-5	@@	. . . COVER ASSY-LH	1	
	5319158-6	@	. . . COVER ASSY-RH	1	
			ATTACHING PARTS		
	S1022Z6-6		. . . SCREW	4	
			---*---		
-42	5319161-9		. . ROD ASSY-ARMREST LH & RH WEU 5319161-12	2	D
	5319161-12		. . ROD ASSY-ARMREST LH & RH	2	E
	AN565A832F3		. . SET SCREW USED WITH 5319161-12	1	E
			ATTACHING PARTS		
-43	E3/16X1.000		. . PIN DLPC	1	
			---*---		
-44	0812966-1		. . PLATE-LH & RH	2	B
	5319020-1		. . PLATE-LH & RH	2	C
			ATTACHING PARTS		
-45	S1021A4-8C		. . SCREW	2	
			---*---		

CONTINUED

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
58A-46	5314513-14	@	. . HEADREST ASSY-LH & RH	2	
	5314513-15	@	. . . COVER	1	
-47	5314503-34	@	. . SKIRT ASSY-LH & RH	2	
			ATTACHING PARTS		
	MS24621-11		. . SCREW	4	
-48	CM4005	@	. . SEAT BELT ASSY-LH & RH	2	
-49	5011050-2		. STOP-SEAT	1	
	5311062-1		. STOP-SEAT INBD RAILS AFT USED WHEN EXECUTIVE TABLE IS INSTALLED	1	
	5311062-2		. STOP-SEAT INBD RAIL FWD USED WHEN EXECUTIVE TABLE IS INSTALLED	1	

@ SEE FINISH AND TRIM PLATE INFORMATION IN THE INTRODUCTION BEFORE ORDERING THIS PART

A---340A0001 & ON
B---340A0001 THRU 340A0058
C---340A0059 & ON
D---340A0001 THRU 340A0040
E---340A0041 & ON

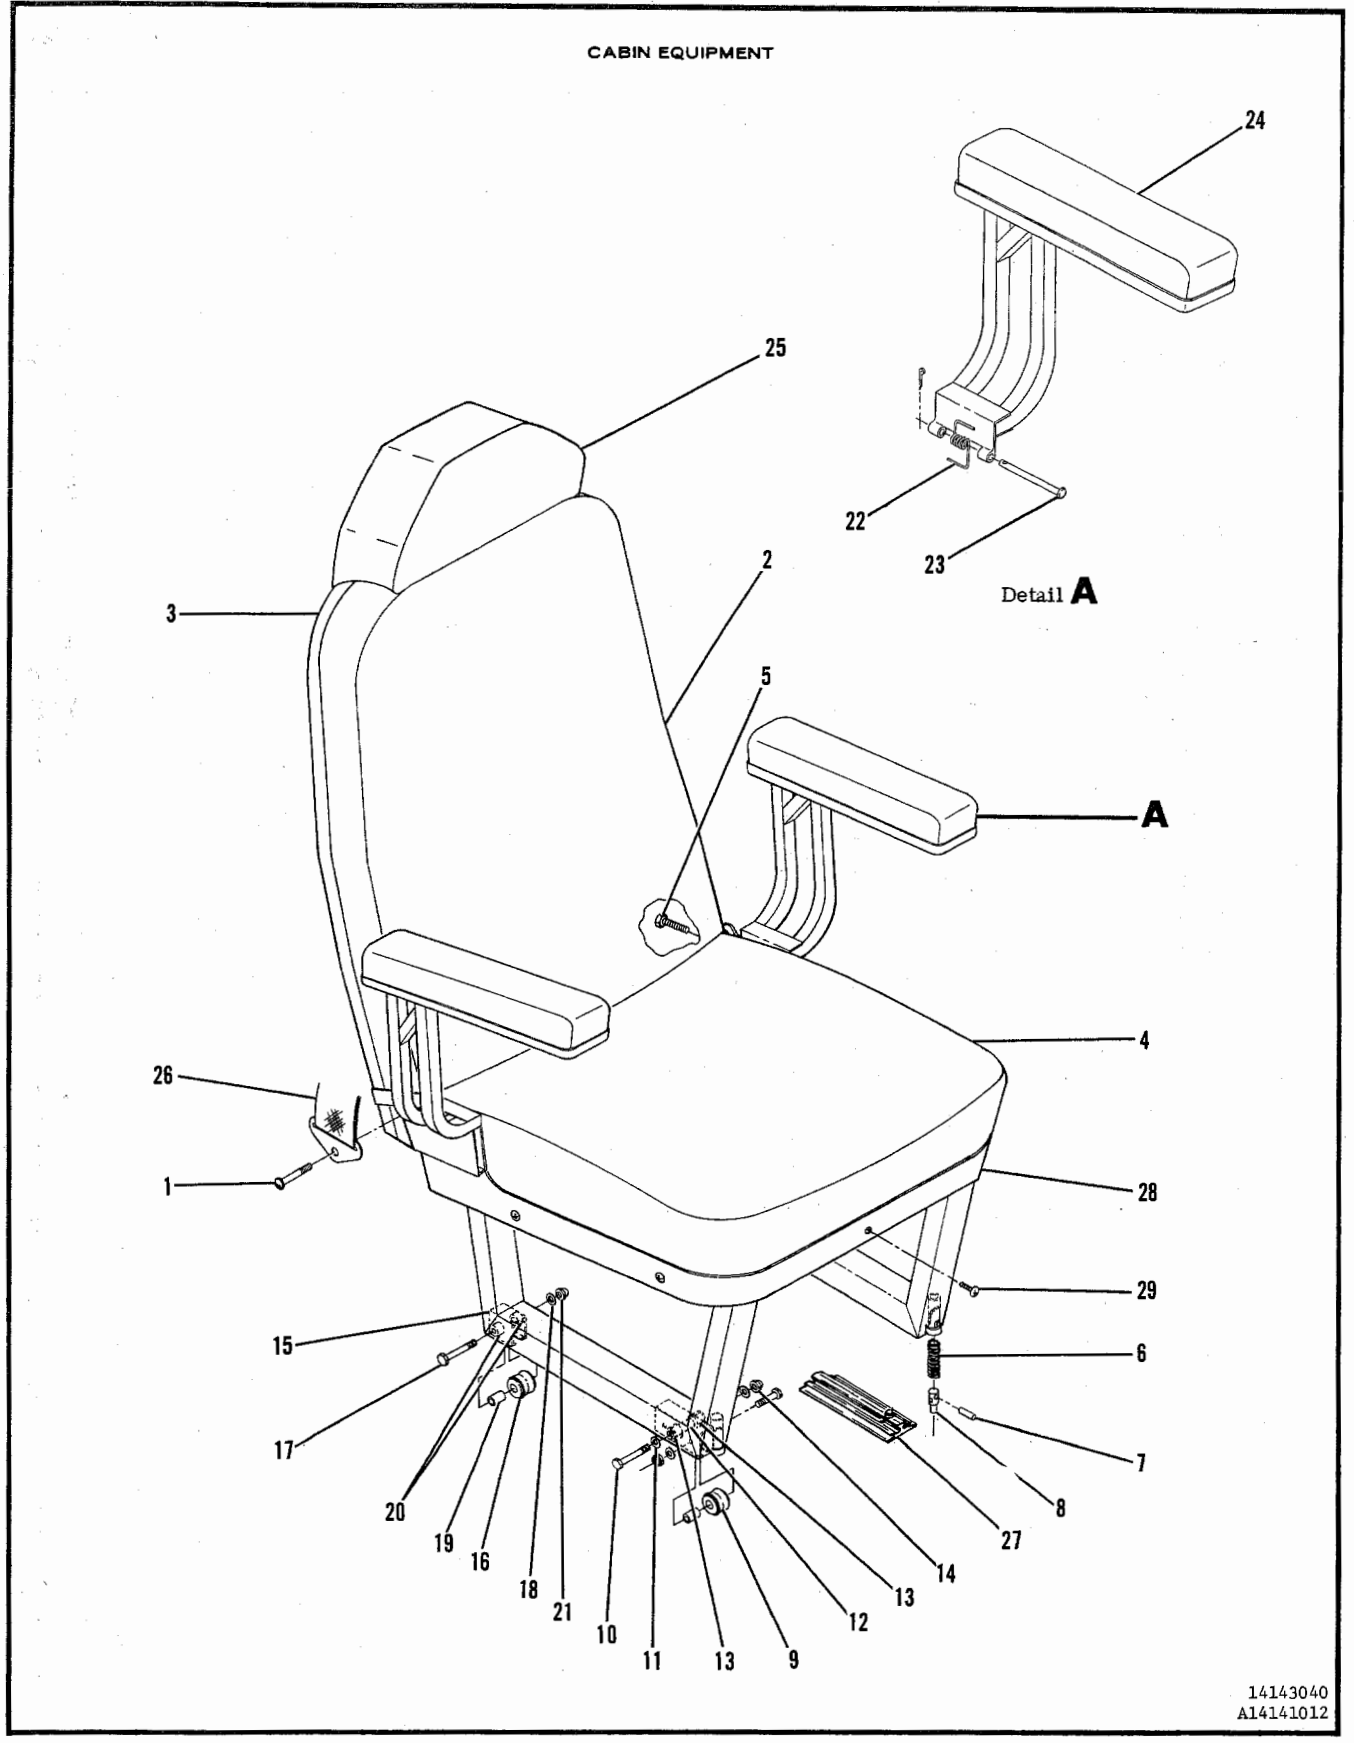

Figure 59. Passenger Rear Facing Seat Installation

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
59 -			PASSENGER REAR FACING SEAT INSTALLATION	NP	C
	5314515-1		. SEAT ASSY-LH	1	
	5314515-2		. SEAT ASSY-RH	1	
	5314515-5	②	. . BACK ASSY-LH & RH UPHOLSTERED	1	
			ATTACHING PARTS		
-1	AN24-23A		. . BOLT	2	
	NAS43HT4-72		. . SPACER	2	
	0812977-1		. . NUT	2	
			---*---		
-2	5314515-6	②	. . . COVER ASSY-SEAT BACK	1	
-3	5619131-1	②②	. . . COVER ASSY-SEAT BACK REAR	1	A
	5619131-7	②②	. . . COVER ASSY-SEAT BACK REAR	1	B
	5314515-3	②②	. . BOTTOM ASSY-LH UPHOLSTERED	1	
	5314515-4	②②	. . BOTTOM ASSY-RH UPHOLSTERED	1	
-4	5314515-7	②	. . . COVER ASSY-SEAT BOTTOM	1	
-5	NAS428-4-12		. . . BOLT-BACK ADJUSTMENT	2	
-6	LC038E13		. . . SPRING LSCI	2	
			ATTACHING PARTS		
-7	MS16562-16		. . . PIN-SPRING	2	
			---*---		
-8	5119209-4		. . . PIN-TRACK STOP	2	
-9	5119204-3		. . . ROLLER ASSY-FWD	2	
			ATTACHING PARTS		
-10	AN24-28A		. . . BOLT	1	
-11	AN960-416L		. . . WASHER	1	
-12	5119208-2		. . . BUSHING	1	
-13	NAS43DD6-2		. . . SPACER	2	
-14	CM3224-4		. . . CAPNUT	1	
			---*---		
-15	0812938-2		. . . GUIDE-ROLLER REAR	2	
-16	CM2941-1		. . . ROLLER REAR	2	
			ATTACHING PARTS		
-17	AN23-28A		. . . BOLT	1	
-18	AN960-10L		. . . WASHER	1	
-19	5119208-1		. . . BUSHING	1	
-20	NAS43DD5-20		. . . SPACER	2	
-21	CM3224-3		. . . CAPNUT	1	
			---*---		
	5314518-1	②	. . ARMREST ASSY-LH SEAT	1	
	5314518-2	②	. . ARMREST ASSY-RH SEAT	1	
			ATTACHING PARTS		
-22	0812808-1		. . SPRING	1	
-23	MS20392-2C71		. . PIN	1	
	MS24665-132		. . PIN-COTTER	1	
			---*---		
-24	5314518-3	②	. . . COVER-ARMREST	1	
-25	5314519-1	②②	. . HEADREST ASSY	1	
	5314519-5	②	. . . COVER-HEADREST	1	
	A1721		. . GROMMET-HEADREST STM	2	
-26	CM4005	②	. . BELT-SEAT	1	
-27	5011050-2		. STOP-SEAT	AR	
			ATTACHING PARTS		
	MS24665-134		. PIN-COTTER	1	
			---*---		
-28	5619145-10	②	. . SKIRT ASSY-LH & RH	2	
			ATTACHING PARTS		
-29	MS24621-11		. . SCREW	5	
			---*---		

②---WHEN ORDERING THIS PART THE ORDER MUST BE ACCOMPANIED BY THE COMPLETE FINISH AND TRIM PLATE NUMBER AND AIRCRAFT SERIAL NUMBER

A---340-0001 THRU 340-0150
B---340-0151 THRU 340-0300
C---340-0001 THRU 340-0300

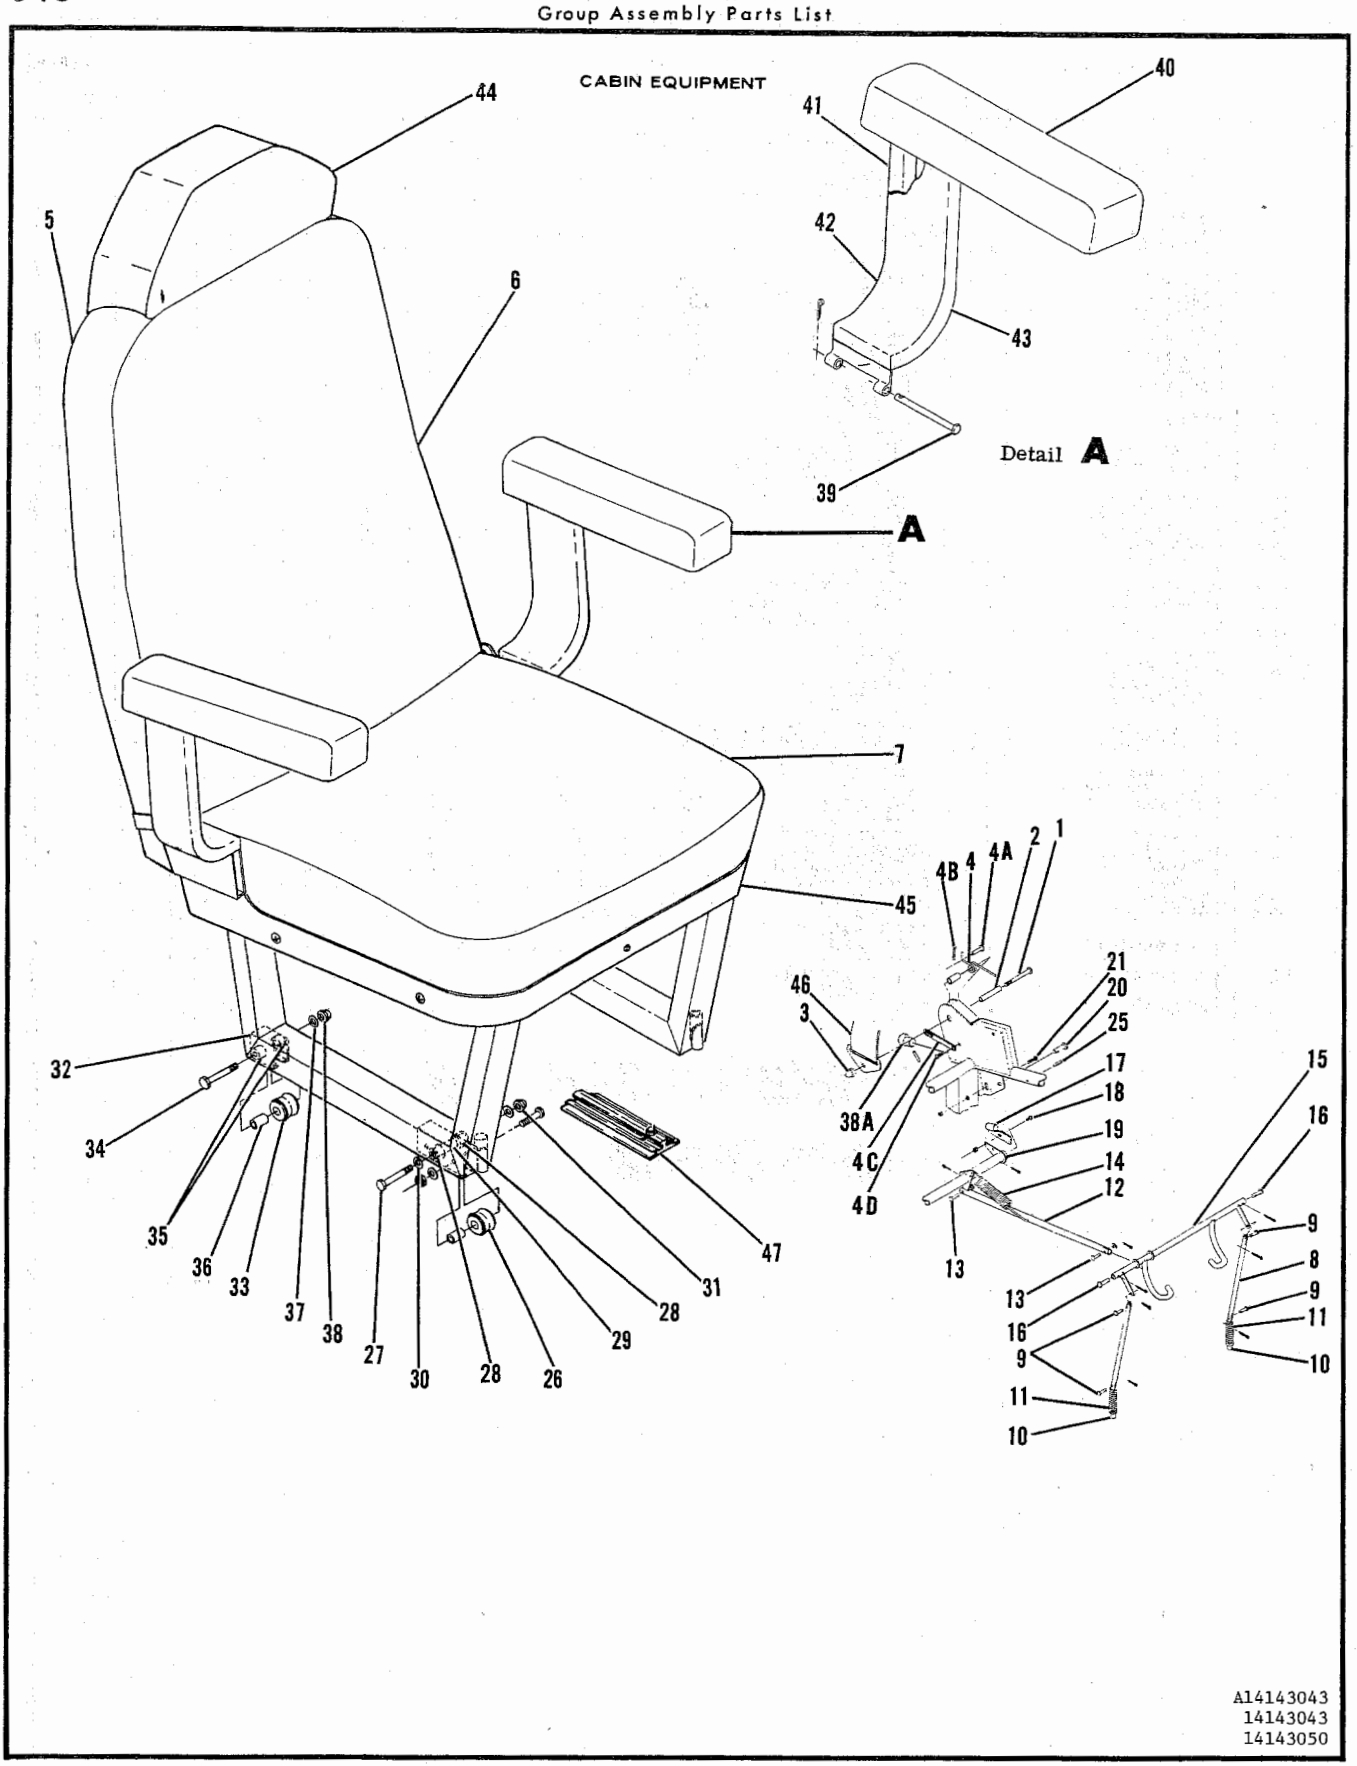

Figure 60. Passenger Rear Facing Seat Installation

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
60 -			PASSENGER AFT FACING SEAT INSTALLATION	NP	A
	5314514-13	@	. SEAT ASSY-LH	1	B
	5314514-10	@@@@@	. SEAT ASSY-LH	1	C
	5314514-14		. SEAT ASSY-RH	1	B
	5314514-11		. SEAT ASSY-RH	1	C
	5314514-17		. . BACK ASSY-LH & RH UPHOLSTERED	1	B
	5314514-12	@	. . BACK ASSY-LH & RH UPHOLSTERED	1	C
			ATTACHING PARTS		
-1	AN24-23A		. . BOLT	2	
-2	NAS43HT4-77		. . SPACER	2	
-3	0812977-1		. . NUT	2	
			---*---		
-4	0812998-2		. . SPRING	2	
			ATTACHING PARTS		
-4A	MS20392-1C39		. . PIN	2	
-4B	MS24665-132		. . PIN-COTTER	2	
			---*---		
-4C	5319146-2		. . LINK	1	
			ATTACHING PARTS		
-4D	MS35207-263		. . SCREW	2	
			---*---		
-5	5314501-2	@@@@@	. . . COVER ASSY-BACK	1	
-6	5314514-9		. . . COVER ASSY-CUSHION BACK	1	
	5314514-15		. . BOTTOM ASSY-LH UPHOLSTERED	1	
	5314514-16		. . BOTTOM ASSY-RH UPHOLSTERED	1	
-7	5314514-6		. . . COVER ASSY-SEAT BOTTOM	1	
-8	5314512-30		. . . ROD	2	
			ATTACHING PARTS		
-9	MS20392-1C9		. . . PIN	2	
	MS24665-132		. . . PIN-COTTER	2	
			---*---		
-10	5314512-37		. . . PIN-STOP	2	
-11	LC042E15		. . . SPRING	2	
-12	5619148-5		. . . TUBE	1	
			ATTACHING PARTS		
-13	MS20392-1C13		. . . PIN	2	
	MS24665-132		. . . PIN-COTTER	2	
			---*---		
-14	0310196-4		. . . SPRING	1	
-15	5314512-20		. . . RELEASE ASSY	1	
			ATTACHING PARTS		
-16	MS20392-3C11		. . . PIN	2	
	MS24665-208		. . . PIN-COTTER	2	
			---*---		
-17	5319145-3		. . . STOP ASSY	2	
			ATTACHING PARTS		
-18	MS35206-244		. . . SCREW	1	
	MS21083N08		. . . NUT	1	
			---*---		
-19	5619148-1		. . . TORQUE TUBE ASSY	1	
			ATTACHING PARTS		
-20	MS20392-4C35		. . . PIN	2	
	MS24665-283		. . . PIN-COTTER	2	
			---*---		
-21	MS35207-265		. . . SCREW	2	
	AN960-10L		. . . WASHER	2	
	MS21083N3		. . . NUT	2	
-22			. . . DELETED NOT USED		
-23			. . . DELETED NOT USED		
-24			. . . DELETED NOT USED		
-25	MS35675-18		. . . PIN GROOVED	2	
-26	5119204-3		. . . ROLLER ASSY-FWD	2	
			ATTACHING PARTS		
-27	AN24-28A		. . . BOLT	1	
-28	NAS43DD6-20		. . . SPACER	2	
-29	5119208-2		. . . BUSHING	1	
-30	AN960-416L		. . . WASHER	1	
-31	MS21044N4		. . . NUT	1	
			---*---		
-32	0812938-2		. . . GUIDE-ROLLER REAR	2	
-33	CM2941-1		. . . ROLLER	2	
			ATTACHING PARTS		
-34	AN23-28A		. . . BOLT	1	
-35	NAS43DD5-20		. . . SPACER	2	
-36	5119208-1		. . . BUSHING	1	
-37	AN960-10L		. . . WASHER	1	
-38	MS21044N3		. . . NUT	1	
			---*---		
-38A	5319146-1		. . STOP	2	
	5314532-1	@@	. . ARMREST ASSY-LH SEAT	1	
	5314532-2		. . ARMREST ASSY-RH SEAT	1	
			ATTACHING PARTS		
-39	MS20392-2C71		. . PIN	1	
	MS24665-132		. . PIN-COTTER	1	
			---*---		
			CONTINUED		

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
60 -40	5314532-200	@	. . . ARMREST ASSY	1	
			ATTACHING PARTS		
	MS35215-53		. . . SCREW	3	
			---*---		
	5314532-9		. . . CHANNEL	1	
			ATTACHING PARTS		
	MS35206-234		. . . SCREW	3	
	MS9320-06		. . . WASHER	3	
	MS21042-06		. . . NUT	3	
			---*---		
-41	0812816-20		. . . SUPPORT ASSY-ARMREST LH	1	
	0812816-21		. . . SUPPORT ASSY-ARMREST RH	1	
-42	0812863-1	@	. . COVER-SUPPORT LH INBD	1	
	0812863-7	@@	. . COVER-SUPPORT RH INBD	1	
-43	0812863-2	@@	. . COVER-SUPPORT LH OUTBD	1	
	0812863-8	@	. . COVER-SUPPORT RH OUTBD	1	
			ATTACHING PARTS		
	MS24621-11		. . SCREW	4	
			---*---		
-44	5314506-1	@	. . HEADREST ASSY		
	A1721-1		. . GROMMET-HEADREST STM	2	B
	9910182-4		. . GROMMET-HEADREST	2	C
-45	5314503-2	@	. . SKIRT ASSY	1	
			ATTACHING PARTS		
	MS24621-11		. . SCREW	4	
			---*---		
-46	CM4005	@	. . BELT-SEAT	1	
-47	5011050-2		. STOP-SEAT	AR	
	5311062-1		. STOP-SEAT INBD RAILS AFT USE WHEN EXECUTIVE	1	
			TABLE IS INSTALLED		
	5311062-2		. STOP-SEAT INBD RAILS FWD USE WHEN EXECUTIVE	1	
			TABLE IS INSTALLED		

@ SEE FINISH & TRIM PLATE INFORMATION IN THE INTRODUCTION BEFORE ORDERING THIS PART

A---340-0301 TO 340A0001
B---340-0301 THRU 340-0500
C---340-0501 TO 340A0001

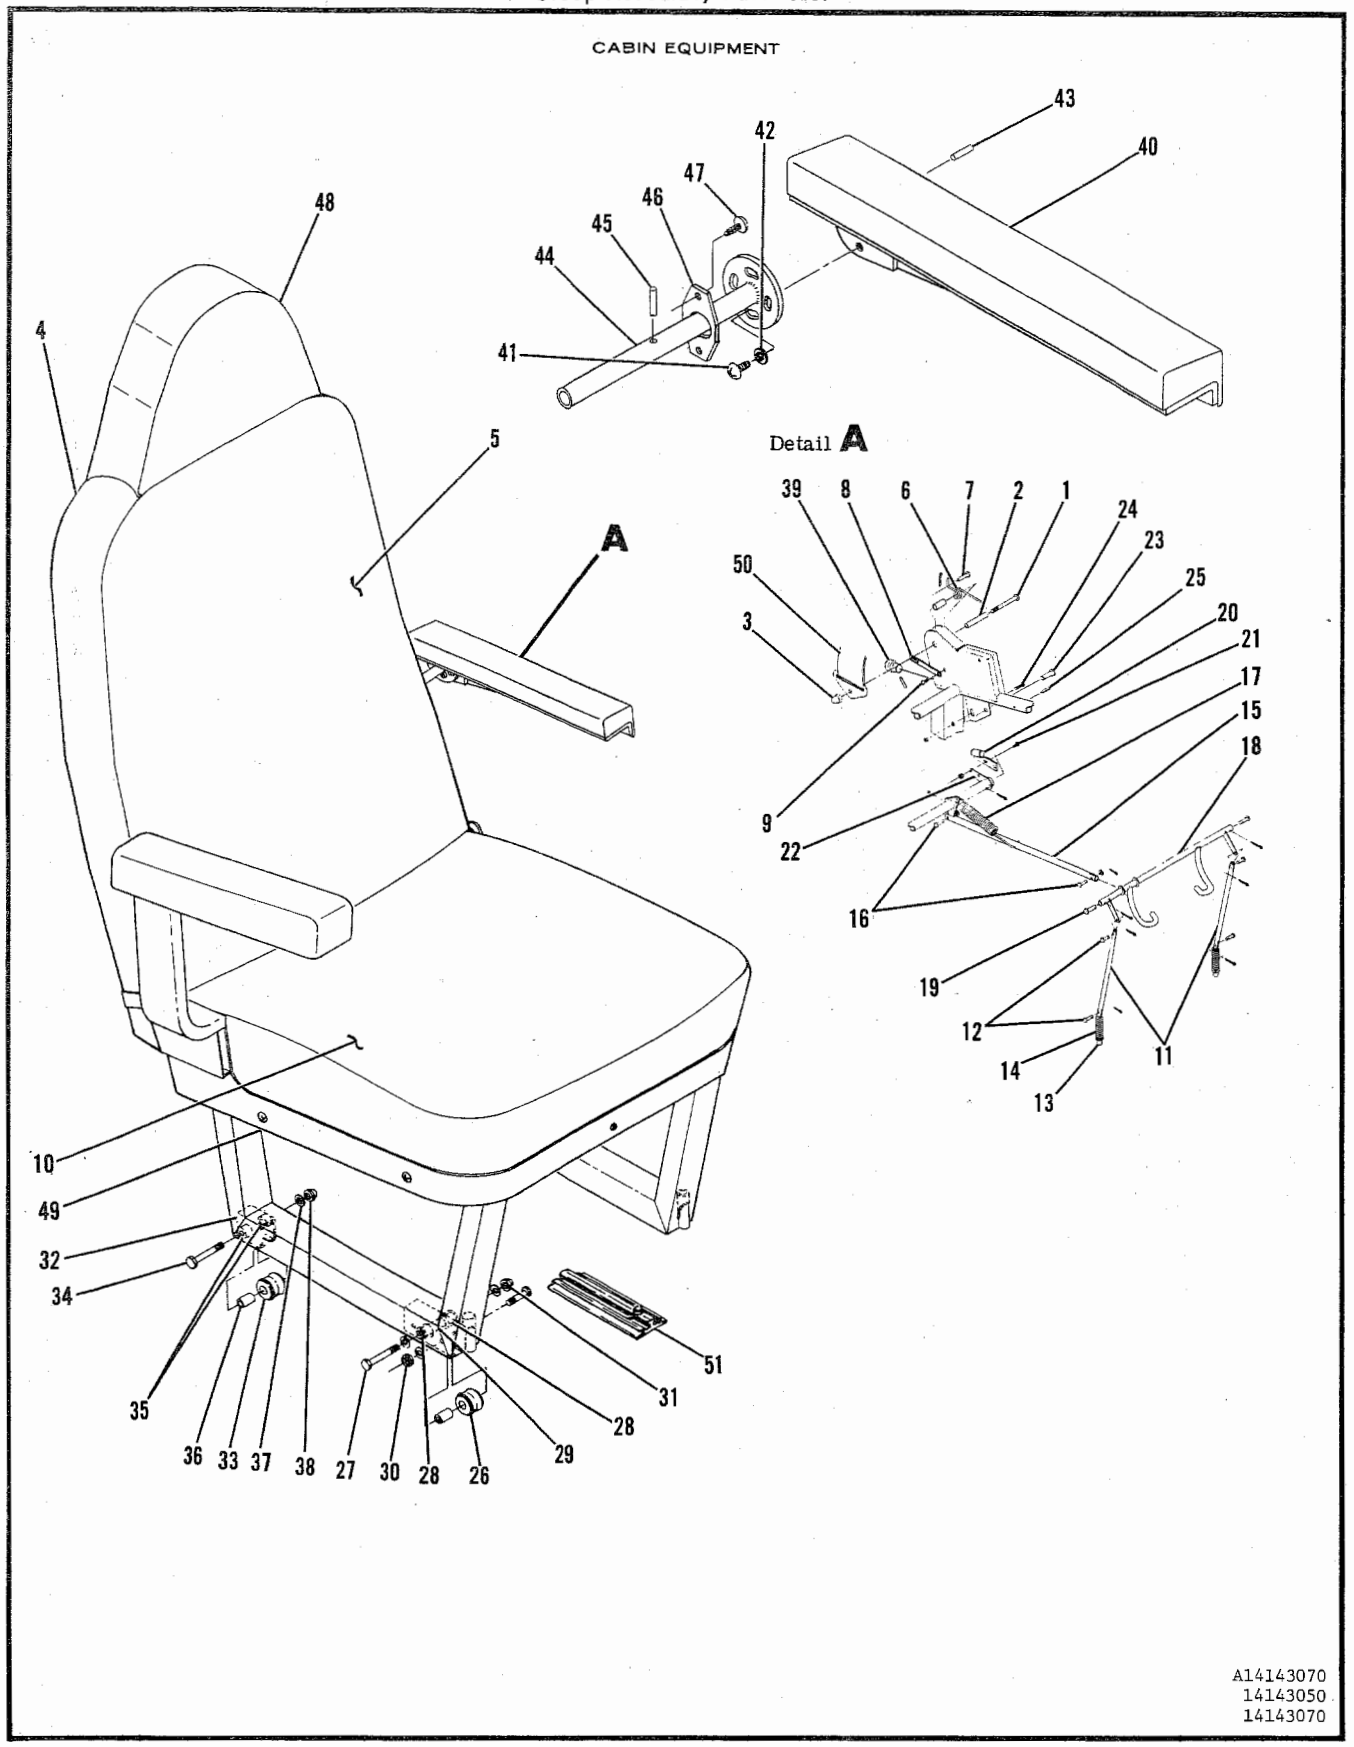

Figure 60A. Passenger Aft Facing Seat Installation

FIGURE AND INDEX NO.	PART NUMBER		1 2 3 4 5 6 7 DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
60A-			PASSENGER AFT FACING SEAT INSTALLATION	NP	A
	5314514-21	a	. SEAT ASSY-LH	1	
	5314514-22	a	. SEAT ASSY-RH	1	
	5314514-19	a	. . BACK ASSY-LH	1	
	5314514-20	a	. . BACK ASSY-RH	1	
			ATTACHING PARTS		
-1	AN24-23A		. . BOLT	2	
-2	NAS43HT4-77		. . SPACER	2	
-3	0812977-1		. . NUT	2	
			---*---		
-4	5319153-1		. . . COVER ASSY-LH	1	
	5319153-8		. . . COVER ASSY-RH	1	
-5	5319153-14		. . . COVER ASSY-LH & RH	2	
-6	0812998-2		. . SPRING-LH & RH	4	
			ATTACHING PARTS		
-7	MS20392-1C39		. . PIN	2	
	MS24665-132		. . PIN-COTTER	2	
			---*---		
-8	5319146-2		. . LINK-LH & RH	2	
			ATTACHING PARTS		
-9	MS35207-263		. . SCREW	2	
			---*---		
	5314514-25	a	. . BOTTOM ASSY-LH UPHOLSTERED	1	
	5314514-26	a	. . BOTTOM ASSY-RH UPHOLSTERED	1	
-10	5314514-6	a	. . . COVER ASSY-LH & RH	2	
-11	5314512-30		. . . ROD-LH & RH	4	
			ATTACHING PARTS		
-12	MS20392-1C9		. . . PIN	2	
	MS24665-132		. . . PIN-COTTER	2	
			---*---		
-13	5314512-37		. . . PIN-STOP LH & RH	4	
-14	LC042E15		. . . SPRING-LH & RH	4	LSCI
-15	5619148-5		. . . TUBE-LH & RH	2	
			ATTACHING PARTS		
-16	MS20392-1C13		. . . PIN	2	
	MS24665-132		. . . PIN-COTTER	2	
			---*---		
-17	0310196-4		. . . SPRING-LH & RH	2	
-18	5314512-20		. . . RELEASE ASSY-LH & RH	2	
			ATTACHING PARTS		
-19	MS20392-3C11		. . . PIN	2	
	MS24665-208		. . . PIN-COTTER	2	
			---*---		
-20	5319145-3		. . . STOP ASSY-LH & RH	4	
			ATTACHING PARTS		
-21	MS35206-244		. . . SCREW	1	
	MS21083N08		. . . NUT	1	
			---*---		
-22	5619148-1		. . . TUBE ASSY-TORQUE LH & RH	2	
			ATTACHING PARTS		
-23	MS20392-4C35		. . . PIN	2	
	MS24665-283		. . . PIN-COTTER	2	
			---*---		
-24	MS35207-265		. . . SCREW	2	
	AN960-10L		. . . WASHER	2	
	MS21083N3		. . . NUT	2	
-25	MS35675-18		. . . PIN GROOVED	2	
-26	5119204-3		. . . ROLLER ASSY-FWD LH & RH	4	
			ATTACHING PARTS		
-27	AN24-28A		. . . BOLT	1	
-28	NAS43DD6-20		. . . SPACER	1	
-29	5119208-2		. . . BUSHING	1	
-30	AN960-416L		. . . WASHER	1	
-31	MS21044N4		. . . NUT	1	
			---*---		
-32	0812938-2		. . . GUIDE-ROLLER REAR LH & RH	4	
-33	CM2941-1		. . . ROLLER-LH & RH	4	
			ATTACHING PARTS		
-34	AN23-28A		. . . BOLT	1	
-35	NAS43DD5-20		. . . SPACER	2	
-36	5119208-1		. . . BUSHING	1	
-37	AN960-10L		. . . WASHER	1	
-38	MS21044N3		. . . NUT	1	
			---*---		
-39	5319146-1		. . . STOP	1	
-40	5319158-1	a	. . ARMREST ASSY-LH SEAT	1	
	5319158-2	a	. . ARMREST ASSY-RH SEAT	1	
			ATTACHING PARTS		
-41	MS27039C1-06		. . SCREW	4	
-42	MS35333-39		. . WASHER	4	
-43	MS35675-1		. . PIN	1	
			---*---		
	5319158-5	a	. . . COVER ASSY-LH	1	
	5319158-6	a	. . . COVER ASSY-RH	1	

CONTINUED

FIGURE AND INDEX NO.	PART NUMBER		1 2 3 4 5 6 7 DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
60A-44	5319161-9		. . ROD ASSY-ARMREST LH & RH WEU 5319161-12	2	D
	5319161-12		. . ROD ASSY-ARMREST LH & RH	2	E
	AN565A832F3		. . SET SCREW USED WITH 5319161-12	1	E
			ATTACHING PARTS		
-45	E3/16X1.000		. . PIN DLPC	1	
			---*---		
-46	0812966-1		. . PLATE-ARMREST LH & RH	2	B
	5319020-1		. . PLATE-ARMREST LH & RH	2	C
			ATTACHING PARTS		
-47	S1021A4-8C		. . SCREW	2	
			---*---		
-48	5314514-18	@	. . HEADREST ASSY-LH & RH	2	
-49	5314503-2	@	. . SKIRT ASSY-LH & RH	2	
			ATTACHING PARTS		
	MS24621-11		. . SCREW	4	
			---*---		
-50	CM4005	@	. . BELT-SEAT LH & RH	2	
-51	5011050-2		. STOP-SEAT LH & RH	AR	
	5311062-1		. STOP-SEAT LH & RH INBD RAILS AFT USED WHEN	2	
			EXECUTIVE TABLE IS INSTALLED		
	5311062-2		. STOP-SEAT LH & RH INBD RAIL FWD USED WHEN	2	
			EXECUTIVE TABLE IS INSTALLED		

@ SEE FINISH AND TRIM PLATE INFORMATION IN THE INTRODUCTION BEFORE ORDERING THIS PART

A---340A0001 & ON
B---340A0001 THRU 340A0058
C---340A0059 & ON
D---340A0001 THRU 340A0040
E---340A0041 & ON

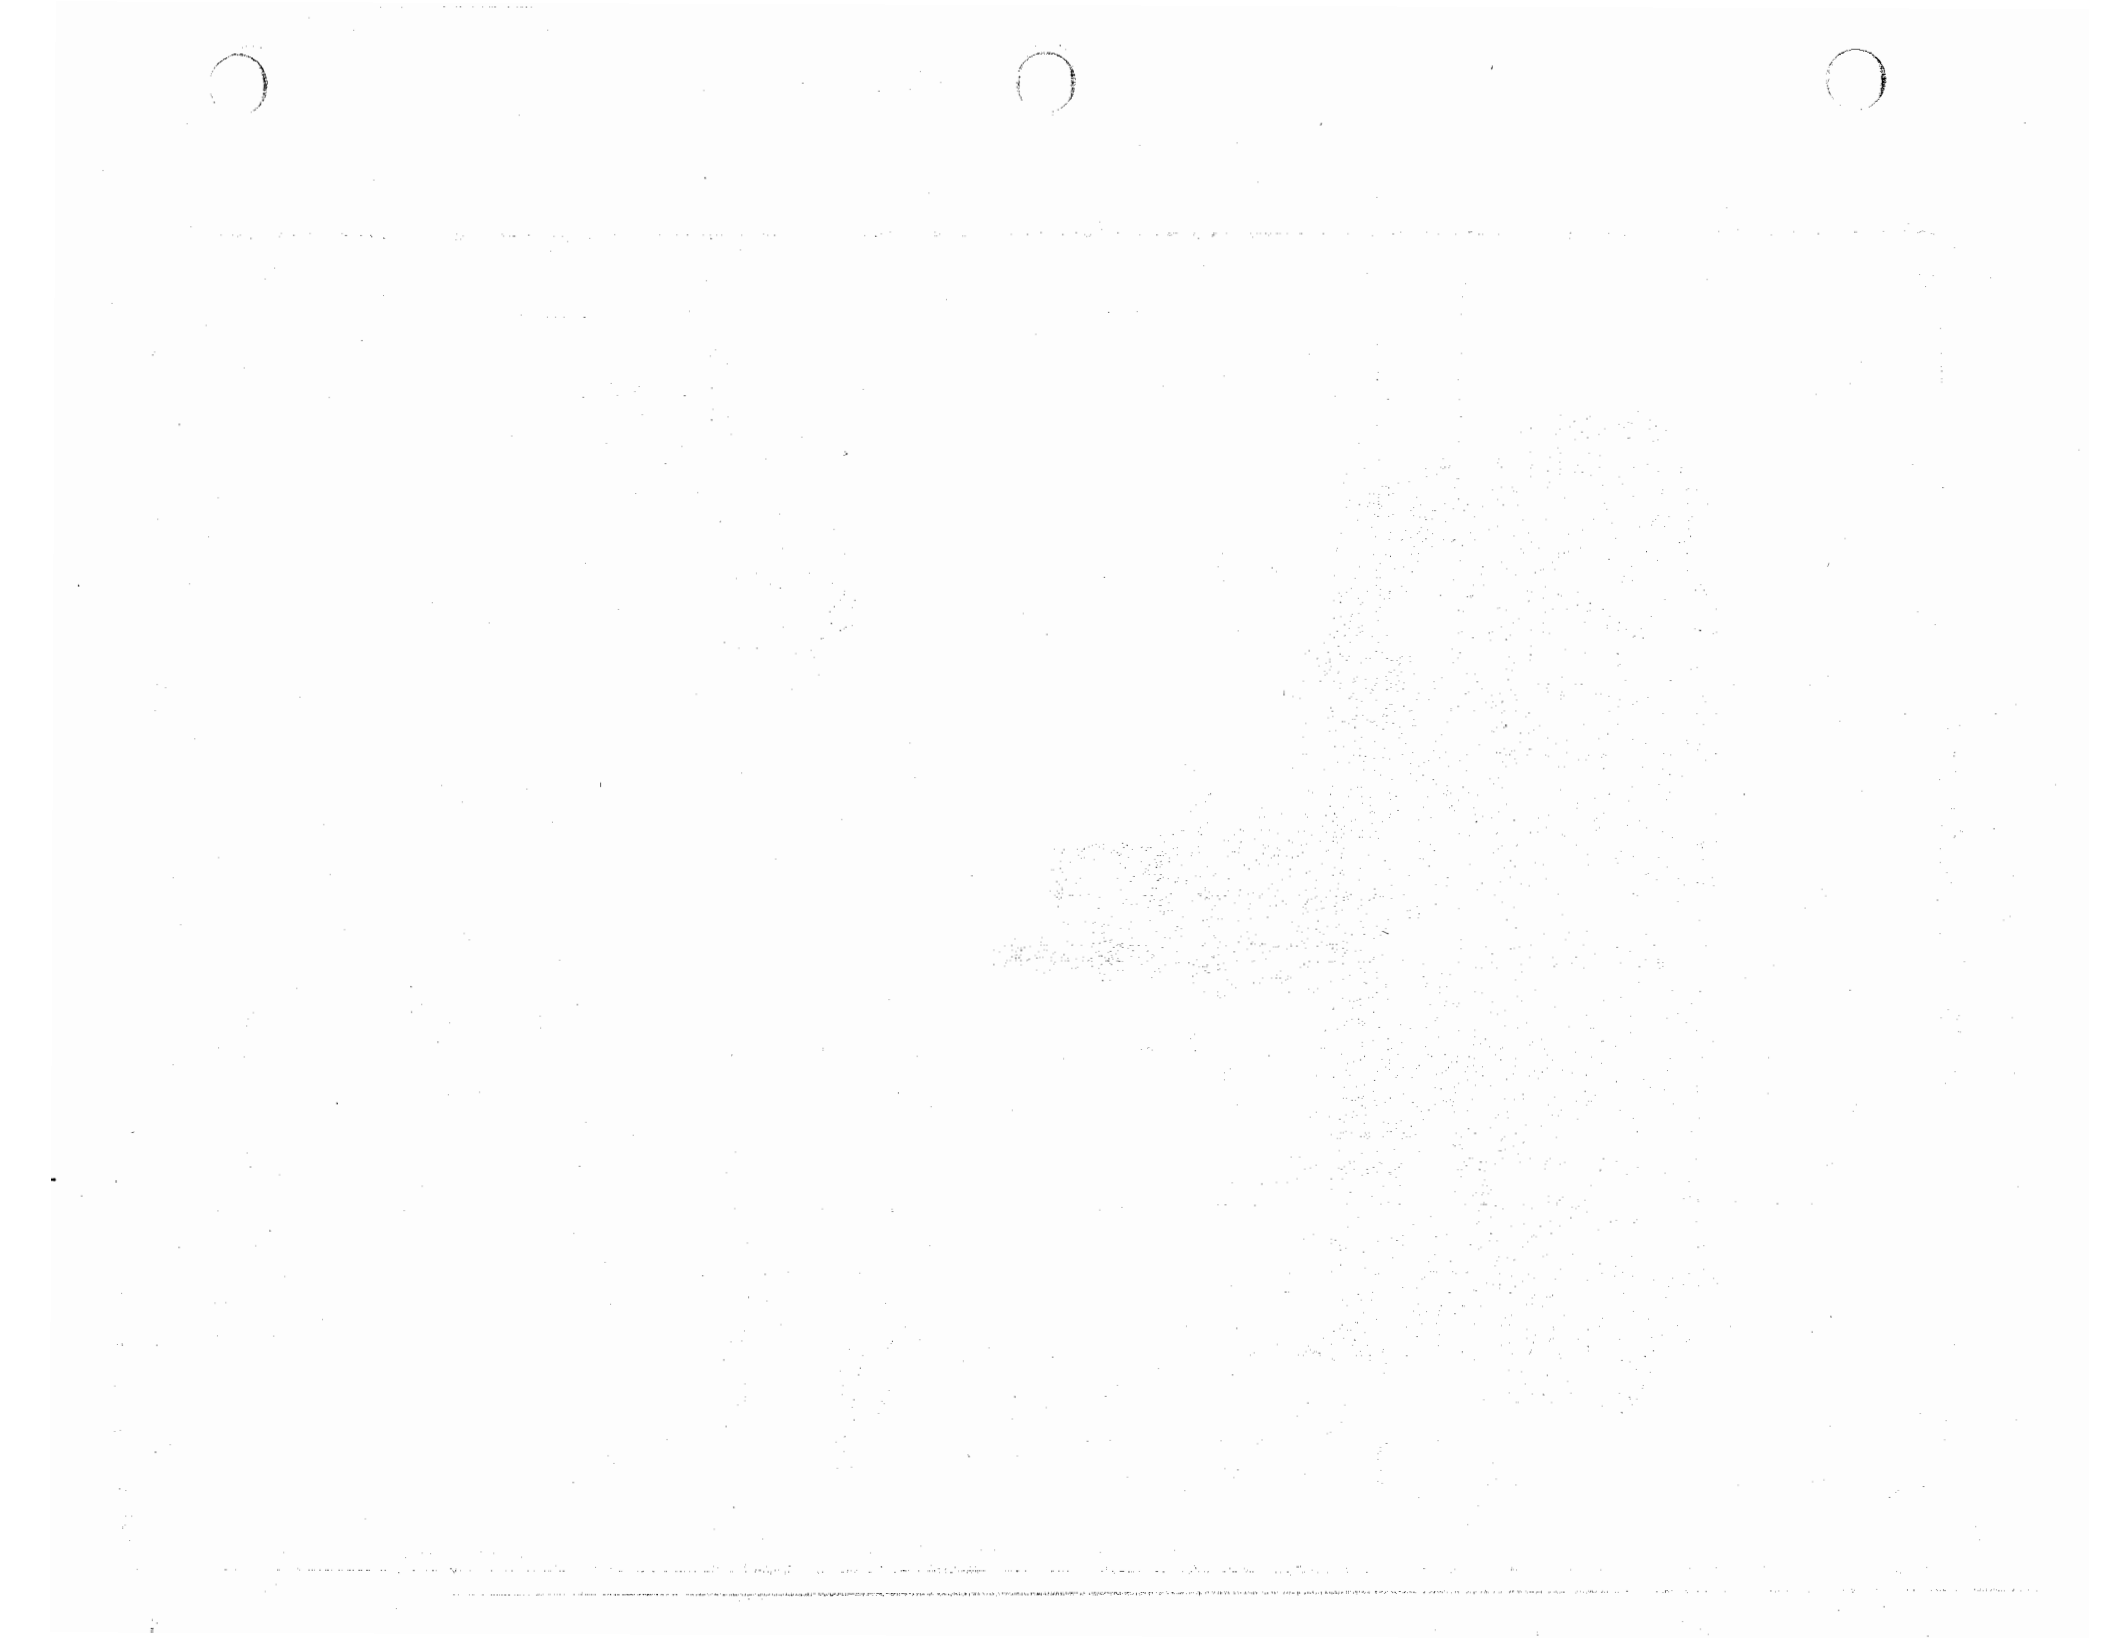

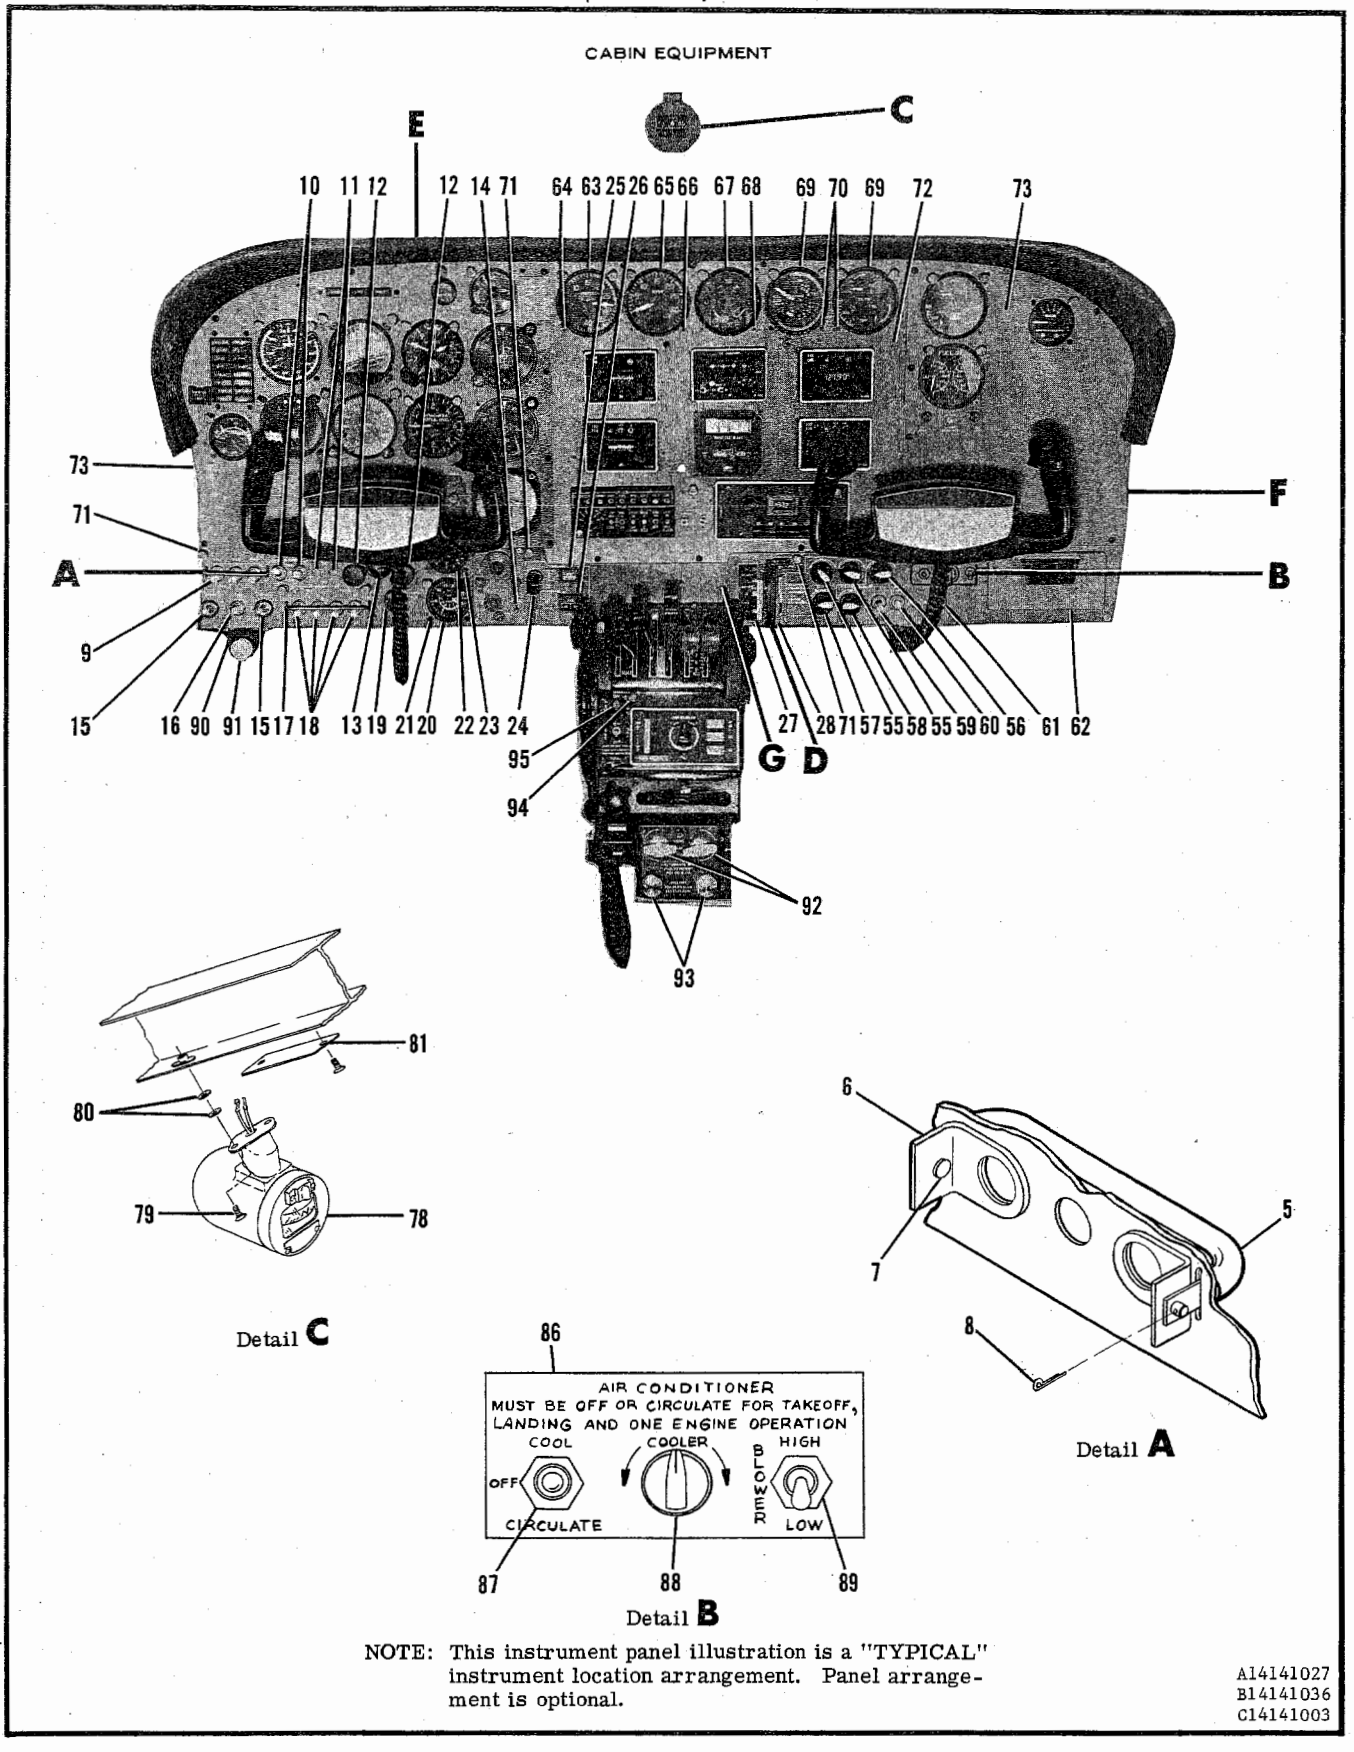

NOTE: This instrument panel illustration is a "TYPICAL" instrument location arrangement. Panel arrangement is optional.

A14141027
B14141036
C14141003

Figure 61. Instrument Panel Equipment Installation (Sheet 1 of 2)

CABIN EQUIPMENT

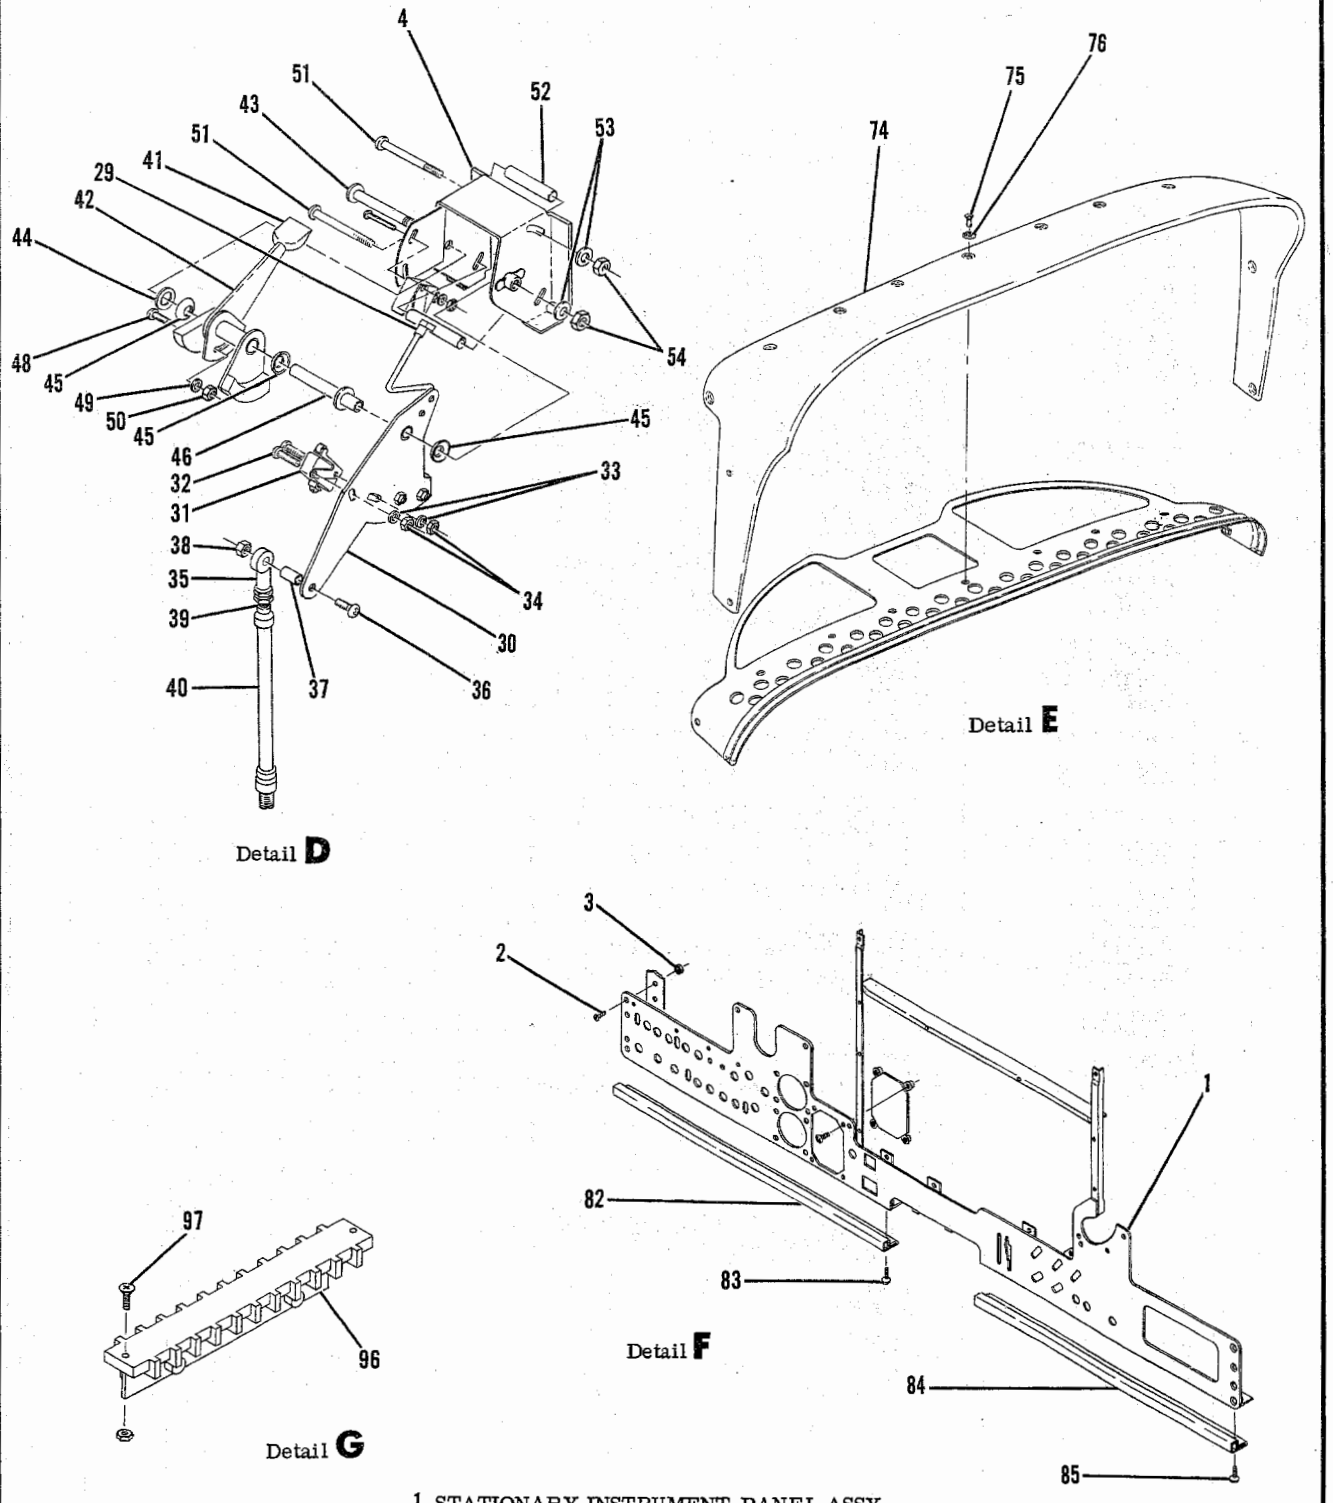

1 STATIONARY INSTRUMENT PANEL ASSY
62 GLOVE COMPARTMENT INSTL
71 INSTRUMENT PANEL LIGHTING FIXTURES
73 FLIGHT INSTRUMENT PANEL INSTL

D14151001
E14193014
F14192004
G14181011

Figure 61. Instrument Panel Equipment Installation (Sheet 2)

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
61 -		INSTRUMENT PANEL EQUIPMENT INSTALLATION	NP	C
-1	SEE FIG 19	. PANEL ASSY-STATIONARY INSTRUMENT	1	
		ATTACHING PARTS		
-2	MS24694-47	. SCREW	9	
-3	MS21044N3	. NUT	9	
		---*---		
-4	5615221-8	. . BRACKET ASSY-FLAP PRE-SELECT	1	
-5	0813474-2	. BAR-BATTERY & ALTERNATOR SWITCHES	1	
		ATTACHING PARTS		
-6	0813500-23	. BRACKET	2	
-7	MS20392-1C7	. PIN	2	
-8	MS24665-130	. PIN-COTTER	2	
		---*---		
-9	MS35059-22	. SWITCH-L ALT BATT ON R ALT FSO 8501K4 OR 2TL1-2	3	
	8501K4	. SWITCH-L ALT BATT ON R ALT CUT	3	
	2TL1-2	. SWITCH-L ALT BATT ON R ALT ALT FOR 8501K4 MCS	2	
-10	S392-1	. SWITCH-AUX PUMPS	2	
-11	CM2692-16A3S	. PLUG BUTTON	2	
	MST205N	. SWITCH-FUEL TRANSFER	1	
-12	5117239-20	. CONTROL-PRESS AIR DUMP LH & RH	2	
-13	5315001-10	. CONTROL ASSY-RAM AIR	1	
	KN678-1	. KNOB-RAM AIR CONTROL ARN	1	
-14	MSTL206N	. SWITCH-CABIN PRESSURIZE-DEPRESSURIZE AELM	1	
	C15	. CAP-WHITE AELM	1	
-15	9910079-1	. SWITCH-START LEFT & RIGHT	2	
	15PA17	. GUARD-SWITCH LEFT & RIGHT MRSP	2	
-16	MS35059-27	. SWITCH-PRIME	1	
-17	0813474-1	. BAR-MAGNETO ON SWITCHES	1	
		ATTACHING PARTS		
	0813500-23	. BRACKET	2	
	MS20392-1C7	. PIN	2	
	MS24665-130	. PIN-COTTER	2	
		---*---		
	5318115-24	. BUS BAR-MAGNETO SWITCHES	1	
-18	S382-2	. SWITCH-MAGNETO LH & RH ENGINE	4	
-19	CM2692-14A5S	. PLUG BUTTON	1	
	5117239-21	. CONTROL ASSY-OXYGEN 11.0 CU FT	1	
	5117239-29	. CONTROL ASSY-OXYGEN 48.3 & 76.6 CU FT	1	
		ATTACHING PARTS		
	MS21919WDG3	. CLAMP	5	
	MS27039-0807	. SCREW	2	
	NAS43DD3-8A	. SPACER	2	
	MS27039-1-12	. SCREW	2	
	MS21044N3	. NUT	2	
		---*---		
-20	C668516-0101	. GAGE-DIFFERENTIAL PRESSURE	1	
		ATTACHING PARTS		
-21	CM3559-6-18G	. SCREW	2	
	MS33737-16	. NUT	2	
		---*---		
-22	C668517-0101	. INDICATOR-RATE OF CHANGE	1	
		ATTACHING PARTS		
-23	CM3559-6-18G	. SCREW	3	
	MS33737-16	. NUT	3	
		---*---		
-24	0813525-4	. SWITCH-GEAR UP & DOWN	1	
	0813502-5	. KNOB	1	
	S1216-1	. NUT	1	
	MS25081-4	. WASHER-KEY	1	
-25	9910115-2	. INDICATOR-GEAR UNLOCKED	1	
	MS25237-327	. BULB ARSH	2	
	5118412-2	. DIODE ASSY-LANDING GEAR CIRCUIT	1	
		ATTACHING PARTS		
	MS24693S7	. SCREW	2	
	MS21044N04	. NUT	2	
		---*---		
-26	9910115-1	. INDICATOR-NOSE	1	
	MS25237-327	. BULB	4	
-27	5115250-1	. BLOCK ASSY-FLAP PRESELECT INDICATOR MRSP	1	
		ATTACHING PARTS		
	MS21083N06	. NUT	2	
	#6	. WASHER-SHOULDER		
		---*---		
	5115250-2	. . BLOCK	1	
	5115250-3	. . STUD	2	
	58T1	. . LAMP LOSI	2	
	D211-100-2	. . TIP-BLUE MRSP	1	
	CM39-03-07	. . TIP-BLUE ALT FOR D211-100-2 CMLW	1	
-28	5115223-5	. GUARD ASSY-FLAP PRESELECT MRSP	1	
		ATTACHING PARTS		
	MS21044N04	. NUT	2	
	AN960-4	. WASHER	2	
	N6505	. INSULATOR NYLO	1	
		---*---		
	5115223-6	. . GUARD	1	
	5115223-4	. . STUD	2	
	58T1	. . LAMP LOSI	3	
	D211-100-2	. . TIP-BLUE MRSP	3	
	CM39-03-7	. . TIP-BLUE ALT FOR D211-100-2 CMLW	3	

CONTINUED

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
61 -29	5115251-1	. POINTER-FLAP PRESELECT	1	
-30	5115218-7	. ARM ASSY-PIVOT	1	
-31	MS25253-1	. SWITCH	1	
	JV5	. ACTUATOR MCS	1	
		ATTACHING PARTS		
-32	MS35206-219	. SCREW	2	
-33	AN960-4	. WASHER	2	
-34	MS21042L04	. NUT	2	
		---*---		
-35	S1104-3	. ROD END	1	
		ATTACHING PARTS		
-36	MS35215-62	. SCREW	1	
		---*---		
-37	NAS43HT3-60	. SPACER	1	
-38	MS21046C3	. NUT	1	
-39	MS20341-10S	. NUT	1	
		---*---		
-40	5315001-12	. CONTROL-FLAP PRESELECT	1	
		ATTACHING PARTS		
	MS9353-02	. CLAMP	AR	
	MS35215-59	. SCREW	AR	
	MS35215-55	. SCREW	AR	
	NAS43HT3-43	. SPACER	AR	
	MS21046C3	. NUT	AR	
		---*---		
-41	0813526-8	. KNOB ASSY	1	
		ATTACHING PARTS		
	AN565D6H2	. SCREW-SET	1	
		---*---		
-42	5115217-15	. LEVER ASSY-FLAP PRESELECT	1	
		ATTACHING PARTS		
-43	MS27039-1-42	. SCREW	1	
-44	AN960-516	. WASHER	1	
-45	3502-18-00	. SPRING WCUL	3	
-46	5115228-1	. SPACER	1	
-47		. DELETED NOT USED		
-48	MS35206-227	. SCREW	1	
-49	AN960-6	. WASHER	1	
-50	MS21042L06	. NUT	1	
		---*---		
-51	MS35206-256	. SCREW-FLAP PRESELECT STOP	2	
-52	5115228-2	. SPACER	2	
-53	AN960-6L	. WASHER	4	
-54	MS21042-08	. NUT	2	
-55	5316003-1	. CONTROL-CABIN AIR FWD & AFT	2	
	0813475-7	. KNOB	2	
-56	5117239-2	. CONTROL-PRESS AIR HEAT	1	
	0813475-7	. KNOB	1	
-57	5316003-1	. CONTROL-DEFROST	1	
	0813475-7	. KNOB	1	
-58	5117239-2	. CONTROL-CABIN HEAT	1	
	0813475-7	. KNOB	1	
-59	S382-2	. SWITCH-CABIN HEAT ON OFF	1	
-60	S382-1	. SWITCH-CABIN FAN	1	
-61	S382-1	. SWITCH-WEMAC BLOWER	1	
-62	SEE FIG 65	. GLOVE COMPARTMENT INSTL	1	
	SEE FIG 142	. CABIN STEREO INSTALLATION	REF	
-63	C662026-0106	. INDICATOR-MANIFOLD PRESSURE	1	
		ATTACHING PARTS		
-64	CM3559-6-18G	. SCREW	2	
	MS33737-16	. NUT	2	
		---*---		
-65	C668017-0101	. TACHOMETER	1	
	C668016-0101	. TACHOMETER-DUAL SYNCHRONOUS	1	
		ATTACHING PARTS		
-66	CM3559-6-18G	. SCREW	2	
	MS33737-16	. NUT	2	
		---*---		
-67	C662020-0106	. GAGE-FUEL FLOW	1	
		ATTACHING PARTS		
-68	CM3559-6-18G	. SCREW	2	
	MS33737-16	. NUT	2	
		---*---		
-69	C662019-0101	. GAGE-ENGINE LH & RH	2	
		ATTACHING PARTS		
-70	CM3559-6-18G	. SCREW	2	
	MS33737-16	. NUT	2	
		---*---		
-71	SEE FIG 148	. INSTRUMENT PANEL LIGHTING FIXTURES	1	
-72	5314107-3	. AVIONICS PANEL	1	D
	5314107-4	. AVIONICS PANEL	1	E
		ATTACHING PARTS		
	CM3559-8-10G	. SCREW	7	
		---*---		
-73	SEE FIG 63	. FLIGHT INSTRUMENT PANEL INSTL	1	

CONTINUED

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
61 -74	5311280-2	GLARESHIELD ASSY	1	
		ATTACHING PARTS		
-75	MS35198-57	SCREW	AR	
-76	MS27129-10	WASHER	AR	
		---*---		
-77		DELETED NOT USED		
-78	C660501-0403	COMPASS	1	
		ATTACHING PARTS		
-79	MS35198-27	SCREW	2	
-80	AN960PD6	WASHER	4	
		---*---		
-81	5119405-2	COMPASS CARD WITH RADIO EQUIPMENT	1	
	5119405-3	COMPASS CARD WITHOUT RADIO EQUIPMENT	1	
		ATTACHING PARTS		
	CM2960-4-4	SCREW	2	
		---*---		
	5119405-4	COVER-COMPASS CARD	1	
-82	5311519-3	PADDING-LH	1	
		ATTACHING PARTS		
-83	S1021Z4-8	SCREW	9	
		---*---		
-84	5311519-2	PADDING-RH	1	
		ATTACHING PARTS		
-85	S1021Z4-8	SCREW	10	
		---*---		
-86	5300935-5	PLACARD-AIR CONDITIONING	1	
-87	MS35059-21	SWITCH COOL-CIRCULATE-OFF	1	
-88	HE81106-3	RHEOSTAT-AIR CONDITIONING	HEAC 1	
	5151	KNOB-RHEOSTAT	OM 1	
-89	MS35059-23	SWITCH BLOWER-HIGH-LOW	1	
-90	5015033-4	BRACKET-PARKING BRAKE CONTROL	1	
		ATTACHING PARTS		
	MS35207-264	SCREW	2	
	MS21045L3	NUT	2	
		---*---		
-91	5017525-21	CONTROL ASSY-PARKING BRAKE FSO 5117239-32	1	A
	5117239-32	CONTROL ASSY-PARKING BRAKE	1	B
-92	5315001-7	CONTROL-COWL FLAP LH & RH	2	
-93	5315001-13	CONTROL-ALTERNATE AIR LH	1	
	5315001-14	CONTROL-ALTERNATE AIR RH	1	
		ATTACHING PARTS		
	MS21919DG4	CLAMP	2	
	S1021Z10-8C	SCREW	1	
	NAS446-5-1	NUT	1	
		---*---		
-94	CM2990B1	LIGHT-POST PEDESTAL	1	
-95	855SIA4D	LIGHT ASSY-PROP SYNCH PEDESTAL	SLCO 1	
-96	5618007-14	DIMMER ASSY-LIGHT FUEL QTY	1	
		ATTACHING PARTS		
-97	MS35206-231	SCREW	2	
		---*---		
	363-11-10-010	STRIP-MARKER	CIN 1	

A---340-0001 THRU 340-0010
B---340-0011 THRU 340-0150
C---340-0001 THRU 340-0150
D---340-0001 THRU 340-0079
E---340-0080 THRU 340-0150

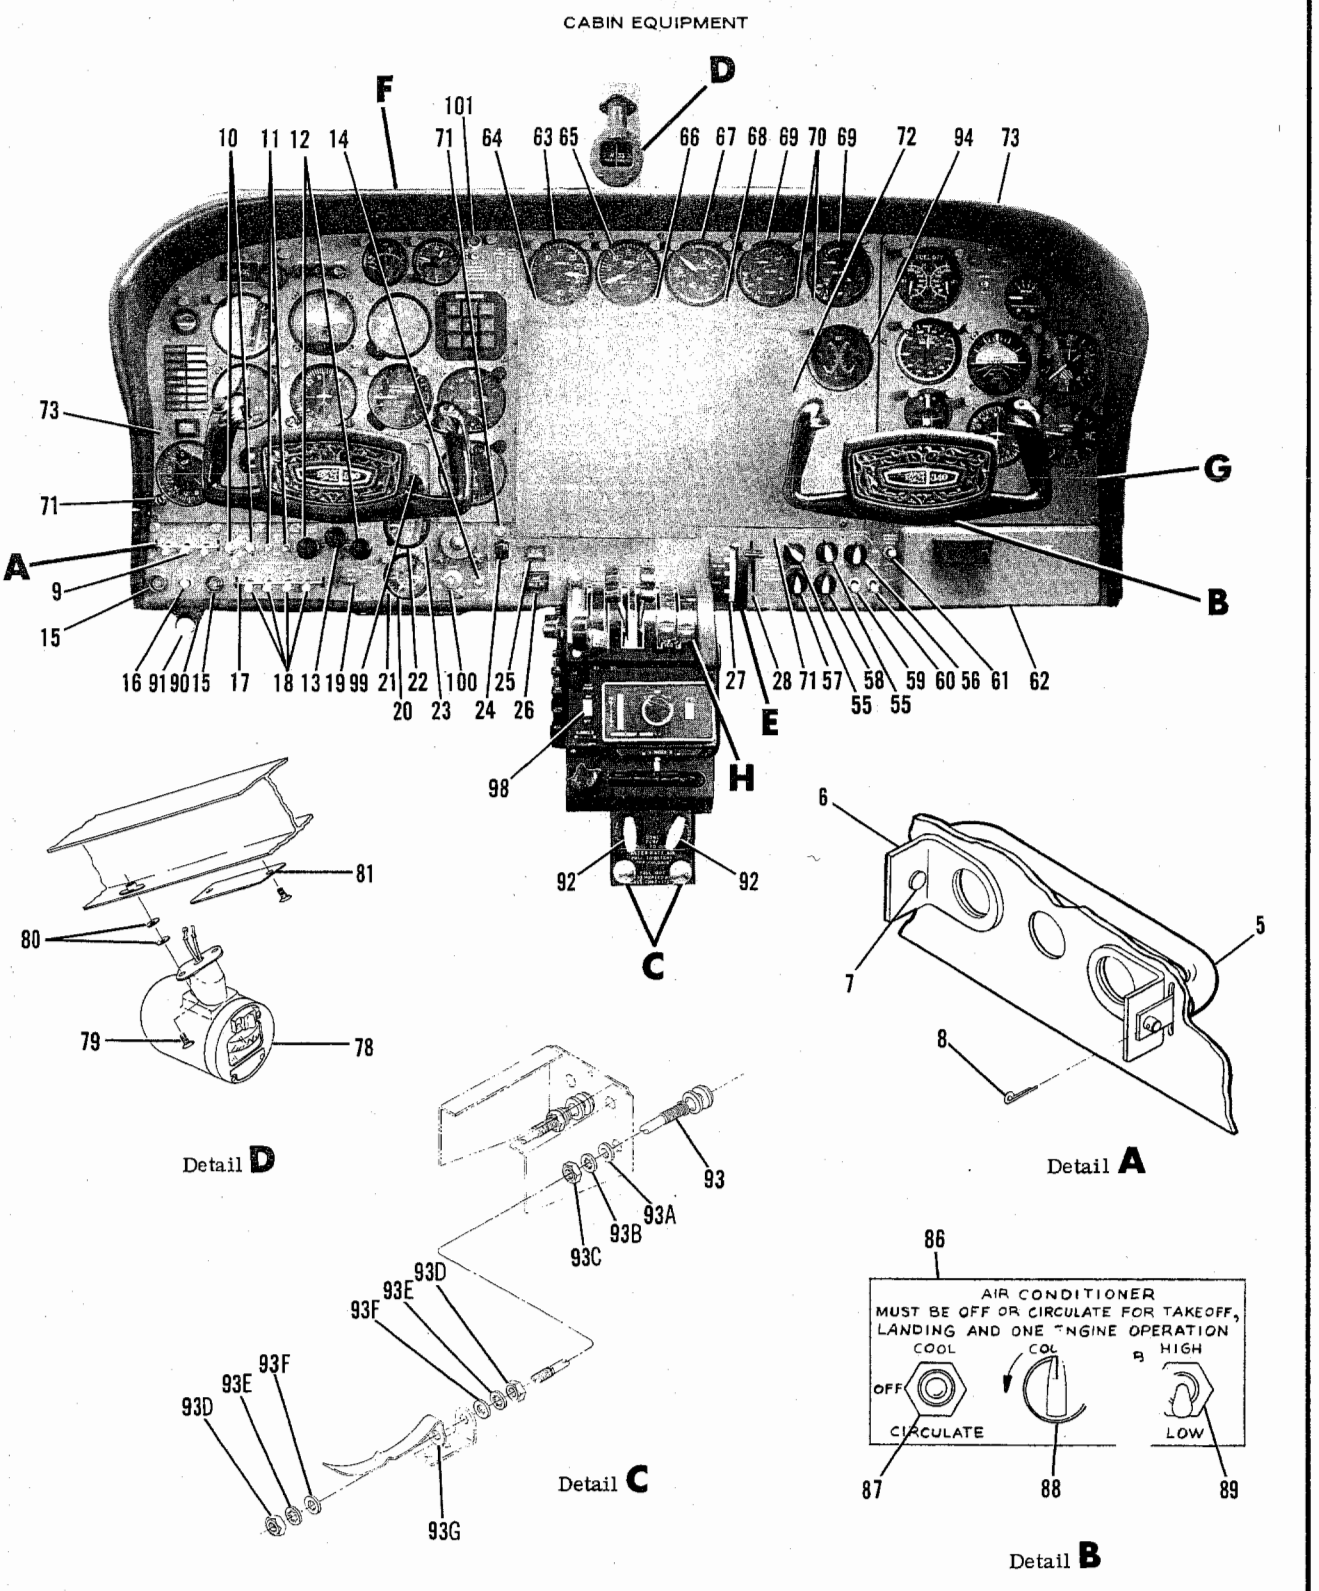

NOTE: This instrument panel illustration is a "TYPICAL" instrument location arrangement. Panel arrangement is optional

A14141027
B14141036
C14143065
D14141003

Figure 62. Instrument Panel Equipment Installation (Sheet 1 of 2)

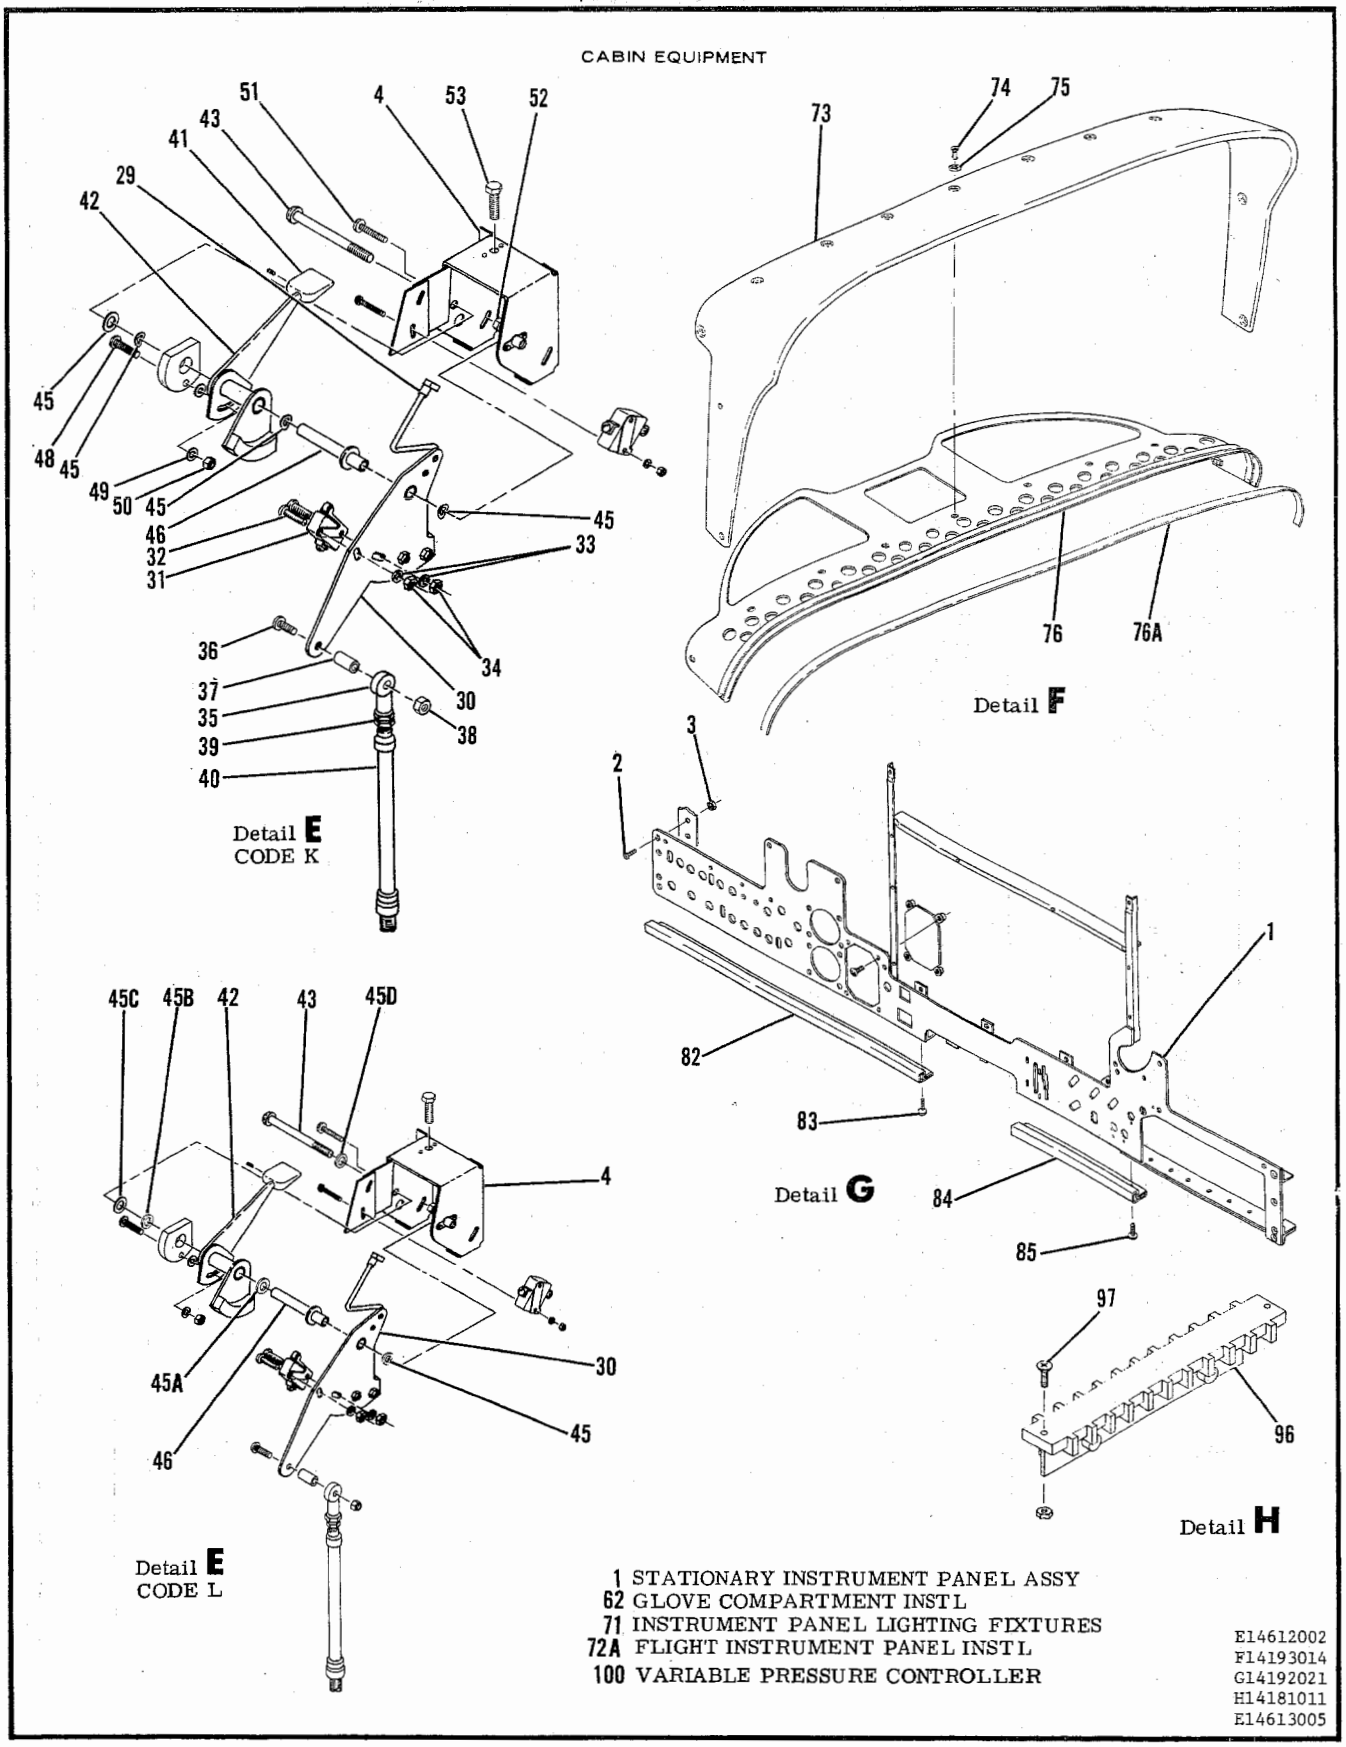

Figure 62. Instrument Panel Equipment Installation (Sheet 2)

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
62 -		INSTRUMENT PANEL EQUIPMENT INSTALLATION	NP	A
-1	SEE FIG 19	. PANEL ASSY-STATIONARY INSTRUMENT	1	
		ATTACHING PARTS		
-2	MS24694-47	. SCREW	9	
-3	MS21044N3	. NUT	9	
		---*---		
-4	5615221-8	. . BRACKET ASSY-FLAP PRE-SELECT FSO 5615221-10	1	F
	5615221-10	. . BRACKET ASSY-FLAP PRE-SELECT WEU 5615221-13	1	G
	5615221-13	. . BRACKET ASSY-FLAP PRE-SELECT	1	T
-5	0813474-2	. BAR-BATTERY & ALTERNATOR SWITCHES	1	
		ATTACHING PARTS		
-6	0813500-23	. BRACKET	2	Q
	0813500-128	. BRACKET	2	R
-7	MS20392-1C7	. PIN	2	
-8	MS24665-130	. PIN-COTTER	2	
		---*---		
-9	MS35059-22	. SWITCH-L ALT BATT ON R ALT FSO 8501K4 OR 2TL1-2	3	
	8501K4	. SWITCH-L ALT BATT ON R ALT	CUT	
	2TL1-2	. SWITCH-L ALT BATT ON R ALT ALT FOR 8501K4	MCS	
	.187-6	. WHITE TIP	SIV	
-10	S392-1	. SWITCH-AUX PUMPS	2	
	.187-6	. WHITE TIP	SIV	
-11	CM2692-16A3S	. PLUG BUTTON	2	
	MST205N	. SWITCH-FUEL TRANSFER	1	
-12	5117239-20	. CONTROL-PRESS AIR DUMP LH & RH	2	D
	5117239-48	. CONTROL-PRESS AIR DUMP LH & RH	2	E
-13	5315001-10	. CONTROL ASSY-RAM AIR	1	
	KN678-1	. KNOB-RAM AIR CONTROL	ARN	
-14	MSTL206N	. SWITCH-CABIN PRESSURIZE-DEPRESSURIZE	AELM	P
	8E2011	. SWITCH-CABIN PRESSURIZE-DEPRESSURIZE	1	N
	C15	. CAP-WHITE	AELM	
-15	9910079-1	. SWITCH-START LEFT & RIGHT	2	
	15PA17	. GUARD-SWITCH LEFT & RIGHT	MRSP	
-16	MS35059-27	. SWITCH-PRIME WEU 8834K5	1	V
	8834K5	. SWITCH-PRIME	CHPC	W
	.187-6	. WHITE TIP	SIV	
-17	0813474-1	. BAR-MAGNETO ON SWITCHES	1	
		ATTACHING PARTS		
	0813500-23	. BRACKET	2	
	MS20392-1C7	. PIN	2	
	MS24665-130	. PIN-COTTER	2	
		---*---		
	5318115-24	. BUS BAR-MAGNETO SWITCHES	1	
-18	S382-2	. SWITCH-MAGNETO LH & RH ENGINE	4	
	.187-6	. WHITE TIP	SIV	
-19	CM2692-14A5S	. PLUG BUTTON	4	
	5117239-21	. CONTROL ASSY-OXYGEN 11.0 CU FT	1	
	5117239-29	. CONTROL ASSY-OXYGEN 48.3 & 76.6 CU FT	1	
		ATTACHING PARTS		
	MS21919WDG3	. CLAMP	5	
	MS27039-0807	. SCREW	2	
	NAS43DD3-8A	. SPACER	2	
	MS27039-1-12	. SCREW	2	
	MS21044N3	. NUT	2	
		---*---		
-20	C668516-0101	. GAGE-DIFFERENTIAL PRESSURE	1	
		ATTACHING PARTS		
-21	CM3559-6-18G	. SCREW	2	
	MS33737-16	. NUT	2	
		---*---		
-22	C668517-0101	. INDICATOR-RATE OF CHANGE	1	B
		ATTACHING PARTS		
-23	CM3559-6-18G	. SCREW	3	
	MS33737-16	. NUT	3	
		---*---		
-24	0813525-4	. SWITCH-GEAR UP & DOWN	1	
	0813502-5	. KNOB	1	
	S1216-1	. NUT	1	
	MS25081-4	. WASHER-KEY	1	
-25	9910115-2	. INDICATOR-GEAR UNLOCKED	1	
	MS25237-327	. BULB	ARSH	2
	5118412-2	. DIODE ASSY-LANDING GEAR CIRCUIT	1	
		ATTACHING PARTS		
	MS24693S7	. SCREW	2	
	MS21044N04	. NUT	2	
		---*---		
-26	9910115-1	. INDICATOR-NOSE	1	
	MS25237-327	. BULB	4	
-27	5115250-1	. BLOCK ASSY-FLAP PRESELECT INDICATOR	MRSP	1
		ATTACHING PARTS		
	MS21083N06	. NUT	2	
	#6	. WASHER-SHOULDER		
		---*---		
	5115250-2	. BLOCK	1	
	5115250-3	. STUD	2	
	58T1	. . LAMP	LOSI	2
	D211-100-2	. . TIP-BLUE	MRSP	1
	CM39-C3-07	. . TIP-BLUE ALT FOR D211-100-2	CMLW	1

CONTINUED

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
62 -28	5115223-5	. GUARD ASSY-FLAP PRESELECT . . . . . MRSP	1	
		ATTACHING PARTS		
	MS21044N04	. NUT	2	
	AN960-4	. WASHER	2	
	N6505	. INSULATOR . . . . . NYLO	1	
		---*---		
	5115223-6	. . GUARD	1	
	5115223-4	. . STUD	2	
	58T1	. . LAMP . . . . . LOSI	3	
	D211-100-2	. . TIP-BLUE . . . . . MRSP	3	
	CM39-03-7	. . TIP-BLUE ALT FOR D211-100-2 . . . . . CMLW	3	
-29	5115251-1	. POINTER-FLAP PRESELECT	1	
-30	5115218-7	. ARM ASSY-PIVOT	1	
-31	MS25253-1	. SWITCH	1	
	JV5	. ACTUATOR . . . . . MCS	1	
		ATTACHING PARTS		
-32	MS35206-219	. SCREW	2	
-33	AN960-4	. WASHER	2	
-34	MS21042L04	. NUT	2	
		---*---		
-35	S1104-3	. ROD END	1	
		ATTACHING PARTS		
-36	MS35215-62	. SCREW	1	
		---*---		
-37	NAS43HT3-60	. SPACER	1	
-38	MS21046C3	. NUT	1	
-39	MS20341-10S	. NUT	1	
		---*---		
-40	5315001-12	. CONTROL-FLAP PRESELECT	1	
		ATTACHING PARTS		
	MS9353-02	. CLAMP	AR	
	MS35215-59	. SCREW	AR	
	MS35215-55	. SCREW	AR	
	NAS43HT3-43	. SPACER	AR	
	MS21046C3	. NUT	AR	
		---*---		
-41	0813526-8	. KNOB ASSY	1	
		ATTACHING PARTS		
	AN565D6H2	. SCREW-SET	1	
		---*---		
-42	5115217-15	. LEVER ASSY-FLAP PRESELECT	1	
		ATTACHING PARTS		
-43	MS27039-1-42	. SCREW	1	K
	MS27039-1-43	. SCREW	1	L
-44	AN960-516	. WASHER	1	
-45	3502-18-00	. SPRING . . . . . WCUL	3	K
	3502-18-00	. SPRING . . . . . WCUL	1	L
-45A	NAS1515ML5	. WASHER	1	K
-45B	AN960-516L	. WASHER	1	L
-45C	0861524-1	. WASHER	1	K
-45D	AN960-10L	. WASHER	1	L
-46	5115228-7	. SPACER	1	
-47		. DELETED NOT USED		
-48	MS35206-227	. SCREW	1	
-49	AN960-6	. WASHER	1	
-50	MS21042L06	. NUT	1	
		---*---		
-51	MS35206-246	. SCREW-FLAP PRESELECT STOP	1	
-52	MS21045L08	. NUT	1	
-53	NAS564-25	. SCREW ADJUST	1	
-54		. DELETED NOT USED		
-55	5316003-1	. CONTROL-CABIN AIR FWD & AFT	2	
	0813475-7	. KNOB	2	
-56	5117239-2	. CONTROL-PRESS AIR HEAT	1	
	0813475-7	. KNOB	1	
-57	5316003-1	. CONTROL-DEFROST	1	
	0813475-7	. KNOB	1	
-58	5117239-2	. CONTROL-CABIN HEAT	1	
	0813475-7	. KNOB	1	
-59	S382-2	. SWITCH-CABIN HEAT ON OFF	1	
	.187-6	. WHITE TIP . . . . . SIV	1	
-60	S382-1	. SWITCH-CABIN FAN	1	
	.187-6	. WHITE TIP . . . . . SIV	1	
-61	S382-1	. SWITCH-WEMAC BLOWER	1	H
	.187-6	. WHITE TIP . . . . . SIV	1	J
	CM2692-15A1S	. PLUG BUTTON	1	
-62	SEE FIG 65	. GLOVE COMPARTMENT INSTL	1	
	SEE FIG 142	. CABIN STEREO INSTALLATION	REF	
-63	C662026-0106	. INDICATOR-MANIFOLD PRESSURE	1	Q
	C662026-0113	. INDICATOR-MANIFOLD PRESSURE	1	R
		ATTACHING PARTS		
-64	CM3559-6-18G	. SCREW	2	
	MS33737-16	. NUT	2	
		---*---		
-65	C668017-0101	. TACHOMETER	1	
	C668016-0101	. TACHOMETER-DUAL SYNCHRONOUS	1	
		ATTACHING PARTS		
-66	CM3559-6-18G	. SCREW	2	
	MS33737-16	. NUT	2	
		---*---		

CONTINUED

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
62 -67	C662020-0106	. GAGE-FUEL FLOW	1	
		ATTACHING PARTS		
-68	CM3559-6-18G	. SCREW	2	
	MS33737-16	. NUT	2	
		---*---		
-69	C662019-0101	. GAGE-ENGINE LH & RH	2	
		ATTACHING PARTS		
-70	CM3559-6-18G	. SCREW	2	
	MS33737-16	. NUT	2	
		---*---		
-71	SEE FIG 148	. INSTRUMENT PANEL LIGHTING FIXTURES	1	
-72	5314107-4	. AVIONICS PANEL	1	
		ATTACHING PARTS		
	CM3559-8-10G	. SCREW	7	
		---*---		
-72A	SEE FIG 63	. FLIGHT INSTRUMENT PANEL INSTL	1	
-73	5311280-7	. GLARESHIELD ASSY	1	
		ATTACHING PARTS		
-74	S1021A8-8C	. SCREW	AR	
-75	MS27129-10	. WASHER	AR	
		---*---		
-76	5311280-6	. COVER-DECK	1	
-76A	5311280-10	. WELT	1	
-77		. DELETED NOT USED		
-78	C660501-0403	. COMPASS	1	
		ATTACHING PARTS		
-79	MS35198-27	. SCREW	2	
-80	AN960PD6	. WASHER	4	
		---*---		
-81	5119405-2	. COMPASS CARD WITH RADIO EQUIPMENT	1	
	5119405-3	. COMPASS CARD WITHOUT RADIO EQUIPMENT	1	
		ATTACHING PARTS		
	CM2960-4-4	. SCREW	2	
		---*---		
	5119405-4	. COVER-COMPASS CARD	1	
-82	5311519-3	. PADDING-LH	1	
		ATTACHING PARTS		
-83	S1021Z4-8	. SCREW	9	
		---*---		
-84	5311519-4	. PADDING-RH	1	
		ATTACHING PARTS		
-85	S1021Z4-8	. SCREW	10	
		---*---		
-86	5300935-5	. PLACARD-AIR CONDITIONING	1	
-87	MS35059-21	. SWITCH COOL-CIRCULATE-OFF	1	
-88	HE81106-3	. RHEOSTAT-AIR CONDITIONING	1 HEAC	
	5151	. KNOB-RHEOSTAT	1 OM	
-89	MS35059-23	. SWITCH BLOWER-HIGH-LOW	1	
-90	5015033-4	. BRACKET-PARKING BRAKE CONTROL	1	
		ATTACHING PARTS		
	MS35207-264	. SCREW	2	
	MS21045L3	. NUT	2	
		---*---		
-91	5117239-32	. CONTROL ASSY-PARKING BRAKE		
-92	5315001-7	. CONTROL-COWL FLAP LH & RH WEU 5315002-9	2	P
	5315002-9	. CONTROL-COWL FLAP LH & RH WEU 9910269-9 OR -10	2	S
	9910269-9	. CONTROL-COWL FLAP LH	1	R
	9910269-10	. CONTROL-COWL FLAP RH	1	R
	0850527-2	. HANDLE-COWL FLAP CONTROL LH & RH	2	U
	MS16562-4	. PIN-HANDLE ATTACH	1	U
-93	5315001-13	. CONTROL-ALTERNATE AIR LH WEU 5315002-7	1	P
	5315002-7	. CONTROL-ALTERNATE AIR LH WEU 9910269-7	1	S
	9910269-7	. CONTROL-ALTERNATE AIR LH	1	R
	5315001-14	. CONTROL-ALTERNATE AIR RH WEU 5315002-8	1	P
	5315002-8	. CONTROL-ALTERNATE AIR RH WEU 9910269-8	1	S
	9910269-8	. CONTROL-ALTERNATE AIR RH	1	R
	MS21919DG4	. CLAMP	2	
		ATTACHING PARTS		
	MS27039-0805	. SCREW	1	
	MS21083N08	. NUT	1	
		---*---		
-93A	AN960-716	. WASHER-LH & RH	2	
-93B	MS35333-43	. LOCKWASHER-LH & RH	2	
-93C	AN316-7R	. NUT-LH & RH	2	
-93D	AN316-6R	. NUT-LH & RH	4	
-93E	MS35333-42	. LOCKWASHER-LH & RH	4	
-93F	AN960-616	. WASHER-LH & RH	4	
-93G	5650003-7	. SPRING-LH & RH	2	
-94	C668532-0101	. INDICATOR-E G T	1	Q
	205-218	. INDICATOR-EGT & OAT ALIN	1	R
		ATTACHING PARTS		
	MS24693BB33	. SCREW	2	
	MS33737-16	. NUT	2	
		---*---		
-95		. DELETED NOT USED		
-96	SEE FIGURE 141	. DIMMER ASSY-LIGHT FUEL QTY	1	
-97		. DELETED NOT USED		

CONTINUED

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
62 -98	41536-0000	. SWITCH-YAW DAMPENER NOT USED WITH 800 IFCS . . . . . ARC	1	
		ATTACHING PARTS		
	CM3559-4-12G	. SCREW	2	
		---*---		
-99	0513052-11	. CIGAR LIGHTER ASSY	1	M
	9910220-1	. CIGAR LIGHTER ASSY	1	NNNNN
	9910220-8	. . UNIT-POP OUT	1	
	9910220-3	. . . KNOB	1	
	9910220-4	. . . UNIT-HEATING	1	
-100	SEE FIG 118	. PRESSURE CONTROLLER-VARIABLE	REF	
-101	MST405N	. SWITCH-PROPELLER SYNC . . . . . AELM	1	
		A---340-0151 & ON		
		B---340-0151 THRU 340-0157		
		C---340-0158 & ON		
		D---340-0151 THRU 340-0167		
		E---340-0168 & ON		
		F---340-0151 THRU 340-0257		
		G---340-0258 THRU 340A0040		
		H---340-0151 THRU 340-0300		
		J---340-0301 & ON		
		K---340-0151 THRU 340-0342		
		L---340-0343 & ON		
		M---340-0301 THRU 340-0500		
		N---340-0501 & ON		
		P---340-0151 THRU 340-0500		
		Q---340-0151 TO 340A0001		
		R---340A0001 & ON		
		S---340-0501 TO 340A0001		
		T---340A0041 & ON		
		U---340A0007 & ON		
		V---340-0001 THRU 340A0012		
		W---340A0013 & ON		

CABIN EQUIPMENT

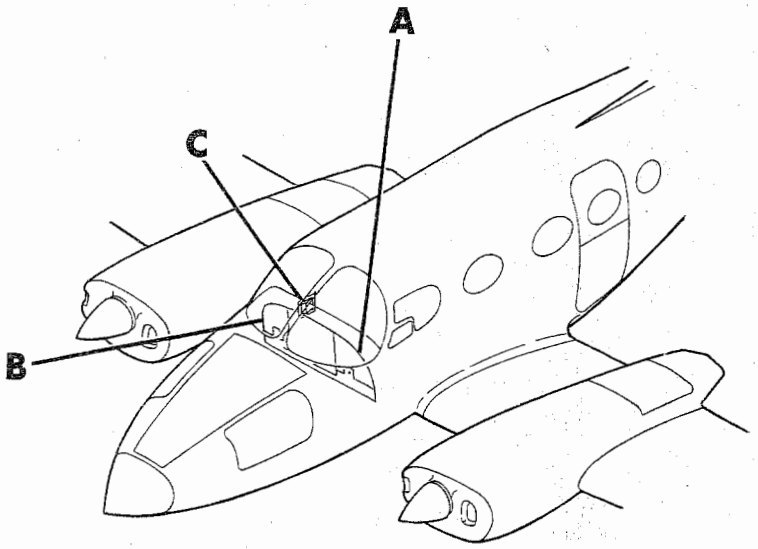

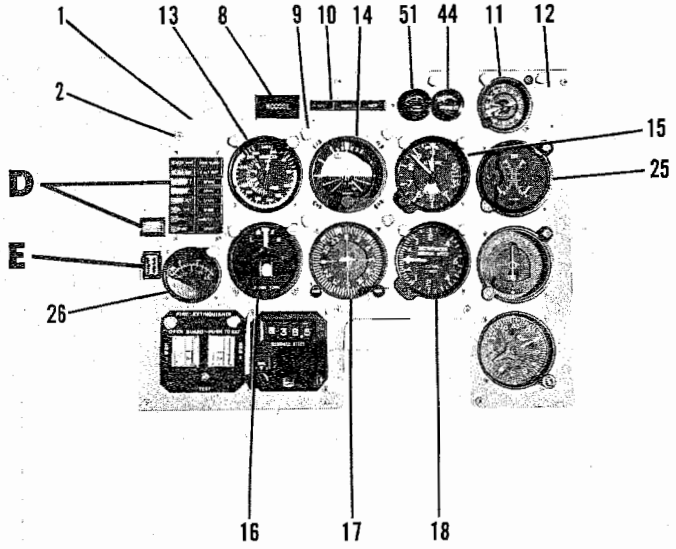

Detail **A**

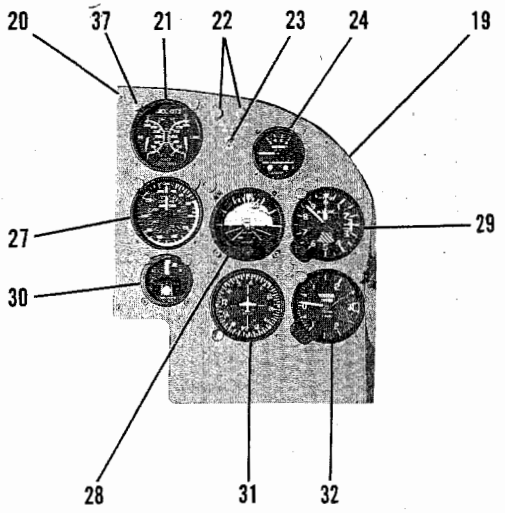

Detail **B**

NOTE: This instrument panel illustration is a "Typical" instrument location arrangement. Panel arrangement is optional.

Figure 63. Flight Instrument Panel Installation (Sheet 1 of 2)

CABIN EQUIPMENT

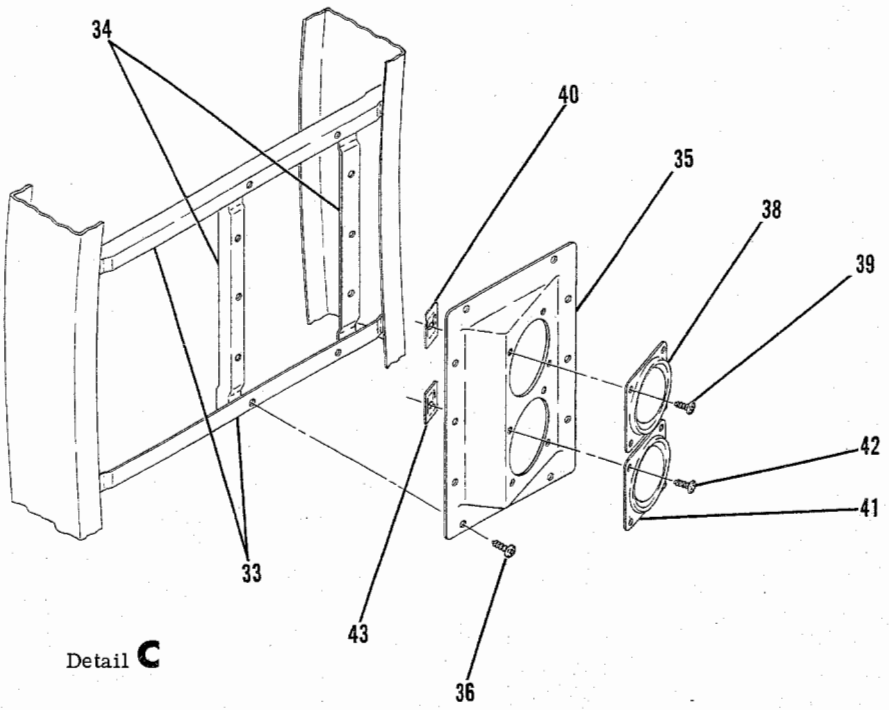

Detail **C**

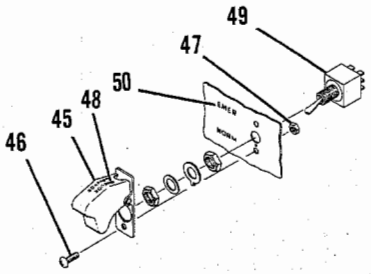

Detail **E**

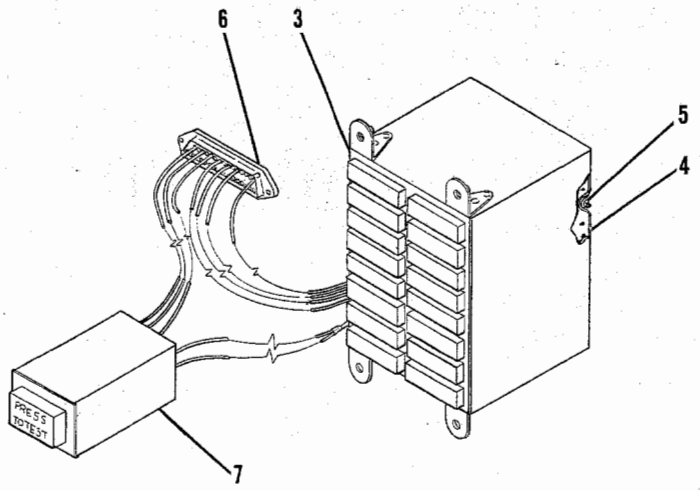

Detail **D**

Figure 63. Flight Instrument Panel Installation (Sheet 2)

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
63 -			FLIGHT INSTRUMENT PANEL INSTALLATION	NP	A
-1	5314106-3		. PANEL-FLIGHT INSTRUMENT LH	1	B
	5314106-7		. PANEL-FLIGHT INSTRUMENT LH	1	B
	5314106-4		. PANEL-FLIGHT INSTRUMENT LH E G T	1	A
	5314106-8		. PANEL-FLIGHT INSTRUMENT LH E G T	1	B
	5314106-5		. PANEL-FLIGHT INSTRUMENT LH O A T	1	A
	5314106-9		. PANEL-FLIGHT INSTRUMENT LH O A T	1	B
	5314106-6		. PANEL-FLIGHT INSTRUMENT LH E G T & O A T	1	A
	5314106-10		. PANEL-FLIGHT INSTRUMENT LH E G T & O A T	1	B
			ATTACHING PARTS		
-2	MS27039-0809		. SCREW	AR	
			---*---		
	5618009-7		. PANEL ASSY-ANNUNCIATOR	1	C
			ATTACHING PARTS		
	CM3559-6-49		. SCREW	4	
			---*---		
-3	351-21672-005		. . INDICATOR MRSP	1	
	1999-12		. . . LENS-HEATER-OVHT AMBER POSITION 1 MRSP	1	
	1999-13		. . . LENS-LH ALT OUT AMBER POSITION 2 MRSP	1	
	1999-11		. . . LENS-SPARE WHITE POSITION 3 MRSP	1	
	1999-1		. . . LENS-LH A/P PUMP AMBER POSITION 3 MRSP	1	
	1999-11		. . . LENS-SPARE WHITE POSITION 4 MRSP	1	
	1999-2		. . . LENS-LH TRANS AMBER POSITION 4 MRSP	1	
	1999-14		. . . LENS-CABIN ALT AMBER POSITION 5 MRSP	1	
	1999-15		. . . LENS-T&B TEST GREEN POSITION 6 MRSP	1	
	1999-11		. . . LENS-SPARE WHITE POSITION 7 MRSP	1	
	1999-11		. . . LENS-SPARE WHITE POSITION 8 MRSP	1	
	1999-4		. . . LENS-INTERCOMM WHITE POSITION 8 MRSP	1	
	1999-16		. . . LENS-DOOR WARNING RED POSITION 9 MRSP	1	
	1999-17		. . . LENS-RH ALT OUT AMBER POSITION 10 MRSP	1	
	1999-11		. . . LENS-SPARE WHITE POSITION 11 MRSP	1	
	1999-5		. . . LENS-RH A/P PUMP AMBER POSITION 11 MRSP	1	
	1999-11		. . . LENS-SPARE WHITE POSITION 12 MRSP	1	
	1999-6		. . . LENS-RH TRANS AMBER POSITION 12 MRSP	1	
	1999-11		. . . LENS-SPARE WHITE POSITION 13 MRSP	1	
	1999-7		. . . LENS-BACK COURSE AMBER POSITION 13 MRSP	1	
	1999-11		. . . LENS-SPARE WHITE POSITION 14 MRSP	1	
	1999-8		. . . LENS-SURFACE DEICE GREEN POSITION 14 MRSP	1	
	1999-18		. . . LENS-COURTESY LIGHT WHITE POSITION 15 MRSP	1	
	1999-11		. . . LENS-SPARE WHITE POSITION 16 MRSP	1	
	T1-3-4		. . LAMP-ANNUNCIATOR LENS LIGHTING 2 PER LENS MRSP	32	
-4	9910072-6		. . BOARD-PRINTED CIRCUIT	1	
-5	1N5061		. . DIODE	28	
-6	17-20370		. . PLUG-ELECTRICAL AMBE	1	
	17-313-01		. . CLAMP-PLUG AMPE	1	
-7	1786-7		. . SWITCH-PRESS TO TEST MRSP	1	
-8	90E14		. . ADAPTER-REAR MOUNTING MRSP	1	
	SEE FIG 1		. PLACARD-RADIO CALL	1	
			ATTACHING PARTS		
	S1022Z4-4B		. SCREW	2	
			---*---		
-9	SEE FIG 148		. INSTRUMENT PANEL LIGHTING FIXTURES	1	
-10	SEE FIG 150		. MARKER BEACON LIGHTS	1	
-11	C664506-0102		. CLOCK	1	
	C664507-0101		. CLOCK GMT	1	
			ATTACHING PARTS		
	CM3559-6-18G		. SCREW	1	
	MS33737-16		. NUT	1	
			---*---		
-12	5300181-2		. PLACARD-MANIFOLD PRESSURE LIMITS	1	
-13	C661040-0106		. INDICATOR-AIRSPEED MPH & KNOTS	1	
	C661045-0106		. INDICATOR-TRUE AIRSPEED	1	
			ATTACHING PARTS		
	CM3559-6-18G		. SCREW	2	
	MS33737-16		. NUT	2	
			---*---		
-14	C661055-0102		. GYRO-HORIZON WEU C661055-0102	1	
	C661055-0103		. GYRO-HORIZON	1	
	37570-0002	#	. GYRO-HORIZON USED WITH 400A AUTO PILOT ARC	1	D
			FSO 37570-0106		
	37570-0106	#	. GYRO-HORIZON USED WITH 400A AUTOPILOT ARC	1	E
	37570-1002	#	. GYRO-HORIZON USED WITH 400A AUTOPILOT		
			ALT FOR 37570-0106		
			ATTACHING PARTS		
	CM3559-6-16G		. SCREW	4	
			---*---		
-15	C661014-0101		. ALTIMETER	1	
	42540-3128		. INDICATOR-ALTIMETER ENCODER INCHES ARC	1	
	C661025-0101		. ALTIMETER MILIBAR	1	
	42540-3228		. INDICATOR-ALTIMETER ENCODER MILIBAR ARC	1	
			ATTACHING PARTS		
	CM3559-6-18G		. SCREW	1	
	MS33737-16		. NUT	1	
			---*---		
-16	C661031-0101		. INDICATOR-TURN & BANK	1	
	C661003-0203		. INDICATOR-TURN COORDINATOR	1	
	C661003-0505		. INDICATOR-TURN COORDINATOR ALT FOR C661003-0203	1	
			ATTACHING PARTS		
	CM3559-6-18G		. SCREW	2	
	MS33737-16		. NUT	2	
			---*---		

CONTINUED

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
63 -17	C661053-0101	. GYRO-DIRECTIONAL	1	
	40760-0101 #	. GYRO-DIRECTIONAL USED WITH 400A AUTOPILOT ARC	1	
	40840-0101 #	. GYRO-DIRECTIONAL SLAVED USED WITH 400A AUTOPILOT ARC	1	
	40840-0201 #	. GYRO-DIRECTIONAL SLAVED WITH HEADING BOOTSTRAP ARC	1	
		ATTACHING PARTS		
	CM3559-6-16G	. SCREW	4	
		---*---		
-18	C661035-0101	. INDICATOR-VERTICAL SPEED	1	
	C661009-0101	. INDICATOR-VERTICAL SPEED INSTANTANEOUS	1	
		ATTACHING PARTS		
	CM3559-6-18G	. SCREW	1	
	MS33737-16	. NUT	1	
		---*---		
-19	5314108-4	. PANEL-FLIGHT INSTRUMENT RH STD	1	B
	5314108-5	. PANEL-FLIGHT INSTRUMENT RH STD	1	C
	5314108-10	. PANEL-FLIGHT INSTRUMENT RH OPTIONAL	1	C
	5314108-11	. PANEL-FLIGHT INSTR RH OPT FUEL QTY, VAC & AIR SPEED	1	C
		ATTACHING PARTS		
-20	MS27039-0809	. SCREW	7	
		---*---		
-21	DSF859	. INDICATOR-FUEL QUANTITY CAIR	1	
		ATTACHING PARTS		
	CM3559-6-18G	. SCREW	2	
	MS33737-16	. NUT	2	
		---*---		
-22	CM2692-15A1S	. PLUG BUTTON	2	
	855SI-A4D	. LIGHT-FUEL QUANITY LH AUX & RH AUX SLCG	2	
-23	7415	. SWITCH-MAIN AUX AMBE	1	
-24	C668519-0101	. GAGE VACUUM	1	
		ATTACHING PARTS		
	CM3559-6-18G	. SCREW	2	
	MS33737-16	. NUT	2	
		---*---		
-25	C668532-0101	. INDICATOR-E G T	1	
		ATTACHING PARTS		
	MS24693BB33	. SCREW	2	
	MS33737-16	. NUT	2	
		---*---		
-26	C668520-0101	. GAGE-O A T	1	
		ATTACHING PARTS		
	MS24693BB33	. SCREW	3	
	MS33737-16	. NUT	3	
		---*---		
-27	C661040-0106	. INDICATOR-AIRSPEED MPH & KNOTS	1	
	C661045-0106	. INDICATOR-TRUE AIRSPEED	1	
		ATTACHING PARTS		
	CM3559-6-18G	. SCREW	2	
	MS33737-16	. NUT	2	
		---*---		
-28	C661055-0102	. GYRO-HORIZON WEU C661055-0103	1	
	C661055-0103	. GYRO-HORIZON	1	
		ATTACHING PARTS		
	CM3559-6-18G	. SCREW	4	
	MS33737-16	. NUT	4	
		---*---		
-29	C661014-0101	. ALTIMETER	1	
	C661025-0101	. ALTIMETER MILIBAR	1	
		ATTACHING PARTS		
	CM3559-6-18G	. SCREW	1	
	MS33737-16	. NUT	1	
		---*---		
-30	C661032-0101	. INDICATOR-TURN & BANK	1	
		ATTACHING PARTS		
	CM3559-6-18G	. SCREW	3	
	MS35337-16	. NUT	3	
		---*---		
-31	C661053-0101	. GYRO-DIRECTIONAL	1	
		ATTACHING PARTS		
	CM3559-6-18G	. SCREW	4	
	MS33737-16	. NUT	4	
		---*---		
-32	C661035-0101	. INDICATOR-VERTICAL SPEED	1	
	C661009-0101	. INDICATOR-VERTICAL SPEED INSTANTANEOUS	1	
		ATTACHING PARTS		
	CM3559-6-18G	. SCREW	1	
	MS33737-16	. NUT	1	
		---*---		
	5314110-4	. SUPPORT ASSY-SECONDARY INSTRUMENT PANEL RH	1	
-33	5314110-3	. . ANGLE	2	
-34	5314110-2	. . ANGLE	2	
-35	5314113-1	. PANEL-SUPPORT SECONDARY INSTRUMENT	1	
		ATTACHING PARTS		
-36	S1021Z8-8C	. SCREW	10	
		---*---		
-37	CM2990G2	. LIGHT-POST	2	
-38	0813468-6	. COVER	1	
		ATTACHING PARTS		
-39	S1021Z8-8C	. SCREW	4	
-40	NAS446-2-3	. NUT	4	
		---*---		
	C668522-0101	. GAGE-OXYGEN	1	
		ATTACHING PARTS		
	MS24693BB30	. SCREW	3	
	MS33737-16	. NUT	3	
		---*---		

CONTINUED

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
63 -41	0813468-6	. COVER	1	
		ATTACHING PARTS		
-42	S1021Z8-8C	. SCREW	4	
-43	NAS446-2-3	. NUT	4	
		---*---		
	CM2926-1	. RECORDER-FLIGHT HOUR	1	
		ATTACHING PARTS		
	MS24693BB30	. SCREW	3	
	MS33737-16	. NUT	3	
		---*---		
-44	C662503-0102	. AMMETER-PROP DEICE	1	
-45	0831006-8	. GUARD-SWITCH LOCATOR BEACON	1	
		ATTACHING PARTS		
-46	MS35206-213	. SCREW	2	
-47	MS21083N04	. NUT	2	
		---*---		
-48	0800181-20	. PLACARD LOCATOR BEACON	1	
-49	S1696-1	. SWITCH-LOCATOR BEACON	1	
-50	0800181-21	. PLACARD-LOCATOR BEACON EMER NORM	1	
-51	40910-0000	. METER-SLAVING USED WITH 400A AUTOPILOT . . . . . ARC	1	
-52	SEE FIG 160	. FLUX DETECTOR INSTL	REF	
		# SEE CESSNA CRAFTED 400A NAV-OMATIC SERVICE/PARTS MANUAL		
		A---340-0001 THRU 340-0150 B---340-0001 THRU 340-0079 C---340-0080 THRU 340-0150 D---340-0001 THRU 340-0023 E---340-0024 THRU 340-0150		

CABIN EQUIPMENT

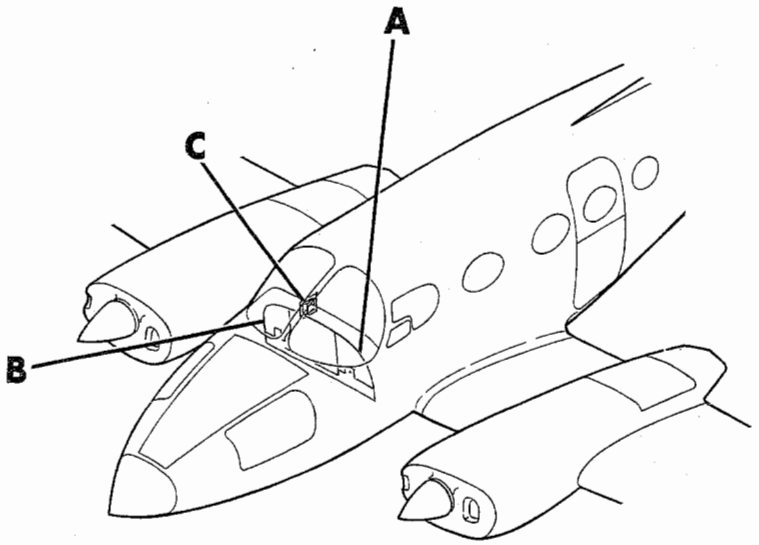

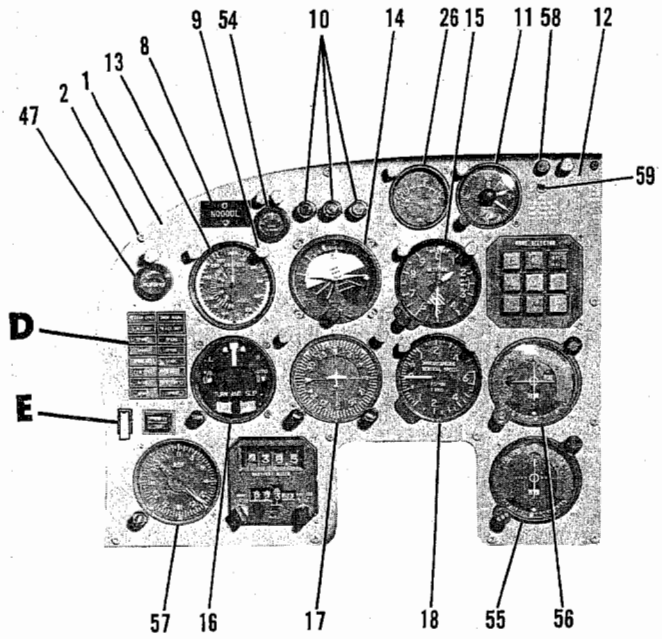

Detail **A**

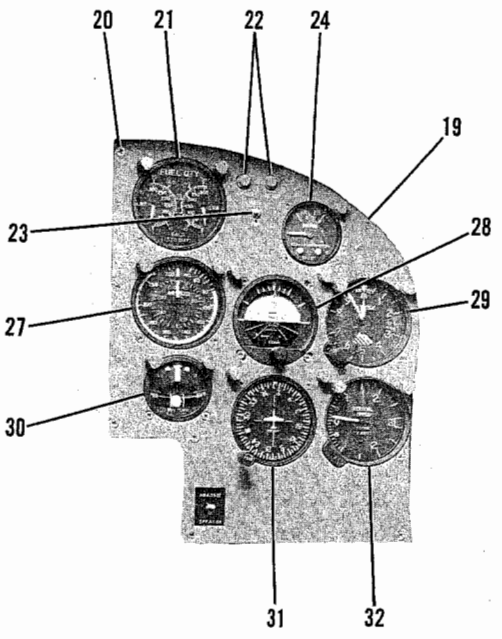

Detail **B**

NOTE: THIS INSTRUMENT PANEL ILLUSTRATION IS A "TYPICAL" INSTRUMENT LOCATION ARRANGEMENT. PANEL ARRANGEMENT IS OPTIONAL.

Figure 64. Flight Instrument Panel Installation (Sheet 1 of 2)

CABIN EQUIPMENT

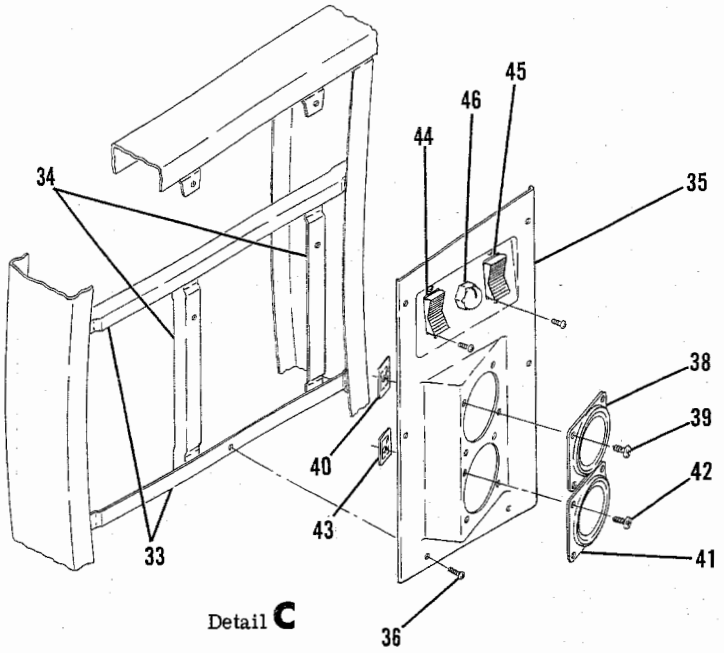

Detail **C**

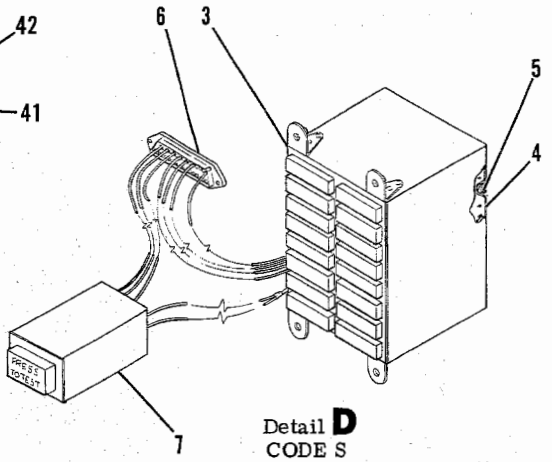

Detail **D**
CODE S

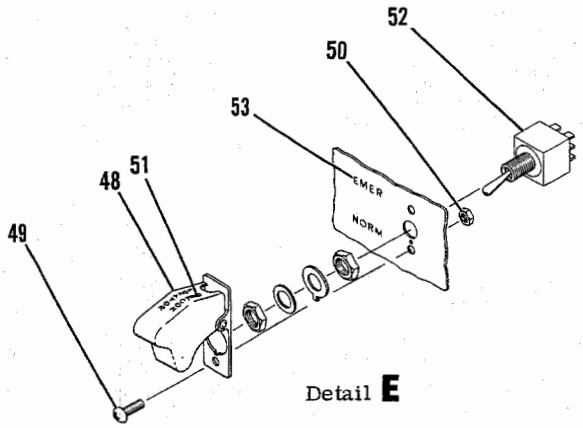

Detail **E**

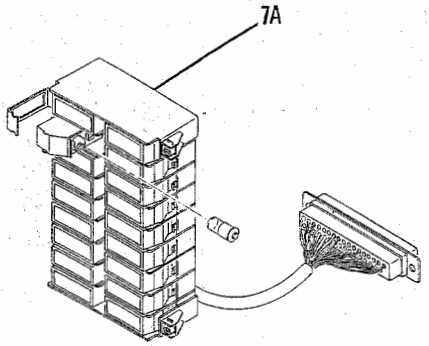

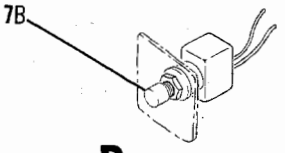

Detail **D**
CODE U

8 RADIO CALL PLACARD
9 INSTRUMENT PANEL LIGHTING FIXTURES
10 MARKER BEACON LIGHTS

C14192022
D14182005
D51181039
E14141023

Figure 64. Flight Instrument Panel Installation (Sheet 2)

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
64 -		FLIGHT INSTRUMENT PANEL INSTALLATION	NP	A
-1	5314106-11	. PANEL-FLIGHT INSTRUMENT LH FSO 5314106-15	1	D
	5314106-15	. PANEL-FLIGHT INSTRUMENT LH	1	E
	5314106-12	. PANEL-FLIGHT INSTRUMENT LH E G T FSO 5314106-16	1	D
	5314106-16	. PANEL-FLIGHT INSTRUMENT LH E G T	1	H
	5314106-24	. PANEL-FLIGHT INSTRUMENT LH E G T	1	K
	5314106-13	. PANEL-FLIGHT INSTRUMENT LH O A T FSO 5314106-17	1	D
	5314106-17	. PANEL-FLIGHT INSTRUMENT LH O A T	1	H
	5314106-25	. PANEL-FLIGHT INSTRUMENT LH O A T	1	K
	5314106-14	. PANEL-FLIGHT INSTRUMENT LH FSO 5314106-18 E G T & O A T	1	D
	5314106-18	. PANEL-FLIGHT INSTRUMENT LH E G T & O A T	1	H
	5314106-26	. PANEL-FLIGHT INSTRUMENT LH E G T & O A T	1	K
	5314106-19	. PANEL-FLIGHT INSTRUMENT LH FIRE DETECT	1	H
	5314106-27	. PANEL-FLIGHT INSTRUMENT LH FIRE DETECT	1	K
	5314106-20	. PANEL-FLIGHT INSTRUMENT LH FIRE DETECT & E G T	1	H
	5314106-28	. PANEL-FLIGHT INSTRUMENT LH FIRE DETECT & E G T	1	K
	5314106-21	. PANEL-FLIGHT INSTRUMENT LH FIRE DETECT & O A T	1	H
	5314106-29	. PANEL-FLIGHT INSTRUMENT LH FIRE DETECT & O A T	1	K
	5314106-22	. PANEL-FLIGHT INSTRUMENT LH FIRE DETECT & O A T & E G T	1	H
	5314106-30	. PANEL-FLIGHT INSTRUMENT LH FIRE DETECT, O A T & E G T ATTACHING PARTS	1	K
-2	MS27039-0809	. SCREW ---*---	AR	
	5618009-14	. PANEL ASSY-ANNUNCIATOR ATTACHING PARTS	1	S
	CM3559-6-49	. SCREW ---*---	4	
-3	351-21672-005	. . INDICATOR MRSP	1	L
	351-21672-007	. . INDICATOR MRSD	1	T
	1999-12	. . . LENS-HEATER-OVHT AMBER POSITION 1 MRSP	1	S
	1999-13	. . . LENS-LH ALT OUT AMBER POSITION 2 MRSP	1	S
	1999-11	. . . LENS-SPARE WHITE POSITION 3 MRSP	1	S
	1999-1	. . . LENS-LH A/P PUMP AMBER POSITION 3 MRSP	1	S
	1999-11	. . . LENS-SPARE WHITE POSITION 4 MRSP	1	S
	1999-2	. . . LENS-LH TRANS AMBER POSITION 4 MRSP	1	S
	1999-14	. . . LENS-CABIN ALT AMBER POSITION 5 MRSP	1	S
	1999-15	. . . LENS-T&B TEST GREEN POSITION 6 MRSP	1	S
	1999-11	. . . LENS-SPARE WHITE POSITION 7 MRSP	1	S
	1999-11	. . . LENS-SPARE WHITE POSITION 8 MRSP	1	S
	1999-4	. . . LENS-INTERCOMM WHITE POSITION 8 MRSP	1	S
	1999-16	. . . LENS-DOOR WARNING RED POSITION 9 MRSP	1	S
	1999-17	. . . LENS-RH ALT OUT AMBER POSITION 10 MRSP	1	S
	1999-11	. . . LENS-SPARE WHITE POSITION 11 MRSP	1	S
	1999-5	. . . LENS-RH A/P PUMP AMBER POSITION 11 MRSP	1	S
	1999-20	. . . LENS-AIR COND HYD GREEN POSITION 11 MRSP	1	S
	1999-11	. . . LENS-SPARE WHITE POSITION 12 MRSP	1	S
	1999-6	. . . LENS-RH TRANS AMBER POSITION 12 MRSP	1	S
	1999-11	. . . LENS-SPARE WHITE POSITION 13 MRSP	1	S
	1999-7	. . . LENS-BACK COURSE AMBER POSITION 13 MRSP	1	S
	1999-11	. . . LENS-SPARE WHITE POSITION 14 MRSP	1	S
	1999-8	. . . LENS-SURFACE DEICE GREEN POSITION 14 MRSP	1	S
	1999-18	. . . LENS-COURTESY LIGHT WHITE POSITION 15 MRSP	1	S
	1999-11	. . . LENS-SPARE WHITE POSITION 16 MRSP	1	S
	T1-3-4	. . LAMP-ANNUNCIATOR LENS LIGHTING 2 PER LENS MRSP	32	S
-4	9910072-13	. . BOARD-PRINTED CIRCUIT FSO 9910072-14	1	H
	9910072-14	. . BOARD-PRINTED CIRCUIT	1	J
-5	1N5061	. . DIODE	28	
-6	17-20370	. . PLUG-ELECTRICAL AMBE	1	
	17-313-01	. . CLAMP-PLUG AMPE	1	
-7	1786-7	. . SWITCH-PRESS TO TEST MRSP	1	L
	SA24SDX11-1	. . SWITCH-PRESS TO TEST CHID	1	T
	90E14	. . ADAPTER-REAR MOUNTING MRSP	1	F
	90E537	. . ADAPTER-REAR MOUNTING MRSP	1	G
-7A	351-27988-001	. INDICATOR ASSY-ANNUNCIATOR MRSP	1	P
	1999-21	. . LENS-LOW VOLT RED POSITION 1 MRSP	1	P
	1999-13	. . LENS-L ALT OUT AMBER POSITION 2 MRSP	1	P
	1999-14	. . LENS-CABIN ALT AMBER POSITION 3 MRSP	1	P
	1999-11	. . LENS-SPARE WHITE POSITION 4 MRSP	1	P
	1999-23	. . LENS-L FUEL LOW AMBER POSITION 4 MRSP	1	P
	1999-11	. . LENS-SPARE WHITE POSITION 5 MRSP	1	P
	1999-2	. . LENS-L TRANS AMBER POSITION 5 MRSP	1	P
	1999-11	. . LENS-SPARE WHITE POSITION 6 MRSP	1	P
	1999-19	. . LENS-AIR COND FAIL AMBER POSITION 6 MRSP	1	P
	1999-11	. . LENS-SPARE WHITE POSITION 7 MRSP	1	P
	1999-3	. . LENS-WINDSHIELD GREEN POSITION 7 MRSP	1	P
	1999-15	. . LENS-T & B TEST GREEN POSITION 8 MRSP	1	P
	1999-18	. . LENS-COURTESY LIGHT WHITE POSITION 9 MRSP	1	P
	1999-16	. . LENS-DOOR WARN RED POSITION 10 MRSP	1	P
	1999-17	. . LENS-R ALT OUT AMBER POSITION 11 MRSP	1	P
	1999-12	. . LENS-HEATER OVHT AMBER POSITION 12 MRSP	1	P
	1999-11	. . LENS-SPARE WHITE POSITION 13 MRSP	1	P
	1999-22	. . LENS-R FUEL LOW AMBER POSITION 13 MRSP	1	P
	1999-11	. . LENS-SPARE WHITE POSITION 14 MRSP	1	P
	1999-6	. . LENS-R TRANS AMBER POSITION 14 MRSP	1	P
	1999-11	. . LENS-SPARE WHITE POSITION 15 MRSP	1	P
	1999-7	. . LENS-BACKCOURSE AMBER POSITION 15 MRSP	1	P
	1999-11	. . LENS-SPARE WHITE POSITION 16 MRSP	1	P
	1999-8	. . LENS-SURF DEICE GREEN POSITION 16 MRSP	1	P
	1999-11	. . LENS-SPARE WHITE POSITION 17 MRSP	1	P
	1999-20	. . LENS-A COND HYD GREEN POSITION 17 MRSP	1	P
	1999-11	. . LENS-SPARE WHITE POSITION 18 MRSP	1	P
	1999-4	. . LENS-INTERCOMM WHITE POSITION 18 MRSP	1	P
-7B	SA24SDX11-1	. SWITCH PRESS TO TEST CUT	1	P

CONTINUED

FIGURE AND INDEX NO.	PART NUMBER		1 2 3 4 5 6 7 DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
64 -8	SEE FIG 1		. PLACARD-RADIO CALL	1	
			ATTACHING PARTS		
	S1022Z4-4B		. SCREW	2	
			---*---		
-9	SEE FIG 148		. INSTRUMENT PANEL LIGHTING FIXTURES	1	
-10	SEE FIG 150		. MARKER BEACON LIGHTS	1	
-11	C664506-0102		. CLOCK	1	
	C664507-0101		. CLOCK GMT	1	
			ATTACHING PARTS		
	CM3559-6-18G		. SCREW	1	
	MS33737-16		. NUT	1	
			---*---		
-12	5300181-2		. PLACARD-MANIFOLD PRESSURE LIMITS	1	S
-13	C661040-0106		. INDICATOR-AIRSPEED MPH & KNOTS	1	B
	C661040-0206		. INDICATOR-AIRSPEED KNOTS & MPH	1	C
	C661040-0214		. INDICATOR-AIRSPEED KNOTS & MPH	1	P
	C661045-0106		. INDICATOR-TRUE AIRSPEED MPH	1	B
	C661045-0306		. INDICATOR-TRUE AIRSPEED KNOTS	1	C
	C661045-0310		. INDICATOR-TRUE AIRSPEED KNOTS	1	P
			ATTACHING PARTS		
	CM3559-6-18G		. SCREW	2	
	MS33737-16		. NUT	2	
			---*---		
-14	C661055-0102		. GYRO-HORIZON WEU C661055-0103	1	M
	C661055-0103		. GYRO-HORIZON	1	N
	37570-1002	#	. GYRO-HORIZON USED WITH 400A & 400B AUTOPILOT ARC	1	
			ALT FOR 37570-0106		
	37570-0106		. GYRO-HORIZON USED WITH 400A & 400B AUTOPILOT ARC	1	
			ALT FOR 37570-1002		
			ATTACHING PARTS		
	CM3559-6-16G		. SCREW	4	
			---*---		
-15	C661014-0101		. ALTIMETER	1	
	101235-01154		. ALTIMETER WITH DIGITIZER AEIR	1	
	C661025-0101		. ALTIMETER MILIBAR 50 FT GRAD	1	
	C661025-0102		. ALTIMETER MILIBAR 20 FT. GRAD	1	
	101235-01155		. ALTIMETER MILIBAR AEIR	1	
	42540-3128		. ALTIMETER HG ARC	1	
	42540-3228		. ALTIMETER MILIBAR ARC	1	
	42540-6128		. ALTIMETER HG ARC	1	
	42540-6228		. ALTIMETER MILIBAR ARC	1	
			ATTACHING PARTS		
	CM3559-6-18G		. SCREW	1	
	MS24693BB30		. SCREW USE WITH 101235-01154 & 101235-01155 & AR	AR	
			4021690-901		
	MS33737-16		. NUT	1	
			---*---		
-16	C661031-0101		. INDICATOR-TURN & BANK	1	
	C661003-0203		. INDICATOR-TURN COORDINATOR	1	
	C661003-0505		. INDICATOR-TURN COORDINATOR ALT FOR C661003-0203		
	41480-0001		. GYRO-YAW COMPUTER G-830A ARC	1	L
	43080-0000		. GYRO-YAW COMPUTER TYPE G840A ARC	1	K
			ATTACHING PARTS		
	CM3559-6-18G		. SCREW	2	
	MS24693BB30		. SCREW USE WITH 41480-0001	3	
	MS33737-16		. NUT	2	
			---*---		
-17	C661053-0101		. GYRO-DIRECTIONAL	1	
	40760-0103	#	. GYRO-DIRECTIONAL USED WITH 400A AUTOPILOT ARC	1	
	40840-0105	#	. GYRO-DIRECTIONAL SLAVED USED WITH 400A AUTOPILOT ARC	1	
	40840-0205	#	. GYRO-DIRECTIONAL SLAVED WITH HEADING BOOTSTRAP ARC	1	
	40760-0105	#	. GYRO-DIRECTIONAL USED WITH 400B AUTOPILOT ARC	1	
			ATTACHING PARTS		
	CM3559-6-16G		. SCREW	4	
			---*---		
-18	C661035-0101		. INDICATOR-VERTICAL SPEED	1	
	C661009-0101		. INDICATOR-VERTICAL SPEED INSTANTANEOUS	1	
			ATTACHING PARTS		
	CM3559-6-18G		. SCREW	1	
	MS33737-16		. NUT	1	
			---*---		
-19	5314108-5		. PANEL-FLIGHT INSTRUMENT RH STANDARD	1	
	5300908-10	*	. PANEL FLIGHT INSTRUMENT RH FUEL QTY, VAC & AIR SPEED	1	D
	5300908-11	*	. PANEL FLIGHT INSTR RH OPT FUEL QTY, VAC & AIR SPEED	1	H
	5300908-12	*	. PANEL FLIGHT INSTRUMENT RH OPTIONAL	1	H
	5300908-14	*	. PANEL FLIGHT INSTRUMENT RH OPTIONAL	1	K
			ATTACHING PARTS		
-20	MS27039-0809		. SCREW	7	
			---*---		
-21	DSF859		. INDICATOR-FUEL QUANTITY CAIR	1	
			ATTACHING PARTS		
	CM3559-6-18G		. SCREW	2	
	MS33737-16		. NUT	2	
			---*---		
-22	CM2692-15A1S		. PLUG BUTTON	2	
	855SI-A4D		. LIGHT-FUEL QUANITY LH AUX & RH AUX SLCO	2	
-23	7415		. SWITCH-MAIN AUX AMBE	1	

CONTINUED

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
64 -24	C668519-0101	. GAGE VACUUM	1	
		ATTACHING PARTS		
	CM3559-6-18G	. SCREW	2	
	MS33737-16	. NUT	2	
		---*---		
-25		. DELETED NOT USED		
-26	C668520-0101	. GAGE-O A T	1	
		ATTACHING PARTS		
	MS24693BB33	. SCREW	3	
	MS33737-16	. NUT	3	
		---*---		
-27	C661040-0106	. INDICATOR-AIRSPEED MPH & KNOTS	1	B
	C661040-0206	. INDICATOR-AIRSPEED KNOTS & MPH	1	C
	C661040-0210	. INDICATOR-AIRSPEED KNOTS & MPH	1	P
	C661045-0106	. INDICATOR-TRUE AIRSPEED MPH	1	B
	C661045-0306	. INDICATOR-TRUE AIRSPEED KNOTS	1	C
	C661045-0310	. INDICATOR-TRUE AIRSPEED KNOTS	1	P
		ATTACHING PARTS		
	CM3559-6-18G	. SCREW	2	
	MS33737-16	. NUT	2	
		---*---		
-28	C661055-0102	. GYRO-HORIZON WEU C661055-0103	1	M
	C661055-0103		1	N
		ATTACHING PARTS		
	CM3559-6-18G	. SCREW	4	
	MS33737-16	. NUT	4	
		---*---		
-29	C661014-0101	. ALTIMETER	1	
	C661025-0101	. ALTIMETER MILIBAR 50 FT GRAD	1	
	C661025-0102	. ALTIMETER MILIBAR 20 FT GRAD	1	
		ATTACHING PARTS		
	CM3559-6-18G	. SCREW	1	
	MS33737-16	. NUT	1	
		---*---		
-30	C661032-0101	. INDICATOR-TURN & BANK	1	
		ATTACHING PARTS		
	CM3559-6-18G	. SCREW	3	
	MS35337-16	. NUT	3	
		---*---		
-31	C661053-0101	. GYRO-DIRECTIONAL	1	
		ATTACHING PARTS		
	CM3559-6-18G	. SCREW	4	
	MS33737-16	. NUT	4	
		---*---		
-32	C661035-0101	. INDICATOR-VERTICAL SPEED	1	
	C661009-0101	. INDICATOR-VERTICAL SPEED INSTANTANEOUS	1	
		ATTACHING PARTS		
	CM3559-6-18G	. SCREW	1	
	MS33737-16	. NUT	1	
		---*---		
	5314110-7	. SUPPORT ASSY-SECONDARY INSTRUMENT PANEL RH	1	
-33	5314110-3	. . ANGLE	2	
-34	5314110-2	. . ANGLE	2	
-35	5300942-1	. PANEL-SUPPORT SECONDARY INSTRUMENT WEU 5300942-3	1	Q
		USE WITH AIR CONDITIONING		
	5300942-3	. PANEL-SUPPORT SECONDARY INSTRUMENT	1	R
		USE WITH AIR CONDITIONING		
	5300942-2	. PANEL-SUPPORT SECONDARY INSTRUMENT	1	
		USE WITHOUT AIR CONDITIONING		
		ATTACHING PARTS		
-36	S1021Z8-8C	. SCREW	10	
		---*---		
-37		. DELETED NOT USED		
-38	0813468-6	. COVER	1	
		ATTACHING PARTS		
-39	S1021Z8-8C	. SCREW	4	
-40	NAS446-2-3	. NUT	4	
		---*---		
	C668522-0101	. GAGE-OXYGEN	1	
		ATTACHING PARTS		
	MS24693BB30	. SCREW	3	
	MS33737-16	. NUT	3	
		---*---		
-41	0813468-6	. COVER	1	
		ATTACHING PARTS		
-42	S1021Z8-8C	. SCREW	4	
-43	NAS446-2-3	. NUT	4	
		---*---		
	CM2926-1	. RECORDER-FLIGHT HOUR	1	
		ATTACHING PARTS		
	MS24693BB30	. SCREW	3	
	MS33737-16	. NUT	3	
		---*---		
-44	8142K20E6M50	. SWITCH AIR CONDITIONING CUT	1	
		ATTACHING PARTS		
	MS35215-29	. SCREW	2	
		---*---		
-45	8144K22A1M50	. SWITCH AIR CONDITIONING CUT	1	
		ATTACHING PARTS		
	MS35215-29	. SCREW	4	
		---*---		

CONTINUED

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
64 -46	HE81106-3	. RHEOSTAT AIR CONDITIONING . . . . . JAA	1	
	5151	. KNOB . . . . . OM	1	
	5300943-2	. PLACARD-AIR CONDITIONING	1	L
-47	C662503-0102	. AMMETER-PROP DEICE	1	
	C662503-0101	. AMMETER-PROP DEICE	1	K
-48	0831006-8	. GUARD-SWITCH LOCATOR BEACON	1	
		ATTACHING PARTS		
-49	MS35206-213	. SCREW	2	
-50	MS21083N04	. NUT	2	
		---*---		
-51	0800181-20	. PLACARD LOCATOR BEACON	1	
-52	S1696-1	. SWITCH-LOCATOR BEACON	1	
-53	5112021-13	. PLACARD-LOCATOR BEACON EMER NORM	1	
-54	40910-0000	. METER-SLAVING USED WITH 400A AUTOPILOT . . . . . ARC	1	
-55	41640-1000	. INDICATOR-NAVIGATION 1N442A . . . . . ARC	1	
		WITHOUT FLIGHT DIRECTOR		
	41640-1100	. INDICATOR-NAVIGATION 1N442B . . . . . ARC	1	
		WITH FLIGHT DIRECTOR		
		ATTACHING PARTS		
	MS24693BB30	. SCREW	2	
		---*---		
-56	41640-2000	. INDICATOR-NAVIGATION 1N443A1LS . . . . . ARC	1	
		WITHOUT FLIGHT DIRECTOR		
	41640-2100	. INDICATOR-NAVIGATION 1N443B1LS . . . . . ARC	1	
		WITH FLIGHT DIRECTOR		
		ATTACHING PARTS		
	MS24693BB30	. SCREW	2	
		---*---		
-57	40980-1000	. INDICATOR-ADF 1N346A WITHOUT RMI . . . . . ARC	1	
	40980-1100	. INDICATOR-ADF 1N346B WITH RMI . . . . . ARC	1	
		ATTACHING PARTS		
	MS24693BB30	. SCREW	3	
		---*---		
-58	855SI-A4D	. LIGHT ASSY PROP SYNC . . . . . SLCO	1	
-59	MST405N	. SWITCH PROP SYNC . . . . . AELM	1	
-60	SEE FIG 160	. FLUX DETECTOR INSTL	REF	

SEE CESSNA CRAFTED 400A NAV-O-MATIC SERVICE/PARTS MANUAL

*---WHEN ORDERING THIS PART THE ORDER MUST BE ACCOMPANIED BY COMPLETE AIRCRAFT SERIAL NUMBER

A---340-0151 & ON
B---340-0151 THRU 340-0300
C---340-0301 TO 340A0001
D---340-0151 THRU 340-0326
E---340-0327 & ON
F---340-0151 THRU 340-0250
G---340-0251 TO 340A0001
H---340-0327 THRU 340-0500
J---340-0327 & ON
K---340-0501 & ON
L---340-0151 THRU 340-0500
M---340-0151 THRU 340-0539
N---340-0540 & ON
P---340A0001 & ON
Q---340-0151 THRU 340-0553
R---340-0554 & ON
S---340-0151 TO 340A0001
T---340-0501 TO 340A0001

CABIN EQUIPMENT

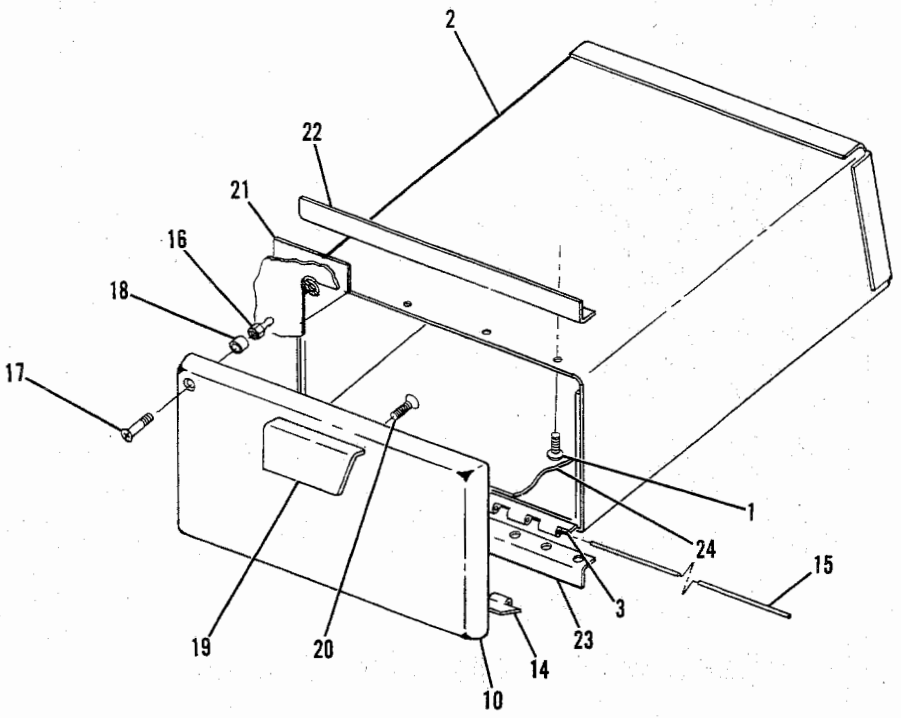

CODE A

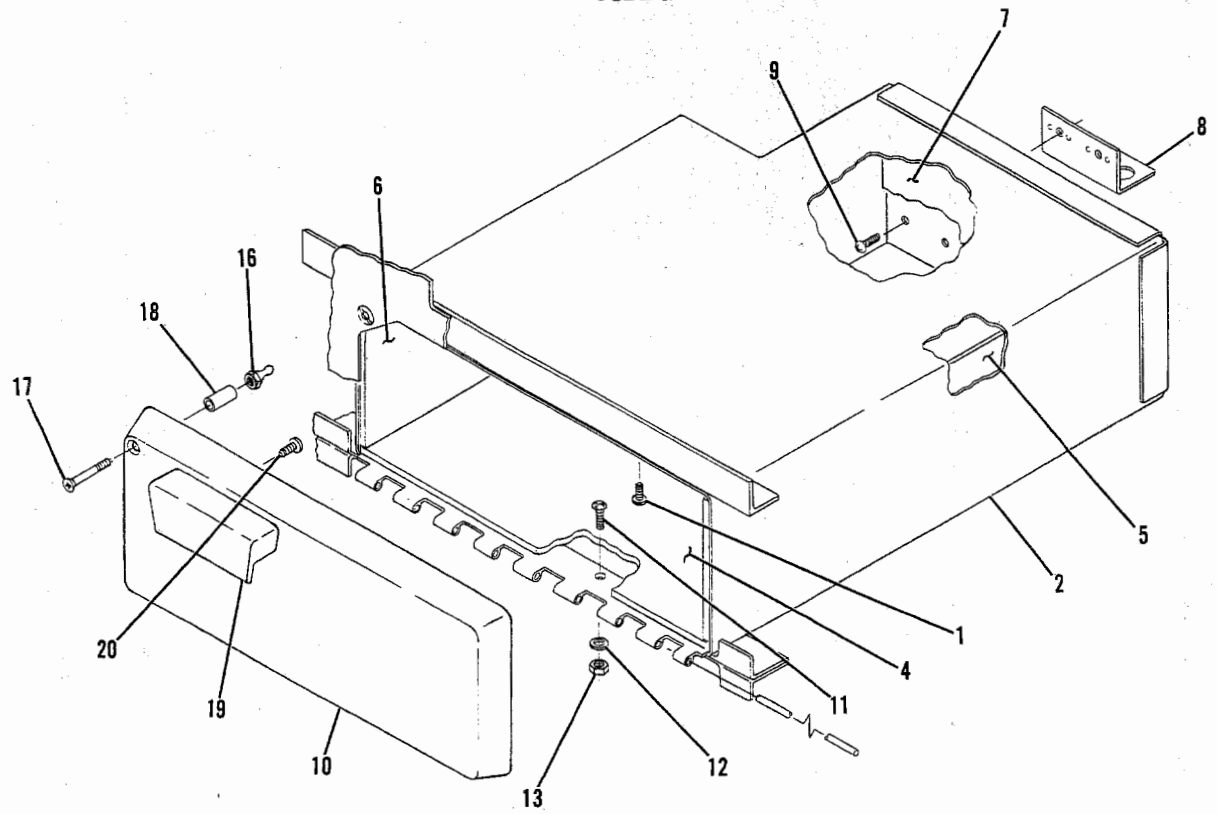

CODE B

Figure 65. Glove Compartment Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
65 -		GLOVE COMPARTMENT INSTALLATION	NP	
	5314112-2	. GLOVE BOX ASSY	1	A
		. GLOVE BOX ASSY	1	B
		ATTACHING PARTS		
-1	MS35206-227	. SCREW	7	A
	MS35206-244	. SCREW	6	B
		---*---		
-2	5314112-3	. . BOX ASSY	1	A
	5314115-2	. . BOX ASSY	1	B
-3	S259-4LL5.01	. . . HINGE HALF	1	A
-4	5314115-9	. . . PAD-BOTTOM	1	B
-5	5314115-10	. . . PAD-OUTBD SIDE	1	B
-6	5314115-11	. . . PAD-INBD SIDE	1	B
-7	5314115-12	. . . PAD-BACK	1	B
-8	5314115-13	. . . BRACKET ASSY-FUEL DRAIN LINES	1	B
		ATTACHING PARTS		
-9	MS27039DD0806	. . . SCREW	2	B
		---*---		
-10	5314112-4	. . DOOR ASSY	1	A
	5314115-3	. . DOOR ASSY	1	B
		ATTACHING PARTS		
-11	MS24693-26	. . SCREW	7	B
-12	MS35335-30	. . WASHER	7	B
-13	MS24679-1	. . NUT	7	B
		---*---		
-14	S295-2TT5.01	. . . HINGE HALF	1	A
-15	MS20253-2-500	. . . PIN-HINGE	1	A
-16	P101-421-1	. . . STUD-DOOR CATCH	1	
		ATTACHING PARTS		
-17	MS24693-28	. . . SCREW	1	A
	MS24693-30	. . . SCREW	1	B
-18	NAS43DD1-40	. . . SPACER	1	
		---*---		
-19	0813508-7	. . . KNOB	1	
		ATTACHING PARTS		
-20	MS27039-0804	. . . SCREW	2	A
	MS35206-243	. . . SCREW	2	B
		---*---		
-21	5314112-12	. BRACKET ASSY-DOOR CATCH	1	A
-22	5314112-15	. ANGLE-UPR	1	A
-23	5314112-5	. ANGLE-LWR	1	A
-24	5311538-2	. PAD-GLOVE BOX	1	A

A---340-0001 THRU 340-0150
B---340-0151 & ON

LANDING GEAR

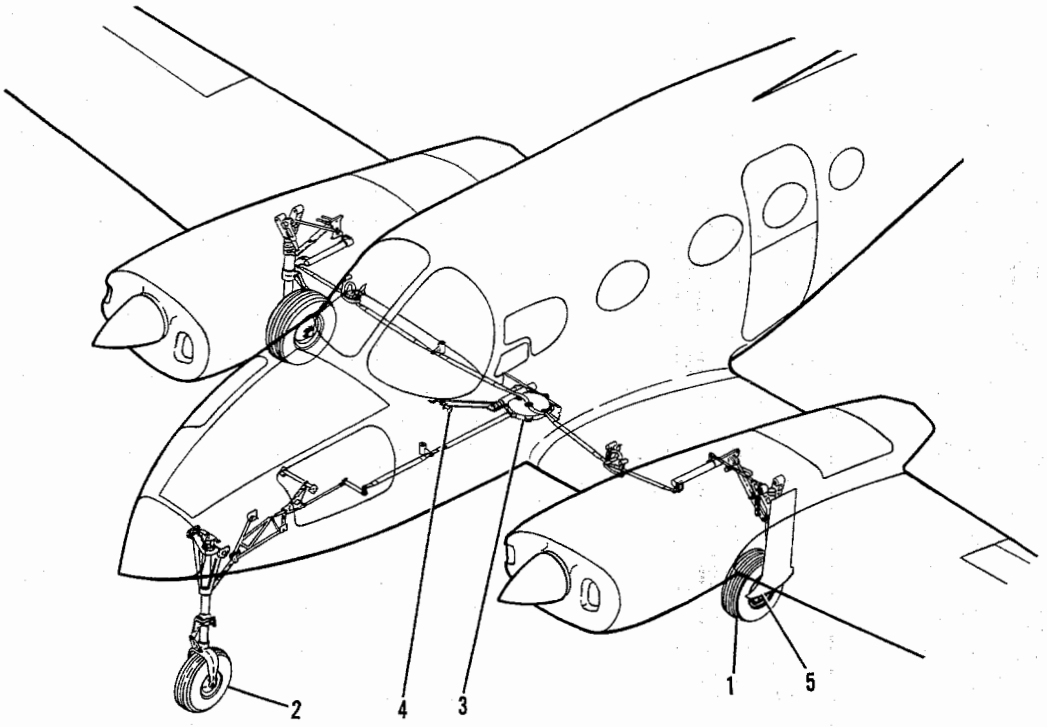

1 MAIN LANDING GEAR INSTL
2 NOSE LANDING GEAR INSTL
3 LANDING GEAR ACTUATOR INSTL
4 LANDING GEAR MANUAL EXTENSION MECHANISM INSTL
5 MAIN LANDING GEAR DOORS INSTL
6 NOSE LANDING GEAR DOORS INSTL
7 INSTRUMENT PANEL EQUIPMENT INSTL
8 ELECTRICAL EQUIPMENT INSTL

Figure 66. Landing Gear System

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
66 -		LANDING GEAR SYSTEM	NP	
-1	SEE FIG 67	. MAIN LANDING GEAR INSTL	1	
-2	SEE FIG 73	. NOSE LANDING GEAR INSTL	1	
-3	SEE FIG 78	. LANDING GEAR ACTUATOR INSTL	1	
-4	SEE FIG 79	. LANDING GEAR MANUAL EXTENSION MECHANISM INSTL	1	
-5	SEE FIG 80	. MAIN LANDING GEAR DOORS INSTL	2	
-6	SEE FIG 81	. NOSE LANDING GEAR DOORS INSTL	1	
-7	SEE FIG 61	. INSTRUMENT PANEL EQUIPMENT INSTL	REF	
-8	SEE FIG 141	. ELECTRICAL EQUIPMENT INSTL	REF	

LANDING GEAR

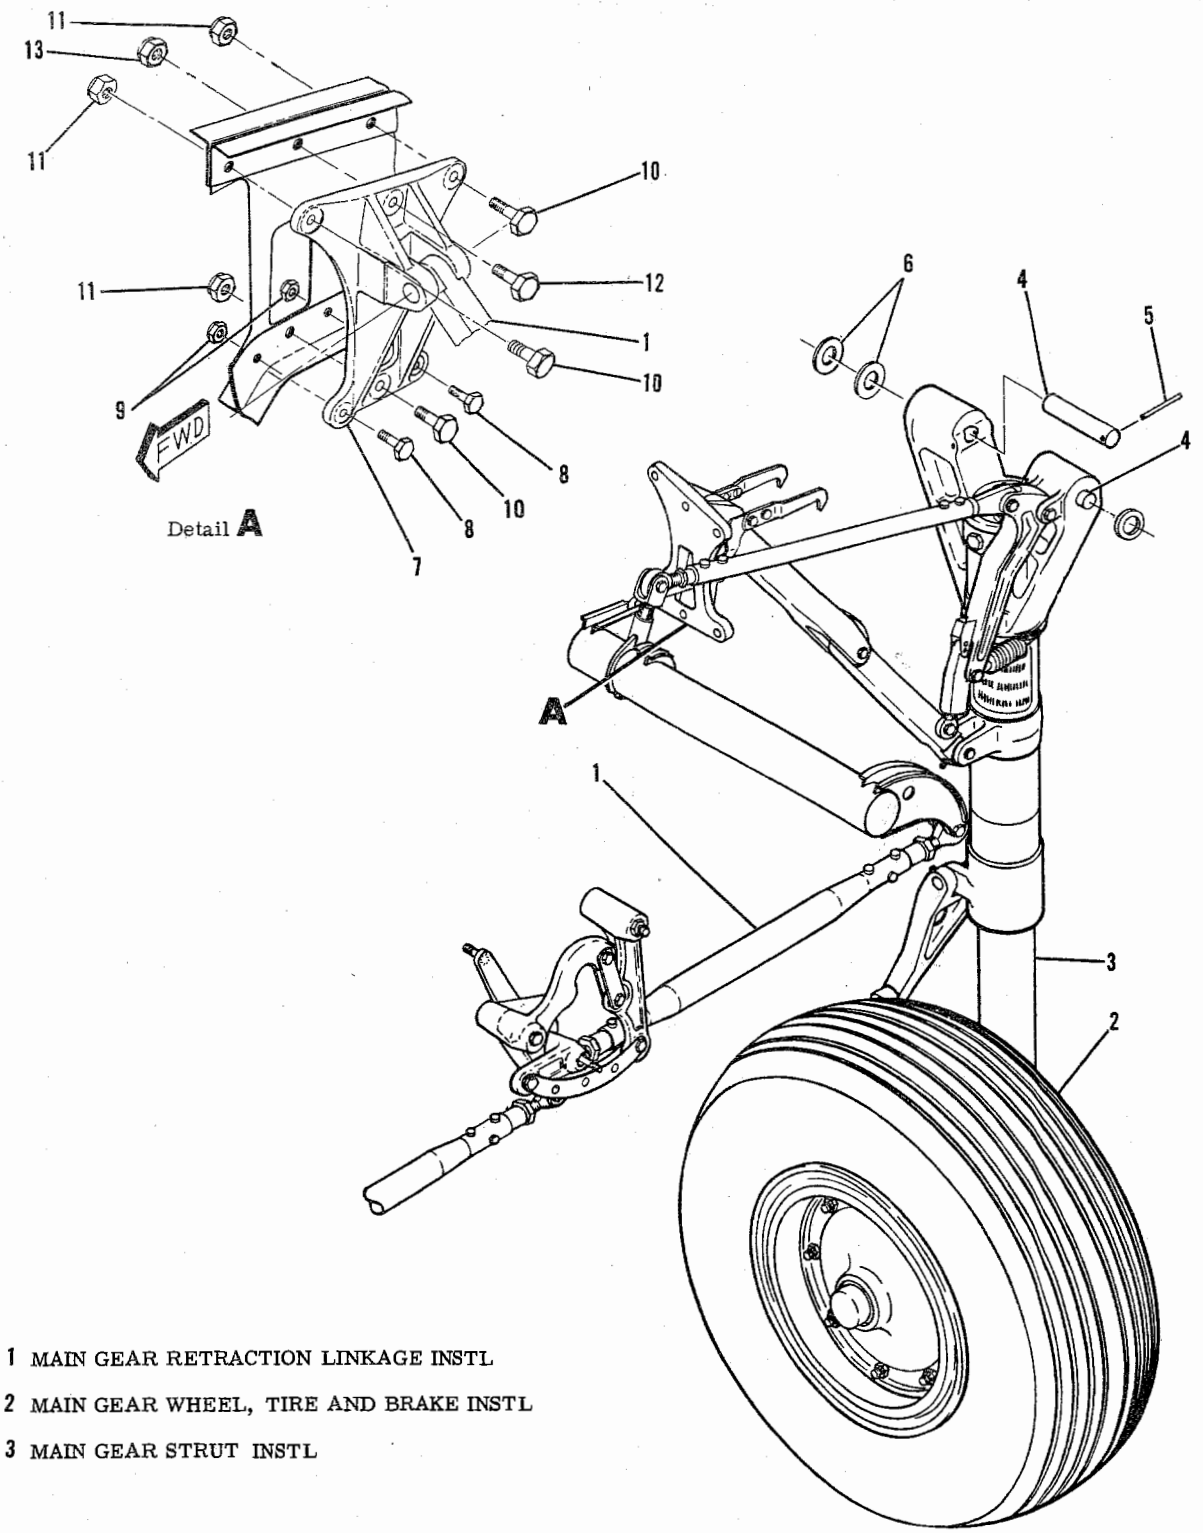

1 MAIN GEAR RETRACTION LINKAGE INSTL

2 MAIN GEAR WHEEL, TIRE AND BRAKE INSTL

3 MAIN GEAR STRUT INSTL

Figure 67. Main Landing Gear Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
67 -		MAIN LANDING GEAR INSTALLATION	NP	
-1	SEE FIG 71	. MAIN GEAR RETRACTION LINKAGE INSTL	2	
-2	SEE FIG 70	. MAIN GEAR WHEEL TIRE AND BRAKE INSTL	2	
-3	SEE FIG 68	. MAIN GEAR STRUT INSTL	2	A
	SEE FIG 69	. MAIN GEAR STRUT INSTL	2	B
		ATTACHING PARTS		
-4	5041107-2	. SHAFT-PIN	2	
-5	NAS561P4-28	. PIN-SLOTTED	2	
-6	0841004-1	. WASHER THICKNESS .063	AR	
	0841004-2	. WASHER THICKNESS .035	AR	
	0841004-3	. WASHER THICKNESS .028	AR	
		---*---		
-7	0822180-7	. SUPPORT-GEAR LH	1	
	0822180-8	. SUPPORT-GEAR RH	1	
		ATTACHING PARTS		
-8	AN3-6A	. BOLT	2	
-9	MS21044N3	. NUT	2	
-10	AN4-10A	. BOLT	3	
-11	MS21044N4	. NUT	3	
-12	AN5-10A	. BOLT	1	
-13	MS21044N5	. NUT	1	
		---*---		
		A---340-0001 THRU 340-0192 B---340-0193 & ON		

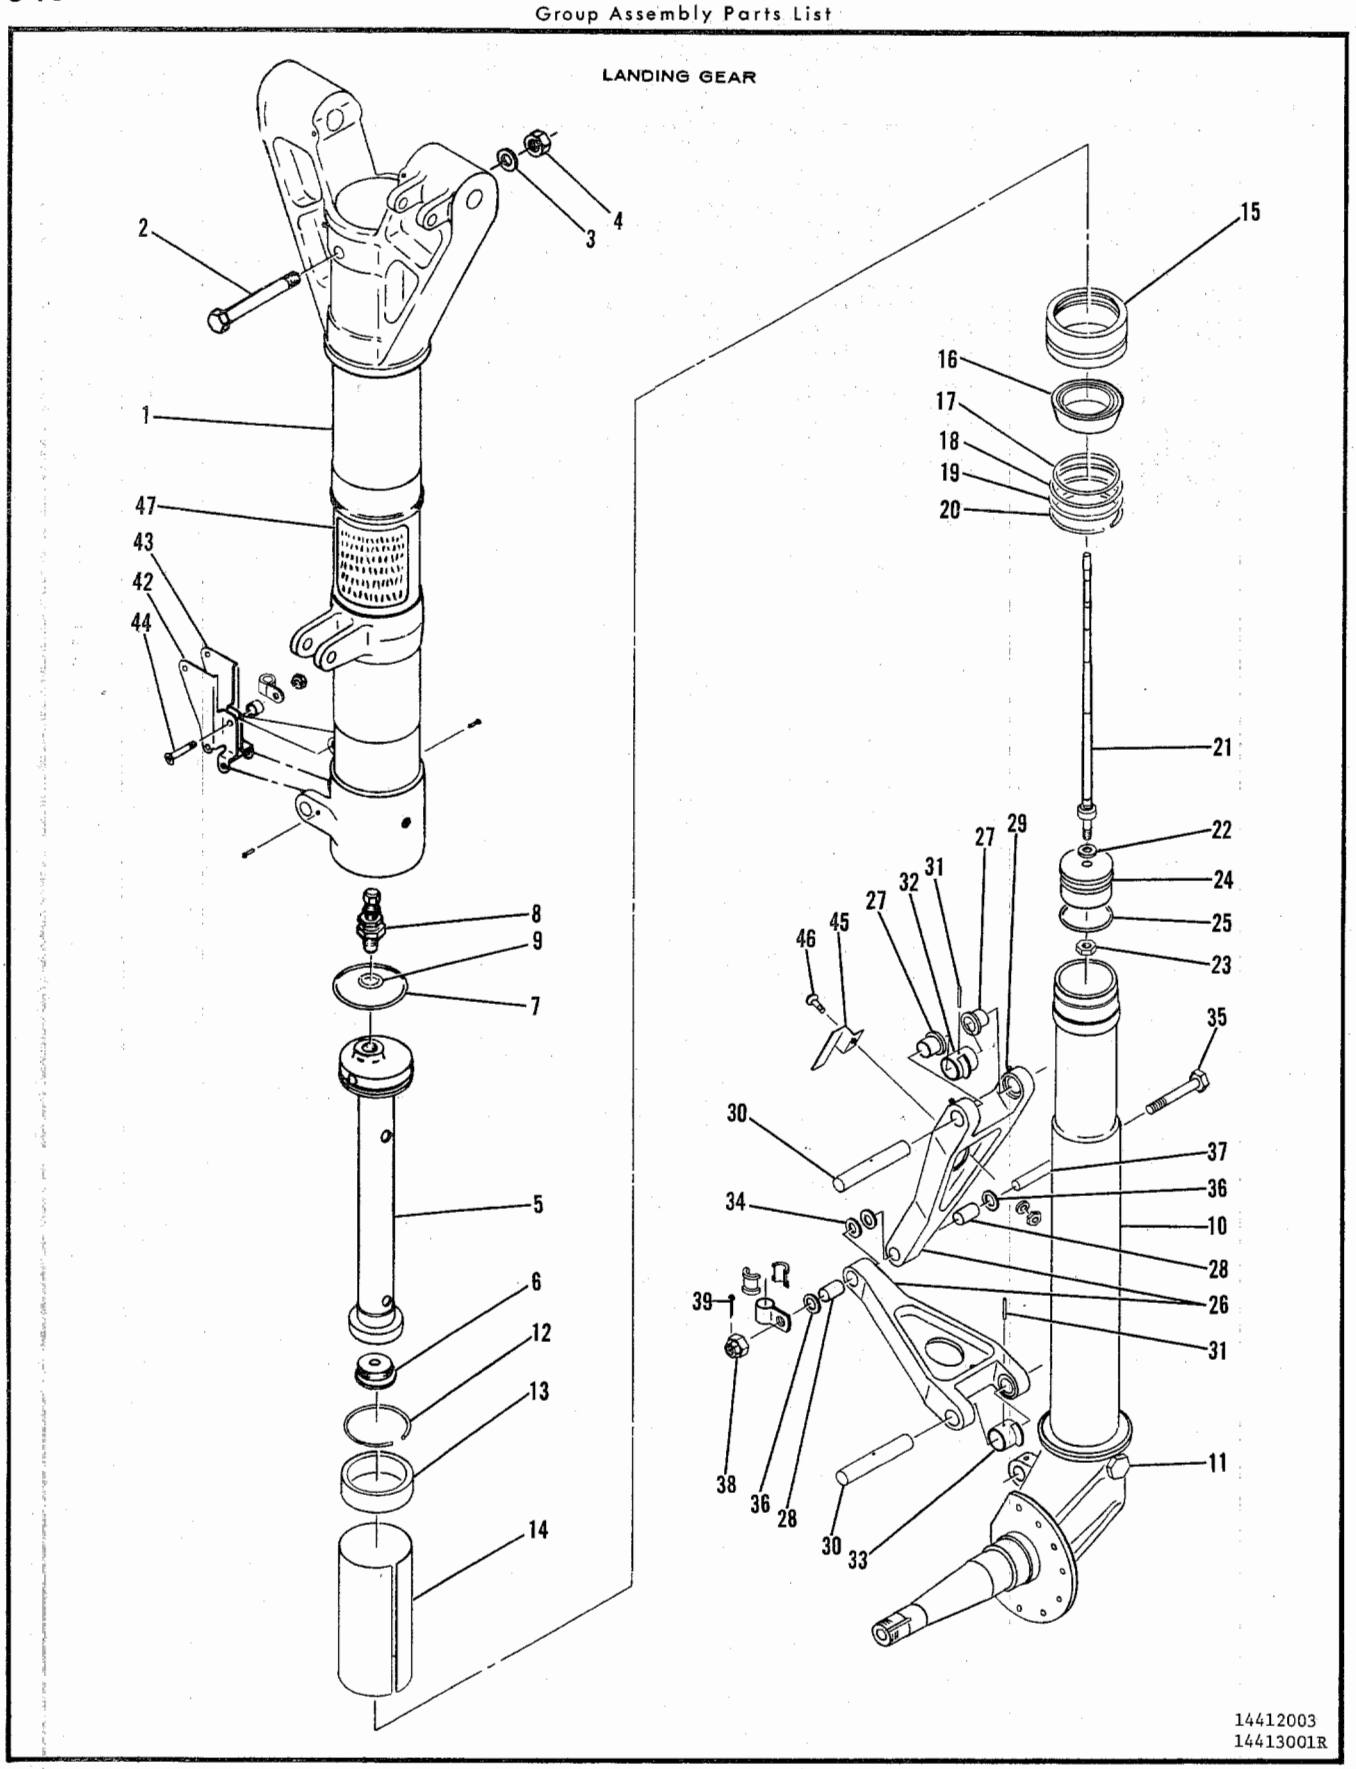

Figure 68. Main Gear Strut Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
68 -		MAIN GEAR STRUT INSTALLATION	NP	A
	5094102-7	. STRUT ASSY-MAIN LANDING GEAR LH	1	
	5094102-8	. STRUT ASSY-MAIN LANDING GEAR RH	1	
	5041000-209	. . CYLINDER AND TRUNNION ASSY-LH	1	
	5041000-210	. . CYLINDER AND TRUNNION ASSY-RH	1	
-1	5041000-205	. . . STRUT ASSY-UPR LH	1	
	5041000-206	. . . STRUT ASSY-UPR RH	1	
		ATTACHING PARTS		
-2	NAS464P6LA53	. . . BOLT	1	
-3	AN960PD616L	. . . WASHER	2	
-4	MS21042-6	. . . NUT	1	
		---*---		
-5	5241002-1	. . . PISTON AND ORIFICE ASSY	1	
-6	5042015-1	. . . . ORIFICE	1	
-7	MS28775-228	. . . O-RING	1	
-8	0543036-1	. . VALVE ASSY FSO MS28889-1	1	
	MS28889-1	. . VALVE ASSY	1	
	0543036-3	. . . CORE PART OF 0543036-1	1	
-9	AN901-5A	. . GASKET USED WITH 0543036-1	1	
	MS24690	. . O-RING USED WITH MS28889-1	1	
-10	5041000-77	. . PISTON AND AXLE ASSY-LH	1	
	5041000-76	. . PISTON AND AXLE ASSY-RH	1	
-11	AN174-31A	. . . BOLT	1	
	AN960-416L	. . . WASHER	1	
	MS21042L4	. . . NUT	1	
-12	CM2689-32	. . RING-EXTERNAL LOCK	1	
-13	5041108-1	. . BEARING-INNER WEU 5041108-2	1	
	5041108-2	. . BEARING-INNER	1	
-14	5041112-2	. . SPACER-EXTEND STOP	1	
-15	5041106-2	. . RING-PACK SUPPORT FSO 0841212-1	1	
	5041106-3	. . RING-PACK SUPPORT FSO 0841212-1	1	
	0841212-1	. . RING-PACK SUPPORT	1	
-16	A1261	. . POLY-PAK SEAL TYPE B	PKSC	
-17	MS28775-229	. . O-RING	1	
-18	MS28776-22	. . SCRAPER	1	
-19	5041111-1	. . RING-LOCK	1	
-20	CM2690-14	. . RING-INTERNAL LOCK	1	
	5241001-1	. . PIN ASSY-METERING	1	
-21	5241001-2	. . . SHANK ASSY-METERING PIN	1	
		ATTACHING PARTS		
-22	MS28775-010	. . . O-RING	1	
	AN960-416L	. . . WASHER	1	
-23	MS2044N4	. . . NUT	1	
		---*---		
-24	5041015-1	. . . SUPPORT-SEAL	1	
-25	MS28775-222	. . O-RING	1	
-26	5041114-1	. . LINK ASSY-LH TORQUE FSO 5041114-7	2	
	5041114-7	. . LINK ASSY-LH TORQUE	2	
	5041114-2	. . LINK ASSY-RH TORQUE FSO 5041114-8	2	
	5041114-8	. . LINK ASSY-RH TORQUE	2	
-27	5041017-2	. . . BUSHING	2	
-28	5041013-2	. . . BUSHING	1	
-29	MS15002-1	. . . FITTING-LUBE	3	
-30	5041120-1	. . SHAFT	2	
		ATTACHING PARTS		
-31	NAS561P5-10	. . PIN-SLOTTED SPRING	2	
		---*---		
-32	5041121-1	. . SPACER ASSY	1	
-33	5041121-2	. . SPACER ASSY	1	
	5041025-1	. . SHIM	AR	
-34	AN960-716L	. . WASHER	AR	
	AN960-716	. . WASHER	AR	
-35	AN175-20	. . BOLT	1	
-36	5045018-1	. . WASHER	2	
-37	5041013-3	. . BUSHING	1	
-38	AN310-5	. . NUT	1	
-39	MS24665-153	. . PIN-COTTER	1	
-42	5114425-2	. . BRACKET HALF-SWITCH	1	
-43	5114425-3	. . BRACKET HALF-SWITCH	1	
		ATTACHING PARTS		
-44	AN515-8R18	. . SCREW	2	
	MS21044N08	. . NUT	2	
		---*---		
-45	5041007-1	. . STRIKER PLATE-SWITCH LH ONLY	1	
		ATTACHING PARTS		
-46	MS27039-1-08	. . SCREW	1	
	AN960-10L	. . WASHER	1	
	MS21044N3	. . NUT	1	
		---*---		
-47	5243000-6	. . PLACARD-LH & RH GEAR FILLING	2	
		A---340-0001 THRU 340-0185 340-0212 THRU 340-0221		

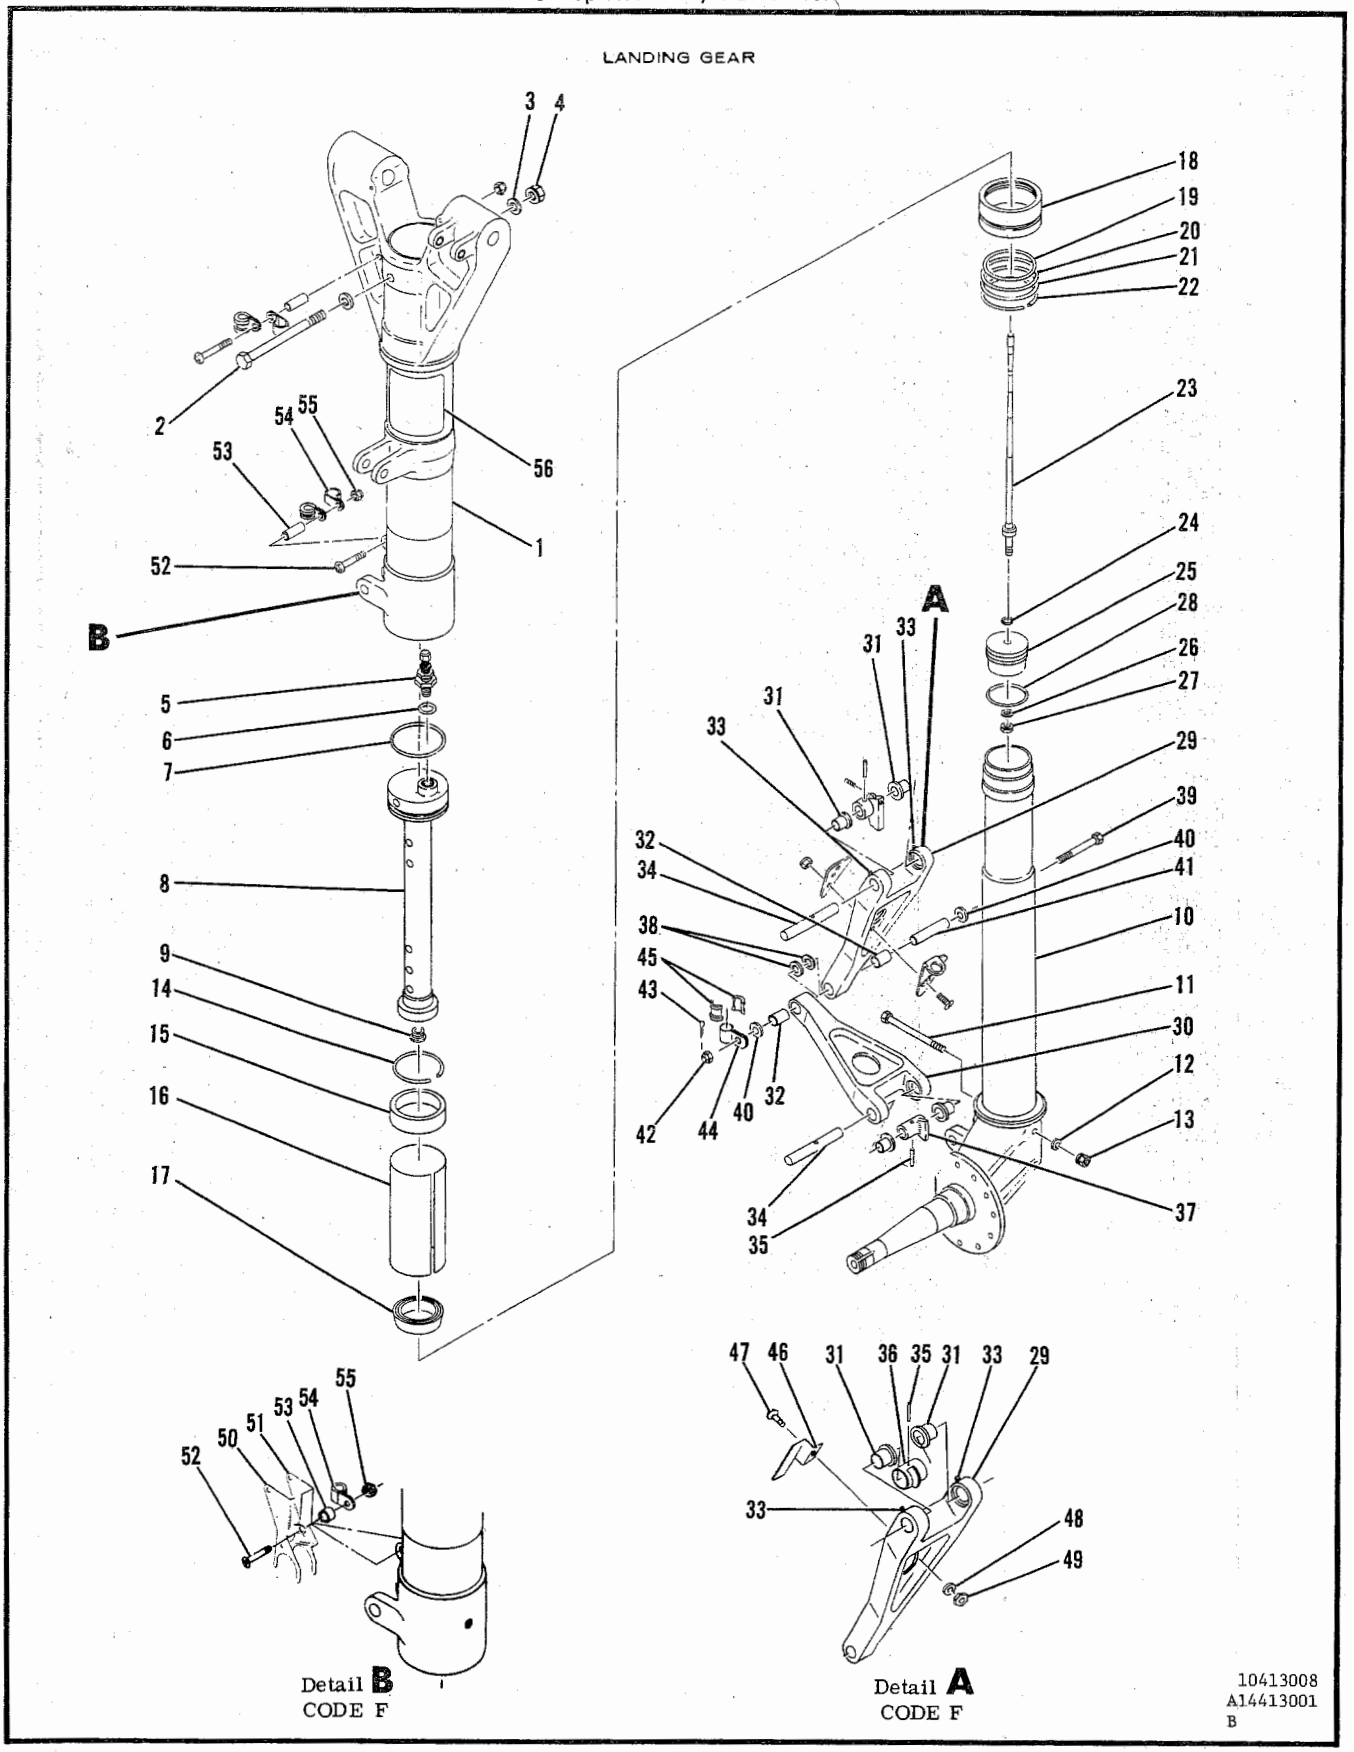

Figure 69. Main Landing Gear Strut Assembly

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
69 -		MAIN LANDING GEAR STRUT ASSEMBLIES	NP	A
	5194001-5	. STRUT ASSY-MAIN GEAR LH	1	B
	5194001-11	. STRUT ASSY-MAIN GEAR LH	1	B C
	5194001-17	. STRUT ASSY-MAIN GEAR LH ALT FOR 5194001-11 AS AN ASSEMBLY ONLY	1	C
	5194001-6	. STRUT ASSY-MAIN GEAR RH	1	B
	5194001-12	. STRUT ASSY-MAIN GEAR RH	1	B C
	5194001-18	. STRUT ASSY-MAIN GEAR RH ALT FOR 5194001-12 AS AN ASSEMBLY ONLY	1	C
	5141001-21	. . UPPER STRUT ASSY-MAIN GEAR LH	1	B
	5141001-35	. . UPPER STRUT ASSY-MAIN GEAR LH USED WITH 5194001-11	1	C
	5141001-57	. . UPPER STRUT ASSY-MAIN GEAR LH USED WITH 5194001-17	1	C
	5141001-22	. . UPPER STRUT ASSY-MAIN GEAR RH	1	B
	5141001-36	. . UPPER STRUT ASSY-MAIN GEAR RH USED WITH 5194001-12	1	C
	5141001-58	. . UPPER STRUT ASSY-MAIN GEAR RH USED WITH 5194001-18	1	C
-1	5141001-203	. . . TRUNNION ASSY-UPR LH WEU 5141001-211	1	B C
	5141001-211	. . . TRUNNION ASSY-UPR LH	1	B C
	5141001-221	. . . TRUNNION ASSY-UPR LH ALT FOR 5141001-211 AS AN ASSEMBLY ONLY	1	C
	5141001-202	. . . TRUNNION ASSY-UPR RH WEU 5141001-212	1	B
	5141001-212	. . . TRUNNION ASSY-UPR RH	1	B C
	5141001-222	. . . TRUNNION ASSY-UPR RH ALT FOR 5141001-212 AS AN ASSEMBLY ONLY	1	C
-2	NAS464P6LA53	. . . . BOLT USED WITH .3740 ATTACH HOLE	1	
	NAS2906-52	. . . . BOLT USED WITH .3900 ATTACH HOLE	1	
-3	AN960-616L	. . . . WASHER	2	
-4	MS21042L6	. . . . NUT	1	
-5	MS28889-1	. . . VALVE ASSY-AIR	1	
-6	MS24690	. . . O-RING	1	
-7	MS28775-228	. . . O-RING	1	
	5241002-1	. . . ORIFICE TUBE ASSY-UPR STRUT USED WITH .3740 ATTACH HOLE	1	
	5241002-7	. . . ORIFICE TUBE ASSY-UPR STRUT USED WITH .3900 ATTACH HOLE	1	
-8	5241002-2	. . . . TUBE-ORIFICE USED WITH 5241002-1	1	
	5241002-6	. . . . TUBE-ORIFICE USED WITH 5241002-7		
-9	5042015-1	. . . ORIFICE	1	
-10	5141001-205	. . BARREL & AXLE ASSY-LWR LH WEU 5141001-213	1	B
	5141001-213	. . BARREL & AXLE ASSY-LWR LH	1	B C
	5141001-206	. . BARREL & AXLE ASSY-LWR RH WEU 5141001-214	1	B
	5141001-214	. . BARREL & AXLE ASSY-LWR RH	1	B C
-11	AN174-31A	. . . BOLT	1	
-12	AN960-416L	. . . WASHER	1	
-13	MS21042L4	. . . NUT	1	
-14	CM2689-32	. . RING-EXTERNAL LOCK	1	
-15	5041108-2	. . BEARING-INNER	1	
-16	5041112-2	. . SPACER-EXTENDED STOP	1	
-17	A1261TYPEB	. . SEAL-POLY PAK PKSC	1	
-18	5041106-3	. . RING-PACK SUPPORT FSO 0841212-1	1	D
	0841212-1	. . RING-PACK SUPPORT	1	D E
-19	MS28775-229	. . O RING	1	
-20	MS28776M2-22	. . SCRAPER	1	
-21	5041111-1	. . RING-LOCK	1	
-22	CM2690-14	. . RING-INTERNAL LOCK	1	
	5241001-1	. . PIN ASSY-METERING	1	
-23	5241001-2	. . . PIN-METERING	1	
-24	MS28775-010	. . . O-RING	1	
-25	5041015-1	. . . BASE-METERING PIN	1	
-26	AN960-416L	. . . WASHER	1	
-27	MS21042-4	. . . NUT	1	
-28	MS28775-222	. . . O RING	1	
-29	5141005-1	. . LINK ASSY-UPPER LH	1	B
	5141005-7	. . LINK ASSY-UPPER LH	1	B C
	5141005-2	. . LINK ASSY-UPPER RH	1	B
	5141005-8	. . LINK ASSY-UPPER RH	1	B C
-30	5141005-5	. . LINK ASSY-LOWER LH	1	B
	5141005-9	. . LINK ASSY-LOWER LH	1	B C
	5141005-6	. . LINK ASSY-LOWER RH	1	B
	5141005-10	. . LINK ASSY-LOWER RH	1	C
-31	5141008-1	. . . BUSHING	4	
-32	5041013-2	. . . BUSHING	2	
-33	MS15002-1	. . . FITTING-LUBE	5	
	MS15002-3	. . . FITTING-LUBE	1	
-34	5141006-1	. . SHAFT	2	
-35	NAS561P5-12	. . PIN-SLOTTED SPRING	2	
-36	5141009-1	. . SPACER-UPPER LH	1	F
	5141009-9	. . SPACER-UPPER LH FSO 5141009-13	1	F H
	5141009-11	. . SPACER-UPPER LH FSO 5141009-13	1	J
	5141009-13	. . SPACER-UPPER LH	1	J K
	NAS1081CC8A5L	. . SCREW-SET	1	K
	5141009-1	. . SPACER-UPPER RH	1	B
	5141009-7	. . SPACER-UPPER RH	1	B C
-37	5141009-2	. . SPACER-LOWER	1	B
	5141009-8	. . SPACER-LOWER	1	C
-38	AN960-716	. . WASHER	AR	
	AN960-716L	. . WASHER	AR	
	AN960C716L	. . WASHER	AR	

CONTINUED

FIGURE AND INDEX NO.	PART NUMBER	1 2 3 4 5 6 7 DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
69 -39	AN175-20	. . BOLT	1	
-40	5045018-1	. . WASHER	2	
-41	5041013-3	. . BUSHING	1	
-42	AN310-5	. . NUT	1	
-43	MS24665-153	. . COTTER PIN	1	
-44	TA607D13	. . CLAMP THAS	1	
-45	0841003-1	. . BUSHING HALF	2	
-46	5041007-1	. . STRIKER-SWITCH LH STRUT ONLY	1	F
		ATTACHING PARTS		
-47	MS27039-1-08	. . SCREW LH STRUT ONLY	1	
-48	AN960-10L	. . WASHER LH STRUT ONLY	1	
-49	MS21045L3	. . NUT LH STRUT ONLY	1	
		---*---		
-50	5141007-2	. . BRACKET-SWITCH INBD LH STRUT ONLY	1	F
	5141201-1	. . BRACKET-SWITCH LH STRUT	1	G
	5141201-2	. . PLATE-SWITCH LH STRUT	1	G
-51	5141007-1	. . BRACKET-SWITCH OUTBD LH STRUT ONLY	1	F
		ATTACHING PARTS		
-52	MS27039-1-15	. . SCREW LH STRUT	1	F
	MS24694S52	. . SCREW LH STRUT	3	G
	MS27039-1-09	. . SCREW RH STRUT	1	
-53	NAS43HT3-52	. . SPACER LH STRUT	1	F
-54	MS21919G8	. . CLAMP	1	
-55	MS21045L3	. . NUT	1	F
	MS21044N3	. . NUT LH STRUT	3	G
		---*---		
-56	5243000-6	. . PLACARD	1	

A---340-0186 THRU 340-0211
340-0222 & ON
B---340-0186 THRU 340-0211
340-0222 THRU 340-0300
C---340-0301 & ON
D---340-0186 THRU 340-0211
340-0222 THRU 340-0244
E---340-0245 & ON
F---340-0186 THRU 340-0211
340-0222 THRU 340-0257 EXCEPT
AIRCRAFT MODIFIED BY SK421-60
G---340-0258 & ON, & AIRCRAFT
MODIFIED BY SK421-60
H---340-0258 THRU 340-0322
J---340-0323 THRU 340-0516
K---340-0517 & ON

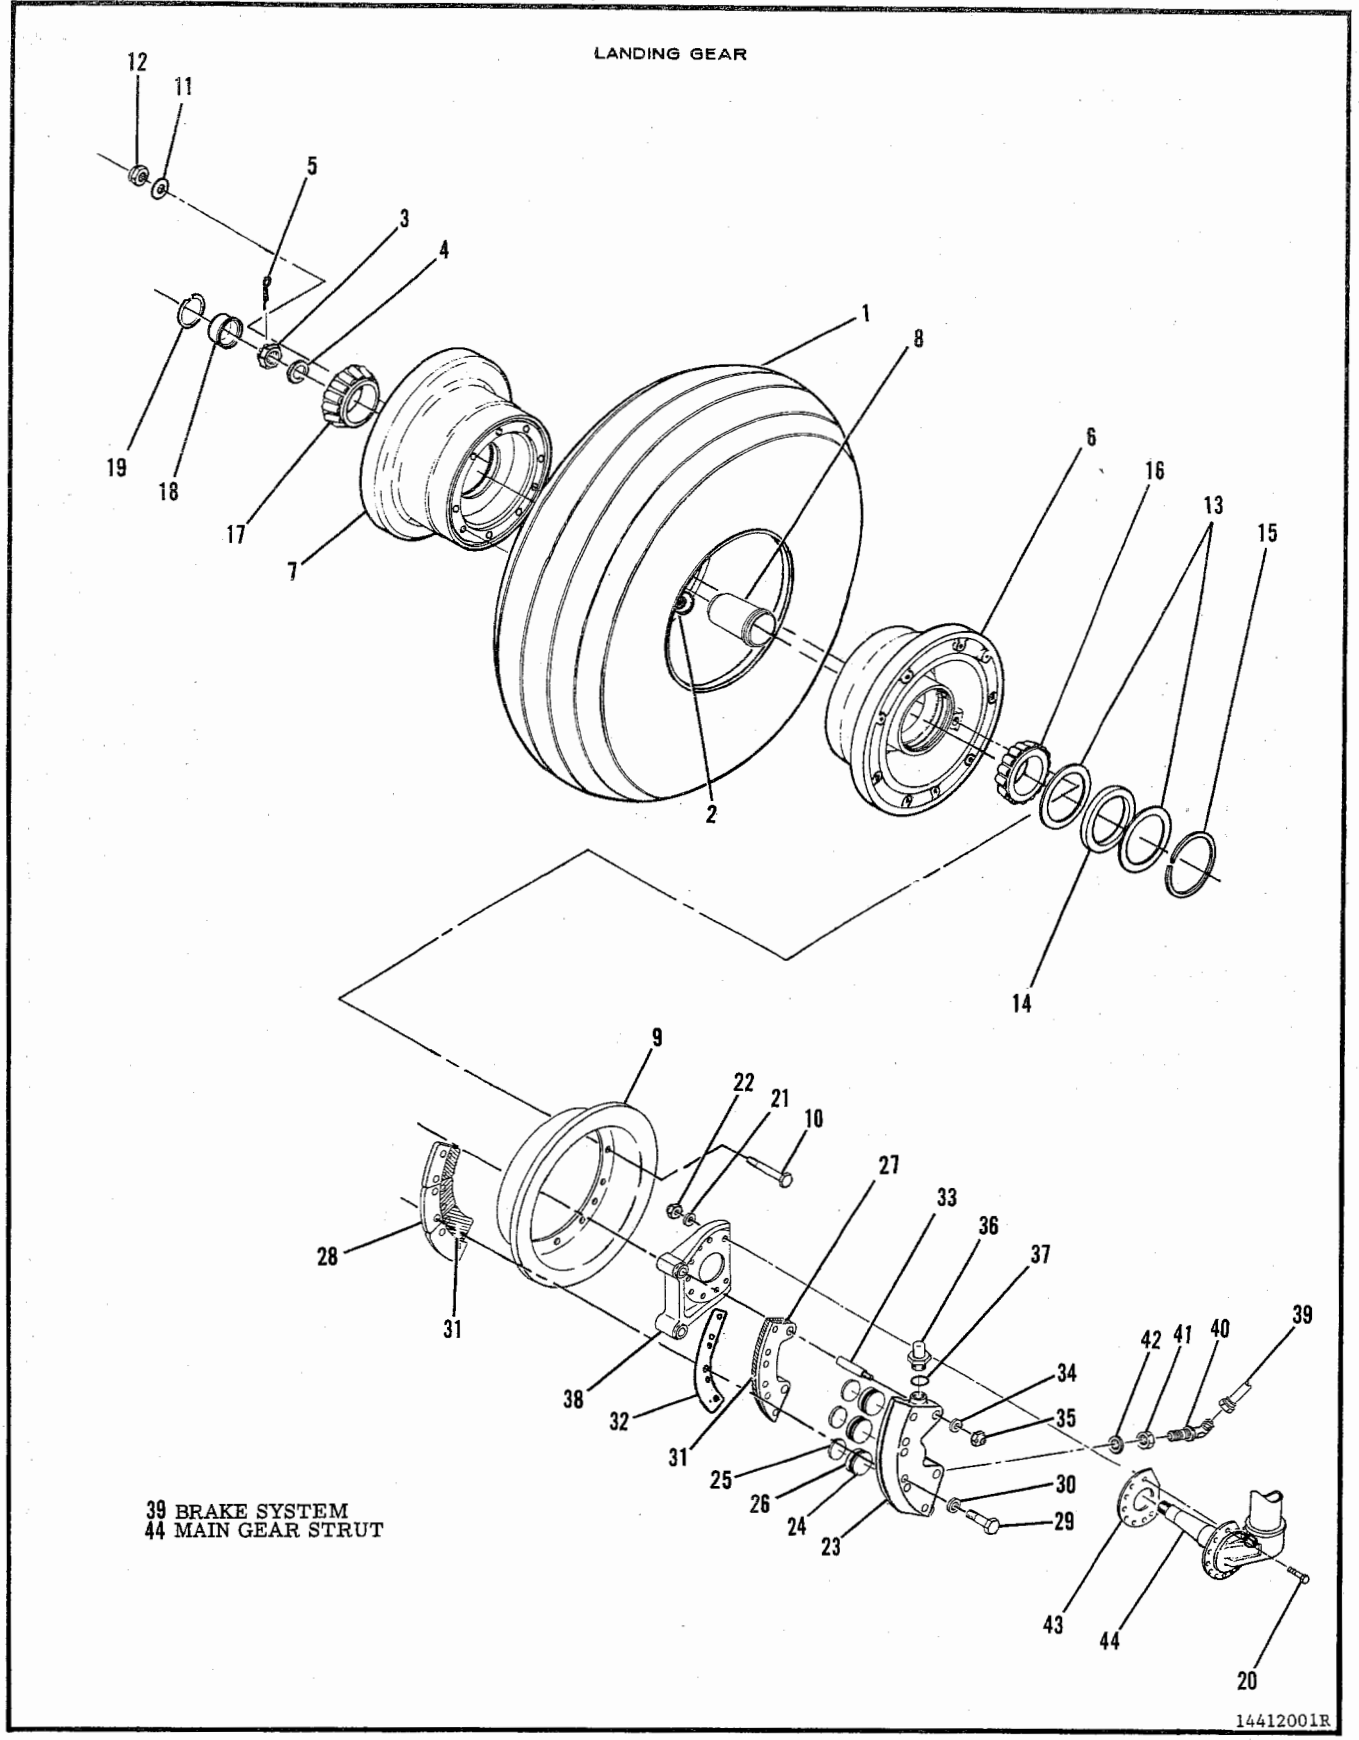

39 BRAKE SYSTEM
44 MAIN GEAR STRUT

Figure 70. Main Gear Wheel Tire and Brake Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
70 -		MAIN GEAR WHEEL TIRE AND BRAKE INSTALLATION	NP	
-1	C262003-0210	. TIRE-6.50 X 10 8 PLY RATING TUBE TYPE	1	
	A650C81-3	. TIRE ALT FOR C262003-0210 GY	1	
-2	C262023-0105	. TUBE-6.50 X 10	1	
	40-40A	. WHEEL ASSY CFP	1	B
	5041016-3	. WHEEL ASSY	1	C
		ATTACHING PARTS		
-3	CM2910-15	. NUT	1	
-4	AN7503-15	. WASHER	1	
-5	MS24665-357	. PIN-COTTER	1	
		---*---		
-6	161-19	. . WHEEL HALF ASSY BRAKE HALF CFP	1	
	LM29710	. . . CUP-BEARING CFP	1	
-7	162-17	. . WHEEL HALF ASSY NON BRAKE HALF CFP	1	
	07196	. . . CUP-BEARING TI	1	
-8	67-6	. . SPACER CFP	1	
-9	164-8	. . BRAKE DISC ASSY CFP	1	
		ATTACHING PARTS		
-10	AN4-31A	. . BOLT	9	
-11	AN960-416	. . WASHER	9	
-12	MS21044N4	. . NUT	9	
		---*---		
-13	153-9	. . RING-GREASE SEAL CFP	2	
-14	154-8	. . FELT-GREASE SEAL CFP	1	
-15	3023	. . RING-SNAP CFP	1	
-16	LM29749	. . CONE-BEARING TI	1	
-17	07100	. . CONE-BEARING CFP	1	
-18	158-8	. . CAP-HUB CFP	1	
-19	155-6	. . RING-SNAP CFP	1	
	30-28B	. BRAKE ASSY CFP	1	
		ATTACHING PARTS		
-20	NAS464P4A8	. BOLT	8	
-21	AN960-416L	. WASHER	8	
-22	MS21042L4	. NUT	8	
		---*---		
-23	61-26	. . CYLINDER-BRAKE CFP	1	
-24	62-7	. . PISTON CFP	3	
-25	88-1	. . INSULATOR CFP	3	
-26	AN6227B27	. . O-RING	3	
-27	73-5	. . PLATE ASSY-PRESSURE CFP	1	
-28	74-5	. . PLATE ASSY-BACK CFP	3	
		ATTACHING PARTS		
-29	LP4-15AM	. . BOLT CFP	2	
-30	AN960-416L	. . WASHER	2	
		---*---		
-31	66-33	. . LINING CFP	6	
-32	68-16	. . SHIM-BACK PLATE CFP	1	
-33	69-4	. . BOLT-ANCHOR CFP	2	
		ATTACHING PARTS		
-34	AN960-416L	. . WASHER	1	
-35	MS2044N4	. . NUT	1	
		---*---		
-36	81-2	. . SEAT-BLEEDER CFP	1	
-37	AN6227B7	. . O-RING	1	
	FC6446	. . SCREW-BLEEDER CFP	1	
	183-1	. . CAP-BLEEDER CFP	1	
-38	75-19B	. . PLATE ASSY-TORQUE CFP	1	
	145-12	. . . BUSHING CFP	2	
-39	SEE FIG 94	. BRAKE SYSTEM	REF	
-40	AN921-4	. ELBOW	1	
-41	AN924-4	. NUT	1	
-42	AN6290-4	. GASKET	1	
-43	5041000-33	. SPACER	1	A
-44	SEE FIG 68	. MAIN GEAR STRUT	REF	

A---340-0186 THRU 340-0211
340-0222 & ON
B---340-0001 THRU 340-0300
C---340-0301 & ON

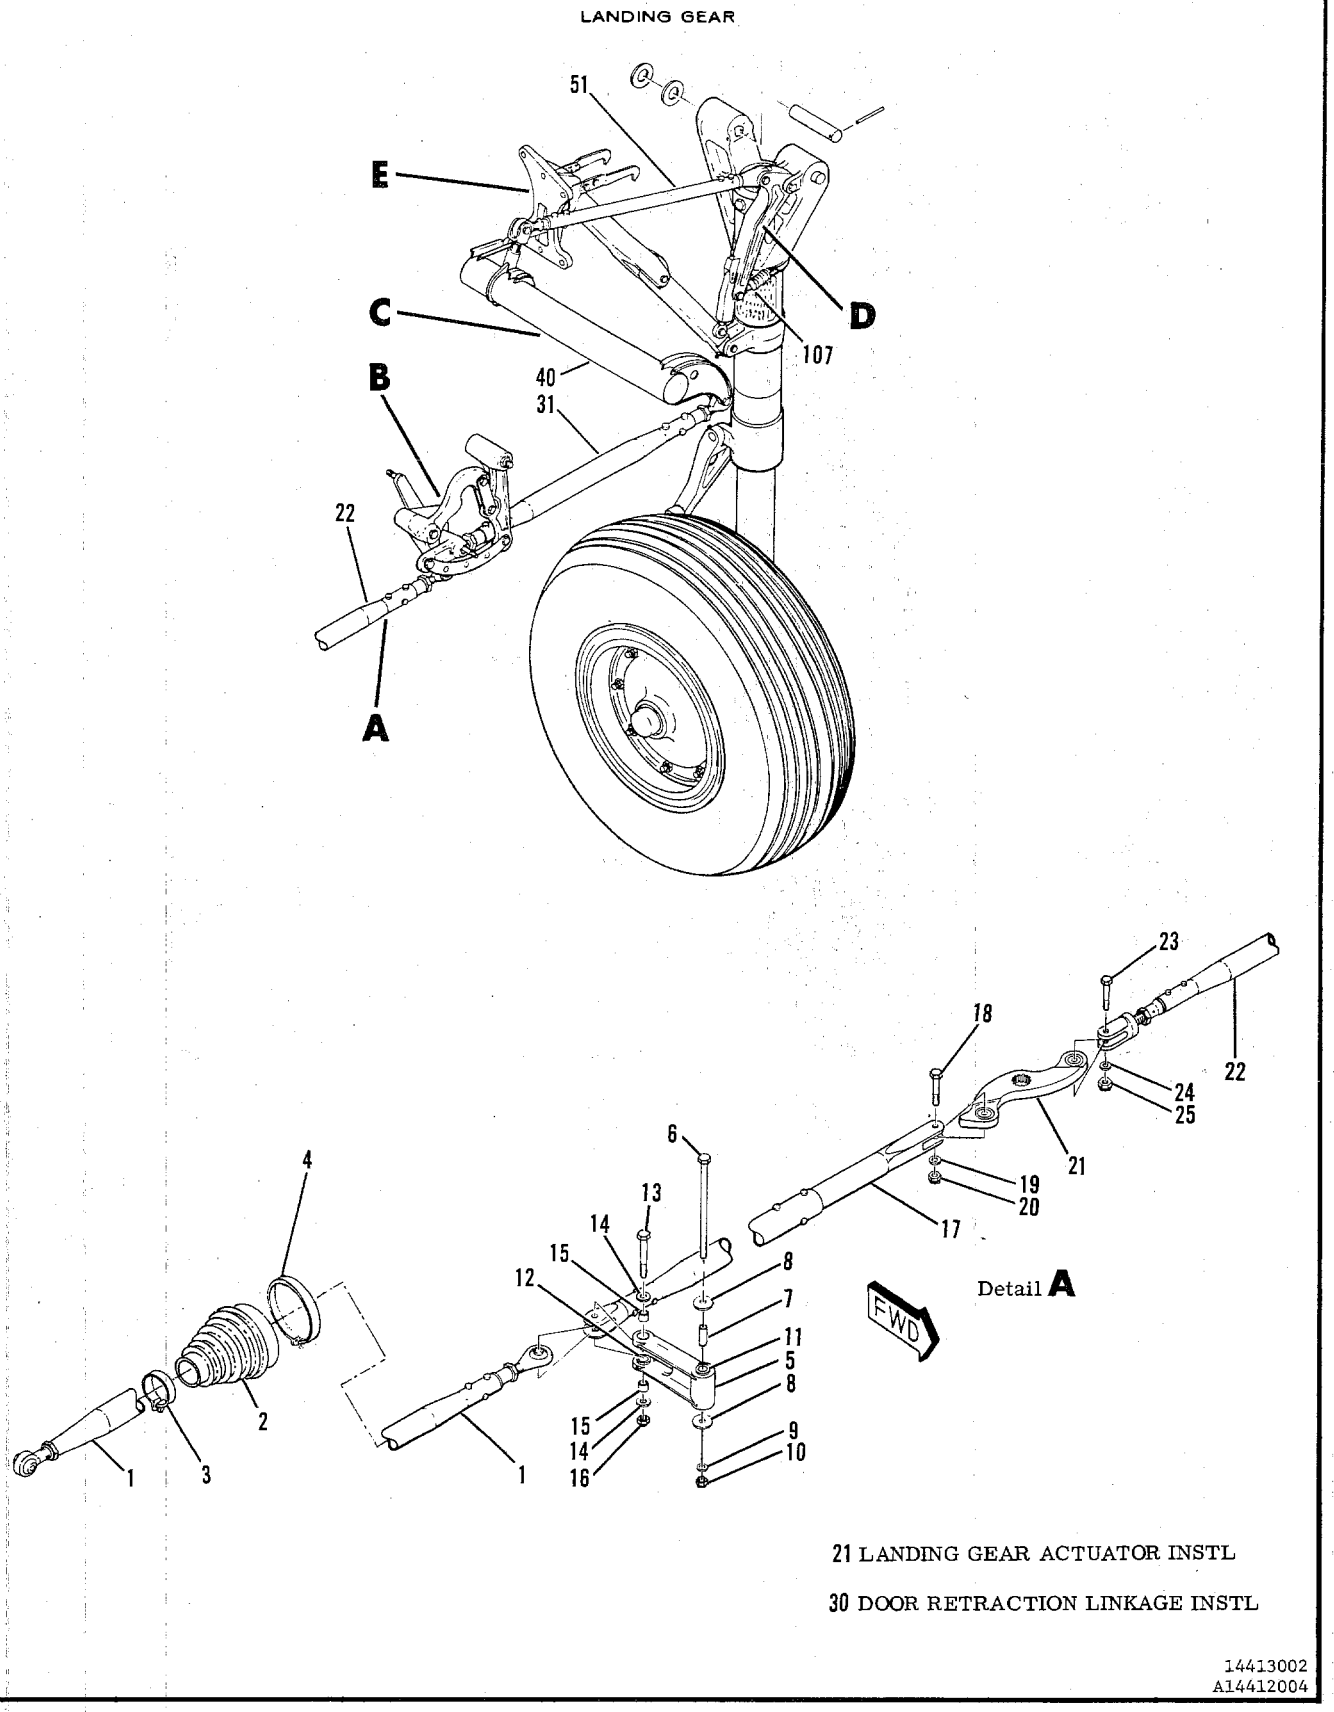

Figure 71. Main Gear Retraction Linkage Installation (Sheet 1 of 2)

LANDING GEAR

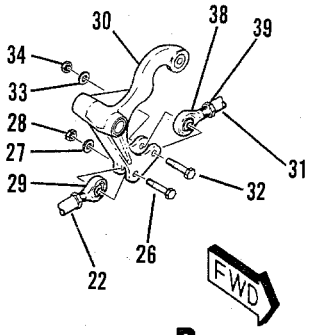

Detail **B**

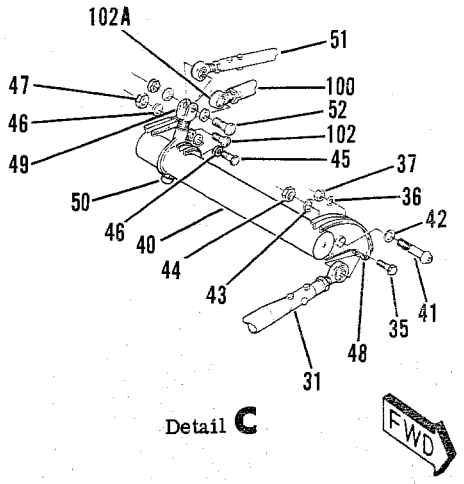

Detail **C**

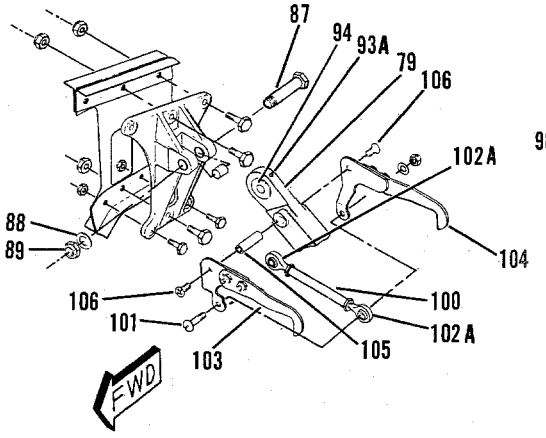

Detail **E**

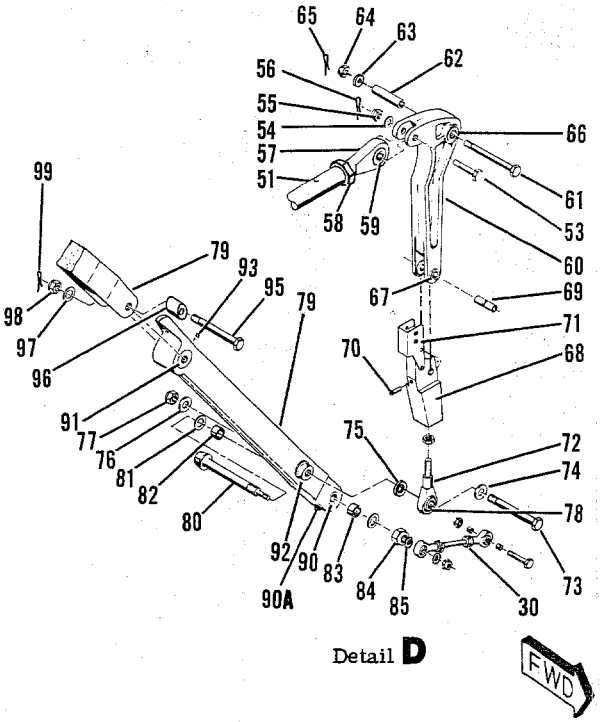

Detail **D**

B10413002
C52141003
D10413002
E14411001

Figure 71. Main Gear Retraction Linkage Installation (Sheet 2)

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
71 -		MAIN GEAR RETRACTION LINKAGE INSTALLATION	NP	
-1	5045009-16	. TUBE ASSY-RH INTERMEDIATE	1	
-2	9910011-1	. BOOT-PRESSURE SEAL LH & RH	2	
		ATTACHING PARTS		
-3	WWD152	. CLAMP OUTBD WIT	1	
-4	AN737TW56	. CLAMP INBD	1	
		---*---		
-5	5045003-4	. BELLCRANK ASSY-IDLER	1	
		ATTACHING PARTS		
-6	NAS1304-34	. BOLT	1	
-7	0843400-129	. SPACER	1	
-8	AN970-4	. WASHER	2	
-9	AN960-416L	. WASHER	1	
-10	MS21042L4	. NUT	1	
		---*---		
-11	S1004-14A	. . BEARING	2	
-12	S1004-51A	. . BEARING	2	
-13	NAS464P5A28	. BOLT	1	
-14	5045018-1	. WASHER	2	
-15	NAS72-5-005	. SPACER	2	
-16	MS21042L5	. NUT	1	
-17	5340001-6	. TUBE ASSY-RH INBD	1	
		ATTACHING PARTS		
-18	NAS464P5A11	. BOLT	1	
-19	AN960-516L	. WASHER	1	
-20	MS21044N5	. NUT	1	
		---*---		
-21	SEE FIG 78	. LANDING GEAR ACTUATOR INSTL	1	
-22	5340001-1	. TUBE ASSY-LH INBD	1	E
	5340001-10	. TUBE ASSY-LH INBD	1	F
		ATTACHING PARTS		
-23	NAS464P5A11	. BOLT AT ACTUATOR	1	
-24	AN960-516L	. WASHER AT ACTUATOR	1	
-25	MS21044N4	. NUT AT ACTUATOR	1	
-26	NAS464P5A15	. BOLT RETRACTION LINKAGE	1	
-27	AN960-516L	. WASHER AT RETRACTION LINKAGE	1	
-28	MS21044N5	. NUT AT RETRACTION LINKAGE	1	
	S1450-5-10-125	. WASHER AT RETRACTION LINKAGE	2	E
		---*---		
-29	5340001-4	. . FITTING ASSY LH & RH TUBE	2	
-30	SEE FIG 72	. DOOR RETRACTION LINKAGE INSTL	1	
-31	5045213-3	. TUBE ASSY-OUTBD	2	
		ATTACHING PARTS		
-32	NAS464P5A15	. BOLT AT RETRACTION LINKAGE	1	
-33	AN960-516L	. WASHER AT RETRACTION LINKAGE	1	
-34	MS21044N5	. NUT AT RETRACTION LINKAGE	1	
-35	NAS464P5A14	. BOLT AT TORQUE TUBE	1	
-36	AN960-516	. WASHER AT TORQUE TUBE	1	
-37	MS21042L5	. NUT AT TORQUE TUBE	1	
		---*---		
-38	ST5A	. . ROD END SHA	2	
-39	AN316-7R	. . NUT-CHECK	2	
-40	5045010-19	. TORQUE TUBE ASSY-LH	1	
	5045010-18	. TORQUE TUBE ASSY-RH	1	
		ATTACHING PARTS		
-41	NAS146-40	. BOLT	1	
-42	MS20002-6C	. WASHER	1	
	AN960-616	. WASHER	1	
-43	AN960-616L	. WASHER	1	
-44	MS21044N6	. NUT	1	
-45	NAS464P5LA10	. BOLT	1	
-46	AN960-516	. WASHER	2	
-47	MS21044N5	. NUT	1	
		---*---		
-48	NAS77A5-7	. . BUSHING	2	
-49	5141052-1	. . BOLT-FORK	1	
-50	AN316-10R	. . NUT-CHECK	2	
-51	0840125-15	. TUBE ASSY-AFT	2	
		ATTACHING PARTS		
-52	AN25-16	. BOLT-CLEVIS	1	
-53	NAS464P5-14	. BOLT	1	
-54	AN960-516	. WASHER	2	
-55	AN320-5	. NUT	2	
-56	MS24665-134	. PIN-COTTER	2	
		---*---		
-57	REM5S2	. . ROD END INBD RABG	1	
-58	AN316-7R	. . NUT-CHECK INBD	1	
-59	HSBG5S	. . BEARING OUTBD HLF	1	
-60	5041001-1	. BELLCRANK ASSY-LH	1	D
	5041001-5	. BELLCRANK ASSY-LH	1	C
	5041001-2	. BELLCRANK ASSY-RH	1	D
	5041001-6	. BELLCRANK ASSY-RH	1	C
		ATTACHING PARTS		
-61	NAS464P4-26	. BOLT	1	
-62	S133-4P32	. SPACER	1	
-63	AN960-416	. WASHER	1	
-64	AN320-4	. NUT	1	
-65	MS24665-132	. PIN-COTTER	1	
		---*---		
-66	NAS77-6-40	. . BUSHING	2	
-67	S1004-11B	. . BUSHING	2	
-68	0841112-1	. LINK ASSY-SIDE BRACE	2	
		ATTACHING PARTS		
-69	5041018-1	. PIN-DOWN LOCK	1	
-70	AN565D8H8	. SET SCREW	1	
		---*---		

CONTINUED

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
71 -71	0841235-3		. . BRACKET-SWITCH	1	
-72	0841101-1		. END FITTING ASSY-SIDE BRACE LOCK FSO 0841111-3	2	G
	0841111-3		. END FITTING ASSY-SIDE BRACE LOCK	2	H
			ATTACHING PARTS		
-73	AN25-38A		. BOLT	1	
-74	0841004-5		. WASHER	1	
-75	AN960PD516L		. WASHER	1	
-76	AN960-516L		. WASHER	1	
-77	MS21042L5		. NUT	1	
			---*---		
-78	KWB5		. . BEARING HLF	1	
-79	5041000-47	#	. BRACE ASSY-LH SIDE	1	A
	5141001-9	#	. BRACE ASSY-LH SIDE	1	B
	5141001-33	#	. BRACE ASSY-LH SIDE	1	C
	5041000-46	#	. BRACE ASSY-RH SIDE	1	A
	5141001-10	#	. BRACE ASSY-RH SIDE	1	B
	5141001-34	#	. BRACE ASSY-RH SIDE	1	C
			ATTACHING PARTS		
-80	5041011-1		. BOLT	1	
-81	AN960-716L		. WASHER	2	
-82	5041004-1		. SPACER-UPLOCK	2	
-83	5041003-2		. SPACER	1	
-84	MS20365-720C		. NUT	1	
-85	AN960-10L		. WASHER	AR	
-86			. DELETED NOT USED		
-87	NAS464P7-29		. BOLT	1	
	0841202-1		. SPACER	1	
-88	AN960-1016		. WASHER	AR	
	AN960-1016L		. WASHER	AR	
	AN960-716L		. WASHER	1	
-89	AN320-7		. NUT	1	
	MS24665-285		. PIN-COTTER	1	
			---*---		
-90	S132-10P24		. . BUSHING FSO 5041003-3	1	J
	5041003-3		. . BUSHING	1	K
-90A	3019		. . FITTING-LUBE SW	1	
-91	NAS77-10-45		. . BUSHING	2	
-92	5041103-4		. . BUSHING	1	
-93	1736		. . FITTING-DRIVE AL	1	
-93A	1736		. . FITTING-DRIVE AL	1	A
	1646B1		. . FITTING-DRIVE SW	1	B
-94	S132-10P17		. . BUSHING	1	
-95	NAS464P7-28		. . BOLT	1	
-96	5041003-1		. . SPACER	1	
-97	AN960-716L		. . WASHER	1	A
-98	AN320-7		. . NUT	1	A
-99	MS24665-285		. . PIN-COTTER	1	
-100	0841142-1		. UPLOCK ASSY	1	
			ATTACHING PARTS		
-101	AN24-15		. BOLT-CLEVIS	1	
-102	AN24-13		. BOLT-CLEVIS	1	
	AN960-416L		. WASHER	2	
	AN320-4		. NUT	2	
	MS24665-132		. PIN-COTTER	2	
			---*---		
	S1105-4		. . ROD END	2	
	AN316-4R		. . NUT-CHECK	2	
-103	5041023-7		. HOOK ASSY-UPLOCK LH FWD	1	
	5041023-8		. HOOK ASSY-UPLOCK LH AFT	1	
-104	5041023-5		. HOOK ASSY-UPLOCK RH FWD	1	
	5041023-6		. HOOK ASSY-UPLOCK RH AFT	1	
-105	5041014-1		. BUSHING-UPLOCK	2	
-106	NK507-428R10		. SCREW NYLK	4	
-107	5041005-1		. SPRING-DOWNLOCK	2	

BRACE ASSEMBLY MUST BE ORDERED AS COMPLETE ASSEMBLIES

A---340-0001 THRU 340-0185
340-0212 THRU 340-0221
B---340-0186 THRU 340-0211
340-0222 THRU 340-0300
C---340-0301 & ON
D---340-0001 THRU 340-0300
E---340-0001 THRU 340-0321
340-0332 THRU 340-0552
F---340-0322 THRU 340-0331, 340-0553 & ON
G---340-0001 THRU 340-0150
H---340-0151 & ON
J---340-0001 THRU 340-0516
K---340-0517 & ON

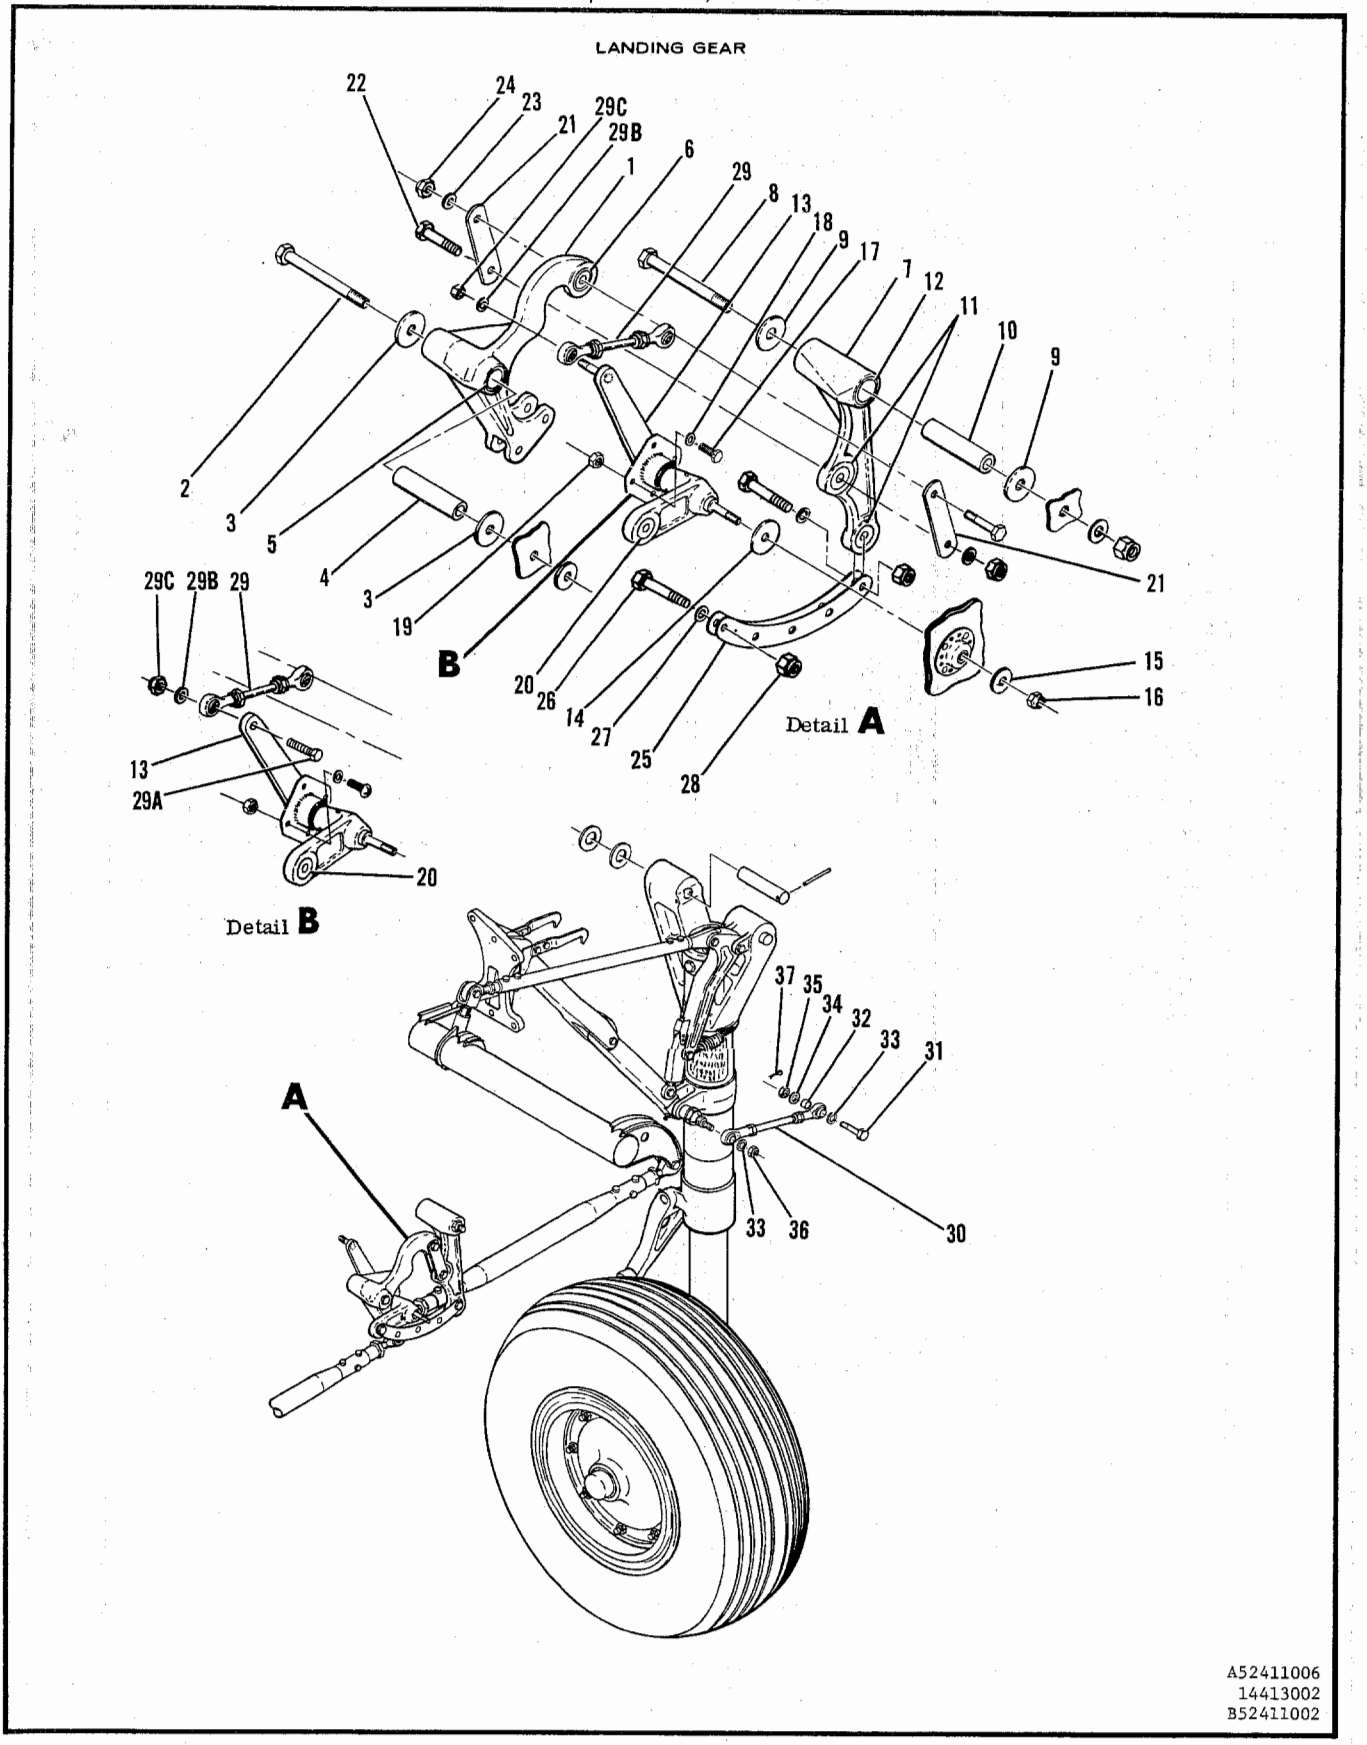

Figure 72. Door Retraction Linkage Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
72 -		DOOR RETRACTION LINKAGE INSTALLATION	NP	
-1	0841106-5	. BELLCRANK ASSY-IDLER LH	1	
	0841106-6	. BELLCRANK ASSY-IDLER RH	1	
		ATTACHING PARTS		
-2	NAS464P6LA47	. BOLT	1	
-3	S1003-64B	. BEARING-THRUST	2	
-4	5045026-1	. SPACER	1	
		---*---		
-5	B1012	. . BEARING TOR	2	
-6	MS24461-4	. . BEARING	1	
-7	0841104-3	. BELLCRANK ASSY-LH	1	
	0841104-4	. BELLCRANK ASSY-RH	1	
		ATTACHING PARTS		
-8	NAS464P6LA47	. BOLT	1	
-9	S1003-64B	. BEARING-THRUST	2	
-10	5045026-1	. SPACER	1	
-11	MS24461-4	. . BEARING	2	
-12	BH108	. . BEARING TOR	2	
-13	5045001-7	. CRANK ASSY-DOOR ACTUATOR LH FSO 5045001-201	1	A
	5045001-9	. CRANK ASSY-DOOR ACTUATOR LH FSO 5045001-201	1	B
	5045001-8	. CRANK ASSY-DOOR ACTUATOR RH FSO 5045001-202	1	A
	5045001-10	. CRANK ASSY-DOOR ACTUATOR RH FSO 5045001-202	1	B
		ATTACHING PARTS		
-14	0843400-45	. WASHER	1	
-15	AN960-416L	. WASHER	1	
-16	MS2044N4	. NUT	1	
-17	NAS623-2-3	. SCREW	4	
-18	AN960-8	. WASHER	4	
-19	MS21042L08	. NUT	4	
		---*---		
-20	MS24461-4	. . BEARING	1	
-21	0843500-28	. LINK-UPPER CONNECTING	2	
		ATTACHING PARTS		
-22	NAS464P4A10	. BOLT	2	
-23	AN960-416L	. WASHER	2	
-24	MS21042L4	. NUT	2	
		---*---		
-25	0843500-6	. LINK-LOWER BELLCRANK	2	
		ATTACHING PARTS		
-26	NAS464P4A9	. BOLT	2	
-27	AN960-416L	. WASHER	2	
-28	MS21042L4	. NUT	2	
		---*---		
-29	0843500-13	. TUBE ASSY-MAIN GEAR DOOR WEU 5045025-1	2	
	5045025-1	. TUBE ASSY-MAIN GEAR DOOR	2	
		ATTACHING PARTS		
-29A	AN174-11A	. BOLT	1	
-29B	S1450-4-12-032	. WASHER	1	
-29C	MS21042L4	. NUT	1	
		---*---		
-30	5041012-3	. LINK ASSY-STRUT DOOR	2	
		ATTACHING PARTS		
-31	NAS464P3-11	. BOLT	1	
-32	NAS43HT3-13	. SPACER	1	
-33	AN960-10L	. WASHER	2	
-34	AN960-10	. WASHER	1	
-35	AN320-3	. NUT	1	
-36	MS21045L3	. NUT	1	
-37	MS24665-132	. PIN-COTTER	1	
		---*---		
		A---340-0001 THRU 340-0044 B---340-0045 & ON		

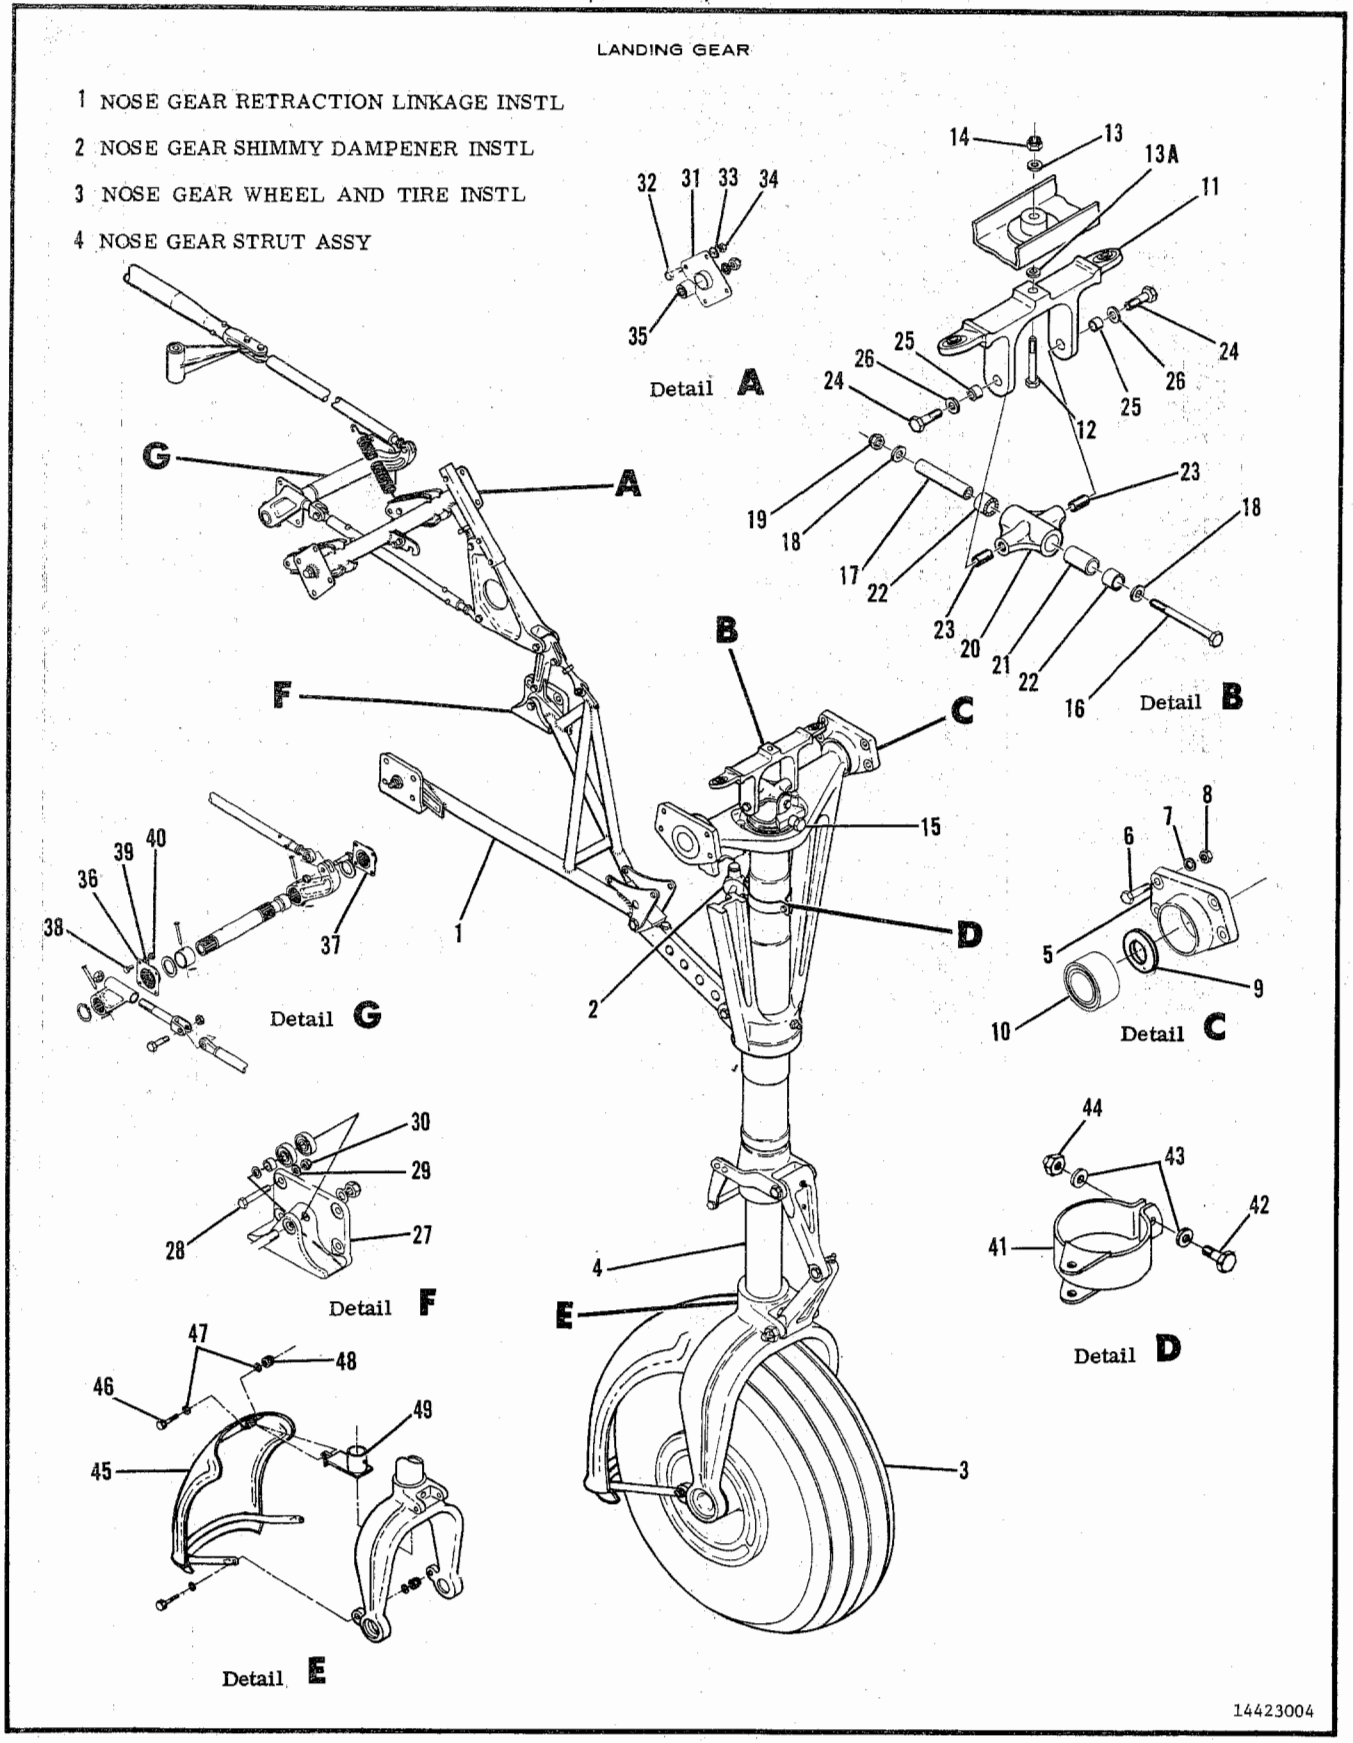

Figure 73. Nose Landing Gear Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
73 -		NOSE LANDING GEAR INSTALLATION	NP	
-1	SEE FIG 77	. NOSE GEAR RETRACTION LINKAGE INSTL	1	
-2	SEE FIG 75	. NOSE GEAR SHIMMY DAMPENER INSTL	1	
-3	SEE FIG 76	. NOSE GEAR WHEEL AND TIRE INSTL	1	
-4	SEE FIG 74	. NOSE GEAR STRUT ASSY	REF	
-5	0842007-1	. RETAINER ASSY-SHOCK STRUT	2	
		ATTACHING PARTS		
-6	AN4-10A	. BOLT	4	
-7	AN960-416	. WASHER	4	
-8	MS2044N4	. NUT	4	
		---*---		
-9	5042018-1	. . SHIM	AR	
-10	BR1916	. . BEARING TOR	1	
-11	5042010-1	. BELLCRANK ASSY-STEERING	1	
		ATTACHING PARTS		
-12	AN4-15A	. BOLT	1	
-13	AN960-416	. WASHER	1	
-13A	AN960-416L	. WASHER	1	
-14	MS2044N4	. NUT	1	
		---*---		
-15	5042012-3	. GIMBAL ASSY	1	
		ATTACHING PARTS		
-16	AN4-26A	. BOLT	1	
-17	5042003-2	. BUSHING	1	
-18	AN960-416	. WASHER	2	
-19	MS2044N4	. NUT	1	
		---*---		
-20	5042012-4	. . BLOCK-GIMBAL	1	
-21	NAS43DD7-60	. . SPACER	1	
-22	B78	. . BEARING-NEEDLE TOR	2	
-23	3591-4NX 1-2	. . INSERT-SCREW LOCK HELI	2	
-24	AN4-6A	. BOLT	2	
-25	S133-4-10	. SPACER	2	
-26	AN960-616L	. WASHER	2	
-27	0842105-3	. RETAINER-TRUSS DRAG BRACE ASSY LH WEU 0842105-5	1	C
	0842105-5	. RETAINER-TRUSS DRAG BRACE ASSY LH	1	D
	0842105-4	. RETAINER-TRUSS DRAG BRACE ASSY RH WEU 0842105-6	1	C
	0842105-6	. RETAINER-TRUSS DRAG BRACE ASSY RH	1	D
		ATTACHING PARTS		
-28	AN4-6A	. BOLT	4	
-29	AN960-416L	. WASHER	4	
-30	MS2044N4	. NUT	4	
		---*---		
-31	0813313-1	. BEARING ASSY-UPLOCK TUBE SUPPORT	2	
		ATTACHING PARTS		
-32	AN3-3A	. BOLT	4	
-33	AN960-3L	. WASHER	4	
-34	MS21045L4	. NUT	4	
		---*---		
-35	4NCCP10P	. . BEARING TOR	1	
-36	0813300-35	. BEARING ASSY-TORQUE TUBE SUPPORT INBD	1	
-37	0842110-1	. BEARING ASSY-TORQUE TUBE SUPPORT OUTBD	1	
		ATTACHING PARTS		
-38	AN3-3A	. BOLT	4	
-39	AN960-3L	. WASHER	4	
-40	MS21042L3	. NUT	4	
		---*---		
-41	5042004-1	. BRACKET-SHIMMY DAMPENER	1	
		ATTACHING PARTS		
-42	AN3-5A	. BOLT	1	
-43	AN960-10	. WASHER	2	
-44	MS21044N3	. NUT	1	
		---*---		
-45	5042022-9	. FENDER ASSY-NOSE WHEEL	1	
		ATTACHING PARTS		
-46	AN4-6A	. BOLT	3	
-47	AN960-416L	. WASHER	6	
-48	MS21042L4	. NUT	3	
		---*---		
-49	5042024-1	. BRACKET ASSY-FENDER MOUNTING	1	A
	5042024-6	. BRACKET ASSY-FENDER MOUNTING	1	B

A---340-0001 THRU 340-0300
B---340-0301 & ON
C---340-0001 THRU 340-0542
D---340-0543 & ON

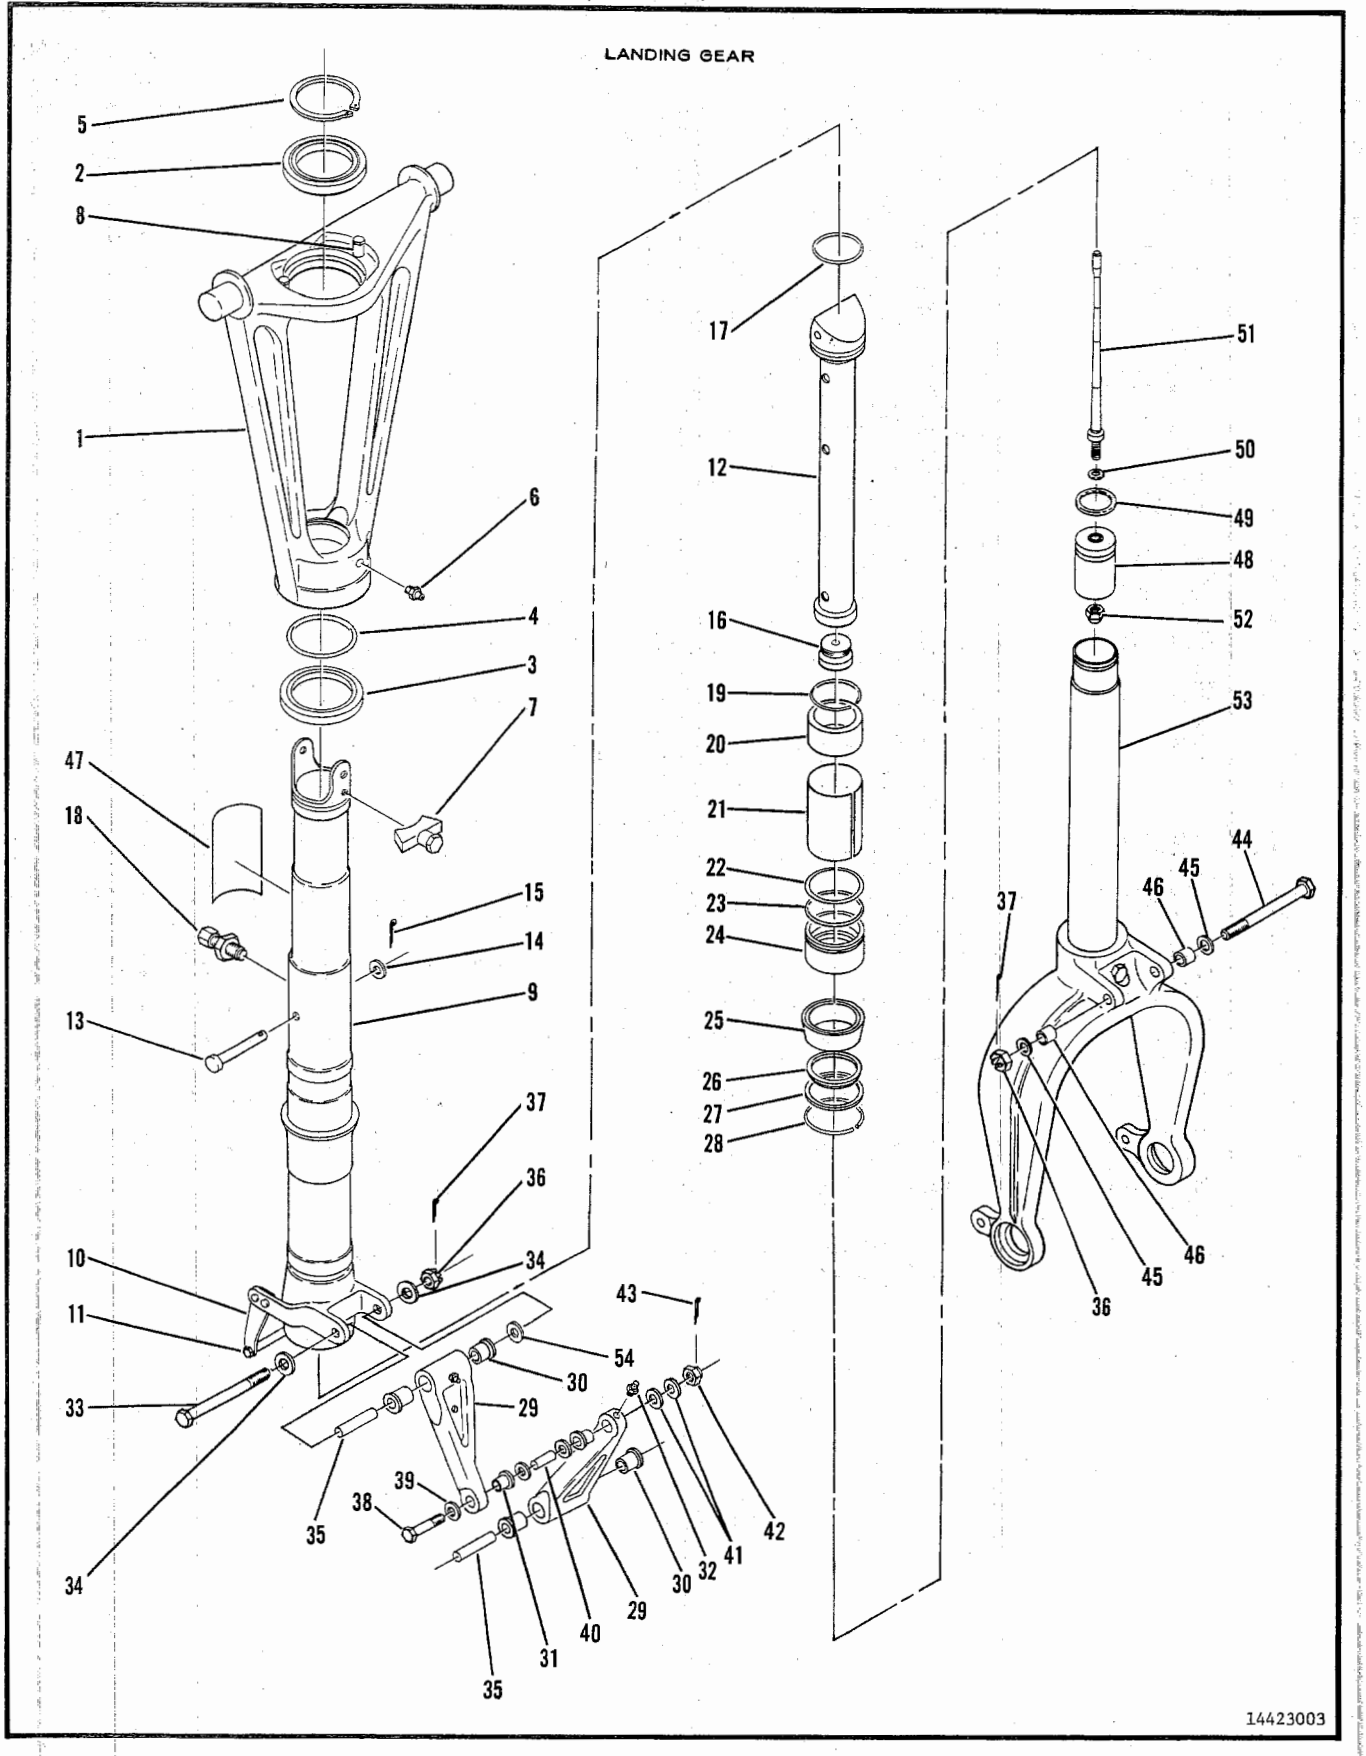

Figure 74. Nose Gear Strut Assembly

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
74 -	5042000-210	NOSE GEAR STRUT ASSEMBLY WEU 5042000-217	1	A
	5042000-217	NOSE GEAR STRUT ASSEMBLY WEU 5042000-223	1	E
	5042000-223	NOSE GEAR STRUT ASSEMBLY	1	D
-1	5042001-3	. TRUNNION-NOSE GEAR FSO 5042001-4	1	C
	5042001-4	. TRUNNION-NOSE GEAR	1	C
	5042001-5	. TRUNNION-NOSE GEAR	1	D
-2	MS20202KP37B	. BEARING-BALL	1	
-3	TWF41-52P	. BEARING-BALL	1	SBB
-4	AN6227-36	. O-RING	1	
-5	NAS670-231	. SNAP RING	1	
-6	MS15001-1	. FITTING-LUBE	1	
-7	5042009-1	. STOP	1	
		ATTACHING PARTS		
	AN3-10A	. BOLT	1	
	AN960-10	. WASHER	1	
	MS21045L3	. NUT	1	
		---*---		
-8	5042009-2	. SPACER	2	
		ATTACHING PARTS		
	AN173-13A	. SCREW	2	
	AN960-10L	. WASHER	2	
	MS21042L3	. NUT	2	
		---*---		
	5042000-211	. STRUT ASSEMBLY-SHOCK WEU 5042000-218	1	A
	5042000-218	. STRUT ASSEMBLY-SHOCK WEU 5042000-224	1	E
	5042000-224	. STRUT ASSEMBLY-SHOCK	1	D
-9	5042005-7	. . BARREL ASSY-UPPER	1	C
	5042005-8	. . BARREL ASSY-UPPER	1	D
-10	5042005-3	. . . ARM	2	
-11	AN3-23A	. . . BOLT	1	
	NAS43HT3-119	. . . SPACER	1	
	AN960-10	. . . WASHER	1	
	MS21044N3	. . . NUT	1	
-12	5242002-1	. . HEAD AND ORIFICE ASSY	1	
		ATTACHING PARTS		
-13	MS20392-4C81	. . PIN	1	
-14	AN960-516	. . WASHER	1	
-15	MS24665-353	. . PIN-COTTER	1	
		---*---		
-16	5242004-1	. . . ORIFICE	1	
-17	MS28775-225	. . O-RING	1	
-18	AN6287-1	. . VALVE ASSY	1	
-19	0841200-19	. . RING-LOCK	1	
-20	0841200-18	. . BEARING WEU 0841200-60	1	A
	0841200-60	. . BEARING	1	B
-21	5042017-1	. . SPACER-EXTEND STOP	1	
-22	0841200-31	. . SHIM	AR	
-23	MS28775-228	. . O-RING	1	
-24	0841200-55	. . RING-PACK SUPPORT WEU 0841200-57	1	A
	0841200-57	. . RING-PACK SUPPORT FSO 0841211-1	1	F
	0841211-1	. . RING ASSY-PACK SUPPORT	1	G
-25	A1190	. . POLY-PAK SEAL TYPE B	1	PKSC
-26	S11065-21	. . RING-SCRAPER	2	SHWS
-27	0841200-15	. . RING-PACK RETAINER	1	
-28	0841200-25	. . RING-LOCK	1	
-29	0841002-1	. . LINK ASSEMBLY-TORQUE	2	
-30	NAS77-8-88	. . . BUSHING	2	
-31	0841003-2	. . . BUSHING	1	
-32	1641B	. . . FITTING-LUBE	2	AL
-33	AN176-31	. . BOLT	1	
-34	NAS43HT6-5A	. . SPACER USED WHEN TAXI LIGHT IS NOT INSTALLED	2	
-35	0841004-9	. . SPACER	2	
-36	MS17826-6	. . NUT	2	
-37	MS24665-285	. . PIN-COTTER	2	
-38	AN175-16	. . BOLT	1	
-39	0841004-4	. . WASHER	2	
-40	0841004-6	. . SPACER	1	
-41	AN960-716	. . WASHER	AR	
	AN960-716L	. . WASHER	AR	
-42	MS17826-5	. . NUT	1	
-43	MS24665-134	. . PIN-COTTER	1	
-44	AN176-42	. . BOLT	1	
-45	AN960-616L	. . WASHER	2	
-46	NAS42DD12-32	. . SPACER	2	
-47	5243000-5	. . PLACARD	1	
-48	0841200-7	. . PLUG-PIN BASE	1	
-49	MS28775-221	. . O-RING	1	
-50	MS28775-010	. . O-RING	1	
-51	5242001-3	. . PIN ASSEMBLY-METERING	1	
		ATTACHING PARTS		
-52	MS21042-4	. . NUT	1	
		---*---		
-53	5042000-229	. . FORK & TUBE ASSY WEU 5042000-230	1	30
	5042000-230	. . FORK & TUBE ASSY	1	D
-54	0841004-8	. SHIM-ALIGNMENT	AR	

A---340-0001 THRU 340-0150
B---340-0151 & ON
C---340-0001 THRU 340-0300
D---340-0301 & ON
E---340-0151 THRU 340-0300
F---340-0151 THRU 340-0231
G---340-0232 & ON

LANDING GEAR

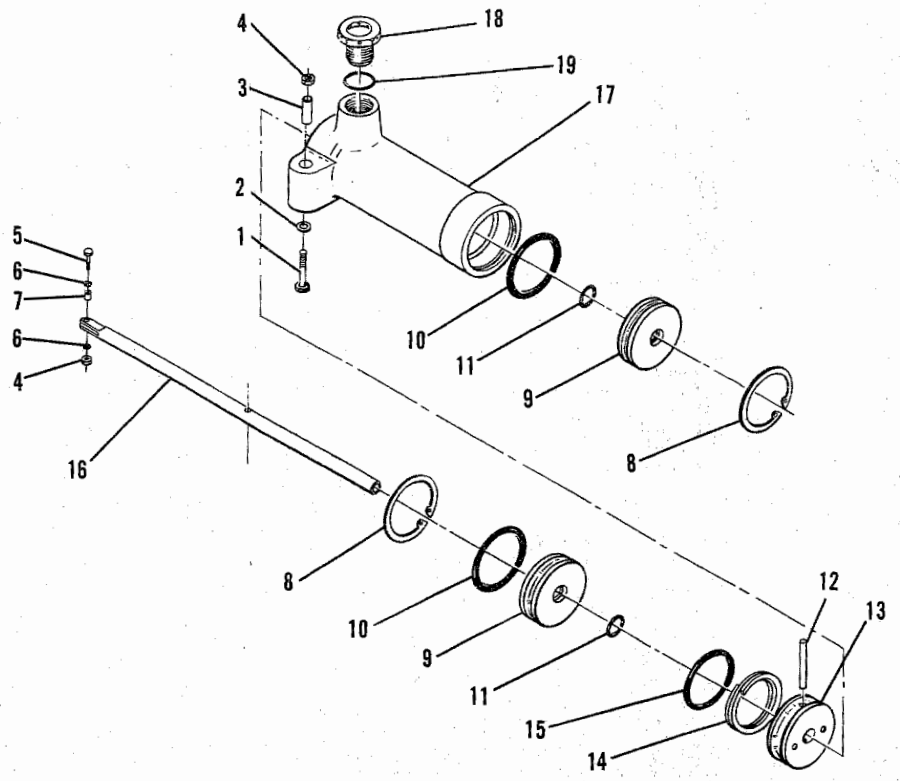

Figure 75. Nose Gear Shimmy Dampener Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
75 -		NOSE GEAR SHIMMY DAMPENER INSTALLATION	NP	
	0842410-1	. SHIMMY DAMPENER ASSY	1	
		ATTACHING PARTS		
-1	AN173-13A	. BOLT	1	
-2	AN960-10L	. WASHER	1	
-3	NAS75-3-028	. BUSHING	1	
-4	MS21044N3	. NUT	2	
-5	AN173-7A	. BOLT	1	
-6	AN960-10	. WASHER	2	
-7	NAS75-3-005	. BUSHING	1	
		---*---		
-8	MS16625-1131	. . RING-INTERNAL RETAINER	2	
-9	0842413-1	. . BEARING-HEAD	2	
-10	AN6227-20	. . O-RING	2	
-11	AN6227-10	. . O-RING	2	
-12	NAS561P4-14	. . ROLL PIN	1	
-13	0842412-1	. . PISTON	1	
-14	MS28782-18	. . RETAINER	1	
-15	AN6227-18	. . O-RING	1	
-16	0842411-1	. . ROD	1	
-17	0842405-6	. . BARREL	1	
-18	AN814-5DL	. . PLUG AND BLEEDER-FILLER	1	
-19	AN6227-7	. . O-RING	1	

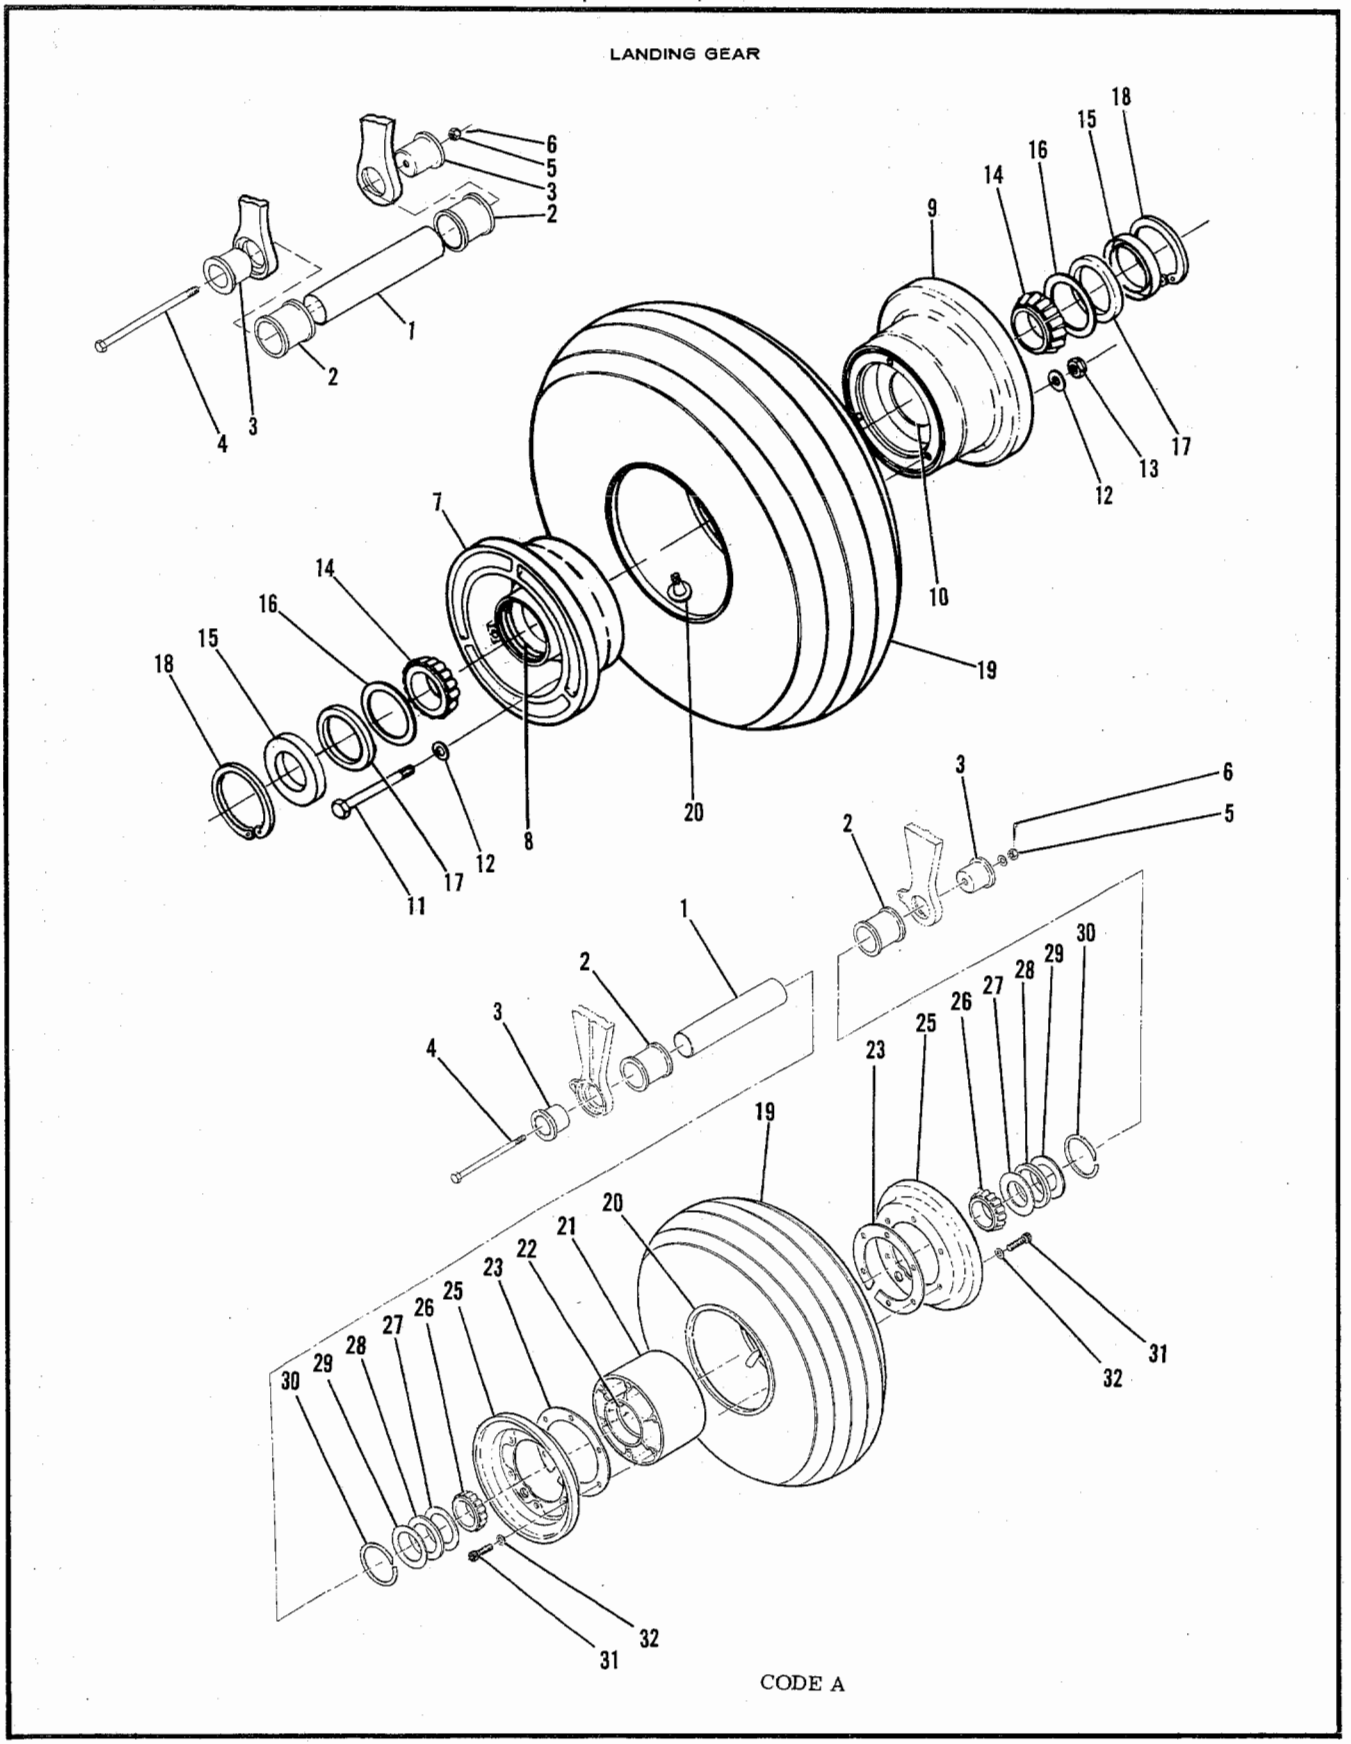

Figure 76. Nose Gear Wheel and Tire Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
76 -		NOSE GEAR WHEEL AND TIRE INSTALLATION	NP	
-1	0842000-36	. TUBE-AXLE	1	
-2	0842000-35	. SPACER-AXLE	2	
		ATTACHING PARTS		
-3	0842000-37	. BUCKET-AXLE BOLT	2	
-4	AN5-57	. BOLT	1	
-5	AN310-5	. NUT	1	
-6	MS24665-230	. PIN-COTTER	1	
		---*---		
	1241156-115	. WHEEL ASSY-NOSE GEAR ALT FOR 9910194-1	1	
-7	161-30	. . INNER WHEEL HALF ASSY CFP	1	
-8	13836	. . . CUP-BEARING TI	1	
-9	162-27	. . OUTER WHEEL HALF ASSY VALVE STEM HALF CFP	1	
-10	13836	. . . CUP-BEARING TI	1	
-11	AN5-35A	. . BOLT	3	
-12	AN960-516	. . WASHER	6	
-13	MS21044N5	. . NUT	3	
-14	13889	. . CONE-BEARING TI	2	
-15	153-15	. . RING-GREASE SEAL CFP	2	
-16	A39070	. . RING-GREASE SEAL CFP	2	
-17	154-13	. . FELT-GREASE SEAL CFP	2	
-18	3023	. . RING-SNAP CFP	2	
-19	C262003-0204	. TIRE-6.00X6 6 PLY RATED	1	
	A606C61-6	. TIRE-6.00X6 6 PLY RATED ALT FOR C262003-0204 GY	1	
-20	C262023-0102	. TUBE-6.00X6	1	
	9910194-1	. WHEEL ASSY-NOSE GEAR	1	A
-21	D30321	. . HUB ASSY MCL	1	A
-22	A30079-1	. . . BEARING-CUP MCL	2	A
-23	B30076	. . SPACER MCL	2	A
-24	D30210-4	. . FLANGE-WHEEL MCL	1	A
-25	D30210-3	. . FLANGE-WHEEL MCL	1	A
-26	A30079-2	. . BEARING-CONE MCL	2	A
-27	A30015	. . RETAINER MCL	2	A
-28	A30010	. . SEAL-GREASE FELT MCL	2	A
-29	A30014	. . RETAINER-GREASE SEAL MCL	2	A
-30	A1636-24	. . RING-RETAINER MCL	2	A
-31	A1635-79	. . SCREW MCL	12	A
-32	A1638-1	. . WASHER MCL	12	A
		A---340A0001 & ON		

LANDING GEAR

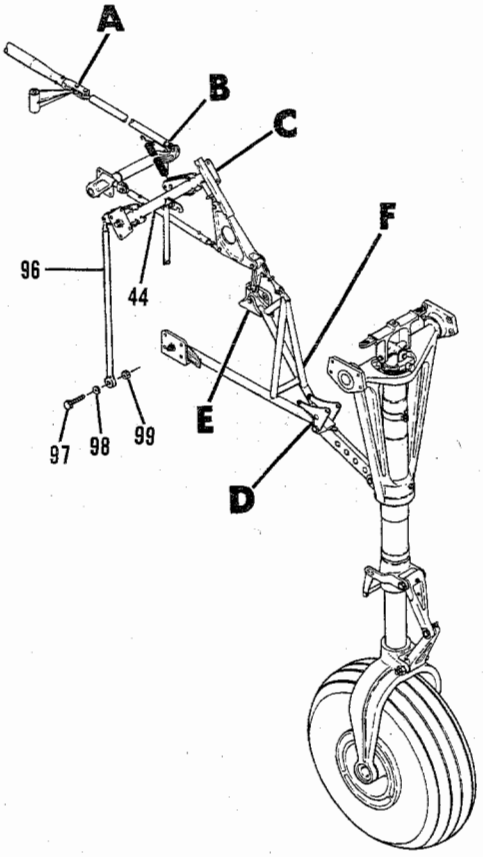

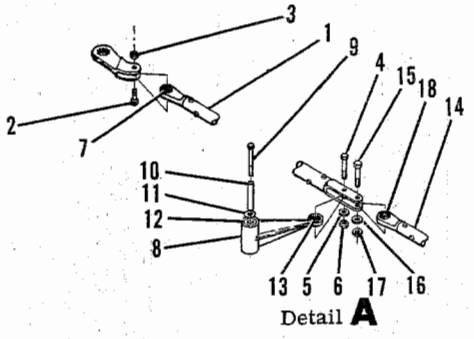

Detail **A**

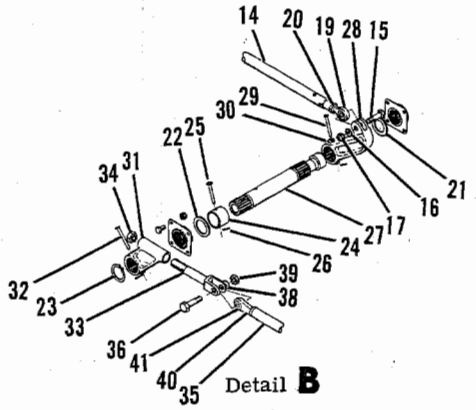

Detail **B**

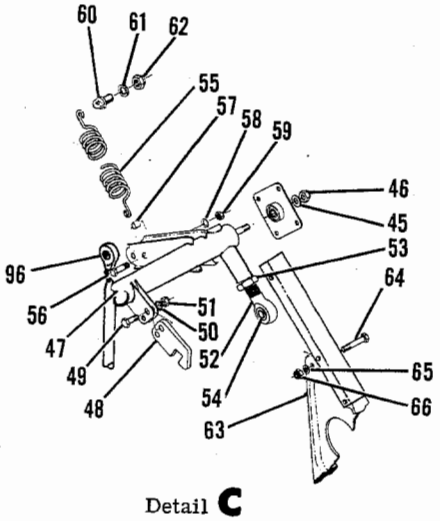

Detail **C**

14424001R
A51422001
B10422002
C10423004

Figure 77. Nose Gear Retraction Linkage Installation (Sheet 1 of 2)

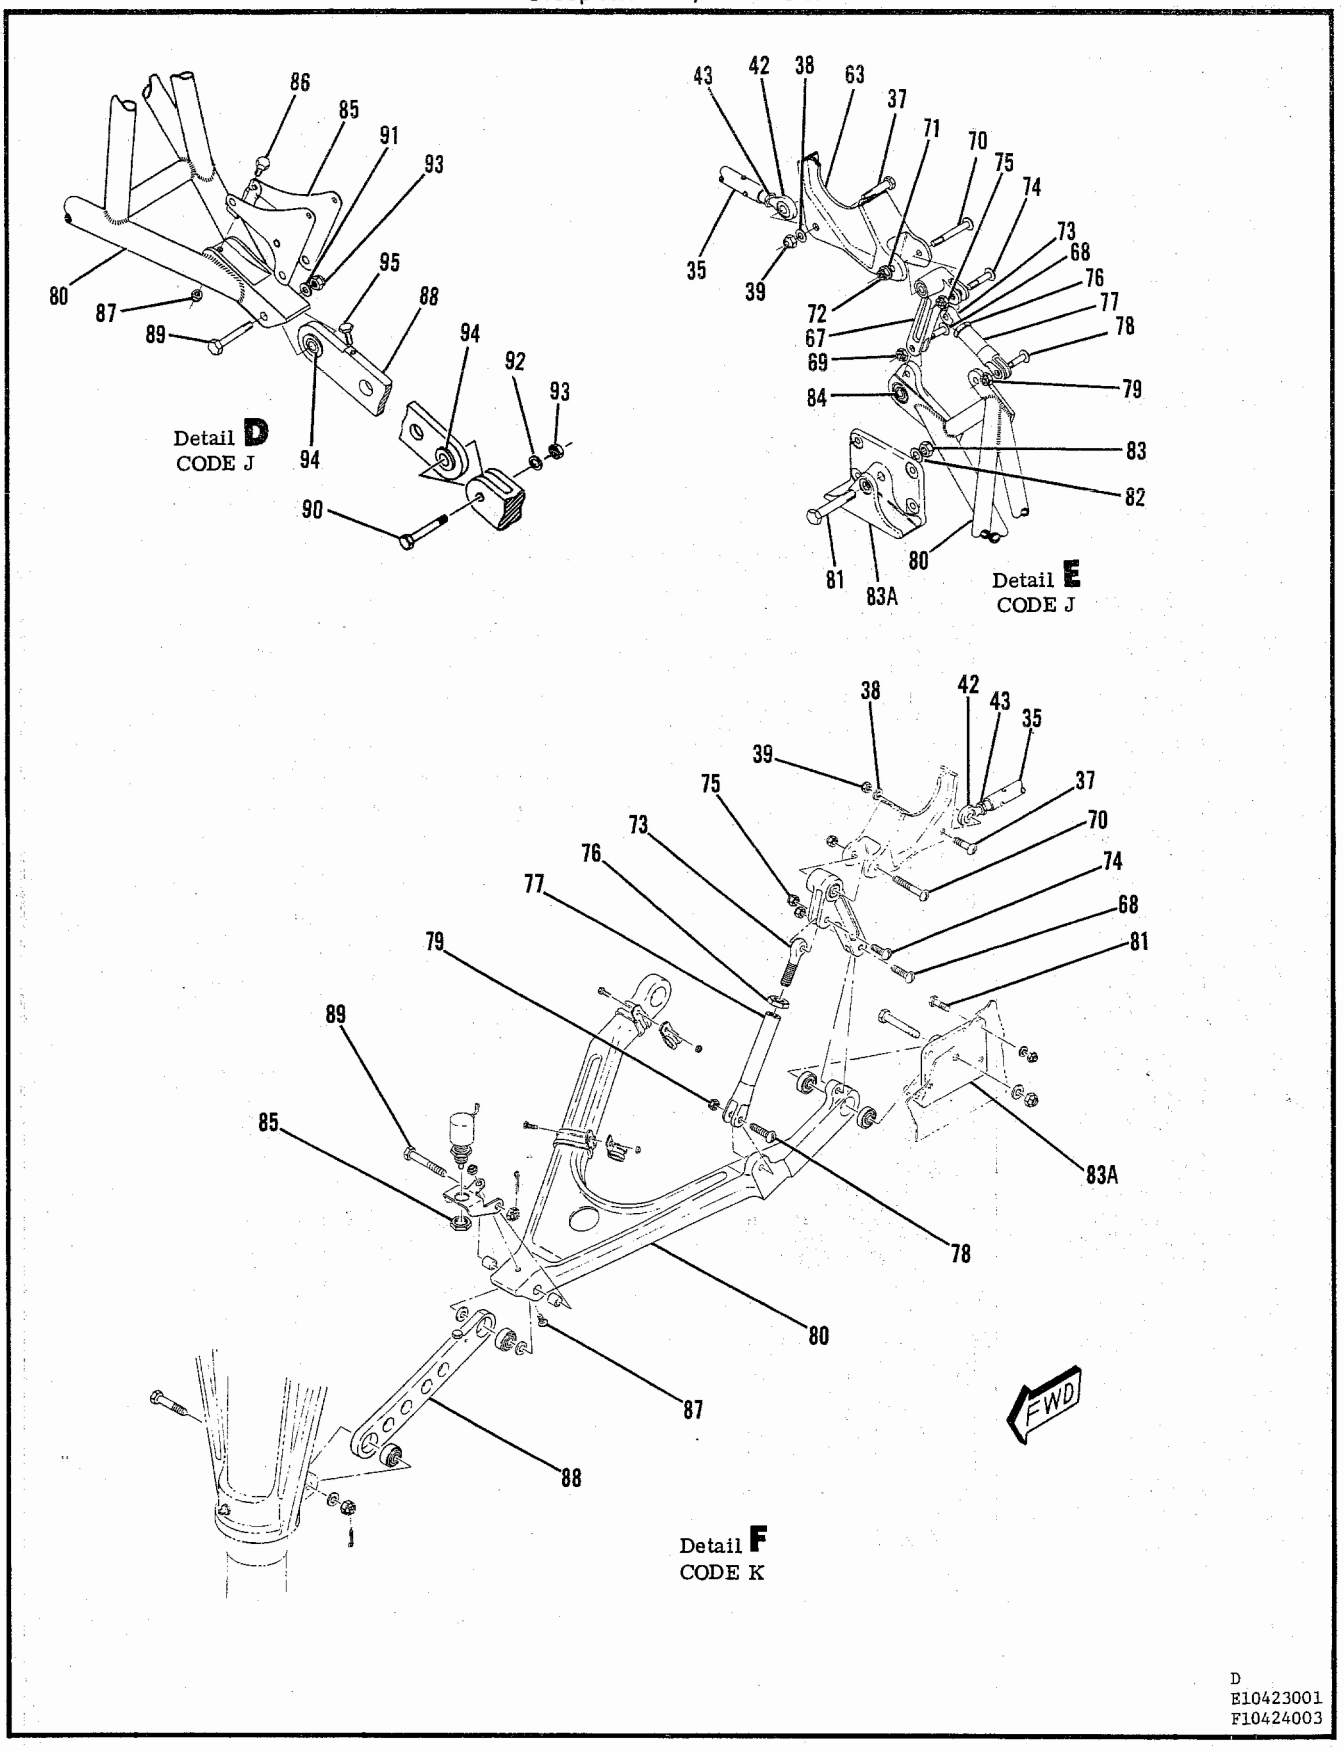

Figure 77. Nose Gear Retraction Linkage Installation (Sheet 2)

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
77 -		NOSE GEAR RETRACTION LINKAGE INSTALLATION	NP	
-1	5045213-10	. TUBE ASSY-RETRACTION FSO 5045213-12	1	C
	5045213-12	. TUBE ASSY-RETRACTION	1	D
		ATTACHING PARTS		
-2	NAS464P5A11	. BOLT	1	
-3	MS21042L5	. NUT	1	
-4	NAS464P4A13	. BOLT	1	
-5	AN960-416L	. WASHER	3	
-6	MS21083C4	. NUT	1	
		---*---		
-7	MS24463-5	. . BEARING	1	
-8	5045209-1	. IDLER ASSEMBLY-RETRACTION	1	
		ATTACHING PARTS		
-9	AN4-33A	. BOLT	1	
-10	5045210-1	. SPACER	1	
-11	AN960-416L	. WASHER	1	
		---*---		
-12	S1004-14A	. . BEARING	2	
-13	MS24463-4	. . BEARING	1	
-14	5045213-9	. TUBE ASSY-INTERMEDIATE RETRACTION	1	
		ATTACHING PARTS		
-15	NAS464P5A13	. BOLT	2	
-16	AN960-516L	. WASHER	2	
-17	MS21042L5	. NUT	2	
		---*---		
-18	MS24463-5	. . BEARING	1	
-19	ST5A	. . BEARING-ROD END SHA	1	
-20	AN316-7R	. . NUT-CHECK	1	
	5045202-1	. TORQUE TUBE ASSEMBLY-RETRACTION	1	
		ATTACHING PARTS		
-21	0813300-33	. WASHER	AR	
-22	0842006-1	. WASHER	AR	
-23	0842006-2	. WASHER	AR	
-24	0813300-74	. COLLAR-STOP	1	
-25	MS20392-2C37	. PIN	1	
-26	MS24665-130	. PIN-COTTER	1	
		---*---		
-27	0842130-4	. . TORQUE TUBE	1	
-28	5045203-1	. . BELLCRANK	1	
		ATTACHING PARTS		
-29	MS20392-2C51	. . PIN	1	
-30	AN960-10L	. . WASHER	1	
	MS24665-132	. . PIN-COTTER	1	
		---*---		
-31	0842104-3	. BELLCRANK-ADJUSTING	1	
		ATTACHING PARTS		
-32	MS20392-2C49	. PIN	1	
	MS24665-130	. PIN-COTTER	1	
		---*---		
-33	5045211-2	. FORK-ADJUSTING	1	
		ATTACHING PARTS		
-34	AN316-8R	. NUT	1	
		---*---		
-35	5045201-3	. ROD ASSY-RETRACTION	1	
		ATTACHING PARTS		
-36	NAS464P5A9	. BOLT	1	
-37	AN25-19A	. BOLT	1	
-38	AN960-516L	. WASHER	2	
-39	MS21042L5	. NUT	2	
		---*---		
-40	5045004-3	. . END FITTING	1	
-41	MS24463-5	. . . BEARING	1	
-42	HRBH5ES	. . ROD END KB	1	
-43	AN316-7R	. . NUT	1	
-44	5045204-4	. TUBE ASSY-UPLOCK WEU 5045204-6	1	G
	5045204-6	. TUBE ASSY-UPLOCK	1	H
		ATTACHING PARTS		
-45	AN960-516L	. WASHER	2	
-46	AN320-5	. NUT	2	
	MS24665-153	. PIN-COTTER	2	
		---*---		
-47	0813300-129	. . TORQUE TUBE-UPLOCK	1	G
	0813300-131	. . TORQUE TUBE-UPLOCK	1	H
-48	5142001-1	. . HOOK-UPLOCK	1	
		ATTACHING PARTS		
-49	AN4-6A	. . BOLT	2	
-50	AN960-416L	. . WASHER	2	
-51	MS21044N4	. . NUT	2	
		---*---		
-52	0813301-1	. . ROD END ASSEMBLY-ADJUSTING	1	G
	0813301-3	. . ROD END ASSEMBLY-ADJUSTING	1	H
		ATTACHING PARTS		
-53	AN316-8R	. . NUT	1	
		---*---		
-54	MS24462-4	. . . BEARING	1	
-55	5045212-1	. SPRING-UPLOCK ASSIST	1	
		ATTACHING PARTS		
-56	AN24-23A	. BOLT	1	
-57	NAS43HT4-8	. SPACER	2	
-58	AN960-416	. WASHER	1	
-59	MS17825-4	. NUT	1	
-60	AN43B5A	. EYE BOLT	1	
-61	AN960-416L	. WASHER	1	
-62	MS21045L4	. NUT	1	
		---*---		

CONTINUED

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
77 -63	0842140-3	. LINK ASSY-RETRACT FSO 0842140-5	1	A
	0842140-5	. LINK ASSY-RETRACT	1	B
		ATTACHING PARTS		
-64	AN4-12A	. BOLT	1	
-65	AN960-416L	. WASHER	1	
-66	MS21045L4	. NUT	1	
		---*---		
-67	0842108-2	. ARM ASSEMBLY-RETRACT	1	E
	0842108-3	. ARM ASSEMBLY-RETRACT	1	F
		ATTACHING PARTS		
-68	AN24-14A	. BOLT-CLEVIS	1	
-69	MS21042L4	. NUT	1	
-70	AN24-29A	. BOLT-CLEVIS	1	
-71	AN960-416L	. WASHER	1	
-72	MS21044N4	. NUT	1	
		---*---		
-73	0842000-32	. EYE BOLT-ADJUSTING	1	
		ATTACHING PARTS		
-74	AN24-14A	. BOLT-CLEVIS	1	
-75	MS21044N4	. NUT	1	
-76	AN316-6R	. NUT-CHECK	1	
		---*---		
-77	0842000-33	. FORK-ADJUSTING	1	J
	0842122-6	. FORK-ADJUSTING	1	K
		ATTACHING PARTS		
-78	AN24-13A	. BOLT-CLEVIS	1	J
	AN24-16A	. BOLT-CLEVIS	1	K
-79	MS21044N4	. NUT	1	
		---*---		
-80	5042002-1	. TRUSS ASSEMBLY-DRAG BRACE	1	J
	0842122-1	. TRUSS ASSEMBLY-DRAG BRACE	1	K
		ATTACHING PARTS		
-81	AN5-16A	. BOLT	2	
-82	AN960-516L	. WASHER	2	
-83	MS21044N5	. NUT	2	
		---*---		
-83A	SEE FIG 73	. RETAINER-DRAG BRACE TRUSS	REF	
-84	MS20201KP5A	. . BEARING	4	
-85	0842000-74	. BRACKET ASSEMBLY-MICRO SWITCH	1	J
	0842122-8	. BRACKET ASSEMBLY-MICRO SWITCH	1	K
		ATTACHING PARTS		
-86	AN3-4A	. BOLT	1	J
-87	MS21044N3	. NUT	1	
	MS24693S73	. SCREW	1	K
		---*---		
-88	5042020-1	. LINK ASSEMBLY-DRAG	1	E
	5042020-3	. LINK ASSEMBLY-DRAG	1	L
	0842122-4	. LINK ASSEMBLY-DRAG	1	K
	5042020-5	. LINK ASSEMBLY-DRAG ALTERNATE FOR 5042020-3	1	L
		ATTACHING PARTS		
-89	AN5-14A	. BOLT	1	L
	AN5-17A	. BOLT	1	K
-90	AN5-12A	. BOLT	1	
-91	AN960-516	. WASHER	AR	
-92	AN960-516L	. WASHER	AR	
-93	MS21044N5	. NUT	2	
		---*---		
-94	MS24461-5	. . BEARING USE WITH 5042020-1 & 5042020-3	2	
	5NBC713YJ	. . BEARING USE WITH 5042020-5	TCR 2	
-95	NAS428H3-4	. . BOLT ADJUSTING	1	
-96	5342004-5	. TUBE ASSY-NOSE GEAR DOOR LH	1	
	5342004-6	. TUBE ASSY-NOSE GEAR DOOR RH	1	
		ATTACHING PARTS		
-97	AN4-12	. BOLT UPR	1	
	NAS464P3-11	. BOLT LWR	1	
-98	AN960-416	. WASHER UPR	1	
	AN960-10L	. WASHER LWR	1	
	NAS43HT4-8	. SPACER UPR	2	
-99	MS17825-4	. NUT UPR	1	
	MS17826-3	. NUT LWR	1	
	MS24665-132	. PIN-COTTER UPR	1	
	MS24665-130	. PIN-COTTER LWR	1	
		---*---		

A---340-0001 THRU 340-0008
B---340-0009 & ON
C---340-0001 THRU 340-0034
D---340-0035 & ON
E---340-0001 THRU 340-0300
F---340-0301 & ON
G---340-0001 THRU 340-0530
H---340-0531 & ON
J---340-0001 TO 340A0001
K---340A0001 & ON
L---340-301 TO 340A0001

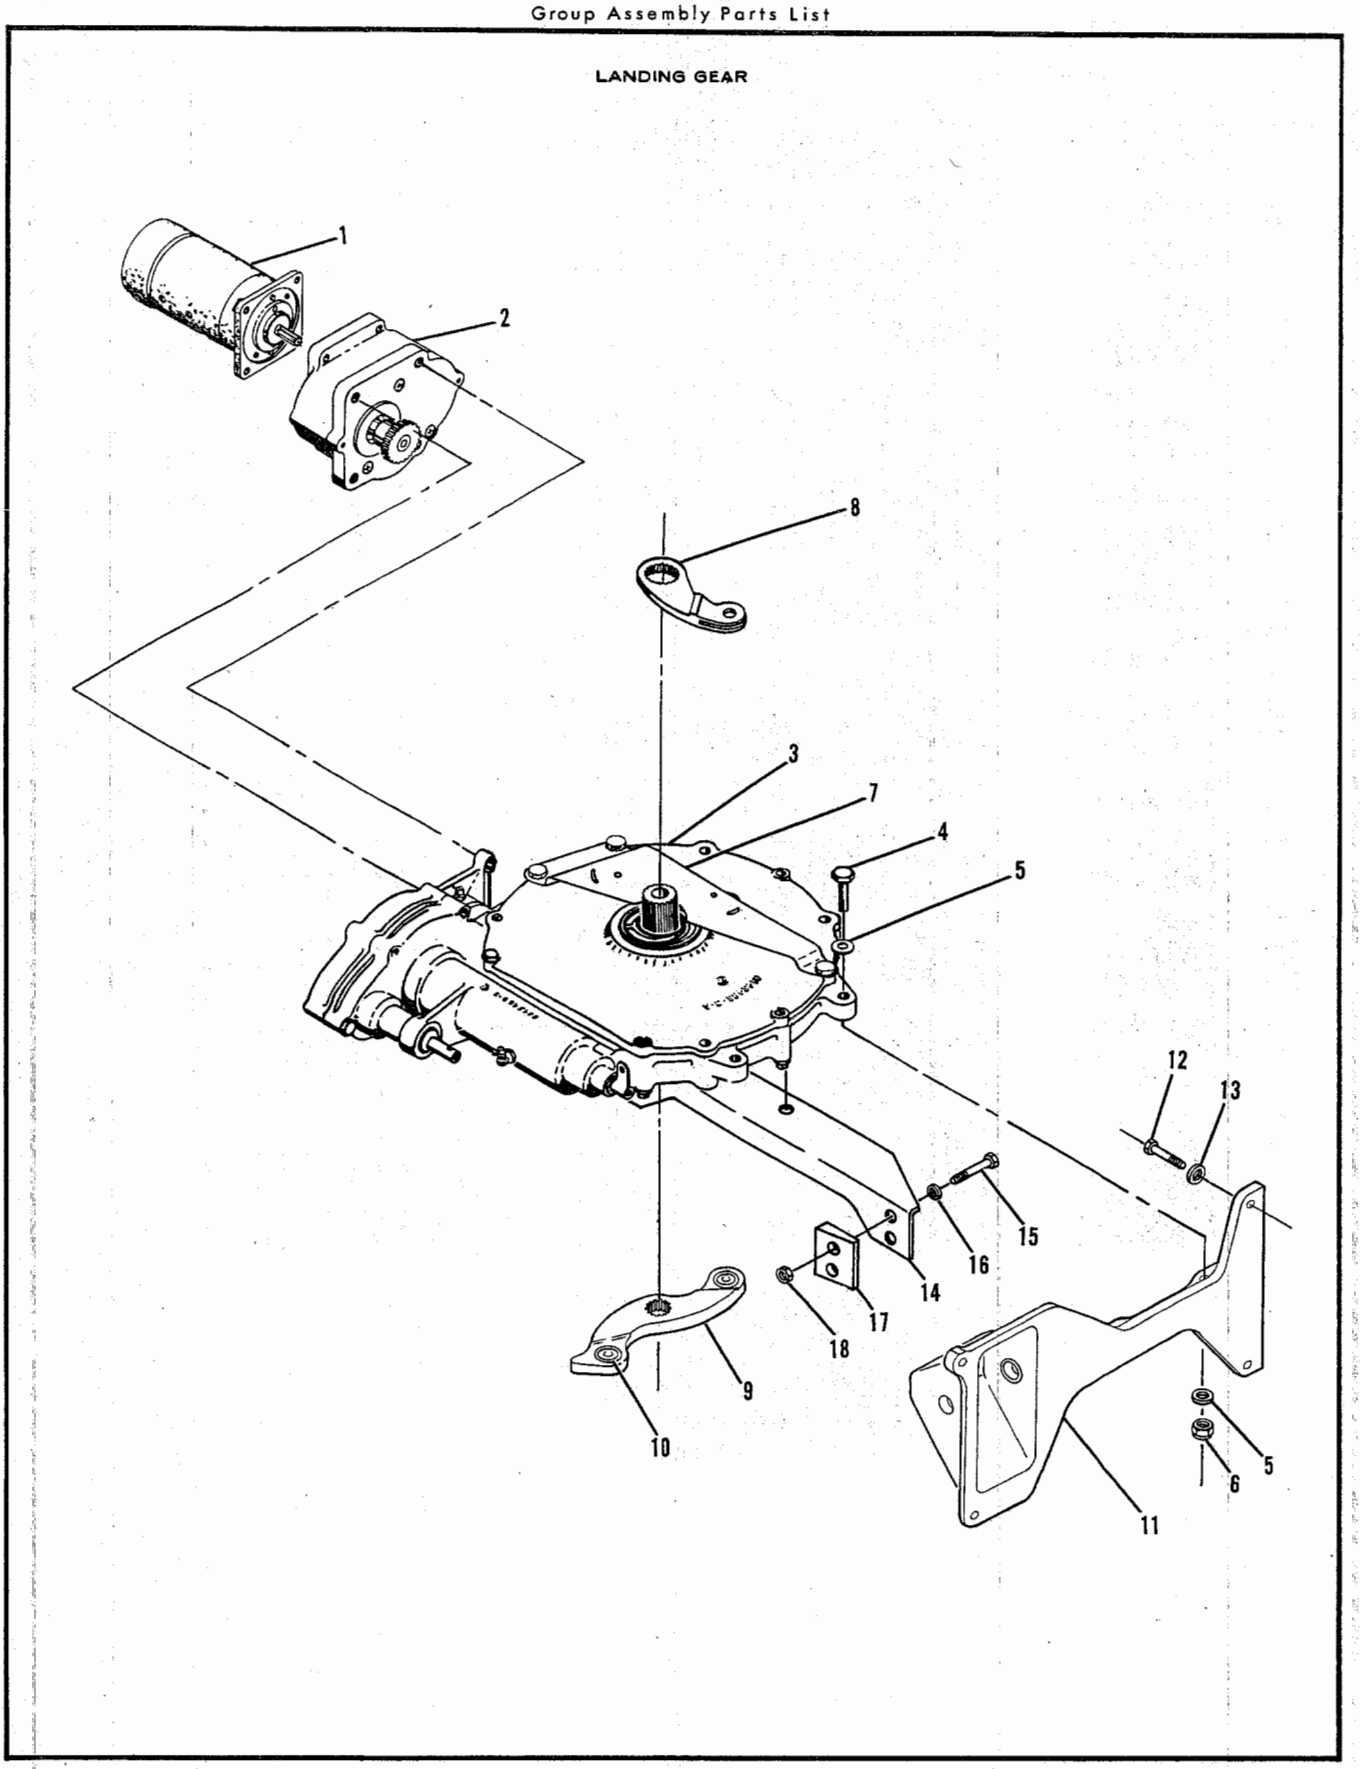

Figure 78. Landing Gear Actuator Installation

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
78 -			LANDING GEAR ACTUATOR INSTALLATION	NP	
-1	9910002-3		. MOTOR NEW	1	
-2	0894000-2	#	. REDUCTION UNIT NEW	1	
	0894000-8	#	. REDUCTION UNIT REMFG	1	
-3	0894000-11	#	. GEAR BOX ASSY-ACTUATOR NEW	1	
	0894000-10	#	. GEAR BOX ASSY-ACTUATOR REMFG	1	
			ATTACHING PARTS		
-4	NAS464P5A17		. BOLT	2	
-5	AN960-516L		. WASHER	4	
-6	MS21042L5		. NUT	2	
			---*---		
-7	5341004-1		. BRACKET ASSY-LIMIT SWITCH	1	
-8	5045007-1		. BELLCRANK-NOSE GEAR RETRACTION	1	
-9	5045008-3		. BELLCRANK ASSY-MAIN GEAR RETRACTION	1	A
	5045008-7		. BELLCRANK ASSY-MAIN GEAR RETRACTION	1	B
-10	MS24463-5		. . BEARING	2	
-11	5011013-3		. BRACKET-ACTUATOR MOUNTING	1	
			ATTACHING PARTS		
-12	AN3-6A		. BOLT	4	
-13	AN960-10L		. WASHER	4	
			---*---		
-14	5341000-2		. ANGLE-ACTUATOR SUPPORT	1	
			ATTACHING PARTS		
-15	AN3-6A		. BOLT FWD	2	
-16	AN960-10L		. WASHER FWD & AFT	6	
-17	5045000-3		. SHIM FWD	1	
-18	MS21044N3		. NUT FWD & AFT	4	
	AN3-5A		. BOLT AFT	2	
			---*---		
			# SEE CESSNA CRAFTED LANDING GEAR AND FLAP SYSTEM COMPONENTS OVERHAUL/PARTS MANUAL		
			A---340-0001 THRU 340-0321 340-0332 THRU 340-0552		
			B---340-0322 THRU 340-0331 & 340-0553 & ON		

LANDING GEAR

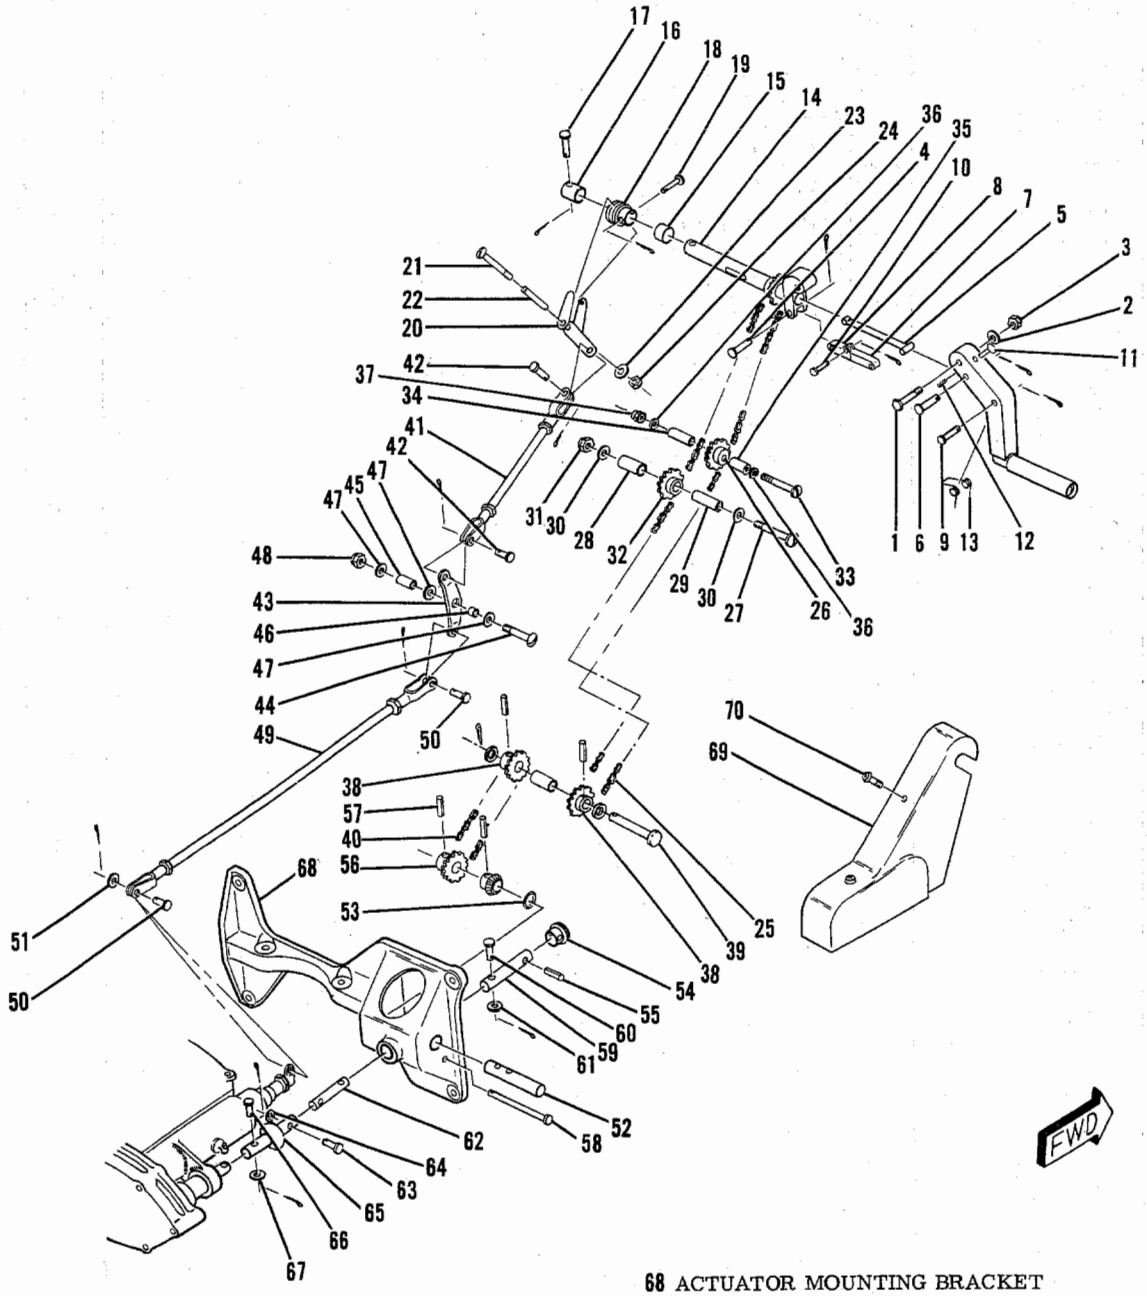

68 ACTUATOR MOUNTING BRACKET

Figure 79. Landing Gear Manual Extension Mechanism Installaltion

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
79 -		LANDING GEAR MANUAL EXTENSION MECHANISM INSTALLATION	NP	
	0843400-138	. CRANK ASSY-MANUAL EXTENSION FSO 0843400-142	1	A
	0843400-142	. CRANK ASSY-MANUAL EXTENSION MECHANISM	1	B
		ATTACHING PARTS		
-1	AN3-10A	. BOLT	1	
-2	AN960-10L	. WASHER	1	
-3	MS21044N3	. NUT	1	
-4	MS20392-1C21	. PIN-CLEVIS	1	
	MS24665-130	. PIN-COTTER	1	
		---*---		
-5	0843413-1	. . SPOOL LINK-CRANK ARM	1	
		ATTACHING PARTS		
-6	MS20392-2C25	. . PIN-CLEVIS	1	
	MS24665-130	. . PIN-COTTER	1	
		---*---		
-7	0843400-61	. . LINK-CRANK ARM LH	1	
-8	0843400-62	. . LINK-CRANK ARM RH	1	
		ATTACHING PARTS		
-9	MS20392-2C25	. . PIN-CLEVIS	1	
-10	MS20392-1C19	. . PIN-CLEVIS	1	
	MS24665-130	. . PIN-COTTER	2	
		---*---		
-11	0843400-139	. . PIN-LOCK RELEASE	1	A
	0843400-144	. . BOLT-LOCK RELEASE	1	B
		ATTACHING PARTS		
	MS24665-130	. . PIN-COTTER	1	
		---*---		
-12	0843411	. . SPRING-LOCK RELEASE PIN	1	
	0843400-140	. . WASHER	1	A
	0843400-143	. . NUT-CAP	1	B
-13	0843412	. . SPRING-CRANK LINK	1	
-14	0843400-72	. SHAFT ASSY-CRANK	1	
-15	NAS43HT8-26	. SPACER	1	
-16	5342103-3	. SPACER	1	
-17	MS20392-1C21	. PIN-CLEVIS	1	
	MS24665-130	. PIN-COTTER	1	
-18	5342103-2	. SPOOL ASSY-CRANK SHAFT	1	
		ATTACHING PARTS		
-19	MS20392-2C23	. PIN-CLEVIS	1	
	MS24665-130	. PIN-COTTER	1	
		---*---		
-20	0843400-81	. BELLCRANK ASSY-UPPER	1	
		ATTACHING PARTS		
-21	MS27039-1-29	. SCREW	1	
-22	NAS75-3-110	. BUSHING	1	
-23	AN960-10L	. WASHER	1	
-24	MS21044N3	. NUT	1	
		---*---		
-25	5342103-4	. CHAIN	1	
-26	5015074-1	. SPROCKET-UPPER	2	
		ATTACHING PARTS		
-27	AN3-16A	. BOLT	1	
-28	NAS43HT3-79	. SPACER	1	
-29	NAS43HT5-54	. SPACER	1	
-30	AN960-516L	. WASHER	1	
	AN960-10	. WASHER	2	
-31	MS21044N3	. NUT	1	
		---*---		
-32	5015074-1	. SPROCKET-LOWER	1	
		ATTACHING PARTS		
-33	AN3-16A	. BOLT	1	
-34	NAS43HT3-79	. SPACER	1	
-35	NAS43HT5-54	. SPACER	1	
-36	AN960-516L	. WASHER	1	
	AN960-10	. WASHER	2	
-37	MS21044N3	. NUT	1	
		---*---		
-38	5342103-8	. SPROCKET	2	F
	5342103-12	. SPROCKET	2	G
		ATTACHING PARTS		
-39	5342103-7	. PIN	1	F
	5342103-11	. PIN	1	G
		---*---		
-40	5342103-5	. CHAIN-SECONDARY	1	
-41	NAS363-1H440	. ROD ASSY-CONTROL FWD	1	
		ATTACHING PARTS		
-42	MS20392-2C1I	. PIN-CLEVIS	2	
	MS24665-130	. PIN-COTTER	2	
		---*---		
-43	5342103-6	. BELLCRANK-LOWER	1	
		ATTACHING PARTS		
-44	MS27039-4-33	. SCREW	1	
-45	NAS43DD3-61	. SPACER	1	
-46	NAS43HT4-9	. SPACER	1	
-47	AN960-416L	. WASHER	3	
-48	MS21044N4	. NUT	1	
		---*---		
-49	NAS367-4H1450	. ROD ASSY-CONTROL AFT	1	
		ATTACHING PARTS		
-50	MS20392-2C11	. PIN-CLEVIS	2	
	MS24665-130	. PIN-COTTER	2	
-51	AN960-10L	. WASHER	1	
		---*---		
-52	0843400-50	. SHAFT-GEAR	1	
-53	MS16624-50	. RING-RETAINER	1	
-54	0843400-49	. GEAR	2	
		ATTACHING PARTS		
-55	MS16562-129	. PIN-SPRING	1	
		---*---		
-56	0843400-52	. SPROCKET	1	

CONTINUED

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
79		ATTACHING PARTS		
-57	AN565E1032H3	. SCREW-SET	2	
		---*---		
-58	MS20392-2C89	. PIN-CLEVIS	1	
	MS24665-130	. PIN-COTTER	1	
-59	0843400-130	. SHAFT-GEAR	1	
		ATTACHING PARTS		
-60	MS20392-2C17	. PIN-CLEVIS	1	
-61	AN960-10L	. WASHER	1	
	MS24665-130	. PIN-COTTER	1	
		---*---		
-62	0843418-1	. SHAFT	1	
		ATTACHING PARTS		
-63	MS20392-2C17	. PIN-CLEVIS	1	
-64	AN960-10L	. WASHER	1	
	MS24665-130	. PIN-COTTER	1	
		---*---		
-65	0843417-1	. JOINT-UNIVERSAL	1	
		ATTACHING PARTS		
-66	MS20392-2C17	. PIN-CLEVIS	1	
-67	AN960-10L	. WASHER	1	
	MS24665-130	. PIN-COTTER	1	
		---*---		
-68	SEE FIG 78	. BRACKET-ACTUATOR	1	
-69	5017565-1 @	. GUARD-CHAIN WEU 5017565-3	1	C
	5017565-2 @@	. GUARD-CHAIN WEU 5017565-3	1	D
	5017565-3 @@	. GUARD-CHAIN	1	E
		ATTACHING PARTS		
-70	S1021Z4-5C	. SCREW	3	
		---*---		

@ WHEN ORDERING THIS PART THE ORDER MUST BE ACCOMPANIED BY THE COMPLETE FINISH AND TRIM PLATE NUMBER AND AIRCRAFT SERIAL NUMBER

A---340-0001 THRU 340-0304
B---340-0305 & ON
C---340-C001 THRU 340-0180
D---340-0181 THRU 340-0548
E---340-0549 & ON
F---340-C001 THRU 340A0054
G---340A0055 & ON

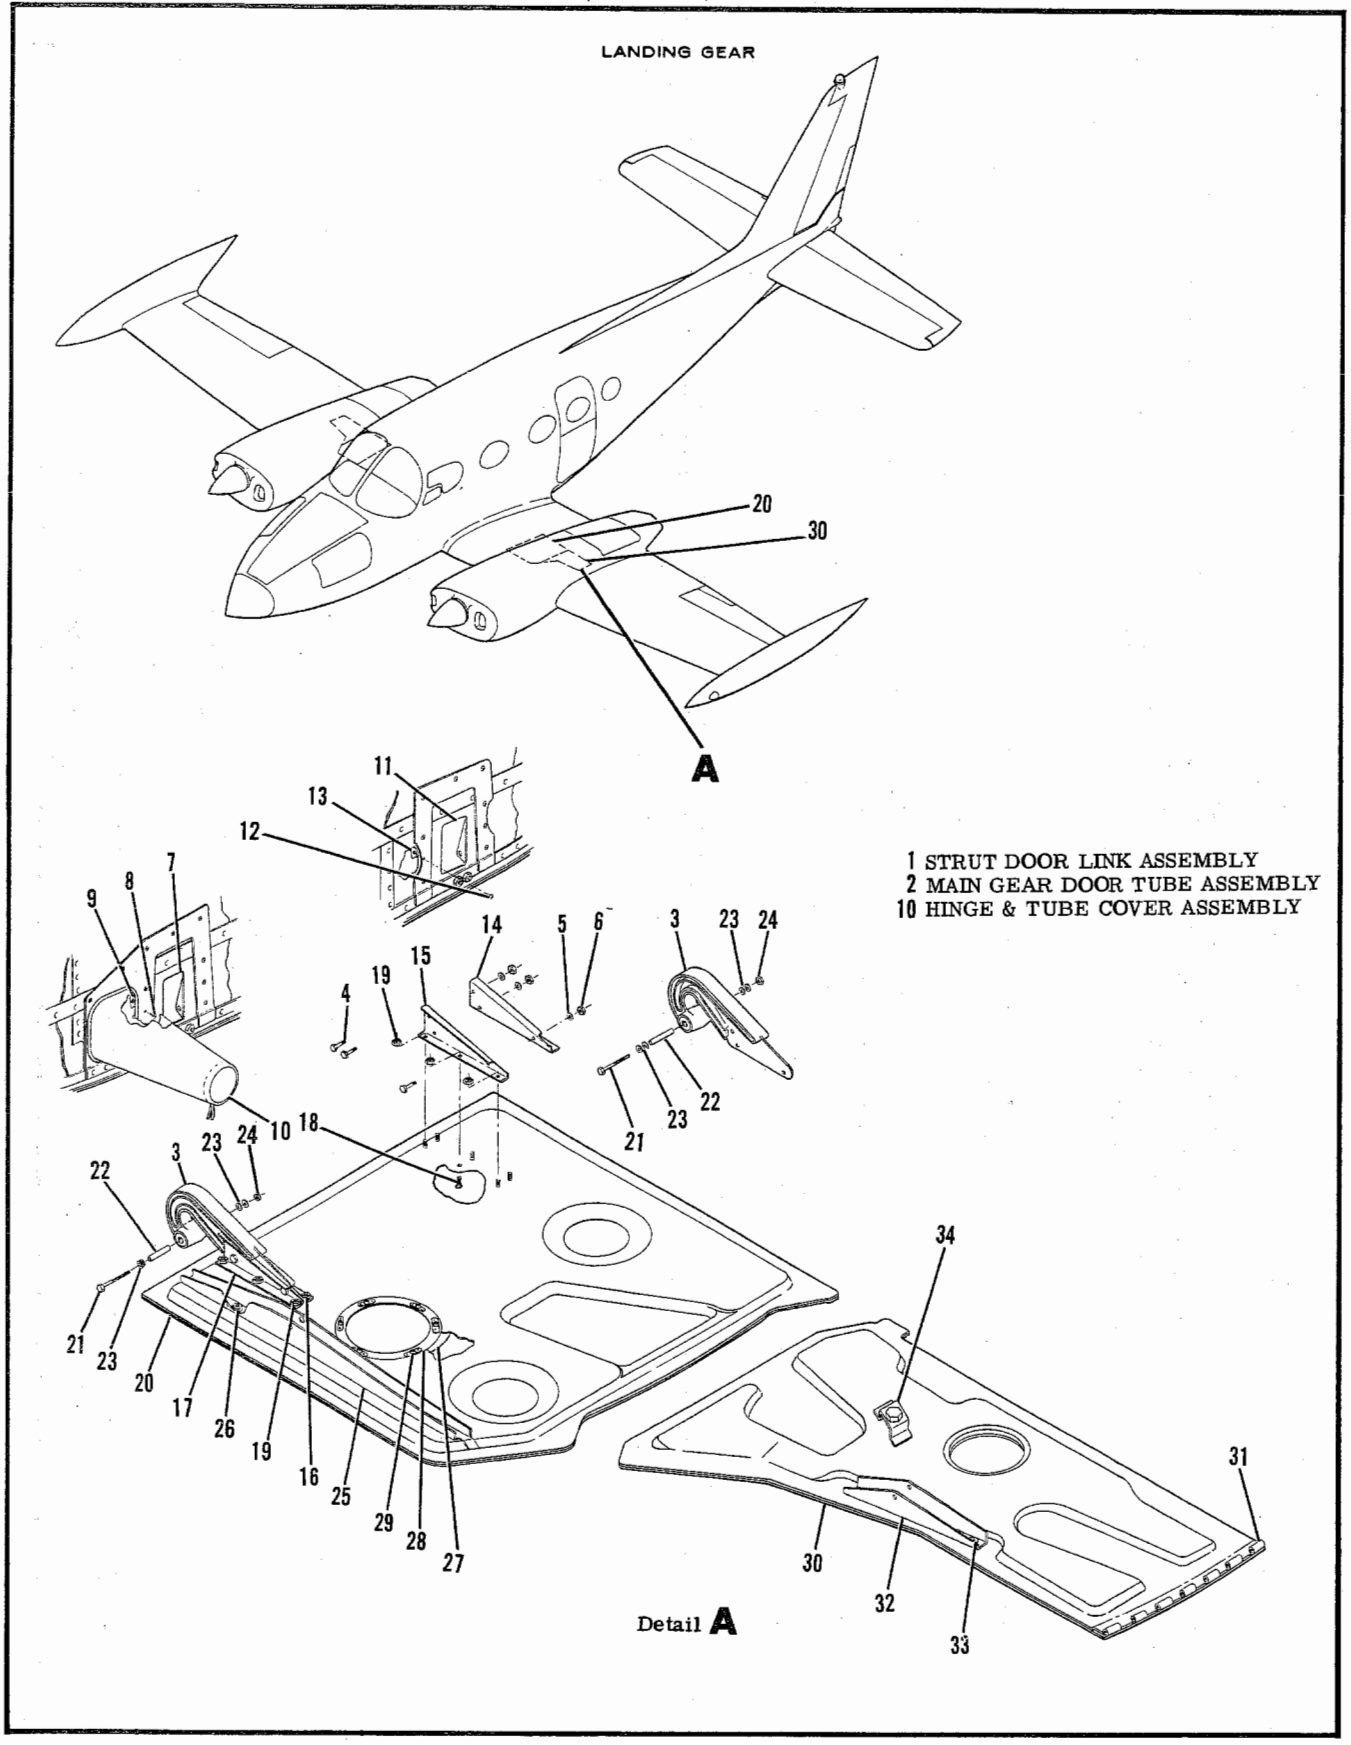

Figure 80. Main Landing Gear Doors Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
80 -		MAIN LANDING GEAR DOORS INSTALLATION	NP	
	S1058-2	. SEAL-DOOR BKI	AR	
		ATTACHING PARTS		
	496622K2215	. FASTENER UC	AR	
		---*---		
-1	SEE FIG 72	. LINK ASSY-STRUT DOOR	REF	
-2	SEE FIG 72	. TUBE ASSY-MAIN GEAR DOOR	REF	
-3	0826005-4	. ARM-HINGE	2	
		ATTACHING PARTS		
-4	AN3-5A	. BOLT	3	
-5	AN960-10	. WASHER	3	
-6	MS21044N3	. NUT	3	
		---*---		
-7	5021503-1	. COVER ASSY-FWD HINGE LH	1	
	5021503-2	. COVER ASSY-FWD HINGE RH	1	
		ATTACHING PARTS		
-8	S1021Z6-6	. SCREW	11	
-9	NAS446-2-1	. NUT	11	
		---*---		
-10	SEE FIG 14	. COVER ASSY-HINGE & TUBE LH & RH	1	
-11	0822001-3	. COVER	1	
		ATTACHING PARTS		
-12	S1021Z6-6	. SCREW	9	
-13	NAS446-2-3	. NUT	9	
		---*---		
-14	5027000-36	. BRACKET-LH HINGE	1	
	5027000-37	. BRACKET-RH HINGE	1	
-15	5027000-38	. BRACKET-LH HINGE	1	
	5027000-39	. BRACKET-RH HINGE	1	
-16	5027000-40	. BRACKET-LH HINGE	1	
	5027000-41	. BRACKET-RH HINGE	1	
-17	5027000-42	. BRACKET-LH HINGE	1	
	5027000-43	. BRACKET-RH HINGE	1	
		ATTACHING PARTS		
-18	MS24694S55	. SCREW	6	
-19	MS21044N3	. NUT	6	
		---*---		
-20	0826002-200	. DOOR ASSY-LH INBD	1	
	0826002-201	. DOOR ASSY-RH INBD	1	
		ATTACHING PARTS		
-21	AN3-21A	. BOLT	2	
-22	NAS43-3-86	. SPACER	2	
-23	AN960D10L	. WASHER	AR	
-24	MS21044N3	. NUT	2	
		---*---		
-25	5027000-49	. . CHANNEL LH DOOR ONLY	1	
	5027000-50	. . CHANNEL RH DOOR ONLY	1	
		ATTACHING PARTS		
	MS24694S55	. . SCREW	3	
-26	MS21044N3	. . NUT	3	
		---*---		
-27	0826000-27	. . DOUBLER-ACCESS	1	
-28	0826000-25	. . COVER-ACCESS	1	
		ATTACHING PARTS		
-29	MS24694S50	. . SCREW	6	
		---*---		
-30	0826002-202	. DOOR ASSY-LH OUTBD FSO 0826002-208	1	A
	C826002-208	. DOOR ASSY-LH OUTBD	1	B
	0826002-203	. DOOR ASSY-RH OUTBD FSO 0826002-209	1	A
	0826002-209	. DOOR ASSY-RH OUTBD	1	B
		ATTACHING PARTS		
	MS20253P2-1000	. PIN HINGE	1	
	MS24665-5	. PIN-COTTER	2	
		---*---		
-31	0826000-30	. . HINGE HALF-DOOR	1	
-32	0826003-3	. . CHANNEL LH DOOR ONLY	1	
	0826003-4	. . CHANNEL RH DOOR ONLY	1	
		ATTACHING PARTS		
-33	MS27039-1-07	. . SCREW	7	
		---*---		
-34	1241015-7	. . BUMPER ASSY	1	

A---340-0001 THRU 340-0229
B---340-0230 & ON

LANDING GEAR

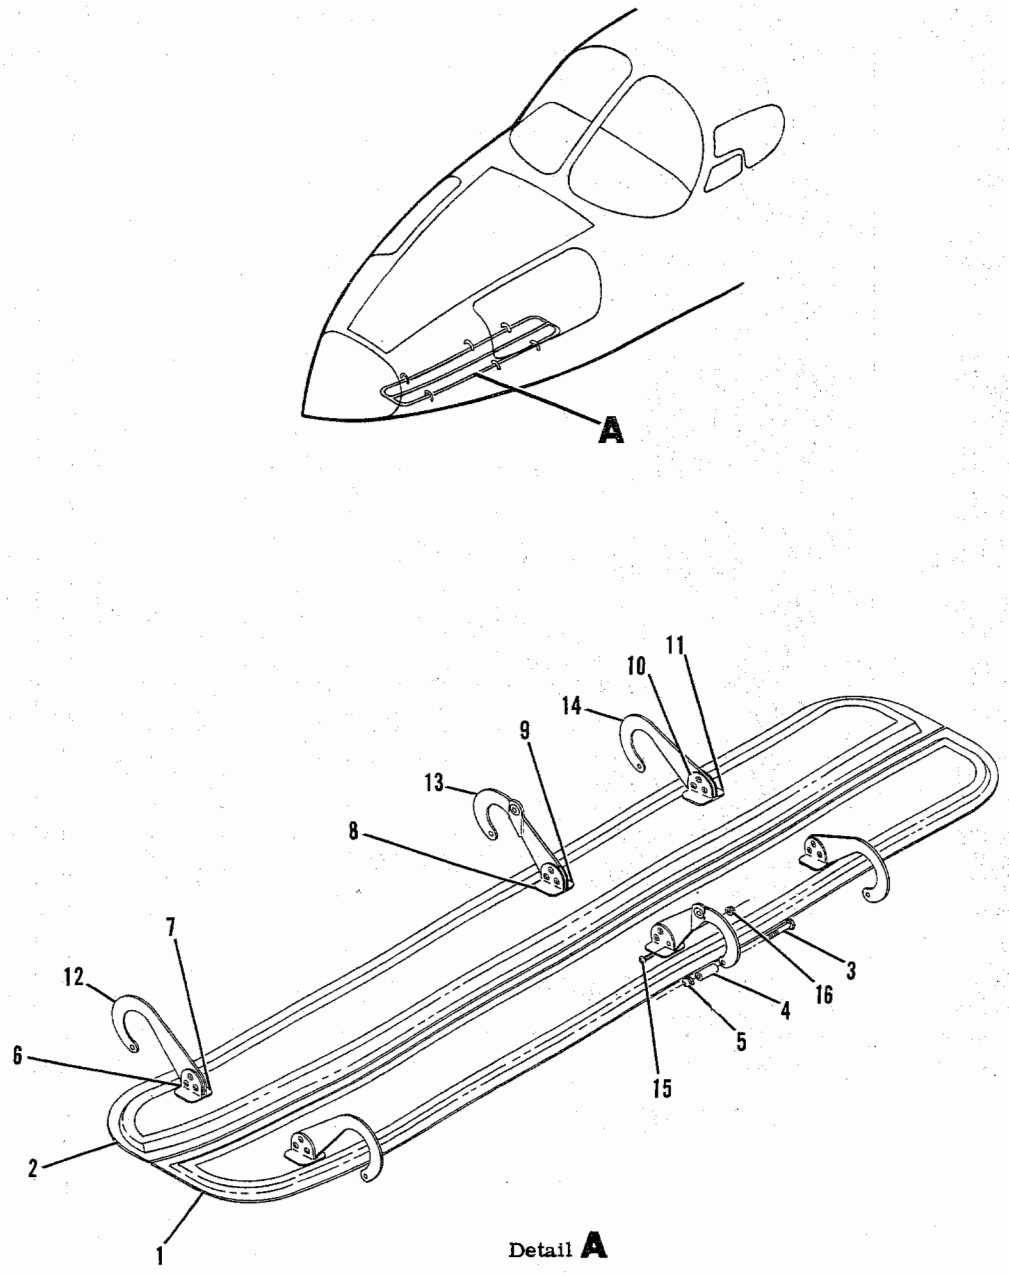

Figure 81. Nose Landing Gear Doors Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
81 -		NOSE LANDING GEAR DOORS INSTALLATION	NP	
-1	5313070-200	. DOOR ASSY-LH	1	
-2	5313070-201	. DOOR ASSY-RH	1	
		ATTACHING PARTS		
-3	AN3-5A	. BOLT	3	
-4	S133-3P13	. SPACER	3	
-5	MS21045L3	. NUT	3	
		---*---		
-6	5313070-21	. . BRACKET-FWD FWD LH & RH	1	
-7	5313070-22	. . BRACKET-FWD AFT LH & RH	1	
-8	5313070-19	. . BRACKET-CTR FWD LH & RH	1	
-9	5313070-20	. . BRACKET-CTR AFT LH & RH	1	
-10	5313070-17	. . BRACKET-AFT FWD LH & RH	1	
-11	5313070-18	. . BRACKET-AFT AFT LH & RH	1	
-12	5313070-6	. HINGE ASSY-FWD LH & RH	2	
-13	5313070-5	. HINGE ASSY-CTR LH & RH	2	
-14	5313070-4	. HINGE ASSY-AFT LH & RH	2	
		ATTACHING PARTS		
-15	MS27039-1-09	. SCREW	3	
-16	MS21045L3	. NUT	3	
		---*---		

FLIGHT CONTROL SYSTEMS

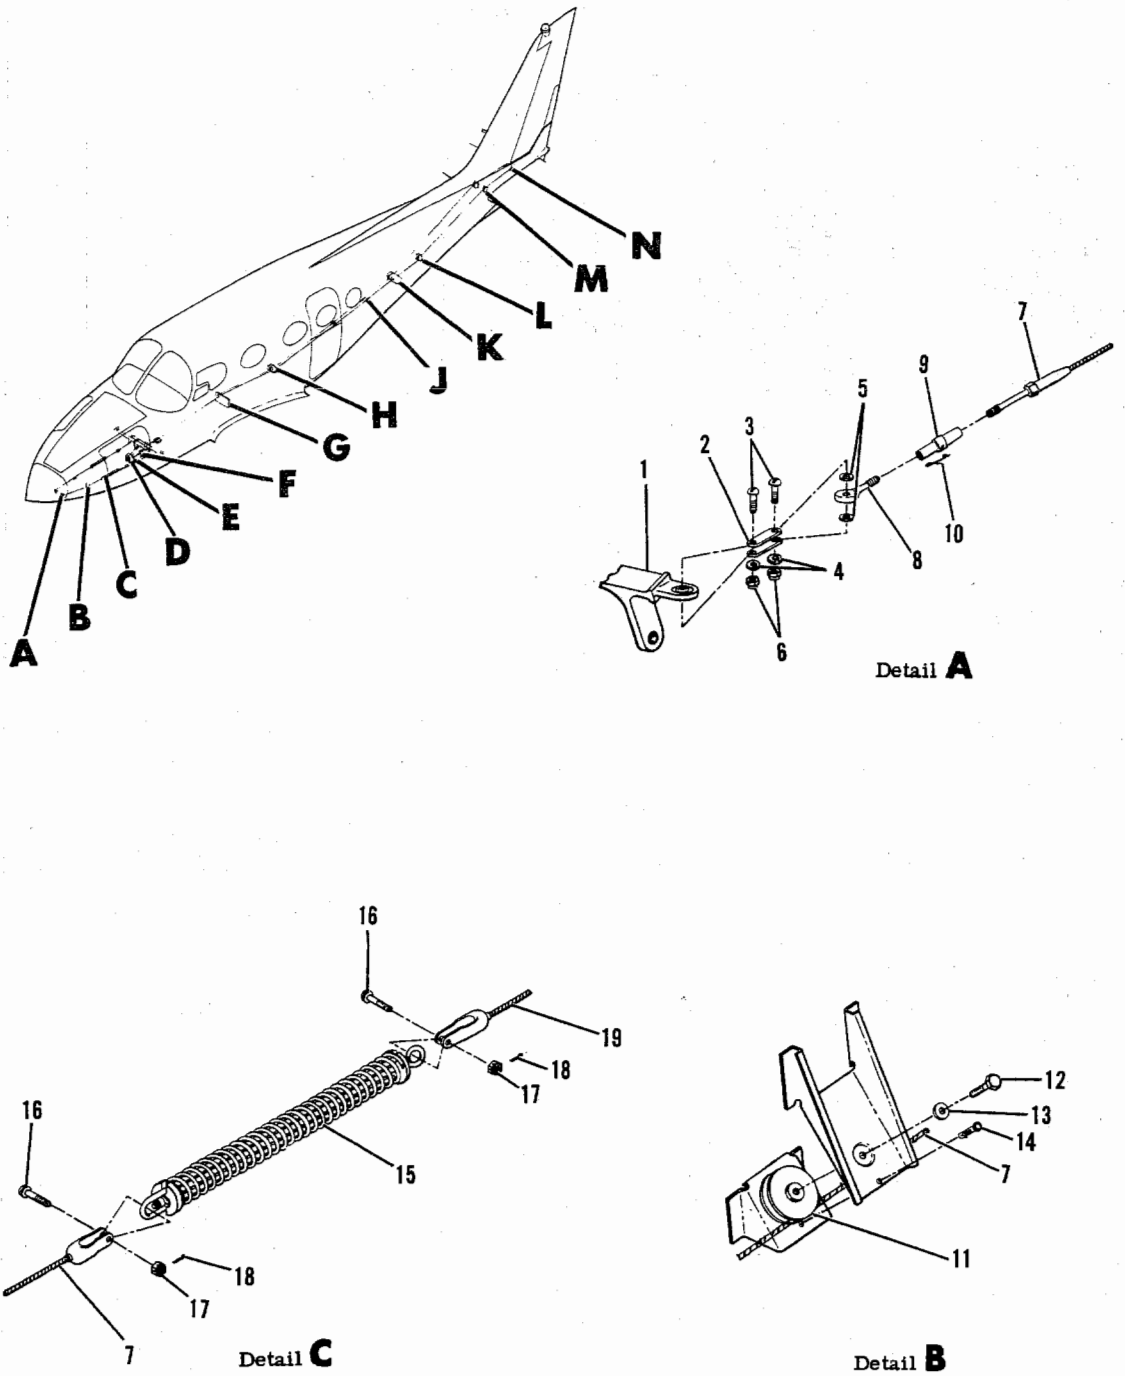

1 STEERING BELLCRANK ASSEMBLY
32 RUDDER AND BRAKE PEDAL INSTALLATION
116 RUDDER STEERING BELLCRANK

Figure 82. Rudder and Nose Wheel Steering Control System (Sheet 1 of 3)

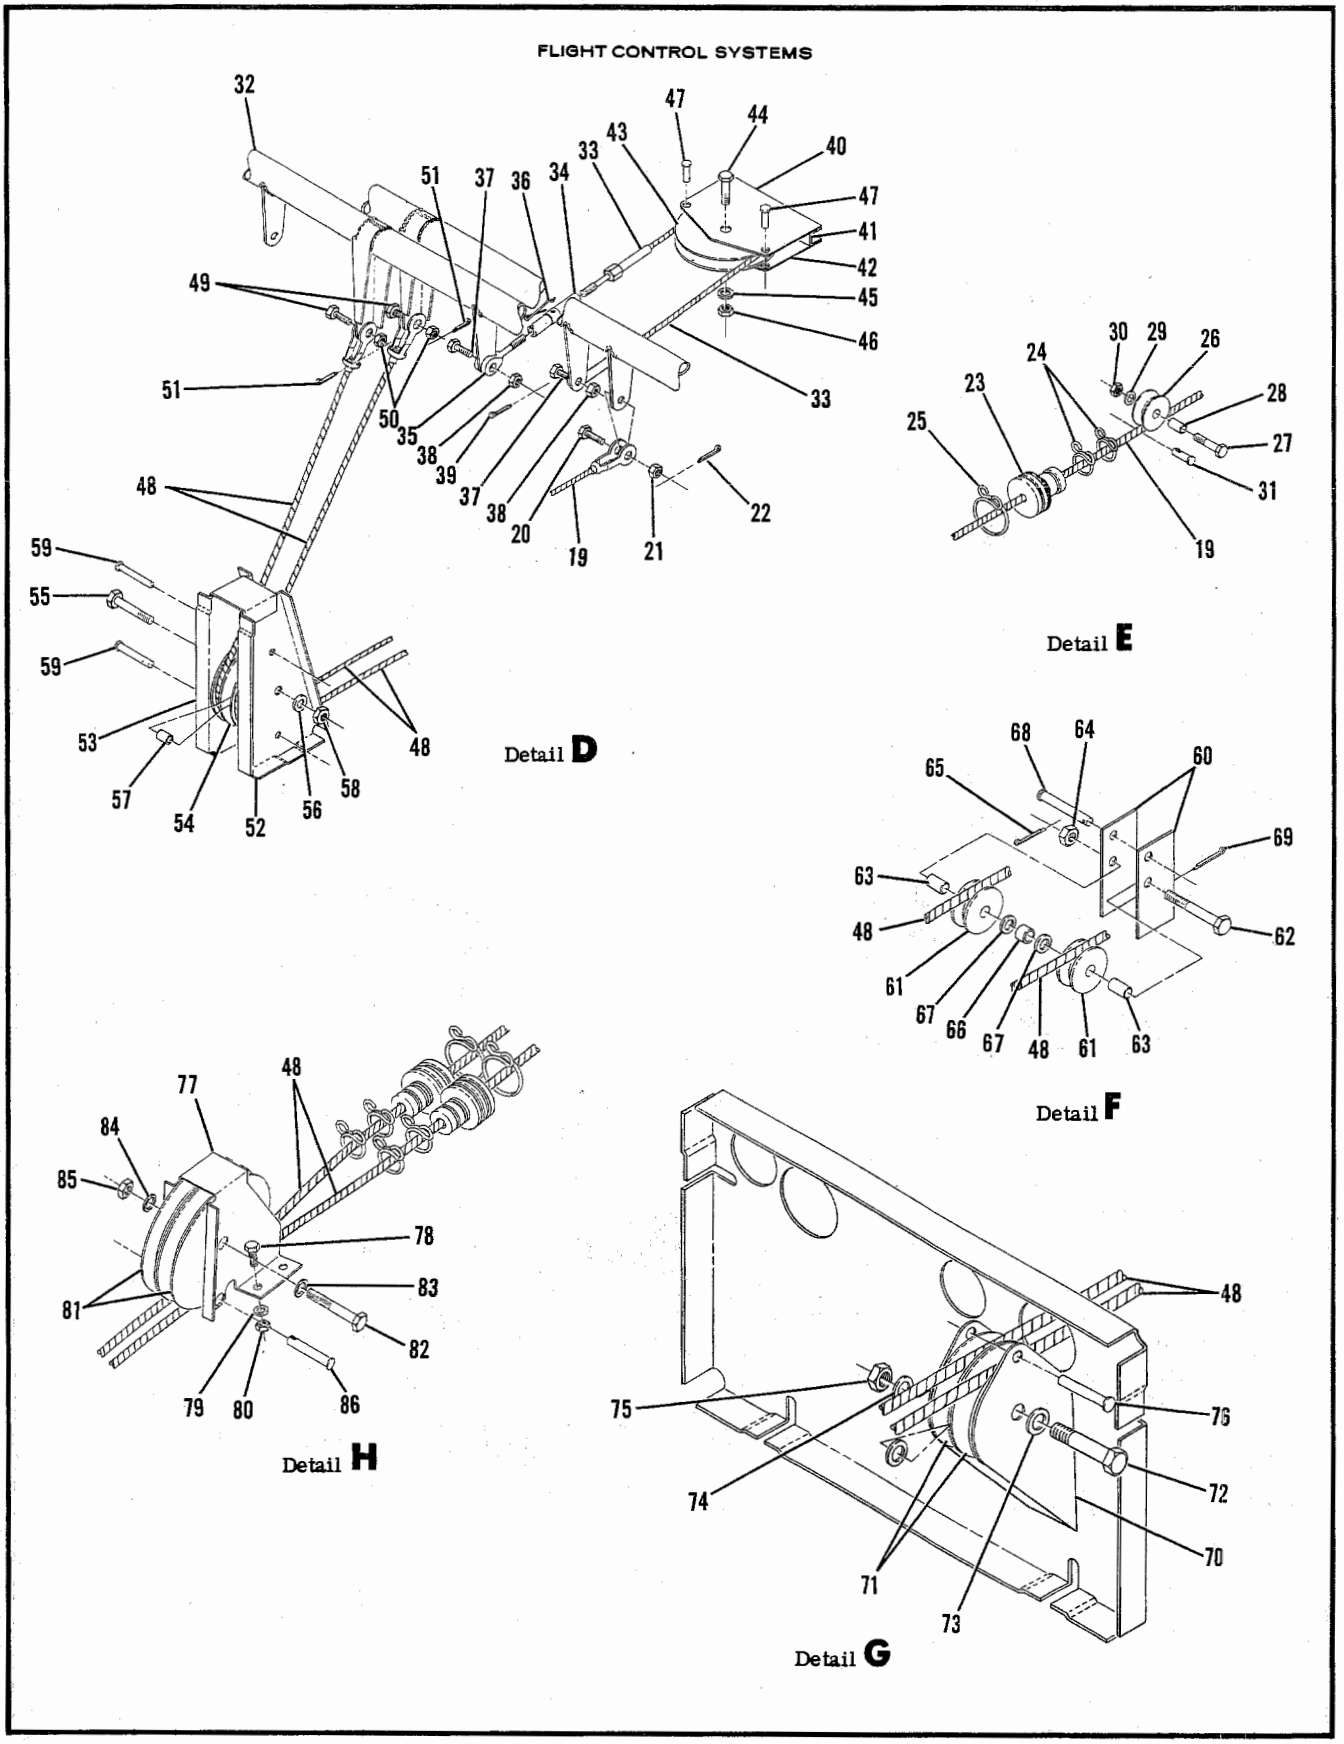

Figure 82. Rudder and Nose Wheel Steering Control System (Sheet 2)

FLIGHT CONTROL SYSTEMS

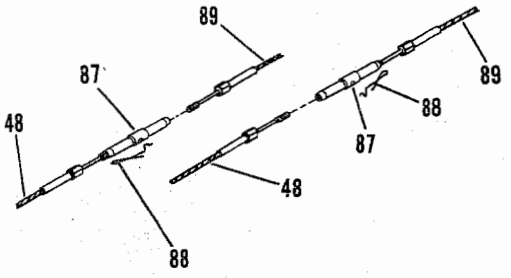

Detail **J**

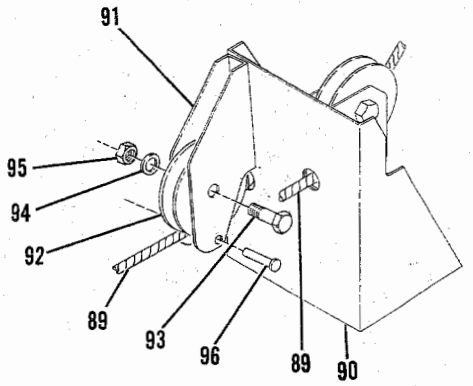

Detail **K**

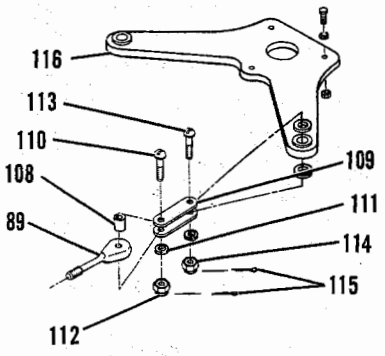

Detail **N**
CODE A

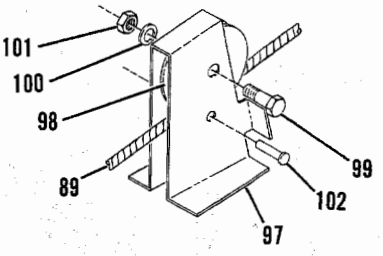

Detail **L**

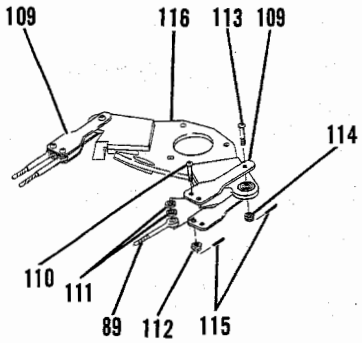

Detail **N**
CODE B

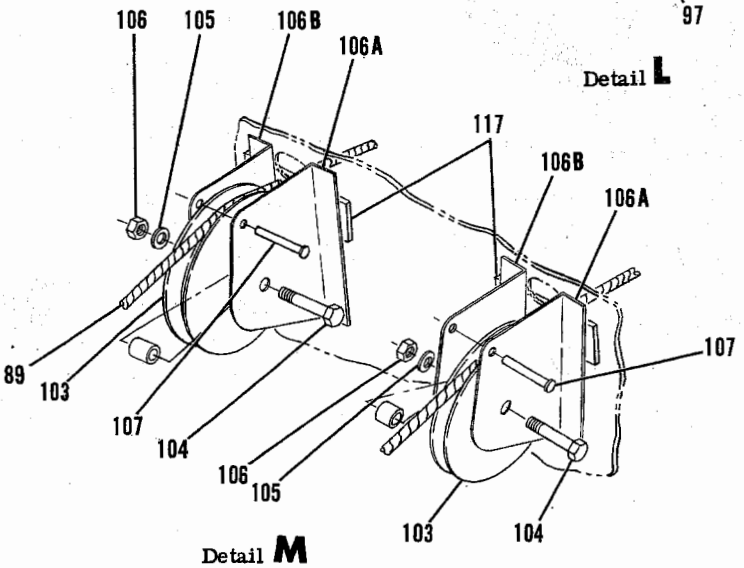

Detail **M**

J54613003
K14152004
L14152004
M14151029
N14611004
N14151019

Figure 82. Rudder and Nose Wheel Steering Control System (Sheet 3)

FIGURE AND INDEX NO.	PART NUMBER	1 2 3 4 5 6 7 DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
82 -		RUDDER AND NOSE WHEEL STEERING CONTROL SYSTEM	NP	
-1	SEE FIG 73	. BELLCRANK ASSY-STEERING	1	
-2	0510160	. LINK LH & RH	4	C
	5115213-3	. LINK LH & RH	4	D
		ATTACHING PARTS		
-3	MS27039-1-14	. SCREW	2	
-4	AN960-10L	. WASHER	2	
-5	AN960-10	. WASHER	2	
-6	MS21042L3	. NUT	2	
		---*---		
-7	5360703-2	. CABLE ASSY LH & RH STEERING	2	
		ATTACHING PARTS		
-8	NAS648-22RS	. EYE-TURNBUCKLE	1	
-9	MS2125185S	. BODY-TURNBUCKLE	1	
-10	MS21256-1	. CLIP-TURNBUCKLE LOCK	2	
		---*---		
-11	S378-3	. PULLEY STA 64.60 LH & RH	2	
		ATTACHING PARTS		
-12	AN4-7A	. BOLT	1	
-13	AN960-416L	. WASHER	1	
		---*---		
-14	NAS427K11	. PIN-CABLE GUARD	1	
-15	5015041-1	. SPRING ASSY LH & RH	2	
		ATTACHING PARTS		
-16	AN23-13	. BOLT	2	
-17	MS17826-3	. NUT	2	
-18	MS24665-132	. PIN-COTTER	2	
		---*---		
-19	5360703-7	. CABLE ASSY-LH STEERING	1	
	5360703-4	. CABLE ASSY-RH STEERING	1	
		ATTACHING PARTS		
-20	AN23-9	. BOLT	1	
-21	MS17826-3	. NUT	1	
-22	MS24665-132	. PIN-COTTER	1	
		---*---		
-23	S11K4R	. SEAL LH & RH STA 100.00	HRNL 2	
		ATTACHING PARTS		
-24	S11L61C	. RING	HRML 2	
-25	S11L62C	. RING	HRML 1	
		---*---		
-26	S394	. PULLEY LH & RH	2	
		ATTACHING PARTS		
-27	AN23-24	. BOLT	1	
-28	0411783	. BUSHING	1	
-29	AN960-10L	. WASHER	1	
-30	MS21044N3	. NUT	1	
		---*---		
-31	NAS427K9	. PIN-CABLE GUARD	1	
-32	SEE FIG 83	. RUDDER & BRAKE PEDAL INSTL	1	
-33	5300400-14	. CABLE ASSY-INTERCONNECT	1	
		ATTACHING PARTS		
-34	MS21251-5S	. TURNBUCKLE	1	
-35	MS21252-5LS	. CLEVIS	1	
-36	MS21256-1	. CLIP-TURNBUCKLE LOCK	1	
-37	AN23-10	. BOLT	2	
-38	AN310-3	. NUT	2	
-39	MS24665-132	. PIN-COTTER	2	
		---*---		
-40	5361002-24	. PLATE ASSY	1	
-41	5361002-23	. CHANNEL	1	
-42	5361002-24	. PLATE	2	
-43	S378-4	. PULLEY	1	
		ATTACHING PARTS		
-44	AN4-7A	. BOLT	1	
-45	AN960-416L	. WASHER	1	
-46	MS21042C4	. NUT	1	
		---*---		
-47	NAS427K11	. PIN-CABLE GUARD	2	
-48	5300400-13	. CABLE ASSY-LH FWD RUDDER	1	
	5300400-12	. CABLE ASSY-RH FWD RUDDER	1	
		ATTACHING PARTS		
-49	AN23-10	. BOLT	1	
-50	MS17826-3	. NUT	1	
-51	MS24665-132	. PIN-COTTER	1	
		---*---		
-52	5361002-27	. BRACKET-LH	1	
-53	5361002-28	. BRACKET-RH	1	
-54	S378-4	. PULLEY	2	
		ATTACHING PARTS		
-55	AN4-15A	. BOLT	1	
-56	AN960-416L	. WASHER	1	
-57	NAS43HT4-12	. SPACER	1	
-58	MS21042C4	. NUT	1	
		---*---		
-59	NAS427K20	. PIN-CABLE GUARD	1	
-60	5361002-26	. BRACKET-LH & RH	2	
-61	S394	. PULLEY	2	
		ATTACHING PARTS		
-62	AN3-17A	. BOLT	1	
-63	NAS43HT3-11	. SPACER	1	
-64	MS17826-3	. NUT	1	
-65	MS24665-210	. PIN-COTTER	1	
-66	0411783	. BUSHING	2	
-67	AN960-10L	. WASHER	2	
		---*---		

CONTINUED

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
82 -68	MS20392-1C39	PIN-CABLE GUARD	1	
-69	MS24665-134	PIN-COTTER	1	
-70	5361004-4	BRACKET	1	
-71	S378-3L	PULLEY	2	
		ATTACHING PARTS		
-72	AN4-15A	BOLT	1	
		ATTACHING PARTS		
-73	AN960-416L	WASHER	1	
-74	AN960-416	WASHER	1	
-75	MS21042C4	NUT	1	
		---*---		
-76	NAS427K19	PIN CABLE GUARD	1	
-77	5361002-4	BRACKET	1	
		ATTACHING PARTS		
-78	AN3-3A	BOLT	4	
-79	AN960-10L	WASHER	4	
-80	MS21083N3	NUT	4	
		---*---		
-81	S378-4	PULLEY	2	
		ATTACHING PARTS		
-82	AN4-14A	BOLT	1	
-83	AN960-416L	WASHER	1	
-84	AN960PD416L	WASHER	1	
-85	MS21042C4	NUT	1	
		---*---		
-86	NAS417K17	PIN-CABLE GUARD	1	
-87	MS21251-5L	TURNBUCKLE-LH STA 275.00	1	
	MS21251-5L	TURNBUCKLE-RH STA 260.00	1	
-88	MS21256-3	CLIP-TURNBUCKLE LOCK LH	1	
	MS21256-2	CLIP-TURNBUCKLE LOCK RH	1	
-89	5300400-11	CABLE ASSY-LH AFT	1	
	5300400-10	CABLE ASSY-RH AFT	1	
	5300400-62	RUB STRIP	2	
-90	5361002-5	BRACKET-LH	1	
-91	5361002-6	BRACKET-RH	1	
-92	S378-3L	PULLEY-RH STA 296.80	1	
		ATTACHING PARTS		
-93	AN4-10A	BOLT	1	
-94	AN960-416L	WASHER	1	
-95	MS21042C4	NUT	1	
		---*---		
-96	NAS427K10	PIN-CABLE GUARD	1	
-97	5361002-10	BRACKET	1	
-98	S378-3L	PULLEY-LH STA 313.30	1	
		ATTACHING PARTS		
-99	AN4-10A	BOLT	1	
-100	AN960-416L	WASHER	1	
-101	MS21042C4	NUT	1	
		---*---		
-102	NAS427K11	PIN-CABLE GUARD	1	
-103	S378-4	PULLEY-LH & RH STA 362.00	2	
		ATTACHING PARTS		
-104	AN4-14A	BOLT	1	
-105	AN960-416L	WASHER	1	
-106	MS21042C4	NUT	1	
	NAS43HT4-31	SPACER	1	B
		---*---		
-106A	5361002-2	BRACKET-PULLEY OUTBD LH & INBD RH	2	A
	5361013-2	BRACKET-PULLEY OUTBD LH & INBD RH	2	B
-106B	5361002-3	BRACKET-PULLEY INBD LH & OUTBD RH	2	A
	5361013-3	BRACKET-PULLEY INBD LH & OUTBD RH	2	B
-107	NAS427K8	PIN-CABLE GUARD LH & RH	2	A
	NAS427K16	PIN-CABLE GUARD LH & RH	2	B
-108	NAS43HT3-9	BUSHING LH & RH	4	H
-109	0510160	LINK LH & RH	4	C
	5115213-3	LINK LH & RH	4	F
	9756036-21	LINK LH & RH	4	G
		ATTACHING PARTS		
-110	AN23-10	BOLT FWD	1	
-111	AN960-10L	WASHER FWD	1	H
	AN960-10L	WASHER FWD	2	G
-112	MS17826-3	NUT FWD	1	
-113	AN23-12	BOLT AFT	1	
-114	MS17826-3	NUT AFT	2	
-115	MS24665-134	PIN-COTTER	2	
		---*---		
-116	SEE FIG 42	BELLCRANK-RUDDER STEERING	1	
-117	5361013-4	RUB BLOCK	2	E
	5361013-5	RUB BLOCK	2	J

A---340-0001 THRU 340-0150
B---340-0151 & ON
C---340-0001 THRU 340-0253
D---340-0254 & ON
E---340-0233 THRU 340-0500
F---340-0254 THRU 340-0357
G---340-0358 & ON
H---340-0001 THRU 340-0357
J---340-0501 & ON

FLIGHT CONTROL SYSTEMS

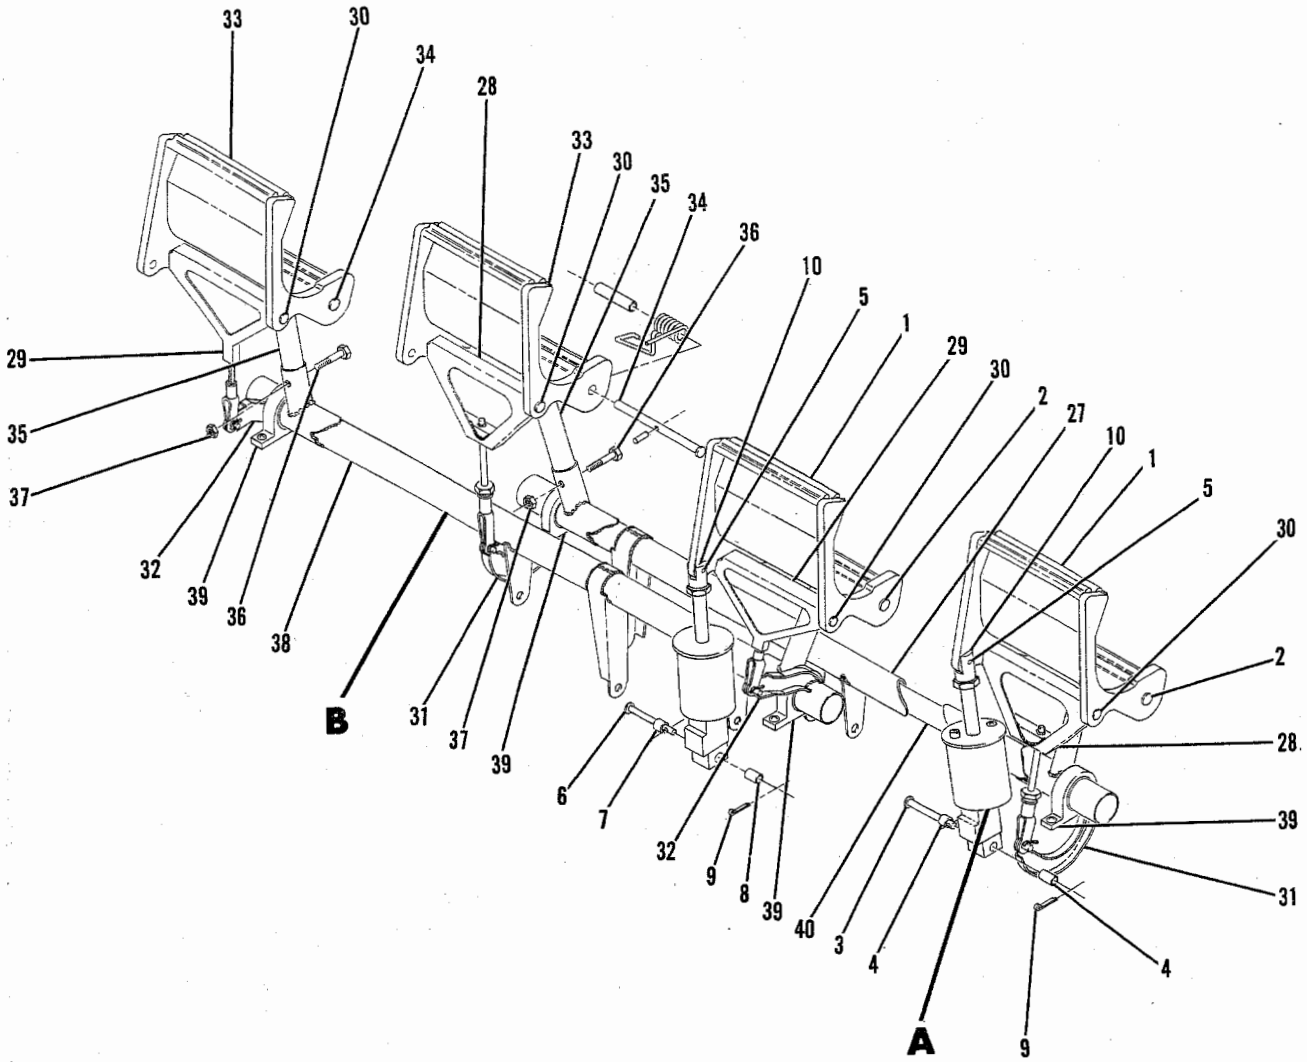

Figure 83. Rudder and Brake Pedal Installation (Sheet 1 of 2)

FLIGHT CONTROL SYSTEMS

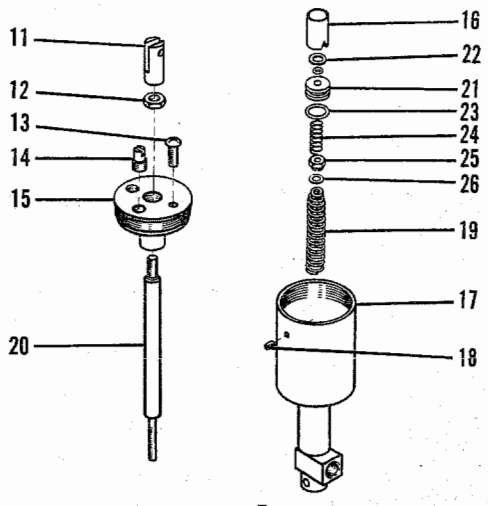

Detail **A**

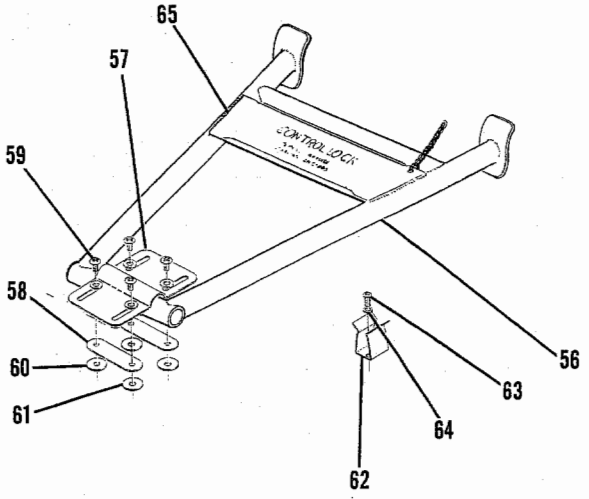

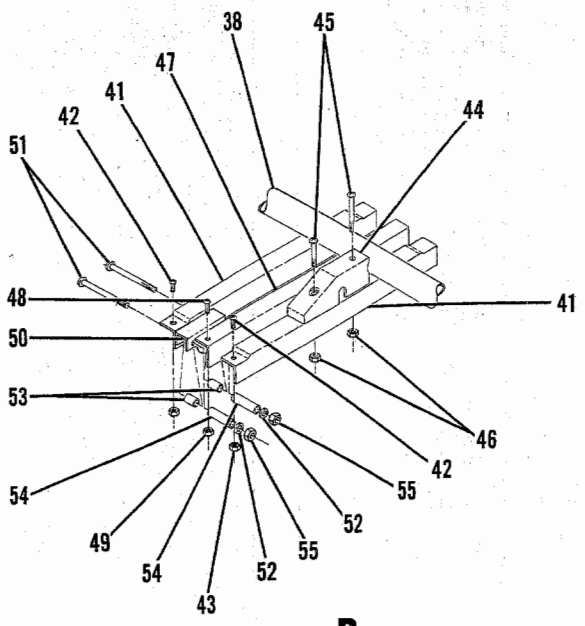

Detail **B**

Figure 83. Rudder and Brake Pedal Installation (Sheet 2)

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
83 -		RUDDER AND BRAKE PEDALS INSTALLATION	NP	
-1	0861706-1	. PEDAL-RUDDER LH	2	
		ATTACHING PARTS		
-2	0861700-50	. PIN	2	
	0861711-2	. SPRING-RUDDER RETURN	2	A
	0861711-3	. SPRING-RUDDER RETURN	2	B
	NAS43-5-87	. SPACER	2	
		---*---		
	5044000-4	. CYLINDER ASSY-BRAKE MASTER	2	
	A049-7	. CYLINDER ASSY-BRAKE MASTER ALT FOR 5044000-4 GRDS	2	
		ATTACHING PARTS		
-3	MS20392-3C53	. PIN	2	
-4	NAS43HT4-16	. SPACER	2	J
	NAS43HT4-8	. SPACER	1	K
	NAS43HT4-24	. SPACER	1	K
-5	MS20392-2C37	. PIN	1	
-6	MS20392-3C53	. PIN	1	
-7	NAS43HT4-15	. SPACER	1	J
	NAS43HT4-26	. SPACER	1	K
-8	NAS43HT4-28	. SPACER	1	J
	NAS43HT4-17	. SPACER	1	K
-9	MS24665-132	. PIN-COTTER	1	
		---*---		
-10	MS27975-4	. . TIE ROD	2	
-11	0541140	. . CLEVIS-ROD END	1	
-12	AN316-4R	. . NUT-CHECK	1	
-13	MS35206-262	. . SCREW	1	
-14	0541139	. . PLUG-FILLER	1	
-15	0541151	. . COVER-MASTER CYLINDER	1	
-16	0541149	. . SLEEVE-PISTON ROD	1	
-17	5044000-2	. . BODY-MASTER CYLINDER	1	
-18	AN565D6H3	. . SCREW-SET	1	
-19	0541148	. . SPRING-PISTON RETURN	1	
-20	0541144	. . ROD-PISTON	1	
-21	5044000-3	. . PISTON-MASTER CYLINDER	1	
-22	800-001-6	. . LOCK-O-SEAL PISTON ROD EN	1	
-23	AN6227B10	. . O-RING	1	
-24	0861712-1	. . SPRING-PISTON	1	
-25	MS21044N06	. . NUT-PISTON	1	
-26	AN960-6	. . WASHER-PISTON	1	
-27	5360701-45	. TORQUE TUBE ASSY-RUDDER LH FSO 5360701-53	1	E
	5360701-53	. TORQUE TUBE ASSY-RUDDER LH	1	F
	0861700-6	. . BEARING	2	
-28	5360701-13	. LINK-BRAKE	1	
-29	5360704-1	. LINK ASSY-BRAKE	1	C
	5360704-5	. LINK ASSY-BRAKE	1	D
		ATTACHING PARTS		
-30	0861700-50	. PIN	2	
	0861700-20	. PIN	4	
	NAS43HT5-87	. SPACER	AR	
	MS20392-2C37	. PIN	AR	
	MS24665-132	. PIN-COTTER	AR	
		---*---		
-31	5360701-17	. COUPLING ASSY-LH OUTBD	1	
	5360701-21	. COUPLING ASSY-LH INBD	1	
		ATTACHING PARTS		
	MS20392-2C37	. PIN	AR	
	MS24665-132	. PIN-COTTER	AR	
		---*---		
-32	5360701-16	. COUPLING ASSY-RH INBD	1	
	5360701-20	. COUPLING ASSY-RH OUTBD	1	
		ATTACHING PARTS		
	MS20392-2C37	. PIN	AR	
	MS24665-132	. PIN-COTTER	AR	
		---*---		
-33	0861706-1	. PEDAL-RUDDER	2	
		ATTACHING PARTS		
-34	0861700-22	. PIN	2	
	NAS561C3-20	. ROLL PIN	AR	
		---*---		
-35	5360701-9	. PEDAL ARM ASSY-RH OUTBD	1	
	5360701-29	. PEDAL ARM ASSY-RH INBD	1	
		ATTACHING PARTS		
-36	AN3C12A	. BOLT	1	
-37	MS21044N3	. NUT	1	
		---*---		
-38	5360701-46	. TORQUE TUBE ASSY-RUDDER RH FSO 5360701-56	1	E
	5360701-56	. TORQUE TUBE ASSY-RUDDER RH	1	F
	0861700-6	. . BEARING	2	
-39	5360701-11	. BEARING ASSY	2	
		ATTACHING PARTS		
	MS27039-1-35	. SCREW	4	
		---*---		
	B168	. BEARING TOR	4	
-40	5360701-12	. TUBE-BRAKE LH & RH	2	
-41	5360701-3	. SUPPORT-RH	2	
		ATTACHING PARTS		
-42	MS27039-1-8	. SCREW	1	
-43	MS21044N3	. NUT	1	
		---*---		
-44	5360701-36	. BLOCK-RUB	1	
		ATTACHING PARTS		
-45	MS27039-1-25	. SCREW	2	
-46	MS21044N3	. NUT	2	
		---*---		
-47	5360701-34	. SUPPORT-RH	1	
		ATTACHING PARTS		
-48	MS27039-1-8	. SCREW	1	
-49	MS21044N3	. NUT	1	
		---*---		
		CONTINUED		

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
83 -50	5360701-50	. BRACKET-RH	1	
		ATTACHING PARTS		
-51	MS27039-1-38	. SCREW	2	
-52	AN960-10L	. WASHER	4	
-53	NAS43DD3-30	. SPACER	2	
-54	NAS43DD3-78	. SPACER	2	
-55	MS21044N3	. NUT	2	
		---*---		
-56	5215027-11	. GUST LOCK ASSY-RUDDER PEDALS FSO 5215027-12	1	G
	5215027-12	. GUST LOCK ASSY-RUDDER PEDALS	1	H
-57	5215028-2	. CLAMP ASSY	1	
		ATTACHING PARTS		
-58	5215028-4	. PLATE	2	
-59	MS27039-1-10	. SCREW	4	
-60	AN960-10	. WASHER	4	
-61	MS45904-61	. WASHER	4	
		---*---		
-62	0861702-2	. CLIP-STOWAGE	1	
		ATTACHING PARTS		
-63	MS27039-0807	. SCREW	2	
-64	AN960-8	. WASHER	2	
		---*---		
-65	SEE FIG 1	. PLACARD-RUDDER GUST LOCK	1	
		A---340-0001 THRU 340-0023 B---340-0024 & ON C---340-0001 THRU 340-0030 D---340-0031 & ON E---340-0001 THRU 340-0070 F---340-0071 & ON G---340-0001 THRU 340-0061 H---340-0062 & ON J---340-0001 THRU 340-0151 K---340-0152 & ON		

FLIGHT CONTROL SYSTEMS

1 FLIGHT CONTROL WHEEL & COLUMN INSTL

85 AILERON HINGE

86 AILERON BELLCRANK STOP

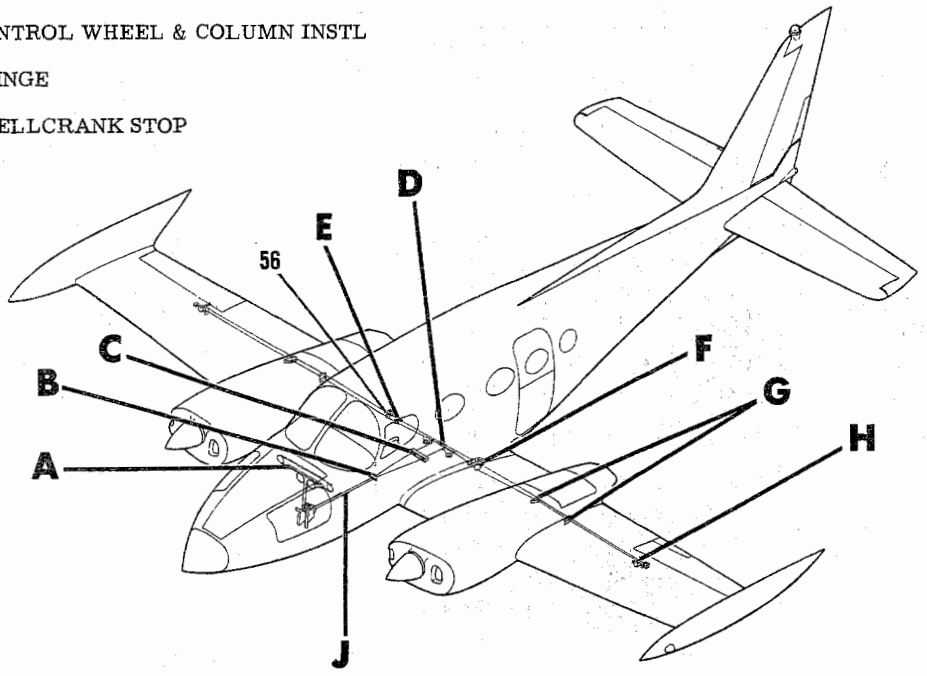

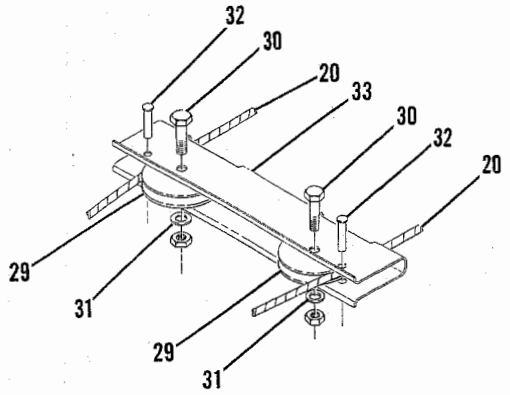

Detail C

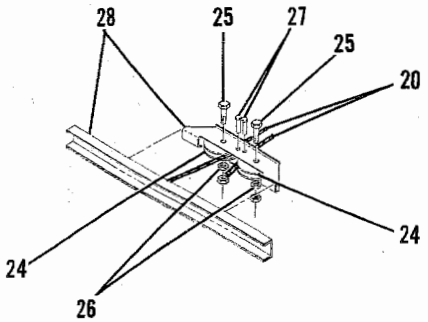

Detail B

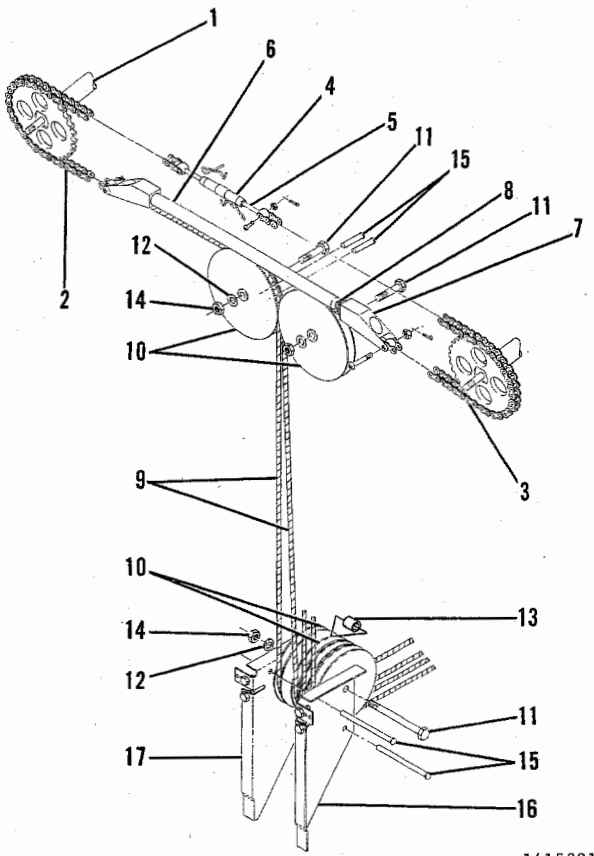

Detail A

14153015
A14154003
A14151004
B14152003R
C14152003

Figure 84. Aileron Control System (Sheet 1 of 2)

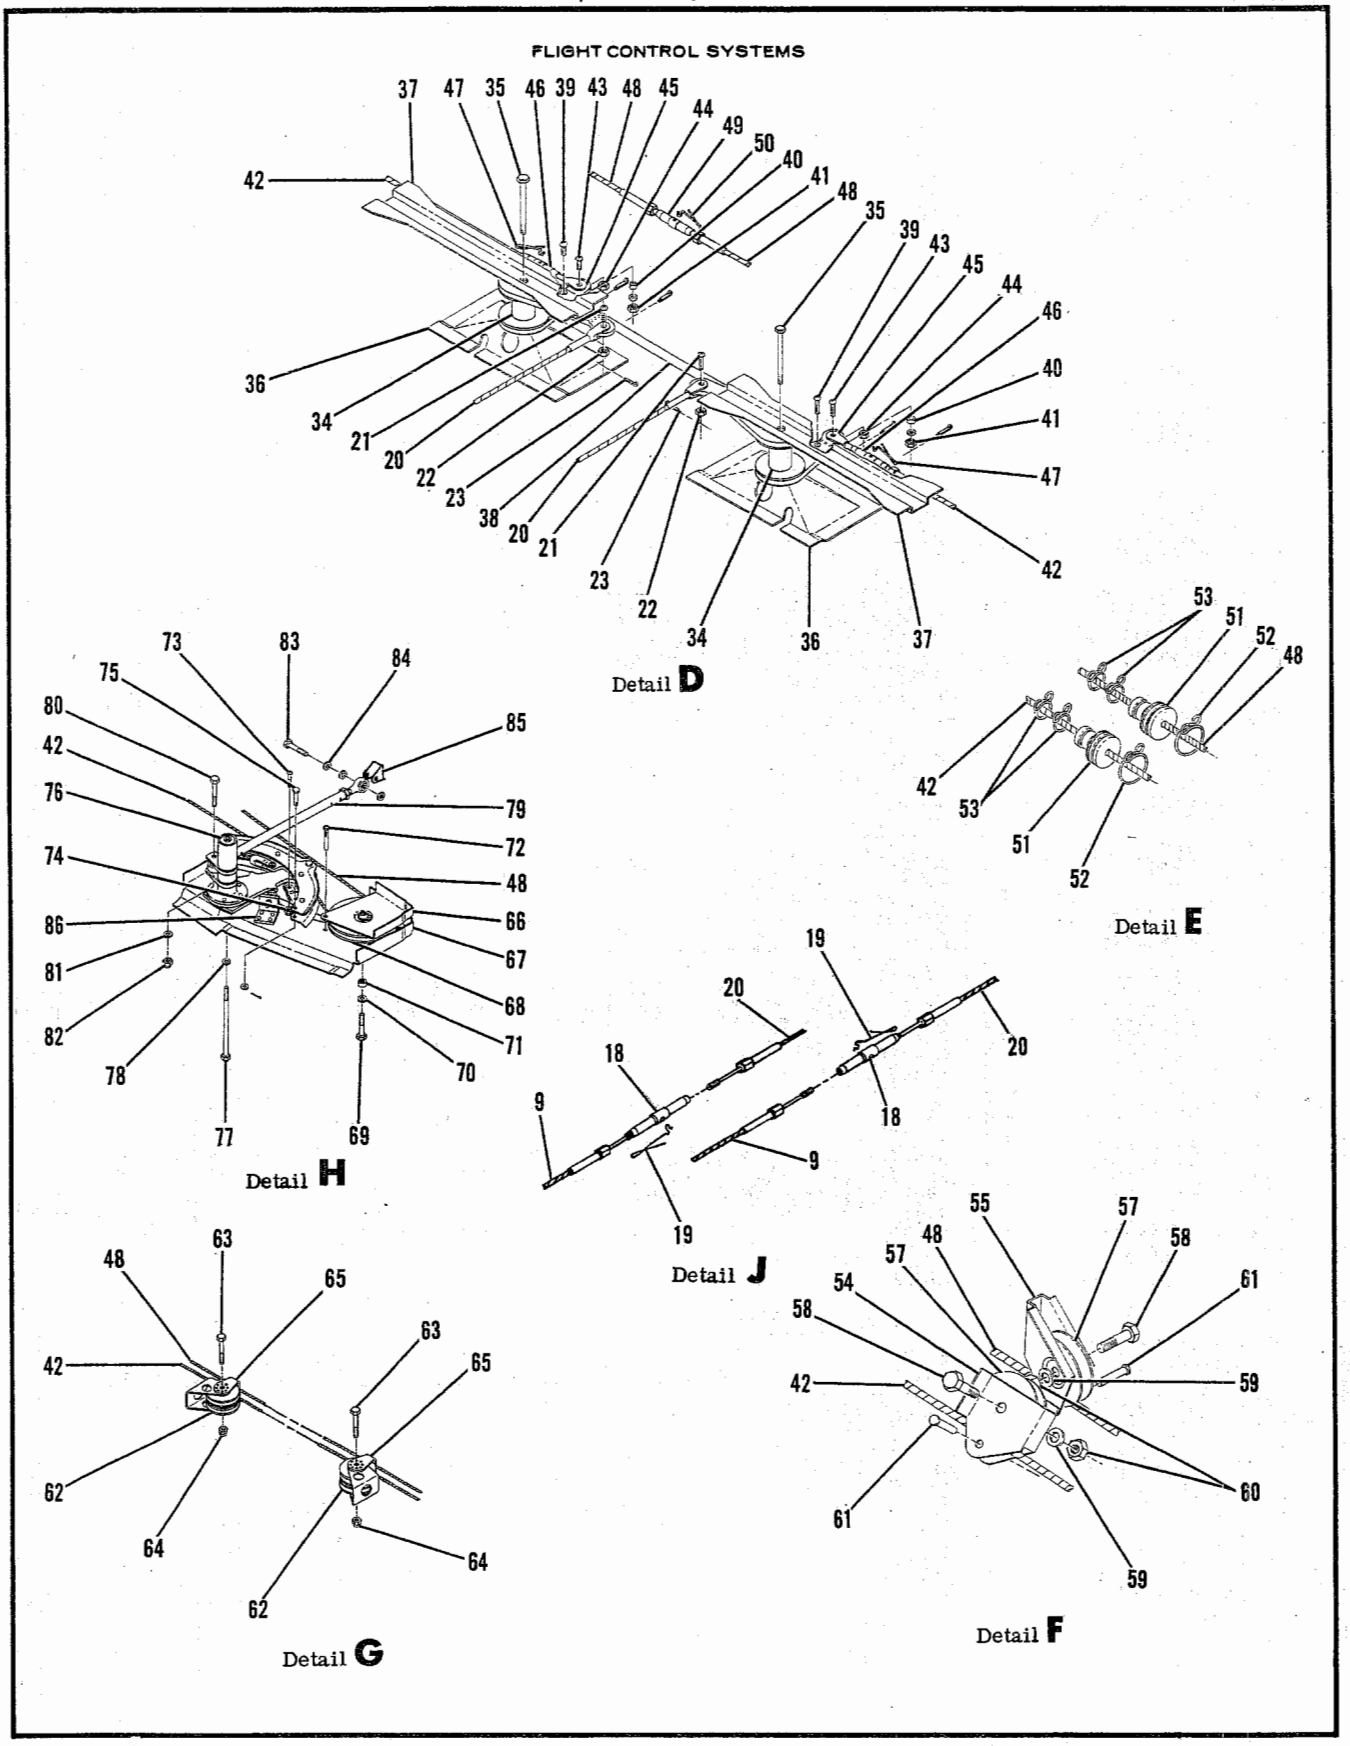

Figure 84. Aileron Control System (Sheet 2)

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
84 -		AILERON CONTROL SYSTEM	NP	
-1	SEE FIG 86	. FLIGHT CONTROL WHEEL & COLUMN INSTL	REF	
-2	5000008-50	. CHAIN-INTERCONNECT	1	
-3	5000008-51	. CHAIN-INTERCONNECT	1	
-4	MS21251B5S	. BARREL-TURNBUCKLE	1	
	MS21256-1	. CLIP-TURNBUCKLE LOCK	1	
-5	CM2662-35LH	. TERMINAL-LH	1	
	CM2662-35RH	. TERMINAL-RH	1	
		ATTACHING PARTS		
	AN21-10	. BOLT	AR	
	AN320-1	. NUT	AR	
	MS24665-1	. PIN-COTTER	AR	
		---*---		
-6	5015045-1	. INTERCONNECT ASSY	1	
		ATTACHING PARTS		
	AN21-14	. BOLT	2	
	AN320-1	. NUT	2	
	MS24665-1	. PIN-COTTER	2	
		---*---		
-7	5015046-1	. . CLEVIS ASSY	1	
-8	AN316-4R	. . NUT-CHECK	AR	
-9	5300400-58	. CABLE ASSY-FWD FUSELAGE	2	
-10	S378-4	. PULLEY-FWD FUSELAGE UPR & LWR	4	
		ATTACHING PARTS		
-11	AN4-25A	. BOLT LWR	1	
	AN4-10A	. BOLT UPR	2	
-12	AN960-416L	. WASHER UPR & LWR	4	
-13	NAS43HT4-28	. SPACER LWR	1	
-14	MS20364-428	. NUT	3	
		---*---		
-15	NAS427K32	. PIN-CABLE GUARD UPR & LWR	6	
-16	5360901-19	. BRACKET-PULLEY LH STA 100.00	1	
-17	5360901-20	. BRACKET-PULLEY RH STA 100.00	1	
-18	NAS649-32L	. TURNBUCKLE-LH & RH	2	
-19	NAS651-16L	. CLIP-TURNBUCKLE LOCK LH & RH	2	
-20	5300400-43	. CABLE ASSY-TURNBUCKLE TO BELLCRANK LH & RH	2	
		ATTACHING PARTS		
-21	AN23-12	. BOLT-CLEVIS	1	
-22	MS17826-3	. NUT	1	
-23	MS24665-132	. PIN-COTTER	1	
		---*---		
-24	S378-3	. PULLEY STA 142.70	2	
		ATTACHING PARTS		
-25	AN4-10A	. BOLT	1	
-26	AN960-416L	. WASHER	1	
	MS21042L4	. NUT	1	
		---*---		
-27	NAS427K10	. PIN-CABLE GUARD	2	
-28	5361007-6	. BRACKET ASSY-PULLEY STA 142.70	REF	
-29	S378-3	. PULLEY STA 168.54	2	
		ATTACHING PARTS		
-30	AN4-10A	. BOLT	1	
-31	AN960-416L	. WASHER	1	
	MS21042L4	. NUT	1	
		---*---		
-32	NAS427K10	. PIN-CABLE GUARD	2	
-33	5361004-7	. BRACKET ASSY-PULLEY STA 168.58 WEU 5361004-15	1	A
	5361004-12	. BRACKET ASSY-PULLEY STA 168.58 WEU 5361004-15	1	B
	5361004-15	. BRACKET ASSY-PULLEY STA 168.58	1	C
	NAS427K11	. PIN-CABLE GUARD	2	
-34	5361009-2	. BELLCRANK ASSY-LH	1	
	5361009-1	. BELLCRANK ASSY-RH	1	
		ATTACHING PARTS		
-35	AN3H27A	. BOLT	1	
	AN960-10L	. WASHER	2	
		---*---		
-36	5361010-1	. PAN ASSY-LH BELLCRANK SUPPORT	1	
	5361010-2	. PAN ASSY-RH BELLCRANK SUPPORT	1	
-37	5361010-5	. SUPPORT-BELLCRANK UPR LH & RH	2	
-38	5361011-1	. TUBE-BELLCRANK INTERCONNECT	1	
		ATTACHING PARTS		
-39	AN23-10	. SCREW	2	
-40	NAS43HT3-7	. SPACER	2	
-41	MS17826-3	. NUT	2	
	MS24665-132	. PIN-COTTER	2	
	AN960-416L	. WASHER	2	
		---*---		
-42	5300400-41	. CABLE ASSY-LH & RH	2	
		ATTACHING PARTS		
-43	AN24-11	. BOLT	1	
-44	MS17826-4	. NUT	1	
	MS24665-132	. PIN-COTTER	1	
		---*---		
-45	MS21252-5RS	. CLEVIS END	2	
-46	MS21251B5S	. TURNBUCKLE	2	
-47	MS21256-1	. CLIP-TURNBUCKLE LOCK	2	
-48	5300400-60	. CABLE ASSY-LH	1	
	5300400-45	. CABLE ASSY-RH	1	
-49	MS21251B5S	. TURNBUCKLE	1	
-50	MS21256-1	. CLIP-TURNBUCKLE LOCK	HRML 1	
-51	S11K4R	. SEAL	HRML 4	
		ATTACHING PARTS		
-52	S11L62C	. SPRING	HRML 2	
-53	S11L61C	. SPRING	HRML 4	
		---*---		
-54	5025014-1	. BRACKET-FWD LH & RH	2	
-55	5011500-9	. BRACKET-AFT LH	1	
-56	5011500-10	. BRACKET-AFT RH	1	

CONTINUED

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
84 -57	S378-3	. PULLEY-LH & RH	4	
		ATTACHING PARTS		
-58	AN4-10A	. BOLT	1	
-59	AN960-416L	. WASHER	1	
-60	MS21042L4	. NUT	1	
		---*---		
-61	NAS427K10	. PIN-CABLE GUARD LH & RH	4	
-62	S378-3	. PULLEY	4	
		ATTACHING PARTS		
-63	AN4-14A	. BOLT	1	
-64	MS21042L4	. NUT	1	
		---*---		
-65	0411412-8	. GUARD-CABLE	4	
-66	5025013-6	. BRACKET-PULLEY UPR LH & RH	2	
-67	5025013-3	. BRACKET ASSY-PULLEY LWR LH & RH	2	
-68	S378-4	. PULLEY-LH & RH	2	
		ATTACHING PARTS		
-69	AN4H12A	. BOLT	1	
-70	AN960-416L	. WASHER	1	
-71	NAS43HT4-18	. SPACER	1	
		---*---		
-72	NAS427K18	. PIN-CABLE GUARD	1	
-73	AN23-10	. BOLT-CABLE ATTACH	2	
-74	MS17826-3	. NUT-CABLE ATTACH	2	
	MS24665-134	. PIN-COTTER	2	
-75	MS20392-2C19	. PIN-CABLE GUARD LH & RH	6	
	MS24665-208	. PIN-COTTER LH & RH	6	
-76	5025000-3	. BELLCRANK ASSY-LH	1	
	5025000-6	. BELLCRANK ASSY-RH	1	
	SEE FIG 157	. BELLCRANK ASSY-RH USED WITH AUTOPILOT	1	
		ATTACHING PARTS		
-77	AN4H45A	. BOLT	1	
-78	AN960-416	. WASHER	1	
		---*---		
-79	5025018-1	. ROD ASSY-AILERON CONTROL LH & RH	2	
		ATTACHING PARTS		
-80	AN4-13	. BOLT AT BELLCRANK	1	
-81	AN960-416	. WASHER AT BELLCRANK	1	
-82	MS17826-4	. NUT AT BELLCRANK	1	
	MS24665-134	. PIN-COTTER	1	
-83	AN4H13A	. BOLT AT HINGE	1	
-84	AN960-416L	. WASHER AT HINGE	3	
		---*---		
-85	SEE FIG 33	. HINGE-AILERON	REF	
-86	SEE FIG 34	. STOP-AILERON BELLCRANK	REF	
		A---340-0001 THRU 340-0046 B---340-0047 THRU 340-0351 C---340-0352 & ON		

FLIGHT CONTROL SYSTEMS

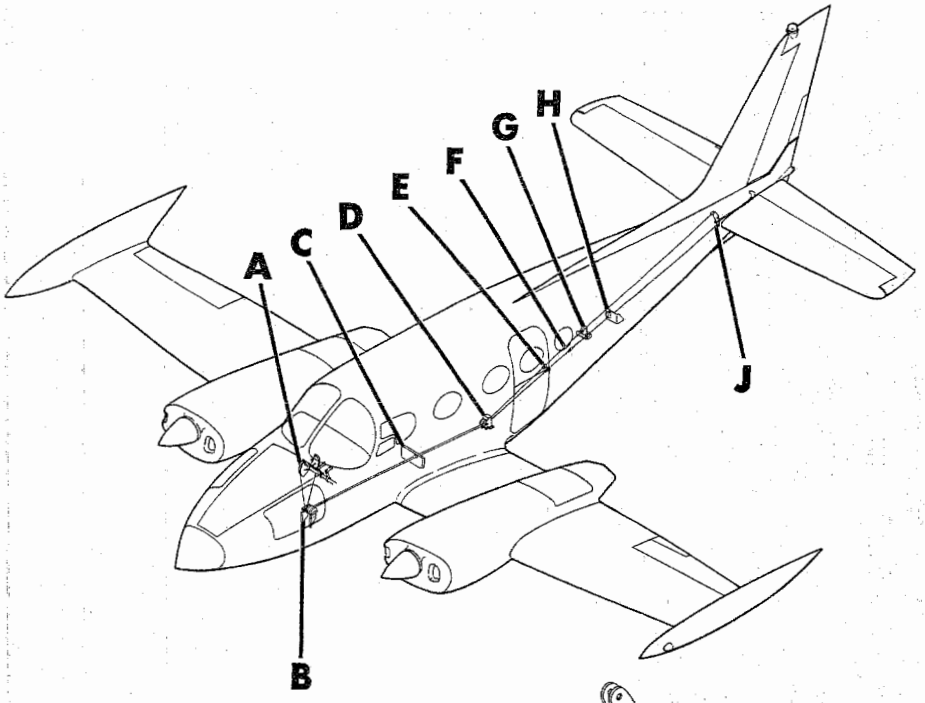

1 FLIGHT CONTROL WHEEL & COLUMN INSTL

10 PULLEY ATTACH BOLT

58 ELEVATOR STRUCTURE INSTL

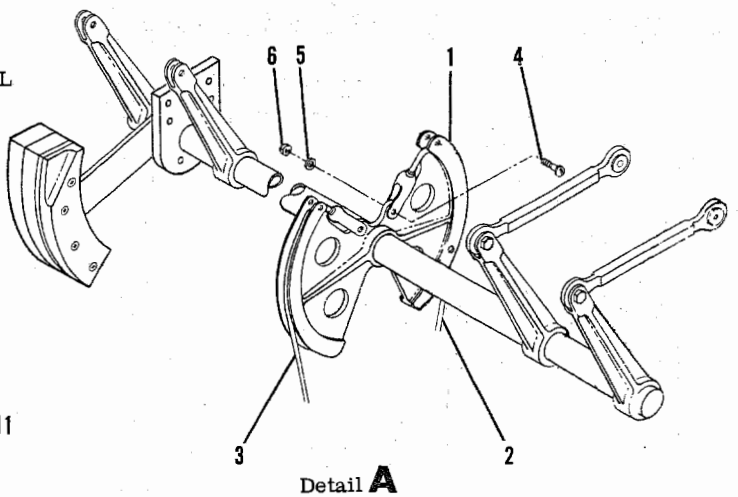

Detail A

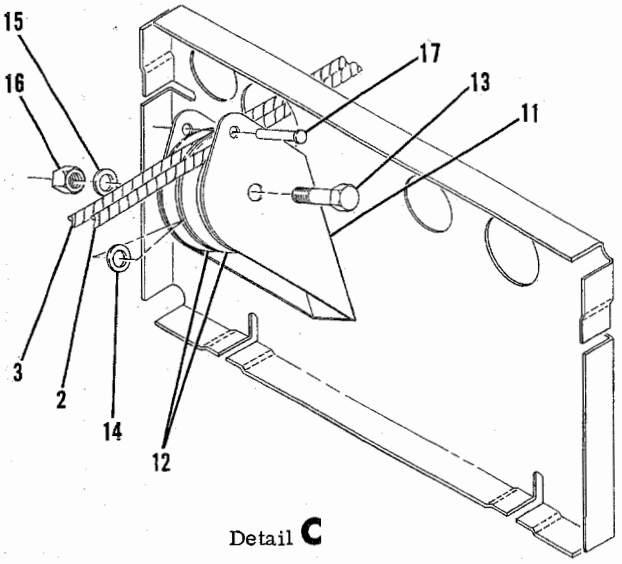

Detail C

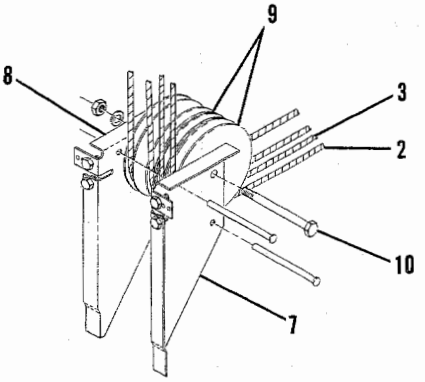

Detail B

14153002
A
B14151004
C14153013

Figure 85. Elevator Control System (Sheet 1 of 2)

FLIGHT CONTROL SYSTEMS

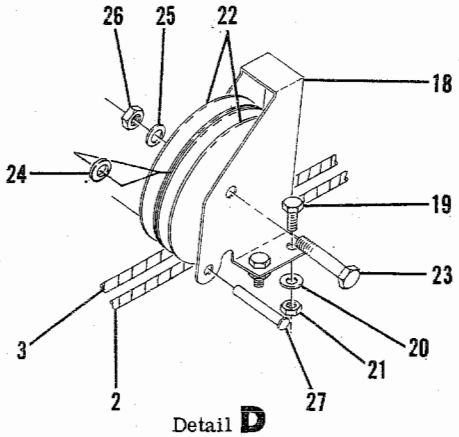

Detail **D**

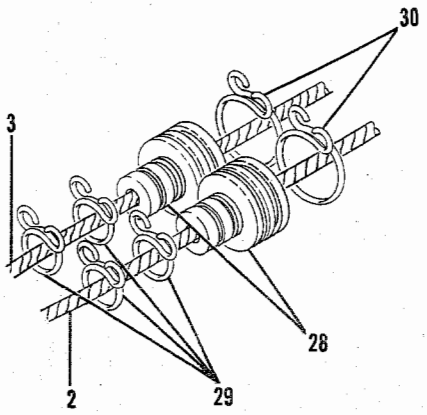

Detail **E**

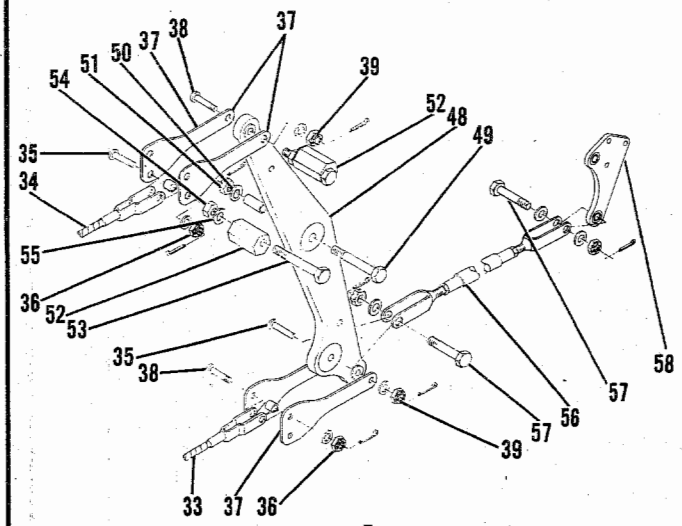

Detail **J**

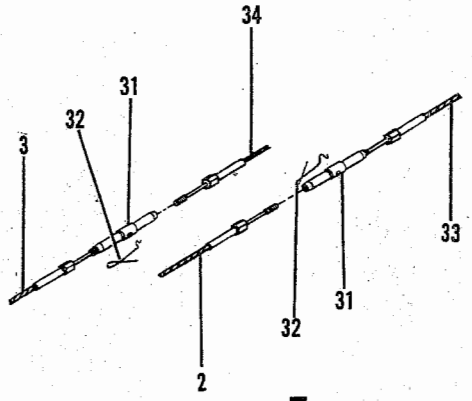

Detail **F**

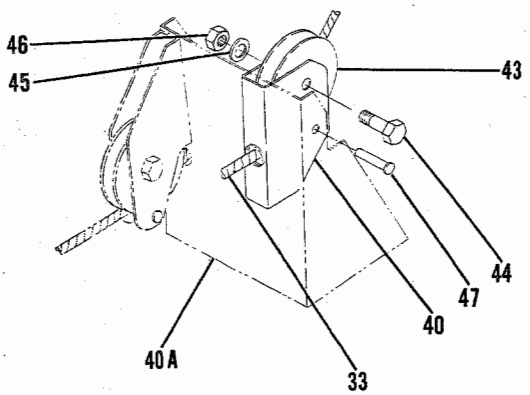

Detail **H**

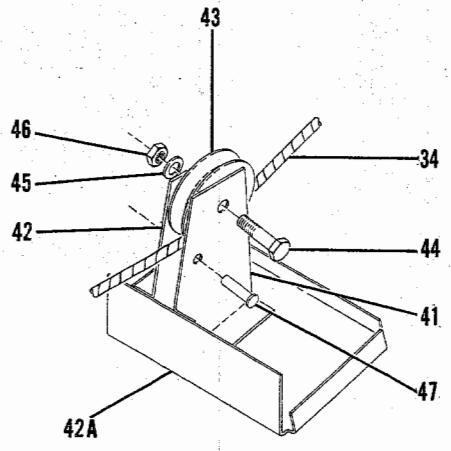

Detail **G**

D14151015
E14151016R
F54613003
G14152005
H14151032
J14153022

Figure 85. Elevator Control System (Sheet 2)

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
85 -		ELEVATOR CONTROL SYSTEM	NP	
-1	SEE FIG 86	. FLIGHT CONTROL WHEEL & COLUMN INSTL	1	
-2	5300400-9	. CABLE ASSY-LH FWD	1	
-3	5300400-8	. CABLE ASSY-RH FWD	1	
		ATTACHING PARTS		
-4	AN23-11A	. BOLT	1	F
	AN23-11	. BOLT	1	G
-5	AN960-10L	. WASHER	1	
-6	MS24364-1032	. NUT	1	F
	MS17826-3	. NUT	1	G
	MS24665-136	. PIN-COTTER	1	G
		---*---		
-7	5360901-19	. BRACKET	1	
-8	5360901-20	. BRACKET	1	
		ATTACHING PARTS		
	AN3-10	. BOLT	4	
	MS21044N3	. NUT	2	
		---*---		
-9	S378-4	. PULLEY STA 102.88	2	
-10	SEE FIG 84	. BOLT-PULLEY ATTACH	1	
-11	5361004-4	. BRACKET	1	
-12	S378-3L	. PULLEY STA 171.00	2	
		ATTACHING PARTS		
-13	AN4-21A	. BOLT	1	
-14	AN960PD416L	. WASHER BETWEEN PULLEYS	1	
-15	AN960-416L	. WASHER	1	
-16	MS21042C4	. NUT	1	
		---*---		
-17	NAS427K19	. PIN-CABLE GUARD	1	
-18	5361005-4	. BRACKET	1	
		ATTACHING PARTS		
-19	AN3-3A	. BOLT	4	
-20	AN960-10L	. WASHER	4	
-21	MS21083N3	. NUT	HRML	4
		---*---		
-22	S378-4	. PULLEY STA 210.41	HRML	2
		ATTACHING PARTS		
-23	AN4-20A	. BOLT	HRML	1
-24	AN960PD416L	. WASHER BETWEEN PULLEY		1
-25	AN960-416L	. WASHER		1
-26	MS21042C4	. NUT		1
		---*---		
-27	NAS427K18	. PIN-CABLE GUARD		1
-28	S11K-4R	. SEAL	HRML	2
		ATTACHING PARTS		
-29	S11L61C	. SPRING	HRML	4
-30	S11L-62C	. SPRING	HRML	2
		---*---		
-31	MS21251-5L	. TURNBUCKLE		2
-32	MS21256-2	. CLIP-TURNBUCKLE LOCK		2
-33	9756035-9	. CABLE ASSY-LWR WEU 9756035-34		1 K
	9756035-34	. CABLE ASSY-LWR		1 L
-34	9756035-7	. CABLE ASSY-UPR WEU 9756035-33		1 K
	9756035-33	CABLE ASSY-UPR		1 L
-35	AN23-14	. BOLT		1
-36	MS17826-3	. NUT		1
	MS24665-132	. PIN-COTTER		1
		---*---		
-37	9756036-21	. LINK-CABLE ATTACH LH & RH		4
		ATTACHING PARTS		
-38	AN23-14	. BOLT		1
	NAS43HT4-12	. SPACER		1 H
	AN960-10	. WASHER		2 J
-39	MS17826-3	. NUT		1
	MS24665-134	. PIN-COTTER		1
		---*---		
-40	5361005-5	. BRACKET-OUTBD		1
-40A	5361002-5	. BRACKET		1
-41	5361005-11	. BRACKET-INBD LH		1 C
	5361005-13	. BRACKET-INBD LH FSC 5361005-15		1 DE
	5361005-15	. BRACKET-INBD LH		1 C
-42	5361005-10	. BRACKET-INBD RH		1 DE
	5361005-12	. BRACKET-INBD RH FSC 5361005-14		1 CDE
	5361005-14	. BRACKET-INBD RH		1 DE
-42A	5361005-9	. DOUBLER		1
-43	S378-3L	. PULLEY-RH STA 283.05 LH STA 299.25		2
		ATTACHING PARTS		
-44	AN4-14A	. BOLT		1
-45	AN960-416L	. WASHER		1
-46	MS21042C4	. NUT		1
		---*---		
-47	NAS427K11	. PIN-CABLE GUARD LH & RH		2
-48	5360801-4	. BELLCRANK		1
		ATTACHING PARTS		
-49	AN4-16	. BOLT		1
-50	AN960-416L	. WASHER		1
-51	MS17825-4	. NUT		1
	MS24665-134	PIN-COTTER		1
-52	5300400-5	. STOP-ELEVATOR		2
		ATTACHING PARTS		
-53	AN4-16A	. BOLT		1
-54	AN960-416L	. WASHER		1
-55	MS21042C4	. NUT		1
		---*---		

CONTINUED

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
85 -56	5360802-8	. TUBE & FORK ASSY FSO 5360802-12	1	A
	5360802-12	. TUBE & FORK ASSY	1	B
	5360802-13	. . TUBE	1	B
	5360802-11	. . FORK	2	B
	MS35650-3382	. . NUT	2	B
		ATTACHING PARTS		
-57	AN4-12	. BOLT	2	
	AN960-416L	. WASHER	2	
	MS17826-4	. NUT	2	
	MS24665-134	. PIN-COTTER	2	
		---*---		
-58	SEE FIG 45	. ELEVATOR STRUCTURE INSTL	REF	
		A---340-0001 THRU 340-0091 B---340-C092 & ON C---340-C001 THRU 340-0105 D---340-0106 THRU 340-0514 E---340-0515 & ON F---340-C001 THRU 340-0337 G---340-0338 & ON H---340-0001 THRU 340-0357 J---340-0358 & ON K---340-0001 THRU 340A0109 L---340A0110 & ON		

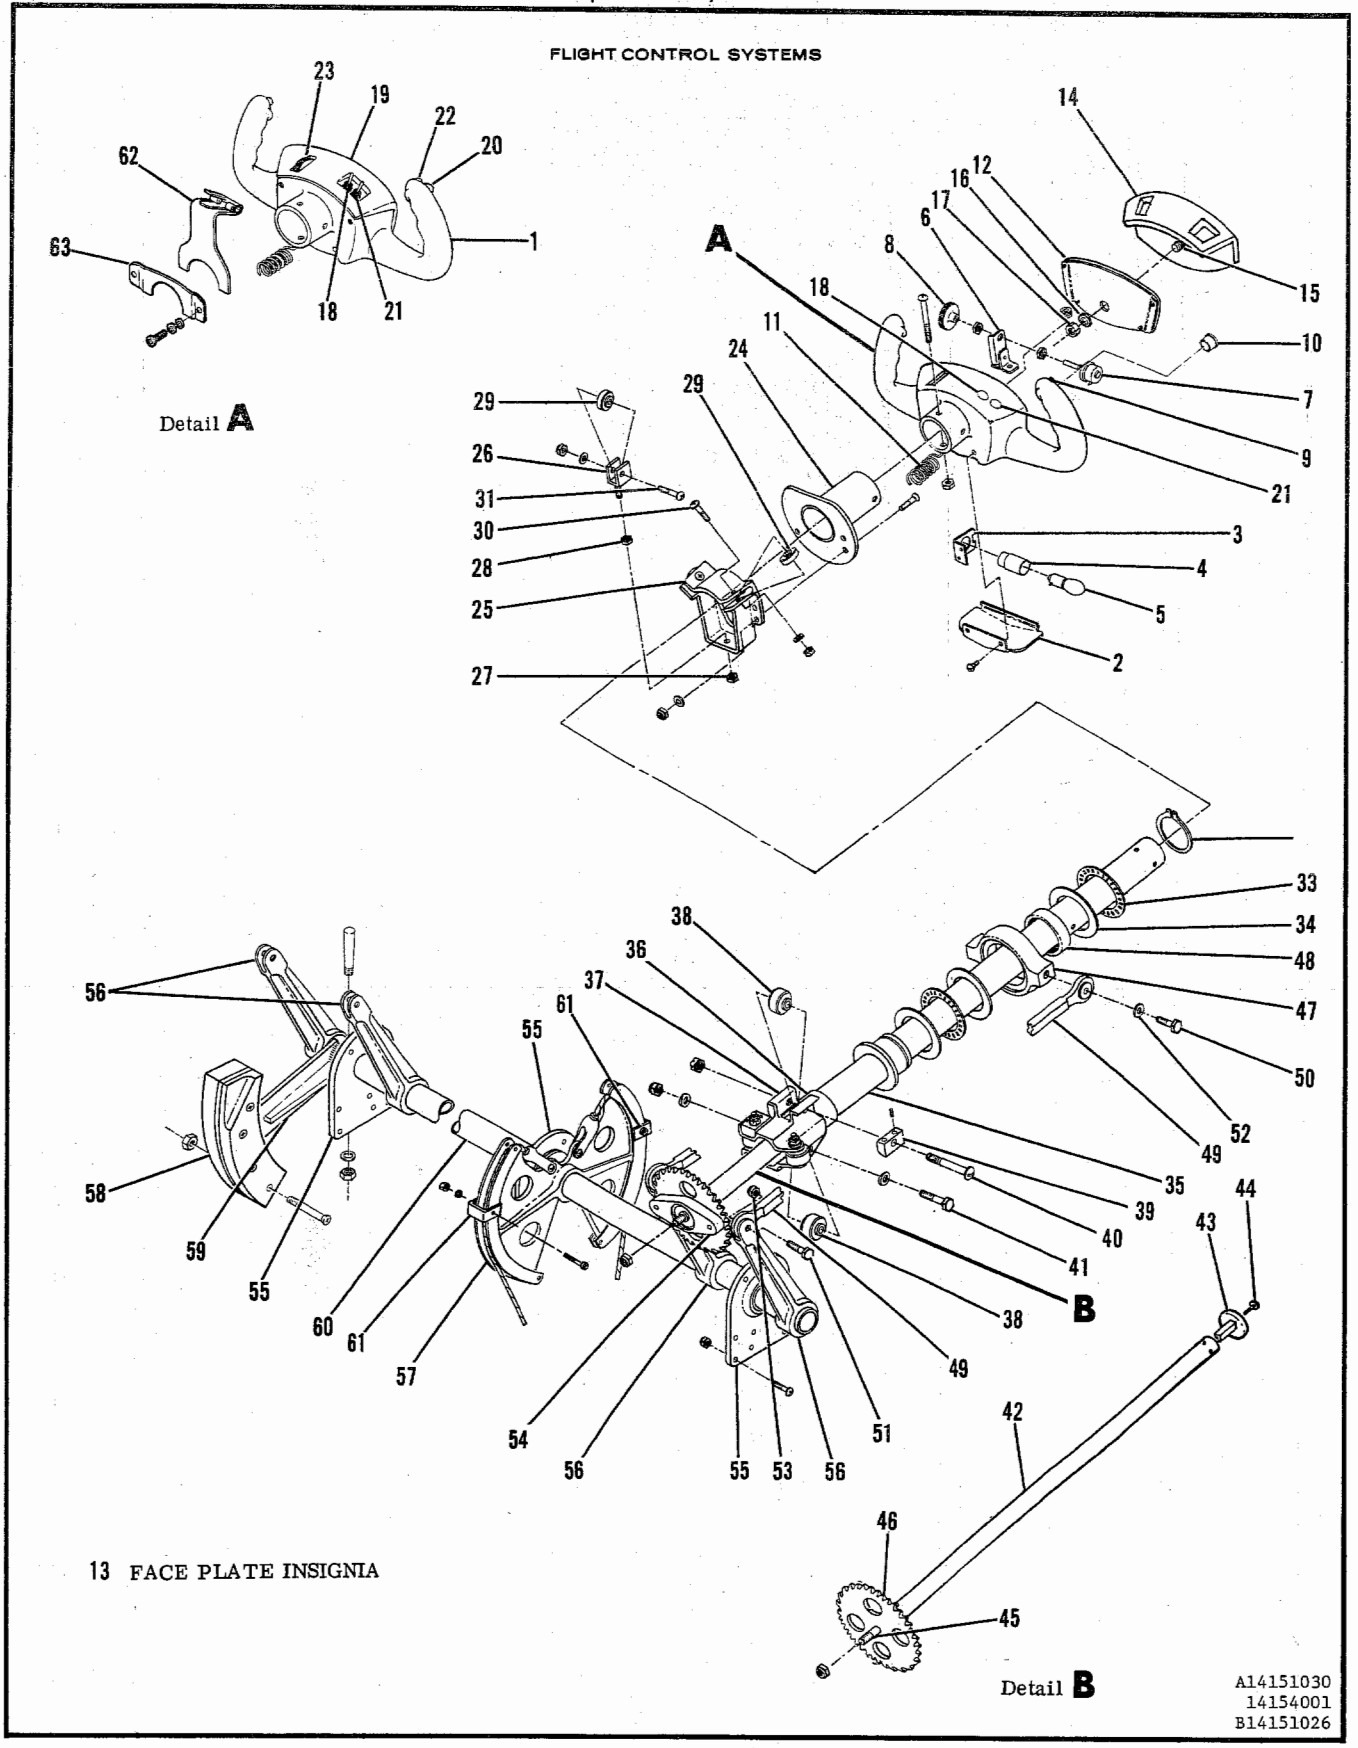

Figure 86. Flight Control Wheel and Column Installation

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
86 -			FLIGHT CONTROL WHEEL AND COLUMN INSTLLATION	NP	
	5261001-3		. CONTROL WHEEL ASSY-LH	1	N
	5261001-9		. CONTROL WHEEL ASSY-LH	1	P
	5261001-4		. CONTROL WHEEL ASSY-RH	1	N
	5261001-10		. CONTROL WHEEL ASSY-RH	1	P
	9754034-40		. CONTROL WHEEL ASSY-LH & RH USE WITH IFCS	1	
	9754034-42		. CONTROL WHEEL ASSY-LH & RH USE WITH IFCS & IDENT BUTTON	1	
			ATTACHING PARTS		
	MS27039-1-32		. SCREW	1	
	MS21043L3		. NUT	1	
			---*---		
-1	0861326-25		. . WHEEL-CONTROL LH	1	N
	0861326-31		. . WHEEL-CONTROL-LH	1	P
	0861326-26		. . WHEEL-CONTROL RH	1	N
	0861326-32		. . WHEEL-CONTROL-RH	1	P
-2	5615012-1		. . COVER-MAP LIGHT	1	N
	5615012-2		. . COVER-MAPLIGHT	1	P
			ATTACHING PARTS		
	MS35206-225		. . SCREW	2	N
			---*---		
-3	0861317-2		. . BRACKET-MAP LIGHT	1	N
-4	2109		. . SOCKET	COH	1	N
-5	1309		. . BULB	COH	1	N
-6	0861328-1		. . SUPPORT ASSY-RHEOSTAT	1	
			ATTACHING PARTS		
	MS35206-230		. . SCREW	2	
	MS21083N06		. . NUT	2	
			---*---		
	MS35489-62		. . GROMMET	1	
-7	E50R1-352A		. . RHEOSTAT	OM	1	
-8	0861329-1		. . KNOB	1	
-9	CM2692-16-38		. . PLUG-BUTTON	1	
-10	5261002-1		. . PLUG	1	
-11	5618104-1		. . CORD	1	N
	5618104-3		. . CORD	1	P
-12	5300305-1		. FACE PLATE ASSY	1	E
	5300306-1		. FACE PLATE ASSY	1	F
	5300306-2		. FACE PLATE ASSY 340 II	1	F
-13	SEE FIG 1		. INSIGNIA-FACE PLATE	1	
-14	5619135-1	*	. PAD-CONTROL WHEEL LH & RH	2	E
	5619135-3		. PAD-CONTROL WHEEL LH & RH	2	F
	5619135-2	*	. PAD-CONTROL WHEEL LH ONLY USE WITH ELECTRIC TRIM AND/OR AUTOPILOT	1	E
	5619135-4		. PAD-CONTROL WHEEL LH ONLY USE WITH ELECTRIC TRIM AND/OR AUTOPILOT	1	F
			ATTACHING PARTS		
-15	MS24693S53		. SCREW	1	
-16	MS35333-38		. WASHER	1	
-17	MS20341-8S		. NUT	1	
			---*---		
-18	T2153		. SWITCH-ELEVATOR TRIM DISENGAGE	CSDC	1	
	CM2692-8-1B		. PLUG BUTTON	1	
-19	0861129-2		. PLACARD-ELEVATOR TRIM & AUTOPILOT WHITE	1	
	0861129-1		. PLACARD-ELEVATOR TRIM & AUTOPILOT BLACK	1	
-20	305-4308		. SWITCH-ELEVATOR TRIM NOSE UP-DOWN	ANEL	1	
	0861354-1		. BUSHING	1	
-21	T2114		. SWITCH-NAV-O-MATIC 400A DISENGAGE	CSDC	1	A
	T20057		. SWITCH-NAV-O-MATIC 400A DISENGAGE	CSDC	1	B
	T20167		. SWITCH-DISENGAGE USE WITH YAW DAMPER	CSDC	1	B
	CM2692-8-1B		. PLUG BUTTON	1	
-22	913		. SWITCH-MICROPHONE	SWIN	1	
-23	0861129-8		. PLACARD-MAP LIGHT WHITE	1	
	0861129-7		. PLACARD-MAP LIGHT BLACK	1	
-24	5361001-15		. COVER ASSY-LH	1	
	5361001-12		. COVER-RH USED WHEN CONTROL WHEEL NOT INSTALLED	1	
	5361001-13		. COVER-RH USED WITH CONTROL WHEEL	1	
			ATTACHING PARTS		
	MS24694S5		. SCREW	3	
	AN960-10		. WASHER	3	
	MS21083N3		. NUT	3	
			---*---		
	5215077-3		. SUPPORT ASSY-COLUMN	1	
-25	5215077-6		. . SUPPORT	1	
-26	5215078-1		. . CLEVIS	1	
			ATTACHING PARTS		
-27	MS21083N3		. . NUT	1	
-28	AN315-3R		. . NUT	1	
			---*---		
-29	MS20200KP3		. . BEARING	3	
			ATTACHING PARTS		
-30	MS27039-1-15		. . SCREW	AR	
-31	MS27039-1-14		. . SCREW	AR	
	AN960-10L		. . WASHER	AR	
	MS21083N3		. . NUT	AR	
			---*---		
-32	MS16624-150		. RETAINER-EXTERNAL	2	
-33	NTA2435		. BEARING	TOR	4	
-34	TRA2435		. RACE	TOR	8	
-35	5015015-15		. TUBE ASSY-LH	1	C
	5015015-16		. TUBE ASSY-LH	1	D
	5215015-5		. TUBE ASSY-RH USED WHEN CONTROL WHEEL NOT INSTALLED	1	
	5015015-15		. TUBE ASSY-RH USE WITH RH CONTROL WHEEL	1	C
	5015015-16		. TUBE ASSY-RH USE WITH RH CONTROL WHEEL	1	D

CONTINUED

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
86 -36	5015015-3	. . SLEEVE	1	
-37	5015017-1	. . SUPPORT-ROLLER	1	
-38	PD5KE9136	. BEARING FAF	8	
-39	5015072-1	. BLOCK-SPRING SUPPORT	4	
	5015072-3	. SPRING	8	
		ATTACHING PARTS		
-40	AN25-31	. BOLT	AR	
	AN320-5	. NUT	AR	
	MS24665-1	. PIN-COTTER	AR	
-41	AN5-13A	. BOLT	AR	
	5015072-2	. WASHER	AR	
	MS21083N5	. NUT	AR	
		---*---		
	5015035-1	. SPROCKET ASSY FSO 5015035-4	1	G
	5015035-4	. SPROCKET ASSY	1	M
	5015035-5	. SPROCKET ASSY	1	K
-42	5015035-3	. . SHAFT-TUBE	1	
-43	5015038-4	. . SLIDE	1	G
	5015038-5	. . SLIDE	1	H
		ATTACHING PARTS		
-44	MS27039-1-12	. . SCREW	1	
		---*---		
-45	5015036-1	. . SHAFT	1	L
	5015036-2	. . SHAFT	1	K
		ATTACHING PARTS		
	MS20365-428	. . NUT	1	L
	MS17826-4	. . NUT	1	K
	MS24665-134	. . PIN-COTTER	1	K
		---*---		
-46	5015037-1	. . SPROCKET	1	
		ATTACHING PARTS		
	AN386-1-6A	. . PIN	1	
	AN975-3	. . WASHER	1	
	MS21042L3	. . NUT	1	
		---*---		
-47	5015032-1	. SLEEVE ASSY-BEARING	1	
	3591-4CNXO-25	. . INSERT HELI	2	
-48	B248	. . BEARING TOR	1	
-49	5015014-1	. PUSH ROD ASSY	2	
		ATTACHING PARTS		
-50	AN4-6A	. BOLT-AFT	1	
-51	AN4-7A	. BOLT-FWD	1	Q
	AN4-7	. BOLT-FWD	1	R
-52	AN960-416	. WASHER-AFT	1	
-53	MS20364-428	. NUT-FWD	1	Q
	MS17825-4	. NUT-FWD	1	R
	MS24665-134	. PIN-COTTER	1	R
		---*---		
	MS21201KP4A	. . BEARING	2	
-54	5015071-1	. PAD ASSY-BEARING	2	
		ATTACHING PARTS		
	MS24694S5	. SCREW	2	S
	MS24694S50	. SCREW	2	T
	MS21083N3	. NUT	2	S
		---*---		
	KS4	. . BEARING FAF	1	
-55	5015026-1	. PAD-BEARING	3	
		ATTACHING PARTS		
	MS27039-1-11	. SCREW	AR	
	MS21044N3	. NUT	AR	
		---*---		
-56	5015027-1	. ARM-ELEVATOR TORQUE TUBE	2	
		ATTACHING PARTS		
	AN386-2-12A	. PIN	AR	
	AN975-3	. WASHER	AR	
	MS21042L3	. NUT	AR	
		---*---		
-57	5015028-1	. QUADRANT ASSY	1	
		ATTACHING PARTS		
	AN386-2-12A	. PIN	1	
	AN975-3	. WASHER	1	
	MS21083N3	. NUT	1	
		---*---		
-58	5015013-18	. WEIGHT	1	
		ATTACHING PARTS		
	MS27039-1-26	. SCREW	4	
	MS21044N3	. NUT	4	
		---*---		
-59	5015013-16	. ARM ASSY-BOB WEIGHT	1	
		ATTACHING PARTS		
	AN386-10-2A	. PIN	1	
	AN975-3	. WASHER	1	
	MS21083N3	. NUT	1	
		---*---		
-60	5360901-5	. TORQUE SHAFT	1	
-61	5360901-22	. GUARD-CABLE	2	J
		ATTACHING PARTS		
	MS27039-0814	. SCREW	1	
	AN960-8	. WASHER	1	
	MS21042L08	. NUT	1	
		---*---		

CONTINUED

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
86 -62	0819011-3	. HOLDER-CHART LH & RH	1	P
-63	0819011-5	. RETAINER LH & RH	1	P
		ATTACHING PARTS		
	MS27039-0805	. SCREW	2	
	AN960-8L	. WASHER	2	
	MS35333-38	. WASHER	2	
		---*---		
		*---WHEN ORDERING THIS PART, ORDER LH AND RH AS MATCHED PAIRS		
		A---340-0001 THRU 340-0150		
		B---340-0151 & ON		
		C---340-0001 THRU 340-0248		
		D---340-0260 & ON		
		E---340-0001 THRU 340-0300		
		F---340-0301 & ON		
		G---340-0001 THRU 340-0308		
		H---340-0309 & ON		
		J---340-0308 & ON & AIRCRAFT MODIFIED BY SK340-9		
		K---340-0523 & ON		
		L---340-0001 THRU 340-0522		
		M---340-0309 THRU 340-0522		
		N---340-0001 THRU 340-0500		
		P---340-0501 & ON		
		Q---340-0001 THRU 340-0337		
		R---340-0338 & ON		
		S---340-0001 THRU 340-0553		
		T---340-0554 & ON		

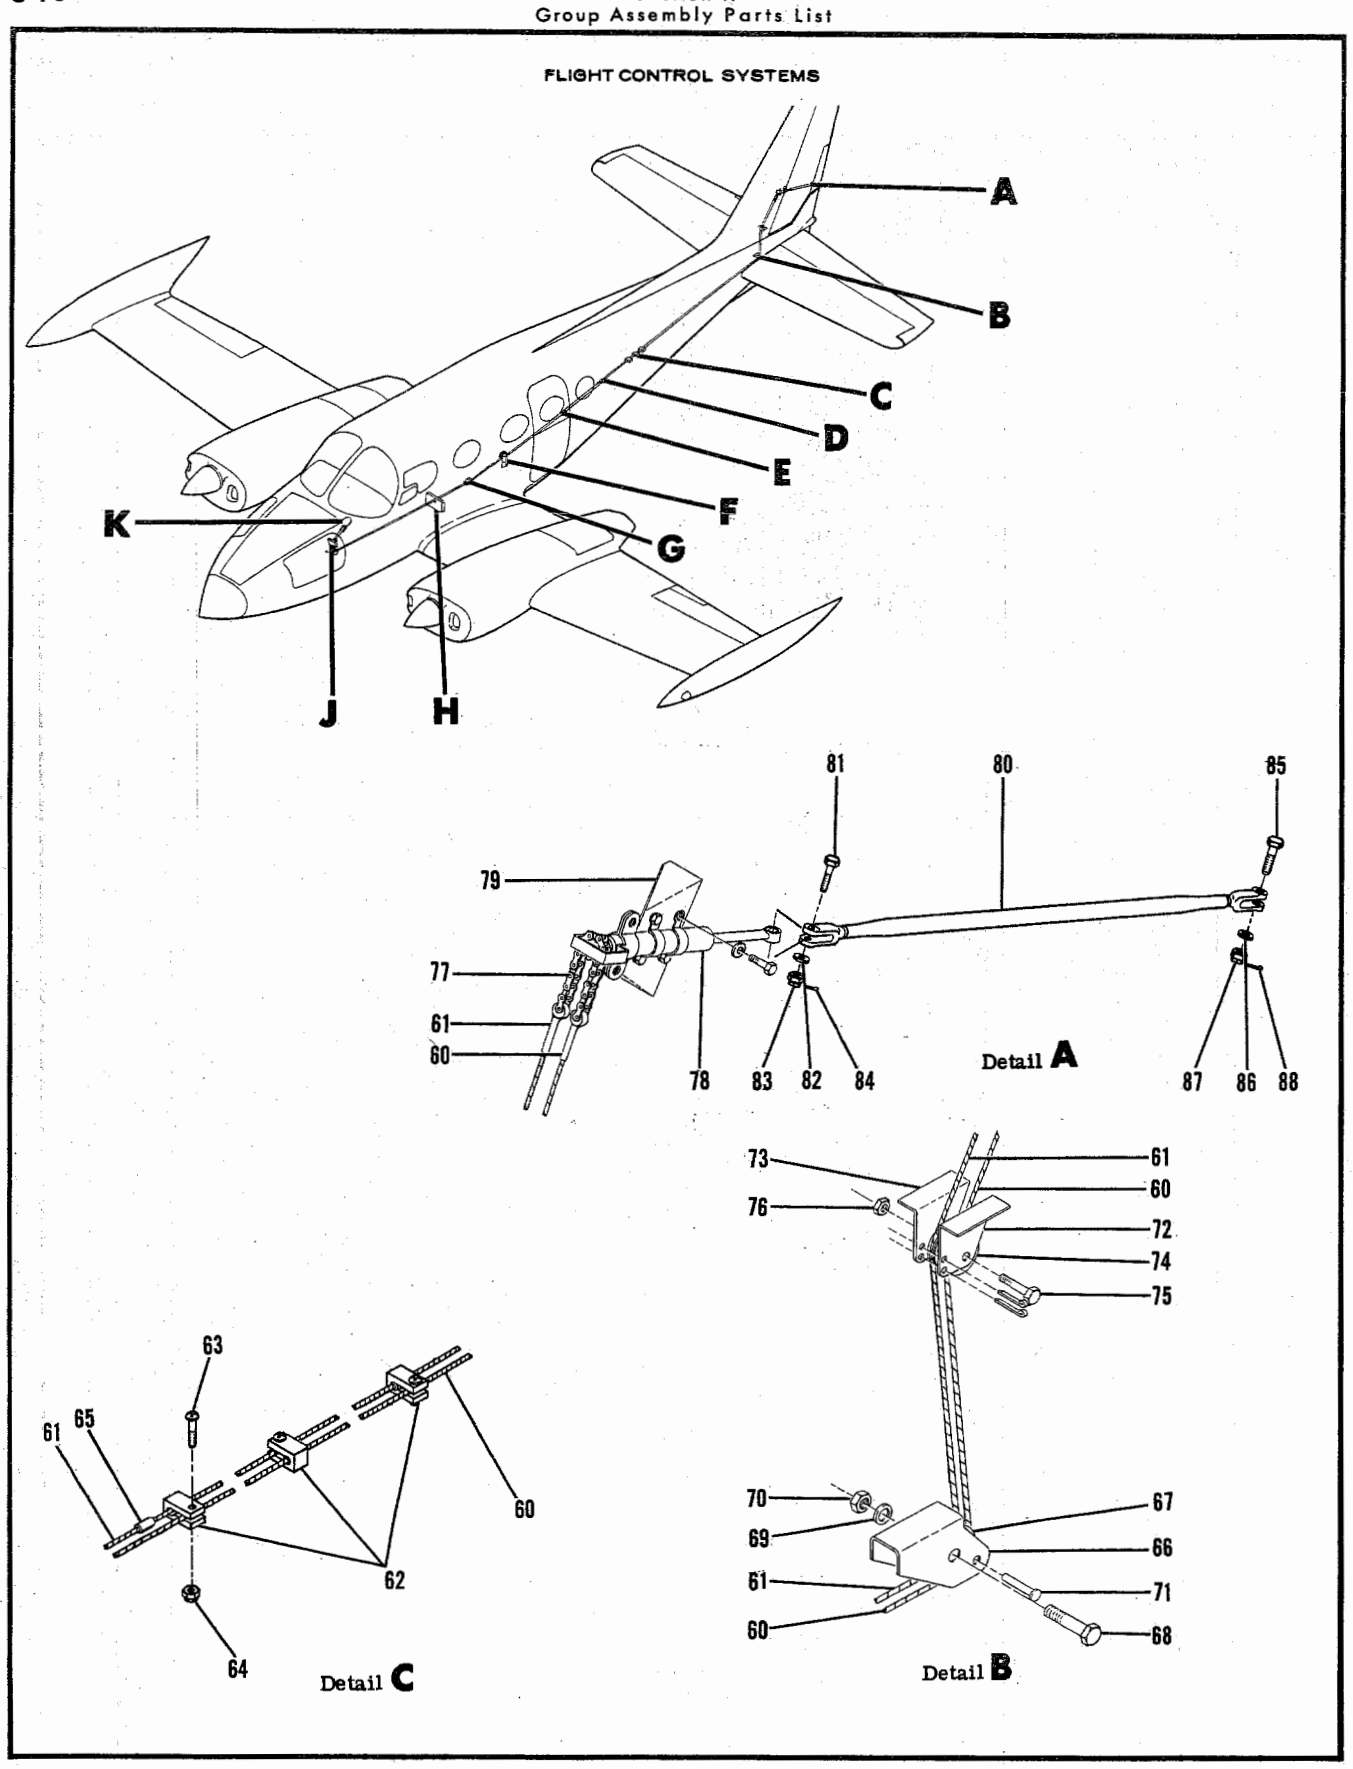

Figure 87. Rudder Trim Control System (Sheet 1 of 2)

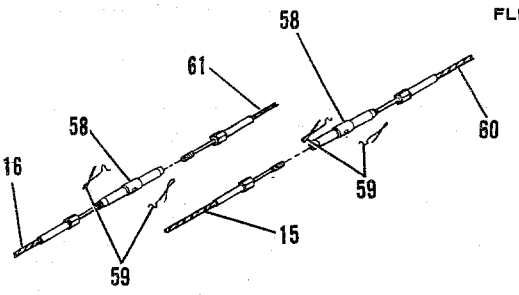

Detail D

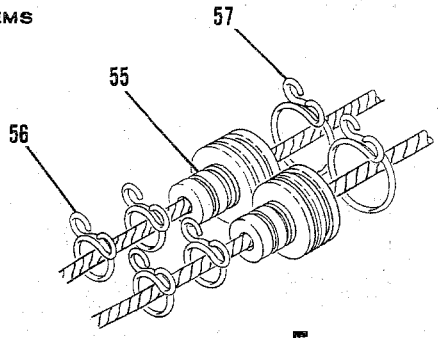

Detail E

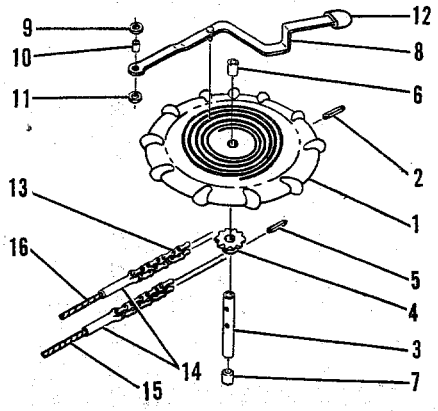

Detail K

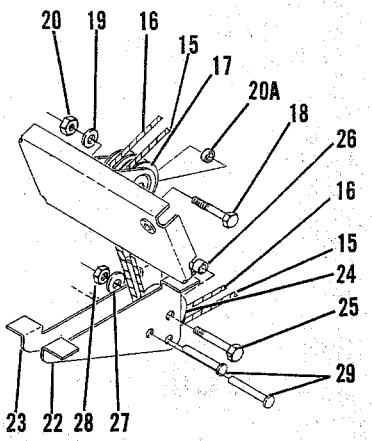

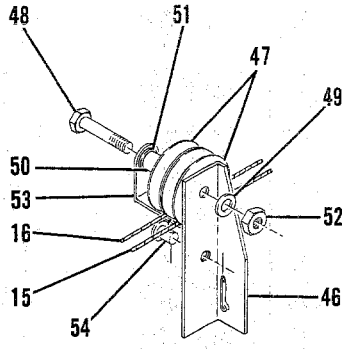

Detail F

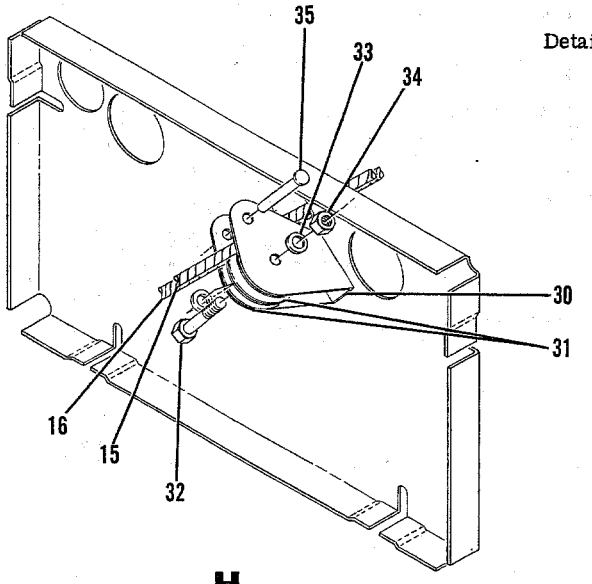

Detail H

Detail J

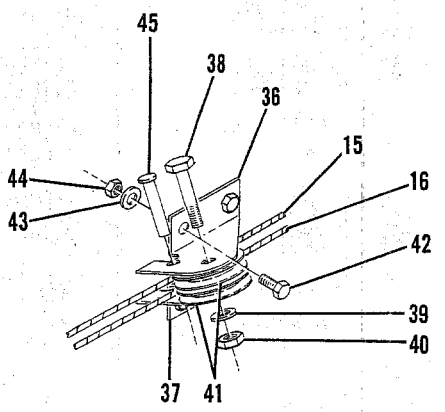

Detail G

D54613003
E14151016R
F14151010
G14151010
H14153013
J14151008
K14153018

Figure 87. Rudder Trim Control System (Sheet 2)

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
87 -		RUDDER TRIM CONTROL SYSTEM	NP	
-1	0861100-165	. WHEEL ASSY-RUDDER TRIM	1	
		ATTACHING PARTS		
-2	MS16562-25	. PIN-ROLL	1	
		---*---		
-3	5015059-2	. SHAFT	1	
-4	0432134-1	. SPROCKET	1	
		ATTACHING PARTS		
-5	MS16562-25	. PIN-ROLL	1	
		---*---		
-6	NAS43DD4-10	. SPACER	1	
-7	NAS43DD4-8	. SPACER	1	
-8	5015060-1	. ARM ASSY-POINTER	1	
		ATTACHING PARTS		
-9	AN960D10	. WASHER	1	
-10	NAS43DD0-12	. SPACER	1	
-11	AN960D4	. WASHER	1	
		---*---		
-12	0861100-127	. TIP-POINTER	1	
-13	0860175-9	. CHAIN-TRIM CONTROL	1	
-14	NAS287-25-2	. TERMINAL	2	
-15	5300400-15	. CABLE ASSY-LH FWD	1	
-16	5300400-16	. CABLE ASSY-RH FWD	1	
-17	S378-1	. PULLEY-UPR STA 111.00	2	
		ATTACHING PARTS		
-18	AN3-11A	. BOLT	1	
-19	AN960-416L	. WASHER	1	
-20	MS21042L3	. NUT	1	
		---*---		
-20A	NAS43HT3-4	. SPACER	1	
-21	NAS427K17	. PIN-CABLE GUARD	2	
-22	5361003-12	. BRACKET FSO 5361003-26	1	A
	5361003-26	. BRACKET	1	B
-23	5361003-13	. BRACKET FSO 5361003-27	1	A
	5361003-27	. BRACKET	1	B
-24	S378-1	. PULLEY-LWR STA 111.00	2	
		ATTACHING PARTS		
-25	AN3-13A	. BOLT	1	
-26	NAS43HT3-4	. SPACER	1	
-27	AN960-10L	. WASHER	1	
-28	MS21042L3	. NUT	1	
		---*---		
-29	NAS427K14	. PIN-CABLE GUARD	1	
-30	5361004-6	. BRACKET	1	
-31	S378-1	. PULLEY STA 171.00	2	
		ATTACHING PARTS		
-32	AN3-11A	. BOLT	1	
-33	AN960-10L	. WASHER	1	
-34	MS21042L3	. NUT	1	
		---*---		
-35	NAS427K13	. PIN-CABLE GUARD	1	
-36	5361003-23	. BRACKET-UPR	1	
-37	5361003-24	. BRACKET-LWR	1	
		ATTACHING PARTS		
-38	AN3-5A	. BOLT	4	
-39	AN960-10L	. WASHER	4	
-40	MS21042L3	. NUT	4	
		---*---		
-41	S378-1	. PULLEY STA 197.14	2	
		ATTACHING PARTS		
-42	AN3-11A	. BOLT	1	
-43	AN960-10L	. WASHER	1	
-44	MS21042L3	. NUT	1	
		---*---		
-45	NAS427K12	. PIN-CABLE GUARD	1	
-46	5361003-18	. BRACKET ASSY	1	C
	5361003-30	. BRACKET ASSY	1	D
		ATTACHING PARTS		
	MS27039-1-09	. SCREW	2	
		---*---		
-47	S378-1	. PULLEY STA 221.00	2	
		ATTACHING PARTS		
-48	AN3-16A	. BOLT	1	
-49	AN960-10L	. WASHER	1	
-50	NAS43DD3-32	. SPACER	1	
-51	AN960-10	. WASHER	2	
-52	MS21042L3	. NUT	1	
		---*---		
-53	5361003-21	. GUARD-CABLE FSO 5361003-35	1	G
	5361003-35	. GUARD-CABLE	1	H
		ATTACHING PARTS		
-54	MS20392-1C7	. PIN	1	
	MS24665-132	. PIN-COTTER	1	
		---*---		
-55	S11K3A	. SEAL-PRESSURE HRML	2	
		ATTACHING PARTS		
-56	S11L31C	. SPRING HRML	4	
-57	S11L74C	. SPRING HRML	2	
		---*---		

CONTINUED

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
87 -58	MS21251B25S	. TURNBUCKLE	2	
-59	MS21256-1	. CLIP-TURNBUCKLE LOCK	4	
-60	5300400-51	. CABLE ASSY-LH AFT	1	
-61	5300400-50	. CABLE ASSY-RH AFT	1	
-62	0411523	. BLOCK	3	
		ATTACHING PARTS		
-63	AN3-6A	. BOLT	1	
-64	MS21042L3	. NUT	1	
		---*---		
-65	0411524	. BUSHING	3	
-66	5361003-2	. BRACKET	1	
-67	MS20219-2	. PULLEY	2	
		ATTACHING PARTS		
-68	AN4-13A	. BOLT	1	
-69	AN960-416L	. WASHER	1	
-70	MS21042L4	. NUT	1	
		---*---		
-71	NAS427K15	. PIN-CABLE GUARD	1	
-72	0831364-1	. BRACKET-LH	1	
-73	0831364-2	. BRACKET-RH	1	
-74	S378-1	. PULLEY	2	
		ATTACHING PARTS		
-75	AN3-10A	. BOLT	1	
-76	MS21042L3	. NUT	1	
	MS24665-285	. PIN-COTTER CABLE GUARD	2	
		---*---		
-77	5000008-57	. CHAIN-RUDDER TRIM	1	
-78	SEE FIG 91	. ACTUATOR ASSY-TRIM TAB	1	
-79	0432126-1	. CLAMP-ACTUATOR ATTACH	3	
		ATTACHING PARTS		
	AN3-5A	. BOLT	2	
	AN960-10L	. WASHER	2	
		---*---		
-80	0832141-7	. ROD ASSY-PUSH PULL WEU 0832141-11	1	E
	0832141-11	. ROD ASSY-PUSH PULL	1	F
	0832141-15	. ROD ASSY-PUSH PULL	1	J
		ATTACHING PARTS		
-81	NAS464P3-8	. BOLT	1	
-82	AN960-10	. WASHER	1	
-83	MS17826-3	. NUT	1	
-84	MS24665-134	. PIN-COTTER	1	
-85	NAS464P4-8	. BOLT	1	
-86	AN960-416L	. WASHER	2	
-87	MS17826-4	. NUT	1	
-88	MS24665-132	. PIN-COTTER	1	
		---*---		

A---340-0001 THRU 340-0007
B---340-0008 & ON
C---340-0001 THRU 340-0111
D---340-0112 & ON
E---340-0001 THRU 340-0500
F---340-0501 THRU 340-0553
G---340-0001 THRU 340-0512
H---340-0513 & ON
J---340-0554 & ON

FLIGHT CONTROL SYSTEMS

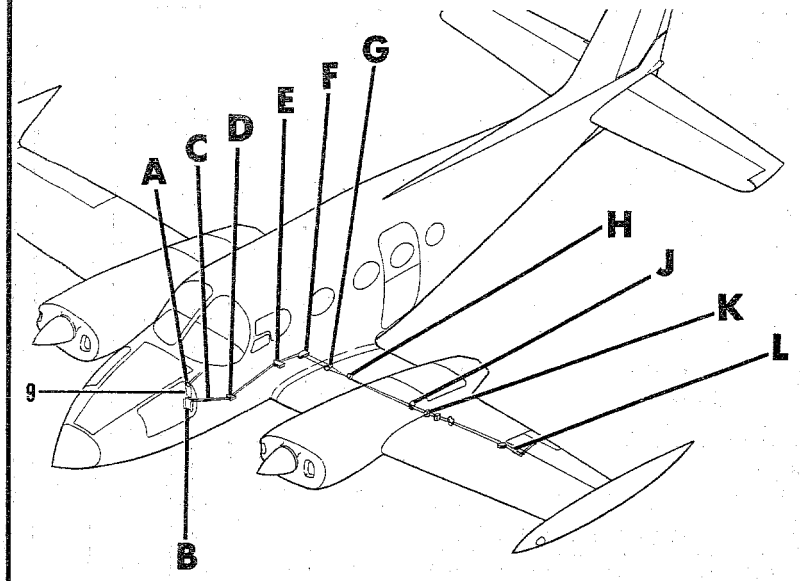

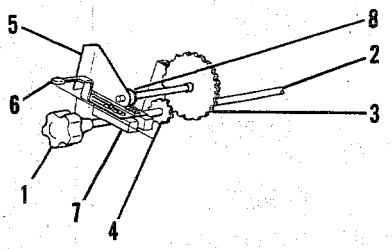

Detail **A**

62 AILERON TRIM TAB ACTUATOR ASSY

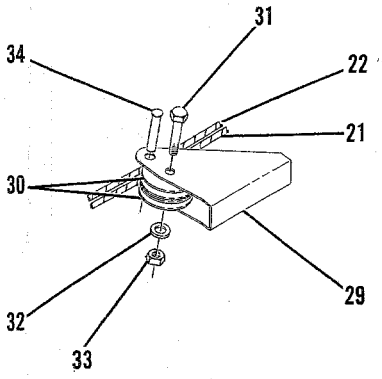

Detail **E**

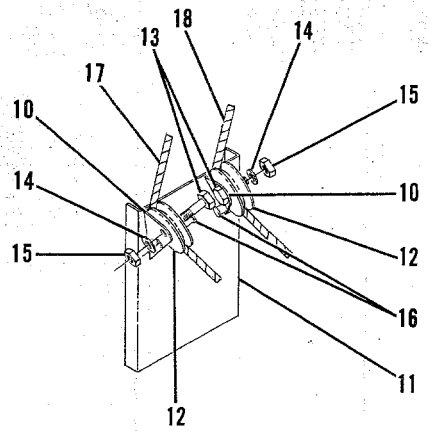

Detail **B**

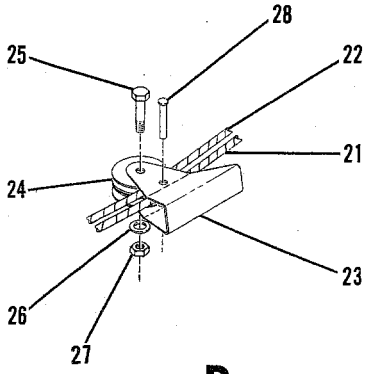

Detail **D**

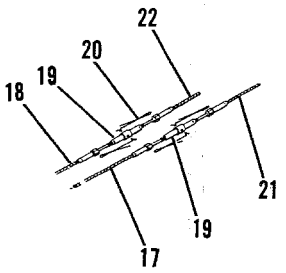

Detail **C**

Figure 88. Aileron Trim Control System (Sheet 1 of 2)

FLIGHT CONTROL SYSTEMS

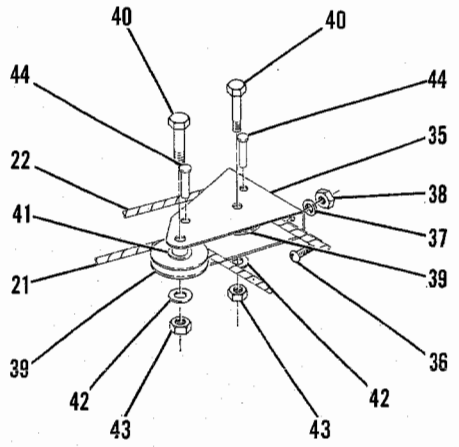

Detail **F**

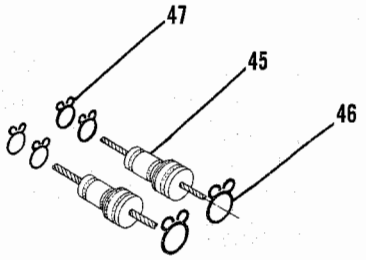

Detail **G**

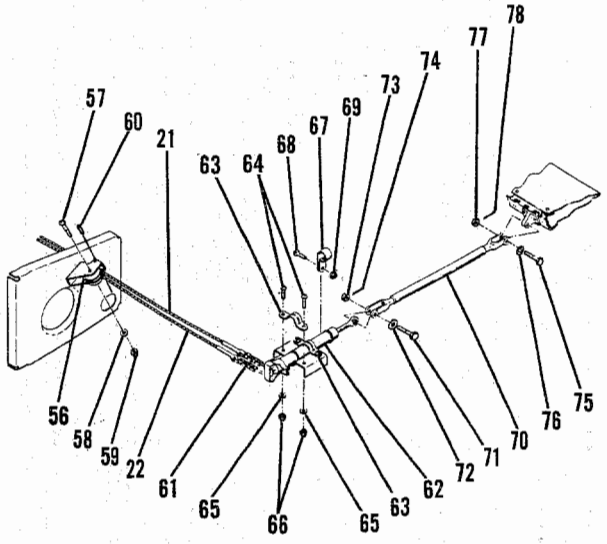

Detail **L**

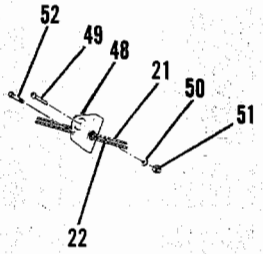

Detail **H**

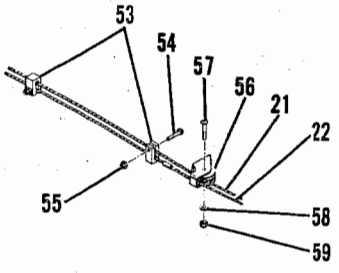

Detail **K**

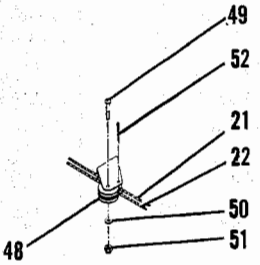

Detail **J**

Figure 88. Aileron Trim Control System (Sheet 2)

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
88 -		AILERON TRIM CONTROL SYSTEM	NP	
-1	5015052-2	. WHEEL-AILERON TRIM	1	
		ATTACHING PARTS		
	MS16562-25	. PIN-ROLL	1	
		---*---		
-2	5015059-1	. SHAFT	1	
-3	5015053-1	. GEAR ASSY	1	
-4	H3222	. SPUR-GEAR BGW	1	
		ATTACHING PARTS		
	MS16562-27	. PIN-ROLL	1	
		---*---		
-5	5015054-5	. POINTER ASSY	1	A
	5015054-7	. POINTER ASSY	1	B
		ATTACHING PARTS		
	MS35206-230	. SCREW	4	
	MS43HT1-4	. SPACER	4	
	AN960-6L	. WASHER	4	
	MS21083N06	. NUT	4	
		---*---		
-6	0861100-127	. TIP-POINTER	1	
-7	5015058-2	. BLOCK-AILERON POINTER	2	
-8	0432134-1	. SPROCKET	1	
		ATTACHING PARTS		
	MS16562-25	. PIN-ROLL	1	
		---*---		
-9	0860175-9	. CHAIN-FWD	1	
-10	5361012-8	. BRACKET-LH & RH	2	
-11	5361012-10	. SUPPORT-BRACKET	2	
-12	S378-1	. PULLEY	2	
		ATTACHING PARTS		
-13	AN3-6A	. BOLT	1	
-14	AN960-10L	. WASHER	1	
-15	MS21042L3	. NUT	1	
		---*---		
-16	NAS427K6	. PIN-CABLE GUARD	2	
-17	5300400-48	. CABLE ASSY-LH FWD	1	
-18	5300400-37	. CABLE ASSY-RH FWD	1	
-19	MS21251B2S	. TURNBUCKLE BODY	2	
-20	MS21256-1	. CLIP-TURNBUCKLE LOCK	2	
-21	5300400-56	. CABLE ASSY-LH AFT	1	
-22	5300400-54	. CABLE ASSY-RH AFT	1	
-23	5361012-6	. BRACKET	1	
-24	S378-1	. PULLEY	2	
		ATTACHING PARTS		
-25	AN3-11A	. BOLT	1	
-26	AN960-10L	. WASHER	1	
-27	MS21042L3	. NUT	1	
		---*---		
-28	NAS427K11	. PIN-CABLE GUARD	1	
-29	5361012-4	. BRACKET	1	
-30	S378-1	. PULLEY	2	
		ATTACHING PARTS		
-31	AN3-11A	. BOLT	1	
-32	AN960-10L	. WASHER	1	
-33	MS21042L3	. NUT	1	
		---*---		
-34	NAS427K11	. PIN-CABLE GUARD	1	
-35	5361012-2	. BRACKET	1	
		ATTACHING PARTS		
-36	MS27039-1-12	. SCREW	3	
-37	AN960-10L	. WASHER HRML	3	
-38	MS21042L3	. NUT HRML	3	
		---*---		
-39	S378-1	. PULLEY HRML	1	
		ATTACHING PARTS		
-40	AN3-11A	. BOLT	1	
-41	NAS43DD3-32	. SPACER	1	
-42	AN960-10L	. WASHER	1	
-43	MS21042L3	. NUT	1	
		---*---		
-44	NAS427K11	. PIN-CABLE GUARD	2	
-45	S11K3A	. SEAL HRML	2	
		ATTACHING PARTS		
-46	S11L74C	. SPRING HRML	2	
-47	S11L31C	. SPRING HRML	4	
		---*---		
-48	S378-1	. PULLEY	4	
		ATTACHING PARTS		
-49	MS27039-1-18	. SCREW	1	
-50	AN960-10L	. WASHER	1	
-51	MS21044N3	. NUT	1	
		---*---		
-52	NAS427K11	. PIN-CABLE GUARD	2	
-53	0411523	. BLOCK	2	
		ATTACHING PARTS		
-54	MS27039-1-13	. SCREW	1	
-55	MS21044N3	. NUT	1	
		---*---		

CONTINUED

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
88 -56	S378-1	. PULLEY	4	
		ATTACHING PARTS		
-57	MS27039-1-18	. SCREW	1	
-58	AN960-10L	. WASHER	1	
-59	MS21044N3	. NUT	1	
		---*---		
-60	NAS427K11	. PIN-CABLE GUARD	2	
-61	5000008-56	. CHAIN-AFT	1	
-62	5025019-1	. ACTUATOR ASSY-AILERON TRIM TAB	1	
-63	0820029-1	. CLIP-ACTUATOR	2	
		ATTACHING PARTS		
-64	AN3-4A	. BOLT	2	
-65	AN960-10L	. WASHER	2	
-66	MS21042L3	. NUT	2	
		---*---		
-67	MS21103D3	. CLAMP	1	
		ATTACHING PARTS		
-68	MS27039-1-08	. SCREW	1	
-69	MS21042L3	. NUT	1	
		---*---		
-70	5025019-1	. PUSH ROD ASSY	1	
		ATTACHING PARTS		
-71	NAS464P3-8	. BOLT ACTUATOR END	1	
-72	AN960-10L	. WASHER ACTUATOR END	1	
-73	MS17826-3	. NUT ACTUATOR END	1	
-74	MS24665-134	. PIN-COTTER ACTUATOR END	1	
-75	NAS464P3-5	. BOLT TAB END	1	
-76	0862100-91	. SPACER TAB END	1	
-77	MS17826-3	. NUT TAB END	1	
-78	MS24665-134	. PIN-COTTER TAB END	1	
		---*---		
		A---340-0001 THRU 340-0070 B---340-0071 & ON		

FLIGHT CONTROL SYSTEMS

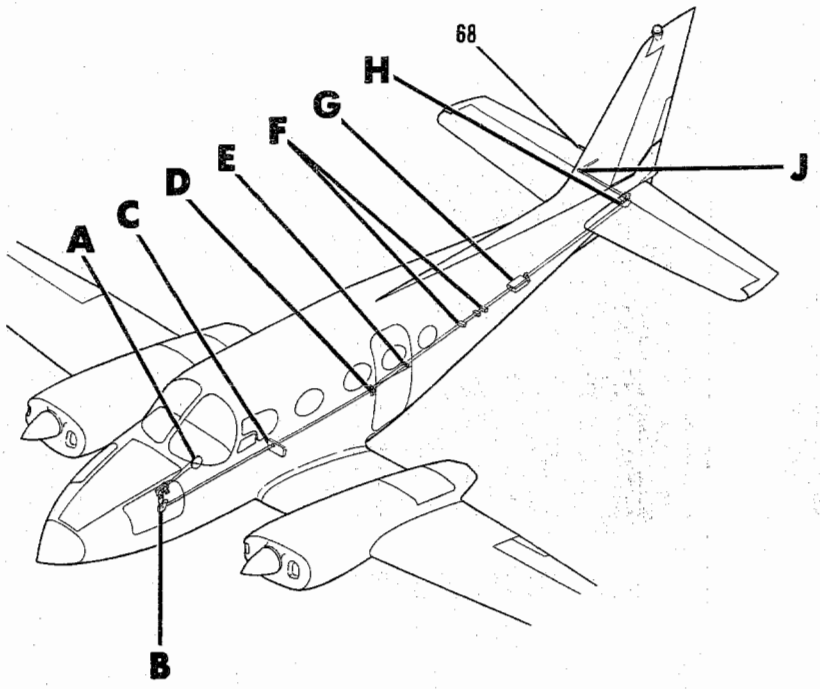

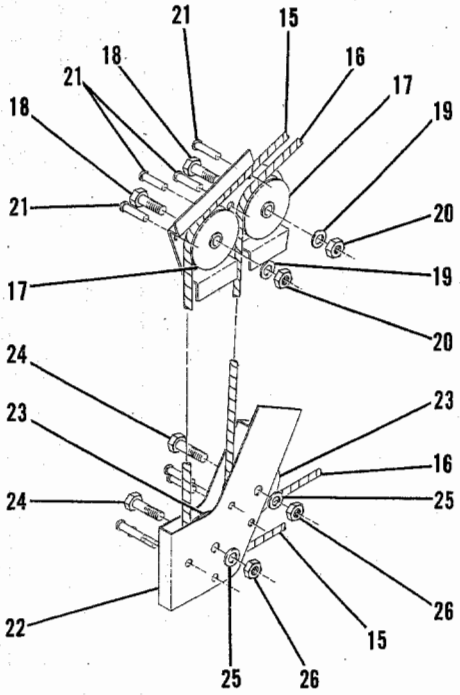

Detail **B**

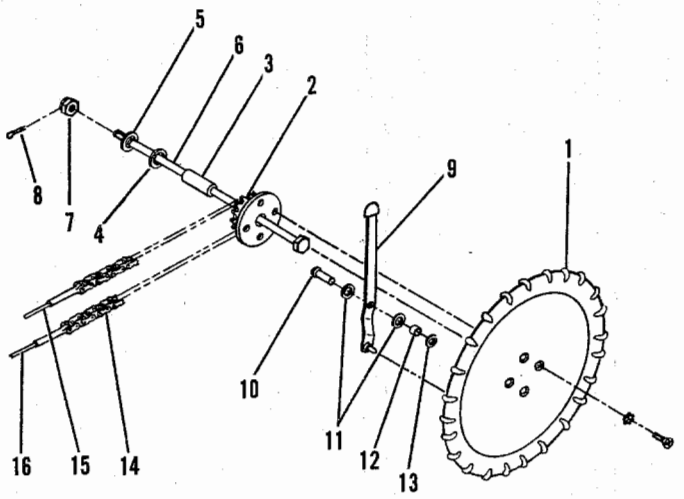

Detail **A**

48 ELECTRIC TRIM ACTUATOR ASSY
63 TRIM TAB ACTUATOR ASSY
68 ELEVATOR STRUCTURE ASSY
69 ELEVATOR TRIM CONTROL WHEEL ASSY

14153005
A51154009
B14152007

Figure 89. Elevator Trim Control System (Sheet 1 of 3)

FLIGHT CONTROL SYSTEMS

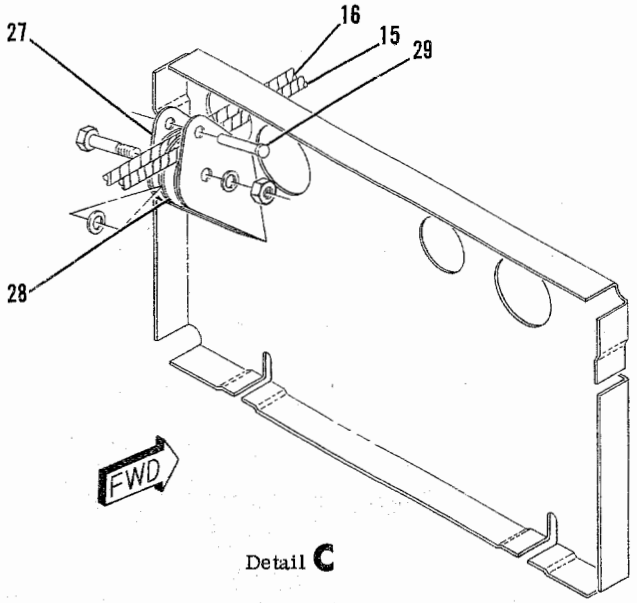

Detail C

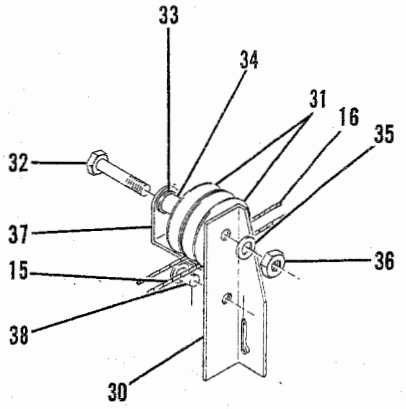

Detail D

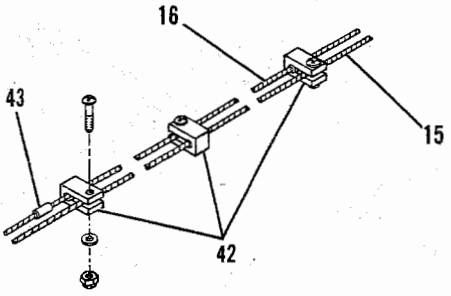

Detail F

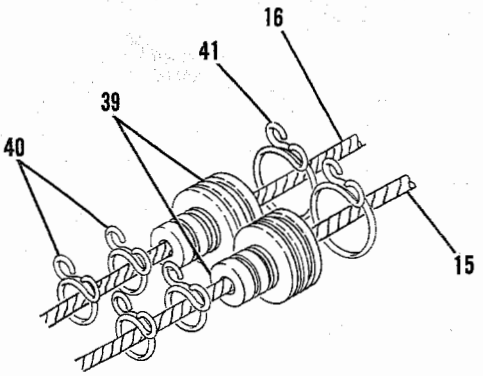

Detail E

C14153013
D14151010
E14151016R
F14153018

Figure 89. Elevator Trim Control System (Sheet 2)

FLIGHT CONTROL SYSTEMS

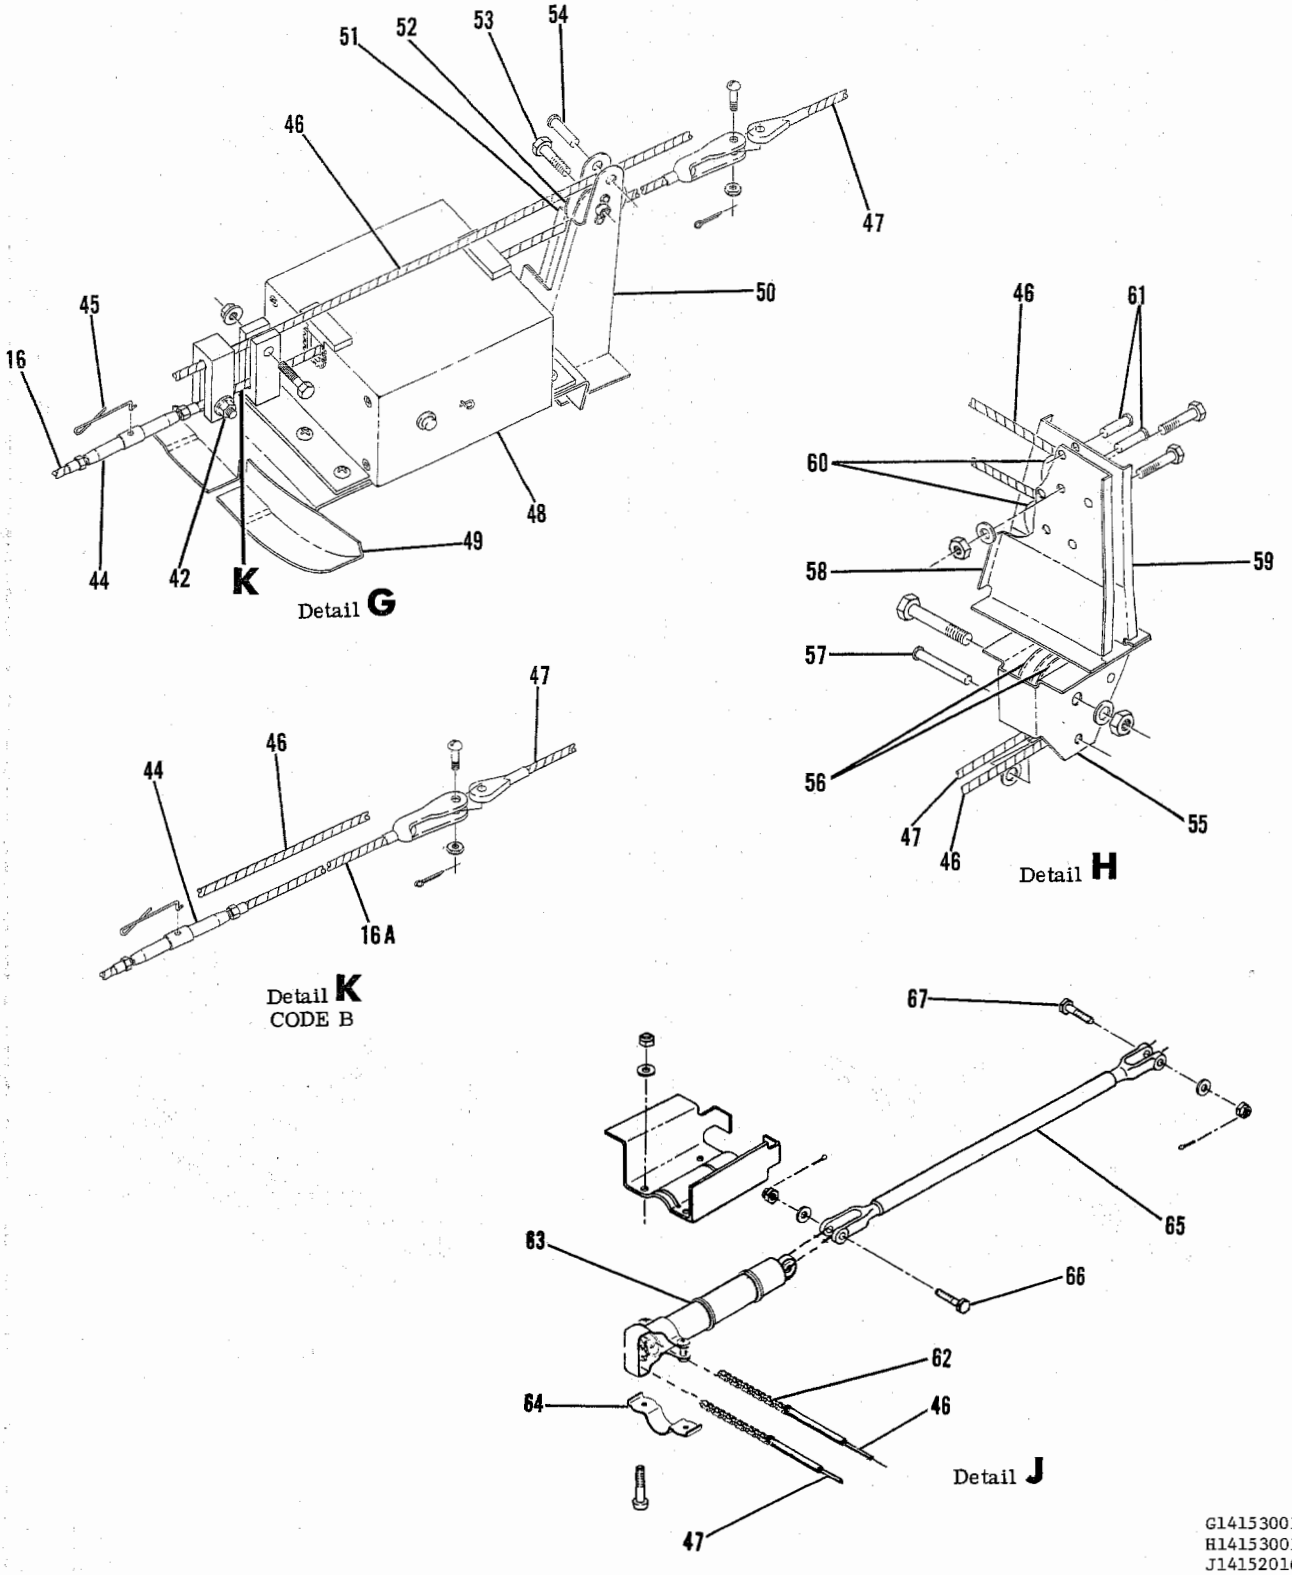

Figure 89. Elevator Trim Control System (Sheet 3)

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
89 -		ELEVATOR TRIM CONTROL SYSTEM	NP	
-1	0861100-164	. WHEEL-CONTROL	1	
		ATTACHING PARTS		
	AN506-632R10	. SCREW	4	
	AN960C10	. WASHER	4	
		---*---		
-2	0861100-44	. SPROCKET	1	
-3	S1003-4A	. BEARING	1	
-4	AN960B516	. WASHER	1	
-5	AN960B516L	. WASHER	1	
-6	AN3-62	. BOLT	1	
-7	MS17826-3	. NUT	1	
-8	MS24665-132	. PIN-COTTER	1	
-9	0861157-1	. ARM-TRIM INDICATOR	1	
		ATTACHING PARTS		
-10	MS20470AD4	. RIVET	1	
-11	AN960D10	. WASHER	2	
-12	NAS43HT0-12	. SPACER	1	
-13	AN960D4	. WASHER	1	
		---*---		
-14	0860175-5	. CHAIN-FWD	1	
-15	5300400-19	. CABLE ASSY-LH FWD	1	
-16	5300400-20	. CABLE ASSY-RH FWD	1	
	5300400-64	. CABLE ASSY-RH MIDDLE	1	C
	5300400-69	. CABLE ASSY-RH MIDDLE	1	D
-16A	5300911-12	. CABLE ASSY-RH USED WITH ELEVATOR ELECTRIC TRIM	1	B
		ATTACHING PARTS		
	AN23-9	. BOLT	1	
	MS17826-3	. NUT	1	
	MS24665-132	. PIN-COTTER	1	
		---*---		
-17	MS20219-2	. PULLEY STA 101.70 & 103.70	2	
		ATTACHING PARTS		
-18	AN4-7A	. BOLT	1	
-19	AN960-416L	. WASHER	1	
-20	MS21042L4	. NUT	1	
		---*---		
-21	NAS427-10	. PIN-CABLE GUARD	4	
-22	5361006-12	. BRACKET	1	
-23	MS20219-2	. PULLEY STA 100.00	2	
		ATTACHING PARTS		
-24	AN4-7A	. BOLT	1	
-25	AN960-416L	. WASHER	1	
-26	MS21042L4	. NUT	1	
		---*---		
	NAS427K8	. PIN-CABLE GUARD	2	
-27	5361004-6	. BRACKET	1	
-28	S378-1	. PULLEY STA 171.00	2	
		ATTACHING PARTS		
	S3-11A	. BOLT	1	
	AN960-10L	. WASHER	1	A
	MS21042L3	. NUT	1	A
		---*---		
-29	NAS427K12	. PIN-CABLE GUARD	1	
-30	5361003-17	. BRACKET ASSY	1	E
	5361003-31	. BRACKET ASSY	1	F
-31	S378-1	. PULLEY STA 221.45	2	
		ATTACHING PARTS		
-32	AN3-16A	. BOLT	1	
-33	AN960-10	. WASHER	2	
-34	NAS43DD3-32	. SPACER	1	
-35	AN960-10L	. WASHER	1	
-36	MS21042L3	. NUT	1	
		---*---		
-37	5361003-21	. GUARD-CABLE WEU 5361003-35	1	H
	5361003-35	. GUARD-CABLE	1	J
		ATTACHING PARTS		
-38	MS20392-1C7	. PIN	1	
	MS24665-132	. PIN-COTTER	1	
		---*---		
-39	S11K3A	. SEAL HRML	2	
		ATTACHING PARTS		
-40	S11L31C	. SPRING-FWD HRML	4	
-41	S11L74C	. SPRING-AFT HRML	2	
		---*---		
-42	0411523	. BLOCK	3	
		ATTACHING PARTS		
	AN3-6A	. BOLT	1	
	MS21042L3	. NUT	1	
		---*---		
-43	0411524	. BUSHING	3	
-44	MS21251B2S	. TURNBUCKLE	2	
-45	MS21256-1	. CLIP-TURNBUCKLE LOCK	2	
	MS21260-S2LH	. TERMINAL	1	

CONTINUED

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
89 -46	5300400-17	. CABLE ASSY-LH AFT	1	
-47	5300400-18	. CABLE ASSY-RH AFT	1	B
	5300400-66	. CABLE ASSY-RH AFT	1	C
	5300400-67	. CABLE ASSY-RH AFT	1	D
-48	SEE FIG 90	. ACTUATOR ASSY-ELECTRIC TRIM	1	
		ATTACHING PARTS		
	MS27039-1-07	. SCREW	6	
		---*---		
-49	5300911-2	. SUPPORT ASSY-ELECTRIC TRIM ACTUATOR	1	
-50	5300911-11	. BRACKET-PULLEY LH	1	
-51	5300911-5	. BRACKET ASSY-PULLEY RH	2	
-52	S378-1	. PULLEY-ELECTRIC TRIM STA 330.00	1	
		ATTACHING PARTS		
-53	AN3-6A	. BOLT	1	
		---*---		
-54	NAS427K6	. PIN-CABLE GUARD	1	
-55	5361006-4	. BRACKET-LWR	1	
-56	MS20219-2	. PULLEY-LWR STA 358.36	2	
		ATTACHING PARTS		
	AN4-14A	. BOLT	1	
	AN960-416L	. WASHER	2	
	MS21042L4	. NUT	1	
		---*---		
-57	NAS427K17	. PIN-CABLE GUARD	1	
-58	5361006-2	. BRACKET-UPR FWD	1	
-59	5361006-3	. BRACKET-UPR AFT	1	
-60	S378-1	. PULLEY-UPR STA 358.36	2	
		ATTACHING PARTS		
	MS27039-1-19	. BOLT	1	
	AN960-10L	. WASHER	1	
	MS21042L3	. NUT	1	
		---*---		
-61	NAS427K8	. PIN-CABLE GUARD	2	
-62	0860175-5	. CHAIN-AFT	1	
-63	SEE FIG 91	. ACTUATOR ASSY-TRIM TAB	1	
		ATTACHING PARTS		
-64	0432126	. CLAMP	2	
	AN3-4A	. BOLT	4	
	AN960-10L	. WASHER	4	
		---*---		
-65	0832141-5	. PUSH ROD ASSY	1	K
	0832141-16	. PUSH ROD ASSY	1	L
		ATTACHING PARTS		
-66	AN3-7A	. BOLT ACTUATOR END	1	
	AN960-10L	. WASHER ACTUATOR END	1	
	MS17826-3	. NUT ACTUATOR END	1	
	MS24665-134	. PIN-COTTER ACTUATOR END	1	
-67	NAS464P3-8	. BOLT TAB END	1	
	AN960-10L	. WASHER TAB END	1	
	MS17826-3	. NUT TAB END	1	
	MS24665-132	. PIN-COTTER TAB END	1	
		---*---		
-68	SEE FIG 45	. ELEVATOR STRUCTURE INSTL	REF	
-69	SEE FIG 86	. CONTROL WHEEL-ELEVATOR TRIM	REF	

A---340-0001 THRU 340-0012
B---340-0001 THRU 340-0060
340-0062 THRU 340-0064
C---340-0061
340-0065 THRU 340-0079
D---340-0080 & ON
E---340-0001 THRU 340-0111
F---340-0112 & ON
G---340-0061, 340-0065 & ON
H---340-0001 THRU 340-0512
J---340-0513 & ON
K---340-0001 THRU 340-0553
L---340-0554 & ON

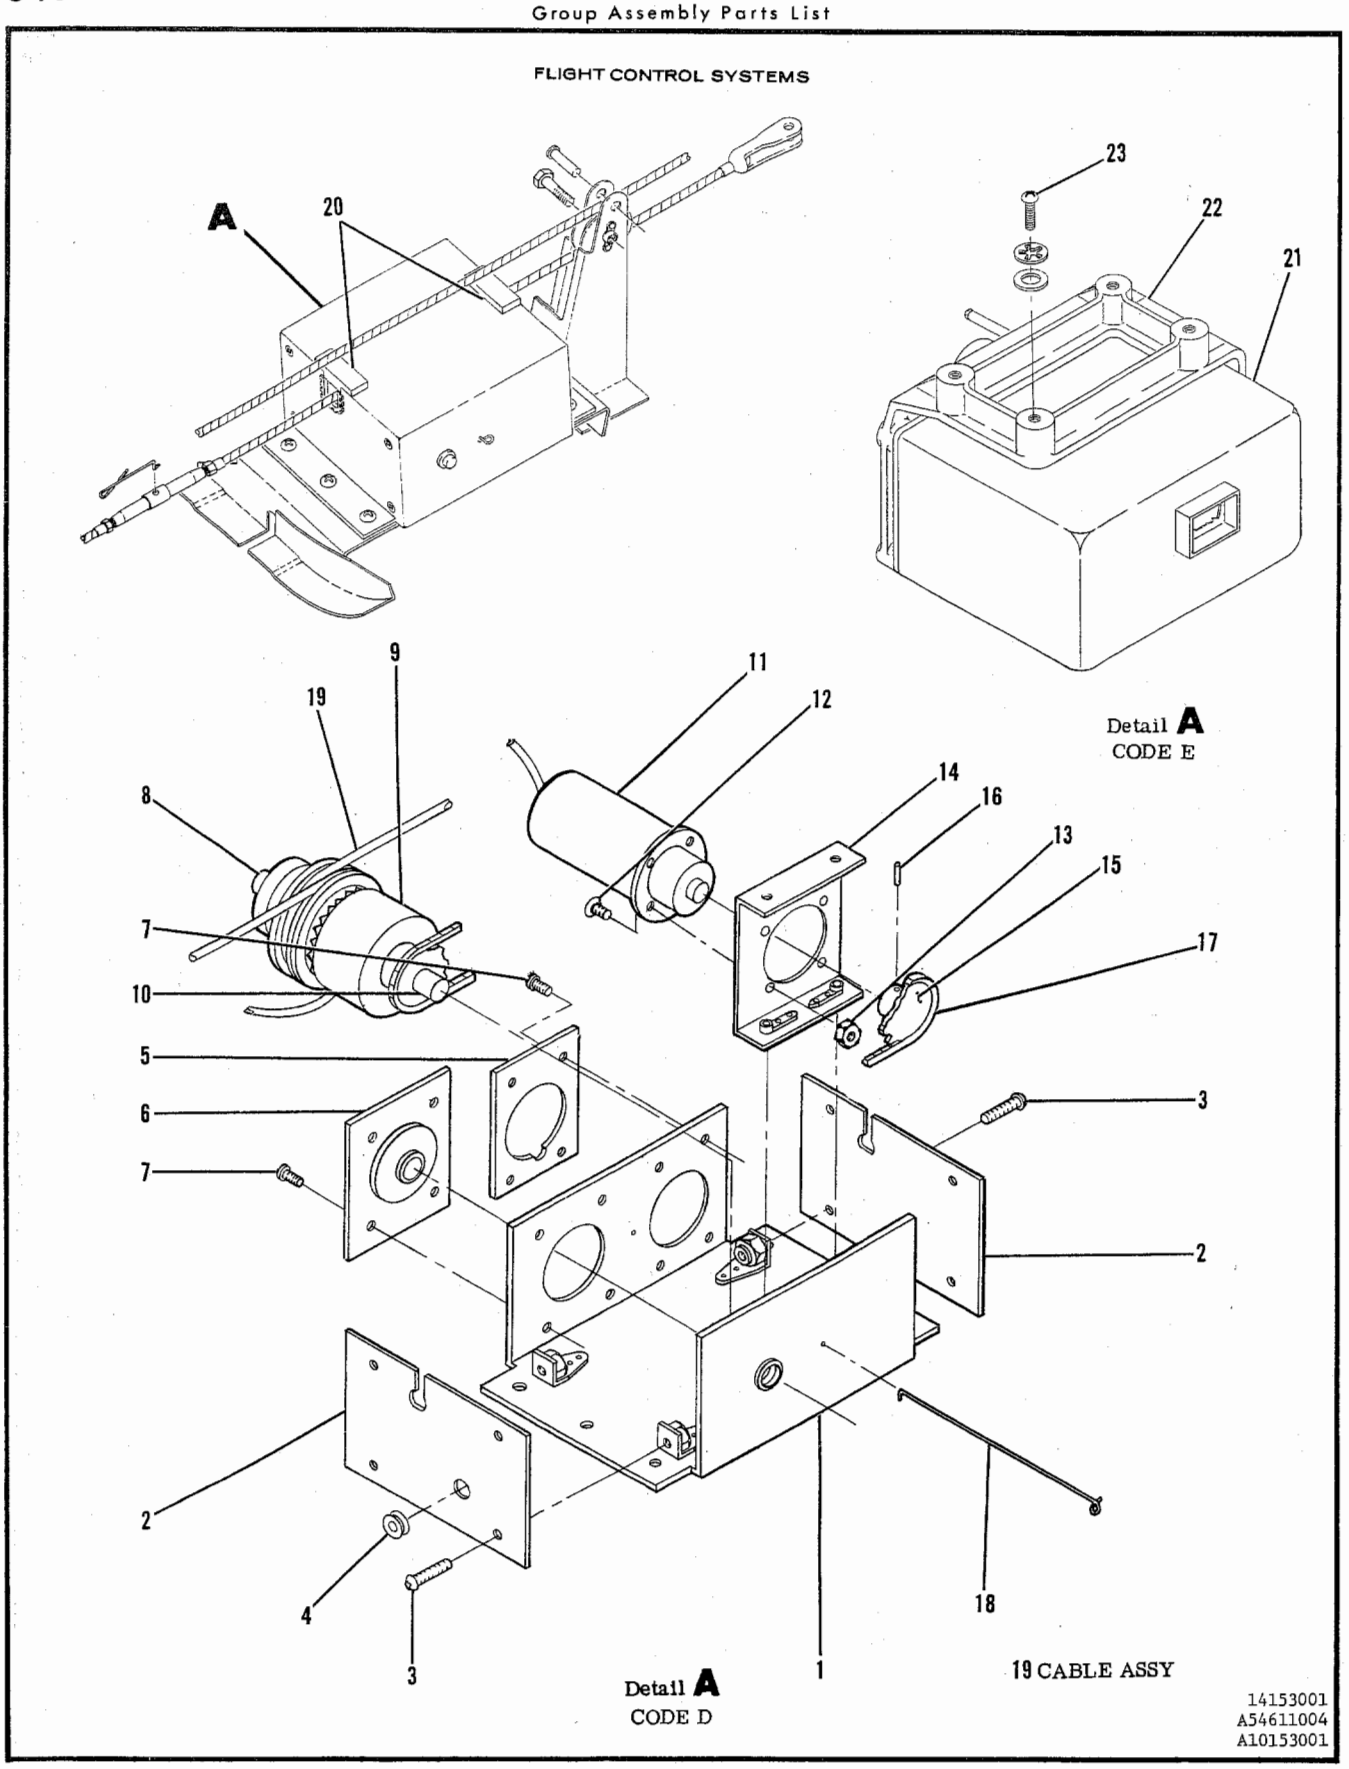

Figure 90. Electric Trim Actuator Assembly

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
90 -		ELECTRIC TRIM TAB ACTUATOR ASSEMBLIES	NP	
	5115231-15	. ELECTRIC TRIM ACTUATOR ASSY	1	A
	5115231-16	. ELECTRIC TRIM ACTUATOR ASSY	1	B
	5115231-17	. ELECTRIC TRIM ACTUATOR ASSY	1	C
-1	1560322-1	. . HOUSING ASSY-ACTUATOR	1	D
	S1004-44A	. . . BEARING	1	
-2	5115233-1	. . COVER-ACTUATOR	2	
		ATTACHING PARTS		
-3	MS35206-244	. . SCREW	8	
		---*---		
-4	MS35489-4	. . GROMMET	1	
-5	1560322-18	. . COVER ASSY-MOTOR	1	
-6	1560322-5	. . COVER ASSY-CLUTCH	1	
		ATTACHING PARTS		
-7	MS35265-41	. . SCREW	8	
		---*---		
-8	NAS76A4-009	. . BUSHING	1	
-9	1560321-1	. . CLUTCH ASSY	1	
	1560323-1	. . . CLUTCH	1	
	1560321-2	. . . SHAFT	1	
	1560321-3	. . . DRUM ASSY	1	
	S1003-84	. . . . BEARING	1	
	1560321-9	. . . SPRING	1	
	27968	. . . SPRING ALT FOR 1560321-9	ARC	1
	1560321-4	. . . WASHER	1	
	1560321-10	. . . NUT	2	
	28393	. . . NUT ALT FOR 1560321-10	2	
	1560321-6	. . . SPROCKET	1	
		ATTACHING PARTS		
	MS24693S3	. . . SCREW	3	
		---*---		
-10	NAS76A4-004	. . BUSHING	1	
	5115231-10	. . MOTOR ASSY	1	
-11	9910059-2	. . . MOTOR	1	
		ATTACHING PARTS		
-12	MS35206-244	. . . SCREW	4	
-13	MS21042L08	. . . NUT	4	
		---*---		
-14	1560322-9	. . . SUPPORT-MOTOR	1	
-15	1560322-13	. . . SPROCKET	1	
		ATTACHING PARTS		
-16	NAS561P4-8	. . . PIN	1	
		---*---		
-17	1560322-15	. . CHAIN ASSY	1	
-18	1560322-17	. . CABLE GUARD	1	
-19	5300400-18	. . CABLE ASSY	REF	A
	5300911-14	. . CABLE ASSY	1	B
	5300911-16	. . CABLE ASSY	1	C
-20	5115232-1	. . BLOCK-RUB	2	
-21	44430-2848	. ACTUATOR-ELEVATOR TRIM	ARC	1 E
-22	44575-2502	. MOUNT-ACTUATOR	ARC	1 F
		ATTACHING PARTS		
-23	MS35206-228	. SCREW	4	F
		---*---		

A---340-0001 THRU 340-0060, 340-0062 THRU 340-0064
B---340-0061, 340-0065 THRU 340-0079
C---340-0080 TO 340A0001
D---340-0001 TO 340A0001
E---340A0001 & ON

FLIGHT CONTROL SYSTEMS

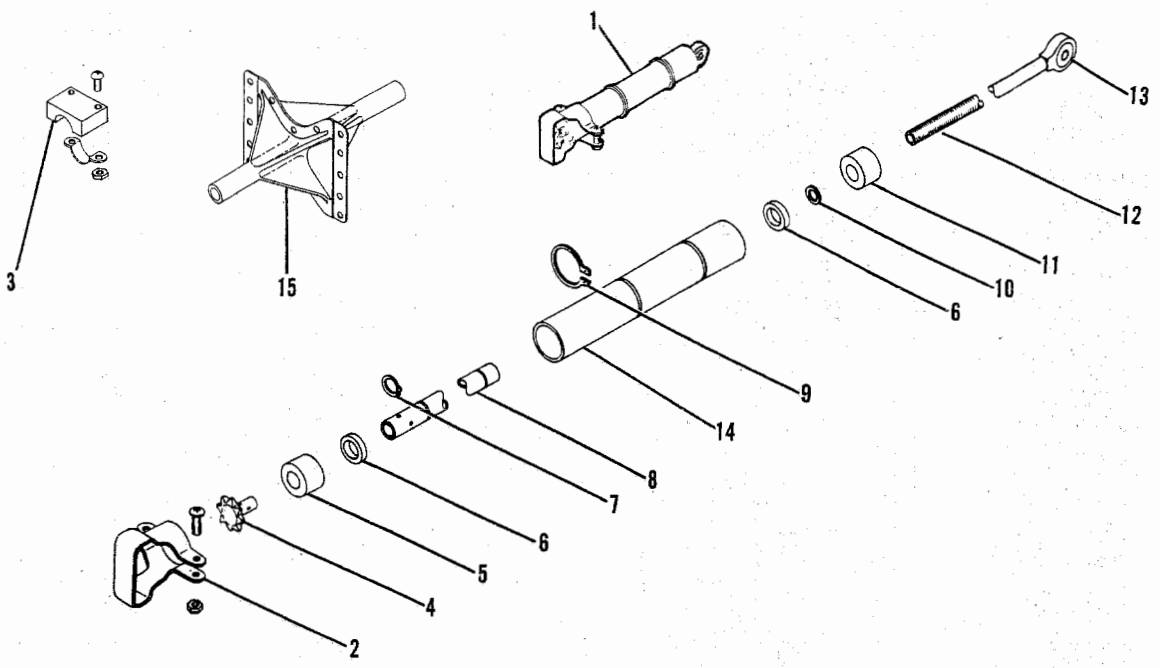

Figure 91. Trim Tab Actuator Assemblies

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
91 -		TRIM TAB ACTUATOR ASSEMBLIES	NP	
-1	1260074-1	. ACTUATOR ASSY-ELEVATOR TRIM TAB	1	
	1260074-3	. ACTUATOR ASSY-AILERON TRIM TAB	1	
	0310293-7	. ACTUATOR ASSY-RUDDER TRIM TAB FSO 1260074-6	1	A
	1260074-6	. ACTUATOR ASSY-RUDDER TRIM TAB	1	B
		ATTACHING PARTS		
	MS35206-245	. SCREW-GUARD	2	
	MS21042L08	. NUT-GUARD	2	
	5115210-4	. CLAMP-GUIDE BLOCK	1	
	MS27039-1-19	. SCREW-GUIDE BLOCK	2	
	AN960-10L	. WASHER-GUIDE BLOCK	2	
	MS21042L3	. NUT-GUIDE BLOCK	2	
		---*---		
-2	0310422-1	. . GUARD-ROLLCHAIN USED ON 1260074-3	1	
-3	5115210-3	. . BLOCK-GUIDE USED ON 0310293-7	1	
-4	0310332	. . SPROCKET-ROLL CHAIN	1	
	0310332	. . SPROCKET-ROLL CHAIN USED ON 0310293-7	1	
		ATTACHING PARTS		
	COML	. . PIN-GROOV	2	
	NAS561P3-7	. . PIN-SPRING ALT FOR 3/32X1/2 GROOV-PIN	2	
		---*---		
-5	0310297-1	. . BEARING-ACTUATOR	1	
		ATTACHING PARTS		
	COML	. . PIN-GROOV 1/16X5/8	2	
		---*---		
-6	0310295	. . COLLAR-ACTUATOR	1	
	0310295	. . COLLAR-ACTUATOR USED ON 0310293-7	2	
-7	MS16624-37	. . RETAINER RING-INTERNAL	2	
-8	1260049-1	. . SCREW-INTERNAL THREAD USED ON 1260074-1 1260074-3	1	
	0813277-1	. . SCREW-INTERNAL THREAD USED ON 1260074-6	1	
-9	MS16624-81	. . RETAINER RING-OUTSIDE USED ON 1260074-1 & 1260074-3	1	
-10	AN6227B5	. . PACKING-ACTUATOR	1	
	AN6227-5	. . PACKING-ACTUATOR USED ON 0310293-7	1	
-11	0310298-1	. . BEARING-ACTUATOR	1	
		ATTACHING PARTS		
	COML	. . PIN-GROOV 1/16X5/8	2	
		---*---		
-12	0310362-5	. . SCREW ASSY-ACTUATOR USED ON 1260074-1	1	
	0310362-7	. . SCREW ASSY-ACTUATOR USED ON 1260074-3	1	
	5115212-1	. . SCREW ASSY USED ON 0310293-7	1	
-13	PN3A	. . BEARING	TOR	
-14	0310296	. . HOUSING USED ON 1260074-3 AND 1260074-1	1	
-15	5115207-2	. . HOUSING USED ON 0310293-7	1	
		A---340-0001 THRU 340-0087 B---340-0088 & ON		

FLAP CONTROL SYSTEM

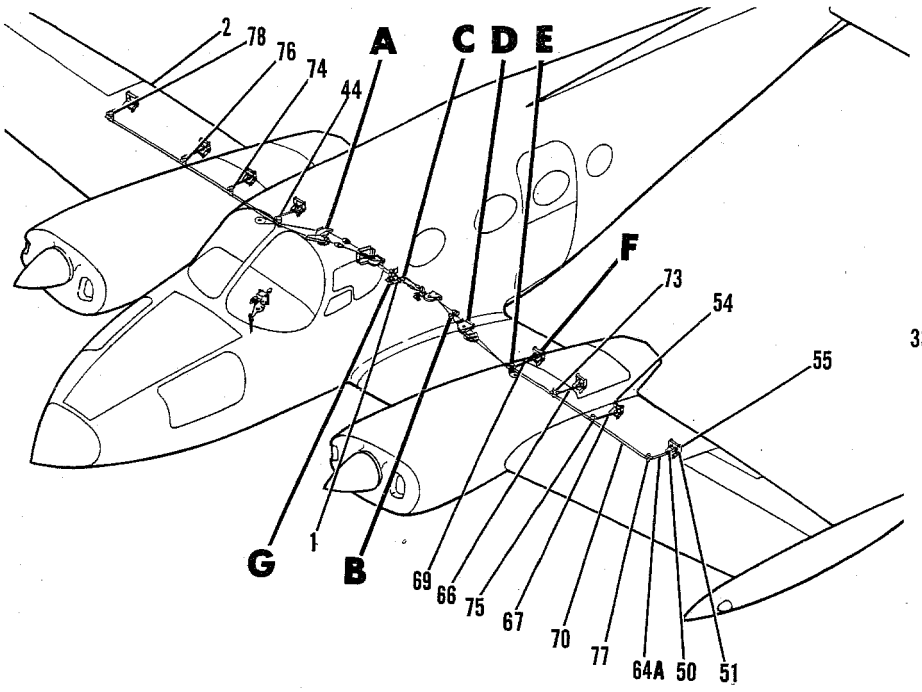

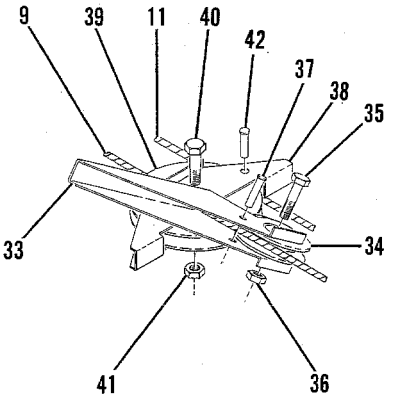

Detail **A**

1 FLAP ACTUATOR & REDUCTION UNIT INSTL

2 FLAP STRUCTURE INSTL

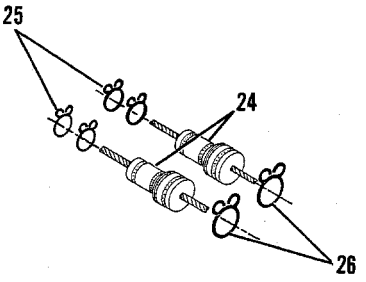

Detail **B**

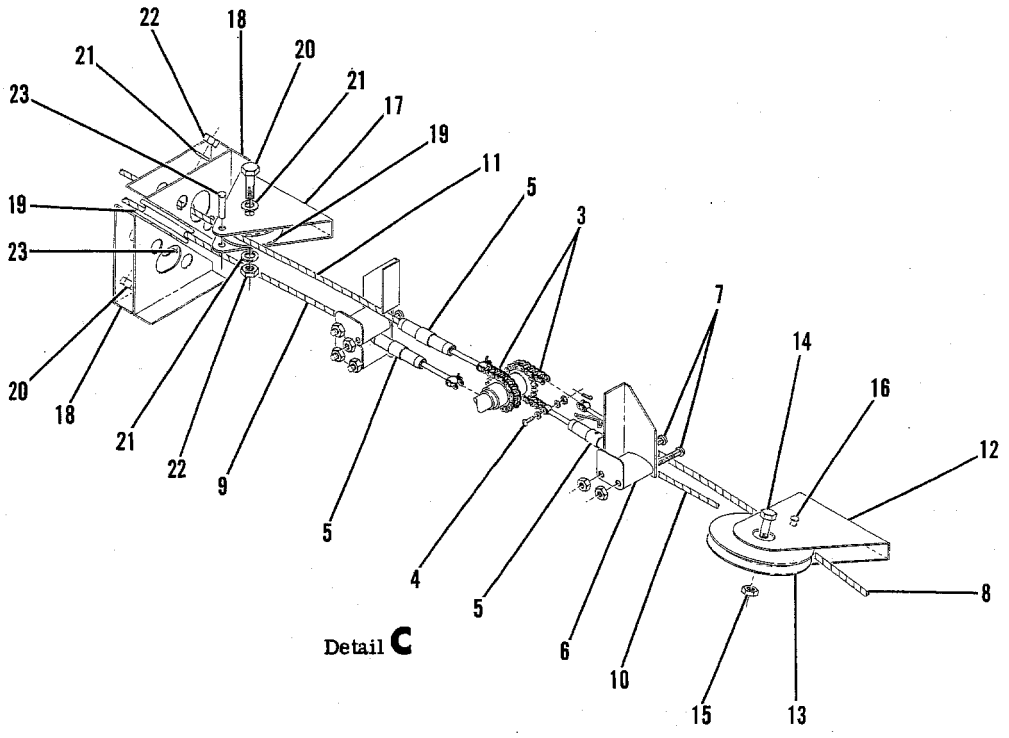

Detail **C**

14153003
A14151013
B51612006
C14154002

Figure 92. Flap Control System (Sheet 1 of 2)

FLAP CONTROL SYSTEM

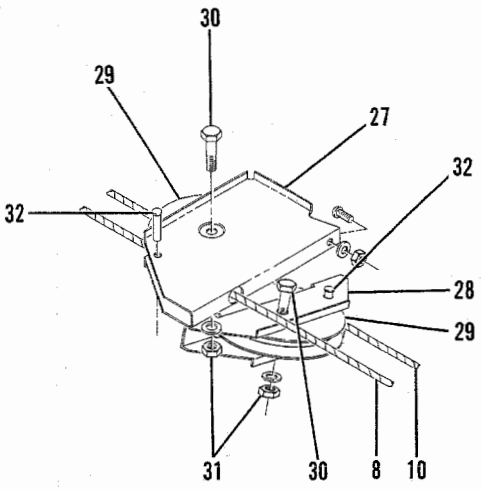

Detail **D**

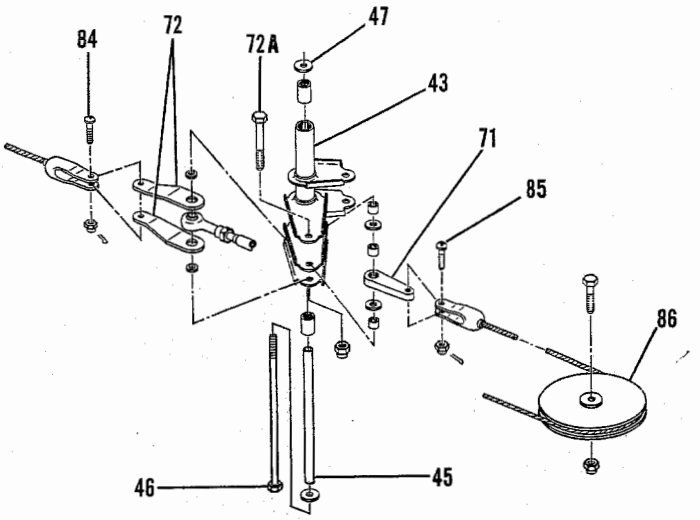

Detail **E**

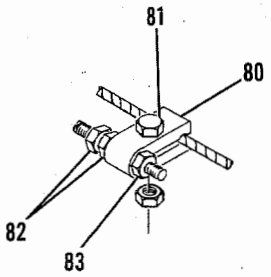

Detail **G**

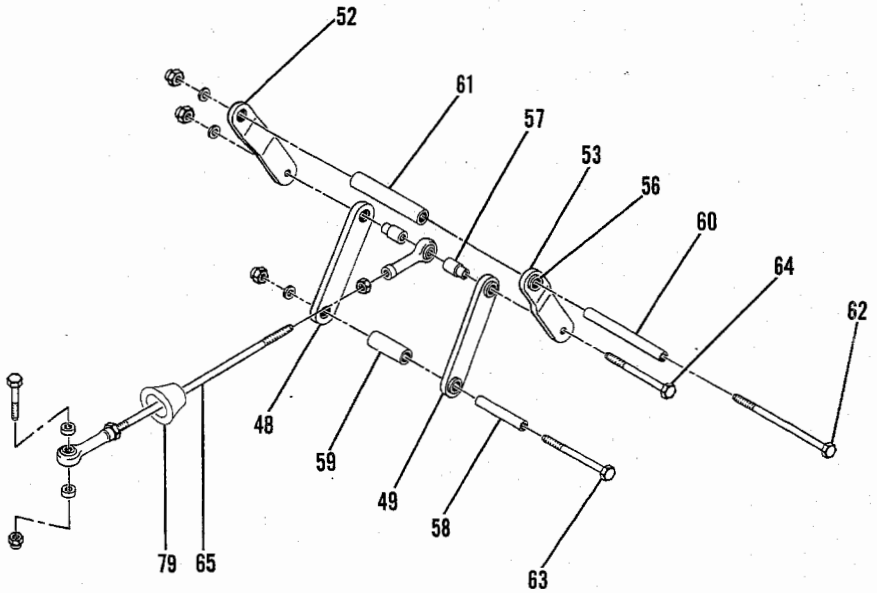

Detail **F**

D14151014
E14152014
F51154006
G14151012

Figure 92. Flap Control System (Sheet 2)

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
92 -		FLAP CONTROL SYSTEM	NP	
-1	SEE FIG 93	. FLAP ACTUATOR & REDUCTION UNIT INSTL	1	
-2	SEE FIG 39	. FLAP STRUCTURE INSTL	REF	
-3	5000008-59	. CHAIN-FLAP CONTROL LH & RH	2	
		ATTACHING PARTS		
-4	AN21-11	. BOLT	2	
	AN960-6	. WASHER	4	
	AN320-1	. NUT	2	
	MS24665-3	. PIN-COTTER	2	
		---*---		
-5	MS21251B5S	. TURNBUCKLE LH & RH	4	
	CM2662-35	. TERMINAL LH & RH	4	
	MS21256-1	. CLIP-TURNBUCKLE LOCK LH & RH	4	
-6	5011549-1	. FAIRLEAD-LH	1	
	5011549-1	. FAIRLEAD-RH	2	
	5011550-1	. GUIDE-FLAP CABLE	6	
		ATTACHING PARTS		
-7	MS35219-62	. SCREW	2	
	MS21044D3	. NUT	2	
		---*---		
-8	5360000-17	. CABLE ASSY-LH UPR FLAP RETURN	1	
-9	5360000-18	. CABLE ASSY-RH LWR FLAP RETURN	1	
-10	5360000-15	. CABLE ASSY-LH LWR FLAP EXTEND	1	
-11	5360000-16	. CABLE ASSY-RH UPR FLAP EXTEND	1	
-12	5360000-30	. BRACKET	1	
-13	S378-4	. PULLEY-LH	1	
		ATTACHING PARTS		
-14	AN4-10A	. BOLT	1	
-15	MS21045L4	. NUT	1	
		---*---		
-16	NAS427K11	. PIN-CABLE GUARD LH	1	
-17	5360000-10	. BRACKET	1	
-18	5360000-13	. BRACKET LWR FSD 5360000-35	1	E
	5360000-13	. BRACKET UPR FSD 5360000-36	1	E
	5360000-35	. BRACKET-LWR	1	E
	5360000-37	. BRACKET-LWR	1	G
	5360000-36	. BRACKET-UPR	1	E
	5360000-38	. BRACKET-UPR	1	G
-19	S378-3	. PULLEY-RH	2	
		ATTACHING PARTS		
-20	AN4-10A	. BOLT	1	
-21	AN960-416L	. WASHER	2	
-22	MS21045L4	. NUT	1	
		---*---		
-23	NAS427K11	. PIN-CABLE GUARD RH	1	
		---*---		
-24	S11K4R	. SEAL-LH & RH HRML	4	
		ATTACHING PARTS		
-25	S11L61C	. SPRING HRML	2	
-26	S11L62C	. SPRING HRML	1	
		---*---		
-27	5360000-12	. BRACKET-LH INBD	1	
-28	5011575-1	. BRACKET-LH OUTBD	1	
-29	S378-4	. PULLEY-LH	2	
		ATTACHING PARTS		
-30	AN4-10A	. BOLT	1	
-31	MS21045L4	. NUT	1	
		---*---		
-32	NAS427K11	. PIN-CABLE GUARD LH	1	
-33	5360000-27	. BRACKET-RH INBD	1	
-34	S378-3	. PULLEY-RH	1	
		ATTACHING PARTS		
-35	AN4-10A	. BOLT	1	
-36	MS21045L3	. NUT	1	
		---*---		
-37	NAS427K11	. PIN-CABLE GUARD RH	1	
-38	5011575-1	. BRACKET-RH OUTBD	1	
-39	S378-4	. PULLEY-RH	1	
		ATTACHING PARTS		
-40	AN4-10A	. BOLT	1	
-41	MS21045L4	. NUT	1	
		---*---		
-42	NAS427K11	. PIN-CABLE GUARD RH	1	
-43	5025005-1	. BELLCRANK ASSY-LH	1	C
	5025005-9	. BELLCRANK ASSY-LH WEU 5025005-17	1	D
	5025005-17	. BELLCRANK ASSY-LH	1	H
-44	5025005-2	. BELLCRANK ASSY-RH	1	C
	5025005-10	. BELLCRANK ASSY-RH WEU 5025005-16	1	D
	5025005-16	. BELLCRANK ASSY-RH	1	H
		ATTACHING PARTS		
-45	0862100-18	. BUSHING	1	
-46	AN4H57A	. BOLT	AR	
-47	0522629	. WASHER	AR	
		---*---		
	B610	. . BEARING TOR	2	
-48	0862101-5	. LINK ASSY-INBD FLAP SCISSORS INBD LWR	4	
-49	0862101-6	. LINK ASSY-INBD FLAP SCISSORS OUTBD LWR	4	
-50	0862101-7	. LINK ASSY-OUTBD FLAP SCISSORS INBD LWR	4	
-51	0862101-8	. LINK ASSY-OUTBD FLAP SCISSORS OUTBD LWR	4	
-52	0862101-9	. LINK ASSY-INBD FLAP SCISSORS INBD UPR	4	
-53	0862101-10	. LINK ASSY-INBD FLAP SCISSORS OUTBD UPR	4	
-54	0862101-11	. LINK ASSY-OUTBD FLAP SCISSORS INBD UPR	4	
-55	0862101-12	. LINK ASSY-OUTBD FLAP SCISSORS OUTBD UPR	4	
-56	S1004-15A	. . BEARING	AR	
-57	0862101-21	. SPACER-FLAP SCISSORS	16	
-58	0862101-22	. SPACER-FLAP SCISSORS	8	
-59	0862101-23	. SPACER-FLAP SCISSORS	8	
-60	0862101-24	. SPACER-FLAP SCISSORS	8	

CONTINUED

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
92 -61	0862101-25	. SPACER-FLAP SCISSORS	8	
-62	AN4-41	. BOLT	8	
-63	AN4-25	. BOLT	8	
-64	AN4-26	. BOLT	8	
	AN960C416L	. WASHER	24	
	MS17825-4	. NUT	24	
-64A	0862100-53	. ROD ASSY-PUSH	2	
-65	0862100-50	. ROD ASSY-PUSH	2	
-66	0862100-51	. ROD ASSY-PUSH	2	
-67	0862100-52	. ROD ASSY-PUSH	2	
		ATTACHING PARTS		
	AN4-12	. BOLT	1	
	0862100-45	. SPACER	1	
	AN960-416	. WASHER	1	
	MS17825-4	. NUT	1	
	MS24665-134	. PIN-COTTER	1	
		---*---		
-68		. DELETED NOT USED		
-69	0862100-57	. ROD ASSY-CONNECT	4	
-70	0862100-58	. ROD ASSY-CONNECT	2	
		ATTACHING PARTS		
	AN4-13	. BOLT	1	
	MS17825-4	. NUT	1	
		---*---		
	AN316-4R	. . NUT	2	
	S1106-4	. . ROD END	2	
-71	0862100-77	. LINK	2	
-72	5025005-3	. LINK	4	
		ATTACHING PARTS		
-72A	AN4-17	. BOLT	1	
	NAS43HT4-15	. SPACER	2	
	AN960-416L	. WASHER	AR	
	MS17825-4	. NUT	AR	
	MS24665-134	. PIN-COTTER	AR	
		---*---		
-73	0862100-13	. BELLCRANK ASSY-FLAP OUTBD LH	1	
-74	0862100-12	. BELLCRANK ASSY-FLAP OUTBD RH	1	
		ATTACHING PARTS		
	0862100-19	. BUSHING	1	
	AN4H60A	. BOLT	1	
	0522629	. WASHER	1	
		---*---		
	B610	. . BEARING	TOR	2
-75	0862100-15	. BELLCRANK ASSY-FLAP INBD LH		1
-76	0862100-14	. BELLCRANK ASSY-FLAP INBD RH		1
		ATTACHING PARTS		
	0862100-20	. BUSHING	1	
	AN4H53A	. BOLT	1	
	0522629	. WASHER	AR	
		---*---		
	B610	. . BEARING	TOR	2
-77	0862100-17	. BELLCRANK ASSY-FLAP OUTBD		1
-78	0862100-16	. BELLCRANK ASSY-FLAP OUTBD		1
		ATTACHING PARTS		
	0862100-21	. BUSHING	1	
	AN4H45A	. BOLT	1	
	0522629	. WASHER	AR	
		---*---		
	B610	. . BEARING	TDR	2
-79	0812907-3	. BOOT ASSY-PUSH ROD		1
	0812907-7	. BOOT ASSY-PUSH ROD		1
-80	5360000-23	. CLAMP-PRESELECT TO ACTUATOR CABLE FSO 5360000-32	1	A
	5360000-32	. CLAMP-FLAP PRESELECT TO FLAP ACTUATOR CABLE	1	B
		ATTACHING PARTS		
-81	AN3-5A	. BOLT	1	
	MS21042L3	. NUT	1	
		---*---		
-82	MS20341-10S	. NUT	2	
-83	MS21083N3	. NUT	1	
-84	AN23-10	. BOLT LH & RH	1	
	MS17826-3	. NUT	1	
	MS24665-132	. PIN-COTTER	1	
-85	AN23-11	. BOLT LH & RH	1	
	MS17826-3	. NUT	1	
	MS24665-132	. PIN-COTTER	1	
-86	S387-4	. PULLEY LH & RH	1	
	AN4-10A	. BOLT	1	
	MS21045L4	. NUT	1	

A---340-0001 THRU 340-0030
B---340-0031 & ON
C---340-0001 THRU 340-0046
D---340-0047 THRU 340A0026
E---340-0001 THRU 340-0034
F---340-0035 THRU 340-0227
G---340-0228 & ON
H---340A0027 & ON

FLAP CONTROL SYSTEM

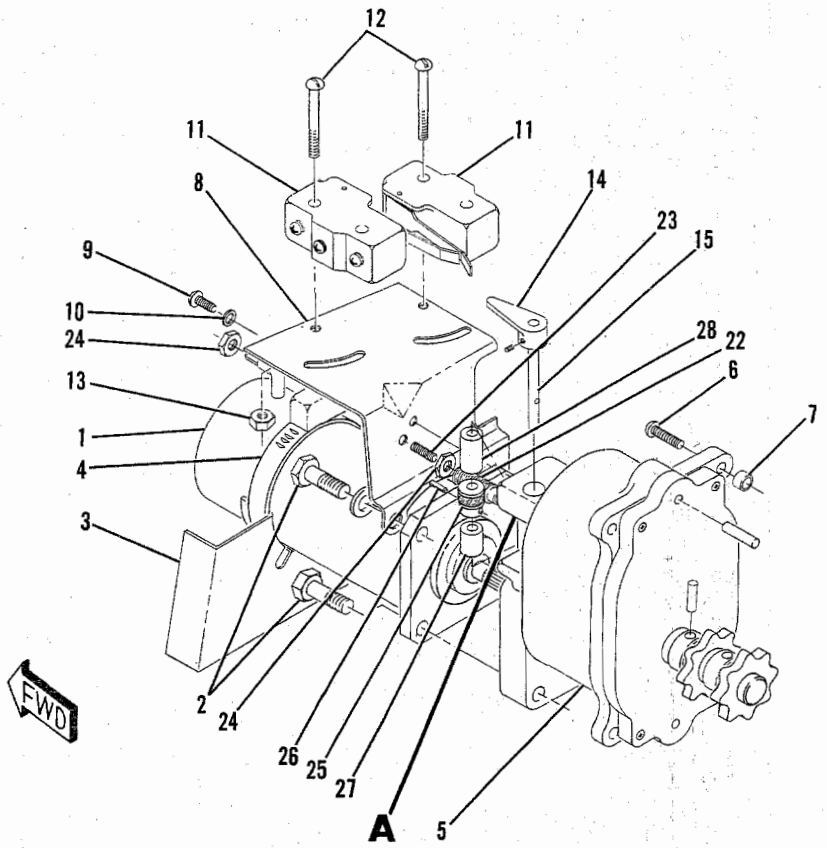

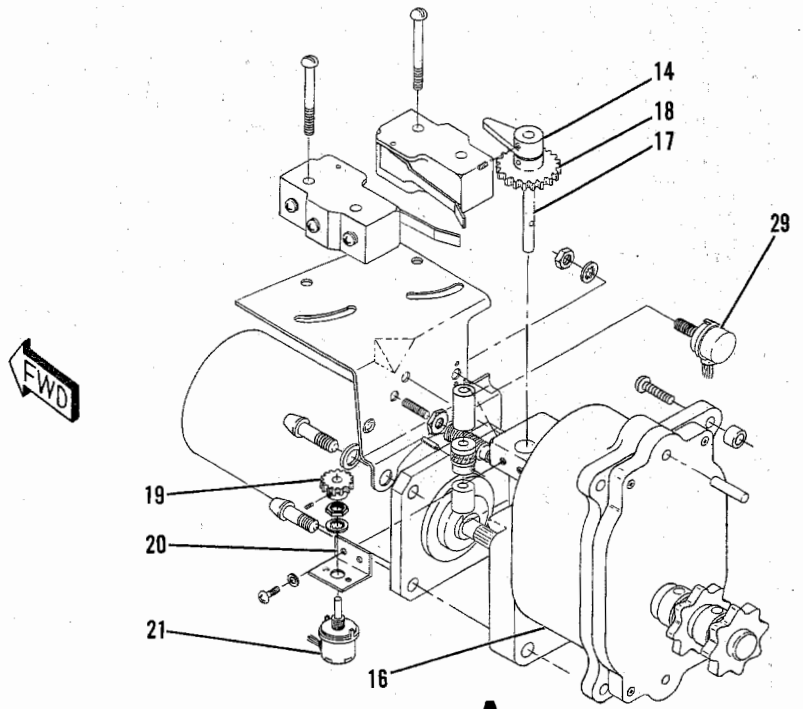

Detail **A**

400A AUTOPILOT

14152020
A14152019

Figure 93. Flap Actuator and Reduction Unit Installation

FIGURE AND INDEX NO.	PART NUMBER		1 2 3 4 5 6 7 DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
93 -			FLAP ACTUATOR AND REDUCTION UNIT INSTALLATION	NP	
-1	9910055-1	#	. MOTOR-FLAP	1	
			ATTACHING PARTS		
-2	MS20004H4		. BOLT	4	
			---*---		
-3	5360000-6		. BRACKET-MOTOR SUPPORT	1	
-4	AN737TW82		. CLAMP	1	
-5	5115237-3	#	. GEAR BOX ASSY-FLAP ACTUATOR STD	1	A
	5115237-10	#	. GEAR BOX ASSY-FLAP ACTUATOR STD & 400A AUTOPILOT	1	B
			ATTACHING PARTS		
-6	MS27039-1-15		. SCREW	4	
-7	NAS43DD3-16		. SPACER	4	
			---*---		
-8	5115252-4		. BRACKET	1	C
	5115252-5		. BRACKET	1	E
	5115252-6		. BRACKET	1	F
			ATTACHING PARTS		
-9	MS51957-27		. SCREW	1	
-10	MS35335-30		. WASHER	1	
			---*---		
-11	BZ7RWT80		. SWITCH-LIMIT MCS	2	
			ATTACHING PARTS		
-12	MS51957-34		. SCREW	2	
-13	NAS679A06		. NUT	2	
			---*---		
-14	5115253-2		. CAM ASSY	1	
-15	5115253-1		. SHAFT	1	
-16	5115237-10	#	. GEAR BOX ASSY USED WITH 400A AUTOPILOT	1	A
-17	5115253-5		. SHAFT USED WITH 400A AUTOPILOT	1	
-18	P48A19-44		. GEAR USED WITH 400A AUTOPILOT WINB	1	
-19	P48A9-21		. GEAR USED WITH 400A AUTOPILOT WINB	1	
-20	5115253-6		. ANGLE USED WITH 400A AUTOPILOT	1	
			ATTACHING PARTS		
	MS51957-27		. SCREW	2	
	MS35335-30		. LOCK WASHER	2	
			---*---		
-21	9712025-1		. RESISTOR ASSY USED WITH 400A AUTOPILOT	1	C
	9712025-2		. RESISTOR ASSY USED WITH 400A AUTOPILOT	1	D
			ATTACHING PARTS		
	MS35333-40		. LOCK WASHER	1	
	MS15082-13		. NUT	1	
			---*---		
-22	5115237-15		. GEAR-WORM PGCI	1	
	5115237-14		. GEAR-WORM ALT FOR 5115237-15	1	
			ATTACHING PARTS		
	MS16562-3		. PIN	1	
			---*---		
-23	AN565B8H12		. SET SCREW	1	
-24	NAS679A06		. NUT	2	
-25	WB4820		. GEAR-WORM PGCI	1	
			ATTACHING PARTS		
-26	MS16562-3		. PIN	1	
			---*---		
-27	NAS75-3-014		. BUSHING	1	
-28	NAS75-3-025		. BUSHING	1	
-29	9712025-3		. RESISTOR ASSY USED WITH 400A AUTOPILOT	1	D
			ATTACHING PARTS		
	MS35333-40		. LOCK WASHER	1	
	NAS679A06		. NUT	1	
			---*---		

SEE CESSNA CRAFTED LANDING GEAR AND FLAP SYSTEM COMPONENTS OVERHAUL/PARTS MANUAL

A---340-0001 THRU 340-0547
B---340-0548 & ON
C---340-0001 THRU 340-0500
D---340-0501 & ON
E---340-0501 THRU 340A0013
F---340A0014 & ON

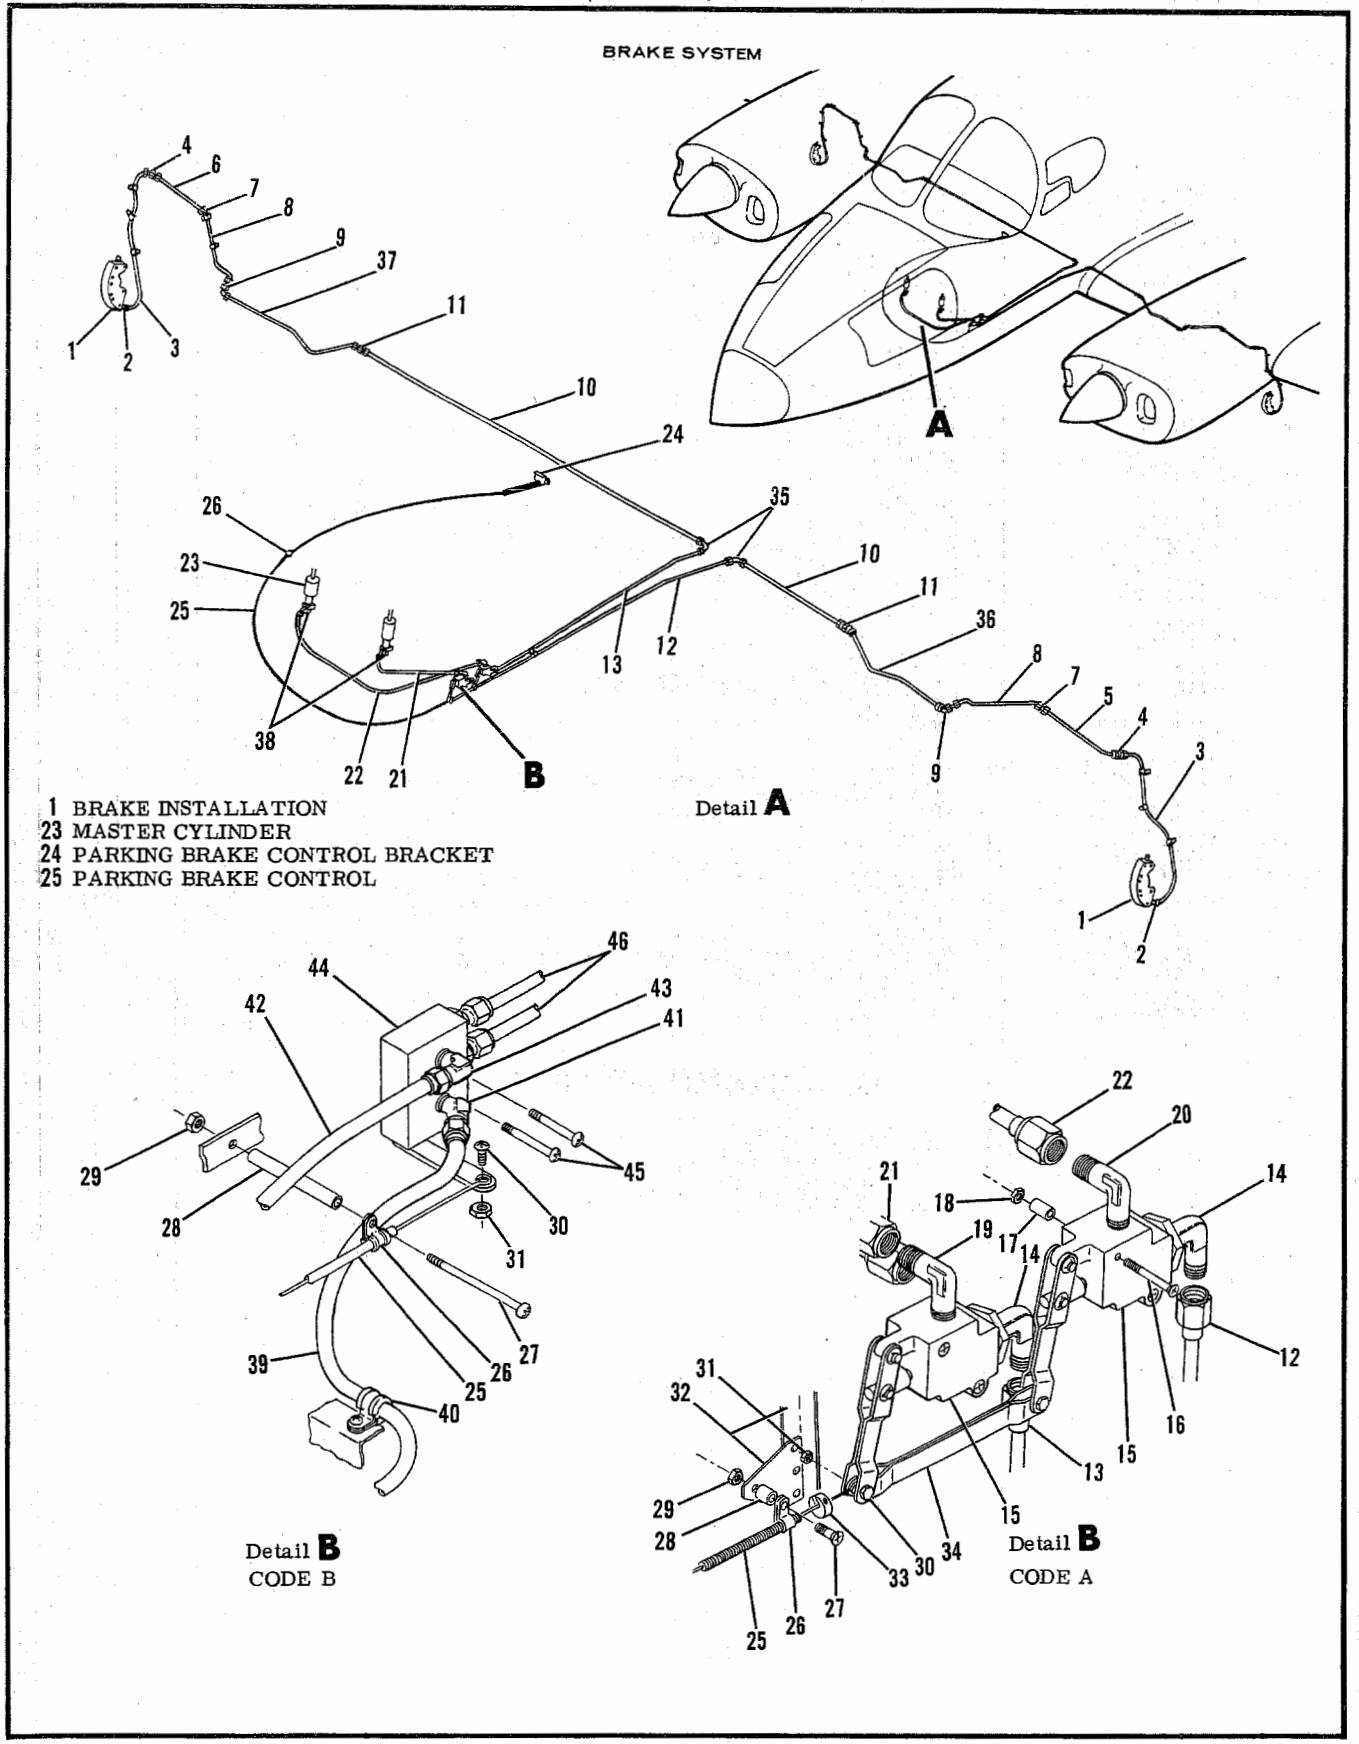

Figure 94. Brake System

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
94 -		BRAKE SYSTEM	NP	
-1	SEE FIG 70	. BRAKE INSTL	REF	
-2	AN921-4	. ELBOW	1	
	MS28778-4	. GASKET	1	
	AN924-4	. NUT	1	
-3	MS28741-4-0520	. HOSE ASSY-BRAKE LINE LH & RH	2	
-4	AN837-4D	. ELBOW	2	
	AN974-4D	. NUT	2	
-5	0800400-73	. LINE ASSY-LH WING	1	
-6	0800400-74	. LINE ASSY-RH WING	1	
-7	AN833-4D	. ELBOW-LH & RH	2	
	AN924-4D	. NUT-LH & RH	4	
	AN960-716	. WASHER-LH & RH	2	
-8	5600108-19	. LINE ASSY-LH & RH WING	2	
-9	AN832-4D	. UNION-LH & RH	2	
	AN924-4D	. NUT-LH & RH	2	
-10	5300116-1	. LINE ASSY-LH STUB WING	1	
	5300116-2	. LINE ASSY-RH STUB WING	1	
-11	AN832-4D	. UNION-LH & RH	2	
	250-215-4	. LOCK-O-SEAL LH & RH PKSC	2	
	AN924-4D	. NUT-LH & RH	2	
-12	5300116-3	. LINE ASSY-LH STUB WING TO VALVE	1	A
-13	5300116-4	. LINE ASSY-RH STUB WING TO VALVE	1	A
-14	MS20822-4D	. ELBOW-LH & RH	2	A
-15	A53T2	. VALVE ASSY-PARKING BRAKE FWD & AFT HFP	2	A
		ATTACHING PARTS		
-16	MS35207-264	. SCREW	2	A
-17	NAS43DD3-28	. SPACER	2	A
-18	MS21045L3	. NUT	2	A
		---*---		
-19	MS20823-4D	. ELBOW FWD VALVE	1	A
-20	MS20822-4D	. ELBOW AFT VALVE	1	A
-21	S1167-4-	. HOSE ASSY FWD VALVE TO LH MASTER CYLINDER	1	A
-22	S1167-4-	. HOSE ASSY AFT VALVE TO RH MASTER CYLINDER	1	A
-23	SEE FIG 83	. MASTER CYLINDER	REF	
-24	SEE FIG 61	. BRACKET-PARKING BRAKE CONTROL	1	
-25	SEE FIG 61	. CONTROL-PARKING BRAKE	1	
		ATTACHING PARTS		
-26	AN742D3	. CLAMP	2	A
	AN742D3	. CLAMP	1	B
	MS35207-264	. SCREW-UPR	1	A
	NAS43DD3-40	. SPACER-UPR	1	A
-27	AN526-1032R22	. SCREW	1	A
	MS27039-1-37	. SCREW	1	B
-28	NAS43DD3-44	. SPACER	1	A
	NAS43DD3-128	. SPACER	1	B
-29	MS21045L3	. NUT	1	
-30	MS27039-1-14	. SCREW	1	A
	MS27039-1-08	. SCREW	1	B
-31	MS21045L3	. NUT	1	
		---*---		
-32	5318504-2	. SUPPORT-CABLE	1	A
-33	5015040-1	. STOP-CONTROL CABLE	1	A
		ATTACHING PARTS		
	MS35206-227	. SCREW	1	A
		---*---		
-34	5015039-1	. LINK ASSY-PARKING BRAKE	1	A
-35	AN821-4D	. ELBOW	2	
-36	5300116-5	. LINE ASSY-LH WING	1	
-37	5300116-6	. LINE ASSY-RH WING	1	
-38	RA4500C4AL	. ELBOW FLDR	2	
	4V50X-D	. ELBOW ALT FOR RA4500C4AL PHFD	2	
-39	S1167-4-214	. HOSE LH MASTER CYLINDER TO VALVE	1	B
-40	MS21919DG10	. CLAMP	1	B
		ATTACHING PARTS		
	MS27039-1-08	. SCREW	1	B
	MS21042L3	. NUT	1	B
		---*---		
-41	MS20823-4D	. ELBOW	1	B
-42	S1167-4-300	. HOSE RH MASTER CYLINDER TO VALVE	1	B
-43	MS20822-4D	. ELBOW	1	B
-44	HE7002-3	. VALVE ASSY-PARKING BRAKE HEAC	1	B
	A850-8	. VALVE ASSY-PARKING BRAKE ALT FOR HE7002-3 GRDS	1	B
		ATTACHING PARTS		
-45	MS27039-0812	. SCREW	2	B
		---*---		
-46	5300116-7	. LINE ASSY-LH VALVE TO ELBOW	1	B
	5300116-8	. LINE ASSY-RH VALVE TO ELBOW	1	B
		ATTACHING PARTS		
	MS21919WDG-4	. CLAMP	2	
	M27039DD1-09	. SCREW	1	
	MS21042-3	. NUT	1	
		---*---		

A---340-0001 THRU 340-0112
B---340-0113 & ON

ENGINE COWL

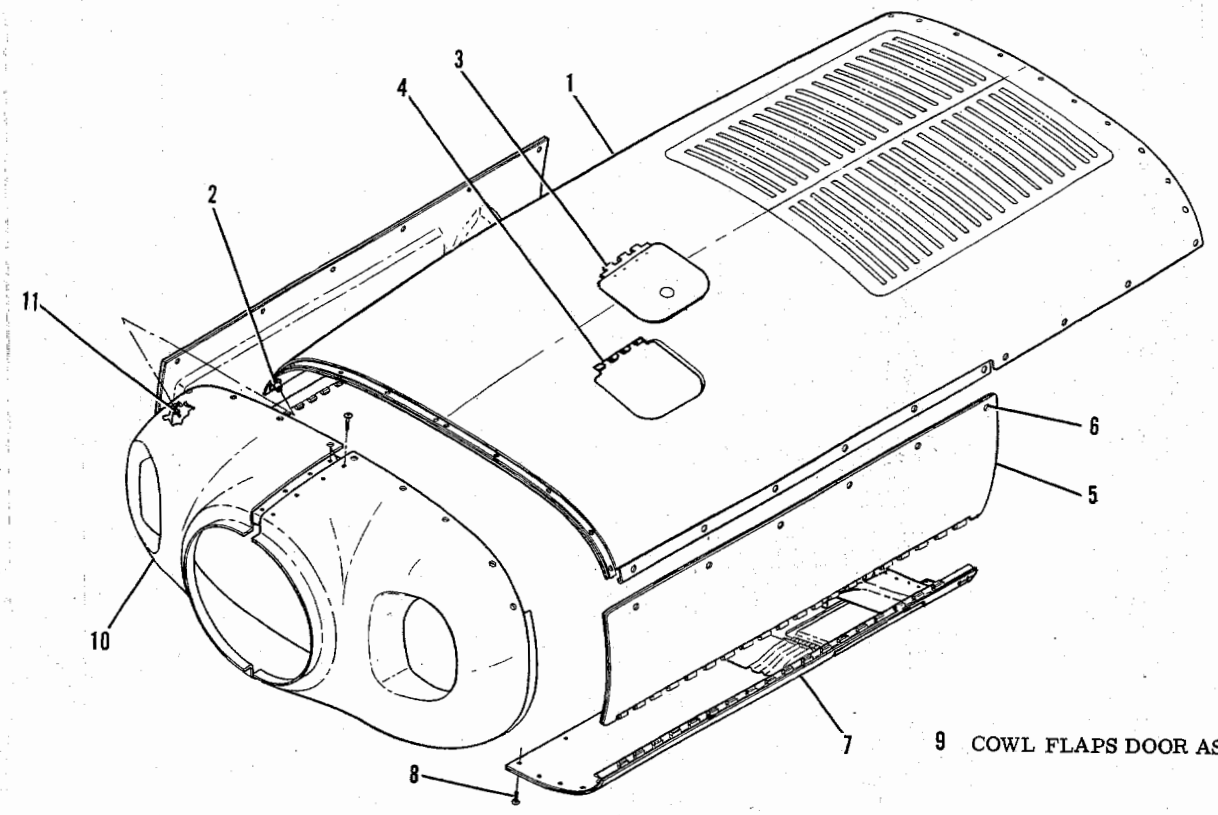

Figure 95. Engine Cowl Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
95 -		ENGINE COWL INSTALLATION	NP	
-1	5652001-208	. COWL ASSY-UPPER LH WEU 5652001-212	1	A
	5652001-209	. COWL ASSY-UPPER RH WEU 5652001-212	1	A
	5652001-212	. COWL ASSY-UPPER LH & RH	1	B
		ATTACHING PARTS		
-2	244-16	. RECEPTACLE CLC	22	
	40S5-4	. STUD CLC	20	
	4002-H	. GROMMET CLC	20	
	R4T	. SNAP RING CLC	20	
		---*---		
-3	0851160-200	. DOOR ASSY-OIL FILLER	1	
-4	0851160-201	. HINGE ASSY-OIL DOOR	1	
	MS20253P2-400	. . PIN-HINGE	1	
	1552010-1	. . SPRING	1	
	MS24665-22	. . PIN-COTTER	2	
-5	0851164-200	. DOOR ASSY-NACELLE SIDE LH OUTBD	1	
	0851164-201	. DOOR ASSY-NACELLE SIDE RH OUTBD	1	
	0851164-203	. DOOR ASSY-RH NACELLE OUTBD USED WITH AIRCONDITIONING	1	
	5655300-204	. DOOR ASSY-NACELLE SIDE LH INBD	1	
	5655300-205	. DOOR ASSY-NACELLE SIDE RH INBD	1	
		ATTACHING PARTS		
-6	40S5-4	. STUD CLC	6	
	4002-G	. GROMMET CLC	6	
	RG4	. SNAP RING CLC	6	
		---*---		
-7	0851170-200	. PANEL ASSY-LWR LH INBD	1	E
	0851170-213	. PANEL ASSY-LWR LH INBD	1	F
	0851170-201	. PANEL ASSY-LWR LH OUTBD	1	E
	0851170-214	. PANEL ASSY-LWR LH OUTBD	1	F
	0851170-203	. PANEL ASSY-LWR RH INBD	1	E
	0851170-216	. PANLE ASSY-LWR RH INBD	1	F
	0851170-202	. PANEL ASSY-LWR RH OUTBD	1	E
	0851170-215	. PANEL ASSY-LWR RH OUTBD	1	G
	0851170-225	. PANEL ASSY-LWR RH OUTBD	1	H
		ATTACHING PARTS		
-8	MS35206-243	. SCREW	7	
	MS35206-244	. SCREW	10	
	MS35206-245	. SCREW	3	
		---*---		
	5654001-16	. WIPER	1	
	5654001-18	. RETAINER	1	
	5654001-17	. SEAL	1	
-9	SEE FIG 96	. DOOR ASSY-COWL FLAPS	1	
-10	0851149-210	. NOSE CAP ASSY-COWL RH USED WITH 50 AMP ALTERNATOR	2	C
	0852013-202	. NOSE CAP ASSY-COWL RH USED WITH 50 AMP ALTERNATOR	2	D
	0851149-211	. NOSE CAP ASSY-COWL RH USED WITH 100 AMP ALTERNATOR	2	C
	0852013-203	. NOSE CAP ASSY-COWL RH USED WITH 100 AMP ALTERNATOR	2	D
	0851149-212	. NOSE CAP ASSY-COWL LH USED WITH 100 AMP ALTERNATOR	1	C
	0852013-201	. NOSE CAP ASSY-COWL LH USED WITH 50 & 100 AMP ALTERNAT	1	D
		ATTACHING PARTS		
-11	40S5-5	. STUD CLC	10	
	4002-H	. GROMMET CLC	10	
	R4G	. SNAP RING CLC	10	
	MS24694-4	. SCREW	8	
		---*---		

A---340-0001 THRU 340-0500
B---340-0501 & ON
C---340-0001 TO 340A0001
D---340A0001 & ON
E---040-0001 THRU 340A0012
F---340A0013 & ON
G---340A0013 THRU 340A0018
H---340A0019 & ON

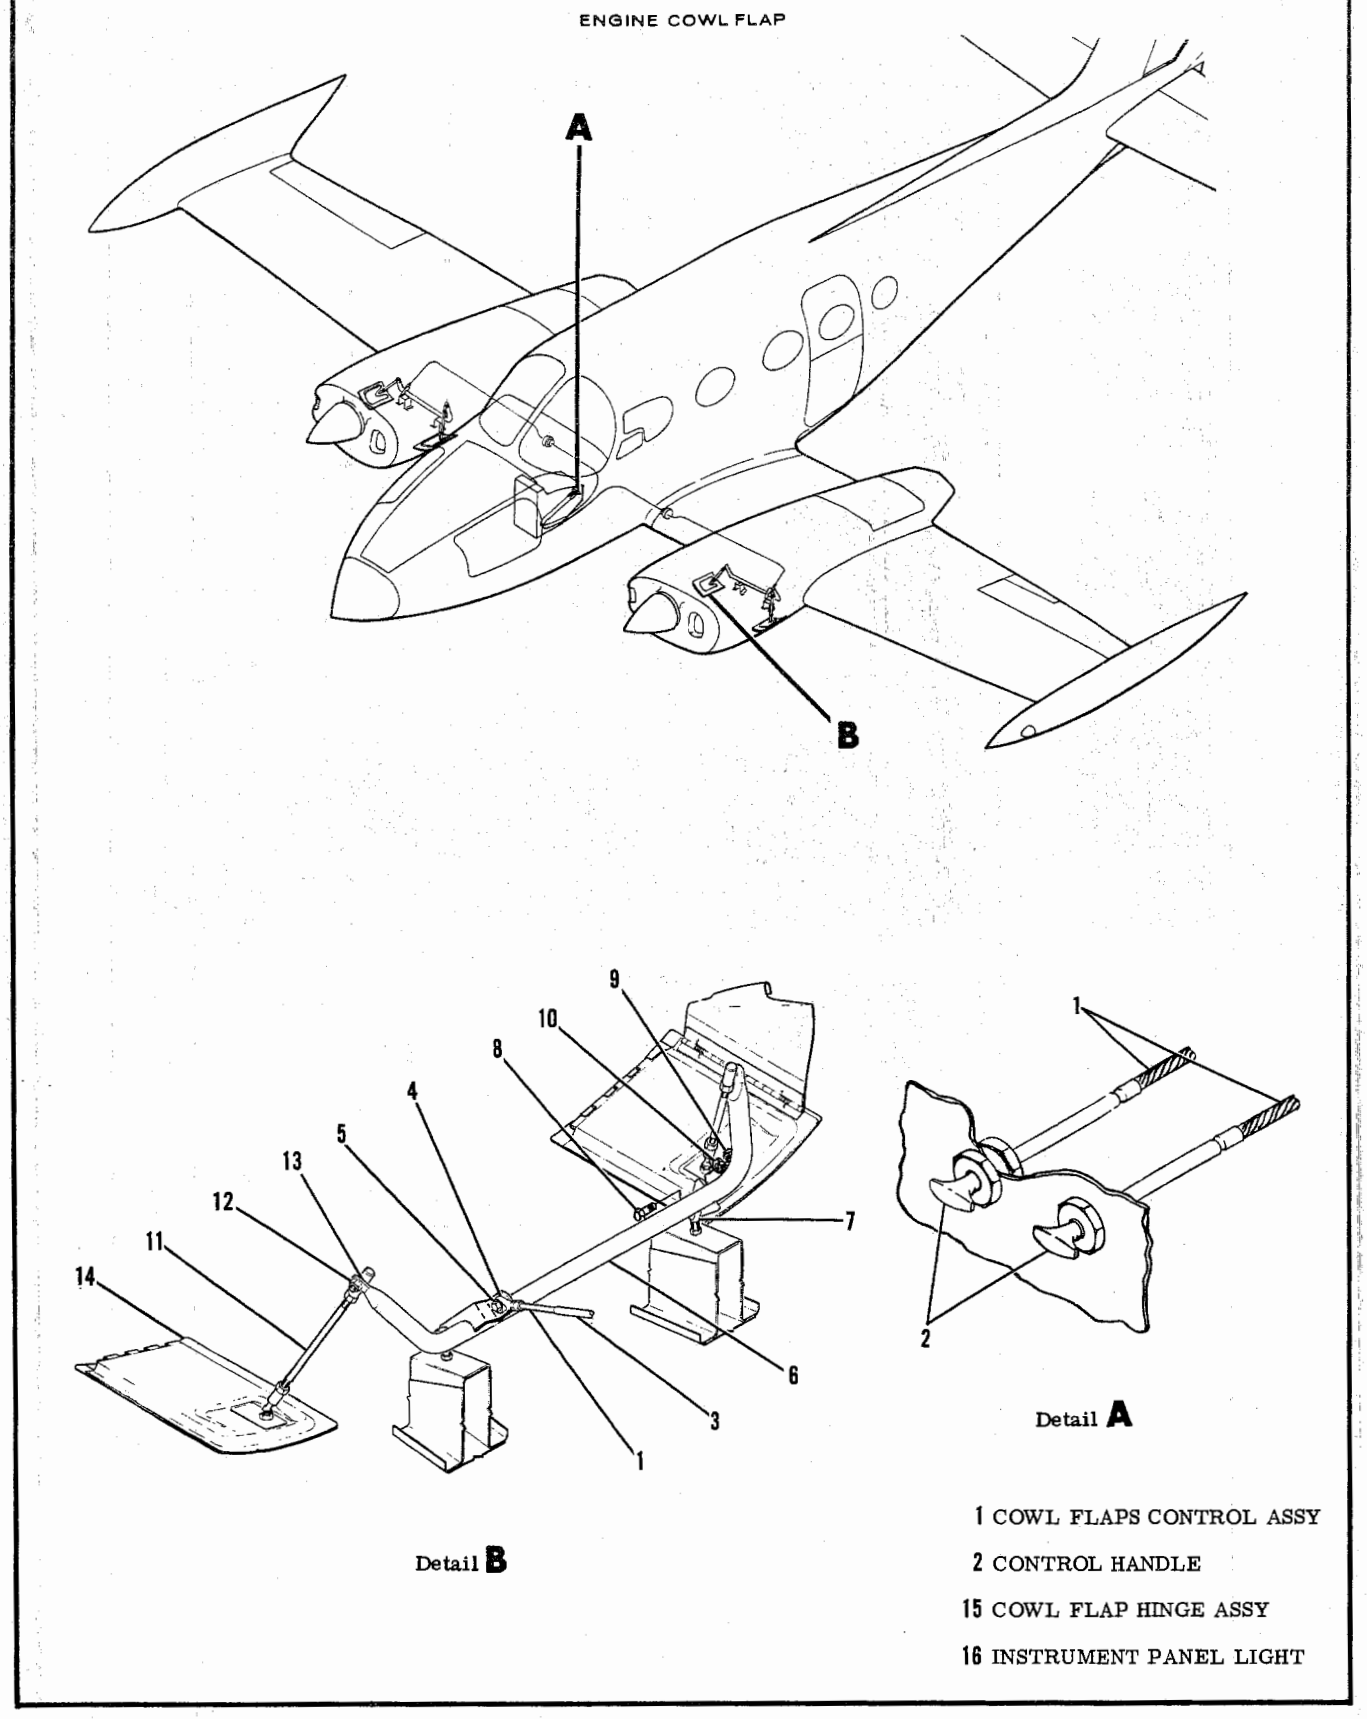

Figure 96. Engine Cowl Flaps and Control System

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
96 -		ENGINE COWL FLAPS AND CONTROL SYSTEM	NP	
-1	SEE FIG 61	. CONTROL ASSY-COWL FLAPS	2	
		ATTACHING PARTS		
	AN924-4D	. NUT	2	
	AN924-6D	. NUT	1	
		---*---		
-2	SEE FIG 61	. . HANDLE-CONTROL	1	
-3	CM3702-7	. FIRESLEEVE BKI	AR	
-4	S1104-3	. ROD END	1	
		ATTACHING PARTS		
-5	AN3-6A	. BOLT	1	
	MS21042L3	. NUT	1	
		---*---		
-6	5654011-1	. TORQUE TUBE ASSY-LH	1	
	5654011-9	. TORQUE TUBE ASSY-RH	1	
-7	M34-14	. ROD END HEC	2	
		ATTACHING PARTS		
-8	AN3C-10A	. BOLT UPR	2	
-9	MS21042-3	. NUT UPR	2	
-10	AN960C10L	. WASHER UPR	4	
		---*---		
-11	5654012-4	. ROD ASSY	2	
		ATTACHING PARTS		
-12	MS21045L4	. NUT	2	
-13	MS20002-4	. WASHER	2	
		---*---		
-14	5654010-1	. DOOR ASSY-COWL FLAP LH INBD	1	
	5654010-3	. DOOR ASSY-COWL FLAP LH OUTBD	1	
	5654010-2	. DOOR ASSY-COWL FLAP RH INBD	1	
	5654010-4	. DOOR ASSY-COWL FLAP RH OUTBD	1	
	5654010-12	. . SPRING	2	
	MS20253-3-674	. . PIN	1	
	5654010-11	. . HINGE HALF	1	
-15	SEE FIG 95	. HINGE ASSY-COWL FLAP	REF	
-16	SEE FIG 61	. LIGHT-INSTRUMENT PANEL	REF	

ENGINE

1 ENGINE ASSEMBLY AND ACCESSORIES INSTALLATION
8 TURBOCHARGER CONTROL OIL SYSTEM
9 TURBOCHARGER INDUCTION AND COOLING AIR INSTALLATION

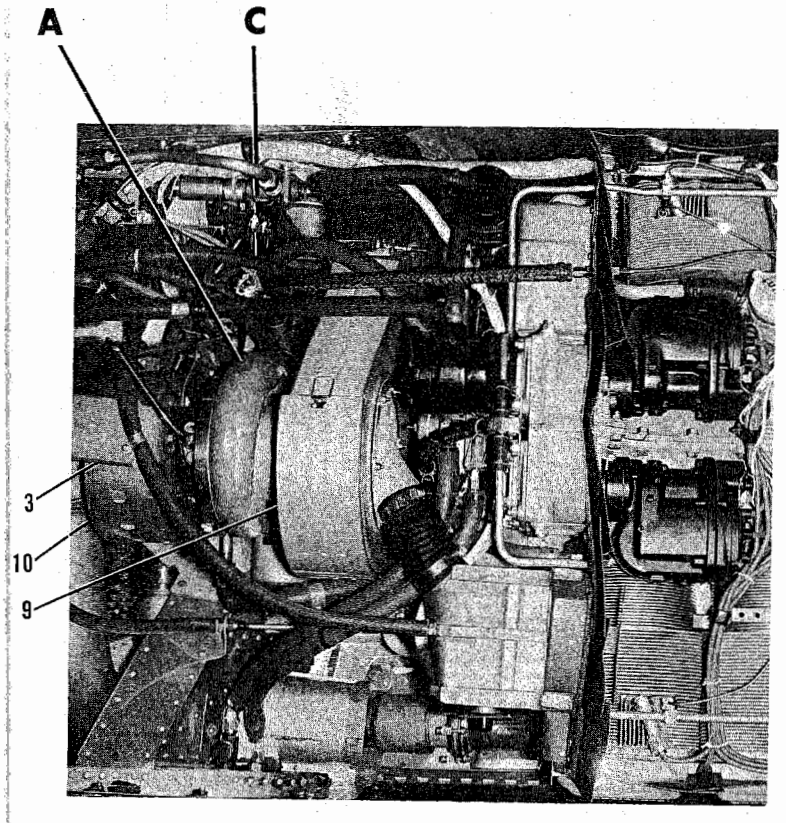

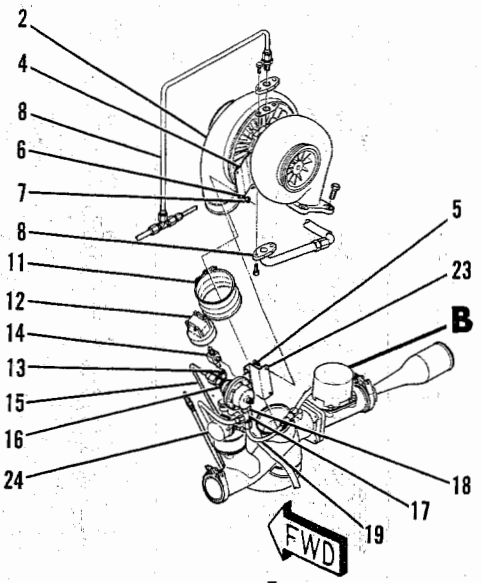

Detail **A**

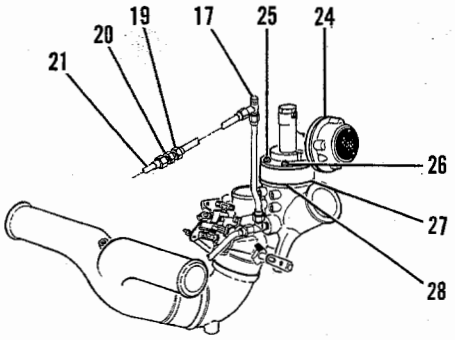

LH ENGINE
Detail **B**

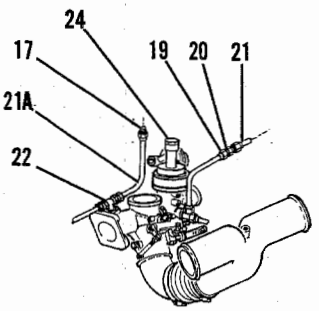

RH ENGINE
Detail **B**

Figure 97. Engine and Turbocharger Installation (Sheet 1 of 2)

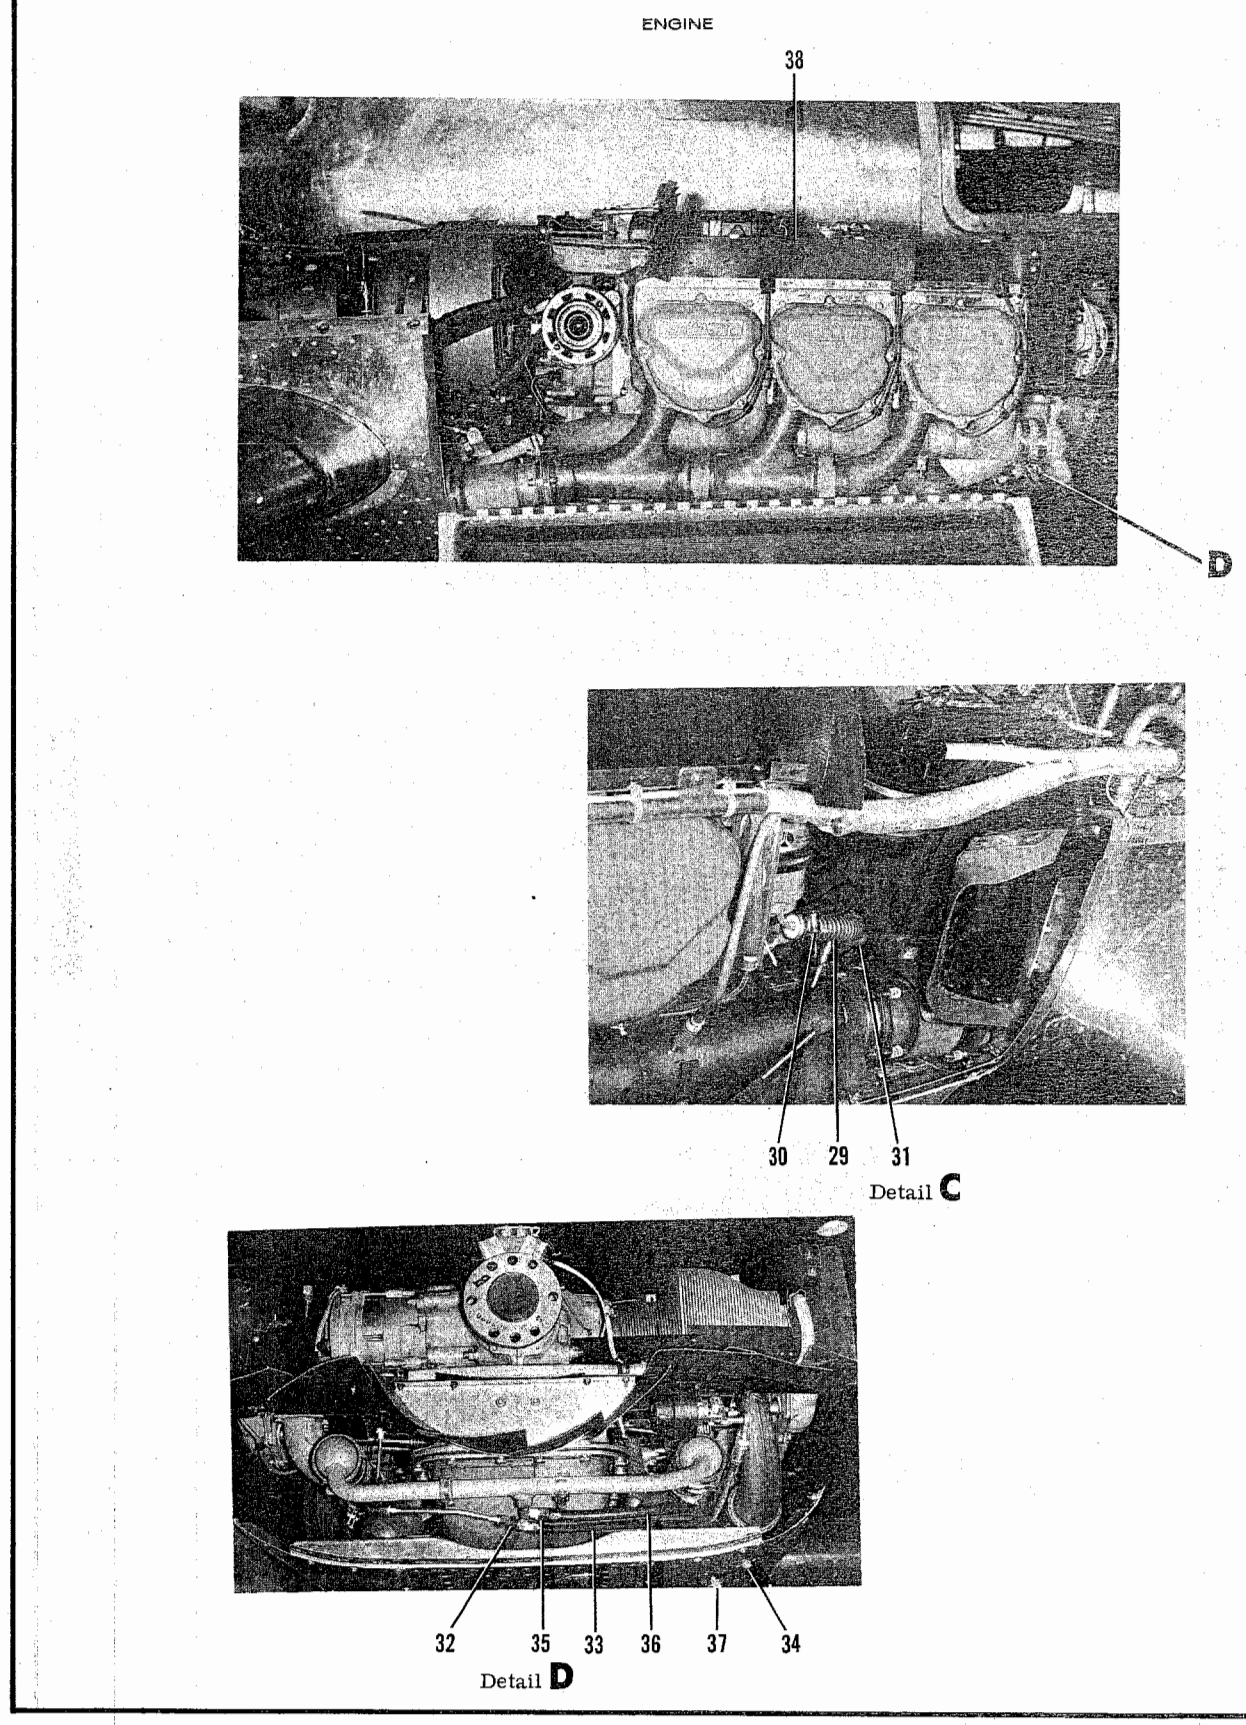

Figure 97. Engine and Turbocharger Installation (Sheet 2)

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
97 -		ENGINE AND TURBOCHARGER INSTALLATION	NP	E
-1	SEE FIG 98	. ENGINE ASSY AND ACCESSORIES INSTL	1	
-2	407810-1 #	. TURBOCHARGER GCT	1	
		ATTACHING PARTS		
-3	5655311-1	. SUPPORT	1	
	CM2954-602	. BOLT	2	
	AN3CH4A	. BOLT	2	
-4	5155101-10	. SUPPORT	1	
-5	AN3-4A	. BOLT	2	
-6	AN960-10L	. WASHER	2	
-7	MS21045L3	. NUT	2	
		---*---		
-8	SEE FIG 102	. TURBOCHARGER CONTROL OIL SYSTEM	1	
-9	SEE FIG 104	. TURBOCHARGER INDUCTION & COOLING AIR INSTL	1	
-10	5354005-1	. SHIELD ASSY-LH & RH TURBOCHARGER	2	
-11	5655208-1	. CLAMP ASSY-TURBOCHARGER TO THROTTLE BODY	1	
	5655208-3	. SEAL-TURBOCHARGER CLAMP	1	
-12	9910058-2	. SWITCH-FUEL PRESSURE	1	
-13	5600108-32	. LINE ASSY-UNMETERED FUEL PRESSURE RH	1	
	5600118-4	. LINE ASSY-UNMETERED FUEL PRESSURE LH	1	
-14	5650013-1	. TEE-FUEL PRESSURE FSO 5650013-2	1	A
	5650013-2	. TEE-FUEL PRESSURE	1	B
-15	5600108-31	. LINE ASSY-PRESSURE REGULATOR FUEL RETURN	1	
-16	AN816-4-4	. NIPPLE	1	
-17	5650015-7	. RESTRICTOR ASSY-FUEL PRESSURE LH	1	
	5650015-1	. RESTRICTOR ASSY-FUEL PRESSURE RH	1	
-18	3200X2	. ADAPTER LH WH	1	
	120B1-8X1-8	. ADAPTER ALT FOR 3200X2 LH IB	1	
-19	5600108-35	. LINE ASSY-LH RESTRICTOR TO REDUCER	1	
	5600108-35	. LINE ASSY-RH FITTING TO REDUCER	1	
-20	AN919-1D	. REDUCER-LH & RH	2	
-21	5300106-28	. LINE ASSY-LH COMPRESSOR DISCHARGE PRESSURE	1	
	5600108-30	. LINE ASSY-RH COMPRESSOR DISCHARGE PRESSURE	1	
-21A	5600108-33	. LINE ASSY-RH RESTRICTOR TO TEE	1	
-22	MS20913-1	. PLUG-LH	2	
	MS20825-4D	. TEE-RH	1	
-23	5650012-1	. BRACKET-FUEL PRESSURE REGULATOR SUPPORT	1	
-24	C165002-0101 #	. CONTROLLER ASSY-DUAL PRESSURE	1	
		ATTACHING PARTS		
-25	AN503-10-30	. SCREW	4	
-26	MS35338-43	. WASHER	4	
-27	5355102-1	. SPACER	1	
-28	476122	. GASKET ARSH	2	
		---*---		
-29	CM2909-6	. HOSE BKI	AR	
-30	NAS397-16	. CLAMP	AR	
-31	5600107-19	. LINE ASSY-BREATHER LH	1	
	0412007-6	. GROUND STRAP	1	
		. UNION-MANIFOLD DRAIN	1	
-32	AN815-4			
-33	CM2944-4-13	. HOSE-MANIFOLD DRAIN FSO S1129-4-0130	AR	C
	S1129-4-0130	. HOSE-MANIFOLD DRAIN	AR	D
-34	MS20823-4D	. ELBOW	1	
-35	MS20822-6D	. ELBOW	1	
-36	CM2944-6-17	. HOSE-MANIFOLD DRAIN FSO S1129-6-0170	AR	C
	S1129-6-0170	. HOSE-MANIFOLD DRAIN	AR	D
	AN924-6D	. NUT	1	
	AN936A91EB	. LOCK WASHER	1	
-37	1H19-5	. VALVE ASSY-MANIFOLD DRAIN	1	
-38	5650006-4	. SHIELD ASSY-WIRE BUNDLE INBD	1	
		ATTACHING PARTS		
	MS35207-261	. SCREW	3	
	MS21083N3	. NUT	3	
		---*---		

#---SEE CESSNA CRAFTED TURBOCHARGER & CONTROLS SERVICE/PARTS MANUAL FOR BREAKDOWN

A---340-0001 THRU 340-0064
B---340-0065 & ON
C---340-0001 THRU 340-0171
D---340-0172 & ON
E---340-0001 TO 340A0001

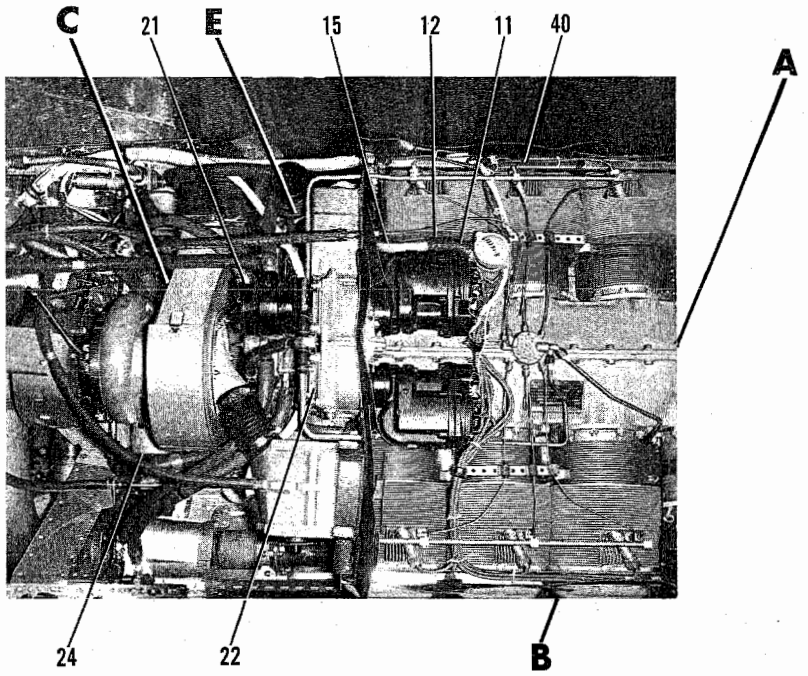

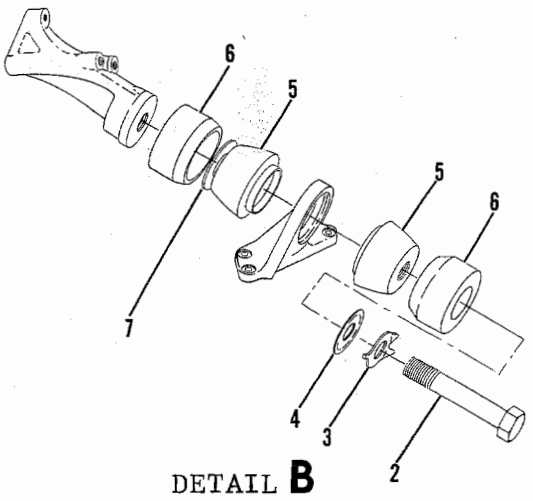

DETAIL **B**

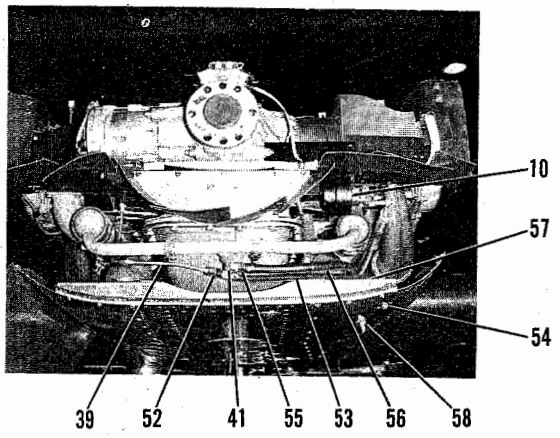

DETAIL **A**

Figure 97A. Engine Installation (Sheet 1 of 2)

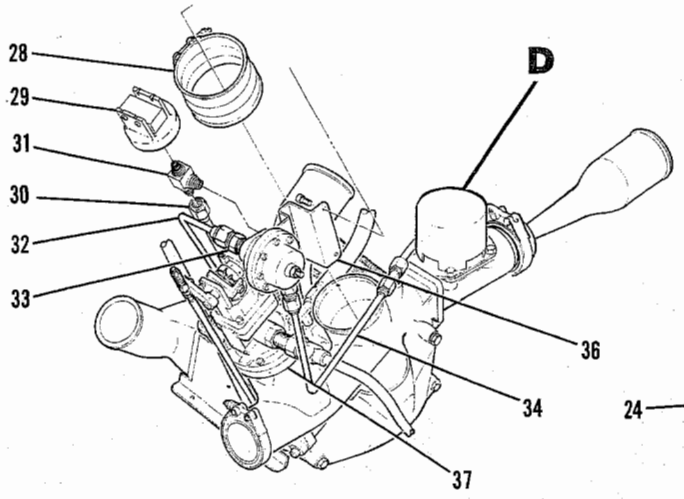

Detail **C**

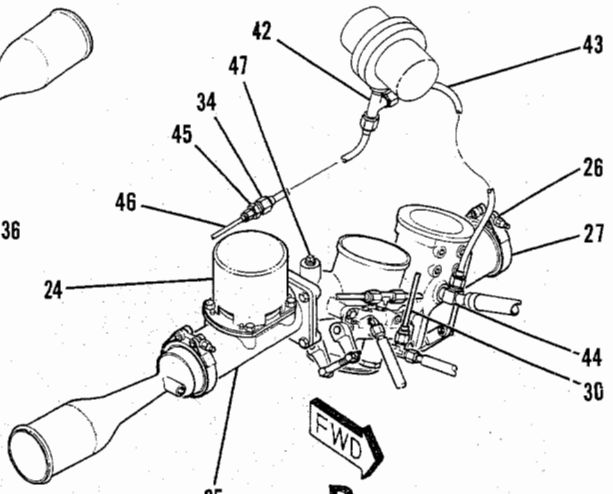

Detail **D**
LH ENGINE

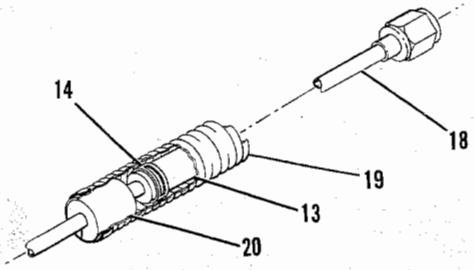

Detail **F**

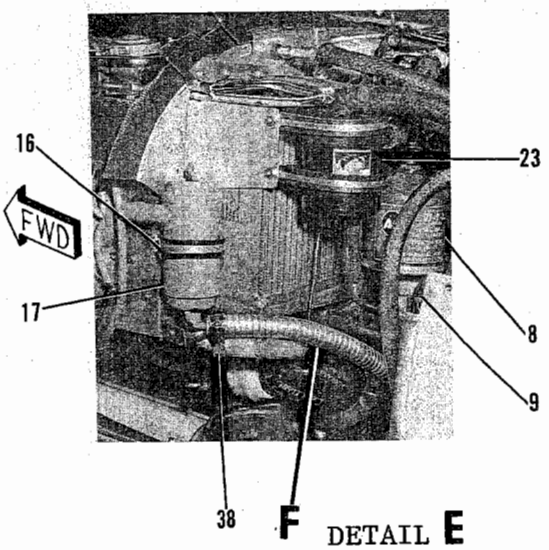

DETAIL **E**

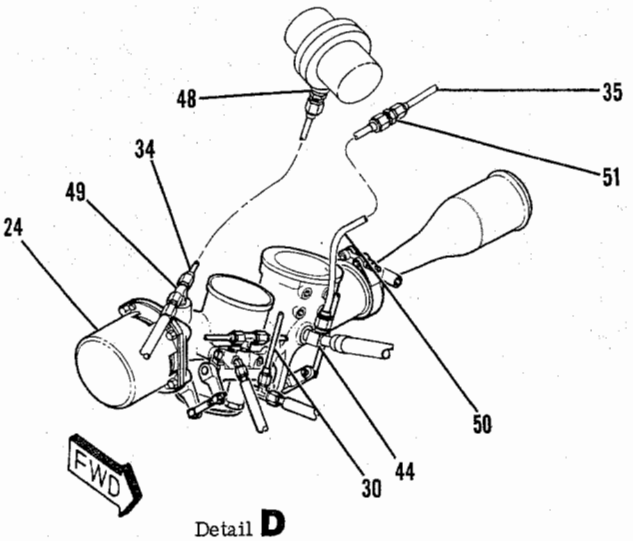

Detail **D**
RH ENGINE

Figure 97A. Engine Installation (Sheet 2)

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
97A-		ENGINE INSTALLATION	NP	A
-1	SEE FIG 99	. ALTERNATOR INSTALLATION	1	
	SEE FIG 100	. ENGINE EXHAUST SYSTEM & SHIELD INSTALLATION	1	
	SEE FIG 101	. ENGINE BAFFLES INSTALLATION	1	
	SEE FIG 102A	. TURBOCHARGER OIL SYSTEM	1	
	SEE FIG 103	. OIL PRESSURE SYSTEM	1	
	SEE FIG 104	. TURBOCHARGER INDUCTION AND COOLING AIR INSTALLATION	1	
	SEE FIG 98A	. ENGINE ASSY	1	
		ATTACHING PARTS		
-2	AN7-34A	. BOLT	4	
-3	0851559-1	. LOCKWASHER	4	
-4	5155130-3	. RETAINER	4	
-5	J9613-58	. MOUNT	LO 4	
-6	J12814-1	. BOOT-ENGINE MOUNT	LO 8	
-7	5056010-1	. SPACER .125 THICK	AR	
	5056010-2	. SPACER .188 THICK	AR	
	5056010-3	. SPACER .250 THICK	AR	
	5056010-4	. SPACER .312 THICK	AR	
		---*---		
-8	631641	. FILTER ASSY-OIL LH & RH	CM 2	
	641583	. FILTER ASSY-OIL ALT FOR 631641 LH & RH	CM 2	
	631645	. . ADAPTER-OIL FILTER	CM 1	
	632881	. . ADAPTER-OIL FILTER	CM 1	
	C294505-0102	. . FILTER ELEMENT KIT	1	
	6435640	. . . ELEMENT	ACS 1	
	6436635	. . . GASKET-UPR	ACS 1	
	6436637	. . . GASKET-LWR	ACS 1	
	5579654	. . . GASKET-METAL	ACS 1	
	632655	. . . GASKET-OIL FILTER	CM 1	
-9	0850350-4	. GENERATOR-TACHOMETER WEU 0850350-5 LH & RH	2	
	0850350-5	. GENERATOR-TACHOMETER LH & RH	2	
	0813601-3	. BULB-OIL TEMPERATURE LH & RH	2	
	0813601-4	. BULB-CYLINDER HEAD TEMPERTURE LH & RH	2	
-10	DCFUS290D5/T3	. GOVERNOR-PROPELLER SYNCHROPHASER & UNFEATHERING LH	MCL 1	
	DCFUS290D4/T3	. GOVERNOR-PROPELLER SYNCHROPHASER & UNFEATHERING RH	MCL 1	
	DCFS290D5/T3	. GOVERNOR-PROPELLER SYNCHROPHASER LH	MCL 1	
	DCFS2904/T3	. GOVERNOR-PROPELLER SYNCHROPHASER RH	MCL 1	
-11	S51-12	. HOSE BKI	AR	
		ATTACHING PARTS		
-12	NAS397-18	. CLAMP	AR	
		---*---		
-13	S51-4	. HOSE BKI	AR	
		ATTACHING PARTS		
-14	NAS397-10	. CLAMP	AR	
		---*---		
-15	0826018-233	. LINE-OIL BREATHER LH & RH	2	
-16	MS21919DF40	. CLAMP-OIL SEPARATOR LH & RH	2	
-17	5251802-1	. SEPARATOR ASSY-OIL BREATHER LH & RH	2	
	AMA201411-800	. . TOP-OIL SEPARATOR	AMA 1	
		ATTACHING PARTS		
	A17045-56	. . WASHER	AMA 1	
	WC040	. . NUT-WING	AMA 1	
		---*---		
	AMA201411-06	. . GASKET	AMA 1	
	0850694-5	. . ELEMENT-SEPARATOR	1	
	AMA202067-156	. . BODY-SEPARATOR	AMA 1	
-18	5600107-17	. LINE ASSY-PUMP TO SEPARATOR LH & RH	2	
	MS20822-4B	. ELBOW FURNISHED WITH PUMP LH & RH	2	
-19	5200106-115	. CONDUIT-OIL SEPARATOR LINE LH & RH	2	
-20	5255014-1	. BUSHING-CONDUIT LH & RH	2	
-21	212CW	. PUMP ASSY-DRY VACUUM USED WITH VACUUM SYSTEM LH & RH	ABNE 2	
	C431003-0301	. PUMP ASSY-DRY VACUUM ALT FOR 212CW	2	
		USED WITH VACUUM SYSTEM LH & RH		
	A505CDD	. PUMP ASSY-VACUUM USED WITH DEICE SYSTEM LH & RH	ARO 2	
	G456	. PUMP ASSY-VACUUM USED WITH DEICE SYSTEM	WEGA 2	
		ALT FOR A505CDD LH & RH		
-22	232CW	. PUMP ASSY-VACUUM USED WITH AUTO PILOT LH & RH	ABNE 2	
	B1-7-1	. . COUPLING ASSY-DRIVE LH & RH	ABNE 2	
	B1-5-3	. . . COUPLING LH & RH	ABNE 2	
	B1-6-1	. . . PLUG LH & RH	ABNE 2	
-23	C165001-0202	. SEPARATOR-AIR OIL USED WITH DEICE SYSTEM LH & RH	2	
-24	C482002-0110	. VALVE-PRESSURE RELIEF LH & RH	2	
		ATTACHING PARTS		
	MS35265-66	. SCREW	4	
		---*---		
-25	5655212-1	. TEE-ADAPTER LH THROTTLE BODY TO VENTURI	1	
		ATTACHING PARTS		
	MS20074-03-05	. BOLT	4	
		---*---		
-26	5655219-1	. CAP-BLEED THROTTLE BODY LH	1	
		ATTACHING PARTS		
-27	4301AA200	. CLAMP	NUCA 1	
	U4301S12-200	. CLAMP ALT FOR 4301AA200	NUCA 1	
		---*---		
-28	5655208-1	. CLAMP ASSY-TURBOCHARGER TO THROTTLE BODY LH & RH	2	
	5655208-3	. SEAL-TURBOCHARGER CLAMP LH & RH	2	

CONTINUED

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
97A-29	9910058-2	. SWITCH-FUEL PRESSURE LH & RH	2	
-30	5600108-32	. LINE ASSY-UNMETERED FUEL PRESSURE-RH	1	
	5600118-4	. LINE ASSY-UNMETERED FUEL PRESSURE-LH	1	
-31	5650013-2	. TEE-FUEL PRESSURE LH & RH	2	
-32	5600108-31	. LINE ASSY-PRESSURE REGULATOR FUEL RETURN LH & RH	2	
-33	AN816-4-4	. NIPPLE LH & RH	2	
-34	5600108-33	. LINE ASSY-PRESSURE LIMITER LH & RH	2	
-35	5600108-30	. LINE ASSY-COMPRESSOR DISCHARGE RH	1	
-36	5650012-1	. BRACKET-FUEL PRESSURE REGULATOR SUPPORT LH & RH	2	
-37		. DELETED NOT USED		
-38	A15S	. CLAMP LH & RH	2	CBHC
-39	0412007-6	. STRAP-GROUND RH PAN-SIXTH BOLT FROM FRONT	1	
-40	5650006-4	. SHIELD-WIRE BUNDLE LH & RH	2	
		ATTACHING PARTS		
	MS35207-205	. SCREW	3	
	MS21083N3	. NUT	3	
		---*---		
-41	MS20825-4D	. TEE-RH MANIFOLD DRAIN	1	
	MS20822-4D	. ELBOW-LH MANIFOLD DRAIN	1	
	5659015-5	. SUPPORT ASSY-OIL BREATHER DRAIN LH	1	
	5659015-6	. SUPPORT ASSY-OIL BREATHER DRAIN RH	1	
	5650007-1	. GASKET-INTERCOOLER LH & RH	2	
	5650015-4	. RESTRICTOR ASSY-INTERCOOLER DRAIN LH & RH	2	
-42	3200X2	. ADAPTER LH	1	WH
	5650015-7	. RESTRICTOR LH	1	
-43	5600107-28	. LINE ASSY-PRESSURE LIMITER LH	1	
-44	5355109-1	. FITTING LH-RH	2	
-45	AN919-1D	. REDUCER LH	1	
-46	5300106-28	. LINE ASSY-COMPRESSOR DISCHARGE LH	1	
-47	MS20913-1	. PLUG LH	1	
-48	5650015-1	. RESTRICTOR-FUEL PRESSURE RH	1	
-49	MS20825-4D	. TEE RH	1	
-50	5300108-44	. LINE ASSY-PRESSURE LIMITER RH	1	
-51	AN919-1D	. REDUCER RH	1	
-52	AN815-4	. UNION-MANIFOLD DRAIN LH & RH	2	
-53	S1129-4-0130	. HOSE ASSY-MANIFOLD DRAIN LH & RH	2	
-54	MS20823-4D	. ELBOW LH & RH	2	
-55	MS20822-6D	. ELBOW LH & RH	2	
-56	S1129-6-017C	. HOSE ASSY-MANIFOLD DRAIN LH & RH	2	
-57	MS20822-6D	. ELBOW LH & RH	2	
	AN924-6D	. NUT LH & RH	2	
	AN936A916B	. LOCK WASHER LH & RH	2	
-58	1H19-5	. VALVE ASSY-MANIFOLD DRAIN LH & RH	2	ABNE
		# SEE CESSNA CRAFTED TURBOCHARGER AND CONTROLS SERVICE/PARTS MANUAL		
		A---340A0001 & ON		

ENGINE

18 WASTE GATE ACTUATOR ASSEMBLY
42 ALTERNATOR INSTALLATION
43 ENGINE EXHAUST SYSTEM AND SHIELDS INSTALLATION
44 ENGINE BAFFLES INSTALLATION

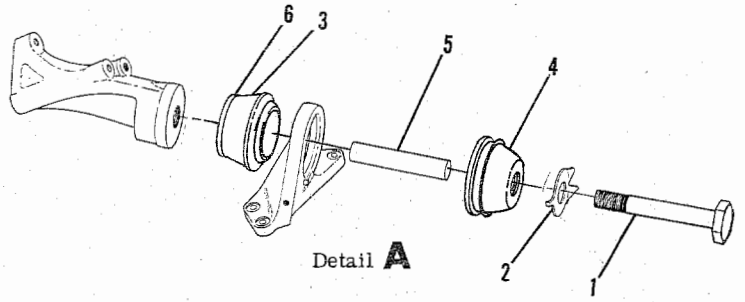

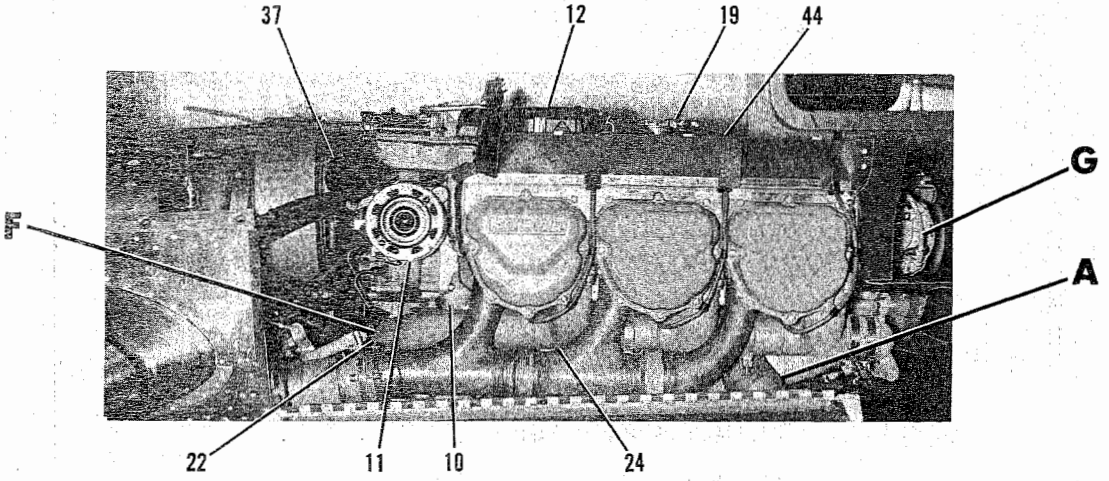

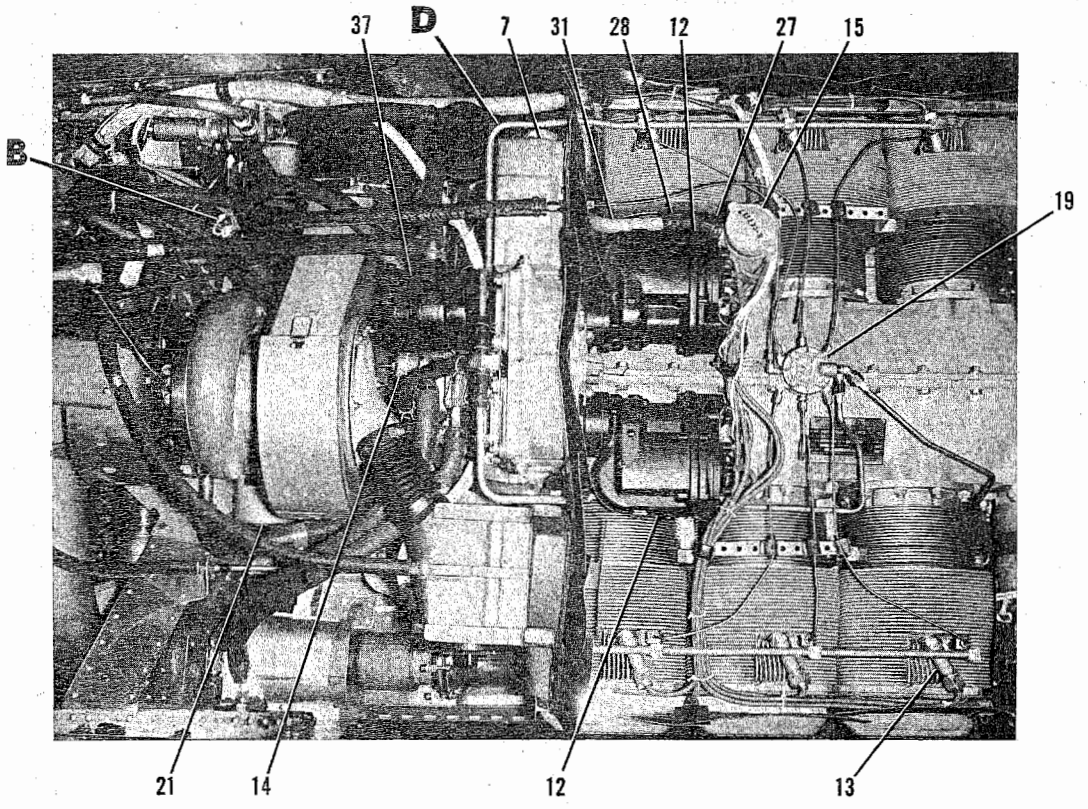

Figure 98. Engine Assembly and Accessories Installation (Sheet 1 of 3)

ENGINE

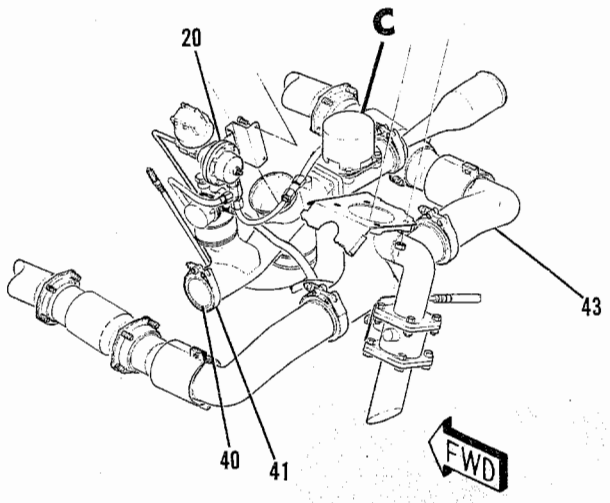

Detail B

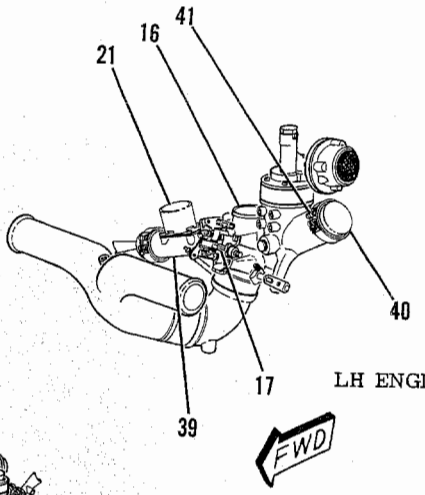

LH ENGINE

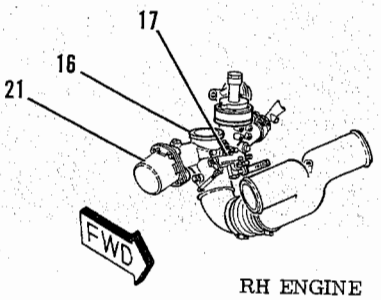

RH ENGINE

Detail C

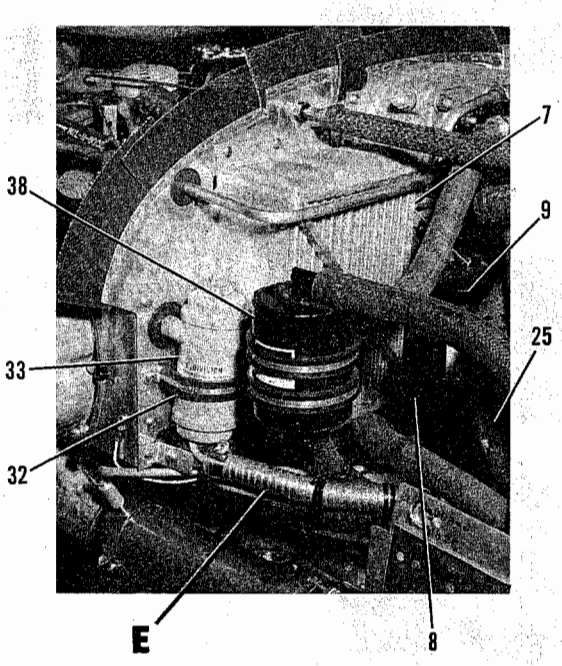

Detail D

Figure 98. Engine Assembly and Accessories Installation (Sheet 2)

ENGINE

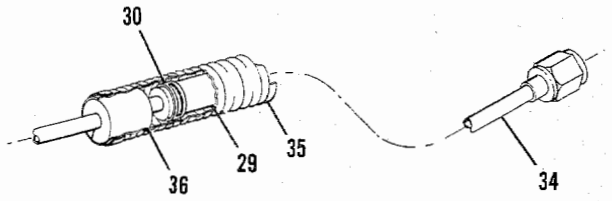

Detail **E**

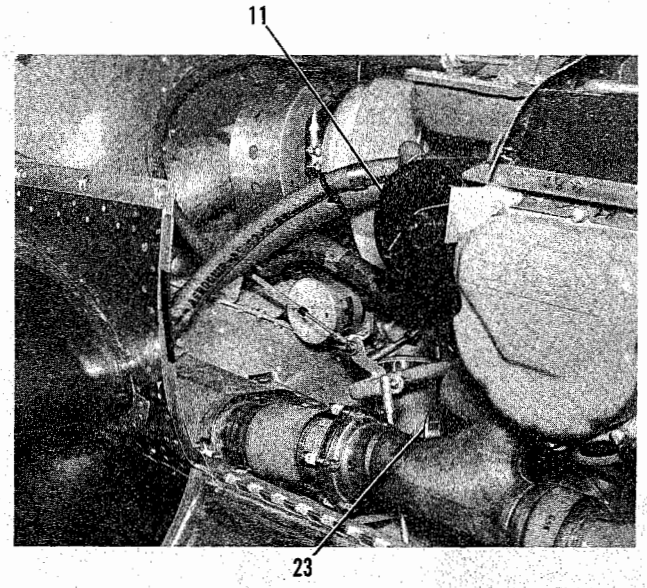

Detail **F**

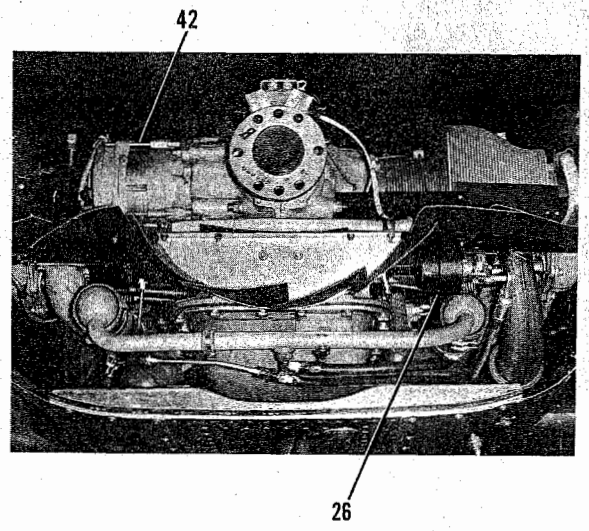

Detail **G**

Figure 98. Engine Assembly and Accessories Installation (Sheet 3)

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
98 -		ENGINE ASSEMBLY AND ACCESSORIES INSTALLATION	NP	G
	TSIO520K	. ENGINE ASSY-LH REF CES 2699-1	CM 1	
	SPEC1			
	TSIO520K	. ENGINE ASSY-RH REF CES 2699-2	CM 1	
	SPEC2			
-1	AN7-33A	. BOLT	4	
-2	0851559-1	. LOCKWASHER	4	
-3	J9613-58	. MOUNT KIT	LO 4	
	92702-01	. MOUNT KIT ALT FOR J9613-58	BCIB 4	
-4		. . DELETED NOT USED		
-5		. . DELETED NOT USED		
-6	5056010-1	. SPACER .125 THICK	AR	
	5056010-2	. SPACER .188 THICK	AR	
	5056010-3	. SPACER .250 THICK	AR	
	5056010-4	. SPACER .312 THICK	AR	
	TSIO520K	. . ENGINE ASSY-LH SPARE REF CES 2699-3	CM 1	
	TSIO520K	. . ENGINE ASSY-RH SPARE REF CES 2699-4	CM 1	
-7	633287	. . . OIL COOLER & BAFFLE ASSY	CM 1	
		ATTACHING PARTS		
	MS35207-263	. . . SCREW	6	
	2474	. . . WASHER	CM 4	
	630849	. . . GASKET-WASHER	CM 2	
	AN936A616	. . . WASHER-LOCK	4	
	2441	. . . NUT	CM 4	
		---*---		
	631059	. . . GASKET-OIL COOLER	CM 1	
	634065	. . . VALVE ASSY-VERNATHERM	CM 1	
-8	632970	. . . OIL PUMP & HOUSING ASSY COMPLETE	CM 1	
		ATTACHING PARTS		
	AN960-416L	. . . WASHER	8	
	AN936A416	. . . WASHER	8	
	AN316-4R	. . . NUT	8	
		---*---		
	631034	. . . GASKET-OIL PUMP TO CRANKCASE	CM 1	
-9	637584	. . . FILTER ASSY-OIL	CM 1	
	632881	. . . . ADAPTER-OIL FILTER	CM 1	
	632266	. . . GASKET-OIL FILTER	CM 1	
-10	635061A2	. . . ADAPTER ASSY-STARTER & SCAVENGER PUMP	CM 1	
		ATTACHING PARTS		
	2473	. . . WASHER	CM 4	
	AN936A516	. . . WASHER-LOCK	4	
	AN315-5R	. . . NUT	4	
		---*---		
	630916	. . . GASKET-STARTER ADAPTER	CM 1	
-11	634433	. . . MOTOR ASSY-STARTER PRESTOLITE MHJ4002	CM 1	
		ATTACHING PARTS		
	CM2949LS152	. . . CLAMP	1	
	CM2949152	. . . CLAMP ALT FOR CM2949LS152	1	
	401507	. . . WASHER	CM 2	
	2441	. . . NUT	CM 2	
	2561	. . . PALNUT	CM 2	
		---*---		
	630899	. . . BEARING-ROLLER STARTER	CM 1	
	MS9021-038	. . . O-RING STARTER TO ADAPTER	1	
	534743	. . . GASKET OIL SUMP TO CRANKCASE	CM 1	
	532432	. . . PLUG-OIL DRAIN	CM 1	
	AN900-10	. . . GASKET-OIL DRAIN PLUG	1	
	AN900-10	. . . GASKET-OIL SUCTION LINE	1	
	AN900-12	. . . GASKET-OIL SUCTION LINE	1	
	636603	. . . HARNESS ASSY-MAGNETO	CM 1	
-12	632958	. . . MAGNETO ASSY-LH BENDIX-SCINTILLA 10-349220-1	CM 1	
	632959	. . . MAGNETO ASSY-RH BENDIX-SCINTILLA 10-349260-1	CM 1	
		ATTACHING PARTS		
	535847	. . . WASHER	CM 4	
	AN936A516	. . . WASHER-LOCK	4	
	AN315-5R	. . . NUT	4	
		---*---		
	534750	. . . GASKET-MAGNETO TO CRANKCASE	CM 2	
	534861	. . . ADAPTER ASSY-MAGNETO & ACCESSORY DRIVE	CM 2	
	534863	. . . GASKET-ADAPTER TO CRANKCASE	CM 2	
	633068	. . . COVER-ACCESSORY DRIVE	CM 2	
	MS9134-01	. . . GASKET-ACCESSORY DRIVE COVER	2	
	629422	. . . GEAR ASSY-MAGNETO & ACCESSORY DRIVE	CM 2	
	531178	. . . RETAINER-MAGNETO DRIVE COUPLING	CM 2	
	531179	. . . BUSHING-MAGNETO DRIVE COUPLING RUBBER	CM 4	
	628739	. . . TERMINAL ASSY-RETARD LH MAGNETO	CM 1	
		BENDIX-SCINTILLA 10-157208		
	628740	. . . TERMINAL ASSY-GROUND LH & RH MAGNETO	CM 2	
		BENDIX-SCINTILLA 10-157209		

CONTINUED

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
98 -13	SL350		. . . SPARK PLUG	12	
-14	632818-2A2		. . . PUMP ASSY-FUEL LH & RH CM	2	E
	632818-2A2		. . . PUMP ASSY-FUEL LH CM	1	F
	632818-2A3		. . . PUMP ASSY-FUEL RH CM	1	F
			ATTACHING PARTS		
	535847		. . . WASHER CM	2	
	AN936A516		. . . WASHER	2	
	AN315-5R		. . . NUT	2	
			---*---		
	630736		. . . GASKET-FUEL PUMP TO CRANKCASE CM	1	
	632748-14		. . . NOZZLE ASSY-FUEL INJECTION CM	1	
-15	633233-7		. . . DIPSTICK ASSY-OIL GAGE LH CM	1	
	633233-8		. . . DIPSTICK ASSY-OIL GAGE RH CM	1	
	632347		. . . COVER-ALTERNATOR PAD CM	1	
			ATTACHING PARTS		
	2473		. . . WASHER CM	4	
	AN935-516L		. . . WASHER	4	
	23867		. . . NUT CM	4	
			---*---		
	929436		. . . GASKET-ALTERNATOR COVER TO CRANKCASE CM	1	
	634011		. . . BRACKET-FUEL MANIFOLD TO CRANKCASE CM	1	
-16	637735A1		. . . THROTTLE BODY ASSY-FUEL INJECTION CM	1	
	5155121-4		. . . SEAL	1	
	5155121-5		. . . SEAL	1	
	5650001-1		. . . PLATE-SEAL	1	
	5650001-2		. . . PLATE-SEAL	1	
	MS27039-0807		. . . SCREW	1	
-17	637736A1		. . . INJECTION ASSY-FUEL METERING FSO 632916-11A1 CM	1	A
	632916-11A1		. . . INJECTION ASSY-FUEL METERING CM	1	B
-18	SEE FIG 102		. . . ACTUATOR ASSY-WASTE GATE	REF	
-19	634326-4A1		. . . VALVE ASSY-FUEL MANIFOLD CM	1	
-20	636915		. . . REGULATOR ASSY-FUEL PRESSURE CM	1	
-21	470930-17		. . . VALVE-PRESSURE RELIEF GCT	1	
			ATTACHING PARTS		
	MS35265-66		. . . SCREW	4	
			---*---		
-22	637357		. . . ELBOW-INTAKE MANIFOLD CM	1	
	5650015-4		. . . RESTRICTOR-INTAKE MANIFOLD	1	
-23	630817-1		. . . BELLOWS-INTAKE MANIFOLD CONVOLUTED CM	1	
-24	637356		. . . RISER-INTAKE MANIFOLD CM	1	
-25	0850350-5		. GENERATOR-TACHOMETER	2	
	0813601-3		. BULB-OIL TEMPERATURE	2	
	0813601-4		. BULB-CYLINDER HEAD TEMPERATURE	2	
-26	B210446F		. GOVERNOR-PROPELLER PROP SYNCH WGV	2	
	DCFS290D2/T3	**	. GOVERNOR-PROPELLER PROP SYNCH ALT FOR B210446F MCL	2	
	DCFS290D1/T3	**	. GOVERNOR-PROPELLER PROP SYNC ALT FOR B210446F MCL	2	
	A210529H		. GOVERNOR-PROPELLER PROP SYNCH & UNFEATHERING WGV	2	
	DCFUS290D2/T3	*	. GOVERNOR-PROPELLER PROP SYNCH & UNFEATHERING MCL	2	
			ALT FOR A210529H		
	DCFUS290D1/T3	*	. GOVERNOR-PROPELLER PROP SYNC & UNFEATHERING MCL	2	
			ALT FOR A210529H		
-27	S51-12		. HOSE BKI	AR	
			ATTACHING PARTS		
-28	NAS397-18		. CLAMP	AR	
			---*---		
-29	S51-4		. HOSE BKI	AR	
			ATTACHING PARTS		
-30	NAS397-10		. CLAMP	AR	
			---*---		
-31	0826018-233		. LINE-OIL BREATHER	2	
-32	MS21919DF40		. CLAMP OIL SEPARATOR	2	
-33	5251802-1		. SEPARATOR ASSY-OIL BREATHER	1	
	AMA201411-800		. . TOP-OIL SEPARATOR AMA	1	
			ATTACHING PARTS		
	A17045-56		. . WASHER		
	WC040		. . NUT-WING		
			---*---		
	AMA201411-06		. . GASKET AMA	1	
	0850694-5		. . ELEMENT	1	
	AMA202067-156		. . BODY AMA	1	
-34	5600107-17		. LINE ASSY-PUMP TO SEPARATOR	2	
	MS20822-4B		. ELBOW FURNISHED WITH PUMP	2	
-35	5200106-115		. CONDUIT-OIL SEPARATOR LINE	2	
-36	5255014-1		. BUSHING-CONDUIT	2	
	AN737TW30		. CLAMP ASSY-CONDUIT	2	
-37	C431002-0103		. PUMP ASSY-DRY VACUUM FSO 212CW	2	C
			USED WITH VACUUM SYSTEM		
	212CW		. PUMP ASSY-DRY VACUUM USED WITH VACUUM SYSTEM	1	D
	C431003-0301		. PUMP ASSY-DRY VACUUM USED WITH VACUUM SYSTEM	1	D
	0870069-53		. PUMP ASSY-VACUUM USED WITH DEICE SYSTEM	2	

CONTINUED

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
98 -38	C165001-0202	. SEPARATOR-AIR OIL USED WITH DEICE SYSTEM	2	
-39	5655212-1	. TEE-ADAPTER LH THROTTLE BODY TO VENTURI	1	
		ATTACHING PARTS		
	MS20074-03-05	. BOLT	4	
		---*---		
-40	5655219-1	. CAP-BLEED LH THROTTLE BODY	1	
		ATTACHING PARTS		
-41	4301AA200	. CLAMP . . . . . NUCA	1	
	U4301S12-200	. CLAMP ALT FOR 4301AA200 . . . . . NUCA	1	
		---*---		
-42	SEE FIG 99	. ALTERNATOR INSTL	1	
-43	SEE FIG 100	. ENGINE EXHAUST SYSTEM & SHIELDS INSTL	1	
-44	SEE FIG 101	. ENGINE BAFFLES INSTL	1	
		*---WHEN THESE PARTS ARE INSTALLED AS ALTERNATES THEY MUST BE INSTALLED AS PAIRS		
		A---340-0001 THRU 340-0100 EXCEPT AIRCRAFT MODIFIED BY SK340-3		
		B---340-0101 TO 340A0001 AND AIRCRAFT MODIFIED BY SK340-3		
		C---340-0001 THRU 340-0311		
		D---340-0312 TO 340A0001		
		E---340-0001 THRU 340-0053		
		F---340-0054 TO 340A0001		
		G---340-0001 TO 340A0001		

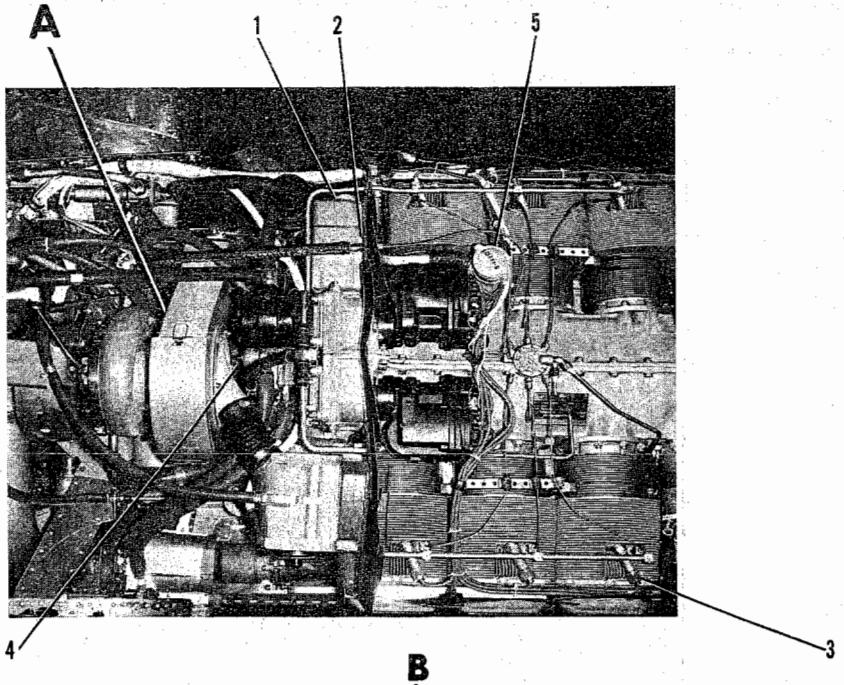

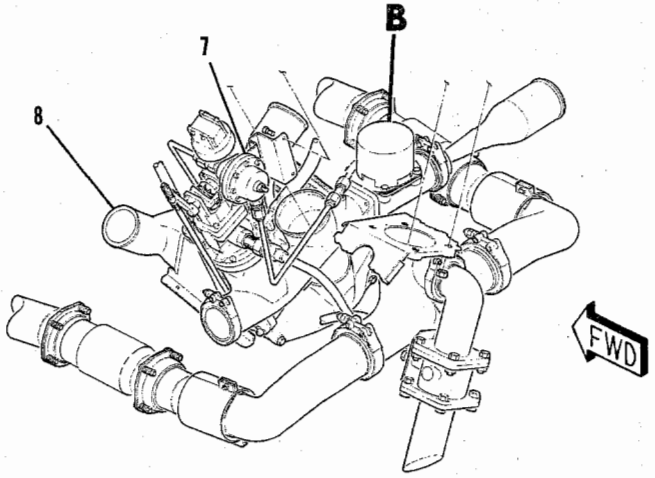

Detail **A**

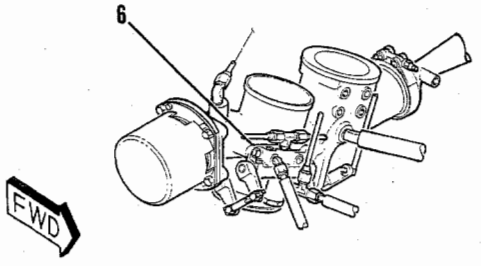

Detail **B**

A14502001

Figure 98A. Engine Assembly

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
98A-			ENGINE ASSEMBLY	NP	A
	TSIO520N SPEC1	*	. ENGINE ASSY-LH REF CES2680-9 CM	1	
	TSIO520N SPEC2	*	. ENGINE ASSY-RH REF CES2680-10 CM	1	
	TSIO520N SPEC1		. . ENGINE ASSY-LH SPARE REF CES2680-11 CM	1	
	TSIO520N SPEC2		. . ENGINE ASSY-RH SPARE REF CES2680-12 CM	1	
-1	633531		. . OIL COOLER CM	1	
			ATTACHING PARTS		
-2	MS35207-263		. . SCREW	6	
	2474		. . WASHER CM	4	
	630849		. . GASKET-WASHER CM	2	
	AN936A616		. . WASHER-LOCK	4	
	2441		. . NUT CM	4	
			---*---		
-3	SL350		. . SPARK-PLUG	12	
-4	632818-2A2		. . PUMP ASSY-FUEL CM	1	
			ATTACHING PARTS		
	535847		. . WASHER CM	2	
	AN936A516		. . WASHER	2	
	AN315-5R		. . NUT	2	
			---*---		
-5	633233-7		. . DIPSTICK ASSY-OIL GAGE LH CM	1	
	633233-8		. . DIPSTICK ASSY-OIL GAGE RH CM	1	
-6	632916-11		. . CONTROL ASSY-FUEL METERING CM	1	
			ATTACHING PARTS		
	501867		. . WASHER CM	3	
	630387		. . SCREW CM	3	
			---*---		
-7	636204-3		. . REGULATOR ASSY-FUEL PRESSURE CM	1	
-8	635919A1		. . INTERCOOLER ASSY-COMPRESSOR AIR CM	1	
	635938		. . GASKET-INTERCOOLER CM	1	
	6650007-1		. . GASKET-INTERCOOLER	1	
	635930		. . ELBOW-FLEXIBLE INTERCOOLER OUT CM	2	
-9	407810-1	#	. . TURBOCHARGER GCT	1	
			ATTACHING PARTS		
	AN6C13A		. . BOLT	4	
	MS21046L6		. . NUT	4	
			---*---		

* PARTIAL BREAKDOWN ONLY SEE CONTINENTAL MOTORS CORP SERVICE PARTS CATALOG FOR FURTHER BREAKDOWN

#---SEE CESSNA CRAFTED TURBOCHARGER CONTROLS SERVICE/PARTS MANUAL

A---340A0001 & ON

ENGINE

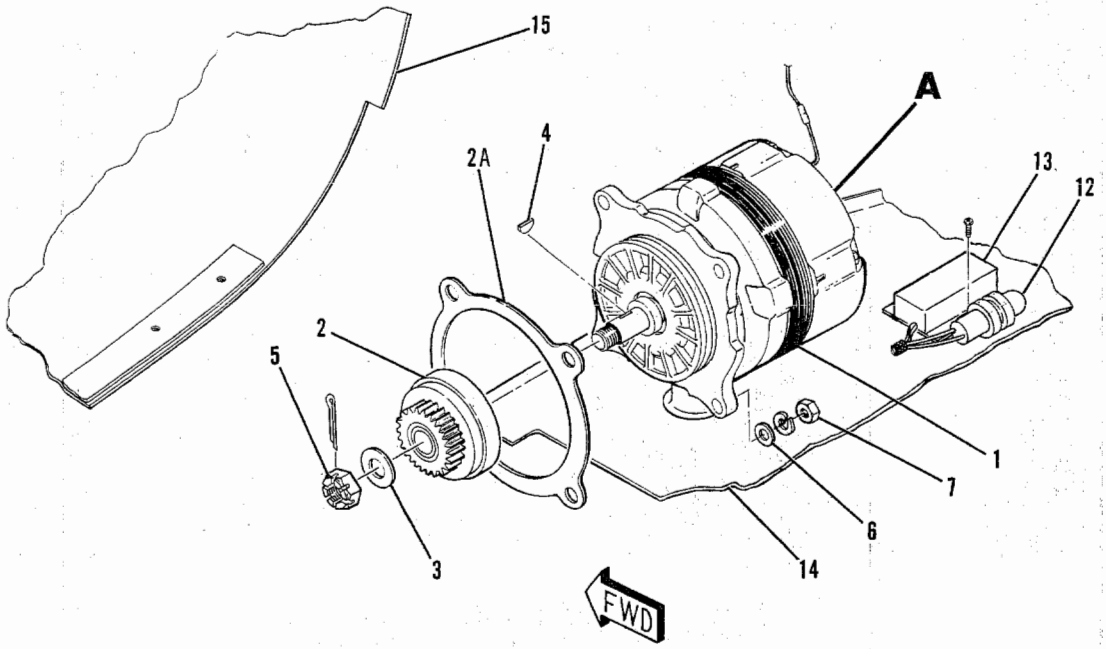

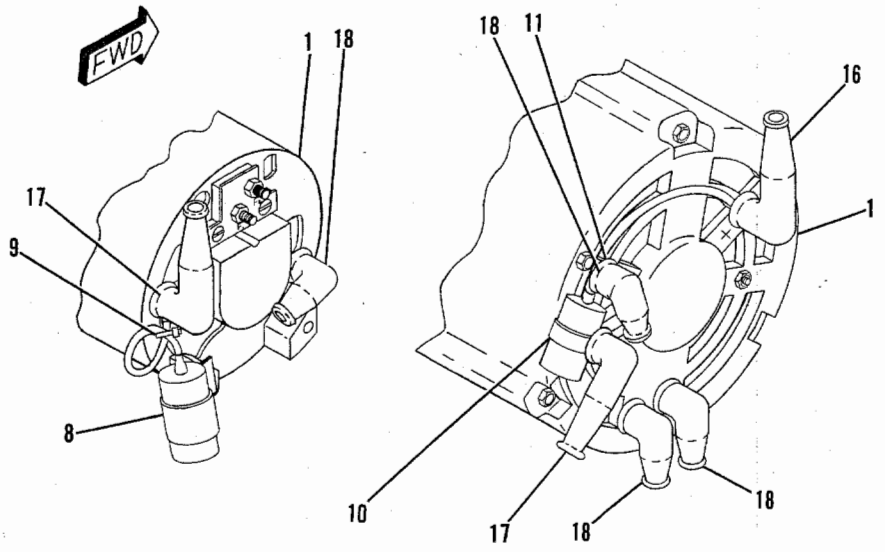

50 AMP ALTERNATOR

100 AMP ALTERNATOR

14 BAFFLE INSTL
15 NOSE CAP INSTL

52582002
A10581005

Figure 99. Alternator Installation

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
99 -			ALTERNATOR INSTALLATION	NP	
-1	634445		. ALTERNATOR 50 AMP FSO 5118514-1	CM 2	H
	5118514-1		. ALTERNATOR 50 AMP	CM 2	G
	634788		. ALTERNATOR 100 AMP FSO 5118513-3	CM 2	A
	639229		. ALTERNATOR 100 AMP FSO 5118513-3	CM 2	B
	640053		. ALTERNATOR 100 AMP FSO 5118513-3	CM 2	C
	5118513-3		. ALTERNATOR 100 AMP	CM 2	G
			ATTACHING PARTS		
-2	637565		. HUB ASSY FURNISHED WITH ENGINE	CM 1	
-2A	629436		. GASKET	CM 1	
-3	630691		. WASHER FURNISHED WITH ALTERNATOR	CM 1	
-4	X260		. KEY-WOODRUFF FURNISHED WITH ALTERNATOR	PRST 1	
-5	8X4075		. NUT FURNISHED WITH ALTERNATOR	PRST 1	
	MS24665-302		. COTTER PIN FURNISHED WITH ALTERNATOR	1	
-6	2374		. WASHER FURNISHED WITH ENGINE	CM 4	
	AN935-516L		. WASHER LOCK FURNISHED WITH ENGINE	4	
-7	23867		. NUT FURNISHED WITH ENGINE	CM 4	
			---*---		
	5190057-3	#	. WIRE ASSY-LH GROUND USED WITH 640053	1	C
	5190057-4	#	. WIRE ASSY-RH GROUND USED WITH 640053	1	C
	5118162-3		. KIT-NOISE FILTER 50 AMP ALTERNATOR	1	
-8	5118162-4		. . CAPACITOR ASSY	1	
-9	TY523M		. . TIE STRAP TYCO	1	
	5118162-1		. KIT-NOISE FILER WEU 5118162-5 100 AMP ALTERNATOR	1	K
	5118162-5		. KIT-NOISE FILTER	1	L
-10	5118162-2		. . CAPACITOR ASSY	1	
-11	S1155-2		. . CLAMP	1	
-12	5118335-10		. DIODE ASSY-LH & RH	2	
			ATTACHING PARTS		
	MS21919WDG7		. CLAMP	1	
			---*---		
-13	9910094-1		. SENSOR-ALTERNATOR OUT LH & RH	2	D
	9910094-2		. SENSOR-ALTERNATOR OUT LH & RH FSO 9910094-3	2	E
	9910094-3		. SENSOR-ALTERNATOR OUT LH & RH	2	F
			ATTACHING PARTS		
	MS27039-0807		. SCREW	2	
			---*---		
-14	SEE FIG 101		. BAFFLE INSTL-FWD	REF	
-15	SEE FIG 95		. NOSE CAP ASSY-COWL	REF	
-16	MS25171-4		. NIPPLE USE WITH 100 AMP ALTERNATOR	1	J
-17	MS25171-3		. NIPPLE	2	JJ
-18	MS25171-1		. NIPPLE	4	J

ORDER THIS PART WHEN REPLACING 50 AMP ALTERNATOR WITH 100 AMP ALTERNATOR

A---340-0001 THRU 340-0047
B---340-0048 THRU 340-0229
C---340-0230 THRU 340-0500
D---340-0001 THRU 340-0150
E---340-0151 THRU 340-0343
F---340-0344 & ON
G---340-0501 & ON
H---340-0001 THRU 340-0500
J---340-0549 & ON
K---340-0001 TO 340A0001
L---340A0001 & ON

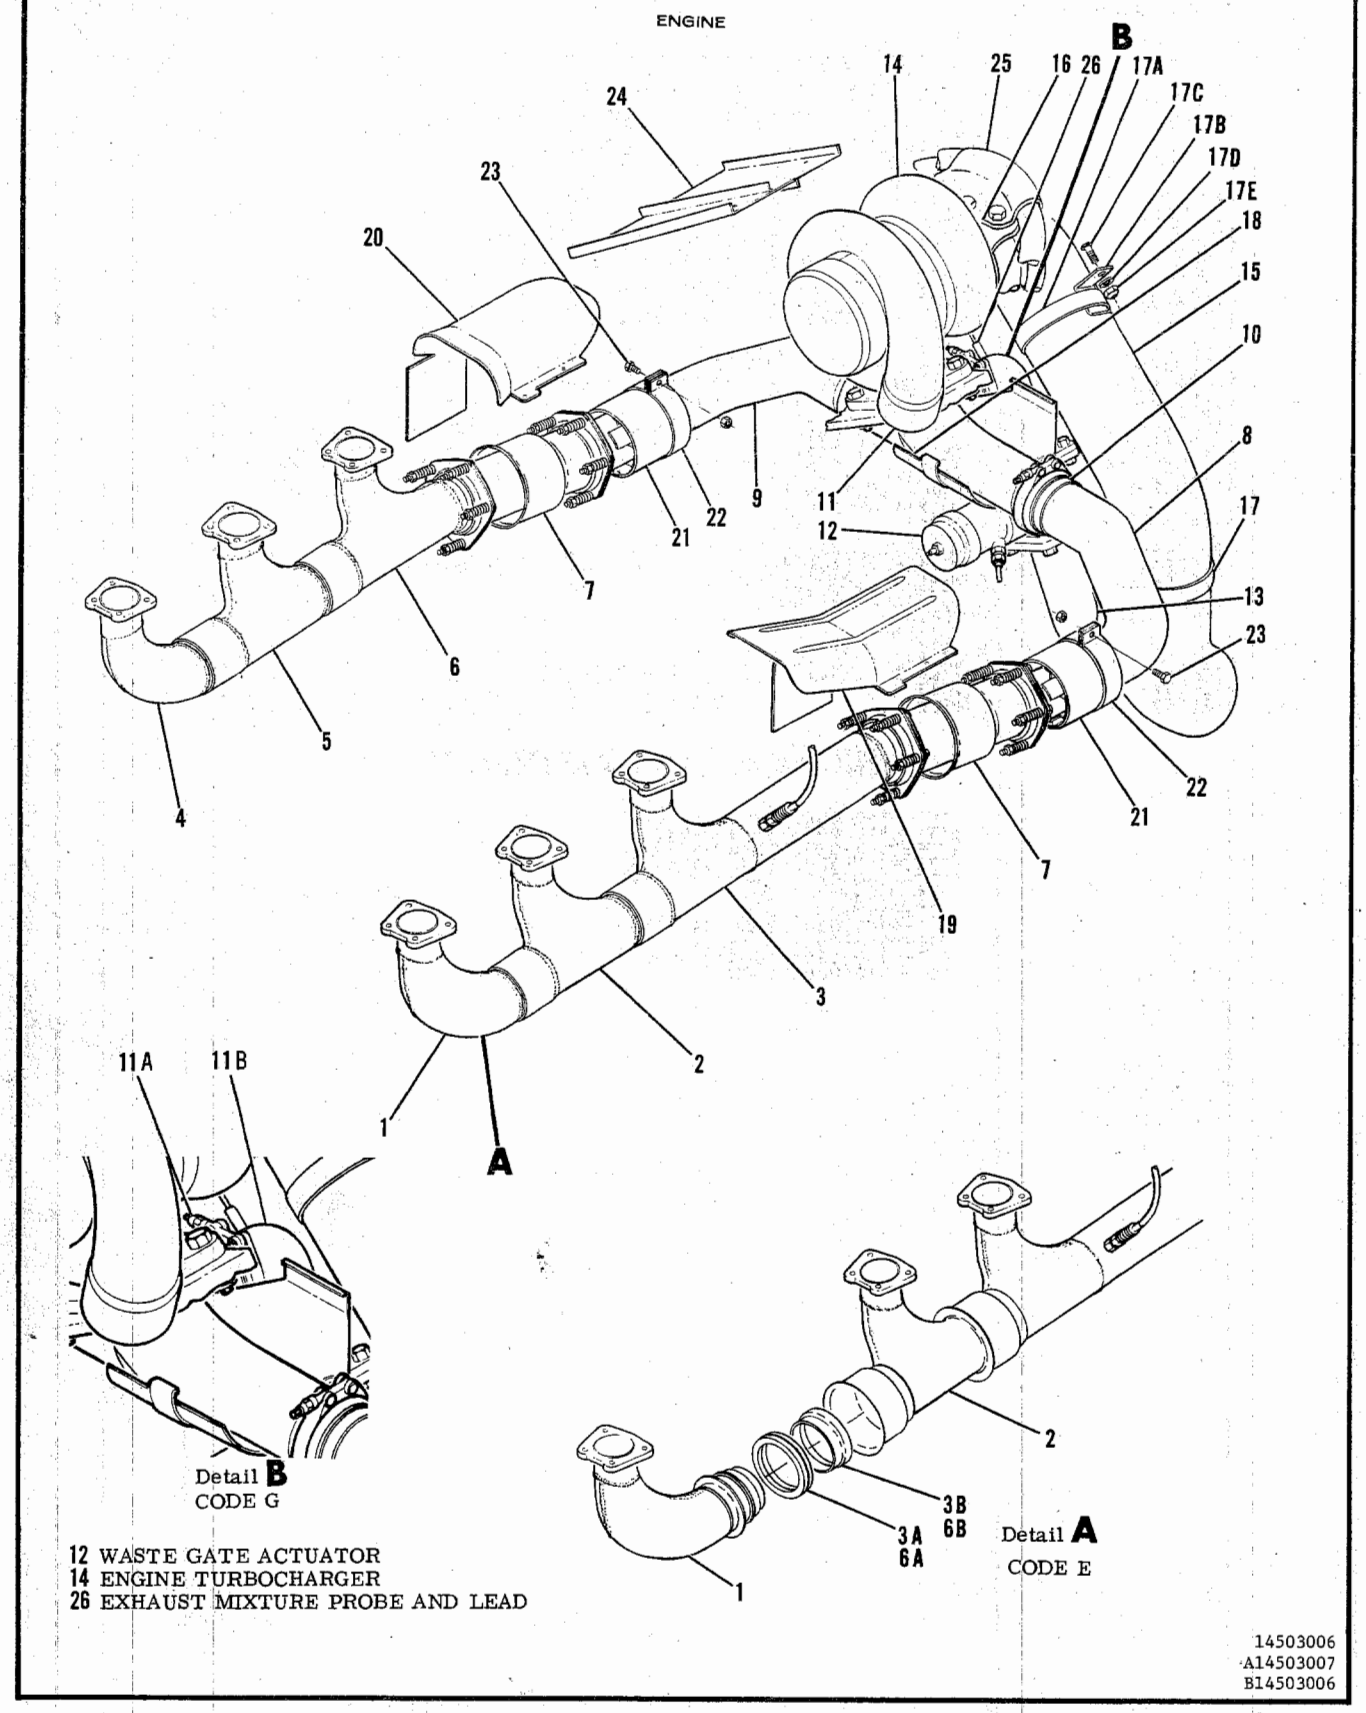

Figure 100. Engine Exhaust System and Shields Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
100 -		ENGINE EXHAUST SYSTEM AND SHIELDS INSTALLATION	NP	
	5355100-200	. EXHAUST STACK ASSY-LH WEU 5355100-203	1	E
	5355100-203	. EXHAUST STACK ASSY-LH	1	E
	5155166-1	. EXHAUST STACK ASSY-LH	1	F
-1	5355100-31	. . RISER ASSY-FWD LH	1	E
	5155166-7	. . RISER ASSY-FWD LH	1	F
-2	5355100-29	. . RISER ASSY-CTR LH	1	E
	5155166-9	. . RISER ASSY-CTR LH	1	F
-3	5355100-51	. . RISER ASSY-AFT LH	1	E
	5155166-13	. . RISER ASSY-AFT LH	1	F
-3A	10007467	. . SEAL-KIT	2 SPTS	E
-3B	1006670-5	. . RING-EXPANSION	2 SPTS	E
	5355100-201	. EXHAUST STACK ASSY-RH WEU 5355100-204	1	E
	5355100-204	. EXHAUST STACK ASSY-RH	1	E
	5155166-2	. EXHAUST STACK ASSY-RH	1	F
-4	5355100-32	. . RISER ASSY-FWD RH	1	E
	5155166-8	. . RISER ASSY-FWD RH	1	F
-5	5355100-30	. . RISER ASSY-CTR RH	1	E
	5155166-10	. . RISER ASSY-CTR RH	1	F
-6	5355100-52	. . RISER ASSY-AFT RH	1	E
	5155166-14	. . RISER ASSY-AFT RH	1	F
-6A	1007467	. . SEAL-KIT	2 SPTS	E
-6B	1006670-5	. . RING-EXPANSION	2 SPTS	E
-7	5355108-1	. SLIP JOINT ASSY-LH & RH WEU 5355108-4	2	E
	5355108-4	. SLIP JOINT ASSY-LH & RH	2	F
		ATTACHING PARTS		
	AN3C13	. BOLT	10	
	186-225	. SPRING HLW	AR	
	AN960-10L	. WASHER	AR	
	AN310C3	. NUT	10	
	MS24665-153	. PIN-COTTER	AR	
		---*---		
	1007467	. . SEAL-KIT WEU 1008092	2 SPTS	H
	1008092	. . SEAL-KIT	2 SPTS	J
	1006670-5	. . RING-EXPANSION	2 SPTS	
-8	5654551-5	. PIPE ASSY-LH	1	
-9	5654551-6	. PIPE ASSY-RH	1	
-10	MVT68892-250	. COUPLING	2 MDAQ	
	4301BT250	. COUPLING ALT FOR MVT68892-250	2 NUCA	
	17189-250N1	. GASKET	2 MDAQ	
-11	5355100-56	. WYE ASSY	1	
	5654551-9	. WYE ASSY	1	G
		ATTACHING PARTS		
	AN6C13A	. BOLT	4	
	MS21046C6	. NUT	4	
		---*---		
-11A	5654551-4	. ELBOW-WYE TO WASTEGATE-LH & RH	2	G
-11B	MVT68892-200	. COUPLING-LH & RH MDAQ	2	G
	17189-200-N-1	. GASKET-LH & RH	2	G
-12	SEE FIG 102	. ACTUATOR-WASTE GATE	1	
		ATTACHING PARTS		
	AN4C10A	. BOLT	8	
	MS21046C4	. NUT	8	
		---*---		
-13	5355100-64	. OVERBOARD-WASTEGATE	1	
	5654551-3	. OVERBOARD-WASTEGATE	1	G
	U84-210SH	. CLAMP-OVERBOARD WASTEGATE	1	G
-14	SEE FIG 97	. TURBOCHARGER-ENGINE	REF	
-15	5654551-7	. OVERBOARD EXHAUST ASSY-LH	1	
	5654551-8	. OVERBOARD EXHAUST ASSY-RH	1	
-16	4311AA450	. COUPLING V-BAND FSO V57A5019 NUCA	1	A
	V37A5019	. COUPLING V-BAND FSO V57A5019 WILP	1	C
	V57A5019	. COUPLING V-BAND WEU NH1000897-50 WILP	1	C D
	41195AA502	. COUPLING V-BAND ALT FOR V57A5019 NUCA	1	D
		WEU NH1000897-50		
	NH1000897-50	. COUPLING V-BAND MDAQ	1	K
-17	U86C400SS	. CLAMP FSO U84C400SS NUCA	1	A
	U84C400SS	. CLAMP NUCA	1	B
-17A	U84C400SS	. CLAMP NUCA	1	B
-17B	5654030-2	. BRACKET	1	B
		ATTACHING PARTS		
-17C	AN3C3	. BOLT	1	
-17D	AN960C10L	. WASHER	1	
-17E	MS21046C3	. NUT	1	
		---*---		
-18	5654552-5	. SHIELD ASSY-WASTE GATE	1	
		ATTACHING PARTS		
	MS27039C0807	. SCREW	2	
		---*---		
-19	0850715-1	. SHIELD-MANIFOLD OUTBD LH ENGINE	1	
	0850716-1	. SHIELD-MANIFOLD OUTBD RH ENGINE	1	
		ATTACHING PARTS		
	MS27039C0804	. SCREW	3	
		---*---		

CONTINUED

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
100 -20	5650008-5	. SHIELD-MANIFOLD INBD LH ENGINE	1	
	5650008-6	. SHIELD-MANIFOLD INBD RH ENGINE	1	
		ATTACHING PARTS		
	MS27039C0804	. SCREW	3	
		---*---		
-21	0851053-5	. SHROUD-MANIFOLD	4	
		ATTACHING PARTS		
-22	320C062-262M	. CLAMP MDAQ	2	
-23	AN3-3A	. BOLT-OUTBD	2	
	AN3-4A	. BOLT-INBD	2	
	MS21042L3	. NUT	2	
		---*---		
-24	5650005-1	. SHIELD-MANIFOLD LH ENGINE	1	
	5650005-2	. SHIELD-MANIFOLD RH ENGINE	1	
		ATTACHING PARTS		
	MS24693S47	. SCREW	2	
		---*---		
-25	5155137-1	. SHIELD ASSY-ENGINE CONTROLS LH ONLY	1	L
	5655214-1	. SHIELD ASSY-ENGINE CONTROLS LH ONLY	1	M
		ATTACHING PARTS		
	AN742D35	. CLAMP	1	L
	MS21919H28	. CLAMP	1	M
	MS21919H12	. CLAMP	1	M
	MS27039-1-06	. SCREW	1	
	MS21083N3	. NUT	1	
		---*---		
-26	SEE FIG 145	. PROBE & LEAD-EXHAUST MIXTURE	REF	
	CM3702-5	. FIRESLEEVE-EXHAUST MIXTURE PROBE BKI	AR	

A---340-0001 THRU 340-0150
B---340-0151 & ON
C---340-0151 THRU 340-0212
D---340-0213 THRU 340A0012
E---340-0001 THRU 340-0500
F---340-0501 & ON
G---340A0001 & ON
H---340-0001 THRU 340A0007
J---340A0008 & ON
K---340A0013 & ON
L---340-0001 THRU 340A0023
M---340A0024 & ON

ENGINE

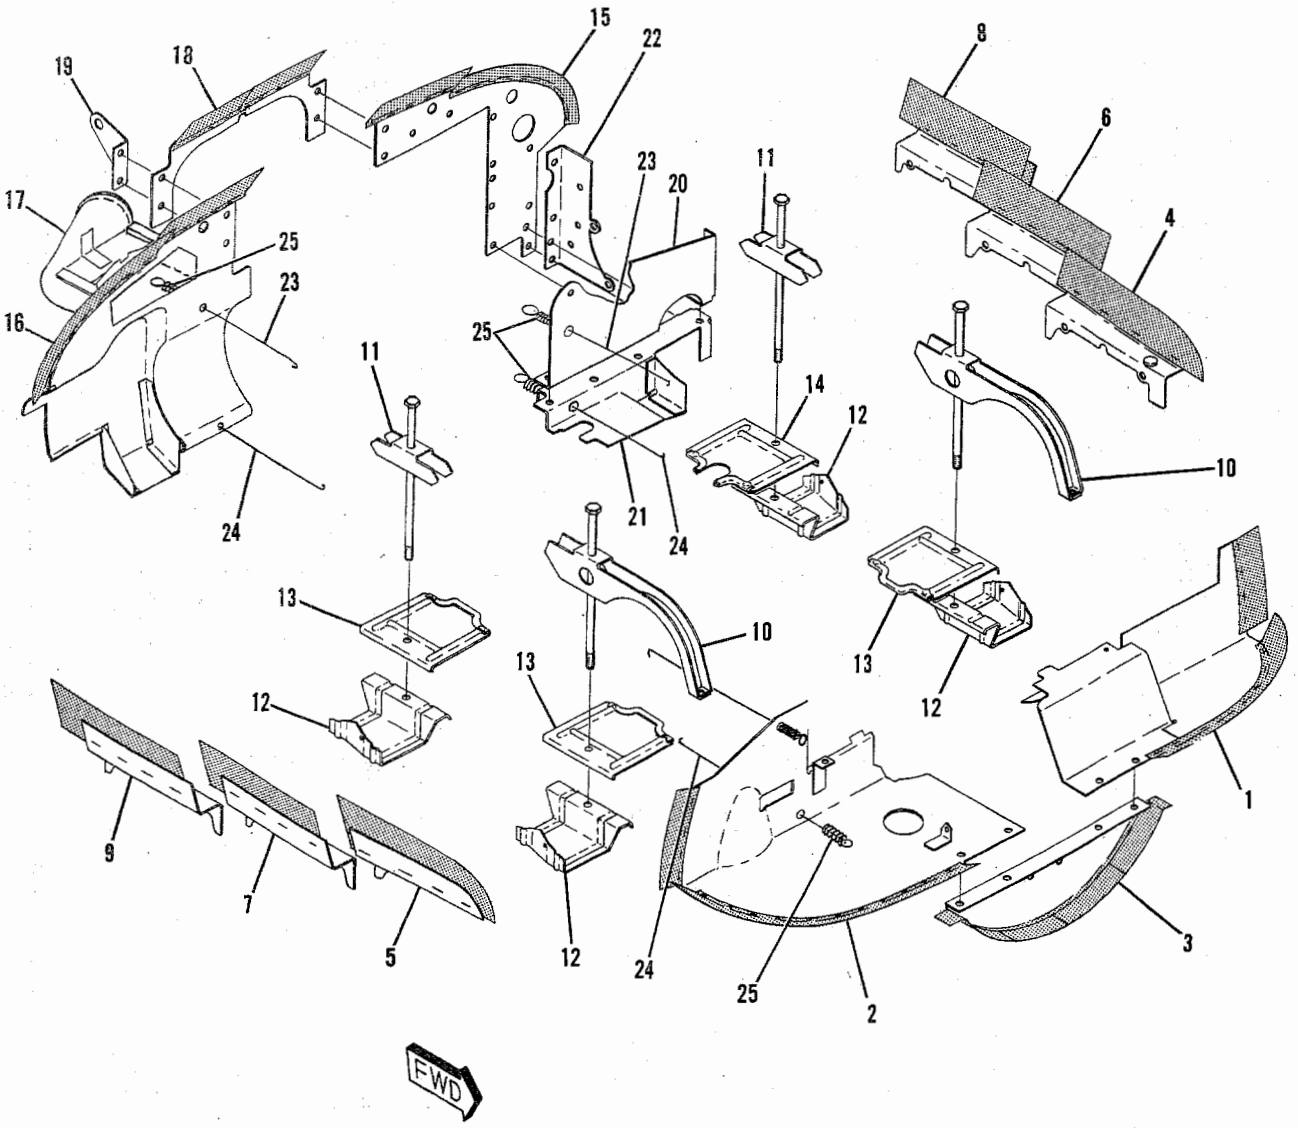

Figure 101. Engine Baffles Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
101 -		ENGINE BAFFLES INSTALLATION	NP	
-1	0851838-31	. BAFFLE ASSY-FWD LH LH ENGINE	1	G
	0851838-41	. BAFFLE ASSY-FWD LH LH ENGINE	1	H
	0851838-22	. BAFFLE ASSY-FWD LH RH ENGINE	1	
-2	0851838-27	. BAFFLE ASSY-FWD RH LH ENGINE	1	
	0851838-25	. BAFFLE ASSY-FWD RH RH ENGINE	1	
		ATTACHING PARTS		
	S1021Z6-6	. SCREW	2	
	NAS446-2-3	. NUT	2	
		---*---		
-3	0851827-1	. BAFFLE ASSY-FWD CTR	2	
		ATTACHING PARTS		
	MS27039-0805	. SCREW	4	
	MS21042L08	. NUT	4	
		---*---		
	5355103-25	. BAFFLE ASSY-SIDE LH LH ENGINE	1	C
	5355103-31	. BAFFLE ASSY-SIDE LH LH ENGINE	1	D
	5355103-27	. BAFFLE ASSY-SIDE LH RH ENGINE	1	C
	5355103-36	. BAFFLE ASSY-SIDE LH RH ENGINE	1	D
	5355103-26	. BAFFLE ASSY-SIDE RH LH ENGINE	1	
	5355103-28	. BAFFLE ASSY-SIDE RH RH ENGINE	1	C
	5355103-33	. BAFFLE ASSY-SIDE RH RH ENGINE	1	D
-4	5355103-1	. . BAFFLE ASSY-SIDE FWD LH LH ENGINE	1	
	CM2692-181S	. . PLUG BUTTON	1	
	5355103-3	. . BAFFLE ASSY-SIDE FWD LH RH ENGINE	1	
-5	5355103-4	. . BAFFLE ASSY-SIDE FWD RH LH ENGINE	1	
	CM2692-181S	. . PLUG BUTTON	1	
	5355103-2	. . BAFFLE ASSY-SIDE FWD RH RH ENGINE	1	
-6	5355103-5	. . BAFFLE ASSY-SIDE CTR LH LH & RH ENGINE	2	
-7	5355103-6	. . BAFFLE ASSY-SIDE CTR RH LH & RH ENGINE	2	
-8	5355103-7	. . BAFFLE ASSY-SIDE AFT LH LH & RH ENGINE	2	
-9	5355103-8	. . BAFFLE ASSY-SIDE AFT RH LH ENGINE	1	
	5355103-9	. . BAFFLE ASSY-SIDE AFT RH RH ENGINE	1	
-10	0851826-1	. SUPPORT-INTERCYLINDER BAFFLES FWD	4	
		ATTACHING PARTS		
	MS35207-245	. SCREW	2	
	AN3DD67A	. BOLT	2	
		---*---		
-11	0750117-31	. SUPPORT-INTERCYLINDER BAFFLES AFT	4	
		ATTACHING PARTS		
	AN3DD62A	. BOLT	2	
		---*---		
-12	0851833-1	. BAFFLE ASSY-INTERCYLINDER OUTBD	8	
-13	0851834-1	. BAFFLE ASSY-INTERCYLINDER INBD	6	
-14	0851834-2	. BAFFLE ASSY-INTERCYLINDER INBD AFT	2	
-15	0851846-11	. BAFFLE ASSY-OUTBD AFT LH	2	
	5251800-16	. BAFFLE ASSY-AFT LH	2	H
	5251800-1	. BAFFLE ASSY-AFT UPR LH	2	H
-16	5650003-1	. BAFFLE ASSY-AFT RH FSO 5650003-29	2	A
	5650003-29	. BAFFLE ASSY-AFT RH WEU 5650003-38	2	B
	5650003-38	. BAFFLE ASSY-AFT RH	2	J
-17	5650003-31	. . BOX ASSY-ALTERNATE AIR	1	K
	5650003-37	. . BOX ASSY-ALTERNATE AIR	1	J
-18	0851857-1	. BAFFLE ASSY-AFT CTR	2	
		ATTACHING PARTS		
	MS35207-262	. SCREW	2	
		---*---		
-19	0851841-1	. SUPPORT ASSY-AFT BAFFLE	2	
-20	0851842-10	. BAFFLE ASSY-AFT LH OIL COOLER	2	
-21	0851843-4	. CHANNEL ASSY-AFT BAFFLE FSO 0851843-5	2	E
	0851843-5	. CHANNEL ASSY-AFT BAFFLE	2	F
-22	0851844-1	. BRACKET ASSY-AFT BAFFLE	2	
		ATTACHING PARTS		
	MS35207-262	. SCREW	AR	
		---*---		
-23	0450277-2	. FASTENER-BAFFLE	2	
-24	0450277-3	. FASTENER-BAFFLE	2	
-25	0450277-11	. SPRING-BAFFLE FASTENER	5	

A---340-0001 THRU 340-0225
B---340-0226 & ON THRU 340A0046
C---340-0001 THRU 340-0217
D---340-0218 & ON
E---340-0001 THRU 340-0322
F---340-0323 & ON
G---340-0001 TO 340A0001
H---340A0001 & ON
J---340A0047 & ON
K---340-0001 THRU 340A0046

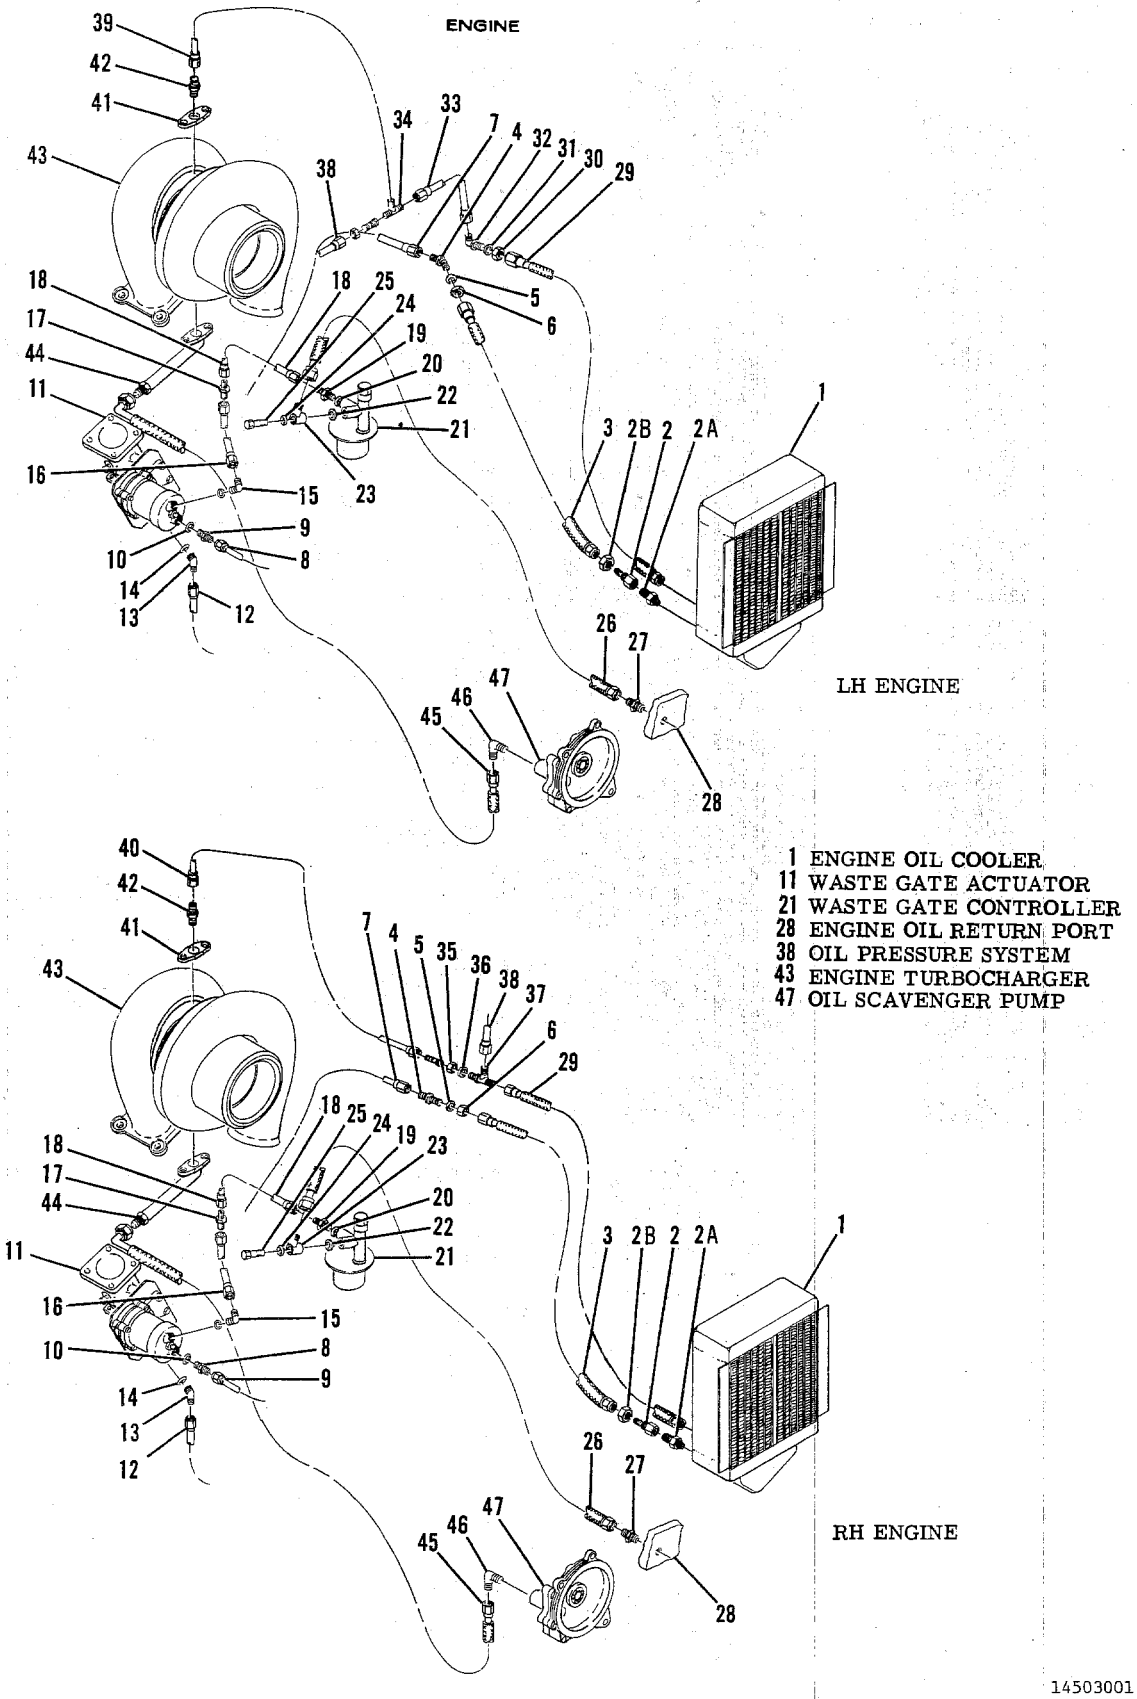

Figure 102. Turbocharger Control Oil System

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
102 -			TURBOCHARGER CONTROL OIL SYSTEM	NP	C
-1	SEE FIG 98		. OIL COOLER-ENGINE	REF	
-2	NAS1564-6-4		. REDUCER	2	
-2A	AN816-2		. NIPPLE	2	
-2B	AN818-6		. NUT	2	
-3	AE2975E0253-160		. HOSE ASSY-LH OIL COOLER TO ELBOW	AQ	1
	AE1003957E 0296		. HOSE ASSY-RH OIL COOLER TO ELBOW	AQ	1
-4	AN837-4		. ELBOW LH		1
	AN834-2		. FITTING RH		1
-5	AN960-716		. WASHER		2
-6	AN924-4		. NUT		2
-7	5300106-17		. LINE ASSY-LH & RH UNION TO ACTUATOR		2
-8	AN833-4		. ELBOW		2
-9	AN924-4		. NUT		2
-10	MS28775-012		. O-RING		2
-11	C165006-0104	#	. ACTUATOR-WASTE GATE LH & RH		2
	5355110-1		. GASKET-WASTE GATE ACTUATOR LH & RH		2
-12	0826018-238		. LINE ASSY-WASTE GATE DRAIN LH & RH		2
-13	AN833-4D		. ELBOW-WASTEGATE DRAIN		2
	AN924-4D		. NUT		2
	MS28775-012		. O-RING		2
-14	MS28775-014		. O-RING		2
-15	AN833-6		. ELBOW		2
	AN924-6		. NUT		2
-16	5300106-19		. LINE ASSY-LH & RH		2
-17	AN919-12		. REDUCER		2
-18	5300106-20		. LINE ASSY-LH & RH		2
-19	AN919-12		. REDUCER		2
-20	MS28775-014		. O-RING		2
-21	SEE FIG 97		. CONTROLLER-WASTE GATE	REF	
-22	MS28775-113		. O-RING LH & RH	2	
-23	NAS554-8D		. ELBOW LH & RH	2	
-24	MS28778-8		. O-RING LH & RH	2	
-25	NAS551-8D		. BOLT LH & RH	2	
-26	AE1003957H 0240		. HOSE ASSY-LH CONTROLLER TO ENGINE OIL RETURN	AQ	1
	AE1005816H 0224		. HOSE ASSY-RH CONTROLLER TO ENGINE OIL RETURN	AQ	1
-27	AN816-6-6 0235		. NIPPLE OIL RETURN TO ENGINE	AQ	2
-28	SEE FIG 98		. ENGINE ASSY OIL RETURN PORT	REF	
-29	AE1003882G 0235		. HOSE ASSY-LH OIL COOLER TO ELBOW	AQ	1
	AE2975G0280-225		. HOSE ASSY-RH OIL COOLER TO TEE	AQ	1
-30	AN924-6		. NUT LH ENGINE		1
-31	AN960-916		. WASHER LH ENGINE		1
-32	AN833-6		. ELBOW LH ENGINE		1
-33	5300106-20		. LINE ASSY LH ENGINE		1
-34	AN824-6		. TEE LH ENGINE		1
-35	AN924-6		. NUT RH ENGINE		1
-36	AN960-916		. WASHER RH ENGINE		1
-37	MS39070-6		. TEE RH ENGINE		1
-38	SEE FIG 103		. OIL PRESSURE SYSTEM	REF	
-39	5600107-23		. LINE ASSY-LH TEE TO TURBOCHARGER	1	
-40	5300106-23		. LINE ASSY-RH TEE TO TURBOCHARGER	1	
-41	5655204-1		. ADAPTER-TURBO INLET OIL LH & RH FSO 5655204-2	2	A
	5655204-2		. ADAPTER-TURBO INLET OIL LH & RH	2	B
	628572		. GASKET LH & RH	CM	2
	MS20074-06-07		. BOLT LH & RH		2
	AN960C616L		. WASHER LH & RH		2
-42	AN816-6		. NIPPLE LH & RH		2
-43	SEE FIG 97		. TURBOCHARGER-ENGINE	REF	
-44	5655203-1		. DRAIN ASSY-TURBOCHARGER OIL LH		1
	632710		. . GASKET	CM	1
	MS20074-06-06		. . BOLT		1
	AN960C616L		. . WASHER		2
	5655203-5		. DRAIN ASSY-TURBOCHARGER OIL RH		1
-45	AE2964J0192-100		. HOSE ASSY-LH TO SCAVENGER PUMP	AQ	1
	AE2965J0114-325		. HOSE ASSY-RH TO SCAVENGER PUMP	AQ	1
-46	MS20822-10		. ELBOW LH & RH		2
-47	SEE FIG 98		. PUMP-OIL SCAVENGER	REF	

SEE CESSNA CRAFTED TURBOCHARGER AND CONTROLS SERVICE/PARTS MANUAL FOR BKDN

A---340-0001 THRU 340-0318
B---340-0319 TO 340A0001
C---340-0001 TO 340A0001

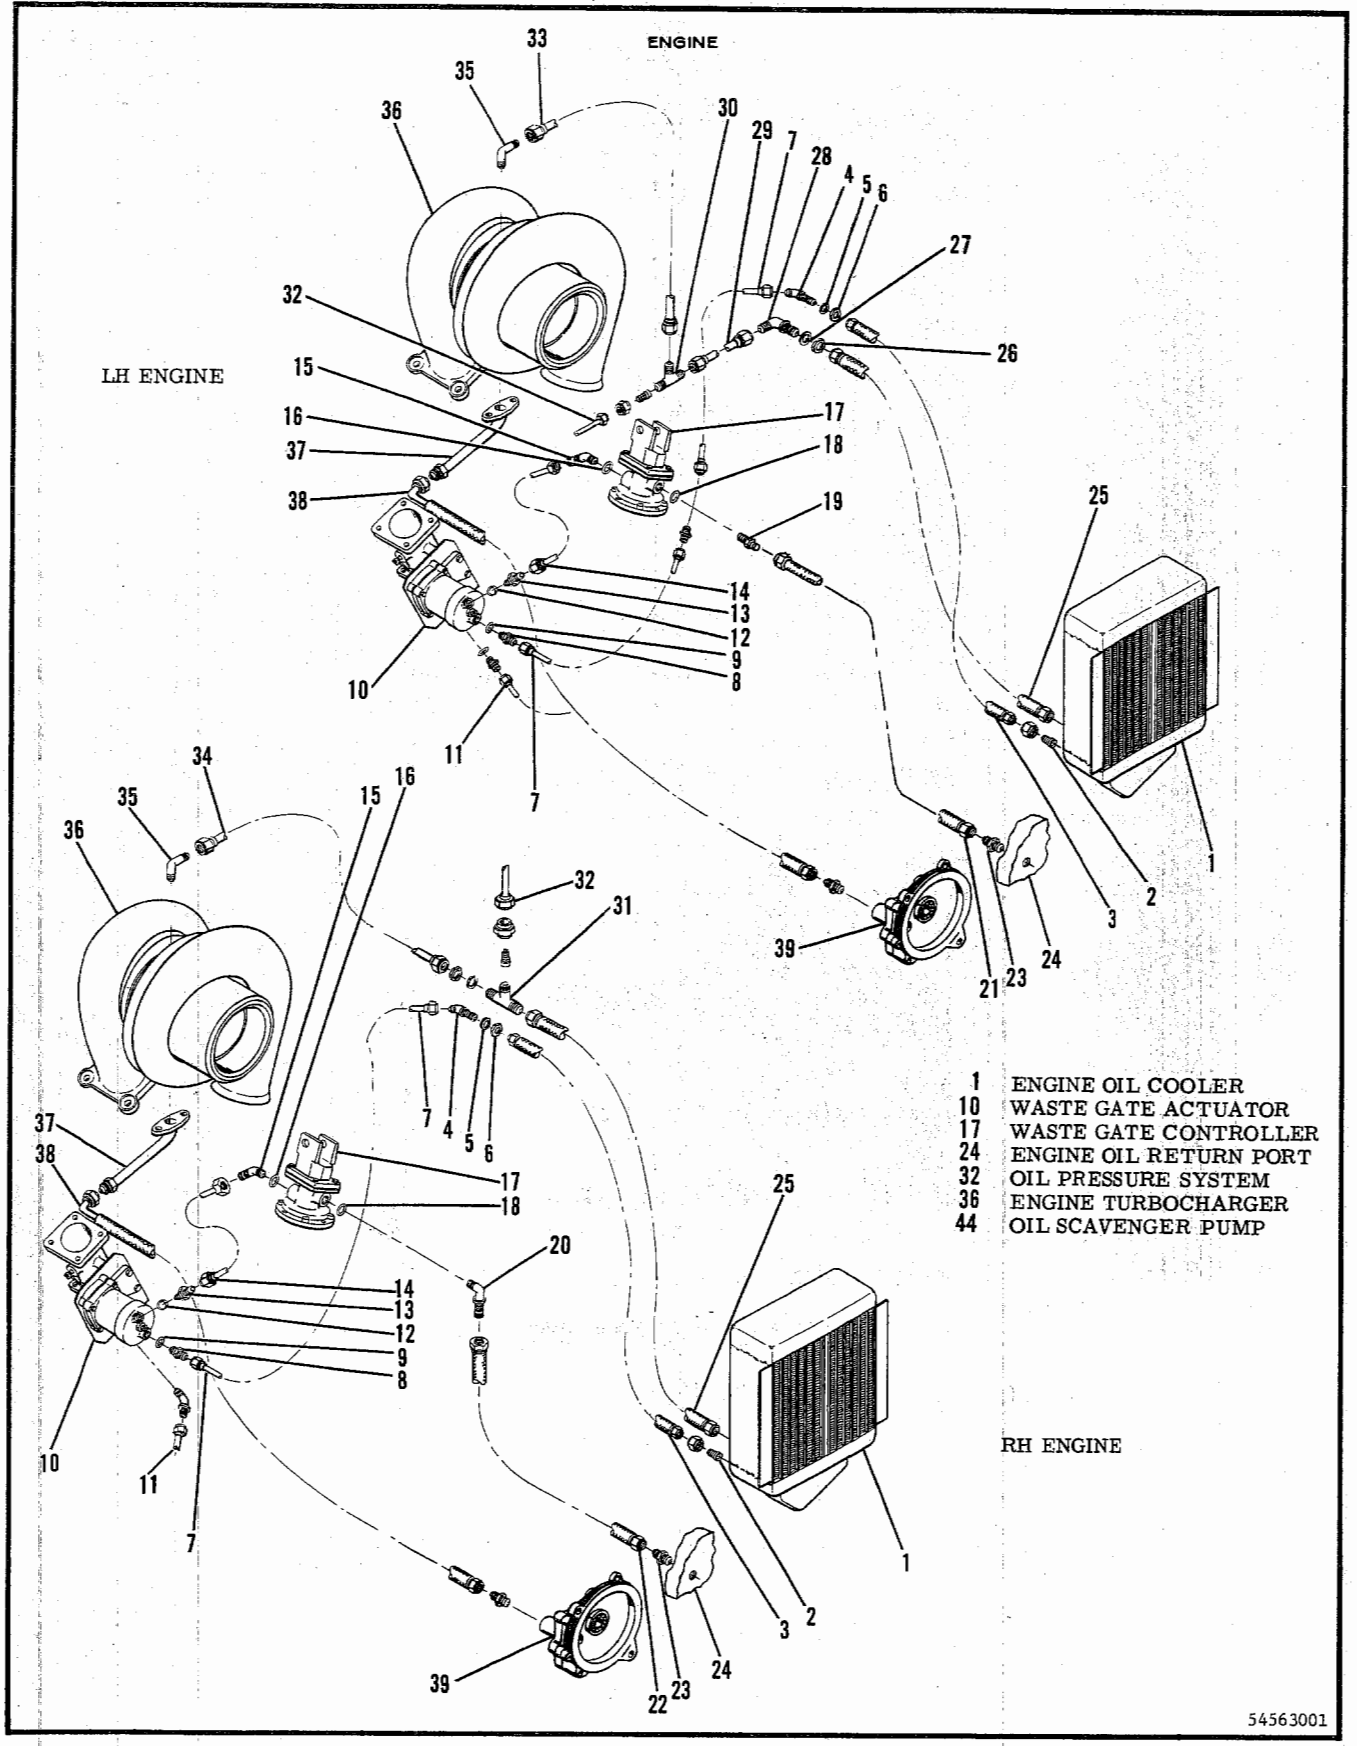

Figure 102A. Turbocharger Control Oil System

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
102A-			TURBOCHARGER CONTROL OIL SYSTEM	NP	A
-1	SEE FIG 98A		. OIL COOLER ENGINE	REF	
-2	NAS1564-6-4		. REDUCER	2	
-3	AE1006526E 0225		. HOSE ASSY-LH OIL COOLER TO ELBOW	AQ	1
	AE1006526E 0186		. HOSE ASSY-RH OIL COOLER TO ELBOW	AQ	1
-4	AN837-4		. ELBOW	2	
-5	AN960-716		. WASHER	2	
-6	AN924-4		. NUT	2	
-7	5600107-25		. TUBE ASSY-LH ELBOW TO ACTUATOR	1	
	5600107-9		. TUBE ASSY-RH ELBOW TO ACTUATOR	1	
-8	AN815-4		. UNION-LH & RH	2	
-9	MS28775-012		. O-RING-LH & RH	2	
-10	C165006-0106	#	. ACTUATOR-WASTE GATE LH	1	
	C165006-0107	#	. ACTUATOR-WASTE GATE RH	1	
-11	5654023-7		. DRAIN ASSY-WASTE GATE-LH & RH	2	
-12	MS28775-014		. O-RING-LH & RH	2	
-13	AN815-6		. UNION-LH & RH	2	
-14	5600107-4		. LINE ASSY-LH	1	
	5600107-8		. LINE ASSY-RH	1	
-15	AN837-6		. ELBOW-LH & RH	2	
	AN924-6		. NUT	2	
-16	MS28775-014		. O-RING	2	
-17	SEE FIG 97A		. CONTROLLER-WASTE GATE	REF	
-18	MS28775-014		. O-RING-LH & RH	2	
-19	AN815-6		. UNION-LH	1	
-20	AN833-6		. ELBOW-RH	1	
	AN924-6		. NUT-RH	1	
-21	AE1004199 G0163		. HOSE ASSY-LH CONTROLLER TO ENGINE OIL RETURN	AQ	1
-22	AE1007211 G0253		. HOSE ASSY-RH CONTROLLER TO ENGINE OIL RETURN	AQ	1
-23	AN816-6-6		. NIPPLE-LH & RH OIL RETURN TO ENGINE	2	
-24	SEE FIG 98		. ENGINE ASSY OIL RETURN PORT	REF	
-25	AE1004199 G0202		. HOSE ASSY-LH OIL COOLER TO ELBOW	AQ	1
	AE2970G02 00314		. HOSE ASSY-RH OIL CCLLER TO TEE	AQ	1
-26	AN924-6		. NUT LH ENGINE	1	
-27	AN960-916		. WASHER LH ENGINE	1	
-28	AN833-6		. ELBOW LH ENGINE	1	
-29	5600107-3		. LINE ASSY LH ENGINE	1	
-30	AN824-6		. TEE LH ENGINE	1	
	5056002-5		. RESTRICTOR ASSY	1	
	AN816-6		. NUT LH ENGINE	1	
-31	MS39070-6		. TEE RH ENGINE	1	
	AN960-916		. WASHER RH ENGINE	1	
	AN924-6		. NUT RH ENGINE	1	
	AN816-6		. NUT RH ENGINE	1	
	5056002-5		. RESTRICTOR ASSY	1	
-32	SEE FIG 103		. OIL PRESSURE SYSTEM	REF	
-33	5600107-23		. LINE ASSY-LH TEE TO TURBOCHARGER	1	
-34	5600107-24		. LINE ASSY-RH TEE TO TURBOCHARGER	1	
-35	AN816-6		. NIPPLE-LH & RH	2	
	5655204-2		. ADAPTER-TURBO INLET OIL-LH & RH	2	
	628572		. . GASKET-LH & RH	CM	2
	MS20074-06-07		. . BOLT-LH & RH		4
	AN960C616L		. . WASHER-LH & RH		4
-36	SEE FIG 97A		. TURBOCHARGER-ENGINE	REF	
-37	5655203-1		. DRAIN ASSY-TURBOCHARGER OIL-LH & RH	2	
	632710		. . GASKET-LH & RH	CM	2
	MS20074-06-06		. . BOLT-LH & RH		4
	AN960C616L		. . WASHER		4
-38	AE2964J0192 100		. HOSE ASSY-LH TO SCAVENGER PUMP	AQ	1
	AE2965J0114 325		. HOSE ASSY-RH TO SCAVENGER PUMP	AQ	1
-39	SEE FIG 98		. SCAVENGER PUMP-OIL	REF	

SEE CESSNA CRAFTED TURBOCHARGER AND CONTROLS SERVICE/PARTS MANUAL FOR BKDN

A---340A0001 & ON

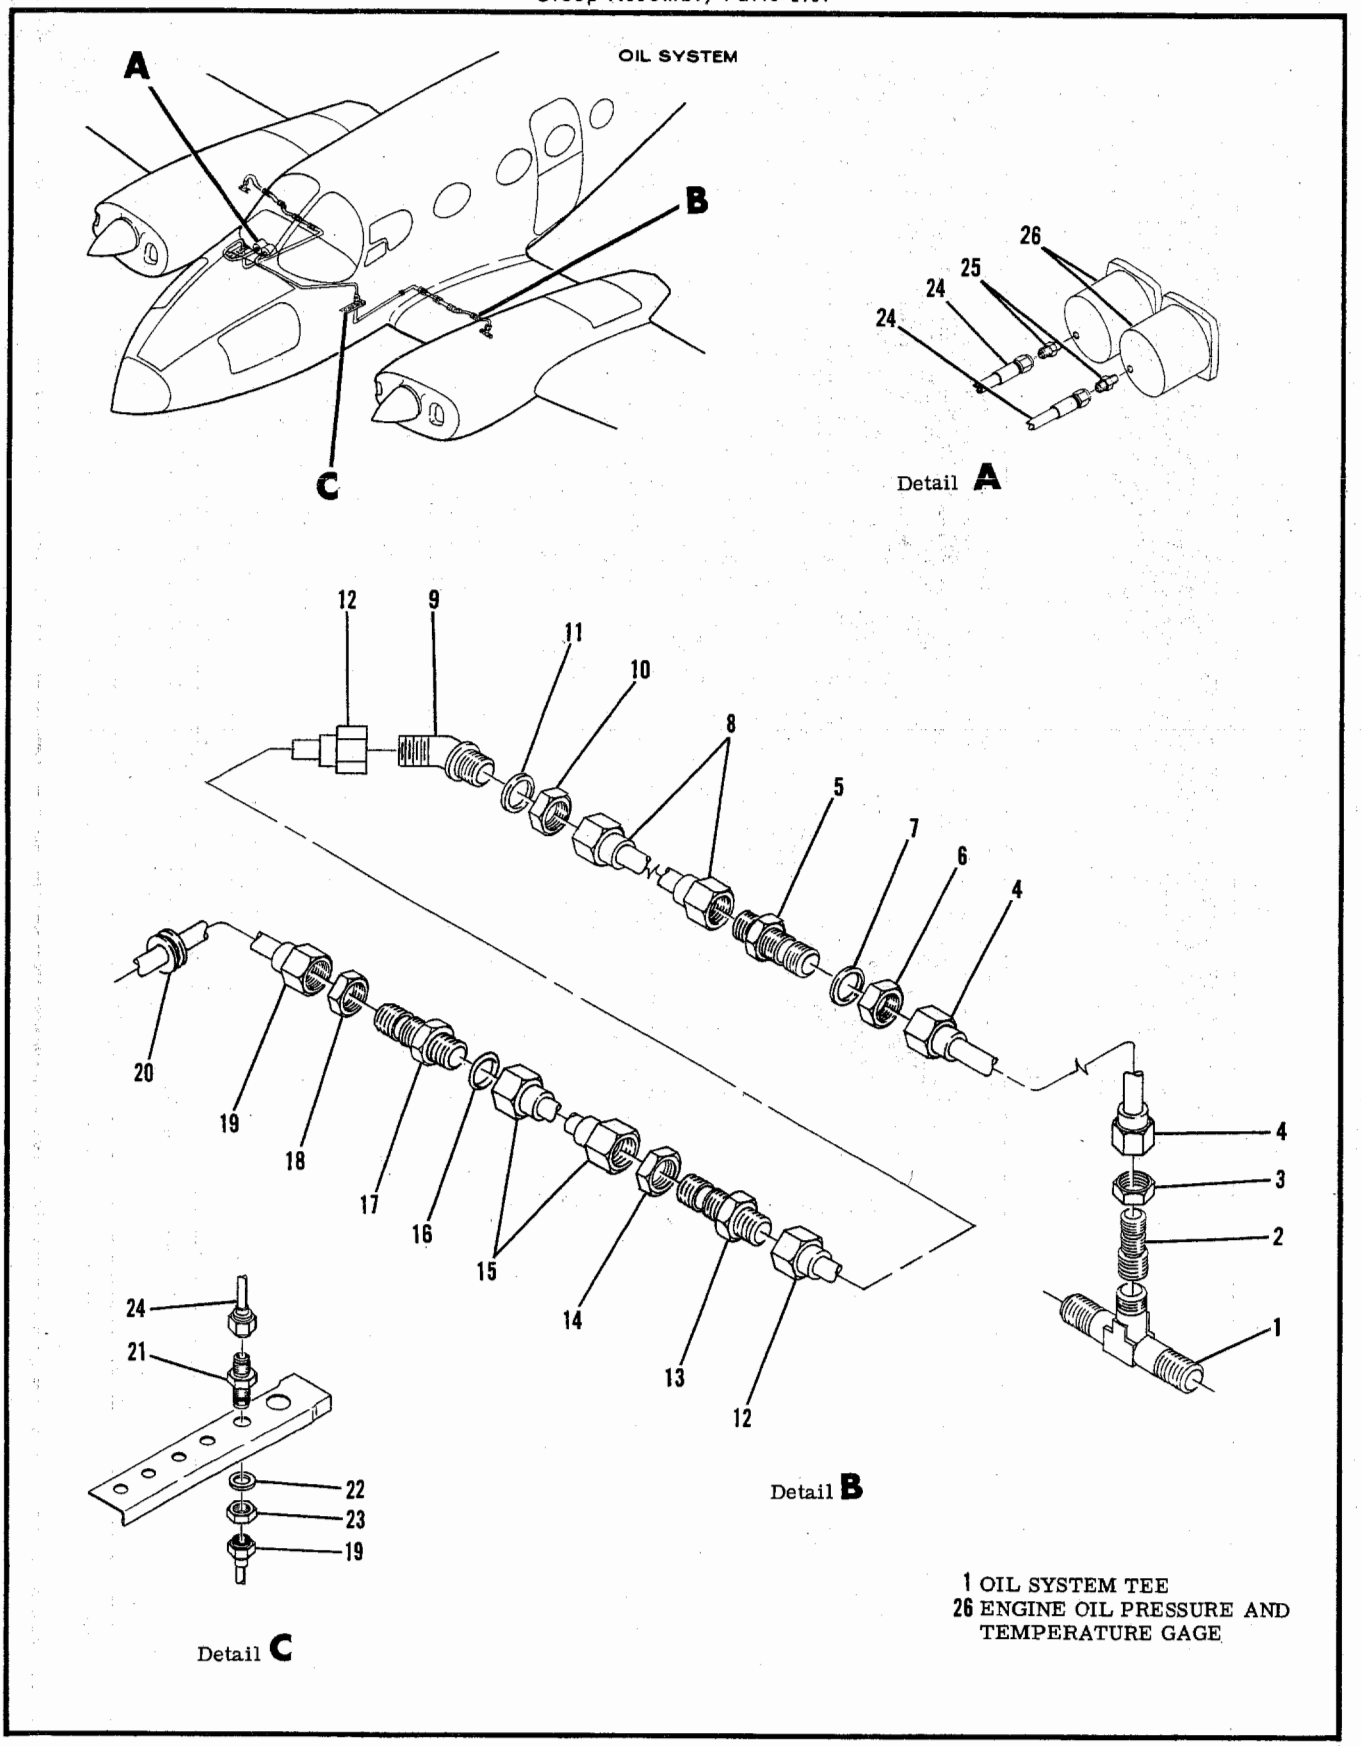

Figure 103. Oil Pressure System

FIGURE AND INDEX NO.	PART NUMBER		1 2 3 4 5 6 7 DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
103 -			OIL PRESSURE SYSTEM	NP	
-1	SEE FIG 102		. TEE-OIL SYSTEM	REF	
-2	5056002-5		. RESTRICTOR ASSY LH & RH ENGINE	2	
-3	AN818-6		. NUT LH & RH ENGINE	2	
-4	5600107-1		. LINE ASSY-LH	1	
	5300106-15		. LINE ASSY-RH	1	
-5	AN832-4		. UNION	1	
-6	AN924-4		. NUT	1	
-7	AN960-716L		. WASHER	2	
-8	5600107-11		. LINE ASSY-LH & RH	2	
-9	AN837-4D		. ELBOW	1	
-10	AN924-4D		. NUT	1	
-11	AN960-716L		. WASHER	2	
-12	5600107-13		. LINE ASSY-LH	1	
	5600107-14		. LINE ASSY-RH	1	
-13	AN832-4D		. UNION	1	
-14	AN924-4D		. NUT	2	
-15	5600108-15		. LINE ASSY-LH & RH	2	
-16	250-215-4	%	. LOCK-O-SEAL	1 PKSC	
-17	AN832-4D		. UNION	1	
-18	AN924-4D		. NUT	2	
-19	5300108-17		. LINE ASSY-LH	1	
	5300108-16		. LINE ASSY-RH	1	
-20	MS35489-111		. GROMMET-LH & RH	2	
-21	AN832-4D		. UNION-LH & RH	2	
-22	AN960PD716		. WASHER-LH & RH	2	
-23	AN924-4D		. NUT-LH & RH	2	
-24	5300108-19		. LINE ASSY-LH	1	
	5300108-18		. LINE ASSY-RH	1	
-25	AN816-4D		. NIPPLE	1	
-26	SEE FIG 61		. GAGE-ENGINE	REF	

% THIS PART MUST HAVE PRESSURIZATION SEALANT APPLIED UPON INSTALLATION TO AIRCRAFT SEE MISCELLANEOUS BULK ITEMS FOR LISTING OF AVAILABLE SEALANT COMPOUNDS

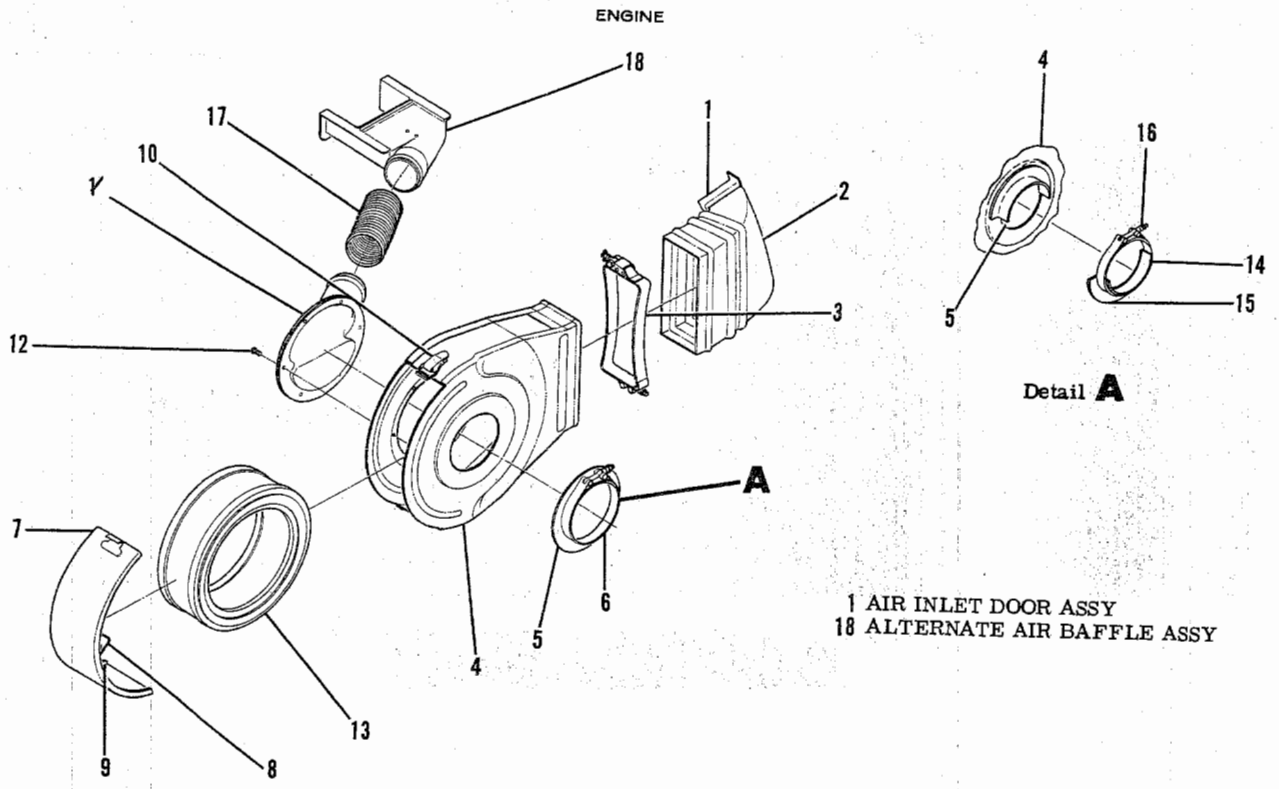

Figure 104. Turbocharger Induction and Cooling Air Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
104 -		TURBOCHARGER INDUCTION AIR INSTALLATION	NP	
-1	SEE FIG 95	. DOOR ASSY-AIR INLET	REF	
-2	5655312-1	. TRANSITION-AIR INDUCTION LH	1	
	5655312-2	. TRANSITION-AIR INDUCTION RH	1	
-3	5655301-1	. CLAMP ASSY-AIR INDUCTION	1	
	5655304-200	. CANISTER & ADAPTER ASSY-AIR	1	A
	5655304-37	. CANISTER ASSY-LH	1	B
	5655304-38	. CANISTER ASSY-RH	1	B
	5655304-34	. NACELLE ASSY-RH USED WITH AIRCONDITIONING	1	
	5655304-17	. . CANISTER ASSY-AIR FILTER	1	A
	5655304-36	. . CANISTER ASSY-AIR FILTER LH & RH	1	B
	5655304-30	. . CANISTER ASSY-AIR FILTER USE WITH AIRCONDITIONING	2	
-4	5655304-18	. . . CANISTER ASSY WELDED	1	
	5655304-18	. . . CANISTER ASSY WELDED USE WITH AIRCONDITIONING	1	
	5655304-10	. . . FLANGE ASSY-CANISTER	1	
	5655304-28	. . . FLANGE ASSY-CANISTER USE WITH AIRCONDITIONING	1	
-5	5655304-11	. . . . FLANGE	1	
	5655304-27	. . . . FLANGE USE WITH AIRCONDITIONING	1	
	5655304-29	. . . . CLIP USE WITH AIRCONDITIONING	2	
-6	U86C500SS	. . . CLAMP NUCA	1	
	5655304-22	. . . DOOR ASSY-CANISTER	1	
-7	5655304-23	. . . . DOOR-CANISTER	1	
-8	5655304-24	. . . . DOUBLER	1	
-9	5655304-25	. . . . SEAL-FELT	2	
-10	5155105-1	. . . LATCH ASSY	2	
-11	5655305-1	. . ADAPTER ASSY-CANISTER	1	A
	5655306-1	. . ADAPTER ASSY-CANISTER	1	B
		ATTACHING PARTS		
-12	MS35266-62	. . SCREW	6	
	AN960-10	. . WASHER USED WITH AIRCONDITIONING	6	
		----*----		
-13	9913001-1	. . FILTER-AIR	1	
	5655304-32	. . CLAMP ASSY USED WITH AIRCONDITIONING	1	
-14	5655304-31	. . . FLANGE USED WITH AIRCONDITIONING	1	
-15	5655304-33	. . . SEAL USED WITH AIRCONDITIONING	1	
-16	U86C500SS	. . . CLAMP USED WITH AIRCONDITIONING NUCA	1	
-17	S1053E20W	. DUCT BKI	AR	
-18	SEE FIG 101	. BAFFLE ASSY-ALTERNATE AIR	REF	
		A---340-0001 THRU 340A0046 B---340A0047 & ON		

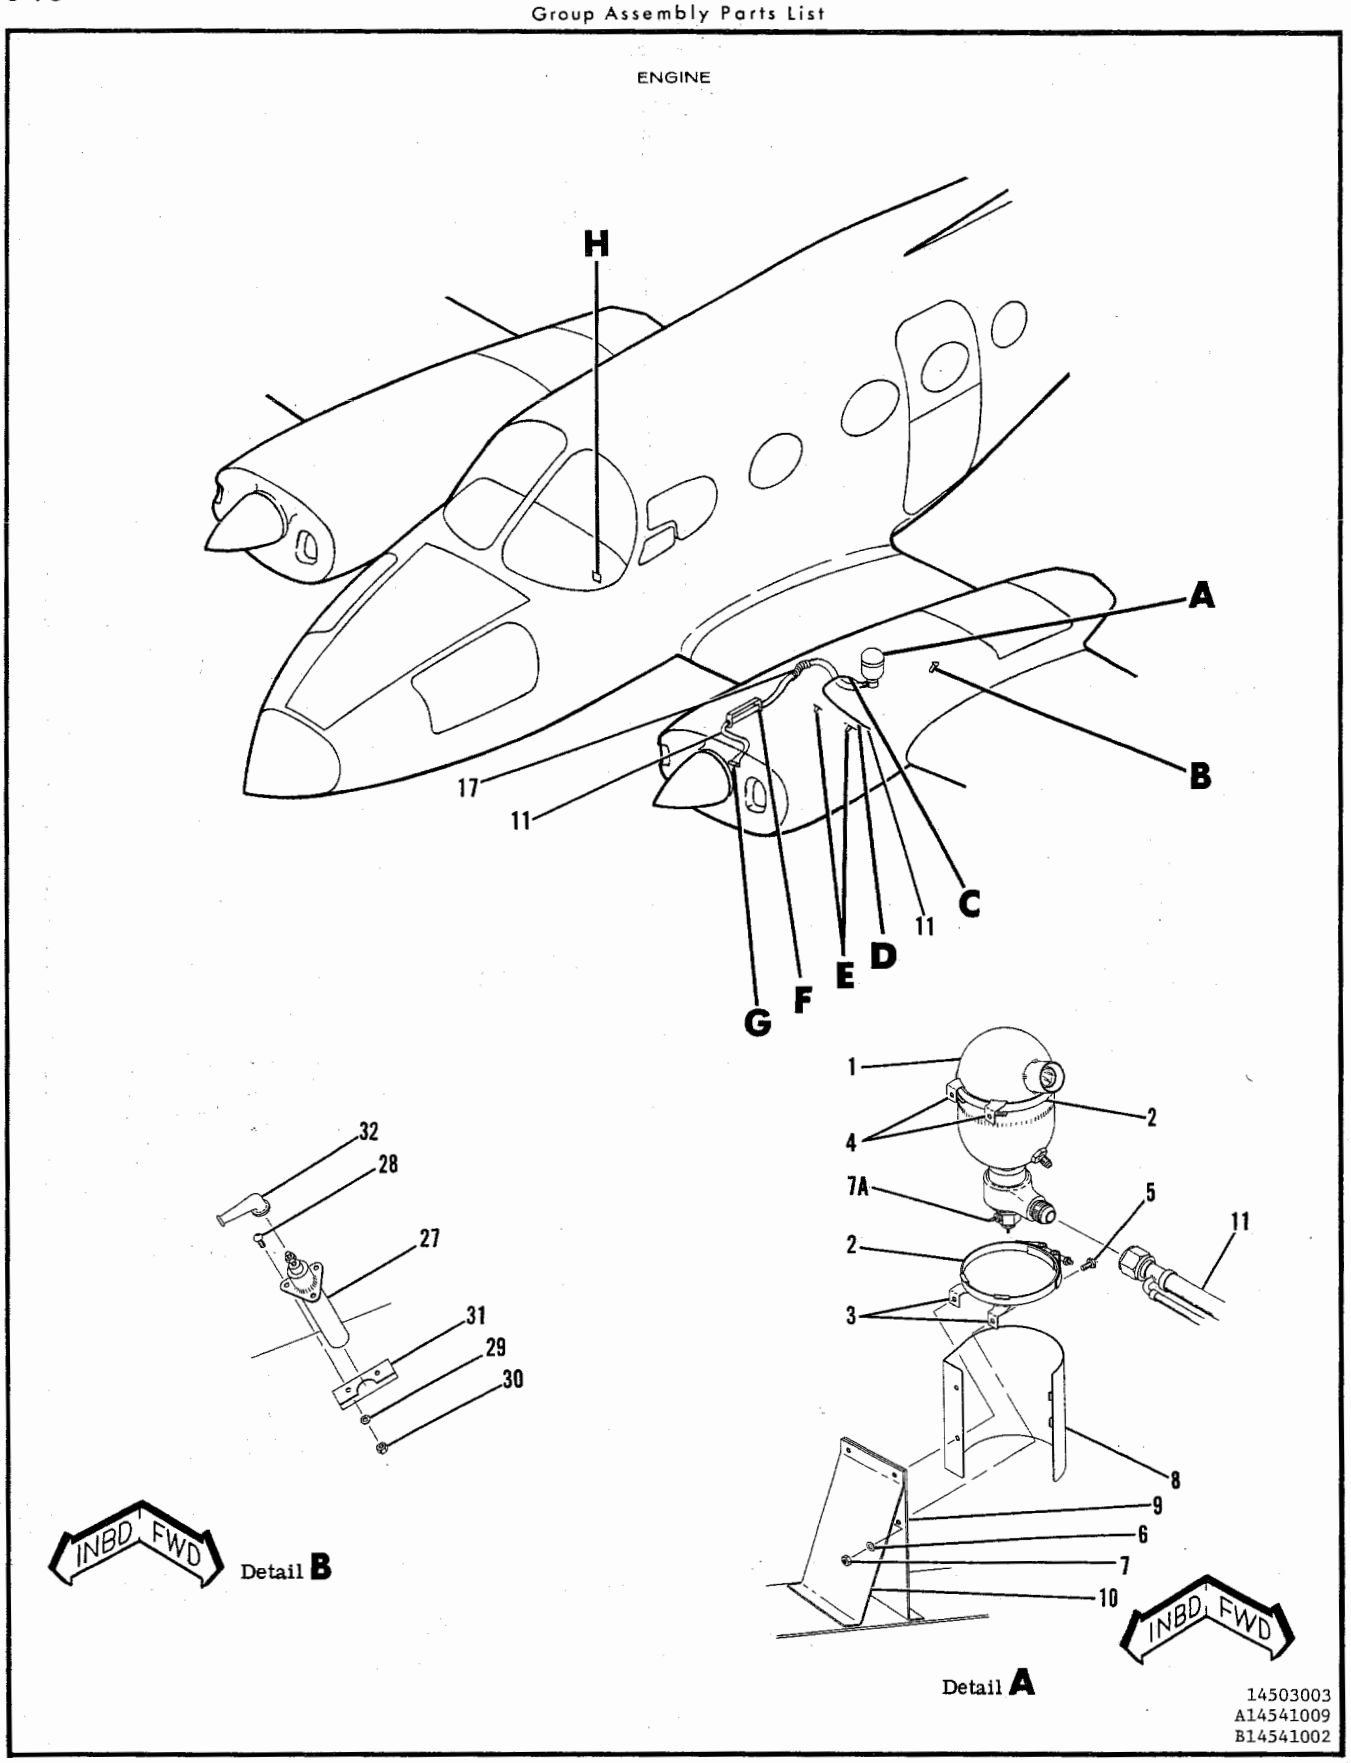

Figure 105. Engine Compartment Fire Extinguisher Installation (Sheet 1 of 2)

ENGINE

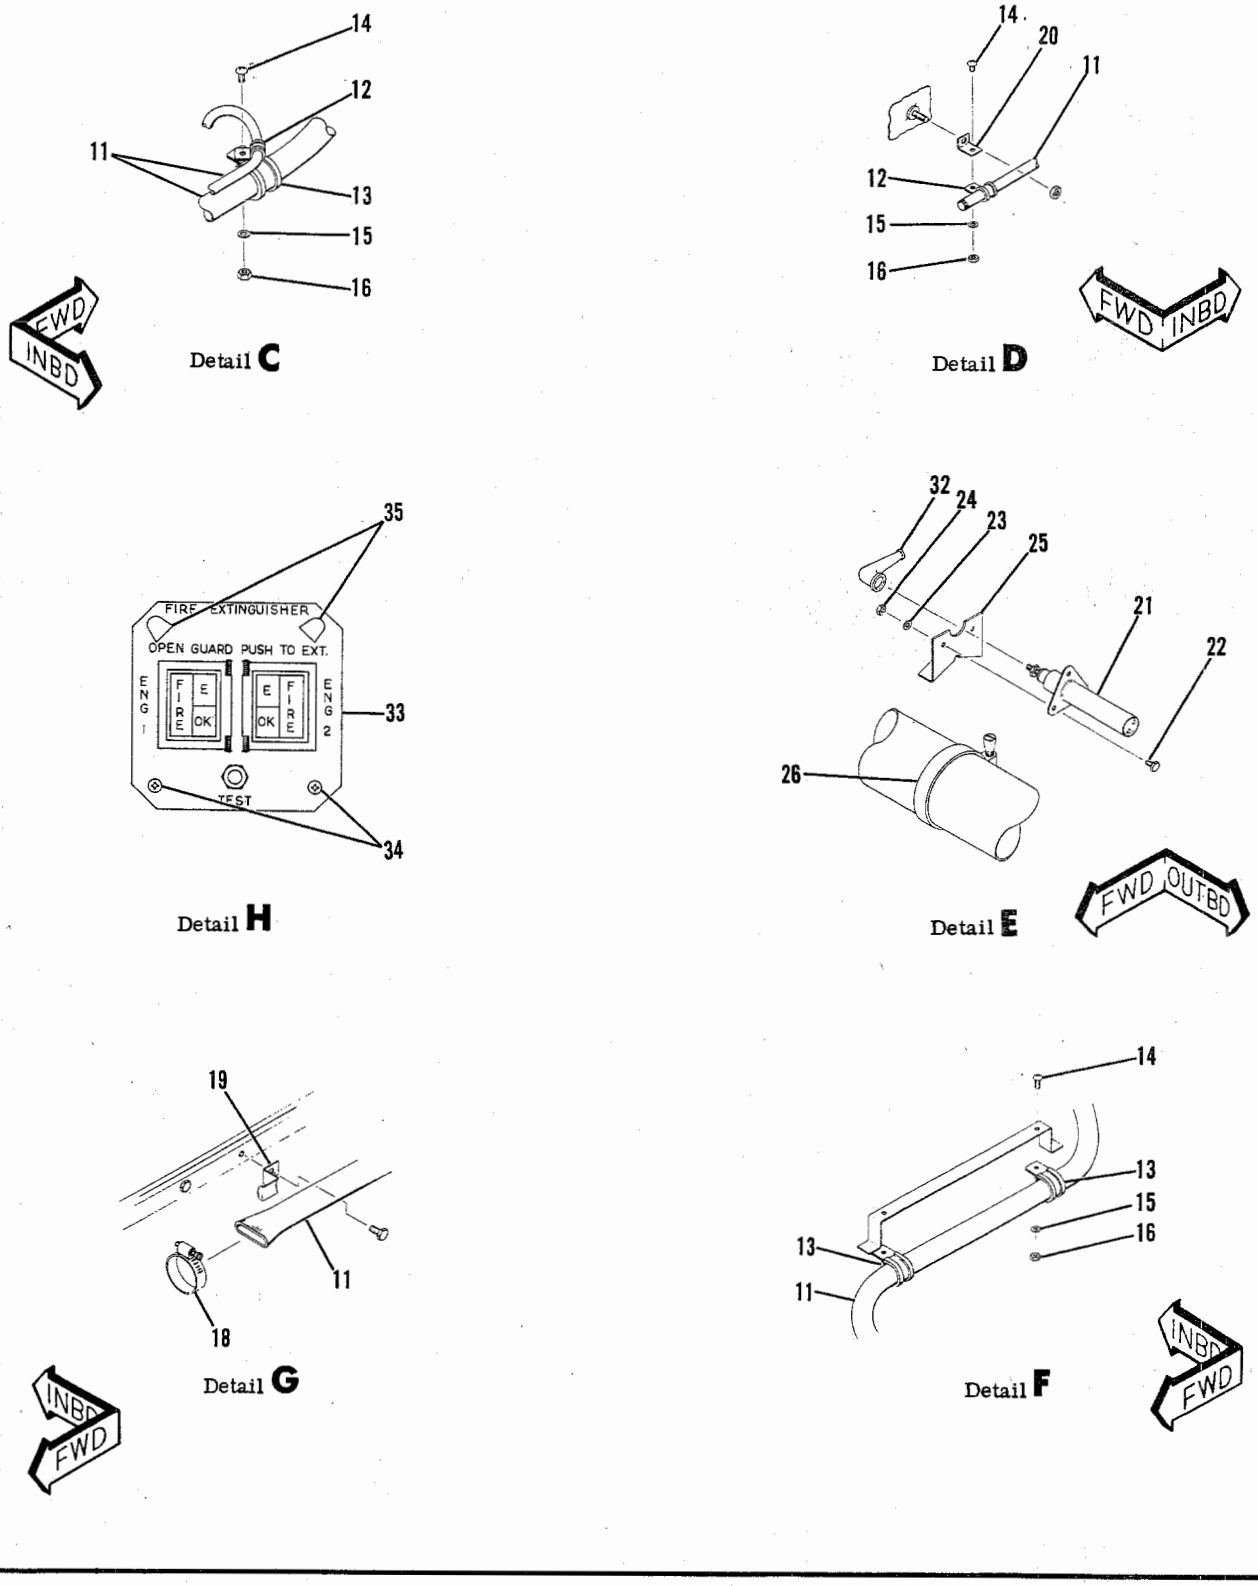

Figure 105. Engine Compartment Fire Extinguisher Installation (Sheet 2)

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
105 -		ENGINE COMPARTMENT FIRE EXTINGUISHER INSTALLATION	NP	
-1	30111102	. EXTINGUISHER-FIRE LH & RH NACELLE	ASMI	2
		ATTACHING PARTS		
-2	38-701	. CLAMP	ASMI	2
-3	13265	. CLIP-MOUNTING LWR	ASMI	2
-4	13265-1	. CLIP-MOUNTING UPR	ASMI	2
-5	AN3H5A	. BOLT		4
-6	AN960-10	. WASHER		4
-7	MS21044N3	. NUT		4
		---*---		
-7A	13083-5	. . CARTRIDGE	ASMI	1
-8	33577700	. SHIELD-HEAT	ASMI	2
-9	30771000	. PLATE-MOUNTING	ASMI	2
-10	31301800	. BRACKET-SUPPORT	ASMI	2
-11	34975200	. HOSE ASSY-DISCHARGE	ASMI	2
-12	MS21919G6	. CLAMP	AR	
-13	MS21919G14	. CLAMP	AR	
		ATTACHING PARTS		
-14	MS27039-0808	. BOLT	AR	
-15	AN960-8	. WASHER	AR	
-16	MS21044N08	. NUT	AR	
		---*---		
-17	32587000	. WRAP-SPIRAL TEFLON	ASMI	AR
-18	S1891-20	. CLAMP-HOSE		1
-19	33578100	. BRACKET-HOSE MOUNTING	ASMI	1
-20	39372300	. BRACKET	ASMI	1
-21	107-700	. DETECTOR-THERMAL	ASMI	4
		ATTACHING PARTS		
-22	MS27039-0808	. SCREW		2
-23	AN960-8	. WASHER		2
-24	MS21044N08	. NUT		2
		---*---		
-25	31302000	. BRACKET-THERMAL DETECTOR	ASMI	4
-26	33871400	. CLAMP-THERMAL DETECTOR BRACKET	ASMI	4
-27	107-700	. DETECTOR-THERMAL	ASMI	2
		ATTACHING PARTS		
-28	MS27039-0808	. SCREW		3
-29	AN960-10	. WASHER		3
-30	MS21044N08	. NUT		3
		---*---		
-31	93-713	. BRACKET-THERMAL DETECTOR	ASMI	2
-32	32586800	. SLEEVE-RUBBER	ASMI	2
-33	33370500	. PANEL-FIRE EXTINGUISHER	ASMI	1
		ATTACHING PARTS		
-34	94078100	. SCREW	ASMI	2
	94078200	. LOCKNUT	ASMI	2
		---*---		
-35	31001000	. LIGHT-POST	ASMI	2

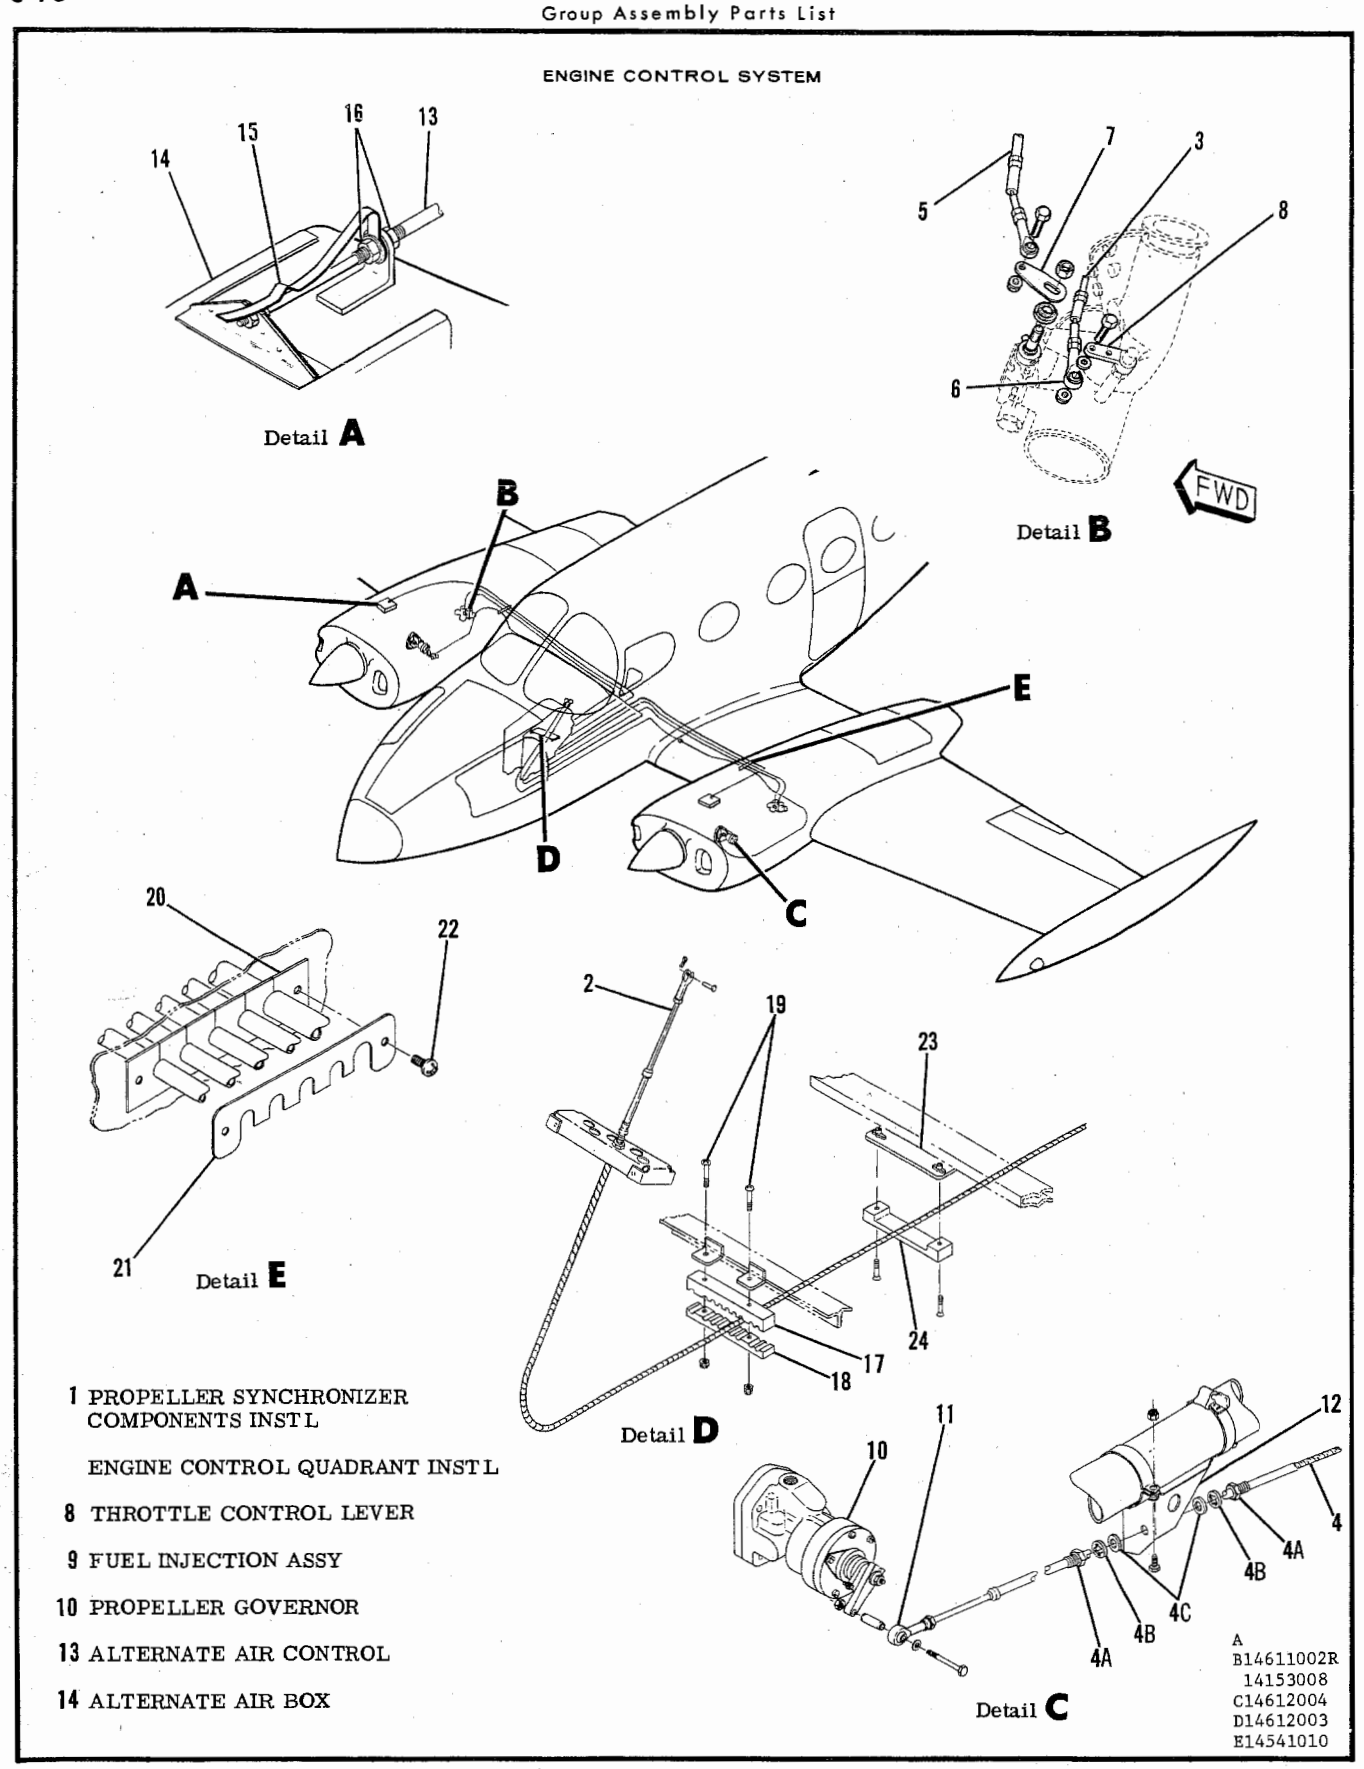

1 PROPELLER SYNCHRONIZER COMPONENTS INSTL

ENGINE CONTROL QUADRANT INSTL

8 THROTTLE CONTROL LEVER

9 FUEL INJECTION ASSY

10 PROPELLER GOVERNOR

13 ALTERNATE AIR CONTROL

14 ALTERNATE AIR BOX

Figure 106. Engine Control System

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
106 -		ENGINE CONTROLS SYSTEM	NP	
-1	SEE FIG 112	. PROPELLER SYNCHRONIZER COMPONENTS INSTL	1	
-2	SEE FIG 107	. ENGINE CONTROL QUADRANT INSTL	1	
-3	5315001-5	. CONTROL-THROTTLE LH WEU 5315002-1	1	A
	5315002-1	. CONTROL-THROTTLE LH WEU 9910269-1	1	B
	9910269-1	. CONTROL-THROTTLE LH	1	G
	5315001-6	. CONTROL-THROTTLE RH WEU 5315002-2	1	A
	5315002-2	. CONTROL-THROTTLE RH WEU 9910269-2	1	B
	9910269-2	. CONTROL-THROTTLE RH	1	G
-4	5315001-3	. CONTROL-PROPELLER LH WEU 5315002-5	1	A
	5315002-5	. CONTROL-PROPELLER LH WEU 9910269-5	1	B
	9910269-5	. CONTROL-PROPELLER LH	1	G
	5315001-4	. CONTROL-PROPELLER RH WEU 5315002-6	1	A
	5315002-6	. CONTROL-PROPELLER RH WEU 9910269-6	1	B
	9910269-6	. CONTROL-PROPELLER RH	1	G
-4A	AN316-7R	. NUT-LH & RH	4	
-4B	MS35333-43	. LOCKWASHER-LH & RH	4	
-4C	AN960-716	. WASHER-LH & RH	4	
-5	5315001-1	. CONTROL-MIXTURE LH WEU 5315002-3	1	A
	5315002-3	. CONTROL-MIXTURE LH WEU 9910269-3	1	B
	9910269-3	. CONTROL-MIXTURE LH	1	G
	5315001-2	. CONTROL-MIXTURE RH WEU 5315002-4	1	A
	5315002-4	. CONTROL-MIXTURE RH WEU 9910269-4	1	B
	9910269-4	. CONTROL-MIXTURE RH	1	G
		ATTACHING PARTS		
	AN665-21R	. CLEVIS	6	
	MS20392-11	. PIN	6	
	AN315-3R	. NUT	6	
	MS24665-132	. COTTER PIN	6	
		---*---		
-6	S1104-3	. ROD END	6	
		ATTACHING PARTS		
	0850689-2	. BUSHING-MIXTURE CONTROL	1	
	AN3C5A	. BOLT	2	
	MS21042L3	. NUT	2	
	E103	. BALL JOINT-MIXTURE CONTROL	TOK	
	AN960-516L	. WASHER-MIXTURE CONTROL	1	
	MS21045L3	. NUT-MIXTURE CONTROL	1	
	AN315-3R	. NUT-THROTTLE CONTROL	1	
		---*---		
-7	5155113-1	. LEVER-MIXTURE CONTROL	1	
-8	SEE FIG 98	. LEVER-THROTTLE CONTROL	REF	
-9	SEE FIG 97	. INJECTION ASSY-FUEL	REF	
-10	SEE FIG 98	. GOVERNOR-PROPELLER	REF	
-11	S1106-3	. ROD END	1	
		ATTACHING PARTS		
	AN3-17A	. BOLT	1	
	NAS75-3-027	. BUSHING	1	
	AN315-4R	. NUT	1	
	MS21045-3	. NUT	1	
		---*---		
-12	0852000-41	. BRACKET-PROP CONTROL	1	A
	0852000-41	. BRACKET-PROP CONTROL WEU 0852000-43	1	C
	0852000-43	. BRACKET-PROP CONTROL	1	D
		ATTACHING PARTS		
	AN737TW-91	. CLAMP	AR	
	MS27405-19P	. CLAMP-TYPE A	1	
	AN4-6A	. BOLT	1	
	MS21045-4	. NUT	1	
		---*---		
-13	SEE FIG 61	. CONTROL-ALTERNATE AIR	REF	
-14	SEE FIG 104	. ALTERNATE AIR BOX	REF	
-15	5650003-7	. SPRING	1	
		ATTACHING PARTS		
-16	MS21083N3	. NUT	2	
		---*---		
-17	5215085-3	. BLOCK-UPR WEU 5215085-5	1	H
-18	5215085-1	. BLOCK ASSY-LWR WEU 5215085-5	1	H
	5215085-5	. BLOCK-UPR & LWR MATCHED SET	1	J
		ATTACHING PARTS		
-19	MS27039-1-20	. SCREW	2	
	AN960C10L	. WASHER	2	
	MS21083N3	. NUT	2	
		---*---		
-20	5654009-1	. SEAL-FIRE LH & RH	1	A
-21	5654009-2	. GASKET	1	A
-22	MS27039-0806	. SCREW	2	A
-23	5361002-21	. PLATE ASSY	1	
-24	5315000-2	. BLOCK	1	E
	5315000-5	. BLOCK	1	F
		ATTACHING PARTS		
	MS24694S57	. SCREW	2	
		---*---		

A---340-0001 THRU 340-0500
B---340-0501 TO 340A0001
C---340-0501 THRU 340-0552
D---340-0553 & ON
E---340-0001 THRU 340-0550
F---340-0551 & ON
G---340A0001 & ON
H---340-0001 THRU 340A0018
J---340A0019 & ON

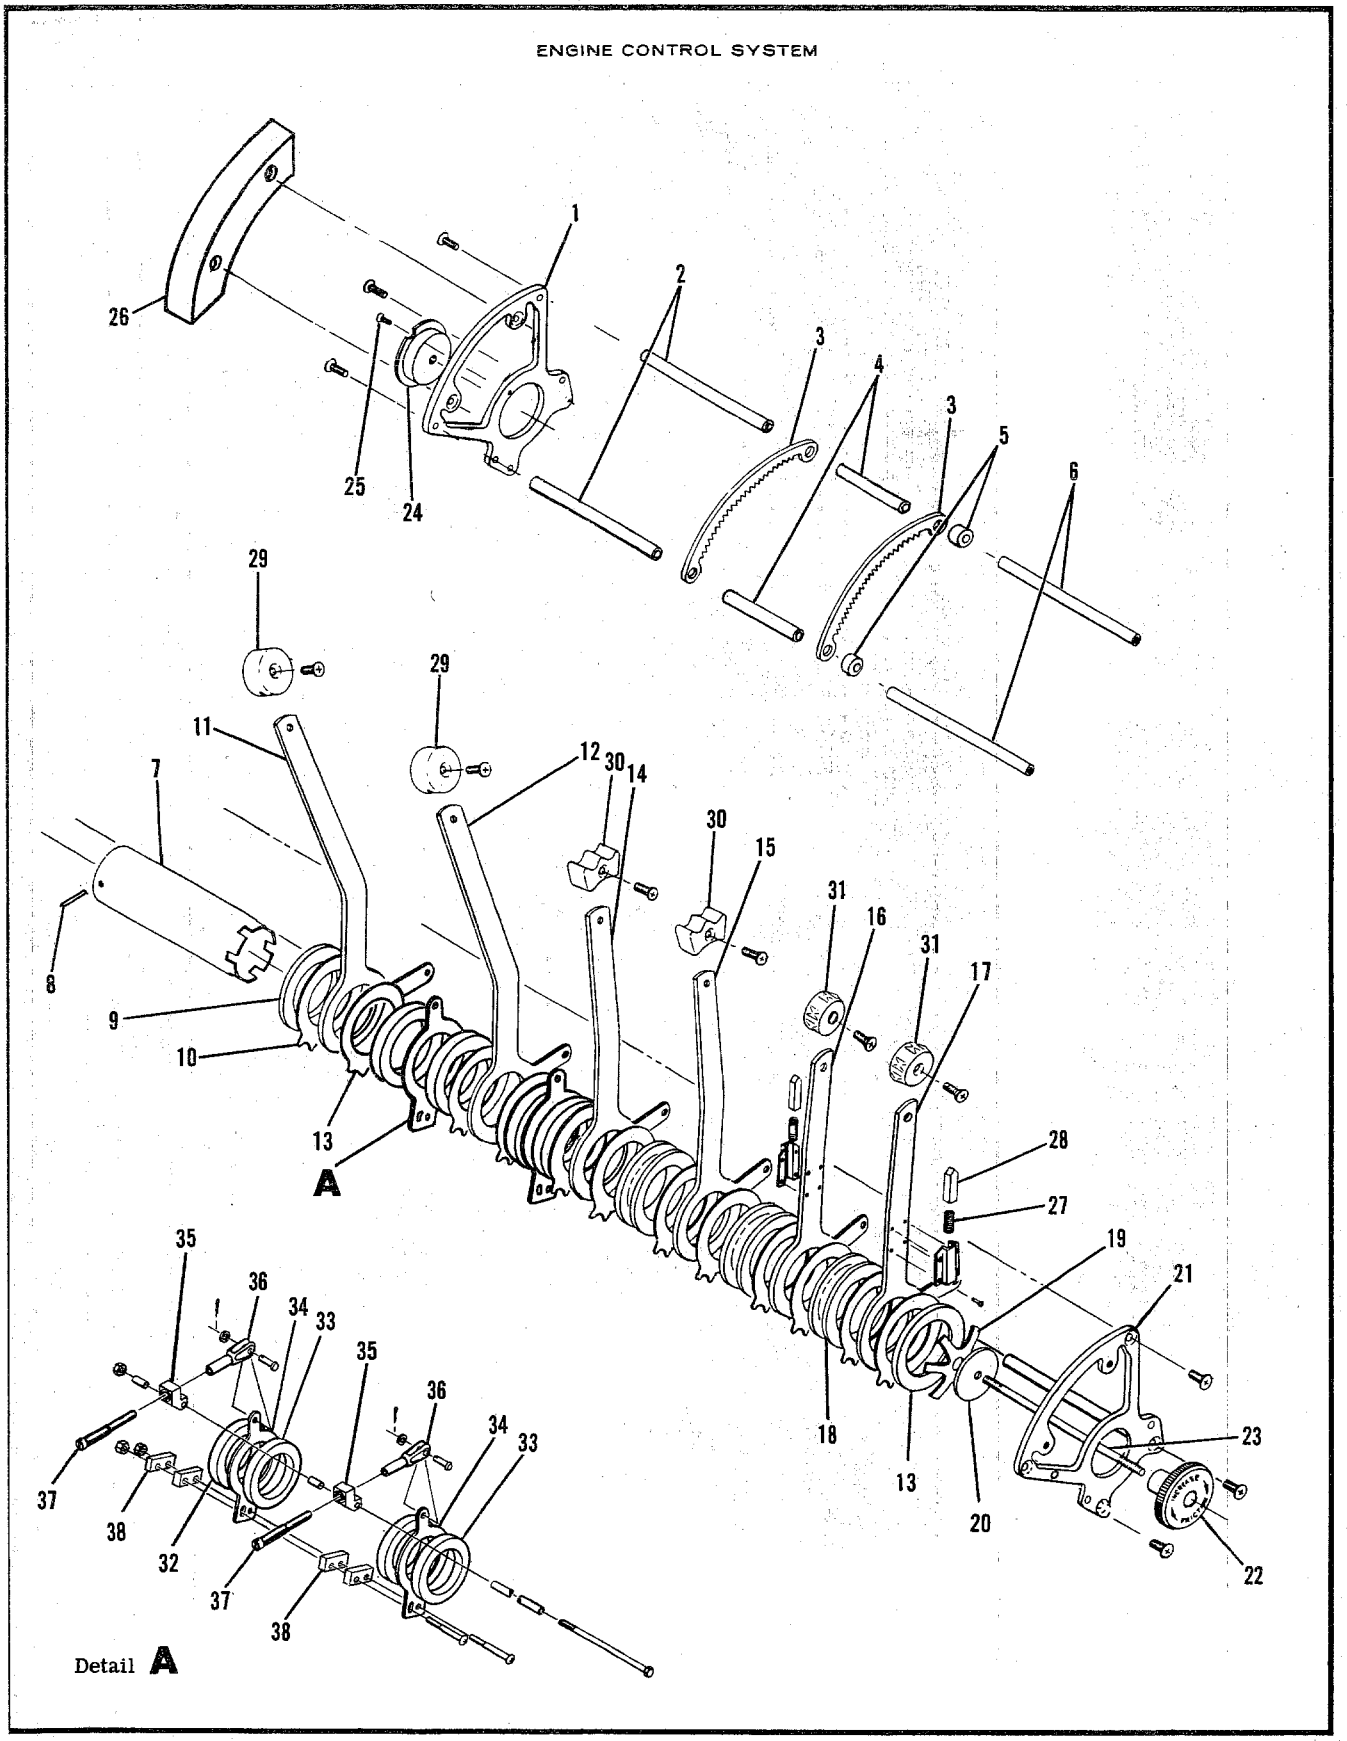

Figure 107. Engine Control Quadrant

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
107 -		ENGINE QUADRANT INSTALLATION	NP	
	5091504-6	. QUADRANT ASSY-CONTROL	1	
		ATTACHING PARTS		
	MS24693S48	. SCREW	6	
		---*---		
-1	0861211-2	. . PLATE-MOUNTING	1	
		ATTACHING PARTS		
	MS24693S272	. . SCREW	3	
		---*---		
-2	0861104-1	. . SPACER	2	
-3	0861232-1	. . RACK	2	
-4	0861104-2	. . SPACER	2	
-5	0861104-3	. . SPACER	2	
-6	0861220-1	. . SPACER	3	
-7	0861218-1	. . HUB	1	
		ATTACHING PARTS		
-8	NAS561P3-6	. . ROLL PIN	2	
		---*---		
-9	0861216-2	. . SPACER	1	
-10	0861213-1	. . DISC-FRICTION	12	
-11	5015068-11	. . LEVER-THROTTLE LH	1	
-12	5015068-12	. . LEVER-THROTTLE RH	1	
-13	0861216-1	. . SPACER	2	
-14	5015066-7	. . LEVER-PROP PITCH LH WEU 5015066-9	1	A
	5015066-9	. . LEVER-PROP PITCH LH	1	B
-15	5015066-8	. . LEVER-PROP PITCH RH WEU 5015066-10	1	A
	5015066-10	. . LEVER-PROP PITCH RH	1	B
-16	5015066-20	. . LEVER ASSY-MIXTURE LH	1	
-17	5015066-19	. . LEVER ASSY-MIXTURE RH	1	
-18	0861212-1	. . SPACER	3	
-19	0861210-1	. . SPRING	1	
-20	0861209-1	. . WASHER	1	
-21	0861211-1	. . PLATE-MOUNTING	1	
		ATTACHING PARTS		
	MS24693S272	. . SCREW	3	
		---*---		
-22	5015051-4	. . NUT-FRICTION	1	
-23	0861221-1	. . STUD	1	
-24	0861219-1	. . RETAINER	1	
		ATTACHING PARTS		
-25	MS24693S25	. . SCREW	1	
		---*---		
-26	5011508-13	. . ANGLE-LH	1	
	5011508-14	. . ANGLE-RH	1	
-27	0861207-1	. . SPRING	2	
-28	0861206-1	. . STOP-RATCHET	2	
-29	0861233-1	. . KNOB-THROTTLE LEVER	2	
		ATTACHING PARTS		
	MS24693S272	. . SCREW	1	
		---*---		
-30	0861234-1	. . KNOB-PROP PITCH LEVER	2	
		ATTACHING PARTS		
	MS24693S272	. . SCREW	1	
		---*---		
-31	0861224-1	. . KNOB-MIXTURE LEVER	2	
		ATTACHING PARTS		
	MS24693S273	. . SCREW	1	
		---*---		
-32	5015055-1	. . SPACER-GEAR WARNING HORN	2	
-33	5015055-2	. . SPACER	2	
-34	5015055-3	. . ARM-GEAR WARNING HORN	2	
-35	5015056-1	. . LUG ASSY-GEAR WARNING ADJUSTMENT	2	
		ATTACHING PARTS		
	AN3-53	. . BOLT	1	
	NAS43DD3-192	. . SPACER	1	
	NAS43HT3-23	. . SPACER	2	
	MS21083N3	. . NUT	1	
		---*---		
-36	AN665-21L	. . CLEVIS	2	
		ATTACHING PARTS		
	MS20392-2C11	. . PIN	AR	
	AN960-10L	. . WASHER	AR	
	MS24665-132	. . PIN-COTTER	AR	
		---*---		
-37	5015056-2	. SCREW-GEAR WARNING ADJUSTMENT	2	
-38	1SM3	. SWITCH-MICRO MCS	2	
		ATTACHING PARTS		
	5015057-1	. SPACER	1	
	MS35206-208	. SCREW	2	
	MS20341-2S	. NUT	2	
		---*---		
		A---340-0001 THRU 340A0045		
		B---340A0046 & ON		

PROPELLER

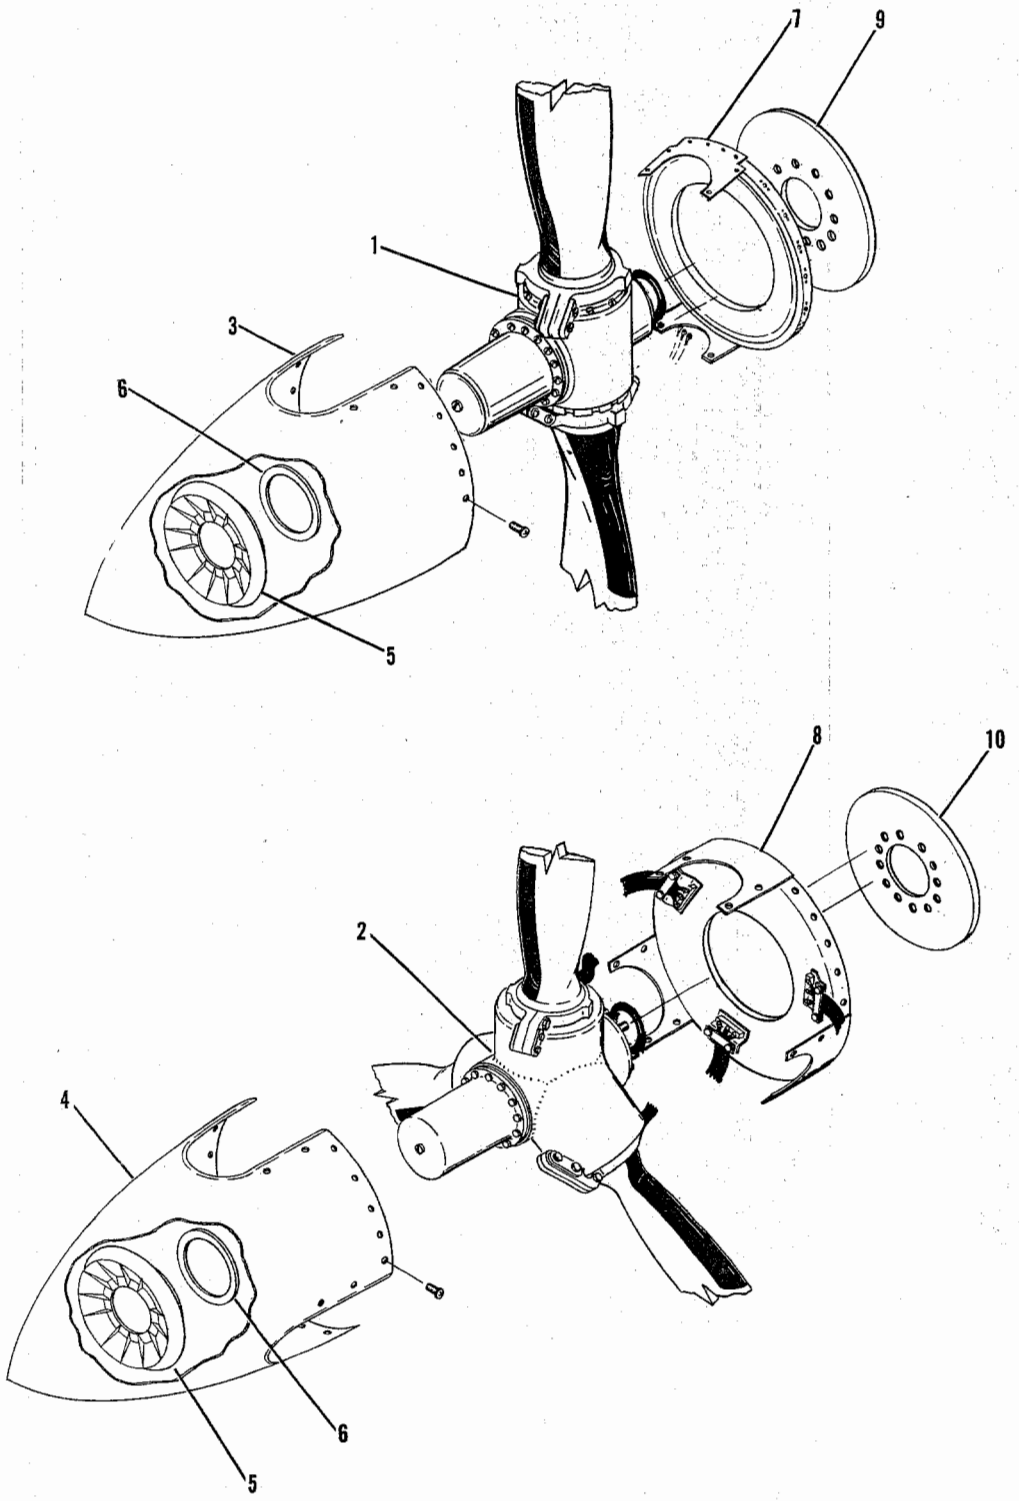

11 PROPELLER DEICE COMPONENTS

14503004R
51502001R
14503004R

Figure 108. Porpeller Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
108 -		PROPELLER INSTALLATION	NP	
-1	0850334-8	. PROPELLER ASSY 2 BLADE	1	B
-2	0850334-15	. PROPELLER ASSY 3 BLADE	1	C
	0850334-24	. PROPELLER ASSY 3 BLADE	1	D
		ATTACHING PARTS		
	A1639-2	. NUT MCL	6	
		---*---		
	CM3531	. . NAMEPLATE CESSNA	1	B
	D2AF34C71¤- # ¤84JF3	. . PROPELLER ASSY TWO BLADE SEE MCCAULEY INDUSTRIAL MCL	1	B
		CORP OVERHAUL/PARTS MANUAL FOR BREAKDOWN		
	3AF32C87¤- # ¤82NC4	. . PROPELLER ASSY THREE BLADE SEE MCCAULEY MCL	1	
		INDUSTRIAL CORP OVERHAUL/PARTS MANUAL FOR BRKDOWN		
-3	D3800	. DOME-SPINNER 2 BLADE MCL	1	B
-4	D3534	. DOME-SPINNER 3 BLADE MCL	1	
	MS27039-1-09	. SCREW	AR	
	A1638-5	. WASHER MCL	AR	
		---*---		
-5	0855030-3	. SUPPORT-SPINNER	1	
-6	0850330-3	. SPACER-SPINNER SUPPORT	AR	
-7	D3818	. BULKHEAD ASSY-SPINNER DOME 2 BLADE MCL	1	B
-8	D3796	. BULKHEAD ASSY-SPINNER DOME 3 BLADE MCL	1	
-9	0855042-3	. PLATE-ADAPTER 2 BLADE	1	B
		ATTACHING PARTS		
	MS35275-244	. SCREW	12	
	AN960-8	. WASHER	12	A
	MS21042-08	. NUT	12	
		---*---		
-11	SEE FIG 111	. PROPELLER DEICE COMPONENTS INSTL	REF	

WHEN ORDERING THIS PART BE SURE TO ENTER APPLICABLE HUB CHANGE LETTER DESIGNATED BY THE FIRST ¤ IN THE PART NO. ALSO BE SURE TO ENTER APPLICABLE BLADE CHANGE LETTER DESIGNATED BY THE SECOND ¤ IN THE PART NO.

A---340-0097 & ON
B---340-0001 THRU 340-0500
C---340-0001 TO 340A0001
D---340A0001 & ON

Figures 109 and 110 and Pages 2-338 thru 2-345 Deleted.

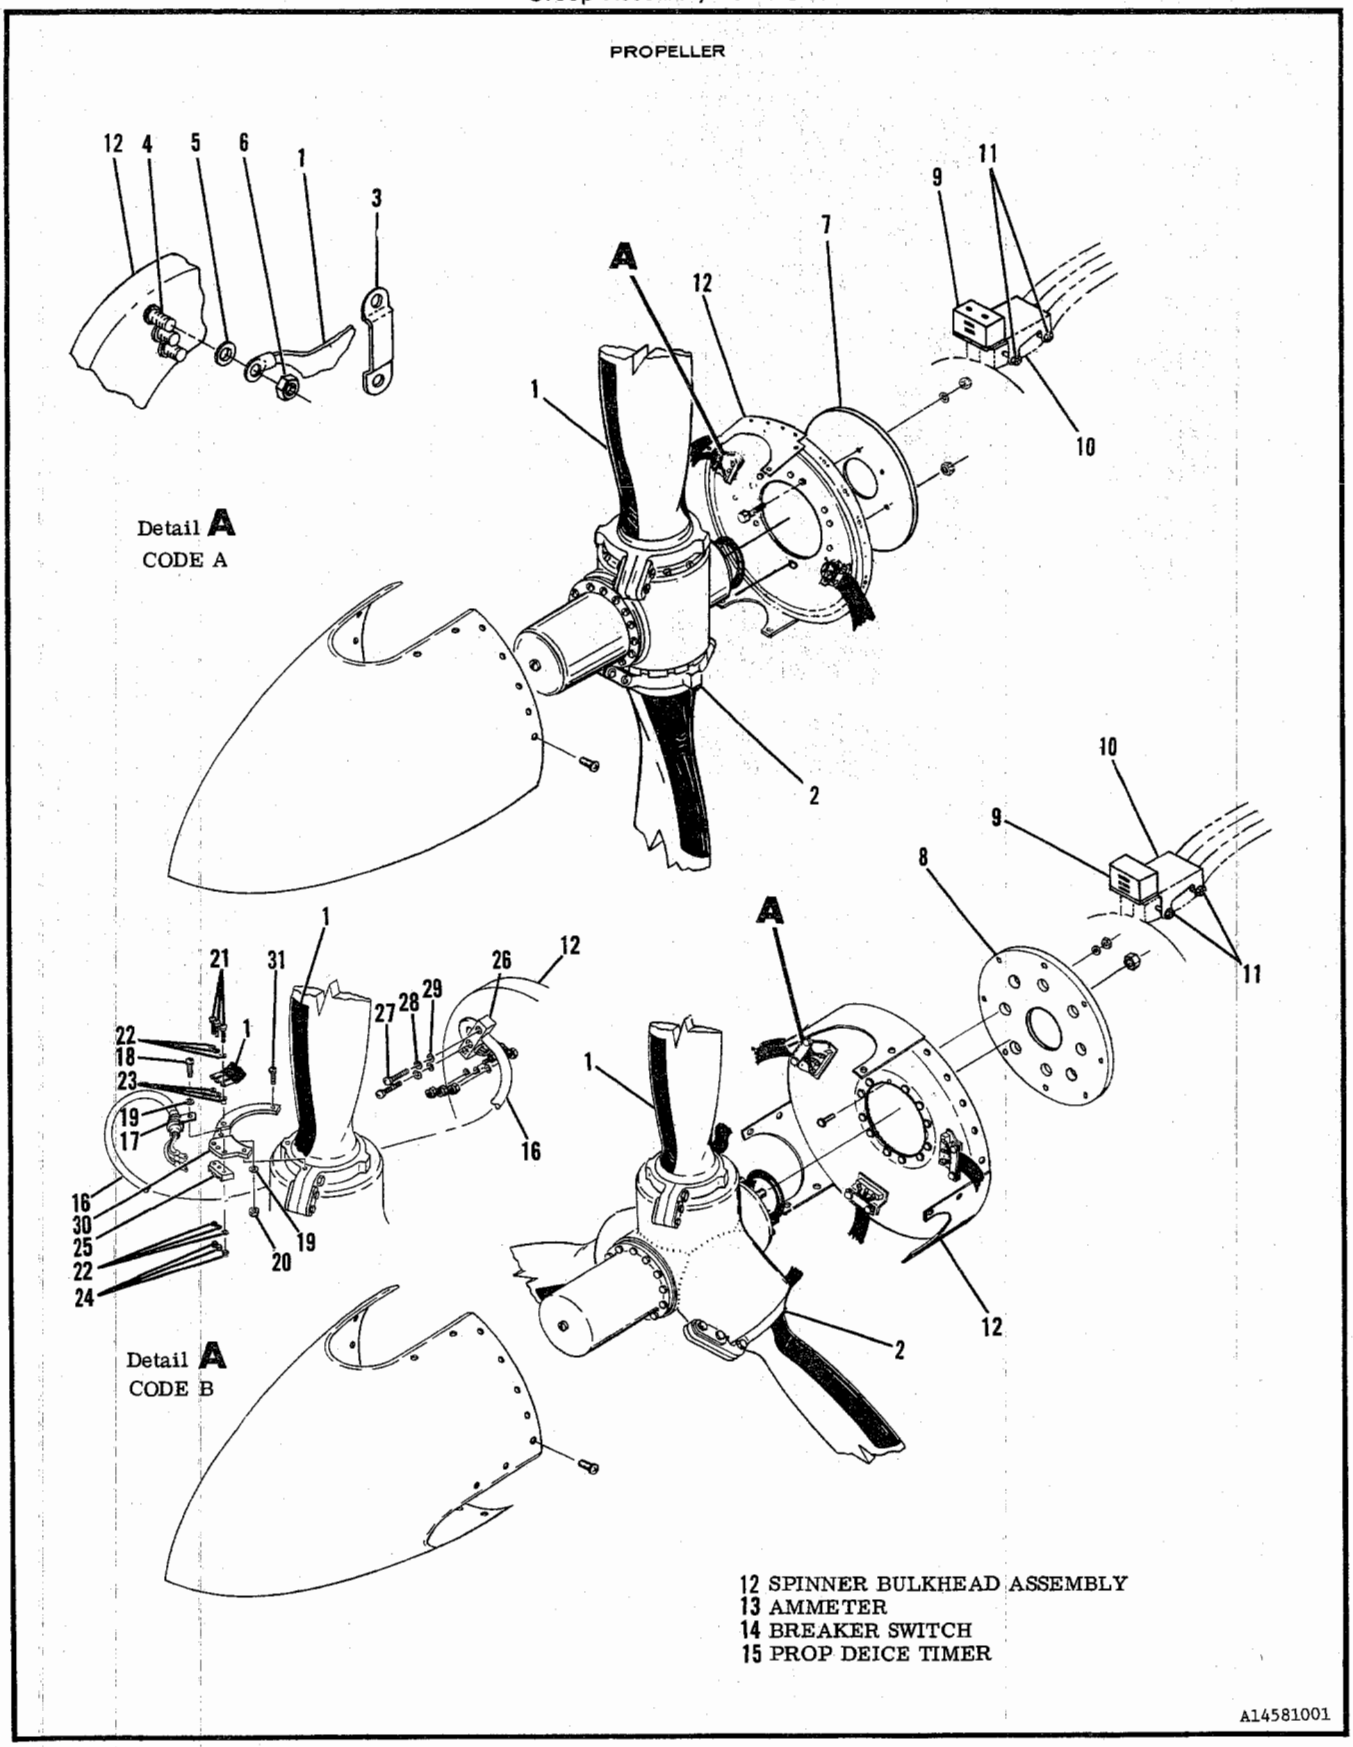

Figure 111. Propeller Deice Components Installation

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
111 -			PROPELLER DEICE COMPONENTS INSTALLATION	NP	
-1	C165013-0201		. BOOT-DEICE	A	A
	C165013-0301	*	. BOOT-DEICE ALT FOR C165013-0201	AR	A
	C165013-0401	**	. BOOT-DEICE ALT FOR C165013-0201	AR	A
	C165013-0102	*	. BOOT-DEICE ALT FOR C165013-0201	AR	A
	C165013-0501		. BOOT-DEICE FSO C165013-0601	AR	D
	C165013-0601		. BOOT-DEICE	AR	E
			ATTACHING PARTS		
-2	3E1375		. CLAMP	GD	AR A
	0850335-3		. CUSHION		AR A
	B3731-3		. SPACER	MCL	AR A
	AN503-8-6		. SCREW		AR A
-3	A40028		. CLAMP	MCL	AR A
-4	MS35206-230		. SCREW		AR A
-5	AN960-6		. WASHER		AR A
-6	MS21083N06		. NUT		AR A
	AN960-6L		. WASHER		AR A
			---*---		
-7	D40034		. SLIP RING ASSY-DEICE 2 BLADE PROP	MCL	2 C
-8	D40000		. SLIP RING ASSY-DEICE 3 BLADE PROP	MCL	2
			ATTACHING PARTS		
	AN503-8-6		. SCREW		12
	AN960PD8		. WASHER		12
			---*---		
-9	C40010		. BRUSH BLOCK ASSY	MCL	2
			ATTACHING PARTS		
	AN503-10-20		. SCREW		2
	AN960-10		. WASHER		2
			---*---		
	C40011		. . BRUSH & HOLDER ASSY	MCL	2
			ATTACHING PARTS		
	A1635-56		. . SCREW	MCL	2
	A1638-18		. . WASHER	MCL	AR
			---*---		
-10	C40029		. BRACKET ASSY	MCL	2
			ATTACHING PARTS		
-11	AN5023A		. BOLT		2
	B40030-1		. SPACER	MCL	4
	B40024-2		. SPACER	MCL	2
	AN960PD516L		. WASHER		4
	MS21045L5		. NUT		2
	AN960PD10L		. WASHER		AR
	AN960-516L		. WASHER		4
			---*---		
-12	SEE FIG 108		. BULKHEAD ASSY-SPINNER	REF	
-13	SEE FIG 63		. AMMETER	REF	
-14	SEE FIG 144		. SWITCH-PROP DEICE	REF	
-15	SEE FIG 141		. TIMER-PROP DEICE	REF	
	5855CH		. LEADS KIT-PROP DEICE BOOTS	SAFF AR	B
-16	D5855-1		. . CABLE ASSY-DEICER	1	B
			ATTACHING PARTS		
-17	E5855-5		. . CLAMP	SAFF 1	B
-18	E5735-4		. . SCREW	SAFF 1	B
-19	E5735-4A		. . WASHER	SAFF 2	B
-20	E5855-4B		. . NUT	SAFF 1	B
-21	E5735-2D		. . SCREW	SAFF 3	B
-22	E5735-2C		. . WASHER	SAFF 6	B
-23	E5735-2A		. . FEED-THRU INSULATOR	SAFF 3	B
-24	E5735-2E		. . NUT	SAFF 3	B
			---*---		
-25	5735-2B		. . INSULATOR	SAFF 1	B
-26	E5855-3		. . RETAINER-CABLE	SAFF 1	B
			ATTACHING PARTS		
-27	E5855-6		. . SCREW	SAFF 2	B
-28	E5855-6B		. . LOCKWASHER	SAFF 2	B
-29	E5855-6A		. . WASHER	SAFF 2	B
			---*---		
-30	E5855-2		. . BRACKET-TERMINAL	SAFF 1	B
			ATTACHING PARTS		
-31	E5855-4		. . SCREW	SAFF 3	B
			---*---		

* ALTERNATE DEICE BOOTS MUST BE INSTALLED IN PAIRS

A---340-0001 THRU 340-0150
B---340-0151 & ON
C---340-0001 THRU 340-0500
D---340-0151 THRU 340-0509
E---340-0510 & ON

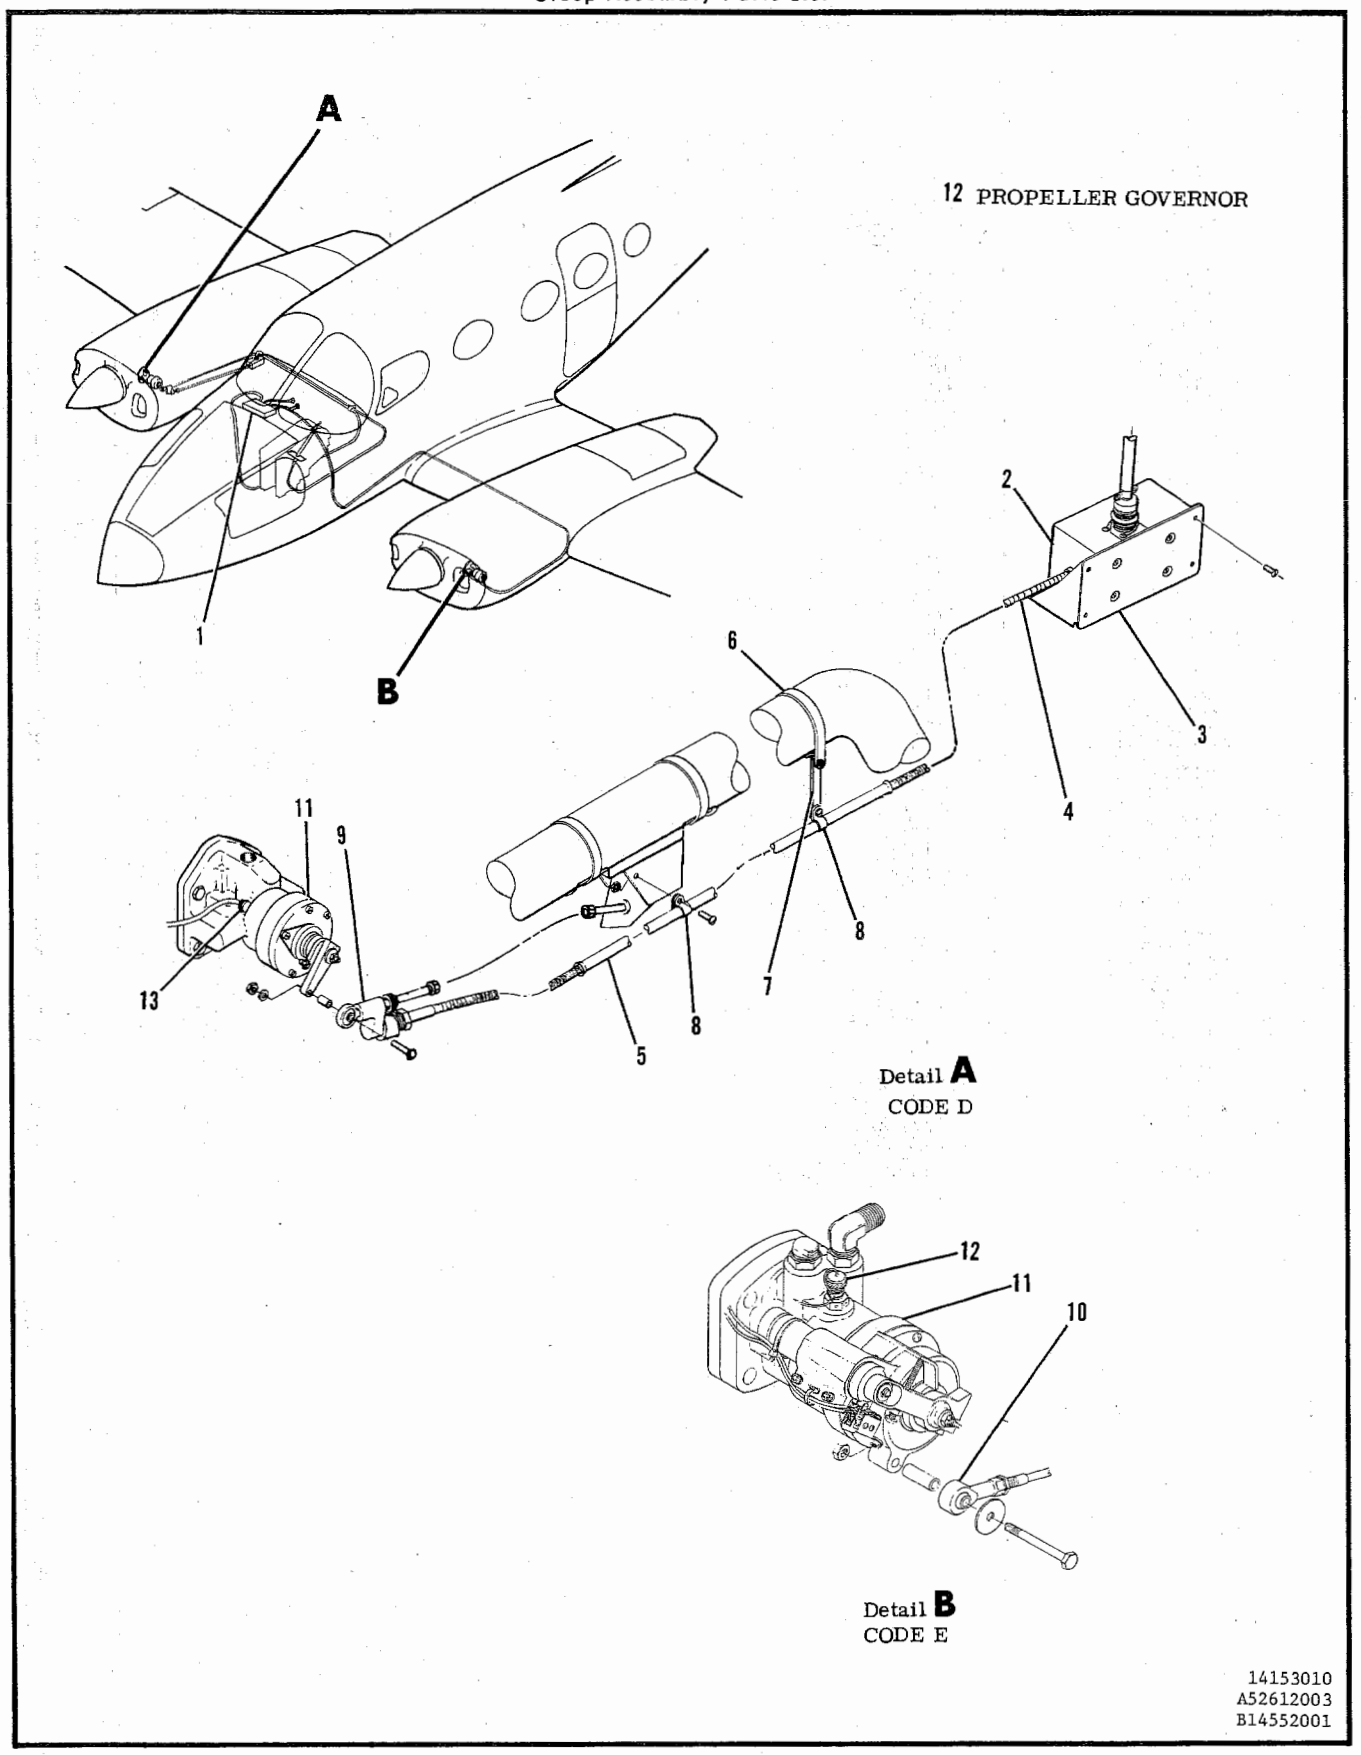

Figure 112. Propeller Synchronizer and Synchrophaser Components

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
112 -		PROPELLER SYNCHRONIZER AND SYNCHROPHASER COMPONENTS	NP	
-1	213433	. CONTROL BOX ASSY-PROPELLER SYNCHRONIZER WGV	1	D
	43380	. CONTROL BOX-PROPELLER SYNCHROPHASER ARC	1	E
		ATTACHING PARTS		
	MS35206-245	. SCREW	4	D
	MS35206-243	. SCREW	4	E
	MS21042L08	. NUT	4	B
		---*---		
	38423-0074	. CONNECTOR KIT ARC	1	E
	5318120-3	. BRACKET-CONTROL BOX	1	A
-2	213100	. ACTUATOR ASSY-PROPELLER SYNCHRONIZER WGV	1	D
		ATTACHING PARTS		
	MS27039-0804	. SCREW	4	D
		---*---		
-3	5659011-1	. BRACKET ASSY-ACTUATOR	1	D
-4	213158	. SHAFT ASSY-FLEXIBLE WGV	1	D
-5	5600108-22	. TUBE-GUIDE	1	D
		ATTACHING PARTS		
-6	AN735-36	. CLAMP	1	D
-7	5659014-1	. BRACKET	1	D
-8	AN742F8	. CLAMP	2	D
	MS35206-243	. SCREW	3	D
	MS21045L08	. NUT	3	D
		---*---		
-9	213447	. ROD END ASSY-PROPELLER SYNCHRONIZER WGV	1	D
		ATTACHING PARTS		
	AN3-17A	. BOLT	1	D
	NAS75-3-027	. BUSHING	1	D
	5710-121-15	. WASHER SEAS	1	C
	AN970-3	. WASHER	1	D
	AN315-4R	. NUT	1	D
	MS21045L3	. NUT	1	D
		---*---		
-10	SEE FIG 106	. CONTROL-PROP MCL	REF	
-11	SEE FIG 98	. GOVERNOR-PROPELLER MCL	REF	
-12	B20162	. PICKUP-MAGNETIC MCL	1	
	723061WG-213181	. PICKUP-MAGNETIC WGV	1	
-13	B20162	. PICKUP-MAGNETIC MCL	1	
	723061WG-213181	. PICKUP-MAGNETIC WGV	1	

A---340-0001 THRU 340-0150
B---340-0151 & ON
C---340-0001 THRU 340-0355
D---340-0001 TO 340A0001
E---340A0001 & ON

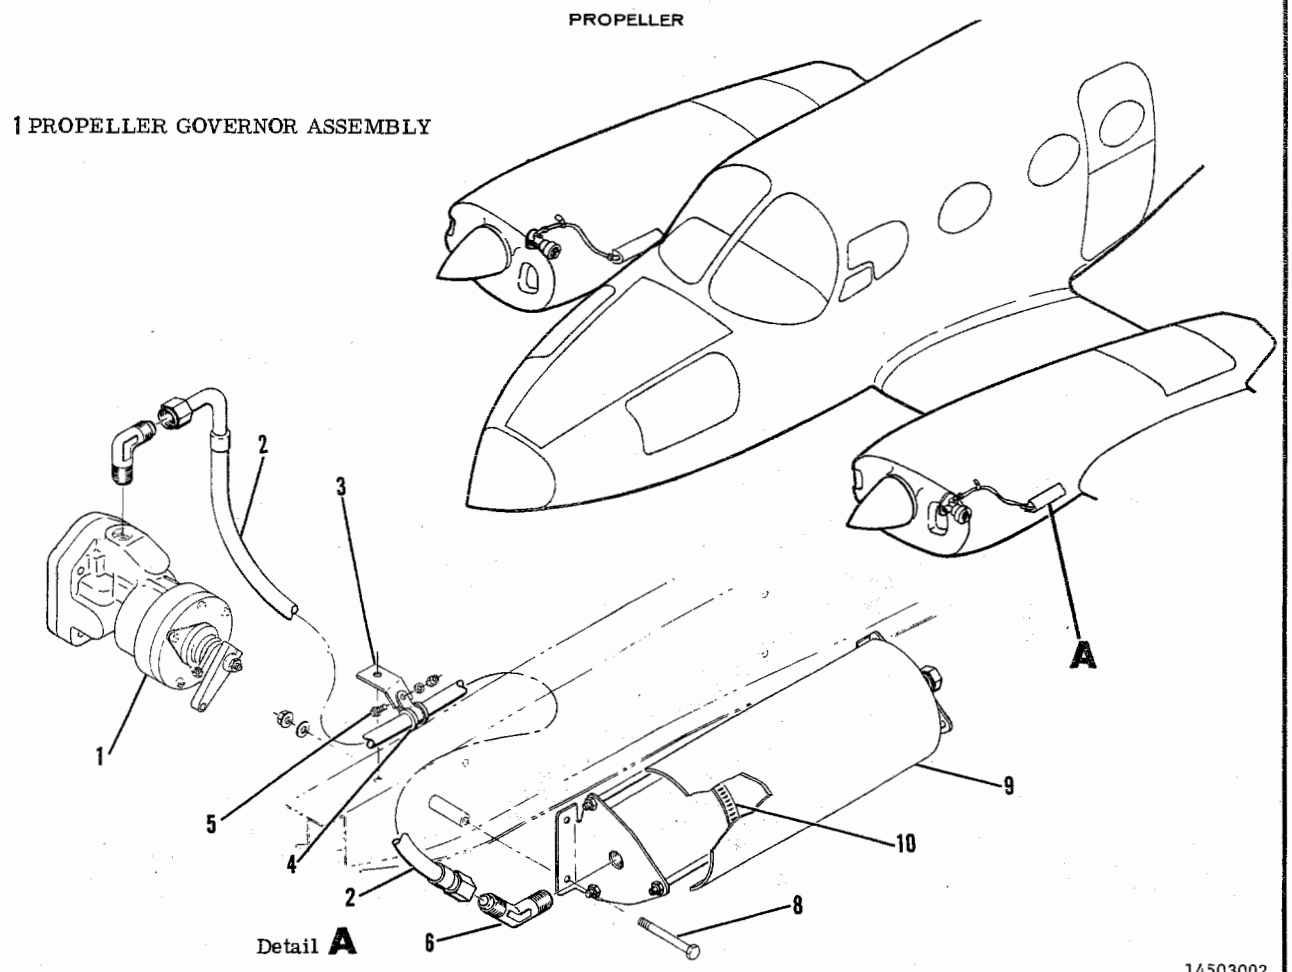

Figure 113. Propeller Unfeathering Components Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
113 -		PROPELLER UNFEATHERING COMPONENTS INSTALLATION	NP	
-1	SEE FIG 98	. GOVERNOR ASSY-PROPELLER	REF	
-2	T640369-6-0172	. HOSE ASSY AQ	2	
		ATTACHING PARTS		
-3	0850454-3	. BRACKET	1	
-4	MS21919WDG9	. CLAMP	1	
-5	AN3-4A	. BOLT	1	
	AN960-10L	. WASHER	1	
	MS21045L3	. NUT	1	
		---*---		
-6	MS20823-6D	. ELBOW	2	
-7	0850454-6	. ACCUMULATOR-PROP UNFEATHERING	2	
		ATTACHING PARTS		
-8	AN3C20A	. BOLT	8	
	AN960C10L	. WASHER	8	
	MS21045L3	. NUT	8	
		---*---		
-9	0852602-1	. HEATSHIELD ASSY LH & RH	2	A
-10	AN737TW107	. CLAMP LH & RH	4	A
		A---340-0501 & ON		

FUEL SYSTEM

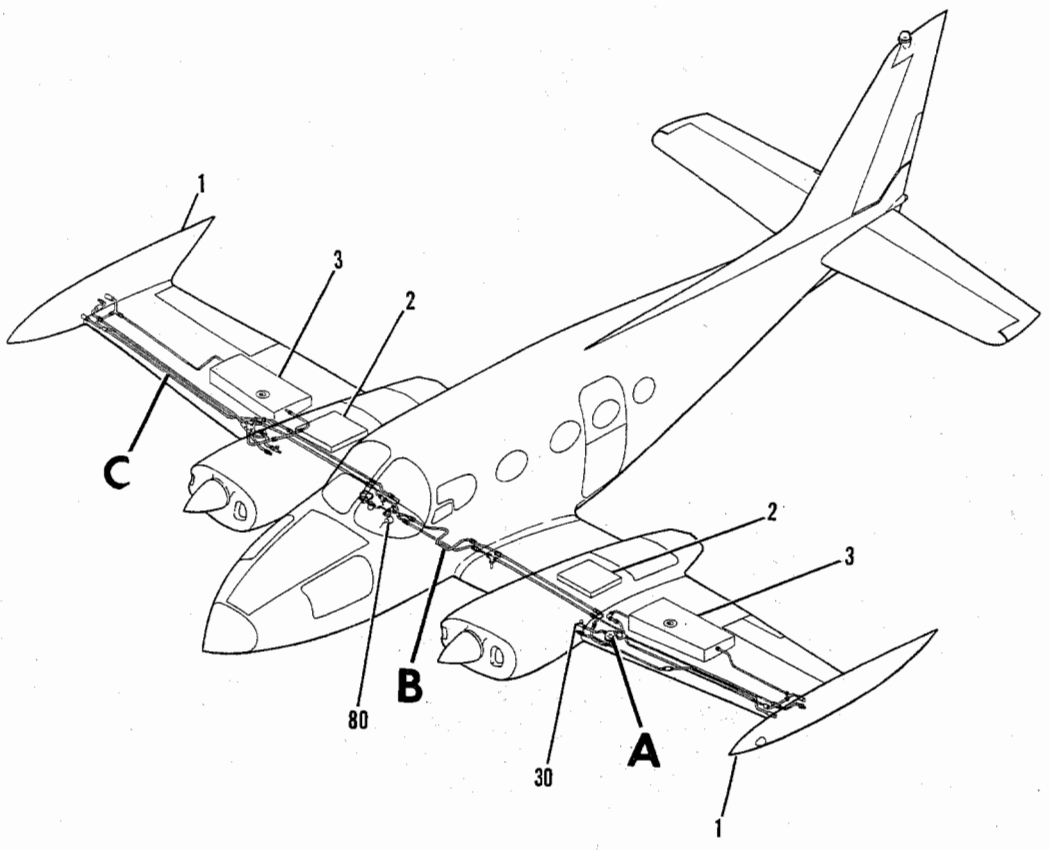

1 WING TIP FUEL TANKS INSTALLATION
2 WING LOCKER AUXILIARY FUEL SYSTEM
3 AUXILIARY FUEL SYSTEM COMPONENTS
20 FUEL SELECTOR VALVE AND CONTROLS INSTALLATION
30 ENGINE COMPARTMENT FUEL SYSTEM COMPONENTS
72 HEATER FUEL SYSTEM
80 FUEL FLOW SYSTEM

14263005

Figure 114. Fuel System Installation (Sheet 1 of 2)

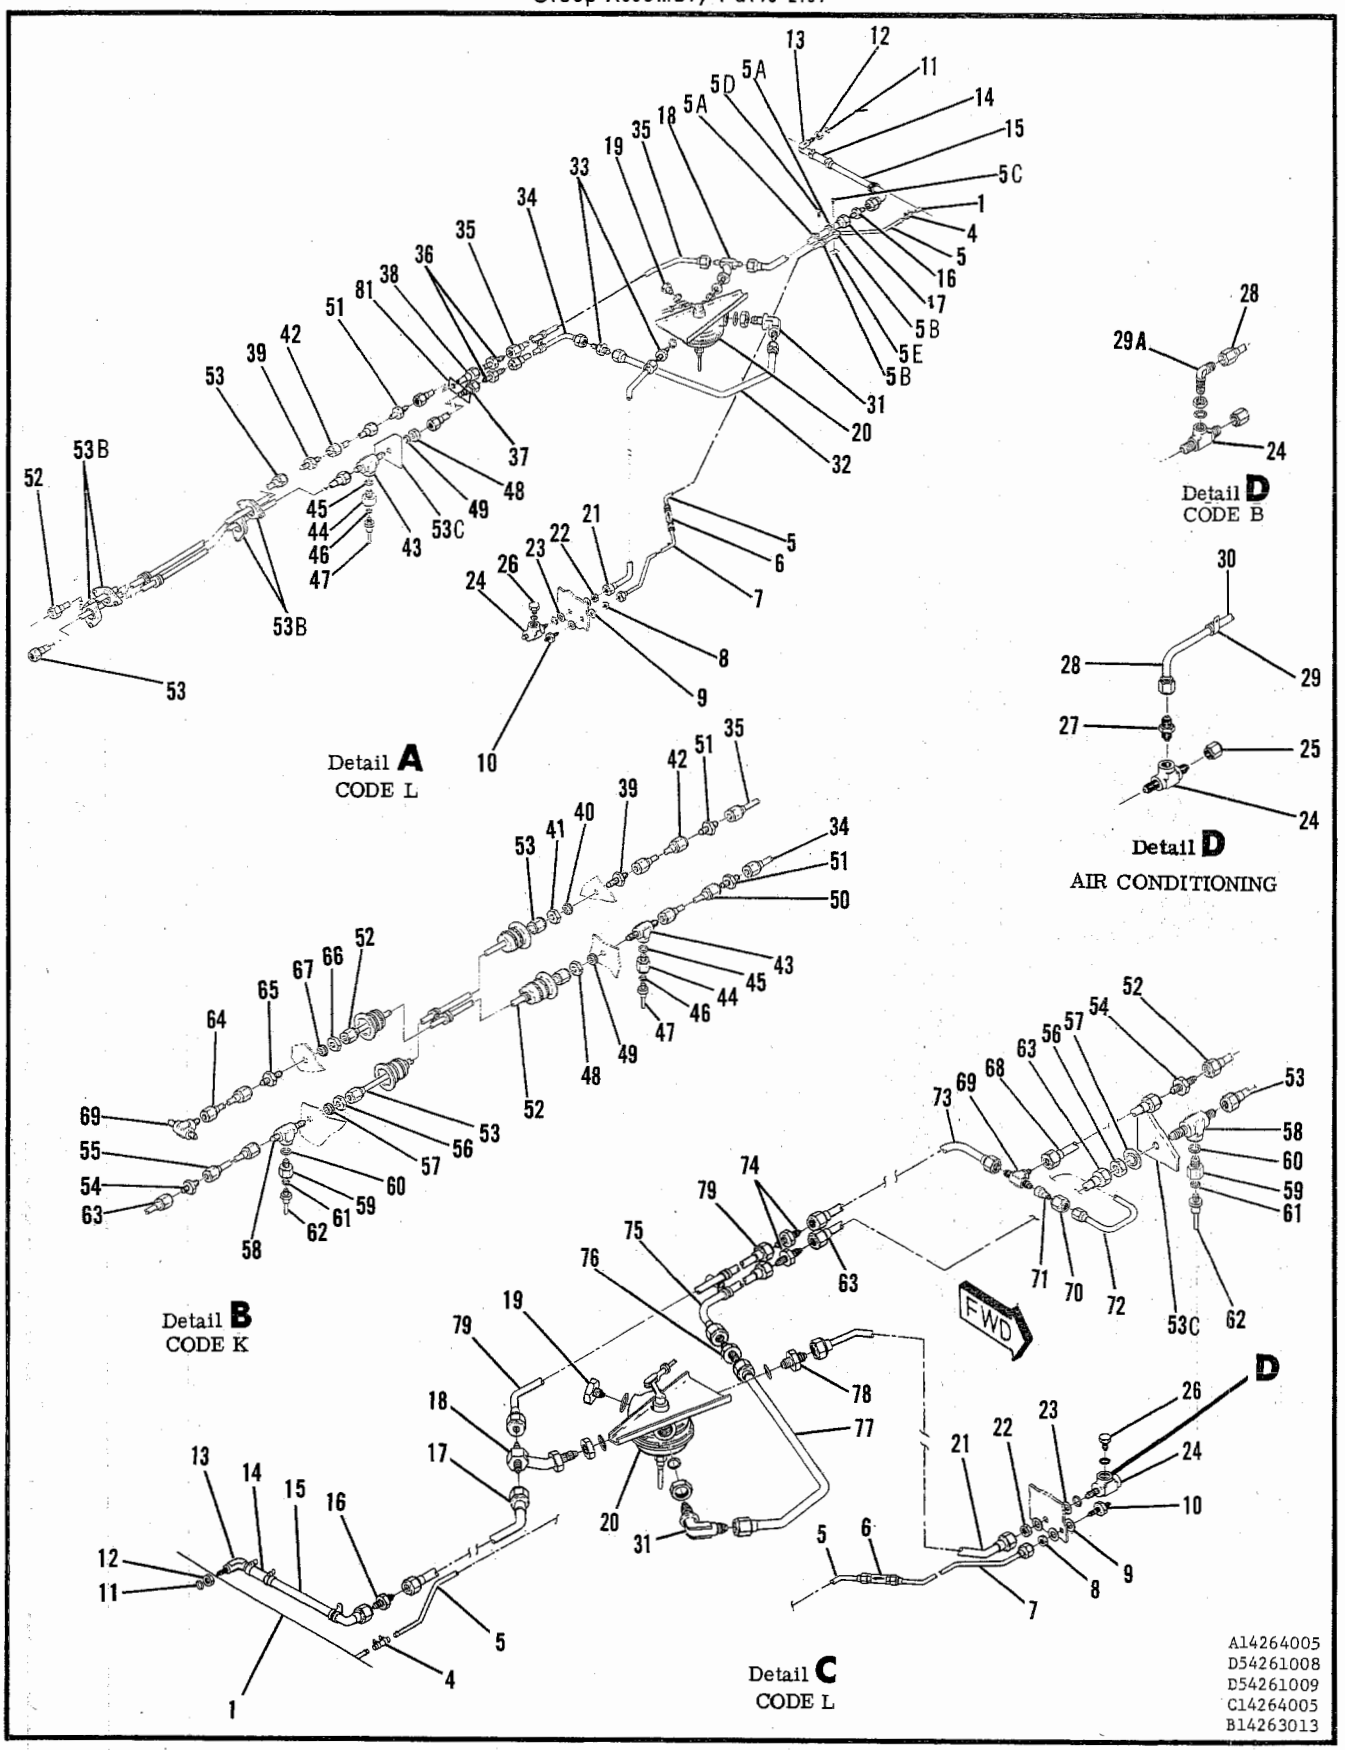

Figure 114. Fuel System Installation (Sheet 2)

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
114 -		FUEL SYSTEM INSTALLATION	NP	
-1	SEE FIG 121	. WING TIP FUEL TANKS INSTL	1	
-2	SEE FIG 120	. WING LOCKER AUXILIARY FUEL SYSTEM	1	
-3	SEE FIG 118	. AUXILIARY FUEL SYSTEM COMPONENTS 40 GAL CAPACITY	1	
	SEE FIG 119	. AUXILIARY FUEL SYSTEM COMPONENTS 63 GAL CAPACITY	1	
-4	S51-6	. HOSE BKI	AR	
		ATTACHING PARTS		
	AN737TW26	. CLAMP	2	
		---*---		
-5	5600106-17	. LINE ASSY VAPOR RETURN LH & RH	2	
-5A	MS21919WDG10	. CLAMP	AR	
-5B	MS21919WDG6	. CLAMP	AR	
		ATTACHING PARTS		
-5C	S1021Z8-8	. SCREW	AR	
-5D	MS27039-1-08	. SCREW	AR	
-5E	NAS446-4-3	. NUT	AR	
		---*---		
-6	367-00	. VALVE-CHECK LH & RH DUKA	2	
	1111-517702	. VALVE-CHECK ALT FOR 367-00 PAET	2	
-7	5600106-19	. LINE ASSY VAPOR RETURN LH & RH	2	
-8	AN924-6	. NUT LH & RH	2	
-9	AN960-916	. WASHER LH & RH	4	
-10	AN832-6	. UNION LH & RH	2	
-11	MS29512-8	. GASKET LH & RH	2	
-12	AN924-8D	. NUT LH & RH	2	
-13	1K13-8-10	. ELBOW LH & RH ABNE	2	
-14	S51-10	. HOSE BKI LH & RH	AR	
		ATTACHING PARTS		
	AN737TW34	. CLAMP	2	
		---*---		
-15	5000106-16	. LINE ASSY-FUEL LH & RH	2	
		ATTACHING PARTS		
	MS21919WDG10	. CLAMP	1	
	MS27039-1-06	. SCREW	1	
		---*---		
-16	AN815-10	. UNION LH & RH	2	
-17	5600106-21	. LINE ASSY-FUEL LH & RH	2	
-18	1K16-3	. TEE LH & RH ABNE	2	
	MS29512-10	. GASKET LH & RH	2	
-19	MS39071-10D	. PLUG LH & RH	2	
	MS29512-10	. GASKET LH & RH	2	
-20	SEE FIG 122	. FUEL SELECTOR VALVE & CONTROLS INSTL	1	
-21	5600106-29	. LINE ASSY-FUEL LH & RH	2	G
	5600106-53	. LINE ASSY-FUEL LH & RH	2	H
-22	AN924-8	. NUT LH & RH	2	
-23	AN960-1216L	. WASHER LH & RH	4	
-24	AN783-8	. TEE LH & RH	2	
-25	AN929-8	. CAP ASSY USED WITH AIRCONDITIONING	1	
-26	AN814-8	. PLUG LH & RH	2	
	MS29513-115	. O-RING LH & RH	2	
-27	AN815-8	. UNION USED WITH AIRCONDITIONING	1	A
-28	5655317-1	. LINE ASSY USED WITH AIRCONDITIONING	1	A
-29	MS21919DF8	. CLAMP USED WITH AIRCONDITIONING	1	A
		ATTACHING PARTS		
	MS24694S5	. SCREW	1	A
	MS21043-08	. NUT	1	A
		---*---		
-29A	AN837-8	. ELBOW	1	B
	MS28778-8	. O-RING	1	B
	AN924-8	. NUT	1	B
-30	SEE FIG 117	. ENGINE COMPARTMENT FUEL SYSTEM COMPONENTS	1	
-31	AN833-10D	. ELBOW LH & RH	2	
	MS29512-10	. GASKET LH & RH	2	
	AN924-10D	. NUT LH & RH	2	
-32	5600106-25	. LINE ASSY-FUEL LH	2	G
	5600106-54	. LINE ASSY-FUEL LH	2	H
-33	AN919-15D	. REDUCER	2	
	MS29512-10	. GASKET	1	
-34	5600106-33	. LINE ASSY-FUEL LH	1	
-35	5600106-31	. LINE ASSY-FUEL LH	1	
-36	AN815-8D	. UNION	2	
-37	56D0106-7	. LINE ASSY-FUEL LH	1	K
	5300108-55	. LINE ASSY-FUEL LH	1	L
-38	5600106-9	. LINE ASSY-FUEL LH	1	
-39	AN832-8D	. UNION-LH	1	
-40	250-215-8	. LOCK-O-SEAL INBD SIDE PKSC	1	
-41	AN924-8D	. NUT-LH	1	
-42	5300108-10	. LINE ASSY-LH	1	K
	5300108-52	. LINE ASSY-LH & RH	2	L
-43	AN783-8D	. TEE-LH	1	G
-44	AN893-12D	. BUSHING-LH	1	C
-45	MS29512-08	. PACKING	1	H
-46	MS29512-06	. PACKING	1	H
-47	5026000-4	. VALVE-DRAIN LH	1	H

CONTINUED

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
114 -48	AN924-8D	. NUT-LH	2	H
-49	250-215-8	. LOCK-O-SEAL PKSC	1	H
-50	5300108-11	. LINE ASSY-LH	1	K
-51	AN815-8D	. UNION-LH	2	
-52	5300108-41	. LINE ASSY-CROSSFEED	1	K
	5300108-54	. LINE ASSY-CROSSFEED	1	L
-53	5300108-40	. LINE ASSY-CROSSFEED WEU 5300108-41	1	C
	5300108-41	. LINE ASSY-CROSSFEED	1	D
	5300108-53	. LINE ASSY-CROSSFEED	1	L
-53A	5311301-2	. SHROUD HALF-LH & RH	4	J
-53B	5311301-1	. SHROUD HALF-LH & RH	4	J
	S45A13	. FITTING-SEAL LH & RH	4	L
		ATTACHING PARTS		
	MS27039-0808	. SCREW	2	L
		---*---		
-53C	5326001-1	. PLATE-LH	1	L
	5326001-2	. PLATE-RH	1	L
		ATTACHING PARTS		
	MS24694S50	. SCREW	3	L
		---*---		
-54	AN815-8D	. UNION-RH	2	
-55	5300108-11	. LINE ASSY-RH	1	K
-56	AN924-8D	. NUT-RH	2	
-57	250-215-8	. LOCK-O-SEAL PKSC	1	
-58	AN783-8D	. TEE-RH	1	
-59	AN893-12D	. BUSHING-RH	1	
-60	MS29512-08	. PACKING	1	
-61	MS29512-06	. PACKING	1	E
-62	5026000-4	. VALVE-DRAIN RH	1	
-63	5600106-7	. LINE ASSY-FUEL RH	1	K
	5300108-55	. LINE ASSY-FUEL RH	1	L
-64	5300108-10	. LINE ASSY-RH	1	
-65	AN832-8D	. UNION-RH	1	
-66	AN924-8D	. NUT-RH	1	
-67	250-215-8	. LOCK-O-SEAL INBD SIDE PKSC	1	
-68	5600106-12	. LINE ASSY-FUEL RH	1	
-69	AN824-8D	. TEE	1	
-70	AN818-8D	. NUT	1	
-71	NAS564D8-4	. REDUCER	1	
-72	SEE FIG 116	. HEATER FUEL SYSTEM	1	
-73	5600106-10	. LINE ASSY-FUEL RH WEU 5300106-30	1	E
	5300106-30	. LINE ASSY-FUEL RH	1	F
	5126207-2	. VALVE ASSY-SHUT OFF RH ONLY	1	
-74	AN815-8D	. UNION	2	
-75	5600106-33	. LINE ASSY-FUEL RH	1	
		ATTACHING PARTS		
	MS21919WDG8	. CLAMP	AR	
	MS27039-1-18	. SCREW	AR	
	AN960-10L	. WASHER	AR	
	NAS43DD3-42	. SPACER	AR	
		---*---		
-76	AN919-15D	. REDUCER	1	
-77	5600106-26	. LINE ASSY-FUEL RH	1	
-78	AN919-15D	. REDUCER	1	
	MS29512-10	. GASKET	1	
-79	5600106-31	. LINE ASSY-FUEL RH	1	
-80	SEE FIG 115	. FUEL FLOW SYSTEM	1	
-81	5615002-1	. CAP ASSY-LH & RH	2	
	5615002-4	. CAP ASSY-LH & RH	2	

A---340-0001 & ON EXCEPT WHEN MODIFIED BY SK414-6
B---340-0001 THRU 340-0300 WHEN MODIFIED BY SK414-6
C---340-0001 THRU 340-0359
D---340-0360 TO 340A0072
E---340-0001 THRU 340-0553
F---340-0554 & ON
G---340-0001 & ON
H---340A0001 & ON
J---340A0014 THRU 340A0072 AND AIRCRAFT MODIFIED BY SK340-11
K---340-0001 THRU 340A0072
L---340A0073 & ON

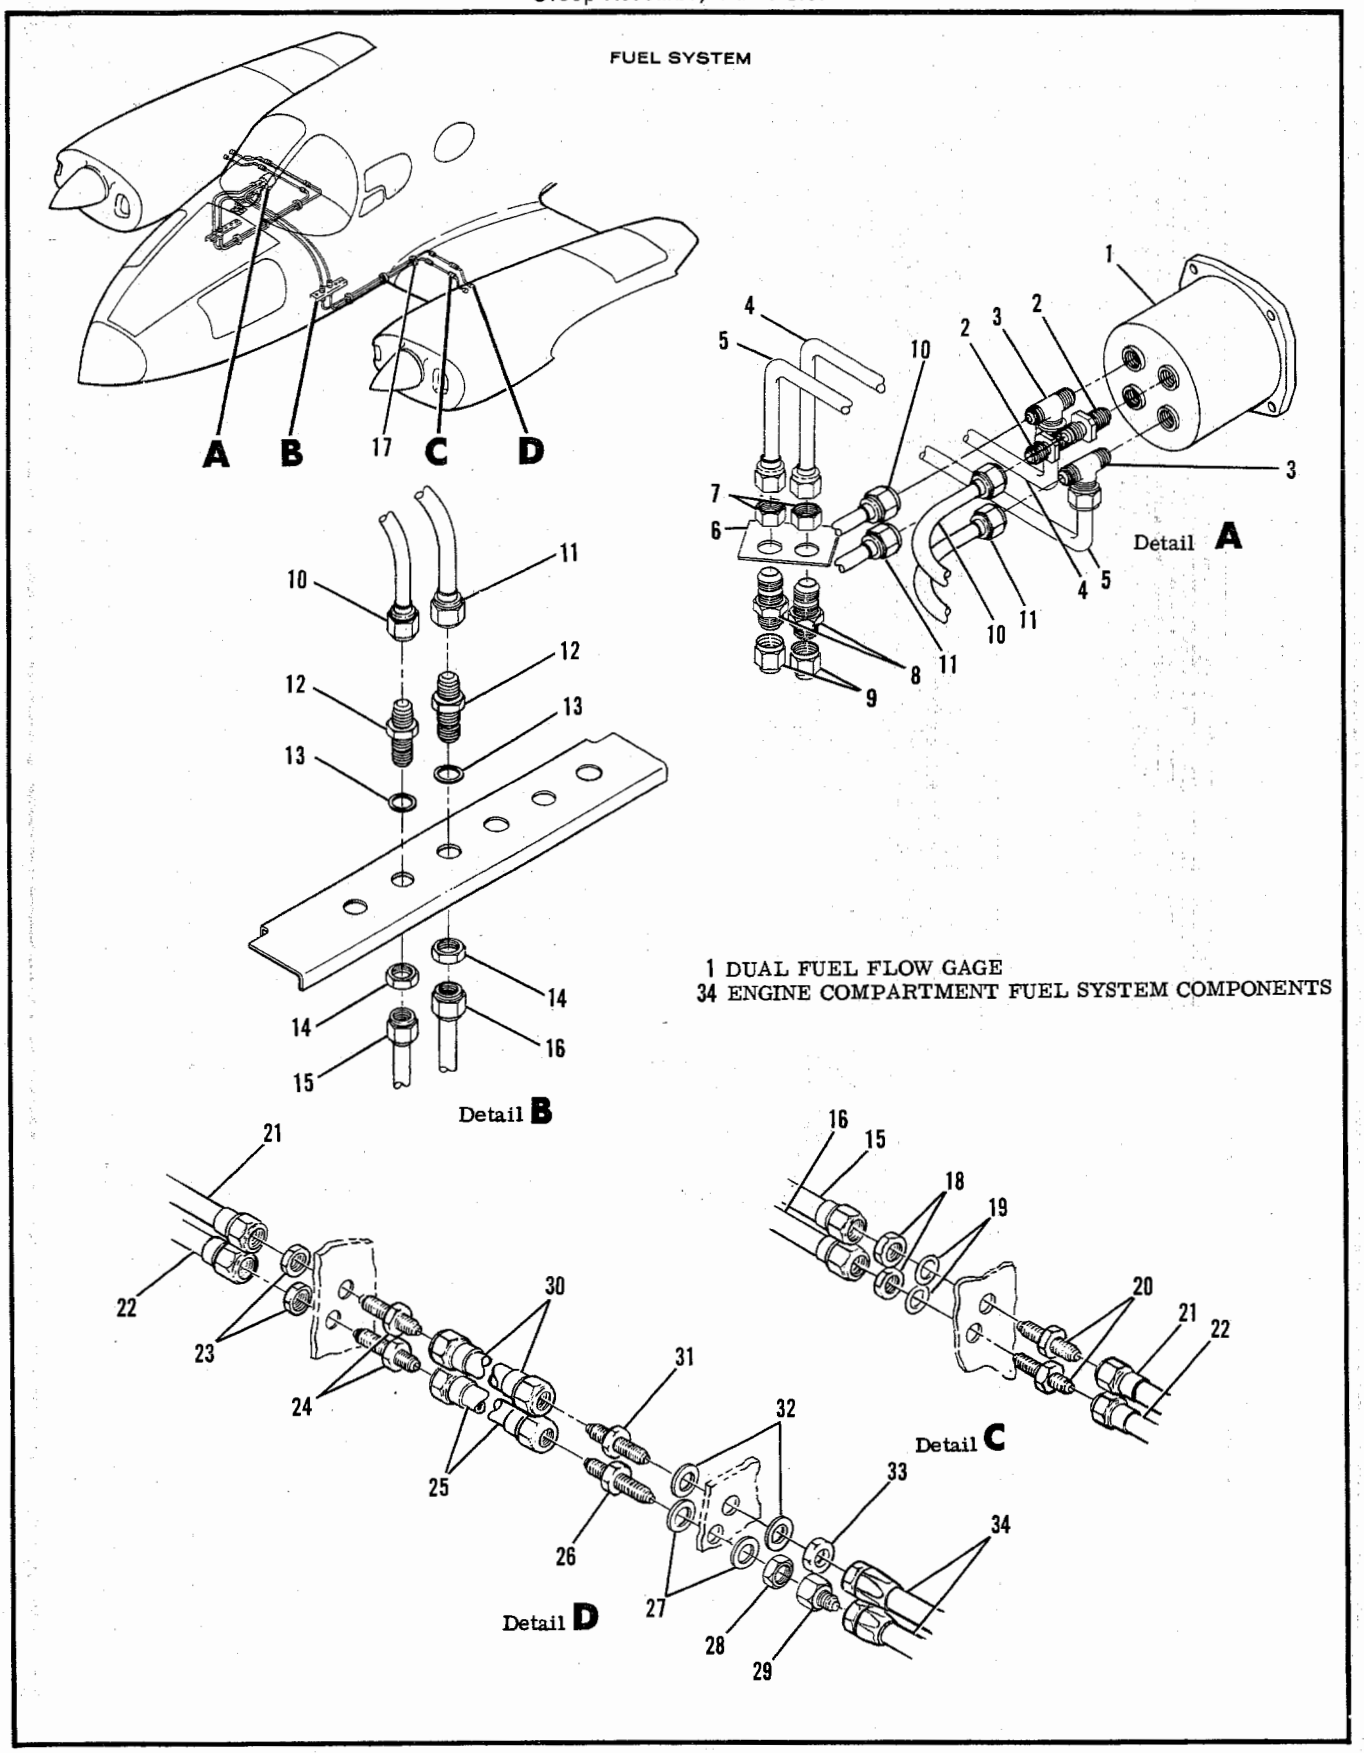

Figure 115. Fuel Flow System

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
115 -		FUEL FLOW SYSTEM	NP	
-1	SEE FIG 61	GAGE-DUAL FUEL FLOW	REF	
-2	AN816-2D	NIPPLE	2	
	0813627-1	SNUBBER ASSY	2	A
-3	MS20826-2D	TEE	2	
	5155138-1	SNUBBER ASSY FSO 5155138-6	2	B
	5155138-6	SNUBBER ASSY	2	C
-4	5300108-32	LINE ASSY-FUEL DRAIN	1	
-5	5300108-33	LINE ASSY-FUEL DRAIN	1	
-6	5318503-2	BRACKET	1	
-7	AN924-4D	NUT	2	
-8	AN832-2D	UNION	2	
-9	AN929-2D	CAP	2	
-10	5300108-31	LINE ASSY-LH TURBO PRESSURE	1	
	5300108-30	LINE ASSY-RH TURBO PRESSURE	1	
-11	5300108-27	LINE ASSY-LH FUEL PRESSURE	1	
	5300108-26	LINE ASSY-RH FUEL PRESSURE	1	
-12	AN832-2D	UNION LH & RH	4	
-13	AN960PD516	WASHER LH & RH	4	
-14	AN924-2D	NUT LH & RH	4	
-15	5300108-20	LINE ASSY-LH TURBO PRESSURE	2	
-16	5300108-20	LINE ASSY-LH FUEL PRESSURE	2	
-17	MS35489-111	GROMMET LH & RH	2	
-18	AN924-2D	NUT	2	
-19	250-215-2	LOCK-O-SEAL PKSC	2	
-20	AN832-2D	UNION	2	
-21	5300108-12	LINE ASSY-LH & RH TURBO PRESSURE	2	
-22	5300108-13	LINE ASSY-LH & RH FUEL PRESSURE	2	
-23	AN924-2D	NUT	2	
-24	AN832-2D	UNION	2	
-25	5600108-18	LINE ASSY-LH & RH FUEL PRESSURE	2	
-26	AN832-3	UNION	1	
-27	AN960-616L	WASHER	2	
-28	AN924-3	NUT	1	
-29	AN894-3-2	BUSHING	1	
-30	5600108-18	LINE ASSY-LH & RH TURBO PRESSURE	2	
-31	AN832-2	UNION	1	
-32	AN960-516L	WASHER	2	
-33	AN924-2	NUT	1	
-34	SEE FIG 117	ENGINE COMPARTMENT FUEL SYSTEM COMPONENTS	REF	

A---340-0072 & ON
B---340-0072 THRU 340-0224
C---340-0225 & ON

FUEL SYSTEM

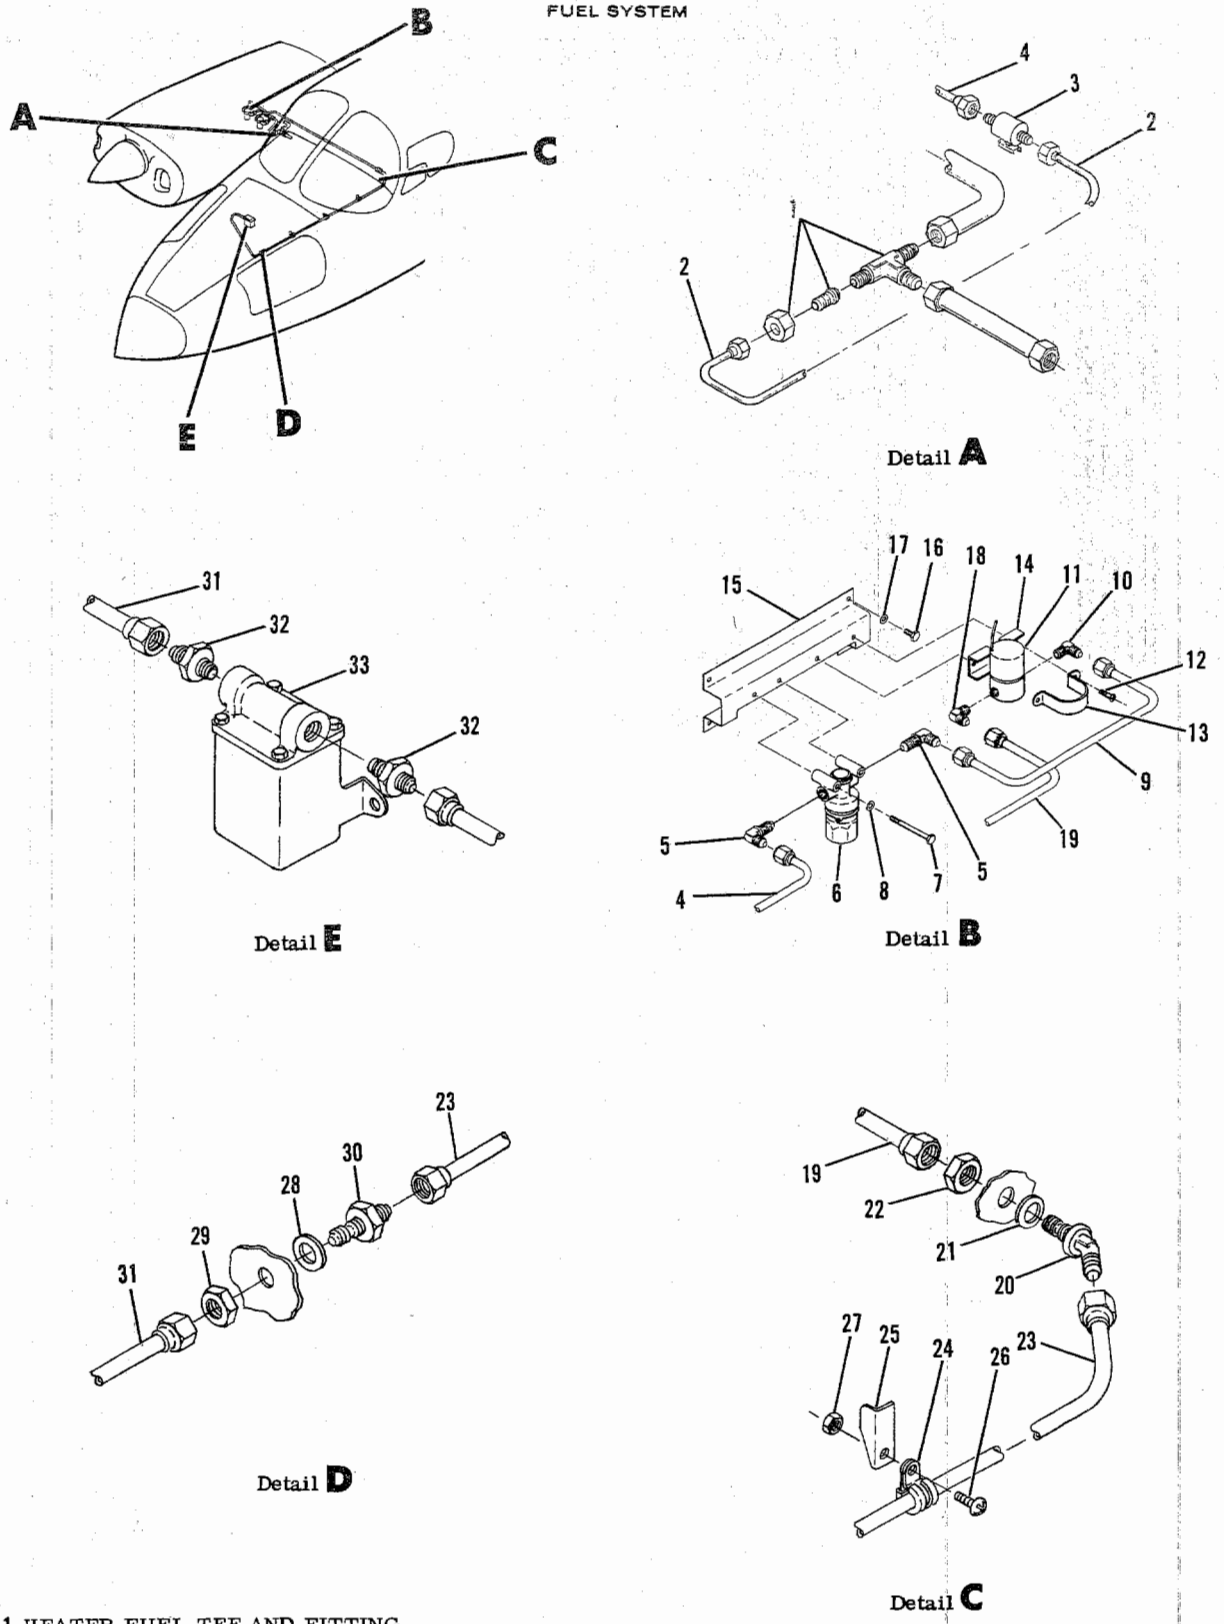

1 HEATER FUEL TEE AND FITTING

Figure 116. Heater Fuel System

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
116 -			HEATER FUEL SYSTEM	NP	
-1	SEE FIG 114		. TEE & FITTINGS HEATER FUEL	1	
-2	5300108-38		. LINE ASSY-TEE TO SHUTOFF VALVE	1	A
	5300108-47		. LINE ASSY-TEE TO SHUTOFF VALVE	1	B
-3	K414-4-3-1		. VALVE-SHUTOFF KDL	1	A
-4	5200106-118		. LINE ASSY-SHUTOFF VALVE TO FILTER ELBOW	1	A
-5	MS20822-4D		. ELBOW-FILTER	2	A
	AN833-4D		. ELBOW FILTER	2	B
	AN924-4D		. NUT	2	B
-6	0850475-8	#	. FILTER	1	
			ATTACHING PARTS		
-7	AN3-16A		. BOLT	2	
-8	NAS43DD3-16		. SPACER	2	
			---*---		
-9	5300108-39		. LINE ASSY-FILTER TO SOLENOID VALVE	1	
-10	MS20822-4D		. ELBOW	1	
-11	9910088-4		. VALVE-SOLENOID	1	
			ATTACHING PARTS		
-12	AN3-4A		. BOLT	2	
-13	0851566-2		. CLAMP	1	
-14	0851566-1		. BRACKET	1	
			---*---		
-15	5615004-3		. BRACKET ASSY	1	
			ATTACHING PARTS		
-16	MS20033-1		. BOLT	4	
-17	AN960D10L		. WASHER	4	
			---*---		
-18	MS20822-3D		. ELBOW	1	
-19	5300108-36		. LINE ASSY-SOLENOID TO WING ROOT	1	A
	5300108-48		. LINE ASSY-SOLENOID TO WING ROOT	1	B
-20	AN837-4D		. ELBOW	1	
-21	250-215-4		. LOCK-O-SEAL PKSC	1	
-22	AN924-4D		. NUT	1	
-23	5300108-37		. LINE ASSY-WING ROOT TO STA 100.00 BHD	1	
-24	MS21919DG3		. CLAMP	3	
			ATTACHING PARTS		
-25	S138-1		. BRACKET	1	
-26	MS27039-0805		. SCREW	1	
-27	MS21042L08		. NUT	1	
			---*---		
-28	250-215-3		. LOCK-O-SEAL PKSC	1	
-29	AN924-4D		. NUT	1	
-30	AN832-4D		. UNION	1	
-31	5300108-1		. LINE ASSY-100.00 BHD TO FUEL PUMP NIPPLE	1	
-32	AN816-3D		. NIPPLE	2	
-33	9910088-3		. PUMP-HEATER FUEL	1	

SEE CESSNA CRAFTED HEATER SERVICE/PARTS MANUAL FOR BREAKDOWN

A---340-0001 THRU 340-0300
B---340-0301 & ON

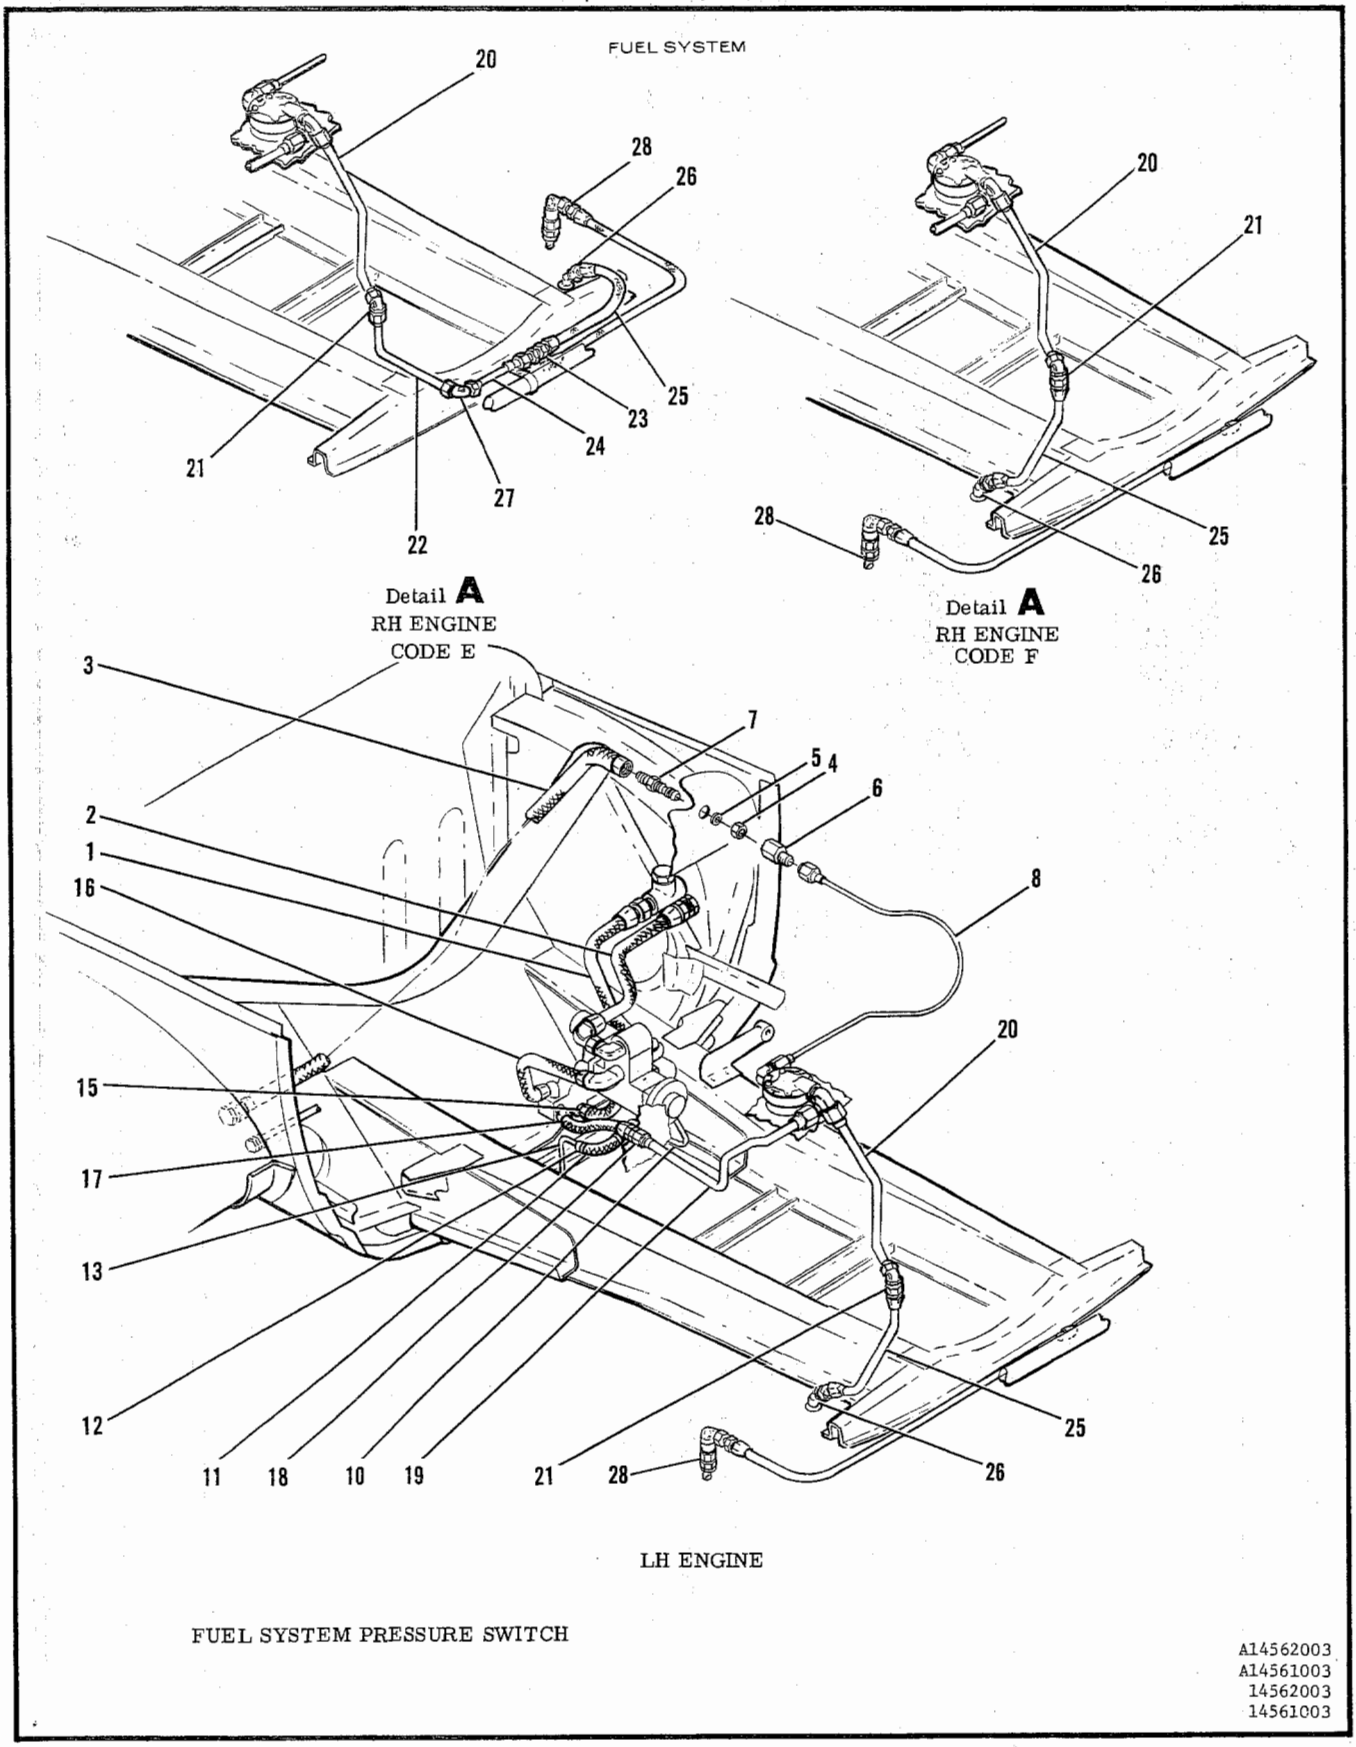

Figure 117. Engine Compartment Fuel System Components

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
117 -		ENGINE COMPARTMENT FUEL SYSTEM COMPONENTS	NP	
-1	AE2847H0214045	. HOSE ASSY-FUEL SUPPLY LH	AQ 1	
	AE1003957H0240	. HOSE ASSY-FUEL SUPPLY RH	AQ 1	C
	AE1005816H0224	. HOSE ASSY-FUEL SUPPLY RH	AQ 1	D
	AE1003957H0244	. HOSE ASSY-FUEL SUPPLY RH USE WITH AIRCONDITIONING	AQ 1	A
	AE1003957H0280	. HOSE ASSY-FUEL SUPPLY RH USE WITH AIRCONDITIONING	AQ 1	B
	124D003-8CR-0280	. HOSE ASSY-FUEL SUPPLY RH USE WITH AIRCONDITIONING	SAIF 1	B
		ALT FOR AE1003957H0280		
	AE2847H0235-315	. HOSE ASSY-FUEL SUPPLY RH USE WITH AIRCONDITIONING	AQ 1	D
-2	AE1003882G0250	. HOSE ASSY-VAPOR RETURN LH	AQ 1	
	AE1005816G0226	. HOSE ASSY-VAPOR RETURN RH	AQ 1	C
	AE1003785G0226	. HOSE ASSY-VAPOR RETURN RH	AQ 1	D
	AE2763G0304-090	. HOSE ASSY-VAPOR RETURN RH USED WITH AIRCONDITIONING	AQ 1	
-3	S1129-3-370	. HOSE ASSY-FUEL PRESSURE LH	1	C
	S1129-3-0444	. HOSE ASSY-FUEL PRESSURE LH	1	D
	S1129-3-320	. HOSE ASSY-FUEL PRESSURE RH	1	C
	S1129-3-0300	. HOSE ASSY-FUEL PRESSURE RH	1	D
	MS21919H12	. CLAMP-LH	2	
	MS35207-263	. SCREW	1	
	MS21044N3	. NUT	1	
-4	AN924-3	. NUT	1	
-5	AN960-616	. WASHER	1	
-6	AN894-3-2	. UNION	1	
	AN833-4	. ELBOW	1	C
-7	5250105-1	. RESTRICTOR ASSY	1	
-8	5600106-16	. LINE ASSY RESTRICTOR TO NOZZLE MANIFOLD	1	
-9		. DELETED NOT USED		
-10	0826018-265	. LINE ASSY FUEL PUMP TO DRAIN LH & RH	1	C
	5600106-3	. LINE ASSY FUEL PUMP TO DRAIN LH	1	D
	5600106-2	. LINE ASSY FUEL PUMP TO DRAIN RH	1	D
-11	S51-4	. HOSE BKI FUEL PUMP TO DRAIN	AR	
		ATTACHING PARTS		
-12	NAS397-10	. CLAMP	2	
		---*---		
-13	5600106-5	. LINE ASSY-LH HOSE TO DRAIN ASSY	1	D
	5600106-4	. LINE ASSY-RH HOSE TO DRAIN ASSY	1	D
	AN840-4D	. ADAPTER-DRAIN LH & RH	2	C
-14	SEE FIG 97	. FUEL SYSTEM PRESSURE SWITCH	1	
-15	AE1007217E0110	. HOSE ASSY-FUEL PUMP TO METERING UNIT	AQ 1	
-16	AE1006526E0236	. HOSE ASSY-METERING UNIT TO FUEL PUMP LH	AQ 1	
	AE1006526E0176	. HOSE ASSY-METERING UNIT TO FUEL PUMP RH	AQ 1	
	AE1003785E0332	. HOSE ASSY-METERING UNIT TO FUEL PUMP RH	AQ 1	
		USED WITH AIRCONDITIONING		
-17	AE1006526E0213	. HOSE ASSY-METERING UNIT TO NOZZLE MANIFOLD LH	AQ 1	
	AE1006526E0210	. HOSE ASSY-METERING UNIT TO NOZZLE MANIFOLD RH	AQ 1	
-18	AN832-4	. UNION	1	
	AN960-716	. WASHER	1	
	AN924-4	. NUT	1	
-19	5600106-43	. LINE ASSY-AFT BAFFLE TO NOZZLE MANIFOLD	1	
-20	5600106-37	. LINE ASSY-FUEL DRAIN MANIFOLD TO FWD BAFFLE	1	
-21	AN837-4	. ELBOW LH & RH	2	
	AN960-716	. WASHER LH	1	
	AN924-4	. NUT LH	1	
-22	5600106-46	. LINE ASSY-FUEL DRAIN BAFFLE TO OVERBOARD DRAIN	1	E
-23	AN815-4	. UNION RH	1	E
-24	5600106-38	. LINE ASSY	1	E
-25	S1129-4-0130	. HOSE ASSY-LH	1	
	S1129-4-130	. HOSE ASSY-RH	1	F
-26	MS20823-4D	. ELBOW-LH	1	
	MS20823-4D	. ELBOW-RH	1	F
-27	AN821-4D	. ELBOW RH	1	E
-28	SEE FIG 97	. MANIFOLD DRAIN	REF	

A---340-0001 TO 340A0001 EXCEPT
WHEN MODIFIED BY SK414-6
B---340-0001 THRU 340-0300 WHEN MODIFIED BY SK414-6
C---340-0001 TO 340A0001
D---340A0001 & ON
E---340-0001 THRU 340A0018
F---340A0019 & ON

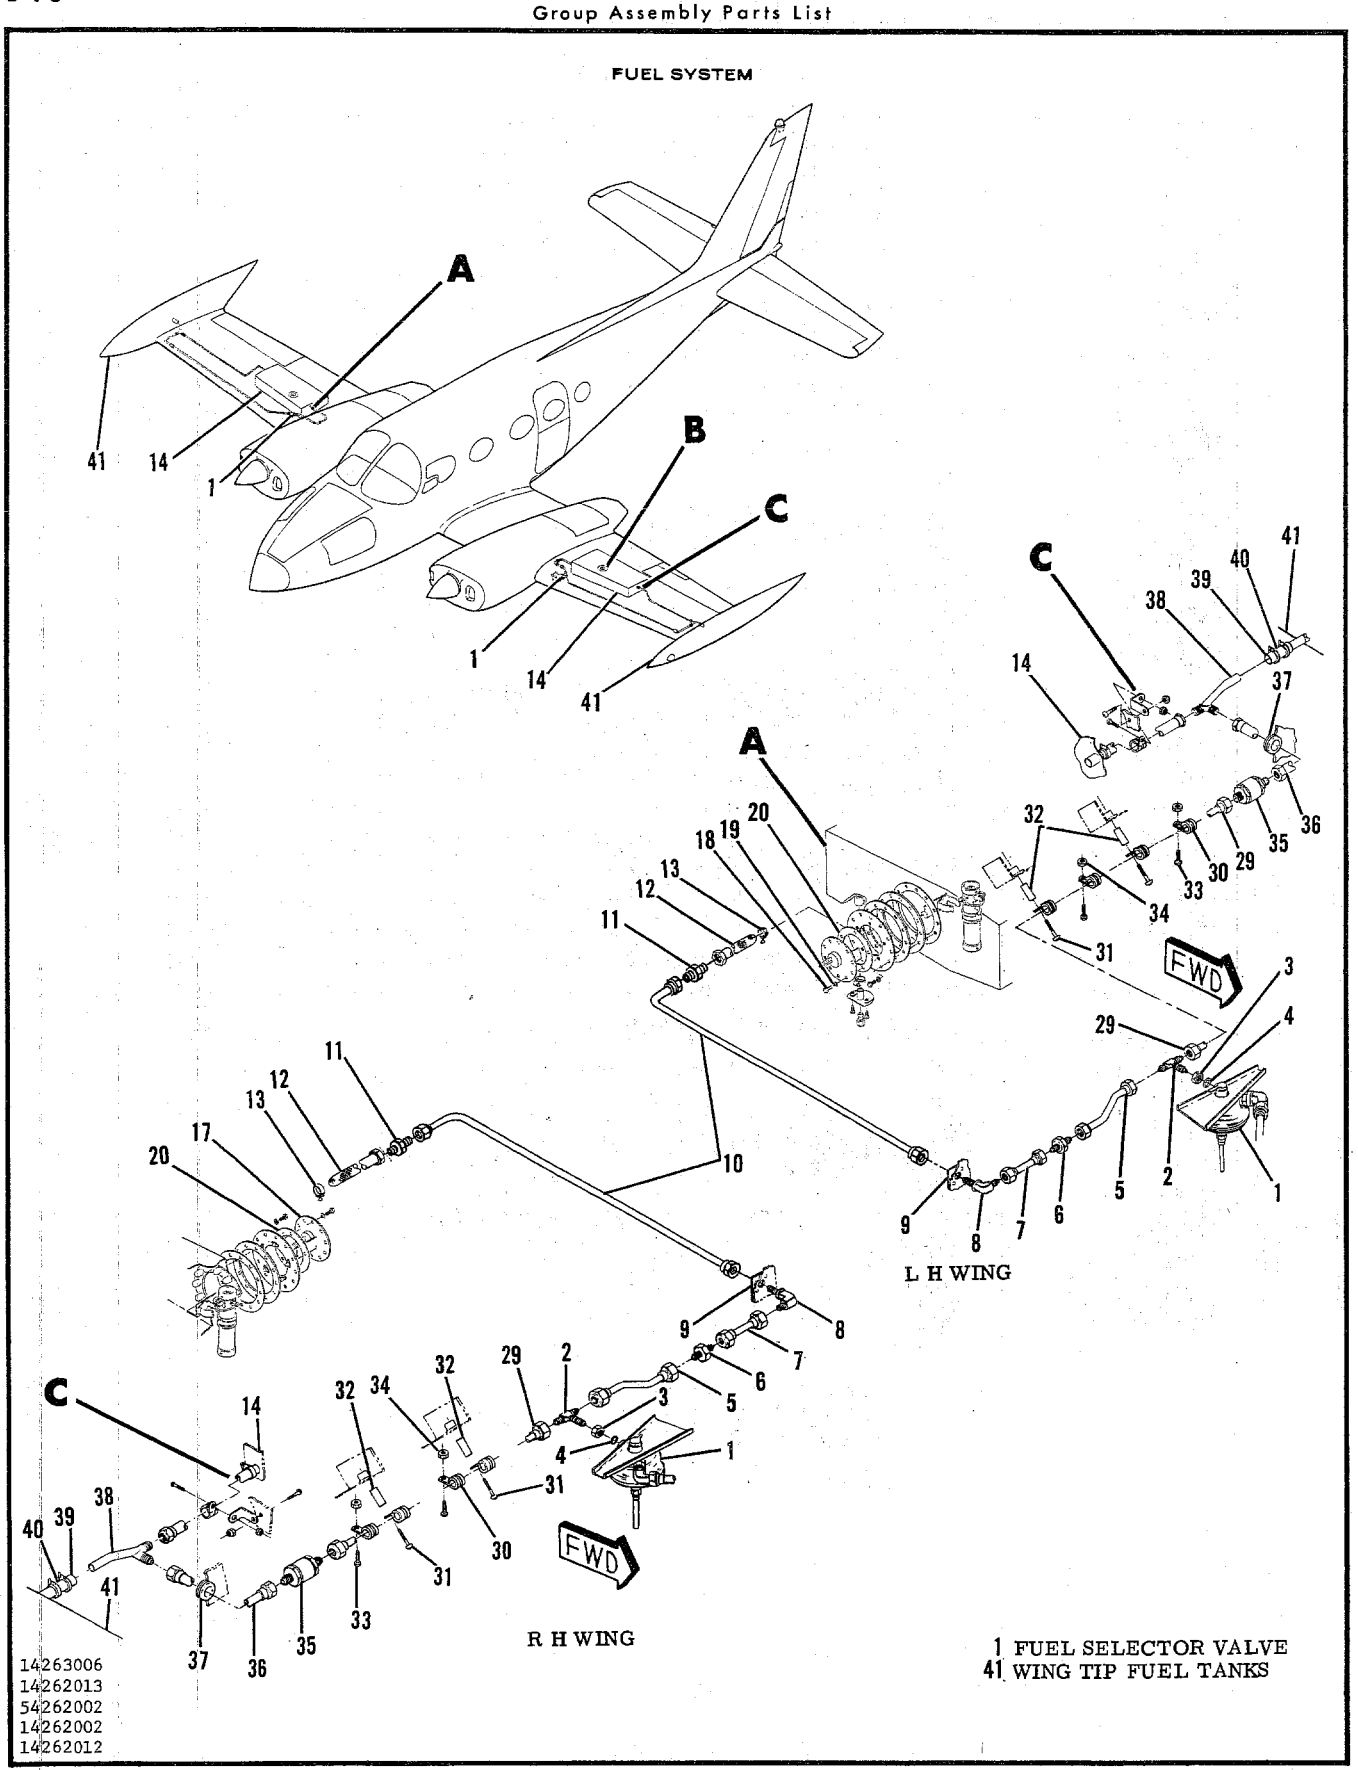

Figure 118. Auxiliary Fuel System Components (Sheet 1 of 2)

FUEL SYSTEM

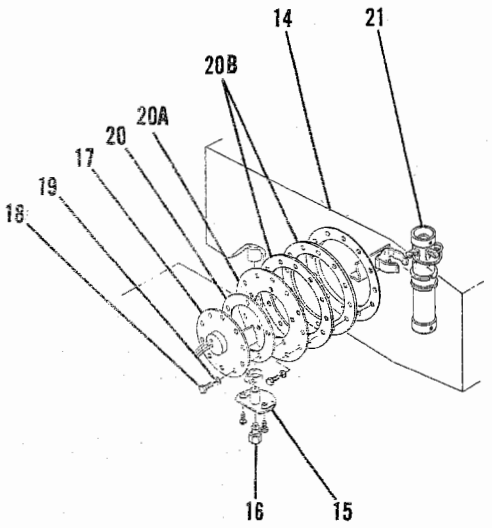

Detail **A**

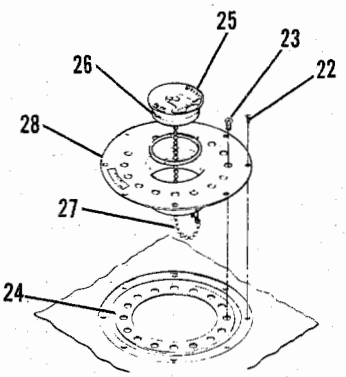

Detail **B**

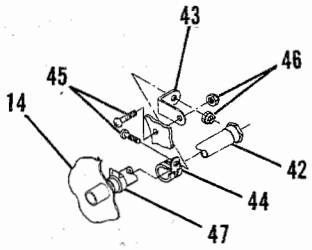

Detail **C**

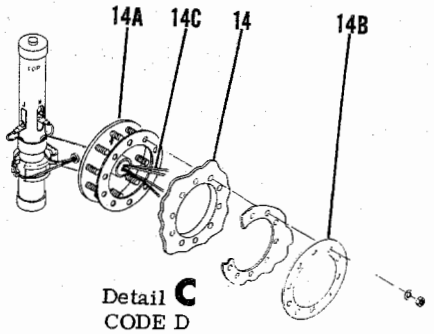

Detail **C**
CODE D

A14262013
B14262011
C10261015
C54262005

Figure 118. Auxiliary Fuel System Components (Sheet 2)

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
118 -		AUXILIARY FUEL SYSTEM COMPONENTS 40 GALLON CAPACITY	NP	G
-1	SEE FIG 122	. FUEL SELECTOR VALVE	REF	
-2	AN834-10D	. TEE-BULKHEAD	2	
-3	AN924-10D	. NUT	2	
-4	MS29512-10	. GASKET	2	
-5	5600106-23	. LINE ASSY-FUEL LH	1	
	5600106-24	. LINE ASSY-FUEL RH	1	
-6	AN919-15D	. REDUCER	2	
-7	5600106-39	. LINE ASSY-FUEL LH	1	
	5600106-40	. LINE ASSY-FUEL RH	1	
-8	AN833-8D	. ELBOW-BULKHEAD	2	
	AN924-8D	. NUT	2	
-9	5226000-8	. SPACER	2	
-10	5200106-79	. LINE ASSY LH & RH	2	E
	5300108-51	. LINE ASSY LH & RH	2	F
-11	AN815-8D	. NIPPLE LH & RH	2	
-12	5026005-1	. STRAINER ASSY	2	E
	5026005-5	. STRAINER ASSY	2	F
-13	AN737TW30	. CLAMP	2	
-14	0823362-1	. FUEL CELL ASSY-LH	1	C
	FCE51693	. FUEL CELL ASSY-LH ALT FOR 0823362-1	USR	
	0823362-5	. FUEL CELL-LH	1	D
	0823362-2	. FUEL CELL ASSY-RH	1	C
	FCE51694	. FUEL CELL ASSY-RH ALT FOR 0823362-2	USR	
	0823362-6	. FUEL CELL-RH	1	D
-14A	5026009-4	. GASKET-LH & RH	1	D
-14B	0822023-15	. DOUBLER-LH & RH	1	D
-14C	9910082-18	. CABLE & FLANGE ASSY-LH & RH	1	D
	PT06CE-10-98C	. PLUG-ELECTRICAL LH & RH	1	D
		ATTACHING PARTS		
	AN960PD416L	. WASHER	10	D
	MS21044N4	. NUT	10	D
		---*---		
-15	0322526-6	. ADAPTER ASSY-FUEL CELL DRAIN	2	
		ATTACHING PARTS		
	S-1891-10	. CLAMP	1	
	MS35206-244	. SCREW	1	
	AN500A8-7	. SCREW	1	
		---*---		
-16	3D113	. VALVE-FUEL CELL DRAIN	AAPR	2
	127B	. VALVE-FUEL CELL DRAIN ALT FOR 3D113	AADC	2
-17	FMB705-1	. FLANGE & BRACKET ASSY-LH	CAIR	1 A
	9910082-7	. FLANGE & BRACKET ASSY-LH		1 B
	9910082-21	. FLANGE & BRACKET ASSY-LH		1 D
	FMB705-2	. FLANGE & BRACKET ASSY-RH	CAIR	1 A
	9910082-6	. FLANGE & BRACKET ASSY-RH		1 B
	9910082-22	. FLANGE & BRACKET ASSY-RH		1 D
		ATTACHING PARTS		
-18	AN4-3A	. BOLT		5
-19	600-001-10-OS	. STAT-O-SEAL	PKSC	5
		---*---		
-20	5026009-4	. GASKET-LH & RH		2
-20A	0322546	. ADAPTER-LH & RH		2
		ATTACHING PARTS		
	AN4-4A	. BOLT		12
		---*---		
-20B	0823355-1	. GASKET-LH & RH		4
-21	PAA700-2	. SENSOR-TANK UNIT LH & RH	CAIR	2 A
	9910082-17	. SENSOR-TANK UNIT LH & RH		2 B
	0721303-8	. CAP & ADAPTER ASSY		2
		ATTACHING PARTS		
-22	MS24693S49	. SCREW		8
-23	MS24694S95	. SCREW		16
-24	5026014-1	. GASKET		1
		---*---		
-25	0721303-7	. . CAP		1
-26	MS29513-232	. . GASKET		1
-27	0721303-3	. . CHAIN ASSY		1
-28	0721303-4	. . ADAPTER		1
-29	5600106-27	. LINE ASSY-VAPOR		2
		ATTACHING PARTS		
-30	MS21919WDG4	. CLAMP		4
-31	AN3-13A	. BOLT		2
-32	NAS42DD3-40	. SPACER		2
-33	MS27039-1-07	. SCREW		2
-34	MS21083N3	. NUT		2
		---*---		
-35	0850375-5	. VALVE-CHECK		2
-36	0800400-49	. LINE ASSY-VENT		2
-37	MS35489-75	. GROMMET		2
-38	0850703-1	. TEE ASSY-LH		1
	0850703-2	. TEE ASSY-RH		1

CONTINUED

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
118 -39	S51-6	. HOSE 8KI	AR	
		ATTACHING PARTS		
-40	AN737TW26	. CLAMP	2	
		---*---		
-41	SEE FIG 121	. WING TIP FUEL TANKS	REF	
-42	0800106-372	. LINE-VENT	2	
		ATTACHING PARTS		
-43	CM2921-1	. BRACKET	1	
-44	MS21919WDG4	. CLAMP	1	
-45	MS35206-243	. SCREW	2	
-46	MS21042L08	. NUT	2	
		---*---		
-47	AN737TW26	. CLAMP	2	
		A---340-0001 THRU 340-0150 B---340-0151 THRU 340-0331 C---340-0001 THRU 340-0331 D---340-0332 TO 340A0001 F---340-0001 THRU 340-0500 F---340-0501 TO 340A0001 G---340-0001 TO 340A0001		

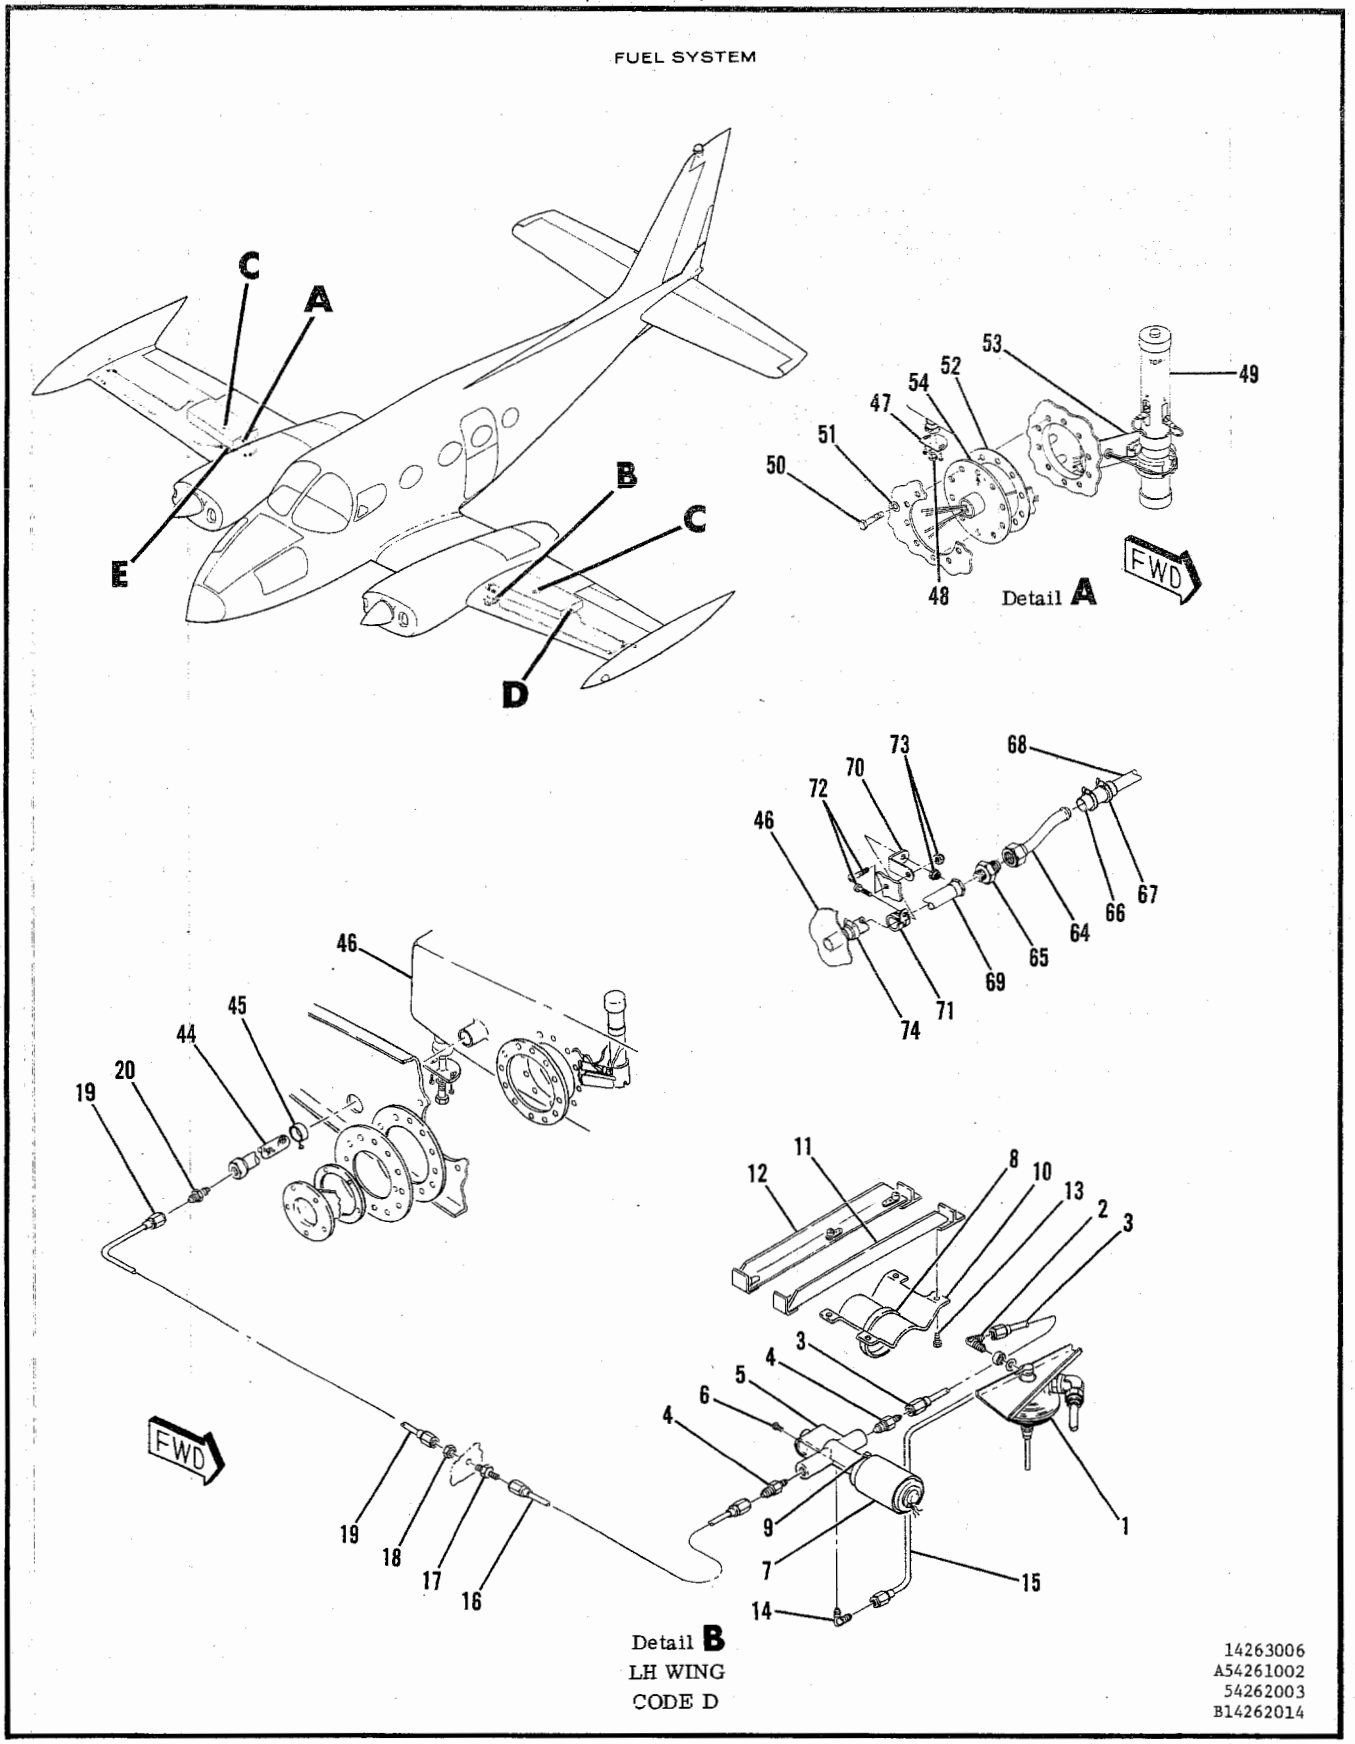

Figure 118A. Auxiliary Fuel System Components (Sheet 1 of 3)

FUEL SYSTEM

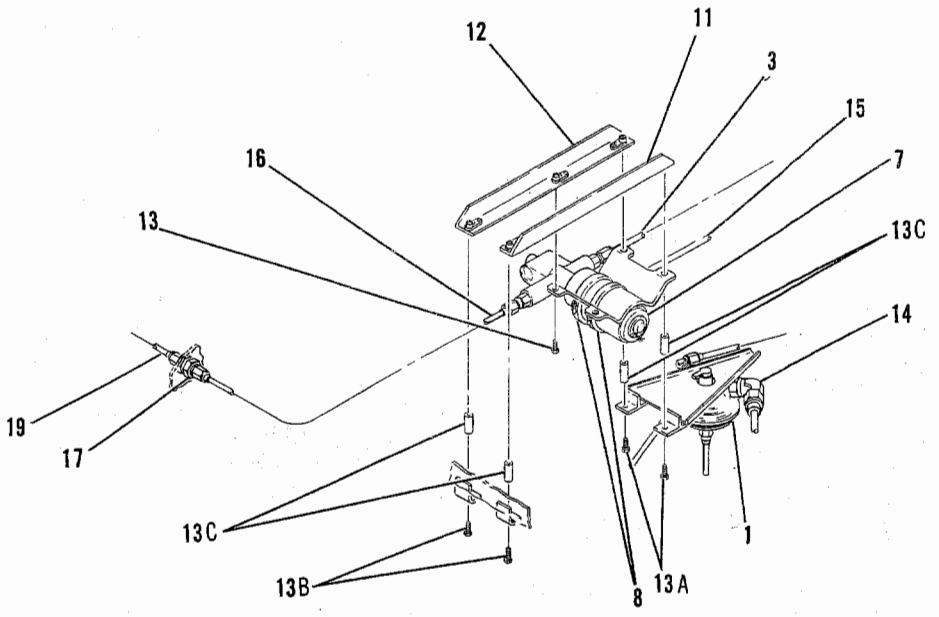

Detail **B**
CODE E

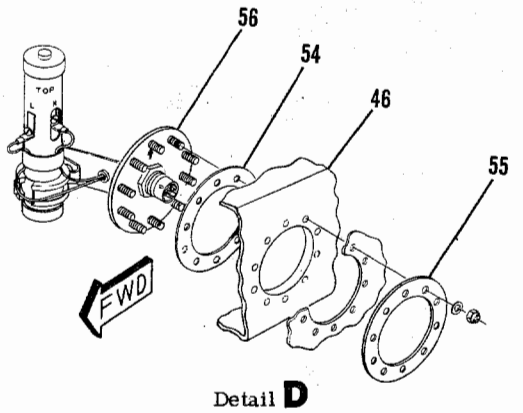

Detail **D**

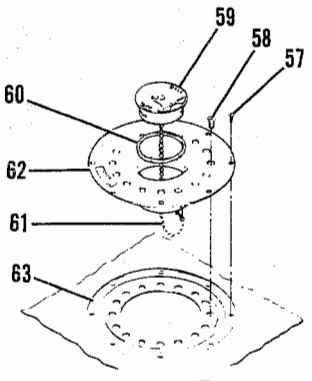

Detail **C**

B14261011
C10262010
D10261007

Figure 118A. Auxiliary Fuel System Components (Sheet 2)

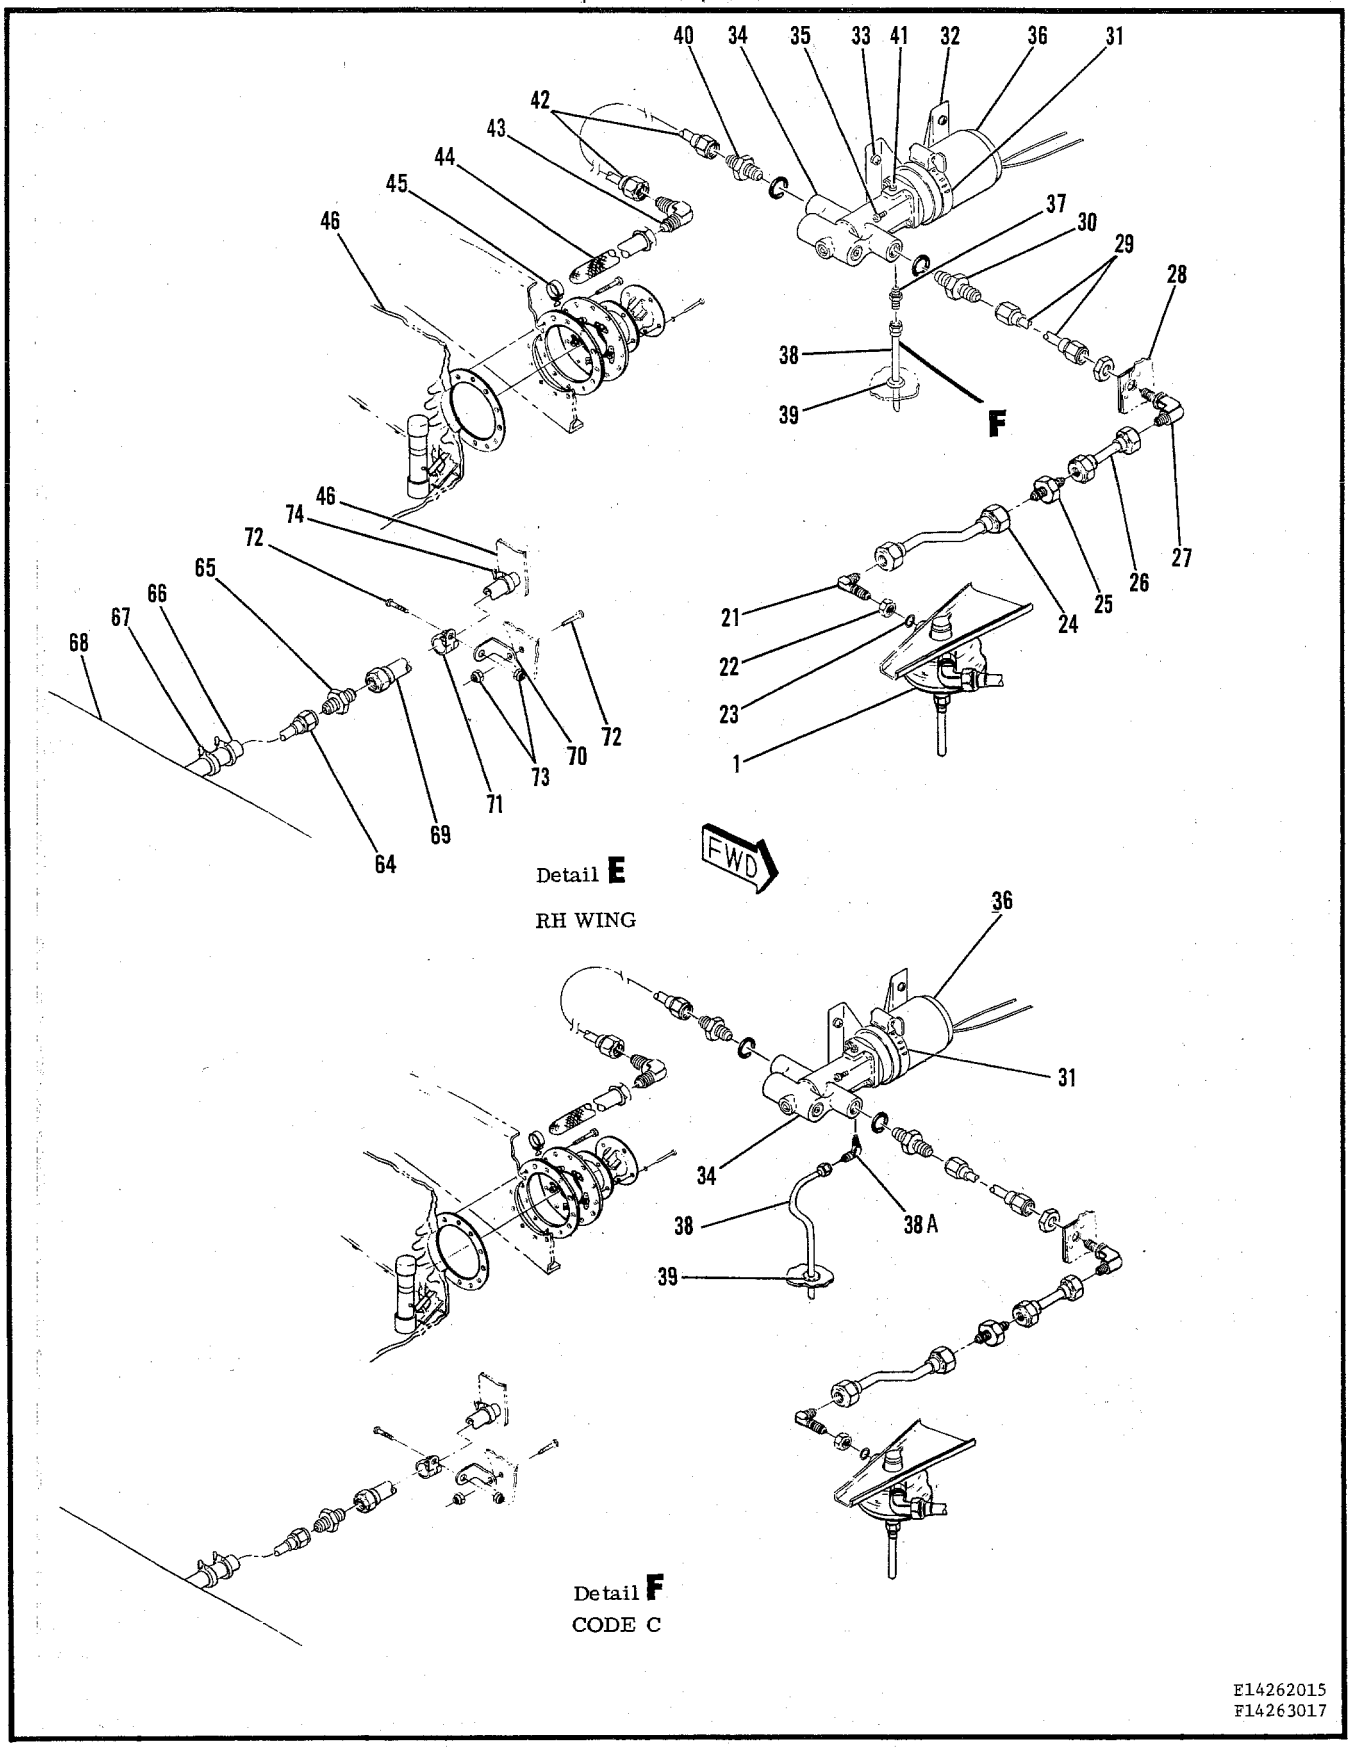

Figure 118A. Auxiliary Fuel System Components (Sheet 3)

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
118A-			AUXILIARY FUEL SYSTEM COMPONENTS 40 GALLON CAPACITY	NP	A
-1	SEE FIG 122		. FUEL SELECTOR VALVE	REF	
-2	8-10C50X-S		. ELBOW-LH PHFD	1	
-3	5600106-51		. LINE ASSY-LH ELBOW TO PUMP	1	D
	5600106-56		. LINE ASSY-LH ELBOW TO PUMP	1	E
-4	AN919-12D		. REDUCER-LH	2	
	8150B		. PUMP ASSY-AUX FUEL LH WEL	1	
-5	8150		. . PUMP WEL	1	
-6	8905		. . SCREW WEL	1	
-7	8850-4		. . MOTOR WEL	1	
-8	AN737TW91		. CLAMP	1	
-9	MS20913-1S		. PLUG	1	
	AN932-2		. PLUG ALT FOR MS20913-1S	1	
-10	5326011-1		. BRACKET-PUMP SUPPORT	1	
-11	5326011-2		. ANGLE ASSY-FWD PUMP SUPPORT	1	
-12	5326011-4		. ANGLE ASSY-AFT PUMP SUPPORT	1	
-13	AN3-3		. BOLT	6	D
	AN3-3		. BOLT	2	E
-13A	AN3-11A		. BOLT	2	E
-13B	AN3-10A		. BOLT	2	E
-13C	NAS43DD3-40		. SPACER	4	E
-14	MS20822-4D		. ELBOW-LH PUMP DRAIN	1	
-15	5600106-52		. LINE ASSY-LH PUMP DRAIN	1	D
	5600106-57		. LINE ASSY-LH PUMP DRAIN	1	E
-16	5600106-50		. LINE ASSY-LH PUMP TO UNION	1	D
	5600106-55		. LINE ASSY-LH PUMP TO UNION	1	E
-17	CM3667D8		. UNION-LH	1	
-18	AN924-8D		. NUT	1	
-19	5300108-51		. LINE ASSY-LH UNION TO UNION	1	
-20	AN815-8D		. UNION-LH	1	
-21	AN833-10D		. ELBOW-RH	1	
-22	AN924-10D		. NUT-RH	1	
-23	MS29512-10		. GASKET-RH	1	
-24	5600106-23		. LINE ASSY-RH ELBOW TO REDUCER	1	
-25	AN919-15D		. REDUCER	1	
-26	5600106-39		. LINE ASSY-RH REDUCER TO ELBOW	1	
-27	AN833-8D		. ELBOW-RH	1	
	AN924-8D		. NUT-RH	1	
-28	5226000-8		. SPACER-RH	1	
-29	5600106-36		. LINE ASSY-RH ELBOW TO REDUCER	1	
-30	AN919-12D		. REDUCER-RH	1	
	MS29512-06		. PACKING	1	
	8150B		. PUMP ASSY-AUX FUEL RH WEL	1	
-31	AN737TW91		. CLAMP	1	
-32	5126103-5		. BRACKET-RH PUMP SUPPORT	1	
			ATTACHING PARTS		
-33	MS35265-44		. SCREW	4	
			---*---		
	8150B		. PUMP ASSY-AUX FUEL RH WEL	1	
-34	8150		. . PUMP WEL	1	
-35	8905		. . SCREW WEL	1	
-36	8850-4		. . MOTOR WEL	1	
-37	AN816-4		. NIPPLE-RH PUMP DRAIN	1	
-38	5600108-50		. LINE ASSY-RH PUMP DRAIN WEU 5600108-59	1	B
	5600108-59	*	. LINE ASSY-RH PUMP DRAIN	1	C
-38A	MS20822-4D	**	. ELBOW-RH	1	C
-39	MS35489-6		. GROMMET-RH	1	
-40	AN919-12D		. REDUCER-RH	1	
	MS29512-06		. PACKING-RH	1	
-41	MS20913-1S		. PLUG-RH	1	
-42	5600106-35		. LINE ASSY-RH PUMP TO ELBOW	1	
-43	AN821-8D		. ELBOW-RH	1	
-44	5026005-1		. STRAINER ASSY LH & RH	2	
-45	AN737TW30		. CLAMP LH & RH	2	
-46	0823362-5		. FUEL CELL ASSY-LH	1	
	0823362-6		. FUEL CELL ASSY-RH	1	
-47	0322526-6		. ADAPTER ASSY-LH & RH FUEL CELL DRAIN	2	
	S1891-10		. CLAMP	1	
			ATTACHING PARTS		
	MS35206-244		. SCREW	1	
	MS35265-44		. SCREW	1	
			---*---		
-48	3D113		. VALVE-FUEL CELL DRAIN LH & RH AAPR	1	
-49	9910082-17		. TANK UNIT-FUEL QUANTITY CAPACITANCE LH & RH	2	
			ATTACHING PARTS		
-50	AN4-3A		. BOLT	8	
-51	AN960-416L		. WASHER	8	
			---*---		
-52	5026009-4		. GASKET-LH & RH	2	
-53	9910082-21		. BRACKET-LH INBD	1	
	9910082-22		. BRACKET-RH INBD	1	
-54	5026009-4		. GASKET-LH & RH	2	
-55	0822023-15		. DOUBLER-LH & RH	2	
-56	9910082-18		. CABLE & FLANGE ASSY-LH & RH OUTBD	2	
	PT06CE10-98S		. PLUG		
			ATTACHING PARTS		
	AN960PD416L		. WASHER	10	
	MS21044N4		. NUT	10	
			---*---		
	0721303-8		. CAP & ADAPTER ASSY-LH & RH	2	
			ATTACHING PARTS		

CONTINUED

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
118A-57	MS24693S49	. SCREW	8	
-58	MS24693S95	. SCREW	16	
		---*---		
-59	0721303-7	. . CAP	1	
-60	MS29513-232	. . GASKET	1	
-61	0721303-3	. . CHAIN ASSY	1	
-62	0721303-4	. . ADAPTER	1	
-63	5026014-1	. GASKET-LH & RH	1	
-64	0800400-64	. LINE ASSY-VENT LH & RH	2	
-65	AN919-6D	. REDUCER-LH & RH	2	
-66	S51-6	. HOSE 8KI	AR	
		ATTACHING PARTS		
-67	AN737TW26	. CLAMP	2	
		---*---		
-68	SEE FIG 140	. WING TIP FUEL TANKS	REF	
-69	0800106-372	. LINE-VENT LH & RH	2	
		ATTACHING PARTS		
-70	CM2921-1	. BRACKET	1	
-71	MS21919DG4	. CLAMP	1	
-72	MS35206-243	. SCREW	2	
-73	MS21042L08	. SCREW	2	
		---*---		
-74	AN737TW26	. CLAMP-LH & RH	2	

*WHEN ORDERING THIS PART ALSO ORDER
PART MARKED ** ON INITIAL FIELD INSTALLATION

A---340A0001 & ON
B---340A0001 THRU 340A0023
C---340A0024 & ON
D---340A0001 THRU 340A0015 EXCEPT AIRCRAFT
MODIFIED BY SK340-12
E---340A0016 & ON AND AIRCRAFT MODIFIED BY SK340-12

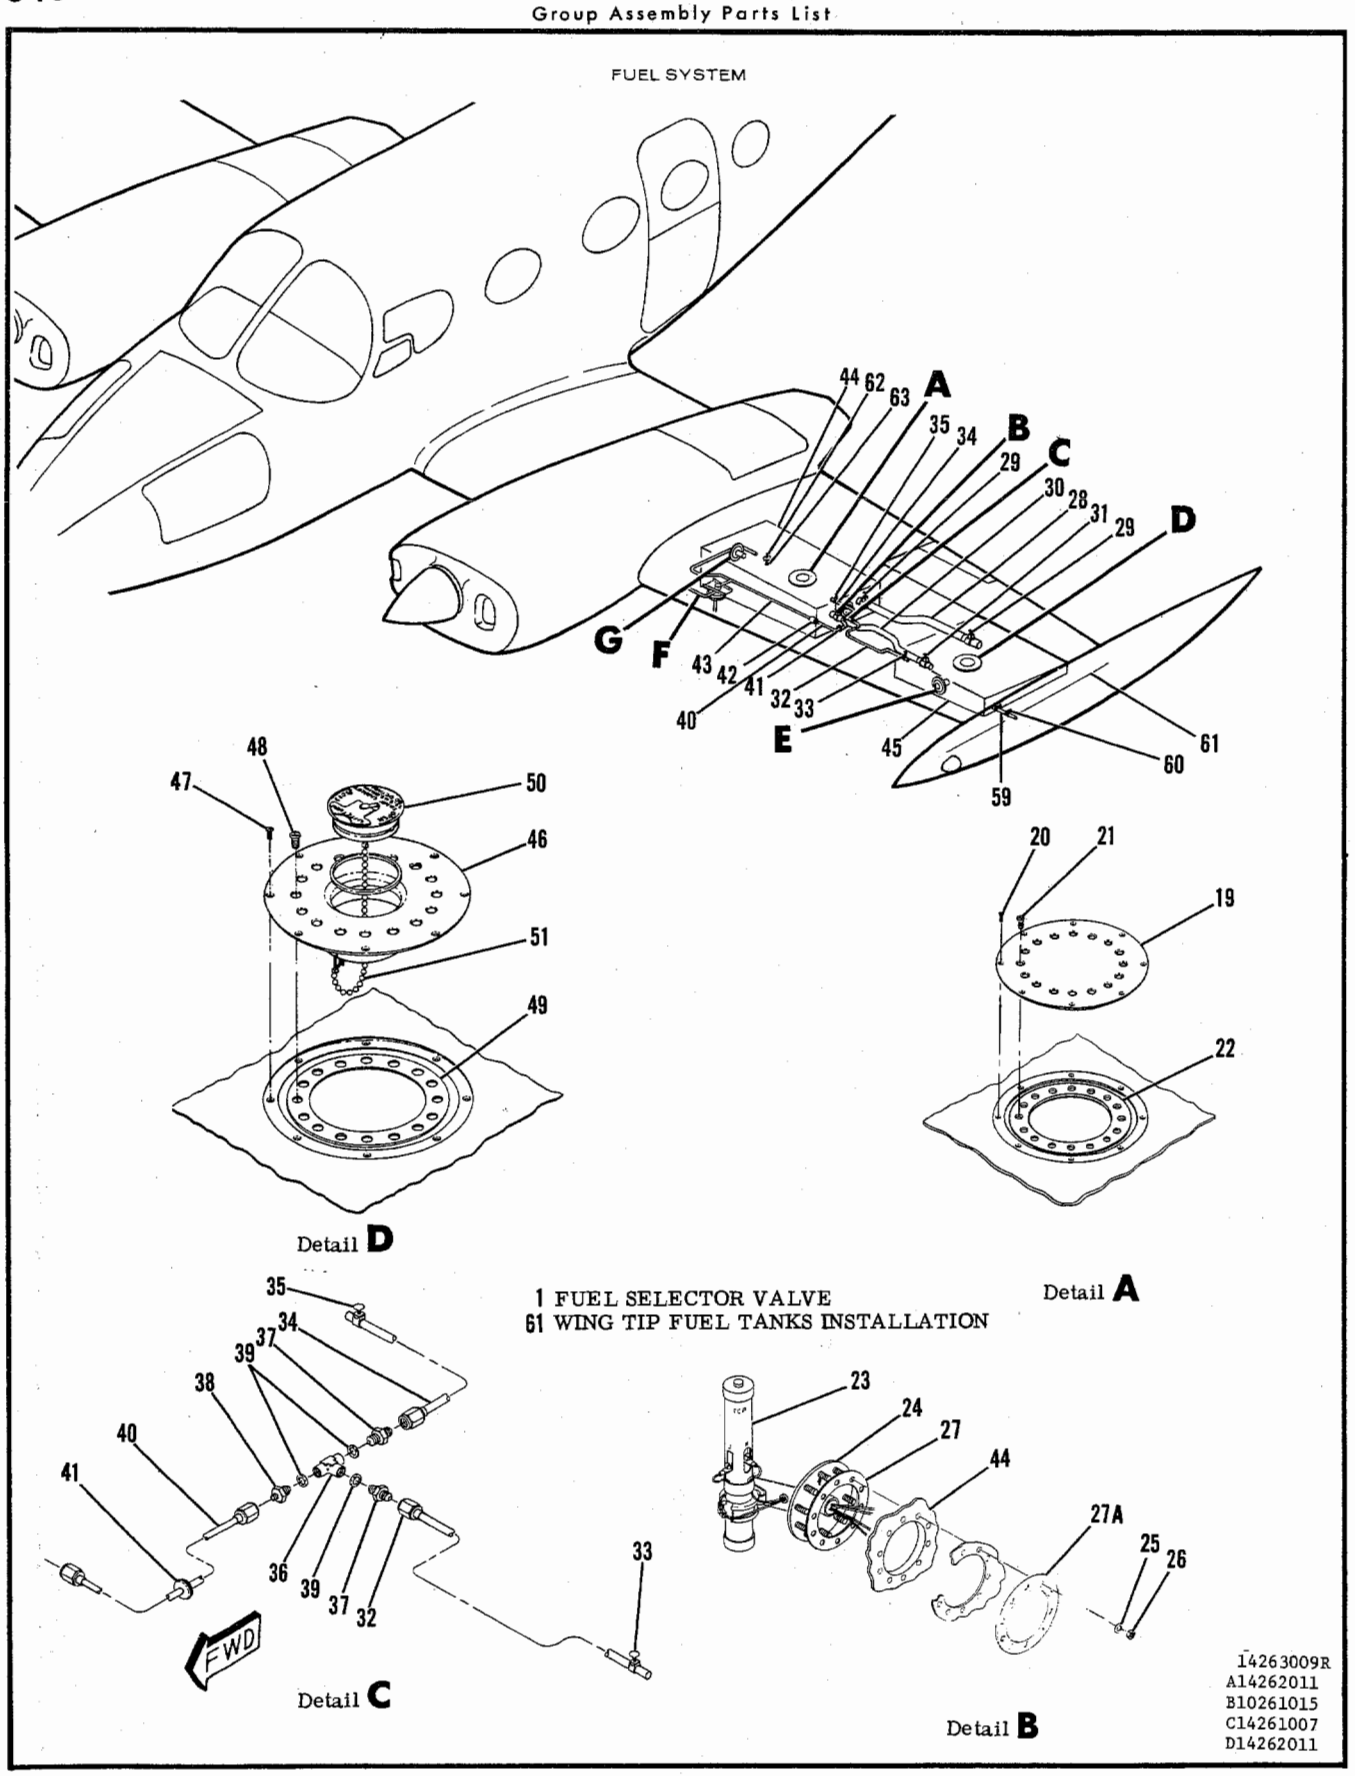

Figure 119. Auxiliary Fuel System Components (Sheet 1 of 2)

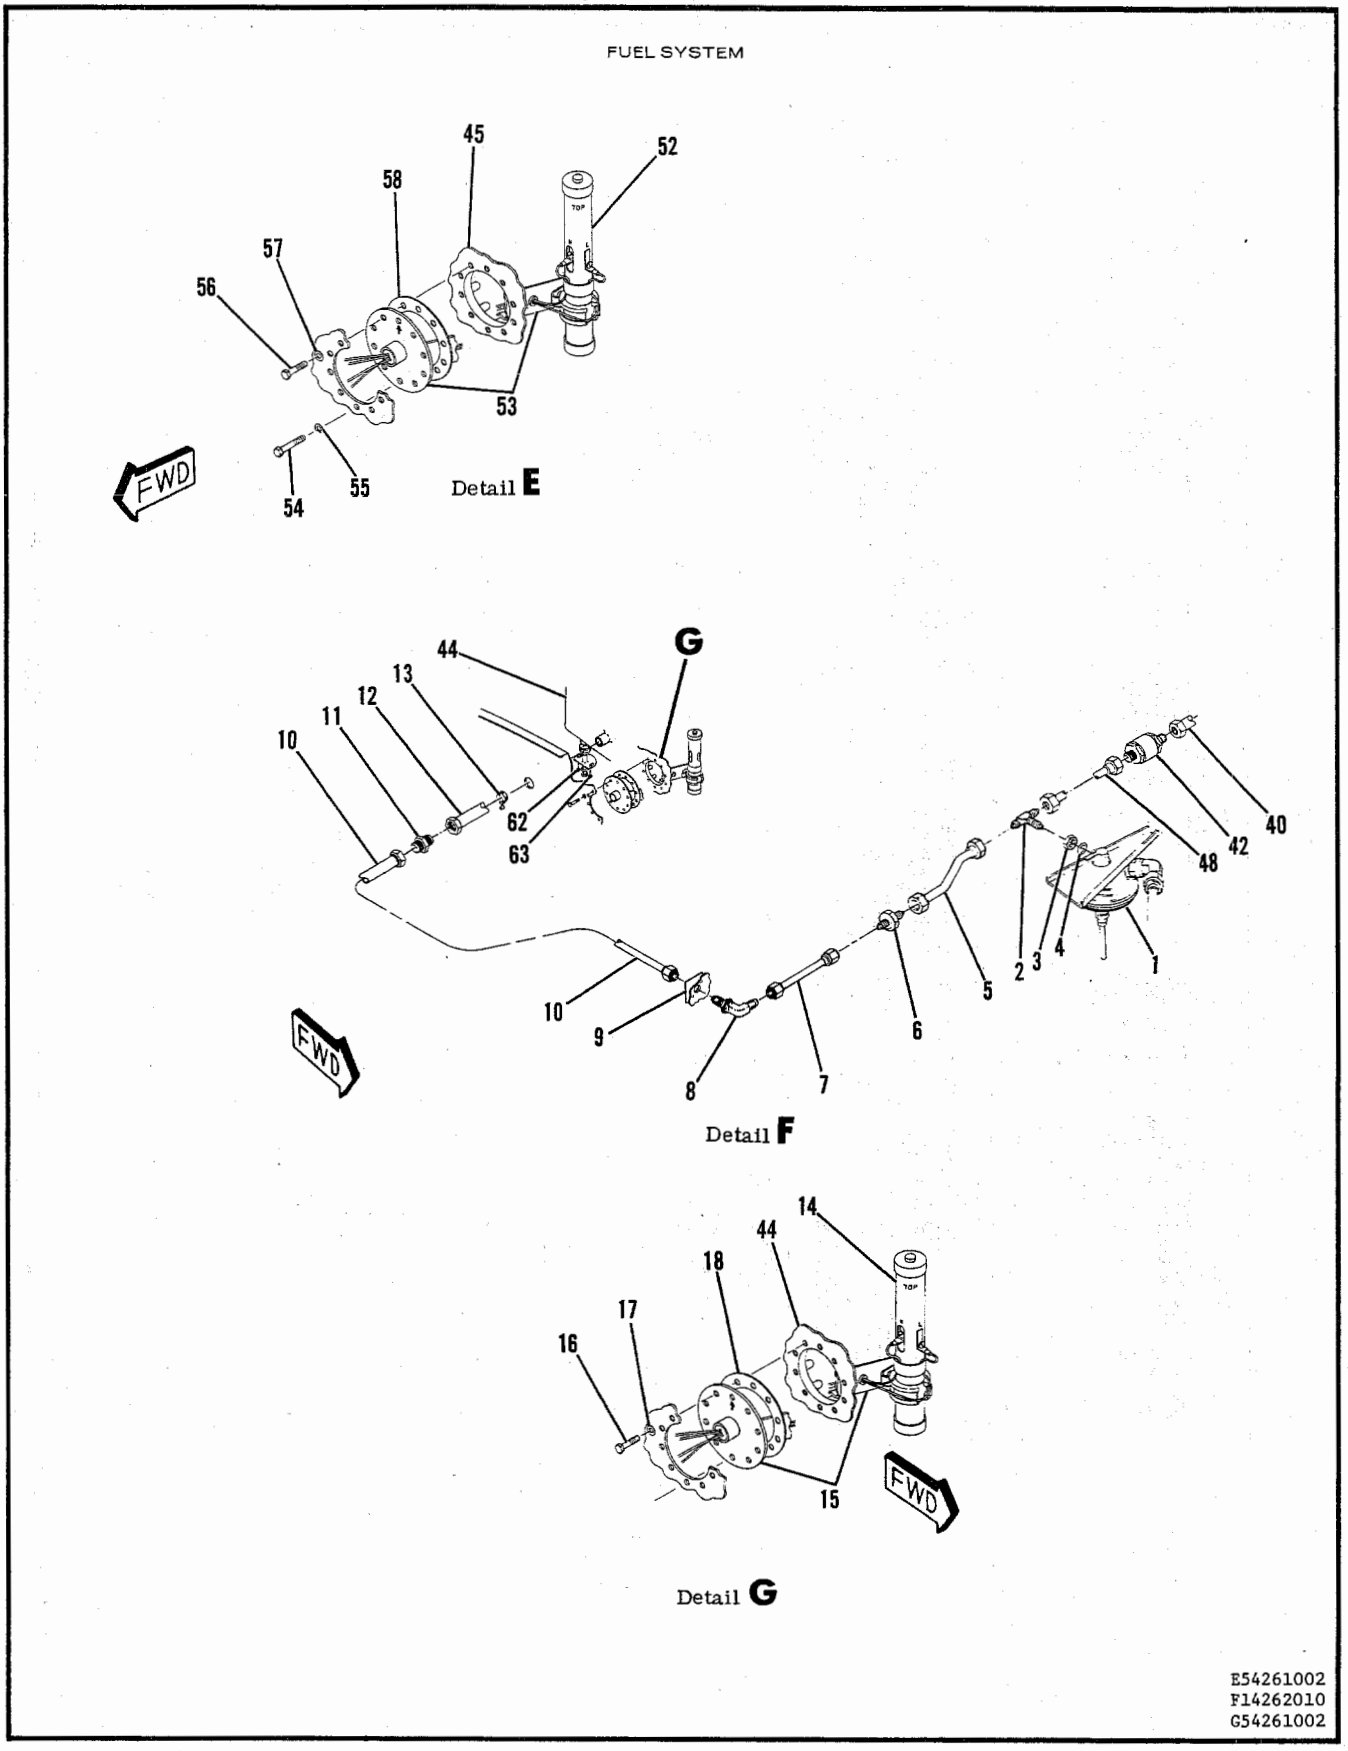

Figure 119. Auxiliary Fuel System Components (Sheet 2)

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
119 -		AUXILIARY FUEL SYSTEM COMPONENTS 63 GALLON CAPACITY	NP	A
-1	SEE FIG 122	. FUEL SELECTOR VALVE	REF	
-2	AN834-10D	. TEE	2	
-3	AN924-10D	. NUT	2	
-4	MS29512-10	. GASKET	2	
-5	5600106-23	. LINE ASSY-FUEL LH & RH	2	
-6	AN919-15D	. REDUCER	2	
-7	5600106-39	. LINE ASSY-FUEL LH & RH	2	
-8	AN833-8D	. ELBOW-BULKHEAD	2	
	AN924-8D	. NUT	2	
-9	5226000-8	. SPACER	2	
-10	5200106-79	. LINE ASSY-LH & RH	2	
-11	AN815-8D	. NIPPLE	2	
-12	5026005-5	. STRAINER ASSY	2	
-13	AN737TW30	. CLAMP	2	
-14	9910082-17	. SENSOR-TANK UNIT-LH & RH	2	
-15	9910082-7	. FLANGE & BRACKET ASSY-LH	1	C
	9910082-21	. FLANGE & BRACKET ASSY-LH	1	CDE
	9910082-6	. FLANGE & BRACKET ASSY-RH	1	C
	9910082-22	. FLANGE & BRACKET ASSY-RH	1	DF
	9910082-19	. CABLE ASSY LH & RH	1	DF
	PT06CE-10-98S	. PLUG-ELECTRICAL LH & RH	1	D
		ATTACHING PARTS		
-16	AN4-3A	. BOLT	5	
-17	AN960-416L	. WASHER	5	
		---*---		
-18	5026009-4	. GASKET	2	
-19	5026016-7	. COVER PLATE	2	
		ATTACHING PARTS		
-20	MS24693S49	. SCREW-OUTER	8	
-21	AN507-428R7	. SCREW-INNER	16	
		---*---		
-22	5026014-1	. GASKET	2	
-23	9910082-8	. SENSOR-TANK UNIT-LH & RH	2	
-24	9910082-9	. BRACKET & CABLE ASSY-LH	1	C
	9910082-23	. BRACKET-LH MID AUX	1	CDE
	9910082-10	. BRACKET & CABLE ASSY-RH	1	C
	9910082-24	. BRACKET-RH MID AUX	1	D
		ATTACHING PARTS		
-25	AN960PD416L	. WASHER	10	
-26	MS21044N4	. NUT	10	
		---*---		
-27	5026009-4	. GASKET	1	
-27A	0822023-15	. DOUBLER LH & RH	2	B
-28	5026103-22	. LINE-FUEL LH & RH WEU 5026103-24	2	E
	5026103-24	. LINE-FUEL LH & RH	2	F
		ATTACHING PARTS		
-29	AN737RM66	. CLAMP	2	
		---*---		
-30	5026103-21	. LINE-FUEL LH & RH	2	
		ATTACHING PARTS		
-31	AN737RM46	. CLAMP	2	
		---*---		
-32	0800400-201	. LINE-FUEL VENT LH	1	
	0800400-202	. LINE-FUEL VENT RH	1	
		ATTACHING PARTS		
-33	AN737RM30	. CLAMP	1	
		---*---		
-34	0800400-214	. LINE-FUEL VENT LH & RH	2	
		ATTACHING PARTS		
-35	AN737RM30	. CLAMP	1	
		---*---		
-36	AN938D8	. TEE	2	
-37	AN815-8D	. UNION	4	
-38	AN919-10D	. REDUCER	2	
-39	MS29512-08	. GASKET	6	
-40	0800400-204	. LINE-VENT LH & RH	2	
-41	MS35489-7S	. GROMMET	2	
-42	0850375-5	. VALVE-CHECK	2	
-43	0800400-217	. LINE-FUEL VENT LH	1	
	0800400-218	. LINE-FUEL VENT RH	1	
-44	0823362-3	. FUEL CELL ASSY-LH INBD	1	
	0823362-4	. FUEL CELL ASSY-RH INBD	1	
-45	5026102-3	. FUEL CELL ASSY-LH OUTBD	1	
	5026102-4	. FUEL CELL ASSY-RH OUTBD	1	
-46	5026008-2	. ADAPTER ASSY-FUEL CAP	2	
		ATTACHING PARTS		
-47	MS24693S49	. SCREW-OUTER	8	
-48	MS24693S95	. SCREW-INNER	16	
		---*---		
-49	5026014-1	. GASKET	2	
-50	0721303-7	. CAP-FUEL	2	
-51	0721303-3	. CHAIN-FUEL CAP	2	

CONTINUED

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
119 -52	9910082-14	. SENSOR-TANK UNIT LH & RH	2	
-53	9910082-16	. BRACKET & CABLE ASSY LH	1	C
	9910082-25	. BRACKET-LH OUTBD AUX	1	D
	9910082-15	. BRACKET & CABLE ASSY RH	1	C
	9910082-26	. BRACKET-RH OUTBD AUX	1	D
		ATTACHING PARTS		
-54	AN4-5A	. BOLT	2	
-55	5126208-5	. SPACER	4	
-56	AN4-3A	. BOLT	8	
-57	AN960-416L	. WASHER	8	
		---*---		
-58	5026009-4	. GASKET	2	
-59	S51-6	. HOSE BKI	AR	
		ATTACHING PARTS		
-60	AN737TW26	. CLAMP	2	
		---*---		
-61	SEE FIG 121	. WING TIP FUEL TANKS	REF	
-62	0322526-6	. ADAPTER ASSY-FUEL CELL DRAIN	2	
		ATTACHING PARTS		
	S1891-10	. CLAMP	1	
	MS35206-244	. SCREW	1	
	AN500A8-7	. SCREW	1	
		---*---		
-63	3D113	. VALVE-FUEL CELL DRAIN AAPR	2	
	1278	. VALVE-FUEL CELL DRAIN ALT FOR 3D113 AADC	2	

A---340-0151 TO 340A0001
B---340-0304 TO 340A0001
C---340-0151 THRU 340-0331
D---340-0332 TO 340A0001
E---340-0001 THRU 340-0535
F---340-0536 TO 340A0001

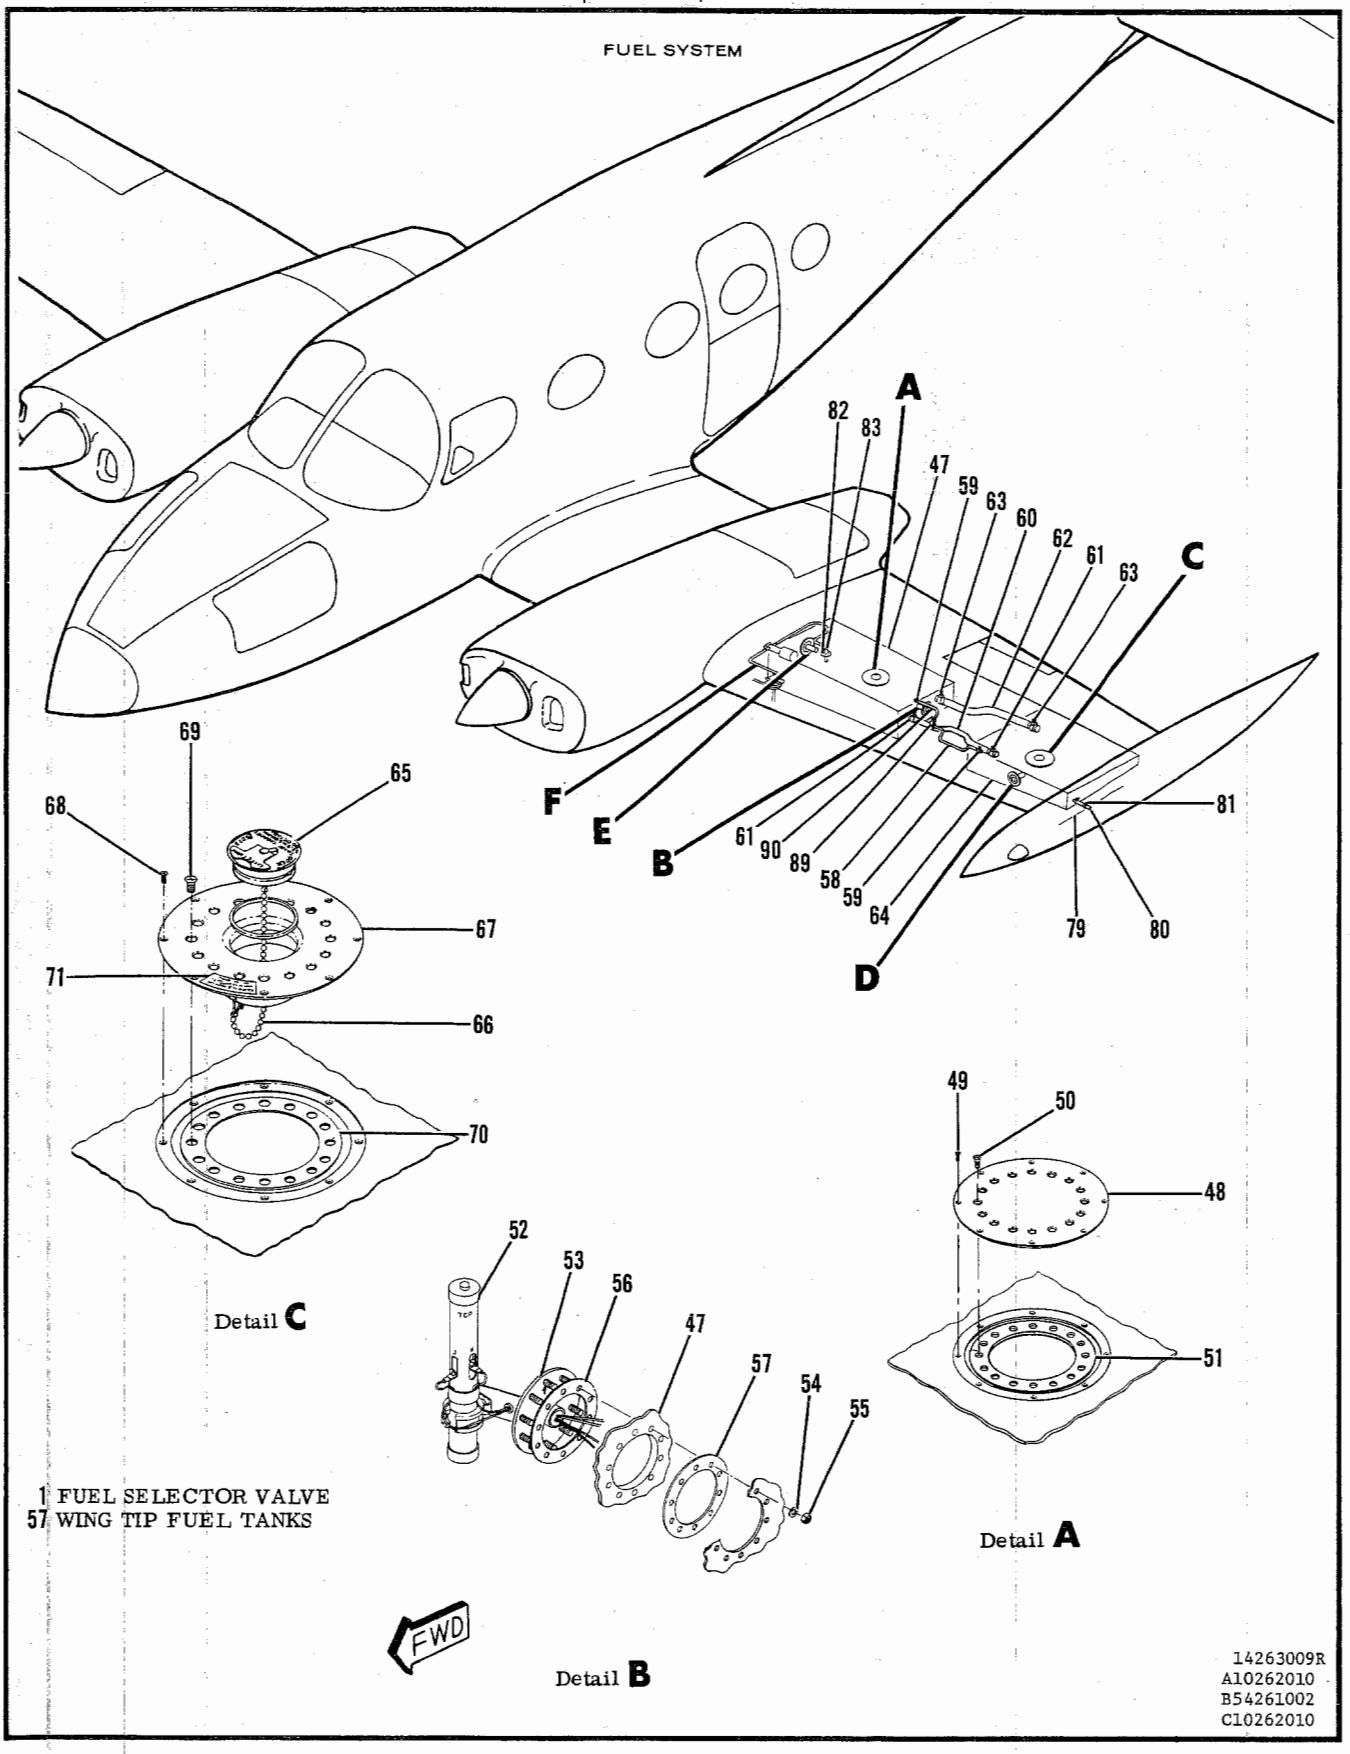

Figure 119A. Auxiliary Fuel System Components (Sheet 1 of 3)

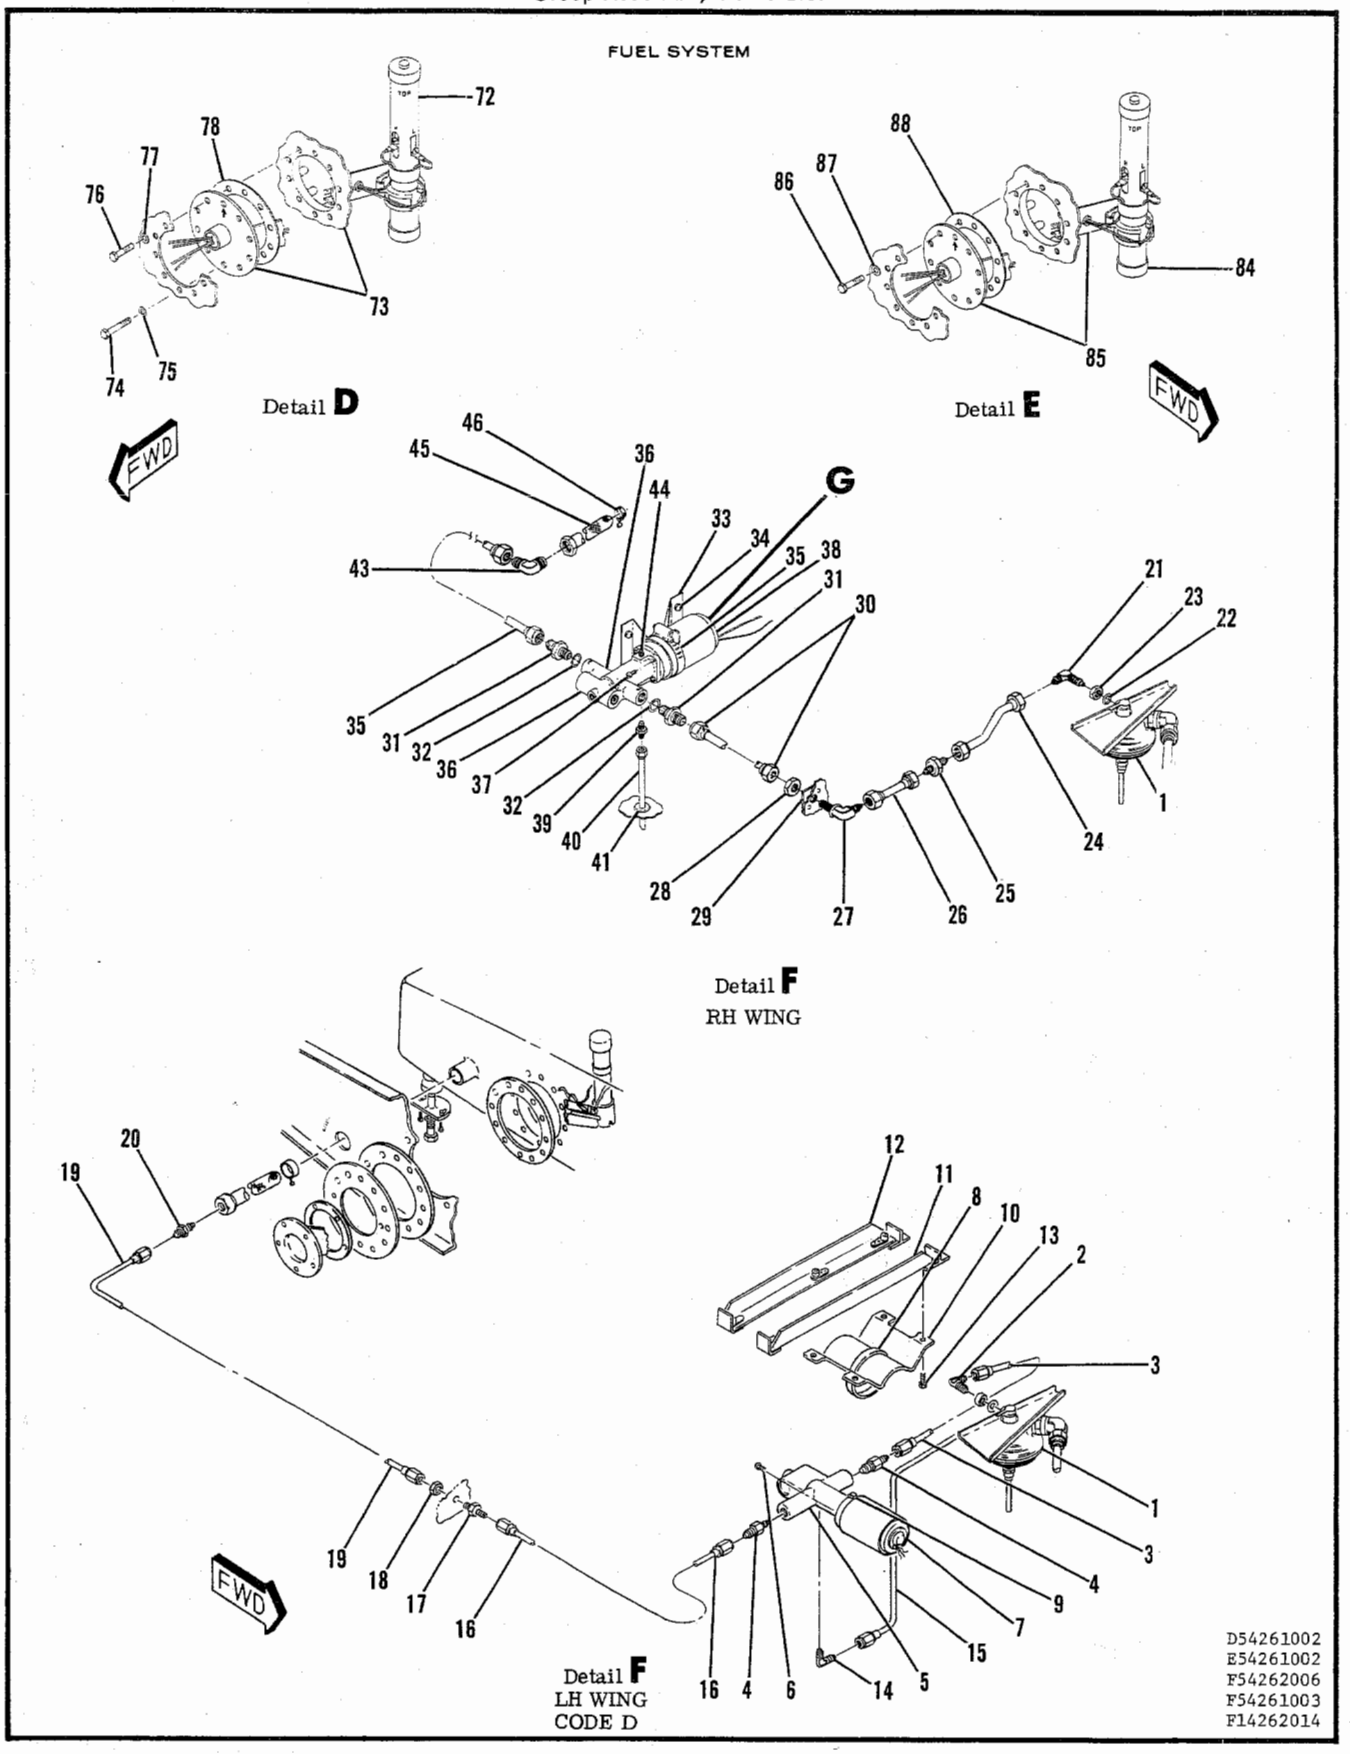

Figure 119A. Auxiliary Fuel System Components (Sheet 2)

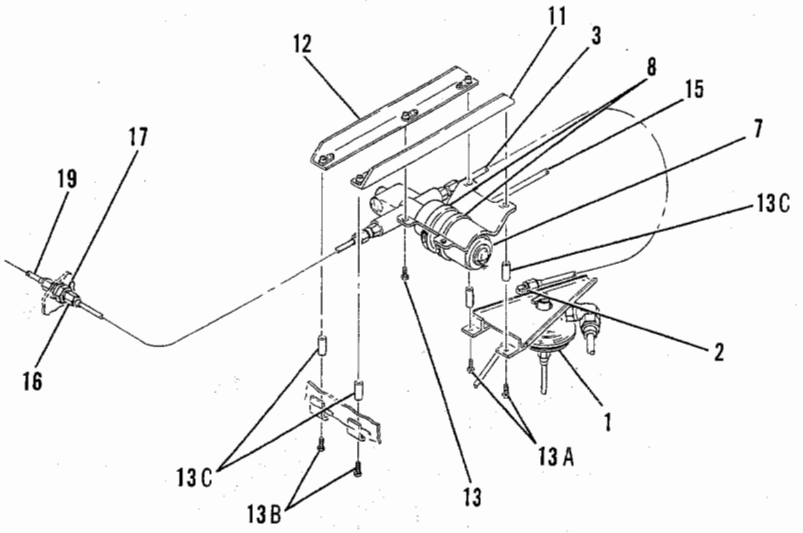

Detail **F**
CODE E

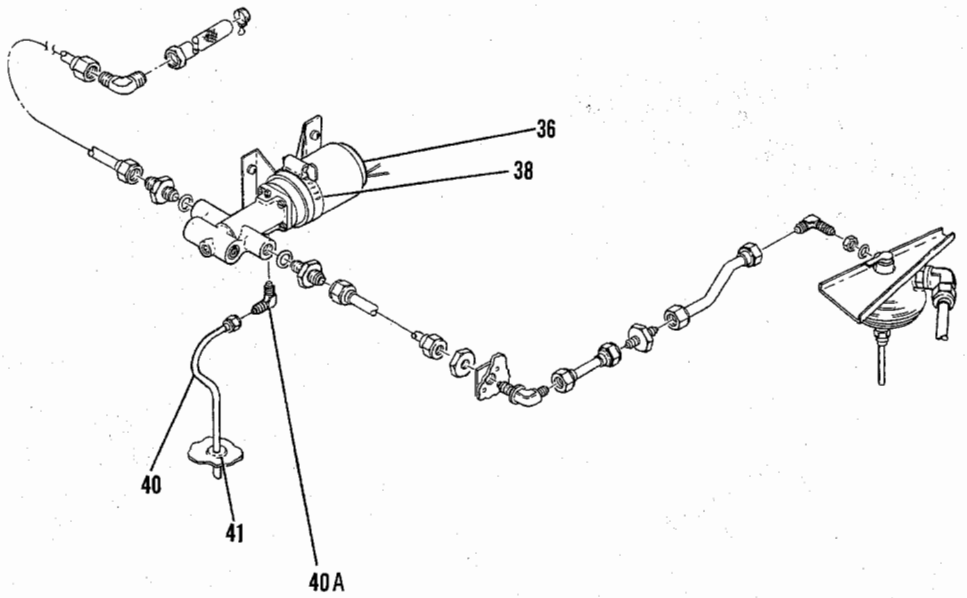

Detail **G**
CODE C

F14261011
G14261010

Figure 119A. Auxiliary Fuel System Components (Sheet 3)

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
119A-			AUXILIARY FUEL SYSTEM COMPONENTS 63 GALLON CAPACITY	NP	A
-1	SEE FIG 122		. FUEL SELECTOR VALVE	REF	
-2	B-10C50X-S		. ELBOW-LH PHFD	1	
-3	5600106-51		. LINE ASSY-LH ELBOW TO PUMP	1	D
	5600106-56		. LINE ASSY-LH ELBOW TO PUMP	1	E
-4	AN919-12D		. REDUCER-LH	2	
	8150B		. PUMP ASSY-AUX FUEL LH WEL	1	
-5	8150		. . PUMP WEL	1	
-6	8905		. . SCREW WEL	1	
-7	8850-4		. . MOTOR WEL	1	
-8	AN737TW91		. CLAMP	1	
-9	MS20913-1S		. PLUG	1	
	AN932-2		. PLUG ALT FOR MS20913-1S	1	
-10	5326011-1		. BRACKET-PUMP SUPPORT	1	
-11	5326011-2		. ANGLE ASSY-FWD PUMP SUPPORT	1	
-12	5326011-4		. ANGLE ASSY-AFT PUMP SUPPORT	1	
-13	AN3-3		. BOLT	6	D
	AN3-3		. BOLT	2	E
-13A	AN3-11A		. BOLT	2	E
-13B	AN3-10A		. BOLT	2	E
-13C	NAS43DD3-40		. SPACER	4	E
-14	MS20822-4D		. ELBOW-LH PUMP DRAIN	1	
-15	5600106-52		. LINE ASSY-LH PUMP DRAIN	1	D
	5600106-57		. LINE ASSY-LH PUMP DRAIN	1	E
-16	5600106-50		. LINE ASSY-LH PUMP TO UNION	1	D
	5600106-55		. LINE ASSY-LH PUMP TO UNION	1	E
-17	CM366TD8		. UNION-LH	1	
-18	AN924-8D		. NUT	1	
-19	5300108-51		. LINE ASSY-LH UNION TO UNION	1	
-20	AN815-8D		. UNION-LH	1	
-21	AN833-10D		. ELBOW-RH	1	
-22	MS29512-10		. GASKET-LH	1	
-23	AN924-10D		. NUT-LH	1	
-24	5600106-23		. LINE ASSY-FUEL RH	1	
-25	AN919-15D		. REDUCER-RH	1	
-26	5600106-39		. LINE ASSY-FUEL RH	1	
-27	AN833-8D		. ELBOW-BULKHEAD RH	1	
-28	AN924-8D		. NUT-RH	1	
-29	5226000-8		. SPACER-RH	1	
-30	5600106-36		. LINE ASSY-RH	1	
-31	AN919-12D		. REDUCER-RH	1	
-32	MS29512-06		. GASKET-RH	2	
	8150B		. PUMP ASSY-AUX FUEL WEL ATTACHING PARTS	1	
-33	5126103-5		. BRACKET	1	
-34	MS35265-44		. SCREW	4	
-35	AN737TW91		. CLAMP ---*---	1	
-36	8150		. . PUMP WEL	1	
-37	8905		. . SCREW WEL	4	
-38	8850-4		. . MOTOR WEL	1	
-39	AN816-4		. NIPPLE	1	
-40	5600108-50		. LINE ASSY-PUMP DRAIN RH WEU 5600108-59	1	B
	5600108-59	*	. LINE ASSY-PUMP DRAIN RH	1	C
-40A	MS20822-4D	**	. ELBOW-RH	1	C
-41	MS35489-6		. GROMMET	1	
-42	5600106-35		. LINE ASSY-RH	1	
-43	AN821-8D		. ELBOW-RH	1	
-44	MS20913-1S		. PLUG	1	
-45	5026005-1		. STRAINER ASSY-FUEL LH & RH	2	
-46	AN737TW30		. CLAMP	2	
-47	0823362-3		. FUEL CELL ASSY-LH INBD	1	
	0823362-4		. FUEL CELL ASSY-RH INBD	1	
-48	5026016-7		. PLATE ATTACHING PARTS	2	
-49	MS24693S49		. SCREW-OUTER	8	
-50	MS24694S95		. SCREW-INNER ---*---	16	
-51	5026014-1		. GASKET	2	
-52	9910082-8		. TANK UNIT-FUEL QUANTITY LH & RH CAPACITANCE	2	
-53	9910082-23		. BRACKET-LH MID AUX	1	
	9910082-24		. BRACKET-RH MID AUX ATTACHING PARTS	1	
-54	AN960PD416L		. WASHER	10	
-55	MS21044N4		. NUT ---*---	10	
-56	5026009-4		. GASKET	2	
-57	0822023-15		. DOUBLER-LH & RH	2	
-58	0800400-201		. LINE-LH FUEL VENT	1	
	0800400-202		. LINE-RH FUEL VENT ATTACHING PARTS	1	
-59	AN737RM30		. CLAMP ---*---	2	
-60	5026103-21		. LINE-FUEL VENT LH & RH ATTACHING PARTS	2	
-61	AN737RM46		. CLAMP ---*---	2	

CONTINUED

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
119A-62	5026103-24	. LINE-FUEL VENT LH & RH	2	
		ATTACHING PARTS		
-63	AN737RM66	. CLAMP	2	
		---*---		
-64	5026102-3	. FUEL CELL ASSY-LH OUTBD	1	
	5026102-4	. FUEL CELL ASSY-RH OUTBD	1	
-65	0721303-7	. CAP-FUEL	2	
-66	0721303-3	. CHAIN-FUEL CAP	2	
-67	5026008-2	. ADAPTER ASSY-FUEL CAP	2	
		ATTACHING PARTS		
-68	MS24693S49	. SCREW-OUTER	8	
-69	MS24693S95	. SCREW-INNER	16	
		---*---		
-70	5026014-1	. GASKET	2	
-71	5300181-15	. DECAL-FUEL CAP	2	
-72	9910082-14	. TANK UNIT-FUEL QUANTITY LH & RH CAPACITANCE	2	
-73	9910082-25	. BRACKET-LH OUTBD AUX	1	
	9910082-26	. BRACKET-RH OUTBD AUX	1	
		ATTACHING PARTS		
-74	AN4-5A	. BOLT	2	
-75	5126208-5	. SPACER	2	
-76	AN4-3A	. BOLT	8	
-77	AN960-416L	. WASHER	8	
		---*---		
-78	5026009-4	. GASKET	2	
-79	SEE FIG 121	. WING TIP FUEL TANKS	REF	
-80	S51-6	. HOSE BKI	AR	
		ATTACHING PARTS		
-81	AN737TW26	. CLAMP	2	
		---*---		
-82	0322526-6	. ADAPTER ASSY-FUEL CELL DRAIN	2	
		ATTACHING PARTS		
	S1891-10	. CLAMP	1	
	MS35206-244	. SCREW	1	
	MS35265-44	. SCREW	1	
		---*---		
-83	3D113	. VALVE-FUEL CELL DRAIN	AAPR	2
	127B	. VALVE-FUEL CELL DRAIN ALT FOR 3D113	AADC	2
-84	9910082-17	. TANK UNIT-FUEL QUANTITY LH & RH CAPACITANCE		2
-85	9910082-21	. BRACKET-LH INBD AUX		1
	9910082-22	. BRACKET-RH INBD AUX		
		ATTACHING PARTS		
-86	AN4-3A	. BOLT		8
-87	AN960-416	. WASHER		8
		---*---		
-88	5026009-4	. GASKET		2
-89	AN821-8D	. ELBOW LH & RH		2
	MS29512-08	. GASKET		4
-90	0800400-214	. LINE ASSY-FUEL LH & RH		2

*WHEN ORDERING THIS PART ALSO ORDER
PARTS MARKED ** ON INITIAL FIELD INSTALLATION

A---340A0001 & ON
B---340A0001 THRU 340A0023
C---340A0024 & ON
D---340A0001 THRU 340A0015 EXCEPT AIRCRAFT
MODIFIED BY SK340-12
E---340A0016 & ON AND AIRCRAFT MODIFIED BY SK340-12

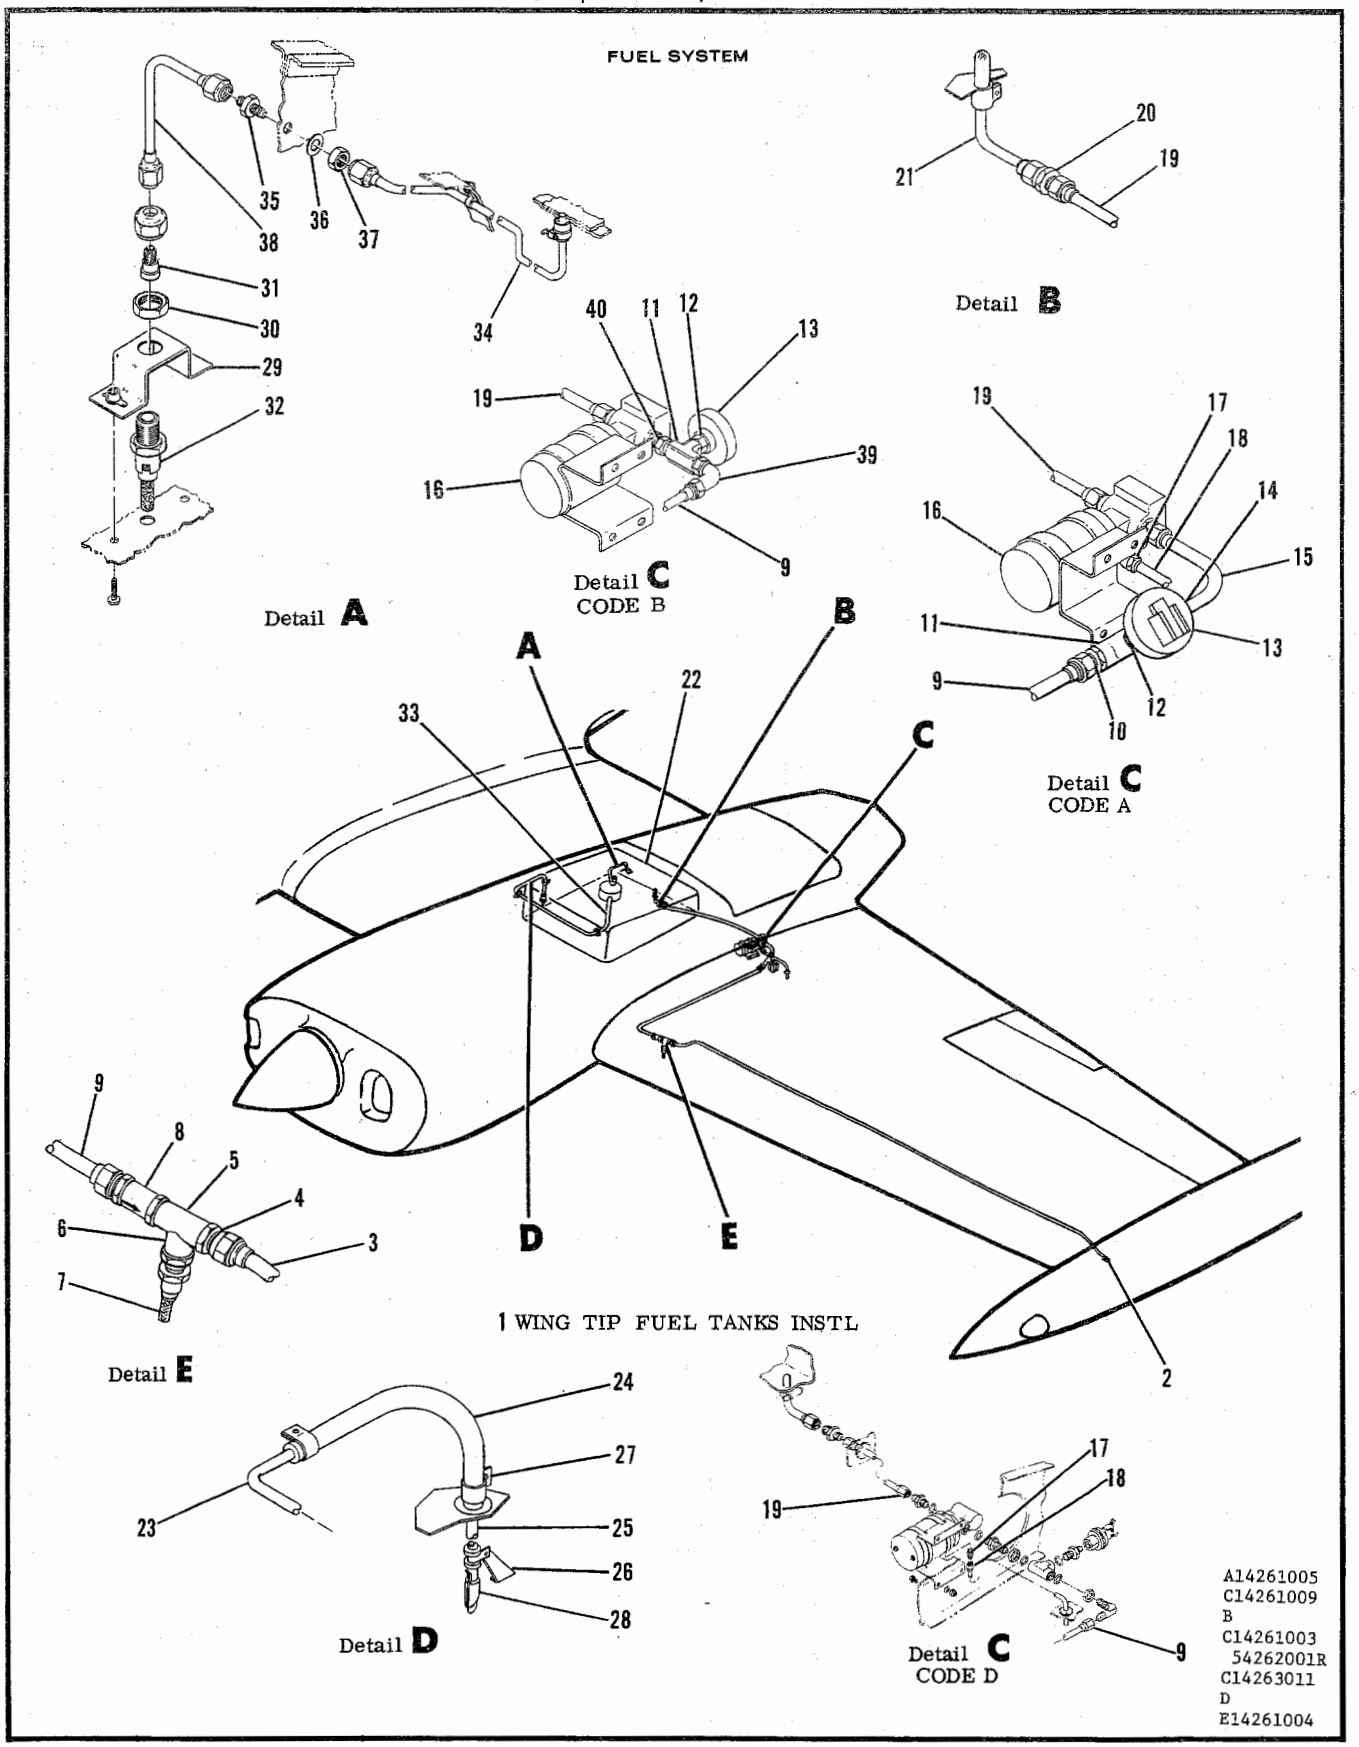

Figure 120. Wing Locker Auxiliary Fuel System

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
120 -		WING LOCKER AUXILIARY FUEL SYSTEM	NP	
-1	SEE FIG 121	. WING TIP FUEL TANKS INSTL	REF	
-2	S51-6	. HOSE BKI	AR	
		ATTACHING PARTS		
	AN737RM26	. CLAMP	2	
		---*---		
-3	5200106-71	. LINE ASSY-FUEL	2	
		ATTACHING PARTS		
	MS21919DG6	. CLAMP	3	
	MS27039-1-07	. SCREW	3	
	MS2044N3	. NUT	3	
		---*---		
-4	AN815-6D	. UNION	2	
	MS29512-06	. O-RING	2	
-5	AN938D6	. TEE	2	
	MS29512-06	. O-RING	2	
-6	AN924-6D	. NUT	2	
-7	508SH9	. VALVE-DRAIN	AADC 2	
-8	249A6TT6	. VALVE-CHECK	DOEC 2	
-9	5200106-75	. LINE ASSY-FUEL LH	1	A
	5200108-49	. LINE ASSY-FUEL LH	1	B
	5200106-76	. LINE ASSY-FUEL RH	1	A
	5200108-50	. LINE ASSY-FUEL RH		B
-10	AN815-6D	. UNION	1	A
	MS29512-06	. O-RING	1	A
-11	AN938D6	. TEE	2	
-12	AN816-6-2D	. NIPPLE	2	
	MS29512-06	. O-RING	2	
-13	9910058-1	. SWITCH-FUEL PRESSURE	2	
-14	AN815-6D	. UNION	1	A
	MS29512-06	. O-RING	1	A
-15	5200106-65	. LINE ASSY-FUEL LH	1	A
	5200106-66	. LINE ASSY-FUEL RH	1	A
	AN815-6D	. UNION	4	A
	MS29512-06	. O-RING	4	A
-16	4140-00-153	. PUMP ASSY	DUKA 2	
		ATTACHING PARTS		
	5226001-49	. BRACKET	2	
	AN3-4A	. BOLT	8	
	AN960-10	. WASHER	8	
	MS2044N3	. NUT	8	
		---*---		
-17	TF10052	. ELBOW	TUFC 2	C
	816-3-1D	. NIPPLE	MSCW 2	D
-18	5200106-87	. LINE ASSY-PUMP DRAIN LH	1	C
	5200106-207	. LINE ASSY-PUMP DRAIN LH	1	D
	5200106-86	. LINE ASSY-PUMP DRAIN RH	1	C
	5200106-208	. LINE ASSY-PUMP DRAIN RH	1	D
-19	5200106-61	. LINE ASSY-FUEL LH	1	
	5200106-62	. LINE ASSY-FUEL RH	1	
-20	AN919-12D	. REDUCER	2	
-21	5226006-1	. STRAINER ASSY	2	
		ATTACHING PARTS		
	AN737TW30	. CLAMP	2	
		---*---		
-22	9910023-3	. CELL ASSY-FUEL LH	1	
	9910023-4	. CELL ASSY-FUEL RH	1	
-23	5226007-9	. LINE ASSY-VENT	2	
-24	S1431-4	. HOSE BKI	AR	
		ATTACHING PARTS		
	AN737TW22	. CLAMP	AR	
		---*---		
-25	5200106-67	. LINE ASSY-VENT	2	
		ATTACHING PARTS		
-26	5226001-13	. BRACKET ASSY	2	
-27	MS21919WDG4	. CLAMP	2	
	MS27039-0809	. SCREW	2	
	MS21042L08	. NUT	2	
		---*---		
-28	105880	. HEATER-VENT	ELFI 2	
-29	5226004-3	. BRACKET	2	
-30	AN924-6D	. NUT	2	
-31	NAS1564-6-4	. REDUCER	2	
	AN818-6D	. NUT	2	
-32	508SH9	. VALVE-DRAIN	AADC 2	
-33	5226009-1	. LINE ASSY-VENT LH	1	
	5226009-2	. LINE ASSY-VENT RH	1	
-34	5200106-90	. LINE ASSY-DRAIN LH	1	
	5200106-91	. LINE ASSY-DRAIN RH	1	
-35	AN832-4D	. UNION	2	
-36	AN960-716	. WASHER	2	
-37	AN924-4D	. NUT	2	
-38	5200106-89	. LINE ASSY-DRAIN	2	
-39	AN833-6D	. ELBOW-LH & RH	1	B
	AN924-6D	. NUT	1	B
	MS29512-06	. O-RING		B
-40	AN832-6D	. UNION	1	B
	AN924-6D	. NUT	1	B
	MS29512-06	. O-RING	1	B

A---340-0001 THRU 340-0500
B---340-0501 & ON
C---340-0001 THRU 340-0524
D---340-0525 & ON

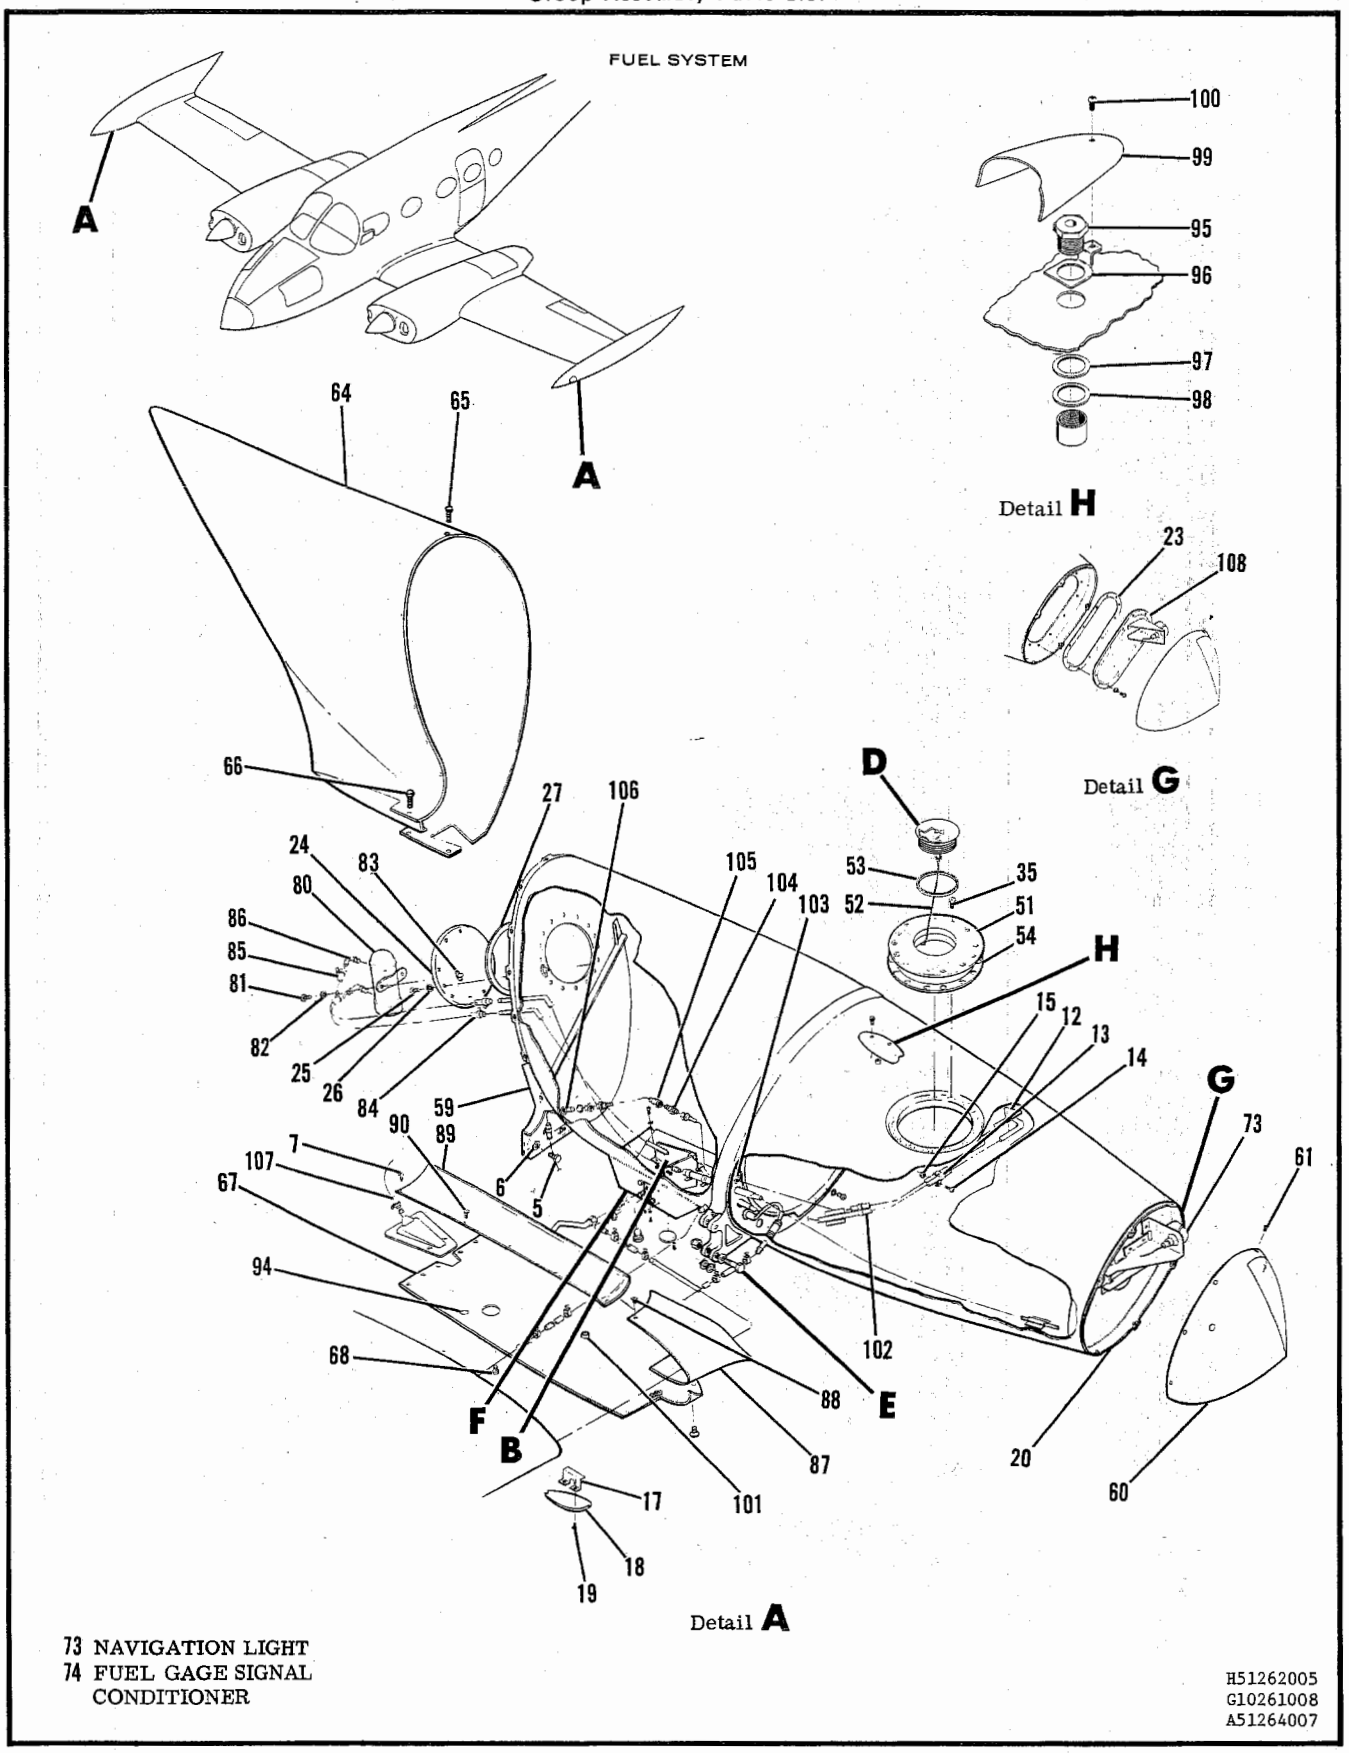

73 NAVIGATION LIGHT
74 FUEL GAGE SIGNAL CONDITIONER

H51262005
G10261008
A51264007

Figure 121. Wing Tip Tank Installation (Sheet 1 of 2)

FUEL SYSTEM

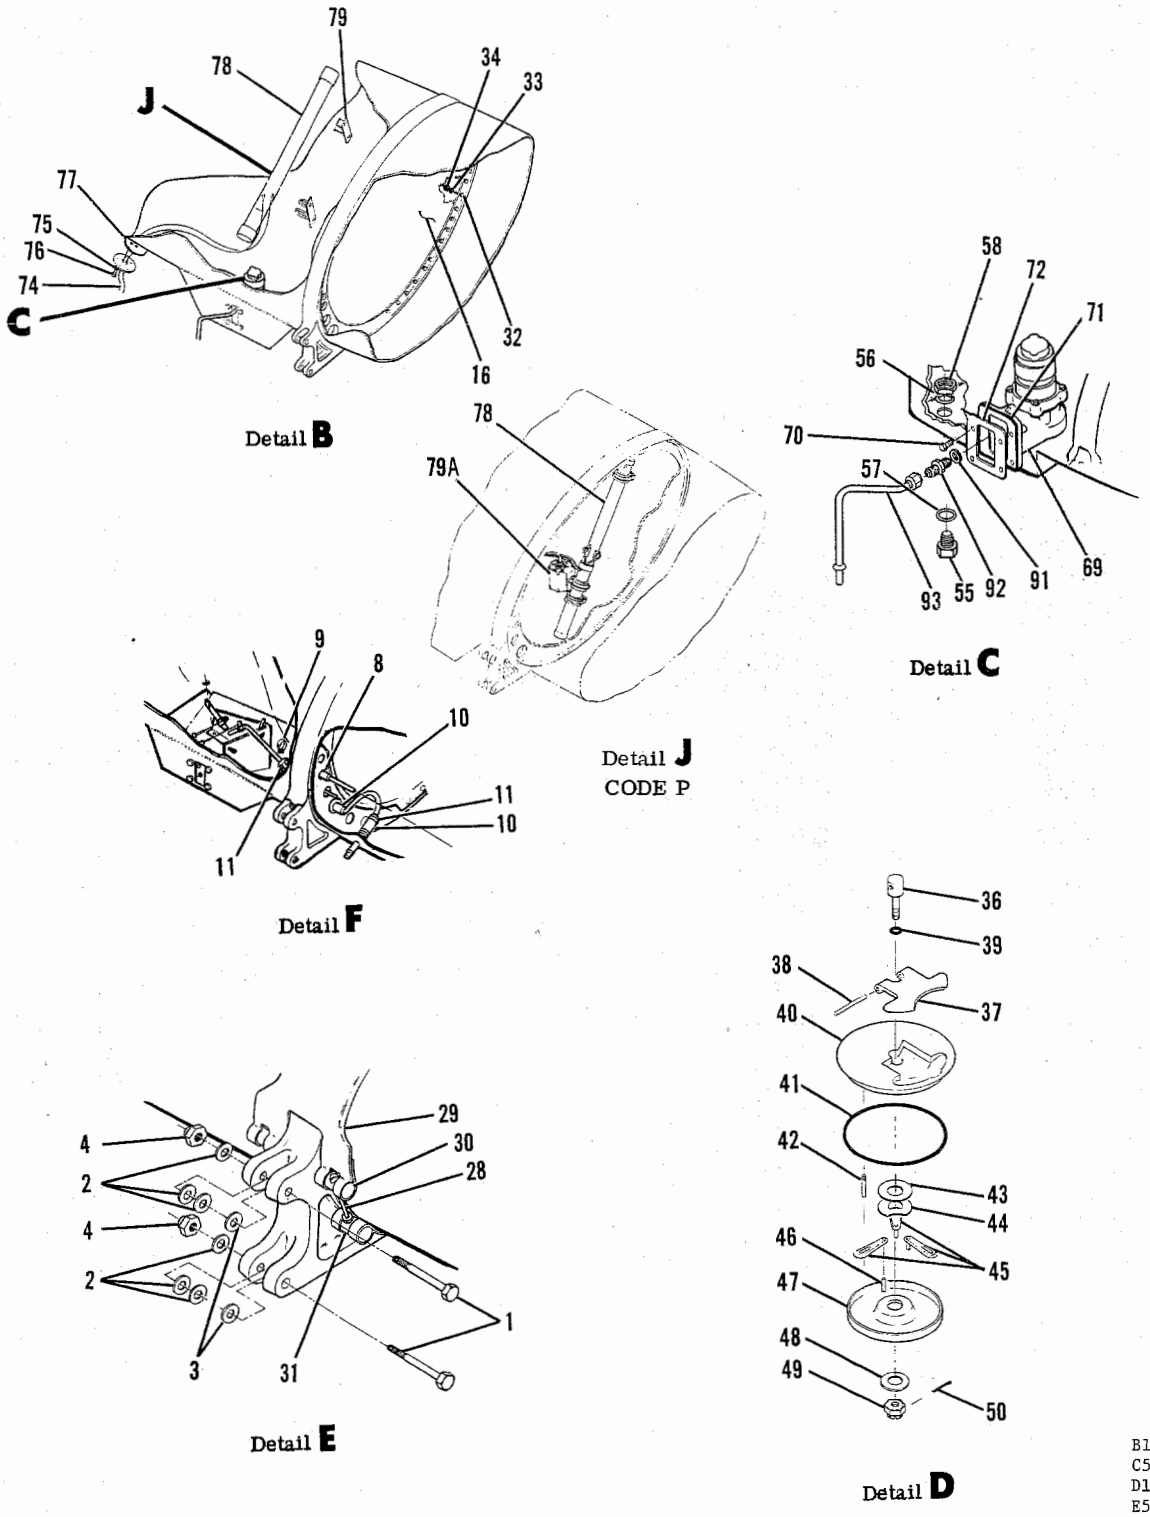

B14262007R
C52262001
D14262009
E52262001
F51264007R
J54262008

Figure 121. Wing Tip Tank Installation (Sheet 2)

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
121 -		WING TIP TANK INSTALLATION	NP	
	5092300-15	. TIP TANK ASSY-LH	1	C
	5092300-17	. TIP TANK ASSY-LH	1	D
	5092300-19	. TIP TANK ASSY-LH	1	J
	5092301-15	. TIP TANK ASSY-RH	1	C
	5092301-17	. TIP TANK ASSY-RH	1	D
	5092301-19	. TIP TANK ASSY-RH	1	J
		ATTACHING PARTS		
-1	NAS464-5A23	. BOLT	2	
-2	AN960-516	. WASHER	6	
-3	AN960-5162	. WASHER	2	
-4	MS21042L5	. NUT	2	
-5	NAS464-4A4	. BOLT	1	
-6	AN960-416L	. WASHER	1	
-7	S1021Z8-8	. SCREW	AR	
		---*---		
-8	S51-4	. . . HOSE BKI	AR	
		ATTACHING PARTS		
-9	AN737TW24	. . . CLAMP	1	
		---*---		
-10	S51-6	. . . HOSE BKI	AR	
		ATTACHING PARTS		
-11	AN737TW26	. . . CLAMP	3	
		---*---		
-12	NAS557-6A	. . . GROMMET	1	
-13	AN742-6D	. . . CLAMP	6	
-14	MS27039-1-08	. . . SCREW	3	
-15	MS21044N3	. . . NUT	3	
-16	0823400-86	. . . BAFFLE	1	
-17	0823403-2	. . SUPPORT-VENT SHIELD	1	K
-18	0823403-8	. . SHIELD-VENT	1	K
		ATTACHING PARTS		
-19	MS35206-243	. . SCREW	2	
		---*---		
	5092300-16	. . TANK ASSY-LH WELD	1	C
	5092300-18	. . TANK ASSY-LH WELD	1	D
	5092300-20	. . TANK ASSY-LH WELD	1	J
	5092301-16	. . TANK ASSY-RH WELD	1	C
	5092301-18	. . TANK ASSY-RH WELD	1	D
	5092301-20	. . TANK ASSY-RH WELD	1	J
-20	0823400-167	. . . BULKHEAD-FWD LH & RH	1	
-20A	5618106-17	. . . BRACKET-LH		
	5618106-18	. . . BRACKET-RH		
-20B	5618106-19	. . BRACKET-LH		
	5618106-20	. . . BRACKET-RH	1	
-21		. . DELETED NOT USED		
-22		. . DELETED NOT USED		
-23	0823400-46	. . GASKET-FWD PANEL	1	E
-24	0823400-71	. . PLATE-AFT ACCESS	1	
		ATTACHING PARTS		
-25	MS27039-1-09	. . SCREW	16	
-26	600-001-100S	. . STAT-O-SEAL	PKSC 16	
		---*---		
-27	0823400-62	. . GASKET-AFT ACCESS PLATE	1	
	0823400-77	. . BAND ASSY	1	
		ATTACHING PARTS		
-28	MS35207-271	. . SCREW	2	
	MS35338-43	. . WASHER	2	
	AN345-10	. . NUT	2	
		---*---		
-29	0823400-78	. . . BAND	1	
-30	0823400-79	. . . BUSHING	2	
-31	0823400-80	. . . BUSHING	2	
-32	AN3C4A	. . BOLT-BAFFLE ATTACH	20	
-33	AN960C10L	. . WASHER	20	
-34	MS21046C3	. . NUT	20	
	0823410-9	. . CAP & ADAPTER ASSY	1	
		ATTACHING PARTS		
-35	AN525-8R10	. . SCREW	16	
		---*---		
	0823410-2	. . . CAP-FUEL FILLER	1	
-36	416-54	. . . . AXLE	SADA 1	
-37	416-53	. . . . HANDLE	SADA 1	
-38	416-9-1	. . . . PIN	SADA 1	
-39	MS29513-1C	. . . . O-RING	1	
-40	416-52	. . . . BASE	SADA 1	
-41	MS29513-232	. . . . O-RING	1	
-42	415-59	. . . . PIN-DRIVE	SADA 3	
-43	416-15	. . . . WASHER	SADA 1	
-44	A1059-014-3	. . . . WASHER-SPRING	TIN 6	
-45	416-55	. . . . PAWL	SADA 3	
-46	416-60	. . . . PIN	SADA 3	
-47	416-56	. . . . DISC-ANCHOR	SADA 1	
-48	AF940-416	. . . . WASHER	1	
-49	AN310-4	. . . . NUT	1	

CONTINUED

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
121 -50	MS24665-132	. . . . PIN-COTTER	1	
-51	0823410-3	. . . ADAPTER	1	
-52	0823410-4	. . . CHAIN	1	
-53	MS29573-232	. . . GASKET-CAP	1	
-54	0823400-175	. . GASKET	1	
-55	5712-38	. . VALVE-DRAIN	8AFG	1 L
	971D	. . VALVE-DRAIN	AADC	1 M
	MS29513-010	. . . O-RING		1
	MS29513-012	. . . O-RING		1
	AN901-8A	. . GASKET		1 L
	MS29513-21	. . O-RING		1 M
-56	MS29513-20	. . O-RING-MOUNTING		1
-57	AN901-8A	. . GASKET		1
-58	0823415-1	. . NUT		1
-59	0823400-75	. . DOUBLER-LH		1
	0823400-76	. . DOUBLER-RH		1
-60	0823411-215	. . NOSE CAP ASSY-LH		1
	0823411-216	. . NOSE CAP ASSY-RH		1
		ATTACHING PARTS		
-61	AN525-832R8	. . SCREW		6
		---*---		
	0823411-13	. . . WINDOW-LH		1
	0823411-14	. . . WINDOW-RH		1
-62		. . . DELETED-NOT USED		
-63		. . . DELETED-NOT USED		
-64	5023001-201	. . FAIRING ASSY-AFT LH		1
	5023001-200	. . FAIRING ASSY-AFT RH		1
-65	AN525-832R6	. . SCREW		24
-66	AN525-832R7	. . SCREW		2
		---*---		
-67	0823413-31	. . FAIRING-LOWER LH		1 K
	0823413-37	. . FAIRING-LOWER LH		1 J
	0823413-32	. . FAIRING-LOWER RH		1 K
	0823413-38	. . FAIRING-LOWER RH		1 J
		ATTACHING PARTS		
-68	MS27039-1-07	. . SCREW		16 K
	MS27039-1-07	. . SCREW		10 J
		---*---		
-69	1C6-1	. PUMP-FUEL BOOST FSO 1C6-10	ABNE	1 G
	1C6-10	. PUMP-FUEL BOOST	ABNE	1 H
		ATTACHING PARTS		
-70	LP4-6AMX2	. BOLT	VABF	4
		---*---		
-71	0823400-24	. GASKET		1
-72	0823400-157	. DOUBLER		1
-73	SEE FIG 146	. LIGHT-NAVIGATION		1
-74	SEE FIG 145	. SIGNAL CONDITIONER-FUEL GAGE		1
-75	FMF706	. FLANGE & CABLE ASSY	CAIR	1
		ATTACHING PARTS		
-76	MS35207-263	. SCREW		5
		---*---		
-77	0322541	. GASKET		1
-78	9910082-3	. TANK UNIT-MAIN FUEL GAGING		1 N
	9910082-29	. TANK UNIT-MAIN FUEL GAGING		1 P
-79	CM2991-1	. CLIP		2
-79A	9910082-30	. SWITCH-FUEL WARNING RH		1 P
	9910082-31	. SWITCH-FUEL WARNING LH		1 P
-80	476411	. PUMP-FUEL TRANSFER	BPD	1
		ATTACHING PARTS		
-81	MS27039-4-10	. SCREW		2
-82	600-001-1/4 OS	. STAT-O-SEAL	PKSC	2 A
-83	MS21083N4	. NUT		2 A
	NAS1473A4	. NUTPLATE		2 B
		---*---		
	ECM479135	. . FILTER-TRANSFER PUMP	BPD	1
	ECM479136	. . GASKET	BPD	1
-84	S51-4	. HOSE BKI		AR
-85	S51-4	. HOSE BKI		AR
		ATTACHING PARTS		
	AN737TW24	. CLAMP		2
		---*---		
-86	MS20822-40	. ELBOW		2
-87	0823413-3	. FAIRING ASSY-FRONT LH		1
	0823413-4	. FAIRING ASSY-FRONT RH		1
		ATTACHING PARTS		
-88	S1022Z8-8	. SCREW		5
		---*---		
-89	5023000-5	. FAIRING ASSY-UPPER LH		1
	5023000-6	. FAIRING ASSY-UPPER RH		1
		ATTACHING PARTS		
-90	S1021Z8-8	. SCREW		5
		---*---		
-91	AN123862	. O-RING		1
-92	AN815-4D	. UNION		1
-93	0800106-337	. LINE ASSY-PUMP DRAIN LH		1
	0800106-346	. LINE ASSY-PUMP DRAIN RH		1

CONTINUED

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
121 -94	MS35489-6		GROMMET	1	
-95	9910021-1		VALVE-SNIFFLE	1	
-96	0823008-1		BRACKET	1	
-97	0823007-1		GASKET	1	
	0823007-2		GASKET ALT FOR 0823007-1	1	
-98	AN960-1716L		WASHER	1	
-99	0823009-1		COVER	1	
			ATTACHING PARTS		
-100	MS35206-228		SCREW	AR	
			---*---		
-101	105881		HEATER-VENT LINE ELFI	1	K
-102	5100107-55		VENT LINE ASSY-LH	1	J
	5100107-56		VENT LINE ASSY-RH	1	J
-103	NAS557-6A		GROMMET LH & RH	2	J
-104	AN815-6D		UNION LH & RH	2	J
-105	5100107-57		LINE ASSY LH & RH	2	J
-106	AN807-6D		UNION LH & RH	2	J
	MS29512-06		O-RING LH & RH	2	J
	AN6289D6		NUT LH & RH	2	J
-107	S51-6		HOSE BKI	AR	J
			ATTACHING PARTS		
	AN737TW24		CLAMP	2	J
			---*---		
-108	0823400-145	*	PANEL ASSY-FWD LH	1	
	0823400-144	*	PANEL ASSY-FWD RH	1	
	5618106-4	*	BULKHEAD ASSY-LH USED WITH STROBE LIGHT	1	
	5618106-5	*	BULKHEAD ASSY-RH USED WITH STROBE LIGHT	1	

* SPARE PARTS FOR ORGINAL TIP TANK ARE IDENTIFIED BY *

A---340-0001 THRU 340-0036
B---340-0037 & ON
C---340-0001 THRU 340-0150
D---340-0151 THRU 340-0506
E---340-0001 THRU 340-0302
F---340-0303 & ON
G---340-0001 THRU 340-0331
H---340-0332 & ON
J---340-0507 & ON
K---340-0001 THRU 340-0506
L---340-0001 THRU 340-0518
M---340-0519 & ON
N---340-0001 TO 340A0001
P---340A0001 & ON

FUEL SYSTEM

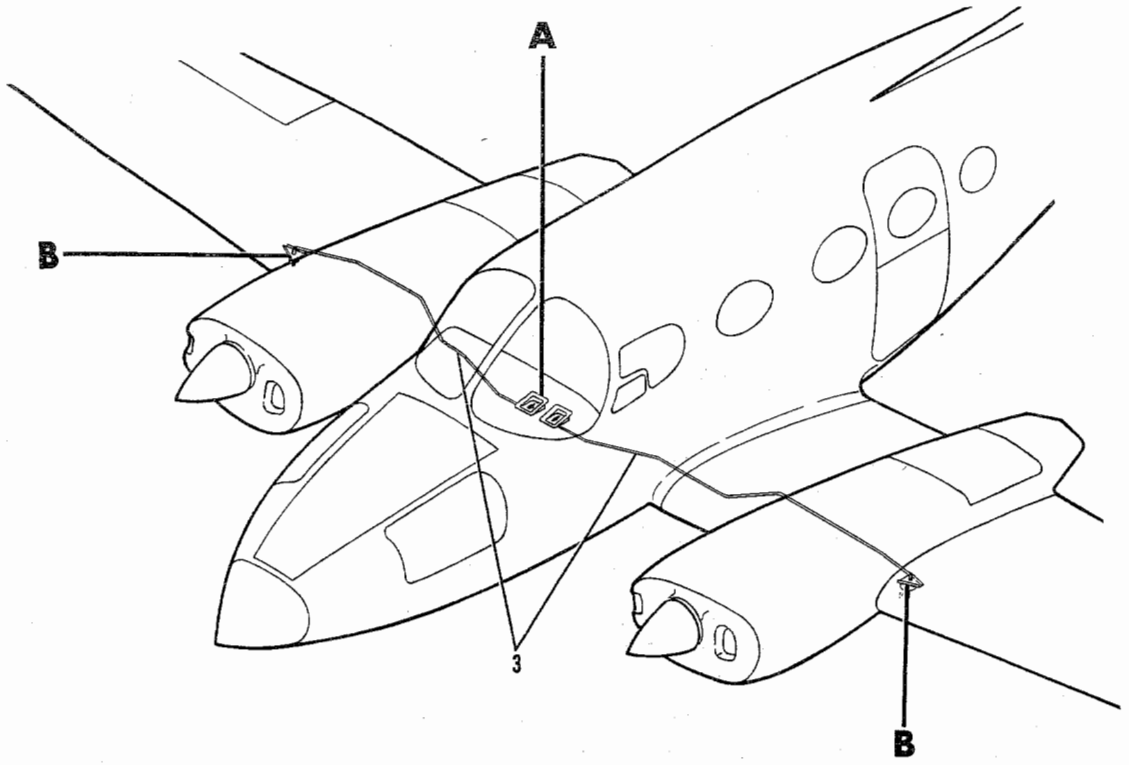

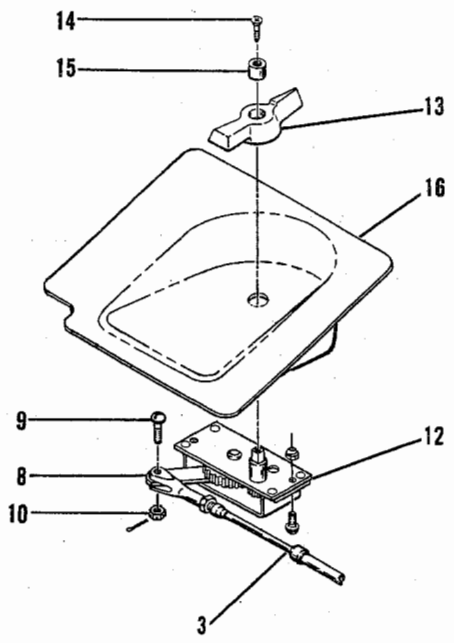

16 FUEL SELECTOR PAN

Detail A

Figure 122. Fuel Selector Valve and Controls Installation (Sheet 1 of 2)

FUEL SYSTEM

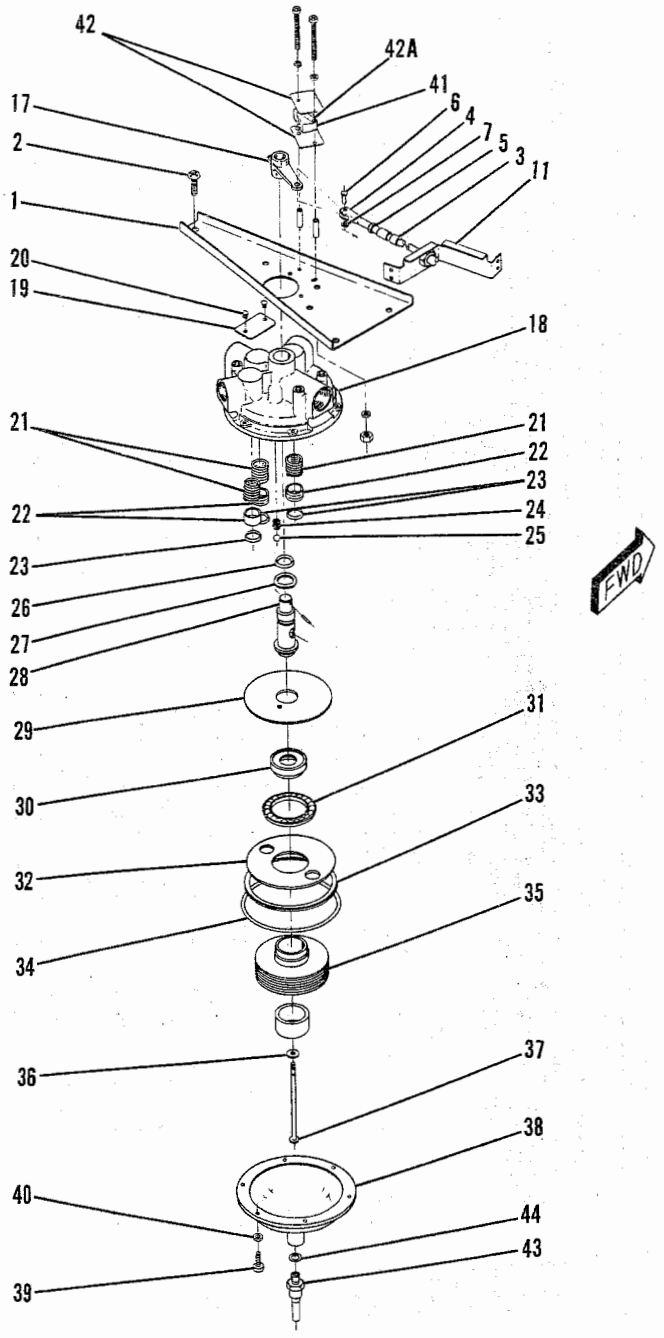

Detail **B**

B14263010

Figure 122. Fuel Selector Valve and Controls Installation (Sheet 2)

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
122 -			FUEL SELECTOR VALVE AND CONTROLS INSTALLATION	NP	
-1	5626002-1		. BRACKET-LH FUEL SELECTOR VALVE	1	
	5626002-2		. BRACKET-RH FUEL SELECTOR VALVE	1	
			ATTACHING PARTS		
-2	MS20033-1		. BOLT	3	
	AN960-10L		. WASHER	3	
			---*---		
-3	5315001-11		. CABLE ASSY	2	
			ATTACHING PARTS		
-4	AN665-21L		. CLEVIS	1	
-5	AN345-10		. NUT	1	
-6	MS20392-2C11		. PIN	1	
	MS24665-151		. PIN-COTTER	1	
-7	AN960-10L		. WASHER	1	
-8	AN665-21R		. TERMINAL	1	
-9	AN23-10		. BOLT	1	
-10	AN315-3R		. NUT	1	
	AN320-3		. NUT	1	
	MS24665-149		. PIN	1	
			---*---		
-11	5626003-1		. BRACKET-LH	1	
	5626003-2		. BRACKET-RH	1	
-12	5015104-3		. GEAR BOX ASSY-SELECTOR LH	1	
	5015104-4		. GEAR BOX ASSY-SELECTOR RH	1	
			ATTACHING PARTS		
	MS27039-1-09		. SCREW	2	
	NAS679A3		. NUT	2	
			---*---		
-13	0811132-3		. KNOB-FUEL SELECTOR	2	
			ATTACHING PARTS		
-14	MS51959-17		. SCREW	1	
-15	0811132-4		. WASHER	1	
			---*---		
-16	SEE FIG 21		. FUEL SELECTOR PAN	REF	
	9910060-7		. VALVE ASSY-LH	1	
	9910060-8		. VALVE ASSY-RH	1	
			ATTACHING PARTS		
	MS35273-79		. SCREW	3	
	AN960-416		. WASHER	3	
			---*---		
-17	2691503-2		. . ARM	PAET	1
			ATTACHING PARTS		
	NAS561-4-12	#	. . ROLL PIN		1
			---*---		
-18	2682130		. . HOUSING ASSY	PAET	1
-19	2682323		. . NAMEPLATE	PAET	1
			ATTACHING PARTS		
-20	MS21318-8		. . SCREW		2
			---*---		
-21	2682136		. . SPRING	PAET	3
-22	2682137	*	. . SEAL	PAET	3
-23	MS29513-016	*	. . PACKING		3
-24	2691248		. . SPRING	PAET	1
-25	MS134356		. . BALL		1
-26	MS29513-113	*	. . O-RING		1
-27	3502-32-01	#	. . WASHER-SPRING	PAET	1
-28	2682134		. . SHAFT ASSY	PAET	1
-29	2682132	#	. . PLATE	PAET	1
-30	2682133		. . SEAT-FILTER	PAET	1
-31	15J01	#	. . BEARING	ANR	1
-32	2682131		. . DISC	PAET	1
-33	RR375		. . RING-RETAINING	RMS	1
-34	MS29513-155	*	. . PACKING		1
-35	03W041145	#	. . FILTER	AMA	1
-36	600-015-010	*	. . STAT-O-SEAL	PKSC	1
-37	NAS623-3-52	#	. . SCREW		1
-38	2682214		. . BOWL	PAET	1
			ATTACHING PARTS		
-39	AN503-10-8		. . SCREW		6
-40	MS35333-39		. . WASHER		6
			---*---		
-41	MS25253-1		. SWITCH-MICRO LH & RH USE WITH AUX FUEL SYSTEM		2
			ATTACHING PARTS		
	MS35206-223		. SCREW		2
	NAS43DD0-51		. SPACER		2
	AN460-L4		. WASHER		4
	MS21083N04		. NUT		2
			---*---		
-42	5626010-1		. INSULATOR-SWITCH LH & RH		2
	2721191	**	. KIT-SOFTWARE	PAET	1
	2721192	##	. KIT-OVERHAUL	PAET	1
-42A	JV-5		. ACTUATOR	MCS	1
-43	510P1		. VALVE-DRAIN FSO 50BSH5E	AADC	1 A
	50BSH5E		. VALVE-DRAIN	UVA	1 B
-44	MS29513-011		. PACKING		1

**---2721191 SOFTWARE KIT CONSISTS OF PARTS MARKED *
##---2721192 OVERHAUL KIT CONSISTS OF PARTS MARKED #

A---340-0001 THRU 340-0314
B---340-0315 & ON

MANIFOLD PRESSURE SYSTEM

1 INTAKE MANIFOLD
23 MANIFOLD PRESSURE GAGE

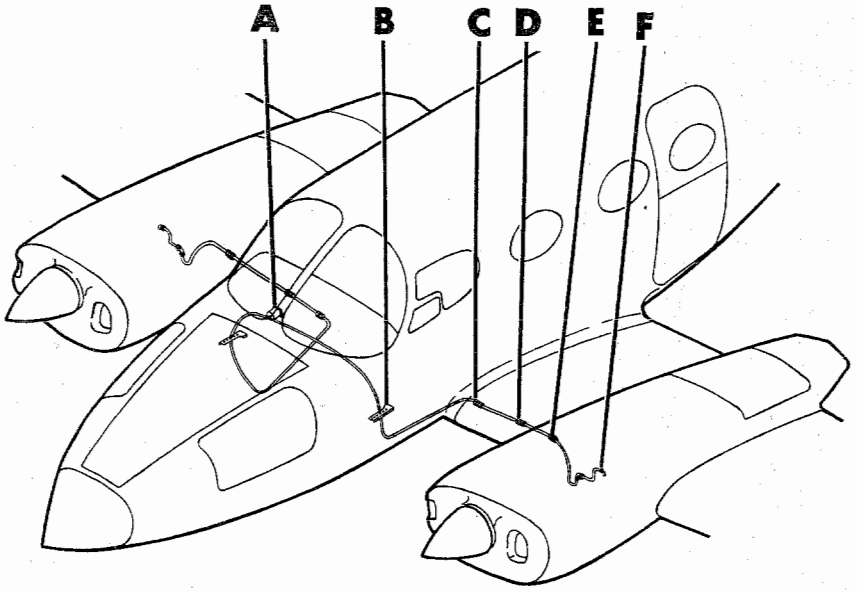

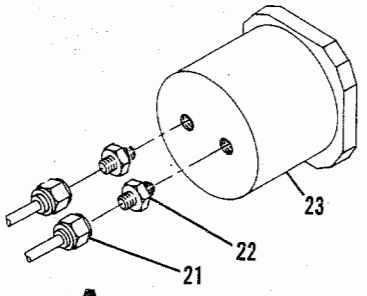

Detail **A**

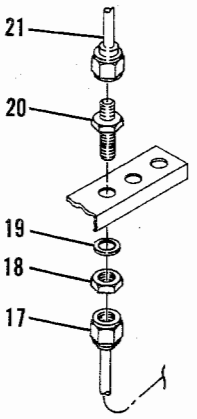

Detail **B**

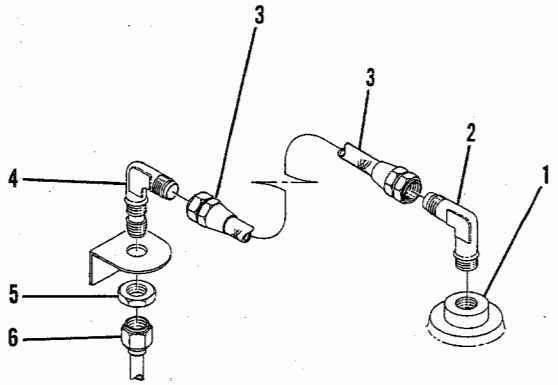

Detail **F**

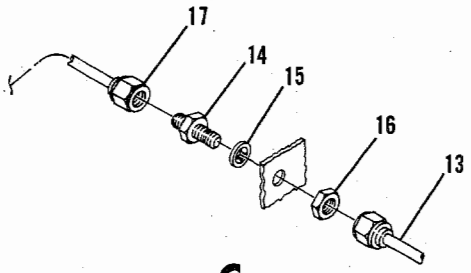

Detail **C**

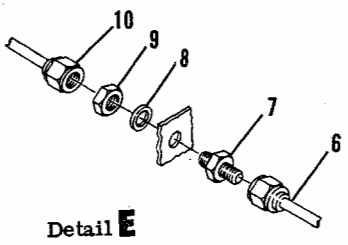

Detail **E**

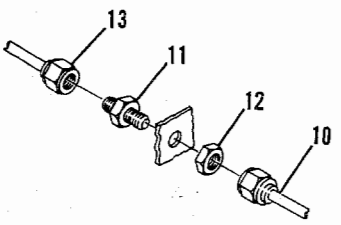

Detail **D**

Figure 123. Manifold Pressure System

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
123 -			MANIFOLD PRESSURE SYSTEM	NP	
-1	SEE FIG 98		. MANIFOLD-INTAKE	REF	
-2	MS20822-2B		. ELBOW INTAKE MANIFOLD	2	
-3	S1168-2-	*	. HOSE ASSY ELBOW TO ELBOW	2	
-4	AN833-2D		. ELBOW	2	
-5	AN924-2D		. NUT	2	
-6	5300106-25		. LINE ASSY ELBOW TO WING	2	
-7	AN837-2		. UNION	2	
-8	AN960-516L		. WASHER	4	
-9	AN924-2		. NUT	2	
-10	5600108-18		. LINE ASSY UNION TO STUB WING	2	
-11	AN832-2D		. UNION	2	
-12	AN924-2D		. NUT	2	
-13	5300118-14		. LINE ASSY UNION TO FUSELAGE	2	
-14	AN832-2D		. UNION	2	
-15	250-215-2		. LOCK-O-SEAL	PKSC	
-16	AN924-2D		. NUT	2	
-17	5300108-20		. LINE ASSY-LH & RH UNION TO MANIFOLD BRACKET	2	
-18	AN924-2D		. NUT	2	
-19	AN960PD516L		. WASHER	2	
-20	AN832-2D		. UNION	2	
-21	5300108-23		. LINE ASSY-LH MANIFOLD BRACKET TO GAGE	1	
	5300108-22		. LINE ASSY-RH MANIFOLD BRACKET TO GAGE	1	
-22	AN816-2D		. NIPPLE	2	
-23	SEE FIG 61		. GAGE-MANIFOLD PRESSURE	1	

*---LENGTH TO BE DETERMINED

PITOT SYSTEM

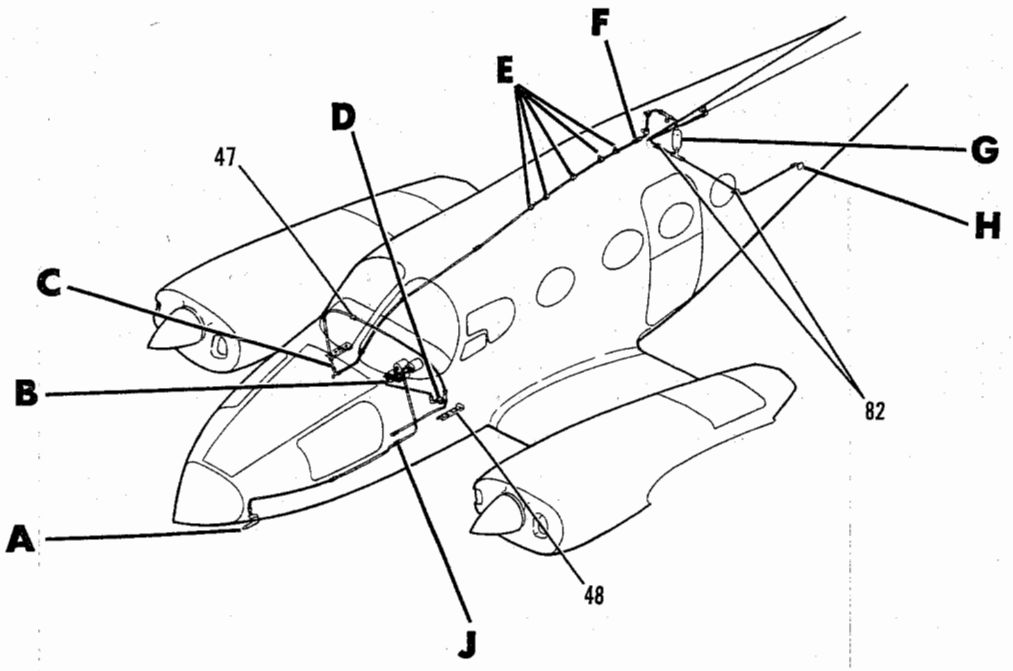

SINGLE SYSTEM

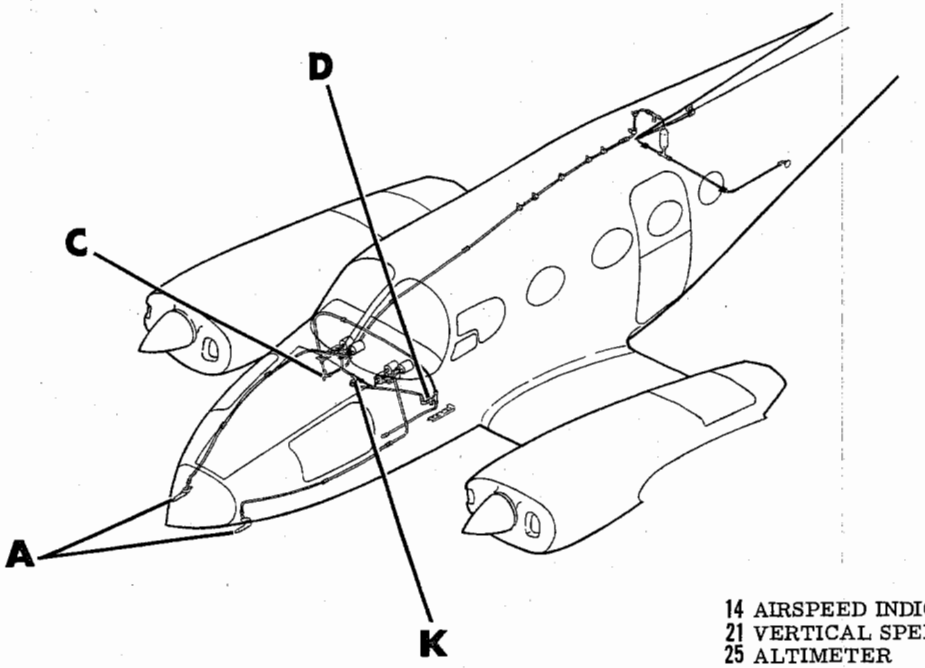

DUAL SYSTEM

14 AIRSPEED INDICATOR
21 VERTICAL SPEED INDICATOR
25 ALTIMETER
29 DIFFERENTIAL PRESSURE & CABIN ALTITUDE GAGE
74J AUTOPILOT LINE ASSY - SUMP TO COMPUTER

14143028
14143029

Figure 124. Pitot and Static System (Sheet 1 of 3)

PITOT SYSTEM

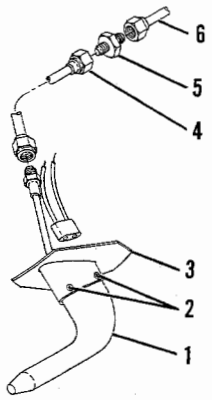

Detail **A**

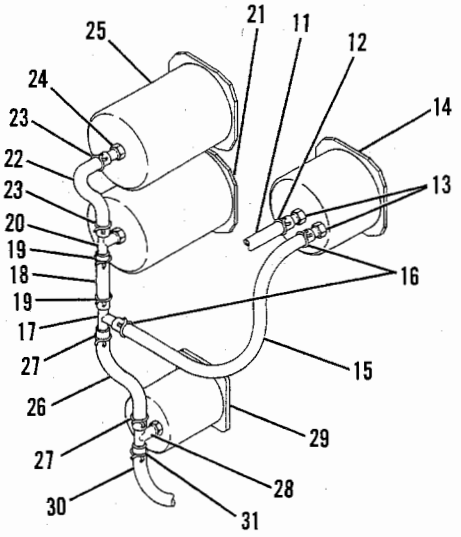

Detail **B**

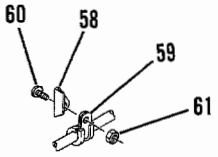

Detail **E**

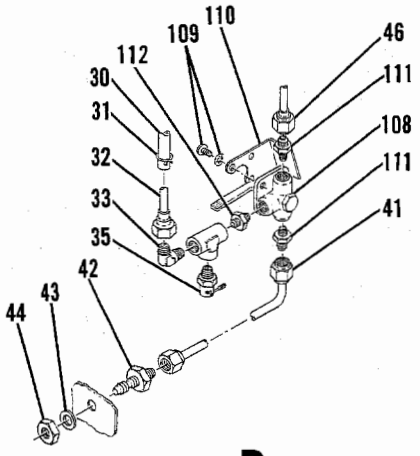

Detail **D**
CODE F

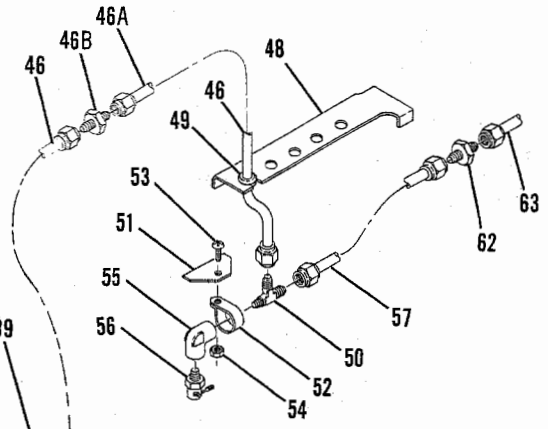

Detail **C**

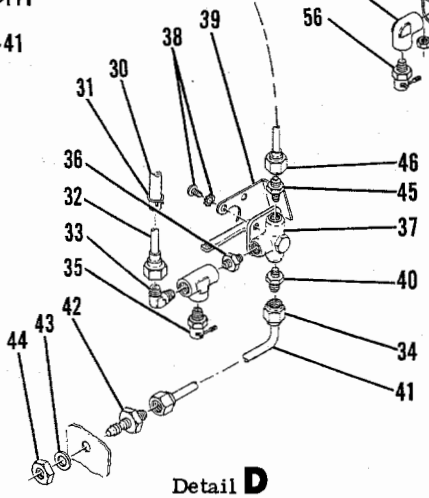

Detail **D**
CODE E

A14142011
B14141002
C14143026
D14142011
D14142026
E14143026

Figure 124. Pitot and Static System (Sheet 2)

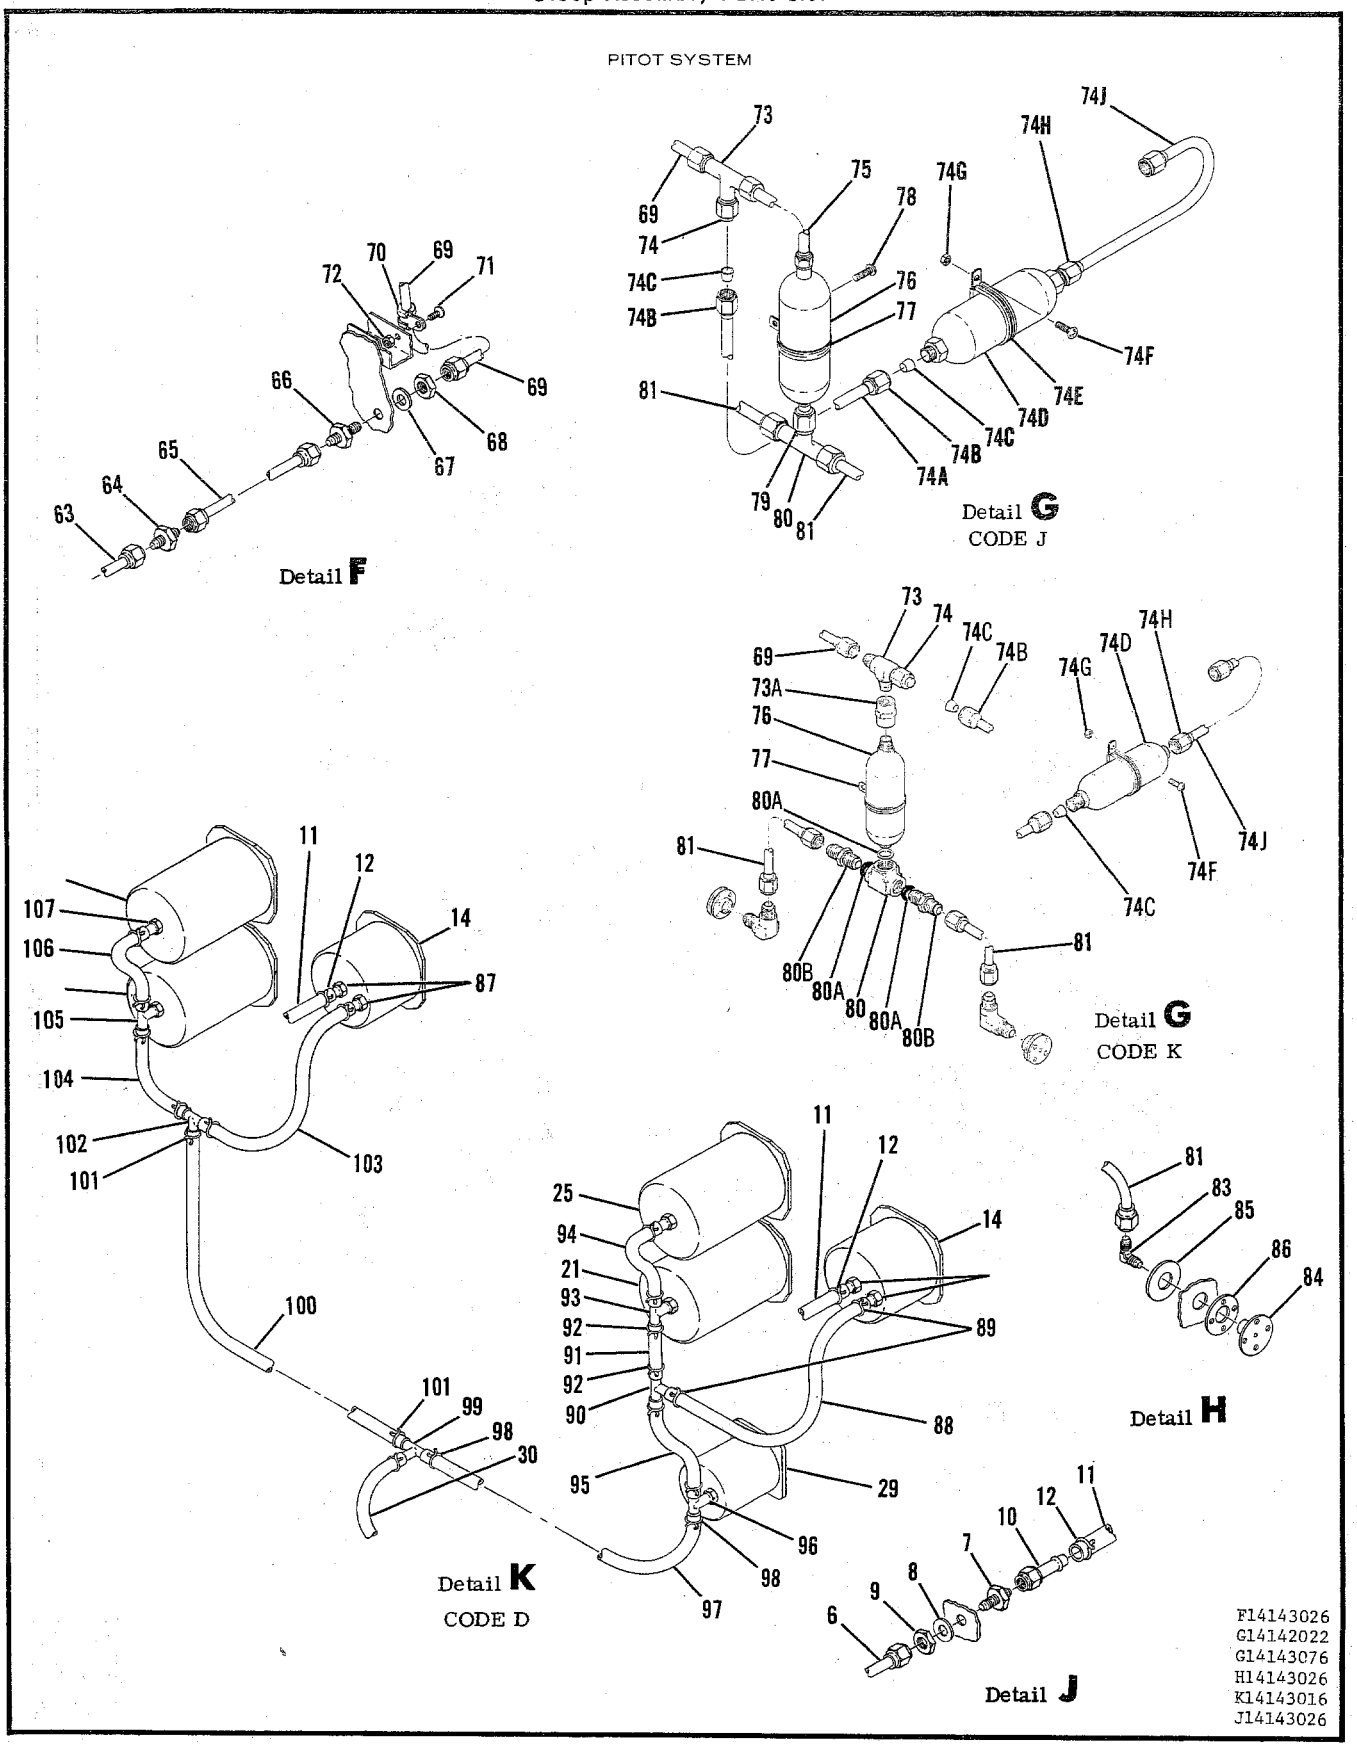

Figure 124. Pitot and Static System (Sheet 3)

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
124 -			PITOT AND STATIC SYSTEM	NP	
-1	AN5812-1		. TUBE-PITOT LH	1	
	AN5812-1		. TUBE-PITOT DUAL SYSTEM	2	D
			ATTACHING PARTS		
-2	MS35207-227		. SCREW	4	
			---*---		
-3	5313037-3		. ADAPTER ASSY-PITOT TUBE	1	
	5313037-4		. ADAPTER ASSY-PITOT TUBE DUAL SYSTEM	1	D
	5313037-11		. DOUBLER-PITOT ADAPTER	1	
-4	5300111-1		. LINE ASSY-LH PITOT TUBE TO UNION	1	
	5300111-3		. LINE ASSY-RH PITOT TUBE TO UNION	1	D
-5	AN815-4D		. UNION LH & RH	2	
-6	5300111-2		. LINE ASSY-LH UNION TO UNION	1	
	5300111-4		. LINE ASSY-LH UNION TO UNION	1	D
-7	AN832-4D		. UNION LH & RH	2	
-8	250-215-4		. LOCK-O-SEAL LH & RH	PKSC 2	
-9	AN924-4D		. NUT LH & RH	2	
-10	5300111-13		. LINE ASSY-UNION TO HOSE LH & RH	2	
-11	CM2939-4		. HOSE BKI LINE TO AIRSPEED INDICATOR LH & RH	AR	
			ATTACHING PARTS		
-12	A8S		. CLAMP	CBHC 2	
	AN737TW22		. CLAMP ALT FOR A8S	2	
			---*---		
-13	1K10-2-4		. ADAPTER AIRSPEED INDICATOR	ABNE 2	
-14	SEE FIG 63		. INDICATOR-AIRSPEED	1	
-15	CM2939-4		. HOSE BKI AIRSPEED INDICATOR TO TEE	AR	
			ATTACHING PARTS		
-16	A8S		. CLAMP	CBHC 2	
	AN737TW22		. CLAMP ALT FOR A8S	2	
			---*---		
-17	1K14-4-4-4		. TEE	ABNE 1	
-18	CM2939-4		. HOSE BKI TEE TO TEE	AR	
			ATTACHING PARTS		
-19	A8S		. CLAMP	CBHC 2	
	AN737TW22		. CLAMP ALT FOR A8S	2	
			---*---		
-20	1K27-1		. TEE VERTICAL SPEED INDICATOR	ABNE 1	
-21	SEE FIG 63		. INDICATOR-VERTICAL SPEED	1	
-22	CM2939-4		. HOSE BKI VERTICAL SPEED INDICATOR TO ALTIMETER	AR	
			ATTACHING PARTS		
-23	A8S		. CLAMP	CBHC 2	
	AN737TW22		. CLAMP ALT FOR A8S	2	
			---*---		
-24	1K10-2-4		. ADAPTER ALTIMETER	ABNE 1	
-25	SEE FIG 63		. ALTIMETER	1	
-26	CM2939-4		. HOSE BKI TEE TO DIFFERENTIAL PRESSURE & CABIN ALTITUDE GAGE	AR	
			ATTACHING PARTS		
-27	A8S		. CLAMP	CBHC 2	
	AN737TW22		. CLAMP ALT FOR A8S	2	
			---*---		
-28	1K27-1		. TEE DIFFERENTIAL PRESSURE & CABIN ALTITUDE GAGE	ABNE 1	
-29	SEE FIG 61		. GAGE-DIFFERENTIAL PRESSURE & CABIN ALTITUDE	1	
-30	CM2939-4		. HOSE BKI TEE TO STATIC SOURCE	AR	
			STD & DUAL SYSTEMS		
			ATTACHING PARTS		
-31	A8S		. CLAMP	CBHC 2	
	AN737TW22		. CLAMP ALT FOR A8S	2	
			---*---		
-32	5300111-14		. LINE ASSY	1	
-33	MS20822-4D		. ELBOW	1	
-34	AN917-1D		. TEE	1	
-35	0511199-20		. VALVE-DRAIN	1	
-36	AN911-1D		. NIPPLE	1	E
-37	9910054-1		. VALVE-SELECTOR STATIC SOURCE	1	E
			ATTACHING PARTS		
-38	MS35206-228		. SCREW	3	E
	MS35335-30		. WASHER	3	E
			---*---		
-39	5318501-29		. BRACKET	1	E
-40	MS20816-4D		. NIPPLE	1	E
-41	5300111-12		. LINE ASSY-VALVE TO ALT STATIC SOURCE	1	
-42	AN832-4D		. UNION	1	
-43	250-215-4		. LOCK-O-SEAL	PKSC 1	
-44	AN924-4D		. NUT	1	
-45	MS20816-4D		. NIPPLE	1	E
-46	5300111-15		. LINE ASSY-CROSSOVER WEU 5300111-23 & 5300111-24 & AN815-4D MAIN STATIC DRAIN	1	G
	5300111-23	*	. LINE ASSY-LH CROSSOVER MAIN STATIC DRAIN	1	H
-46A	5300111-24	*	. LINE ASSY-RH CROSSOVER MAIN STATIC DRAIN	1	H
-46B	AN815-4D	*	. UNION MAIN STATIC DRAIN	1	H
-47	MS21919WDG4		. CLAMP	1	
			ATTACHING PARTS		
	MS35206-261		. SCREW	1	
	MS21044N3		. NUT	1	
			---*---		
-48	5318501-5		. BRACKET ASSY-LH	1	
	5318501-6		. BRACKET ASSY-RH	1	
-49	MS35489-6		. GROMMET	1	
-50	MS20826-4D		. TEE	1	
-51	5017404-4		. BRACKET	1	
-52	A2980A9-27		. CLAMP	CBHC 1	
			ATTACHING PARTS		
-53	MS35207-263		. SCREW	1	
-54	MS21044N3		. NUT	1	
			---*---		

CONTINUED

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
124 -55	AN916-1D		ELBOW	1	
-56	0511199-20		VALVE-DRAIN RH	1	
-57	5300111-10		LINE ASSY-RH VALVE TO UNION	1	
-58	S138-1		BRACKET-LINE SUPPORT	6	
-59	MS21919WDG4		CLAMP	6	
			ATTACHING PARTS		
-60	MS27039-0807		SCREW	1	
-61	MS21044N08		NUT	1	
			---*---		
-62	AN815-4D		UNION	1	
-63	5300111-9		LINE ASSY-RH UNION TO UNION	1	
-64	AN815-4D		UNION	1	
-65	5300111-8		LINE ASSY-RH UNION TO BULKHEAD UNION	1	
-66	AN832-4D		UNION	1	
-67	250-215-4		LOCK-O-SEAL PKSC	1	
-68	AN924-4D		NUT	1	
-69	5300111-7		LINE ASSY-BULKHEAD UNION TO TEE FSO 5300111-25	1	J
	5300111-25	#	LINE ASSY-BULKHEAD UNION TO TEE	1	K
-70	MS21919WDG4		CLAMP	3	
			ATTACHING PARTS		
-71	MS27039-0807		SCREW	1	
-72	MS21044N08		NUT	1	
			---*---		
-73	AN824-4D		TEE FSO MS20425-4D	1	D
	MS20825-4D	#	TEE	1	K
-73A	AN910-1D	#	COUPLING	1	K
-74	AN929-4D		CAP WHEN AUTOPILOT NOT INSTALLED	1	
-74A	S1071-1		HOSE-TEE TO SUMP USE WITH 400A AUTOPILOT	AR	A
-74B	S1130-1		NUT USED WITH 400A AUTOPILOT	2	A
-74C	S1131-1		INSERT USED WITH 400A AUTOPILOT	2	A
-74D	S1258-1		SUMP USED WITH 400A AUTOPILOT	1	A
-74E	MS21919D26		CLAMP USED WITH 400A AUTOPILOT	1	A
			ATTACHING PARTS		
-74F	MS35206-245		SCREW	1	A
-74G	MS21045L08		NUT	1	A
			---*---		
-74H	S1481-1		COUPLING USED WITH 400A AUTOPILOT	1	A
-74J	S1071-1		LINE ASSY-SUMP TO COMPUTER USED WITH AUTOPILOT	AR	
-75	5300111-11		LINE ASSY TEE TO SUMP FSO 5300111-16	1	B
	5300111-16		LINE ASSY TEE TO SUMP ORDER PARTS MARKED #	1	C
			FOR SPARES		
-76	S1258-1		SUMP	1	
-77	MS21919WDG6		CLAMP	1	
			ATTACHING PARTS		
-78	MS27039-0808		SCREW	1	
			---*---		
-79	AN910-1D		COUPLING	1	J
-80	MS20825-4D		TEE FSO AN938D4	1	J
	AN938D4	#	TEE	1	K
-80A	MS29512-04	#	PACKING	3	K
-80B	AN815-4D	#	UNION	2	K
-81	5300111-5		LINE ASSY-LH TEE TO STATIC PORT	1	
	5300111-6		LINE ASSY-RH TEE TO STATIC PORT	1	
-82	MS21919WDG4		CLAMP LH & RH	2	
			ATTACHING PARTS		
	MS27039-0807		SCREW	1	
	MS21044N08		NUT	1	
			---*---		
-83	MS20822-4D		ELBOW LH & RH	4	
-84	CM2609-1P		FLANGE-STATIC PORT LH & RH	2	
	CM2933-5		PORT-STATIC HEATED LH & RH	2	
-85	0814000-320		WASHER LH & RH	2	
	5217525-2		RETAINER LH & RH USED WITH HEATED STATIC PORT	2	
-86	0814109-2		SPACER LH & RH	2	
	0814109-1		SPACER LH & RH USED WITH HEATED STATIC PORT	2	
-87	1K10-2-4		ADAPTER-AIRSPEED INDICATOR LH & RH	4	
-88	CM2939-4		HOSE BKI AIRSPEED INDICATOR TO TEE	AR	D
			ATTACHING PARTS		
-89	A8S		CLAMP CBHC	2	D
	AN737TW22		CLAMP ALT FOR A8S	2	D
			---*---		
-90	1K14-4-4-4		TEE ABNE	1	D
-91	CM2939-4		HOSE BKI TEE TO TEE	AR	D
			ATTACHING PARTS		
-92	A8S		CLAMP CBHC	2	D
	AN737TW22		CLAMP ALT FOR A8S	2	D
			---*---		
-93	1K27-1		TEE VERTICAL SPEED INDICATOR ABNE	1	D
-94	CM2939-4		HOSE BKI TEE TO ALTIMETER	AR	D
			ATTACHING PARTS		
	A8S		CLAMP CBHC	2	D
	AN737TW22		CLAMP ALT FOR A8S	2	D
			---*---		
-95	CM2939-4		HOSE BKI TEE TO TEE	AR	D
			ATTACHING PARTS		
	A8S		CLAMP CBHC	2	D
	AN737TW22		CLAMP ALT FOR A8S	2	D
			---*---		
-96	1K27-1		TEE DIFFERENTIAL PRESSURE & CABIN ALTITUDE GAGE AIRB	1	D
-97	CM2939-4		HOSE BKI TEE TO TEE	AR	D
			ATTACHING PARTS		
-98	A8S		CLAMP CBHC	2	D
	AN737TW22		CLAMP ALT FOR A8S	2	D
			---*---		

CONTINUED

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7		UNITS PER ASSY	USABLE ON CODE
124 -99	1K14-4-4-4	TEE	ABNE	1	D
-100	CM2939-4	HOSE BKI TEE TO TEE		AR	D
		ATTACHING PARTS			
-101	A8S	CLAMP	CBHC	2	D
	AN737TW22	CLAMP ALT FOR AN737TW22		2	D
		---*---			
-102	1K14-4-4-4	TEE	ABNE	1	D
-103	CM2939-4	HOSE BKI TEE TO RH AIRSPEED INDICATOR		AR	D
		ATTACHING PARTS			
	A8S	CLAMP	CBHC	2	D
	AN737TW22	CLAMP ALT FOR A8S		2	D
		---*---			
-104	CM2939-4	HOSE BKI TEE TO TEE		AR	D
		ATTACHING PARTS			
	A8S	CLAMP	CBHC	2	D
	AN737TW22	CLAMP ALT FOR A8S		2	D
		---*---			
-105	1K27-1	TEE RH VERTICAL SPEED INDICATOR	ABNE	1	D
-106	CM2939-4	HOSE BKI RH VERTICAL SPEED INDICATOR TO ALTIMETER		AR	D
		ATTACHING PARTS			
	A8S	CLAMP	CBHC	2	D
	AN737TW22	CLAMP ALT FOR A8S		2	D
		---*---			
-107	1K10-2-4	ADAPTER ALTIMETER	ABNE	1	D
-108	710-3-1/8B	VALVE-SELECTOR STATIC SOURCE	REPM	1	F
		ATTACHING PARTS			
-109	MS35214-24	SCREW		3	F
	MS35333-105	WASHER		3	F
		---*---			
-110	530038-2	BRACKET-VALVE SUPPORT		1	F
-111	AN816-4	NIPPLE		2	F
-112	AN911-1J	NIPPLE		1	F

* WHEN ORDERING THIS PART ALSO ORDER
PART MARKED * FOR INITIAL FIELD INSTALLATION

#WHEN ORDERING THIS PART ALSO ORDER
PARTS MARKED # FOR INITIAL FIELD INSTALLATION

A---340-0052 & ON & AIRCRAFT MODIFIED
BY SK421-46
B---340-0001 THRU 340-0300
C---340-0301 TO 340A0001
D---340-0001 THRU 340-0500
E---340-0001 THRU 340-0523 &
340-0535 & ON
F---340-0524 THRU 340-0534
G---340-0001 THRU 340-0547
H---340-0548 & ON
J---340-0001 TO 340A0001
K---340A0001 & ON

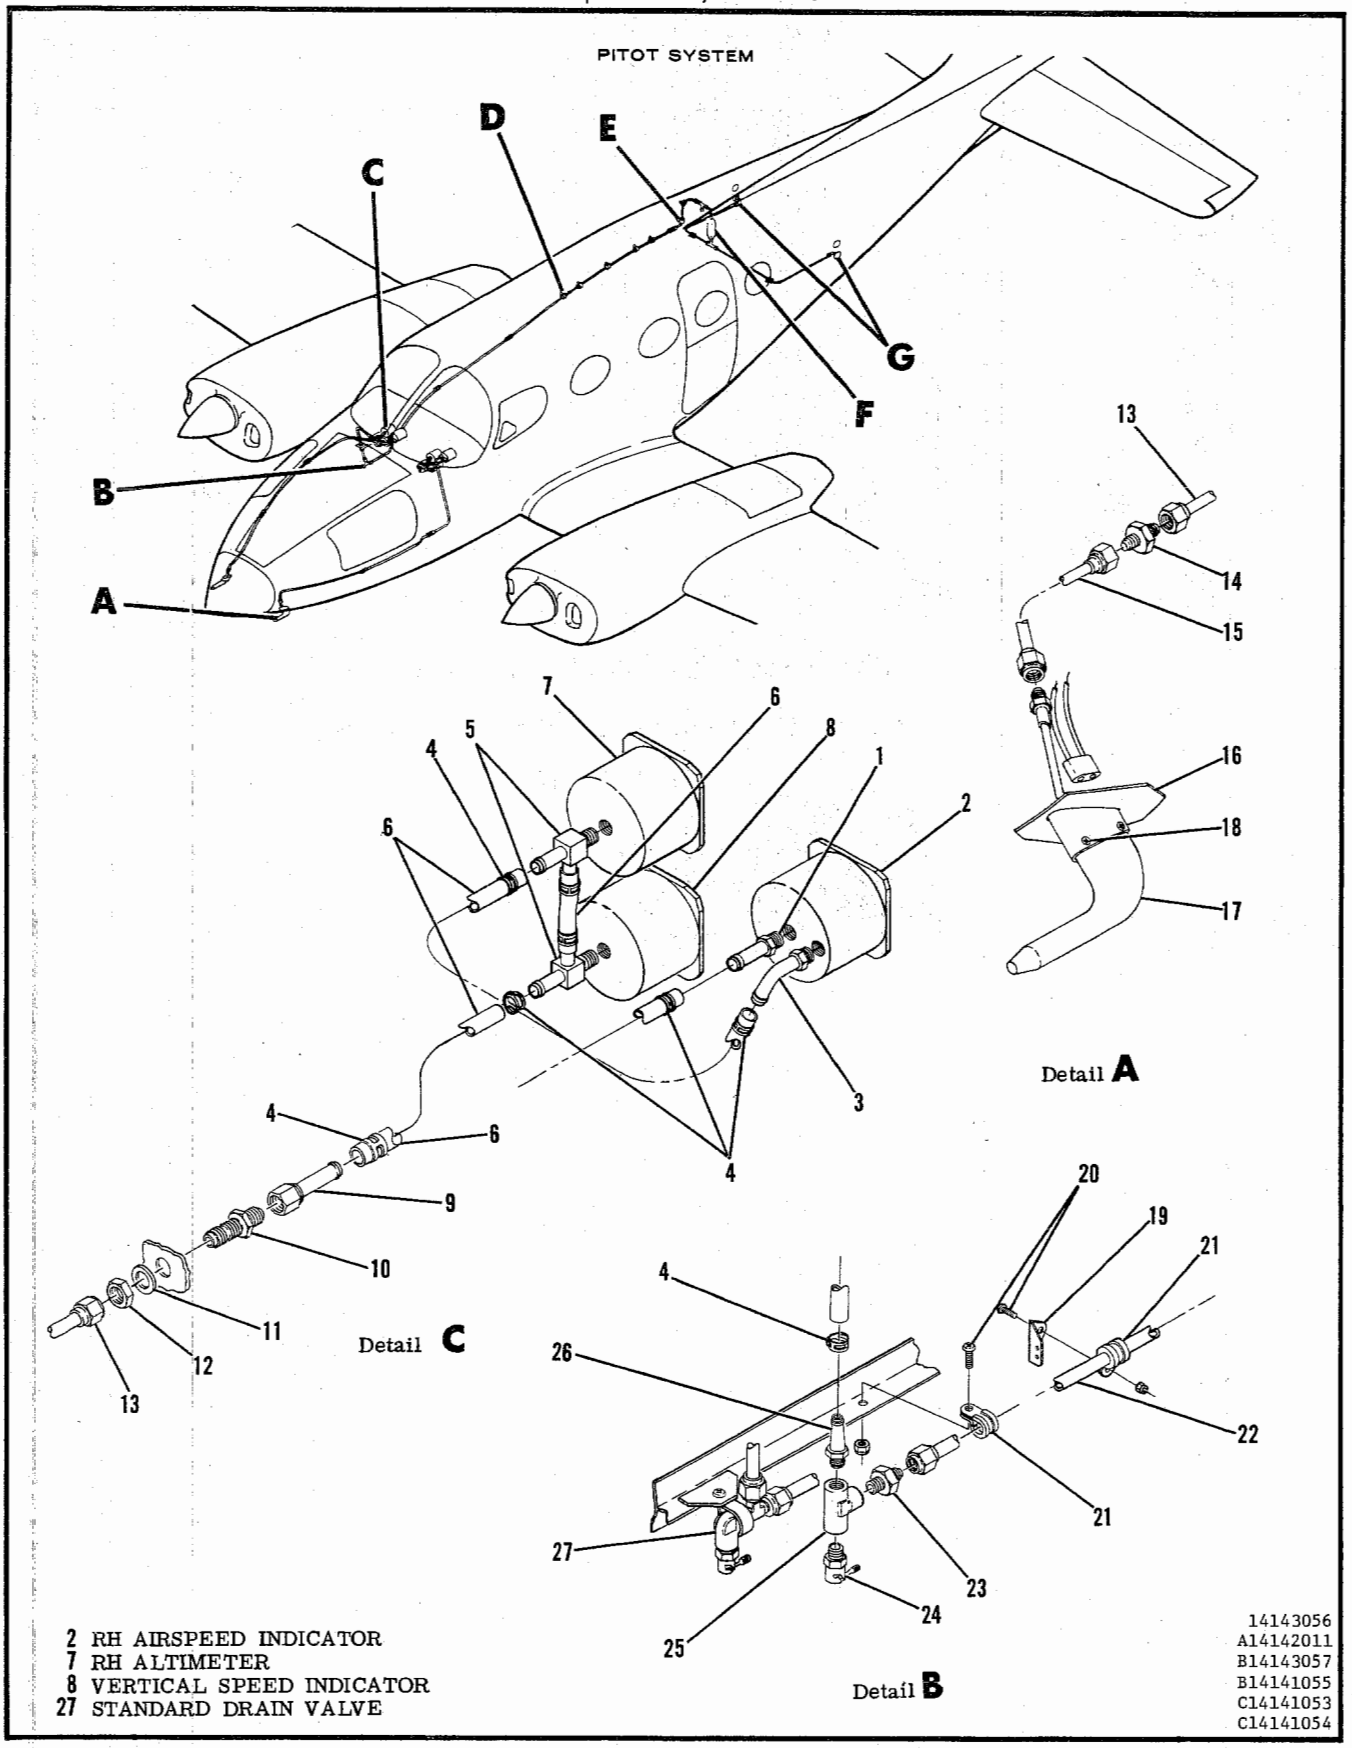

Figure 124A. Secondary Static System (Sheet 1 of 2)

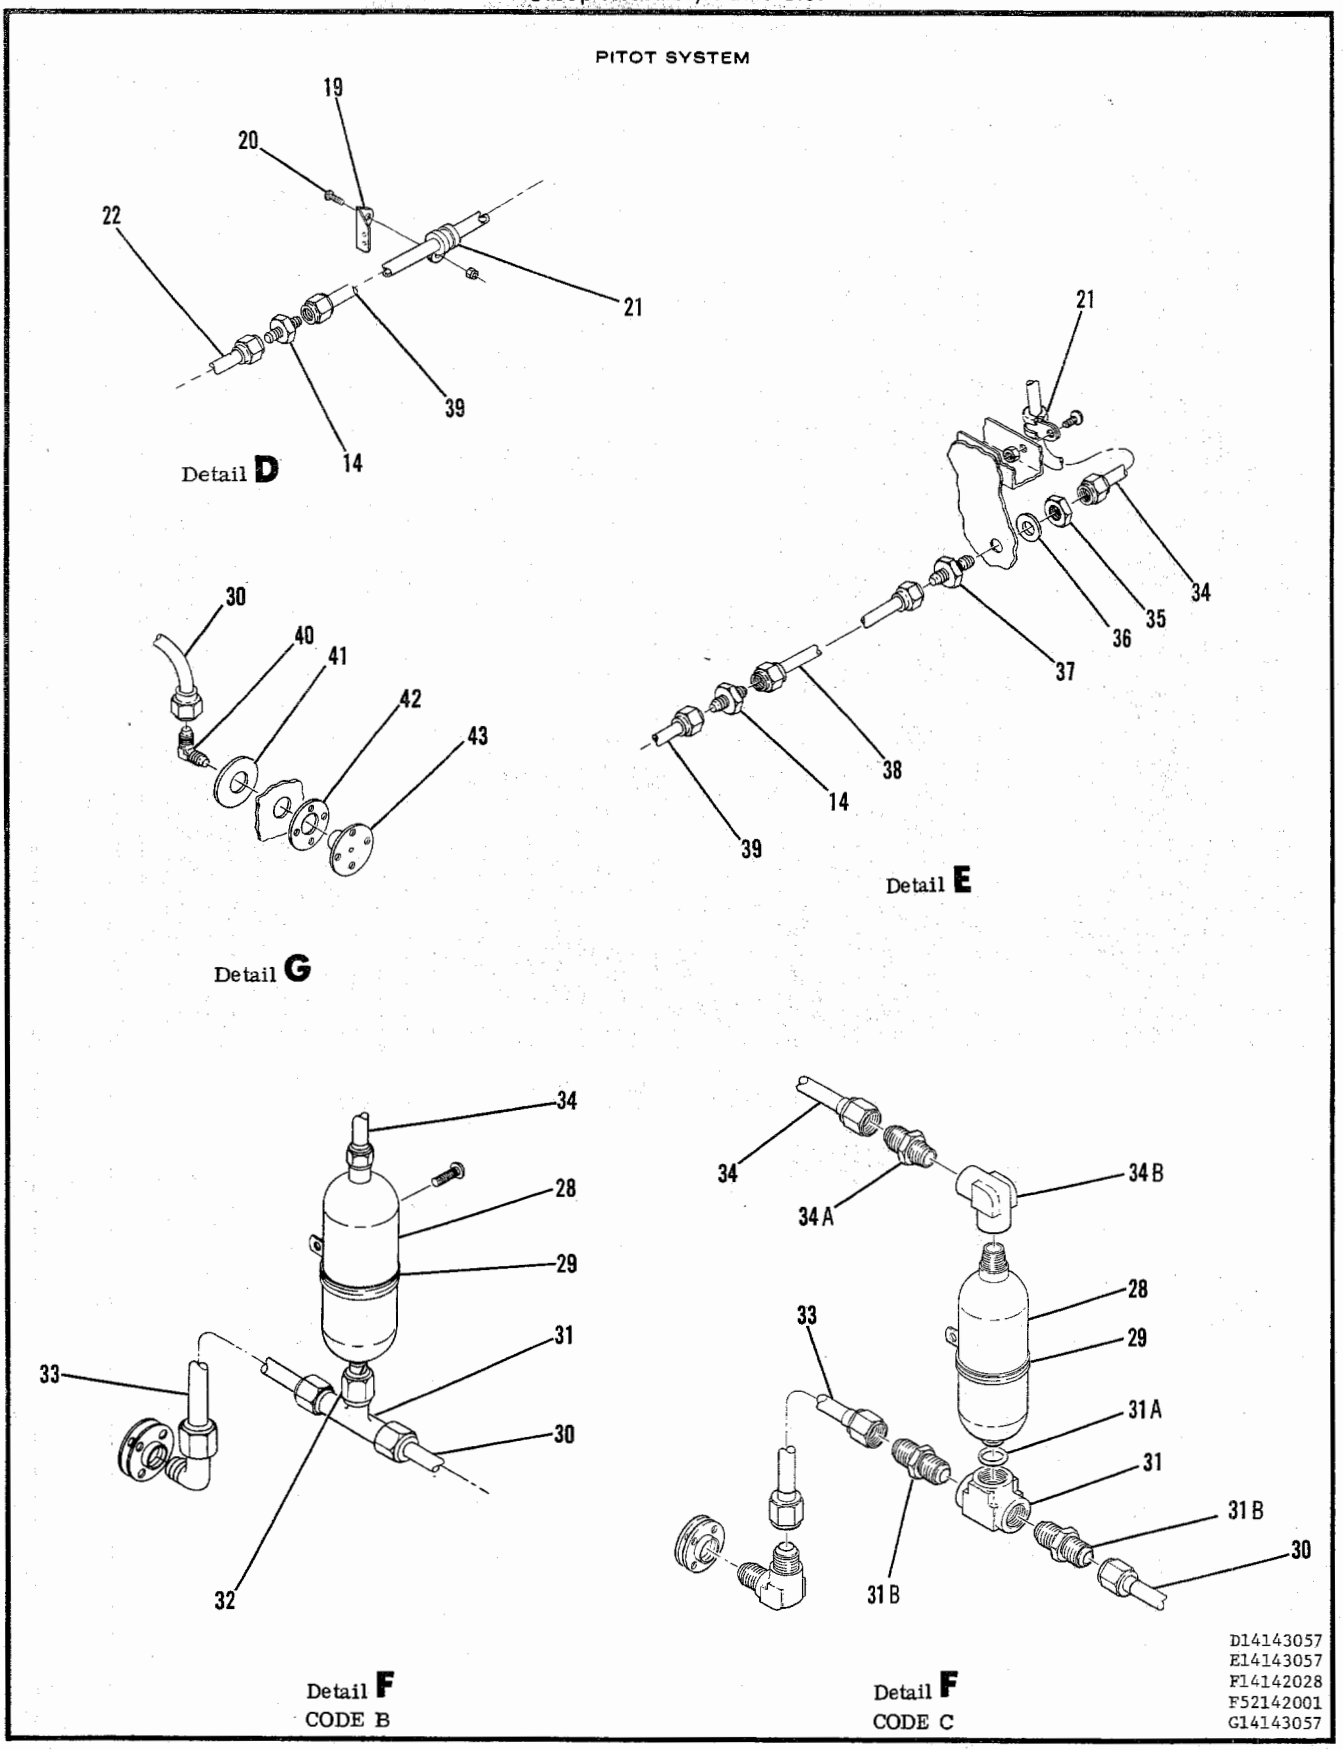

Figure 124A. Secondary Static System (Sheet 2)

340-0501 AND ON

Section II

Group Assembly Parts List

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
124A-			SECONDARY STATIC SYSTEM	NP	A
-1	1K10-2-4		. ADAPTER	1	
-2	SEE FIG 64		. INDICATOR-AIR SPEED RH	REF	
-3	1K1-2-4		. ELBOW AIRB	1	
-4	NAS397-8		. CLAMP	7	
	AN737TW22		. CLAMP ALT FOR NAS397-8	7	
-5	1K27-1		. TEE AIRB	2	
-6	CM2939-4		. HOSE BKI	AR	
-7	SEE FIG 64		. ALTIMETER RH	REF	
-8	SEE FIG 64		. INDICATOR-VERTICAL SPEED	REF	
-9	5300111-13		. LINE ASSY	1	
-10	AN832-4D		. UNION	1	
-11	250-215-4		. LOCK-O-SEAL PKSC	1	
-12	AN924-4D		. NUT	1	
-13	5300111-4		. LINE ASSY	1	
	MS35489-8S		. GROMMET	2	
-14	AN815-4D		. UNION	3	
-15	5300111-3		. LINE ASSY	1	
-16	5313037-4		. ADAPTER ASSY-PITOT TUBE	1	
	5313037-11		. DOUBLER	1	
-17	AN5812-1		. TUBE-PITOT	1	
-18	MS35207-227		. SCREW	4	
-19	S138-1		. BRACKET	13	
-20	MS27039-0807		. SCREW	17	
	MS21044N08		. NUT	17	
-21	MS21919WDG4		. CLAMP	17	
-22	5300111-17		. LINE ASSY	1	
-23	AN816-4D		. NIPPLE	1	
-24	0511199-20		. VALVE-DRAIN	1	
-25	AN917-1D		. TEE	1	
-26	1K10-2-4		. ADAPTER AIRB	1	
-27	SEE FIG 124		. VALVE-DRAIN STANDARD	REF	
-28	S1258-1		. SUMP	1	
-29	MS21919WG26		. CLAMP	1	
-30	5300111-21		. LINE ASSY RH	1	
-31	MS20825-4D		. TEE FSO AN938D4	1	B
	AN938D4	*	. TEE	1	C
-31A	MS29512-04	*	. PACKING	3	C
-31B	AN815-4D	*	. UNION	2	C
-32	AN910-1D		. COUPLING FSO PARTS MARKED *	1	B
-33	5300111-22		. LINE ASSY LH	1	
-34	5300111-20		. LINE ASSY SUMP TO UNION FSO 5300111-26	2	C
	5300111-26	*	. LINE ASSY SUMP ELBOW TO UNION	1	C
	S1130-1		. NUT	1	B
-34A	AN816-4D	*	. UNION	1	C
-34B	AN916-1D	*	. ELBOW	1	C
-35	AN924-4D		. NUT	1	
-36	250-215-4		. LOCK-O-SEAL PKSC	1	
-37	AN832-4D		. UNION	1	
-38	5300111-19		. LINE ASSY	1	
-39	5300111-18		. LINE ASSY	1	
-40	MS20822-4D		. ELBOW LH & RH	2	
-41	0814000-320		. WASHER LH & RH USED WITH FLANGE	2	
	5217525-2		. RETAINER LH & RH USED WITH HEATED PORT	2	
-42	0814109-2		. SPACER LH & RH USED WITH FLANGE	2	
	0814109-1		. SPACER LH & RH USED WITH HEATED PORT	2	
-43	CM2609-1P		. FLANGE LH & RH STANDARD	2	
	CM2933-5		. PORT-HEATED LH & RH	2	
-44	SEE FIG 46		. CHECK LIST ASSY	REF	

* WHEN ORDERING THIS PART ALSO ORDER
PARTS MARKED * FOR INITIAL FIELD INSTALLATION

A---340-0501 & ON
B---340-0501 TO 340A0001
C---340A0001 & ON

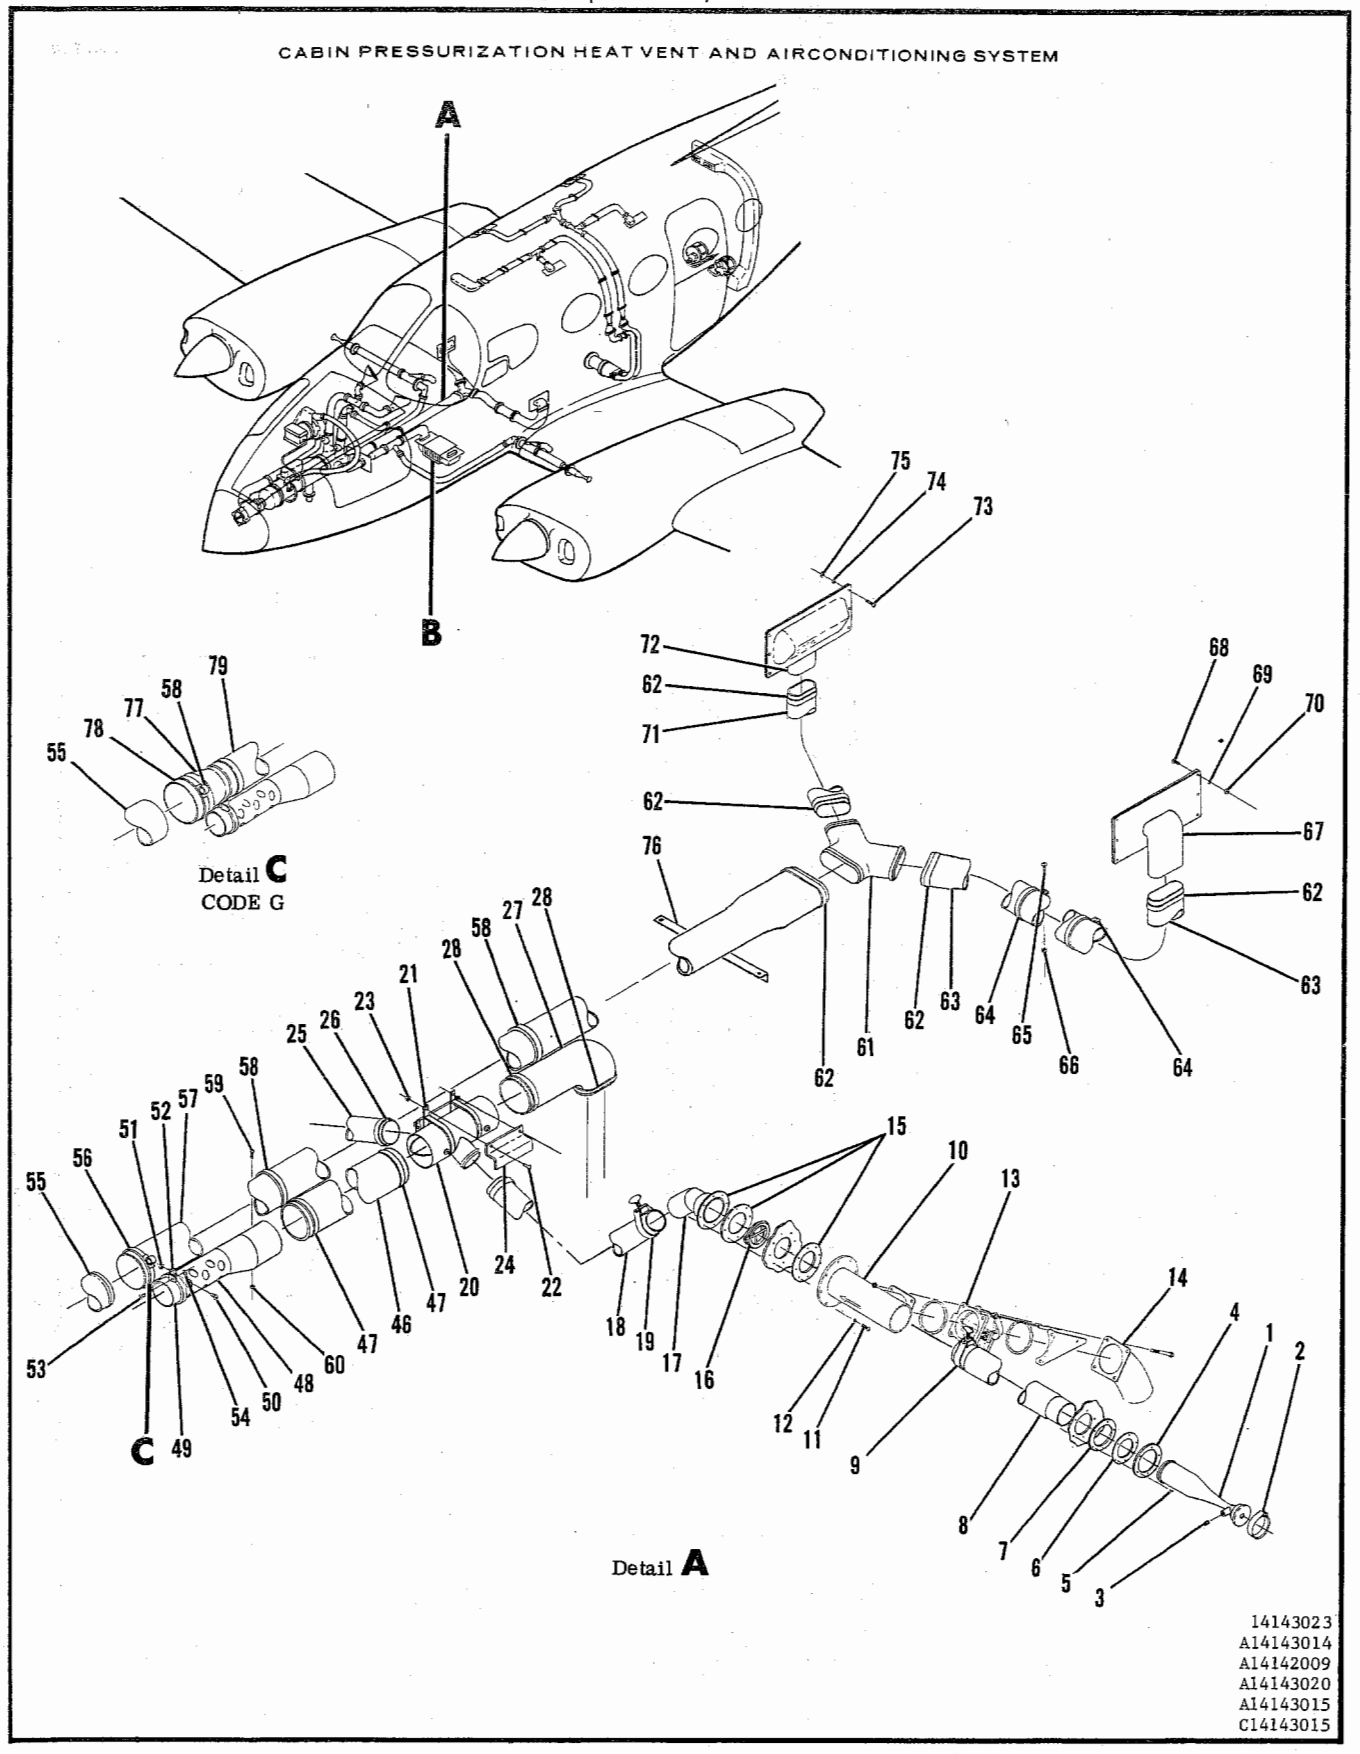

Figure 125. Cabin Pressurization & Heating System (Sheet 1 of 2)

CABIN PRESSURIZATION HEAT VENT AND AIRCONDITIONING SYSTEM

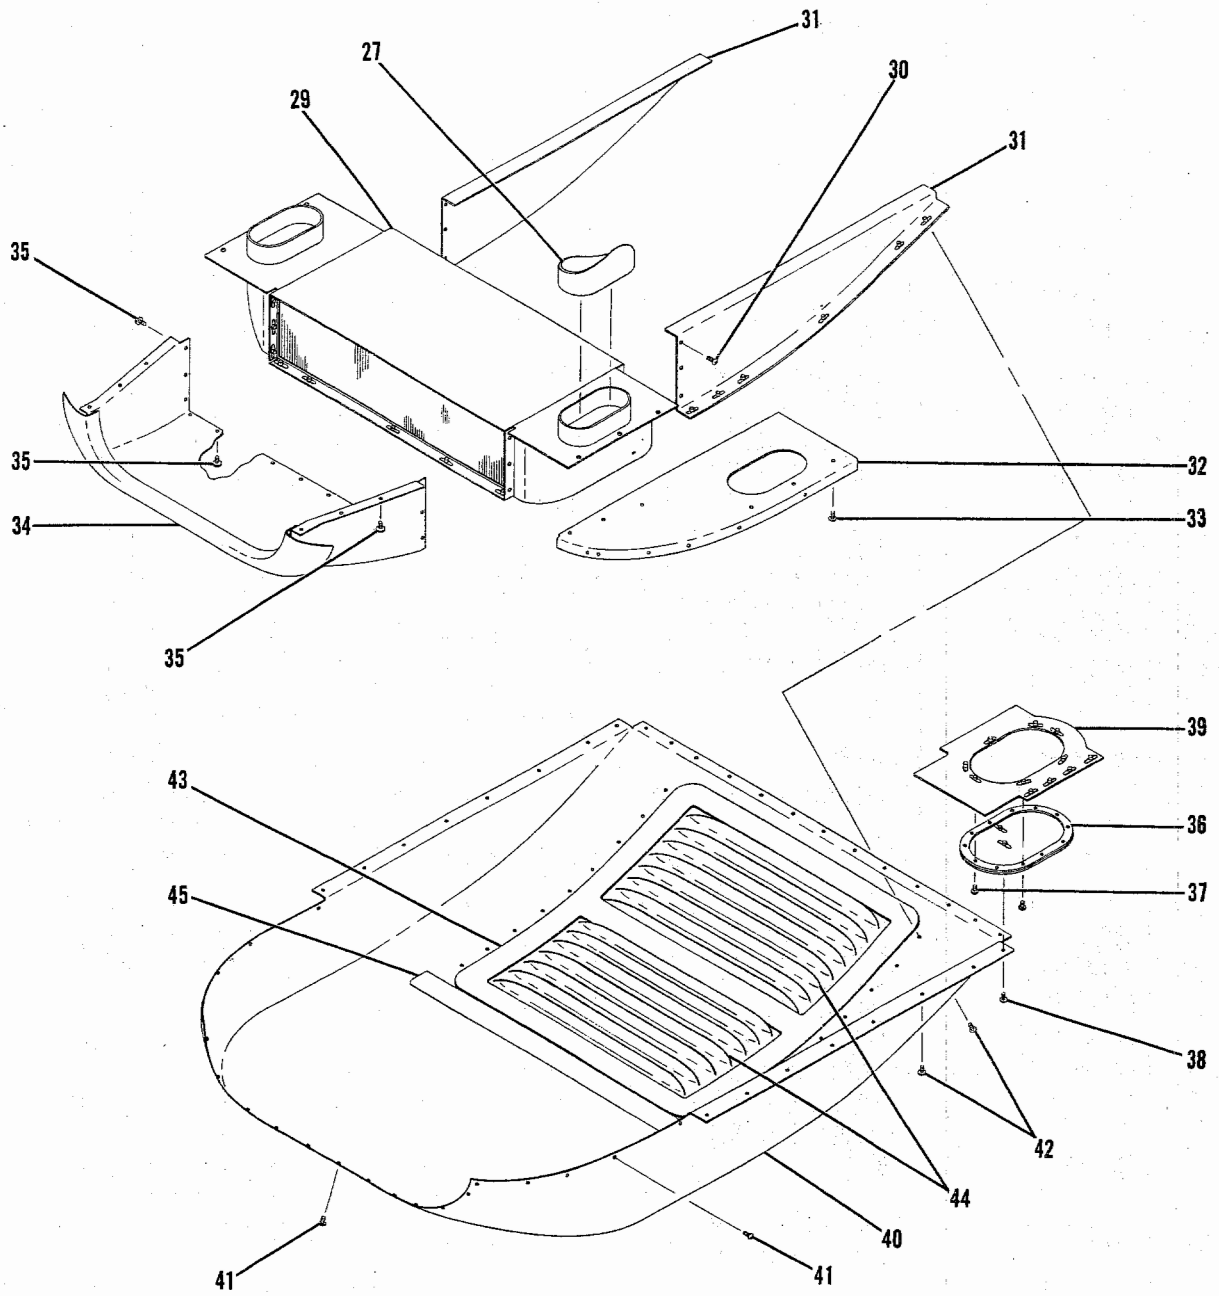

Detail **B**

13 PRESSURIZATION DUMP VALVE ASSEMBLY
55 HEATER AIR DUCT ASSEMBLY

B14143019

Figure 125. Cabin Pressurization & Heating System (Sheet 2)

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
125 -		CABIN PRESSURIZATION AND HEATING SYSTEM	NP	
-1	5355101-1	. VENTURI-SONIC LH & RH	2	K
	5655206-1	. VENTURI ASSY LH & RH	2	L
		ATTACHING PARTS		
-2	4301AA200	. CLAMP-V-BAND	1	
	U4301S12-200	. CLAMP-V-BAND ALT FOR 4301AA200 NUCA	1	
		---*---		
-3	MS20913-1D	. PLUG-LH & RH	2	
-4	5650001-1	. PLATE-SEAL LH	1	
	5650001-2	. PLATE-SEAL RH	1	
		ATTACHING PARTS		
-5	MS27039-0807	. SCREW	5	
		---*---		
-6	5155121-4	. SEAL	AR	
-7	5155121-5	. SEAL	AR	
-8	CM3211-10B36	. DUCT-LH & RH	2	
		ATTACHING PARTS		
-9	AN737RM91	. CLAMP	4	
		---*---		
-10	5316503-21	. DUCT ASSY-LH	1	
	5316503-12	. DUCT ASSY-RH	1	
		ATTACHING PARTS		
-11	MS27039-1-13	. SCREW	16	
-12	600-001-10	. STAT-O-SEAL PKSC	16	
		---*---		
-13	SEE FIG 126	. VALVE ASSY-PRESSURIZATION DUMP	1	
-14	5316503-15	. DUCT ASSY-OVERBOARD LH & RH	2	
-15	5117222-2	. GASKET-LH & RH	4	
-16	85280	. VALVE ASSY-CHECK LH & RH WEU 85280-2 JAA	2	H
	9910008-1	. VALVE ASSY-CHECK LH & RH ALT FOR 85280	2	H
		WEU 85280-2		
	85280-2	. VALVE ASSY-CHECK LH & RH	2	J
-17	5316503-17	. ELBOW ASSY-LH & RH	2	
-18	CM3211-10B 48.0	. DUCT	1	
		ATTACHING PARTS		
-19	AN737RM91	. CLAMP	2	
		---*---		
-20	5316501-26	. VALVE-BYPASS	1	
-21	MS21919DG64	. CLAMP	2	
		ATTACHING PARTS		
-22	MS35206-244	. SCREW	1	
-23	MS21083N08	. NUT	1	
		---*---		
-24	5316501-31	. BRACKET-SUPPORT	1	
-25	CM3211-10B 36.0	. DUCT	1	A
	CM3211-10B 38.0	. DUCT	1	B
		ATTACHING PARTS		
-26	AN737RM91	. CLAMP	2	
		---*---		
-27	S1053E32W16.0	. DUCT-PRESSURIZATION AIR	1	
		ATTACHING PARTS		
-28	S1026BG	. CLAMP	AR	
		---*---		
-29	5316514-1	. EXCHANGER ASSY-HEAT	1	
	72D90	. EXCHANGER ASSY-HEAT ALT FOR 5316514-1 JAA	1	
		ATTACHING PARTS		
-30	MS27039-0808	. SCREW	12	
		---*---		
-31	5316517-3	. BRACKET ASSY-LH	1	
	5316517-4	. BRACKET ASSY-RH	1	
-32	5316517-13	. DOUBLER ASSY-LH FSD 5316517-17	1	C
	5316517-17	. DOUBLER ASSY-LH	1	CD
	5316517-12	. DOUBLER ASSY-RH FSD 5316517-16	1	C
	5316517-16	. DOUBLER ASSY-RH	1	D
		ATTACHING PARTS		
-33	MS27039-1-10	. SCREW	6	
		---*---		
-34	5316507-1	. INLET ASSY-OUTSIDE AIR	1	
		ATTACHING PARTS		
-35	MS27039-0808	. SCREW	15	
		---*---		
-36	5311012-2	. PANEL ASSY-ACCESS	1	
		ATTACHING PARTS		
-37	MS24694S4	. SCREW	2	
-38	MS24694S2	. SCREW	2	
	MS24694S49	. SCREW	10	
		---*---		
-39	5311012-5	. DOUBLER ASSY-ACCESS PLATE	1	
-40	5316517-11	. FAIRING ASSY	1	
		ATTACHING PARTS		
-41	MS24694S8	. SCREW	17	
-42	AN525-839R9	. SCREW	45	
		---*---		

CONTINUED

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
125 -43	5316517-15	. . DOUBLER-LOUVER	1	
-44	5154010-13	. . LOUVER	2	
-45	5316517-10	. . SEAL	1	
-46	S1053E32W12.0	. DUCT BY-PASS VALVE TO NOZZLE	1	
		ATTACHING PARTS		
-47	S1026BG	. CLAMP BKI	AR	
		---*---		
-48	5316501-36	. NOZZLE-PRESSURIZATION AIR	1	
-49	MS21919DG48	. CLAMP-NOZZLE SUPPORT	1	
		ATTACHING PARTS		
-50	MS35206-244	. SCREW	1	
-51	MS21083N08	. NUT	1	
		---*---		
-52	AN743-12	. BRACKET-CLAMP SUPPORT	1	
		ATTACHING PARTS		
-53	MS35206-244	. SCREW	1	
-54	MS21083N08	. NUT	1	
		---*---		
-55	SEE FIG 9	. DUCT ASSY-HEATER AIR	1	
		ATTACHING PARTS		
-56	S1026BG	. CLAMP BKI	AR	
		---*---		
-57	S1053E32W67.0	. DUCT-HEATER AIR	1	F
-58	5316501-19	. CLAMP	2	F
	5316501-21	. CLAMP	2	F G
	5316501-21	ATTACHING PARTS	2	G
-59	MS27039-1-06	. SCREW	1	
-60	MS2108N06	. NUT	1	F
	MS21083N3	. NUT	1	F G
	AN743-12	. BRACKET	1	
	MS21083N3	---*---	1	G
-61	5316501-22	. DUCT ASSY-WYE	1	F
	5316519-1	. ADAPTER-DUCT WYE	1	F G
	5316519-1	ATTACHING PARTS	1	G
-62	S1026BG	. CLAMP BKI	AR	
		---*---		
-63	CM2666T12	. DUCT-LH BKI WYE TO OUTLET	AR	
-64	5316501-21	. CLAMP	2	
		ATTACHING PARTS		
-65	MS27039-0808	. SCREW	1	
-66	MS21083N08	. NUT	1	
		---*---		
-67	5316501-15	. OUTLET ASSY-LH LWR	1	
		ATTACHING PARTS		
-68	MS35206-244	. SCREW	6	
-69	AN960-8L	. WASHER	6	
-70	MS21083N08	. NUT	6	
		---*---		
-71	CM2666T10	. DUCT-RH BKI WYE TO OUTLET	AR	
-72	5316501-14	. OUTLET ASSY-RH LWR	1	
		ATTACHING PARTS		
-73	MS35206-244	. SCREW	6	
-74	AN960-8L	. WASHER	6	
-75	MS21083N08	. NUT	6	
		---*---		
-76	5316501-37	. SUPPORT	1	E
		ATTACHING PARTS		
	MS27039-0808	. SCREW	2	E
	MS21042L08	. NUT	2	E
		---*---		
-77	5316519-2	. ADAPTER-DUCT	1	G
		ATTACHING PARTS		
-78	S1891-64	. CLAMP	1	G
		---*---		
-79	CM2666T12	. DUCT-RH BKI WYE TO ADAPTER	AR	G

A---340-0001 THRU 340-0045
B---340-0046 & ON
C---340-0001 THRU 340-0040
D---340-0041 & ON
E---340-0040 & ON
F---340-0001 THRU 340-0108
G---340-0109 & ON
H---340-0001 THRU 340A0047
J---340A0048 & ON
K---340-0001 TO 340A0001
L---340A0001 & ON

CABIN PRESSURIZATION HEAT VENT AND AIRCONDITIONING SYSTEM

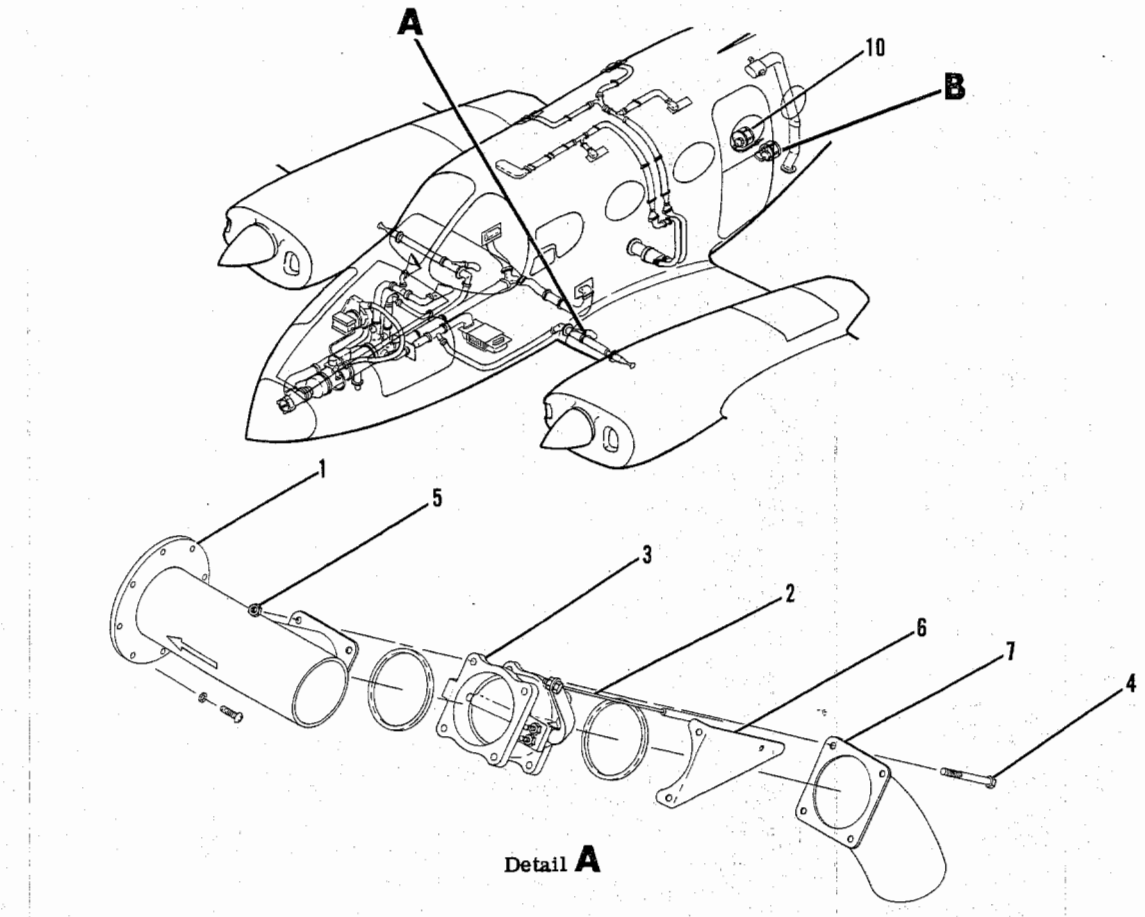

Detail **A**

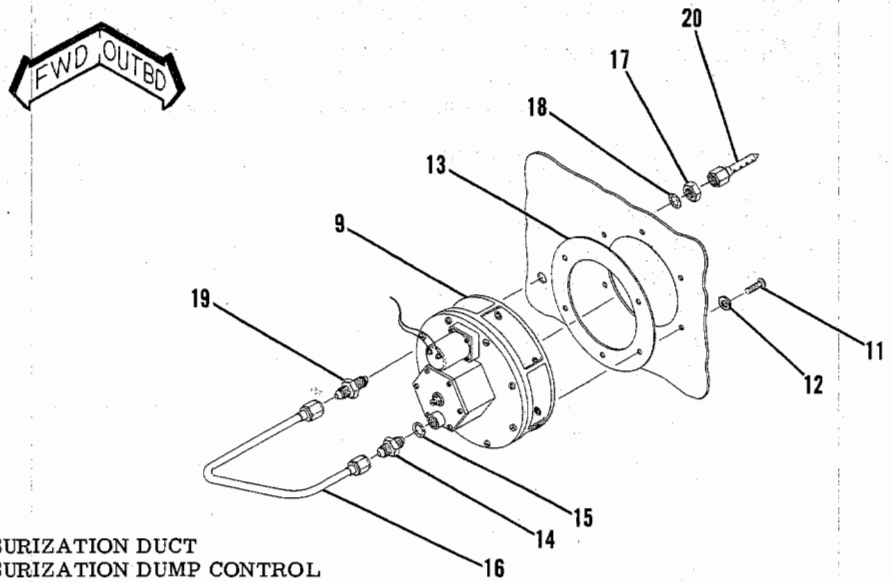

Detail **B**
CODE E

1 PRESSURIZATION DUCT
2 PRESSURIZATION DUMP CONTROL
7 PRESSURIZATION OVERBOARD DUCT
8 PRESSURIZATION SWITCH
41 CONTROL PEDESTAL
48 STATIONARY INSTRUMENT PANEL

14143023R
A14142009
B14142012

Figure 126. Cabin Pressurization Control System (Sheet 1 of 2)

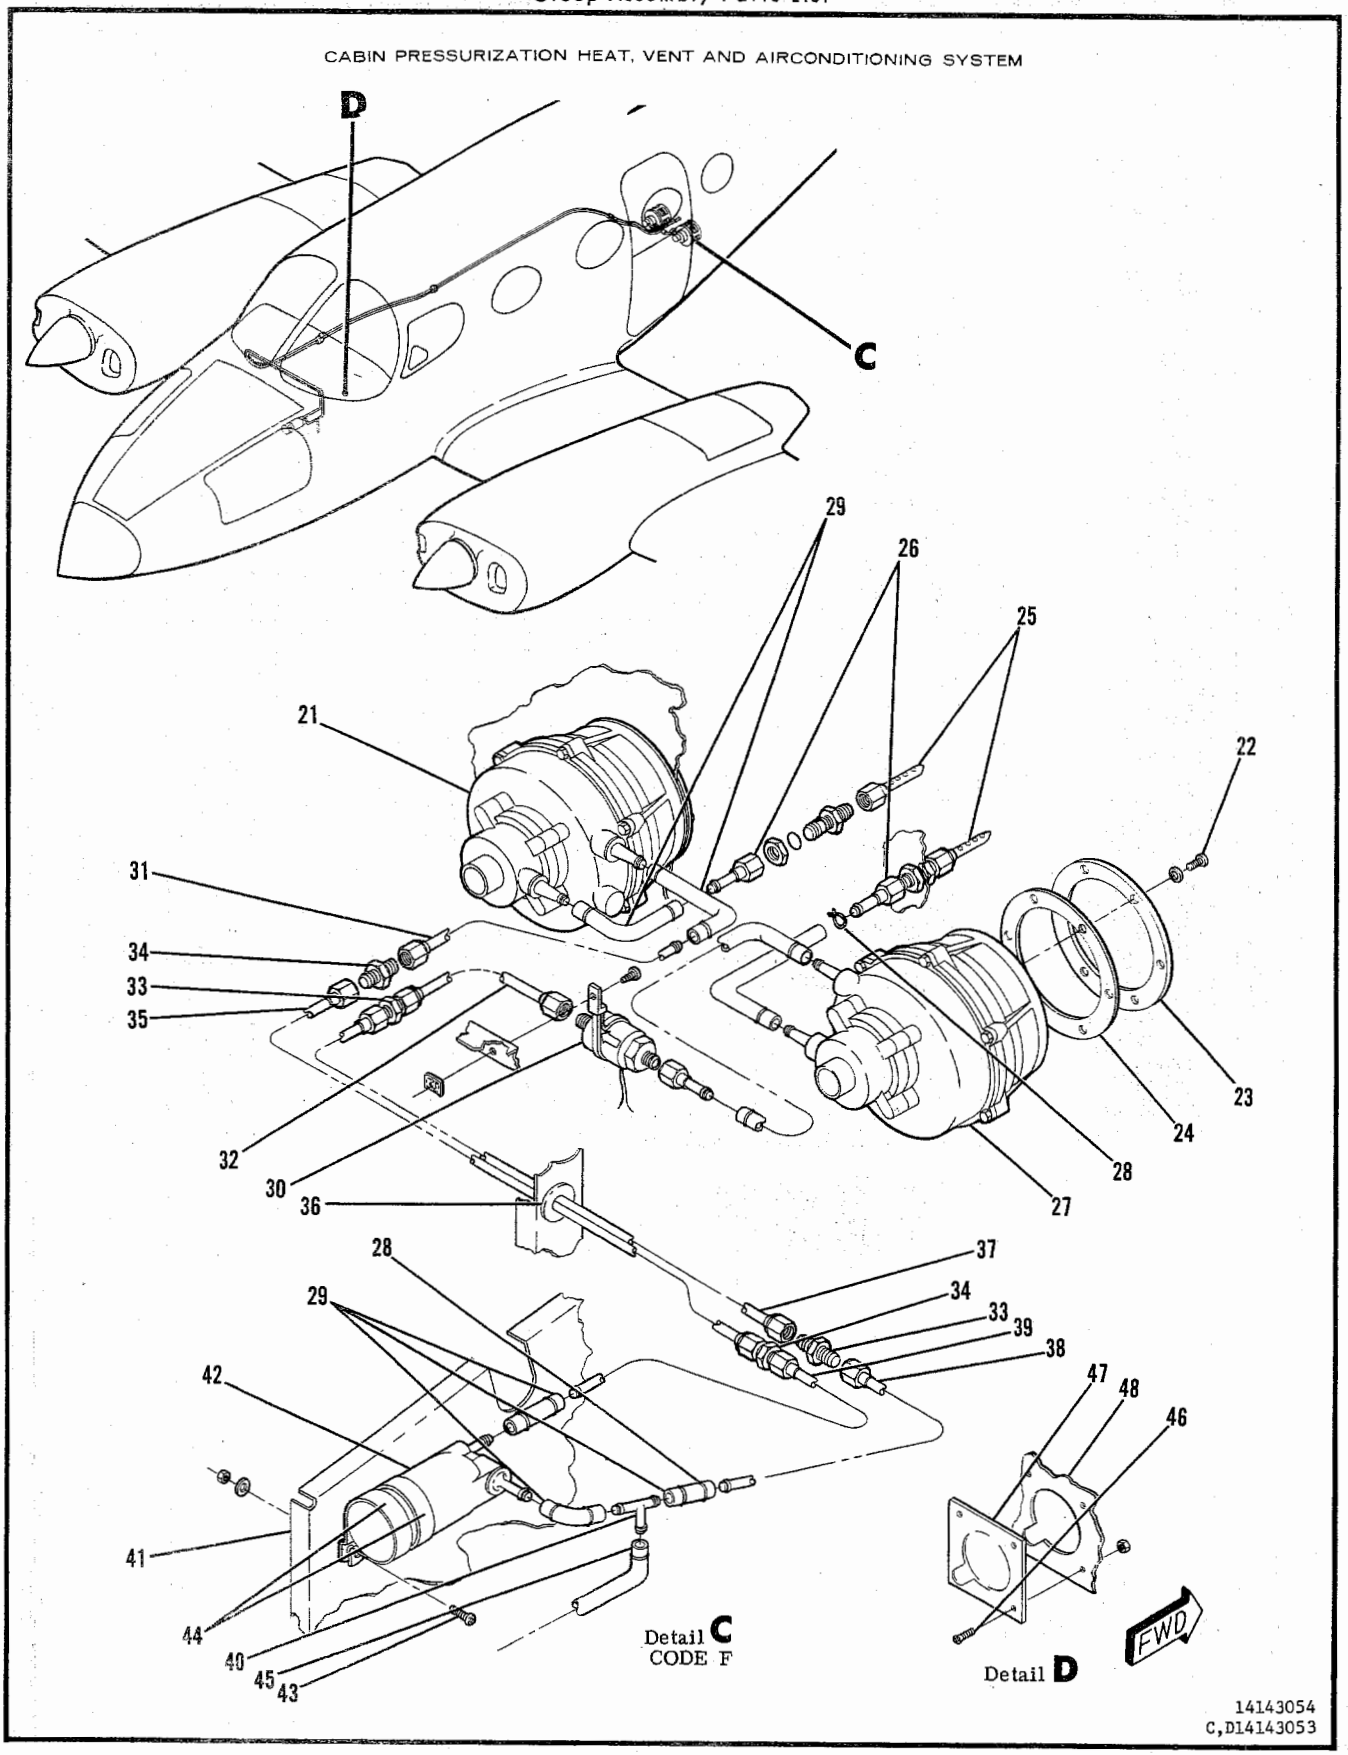

Figure 126. Cabin Pressurization Control System (Sheet 2)

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
126 -		CABIN PRESSURIZATION CONTROL SYSTEM	NP	
-1	SEE FIG 125	. DUCT-PRESSURIZATION	REF	
-2	SEE FIG 61	. CONTROL-PRESSURIZATION DUMP	1	
-3	5117270-1	. VALVE ASSY-DUMP LH FSO 5117270-3	1	A
	5117270-3	. VALVE ASSY-DUMP LH	1	B
	5317270-1	. VALVE ASSY-DUMP LH	1	D
	5117270-2	. VALVE ASSY-DUMP RH FSO 5117270-4	1	A
	5117270-4	. VALVE ASSY-DUMP RH	1	B
	5317270-2	. VALVE ASSY-DUMP RH	1	D
		ATTACHING PARTS		
	2-038S418-6	. O-RING-DUMP VALVE	PKSC	2
-4	AN4-15A	. BOLT		4
-5	MS21083N4	. NUT		4
		---*---		
-6	5316503-23	. BRACKET-LH	1	C
	5316503-20	. BRACKET-RH	1	C
-7	SEE FIG 125	. DUCT-PRESSURIZATION OVERBOARD	REF	
-8	SEE FIG 61	. SWITCH-PRESSURIZATION	1	
-9	88000-2B	. VALVE ASSY-LH SAFETY	HEAC	1
-10	88020-2	. VALVE ASSY-RH OUTFLOW FIXED ISOBARIC	HEAC	1 E
		ATTACHING PARTS		
-11	MS35266-62	. SCREW	6	E
-12	AN960-10L	. WASHER RH ONLY	6	E
		---*---		
-13	5316518-2	. GASKET-LH & RH	2	E
-14	AN815-4D	. UNION-LH & RH	2	E
-15	MS28778-4	. PACKING-LH & RH	2	E
-16	5300107-18	. LINE ASSY-LH & RH	2	E
-17	AN924-4D	. NUT-LH & RH	2	E
-18	250-215-4	. LOCK-O-SEAL-LH & RH	PKSC	2 E
-19	AN837-4D	. UNION-LH & RH	2	E
-20	5617115-1	. LINE ASSY-PICCOLO	2	E
-21	103576-8	. VALVE-OUTFLOW	ARSH	1 F
-22	MS35266-63	. SCREW LH & RH	12	F
	AN960-10L	. WASHER	12	F
-23	5314600-3	. DOUBLER-VALVE SUPPORT LH & RH	2	F
-24	5617113-2	. GASKET LH & RH	2	G
-25	5617115-1	. TUBE ASSY LH & RH	2	F
	AN832-4D	. UNION LH & RH	2	F
	250-215-4	. LOCK-O-SEAL LH & RH	2	F
	AN924-4D	. NUT	2	F
-26	5600108-52	. LINE ASSY	2	F
-27	103576-18	. VALVE-SAFETY	ARSH	1 F
-28	A8S	. CLAMP	CBHC	AR F
-29	CM2939-4	. HOSE BKI		AR F
-30	3423-00-9	. VALVE	DUKA	1 F
-31	5300107-31	. LINE ASSY		1 F
-32	5300107-32	. LINE ASSY		1 F
-33	AN815-4D	. UNION		2 F
-34	AN815-4D	. UNION		2 F
-35	5300107-33	. LINE ASSY		1 F
-36	CM3524-8-20	. GROMMET		17 F
-37	5300107-33	. LINE ASSY		1 F
-38	5300107-35	. LINE ASSY TO CONTROLLER VALVE CONNECTION		1 F
-39	5300107-35	. LINE ASSY TO CONTRCLLER VACUUM CONNECTION		1 F
-40	1K14-4-4-4	. TEE	ABNE	1 F
-41	SEE FIG 20	. CONTROL PEDESTAL	REF	
-42	130306-1	. CONTROLLER	ARSH	1 F
-43	MS27039-1-10	. SCREW		2 F
	AN960-10L	. WASHER		2 F
	MS21044N3	. NUT		2 F
-44	MS9024-31	. CLAMP		2 F
-45	CM2934-4	. HOSE BKI TO VACUUM SOURCE		AR F
-46	MS24693S26	. SCREW		3 F
	MS21045L06	. NUT		3 F
-47	5314102-1	. COVER		1 F
-48	SEE FIGURE 19	. PANEL-STATIONARY INSTRUMENT	REF	

A---340-0001 THRU 340-0009
B---340-0010 THRU 340-0189
C---340-0001 THRU 340-0189
D---340-0190 & ON
E---340-0001 THRU 340-0500
F---340-0501 & ON
G---340-0501 THRU 340-0501

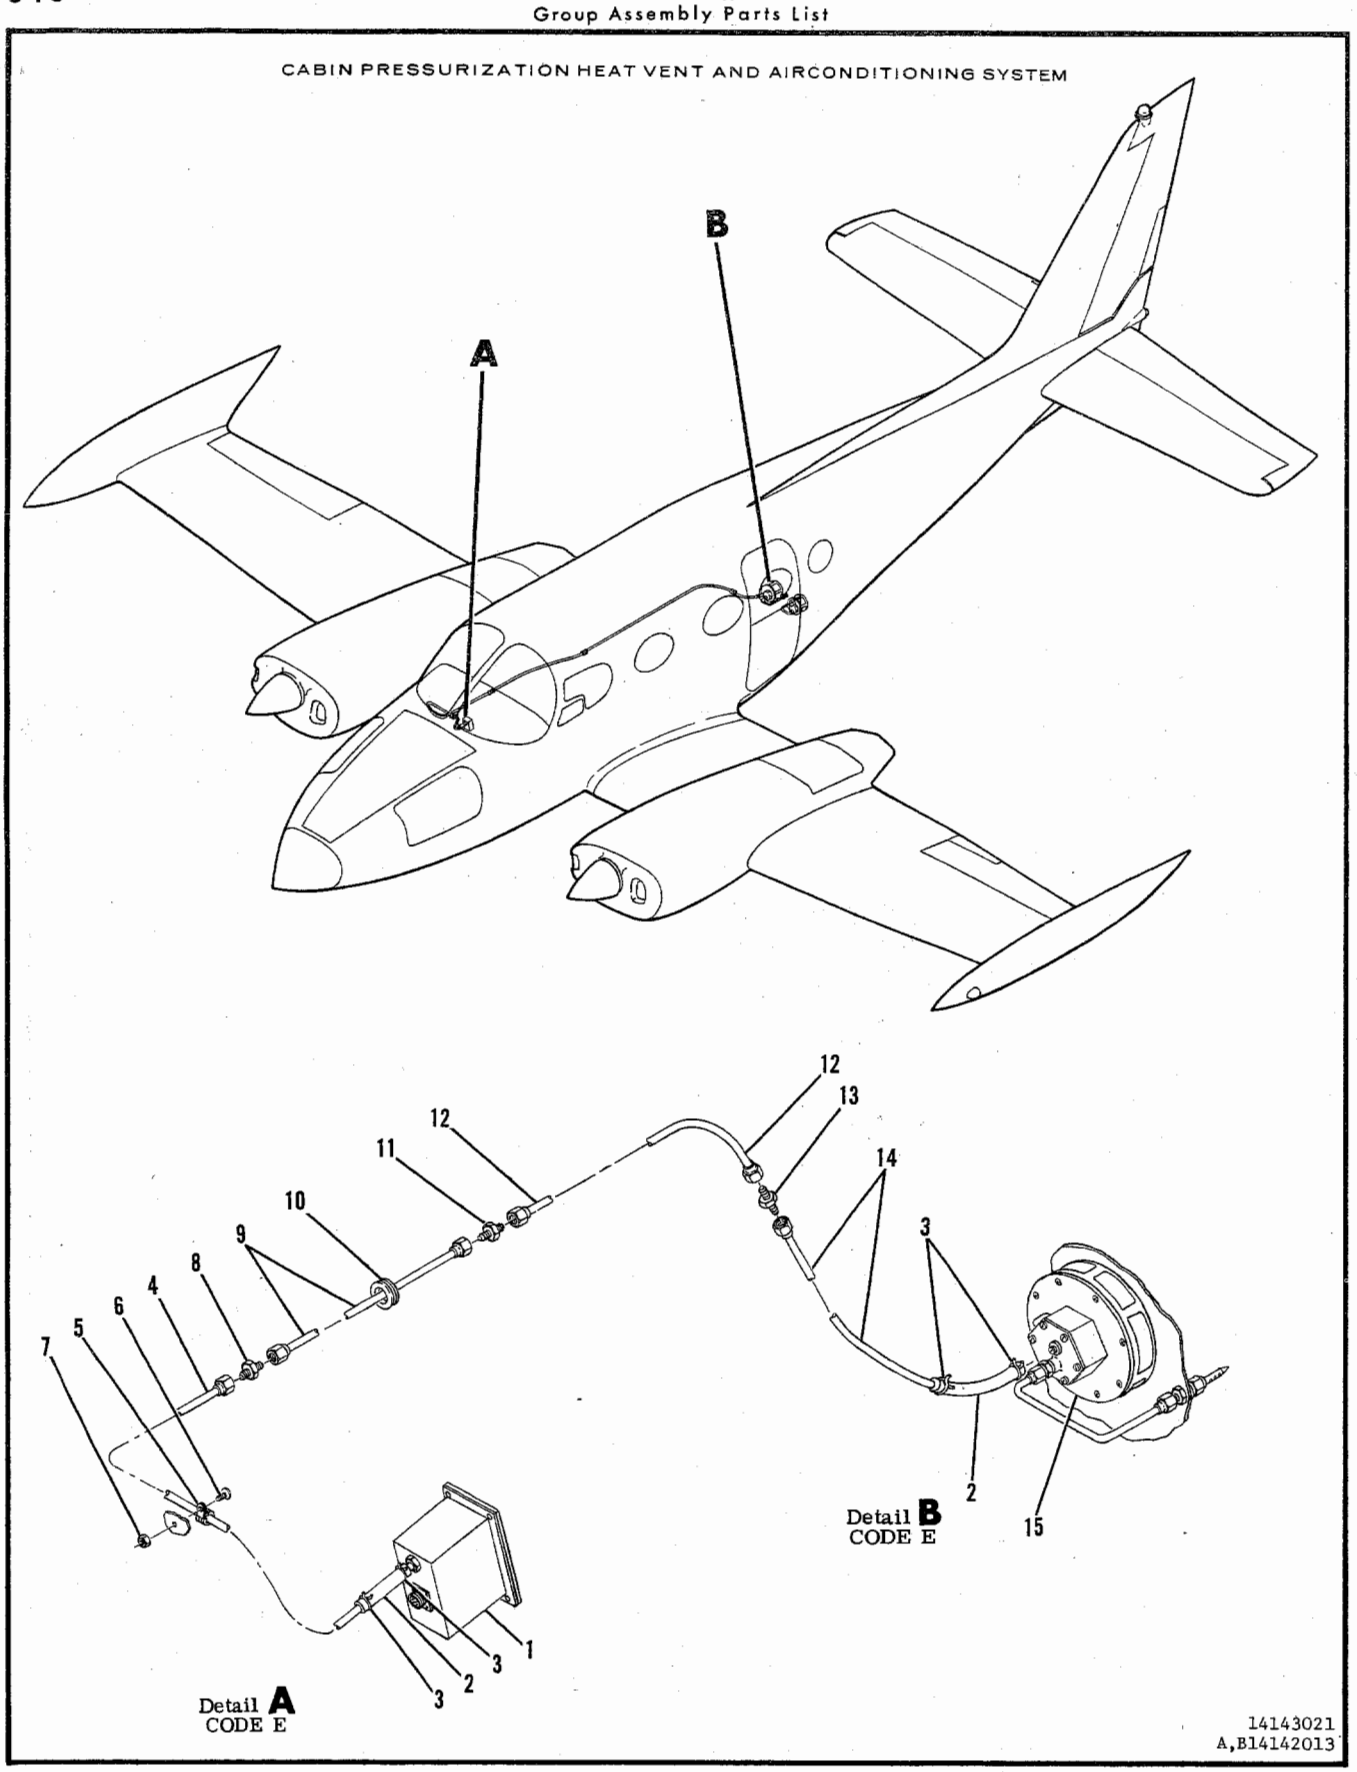

Figure 127. Variable Cabin Pressure Control System (Sheet 1 of 2)

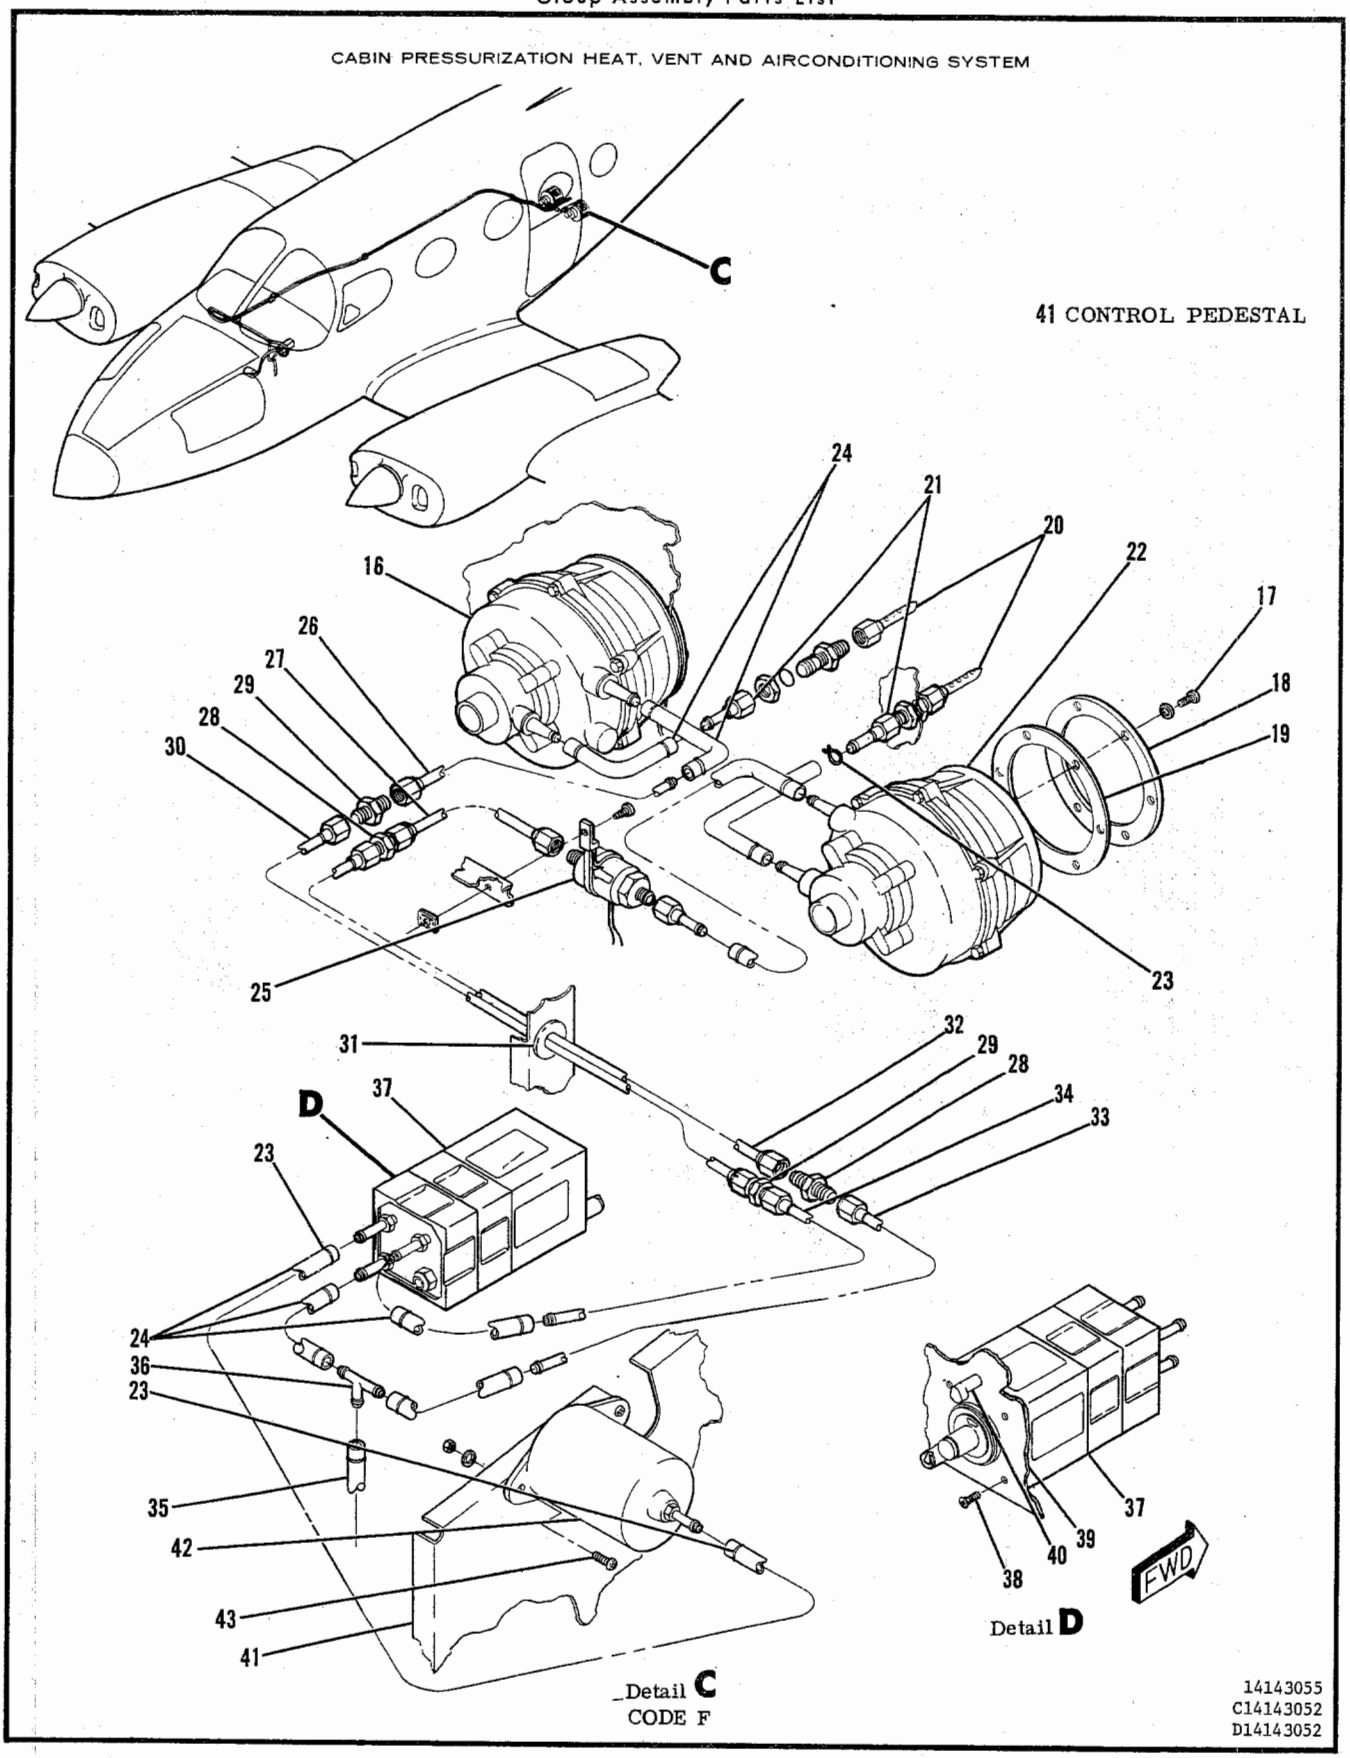

Figure 127. Variable Cabin Pressure Control System (Sheet 2)

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
127 -		VARIABLE CABIN PRESSURE CONTROL SYSTEM	NP	
-1	HE88070-2E	. CONTROLLER-CABIN ALTITUDE RATE FSO 88070-2G1 JAA	1	A
	HE88070-2F	. CONTROLLER-CABIN ALTITUDE RATE FSO 88070-2G1 JAA	1	B
	88070-2G	. CONTROLLER-CABIN ALTITUDE RATE FSO 88070-2G1 JAA	1	C
	88070-2G1	. CONTROLLER-CABIN ALTITUDE RATE JAA	1	D
	85D87-1	. . FILTER JAA	1	D
-2	CM2939-4	. HOSE BKI	AR	
		ATTACHING PARTS		
-3	A8S	. CLAMP CBHC	AR	
		---*---		
-4	5300107-4	. LINE ASSY-LH TO RH UNION	1	E
-5	MS21919DG4	. CLAMP	1	E
		ATTACHING PARTS		
-6	MS27039-0812	. SCREW	1	E
-7	MS21083N08	. NUT	1	E
		---*---		
-8	AN815-4D	. UNION	1	E
-9	5300107-6	. LINE ASSY-RH	1	E
-10	MS35489-15	. GROMMET	15	E
-11	AN815-4D	. UNION	1	E
-12	5300107-8	. LINE ASSY-RH	1	E
-13	AN815-4D	. UNION	1	E
-14	5300107-10	. LINE ASSY-RH UNION TO HOSE	1	E
-15	HE88030-2	. VALVE ASSY-REMOTE CONTROL ISOBARIC HEAC	1	E
-16	103576-1	. VALVE-OUTFLOW WEU 103576-16 ARSH	1	H
	103576-16	. VALVE-OUTFLOW ARSH	1	J
-17	MS35266-63	. SCREW LH & RH	12	F
	AN960-10L	. WASHER	12	F
-18	5314600-3	. DOUBLER-VALVE SUPPORT LH & RH	2	F
-19	5617113-2	. GASKET LH & RH	2	G
-20	5617115-1	. TUBE ASSY LH & RH	2	F
	AN832-4D	. UNION LH & RH	2	F
	250-215-4	. LOCK-O-SEAL LH & RH	2	F
	AN924-4D	. NUT	2	F
-21	5600108-52	. LINE ASSY	2	F
-22	103576-4	. VALVE-SAFETY WEU 103576-18 ARSH	1	H
	103576-18	. VALVE-SAFETY ARSH	1	J
-23	A8S	. CLAMP CBNC	AR	F
-24	CM2939-4	. HOSE BKI	AR	F
-25	3423-00-9	. VALVE	1	F
-26	5300107-31	. LINE ASSY	1	F
-27	5300107-32	. LINE ASSY	1	F
-28	AN815-4D	. UNION	2	F
-29	AN815-4D	. UNION	2	F
-30	5300107-33	. LINE ASSY	1	F
-31	CM3524-8-20	. GROMMET	17	F
-32	5300107-33	. LINE ASSY	1	F
-33	5300107-35	. LINE ASSY TO CONTROLLER VALVE CONNECTION	1	F
-34	5300107-35	. LINE ASSY TO CONTROLLER VALVE CONNECTION	1	F
-35	CM2939-4	. HOSE BKI TO VACUUM SOURCE	AR	F
	A8S	. CLAMP CBNC	AR	F
-36	1K14-4-4-4	. TEE ABNE	1	F
-37	130360-1	. CONTROLLER ARSH	1	F
	14323	. . FILTER ARSH	1	F
	S9028E905	. . PACKING ARSH	1	F
-38	MS24693S26	. SCREW	3	F
-39	SEE FIGURE 19	. PANEL-STATIONARY INSTRUMENT	REF	
-40	CM2990G1	. LIGHT ASSY-POST	1	F
-41	SEE FIGURE 20	. CONTROL PEDESTAL	REF	
-42	131358-2	. TANK-VOLUME ARSH	1	F
-43	MS27039-1-10	. SCREW	2	F
	AN960-10L	. WASHER	2	F
	MS21044N3	. NUT	2	

A---340-0001 THRU 340-0157
B---340-0158 THRU 340-0251
C---340-0252 THRU 340-0300
D---340-0301 THRU 340-0500
E---340-0001 THRU 340-0500
F---340-0501 & ON
G---340-0501 THRU 340-0501
340-0554 & ON
H---340-0501 THRU 340-0553
J---340-0554 & ON

CABIN PRESSURIZATION HEAT VENT AND AIRCONDITIONING SYSTEM

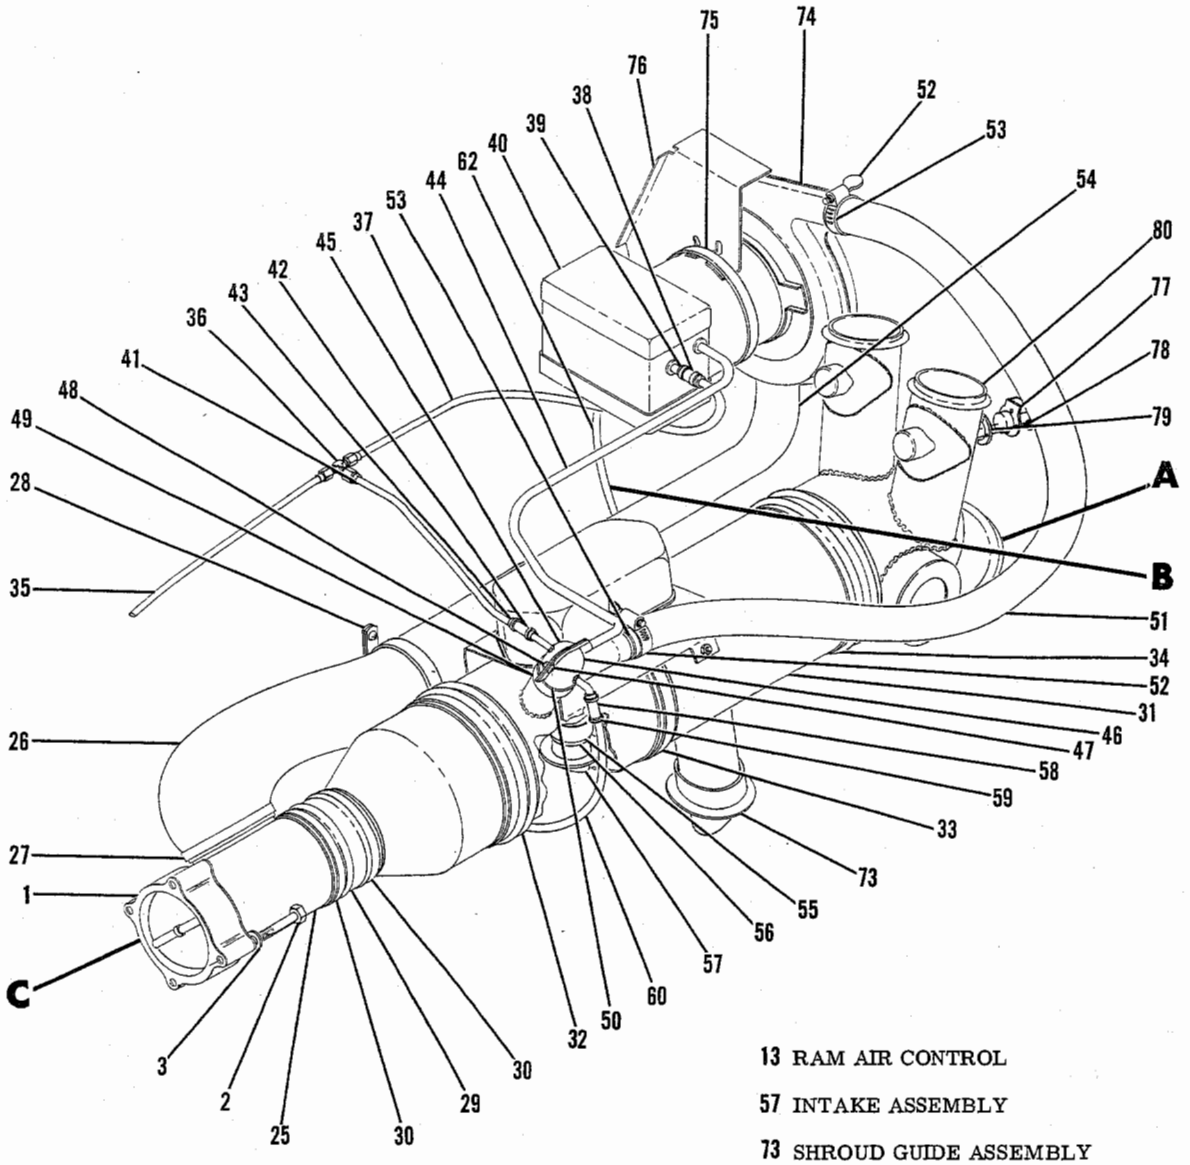

13 RAM AIR CONTROL

57 INTAKE ASSEMBLY

73 SHROUD GUIDE ASSEMBLY

76 BLOWER SUPPORT BRACKET

93 ADAPTER ASSEMBLY

106 ADAPTER ASSEMBLY

116 ADAPTER ASSEMBLY

120 HEATER PRESSURIZATION AIR DUCT

Figure 128. Heater Plenum and Defrost Installation (Sheet 1 of 2)

CABIN PRESSURIATION HEAT VENT AND AIRCONDITIONING SYSTEM

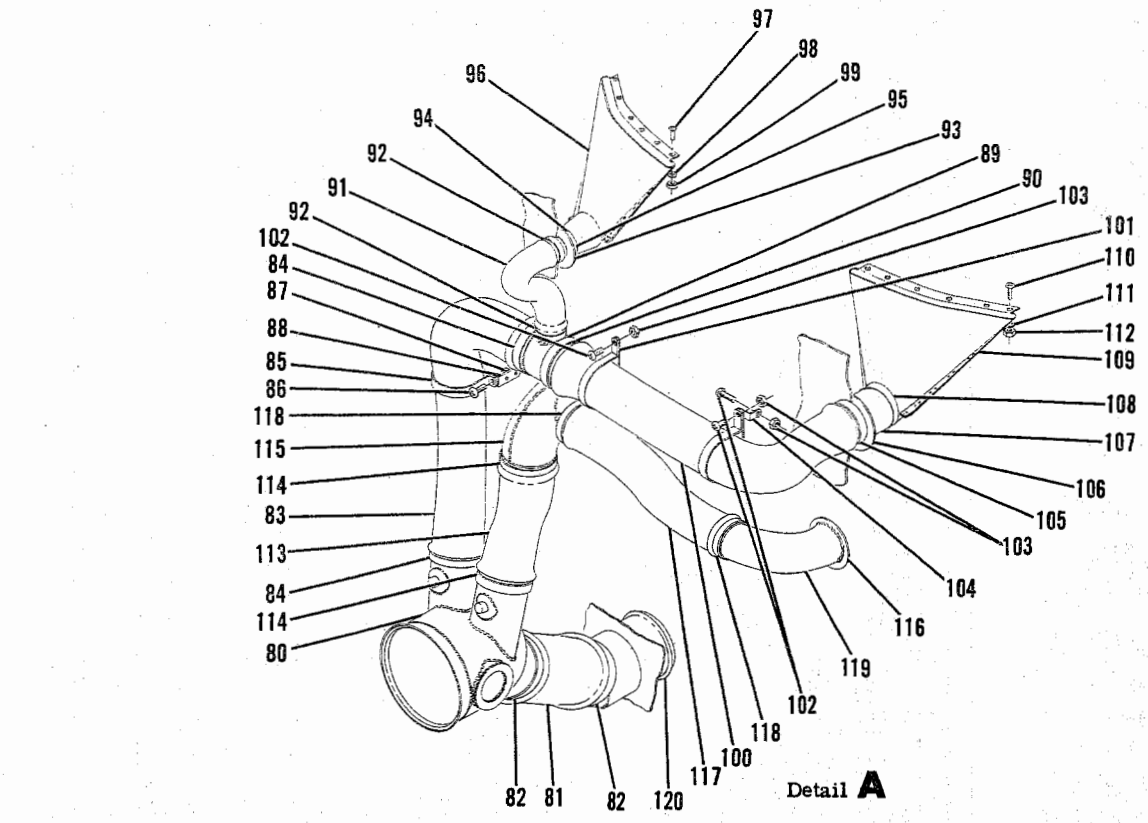

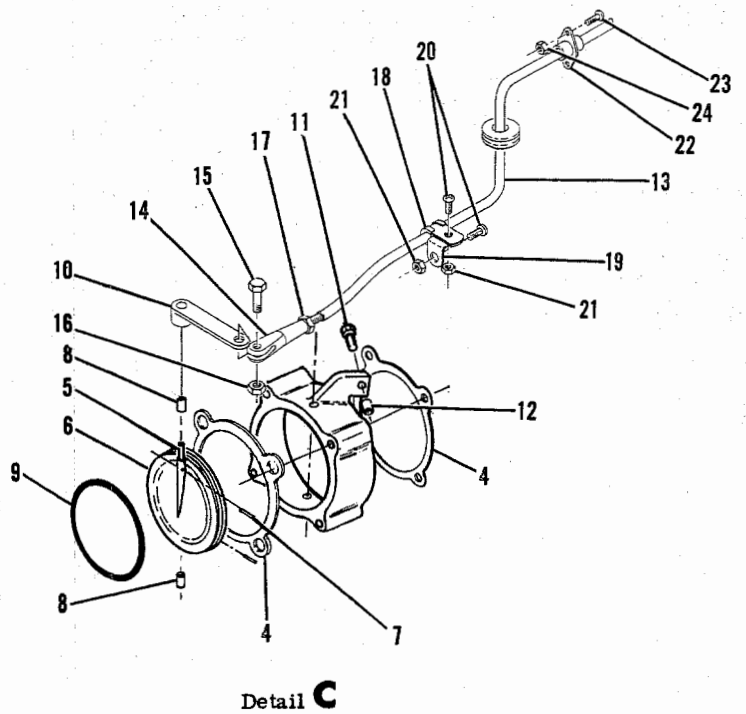

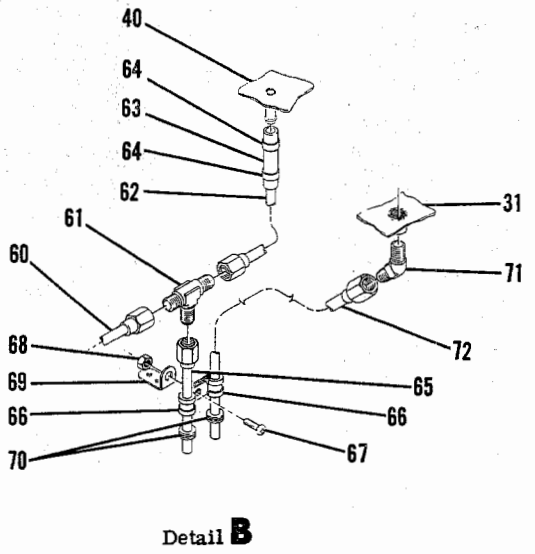

Figure 128. Heater Plenum and Defrost Installation (Sheet 2)

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
128 -			HEATER PLENUM AND DEFROST INSTALLATION	NP	
-1	5117234-4		. VALVE ASSY-RAM AIR	1	
			ATTACHING PARTS		
-2	AN4-17A		. BOLT	4	
-3	AN960-416		. WASHER	4	
-4	5117104-3		. GASKET-RAM AIR VALVE	2	
			---*---		
-5	5117234-3		. . SHAFT	1	
-6	5117236-1		. . DISC	1	
-7	MS16562-220		. . PIN	2	
-8	S1003-9A		. . BEARING	2	
-9	MS28775-342		. . PACKING	1	
-10	5117254-2		. . ARM	1	
-11	NAS428-3-6		. . BOLT	1	
-12	MS21209F1-15		. . INSERT	1	
-13	SEE FIG 61		. CONTROL-RAM AIR	REF	
			ATTACHING PARTS		
-14	AN665-21R		. CLEVIS	1	
-15	AN3-6A		. BOLT	1	
-16	MS21083N3		. NUT	1	
-17	AN315-6R		. NUT	1	
			---*---		
-18	MS21919DG4		. CLAMP-RAM AIR CONTROL	1	
			ATTACHING PARTS		
-19	AN743-12		. BRACKET	1	
-20	MS27039-0810		. SCREW	1	
-21	MS21042L08		. NUT	1	
			---*---		
-22	S45A12		. SEAL-RAM AIR CONTROL STA 100.00	NYMC	1
			ATTACHING PARTS		
-23	MS27039-0808		. SCREW	1	
-24	MS21042N08		. NUT	1	
			---*---		
	MS35489-11		. GROMMET	1	
-25	5316502-4		. TEE ASSY	1	
-26	S1053E28W		. HOSE-TEE ASSY TO STA 100.00 BKI	AR	
-27	CM2949LS120		. CLAMP	2	
-28	MS21919DG56		. CLAMP STA 62.00 & 77.00	2	
			ATTACHING PARTS		
	MS27039-0810		. SCREW	1	
	MS21042L08		. NUT	1	
			---*---		
-29	CM3213-16		. SLEEVE-FLEXIBLE BKI	AR	
			ATTACHING PARTS		
-30	CM2949LS136		. CLAMP	2	
			---*---		
-31	9910088-13	#	. HEATER ASSY	1	
			ATTACHING PARTS		
-32	5117228-5		. CLAMP ASSY-FWD	1	
	0813839-1		. STRAP ASBESTOS	1	
	MS27039-0812		. SCREW	1	
	MS21042L08		. NUT	1	
-33	5316502-34		. STRAP-CTR STA 77.00	1	
	0813839-1		. STRAP ASBESTOS	1	
	MS35206-244		. SCREW	1	
			---*---		
-34	9910088-8		. CLAMP ASSY-AFT	1	
-35	5300108-9		. LINE ASSY-VENT TEE TO OVERBOARD	1	
-36	AN824-4D		. TEE	1	
-37	5300108-7		. LINE ASSY-TEE TO FUEL PUMP SHROUD HOSE	1	
-38	S51-4		. HOSE BKI LINE TO FUEL PUMP SHROUD	AR	
			ATTACHING PARTS		
-39	NAS397-10		. CLAMP	2	
			---*---		
-40	9910088-10		. SHROUD-FUEL PUMP	1	
-41	5300108-8		. LINE ASSY-TEE TO SHROUD HOSE	1	
-42	S51-4		. HOSE-SHROUD HALF BKI	AR	
			ATTACHING PARTS		
-43	NAS397-10		. CLAMP	2	
			---*---		
-44	5300108-2		. LINE ASSY-FUEL PUMP TO SHROUD	1	
	AN816-4D		. NIPPLE	1	
-45	5117278-2		. SHROUD HALF ASSY-INLET	1	
-46	5117278-1		. SHROUD HALF ASSY-OUTLET	1	
-47	S1021Z4-6		. SCREW	2	
-48	NAS446-1-3		. NUT	2	
-49	AN737TW56		. CLAMP	1	
-50	5117102-5		. SEAL	1	
-51	5316502-36		. HOSE-FLEX SHROUD TO COMBUSTION BLOWER	1	
			ATTACHING PARTS		
-52	AN737TW56		. CLAMP	2	
-53	5316502-8		. SEAL	2	
			---*---		
-54	5316502-7		. HOSE-FLEX COMBUSTION BLOWER TO INTAKE	1	
			ATTACHING PARTS		
-55	AN737TW56		. CLAMP	2	
-56	5316502-8		. SEAL	2	
			---*---		
-57	SEE FIG 3		. INTAKE ASSY	1	
-58	S51-4		. HOSE BKI SHROUD HALF TO DRAIN LINE	AR	
			ATTACHING PARTS		
-59	NAS397-10		. CLAMP	2	
			---*---		
-60	5300108-3		. LINE ASSY-SHROUD DRAIN	1	
-61	AN824-4D		. TEE	1	
-62	5300108-5		. LINE ASSY-FUEL PUMP DRAIN	1	
-63	S51-4		. HOSE BKI DRAIN LINE TO FUEL PUMP	AR	
			ATTACHING PARTS		
-64	NAS397-10		. CLAMP	2	
			---*---		

CONTINUED

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
128 -65	5300108-4	. LINE ASSY-DRAIN	1	
-66	MS21919DG4	. CLAMP	2	
		ATTACHING PARTS		
-67	MS27039-0810	. SCREW	1	
-68	MS21083N08	. NUT	1	
-69	AN743-13	. BRACKET	1	
		---*---		
-70	MS35489-6	. GROMMET	2	
-71	MS20822-4K	. ELBOW-HEATER DRAIN LINE	1	
-72	5300108-6	. LINE ASSY-HEATER DRAIN	1	
-73	SEE FIG 3	. GUIDE ASSY-SHROUD	1	
-74	9910088-14	. BLOWER ASSY-COMBUSTION AIR	1	
		ATTACHING PARTS		
-75	CM2949LS120	. CLAMP	1	
	0813742-3	. STRIP-RUBBER	1	
		---*---		
-76	SEE FIG 3	. BRACKET-BLOWER SUPPORT	1	
-77	9910088-5	. SWITCH ASSY-THERMOSTAT	1	
		ATTACHING PARTS		
-78	MS24694S48	. SCREW	4	
	AN960-10L	. WASHER	4	
		---*---		
-79	5316502-9	. GASKET-THERMOSTAT SWITCH	1	
-80	5316502-2	. PLENUM ASSY	1	
-81	S1053K32	. HOSE BKI PLENUM TO BHD	AR	
		ATTACHING PARTS		
-82	CM2949LS136	. CLAMP	2	
		---*---		
-83	CM3211-128	. HOSE-FLEXIBLE	1	
	19.50			
-84	AN737TW107	. CLAMP	2	
-85	MS21919DG48	. CLAMP	1	
		ATTACHING PARTS		
-86	MS27039-0804	. SCREW	1	
-87	MS21083N08	. NUT	1	
-88	AN743-13	. BRACKET	1	
		---*---		
-89	5316505-10	. DUCT ASSY	1	
-90	AN737TW91	. CLAMP	1	
-91	CM3211-6B6.7	. HOSE-FLEXIBLE	1	
		ATTACHING PARTS		
-92	AN737TW58	. CLAMP	2	
		---*---		
-93	SEE FIG 9	. ADAPTER ASSY	REF	
-94	CM3213-6	. SLEEVE BKI	AR	
		ATTACHING PARTS		
-95	S1026BG	. CLAMP BKI	AR	
		---*---		
-96	5316505-14	. ADAPTER ASSY-RH DEFROST	1	
		ATTACHING PARTS		
-97	MS35206-226	. SCREW	7	
-98	AN960-6L	. WASHER	7	
-99	MS21083N06	. NUT	7	
		---*---		
-100	CM3211-10B	. HOSE	1	
	36.0			
-101	MS21919DG42	. CLAMP	2	
		ATTACHING PARTS		
-102	MS27039-0808	. SCREW	1	
-103	MS21083N08	. NUT	1	
-104	AN743-13	. BRACKET	1	
		---*---		
-105	AN737TW91	. CLAMP	1	
-106	SEE FIG 9	. ADAPTER ASSY	REF	
-107	CM3213-10	. SLEEVE	AR	
		ATTACHING PARTS		
-108	S1026BG	. CLAMP BKI	AR	
		---*---		
-109	5316505-13	. ADAPTER ASSY-LH DEFROST	1	
		ATTACHING PARTS		
-110	MS35206-226	. SCREW	7	
-111	AN960-6L	. WASHER	7	
-112	MS21083N06	. NUT	7	
		---*---		
-113	CM3211-12B	. HOSE	1	
	10.0			
		ATTACHING PARTS		
-114	AN737TW107	. CLAMP	2	
		---*---		
-115	5316505-5	. DUCT ASSY-RH	1	
-116	SEE FIG 9	. ADAPTER ASSY	REF	
-117	CM3211-10B	. HOSE	1	
	17.0			
		ATTACHING PARTS		
-118	AN737TW91	. CLAMP	2	
		---*---		
-119	5316505-2	. DUCT ASSY-LH	1	
-120	SEE FIG 125	. DUCT-HEATER PRESSURIZATION AIR	REF	
		# SEE CESSNA CRAFTED HEATER SERVICE/PARTS MANUAL FOR BREAKDOWN		

CABIN PRESSURIZATION HEAT, VENT AND AIRCONDITIONING SYSTEM

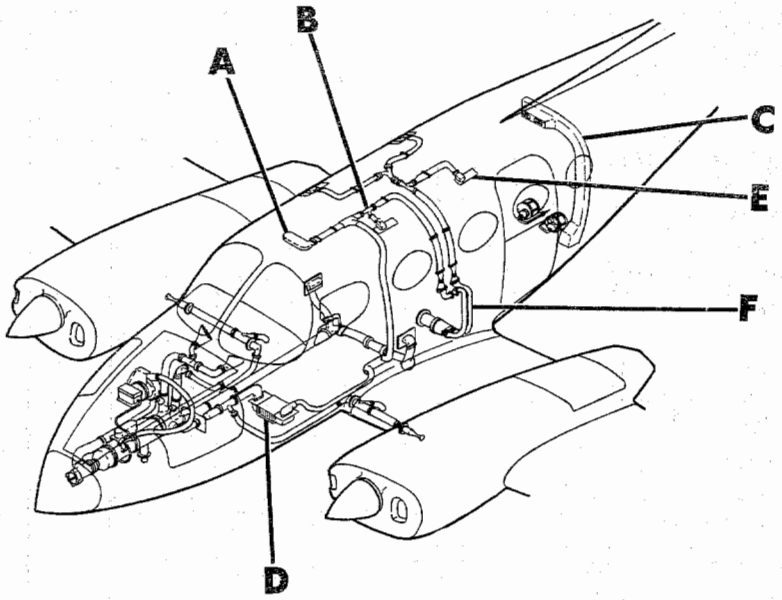

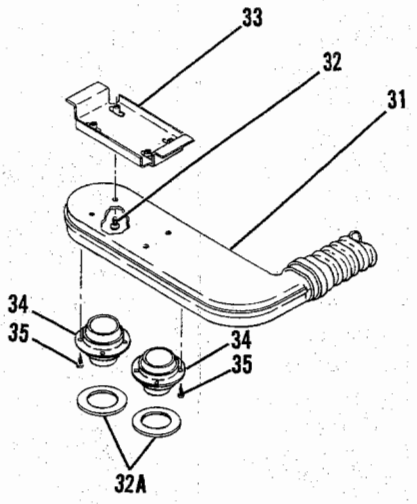

Detail **A**

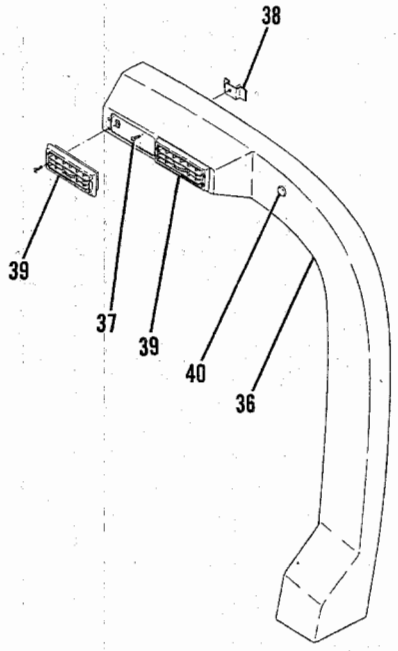

Detail **C**

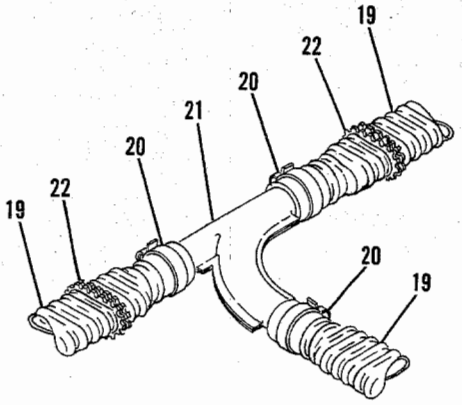

Detail **B**

41 HEAT EXCHANGER ASSY

14143036
A14142016
B14142016
C14142008

Figure 129. Cabin Ventilation System (Sheet 1 of 2)

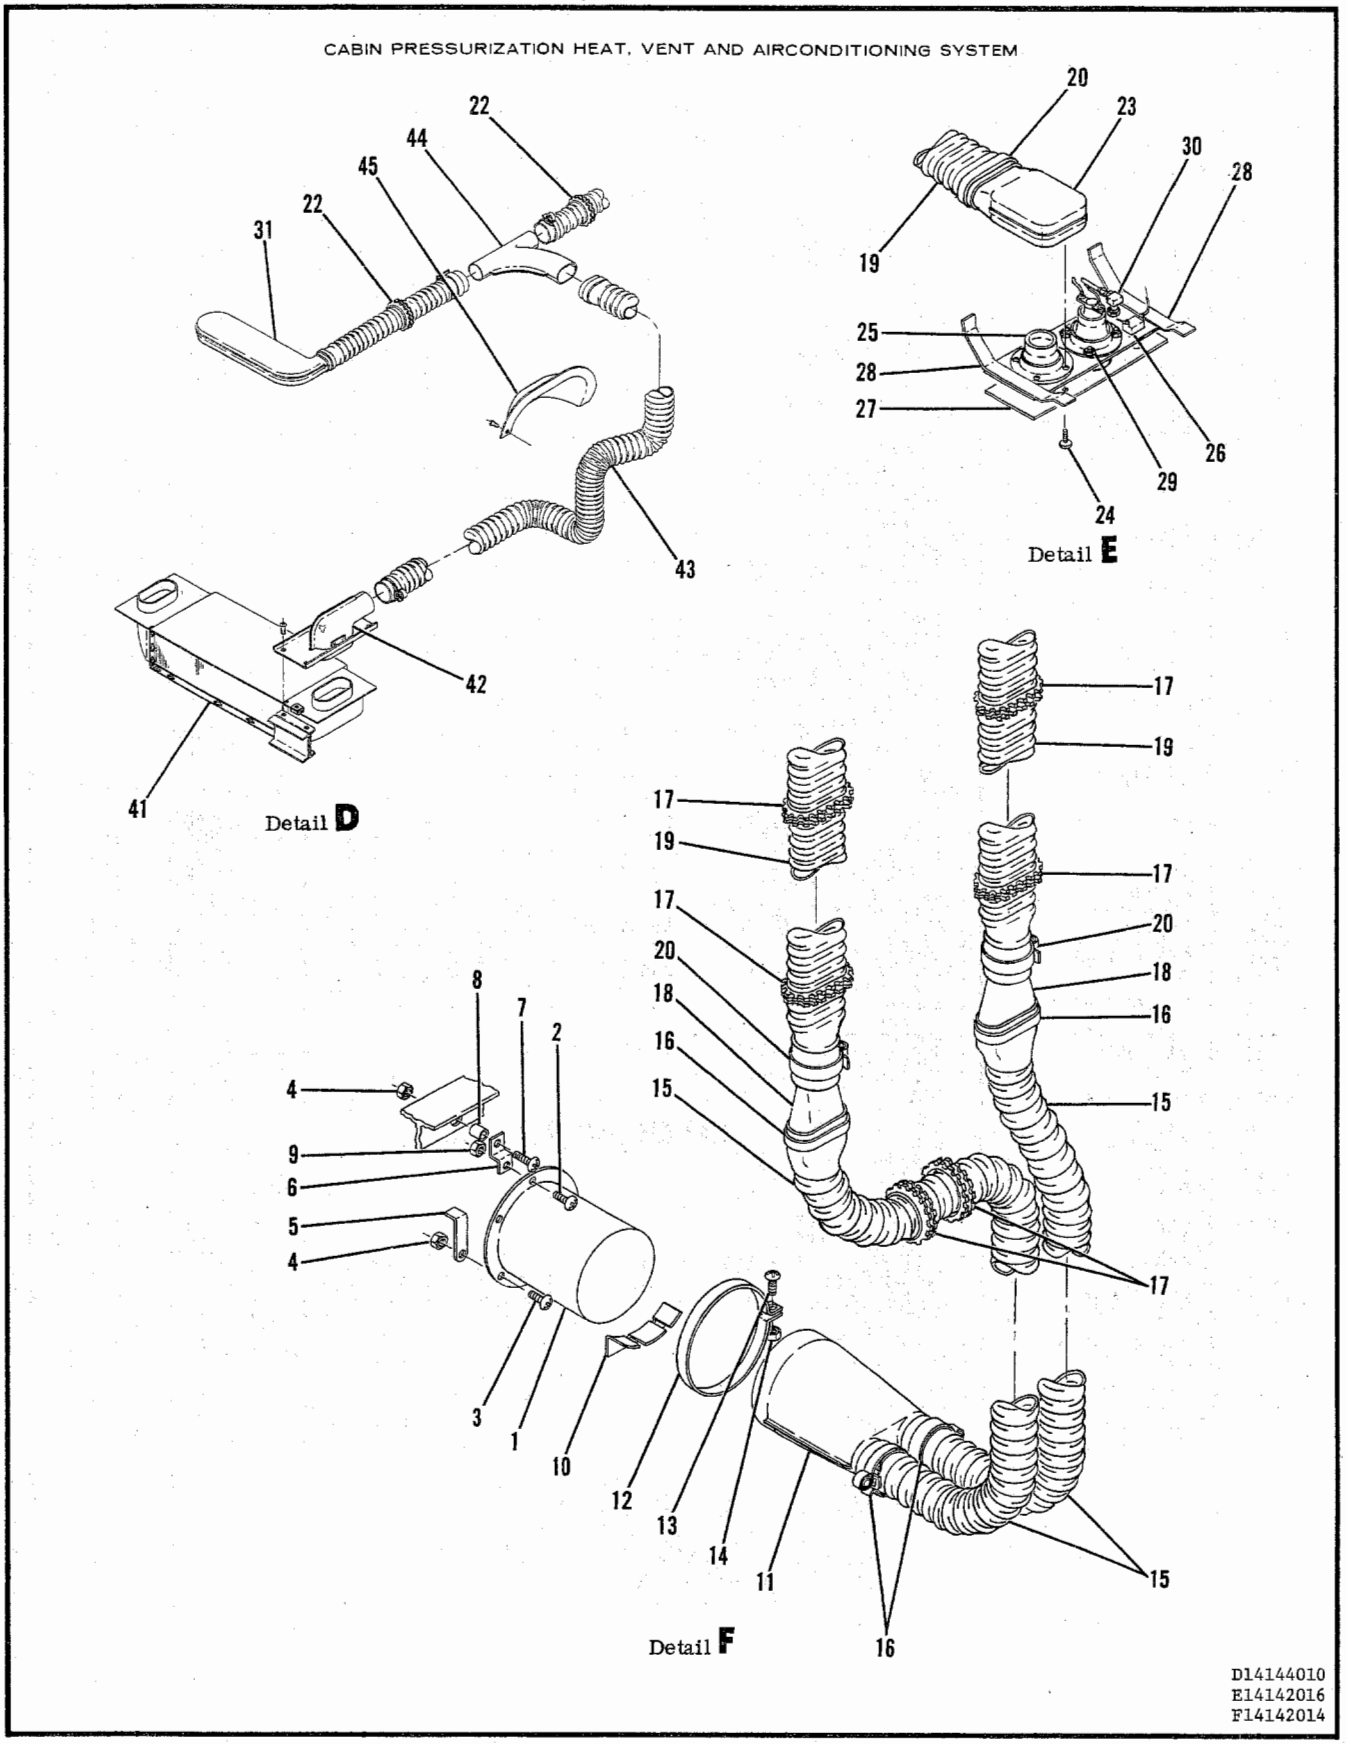

Figure 129. Cabin Ventilation System (Sheet 2)

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
129 -		CABIN VENTILATION SYSTEM	NP	G
-1	9910113-1	. BLOWER ASSY-CABIN AIR	1	
		ATTACHING PARTS		
-2	MS27039-0810	. SCREW	1	
-3	MS27039-0808	. SCREW	1	
-4	MS21042L08	. NUT	2	
-5	5316510-2	. CLIP	1	
		---*---		
	0904-2	. KIT-BRUSH REPLACEMENT	AESP 1	
-6	5316510-5	. SUPPORT-BLOWER	1	
		ATTACHING PARTS		
-7	MS27039-0815	. SCREW	1	
-8	NAS43DD3-34	. SPACER	1	
-9	MS21042L08	. NUT	1	
		---*---		
-10	5316510-3	. SUPPORT-BLOWER	1	
-11	5316510-6	. ADAPTER ASSY-BLOWER	1	
-12	5316510-4	. CLAMP	1	
		ATTACHING PARTS		
-13	MS27039-0810	. SCREW	1	
-14	MS21042L08	. NUT	1	
		---*---		
-15	S1053E16T	. HOSE-LH SIDE FWD & AFT BKI	AR	
		ATTACHING PARTS		
-16	S1026B6	. CLAMP BKI	AR	
		---*---		
-17	S1050-2	. GROMMET BKI	AR	
-18	5316513-4	. ADAPTER	2	
-19	S1053E12T	. HOSE BKI	AR	
		ATTACHING PARTS		
-20	S1026B6	. CLAMP	AR	
		---*---		
-21	5316513-6	. ADAPTER	3	
-22	S1050-1	. GROMMET BKI	AR	
-23	5217552-1	. ADAPTER ASSY-WEMAC	4	A
	5217503-1	. ADAPTER ASSY-WEMAC	4	B
		ATTACHING PARTS		
-24	MS35207-261	. SCREW	WMAC 4	
		---*---		
-25	1945-1	. ESCUTCHEON ASSY-LH	WMAC 3	
	1945	. ESCUTCHEON ASSY-RH	WMAC 3	
		ATTACHING PARTS		
	MS35206-230	. SCREW	4	
	MS21043L06	. NUT	4	
		---*---		
	1944	. . PLATE-ESCUTCHEON LH	WMAC 1	
	1944-1	. . PLATE-ESCUTCHEON RH	WMAC 1	
	2393	. . LIGHT ASSY	WMAC 1	
	2394	. . VALVE ASSY	WMAC 1	
	2392	. . NUT-RETAINING	WMAC 1	
-26	L18366-3	. SWITCH	LDGI 1	
-27	5316508-8	. PLATE-WEMAC SUPPORT	1	
-28	5316513-12	. SUPPORT-ESCUTCHEON LH & RH	2	
-29	SEE FIG 147	. LIGHT ASSY	REF	
-30	SEE FIG 134	. OXYGEN VALVE	REF	
-31	5316513-1	. ADAPTER ASSY-WEMAC PILOTS	1	
		ATTACHING PARTS		
-32	MS27039-0806	. SCREW	4	
		---*---		
-32A	5316508-12	. SUPPORT-WEMAC PILOTS	2	
-33	5316508-6	. BRACKET ASSY-ADAPTER SUPPORT	1	
-34	2394	. VALVE-AIR	WMAC 2	
		ATTACHING PARTS		
-35	MS35206-230	. SCREW	4	
		---*---		
-36	5300938-2	. DUCT ASSY-AFT USED WITH AIRCONDITIONING	1	C
	5300938-6	. DUCT ASSY-AFT USED WITH AIRCONDITIONING	1	D
		ATTACHING PARTS		
-37	S1021Z6-6	. SCREW	4	
-38	5311508-6	. BRACKET	2	
		---*---		
-39	HE81260	. . LOUVER-AIR	JAA 2	C
	100-2M	. . LOUVER-AIR	CAPR 2	D
	154G	. . BEZEL	CAPR 2	D
	5300938-8	. . DOUBLER ASSY-AIR LOUVER	4	D
-40	CM2692-16-2S	. BUTTON-PLUG AIRCONDITIONING DUCT	1	
-41	SEE FIG 125	. EXCHANGER ASSY-HEAT	REF	
-42	5316523-1	. ADAPTER-AIR DUCT	1	E
		ATTACHING PARTS		
	MS27039-0808	. SCREW	4	E
	S1477-08	. NUT	4	E
		---*---		
-43	S1053E16T	. DUCT-AIR BKI	AR	E
-44	5316523-6	. ADAPTER-AIR DUCT	1	E
-45	5316523-9	. COVER-DUCT	1	F
	5316523-10	. COVER-DUCT	1	D

A---340-0001 THRU 340-0177
B---340-0178 THRU 340-0349
C---340-0001 THRU 340-0300
D---340-0301 THRU 340-0349
E---340-0211 THRU 340-0349 & AIRCRAFT MODIFIED BY SK340-7
F---340-0211 THRU 340-0300
G---340-0001 THRU 340-0365

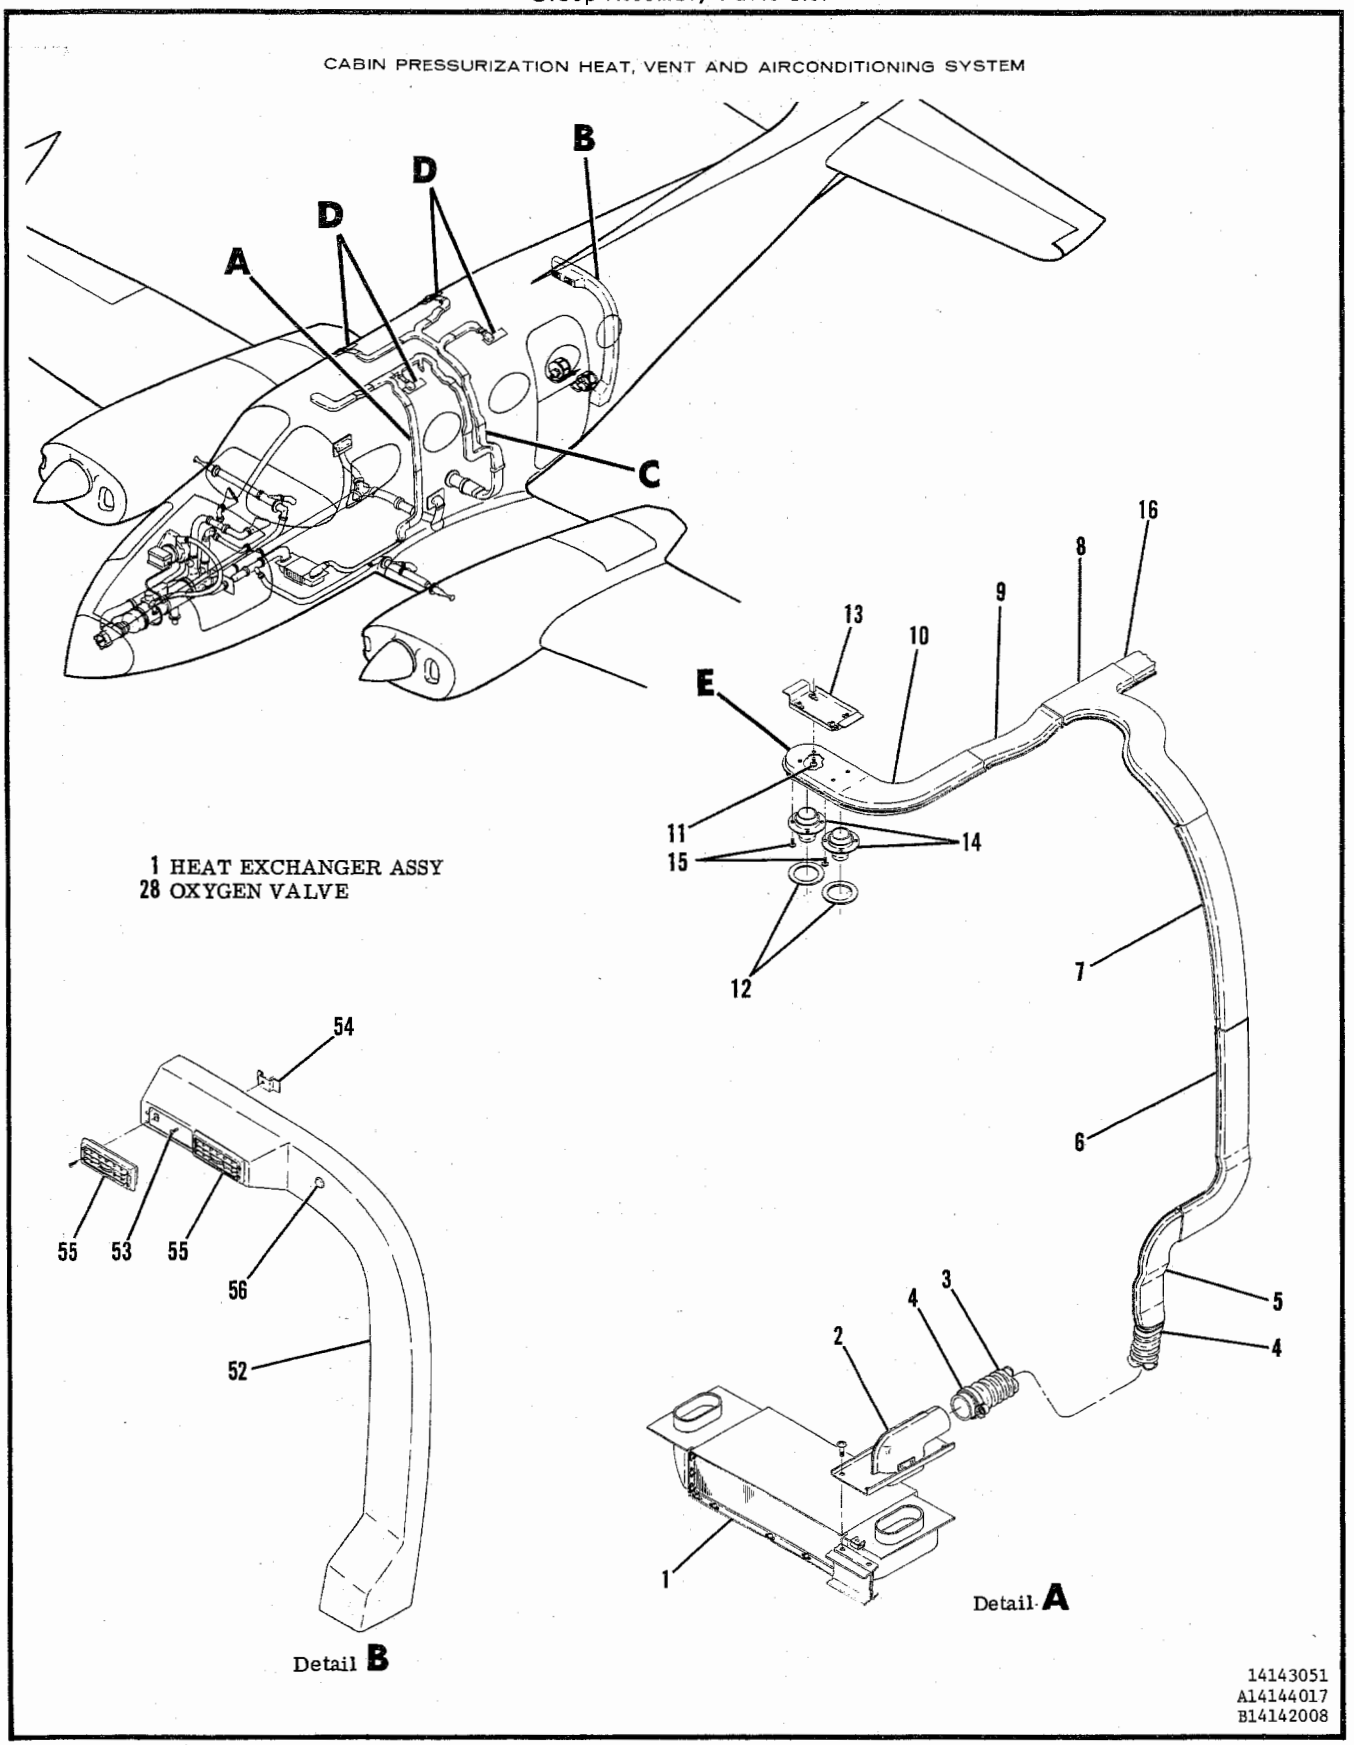

Figure 129A. Cabin Ventilation System (Sheet 1 of 2)

CABIN PRESSURIZATION HEAT, VENT AND AIRCONDITIONING SYSTEM

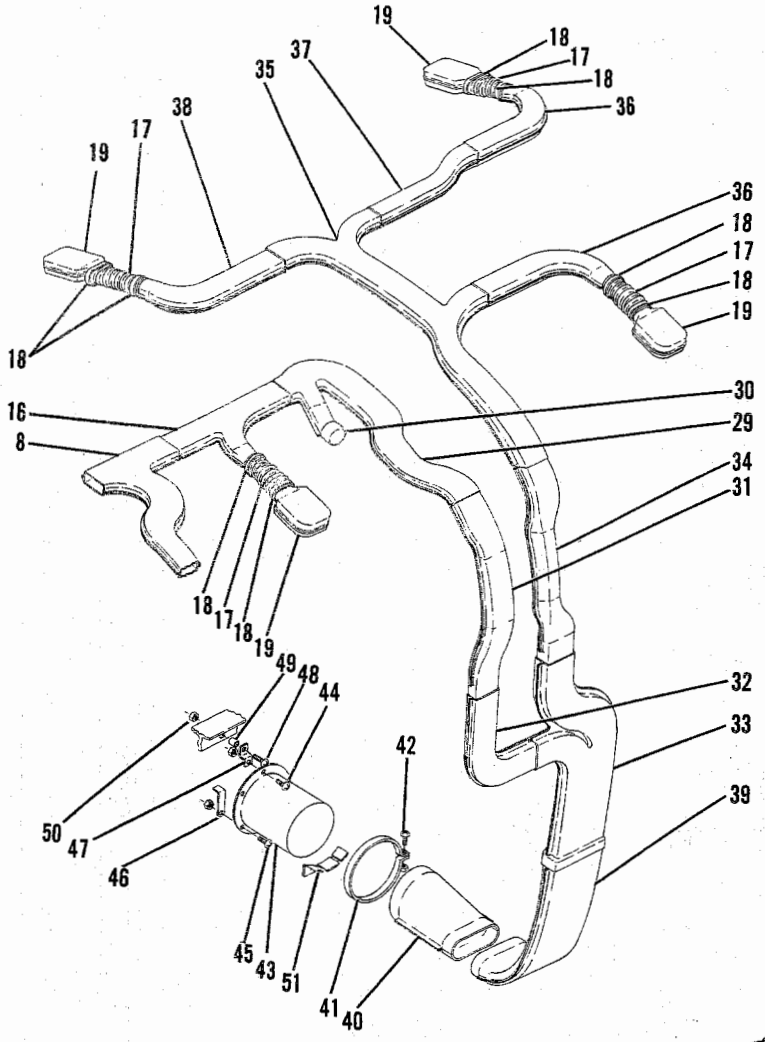

Detail **C**

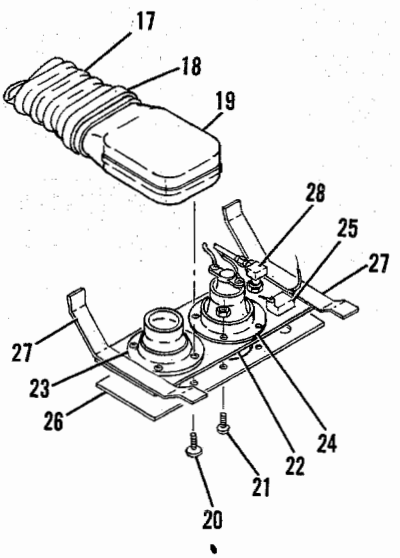

Detail **D**

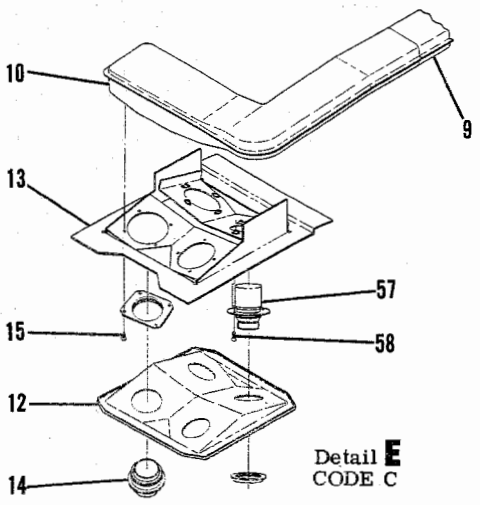

Detail **E**
CODE C

C14144018
D14142016
E10143029

Figure 129A. Cabin Ventilation System (Sheet 2)

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
129A-		CABIN VENTILATION SYSTEM	NP	A
-1	SEE FIG 125	. HEAT EXCHANGER ASSY	REF	
-2	5316523-1	. ADAPTER-AIR DUCT	1	
		ATTACHING PARTS		
	MS27039-0808	. SCREW	4	
	S1477-08	. NUT	4	
		---*---		
-3	S1053E16T	. DUCT-AIR BKI	AR	
-4	S1026BG	. CLAMP BKI	AR	
-5	5316525-61	. DUCT ASSY	1	
-6	5316525-56	. DUCT ASSY	1	
-7	5316525-35	. DUCT ASSY	1	
-8	5316525-29	. DUCT ASSY	1	
	5316525-59	. DUCT ASSY USED WITH AIRCONDITIONING	1	
-9	5316525-32	. DUCT ASSY	1	
-10	5316525-41	. ADAPTER ASSY-WEMAC PILOTS	1	B
	5316004-1	. DUCT ASSY-WEMAC PILOT	1	C
		ATTACHING PARTS		
-11	MS27039-0806	. SCREW	4	
		---*---		
-12	5316508-12	. SUPPORT-WEMAC	2	B
	5319148-7	. COVER-WEMAC & LIGHT	1	D
-13	5316508-6	. BRACKET ASSY-ADAPTER SUPPORT	1	B
	5319148-2	. BRACKET ASSY-SUPPORT	1	D
	5319148-4	. BRACKET	1	E
	5319148-5	. BRACKET ASSY	1	E
	5319148-9	. BRACKET	1	E
-14	2394	. VALVE-AIR	2 WMAC	B
	1968-1	. VALVE-AIR	2 WMAC	C
		ATTACHING PARTS		
-15	MS35206-230	. SCREW	4	
		---*---		
-16	5316525-26	. DUCT ASSY	1	
-17	S1053E12T	. DUCT BKI	AR	
-18	S1026BG	. CLAMP BKI	AR	
-19	5217503-1	. ADAPTER ASSY-WEMAC LH & RH	4	
		ATTACHING PARTS		
-20	MS35207-261	. SCREW	4	
		---*---		
	1945-1	. ESCUTCHEON ASSY-LH	2 WMAC	
	1945	. ESCUTCHEON ASSY-RH	2 WMAC	
		ATTACHING PARTS		
-21	MS35206-230	. SCREW	4	
	MS21043L06	. NUT	4	
		---*---		
-22	1944	. . PLATE-LH	1 WMAC	
	1944-1	. . PLATE-RH	1 WMAC	
-23	2394	. . VALVE ASSY-AIR	1 WMAC	
	2392	. . NUT-RETAINING	1 WMAC	
-24	2393	. . LIGHT ASSY	1 WMAC	
-25	L18366-3	. SWITCH	1 LDGI	
-26	5316508-8	. PLATE-WEMAC SUPPORT LH & RH	4	
-27	5316513-12	. SUPPORT-ESCUTCHEON LH & RH	2	
-28	SEE FIG 134	. OXYGEN VALVE	REF	
-29	5316525-23	. DUCT ASSY	1	
-30	5316525-55	. CAP	1	
-31	5316525-17	. DUCT ASSY	1	
-32	5316525-11	. DUCT ASSY	1	
-33	5316525-67	. DUCT ASSY	1	
-34	5316525-14	. DUCT ASSY	1	
-35	5316525-20	. DUCT ASSY	1	
-36	5316525-50	. DUCT ASSY	2	
-37	5316525-47	. DUCT ASSY	1	
-38	5316525-38	. DUCT ASSY	1	
	5316525-44	. DUCT ASSY USED WITH CTR FWD FACING SEATS	1	
-39	5316525-64	. DUCT ASSY	1	
-40	5316526-1	. ADAPTER ASSY-BLOWER	1	
-41	5316510-4	. CLAMP	1	
		ATTACHING PARTS		
-42	MS27039-0810	. SCREW	1	
	MS21042L08	. NUT	1	
		---*---		
-43	9910113-1	. BLOWER ASSY-CABIN AIR	1	
		ATTACHING PARTS		
-44	MS27039-0810	. SCREW	1	
-45	MS27039-0808	. SCREW	1	
	MS21042L08	. NUT	2	
-46	5316510-2	. CLIP	1	
		---*---		
	0904-2	. KIT-BRUSH & BEARING REPLACEMENT	AEPT	1

CONTINUED

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
129A-47	5316510-5	. SUPPORT-BLOWER	1	
		ATTACHING PARTS		
-48	MS27039-C815	. SCREW	1	
-49	NAS43003-34	. SPACER	1	
-50	MS21042L08	. NUT	1	
		---*---		
-51	5316510-3	. SUPPORT-BLOWER	1	
-52	5300938-6	. DUCT ASSY-AFT USED WITH AIRCONDITIONING	1	
		ATTACHING PARTS		
-53	S1021Z6-6	. SCREW	4	
-54	5311508-6	. BRACKET	2	
		---*---		
-55	100-2M	. . LOUVER-AIR CAPR	2	
	154G	. . BEZEL CAPR	2	
	5300938-8	. . DOUBLER ASSY-AIR LOUVER	4	
-56	CM2692-16-2S	. PLUG BUTTON AIRCONDITIONING DUCT	1	
-57	2585	. LIGHT ASSY-CHART	2	C
-58	MS24693S26	. SCREW	8	C
		A---340-0366 & ON B---340-0366 THRU 340-0500 C---340-0501 & ON D---340-501 TO 340A0001 E---340A0001 & ON		

CABIN PRESSURIZATION HEAT, VENT AND AIRCONDITIONING SYSTEM

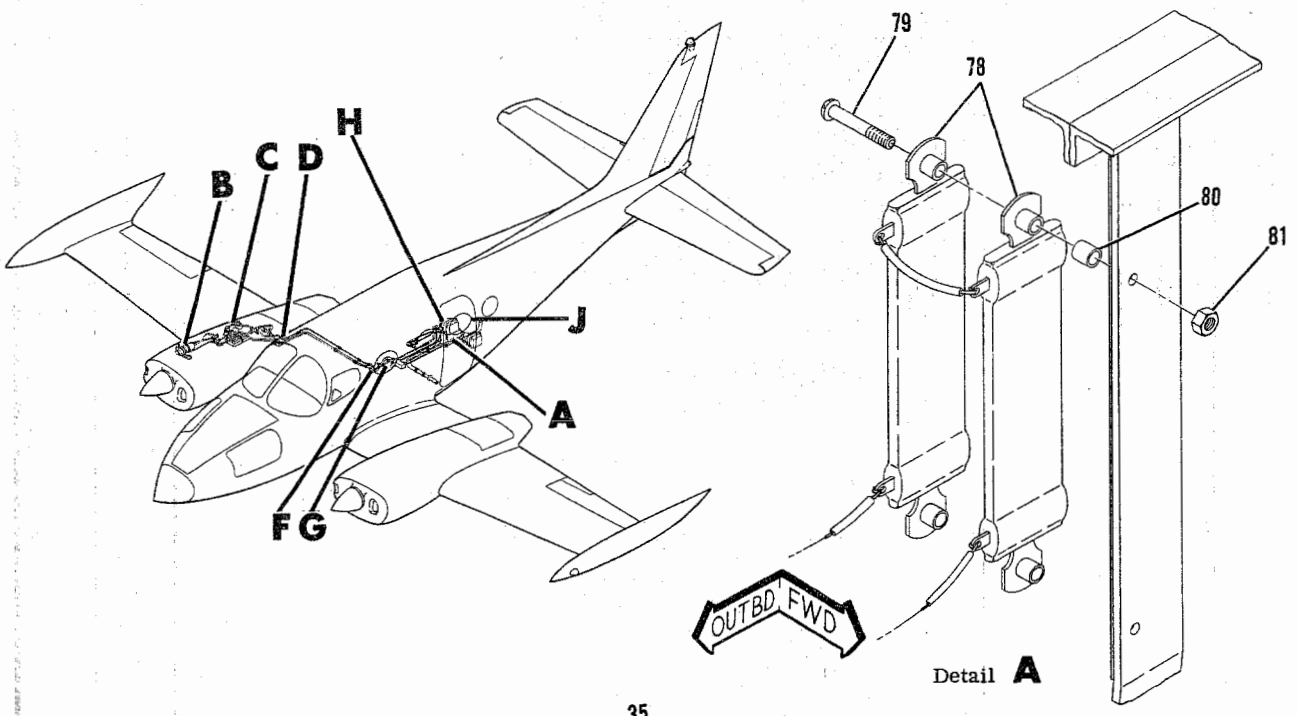

Detail **A**

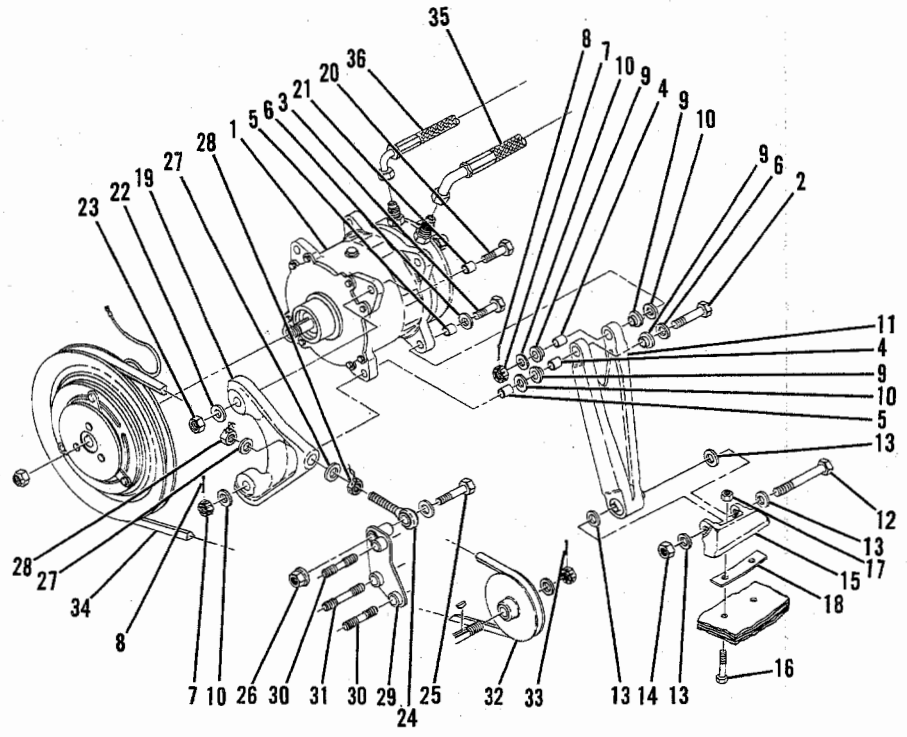

Detail **B**

62 RECEIVER DRYER
66 CONDENSER
144 RH EVAPORATOR ASSY
153 LH EVAPORATOR ASSY

14143011
A14141046
B14144015

Figure 130. Air Conditioning System (Sheet 1 of 4)

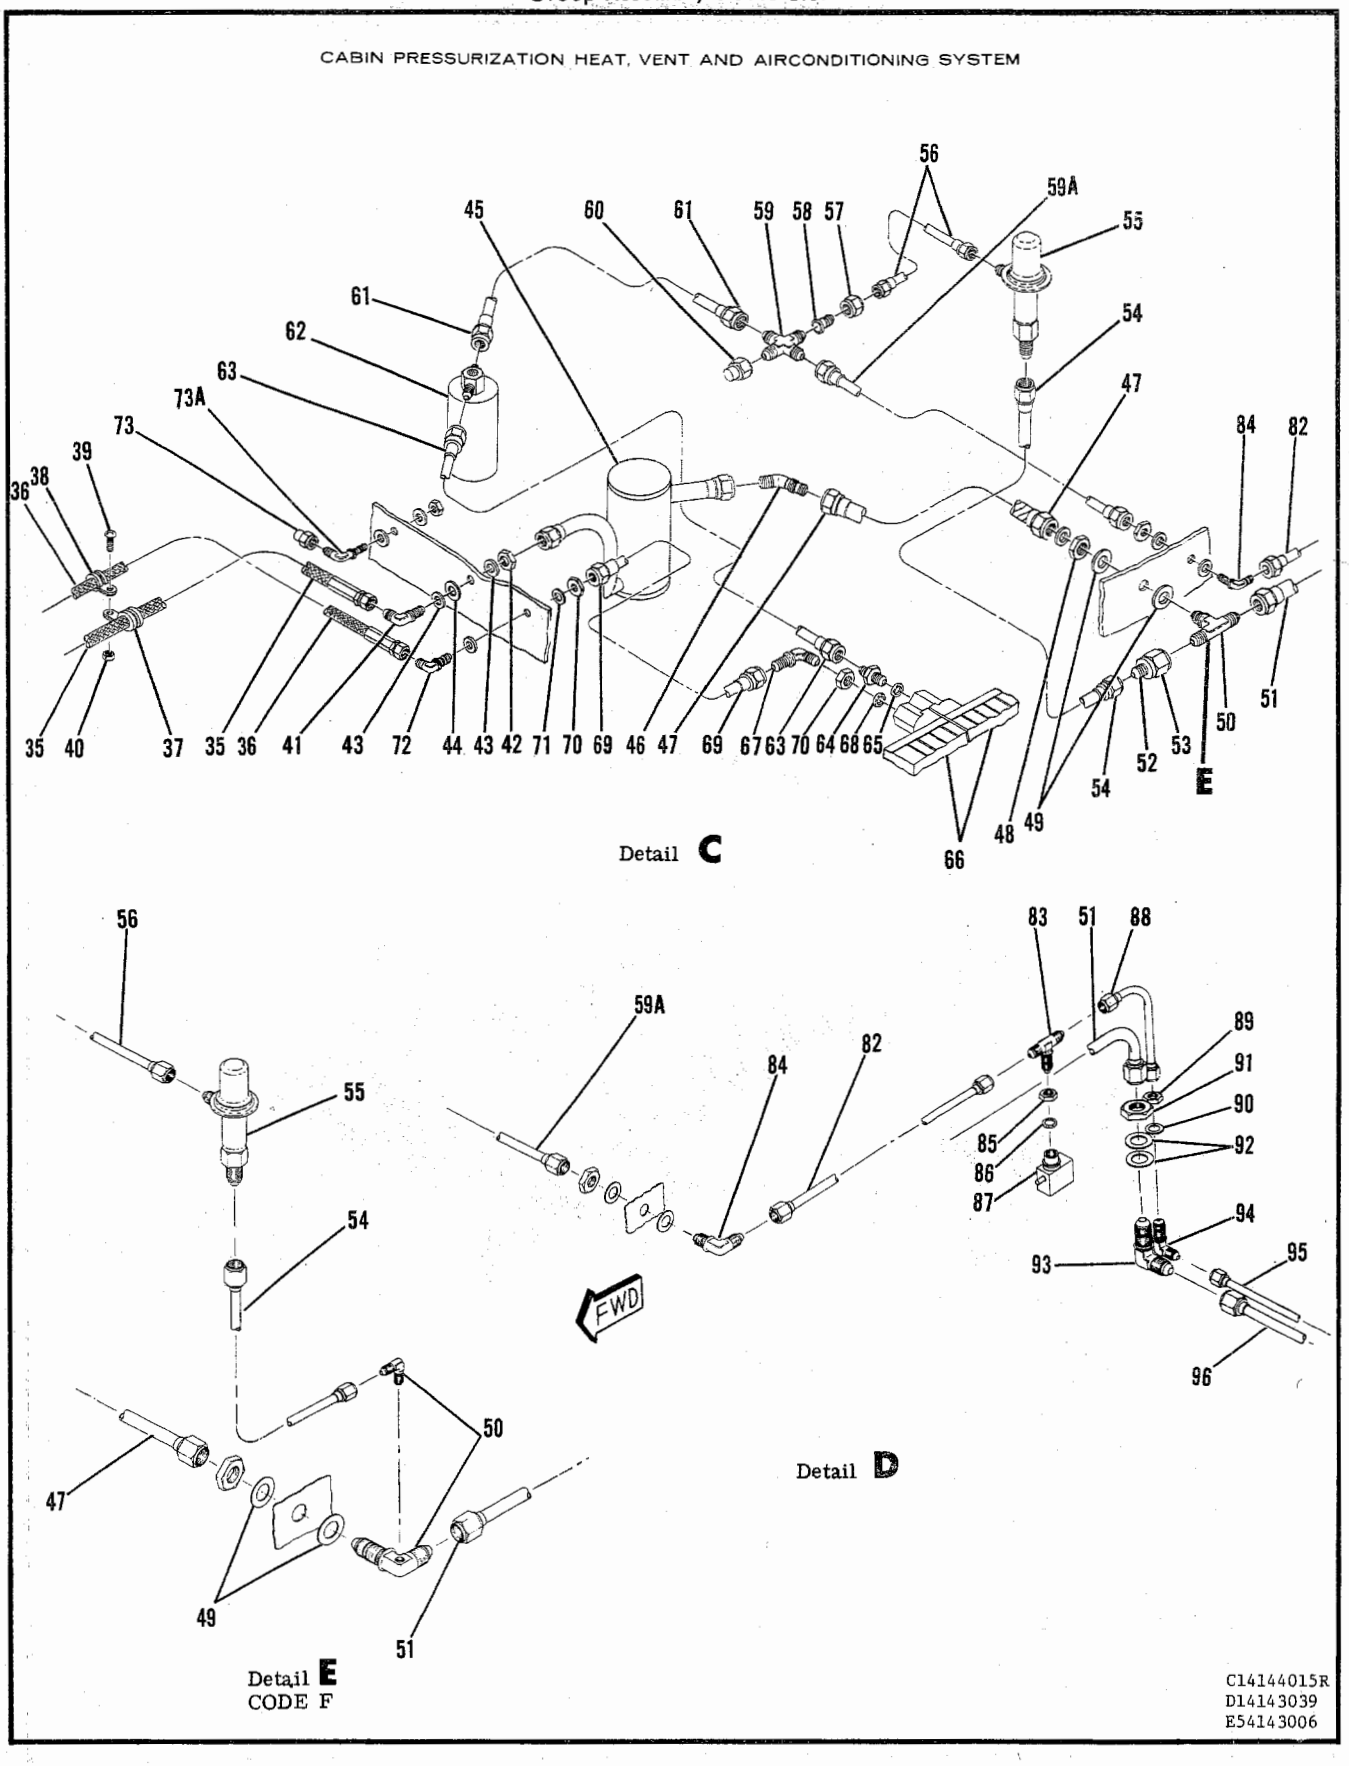

Figure 130. Air Conditioning System (Sheet 2)

CABIN PRESSURIZATION HEAT VENT AND AIRCONDITIONING SYSTEM

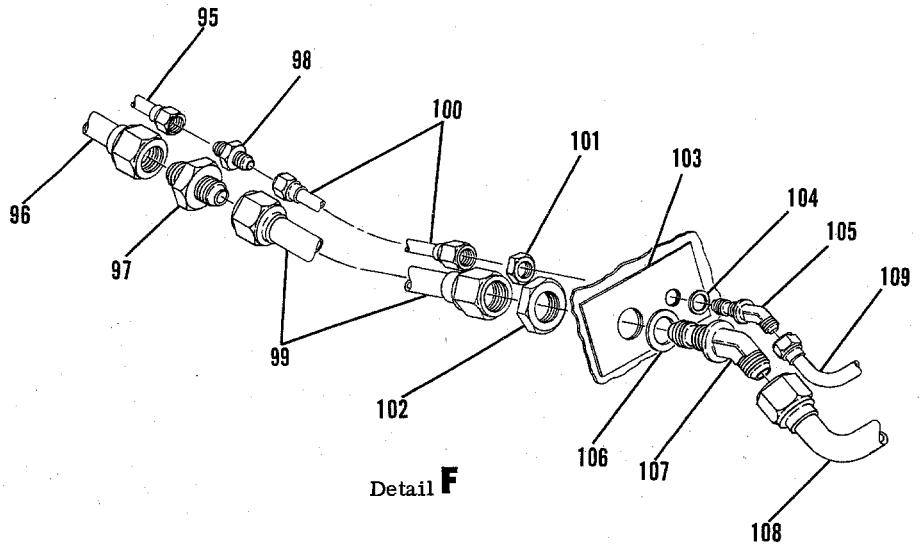

Detail **F**

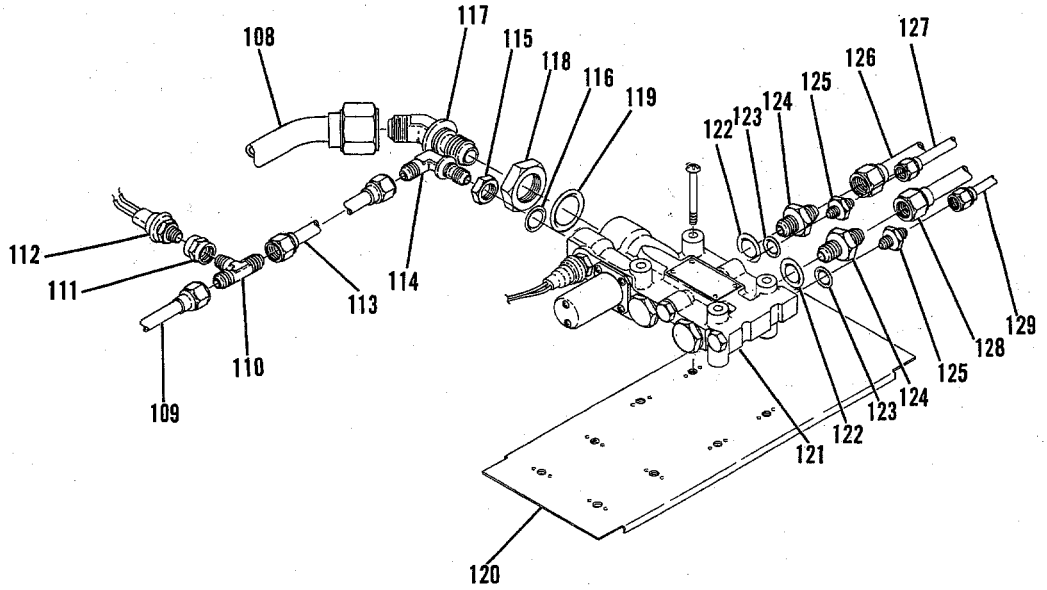

Detail **G**

14143032

Figure 130. Air Conditioning System (Sheet 3)

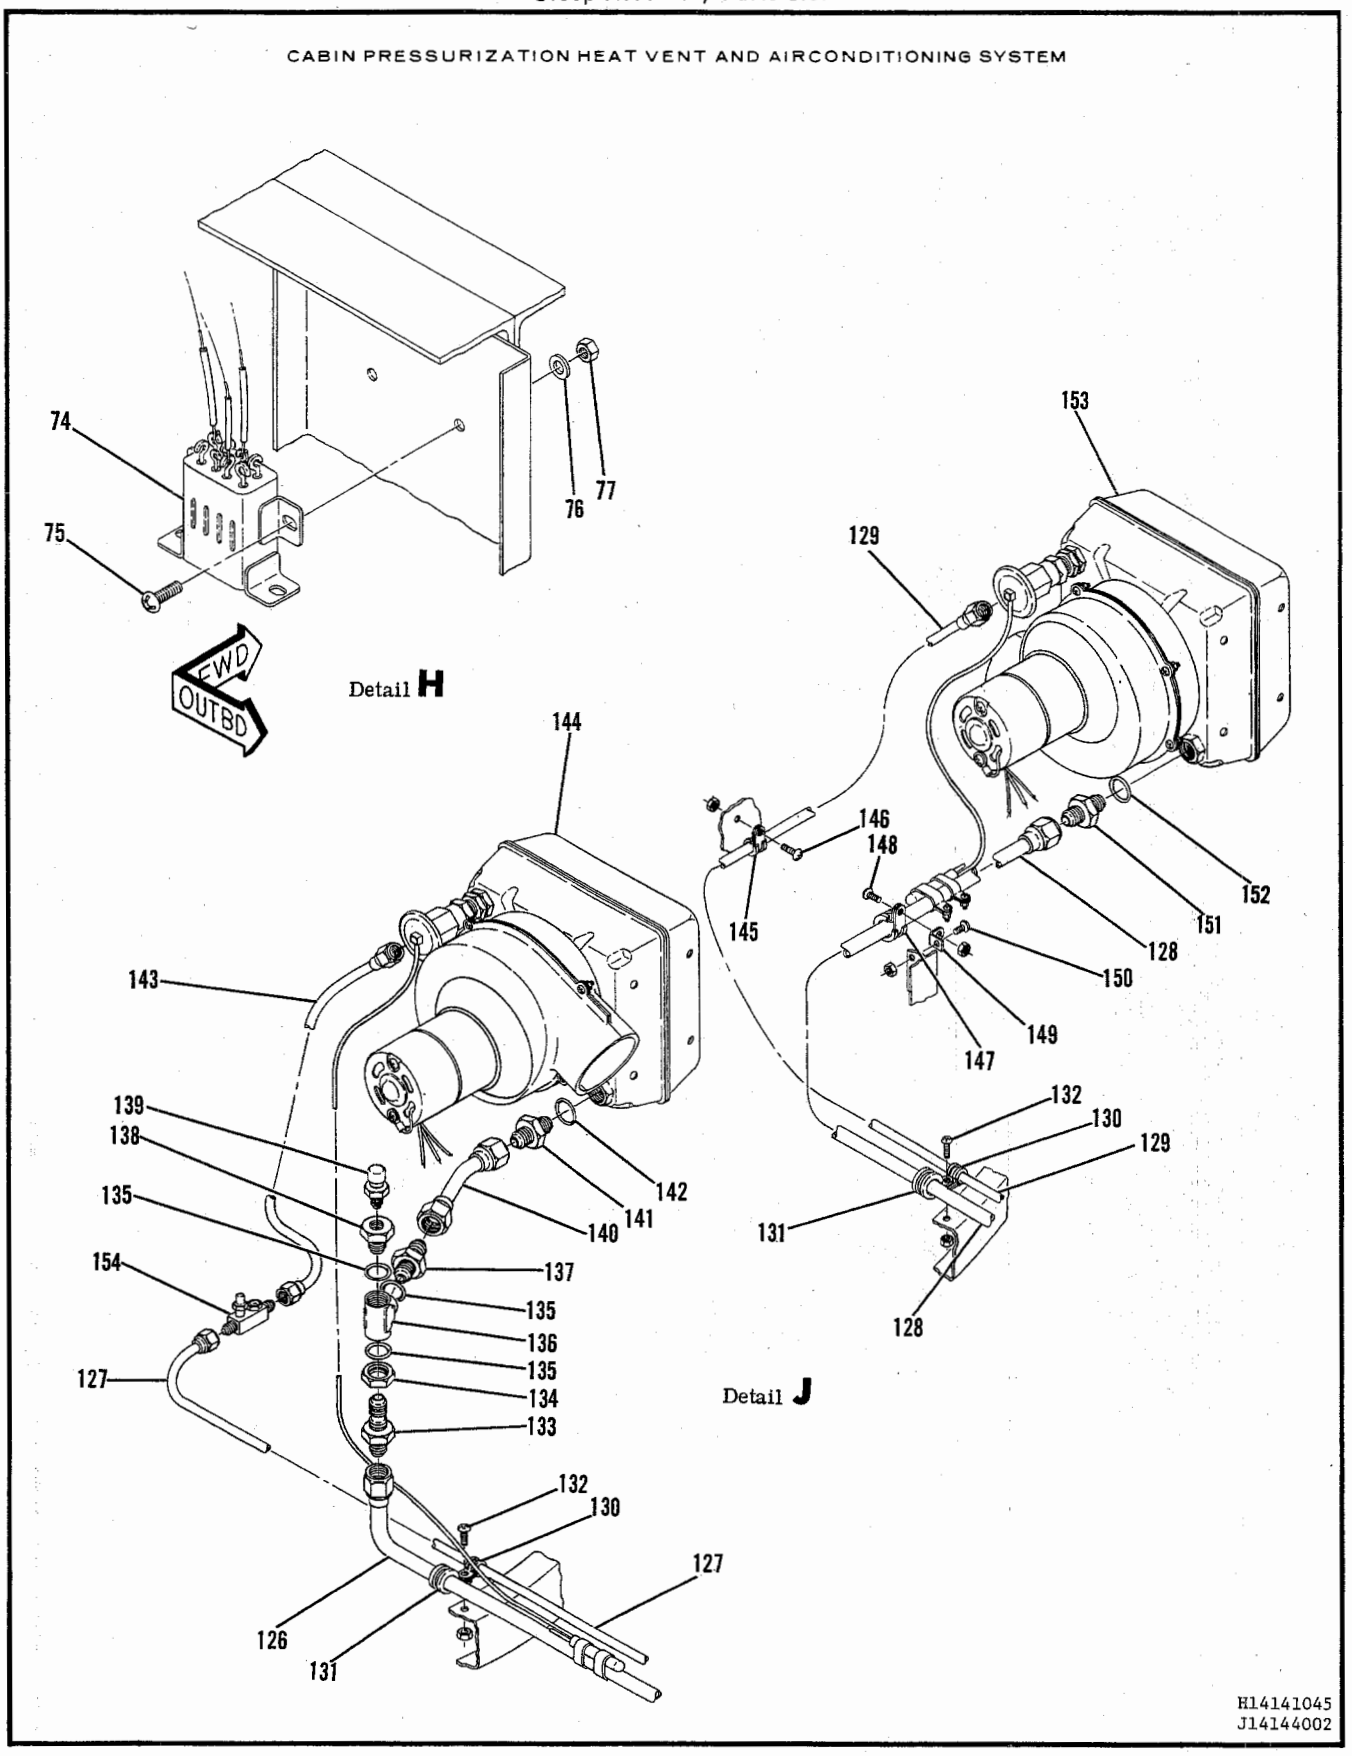

Figure 130. Air Conditioning System (Sheet 4)

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
130 -		AIRCONDITIONING SYSTEM	NP	A
-1	5690501-3 #	. COMPRESSOR ASSY BELT DRIVEN	1	
		ATTACHING PARTS		
-2	AN5-22	. BOLT FWD	1	
-3	AN5-16	. BOLT AFT	1	
-4	NAS43HT-5-42	. SPACER FWD & AFT	1	
-5	5690501-2	. SPACER FWD & AFT	1	
-6	AN960PD516	. WASHER FWD & AFT	1	
-7	AN320-5	. NUT FWD & AFT	1	
-8	MS24665-816	. PIN-COTTER FWD & AFT	1	
-9	627282	. BUSHING FWD & AFT	CM 2	
-10	S1450-5-16-032	. WASHER FWD & AFT	4	
		---*---		
-11	5690501-5	. BRACKET ASSY-COMPRESSOR SUPPORT	1	
		ATTACHING PARTS		
-12	AN4-26A	. BOLT	1	
-13	AN960PD416	. WASHER	4	
-14	MS21042-4	. NUT	1	
		---*---		
-15	5690505-1	. FITTING-SUPPORT	1	
		ATTACHING PARTS		
-16	AN3-7A	. BOLT	2	
-17	MS21042-3	. NUT	2	
		---*---		
-18	5690501-4	. SHIM	1	
-19	5690503-1	. TORQUE LINK	1	
		ATTACHING PARTS		
-20	AN5-14A	. BOLT	1	
-21	5690501-2	. SPACER	1	
-22	AN960PD516	. WASHER	AR	
-23	MS21042-5	. NUT	1	
		---*---		
-24	5690506-1	. ROD END ASSY	1	
		ATTACHING PARTS		
-25	AN6-17A	. BOLT	1	
-26	MS21042-6	. NUT	1	
-27	AN960PD816L	. WASHER	2	
-28	NAS509-8	. NUT	2	
		---*---		
	AN960PD616	. WASHER PULLEY ALIGN	AR	
	AN960PD616L	. WASHER PULLEY ALIGN	AR	
-29	5690502-1	. BRACKET	1	
		ATTACHING PARTS		
-30	MS17301-127	. STUD	2	
-31	MS17301-147	. STUD	1	
		---*---		
-32	5690511-1	. PULLEY	1	
-33	MS24665-283	. PIN-COTTER	1	
-34	9910190-1 #	. V-BELT	1	
-35	124F002-10D 0230	. HOSE ASSY-SUCTION	SAIF 1	
	124F002-10SS 0230	. HOSE ASSY ALT FOR 124F002-10D0230	SAIF 1	
	T66110-10-0230	. HOSE ASSY ALT FOR 124F002-10D0230	AQ 1	
-36	124002-8D0200	. HOSE ASSY-PRESSURE DISCHARGE	1	
-37	MS21919WDG14	. CLAMP	1	
-38	MS21919WDG8	. CLAMP	1	
-39	MS27039-1-08	. SCREW	1	
-40	MS21042-3	. NUT	1	
-41	AN833-10D	. ELBOW	1	
-42	AN924-10D	. NUT	1	
-43	AN960PD1416	. WASHER	2	
-44	S1450-14S18-016	. WASHER	1	
-45	5690508-7	. TRAP ASSY-LIQUID	1	
-46	AN837-12D	. ELBOW	1	
-47	5690507-4	. LINE ASSY ELBOW TO TEE	1	
-48	AN924-12D	. NUT	1	
-49	AN960PD1716	. WASHER	1	
-50	AN824-12D	. TEE	1	E
	5114529-32	. ELBOW	1	F
	MS20822-6D	. ELBOW	1	F
-51	5100106-274	. LINE ASSY	1	
-52	NAS1594D12-6	. REDUCER	1	
-53	AN818-12D	. NUT	1	
-54	5100106-396	. LINE ASSY-TEE TO BY PASS VALVE	1	F
	5100106-342	. LINE ASSY-ELBOW TO BY PASS VALVE	1	E
-55	HE81213	. VALVE-BY PASS	JAA 1	
-56	5100106-352	. LINE ASSY-VALVE TO CROSS	1	
-57	AN818-6D	. NUT	1	
-58	NAS1564-6D4	. REDUCER	1	
-59	AN827-6D	. CROSS	1	
-59A	5100106-353	. LINE ASSY-CROSS TO ELBOW	1	
-60	AN929-6	. CAP	1	
-61	5100106-351	. LINE ASSY-CROSS TO RECEIVER DRYER	1	

CONTINUED

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
130 -62	SEE FIG 131	. RECEIVER DRYER	1	
-63	5100106-347	. LINE ASSY-RECEIVER DRYER TO CONDENSER	1	
-64	AN919-12D	. REDUCER	1	
-65	NAS1595-8	. PACKING	1	
-66	SEE FIG 131	. CONDENSER	1	
-67	AN833-8D	. ELBOW	1	
-68	NAS1595-8	. PACKING	1	
-69	5600118-20	. LINE ASSY-CONDENSER TO ELBOW	1	
-70	AN924-8D	. NUT	1	
-71	AN960PD1216	. WASHER	1	
-72	AN833-8D	. ELBOW	1	
-73	AN929-4	. CAP	1	
-73A	AN833-4D	. ELBOW	1	
	AN916PD716	. WASHER	2	
	AN924-4D	. NUT	1	
-74	FC215-136	. RELAY-COMPRESSOR CLUTCH SD	1	
		ATTACHING PARTS		
-75	MS35206-228	. SCREW	2	
-76	AN960-6	. WASHER	2	
-77	MS21045-06	. NUT	2	
		---*---		
-78	OR55-2	. RESISTOR USE WITH 12 VOLT CLUTCH PRST	2	
		ATTACHING PARTS		
-79	MS27039-0825	. SCREW	2	
-80	NAS43DD3-28	. SPACER	2	
-81	MS21083N08	. NUT	2	
		---*---		
-82	5100106-360	. LINE ASSY-ELBOW TO TEE	1	B
	5300118-13	. LINE ASSY-ELBOW TO TEE	1	C
-83	AN834-6D	. TEE	1	
-84	AN821-6D	. ELBOW	1	
	AN960PD916	. WASHER	1	
	AN924-6D	. NUT	1	
-85	AN924-6D	. NUT	1	
-86	NAS1595-8	. O-RING	1	
-87	HE81400	. SWITCH-HIGH PRESSURE	1	
-88	5100106-360	. LINE ASSY-TEE TO ELBOW	1	B
	5300118-12	. LINE ASSY-TEE TO ELBOW	1	C
-89	AN924-6D	. NUT	1	
-90	AN960PD916	. WASHER	1	
-91	AN924-12D	. NUT	1	
-92	AN960PD1716	. WASHER	AR	
-93	AN833-12D	. ELBOW	1	
-94	AN833-6D	. ELBOW	1	
-95	5600118-16	. LINE ASSY-ELBOW TO WING CAP	1	
	MS21919WDG6	. CLAMP	AR	
		ATTACHING PARTS		
	AN743-12	. BRACKET	AR	
	MS27039-0808	.	AR	
	MS21083N08	.	AR	
		---*---		
-96	5600118-16	. LINE ASSY-ELBOW TO WING GAP INSULATE AR	1	
	MS21919DG12	. CLAMP	AR	
		ATTACHING PARTS		
	AN743-12	. BRACKET	AR	
	MS27039-0808	. SCREW	AR	
	MS21083N08	. NUT	AR	
		---*---		
-97	AN815-12D	. UNION-FWD	1	
-98	AN815-6D	. UNION-AFT	1	
-99	5300118-1	. LINE ASSY-FWD UNION TO ELBOW	1	
-100	5300118-2	. LINE ASSY-AFT UNION TO ELBOW	1	
-101	AN924-6D	. NUT	1	
-102	AN924-12D	. NUT	1	
-103	5300929-2	DOUBLER	1	
-104	250-215-6	. LOCK-O-SEAL AFT	1	
-105	AN837-6D	. ELBOW-AFT	1	
-106	250-215-12	. LOCK-O-SEAL		
-107	AN837-12D	. ELBOW FWD	1	
-108	5300118-3	. LINE ASSY-BHD FITTING TO MANIFOLD	1	
-109	5300118-4	. LINE ASSY-BHD FITTING TO MANIFOLD	1	
-110	MS20825-6D	. TEE	1	
-111	AN910-2D	. COUPLING	1	
-112	9910093-1	. SWITCH-PRESSURE	1	
-113	5300118-7	. LINE ASSY-TEE TO MANIFOLD	1	
-114	AN833-6D	. ELBOW	1	
-115	AN924-6D	. NUT	1	
-116	NAS1595-6	. O-RING	1	
-117	AN837-12D	. ELBOW	1	
-118	AN924-12D	. NUT	1	
-119	NAS1595-12	. O-RING	1	
-120	5300925-3	. SUPPORT ASSY-MANIFOLD	1	
-121	HE81240	. MANIFOLD ASSY	1	
		ATTACHING PARTS		
	MS27039-0834	. SCREW	4	
		---*---		

CONTINUED

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
130 -122	NAS1595-8	O-RING	2	
-123	NAS1595-4	O-RING	2	
-124	AN815-8D	UNION	2	
-125	AN815-4D	UNION	2	
-126	5300118-8	LINE ASSY-MANIFOLD TO SERVICE VALVE	1	
-127	5300118-9	LINE ASSY-MANIFOLD TO SIGHT GAGE	1	
-128	5300118-5	LINE ASSY-TO LH EVAPORATOR	1	
-129	5300118-6	LINE ASSY-TO LH EVAPORATOR	1	
-130	MS21919DG4	CLAMP	AR	
-131	MS21919DG8	CLAMP	AR	
-132	MS27039-0808	SCREW	AR	
	MS21042L08	NUT	AR	
-133	AN832-8D	UNION	1	
-134	AN924-8D	NUT	1	
-135	NAS1595-8	O-RING	3	
-136	AN938-8D	TEE	1	
-137	AN815-8D	UNION	1	
-138	HE81205	VALVE-SERVICE	1	
-139	5114529-27	PLUG	1	
-140	5300118-10	LINE ASSY-TEE TO RH EVAPORATOR	1	
-141	AN815-8D	UNION	1	
-142	NAS1595-8	O-RING	1	
-143	5300118-11	LINE ASSY-SIGHT GAGE TO RH EVAPORATOR	1	
-144	SEE FIG 131	EVAPORATOR ASSY-RH	REF	
-145	MS21919DG4	CLAMP	1	
-146	MS27039-0808	SCREW	1	
	MS21042L08	NUT	1	
-147	MS21919DG8	CLAMP	1	
-148	MS27039-0808	SCREW	1	
	MS21042L08	NUT	1	
-149	AN743-12	BRACKET	1	
-150	MS27039-0808	SCREW	1	
	MS21042L08	NUT	1	
-151	AN815-8D	UNION	1	
-152	MS28778-8	O-RING	1	
-153	SEE FIG 131	EVAPORATOR ASSY-LH	1	
-154	HE81210	GAGE-SIGHT JAA	1	

#---SEE CESSNA CRAFTED AIR CONDITIONING SYSTEM SERVICE/PARTS MANUAL

A---340-0001 THRU 340-0300 WHEN MODIFIED BY SK414-6
B---340-0001 THRU 340-0103
C---340-0104 & ON
D---340-0001 THRU 340-0165
E---340-0166 THRU 340-0300

CABIN PRESSURIZATION HEAT VENT AND AIRCONDITIONING SYSTEM

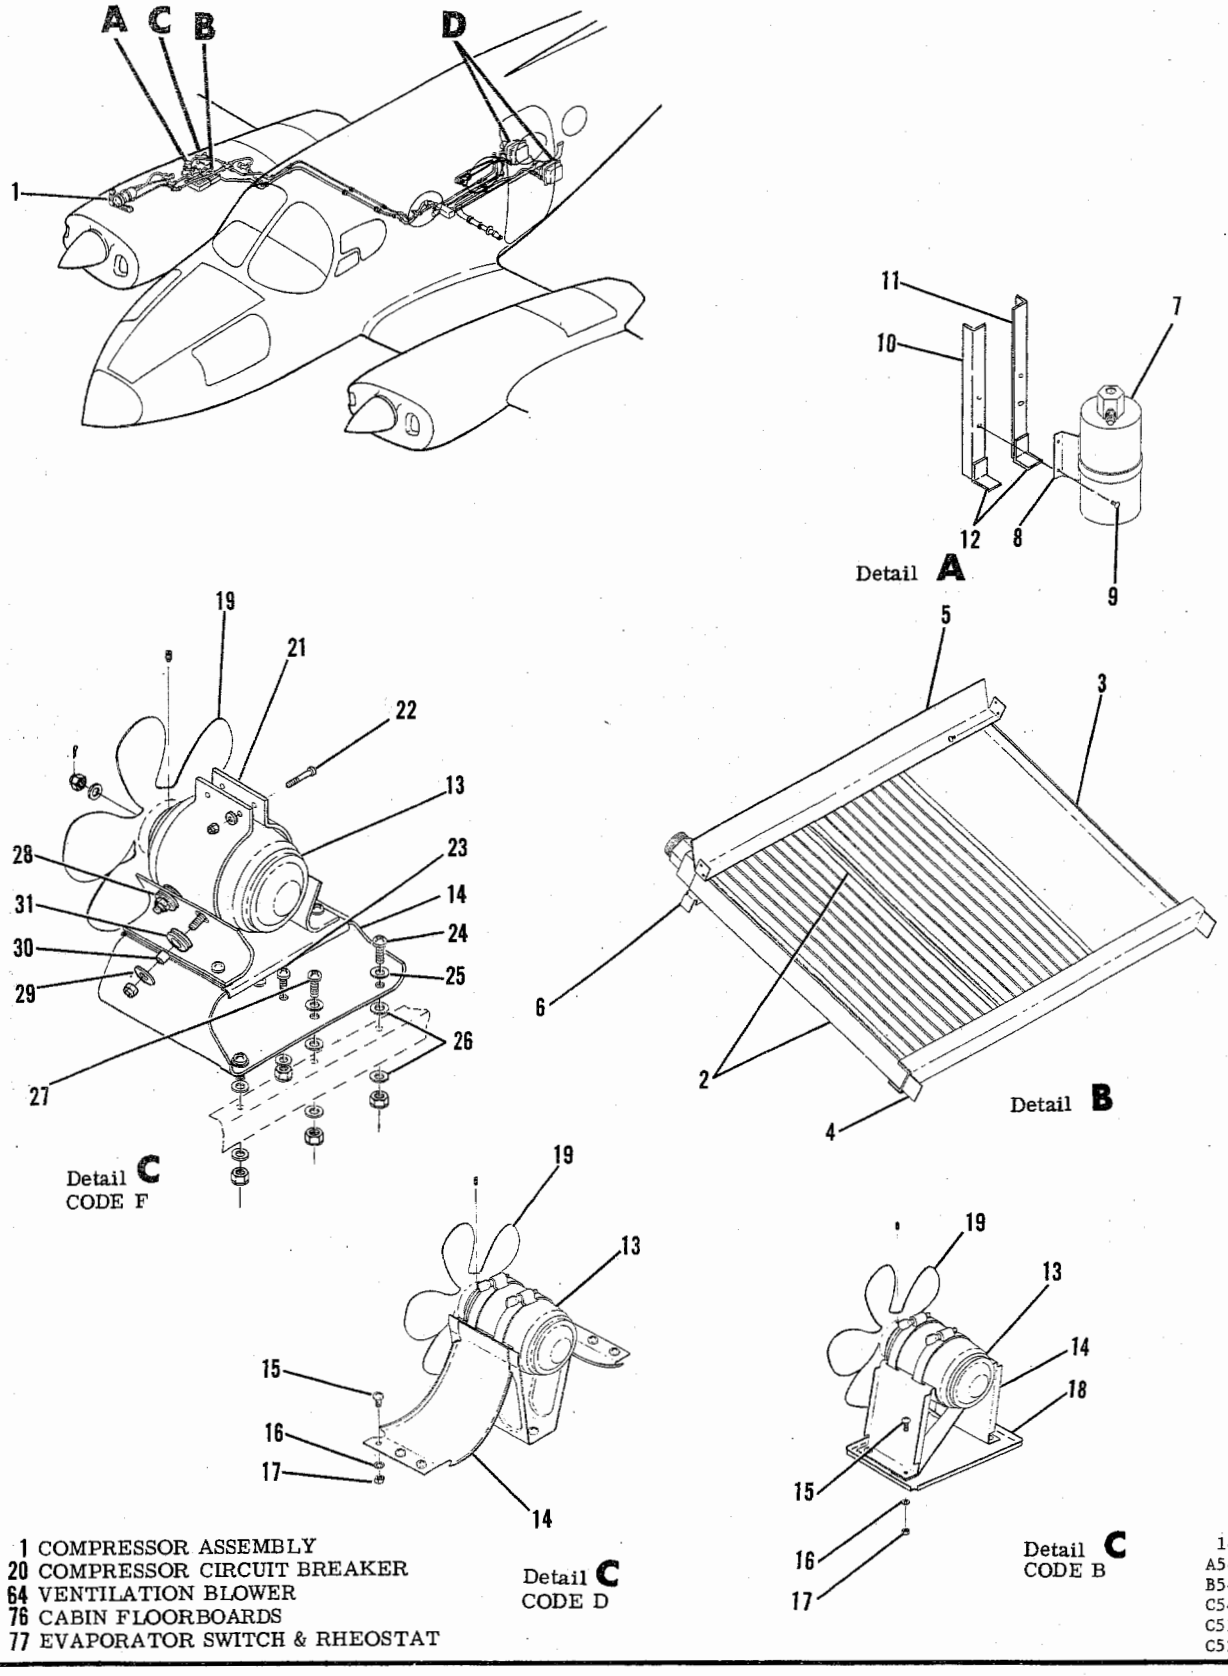

1 COMPRESSOR ASSEMBLY
20 COMPRESSOR CIRCUIT BREAKER
64 VENTILATION BLOWER
76 CABIN FLOORBOARDS
77 EVAPORATOR SWITCH & RHEOSTAT

14143011
A54143009
B54143009
C54143009
C51141066
C52141035

Figure 131. Air Conditioning Equipment Installation (Sheet 1 of 2)

CABIN PRESSURIZATION HEAT VENT AND AIRCONDITIONING SYSTEM

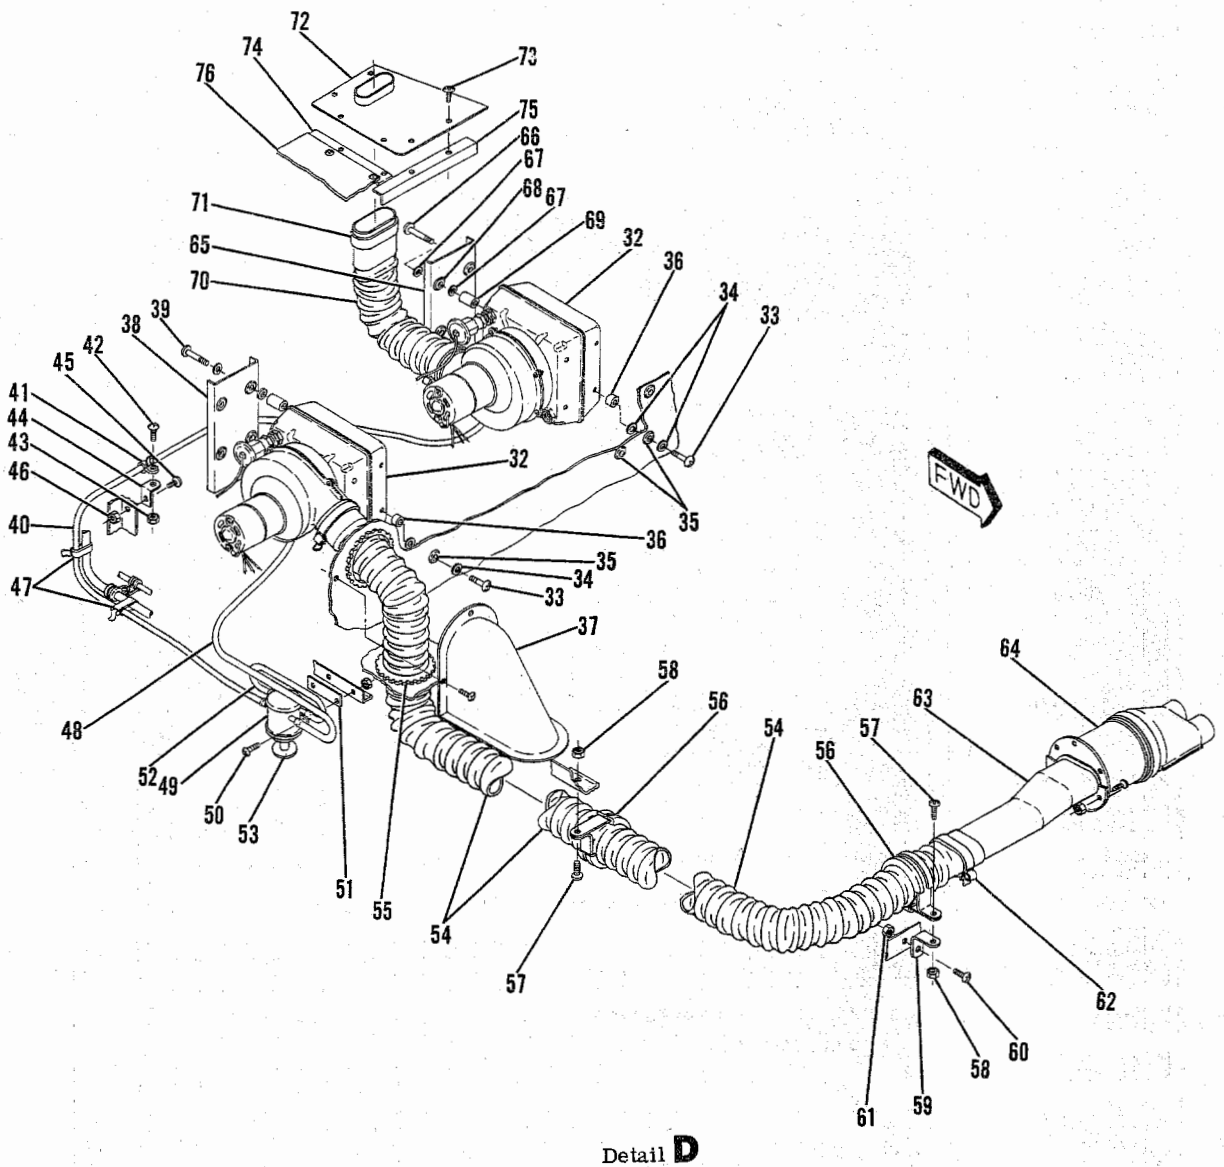

Figure 131. Air Conditioning Equipment Installation (Sheet 2)

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
131 -			AIR CONDITIONING EQUIPMENT INSTALLATION-BELT DRIVEN	NP	A
-1	SEE FIG 130		. COMPRESSOR ASSEMBLY-BELT DRIVEN	1	
-2	HE81203	#	. CONDENSER ASSY	1 JAA	
	5154006-3		. SEAL	AR	
-3	5154006-8		. PAN	1	
			ATTACHING PARTS		
	S1021Z8-6		. SCREW	2	
			---*---		
-4	5154016-6		. BRACKET ASSY-PAN & CONDENSER SUPPORT INBD	1	
-5	5154029-2		. BRACKET-CONDENSER SEAL UPPER INBD	1	
			ATTACHING PARTS		
	MS27039-0806		. SCREW	4	
			---*---		
	5154006-4		. PAD	AR	
-6	5154017-3		. BRACKET-PAN & CONDENSER SUPPORT LWR OUTBD	1	
-7	HE81273	#	. RECEIVER DRYER	1 JAA	
-8	5154019-1		. BRACKET-RECEIVER DRYER	1	
			ATTACHING PARTS		
-9	MS27039-0806		. SCREW	4	
			---*---		
-10	5154006-10		. ANGLE	1	
-11	5154006-11		. ANGLE	1	
-12	5154006-12		. ANGLE	1	
-13	M3424PA	#	. MOTOR-BLOWER JANITROL SPEC HE81299	1 DAE	
	5760	#	. MOTOR-BLOWER JANITROL SPEC HE81299	1 GEND	
-14	HE81308		. MOUNT-BLOWER MOTOR FSO 5154042-2	1 JAA	B
	5154008-2		. MOUNT ASSY-BLOWER MOTOR FSO 5154042-2	1	D
	5154008-6		. MOUNT ASSY-BLOWER MOTOR FSO 5154042-2	1	E
	5154042-2	*	. MOUNT ASSY-BLOWER MOTOR		F
			ATTACHING PARTS		
-15	MS27039-1-06		. SCREW	AR	C
-16	AN960-10		. WASHER	4	B
	AN960PD10		. WASHER	9	C
-17	MS21044N3		. NUT	AR	
			---*---		
-18	5154006-7		. DOUBLER-BLOWER MOTOR MOUNT	1 JAA	B
-19	HE81298	#	. BLADE-FAN	1	
-20	SEE FIG 145		. CIRCUIT BREAKER-COMPRESSOR	REF	
-21	5195015-3		. STRAP-MOTOR SUPPORT	1	F
-22	MS27039-1-14		. SCREW	2	F
	AN960-10L		. WASHER	2	F
	MS21045-3		. NUT	2	F
-23	MS27039-1-09		. SCREW	3	F
	AN960-10L		. WASHER	3	F
	MS21044N3		. NUT	3	F
-24	MS27039-1-11		. SCREW	2	F
	MS21044N3		. NUT	2	F
-25	AN960PD10		. WASHER	2	F
-26	AN960-10L		. WASHER	6	
-27	MS27039-1-12		. SCREW	1	F
	MS21044N3		. NUT	1	F
-28	MS24694S54		. SCREW	4	F
	MS21045-3		. NUT	4	F
-29	AN970-3		. WASHER	4	F
-30	NAS1056C6-032		. SPACER	4	F
-31	MS35489-40		. GROMMET	4	F
-32	HE81300-3	#	. EVAPORATOR MODULE-LH	1 JAA	
	HE81300-4	#	. EVAPORATOR MODULE-RH	1 JAA	
			ATTACHING PARTS		
-33	MS27039-1-08		. SCREW-LH & RH	6	
	AN960D10		. WASHER	6	
-35	MS35489-33		. GROMMET-LH & RH	6	
-36	NAS43DD3-15		. SPACER	2	
			---*---		
-37	5300937-1		. COVER-RH EVAPORATOR FWD	1	
	S1021A8-8C		SCREW	5	
			---*---		
-38	5300927-20		. BRACKET-RH EVAPORATOR SUPPORT AFT	2	
			ATTACHING PARTS		
-39	MS27039-1-22		. SCREW	2	
	AN960D10		. WASHER	8	
	MS35489-3		. GROMMET	4	
	NAS43DD3-61		. SPACER	4	
			---*---		
-40	5300529-7		. HOSE-DRAIN LH EVAPORATOR	1	
-41	CM2979-1		. TIE-STRAP	1	
			ATTACHING PARTS		
-42	MS27039-0808		. SCREW	1	
-43	MS21042L08		. NUT	1	
			---*---		
-44	AN743-12		. BRACKET	1	
-45	MS27039-0808		. SCREW	1	
-46	MS21042L08		. NUT	1	
-47	CM2679-2		. TIE-STRAW	2	
-48	5300529-8		. HOSE-DRAIN RH EVAPORATOR	1	

CONTINUED

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
131 -49	HE81310	. DRAIN-CONDENSATE WEU 9910132-1 . . . . . JAA	1	
	9910132-1	. DRAIN ASSY-CONDENSTE	1	
		ATTACHING PARTS		
-50	MS27039-0808	. SCREW	2	
	MS21042L08	. NUT	2	
		---*---		
-51	5300929-6	. SUPPORT-DRAIN	1	
-52	5114532-3	. HOSE	1	
-53	5300929-9	. DOUBLER-SKIN	1	
-54	CM3211-12A65	. DUCT-RH EVAPORATOR TO VENTILATOR BLOWER	1	
-55	S1050-1	. GROMMET BKI	AR	
-56	MS21919DG56	. CLAMP	1	
-57	MS27039DD0808	. SCREW	2	
-58	MS21042L08	. NUT	2	
-59	AN743-12	. BRACKET	1	
-60	MS27039DD0808	. SCREW	1	
-61	MS21042L08	. NUT	1	
-62	S1026BG	. CLAMP	AR	
-63	5300927-5	. DUCT	1	
-64	SEE FIG 129	. BLOWER-VENTILATION	REF	
-65	5300927-8	. BRACKET-LH EVAPORATOR	1	
		ATTACHING-PARTS		
-66	MS27039-1-22	. SCREW	4	
-67	AN960D10	. WASHER	8	
-68	MS35489-3	. GROMMET	4	
-69	NAS43DD3-61	. SPACER	4	
		---*---		
-70	CM3211-12A25	. DUCT-LH EVAPORATOR TO FLOOR ASSY	1	
-71	S1026BG	. CLAMP	AR	
-72	5300927-13	. FLOOR ASSY-LH	1	
		ATTACHING PARTS		
-73	MS27039-1-07	. SCREW	8	
		---*---		
-74	5300927-15	. SUPPORT ASSY-LH FLOOR	1	
-75	5300927-16	. ANGLE ASSY-LH FLOOR SUPPORT	1	
-76	SEE FIG 17	. FLOORBOARDS-CABIN	REF	
-77	SEE FIG 61	. SWITCH & RHEOSTAT-EVAPORATOR	REF	

\# SEE CESSNA CRAFTED AIR CONDITIONING SYSTEM SERVICE/PARTS MANUAL

* WHEN ORDERING THIS PART FOR SPARES AND THE PART IS NOT EXISTING ON THE AIRCRAFT SK421-62 MUST BE ORDERED

A---340-0001 THRU 340-0300
B---340-0001 THRU 340-0166
C---340-0167 THRU 340-0300
D---340-0167 THRU 340-0199
E---340-0200 THRU 340-0300
F---340-0001 THRU 340-0300 & AIRCRAFT MODIFIED BY SK421-62

CABIN PRESSURIZATION HEAT, VENT AND AIRCONDITIONING SYSTEM

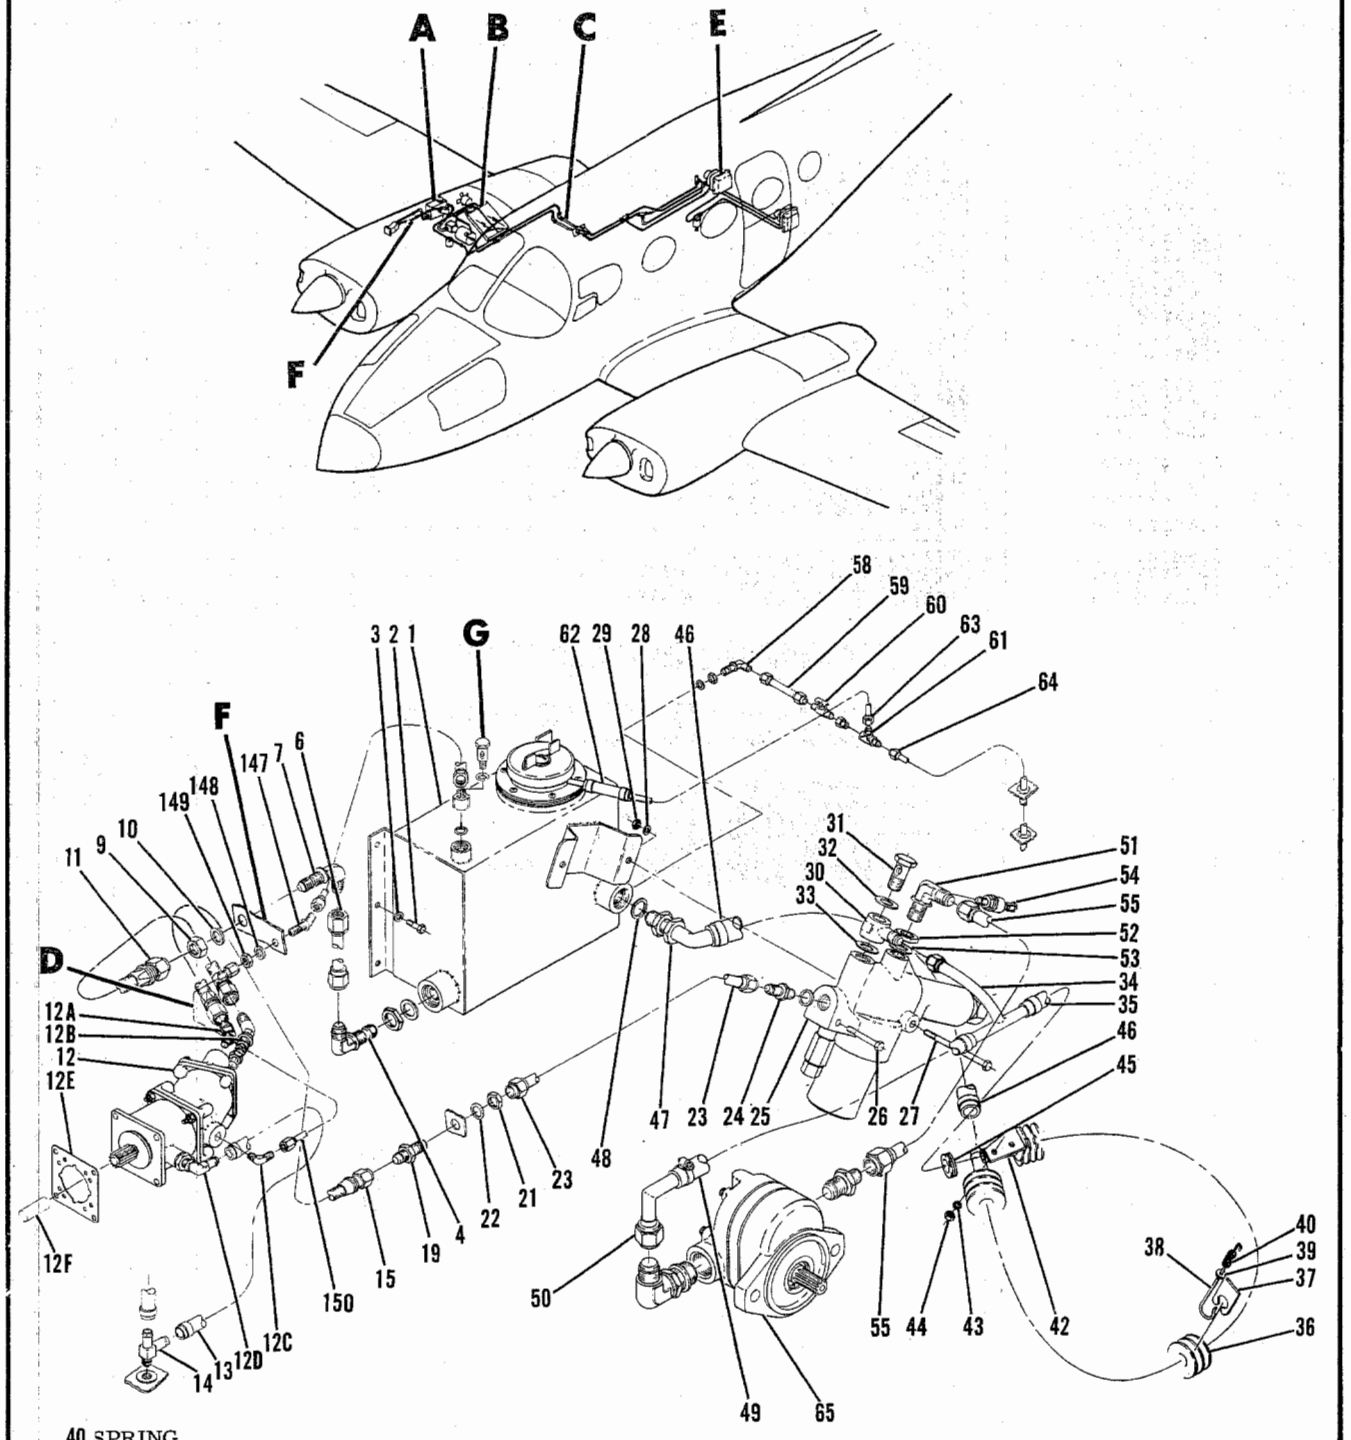

40 SPRING
51 ELBOW ASSY
65 COMPRESSOR DRIVE ASSY
66 CONDENSER
76 RECEIVER-DRYER
89 UNION
98 BRACKET
114 LH EVAPORATOR
123 RH EVAPORATOR

14143044
A14144019

Figure 132. Airconditioning System (Sheet 1 of 3)

CABIN PRESSURIZATION HEAT, VENT AND AIRCONDITIONING SYSTEM

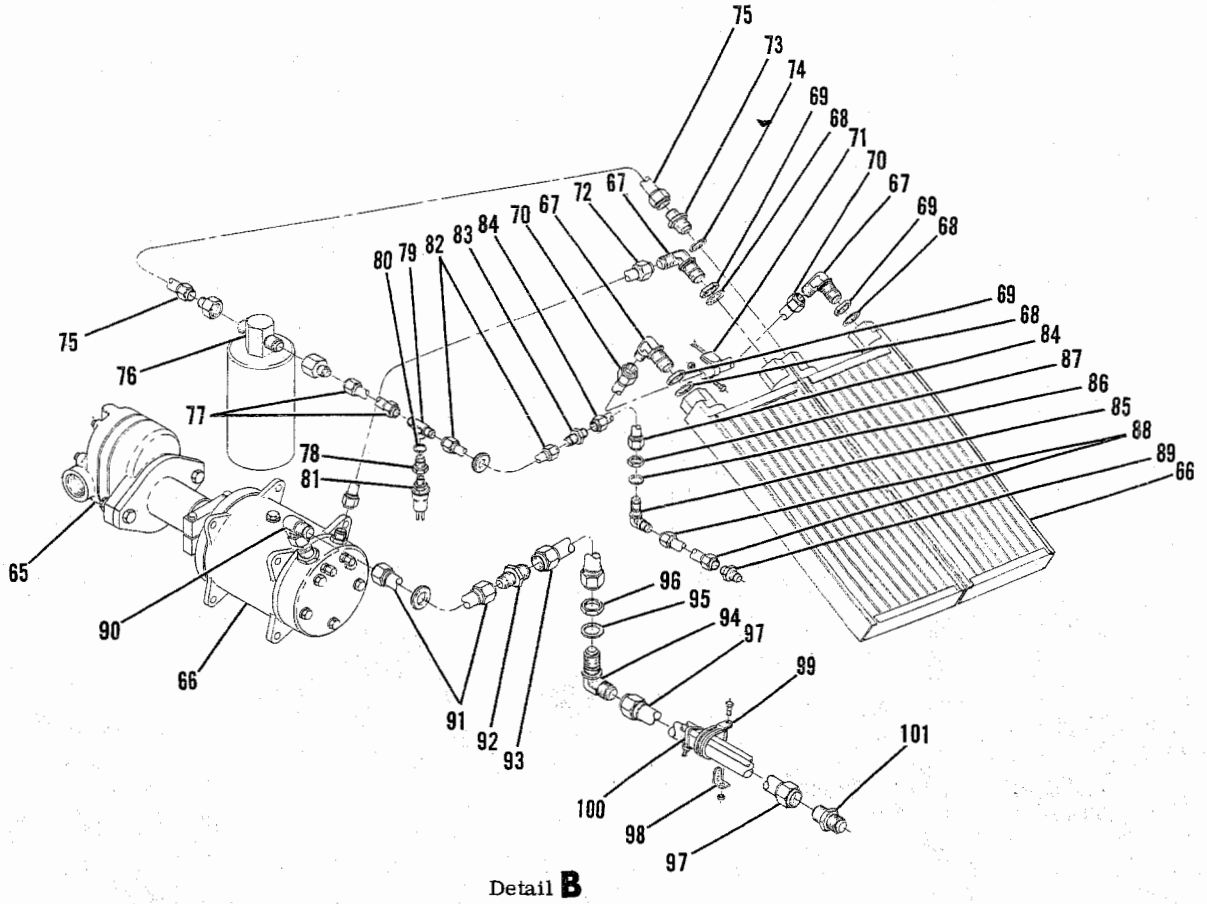

Detail **B**

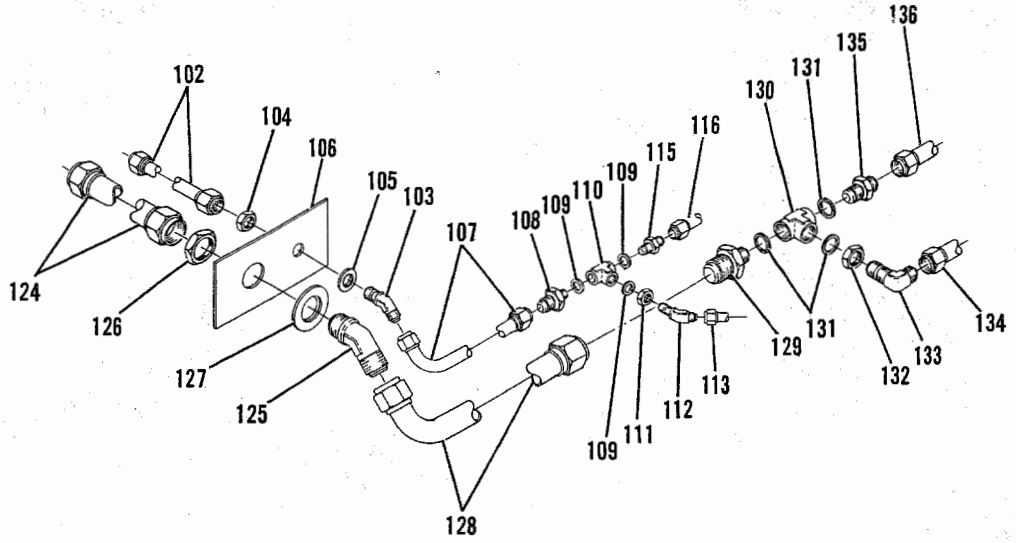

Detail **C**

B14144012
C14144014

Figure 132. Airconditioning System (Sheet 2)

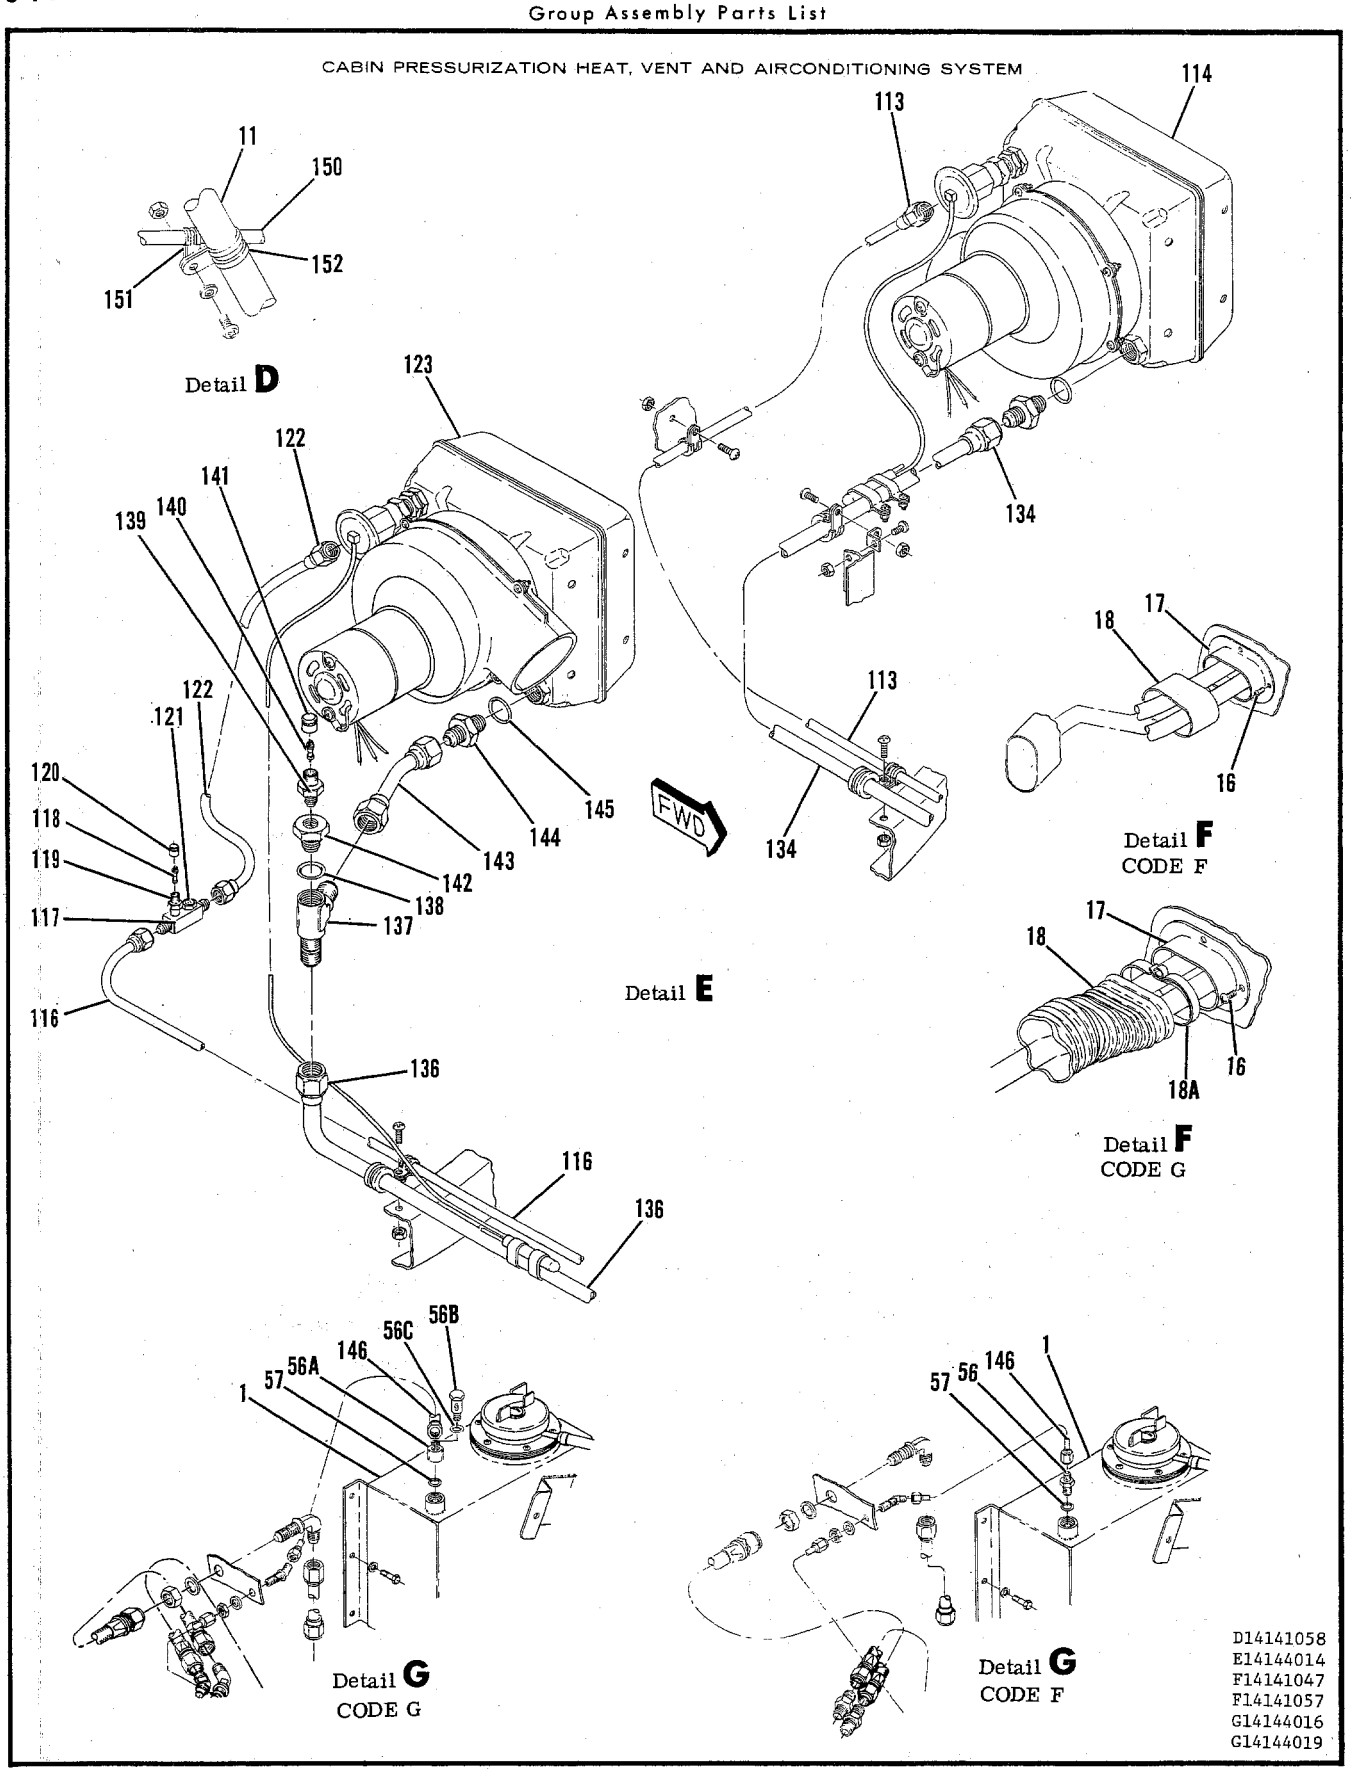

Figure 132. Airconditioning System (Sheet 3)

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
132 -			AIR CONDITIONING SYSTEM	NP	A
-1	5154003-1	#	. RESERVOIR ASSY-HYDRAULIC FLUID	1	
			ATTACHING PARTS		
-2	AN3-3A		. BOLT	6	
-3	AN960-10L		. WASHER	6	
			---*---		
-4	10C50X-S		. ELBOW COEA	1	
-5			. DELETED NOT USED		
-6	5100108-30		. LINE ASSY RESERVOIR TO FIREWALL	1	
-7	AN833-10		. ELBOW	1	
-8			. DELETED NOT USED		
-9	AN924-10		. NUT	1	
-10	AN960C1416L		. WASHER	1	
-11	620001-10-0224		. HOSE ASSY-INLET UNION TO HYDRAULIC PUMP AQ	1	
	111D417-10D		. HOSE ASSY-INLET UNION TO HYDRAULIC PUMP SAIF	1	
			ALT FOR 62001-10-200		
-12	5154030-1	#	. PUMP ASSY-HYDRAULIC	1	
-12A	10-8V50X-S		. ELBOW-INLET STRAIGHT THREADS PAET	1	
	MS20823-10		. ELBOW-INLET TAPERED THREADS	1	
-12B	AN837-8		. ELBOW-OUTLET STRAIGHT THREADS	1	
	8-8VTX-S		. ELBOW-OUTLET TAPERED THREADS PAET	1	
	AN924-8		. NUT USED WITH AN837-8	1	
	MS28778-8		. O-RING USED WITH AN837-8	1	
-12C	MS20822-3		. ELBOW	1	
-12D	AN838-4		. ELBOW-DRAIN STRAIGHT THREADS	1	
	AN842-4		. ELBOW-DRAIN TAPERED THREADS	1	
	MS28778-4		. O-RING USED WITH AN838-4	1	
	AN924-4		. NUT USED WITH AN838-4	1	
-12E	5154030-3		. GASKET	1	
-12F	5154040-1		. SPACER	1	
-13	S51-4		. HOSE BKI	AR	
	NAS397-10		. CLAMP	2	
-14	1K27-1		. TEE-DRAIN ABNE	1	
-15	AE1003785H0224		. HOSE ASSY-OUTLET PUMP TO UNION FSO AE2460001H0224 AQ	1	F
	124DS001-8CR		. HOSE ASSY-OUTLET PUMP TO UNION SAIF	1	F
			ALT FOR AE1003785H200		
	AE2460001H0224		. HOSE ASSY-OUTLET PUMP TO UNION	1	G
-16	MS27C39-C806		. SCREW	4	
-17	5154039-12		. ADAPTER ASSY	1	
-18	5154039-5		. DUCT FSO 5154039-32	1	F
	5154039-32		. DUCT	1	G
-18A	S1026BG		. CLAMP BKI	AR	G
-19	AN832-8		. UNION	1	
-20			. DELETED NOT USED		
-21	AN924-8		. NUT	1	
-22	AN960C1216L		. WASHER	1	
-23	5100108-28		. LINE ASSY-PRESSURE TEE TO MANIFOLD	1	
-24	AN815-8		. UNION	1	
	MS28778-8		. PACKING	1	
-25	5154028-1	#	. MANIFOLD & VALVE ASSY	1	
			ATTACHING PARTS		
-26	AN4-17A		. BOLT	1	
-27	AN4-27A		. BOLT	1	
-28	AN960-416L		. WASHER	2	
-29	MS21045L4		. NUT	2	
			---*---		
-30	NAS552-8D		. ELBOW	1	
-31	NAS551-8D		. BOLT	1	
-32	MS28778-113		. PACKING	1	
-33	MS28778-8		. PACKING	1	
-34	5154026-14		. TEE ASSY	1	
-35	S51-10		. HOSE TEE TO COOLING TUBE BKI	AR	
	AN737TW34		. CLAMP	2	
-36	5154037-7		. TUBE-COOLING	1	
			ATTACHING PARTS		
-37	5154037-6		. CLIP	2	
-38	5154037-3		. RETAINER	2	
-39	5154037-4		. WASHER	2	
-40	SEE FIG 133		. SPRING	2	
			---*---		
-41			. DELETED NOT USED		
-42	5154037-8		. BRACKET-COOLING TUBE MOUNT	1	
			ATTACHING PART		
-43	AN960C10L		. WASHER	2	
-44	MS21083C3		. NUT	2	
			---*---		
-45	MS35489-17		. GROMMET	2	
-46	S51-10		. HOSE COOLING TUBE TO RESERVOIR BKI MTCC	AR	
	AN737TW34		. CLAMP	2	
-47	1K21-8-10		. ELBOW ABNE	1	
-48	MS28778-8		. PACKING	1	
-49	S51-10		. HOSE-TEE TO COMPRESSOR BKI	AR	
	AN737TW34		. CLAMP	1	
-50	5154026-6		. ELBOW ASSY WELD	1	
-51	5154026-1		. ELBOW ASSY WELD	1	D
	5154026-19		. ELBOW ASSY WELD	1	E
-52	AN924-8		. NUT	1	
-53	MS28778-8		. PACKING	1	
-54	716-3010-01		. SWITCH-PRESSURE COEA	1	
-55	5100108-40		. LINE ASSY-PRESSURE MANIFOLD TO COMPRESSOR DRIVE	1	
-56	AN919-1D		. REDUCER FSO NAS552-4D & NAS551-4D	1	F
-56A	NAS552-4D		. ELBOW	1	G
-56B	NAS551-4D		. BOLT	1	G
-56C	MS28775-011		. O-RING UNDER BOLT HEAD	1	G

CONTINUED

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
132 -57	MS28778-4	PACKING	1	
-58	AN833-4D	ELBOW	1	
	AN924-4D	NUT	1	
	MS28778-4	PACKING	1	
-59	5100108-35	LINE ASSY-DRAIN ELBOW TO SHUTOFF VALVE	1	B
	5100108-49	LINE ASSY-DRAIN ELBOW TO SHUTOFF VALVE	1	C
-60	5126207-2	VALVE-SHUTOFF	1	
-61	4R6X-S	TEE PA	1	
-62	S51-4	HOSE-VENT RESERVOIR TO LINE BKI	AR	
	AN737TW22	CLAMP	2	
-63	5100108-38	LINE ASSY-VENT HOSE TO TEE	1	
-64	5100108-36	LINE ASSY-DRAIN	1	
	MS35489-7	GROMMET	2	
-65	SEE FIG 133	COMPRESSOR DRIVE ASSY PRKH	1	
-66	SEE FIG 133	CONDENSER	1	
-67	AN833-8D	ELBOW	3	
-68	NAS1595-8	PACKING	3	
-69	AN924-8D	NUT	3	
-70	5100109-6	LINE ASSY-CONDENSER FSO 5100109-24	1	B
	5100109-24	LINE ASSY-CONDENSER	1	H
-71	9910167-1	SWITCH-HIGH TEMP	1	
-72	5300118-18	LINE ASSY-CONDENSER TO COMPRESSOR DRIVE ASSY	1	
-73	AN919-12D	REDUCER	1	
-74	NAS1595-8	PACKING	1	
-75	5300118-19	LINE ASSY-CONDENSOR TO RECEIVER-DRYER	1	
-76	SEE FIG 133	RECEIVER-DRYER	1	
-77	5100109-9	LINE ASSY-RECEIVER-DRYER TO REDUCER	1	
-78	AN919-6D	REDUCER	1	
-79	AN783D6	TEE	1	
-80	NAS1595-6	PACKING	1	
	NAS1595-4	PACKING	1	
-81	9910174-1	SWITCH-LOW PRESSURE	1	
-82	5100109-8	LINE ASSY-TEE TO UNION	1	
-83	AN815-6D	UNION	1	
-84	5100109-11	LINE ASSY-UNION TO ELBOW	1	
-85	AN833-6D	ELBOW	1	
-86	AN960PD916	WASHER	1	
-87	AN924-6D	NUT	1	
-88	5600118-18	LINE ASSY-ELBOW TO UNION	1	
-89	SEE FIG 133	UNION	1	
-90	10C6BXS	ELBOW PRKH	1	
-91	5100109-7	LINE ASSY-COMPRESSOR DRIVE ASSY TO REDUCER	1	
-92	AN919-20D	REDUCER JAA	1	
-93	5100106-274	LINE ASSY-REDUCER TO ELBOW SAPD	1	
-94	AN833-12D	ELBOW SAPD	1	
-95	AN960PD1716	WASHER SAPD	1	
-96	AN924-12D	NUT TDEV	1	
-97	5600118-16	LINE ASSY-ELBOW TO UNION	1	
-98	SEE FIG 133	BRACKET	1	
-99	MS21919DG23	CLAMP	1	
		ATTACHING PARTS		
	AN3-3A	BOLT	1	
	MS21083N3	NUT	1	
		---*---		
-100	S1693-3	STRAP	1	
-101	AN815-12D	UNION	1	
-102	5300118-2	LINE ASSY-UNION TO ELBOW	1	
-103	AN837-6D	ELBOW	1	
-104	AN924-6D	NUT	1	
-105	250-215-6	LOCK-O-SEAL PRESSURE SIDE PKSC	1	
-106	5300929-2	DOUBLER	1	
-107	5300118-4	LINE ASSY-ELBOW TO TEE	1	
-108	AN919-8D	REDUCER	1	
-109	NAS1595-4	PACKING	3	
-110	AN938D4	TEE	1	
-111	AN924-4D	NUT	1	
-112	AN837-4D	ELBOW	1	
-113	5300118-16	LINE ASSY-ELBOW TO LH EVAPORATOR	1	
	AN734-12	BRACKET	1	
	MS21919DG4	CLAMP	1	
		ATTACHING PARTS		
	MS27039-0808	SCREW	2	
	MS21042L08	NUT	2	
		---*---		
-114	SEE FIG 133	EVAPORATOR-LH	1	
-115	AN815-4D	NIPPLE	1	
-116	5300118-15	LINE ASSY-NIPPLE TO SERVICE FITTING ASSY	1	
-117	9910163-1	SERVICE FITTING ASSY	1	
-118	5137	CORE SAPD	1	
-119	5734-1	STEM SAPD	1	
-120	5845	CAP SAPD	1	
-121	M124FZ	SIGHT GLASS TDEV	1	
-122	5300118-11	LINE ASSY-SERVICE FITTING ASSY TO RH EVAPORATOR	1	
-123	SEE FIG 133	EVAPORATOR-RH	1	
-124	5300118-1	LINE ASSY-UNION TO ELBOW	1	
-125	AN837-12D	ELBOW	1	

CONTINUED

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
132 -126	AN924-12D	. NUT	1	
-127	250-215-12	. LOCK-O-SEAL PRESSURE SIDE PKSC	1	
-128	5300118-3	. LINE ASSY-ELBOW TO REDUCER	1	
-129	AN919-19D	. REDUCER	1	
-130	AN938D8	. TEE	1	
-131	NAS1595-8	. PACKING	3	
-132	AN924-8D	. NUT	1	
-133	AN833-8D	. ELBOW	1	
-134	5300118-17	. LINE ASSY-ELBOW TO LH EVAPORATOR	1	
	MS21919DG8	. CLAMP	2	
		ATTACHING PARTS		
	MS27039-0808	. SCREW	1	
	MS21042L08	. NUT	1	
		---*---		
-135	AN815-8D	. NIPPLE	1	
-136	5300118-14	. LINE ASSY-NIPPLE TO TEE	1	
-137	AN784-8D	. TEE	1	
-138	NAS1595-8	. PACKING	1	
-139	5734-1	. STEM SAPD	1	
-140	5137	. CORE SAPD	1	
-141	5845	. CAP SAPD	1	
	HE81205	. SERVICE VALVE ASSY ALT FOR 5734-1,5137 & 5845 JAA	1	
-142	5114520-11	. PLUG	1	
-143	5300118-10	. LINE ASSY-TEE TO RH EVAPORATOR	1	
-144	AN815-8D	. NIPPLE	1	
-145	NAS1595-8	. PACKING	1	
-146	5100108-44	. LINE ASSY-RESERVOIR TO ELBOW FSO 5154043-1	1	E
	5154043-1	. LINE ASSY-RESERVOIR TO ELBOW	1	FGFGFGFG
-147	AN837-2	. ELBOW	1	
	AN837-3	. ELBOW	1	
-148	AN960C516L	. WASHER	1	
	AN960C616L	. WASHER	1	
-149	AN924-2	. NUT	1	
	AN924-3	. NUT	1	
-150	5100108-42	. LINE ASSY-ELBOW TO PUMP FSO 5100108-51	1	
	5100108-51	. LINE ASSY-ELBOW TO PUMP	1	G
-151	MS21919WDG3	. CLAMP	1	
-152	MS21919WDG20	. CLAMP	1	
		ATTACHING PARTS		
	MS27039-1-07	. SCREW	1	
	AN960-10L	. WASHER	1	
	MS21042L3	. NUT	1	
		---*---		
		# SEE CESSNA CRAFTED AIRCONDITIONING SYSTEM SERVICE PARTS MANUAL		
		A---340-0301 TO 340A0001 B---340-0301 THRU 340-0338 C---340-0339 TO 340A0001 AND AIRCRAFT MODIFIED BY SK421-62 D---340-0301 THRU 340-0554 E---340-0555 TO 340A0001 F---340-0301 THRU 340-0506 G---340-0507 TO 340A0001 H---340-0339 TO 340A0001		

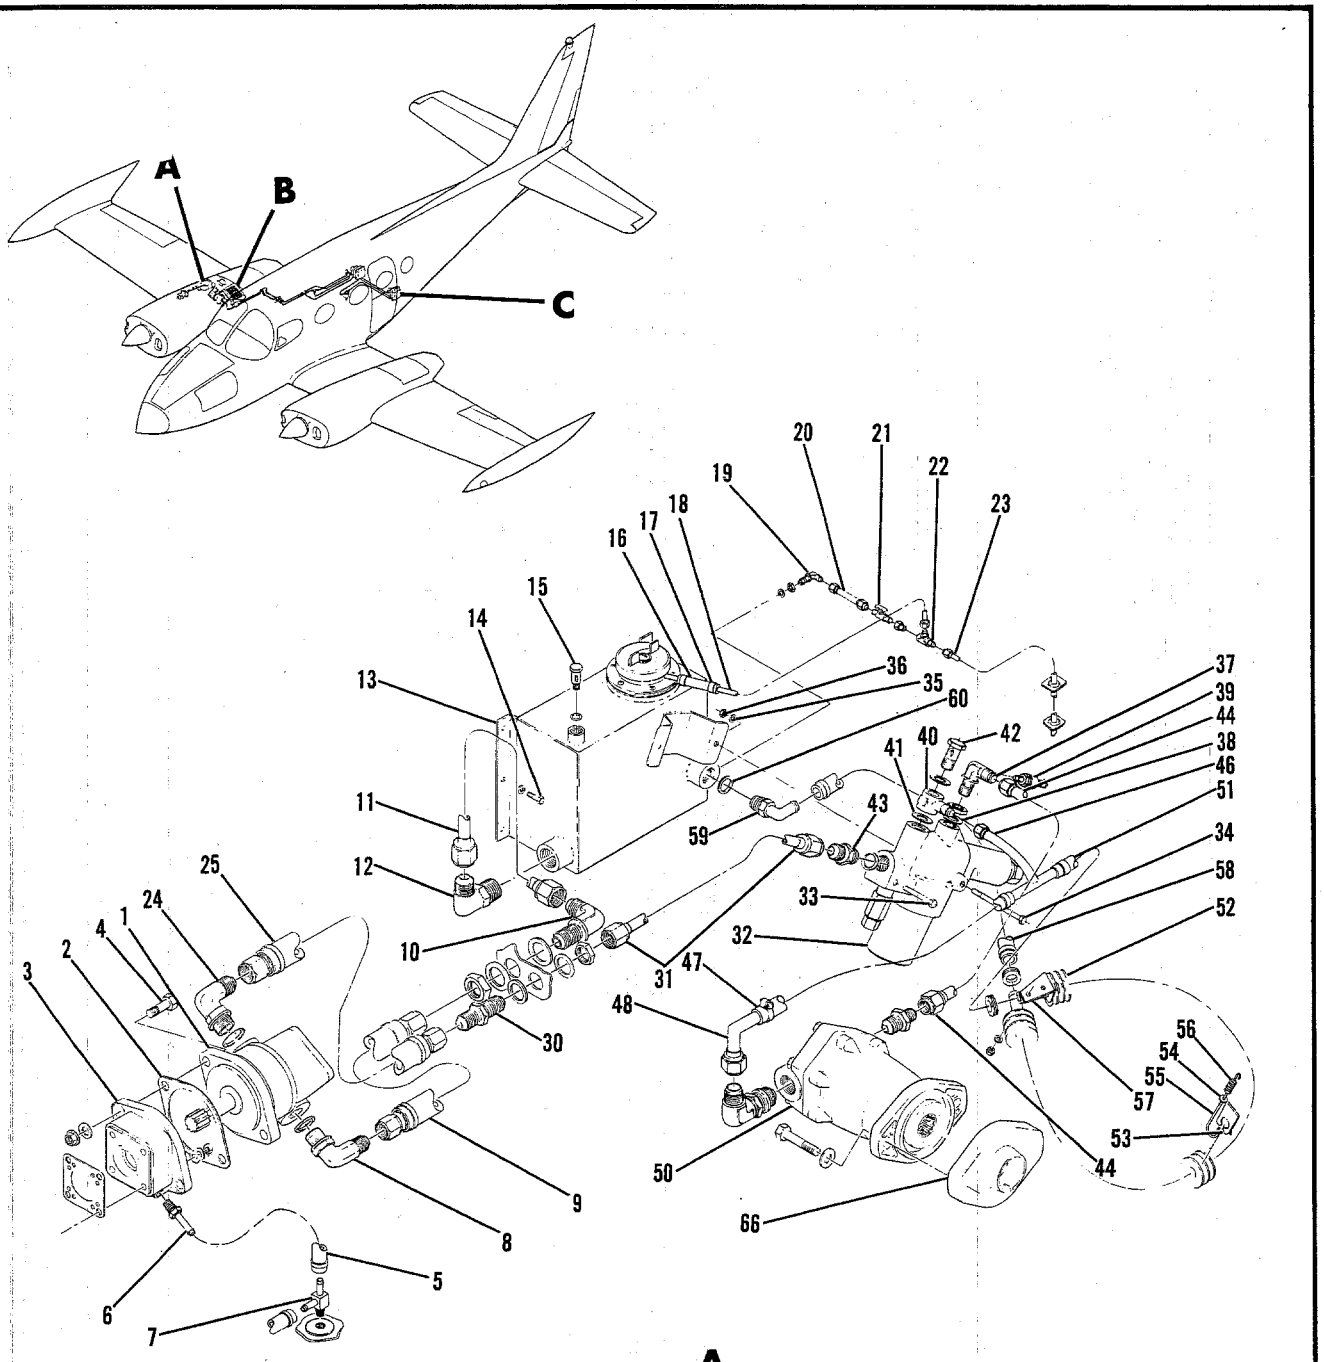

Figure 132A. Air Conditioning System (Sheet 1 of 2)

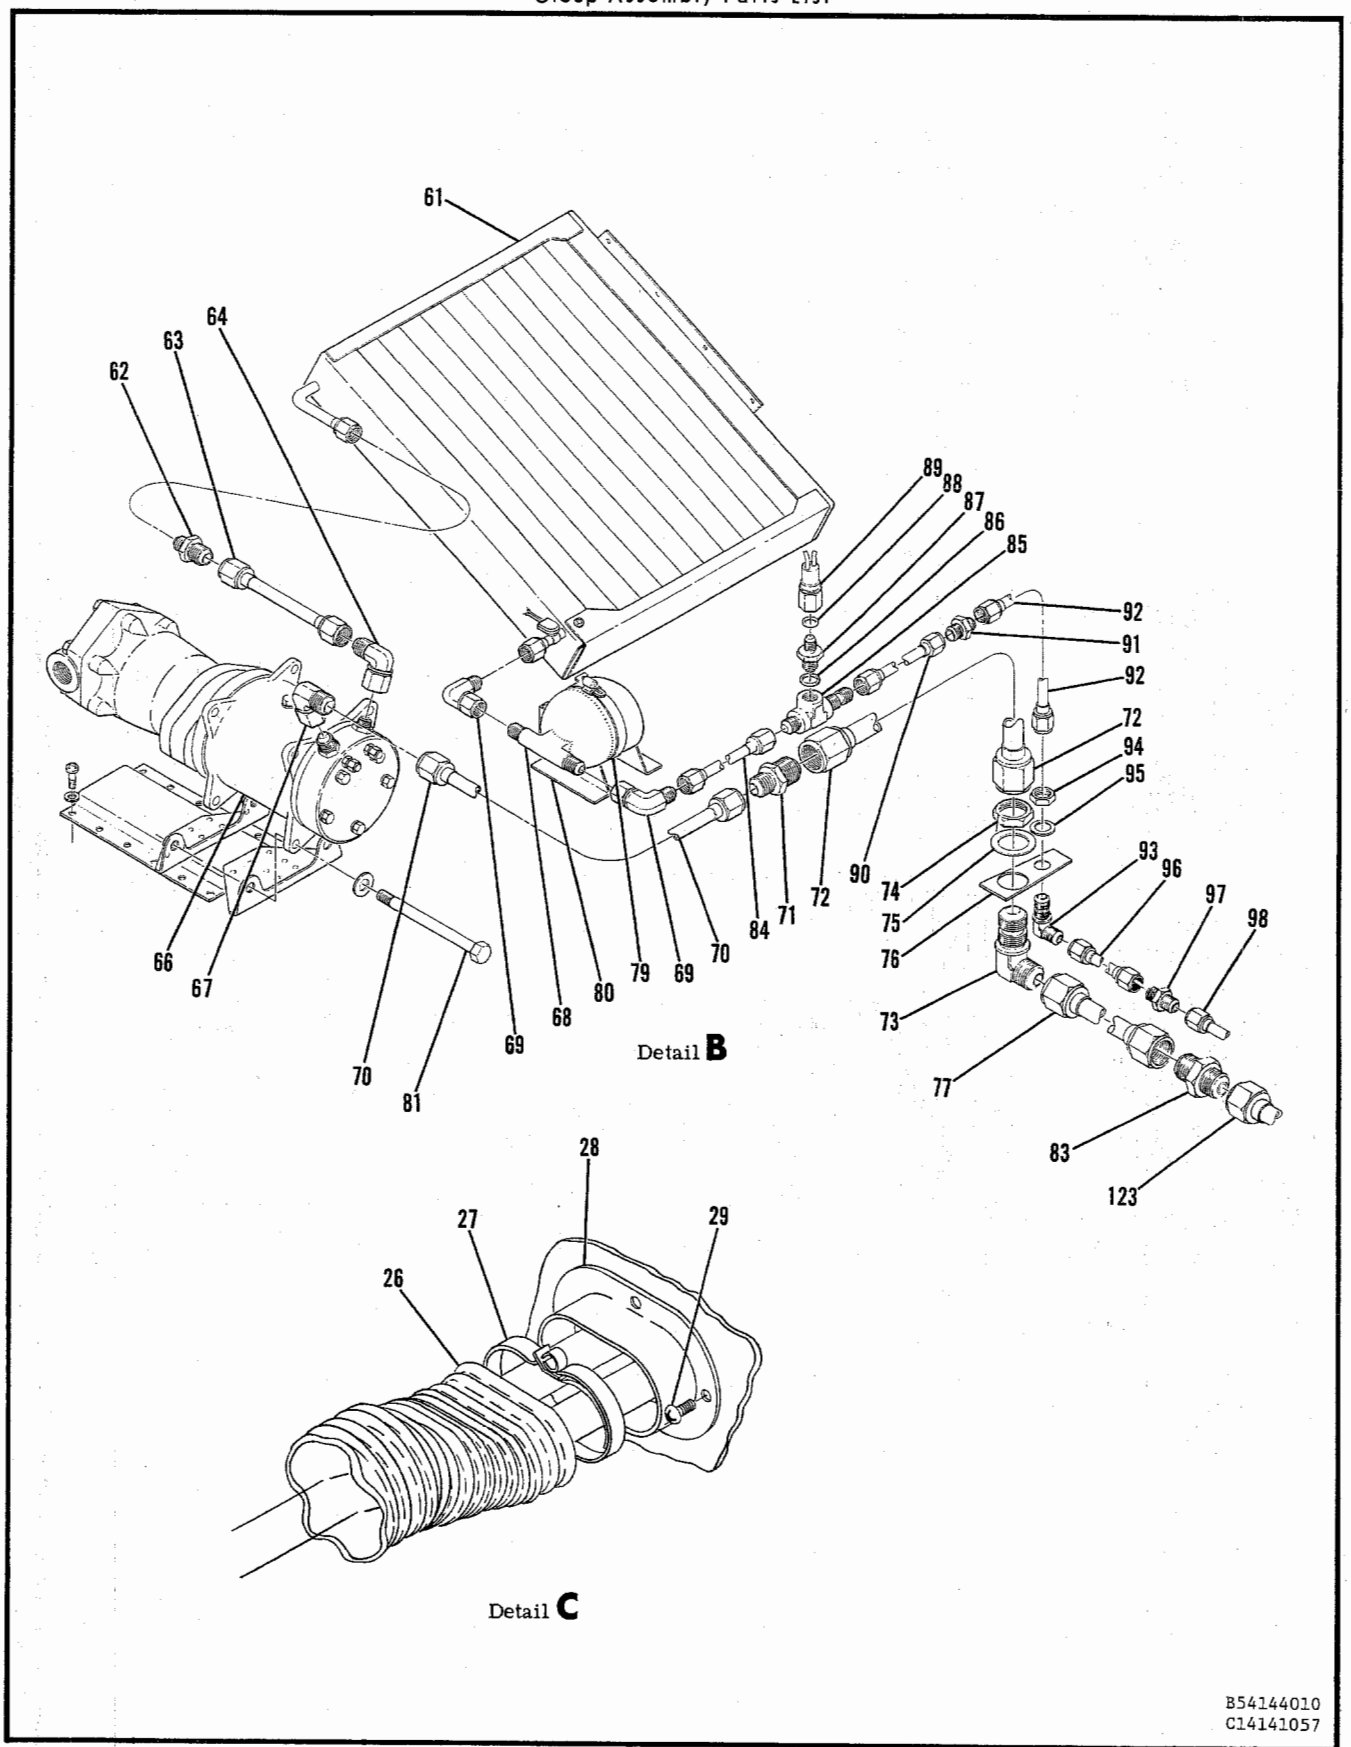

Figure 132A. Air Conditioning System (Sheet 2)

340A0001 AND ON

Section II

Group Assembly Parts List

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
132A-			AIR CONDITIONING SYSTEM	NP	A
-1	24343LAD	#	. PUMP-HYDRAULIC	1	
-2	5154056-2		. GASKET	1	
-3	5154056-1		. ADAPTER-PUMP WEU 5154056-3	1	B
	5154056-3		. ADAPTER-PUMP	1	C
			ATTACHING PARTS		
-4	AN7-14A		. BOLT	4	
	AN960-716L		. WASHER	4	
	NAS1291-7		. NUT	4	
			---*---		
	MS9134-01		. GASKET	1	
-5	S51-4		. HOSE ASSY-PUMP DRAIN	1	
	AN737TW22		. CLAMP	2	
-6	1K10-2-4		. ADAPTER-DRAIN HOSE	1	
-7	1K27-1		. TEE-DRAIN	1	
-8	8C50X-S		. ELBOW INLET	1	
-9	AE2460001H		. HOSE ASSY-INLET PUMP TO UNION	1	
-10	AN833-10		. ELBOW	1	
	AN960C1416L		. WASHER	2	
	AN924-10		. NUT	1	
-11	5100108-30		. LINE ASSY ELBOW TO ELBOW	1	
-12	10C50X-S		. ELBOW	1	
-13	5154003-1	#	. RESERVOIR ASSY-HYDRAULIC	1	
			ATTACHING PARTS		
-14	AN3-3A		. BOLT	6	
	AN960-10L		. WASHER	6	
			---*---		
-15	AN814-4D		. PLUG	1	
	MS28778-4		. PACKING	1	
-16	S51-4		. HOSE-VENT MANIFOLT TO LINE BKI	AR	
-17	AN737TW22		. CLAMP	2	
-18	5100108-48		. LINE ASSY-VENT HOSE TO TEE	1	
-19	AN837-4D		. ELBOW	1	
	MS28778-4		. PACKING	1	
	AN924-4D		. NUT	1	
-20	5100108-47		. LINE ASSY-DRAIN ELBOW TO SHUT-OFF VALVE	1	
-21	5126207-2		. VALVE-SHUT-OFF	1	
-22	4R6X-S		. TEE	1	
-23	5100108-46		. LINE ASSY-DRAIN	1	
-24	10C50X-S		. ELBOW OUTLET	1	
-25	620001-10		. HOSE ASSY-OUTLET PUMP TO UNION	1	
-26	5154039-32		. DUCT	1	
-27	S1026BG		. CLAMP BKI	AR	
-28	5154039-12		. ADAPTER	1	
-29	MS27039-0806		. SCREW	4	
-30	AN832-8		. UNION	1	
	AN960C1216L		. WASHER	2	
	AN924-8		. NUT	1	
-31	5100108-28		. LINE ASSY-UNION TO MANIFOLD	1	
-32	5154028-1	#	. MANIFOLD & VALVE ASSY	1	
			ATTACHING PARTS		
-33	AN4-17A		. BOLT	1	
-34	AN4-27A		. BOLT	1	
-35	AN960-416L		. WASHER	2	
-36	MS21045L4		. NUT	2	
			---*---		
-37	5154026-19		. . ELBOW ASSY	1	
-38	MS28778-8		. . PACKING	1	
-39	716-3010-1		. . SWITCH-PRESSURE	1	
-40	NAS552-8D		. . ELBOW	1	
-41	MS28775-113		. . PACKING	1	
-42	NAS551-8D		. . BOLT	1	
-43	AN815-8D		. . UNION	1	
-44	5100108-53		. LINE ASSY MANIFOLD TO CONNECTOR	1	
-45			. DELETED NOT USED		
-46	5154026-14		. TEE ASSY	1	
-47	S51-10		. HOSE TEE ASSY TO ELBOW ASSY BKI	AR	
	AN737TW34		. CLAMP	2	
-48	5154026-6		. ELBOW ASSY	1	
-49			. DELETED NOT USED		
-50	SEE FIG 133A		. MOTOR-HYDRAULIC	1	
-51	S51-10		. HOSE TEE ASSY TO COOLING TUBE BKI	AR	
	AN737TW34		. CLAMP	2	
-52	5154037-7		. TUBE-COOLING	1	
-53	5154037-6		. CLIP	2	
-54	5154037-4		. WASHER	2	
-55	5154037-3		. RETAINER	2	
-56	0450277-11		. SPRING	2	
-57	5154037-8		. BRACKET-COOLING TUBE MOUNT	1	
			ATTACHING PARTS		
	MS21083C3		. NUT	2	
	AN960C10L		. WASHER	2	
			---*---		
-58	S51-10		. HOSE COOLING TUBE TO ELBOW BKI	AR	
	AN737TW34		. CLAMP	2	
-59	1K21-8-10		. ELBOW	1	

CONTINUED

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
132A-60	MS28778-8	. PACKING	1	
-61	SEE FIG 133A	. CONDENSER	1	
-62	AN919-12D	. REDUCER	1	
-63	5100109-45	. LINE ASSY REDUCER TO COMPRESSOR DRIVE	1	
-64	8C6X-S	. ELBOW	1 PA	
-65	SEE FIG 133A	. CONDENSOR FAN & MOUNT	1	
-66	SEE FIG 133A	. COMPRESSOR DRIVE ASSY	1	
-67	10C6X-S	. ELBOW COMPRESSOR	1 ABNE	
-68	SEE FIG 133A	. RECEIVER-DRYER	1	
-69	6C6X-S	. ELBOW RECEIVER-DRYER	2 ABNE	
-70	5600118-43	. LINE ASSY COMPRESSOR TO REDUCER	1	
-71	AN919-20D	. REDUCER	1	
-72	5100106-274	. LINE ASSY REDUCER TO ELBOW	1	
-73	AN833-12D	. ELBOW	1	
-74	AN924-12D	. NUT	1	
-75	AN960PD1716	. WASHER	1	
-76	5154020-4	. SPACER	1	
-77	5600118-16	. LINE ASSY ELBOW TO UNION	1	
-78	R180H	. INSULATION	1 RBXC	AR
-79	MS21919DG23	. CLAMP	1	
		ATTACHING PARTS		
-80	AN743-13	. BRACKET	1	
-81	AN3-3A	. BOLT	1	
	MS21083N3	. NUT	1	
		---*---		
-82	S1693-3	. STRAP	1	
-83	AN815-12D	. UNION	1	
-84	5100109-9	. LINE ASSY RECEIVER-DRYER TO PRESSURE SWITCH	1	
-85	AN783D6	. TEE	1	
-86	NAS1595-6	. PACKING	1	
-87	AN919-6D	. REDUCER	1	
-88	NAS1595-4	. PACKING	1	
-89	9910174-1	. SWITCH-LOW PRESSURE	1	
-90	5600118-52	. LINE ASSY PRESSURE SWITCH TO UNION	1	
-91	AN815-6D	. UNION	1	
-92	5100109-11	. LINE ASSY UNION TO ELBOW	1	
-93	AN833-6D	. ELBOW	1	
-94	AN924-6D	. NUT	1	
-95	AN960PD916	. WASHER	1	
-96	5600118-18	. LINE ASSY ELBOW TO UNION	1	
-97	AN815-6D	. UNION	1	
-98	5300118-2	. LINE ASSY UNION TO ELBOW	1	
-99	AN837-6D	. ELBOW	1	
-100	AN924-6D	. NUT	1	
-101	250-215-6	. LOCK-O-SEAL	1 PKSC	
-102	5300929-2	. DOUBLER	1	
-103	5300118-4	. LINE ASSY ELBOW TO TEE	1	
-104	AN919-6D	. REDUCER	1	
-105	NAS1595-4	. PACKING	3	
-106	AN938D4	. TEE	1	
-107	AN924-4D	. NUT	1	
-108	AN837-4D	. ELBOW	1	
-109	5300118-16	. LINE ASSY ELBOW TO LH EVAPORATOR	1	
-110	MS21919DG4	. CLAMP	2	
		ATTACHING PARTS		
-111	AN743-12	. BRACKET	1	
-112	MS27039-0808	. SCREW	3	
	MS21042L08	. NUT	3	
		---*---		
-113	SEE FIG 133A	. EVAPORATOR-LH	1	
-114	AN815-4D	. NIPPLE	1	
-115	5300118-15	. LINE ASSY NIPPLE TO SERVICE FITTING ASSY	1	
-116	MS21919DG4	. CLAMP	1	
		ATTACHING PARTS		
	MS27039-0808	. SCREW	1	
	MS21042L08	. NUT	1	
		---*---		
	9910163-1	. SERVICE FITTING ASSY	1	
-117	5137	. . CORE	1 SAPD	
-118	5734-1	. . STEM	1 SAPD	
-119	5845	. . CAP	1 SAPD	
-120	M124FZ	. . SIGHT GLASS	1 TDEV	
-121	5300118-11	. LINE ASSY SERVICE FITTING TO RH EVAPORATOR	1	
-122	SEE FIG 133A	. EVAPORATOR-RH	1	
-123	5300118-1	. LINE ASSY UNION TO ELBOW	1	
	R180H	. INSULATION BKI	AR	
-124	AN837-12D	. ELBOW	1	
-125	AN924-12D	. NUT	1	
-126	250-215-12	. LOCK-O-SEAL PRESSURE SIDE	1 PKSC	
-127	5300118-3	. LINE ASSY ELBOW TO REDUCER	1	
	R180H	. INSULATION BKI	AR	
-128	AN919-19D	. REDUCER	1	
-129	AN938D8	. TEE	1	
-130	NAS1595-8	. PACKING	3	
-131	AN924-8D	. NUT	1	
-132	AN833-8D	. ELBOW	1	
-133	5300118-17	. LINE ASSY ELBOW TO LH EVAPORATOR	1	
	R180H	. INSULATION BKI	AR	

CONTINUED

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
132A-134	MS21919DG8	. CLAMP	2	
		ATTACHING PARTS		
	MS27039-0808	. SCREW	1	
	MS21042L08	. NUT	1	
		---#---		
-135	AN815-8D	. NIPPLE	1	
-136	5300118-14	. LINE ASSY NIPPLE TO TEE	1	
	R180H	. INSULATION 8KI	AR	
-137	MS21919DG8	. CLAMP	1	
-138	AN784-8D	. TEE	1	
-139	NAS1595-8	. PACKING	1	
-140	5734-1	. STEM SAPD	1	
-141	5137	. CORE SAPD	1	
-142	5845	. CAP SAPD	1	
	HE81205	. SERVICE VALVE ASSY ALT FOR 5734-1, 5137 & 5845 JAA	1	
-143	5114520-11	. PLUG	1	
-144	5300118-10	. LINE ASSY TEE TO RH EVAPORATOR	1	
-145	AN815-8D	. NIPPLE	1	
-146	NAS1595-8	. PACKING	1	
		# SEE CESSNA CRAFTED AIR CONDITIONING SERVICE/PARTS MANUAL		
		A---340A0001 & ON B---340A0001 THRU 340A0026 C---340A0027 & ON		

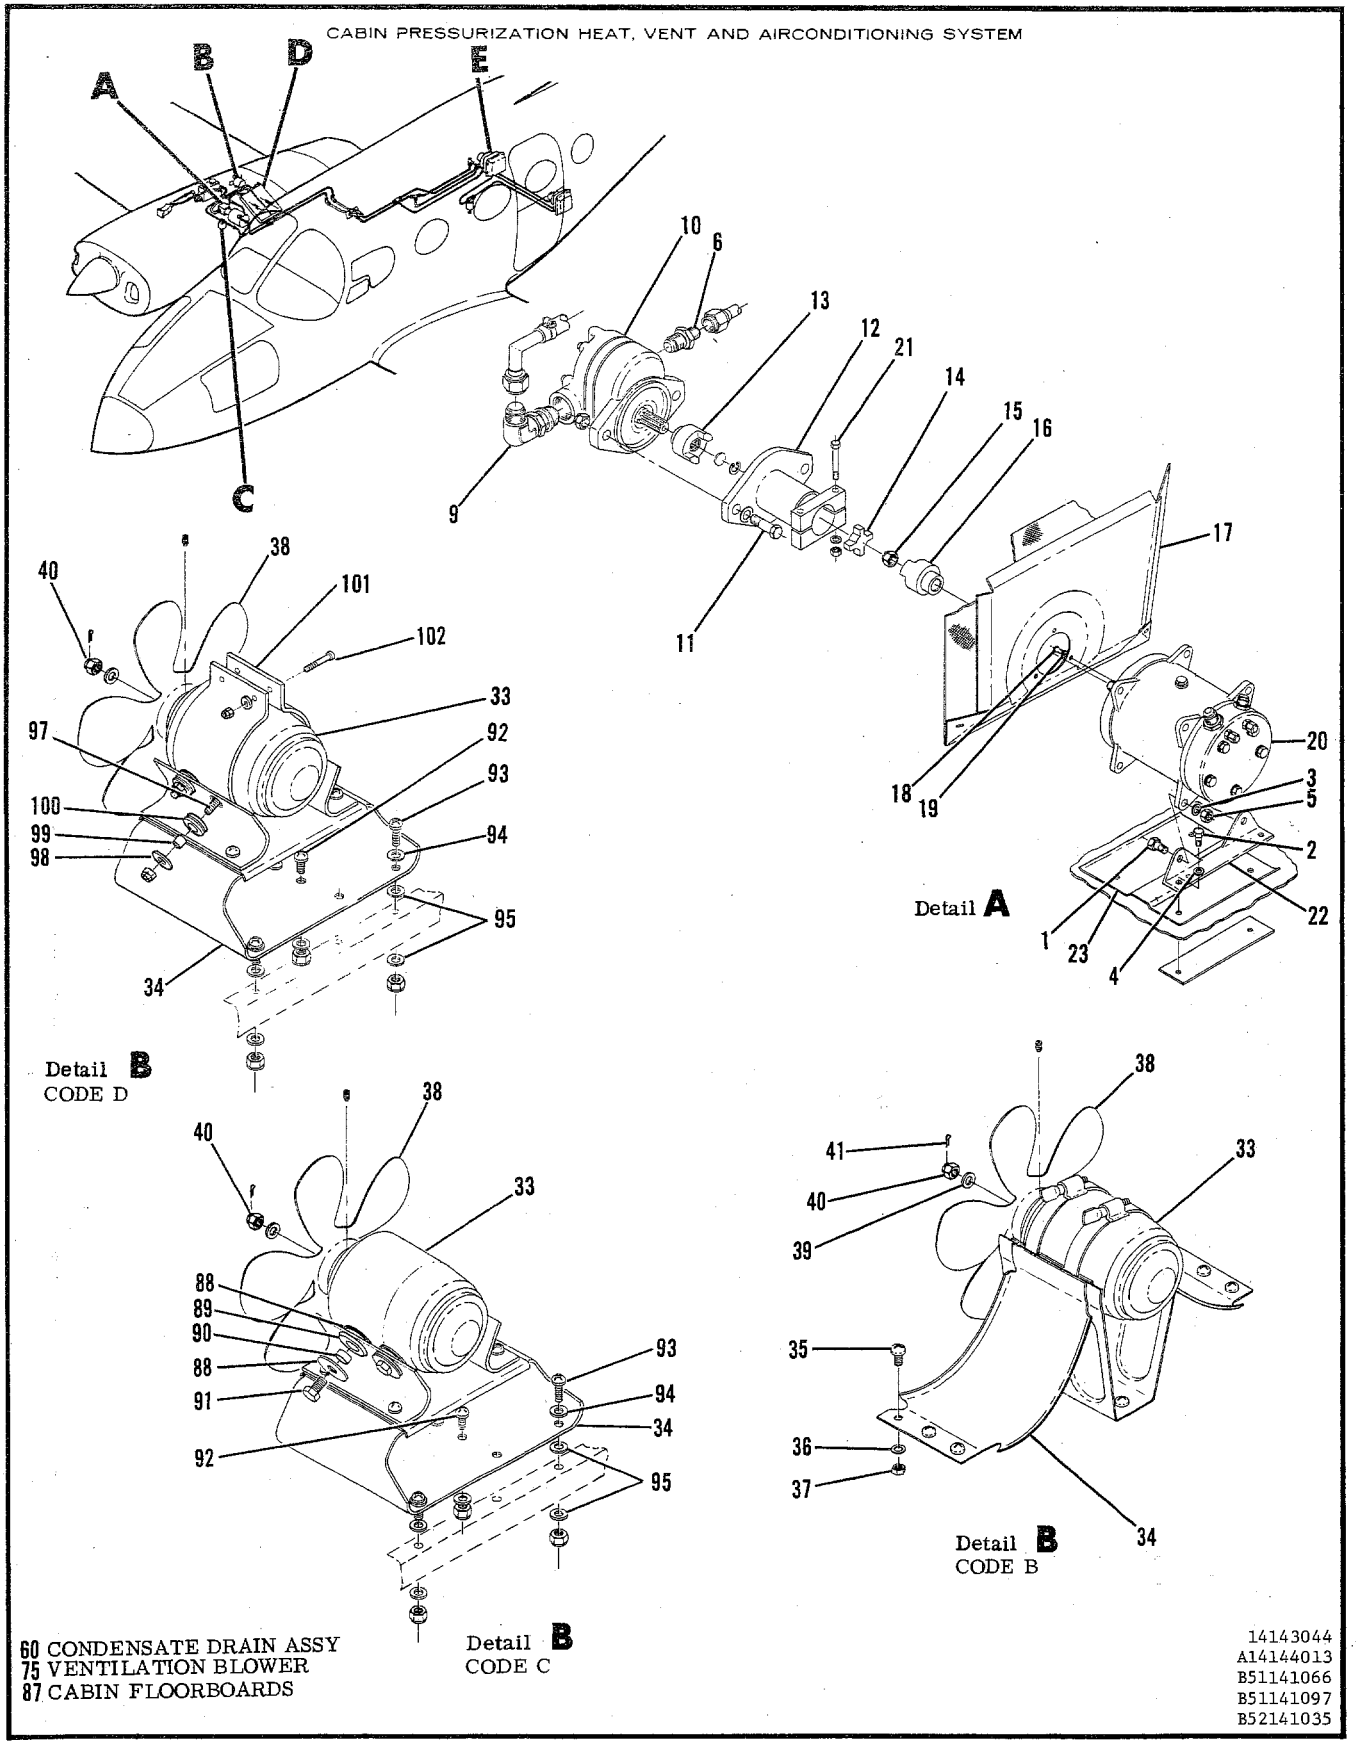

Figure 133. Airconditioning Equipment Installation (Sheet 1 of 2)

CABIN PRESSURIZATION HEAT, VENT AND AIRCONDITIONING SYSTEM

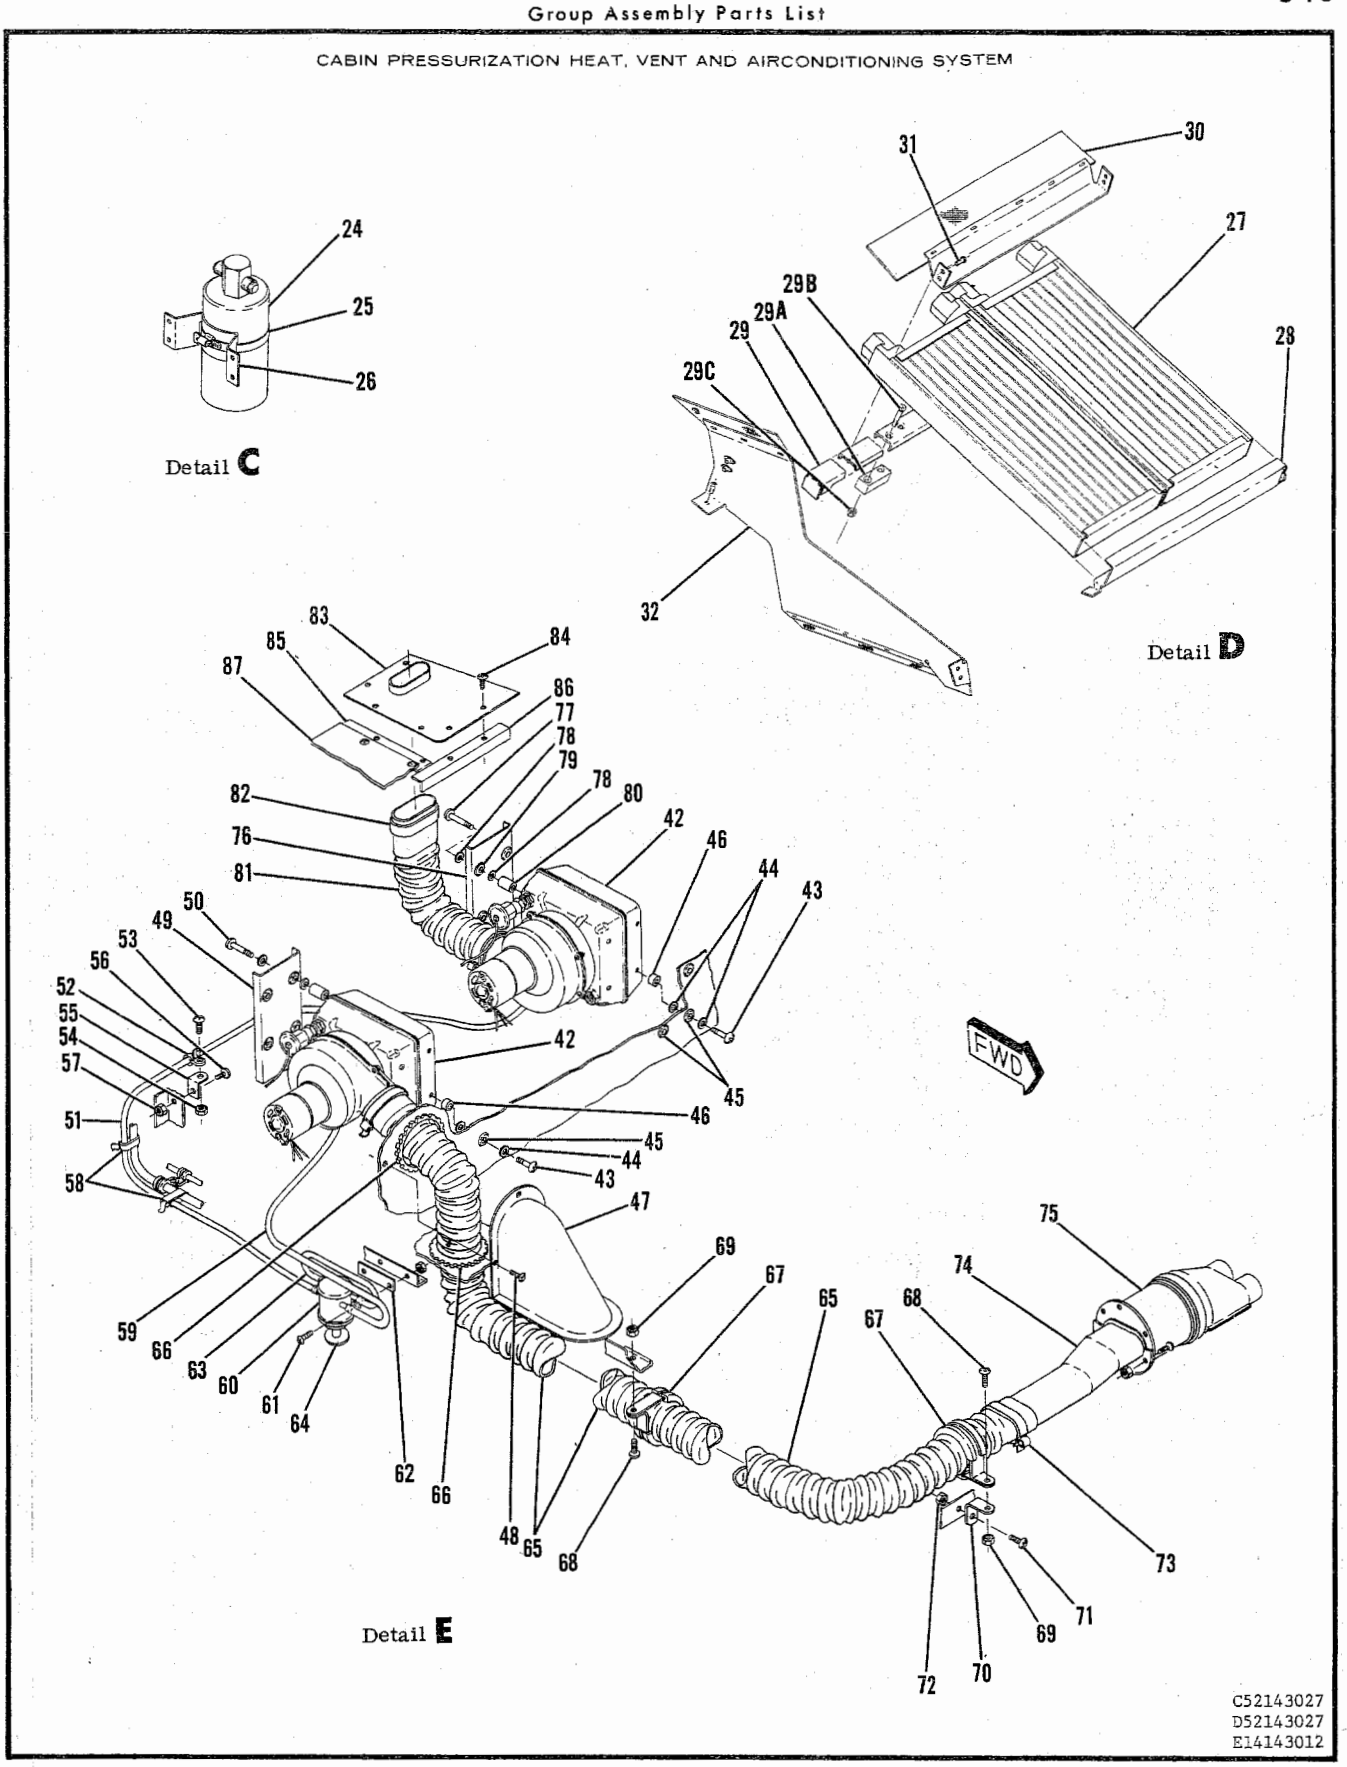

Figure 133. Airconditioning Equipment Installation (Sheet 2)

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
133 -			AIR CONDITIONING EQUIPMENT INSTALLATION	NP	A
	5154000-10		. DRIVE ASSY-COMPRESSOR		
			ATTACHING PARTS		
-1	AN6-12A		. BOLT	4	
-2	AN4-5A		. BOLT	4	
-3	AN960-616L		. WASHER	4	
-4	AN960-416L		. WASHER	4	
-5	MS21045L6		. NUT	4	
			---*---		
-6	8-10F50X-S		. . CONNECTOR COMPRESSOR MOTOR INLET PA	1	
-7			. . DELETED NOT USED		
-8			. . DELETED NOT USED		
-9	10-12C50X-S		. . ELBOW OUTLET PA	1	
-10	21303RAB	#	. . MOTOR-HYDRAULIC CESH	1	
			ATTACHING PARTS		
-11	AN7-14A		. . BOLT	2	
	AN960-716		. . WASHER	2	
	MS21045L7		. . NUT	2	
			---*---		
-12	5154033-1		. . ADAPTER-COMPRESSOR DRIVE JAA	1	
-13	5154034-2		. . COUPLING ASSY-COMPRESSOR DRIVE ADAPTER	1	
-14	5154034-5		. . SPACER	1	
-15	5154000-9		. . NUT	1	
-16	5154034-1		. . COUPLING HALF	1	
-17	5154035-7		. . BAFFLE SUPPORT ASSY	1	
			ATTACHING PARTS		
-18	MS35206-259		. . SCREW GEND	3	
-19	MS35333-39		. . LOCKWASHER	3	
			---*---		
-20	MC508	#	. . COMPRESSOR	1	
			ATTACHING PARTS		
-21	AN5-22A		. . BOLT	2	
	AN960-516L		. . WASHER	2	
	MS21045L5		. . NUT	2	
			---*---		
-22	5154009-1		. BRACKET-COMPRESSOR MOUNT WEU 5154009-4	2	E
	5154009-4		. BRACKET-COMPRESSOR MOUNT	2	F
-23	5154023-2		. PLATE-COMPRESSOR SUPPORT JAA	1	
-24	9910157-1	#	. RECEIVER DRYER ASSY	1	
			ATTACHING PARTS		
-25	S1891-48		. CLAMP	1	
			---*---		
-26	5154025-1		. BRACKET-RECEIVER DRYER MOUNT	1	
			---*---		
-27	9910134-1	#	. CONDENSER	1	
-28	5154021-1		. BRACKET-LWR CONDENSER SUPPORT	1	
-29	5154022-9		. BRACKET ASSY-UPR CONDENSER SUPPORT	1	
-29A	5154037-5		. . SPACER	1	
-29B	NAS333CPA6		. . BOLT	2	
-29C	MS25082-12		. . NUT	2	
-30	5154022-2		. AIR SEAL ASSY	1	
			ATTACHING PARTS		
-31	MS35206-229		. SCREW	2	
			---*---		
-32	5154036-5		. BAFFLE ASSY	1	
-33	9910155-1	#	. MOTOR-CONDENSER BLOWER	1	
-34	5154008-6		. MOUNT ASSY-CONDENSER BLOWER MOTOR FSO 5154042-2	1	B
	5154042-2	*	. MOUNT ASSY-CONDENSER BLOWER MOTOR	1	C
			ATTACHING PARTS		
-35	MS27039-1-07		. SCREW	9	B
-36	AN960PD10		. WASHER	AR	B
-37	MS21044N3		. NUT	9	B
			---*---		
-38	9910173-1	#	. BLADE-FAN	1	
			ATTACHING PARTS		
-39	AN960-616L		. WASHER	1	
			---*---		
-40	AN320-6		. NUT	1	
			ATTACHING PARTS		
-41	MS24665-134		. PIN-COTTER	1	
			---*---		
-42	9910158-2	#	. EVAPORATOR ASSY-LH	1	
	9910158-3	#	. EVAPORATOR ASSY-RH	1	
			ATTACHING PARTS		
-43	MS27039-1-08		. SCREW-LH & RH	6	
-44	AN960D10		. WASHER-LH & RH	6	
-45	MS35489-33		. GROMMET-LH & RH JAA	6	
-46	NAS43DD3-15		. SPACER-LH	2	
			---*---		
	5114511-1		. CONTROL ASSY-TEMPERATURE RH EVAPORATOR	1	
-47	5300937-1		. COVER-RH EVAPORATOR FWD	1	
			ATTACHING PARTS		
-48	S1021A8-8C		. SCREW	5	
			---*---		
-49	5300927-22		. BRACKET ASSY-RH EVAPORATOR SUPPORT AFT	1	
			ATTACHING PARTS		
-50	MS27039-1-22		. SCREW	4	
	AN960D10		. WASHER	8	
	MS35489-3		. GROMMET	4	
	NAS43DD3-61		. SPACER	4	
			---*---		
-51	5300929-7		. HOSE-DRAIN LH EVAPORATOR	1	
-52	CM2679-1		. STRAP-TIE	1	
			ATTACHING PARTS		
-53	MS27039-0808		. SCREW	1	
-54	MS21042L08		. NUT	1	
			---*---		

CONTINUED

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
133 -55	AN743-12	. BRACKET	1	
		ATTACHING PARTS		
-56	MS27039-0808	. SCREW	1	
-57	MS21042L08	. NUT	1	
		---*---		
-58	CM2679-2	. STRAP-TIE	2	
-59	5300929-8	. HOSE-DRAIN RH EVAPORATOR	1	
-60	9910132-1	. DRAIN ASSY-CONDENSATE	1	
		ATTACHING PARTS		
-61	MS27039-0808	. SCREW	2	
	MS21042L08	. NUT	2	
		---*---		
-62	5300929-6	. SUPPORT-DRAIN	1	
-63	5114532-3	. HOSE	1	
-64	5300929-9	. DOUBLER-SKIN	1	
-65	CM3211-12A65.0	. DUCT-RH EVAPORATOR TO VENTILATION BLOWER	1	
-66	S1050-1	. GROMMET BKI	AR	
-67	MS21919DG48	. CLAMP	2	
		ATTACHING PARTS		
-68	MS27039DD0808	. SCREW	1	
-69	MS21042L08	. NUT	1	
		---*---		
-70	AN743-12	. BRACKET	1	
		ATTACHING PARTS		
-71	MS27039DD0808	. SCREW	1	
-72	MS21042L08	. NUT	1	
		---*---		
-73	S1026BG	. CLAMP BKI	AR	
-74	5300927-5	. DUCT-RH	1	
-75	SEE FIG 129	. BLOWER-VENTILATION	REF	
-76	5300927-8	. BRACKET-LH EVAPORATOR	1	
		ATTACHING PARTS		
-77	MS27039-1-22	. SCREW	4	
-78	AN960D10	. WASHER	8	
-79	MS35489-33	. GROMMET	4	
-80	NAS43DD3-61	. SPACER	4	
		---*---		
-81	CM3211-12A25	. DUCT-LH EVAPORATOR TO FLOOR ASSY	1	
-82	S1026BG	. CLAMP BKI	AR	
-83	5300927-13	. FLOOR ASSY-LH	1	
		ATTACHING PARTS		
-84	MS27039-1-07	. SCREW	8	
		---*---		
-85	5300927-15	. SUPPORT ASSY-LH FLOOR	1	
-86	5300927-16	. ANGLE ASSY-LH FLOOR SUPPORT	1	
-87	SEE FIG 21	. FLOORBOARDS-CABIN	REF	
-88	AN970-3	. WASHER	8	C
-89	MS35489-40	. GROMMET	4	C
-90	NAS43HT4-20	. SPACER	4	C
-91	AN4H5A	. BOLT	4	C
-92	MS27039-1-09	. SCREW	3	C
	AN960-10L	. WASHER	3	C
	MS21044N3	. NUT	3	C
	5154041-3	. SHIM	1	C
-93	MS27039-1-11	. SCREW	2	C
	MS21044N3	. SCREW	2	C
-94	AN960PD10	. WASHER	2	C
-95	AN960-10L	. WASHER	4	C
-96		. DELETED NOT USED		
-97	MS24694S54	. SCREW	4	D
	MS21045-3	. NUT	4	D
-98	AN970-3	. WASHER	4	D
-99	NAS1056C6-032	. SPACER	4	D
-100	MS35489-1C	. GROMMET	4	D
-101	5195015-3	. STRAP-MOTOR SUPPORT	1	D
-102	MS27039-1-14	. SCREW	2	D
	AN960-10L	. SCREW	2	D
	MS21045-3	. NUT	2	D

SEE CESSNA CRAFTED AIRCONDITIONING SYSTEM SERVICE/PARTS MANUAL

*---WHEN ORDERING THIS PART FOR SPARES IF PART IS NOT EXISTING ON THE AIRCRAFT, SK421-62 MUST BE ORDERED

A---340-0301 TO 340A0001
B---340-0301 THRU 340-0338
C---340-0339 TO 340A0001
D---340-0301 THRU 340-0338 & AIRCRAFT MODIFIED BY SK421-62
E---340-0301 THRU 340-0345
F---340-0346 TO 340A0001

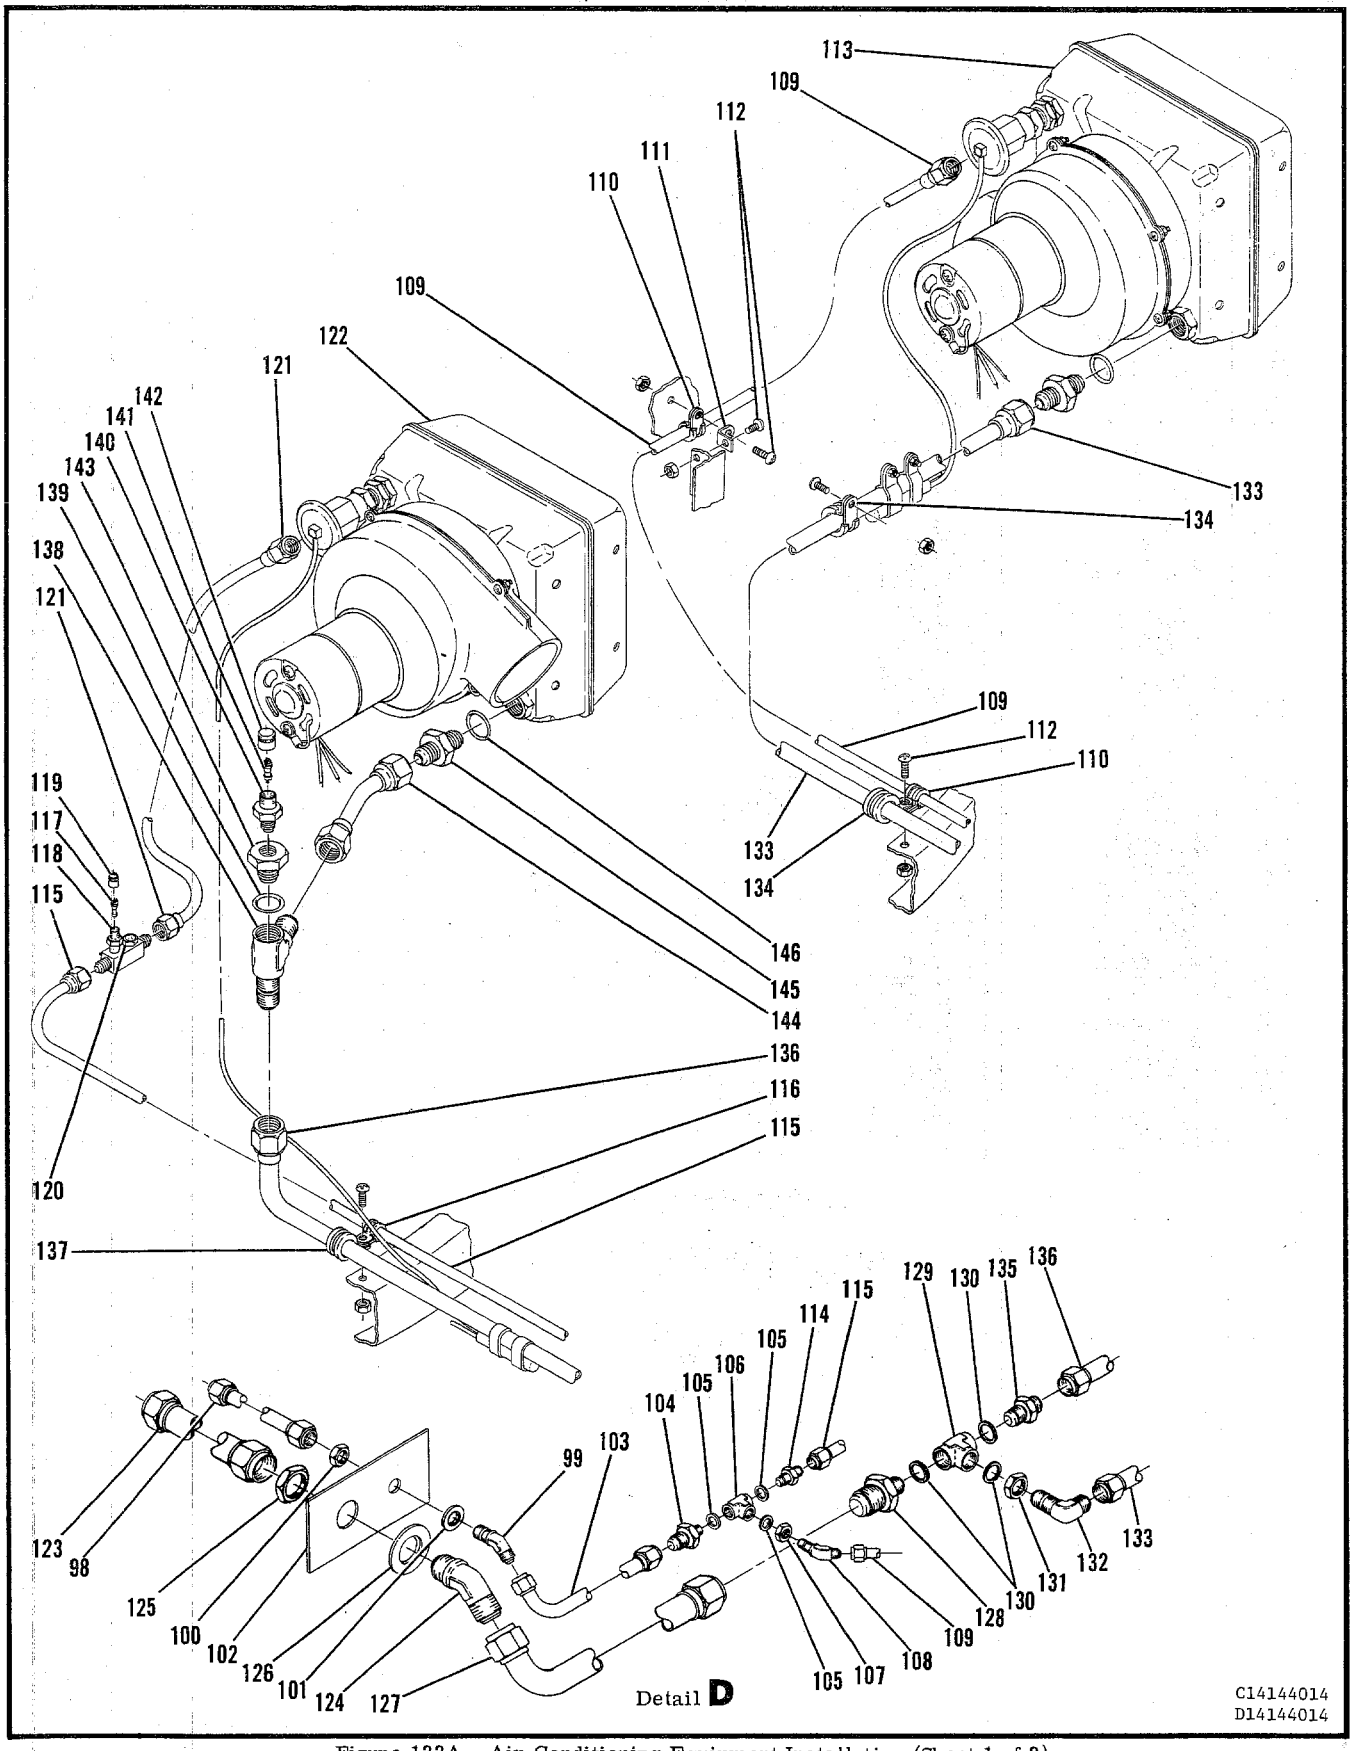

Figure 133A. Air Conditioning Equipment Installation (Sheet 1 of 3)

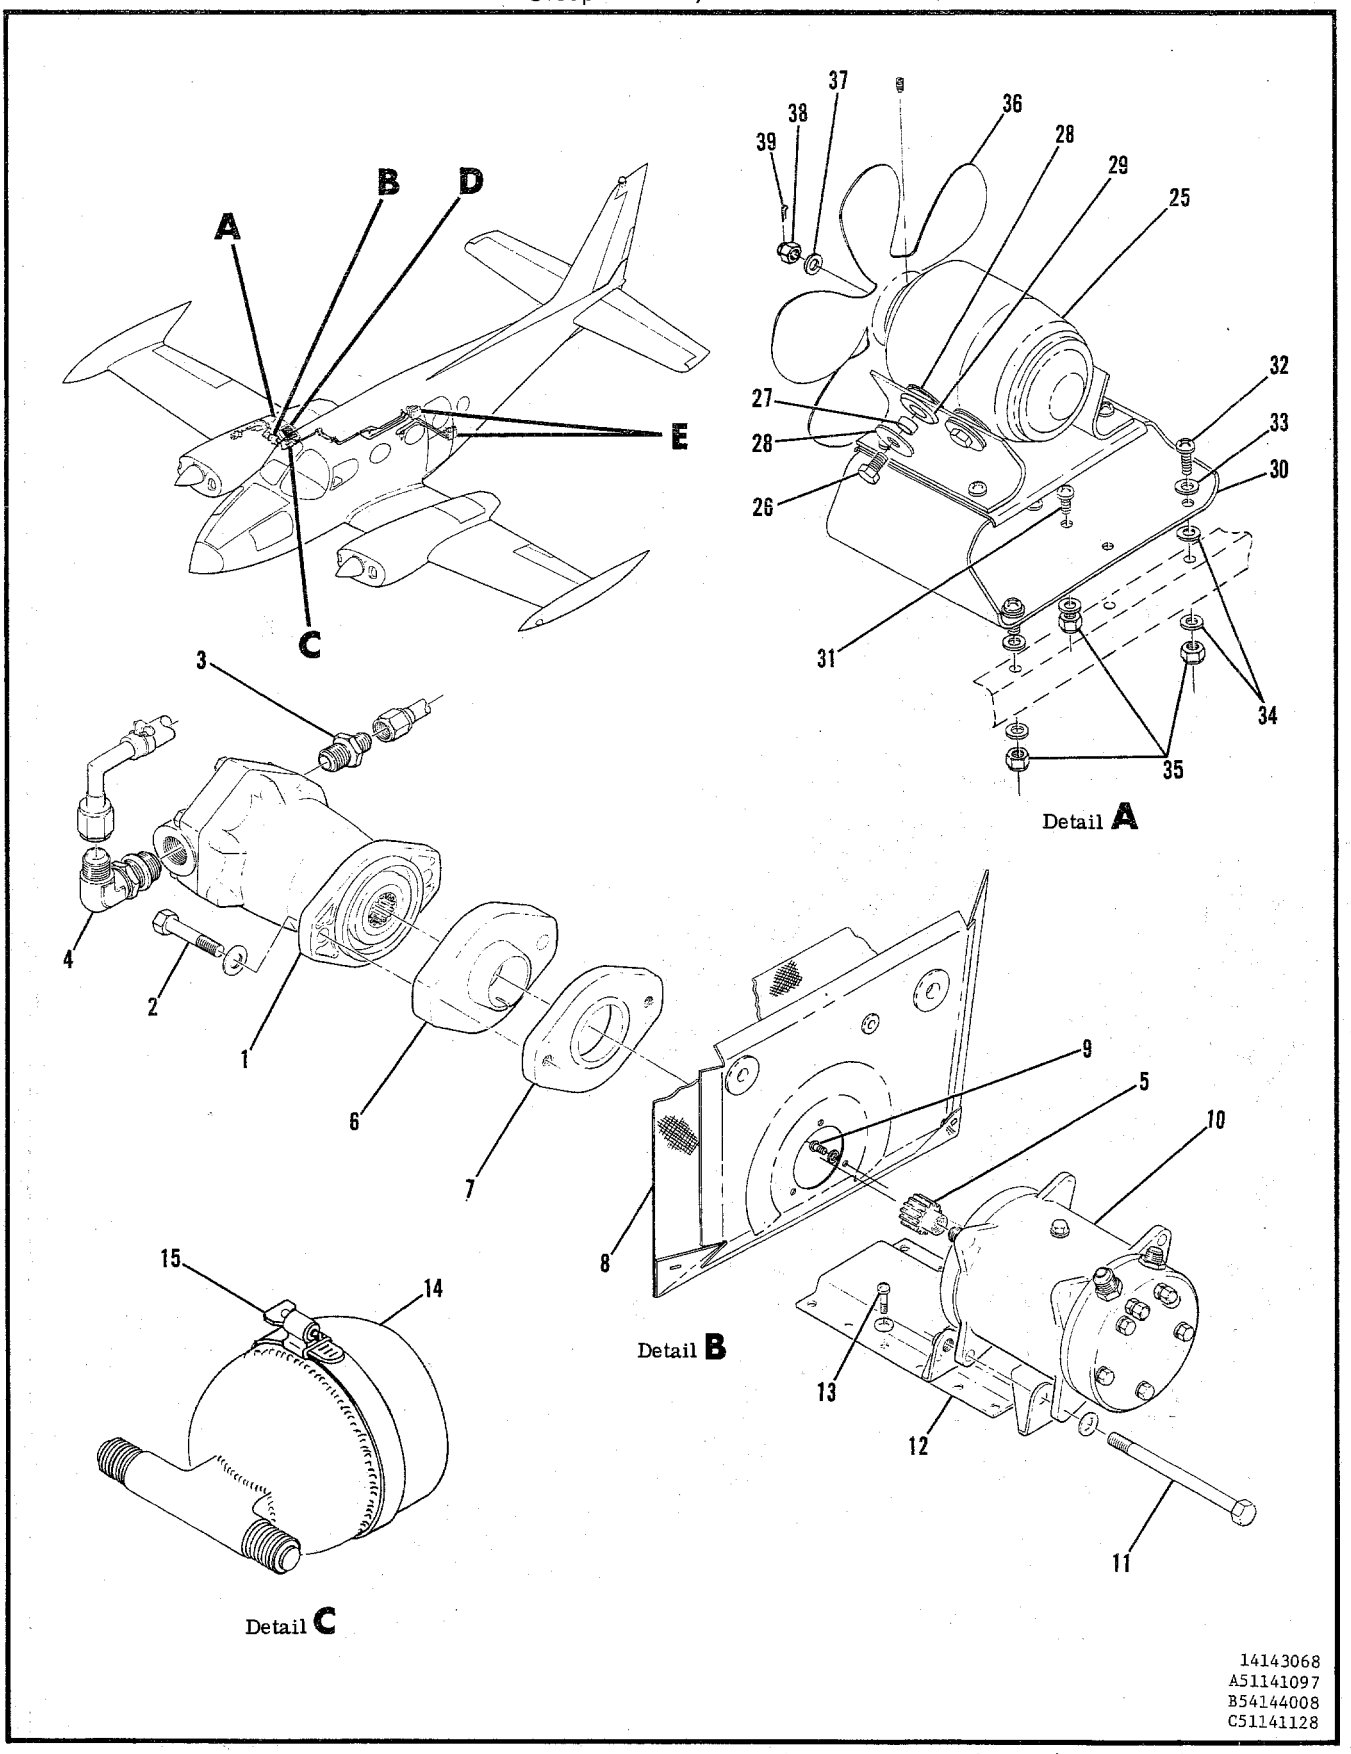

Figure 133A. Air Conditioning Equipment Installation (Sheet 2)

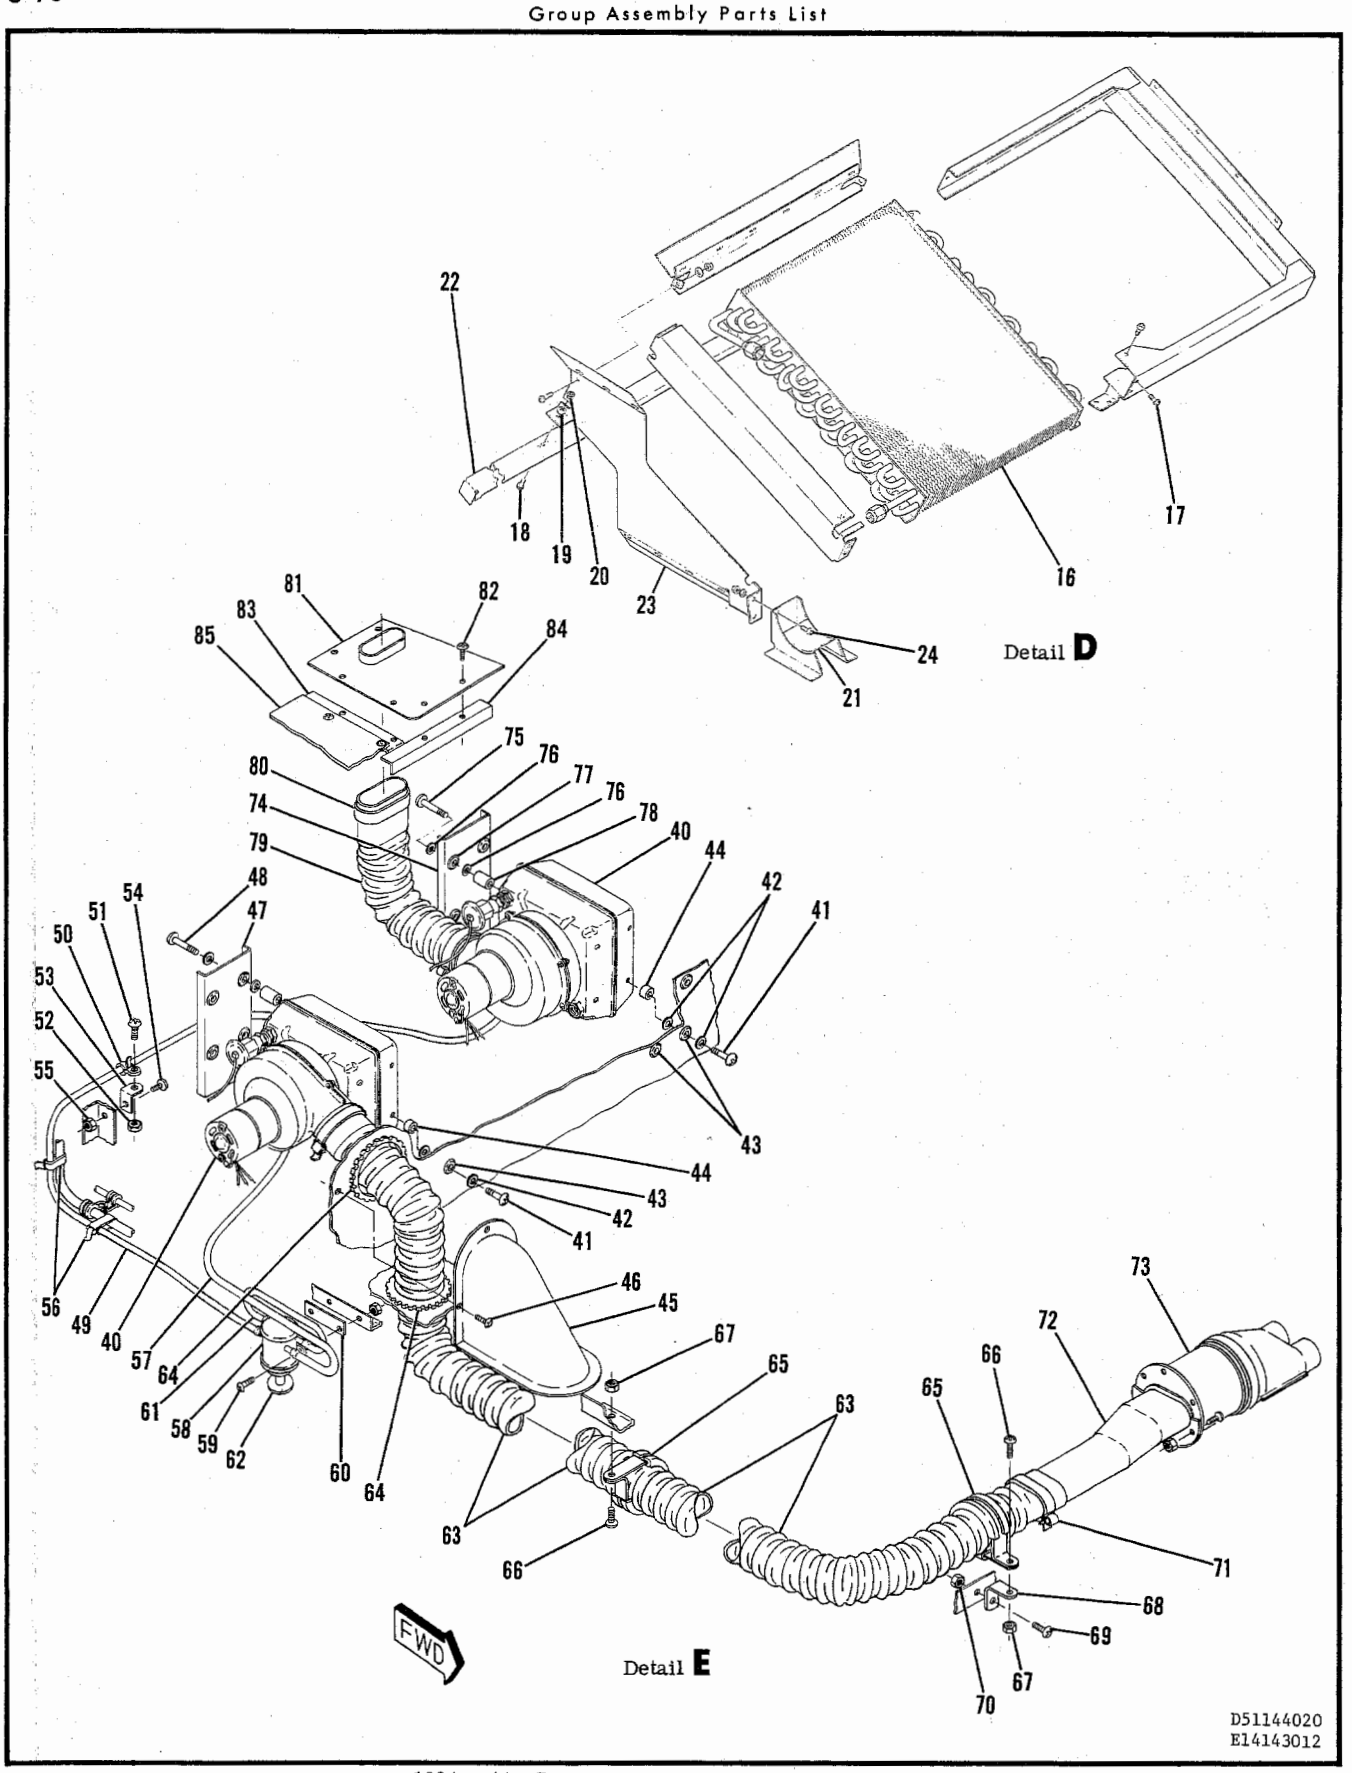

Figure 133A. Air Conditioning Equipment Installation (Sheet 3)

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
133A-			AIR CONDITIONING EQUIPMENT INSTALLATION	NP	A
	5154060-6		. COMPRESSOR DRIVE ASSY	1	
-1	74118LAA	#	. . MOTOR-HYDRAULIC CESH	1	
			ATTACHING PARTS		
-2	AN6-16A		. . BOLT	2	
	AN960-616L		. . WASHER	2	
			---*---		
-3	8-10F50X-S		. . CONNECTOR MOTOR INLET PORT PA	1	
-4	10C50X-S		. . ELBOW MOTOR RETURN PORT PA	1	
-5	5154055-1		. . COUPLING	1	
-6	5154056-1		. . ADAPTER ASSY	1	
-7	5154058-2		. . RETAINING RING ASSY	1	
-8	5154035-7		. . BAFFLE SUPPORT ASSY	1	
			ATTACHING PARTS		
-9	MS35206-259		. . SCREW	3	
	MS35333-39		. . LOCK WASHER	3	
			---*---		
-10	7088	#	. . COMPRESSOR ABIN	1	
			ATTACHING PARTS		
-11	AN6-50A		. . BOLT	2	
	AN960-616L		. . WASHER	2	
			---*---		
-12	5154057-1		. MOUNT-COMPRESSOR	1	
			ATTACHING PARTS		
-13	MS27039-1-08		. SCREW	12	
	AN960-10L		. WASHER	12	
			---*---		
-14	9910157-3	#	. RECEIVER-DRYER	1	
-15	AN737TW10		. CLAMP	1	
-16	5154049-3		. CONDENSER ASSY	1	
			ATTACHING PARTS		
-17	MS27039-1-06		. SCREW	10	
-18	MS27039-1-07		. SCREW	2	
-19	AN960-10L		. WASHER	12	
-20	MS21042L3		. NUT	2	
			---*---		
-21	5154062-1		. SUPPORT ASSY LWR	1	
-22	5154022-9		. BRACKET ASSY UPR	1	
-23	5154049-17		. BAFFLE ASSY	1	
			ATTACHING PARTS		
-24	MS27039-0806		. SCREW	2	
	AN960-8		. WASHER	2	
	MS21042L08		. NUT	2	
			---*---		
-25	9910155-1	#	. MOTOR-CONDENSER BLOWER	1	
			ATTACHING PARTS		
-26	AN4H5A		. BOLT	4	
-27	NAS43HT4-20		. SPACER	4	
-28	AN970-4		. WASHER	8	
-29	MS35489-4D		. GROMMET	4	
			---*---		
-30	5154042-2		. MOUNT ASSY-CONDENSER BLOWER MOTOR	1	
			ATTACHING PARTS		
-31	MS27039-1-09		. SCREW	3	
-32	MS27039-1-11		. SCREW	1	
-33	AN960PD10		. WASHER	AR	
-34	AN960-10L		. WASHER	7	
-35	MS21044N3		. NUT	4	
			---*---		
-36	9910173-1	#	. BLADE-FAN	1	
			ATTACHING PARTS		
-37	AN960-616L		. WASHER	1	
-38	AN320-6		. NUT	1	
-39	MS24665-134		. PIN-COTTER	1	
			---*---		
-40	9910158-2	#	. EVAPORATOR ASSY-LH	1	
	9910158-3	#	. EVAPORATOR ASSY-RH	1	
			ATTACHING PARTS		
-41	MS27039-1-08		. SCREW LH & RH	6	
-42	AN960D10		. WASHER LH & RH	6	
-43	MS35489-33		. GROMMET LH & RH	6	
-44	NAS43DD3-15		. SPACER LH	2	
			---*---		
	5114511-1		. CONTROL ASSY-TEMPERATURE RH EVAPORATOR	1	
-45	5300937-1		. COVER-RH EVAPORATOR FWD	1	
			ATTACHING PARTS		
-46	S1021A8-8C		. SCREW	5	
			---*---		
-47	5300927-22		. BRACKET ASSY-AFT RH EVAPORATOR SUPPORT	1	
			ATTACHING PARTS		
-48	MS27039-1-22		. SCREW	4	
	AN960D10		. WASHER	8	
	MS35489-3		. GROMMET	4	
	NAS43DD3-61		. SPACER	4	
			---*---		

CONTINUED

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
133A-49	5300929-7	. HOSE-DRAIN LH EVAPORATOR	1	
-50	CM2679-1	. TIE STRAP	1	
		ATTACHING PARTS		
-51	MS27039-0808	. SCREW	1	
-52	MS21042L08	. NUT	1	
		---*---		
-53	AN743-12	. BRACKET	1	
		ATTACHING PARTS		
-54	MS27039-0808	. SCREW	1	
-55	MS21042L08	. NUT	1	
		---*---		
-56	CM2679-2	. TIE STRAP	2	
-57	5300929-8	. HOSE-DRAIN RH EVAPORATOR	1	
-58	9910132-1	. DRAIN ASSY-CONDENSATE	1	
		ATTACHING PARTS		
-59	MS27039-0808	. SCREW	2	
	MS21042L08	. NUT	2	
		---*---		
-60	5300929-6	. SUPPORT-DRAIN	1	
-61	5114532-3	. HOSE	1	
-62	5300929-9	. DOUBLER-SKIN	1	
-63	CM3211-12A65.0	. DUCT-RH EVAPORATOR TO VENTILATION BLOWER	1	
-64	S1050-1	. GROMMET BKI	AR	
-65	MS21919DG48	. CLAMP	2	
		ATTACHING PARTS		
-66	MS27039DD0808	. SCREW	1	
-67	MS21042L08	. NUT	1	
		---*---		
-68	AN743-12	. BRACKET	1	
		ATTACHING PARTS		
-69	MS27039DD0808	. SCREW	1	
-70	MS21042L08	. NUT	1	
		---*---		
-71	S10268G	. CLAMP BKI	AR	
-72	5300927-5	. DUCT-RH	1	
-73	SEE FIG 129A	. BLOWER-VENTILATION	1	
-74	5300927-8	. BRACKET-LH EVAPORATOR	1	
		ATTACHING PARTS		
-75	MS27039-1-12	. SCREW	4	
-76	AN960D10	. WASHER	8	
-77	MS35489-33	. GROMMET	4	
-78	NAS43DD3-61	. SPACER	4	
		---*---		
-79	CM3211-12A25	. DUCT-LH EVAPORATOR TO FLOOR ASSY	1	
-80	S10268G	. CLAMP BKI	AR	
-81	5300927-13	. FLOOR ASSY-LH	1	
		ATTACHING PARTS		
-82	MS27039-1-07	. SCREW	8	
		---*---		
-83	5300927-15	. SUPPORT ASSY-LH FLOOR	1	
-84	5300927-16	. ANGLE ASSY-LH FLOOR SUPPORT	1	
-85	SEE FIG 21	. FLOORBOARDS-CABIN	REF	
		# SEE CESSNA CRAFTED AIR CONDITIONING SERVICE/PARTS MANUAL		
		A---340A0001 & ON		

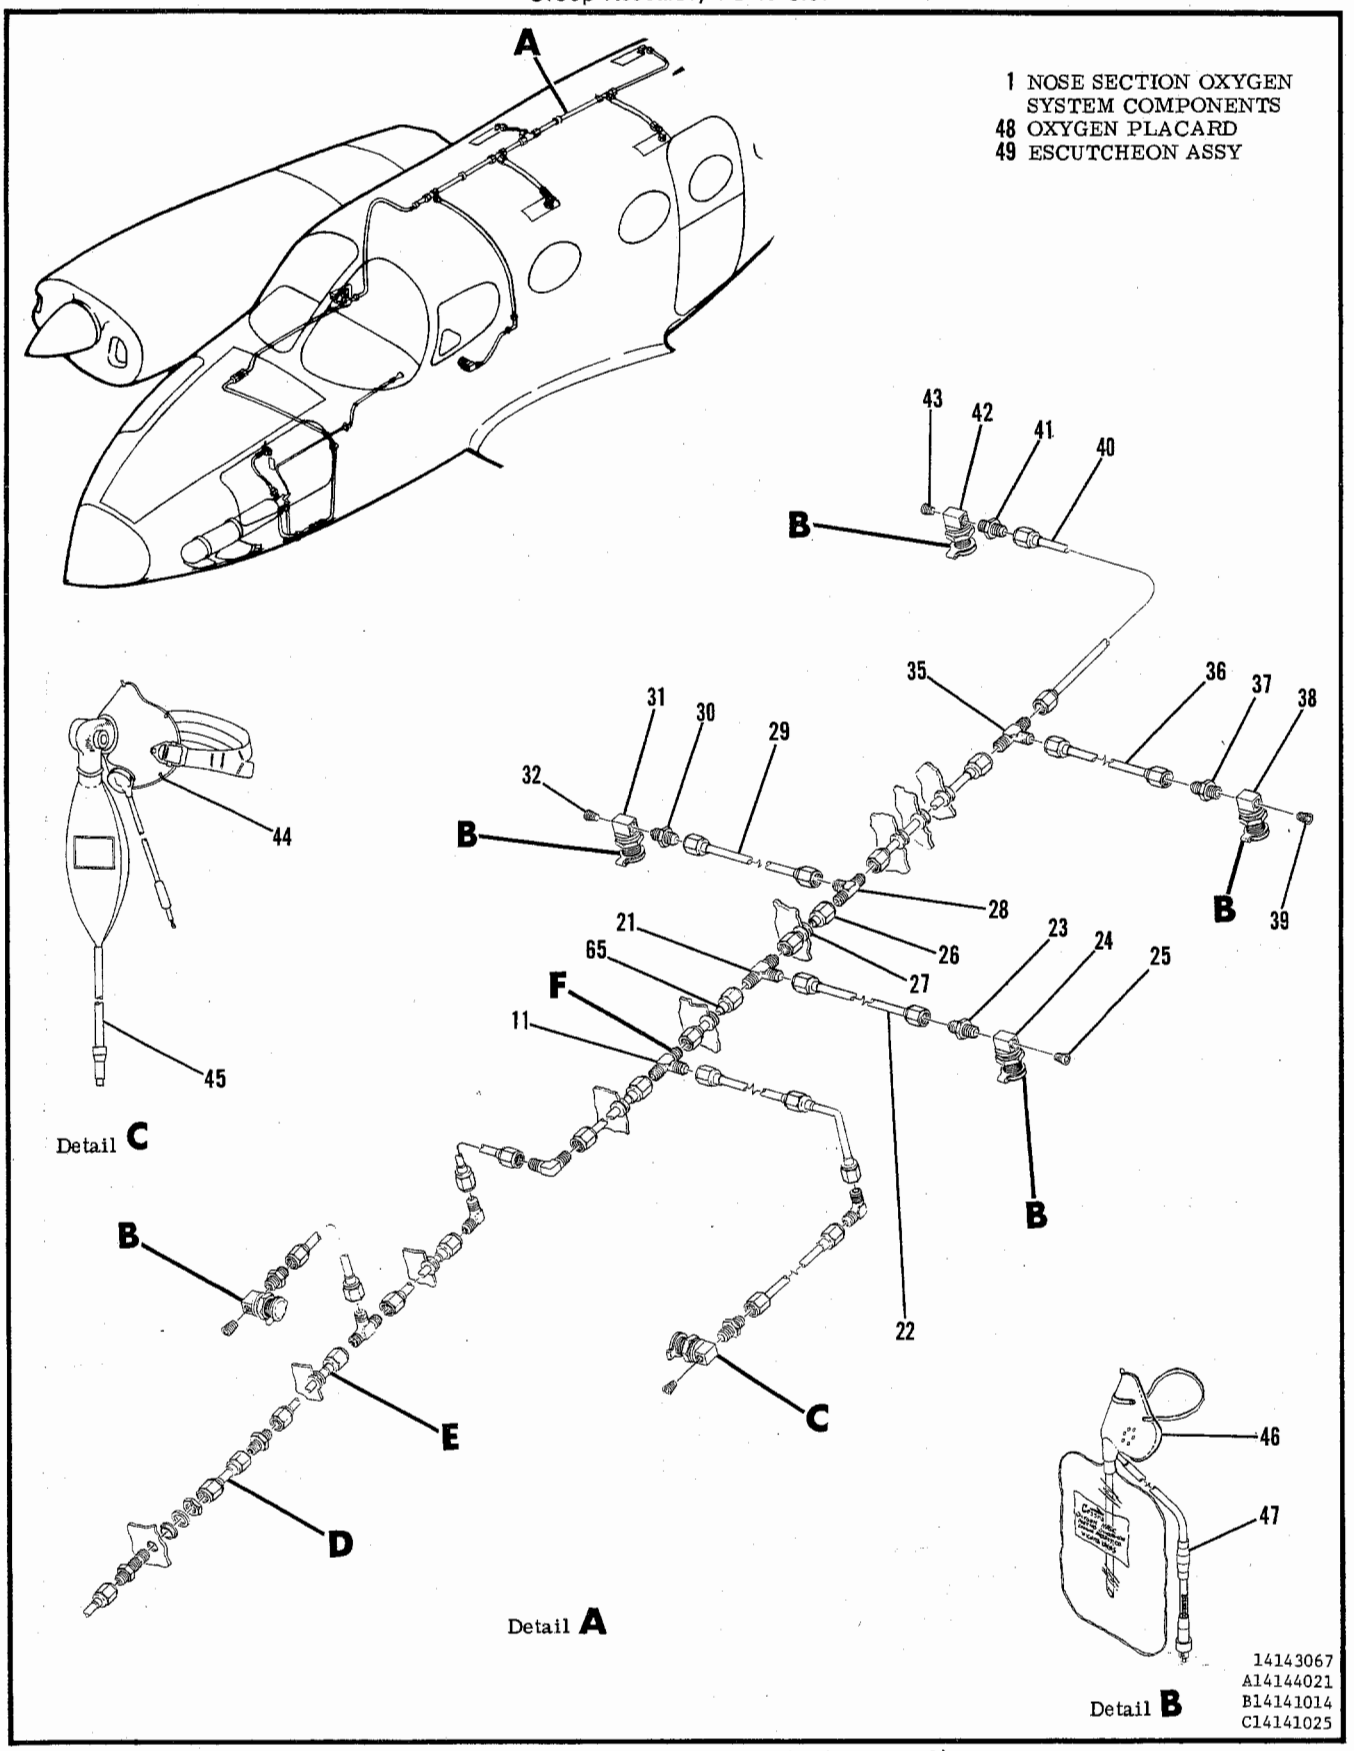

Figure 134. Oxygen System Installation (Sheet1 of 2)

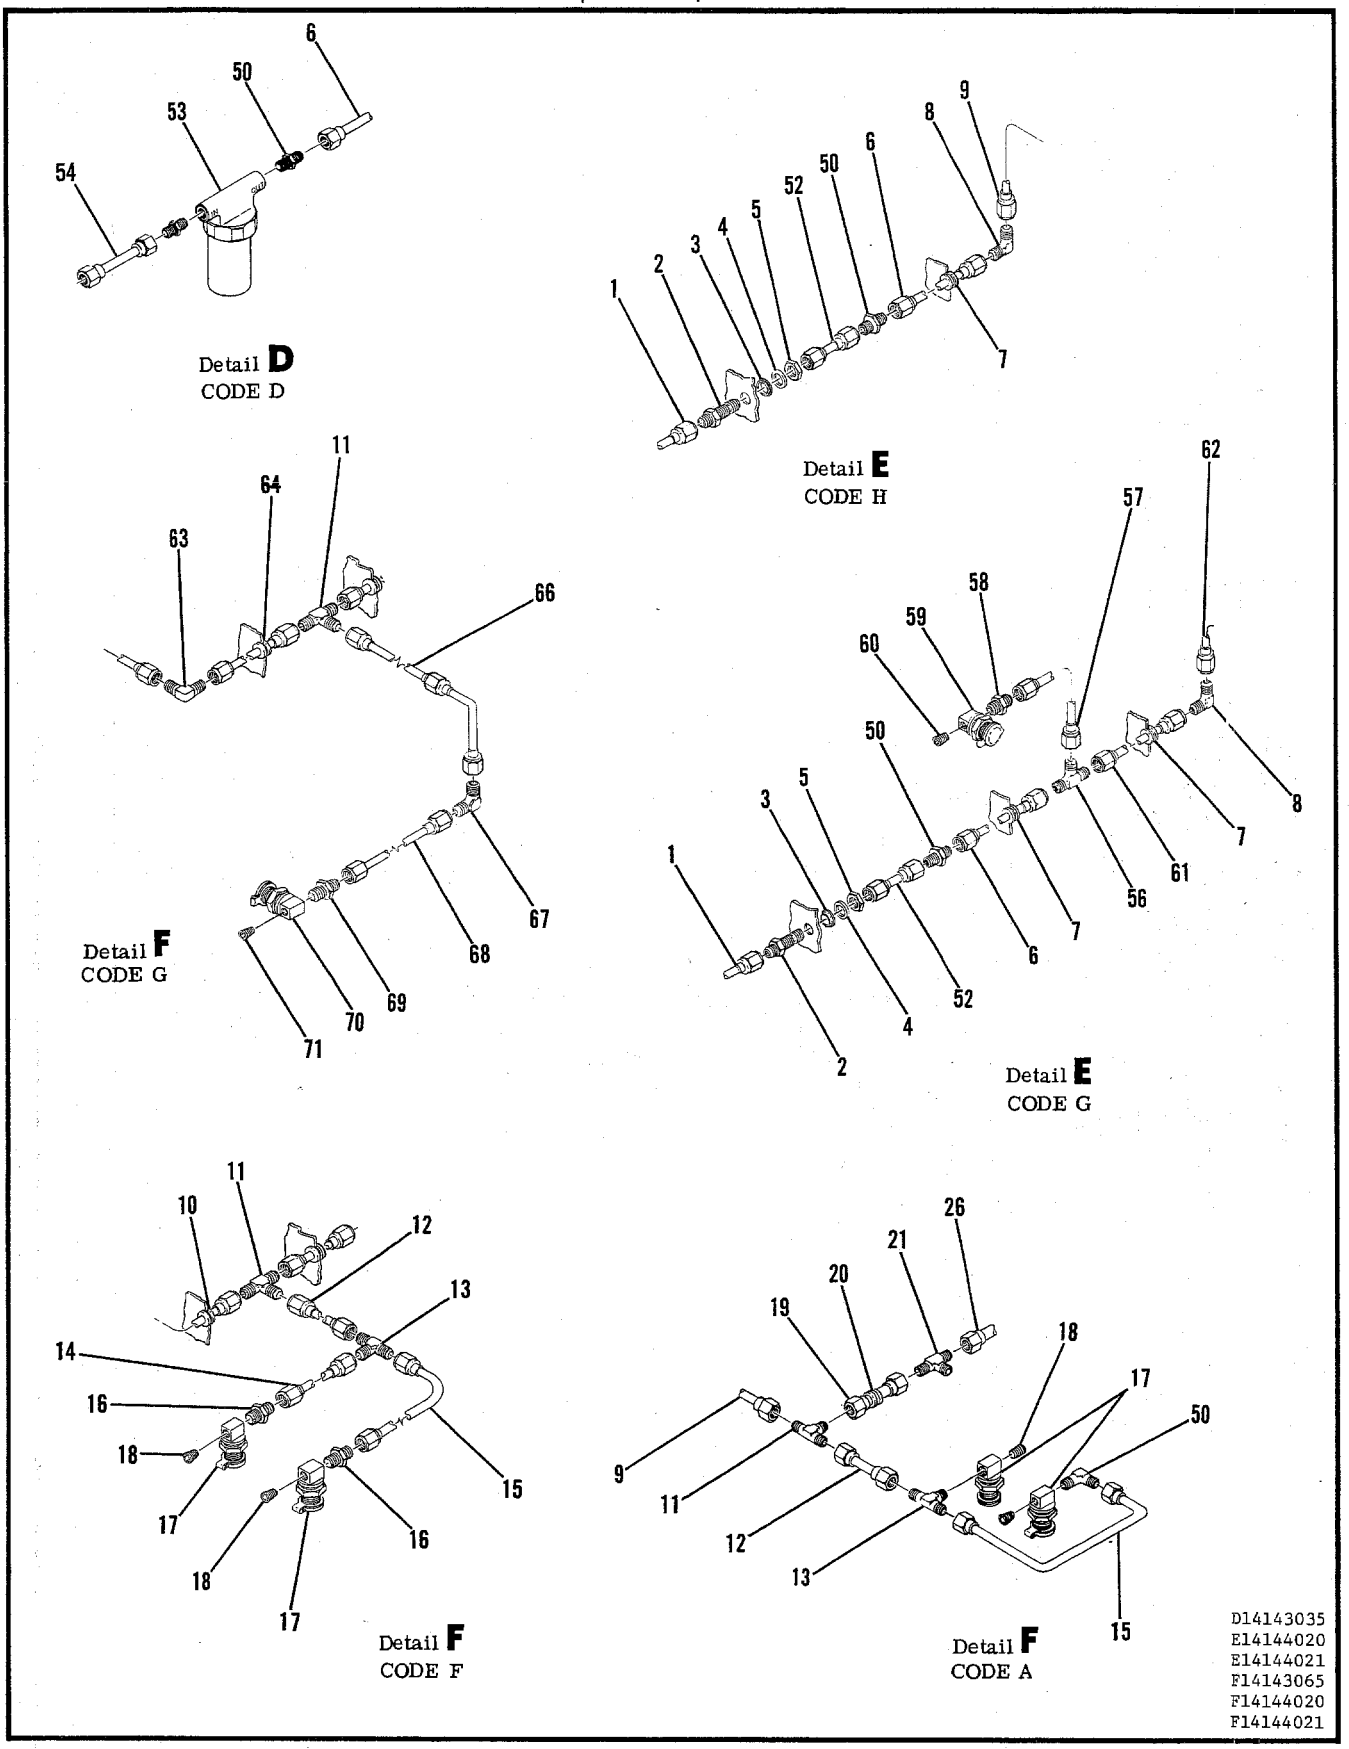

Figure 134. Oxygen System Installation (Sheet 2)

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
134 -		OXYGEN SYSTEM INSTALLATION	NP	
-1	SEE FIG 135	. NOSE SECTION OXYGEN SYSTEM COMPONENTS	REF	
-2	AN832-5D	. UNION	1	
-3	250-215-5	. LOCK-O-SEAL PKSC	1	
-4	AN960-816	. WASHER	1	
-5	AN924-5D	. NUT	1	
-6	5300113-2	. LINE ASSY BULKHEAD TO ELBOW	1	C
	5300113-23	. LINE ASSY 11.0 CU FT SYSTEM	1	E
-7	MS35489-15S	. GROMMET	6	
	MS35489-37S	. GROMMET	1	
-8	AN821-5D	. ELBOW	1	
-9	5300113-6	. LINE ASSY ELBOW TO TEE	1	A
	5300113-19	. LINE ASSY ELBOW TO TEE	1	F
-10	MS35489-15S	. GROMMET	1	
-11	AN824-5D	. TEE	1	
-12	5300113-11	. LINE ASSY	1	H
-13	AN824-5D	. TEE	1	A
	MS20825-5D	. TEE	1	F
-14	5300113-12	. LINE ASSY TEE TO VALVE	1	H
-15	5300113-13	. LINE ASSY TEE TO VALVE	1	A
	5300113-21	. LINE ASSY TEE TO ELBOW	1	F
-16	AN816-5D	. NIPPLE	1	H
-17	C166006-0201	. VALVE ASSY-AIR	2	C
	C166006-0202	. VALVE ASSY-AIR	2	E
-18	AN932-2D	. PLUG	2	H
-19	5300113-7	. LINE ASSY TEE TO CROSS	1	H
-20	MS35489-15S	. GROMMET	1	
-21	AN824-5D	. TEE	1	
-22	5300113-10	. LINE ASSY TEE TO LH VALVE	1	
-23	AN816-5D	. NIPPLE	1	
-24	C166006-0201	. VALVE ASSY-AIR	1	C
	C166006-0202	. VALVE ASSY-AIR	1	D
-25	AN932-4D	. PLUG	1	
-26	5300113-7	. LINE ASSY TEE TO TEE	1	A
	5300113-20	. LINE ASSY TEE TO TEE	1	B
-27	MS35489-15S	. GROMMET	4	
-28	AN824-5D	. TEE	1	
-29	5300113-9	. LINE ASSY TEE TO RH VALVE	1	
-30	AN816-5D	. NIPPLE	1	
-31	C166006-0201	. VALVE ASSY-AIR	1	C
	C166006-0202	. VALVE ASSY-AIR	1	D
-32	AN932-2D	. PLUG	1	
-33	5300113-18	. LINE ASSY TEE TO TEE	1	
-34	MS35489-15S	. GROMMET	4	
-35	AN824-5D	. TEE	1	
-36	5300113-10	. LINE ASSY TEE TO LH VALVE	1	
-37	AN816-5D	. NIPPLE	1	
-38	C166006-0201	. VALVE ASSY-AIR	1	C
	C166006-0202	. VALVE ASSY-AIR	1	D
-39	A932-2D	. PLUG	1	
-40	5300113-16	. LINE ASSY TEE TO RH VALVE	1	
-41	AN815-5D	. NIPPLE	1	
-42	C166006-0201	. VALVE ASSY-AIR	1	C
	C166006-0202	. VALVE ASSY-AIR	1	D
-43	AN932-2D	. PLUG	1	
	C166005-0802	. MASK & LINE ASSY PILOT 11 CU FT SYM	1	
	C166005-0802	. MASK & LINE ASSY PILOT 76.6 CU FT SYM	1	C
	C166015-0201	. MASK & LINE ASSY-PILOT 76.6 CU FT SYM	1	D
-44	C166009-0801	. . MASK ASSY	1	
-45	C166005-0603	. . LINE & FITTING ASSY USED ON C166005-0802	1	
	C166015-0301	. . LINE & FITTING ASSY USED ON C166015-0201	1	
	C166005-0605	. MASK & LINE ASSY COPILOT & PASSENGERS 11 CU FT SYM	5	
	C166015-0301	. . LINE & FITTING ASSY	1	D
	C166005-0605	. MASK & LINE ASSY COPILOT & PASSENGERS 76.6 SYM	5	C
	C166015-0101	. MASK & LINE ASSY COPILOT & PASSENGERS 76.6 SYM	5	D
-46	C166009-0701	. . MASK ASSY	1	
-47	C166005-0606	. . LINE & FITTING ASSY USED ON C166005-0605	1	
	C166015-0301	. . LINE & FITTING ASSY USED ON C166015-0101	1	D
-48	SEE FIG 1	. PLACARD-OXYGEN	1	
-49	SEE FIG 129	. ESCUTCHEON ASSY	4	
-50	AN816-5D	. NIPPLE	1	A
	MS20822-5D	. ELBOW	1	B
-51	AN816-5D	. NIPPLE	2	D
-52	5300113-25	. LINE ASSY 11.0 CU FT SYSTEM	1	D
-53	ZR675	. REGULATOR-ALT COMPENSATOR 76.6 CU FT SYSTEM ZEPA	1	D
-54	5300113-24	. LINE ASSY 76.6 CU FT SYSTEM	1	D
-55	5300113-32	. LINE ASSY-RH NIPPLE TO TEE	1	G
-56	MS20825-5D	. TEE	1	G
-57	5300113-28	. LINE ASSY-RH TEE TO NIPPLE	1	G
-58	AN816-5D	. NIPPLE	1	G
-59	C166006-0202	. VALVE ASSY	1	G
-60	AN932-2D	. PLUG	1	G
-61	5300113-29	. LINE ASSY-RH TEE TO ELBOW	1	G
-62	5300113-30	. LINE ASSY-RH ELBOW TO ELBOW	1	G
-63	MS20822-5D	. ELBOW	1	G

CONTINUED

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
134 -64	0826018-204	. LINE ASSY-RH ELBOW TO TEE	1	G
-65	5300113-31	. LINE ASSY TEE TO TEE	1	G
-66	5300113-33	. LINE ASSY-LH TEE TO ELBOW	1	G
-67	MS20822-5D	. ELBOW	1	G
-68	5300113-34	. LINE ASSY-LH ELBOW TO NIPPLE	1	G
-69	AN816-5D	. NIPPLE	1	G
-70	C166066-0202	. VALVE ASSY	1	G
-71	AN932-20	. PLUG	1	G
		A---340-0001 THRU 340-0042 B---340-0043 & ON C---340-C001 THRU 340-0150 D---340-0151 & ON E---340-0151 TO 340A0001 F---340-0043 TO 340A0001 G---340AC001 & ON H---340-C001 TO 340A0001		

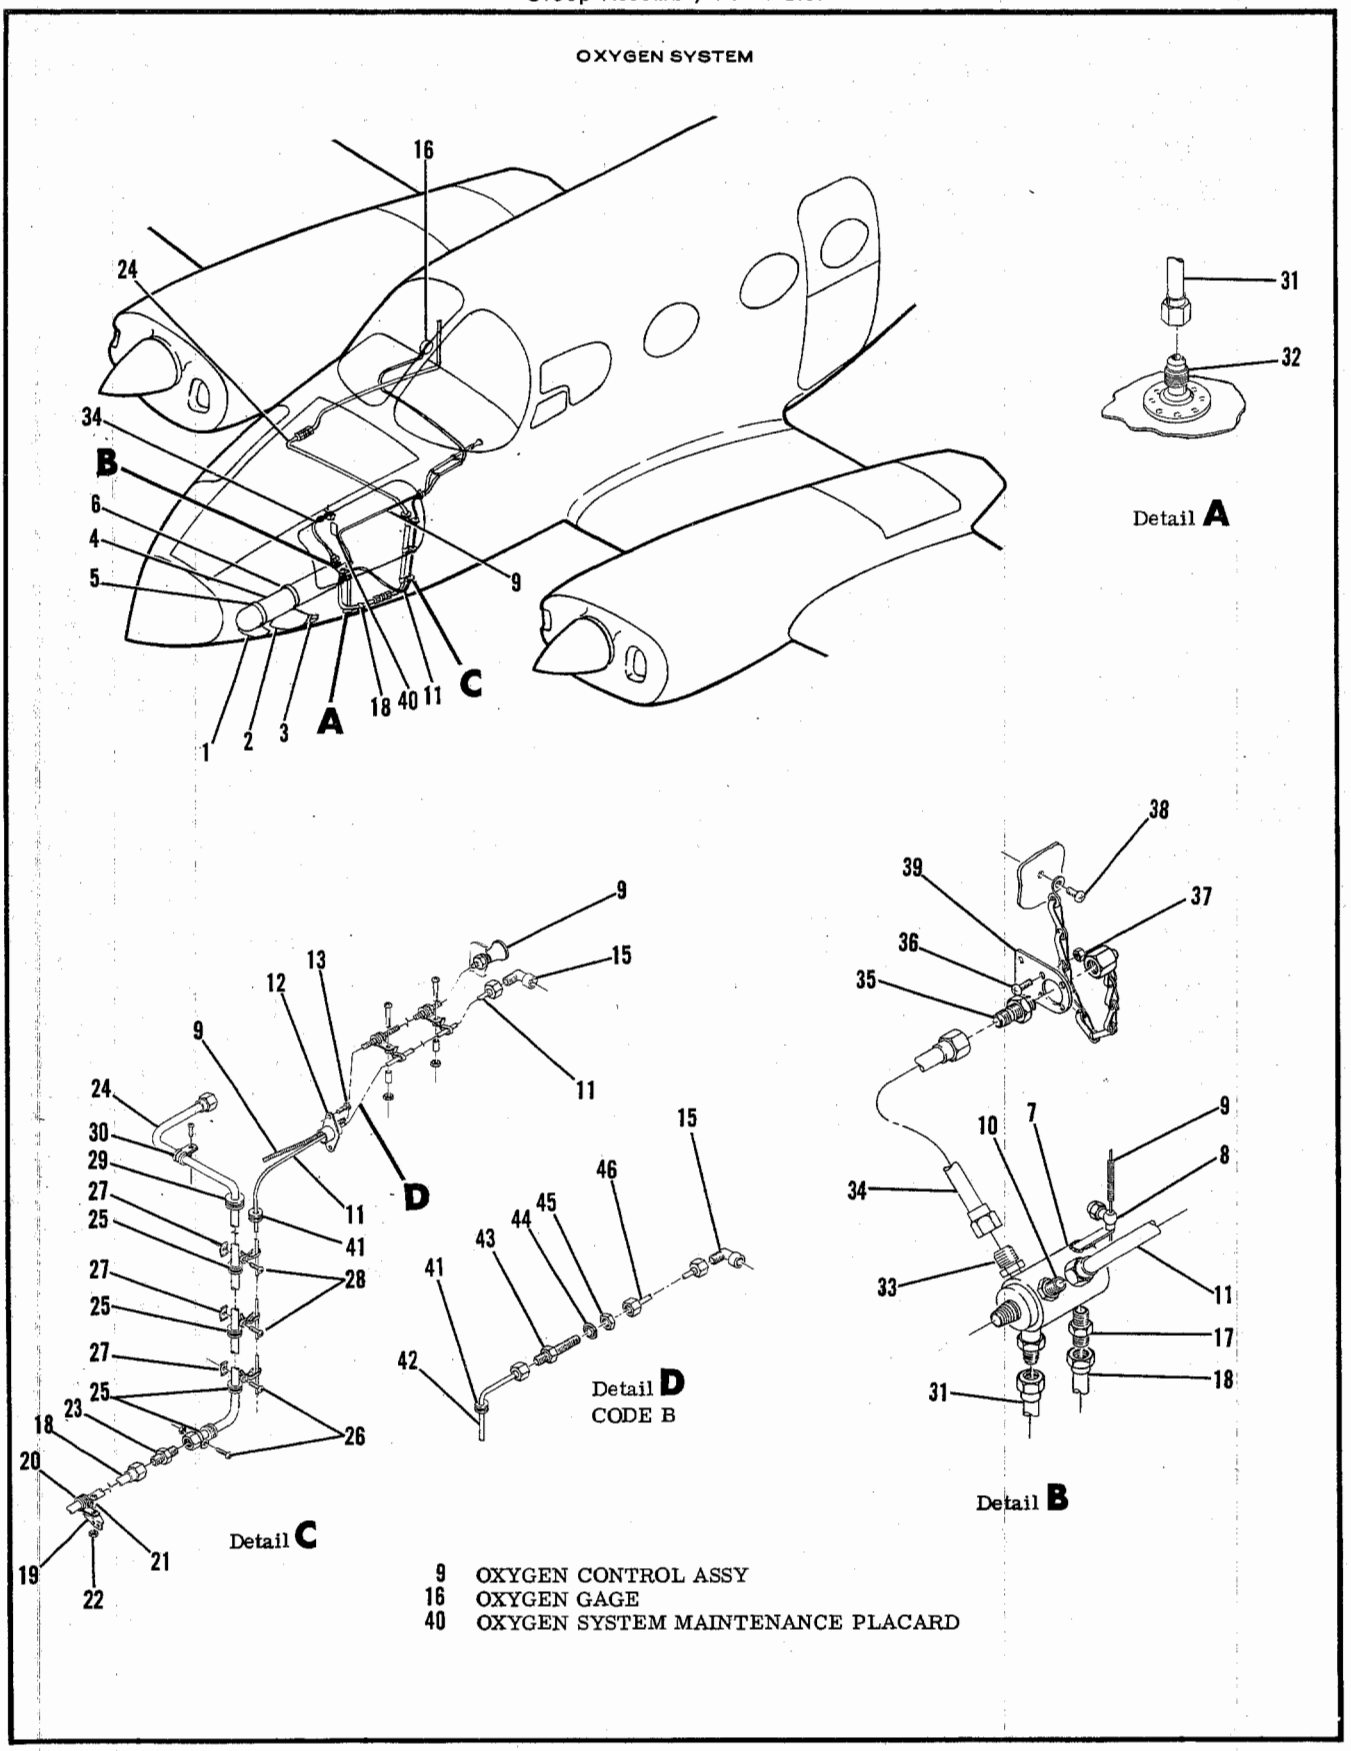

Figure 135. Nose Section Oxygen System Components

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
135 -		NOSE SECTION OXYGEN SYSTEM COMPONENTS	NP	
-1	5318507-17	. SUPPORT-FWD 11.0 CU FT CYLINDER	1	
	5318507-15	. SUPPORT-FWD 76.6 CU FT CYLINDER FSO 5318507-9	1	G
-2	5318507-18	. SUPPORT-AFT 11.0 CU FT CYLINDER	1	
	5318507-9	. SUPPORT-FWD & AFT 76.6 CU FT CYLINDER	1	H
-3	5318507-11	. ANGLE-AFT	1	
-4	C166001-0813	. CYLINDER & REGULATOR ASSY 11.0 CU FT	1	
	C166001-0816	. CYLINDER & REGULATOR ASSY 76.6 CU FT	1	
		ATTACHING PARTS		
-5	MS21920-30R	. CLAMP-FWD 11.0 CU FT CYLINDER	1	
	MS21920-59R	. CLAMP-FWD 76.6 CU FT CYLINDER	1	
-6	MS21920-30R	. CLAMP-AFT 11.0 CU FT CYLINDER	1	
	MS21920-59R	. CLAMP-AFT 76.6 CU FT CYLINDER	1	
		---*---		
-7	C166001-0819	. . REGULATOR USED WITH C166001-0813	1	
	C166001-0818	. . REGULATOR USED WITH C166001-0816	1	
-8	0800186-1	. COLLAR ASSY-CONTROL CABLE	2	
-9	SEE FIG 61	. CONTROL ASSY	REF	
-10	C166013-0101	. VALVE-CHECK	1	
-11	C166011-0106	. LINE ASSY-CAPILLARY	1	A
		ATTACHING PARTS		
	CM2679-1	. TIE STRAP	AR	A
	S1021Z8-9	. SCREW	AR	A
		---*---		
-12	S45A12	. FITTING-SEAL	1	A
		ATTACHING PARTS		
-13	MS27039-1-08	. SCREW	2	A
-14		. DELETED NOT USED		
		---*---		
-15	MS20822-3D	. ELBOW	1	
	ZF302	. ELBOW ZEPA	1	
-16	SEE FIG 63	. GAGE-OXYGEN	REF	
-17	AN816-5D	. NIPPLE	1	
-18	5300113-27	. LINE ASSY-OVERBOARD VENT 76 CU FT SYSTEM	1	H
	5300113-3	. LINE ASSY-OVERBOARD VENT 76 CU FT SYSTEM	1	G
	5300113-15	. LINE ASSY-SUPPLY 11.0 CU FT SYSTEM	1	E
	5300113-22	. LINE ASSY-SUPPLY 11 CU FT SYSTEM	1	F
-19	S138-1	. BRACKET	1	
-20	MS21919WDG5	. CLAMP	1	
		ATTACHING PARTS		
-21	MS27039-0807	. SCREW	1	
-22	MS21044N08	. NUT	1	
		---*---		
-23	AN815-5D	. UNION	1	
-24	5300113-1	. LINE ASSY-SUPPLY 76.6 CU FT SYSTEM	1	
-25	MS21919WDG5	. CLAMP	3	
		ATTACHING PARTS		
-26	S1021Z8-10	. SCREW	1	
-27	NAS446-4-1	. NUT	1	
-28	MS27039-0809	. SCREW	1	
	MS21044N08	. NUT	1	
		---*---		
-29	MS35489-10S	. GROMMET	1	
-30	MS21919WDG5	. CLAMP	1	
		ATTACHING PARTS		
	MS27039-0807	. SCREW	1	
	NAS43DD3-6A	. SPACER	1	
		---*---		
-31	5300113-14	. LINE ASSY-OVERBOARD VENT 11.0 CU FT SYSTEM	1	
	5300113-14	. LINE ASSY-OVERBOARD VENT 11.0 CU FT SYSTEM	1	
	5300113-26	. LINE ASSY-OVERBOARD VENT 76 CU FT SYSTEM	1	H
	5300113-4	. LINE ASSY-OVERBOARD VENT 76 CU FT SYSTEM	1	G
-32	CM3578-1	. INDICATOR-OVERBOARD DISCHARGE ZEPA	1	
-33	C166011-0101	. VALVE-CHECK	1	
-34	CM2972-5	. LINE ASSY-HIGH PRESSURE	1	
-35	C166008-0101	. VALVE ASSY-FILLER	1	C
	CM3509-1	. VALVE ASSY-FILLER	1	D
		ATTACHING PARTS		
-36	MS35206-245	. SCREW	3	
-37	MS21044N08	. NUT	3	
		---*---		
-38	S1021Z4-6	. SCREW	1	
-39	5318507-14	. BRACKET	1	
	5318507-24	. BRACKET	1	D
-40	SEE FIG 1	. PLACARD-OXYGEN SYSTEM MAINTENANCE	1	
-41	CM3524-2-9	. GROMMET	1	
-42	C166011-0108	. LINE ASSY-CAPILLARY USED WITH 11.0 CU FT SYSTEM	1	B
	C166011-0104	. LINE ASSY-CAPILLARY USED WITH 76.6 CU FT SYSTEM	1	B
		ATTACHING PARTS		
	CM2679-1	. TIE STRAP	AR	B
	S1021Z8-9	. SCREW	AR	B
		---*---		
-43	CM2982-1	. FITTING	1	B
-44	71003-8	. STATO-SEAL	1	B
-45	AN10089	. NUT	1	B
-46	S1722-35	. LINE	1	

A---340-0001 THRU 340-0068
B---340-0069 & ON
C---340-0001 THRU 340-0037
D---340-0038 & ON
E---340-0001 THRU 340-0057
F---340-0058 & ON
G---340-0001 TO 340-0075
H---340-0076 & ON

VACUUM SYSTEM

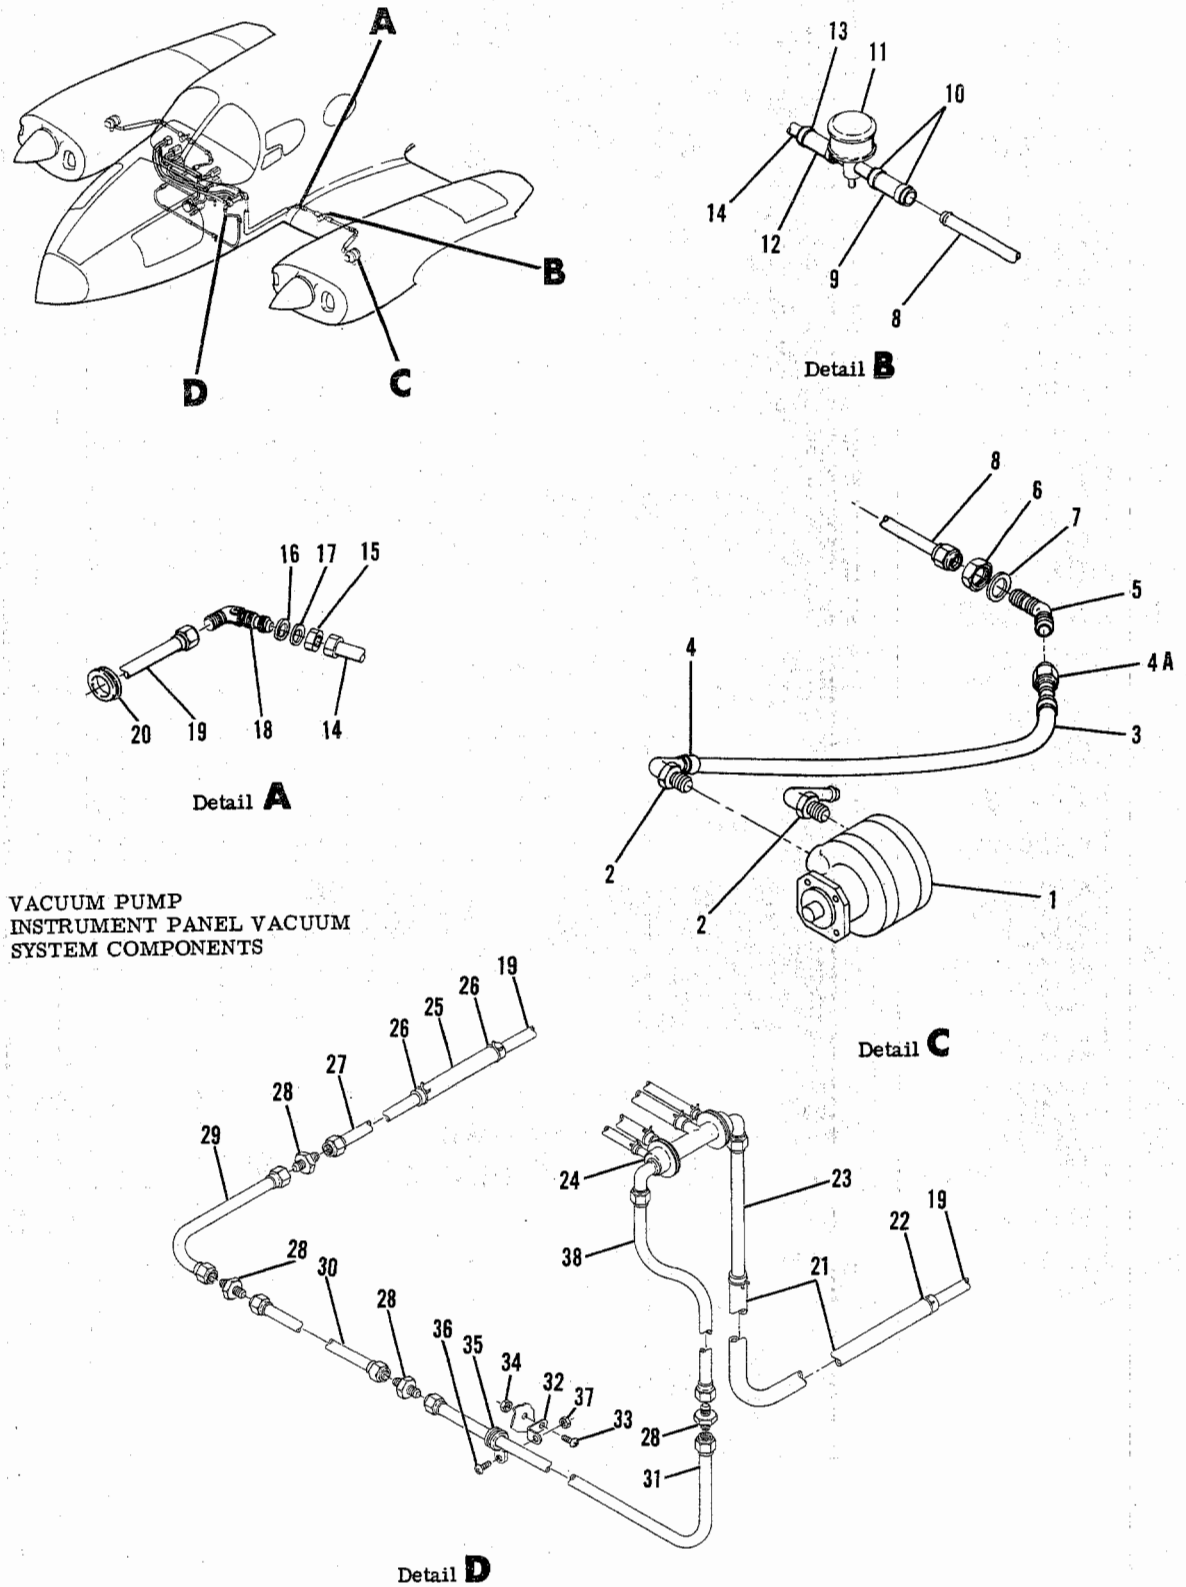

1 VACUUM PUMP
24 INSTRUMENT PANEL VACUUM SYSTEM COMPONENTS

Figure 136. Vacuum System

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
136 -		VACUUM SYSTEM	NP	
-1	SEE FIG 98	. PUMP-VACUUM	1	
-2	1K1-6-10	. ELBOW ABNE	2	
-3	S51-10	. HOSE BKI	AR	
		ATTACHING PARTS		
-4	NAS397-16	. CLAMP	2	
		---*---		
-4A	5600108-24	. LINE-LH HOSE TO BHD FITTING	1	
	5600108-1	. LINE-RH HOSE TO BHD FITTING	1	
-5	AN832-10	. FITTING-BULKHEAD	1	
-6	AN924-10	. NUT	1	
-7	AN9161416L	. WASHER	1	
-8	5600108-15	. LINE ASSY-LH & RH ELBOW TO HOSE	2	
-9	S51-10	. HOSE-REGULATOR BKI	AR	
		ATTACHING PARTS		
-10	NAS397-16	. CLAMP	2	
		---*---		
-11	133C1	. REGULATOR-VACUUM FSO 2H3-5 ABNE	1	C
	2H3-5	. REGULATOR-VACUUM ABNE	1	D
-12	S51-10	. HOSE BKI	AR	
		ATTACHING PARTS		
-13	NAS397-16	. CLAMP	2	
		---*---		
-14	5300112-14	. LINE ASSY-LH & RH REGULATOR TO ELBOW	2	
-15	AN924-10D	. NUT-LH & RH	2	
-16	AN960-1416	. WASHER-LH & RH	2	
-17	250-215-10	. LOCK-O-SEAL-LH & RH PKSC	2	
-18	AN837-10D	. ELBOW-LH & RH	2	
-19	5300112-11	. LINE ASSY-LH FSO 5300112-15	1	A
	5300112-15	. LINE ASSY-LH	1	B
	5300112-10	. LINE ASSY-RH FSO 5300112-16	1	A
	5300112-16	. LINE ASSY-RH	1	B
-20	MS35489-111	. GROMMET-LH & RH	2	
-21	CM2939-10	. HOSE BKI	AR	
		. ATTACHING PARTS		
-22	A15S	. CLAMP CBHC	2	
		---*---		
-23	5300112-13	. LINE ASSY-LH HOSE TO MANIFOLD	1	
-24	SEE FIG 137	. INSTRUMENT PANEL VACUUM SYSTEM COMPONENTS	1	
-25	CM2939-10	. HOSE-RH BKI	AR	
		ATTACHING PARTS		
-26	A15S	. CLAMP RAMF	2	
		---*---		
-27	5300112-12	. LINE ASSY-RH	1	
-28	AN815-10D	. UNION	4	
-29	5300112-4	. LINE ASSY-RH	1	
-30	5300112-6	. LINE ASSY	1	
-31	5300112-7	. LINE ASSY	1	
-32	AN743-1	. BRACKET	1	
		ATTACHING PARTS		
-33	MS27039-0806	. SCREW	1	
-34	MS21044N08	. NUT	1	
		---*---		
-35	MS21919WDG10	. CLAMP	1	
		ATTACHING PARTS		
-36	MS27039-0806	. SCREW	1	
-37	MS21044N08	. NUT	1	
		---*---		
-38	5300112-8	. LINE ASSY	1	

A---340-0001 THRU 340-0103
B---340-0104 & ON
C---340-0001 THRU 340-0331
D---340-0332 & ON

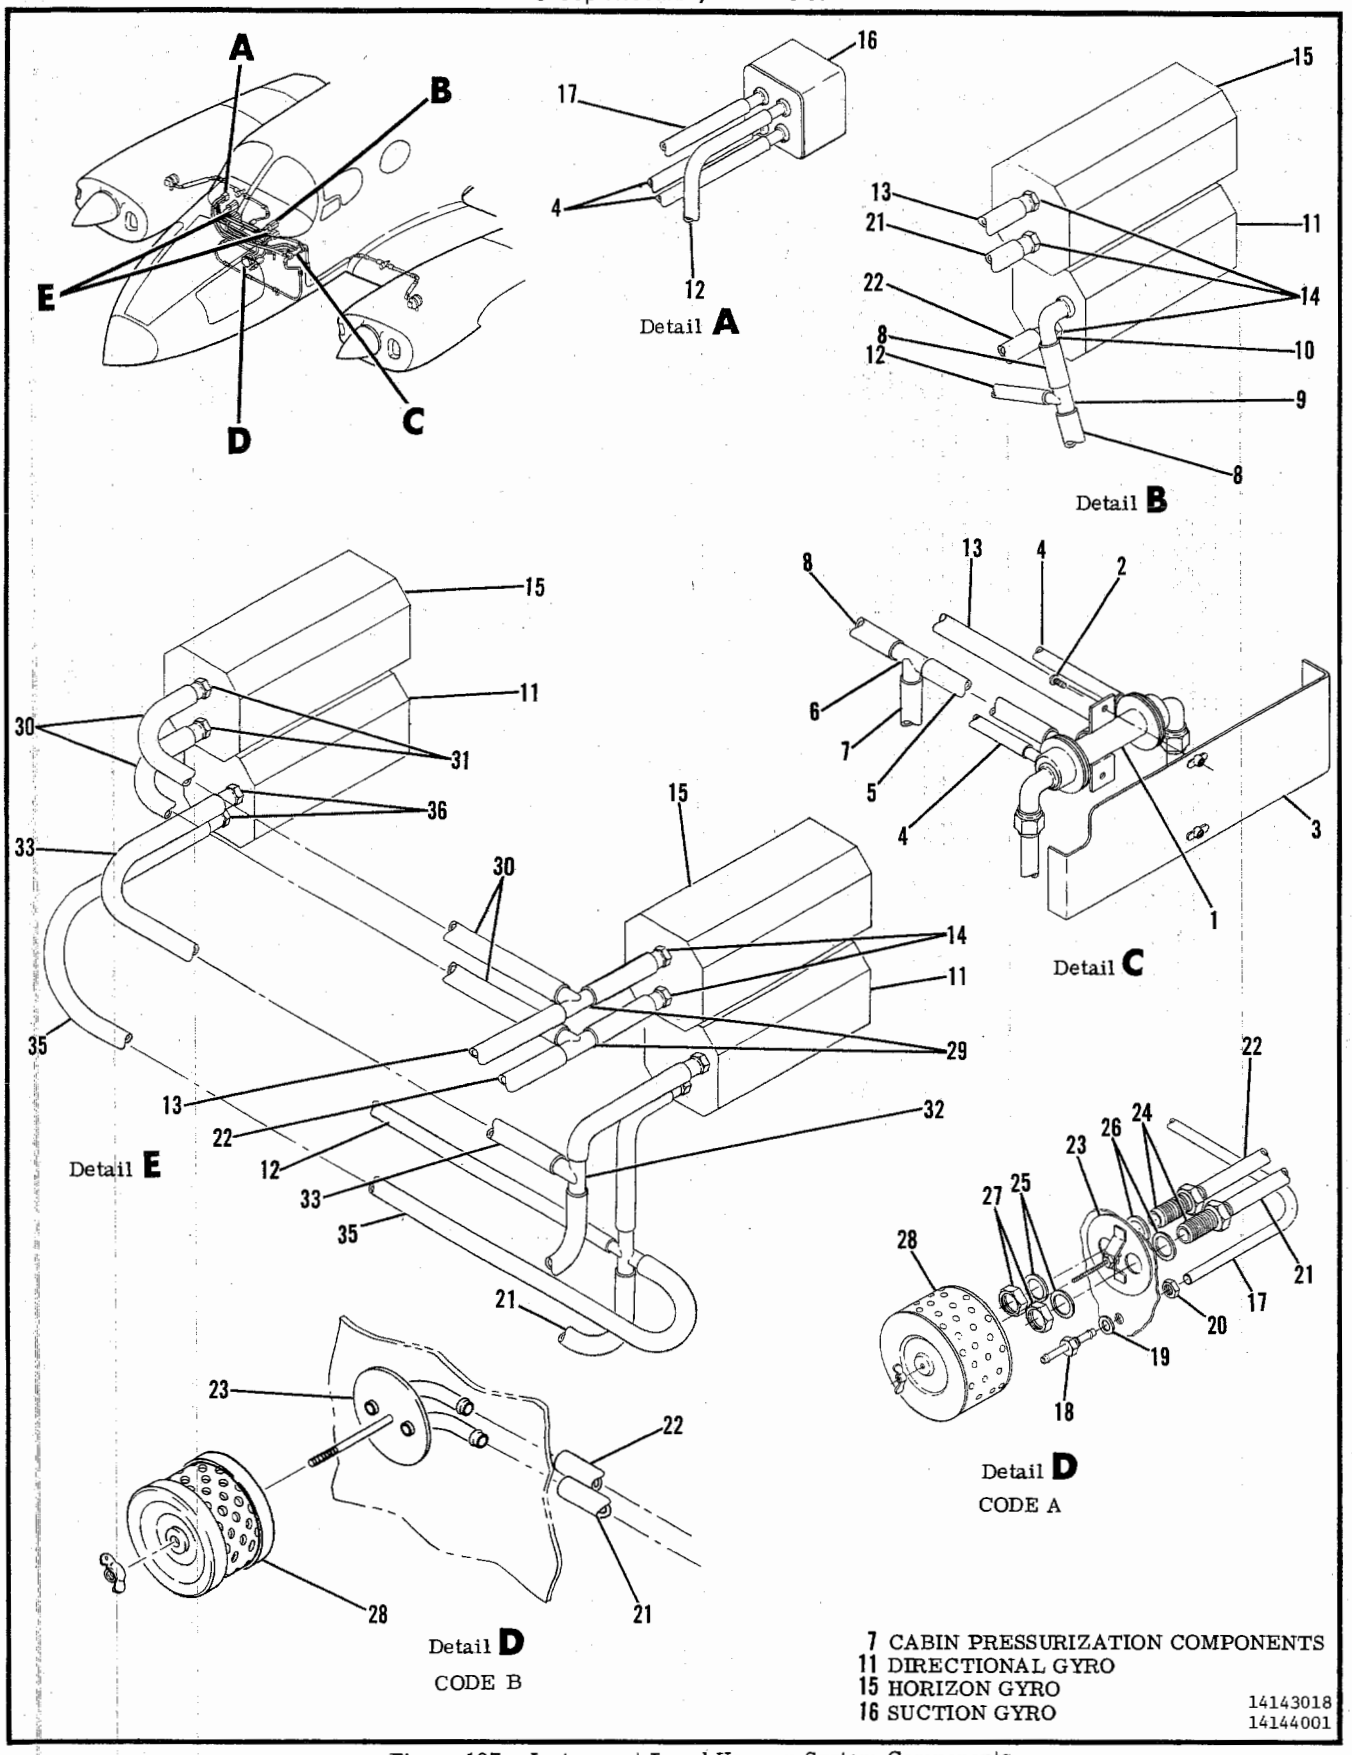

Figure 137. Instrument Panel Vacuum System Components

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
137 -		INSTRUMENT PANEL VACUUM SYSTEM COMPONENTS	NP	
-1	1H5-10	. MANIFOLD & CHECK VALVE ABNE	1	
		ATTACHING PARTS		
-2	MS27039-1-06	. SCREW	2	
		---*---		
-3	5318508-2	. BRACKET ASSY-MANIFOLD	1	
-4	CM2939-4	. HOSE BKI MANIFOLD TO SUCTION GAGE	AR	
-5	2556-8	. HOSE BKI MANIFOLD TO TEE ARQP	AR	
-6	1K37-8-8-4	. TEE ABNE	1	
-7	SEE FIG 126	. CABIN PRESSURIZATION COMPONENTS	REF	
-8	2556-8	. HOSE BKI TEE TO TEE ARQP	AR	
-9	1K37-8-8-4	. TEE ABNE	1	
-10	1K1-4-8	. ADAPTER-DIRECTIONAL GYRO ABNE	1	
-11	SEE FIG 63	. GYRO-DIRECTIONAL	1	
-12	CM2939-4	. HOSE BKI TEE TO SUCTION GAGE	AR	
-13	2556-8	. HOSE BKI MANIFOLD TO HORIZON GYRO ARQP	AR	
-14	1K10-4-8	. ADAPTER-HORIZON GYRO ABNE	2	
-15	SEE FIG 63	. GYRO-HORIZON	1	
-16	SEE FIG 63	. GAGE-SUCTION	1	
-17	CM2939-4	. HOSE BKI SUCTION GAGE TO CONNECTOR	AR	
-18	AN849-4D	. CONNECTOR	1	
-19	250-215-4	. LOCK-O-SEAL PKSC	1	
-20	AN924-4D	. NUT	1	
-21	2556-8	. HOSE BKI HORIZON GYRO TO FILTER ARQP	AR	
-22	2556-8	. HOSE BKI DIRECTIONAL GYRO TO FILTER ARQP	AR	
-23	5614211-1	. LOCATOR ASSY-FILTER USED WITH LH INSTRUMENTS	1	A
	5614212-1	. LOCATOR ASSY-FILTER USED WITH LH INSTRUMENTS	1	B
	5614211-2	. LOCATOR ASSY-FILTER USED WITH LH & RH INSTRUMENTS	1	A
	5614212-2	. LOCATOR ASSY-FILTER WEU 5614212-1 USE WITH	1	C
		LH & RH INSTRUMENTS		
	5614212-1	. LOCATOR ASSY-FILTER USE WITH LH & RH INSTRUMENTS		D
-24	1K12-8-8	. ADAPTER-FILTER AIRB	2	
-25	AN960-1216	. WASHER	2	
-26	250-215-8	. LOCK-O-SEAL PKSC	2	
-27	AN924-8D	. NUT	2	
-28	C294501-0301	. FILTER-AIR USED WITH LH INSTRUMENTS	1	
	C294501-0302	. FILTER-AIR USED WITH RH INSTRUMENTS	1	
-29	1K14-8-8-8	. TEE HORIZON GYRO LH ABNE	2	
-30	2256-8	. HOSE BKI LH HORIZON GYRO TO RH HORIZON GYRO ARQP	AR	
-31	1K1-48	. ADAPTER RH HORIZON GYRO ABNE	2	
-32	1K14-8-8-8	. TEE DIRECTIONAL GYRO LH ABNE	1	
-33	2556-8	. HOSE BKI LH DIRECTIONAL GYRO TO ARQP	AR	
		RH DIRECTIONAL GYRO		
-34	1K38-8-8-8-4	. CROSS LH DIRECTIONAL GYRO ABNE	1	
-35	2556-8	. HOSE BKI LH DIRECTIONAL GYRO TO ARQP	AR	
		RH DIRECTIONAL GYRO		
-36	1K1-4-8	. ADAPTER RH DIRECTIONAL GYRO ABNE	2	

A---340-0001 TO 340A0001
B---340A0001 & ON
C---340A0001 THRU 340A0010
D---340A0011 & ON

SURFACE DEICE SYSTEM

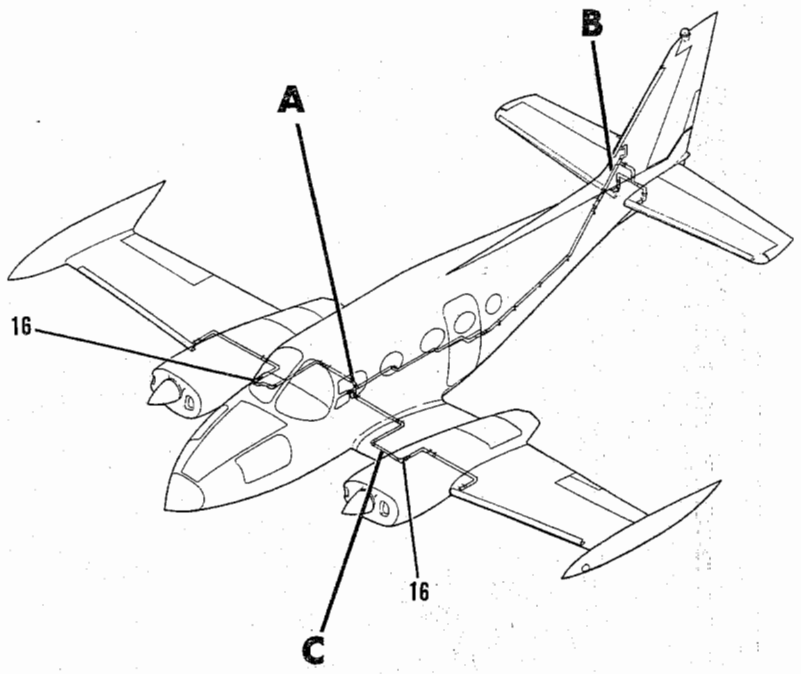

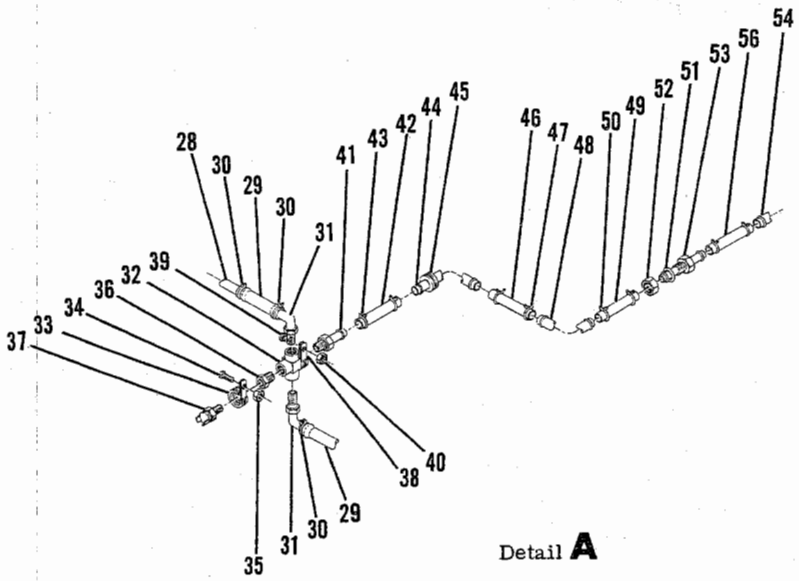

Detail A

16 ENGINE COMPARTMENT DEICE COMPONENTS
69 TIMING SWITCH
70 INDICATOR LIGHT

14163001
A14163002

Figure 138. Surface Deice System (Sheet 1 of 2)

SURFACE DEICE SYSTEM

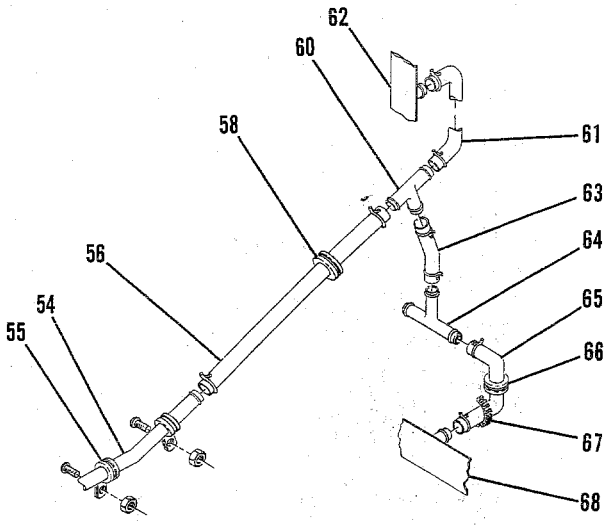

Detail **B**

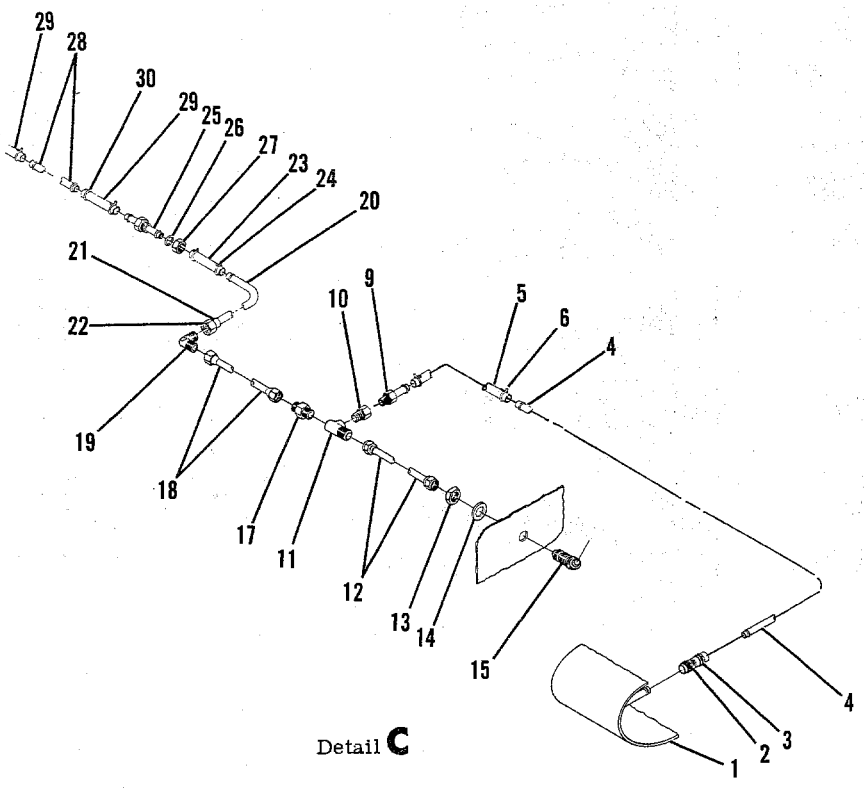

Detail **C**

B14162001
C14261001

Figure 138. Surface Deice System (Sheet 2)

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
138 -		SURFACE DEICE SYSTEM	NP	
-1	0820517-9	. BOOT-LH	1	
	0820517-10	. BOOT-RH	1	
	11A20215-101	. BOOT-LH ALT FOR 0820517-9	1 GY	
	11A20215-202	. BOOT-RH ALT FOR 0820517-10	1 GY	
	5114133-9	. DOUBLER-LH & RH BOOT	2	
-2	S1495-6	. HOSE BKI OUTBD LH & RH	AR	
		ATTACHING PARTS		
-3	NAS397-10	. CLAMP	2	
		---*---		
-4	5600118-28	. LINE LH & RH	2	
-5	S1495-6	. HOSE BKI INBD LH & RH	AR	
		ATTACHING PARTS		
-6	NAS397-10	. CLAMP	2	
		---*---		
-7		. DELETED NOT USED		
-8		. DELETED NOT USED		
-9	AN840-6D	. ADAPTER	1	
-10	AN912-2D	. BUSHING-REDUCER	1	
-11	5614205-1	. TEE	1	
-12	5600118-15	. LINE ASSY-TEE TO FIREWALL LH & RH	2	
-13	AN924-10	. NUT LH & RH	2	
-14	AN960-1416L	. WASHER LH & RH	2	
-15	AN832-10	. FITTING-BHD LH & RH	2	
-16	SEE FIG 139	. ENGINE COMPARTMENT DEICE COMPONENTS	1	
-17	S1133-6	. CONNECTOR LH & RH	2	
-18	5624204-7	. LINE ASSY-TEE TO ELBOW	2	
-19	CM2907-4	. ELBOW LH & RH	2	
-20	5300901-4	. LINE LH & RH	2	
-21	S1131-4	. INSET LH & RH	2	
-22	S1130-4	. NUT LH & RH	2	
-23	CM2939-8	. HOSE LH & RH	AR	
		ATTACHING PARTS		
-24	A12S	. CLAMP	CBHC 2	
		---*---		
-25	AN849-8D	. ADAPTER LH & RH	4	
-26	250-215-8	. LOCK-O-SEAL LH & RH	PKSC 4	
-27	AN924-8D	. NUT	2	
-28	5300901-5	. LINE-LH	1	
	5300901-6	. LINE-RH	1	
-29	CM2938-8	. HOSE BKI LH & RH	AR	
		ATTACHING PARTS		
-30	A12S	. CLAMP	CBHC 2	
		---*---		
-31	1K1-6-8	. ELBOW UPR & LWR	AIRB 2	
-32	AN918-3D	. CROSS	1	
-33	MS21919DG14	. CLAMP	1	
		ATTACHING PARTS		
-34	MS27039-0806	. SCREW	1	
-35	MS21083N08	. NUT	1	
		---*---		
-36	AN912-3D	. BUSHING	1	
-37	1D1194	. SWITCH	GDA 1	
-38	MS21919DG14	. CLAMP	1	
		ATTACHING PARTS		
-39	MS27039-0806	. SCREW	1	
-40	MS21083N08	. NUT	1	
		---*---		
-41	AN840-8D	. ADAPTER	1	
-42	CM2939-8	. HOSE BKI CROSS TO LINE	AR	
		ATTACHING PARTS		
-43	A12S	. CLAMP	CBHC 2	
		---*---		
-44	5300901-7	. LINE	1	
-45	MS35489-15	. GROMMET	5	
-46	CM2939-8	. HOSE BKI	AR	
		ATTACHING PARTS		
-47	A12S	. CLAMP	CBHC 2	
		---*---		
-48	5300901-8	. LINE-HOSE TO ADAPTER	1	
-49	CM2939-8	HOSE BKI	AR	
		ATTACHING PARTS		
-50	A12S	. CLAMP	CBHC 2	
		---*---		
-51	250-215-8	. LOCK-O-SEAL	PKSC 1	
-52	AN924-8D	. NUT	1	
-53	AN849-8D	. ADAPTER	CBHC 1	
-54	5300901-9	. LINE AFT BHD TO STABILIZER	1	
		ATTACHING PARTS		
-55	MS21919DG8	. CLAMP	6	
	MS27039-0806	. SCREW	6	
	MS21083N08	. NUT	CBHC 6	
		---*---		

CONTINUED

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
138 -56	CM2939-8	. HOSE BKI	AR	
		ATTACHING PARTS		
	A12S	. CLAMP	CBHC	2
		---*---		
-57		. DELETED NOT USED		
-58	S1051-1	. GROMMET	AR	
-59		. DELETED NOT USED		
-60	1K30-8-6-6	. TEE	1	
-61	CM2939-6	. HOSE BKI TEE TO BOOT	AR	
		ATTACHING PARTS		
	A10S	. CLAMP	CBHC	2
		---*---		
-62	23S2010-5-1	. BOOT FIN	GDA	1
-63	CM2939-6	. HOSE BKI	AR	
		ATTACHING PARTS		
	A10S	. CLAMP	CBHC	2
		---*---		
-64	0820529-1	. TEE	1	
-65	0820517-14	. HOSE-LH & RH TEE TO BOOT	2	
-66	MS35489-18S	. GROMMET LH & RH	4	
-67	S1050-1	. GROMMET LH & RH	GDA	AR
-68	23S2010-2-1	. BOOT-HORIZONTAL STABILIZER LH & RH	GDA	2
	11A20214-001	. BOOT-HORIZONTAL STABILIZER LH & RH	GDA	2
		ALT FOR 23S2010-2-1		
-69	SEE FIG 144	. SWITCH-TIMING	1	
-70	SEE FIG 63	. LIGHT-INDICATOR	1	

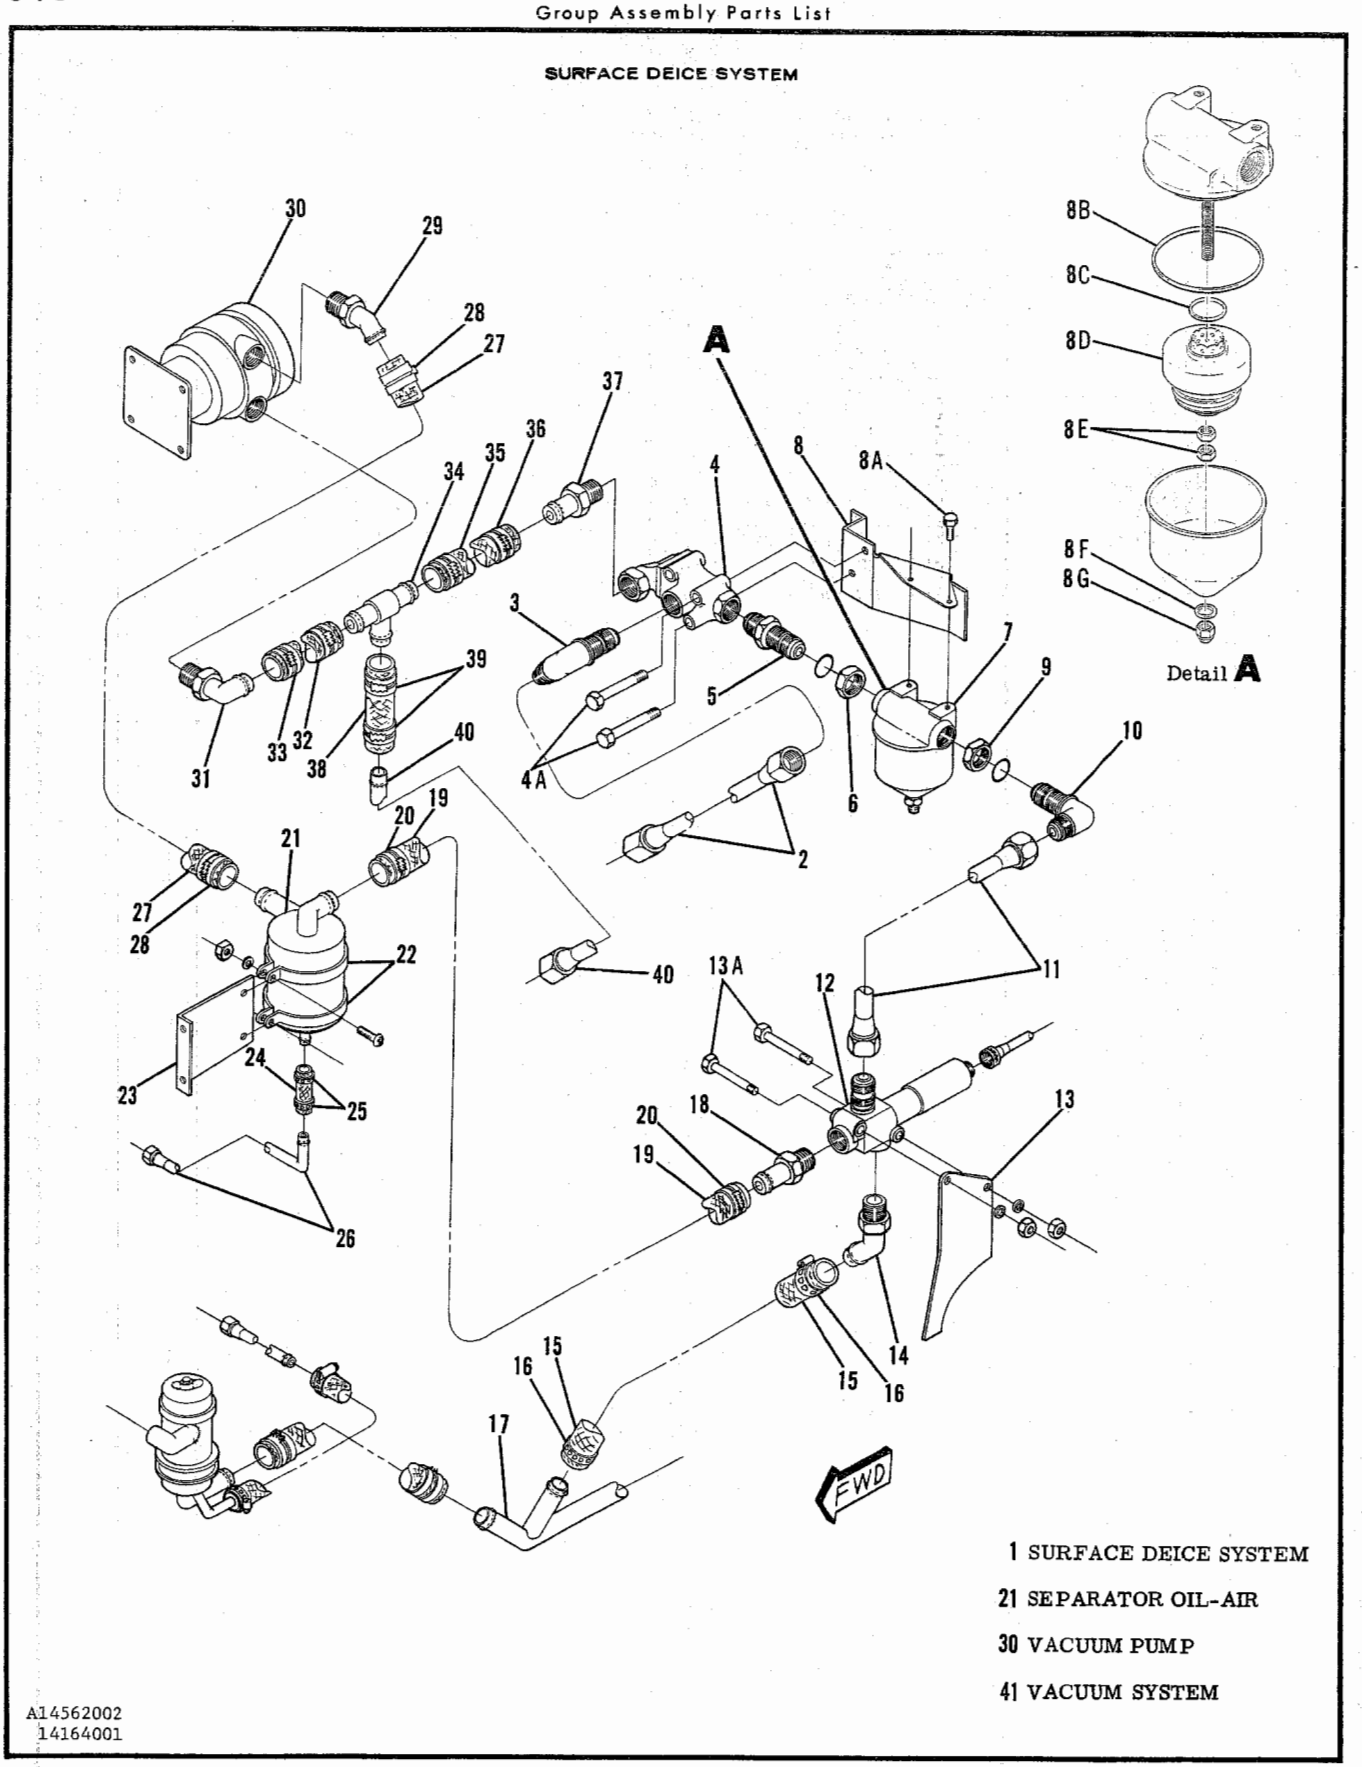

Figure 139. Engine Compartment Deice Components Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
139 -		ENGINE COMPARTMENT DEICE COMPONENTS INSTALLATION	NP	
-1	SEE FIG 138	. SURFACE DEICE SYSTEM	REF	
-2	5600108-25	. LINE ASSY-LH	1	
	5600118-2	. LINE ASSY-RH	1	
-3	AN833-10D	. ELBOW	1	
-4	3D1549-02A3	. VALVE-SHUTTLE GD	1	
	H674-02A3	. VALVE-SHUTTLE ALT FOR 3D1549-02A3 RCBI	1	
		ATTACHING PARTS		
-4A	AN3-21	. BOLT	2	
		---*---		
-5	AN832-10D	. UNION	1	
	MS28778-10	. PACKING	1	
-6	AN924-10D	. NUT	1	
	MS28778-10	. PACKING	1	
-7	9910240-1	. FILTER ASSY GOODRICH P/N 3D1541 OR	1	
		AIR-MAZE P/N H9W1545		
		ATTACHING PARTS		
-8	5659003-1	. BRACKET ASSY	1	
-8A	AN502-416-10	. BOLT	2	
		---*---		
-8B	350106	. . O-RING AMA	1	
-8C	H9FF06	. . GASKET-SEAL AMA	1	
-8D	H9W334-231	. . CARTRIDGE ASSY AMA	1	
-8E	21051C	. . NUT-HEX JAM AMA	2	
-8F	38004	. . WASHER-SEAL AMA	1	
-8G	42NKE054	. . NUT-LOCK ESNA	1	
-9	AN924-10D	. NUT	1	
-10	AN833-10D	. ELBOW	1	
	MS28778-10	. PACKING	1	
-11	5600108-23	. LINE ASSY	1	
-12	3D1542-03	. VALVE-CONTROL GD	1	
	AA684-02	. VALVE-CONTROL ALT FOR 3D1542-03 RCBI	1	
		ATTACHING PARTS		
-13	5659007-1	. BRACKET	1	
-13A	AN3-17A	. BOLT	2	
	AN960-10L	. WASHER	2	
	MS21042L3	. NUT	2	
		---*---		
-14	1K9-8-10	. FITTING ABNE	1	
-15	S51-10	. HOSE BKI CONTROL VALVE TO DRAIN	AR	
		ATTACHING PARTS		
-16	NAS397-16	. CLAMP	2	
		---*---		
-17	5659010-1	. LINE ASSY DRAIN OVERBD LH	1	
-18	1K10-8-10	. FITTING ABNE	1	
-19	S51-10	. HOSE BKI CONTROL VALVE TO SEPARATOR	AR	
		ATTACHING PART		
-20	NAS397-16	. CLAMP	2	
		---*---		
-21	SEE FIG 98	. SEPARATOR-AIR OIL	REF	
		ATTACHING PARTS		
-22	MS21919DG46	. CLAMP	2	
-23	5659006-1	. BRACKET	1	
	MS27039D01-07	. SCREW	2	
	AN960PD10	. WASHER	2	
	MS21042L3	. NUT	2	
		---*---		
-24	S51-4	. HOSE BKI SEPARATOR TO SCAVANGER PUMP	AR	
		ATTACHING PARTS		
-25	NAS397-10	. CLAMP	2	
		---*---		
-26	5600107-26	. LINE ASSY OIL RETURN TO SCAVANGER PUMP	1	
	AN816-4	. NIPPLE SCAVANGER PUMP	1	
-27	S51-10	. HOSE BKI-SEPARATOR TO VACUUM PUMP	AR	
		ATTACHING PARTS		
-28	NAS397-16	. CLAMP	2	
		---*---		
-29	1K9-8-10	. ELBOW ABNE	1	
-30	SEE FIG 98	. PUMP-VACUUM	REF	
-31	1K1-8-10	. ELBOW ABNE	1	
-32	S51-10	. HOSE BKI-VACUUM PUMP TO TEE	AR	
		ATTACHING PARTS		
-33	NAS397-16	. CLAMP	2	
		---*---		
-34	0870126-3	. TEE	1	
-35	S51-10	. HOSE BKI-TEE TO SHUTTLE VALVE	AR	
		ATTACHING PARTS		
-36	NAS397-16	. CLAMP	2	
		---*---		
-37	1K10-8-10	. FITTING ABNE	1	
-38	S51-10	. HOSE BKI-TEE TO VACUUM SYSTEM	AR	
		ATTACHING PARTS		
-39	NAS397-16	. CLAMP	2	
		---*---		
-40	5600108-24	. LINE ASSY LH	1	
	5600118-1	. LINE ASSY RH	1	
-41	SEE FIG 136	. VACUUM SYSTEM	REF	

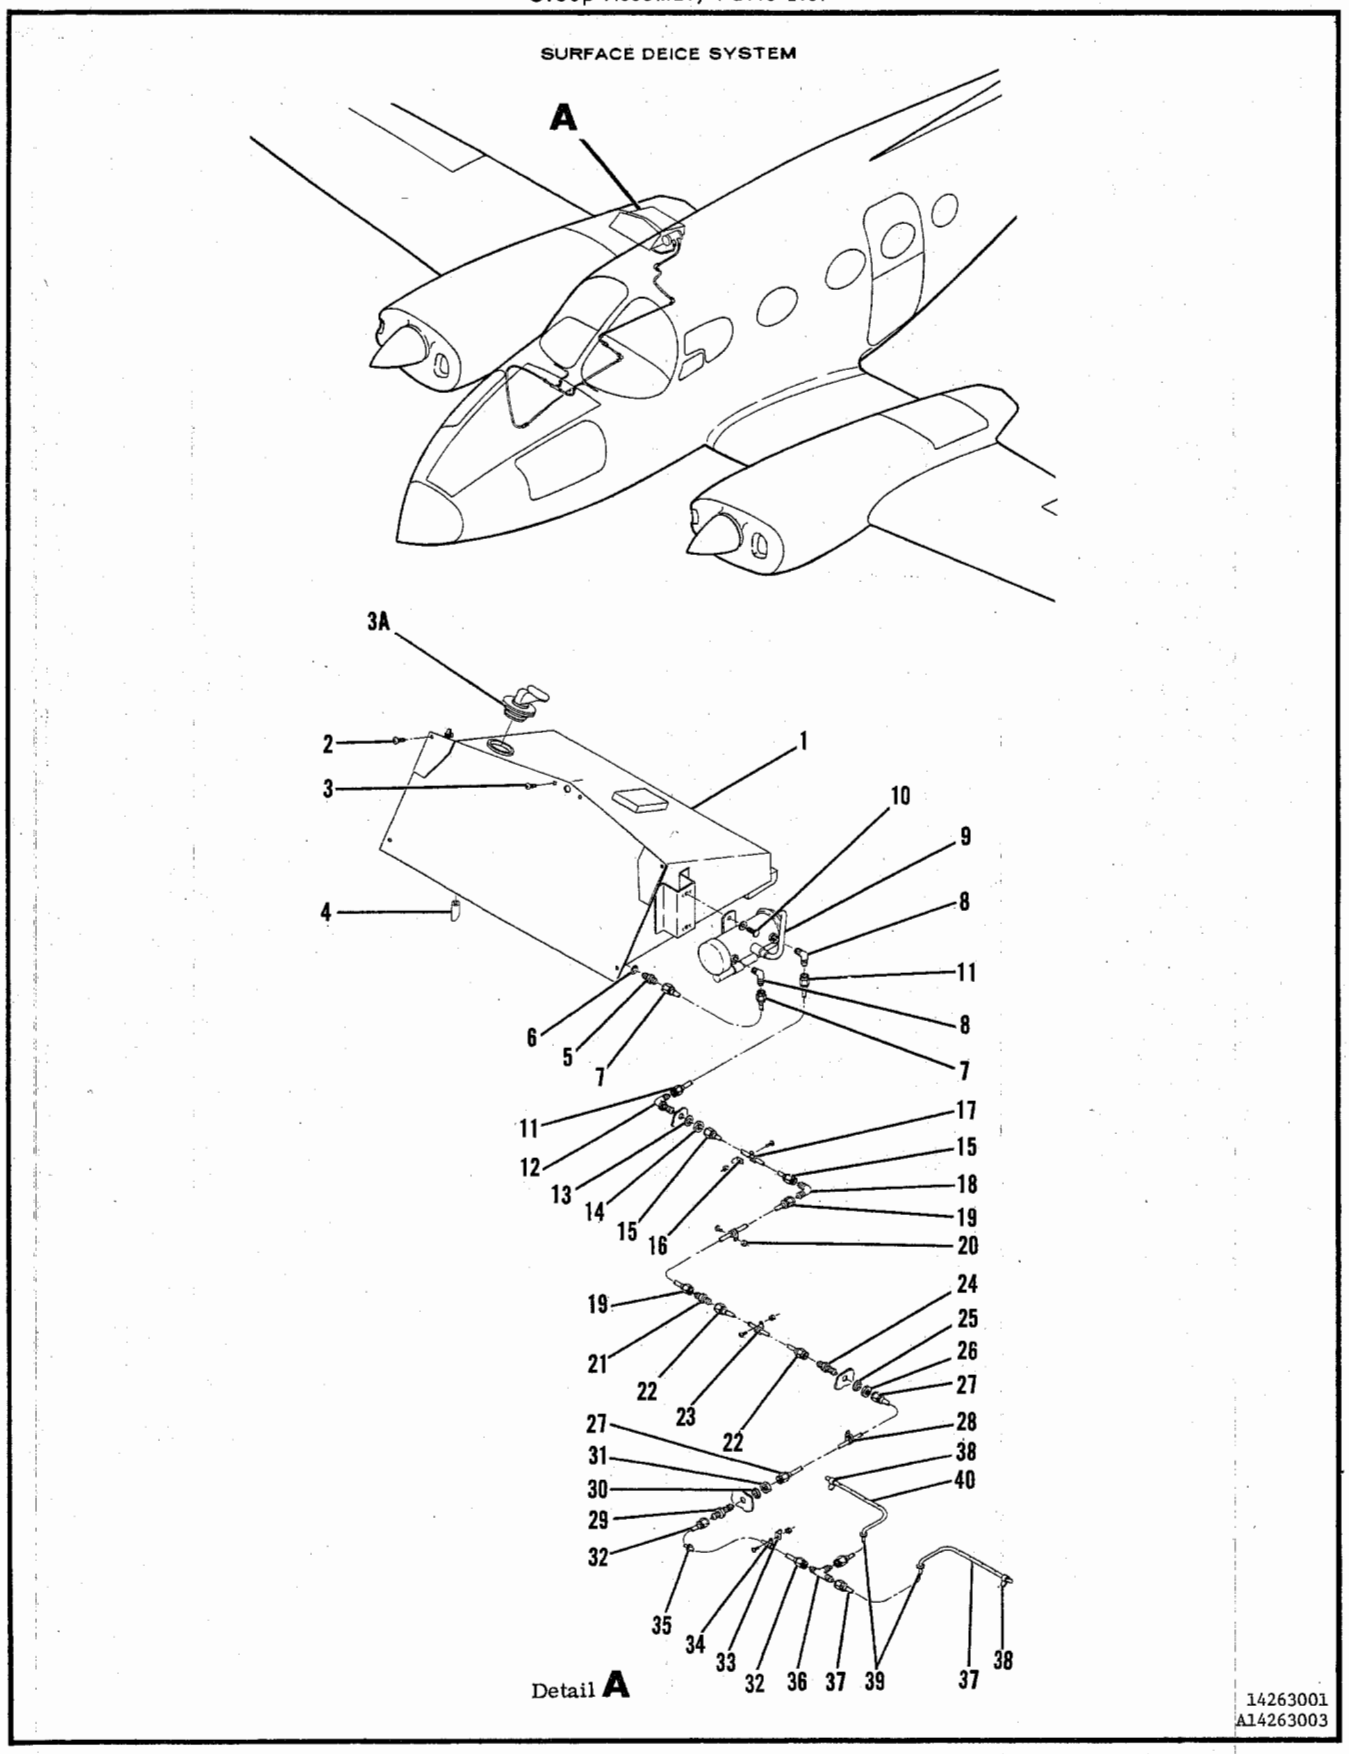

Figure 140. Windshield Anti-Ice System Alcohol

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
140 -		WINDSHIELD ANTI-ICE SYSTEM ALCOHOL	NP	
-1	5626016-1	. TANK ASSY	1	
		ATTACHING PARTS		
-2	MS27039-1-06	. SCREW	2	
-3	MS27039-0806	. SCREW	2	
		---*---		
-3A	S1015	. SNAP-TITE CLOSURE	1	
-4	S1431-4	. HOSE-TANK VENT BKI	AR	
-5	AN815-4J	. UNION	1	
-6	MS28778-4	. PACKING	1	
-7	5600118-29	. LINE ASSY TANK TO PUMP	1	
-8	MS20822-4J	. ELBOW	2	
-9	476411	. PUMP ECM	1	
		ATTACHING PARTS		
-10	AN3-4A	. BOLT	2	
	AN960-10L	. WASHER	2	
		---*---		
-11	5600118-30	. LINE ASSY TANK TO ELBOW	1	
-12	AN833-4J	. ELBOW	1	
-13	AN960-716L	. WASHER	1	
-14	AN924-4	. NUT	1	
-15	5600118-31	. LINE ASSY ELBOW TO ELBOW	1	
		ATTACHING PARTS		
-16	AN743-13	. BRACKET	1	
-17	MS21919WDF4	. CLAMP	1	
	MS27039-0806	. SCREW	1	
	MS21083N08	. NUT	1	
		---*---		
-18	AN821-4K	. ELBOW	1	
-19	5600118-32	. LINE ASSY WING GAP	1	
		ATTACHING PARTS		
-20	MS21919WDF4	. CLAMP	1	
	MS27039-0806	. SCREW	1	
	MS21083N08	. NUT	1	
		---*---		
-21	AN815-4K	. UNION STUB WING	1	
-22	5300117-1	. LINE ASSY STUB WING TO FUSELAGE	1	
		ATTACHING PARTS		
-23	MS21919WDF4	. CLAMP	1	
	MS27039-0806	. SCREW	1	
	MS21083N08	. NUT	1	
		---*---		
-24	AN832-4J	. UNION FUSELAGE	1	
-25	250-215-4	. LOCK-O-SEAL PKSC	1	
-26	AN924-4	. NUT	1	
-27	5300117-2	. LINE ASSY-FUSELAGE	1	
		ATTACHING PARTS		
-28	NAS1714D2-4NW	. CLAMP	3	
		---*---		
-29	AN832-4J	. UNION	1	
-30	250-215-4	. LOCK-O-SEAL PKSC	1	
-31	AN924-4	. NUT	1	
-32	5300117-5	. LINE ASSY-FWD UNION TO TEE	1	
		ATTACHING PARTS		
-33	AN743-13	. BRACKET	1	
-34	MS21919	. CLAMP	1	
	MS27039-0806	. SCREW	1	
	MS21083N08	. NUT	1	
		---*---		
-35	MS35489-7	. GROMMET STA 100.00	1	
-36	5626015-11	. TEE ASSY	1	A
	5626015-18	. TEE ASSY	1	B
-37	5300117-3	. LINE ASSY-LH TEE TO WINDSHIELD	1	
		ATTACHING PARTS		
-38	AN742F4	. CLAMP LH & RH	2	
	MS27039-1-12	. SCREW LH & RH	2	
		---*---		
-39	MS35489-6	. GROMMET LH & RH	2	
-40	5300117-4	. LINE ASSY-RH TEE TO WINDSHIELD	1	

A---340-0001 THRU 340-0248
B---340-0249 & ON

ELECTRICAL EQUIPMENT

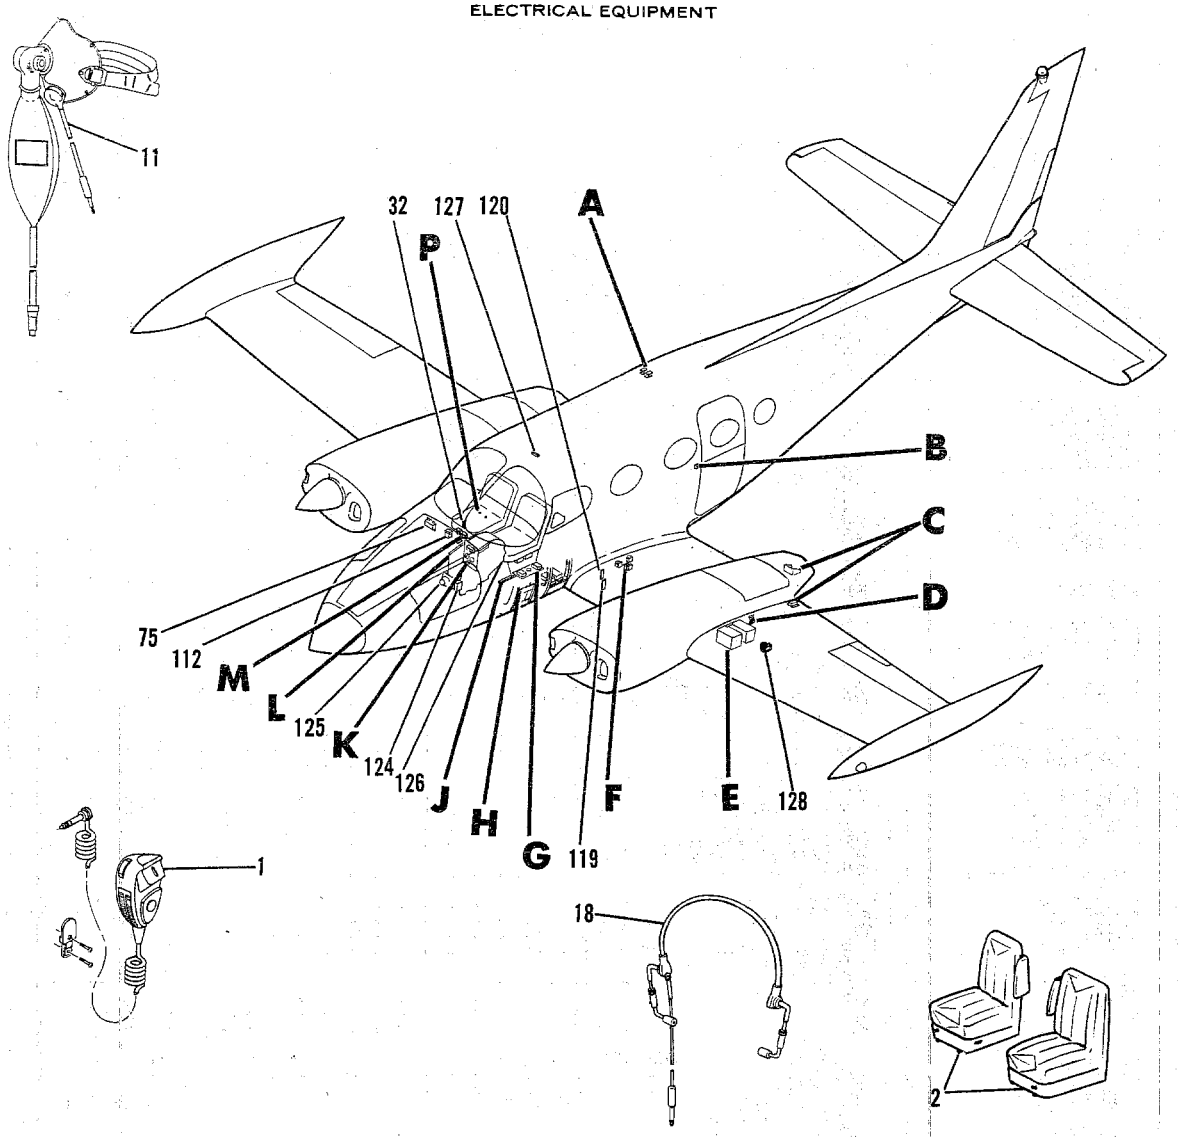

1	MICROPHONE ASSY
2	PILOT & COPILOT ELECTRICALLY ADJUSTED SEAT
3	INSTRUMENT PANEL EQUIPMENT INSTL
4	MIKE & AUTOPILOT CONTROL SWITCH
5	FLAP ACTUATOR ELECTRICAL COMPONENTS
6	THROTTLE GEAR HORN SWITCH
7	PROPELLER SYNCHRONIZER ELECTRICAL COMPONENTS
8	HEATED PITOT TUBE ASSY
9	HEATED PITOT STATIC SOURCE
10	HEATER ELECTRICAL COMPONENTS
11	OXYGEN MASK MICROPHONE ASSY
12	WING DEICE PRESSURE SWITCH
13	CABIN STEREO COMPONENTS
14	ELECTRICAL SWITCHES & CIRCUIT BREAKERS INSTL
15	INTERIOR LIGHTING INSTL
16	INSTRUMENT PANEL LIGHTING FIXTURES
17	RADAR RELAY
33	ELECTRICAL EQUIPMENT PLATE ASSY
121	LANDING GEAR ELECTRICAL COMPONENTS
122	WING & TIP TANK ELECTRICAL COMPONENTS
123	EXTERIOR LIGHTING INSTL

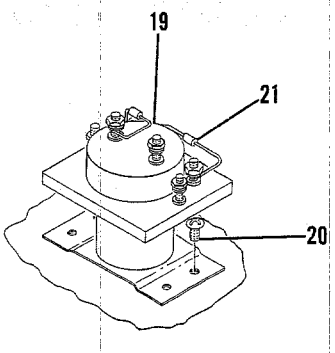

Detail **A**

14141025
14183002
54181008
A14181003

Figure 141. Electrical Equipment Installation (Sheet 1 of 4)

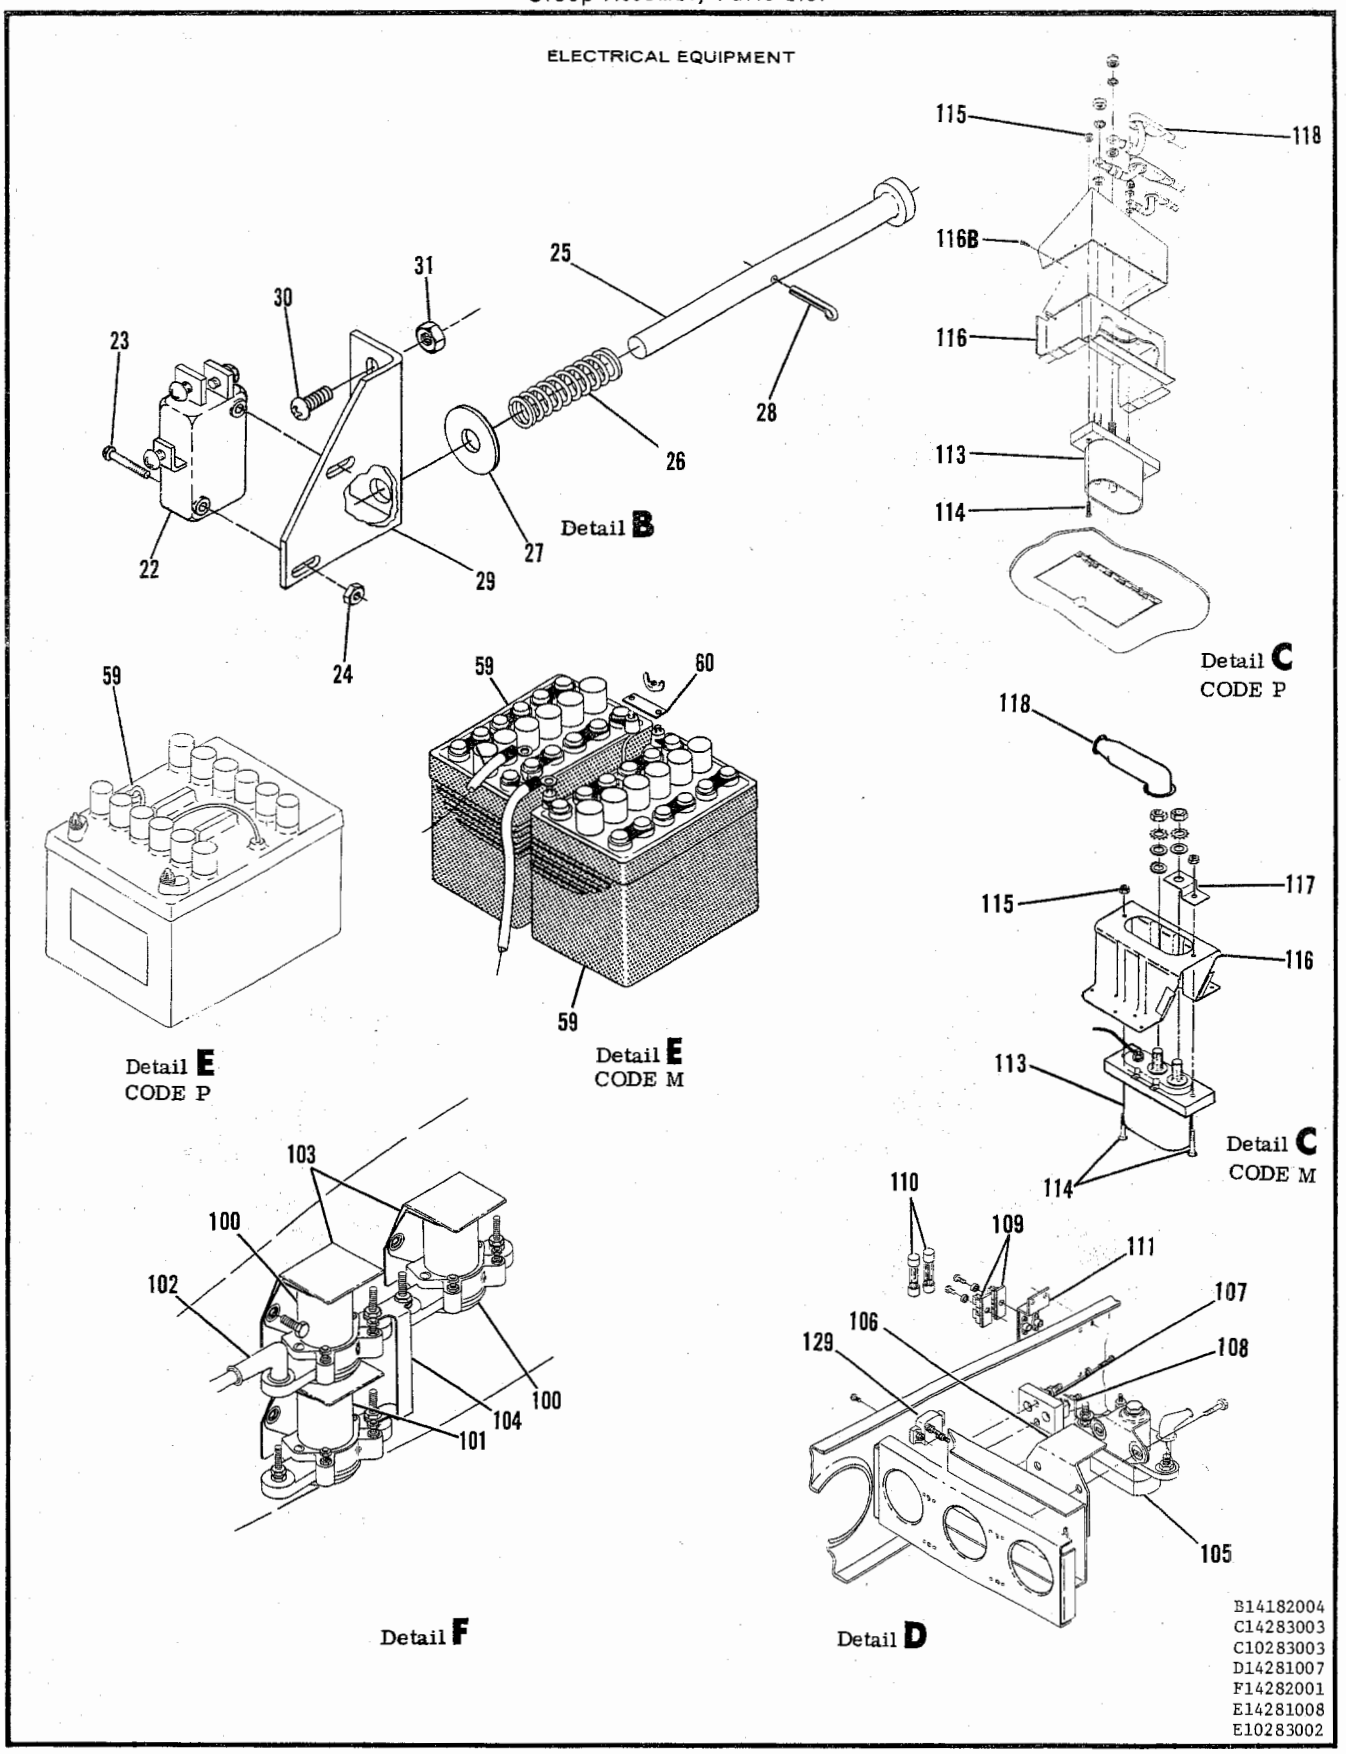

Figure 141. Electrical Equipment Installation (Sheet 2)

ELECTRICAL EQUIPMENT

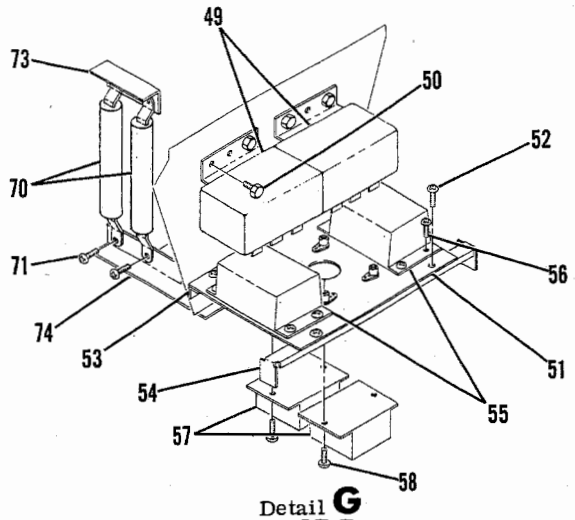

Detail **G**
CODE E

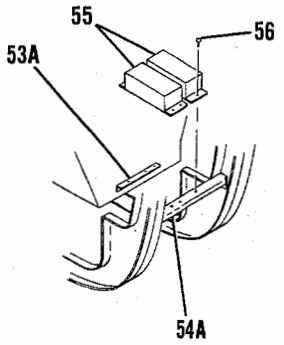

Detail **G**
CODE F

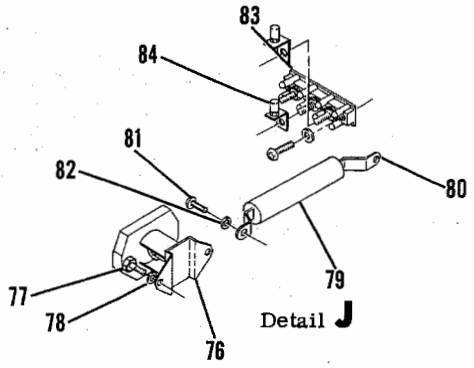

Detail **J**

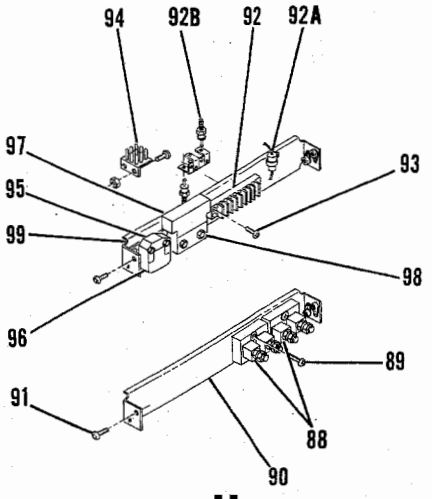

Detail **H**

G14181005
G14181017
H14181007
J14181004

Figure 141. Electrical Equipment Installation (Sheet 3)

ELECTRICAL EQUIPMENT

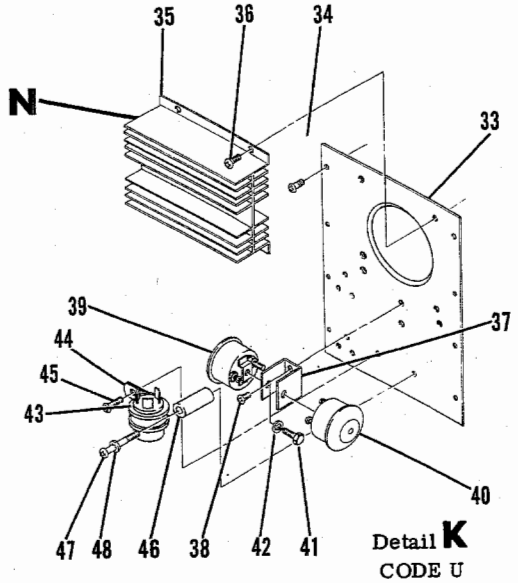

Detail **K**
CODE U

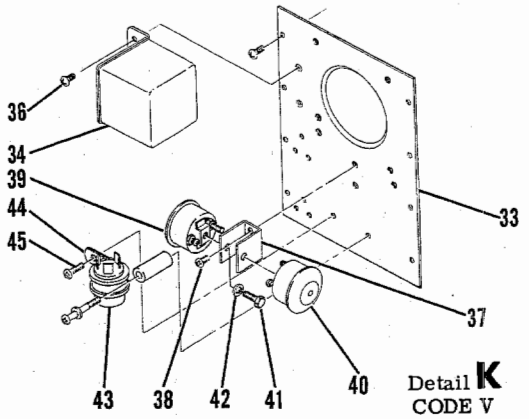

Detail **K**
CODE V

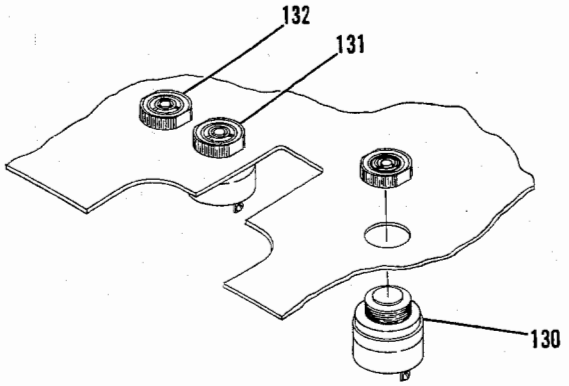

Detail **P**

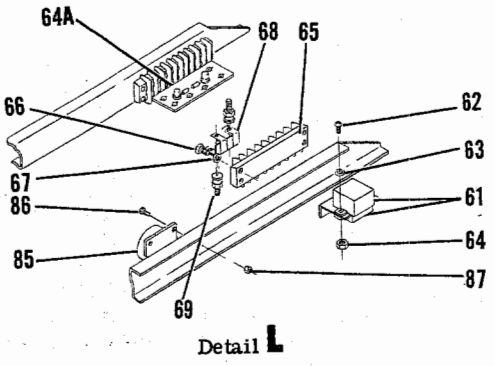

Detail **L**

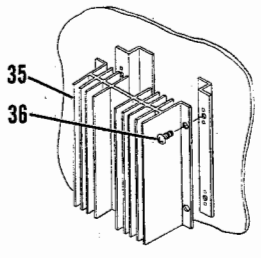

Detail **N**

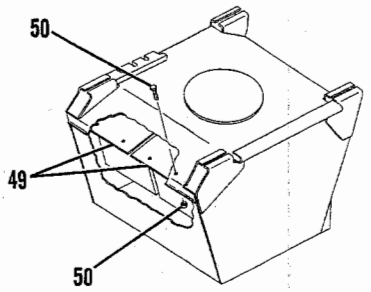

Detail **M**
CODE F

K14181006
K14181026
L14181022
M14181018
N14181027
P14182008

Figure 141. Electrical Equipment Installation (Sheet 4)

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
141 -		ELECTRICAL EQUIPMENT INSTALLATION	NP	
		. FUSELAGE ELECTRICAL COMPONENTS	NP	
-1	SEE FIG 46	. . MICROPHONE ASSY	REF	
	SEE FIG 46	. . MICROPHONE ASSY-BOOM	REF	
-2	SEE FIG 55	. . PILOT & COPILOT ELECTRICALLY ADJUSTED SEAT	REF	
-3	SEE FIG 61	. . INSTRUMENT PANEL EQUIPMENT INSTL	REF	
	SEE FIG 63	. . FLIGHT INSTRUMENT PANEL INSTL	REF	
-4	SEE FIG 86	. . SWITCH-CONTROL MIKE & AUTOPILOT	REF	
-5	SEE FIG 93	. . FLAP ACTUATOR ELECTRICAL COMPONENTS	REF	
-6	SEE FIG 107	. . SWITCH-THROTTLE GEAR HORN	REF	
-7	SEE FIG 112	. . PROPELLER SYNCHRONIZER ELECTRICAL COMPONENTS	REF	
-8	SEE FIG 124	. . HEATED PITOT TUBE ASSY	REF	
-9	SEE FIG 124	. . HEATED STATIC SOURCE-PITOT	REF	
-10	SEE FIG 128	. . HEATER ELECTRICAL COMPONENTS	REF	
-11	SEE FIG 134	. . MICROPHONE ASSY-OXYGEN MASK	REF	
-12	SEE FIG 138	. . SWITCH-WING DEICE PRESSURE	REF	
-13	SEE FIG 142	. . CABIN STEREO COMPONENTS	REF	
-14	SEE FIG 144	. . ELECTRICAL SWITCHES & CIRCUIT BREAKERS INSTL	REF	
-15	SEE FIG 147	. . INTERIOR LIGHTING INSTL	REF	
-16	SEE FIG 148	. . INSTRUMENT PANEL LIGHTING FIXTURES	REF	
-17	SEE FIG 153	. . RELAY-RADAR	REF	
-18	0770039-1	. . HEADSET ASSY-CREW	AR	
	62629-00	. . MIKE & HEADSET ASSY-PILOT & COPILOT TAPT	AR	
-19	MS2418701	. . RELAY-AIRCONDITIONING EVAPORATOR	2	H
	6041H201A	. . RELAY-AIRCONDITIONING EVAPORATOR	2	E
	92510322	. . RELAY-AIRCONDITIONING CONTROL UNSW	1	E
	FC215-136	. . RELAY-AIRCONDITIONING CONTROL ALT FOR 92510322 SD	1	E
		ATTACHING PARTS		
-20	MS35206-242	. . SCREW EVAPORATOR RELAY	2	
	MS35206-226	. . SCREW CONTROL RELAY	2	F
		---*---		
-21	1N2482	. . DIODE-EVAPORATOR RECALL	3	
	S292-7-2.00	. . SLEEVING-DIODE	3	
-22	MS25253-1	. . SWITCH-DOOR WARNING	1	
		ATTACHING PARTS		
-23	MS35206-208	. . SCREW	2	
-24	AN340-2	. . NUT	2	
		---*---		
-25	5311245-3	. . ACTUATOR-DOOR WARNING SWITCH	1	
-26	5114211-3	. . SPRING	1	
-27	AN960-10L	. . WASHER	1	
-28	MS24665-132	. . PIN-COTTER	1	
-29	5311245-2	. . BRACKET-DOOR WARNING SWITCH	1	
		ATTACHING PARTS		
-30	MS35206-203	. . SCREW	2	
-31	AN340-2	. . NUT	2	
		---*---		
-32	OR55-1	. . RESISTOR-WEMAC BLOWER	2	
	OR55-1	. . RESISTOR-HEATER VENT BLOWER	1	
		ATTACHING PARTS		
	MS27039-1-26	. . SCREW	2	
	MS21042L3	. . NUT	2	
		---*---		
-33	SEE FIG 9	. . PLATE ASSY-ELECTRICAL EQUIPMENT	1	
-34	10-357487-242	. . VIBRATOR-STARTING SNT	1	
		ATTACHING PARTS		
	MS35206-245	. . SCREW	2	V
		---*---		
-35	5618008-1	. . HEATSINK ASSY-LIGHT DIMMING CONTROLS	1	U
	5618008-10	. . TRANSISTOR & HEATSINK ASSY	1	V
		ATTACHING PARTS		
-36	MS35206-245	. . SCREW	4	
		---*---		
-37	5118331-5	. . SUPPORT-WARNING HORN	1	U
	5118331-6	. . SUPPORT-WARNING HORN	1	V
		ATTACHING PARTS		
-38	MS35206-231	. . SCREW	2	
		---*---		
-39	9910080-1	. . HORN-LOW GEAR WARNING LS 13	1	
		ATTACHING PARTS		
	MS35206-241	. . SCREW	1	
	MS35333-38	. . LOCK WASHER	1	
		---*---		
-40	9910080-2	. . HORN-HI STALL WARNING LS 14	1	
		ATTACHING PARTS		
-41	MS35206-241	. . SCREW	1	
-42	MS35333-38	. . LOCKWASHER	1	
		---*---		
-43	R102-12V	. . FLASHER-WARNING HORN HUDL	1	
-44	MS21919WDG16	. . CLAMP-FLASHER ATTACH	1	
		ATTACHING PARTS		
-45	MS27039-1-05	. . SCREW	1	
		---*---		
-46	1-3/4D48F40	. . RESISTOR-GEAR WARNING HORN OM	1	
		ATTACHING PARTS		
-47	MS35206-252	. . SCREW	1	
-48	NAS549L8	. . WASHER	2	
		---*---		
-49	138-3	. . RELAY-OVERVOLTAGE FSC 9910068-1 RBF	2	C
	9910068-1	. . RELAY-OVERVOLTAGE	2	D
	9910068-2	. . RELAY-OVERVOLTAGE	2	F
		ATTACHING PARTS		
-50	AN3-4A	. . BOLT	2	E
	MS21042-08	. . NUT	2	F
		---*---		
		CONTINUED		

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
141 -51	5318101-3	. . PANEL ASSY-REGULATOR & FILTER MOUNT	1	
		ATTACHING PARTS		
-52	MS35206-245	. . SCREW	4	
		---*---		
-53	5318101-5	. . ANGLE ASSY-PANEL SUPPORT INBD	1	E
-53A	5311234-1	. . ANGLE ASSY-VOLTAGE REGULAR SUPPORT INBD	1	F
-54	5318101-4	. . ANGLE ASSY-PANEL SUPPORT OUTBD	1	E
-54A	5311234-3	. . ANGLE-VOLTAGE REGULATOR SUPPORT OUTBD	1	F
-55	635837	. . REGULATOR-VOLTAGE CM	2	G
	639808	. . REGULATOR-VOLTAGE CM	2	H
	9910126-1	. . REGULATOR-VOLTAGE WEU 9910126-3	2	T
	B00322-1	. . KIT-SURGE USED WITH 9910126-1 LAMR	1	T
	9910126-2	. . REGULATOR-VOLTAGE FSC 9910126-3	2	P
	9910126-3	. . REGULATOR-VOLTAGE	2	P
		ATTACHING PARTS		
-56	MS35206-245	. . SCREW	4	E
	MS35206-261	. . SCREW	3	F
		---*---		
-57	JN14-1357B1	. . FILTER-RADIO NOISE SPR	2	E
	A1157	. . FILTER-RADIO NOISE ALT FOR JN14-1357B1 CTAT	2	E
	FM221	. . FILTER-RADIO NOISE ALT FOR JN14-1357B1 ELOM	2	E
		ATTACHING PARTS		
-58	MS35206-245	. . SCREW	2	E
		---*---		
-59	0511319-1	. . BATTERY-12 VOLT	2	M
*	9910128-2	. . BATTERY KIT-24 VOLT	1	M
-60	0820001-1	. . BUS BAR-BATTERY	1	M
-61	FC215-136	. . RELAY-AUX FUEL K3 & K4 SD	2	
		ATTACHING PARTS		
-62	NAS601-6	. . SCREW	2	
-63	AN960-6	. . WASHER	2	
-64	MS21042-06	. . NUT	2	
		---*---		
-64A	5618007-14	. . DIMMER ASSY-LIGHT FUEL QTY	1	
	363-11-10-011	. . STRIP-MARKER	1	
	MS35206-231	. . SCREW	2	
-65	353-11-10-001	. . BLOCK-TERMINAL AUX FUEL PUMP RELAY CIN	1	
		ATTACHING PARTS		
-66	MS35219-27	. . SCREW	2	
-67	AN960-6	. . WASHER	2	
		---*---		
-68	5318108-3	. . CLIP	4	
-69	1N1201	. . DIODE	4	
-70	AR75-25	. . RESISTOR-AUX FUEL PUMP FSC AR75-10 LTVE	2	A
	AR75-10	. . RESISTOR-AUX FUEL PUMP LTVE	2	B
	0771	. . RESISTOR-AUX FUEL PUMP OM	2	L
	AR75-15	. . RESISTOR-AUX FUEL PUMP ALT FOR 0771 LTVE	2	L
		ATTACHING PARTS		
-71	MS35219-25	. . SCREW LTVE	4	
		---*---		
-72		. . DELETED NOT USED		
-73	5318108-4	. . CLIP ASSY-RESISTOR MOUNT	1	
-74	5318108-6	. . ANGLE ASSY-RESISTOR MOUNT	1	
-75	10-176487-242	. . VIBRATOR-STARTER FSC 10-357487-242 SNT	1	U
	10-357487-242	. . VIBRATOR-STARTER SNT	1	U
		ATTACHING PARTS		
	MS35206-261	. . SCREW	2	
		---*---		
-76	6041H220	. . RELAY-LANDING GEAR CHID	1	
		ATTACHING PARTS		
-77	AN3-12A	. . BOLT	2	
-78	AN960-10	. . WASHER	2	
		---*---		
-79	FR100-5	. . RESISTOR-GEAR RELAY LTVE	1	
-80	P3689	. . BRACKET-RESISTOR MOUNT LTVE	2	
		ATTACHING PARTS		
-81	MS35206-262	. . SCREW	1	
-82	AN960-10	. . WASHER	1	
		---*---		
-83	MS27212-6-3	. . BOARD-TERMINAL GEAR UNLOCKED LIGHT	1	
		ATTACHING PARTS		
	MS35206-214	. . SCREW	2	
	MS21042-04	. . NUT	2	
		---*---		
-84	1N5061	. . DIODE	2	
-85	9910095-1	. . SWITCH-BAROMETRIC CABIN PRESSURE	1	
		ATTACHING PARTS		
-86	MS35206-217	. . SCREW	2	
-87	MS21044N04	. . NUT	2	
		---*---		
-88	CM2916-125	. . SHUNT-LH & RH ALTERNATOR	2	Q
	9910224-1	. . SHUNT-LH & RH ALTERNATOR	2	R
		ATTACHING PARTS		
-89	MS35206-247	. . SCREW	2	
		---*---		
-90	5328101-3	. . BRACKET ASSY-SHUNT MOUNT FSC 5228101-6	1	J
	5328101-6	. . BRACKET ASSY-SHUNT MOUNT	1	K
		ATTACHING PARTS		
-91	MS35206-243	. . SCREW	4	
		---*---		

CONTINUED

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
141 -92	353-11-08-001	. . BOARD-TERMINAL TB1 . . . . . CIN	1	
		ATTACHING PARTS		
-92A	HHJ-A	. . HOLDER-FUSE FLIGHT HOUR RECORDER . . . . . BUS	1	
	AGC30	. . FUSE FLIGHT HOUR RECORDER . . . . . BUS	1	
	CM2679-1	. . CLAMP	1	
		ATTACHING PARTS		
	MS35206-247	. . SCREW	1	
		---*---		
-92B	5318108-3	. . CLIP-DIODE	1	S
	IN1201	. . DIODE HEATER	1	S
-93	MS35206-231	. . SCREW	2	
		---*---		
	363-11-08-010	. . STRIP-MARKER TB1 . . . . . CIN	1	
	422-13-11-026	. . BUS BAR TB1 . . . . . CIN	2	
-94	203540-1	. . BLOCK-GROUNDING . . . . . ARP	1	
		ATTACHING PARTS		
	MS35206-243	. . SCREW	2	
	MS21043-08	. . NUT	2	
		---*---		
-95	203735-7	. . CONNECTOR KIT J37 . . . . . ARP	1	
-96	203735-6	. . CONNECTOR KIT P37 . . . . . ARP	1	
-97	1-203739-5	. . CONNECTOR KIT P38 . . . . . ARP	1	
-98	1-203739-6	. . CONNECTOR KIT J38 . . . . . ARP	1	
-99	5328101-5	. . MOUNT-CONNECTOR KIT		
		ATTACHING PARTS		
	MS35206-243	. . SCREW	2	
		---*---		
-100	0850469-1	. . RELAY-BATTERY LH & RH ENGINE	2	
		ATTACHING PARTS		
	AN3-4A	. . BOLT	2	
		---*---		
-101	0850469-1	. . RELAY-BATTERY AUX POWER UNIT	1	M
		ATTACHING PARTS		
	AN3-4A	. . BOLT	2	M
		---*---		
-102	MS25171-3S	. . NIPPLE	3	
-103	0870085-1	. . SHIELD-WATER BATTERY RELAYS	3	
-104	5008011-16	. . BUS BAR	1	
	5008011-15	. . BUS BAR USED WITH AUX POWER UNIT	1	M
-105	0850469-1	. . RELAY-BATTERY	1	
		ATTACHING PARTS		
	AN3-4A	. . BOLT	2	
		---*---		
	MS25171-3S	. . NIPPLE	2	
-106	0870085-1	. . SHIELD-WATER	1	
-107	CM2916-125	. . SHUNT-BATTERY	1	Q
	9910224-1	. . SHUNT-BATTERY	1	R
		ATTACHING PARTS		
	MS35207-264	. . SCREW	2	
	AN960-10L	. . WASHER	2	
		---*---		
-108	5318115-23	. . BUS BAR	1	
-109	357002	. . HOLDER-FUSE BATTERY . . . . . LTF	1	
		ATTACHING PARTS		
	MS35206-230	. . SCREW	2	
	AN960-6	. . WASHER	2	
		---*---		
-110	MTH5	. . FUSE-BATTERY . . . . . BUS	2	
	MDX5	. . FUSE-BATTERY . . . . . BUS	2	
	313005	. . FUSE-BATTERY ALT FOR MDX5 . . . . . LTF	2	
-111	0851849-1	. . BRACKET-FUSE MOUNT	1	
-112	3E1150-3	. . TIMER-PROP DEICE . . . . . GDA	1	W
	3E1150-6	. . TIMER-PROP DEICE . . . . . GDA	1	X
	EM2013	. . TIMER-PROP DEICE ALT FOR 3E1150-6 . . . . . ELOM	1	X
		ATTACHING PARTS		
	MS35206-245	. . SCREW	4	
		---*---		
	MS3108B20-15S	. . PLUG-DEICE TIMER	1	
-113	AN2552-3A	. . RECEPTACLE-GROUND SERVICE PLUG	1	
		ATTACHING PARTS		
-114	MS35191-275	. . SCREW	2	
-115	MS21044N3	. . NUT	2	
		---*---		
-116	0822006-1	. . BRACKET ASSY-RECEPTACLE MOUNT	1	M
	0851870-1	. . BRACKET ASSY-RECEPTACLE MOUNT	1	P
-116A	0851872-1	. . COVER ASSY	1	P
-116B	S1021Z8-5B	. . SCREW	7	P
-117	0312155-10	. . STRAP-RECEPTACLE GROUND	1	M
-118	MS35171-3S	. . NIPPLE	1	
	MS35171-1S	. . NIPPLE	2	
-119	MS25123-4-3	. . BOARD-TERMINAL LH WING ROOT TB9	1	
	MS25123-4-2	. . BOARD-TERMINAL RH WING ROOT TB8	1	
		ATTACHING PARTS		
	MS35206-229	. . SCREW	2	
		---*---		
-120	MS25123-1-2	. . BOARD-TERMINAL LH WING ROOT TB11	1	
	MS25123-1-4	. . BOARD-TERMINAL RH WING ROOT TB10	1	
		ATTACHING PARTS		
	MS35206-229	. . SCREW	2	
		---*---		

CONTINUED

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
141 -121	SEE FIG 143	. . LANDING GEAR ELECTRICAL COMPONENTS	REF	
-122	SEE FIG 145	. . WING & TIP TANK ELECTRICAL COMPONENTS	REF	
-123	SEE FIG 146	. . EXTERIOR LIGHTING INSTL	REF	
-124	5072422-1	. . AMPLIFIER ASSY	1	
		ATTACHING PARTS		
	MS35206-228	. . SCREW	4	
		---*---		
-125	5172424-2	. . SPEAKER ASSY-EXTERNAL PA SYSTEM	1	
		ATTACHING PARTS		
	MS27039-0808	. . SCREW	6	
		---*---		
	F8WP	. . . SPEAKER-EXTERNAL PA SYSTEM MKCO	1	
	5172424-5	. . . GRILL	1	
	5172424-3	. . . BRACKET-MOUNT	1	
-126	0R55-2	. . RESISTOR-CIGAR LIGHTER	1	N
	MS35206-247	. . SCREW	2	
	MS21044N08	. . NUT	2	
-127	SEE FIG 129A	. . LIGHT INSTL-MAP	REF	P
-128	0850469-1	. . RELAY-GROUND SERVICE RECPT	1	P
	IN2482	. . DIODE	1	P
	0822039-1	. . BRACKET ASSY	1	P
	AN3-43	. . BOLT	2	P
-129	PDM40	. . CIRCUIT BREAKER CB60	1	
-130	SC628	. . HORN-WARNING ALTITUDE ALERT MAL	1	
	TVA1312	. . CAPACITOR-WARNING HORN SPR	1	
	MS9024-12	. . CLAMP	1	
		ATTACHING PARTS		
	MS35207-245	. . SCREW	1	
	MS21044N08	. . NUT	1	
		---*---		
-131	SC628P	. . HORN-WARNING RADIO ALTIMETER MAL	1	Y
	TVA1312	. . CAPACITOR-WARNING HORN SPR	1	Y
	MS9024-12	. . CLAMP	1	Y
		ATTACHING PARTS		
	MS35207-245	. . SCREW	1	Y
	MS21044N08	. . NUT	1	Y
		---*---		
-132	SC628H	. . HORN-WARNING AUTOPILOT DISENGAGE MAL	1	Y
	TVA1312	. . CAPACITOR-WARNING HORN	1	Y
	MS9024-12	. . CLAMP	1	Y
		ATTACHING PARTS		
	MS35207-245	. . SCREW	1	Y
	MS21044N08	. . NUT	1	Y
		---*---		

*---9910128-2 BATTERY KIT. CONSISTS OF
BATTERY, ELECTOLYTE-2 QT PKG., PLASTIC
FUNNEL & CARTON

A---340-0001 THRU 340-0008
B---340-009 THRU 340-0155
C---340-0001 THRU 340-0020
D---340-0021 & THRU 340-0150
E---340-0001 THRU 340-0150
F---340-0151 & ON
G---340-0001 THRU 340-0049
H---340-0050 THRU 340-0150
J---340-0001 THRU 340-0225
K---340-0226 & ON
L---340-0156 & ON
M---340-0001 THRU 340-0500
N---340-0301 THRU 340-0500
P---340-0501 & ON
Q---340-0001 THRU 340-0521
R---340-0522 & ON
S---340-0303 & ON
T---340-0151 THRU 340-0500
U---340-0001 THRU 340-0550
V---340-0551 & ON
W---340-0151 THRU 340A0036
X---340A0037 & ON
Y---340A0001 & ON

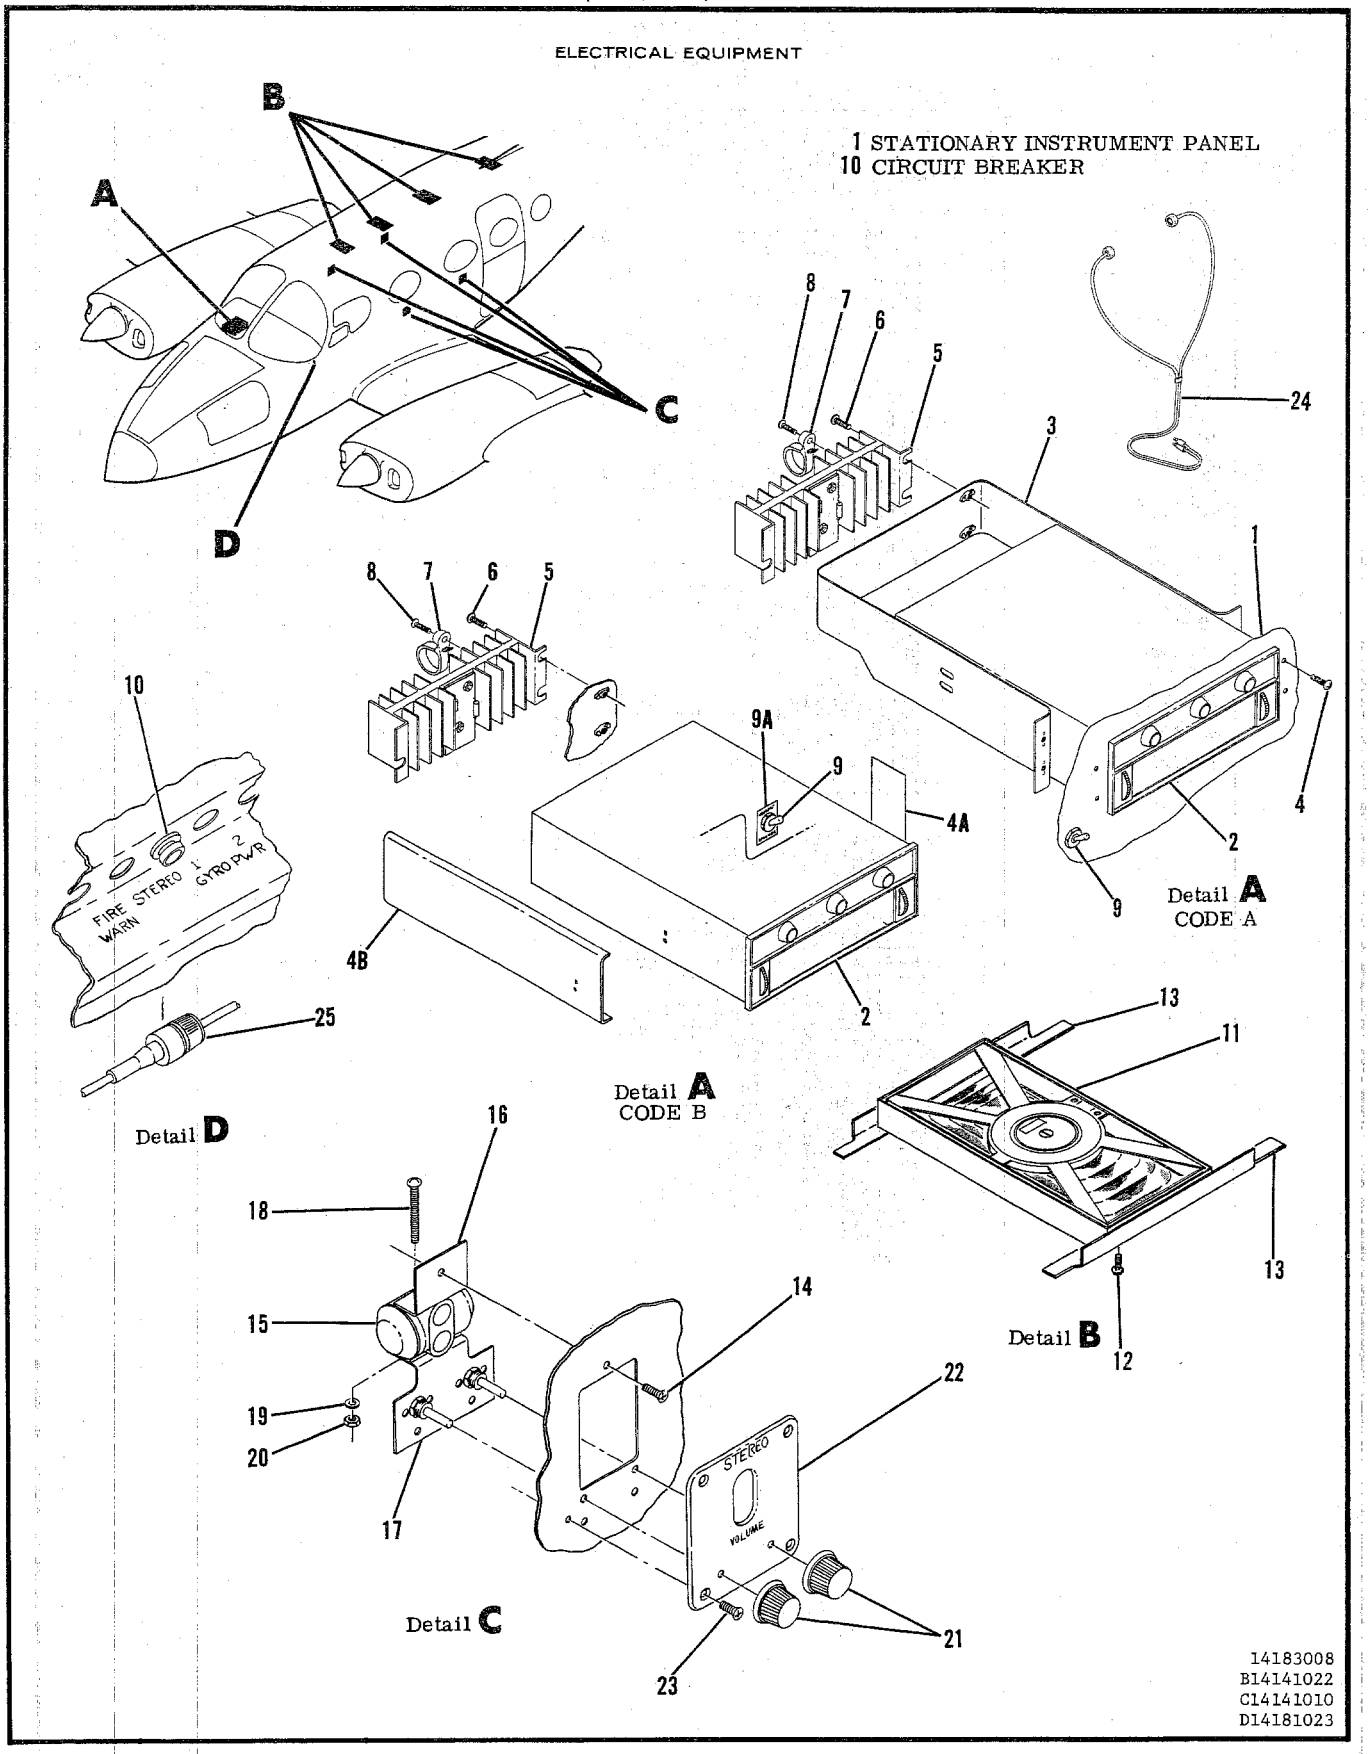

Figure 142. Cabin Stereo Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
142 -		CABIN STEREO INSTALLATION	NP	
-1	SEE FIG 61	. STATIONARY INSTRUMENT PANEL	REF	
-2	RR45FT	. PLAYER-STEREO TAPE TENN	1	
-3	5300920-6	. BRACKET ASSY-PLAYER MOUNTING	1	A
		ATTACHING PARTS		
-4	MS24694-3	. SCREW	4	A
		---*---		
-4A	5300920-14	. DOUBLER	1	B
-4B	5300920-13	. CHANNEL	1	B
-5	5118473-1	. REGULATOR ASSY	1	
		ATTACHING PARTS		
-6	MS35206-245	. SCREW	2	
		---*---		
	2N3055	. . TRANSISTOR RCA	1	
		ATTACHING PARTS		
	MS35206-231	. . SCREW	2	
	MS21044N06	. . NUT	2	
		---*---		
	NC401V	. . HEATSINK WFGN	1	
	RC20GF391K	. . RESISTOR	1	
	1N4743	. . DIODE	1	
	1ZM1375	. . DIODE ALT FOR 1N4743 ITRC	1	
	9910072-11	. . BOARD-PRINTED CIRCUIT	1	
-7	CM2679-1	. STRAP-TIE	1	
		ATTACHING PARTS		
-8	MS35206-246	. SCREW	1	
		---*---		
-9	S1696-1	. SWITCH-SELECT HEADSET OR SPEAKERS	1	
-9A	5300181-13	. PLACARD	1	B
-10	SEE FIG 144	. CIRCUIT BREAKER CB 50	1	
-11	C596506-0101	. SPEAKER	4	
		ATTACHING PARTS		
-12	S1021Z6-8	. SCREW	4	
		---*---		
-13	5300920-2	. SUPPORT-SPEAKER LH & RH FWD	2	
	5300920-3	. SUPPORT-SPEAKER LH & RH CTR FWD	2	
	5300920-4	. SUPPORT-SPEAKER LH & RH CTR AFT	2	
	5300920-5	. SUPPORT-SPEAKER LH & RH AFT	2	
	5118471-2	. TRANSDUCER ASSY-HEADSET	4	C
	5118471-7	. TRANSDUCER ASSY-HEADSET	4	D
		ATTACHING PARTS		
-14	AN531-6R6	. SCREW	3	
		---*---		
-15	62140	. . TRANSDUCER TCD	1	
-16	5118551-2	. . BRACKET	1	
-17	5118551-1	. . BRACKET	1	C
	5118551-6	. . BRACKET	1	D
		ATTACHING PARTS		
-18	MS35206-235	. . SCREW	2	
-19	MS35333-37	. . WASHER	1	
-20	MS25082-1	. . NUT	2	
		---*---		
-21	CM2947-1	. . KNOB-RHEOSTAT	2	
-22	5118551-3	. ESCUTCHEON ASSY-HEADSET	4	C
	9910221-1	. ESCUTCHEON ASSY-HEADSET	4	D
		ATTACHING PARTS		
-23	AN531-4R8	. SCREW TAPD	4	
		---*---		
-24	060745-00	. HEADSET TAPD	4	
-25	HHJ-A	. HOLDER-FUSE	1	E
	AGC3.0	. FUSE-30 AMP	1	E

A---340-0001 THRU 340-0150
B---340-0151 & ON
C---340-0001 THRU 340-0500
D---340-0501 & ON
E---340-0301 & ON

ELECTRICAL EQUIPMENT

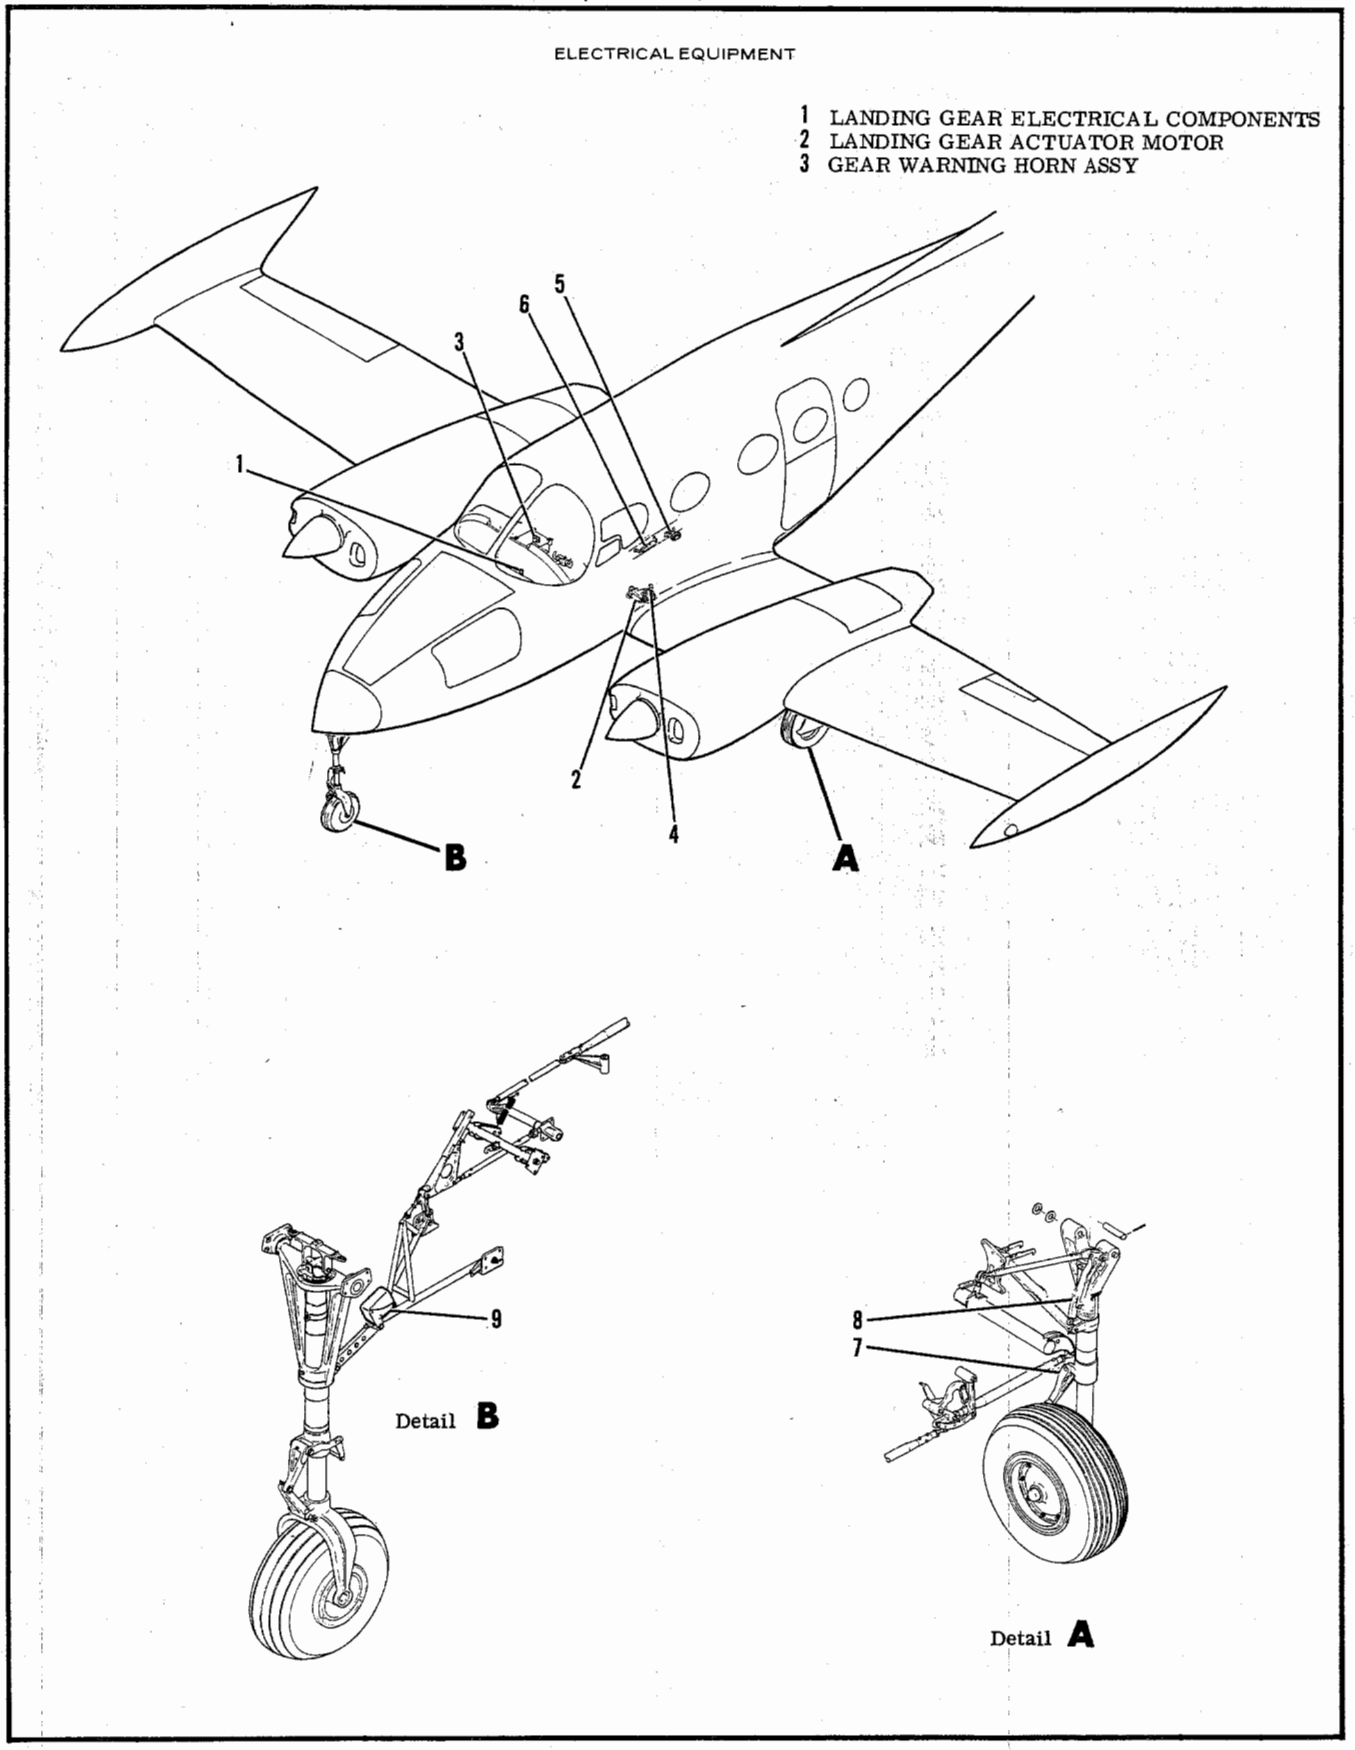

Figure 143. Landing Gear Electrical Components

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
143 -		LANDING GEAR ELECTRICAL COMPONENTS	NP	
-1	SEE FIG 61	. SWITCH-LANDING GEAR	REF	
-2	SEE FIG 78	. MOTOR-LANDING GEAR ACTUATOR	REF	
-3	SEE FIG 141	. HORN ASSY-GEAR WARNING	REF	
	SEE FIG 141	. SUPPORT-GEAR WARNING HORN	REF	
-4	BZ3YT	. SWITCH-UP LIMIT LANDING GEAR ACTUATOR FSO BZ7RT04	MCS 1	F
	BZ7RT04	. SWITCH-DOWN LIMIT LANDING GEAR ACTUATOR	MCS 1	F
	BZ7RT04	. SWITCH-UP & DOWN LIMIT LANDING GEAR ACTUATOR	MCS 2	G
	AD5721R	. ACTUATOR	MCS 2	
	5045029-1	. INSULATOR	2	
		ATTACHING PARTS		
	AN515-6R18	. SCREW	2	
	AN960-6	. WASHER	2	
	MS21042L06	. NUT	2	
		---*---		
-5	6041H220	. RELAY-LANDING GEAR	CUT 1	
		ATTACHING PARTS		
	AN3-12A	. BOLT	2	
	AN960-10	. WASHER	2	
		---*---		
-6	FR100-5	. RESISTOR-LANDING GEAR	MEMI 1	
	P3689	. BRACKET-LANDING GEAR RESISTOR	MEMI 1	
		ATTACHING PARTS		
	MS35206-262	. SCREW	2	
	AN960-10	. WASHER	2	
		---*---		
-7	2VA20	. SWITCH-GEAR SAFETY	MCS 1	C
	2VA20	. SWITCH-GEAR SAFETY	MCS 1	D
	1CH1-6	. SWITCH-GEAR SAFETY	MCS 1	E
		ATTACHING PARTS		
	AN515-8R18	. SCREW	2	
	MS21044N08	. NUT	2	
		---*---		
	MS25253-4	. SWITCH-MICRO	2	
	VA10074	. LEVER-ACTUATOR	MCS 1	
		ATTACHING PARTS		
	AN310C3	. NUT	1	
		---*---		
-8	1SE1	. SWITCH-GEAR DOWN AND LOCKED MAIN GEAR	MCS 2	A
	1SE1-3	. SWITCH-GEAR DOWN AND LOCKED MAIN GEAR	MCS 2	B
		ATTACHING PARTS		
	AN515-832R22	. SCREW	2	
	AN960-2	. WASHER	2	
	0841235-2	. SPACER	2	
	22NM26	. NUT	EN 2	
		---*---		
	JE1	. ACTUATOR-SWITCH LEAF WEU JE73	MCS 2	K
	JE73	. ACTUATOR-SWITCH LEAF	MCS 2	L
-9	2VB1	. SWITCH-GEAR DOWN AND LOCKED NOSE GEAR	MCS 1	H
	1CH1-6	. SWITCH	MCS 1	J
		ATTACHING PARTS		
	MS35206-208	. SCREW	2	
	MS21044N08	. NUT	2	
		---*---		

A---340-0001 THRU 340-0185
B---340-0186 & ON
C---340-0001 THRU 340-0185
340-0212 THRU 340-0221
D---340-0186,340-0222 THRU 340-0257
EXCEPT AIRCRAFT MODIFIED BY SK421-60
E---340-0258 & ON & AIRCRAFT MODIFIED BY SK421-60
F---340-0001 THRU 340-0300
G---340-0301 & ON
H---340-0001 TO 340A0001
J---340A0001 & ON
K---340-0001 THRU 340A0079
L---340A0080 & ON

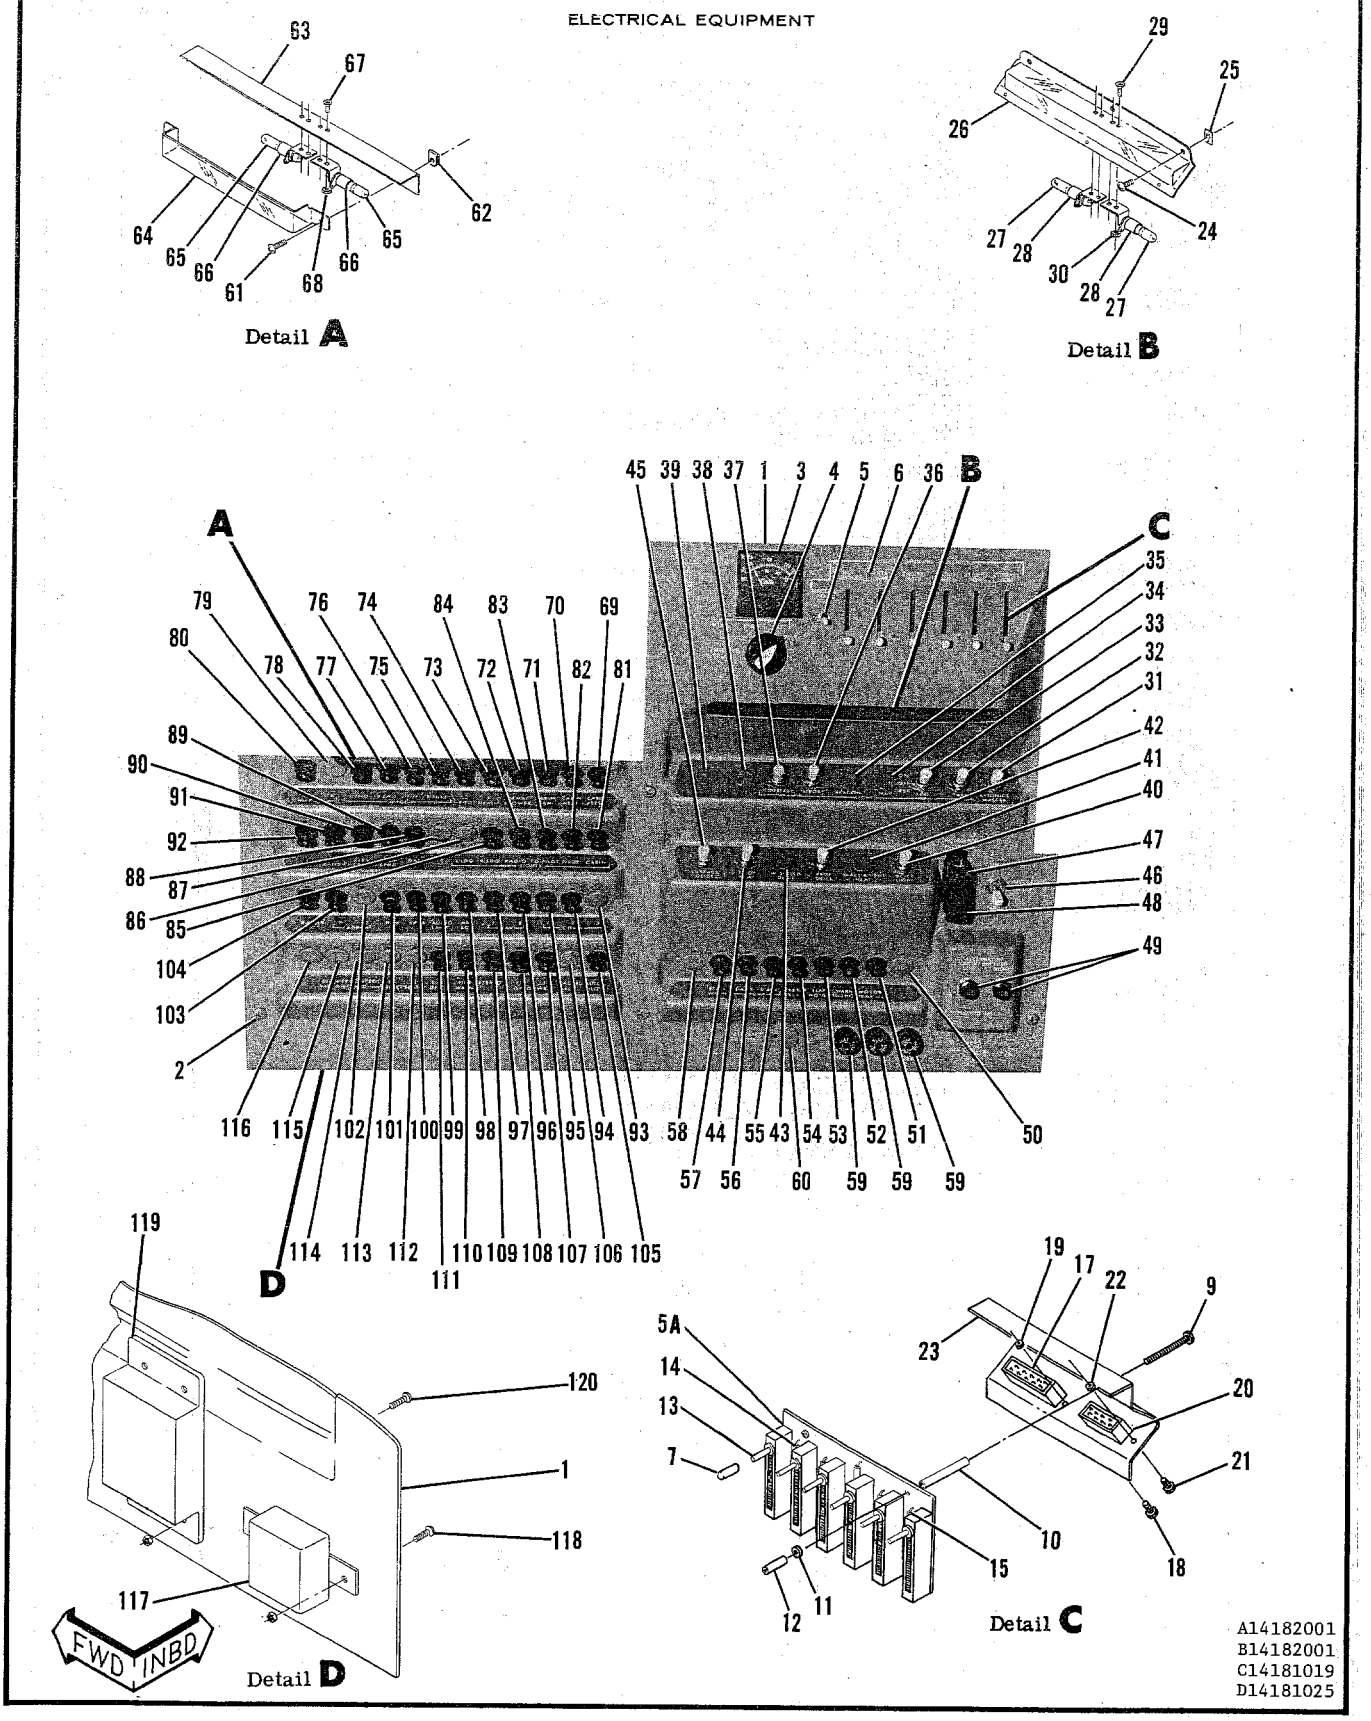

Figure 144. Circuit Breaker Panel Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
144 -		CIRCUIT BREAKER PANEL INSTALLATION	NP	
-1	5314101-2	. PANEL ASSY	1	C
	5314101-29	. PANEL ASSY	1	F
	5314101-40	. PANEL ASSY	1	G
		ATTACHING PARTS		
-2	MS35207-265	. SCREW	8	
		---*---		
-3	5118486-1	. AMMETER	1	A
	5118486-6	. VOLT AMMETER ASSY-LIGHTED	1	B
-4	5018153-1	. SWITCH-AMMETER SELECT	1	
	0813475-7	. KNOB	1	
-5	MST405N	. SWITCH-MASTER PANEL	ALEM	1
-5A	5318114-1	. CONTROL ASSY-LIGHT DIMMING		1
		ATTACHING PARTS		
-6	MS35202-12	. SCREW	4	
		---*---		
-7	.125-6	. . WHITE TIP	SIV	6
-8		. . DELETED NOT USED		
-9	MS35206-220	. . SCREW	4	
-10	NAS43DD0-32	. . SPACER	4	
-11	NAS549M4	. . WASHER	4	
-12	CM2968-4-2	. . SPACER-POST	4	
-13	CM3535-2	. . . POTENTIOMETER-LIGHT CONTROL	6	
-14	RC20GF151K	. . . RESISTOR	6	
-15	RC20GF152K	. . . RESISTOR	1	
-16		. . . DELETED NOT USED		
-17	DB25S	. . RECEPTACLE	CIN	1
		ATTACHING PARTS		
-18	D20418-2	. . SCREW-LOCK	CIN	2
-19	MS21044N04	. . NUT		2
		---*---		
-20	DA15P	. . PLUG	CIN	1
		ATTACHING PARTS		
-21	D20418-2	. . SCREW-LOCK	CIN	2
-22	MS21044N04	. . NUT		2
		---*---		
-23	5318114-2	. . BRACKET		1
	5318113-1	. LIGHT ASSY		1
		ATTACHING PARTS		
-24	S1022Z6-6	. SCREW		6
-25	NAS446-2-3	. NUT		6
		---*---		
-26	5318113-2	. . LENS	GEML	1
-27	1864	. . LAMP		2
-28	4080-312	. . HOLDER-LAMP	DMC	2
		ATTACHING PARTS		
-29	MS35206-226	. . SCREW		2
-30	MS21042-06	. . NUT		2
		---*---		
-31	CM2692-16-2S	. PLUG BUTTON SCB1		1
	112-235-101	. SWITCH-AVIONICS MASTER PANEL	WDF	1
-32	112-205-101	. SWITCH-TAXI LIGHTS SCB2	WDF	1
-33	MS24524-21	. SWITCH-LANDING LIGHTS SCB3		1
-34	112-205-101	. SWITCH-NAV LIGHTS SCB4	WDF	1
-35	112-205-101	. SWITCH-ROTATING BEACON LIGHTS SCB5	WDF	1
-36	CM2692-16-2S	. PLUG BUTTON SCB6		1
	112-507-101	. SWITCH-STROBE LIGHTS	WDF	1
	156-8	. TIP WHITE		1
-37	S382-3	. SWITCH-COURTESY LIGHT SCB7		1
	5318115-15	. BUS	AR	
-38	CM2692-16-2S	. PLUG BUTTON SCB8 SPARE		1
	7277-2-5	. FUEL-R LOW		1 P
-39	CM2692-16-2S	. PLUG BUTTON SCB9 SPARE		1
	7277-2-5	. FUEL-L LOW		1 P
-40	CM2692-16-2S	. PLUG BUTTON SCB10		1
	112-205-101	. SWITCH-DE-ICE LIGHT	WDF	1
-41	112-205-101	. SWITCH-STALL & VENT HEAT SCB11	WDF	1
-42	CM2692-16-2S	. PLUG BUTTON SCB12		1
	112-220-101	. SWITCH-PROP DE-ICE	WDF	1
-43	CM2692-16-2S	. PLUG BUTTON SCB13		1
	112-205-101	. SWITCH-WINDSHIELD DEICE	WDF	1
-44	MS24524-22	. SWITCH-PITOT HEAT SCB14 FSO 12TS1-3		1 H
	12TS1-3	. SWITCH-PITOT HEAT SCB14	MCS	1 J
-45	CM2692-16-2S	. PLUG BUTTON SCB15		1
	3D1748-2	. SWITCH-TIMER SURFACE DEICE	GD	1 C
	MS35058-27	. SWITCH-SURFACE DE-ICE		1 C
-46	MS25068-23	. SWITCH-REGULATOR SELECT		1 C
	CM2692-16-2S	. PLUG BUTTON SCB16		1
	7270-5-35	. SWITCH-ALTERNATE AVIONIC POWER	WDF	1 D
-47	S382-3	. SWITCH-EMERGENCY ALT FIELD		1 C
	S392-3	. SWITCH-EMERGENCY ALT FIELD		1 D
-48	MS25224-1	. GUARD-SWITCH		1
-49	45-2SN2-100A	. CIRCUIT BREAKER-ALTERNATOR L & R CB58 & CB59	ETAP	2
	5318115-22	. BUS		1
-50	7277-2-15	. CIRCUIT BREAKER-LANDING GEAR MOTOR CB1	MTCC	1
-51	7277-2-5	. CIRCUIT BREAKER-LANDING GEAR WARNING CB2	MTCC	1
-52	7277-2-10	. CIRCUIT BREAKER-FLAP MOTOR CB3	MTCC	1
-53	7277-2-7.5	. CIRCUIT BREAKER-STARTER RELAY CB4	MTCC	1
-54	7277-2-7.5	. CIRCUIT BREAKER-R AUX PUMP CB5	MTCC	1
-55	7277-2-7.5	. CIRCUIT BREAKER-L AUX PUMP CB6	MTCC	1

CONTINUED

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
144 -56	7277-2-5	CIRCUIT BREAKER-STALL WARNING CB7 MTCC	1	
	5318115-3	BUS	1	
-57	CM2692-16-2S	PLUG BUTTON CB8 SPARE MTCC	1	
	7277-2-5	EQUIPMENT FAN	1	P
-58	CM2692-16-2S	PLUG BUTTON CB9 SPARE	1	
	7277-2-5	AC INVERTER	1	P
-59	MDX3.0	FUSE-L ALT FIELD SPARE R ALT FIELD BUS	3	
	HKP	HOLDER-FUSE BUS	3	
-60	CM2692-16-2S	PLUG BUTTON SCB16	1	
	7270-5-35	SWITCH-ALTERNATE AVIONICS POWER WDF	1	C
	5318113-3	LIGHT ASSY	1	
		ATTACHING PARTS		
-61	MS35206-244	SCREW	2	
-62	S1477-08	NUT-CLIP MKL	2	
		---*---		
-63	5318113-4	. SUPPORT	1	
-64	5318113-5	. LENS	1	
-65	1864	. LAMP GEML	2	
-66	4080-312	. HOLDER-LAMP DMC	2	
		ATTACHING PARTS		
-67	CM3559-6-4	. SCREW	4	
-68	MS21042-06	. NUT	4	
		---*---		
-69	7277-2-5	CIRCUIT BREAKER-CABIN PRESS CB10 MTCC	1	
-70	7277-2-15	CIRCUIT BREAKER-CABIN HEAT CB11 MTCC	1	
-71	7277-2-15	CIRCUIT BREAKER-CABIN FAN CB12 MTCC	1	
-72	7277-2-15	CIRCUIT BREAKER-WEMAC BLOWER CB13 MTCC	1	
-73	CM2692-16-2S	PLUG BUTTON CB14	1	
	7277-2-5	CIRCUIT BREAKER-R PITOT HEAT MTCC	1	
-74	7277-2-5	CIRCUIT BREAKER-L PITOT HEAT CB15 MTCC	1	
-75	7277-2-5	CIRCUIT BREAKER-R FUEL GAGE CB16 MTCC	1	
-76	7277-2-5	CIRCUIT BREAKER-L FUEL GAGE CB17 MTCC	1	
-77	7277-2-5	CIRCUIT BREAKER-R ENG GAGE CB18 MTCC	1	
-78	7277-2-5	CIRCUIT BREAKER-L ENG GAGE CB19 MTCC	1	
-79	CM2692-16-2S	PLUG BUTTON CB20	1	
	7277-2-5	CIRCUIT BREAKER-R T & B MTCC	1	
-80	7277-2-5	CIRCUIT BREAKER-L T & B CB21 MTCC	1	
	5318115-4	BUS	1	
-81	7277-2-5	CIRCUIT BREAKER-CABIN LIGHTS CB22 MTCC	1	
-82	7277-2-5	CIRCUIT BREAKER-PILOT LIGHTS CB23 MTCC	1	
-83	7277-2-5	CIRCUIT BREAKER-CO-PILOT LIGHTS CB24 MTCC	1	
-84	7277-2-7.5	CIRCUIT BREAKER-RADIO LIGHTS CB25 MTCC	1	
-85	CM2692-16-2S	PLUG BUTTON CB26	1	
	7277-2-10	CIRCUIT BREAKER-R LDG LIGHT MTCC	1	
-86	7277-2-10	CIRCUIT BREAKER-L LDG LIGHT CB27 MTCC	1	
	5318115-10	BUS	1	
-87	CM2692-16-2S	PLUG BUTTON CB28 SPARE	1	
	7277-2-7.5	CIGAR LTR & STEREO	1	P
-88	CM2692-16-2S	PLUG BUTTON CB29	1	
	7277-2-5	CIRCUIT BREAKER-OAT MTCC	1	M
	7277-2-5	CIRCUIT BREAKER-ALTIMETER MTCC	1	N
-89	CM2692-16-2S	PLUG BUTTON CB30	1	
	7277-2-5	CIRCUIT BREAKER-PROP SYNC MTCC	1	M
	7277-2-5	CIRCUIT BREAKER-PROP SYNC & OAT MTCC	1	N
-90	CM2692-16-2S	PLUG BUTTON CB31	1	
	7277-2-5	CIRCUIT BREAKER-ELEV TRIM MTCC	1	
	7277-2-5	CIRCUIT BREAKER-L AUX & TRNS PUMP MTCC	1	P
-91	CM2692-16-2S	PLUG BUTTON CB32	1	
	7277-2-5	CIRCUIT BREAKER-R FUEL TRANS MTCC	1	Q
	7277-2-5	CIRCUIT BREAKER-R AUX & TRNS PUMP MTCC	1	R
-92	CM2692-16-2S	PLUG BUTTON CB33	1	
	7277-2-5	CIRCUIT BREAKER-L FUEL TRANS MTCC	1	Q
-93	CM2692-16-2S	PLUG BUTTON CB34	1	
	7277-2-15	CIRCUIT BREAKER-COMM 3 MTCC	1	
-94	CM2692-16-2S	PLUG BUTTON CB35	1	
	7277-2-10	CIRCUIT BREAKER-COMM 2 MTCC	1	
-95	CM2692-16-2S	PLUG BUTTON CB36	1	
	7277-2-10	CIRCUIT BREAKER-COMM 1 MTCC	1	
-96	CM2692-16-2S	PLUG BUTTON CB37	1	
	7277-2-7.5	CIRCUIT BREAKER-NAV 2 MTCC	1	
-97	CM2692-16-2S	PLUG BUTTON CB38	1	
	7277-2-7.5	CIRCUIT BREAKER-NAV 1 MTCC	1	
-98	CM2692-16-2S	PLUG BUTTON CB39	1	
	7277-2-5	CIRCUIT BREAKER-MKR BCN MTCC	1	
-99	CM2692-16-2S	PLUG BUTTON CB40	1	
	7277-2-5	CIRCUIT BREAKER-AUDIO AMP MTCC	1	
-100	CM2692-16-2S	PLUG BUTTON CB41	1	
	7277-2-5	CIRCUIT BREAKER-XPDR MTCC	1	
-101	CM2692-16-2S	PLUG BUTTON CB42	1	
	7277-2-5	CIRCUIT BREAKER-DME MTCC	1	
-102	CM2692-16-2S	PLUG BUTTON CB43	1	
	7277-2-5	CIRCUIT BREAKER-ADF2 MTCC	1	Q
	7277-2-5	CIRCUIT BREAKER-YAW DAMP MTCC	1	P
-103	CM2692-16-2S	PLUG BUTTON CB44	1	
	7277-2-5	CIRCUIT BREAKER-ADF1 MTCC	1	Q
	7277-2-5	CIRCUIT BREAKER-ADF MTCC	1	P

CONTINUED

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
144 -104	CM2692-16-2S	. PLUG BUTTON CB45	1	
	7277-2-5	. CIRCUIT BREAKER-RADAR MTCC	1	
-105	CM2692-16-2S	. PLUG BUTTON CB46	1	
	7277-2-7.5	. CIRCUIT BREAKER-AUTOPILOT MTCC	1	Q
	7277-2-5	. CIRCUIT BREAKER-ACT AUTOPILOT MTCC	1	P
-106	CM2692-16-2S	. PLUG BUTTON CB47	1	
	7277-2-7.5	. CIRCUIT BREAKER-RADAR ALT MTCC	1	Q
	7277-2-5	. CIRCUIT BREAKER-COMP AUTOPILOT MTCC	1	P
-107	CM2692-16-2S	. PLUG BUTTON CB48	1	
	7277-2-7.5	. CIRCUIT BREAKER-GYRO PWR 2 MTCC	1	
-108	CM2692-16-2S	. PLUG BUTTON CB49	1	
	7277-2-7.5	. CIRCUIT BREAKER-GYRO PWR 1 MTCC	1	
-109	CM2692-16-2S	. PLUG BUTTON CB50	1	
	7277-2-5	. CIRCUIT BREAKER-X PNDR-2 MTCC	1	P
-110	CM2692-16-2S	. PLUG BUTTON CB51	1	
	7271-8-10	. CIRCUIT BREAKER-FIRE WARN MTCC	1	
-111	CM2692-16-2S	. PLUG BUTTON CB52	1	
	7277-2-7.5	. CIRCUIT BREAKER-SURF DE-ICE MTCC	1	
-112	CM2692-16-2S	. PLUG BUTTON CB53	1	
	7277-2-15	. CIRCUIT BREAKER-R ELECT SEAT MTCC	1	
-113	CM2692-16-2S	. PLUG BUTTON CB54	1	
	7277-2-15	. CIRCUIT BREAKER-L ELECT SEAT MTCC	1	
-114	CM2692-16-2S	. PLUG BUTTON CB55	1	
	7277-2-15	. CIRCUIT BREAKER-AIRCOND CONTROL MTCC	1	
-115	CM2692-16-2S	. PLUG BUTTON CB56	1	
	7271-8-25	. CIRCUIT BREAKER-AIRCOND BLOWER MTCC	1	
-116	CM2692-16-2S	. PLUG BUTTON CB57 SPARE	1	
	7277-2-5	. CIRCUIT BREAKER-GS1	1	P
-117	9910226-1	. MONITOR ASSY-LOW VOLTAGE	1	K
-118	MS35206-243	. SCREW	2	K
	MS21044N08	. NUT	2	K
-119	EM211-2	. TIMER-SURFACE DEICE ELAGO	1	D
-120	MS35036-243	. SCREW	2	D
	MS21044N08	. NUT	2	D

A---340-0001 THRU 340-0011
B---340-0012 & ON
C---340-0001 THRU 340-0150
D---340-0151 & ON
E---340-0001 THRU 340-0300
F---340-0151 THRU 340-0166
G---340-0167 & ON
H---340-0001 THRU 340-0308
J---340-0309 & ON
K---340-0501 & ON & AIRCRAFT MODIFIED BY SK421-66
L---340-0301 & ON
M---340-0001 THRU 340-0352
N---340-0353 & ON
Q---340-0001 TO 340A0001

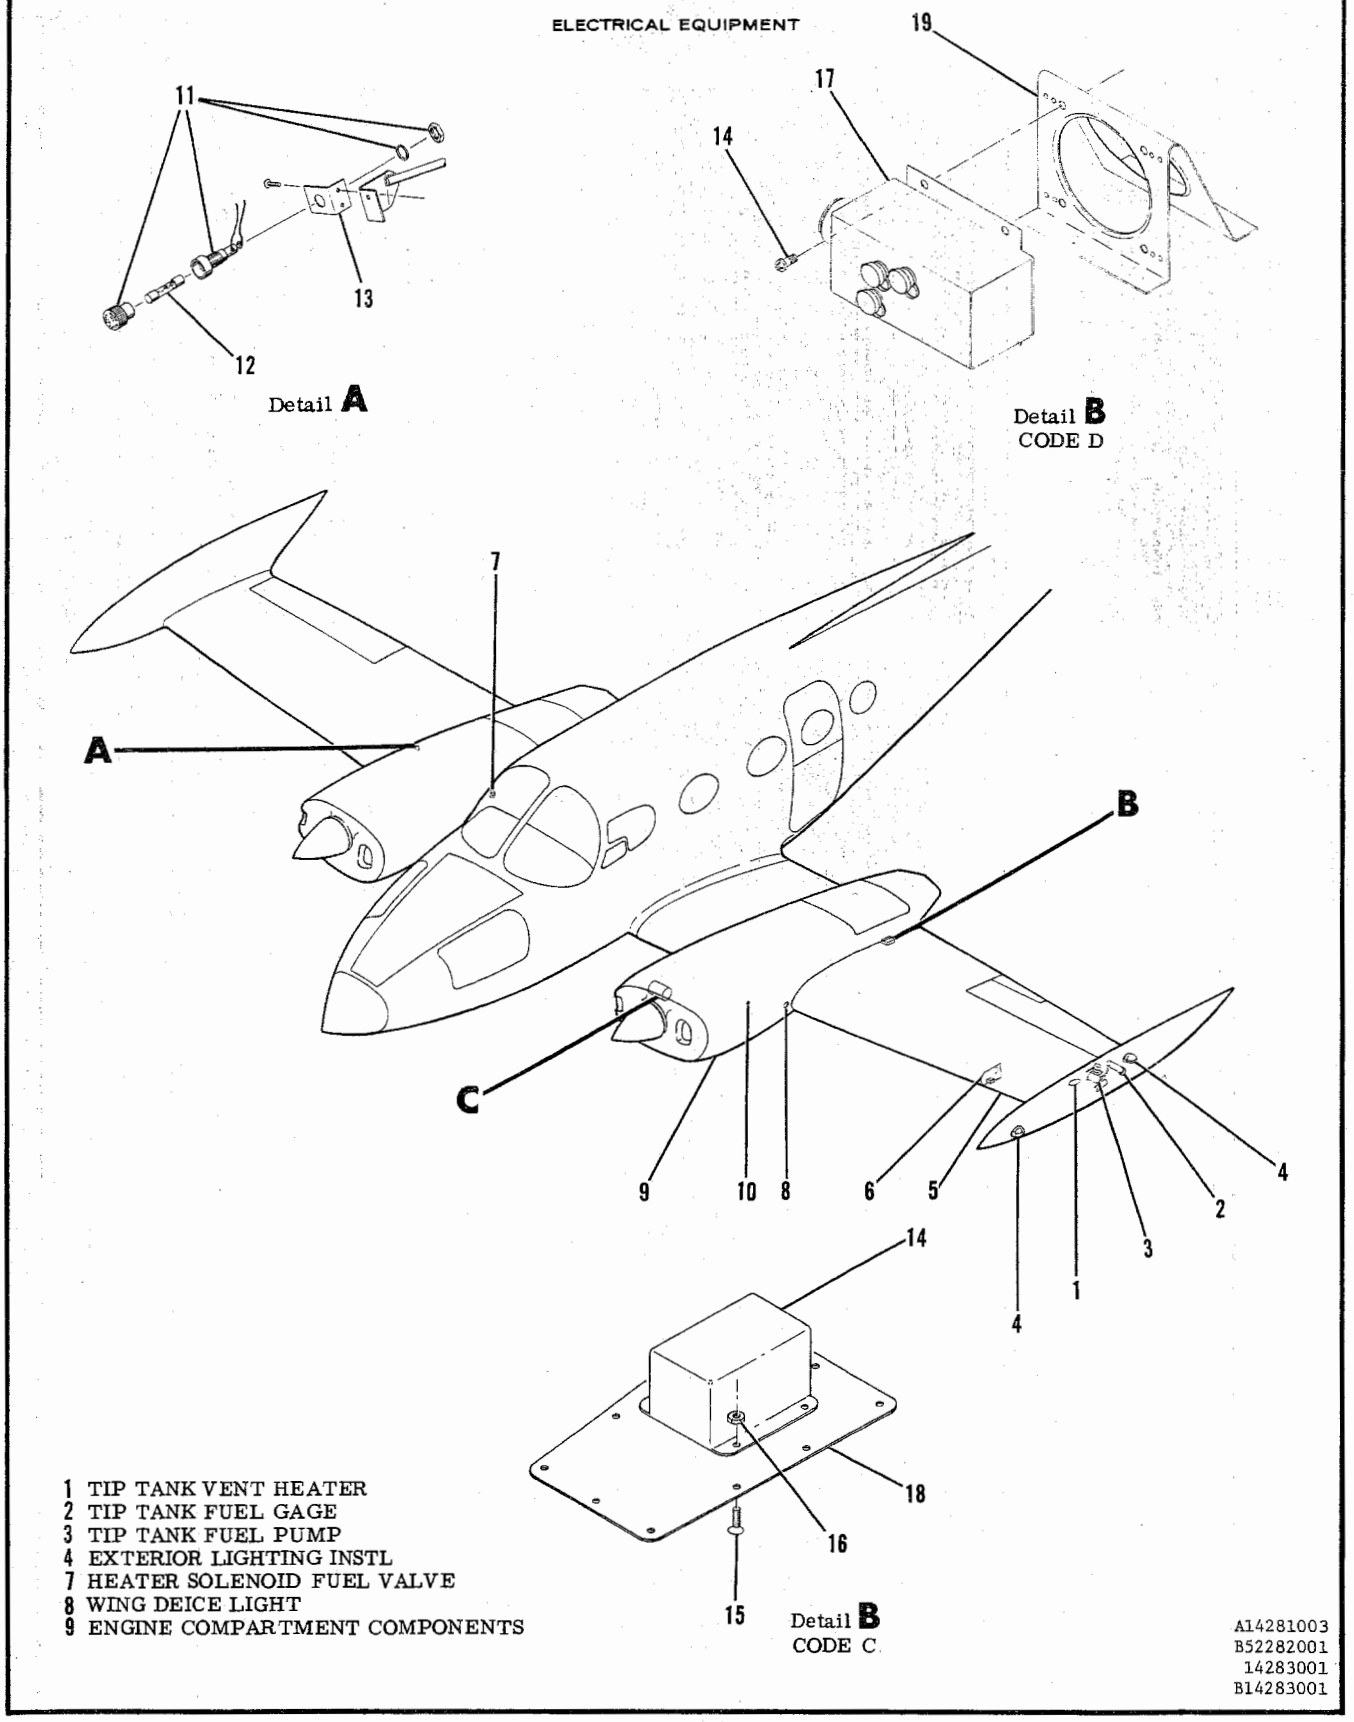

Figure 145. Wing and Tip Tank Electrical Components

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
145 -		WING AND TIP TANK ELECTRICAL COMPONENTS	NP	
-1	SEE FIG 121	. . HEATER-TIP TANK VENT	REF	
-2	SEE FIG 121	. . GAGE-TIP TANK FUEL	REF	
-3	SEE FIG 121	. . PUMP-TIP TANK FUEL	REF	
-4	SEE FIG 146	. . EXTERIOR LIGHTING INSTL	REF	
		. TIP TANK ELECTRICAL COMPONENTS	NP	
-5		. WING ELECTRICAL COMPONENTS	NP	
-6	0511062-6	. . TRANSMITTER-STALL WARNING	1	
		ATTACHING PARTS		
	S1022Z4-6	. . SCREW	4	
	NAS446-1-3	. . NUT	4	
		---*---		
-7	SEE FIG 116	. . VALVE-HEATER SOLENOID FUEL	REF	
-8	SEE FIG 146	. . LIGHT WING DE-ICE	REF	
-9		. ENGINE COMPARTMENT COMPONENTS	NP	
	SEE FIG 97	. . ENGINE ELECTRICAL COMPONENTS	REF	
	SEE FIG 108	. . PROPELLER ELECTRICAL COMPONENTS	REF	
	SEE FIG 112	. . PROP SYNCHRONIZER ELECTRICAL COMPONENTS	REF	
	SEE FIG 138	. . DEICE SYSTEM ELECTRICAL COMPONENTS	REF	
	SEE FIG 146	. . DEICE LIGHT INSTALLATION	REF	
	SEE FIG 156	. . AUTOPILOT ELECTRICAL COMPONENTS	REF	
-10	C668501-0110	. . PROBE-EXHAUST MIXTURE	2	C
	MCI-A106A44S	. . PROBE-EXHAUST MIXTURE ALIN	2	CDC
	CM3702-5	. . FIRESLEEVE-PROBE BKI	AR	CDC
	5058561-15	. . SHIELD	AR	CDC
	C668501-0111	. . LEAD-EXHAUST MIXTURE	2	C
	MCI-A106-216	. . LEAD-EXHAUST MIXTURE ALIN	2	D
-11	HKP	. HOLDER-FUSE AIRCONDITIONING COMPRESSOR BUS	1	
-12	AGC5	. FUSE AIRCONDITIONING COMPRESSOR BUS	1	A
-13	5118477-3	. BRACKET-FUSE	1	
	5118477-4	. SLEEVE	1	
-14	CMF860-4	. SIGNAL CONDITIONER-LH & RH CAIR	2	A
	9910082-2	. SIGNAL CONDITIONER-LH & RH WEU 9910082-32	2	B
	9910082-32	. SIGNAL CONDITIONER-LH & RH	2	E
		ATTACHING PARTS		
-15	MS24693S271	. SCREW BUS	4	C
-16	MS21044N3	. NUT	4	CD
-17	MS35206-243	. SCREW BUS	4	D
		---*---		
-18	5326000-7	. DOOR-ACCESS-LH BUS	1	C
	5326000-8	. DOOR-ACCESS-RH	1	CD
-19	5326012-1	. BRACKET ASSY LH & RH	2	D

A---340-0001 THRU 340-0150
B---340-0151 THRU 340A0057
C---340-0001 TO 340A0001
D---340A0001 & ON
E---340A0058 & ON

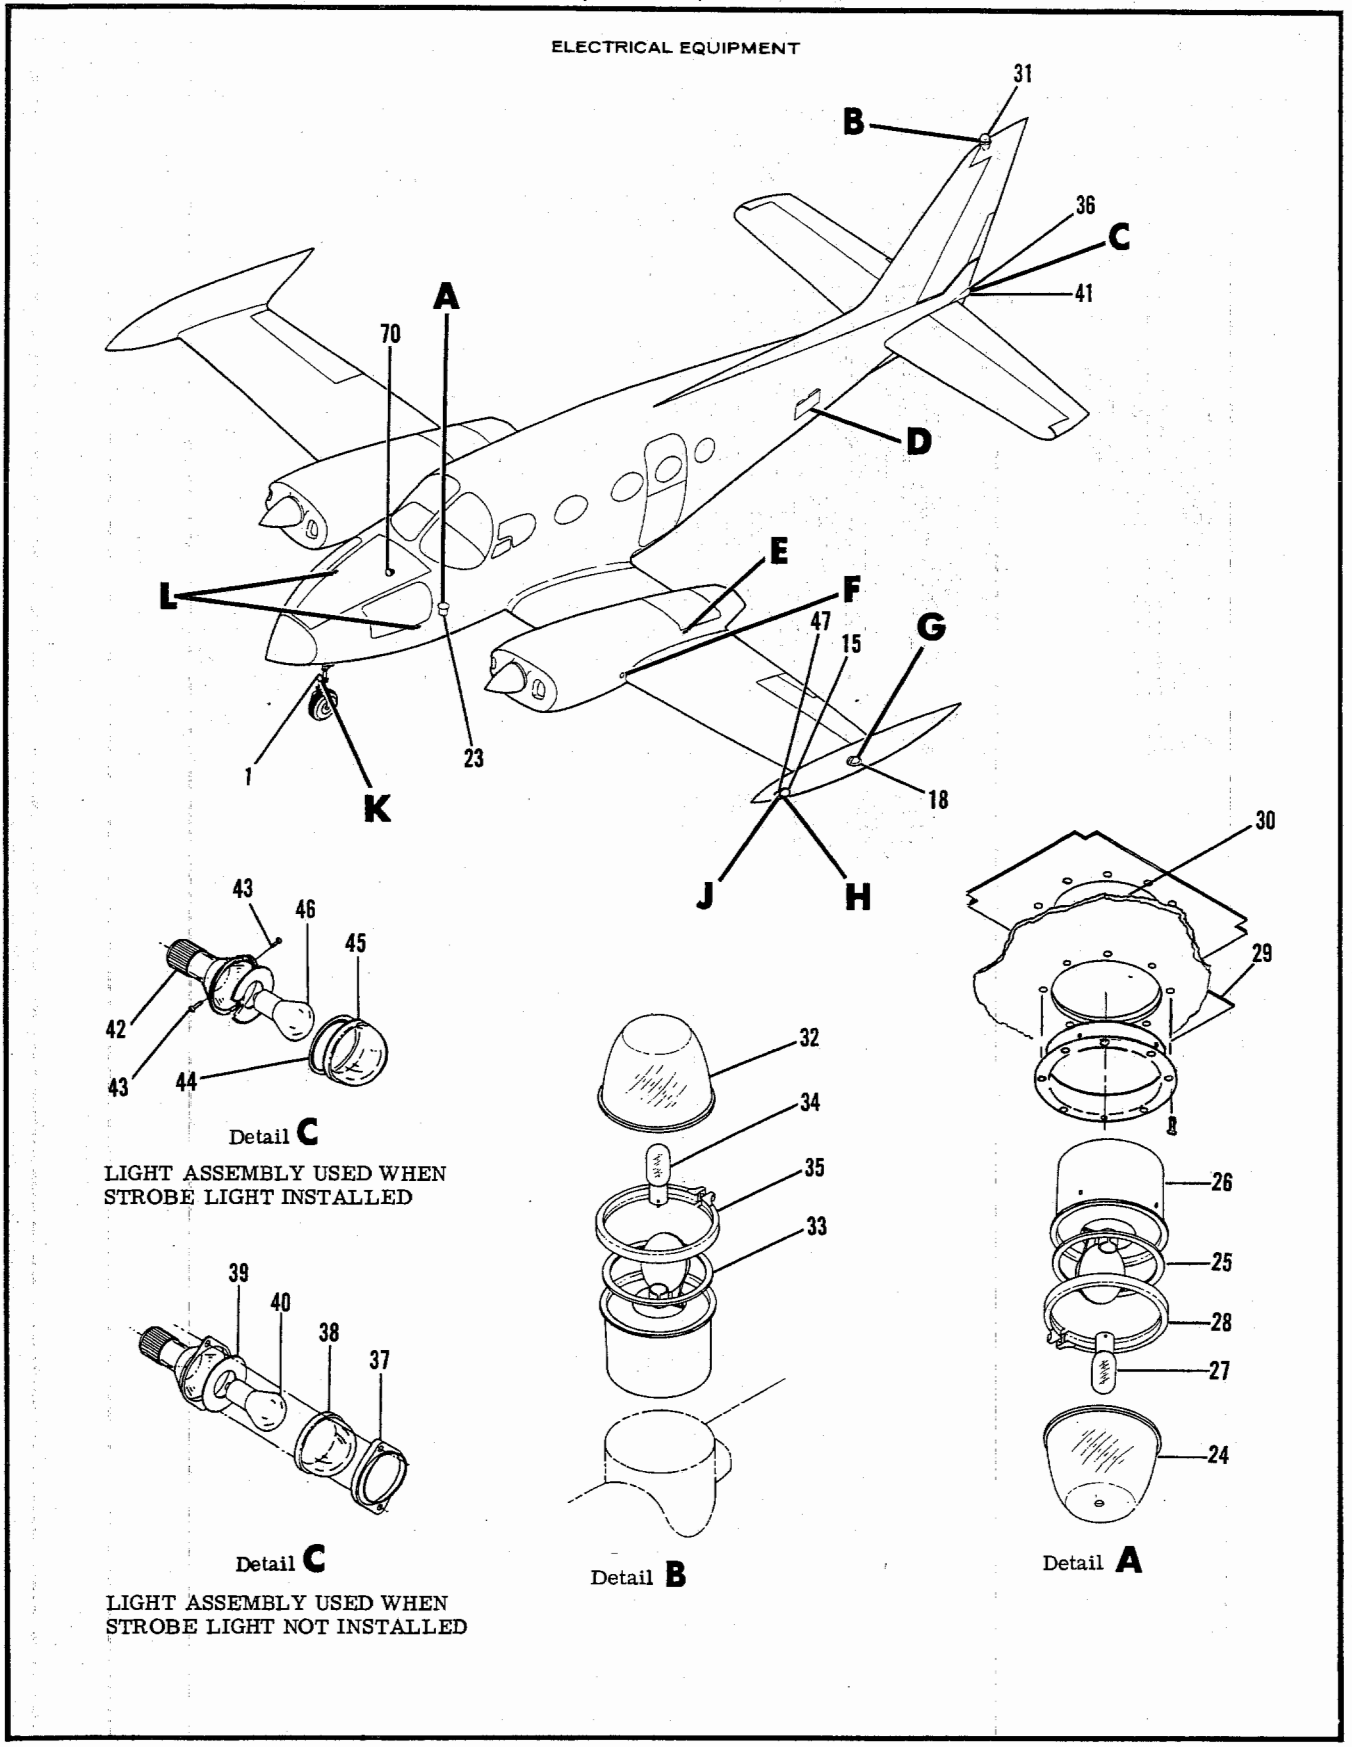

Figure 146. Exterior Lighting Installation (Sheet 1 of 3)

ELECTRICAL EQUIPMENT

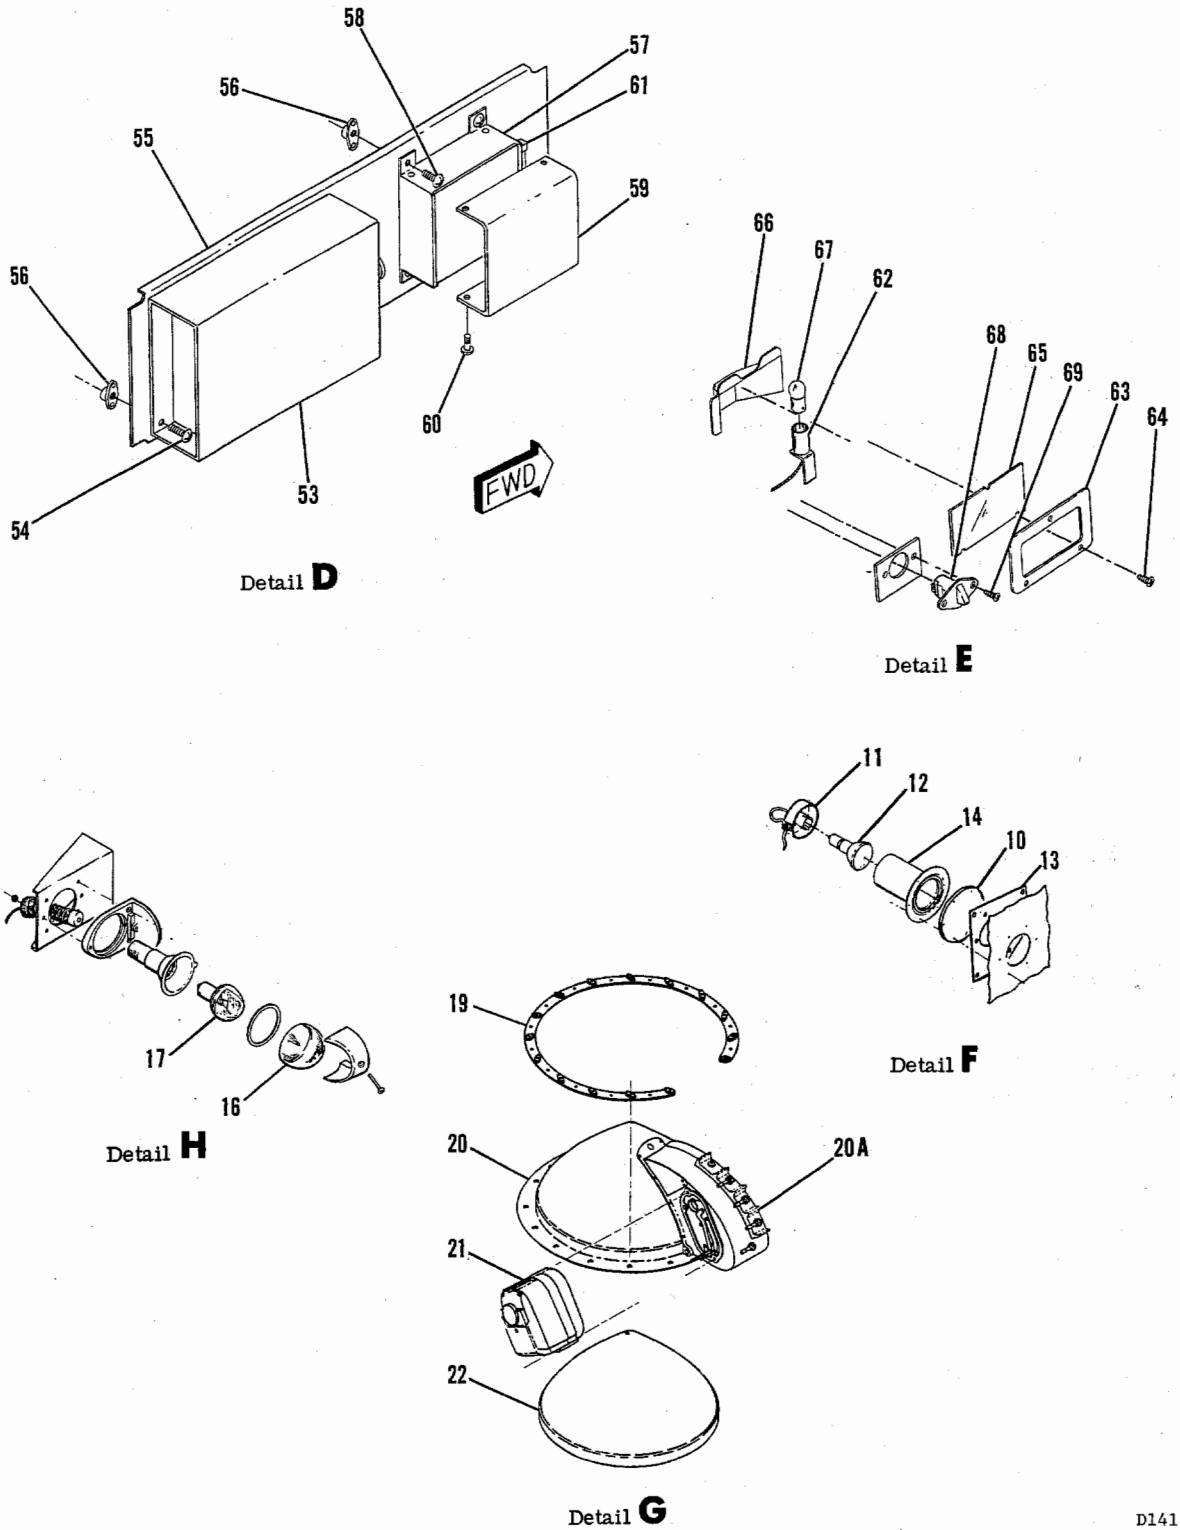

D14181021
E14282002
F51183013
G51182010
H51183013

Figure 146. Exterior Lighting Installation (Sheet 2)

ELECTRICAL EQUIPMENT

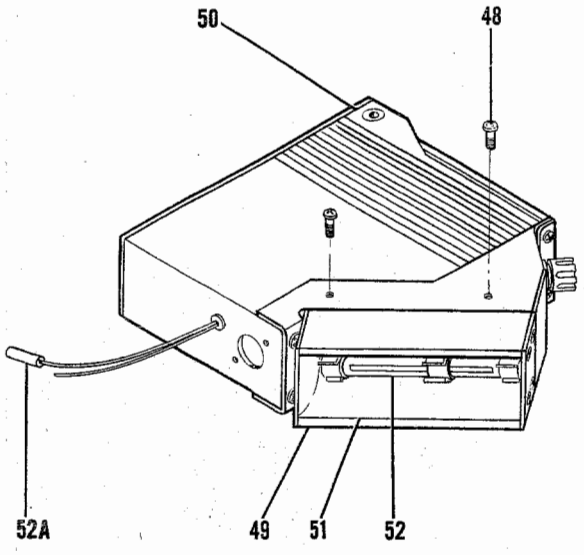

Detail J

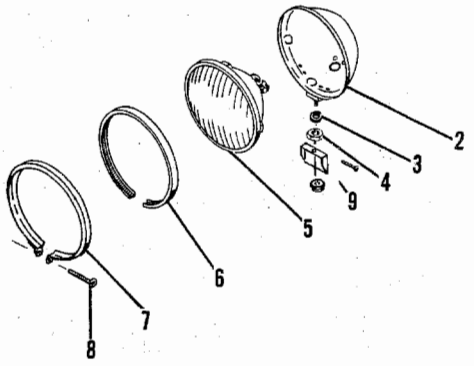

Detail K

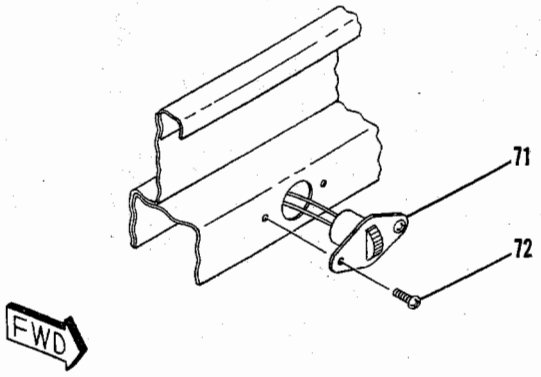

Detail L
CODE A

Figure 146. Exterior Lighting Installation (Sheet 3)

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
146 -		EXTERIOR LIGHTING INSTALLATION	NP	
-1	0842215-8	. LIGHT ASSY-TAXI	1	B
	8415083-4626	. LIGHT ASSY-TAXI GMC	1	C
-2	84213A	. . CANOPY ASSY GMC	1	B
	84213B	. . CANOPY ASSY GMC	1	C
-3	A4203	. . GROMMET GMC	1	B
	AN3067S2	. . SEAL	1	C
	AN3067W3	. . WASHER	1	C
-4	A4711	. . NUT-GROMMET GMC	1	B
	A5326	. . NUT-CONDUIT GMC	1	C
-5	GE4594	. . LAMP GMC	1	B
	4626	. . LAMP GE	1	C
-6	A4212	. . GASKET GMC	1	
-7	B4209	. . RING-RETAINER GMC	1	
		ATTACHING PARTS		
-8	MS35206-233	. . SCREW	1	
		---*---		
-9	5049200-1	. . BRACKET-TAXI LIGHT	1	B
	5049200-2	. . BRACKET-TAXI LIGHT	1	C
	0820501-5	. LIGHT ASSY-WING ICE	1	
-10	0820501-1	. . LENS FSO 0820501-11	1	F
	0820501-11	. . LENS	1	G
-11	0820501-7	. . SOCKET ASSY	1	
-12	GE1385	. . LAMP ASSY GE	1	
	PK76XZ6-4	. . SCREW PK	2	
	PK76XZ6-6	. . SCREW PK	1	
-13	0820502-1	. . DOUBLER	1	
-14	0820502-2	. . SHIELD	1	
-15	C622001-0501	. LIGHT ASSY-LH NAV RED WING	1	
	C622001-0502	. LIGHT ASSY-RH NAV GREEN WING	1	
		ATTACHING PARTS		
	MS35190-225	. SCREW	2	
	MS35206-216	. SCREW	1	
	MS21044N04	. NUT	3	
		---*---		
-16	A1280-2	. . COVER-RED GMC	1	
	A1280-3	. . COVER-GREEN GMC	1	
-17	A7512-24	. . LAMP GMC	1	
-18	0870132-1	. LIGHT ASSY-LANDING	1	
		ATTACHING PARTS		
	MS35190-239	. SCREW	11	
		---*---		
	B3963A	. . SWITCH ASSY-LIMIT GMC	1	
-19	B3626-1	. . BAND-RETAINER GMC	1	
-20	D6086	. . CANOPY-OUTER GMC	1	
-20A	B388081-24	. . CONTROL UNIT GMC	1	
-21	G2905-24	. . POWER UNIT GMC	1	
-22	4553	. . LAMP GMC	1	
-23	C621002-0109	. LIGHT ASSY-ROTATING BEACON LWR FUS	1	
		ATTACHING PARTS		
	MS24693-28	. SCREW	5	
		---*---		
-24	41-1058-23	. . LENS ASSY GMC	1	
-25	41-0578-1	. . GASKET GMC	1	
-26	B8917-6	. . FLANGE GMC	1	
-27	#1939X	. . LAMP GE	1	
-28	A7635A1	. . BAND ASSY GMC	1	
-29	5318102-3	. PLATE-FILLER LWR ROTATING BEACON	1	
-30	5318102-2	. DOUBLER LWR ROTATING BEACON	1	
-31	C621002-0108	. LIGHT ASSY-ROTATING BEACON RUDDER	1	
		ATTACHING PARTS		
	MS35206-228	. SCREW	3	
		---*---		
-32	41-1058-21	. . LENS ASSY GMC	1	
-33	41-0578-1	. . GASKET GMC	1	
-34	#1939X	. . LAMP GE	1	
-35	A7635A1	. . BAND ASSY GMC	1	
-36	C622001-0103	. LIGHT ASSY-NAV TAIL USE WHEN STROBE NOT INSTLD	1	
		ATTACHING PARTS		
	MS35218-17	. SCREW	2	
		---*---		
-37	C622001-0104	. . RETAINER-LENS	1	
-38	A4513-1	. . LENS GMC	1	
-39	A2109-3	. . GASKET GMC	1	
-40	MS35478-305	. . LAMP-SINGLE CONTACT	1	
-41	30-0516-5	. LIGHT ASSY WHEN STROBE INSTLD FSO 5618112-1 GMC	1	D
	5618112-1	. LIGHT ASSY USED WHEN STROBE INSTALLED	1	E
-42	31-1748-3	. . LIGHT SUB ASSY GMC	1	
	31-1781-1	. . RETAINER GMC	1	
		ATTACHING PARTS		
-43	55-0206-3	. . SCREW GMC	2	
		---*---		
-44	31-1780-1	. . GASKET GMC	1	
-45	22876-25	. . LENS GMC	1	
-46	GMC632	. . LAMP GMC	1	

CONTINUED

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
146 -47	30-0515-1	. LIGHT ASSY-STROBE RH & LH TIP TANK FSO 30-1172-1 . GMC	2	H
	30-0515-1A	. LIGHT ASSY-STROBE RH & LH TIP TANK FSO 30-1172-1 . GMC	2	J
	30-1172-1	. LIGHT ASSY-STROBE RH & LH TIP TANK . . . . . GMC	2	K
		ATTACHING PARTS		
-48	MS27039-108	. SCREW	6	
		---*---		
-49	31-1720-1	. . LIGHT SUB ASSY . . . . . GMC	1	
		ATTACHING PARTS		
	MS35206-231	. . SCREW	4	
		---*---		
-50	35-0515-3	. . POWER SUPPLY ASSY . . . . . GMC	1	
	31-1723-1	. . PLATE-COVER . . . . . GMC	1	
		ATTACHING PARTS		
	MS24693S3	. . SCREW	4	
		---*---		
	31-1725-1	. . BRACKET . . . . . GMC	1	
	31-1725-2	. . BRACKET . . . . . GMC	1	
		ATTACHING PARTS		
	MS35206-228	. . SCREW	8	
		---*---		
-51	25-0491-1	. . COVER . . . . . GMC	1	
-52	55-0221-1	. . FLASH TUBE . . . . . GMC	1	
-52A	AGC3	. . FUSE . . . . . GMC	1	
-53	60-1520-3	. POWER SUPPLY TAIL . . . . . GMC	1	
		ATTACHING PARTS		
-54	MS27039-0808	. SCREW	4	
		---*---		
-55	5300909-2	. SUPPORT ASSY	1	
-56	MS21069L08	. . NUTPLATE	8	
-57	70-0075-1	. FLASHER ASSY . . . . . GMC	1	
		ATTACHING PARTS		
-58	MS27039-0808	. SCREW . . . . . GMC	4	
		---*---		
-59	71-0188-1	. . COVER . . . . . GMC	1	
		ATTACHING PARTS		
-60	MS24629-10	. . SCREW	4	
		---*---		
-61	1625-5P-1	. . PLUG . . . . . MOLE	1	
	1560	. . PIN . . . . . MOLE	5	
-62	63-934D	. SOCKET-NACELLE BAGGAGE COURTESY LIGHT . . . . . NAUE	1	
-63	0851863-1	. RETAINER-COURTESY LIGHT LH OUTBD & RH INBD NAC . . . MOLE	2	
		ATTACHING PARTS		
-64	MS35190-225	. SCREW	3	
		---*---		
-65	0851863-2	. LENS-COURTESY LIGHT LH OUTBD & RH INBD NAC . . . . . NAUE	2	
-66	0851863-3	. REFLECTOR-COURTESY LIGHT LH OUTBD & RH INBD NAC	2	
-67	GE1309	. LAMP-COURTESY LIGHT LH OUTBD & RH INBD NAC . . . . . GE	2	
-68	8406K1	. SWITCH-COURTESY LIGHT LH OUTBD & RH INBD NAC . . . . CHPC	2	
		ATTACHING PARTS		
-69	NAS1191-04P11H	. SCREW	2	
		---*---		
-70	C622002-0102	. LIGHT ASSY-NOSE BAGGAGE	1	A
-71	8406K1	. SWITCH-NOSE BAGGAGE LIGHT . . . . . CHPC	2	A
		ATTACHING PARTS		
-72	MS35206-215	. SCREW	2	A
		---*---		

A---340-0151 & ON
B---340-0001 THRU 340-0300
C---340-0301 & ON
D---340-0001 THRU 340-0170
E---340-0171 & ON
F---340-0001 THRU 340-0314
G---340-0315 & ON
H---340-0001 THRU 340-0513
J---340-0514 THRU 340A0008
K---340A0009 & ON

ELECTRICAL EQUIPMENT

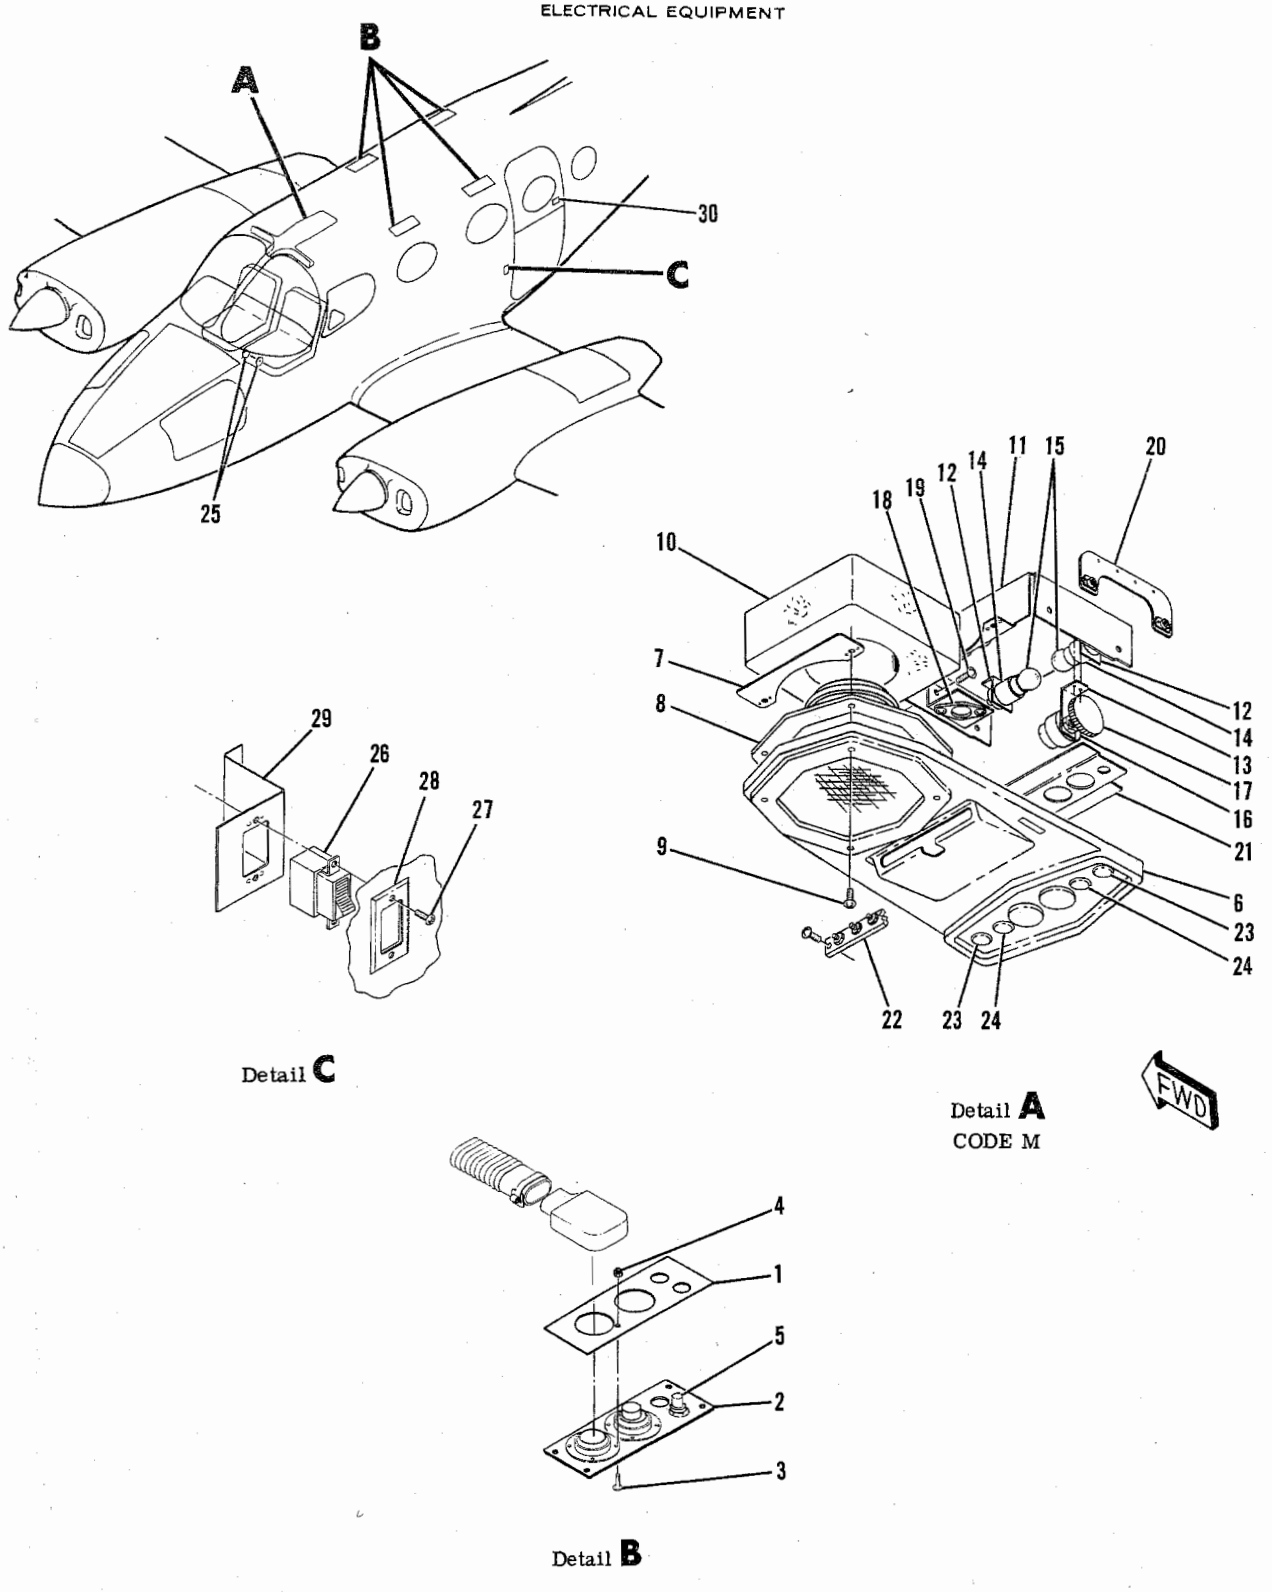

14183001
A14182002
B14181016
C14181002

Figure 147. Interior Lighting Installation (Sheet 1 of 2)

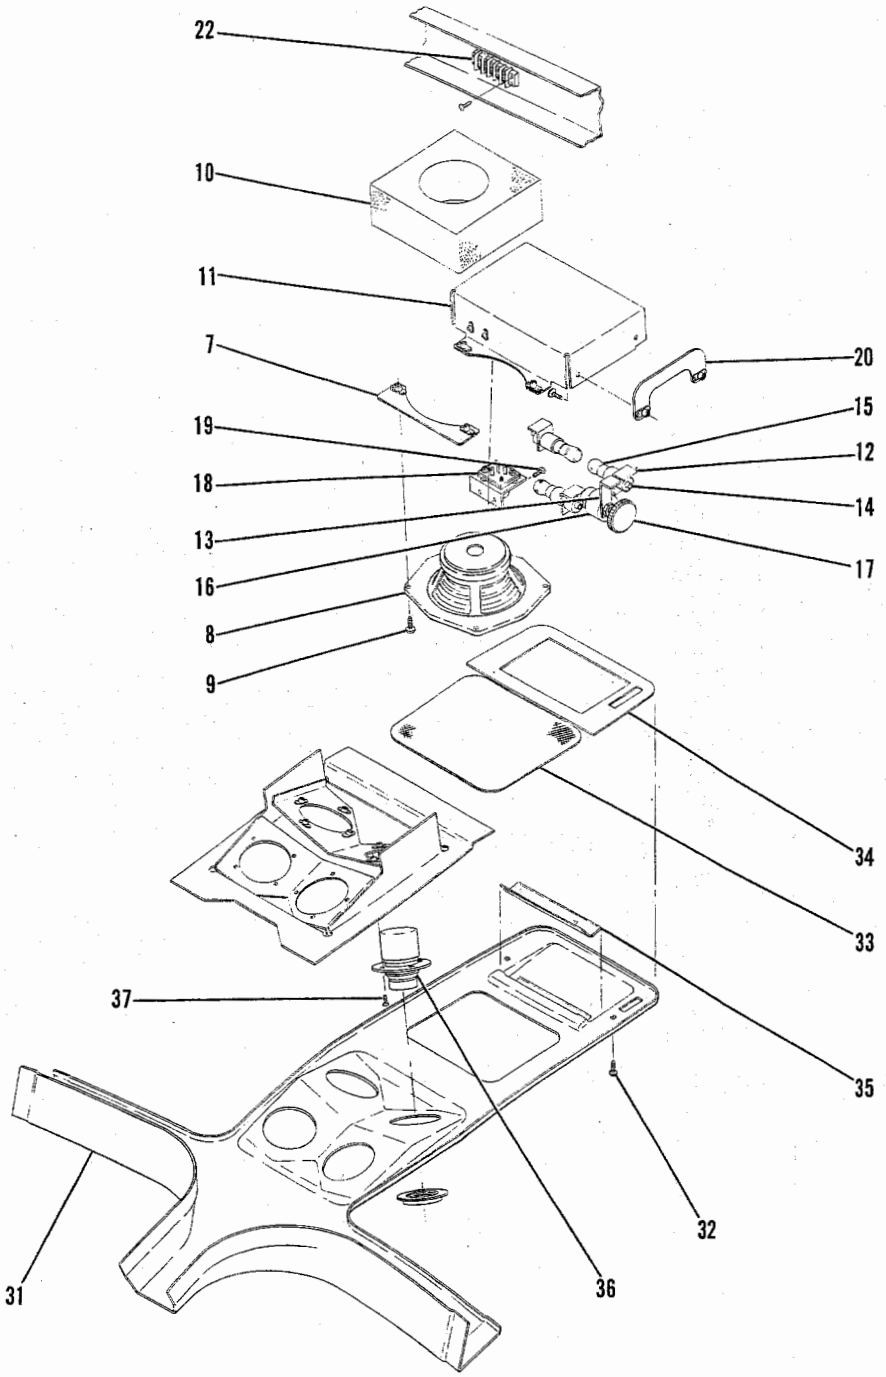

Detail **A**
CODE L

A14144022

Figure 147. Interior Lighting Installation (Sheet 2)

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
147 -		INTERIOR LIGHTING INSTALLATION	NP	
-1	5316508-8	. SUPPORT-WEMAC	4	
-2	1945-1	. WEMAC ASSY-LH AIR VALVE & LIGHT WMAC	2	
	1945	. WEMAC ASSY-RH AIR VALVE & LIGHT WMAC	2	
		ATTACHING PARTS		
-3	MS24694S7	. SCREW	8	
-4	MS20464-08	. NUT	8	
		---*---		
	1944	. . PLATE-ESCUTCHEON LH WMAC	1	
	1944-1	. . PLATE-ESCUTCHEON RH WMAC	1	
	2393	. . LIGHT ASSY WMAC	1	
	2394	. . VALVE ASSY WMAC	1	
	2392	. . NUT-RETAINING WMAC	1	
-5	L18366-3	. SWITCH-LH & RH WEMAC LDGI	4	
-6	5318106-19	. PANEL ASSY-OVERHEAD FSO 5318106-44	1	C
	5318106-38	. PANEL ASSY-OVERHEAD FSO 5318106-44	1	G
	5318106-44	. PANEL ASSY-OVERHEAD	1	H
		ATTACHING PARTS		
	S1021A6-8	. SCREW	2	
		---*---		
-7	5318106-29	. BRACKET ASSY-SPEAKER MOUNT	1	
-8	T791	. SPEAKER-OVERHEAD OKTR	1	
		ATTACHING PARTS		
-9	MS35206-246	. SCREW	4	
		---*---		
-10	5318106-35	. PAD-SPEAKER	1	
	5318106-23	. LIGHT ASSY-OVERHEAD FLOOD FSO 5318106-45	1	C
	5318106-39	. LIGHT ASSY-OVERHEAD FLOOD FSO 5318106-45	1	D
	5318106-45	. LIGHT ASSY-OVERHEAD FLOOD	1	J
		ATTACHING PARTS		
	MS35206-245	. SCREW	2	H
	MS29693S51	. SCREW	4	L
		---*---		
	5318106-22	. . BRACKET ASSY	1	C
	5318106-40	. . BRACKET ASSY	1	D
	5318106-46	. . BRACKET ASSY	1	J
-11	5318106-24	. . . BRACKET	1	K
	5318106-48	. . . BRACKET	1	J
-12	5318106-26	. . . BRACKET-BULB & SOCKET	3	
-13	5318106-25	. . . BRACKET-RHEOSTAT & KNOB	1	
-14	2109	. . SOCKET	3	
-15	1309	. . BULB GEML	3	
-16	CM34852	. . RHEOSTAT CLR	1	
-17	0861329-3	. . KNOB	1	
-18	5618006-2	. TRANSISTOR ASSY	1	
		ATTACHING PARTS		
-19	MS35206-245	. SCREW	2	
		---*---		
-20	5318106-32	. BRACKET ASSY	2	
-21	5318106-6	. BRACKET FSO 5318106-41	1	E
	5318106-41	. BRACKET	1	F
-22	5-140	. BLOCK-TERMINAL CIN	1	
-23	CM2692-12.5K6S	. PLUG BUTTON	2	M
	S1103-1	. JACK-HEADSEAT	2	M
	AN960-616L	. WASHER	2	M
-24	CM2692-12.5K6S	. PLUG BUTTON	2	M
	S1102-1	. JACK-MIKE	2	M
	NAS549L616	. WASHER	2	M
	S1196-2	. WASHER	2	M
-25	UTC161619	. LIGHT ASSY-FUEL SELECTOR UCTE	2	
-26	5018174-2	. SWITCH-CABIN DOOR LIGHT	1	
		ATTACHING PARTS		
-27	MS24693S250	. SCREW	2	
		---*---		
-28	5018174-6	. COVER-SWITCH	1	A
	5018174-9	. COVER-SWITCH	1	B
-29	5318202-2	. BRACKET ASSY-DOOR SWITCH MOUNT	1	
-30	B3550	. LIGHT ASSY-CABIN DOOR GMC	1	
		ATTACHING PARTS		
	MS35206-212	. SCREW	4	
		---*---		
	A3551	. . LENS GMC	1	
		ATTACHING PARTS		
	NAS388-6-8	. . SCREW	2	
		---*---		
	MS15570-303	. LAMP-CABIN DOOR LIGHT	1	
	5319019-2	. CONSOLE ASSY	1	L
-31	5319C19-3	. . COVER-CONSOLE	1	L
		ATTACHING PARTS		
-32	S1021A6-8	. . SCREW	2	L
		---*---		
-33	5319019-4	. . GRILL-SPEAKER	1	L
	5319019-5	. . SILKSCREEN	1	L
-34	5319019-6	. . GASKET	1	L
-35	5318106-37	. . LENS	1	L
-36	2585	. . LIGHT-CHART WMAC	2	L
		ATTACHING PARTS		

CONTINUED

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
147 -37	MS24693S26	. . SCREW . . . . . WMAC ---*---	4	L
		A---340-0001 THRU 340-0150 B---340-0151 & ON C---340-0001 THRU 340-0042 D---340-0043 THRU 340-0338 E---340-0001 THRU 340-0152 F---340-0153 TO 340A0001 G---340-0043 THRU 340-0301 H---340-0302 TO 340A0001 J---340-0339 & ON K---340-0001 THRU 340-0338 L---340A0001 & ON M---340-0001 TO 340A0001		

ELECTRICAL EQUIPMENT

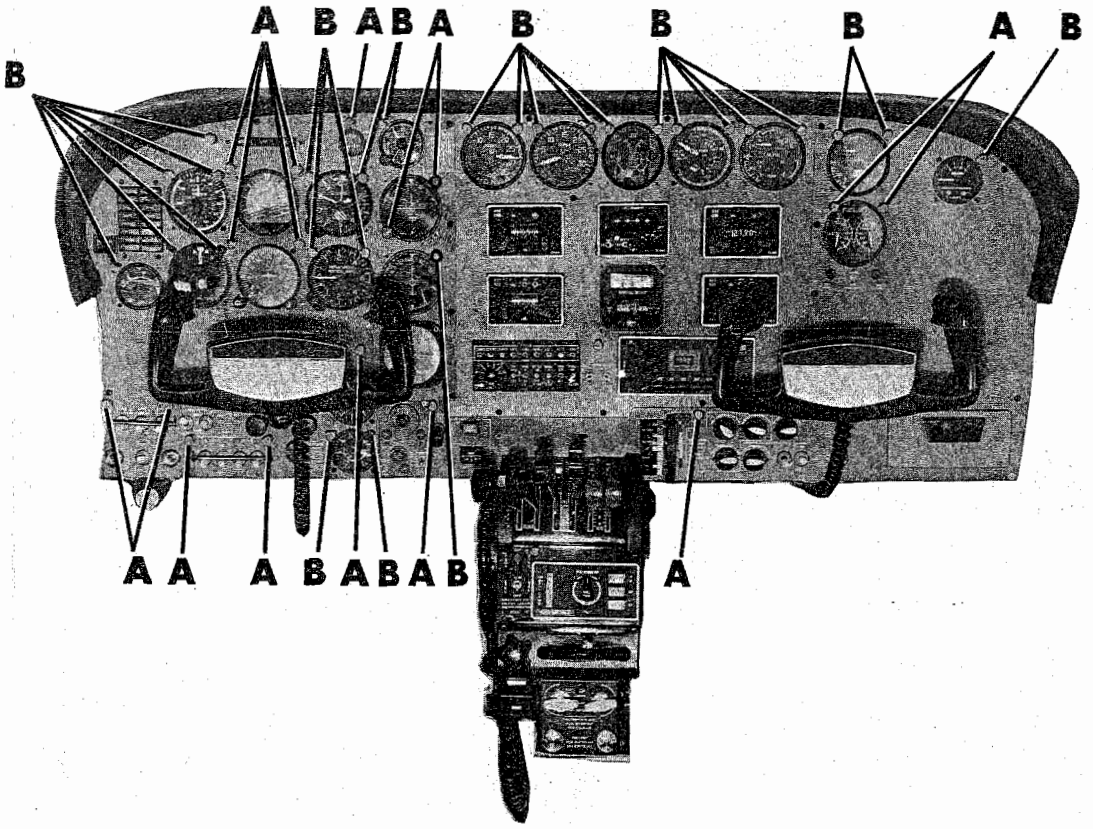

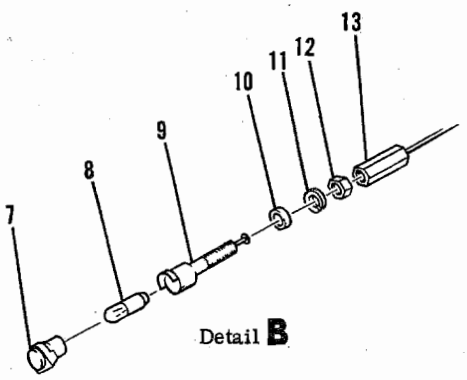

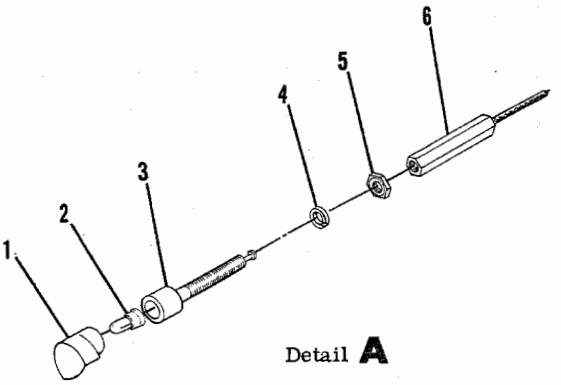

Figure 148. Instrument Panel Lighting Fixtures

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
148 -		INSTRUMENT PANEL LIGHTING FIXTURES	NP	
	CM2290G1	. LIGHT ASSY-POST GREY FINISH	21	
-1	21-0230-9	. . HOOD ASSY WHITE PRISM	GMC	1
-2	MS25237-327	. . BULB		1
-3	21-0249-1	. . HOUSING ASSY	GMC	1
-4	AN935-8	. . LOCKWASHER		1
-5	NAS671B8	. . NUT-HEX		1
-6	A9164-1	. . CONTACT ASSY	GMC	1
	CM2990G1	. LIGHT ASSY-POST GREY FINISH		21
		ALT FOR 20-121G824		
	5952-8ND2	. . CAP ASSY PRISM WHITE	GBN	1
	MS25237-327	. . BULB		1
	5952-8ND3	. . BASE	GBN	1
	5952-8ND14	. . WASHER	GBN	2
	5952-8ND15	. . LOCKWASHER	GBN	1
	5952-8ND16	. . NUT	GBN	1
	5952-8ND20	. . CONTACT ASSY	GBN	1
	CM2990G2	. LIGHT ASSY-POST GREY FINISH		41
-7	21-0230-9	. . HOOD ASSY WHITE PRISM	GMC	1
-8	MS25237-327	. . BULB		1
-9	21-0249-3	. . HOUSING ASSY	GMC	1
-10	A9163-1	. . WASHER	GMC	1
-11	AN935-8	. . LOCKWASHER		1
-12	NAS671B8	. . NUT-HEX		1
-13	A9164-1	. . CONTACT ASSY	GMC	1
	CM2990G2	. LIGHT ASSY-POST GREY FINISH		1
		ALT FOR 20-121G1B24		
	5954-8ND2	. . CAP ASSY WHITE PRISM	GBN	1
	MS25237-321	. . BULB		1
	5954-8ND3	. . BASE	GBN	1
	5954-8ND14	. . WASHER	GBN	2
	5954-8ND15	. . LOCK WASHER	GBN	1
	5954-8ND16	. . NUT	GBN	1
	5954-8ND20	. . CONTACT ASSY	GBN	1

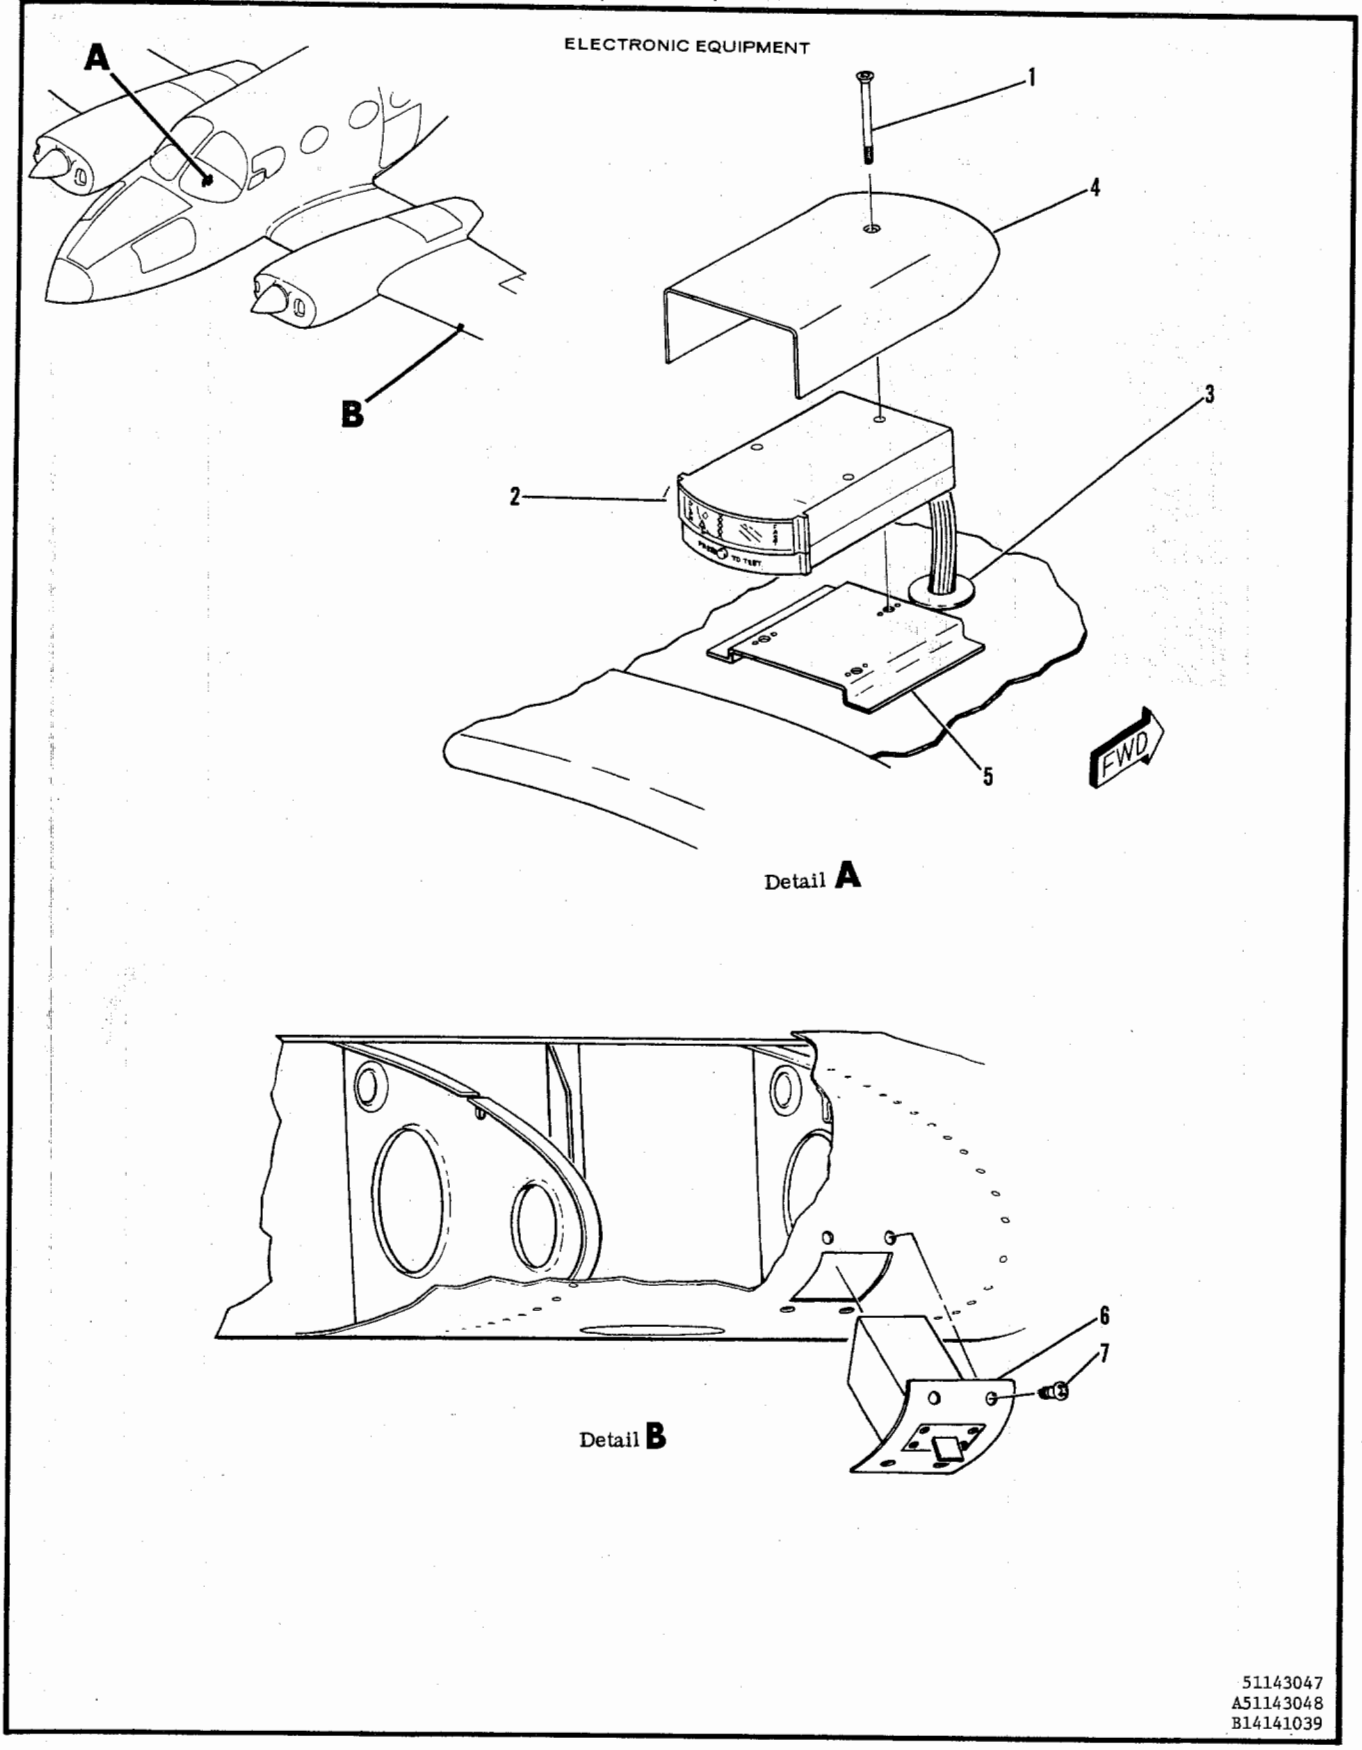

Figure 149. Angle of Attack System

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
149 -		ANGLE OF ATTACK SYSTEM	NP	A
	0800302-11	. INDICATOR ASSY	1	B
	553-1	. INDICATOR ASSY SFIC	1	E
		ATTACHING PARTS		
-1	NAS662C2-26	. SCREW	3	
		---*---		
-2	550-21	. . INDICATOR SFIC	1	B
-3	CM3524-6-16	. . GROMMET	1	
-4	0800303-5	. COVER-INDICATOR	1	
-5	0800302-6	. BRACKET ASSY-INDICATOR MOUNT SFIC	1	
-6	1750-21	. TRANSDUCER FSO 1751-2 SFIC	1	B
	1751-1	. TRANSDUCER WEU 1751-2	1	C
	1751-2	. TRANSDUCER	1	D
		ATTACHING PARTS		
-7	MS51957-28	. SCREW	4	
		---*---		

A---340-0301 & ON
B---340-0301 THRU 340-0366
C---340-0367 THRU 340-0500
D---340-0501 & ON
E---340-0367 & ON

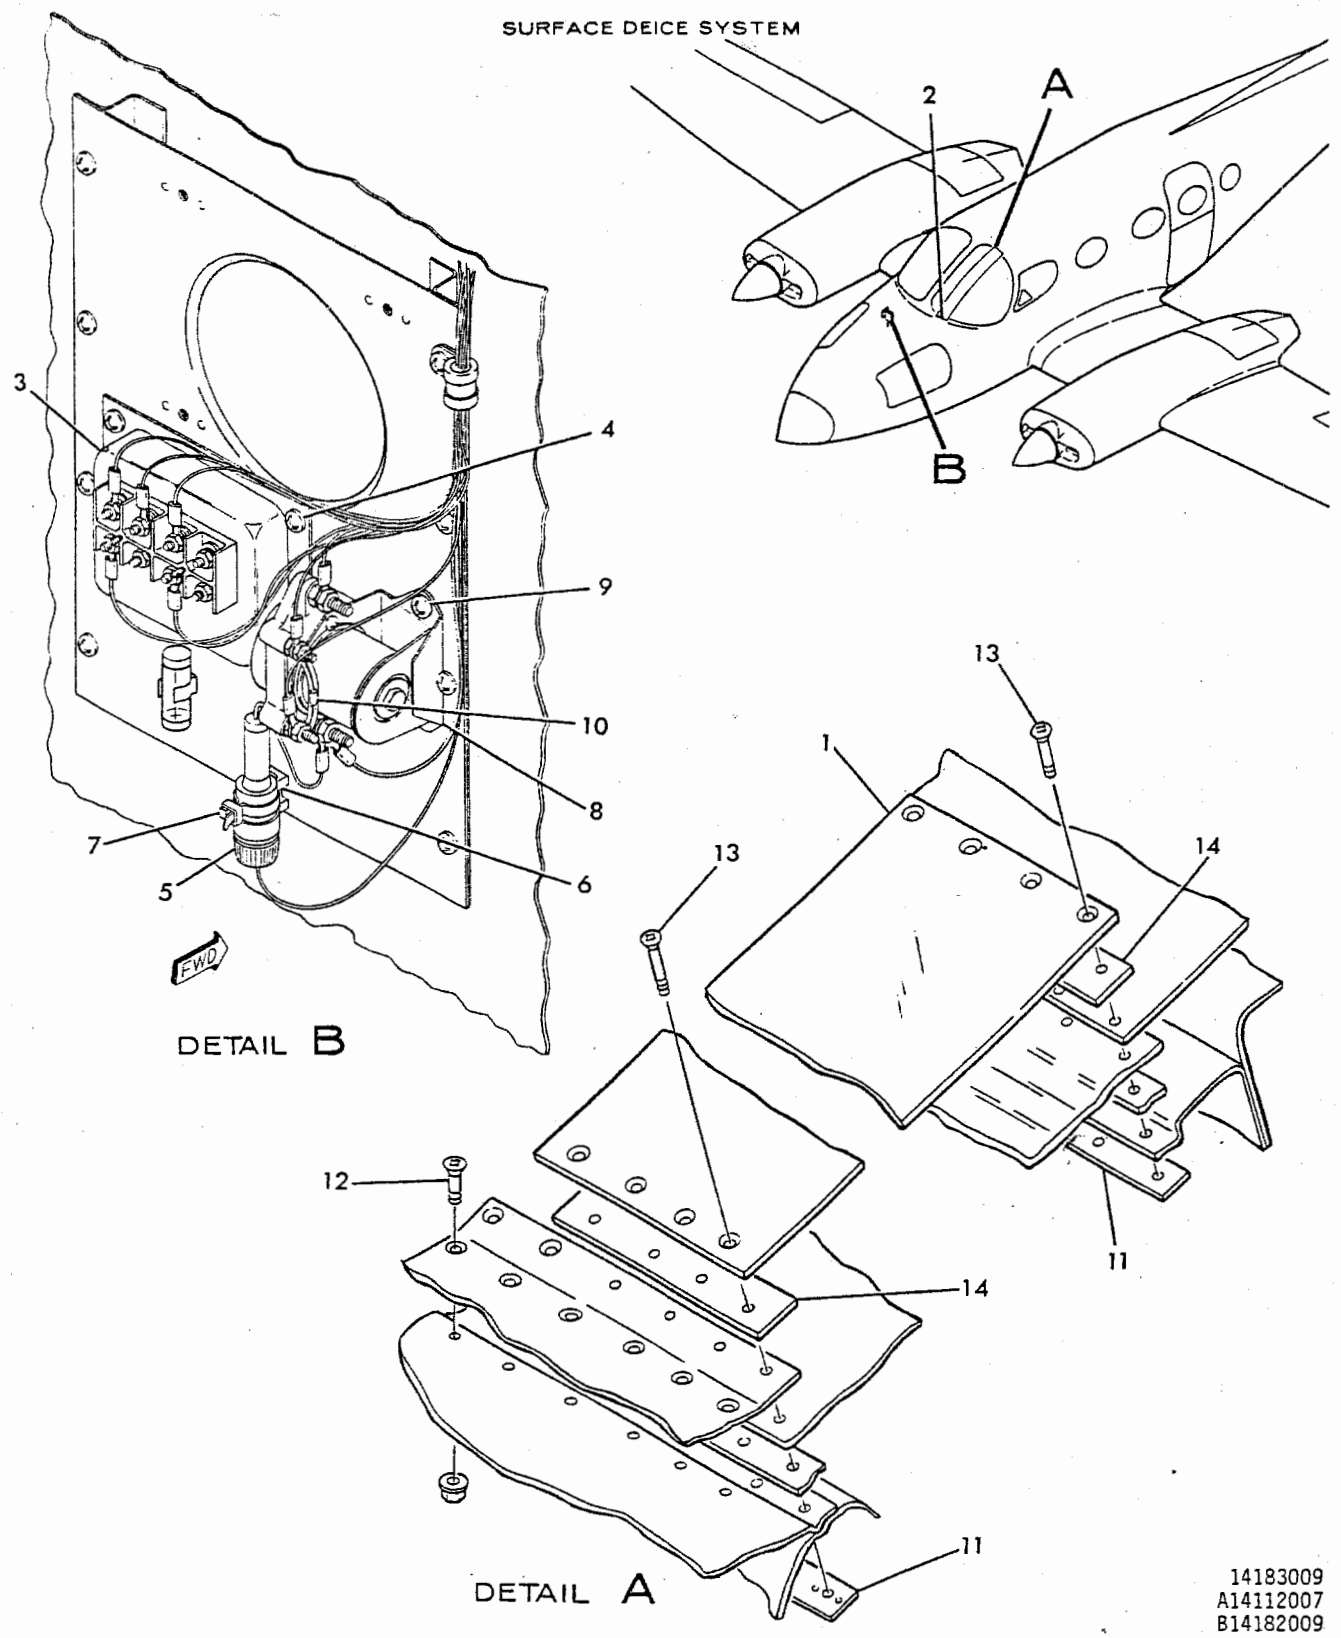

Figure 149A. Windshield Heated Panel and Electrical Components

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
149A-			WINDSHIELD PANEL AND ELECTRICAL COMPONENTS	NP	A
-1	9910309-5		. PANEL-HEATED WINDSHIELD ANTI ICE FSO 9910181-2	1	D
	9910181-2	#	. PANEL-HEATED WINDSHIELD ANTI ICE	1	E
-2	0870194-3		. SHIELD WEU 0870194-6	1	B
	0870194-6		. SHIELD	1	C
-3	9910216-2		. CONTROLLER	1	
			ATTACHING PARTS		
-4	MS35206-261		. SCREW	4	
			---*---		
-5	HHJ		. HOLDER-FUSE BUS	1	
	AGC5		. FUSE BUS	1	
			ATTACHING PARTS		
-6	S1741-1		. ANCHOR BUS	1	
-7	S1693-2		. STA STRAP	1	
	MS35206-243		. SCREW	1	
			---*---		
-8	6041H201A		. RELAY CSPD	1	
			ATTACHING PARTS		
-9	MS35206-261		. SCREW	2	
			---*---		
-10	1N4006		. DIODE CSPD	1	
-11	5318605-3		. DOUBLER UPR & LWR	2	E
			ATTACHING PARTS		
-12	MS24694S59		. SCREW	2	
-13	MS24694S53		. SCREW	3	
			---*---		
-14	5318605-4		. SPACER	2	E
			@---ON INITIAL INSTALLATION ORDER SK340-17 INSTEAD OF THIS PART		
			A---340A0201 & ON B---340A0201 THRU 340A0256 C---340A0257 & ON D---340A0201 THRU 340A0400 E---340A0401 & ON		

SECTION II

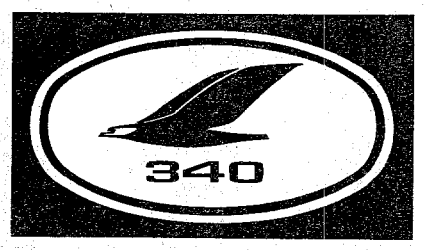

GROUP ASSEMBLY PARTS LIST

Part 2 Electronics

FOREWORD

The following section contains information on all the electronic equipment installations that have been offered on the Model 340.

The listing of electronic equipment is separated by the alphabetical arrangement of vendor names and under each name the various equipment offered.

On the following page is an alphabetical listing of the various systems. Indented under the main division, are the various vendor designations and the figures and index number where each may be found.

ELECTRONIC EQUIPMENT INDEX

NOMENCLATURE	FIG. NO.
ANTENNAS	
ADF Loop	151-4
ADF Sense	151-4
DME	151-3
Glide Slope	151-3
High Frequency	151-1
High Frequency Open V	151-1
Marker Beacon	151-3
Omni	151-3
Transponder Cessna	151-3
VHF	151-2
AUTOMATIC DIRECTION FINDER	
Cessna ADF 300	150-19
Cessna ADF 400	150-13
Cessna ADF 800	150-7
COMMUNICATIONS	
Transceivers:	
Cessna Nav/Com 300R	150-14
Cessna Nav/Com 400	150-9
Cessna Transceiver 300	150-14
Cessna Transceiver 400	150-8
Cessna Transceiver 800	150-6
Sun-Air T10R	150-21
Sun-Air T22RA	150-22
ASB100A SSB High Frequency	150-23
ASB130 SSB High Frequency	150-32
DISTANCE MEASURING EQUIPMENT	
Cessna DME 300	150-16
Cessna DME 400	150-31
Cessna DME 800	150-2
King DME KN65	150-24
RCA AVQ75	150-26
ENCODING ALTIMETER	
Bendix Encoding Altimeter	150-28
INSTRUMENT LANDING SYSTEM	
Glide Slope:	
Cessna Glide Slope 400	150-11
Cessna Glide Slope 800	150-3
Cessna Glide Slope/Marker Beacon 800	150-3
Cessna Nav/Omni 400	150-10
Localizer Receiver:	
Cessna Nav/Com 400	150-9
Cessna Nav/Omni 400	150-10
Marker Beacon:	
Cessna Marker Beacon 300	150-15
Cessna Marker Beacon 400	150-30
Cessna Marker Beacon 800	150-3
Glide Slope/Marker Beacon Export	150-33

NOMENCLATURE	FIG. NO.
INTERCOM SYSTEM	
Cessna Passenger	141
LOCATOR BEACON	155
NAVIGATION	
Cessna Marker Beacon 300	150-15
Cessna Marker Beacon 800	150-3
Cessna Nav/Com 300R	150-14
Cessna Nav/Com 400	150-9
Cessna Nav 800	150-4
Cessna Nav/Omni 400	150-10
Cessna Nav-O-Matic 400A	156
King KNC610 Area Nav	150-25
PANTRONICS PT10A	150-29
PICTORIAL GYRO	
PN101 Pictorial Gyro	150-20
PUBLIC ADDRESS SYSTEM	
Cessna Amplifier	141
Cessna Speaker	141
RADAR	
Sperry Radar Altimeter	150-27
Weather Radar AVQ47	153
Weather Radar RDR 130	153A
Weather Radar RDR 150	153B
RADIO MAGNETIC INDICATOR	
Cessna RMI 800	150-5
SHELVES	
Nose Radio Shelves	154
SPEAKER AMPLIFIERS	
Cessna Audio Amplifier 800	152
Cessna PA Amplifier	141
TRANSPONDER	
Cessna Transponder 300	150-17
Cessna Transponder 400	150-12
Cessna Transponder 800	150-1
TPR 660 Transponder Export	150-34

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
150 –		ELECTRONIC EQUIPMENT INSTALLATION	NP	
	SEE FIG 151	. ANTENNAS INSTL	AR	
	SEE FIG 152	. CESSNA 800 AUDIO AMPLIFIER INSTL	1	
	SEE FIG 153	. AVQ47 RADAR INSTL	1	
	SEE FIG 154	. NOSE RADIO SHELVES INSTL	1	
	SEE FIG 156	. CESSNA NAV-O-MATIC 400A AUTOPILOT INSTL	1	
	*	. CESSNA 800 SERIES ELECTRONIC COMPONENTS	NP	
-1		. . CESSNA TRANSPONDER 800 BASIC COMPONENTS	NP	
	39210-0028	. . . TRANSCEIVER TYPE RT106A	1	
	42260-1028	. . . TRANSCEIVER TYPE RT859A	1	
	34980-0000	. . . MOUNT-TRANSCEIVER USED WITH 39210-0028	1	
	42280-0000	. . . MOUNT-TRANSCEIVER	1	
	39400-1000	. . . CONTROL UNIT TRANSCEIVER USED WITH 39210-0028	1	
-2		. . CESSNA DME 800 BASIC COMPONENTS	NP	
	C582601-0103	. . . TRANSCEIVER	1	
	C582601-0301	. . . TRANSCEIVER	1	
	C582601-0501	. . . TRANSCEIVER	1	
	C582601-0205	. . . CONTROL UNIT USED WITH C582601-0103	1	
	C582601-0204	. . . INDICATOR	1	
	C582601-0401	. . . INDICATOR USED WITH C582601-0501 ONLY	1	
-3		. . CESSNA GLIDESLOPE/MARKER BEACON 800 BASIC COMPONENTS	NP	
	C582607-0101	. . . RECEIVER & MOUNT	1	
	C582607-0105	. . . RECEIVER & MOUNT	1	
	42470-0000	. . . RECEIVER	ARC 1	
	42760-0000	. . . RECEIVER TYPE R843A	ARC 1	
	36450-0000	. . . MOUNT-RECEIVER	ARC 1	
-4		. . CESSNA 800 NAV COMPONENTS	NP	
	37500-0000	. . . RECEIVER	1	
	35950-0000	. . . CONVERTER	1	
	36450-0000	. . . MOUNT USE WITH RECEIVER & CONVERTER	2	
	37520-1000	. . . CONTROL UNIT TYPE C41A	1	
	41920-1000	. . . CONTROL UNIT TYPE C841A	1	
	39410-1000	. . . CONTROL UNIT DUAL	1	
	36050-0000	. . . INDICATOR	1	
	39270-0000	. . . INDICATOR COURSE UNIT SYNCHRO	1	
	41790-0000	. . . CONVERTER TYPE 8841A	1	
-5		. . CESSNA RMI 800 BASIC COMPONENTS	NP	
	39330-0000	. . . CONVERTER	AR	
	C660502-0202	. . . INDICATOR	AR	
	C661022-0102	. . . INDICATOR DIRECTIONAL GYRO	AR	
	C661023-0104	. . . INDICATOR DIRECTIONAL GYRO DUAL NEEDLE AND BOOTSTRAP	AR	
	289-3D	. . . INDICATOR DIRECTIONAL GYRO DUAL NEEDLE AND BOOTSTRAP AVIM	AR	
	254-11	. . . DETECTOR-FLUX AVIM	1	
	254-147	. . . METER-SLAVE AVIM	1	
-6		. . CESSNA COMMUNICATION 800 BASIC COMPONENTS	NP	
	37260-0000	. . . TRANSCEIVER TYPE RT131A	1	
	41700-0000	. . . TRANSCEIVER TYPE RT831A	1	
	36280-0000	. . . MOUNT SHOCK	1	
	38500-0000	. . . ACCESSORY UNIT-TRANSCEIVER TYPE RTA131B	1	
	41710-0000	. . . ACCESSORY UNIT-TRANSCEIVER TYPE RTA831A	1	
	34980-0000	. . . MOUNT-ACCESSORY UNIT SOLID	1	
	37250-1000	. . . CONTROL UNIT TYPE C131A	AR	
	41720-1000	. . . CONTROL UNIT TYPE C831A	AR	
	39410-1000	. . . CONTROL UNIT DUAL TYPE C131S	AR	
	41910-1000	. . . CONTROL UNIT DUAL TYPE C831S	AR	
-7		. . CESSNA ADF 800 BASIC COMPONENTS	NP	
	34850-0028	. . . RECEIVER TYPE R30B	1	
	40200-0000	. . . RECEIVER TYPE 846A	1	
	21660-0000	. . . MOUNT-RECEIVER USE WITH 34850-0028	1	
	40830-0000	. . . MOUNT-RECEIVER USE WITH 40200-0000	1	
	36820-0000	. . . ACCESSORY UNIT-RECEIVER SINGLE TYPE RA21C	1	
	42750-0000	. . . ACCESSORY UNIT-RECEIVER SINGLE TYPE RA446A	1	
	41950-0000	. . . ACCESSORY UNIT-RECEIVER SINGLE TYPE RA446A	1	
	41340-0001	. . . ACCESSORY UNIT-RECEIVER SINGLE TYPE RA346A	1	
	41340-0002	. . . ACCESSORY UNIT-RECEIVER DUAL TYPE RA346B	1	
	35380-0000	. . . ACCESSORY UNIT-RECEIVER DUAL TYPE RA21B	1	
	35390-0000	. . . MOUNT USED WITH SINGLE OR DUAL ACCESSORY UNIT	1	
	41350-0000	. . . MOUNT USED WITH SINGLE OR DUAL ACCESSORY UNIT	1	
	24630-0028	. . . DYNAVERTER USE WITH 34850-0028	1	
	21650-0000	. . . MOUNT-DYNAVERTER	1	
	26891-1528	. . . CONTROL UNIT-TUNING USE WITH 34850-0028	1	
	40220-1000	. . . CONTROL TYPE C846A	1	
	26904-0500	. . . CONTROL UNIT-FIXED LOOP GONIO INDICATOR USE WITH 34850-0028	1	
	27310-0000	. . . INDICATOR-SINGLE NEEDLE USED WITH ROTATABLE LOOP	AR	
	27470-0000	. . . INDICATOR-DUAL NEEDLE USED WITH ROTATABLE LOOP USE WITH 34850-0028	AR	
	33550-0000	. . . INDICATOR-ROTATABLE AZIMUTH FIXED LOOP USE WITH 34850-0028	AR	
	32670-0000	. . . INDICATOR-ROTATABLE AZIMUTH FIXED LOOP WITH BOOTSTRAP SYNCHRO USE WITH 34850-0028	AR	
	40980-1000	. . . INDICATOR TYPE IN346A USE WITH 40200-0000	1	
	40980-1100	. . . INDICATOR TYPE IN346B USE WITH 40200-0000	1	
	41360-1000	. . . INDICATOR TYPE IN346C USE WITH 40200-0000	1	
	41360-1100	. . . INDICATOR TYPE IN346D USE WITH 40200-0000	1	
	37470-0001	. . . INDICATOR-DUAL NEEDLE TYPE IN13A1	1	
	37470-0000	. . . INDICATOR USE WITH 40200-0000	1	
	33785-0010	. . . CABLE ASSY-RECEIVER 10 FEET LONG USE WITH 34850-0028	AR	

CONTINUED

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
150	33785-0020	. . . CABLE ASSY-RECEIVER 20 FEET LONG	AR	
		USE WITH 34850-0028		
	33785-0030	. . . CABLE ASSY-RECEIVER 30 FEET LONG	AR	
		USE WITH 34850-0028		
	41606-0010	. . . CABLE-GONIO 10 FEET LONG	1	
	41606-0020	. . . CABLE-GONIO 20 FEET LONG	1	
	41376-0000	. . . LIMITER-RADIO FREQUENCY	1	
	**	. CESSNA 400 SERIES ELECTRONIC COMPONENTS	NP	
-8		. . CESSNA TRANSCEIVER 400 BASIC COMPONENTS	NP	
	33570-1000	. . . TRANSCEIVER TYPE RT532A	1	
	41830-1000	. . . TRANSCEIVER TYPE RT432A	1	
	33570-1200	. . . TRANSCEIVER EXPORT	1	
	33570-3000	. . . TRANSCEIVER JAPAN	1	
	37525-0081	. . . MOUNT-TRANSCEIVER	1	
	38960-0028	. . . ACCESSORY UNIT-TRANSCEIVER TYPE RTA532B1	1	
	41630-0028	. . . ACCESSORY UNIT-TRANSCEIVER TYPE RTA432A	1	
	35540-0000	. . . MOUNT-ACCESSORY UNIT	1	
	36450-0000	. . . MOUNT-ACCESSORY UNIT	1	
	38185-0000	. . . MOD KIT JAPAN EXPORT	1	
-9		. . CESSNA NAV/COM 400 BASIC COMPONENTS	NP	
	33950-1100	. . . TRANSCEIVER WITH GLIDESLOPE DME TYPE RT522A	1	
		SWITCHING VOR SELF TEST & IDENT FILTER		
	33950-1300	. . . TRANSCEIVER EXPORT WITH GLIDESLOPE DME	1	
		SWITCHING VOR SELF TEST & IDENT FILTER		
	41810-0000	. . . TRANSCEIVER TYPE RT422A	1	
	43330-1014	. . . TRANSCEIVER TYPE RT428A	1	
	43330-1028	. . . TRANSCEIVER TYPE RT428A	1	
	37525-0061	. . . MOUNT-TRANSCEIVER	1	
	40550-0001	. . . MOUNT-TRANSCEIVER RT428A	1	
	37525-0071	. . . MOUNT-TRANSCEIVER WITH GS/DME PLUG	1	
	38960-0028	. . . ACCESSORY UNIT-TRANSCEIVER TYPE RTA532B1	1	
	41630-0028	. . . ACCESSORY UNIT-TRANSCEIVER TYPE RTA432A	1	
	35540-0000	. . . MOUNT-TRANSCEIVER ACCESSORY UNIT	1	
	36450-0000	. . . MOUNT-TRANSCEIVER ACCESSORY UNIT	1	
	39480-0000	. . . INDICATOR-VOR/LOC TYPE IN522B	1	
	41640-1000	. . . INDICATOR-VOR/LOC TYPE IN442A	1	
	41640-1012	. . . INDICATOR-VOR/LOC TYPE IN442A	1	
	41640-1100	. . . INDICATOR-VOR/LOC WITH COURSE DATUM IN442B	1	
	41640-1112	. . . INDICATOR-VOR/LOC WITH COURSE DATUM IN442B	1	
	34290-0000	. . . INDICATOR-VOR/ILS TYPE IN543B	1	
	41640-2000	. . . INDICATOR-VOR/ILS TYPE IN443A	1	
	41640-2012	. . . INDICATOR-VOR/ILS TYPE IN442B	1	
	41640-2100	. . . INDICATOR-VOR/ILS WITH COURSE DATUM IN443B	1	
	41640-2112	. . . INDICATOR-VOR/ILS WITH COURSE DATUM IN443B	1	
	43910-1000	. . . INDICATOR TYPE IN442AR	1	
	43910-1100	. . . INDICATOR TYPE IN442AR	1	
	43910-2000	. . . INDICATOR TYPE IN442AR	1	
	43910-2100	. . . INDICATOR TYPE IN443BR	1	
	44910-0000	. . . INDICATOR TYPE IN832R	1	
-9A		. . CESSNA 400A NAV-O-MATIC FLUX DETECTOR	NP	
	41370-0000	. . . DETECTOR-FLUX USED WITH FLIGHT DIRECTOR	1	
-10		. . CESSNA NAV/OMNI 400 BASIC COMPONENTS	NP	
	33560-1000	. . . RECEIVER WITHOUT GS/DME SWITCHING	1	
	33560-1100	. . . RECEIVER WITH GS/DME SWITCHING TYPE R542A	1	
	41820-1000	. . . RECEIVER GS/DME SWITCHING TYPE R442A	1	
		. . . INDICATOR-VOR/LOC SEE NAV/COM 400	1	
		. . . INDICATOR-VOR/ILS	1	
-11		. . CESSNA GLIDESLOPE 400 BASIC COMPONENTS	NP	
	36440-0000	. . . RECEIVER	1	
	41650-0000	. . . RECEIVER TYPE R443A	1	
	42100-0000	. . . RECEIVER TYPE R443B	1	
	36450-0000	. . . MOUNT-RECEIVER SOLID	1	
		. . . INDICATOR-VOR/LOC SEE NAV/COM 400	1	
		. CESSNA MARKER BEACON 400 BASIC COMPONENTS	NP	
	42410-5128	. . RECEIVER-MARKER BEACON	1	
-12		. . CESSNA TRANSPONDER 400 BASIC COMPONENTS	NP	
	34950-0028	. . . TRANSCEIVER TYPE RT506A	1	
	41470-1028	. . . TRANSCEIVER TYPE RT459A	1	
	34980-0000	. . . MOUNT-TRANSCEIVER USE WITH 34950-0028	1	
	42290-0028	. . . MOUNT-TRANSCEIVER USE WITH 41470-1028	1	
	34960-1000	. . . CONTROL-TRANSCEIVER USE WITH 34950-0028	1	
-13		. . CESSNA ADF 400 BASIC COMPONENTS		
	40950-1000	. . . RECEIVER	1	
	43090-1000	. . . RECEIVER TYPE R446A	1	
	43090-1028	. . . RECEIVER TYPE R446A	1	
	40900-0000	. . . MOUNT-RECEIVER	1	
	41340-0001	. . . ACCESSORY UNIT SINGLE	1	
	41950-0000	. . . ACCESSORY UNIT SINGLE	1	
	41340-0002	. . . ACCESSORY UNIT DUAL	1	
	41350-0000	. . . MOUNT-ACCESSORY UNIT	1	
	27310-0000	. . . INDICATOR TYPE IN12-1	1	
	41250-1000	. . . INDICATOR TYPE IN546A	1	
	41360-1000	. . . INDICATOR TYPE IN346C	1	
	41360-1100	. . . INDICATOR TYPE IN346D WITH BOOTSTRAP	1	
	37470-0000	. . . INDICATOR TYPE IN13A1	1	
	40980-1000	. . . INDICATOR TYPE IN346A	1	
	40980-1100	. . . INDICATOR TYPE IN346B WITH BOOTSTRAP	1	
	27470-0000	. . . INDICATOR TYPE IN13A1	1	
	32803-0000	. . . CABLE 20FT	1	
	41277-0010	. . . CABLE 10 FT	1	

CONTINUED

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
150	***	CESSNA 300 SERIES ELECTRONIC BASIC COMPONENTS	NP	
-14		CESSNA 300 NAV/COM BASIC COMPONENTS		
	39380-1014	TRANSCEIVER TYPE RT528A	1	
	41740-1014	TRANSCEIVER TYPE RT328A	1	
	42430-1014	TRANSCEIVER TYPE RT328C	1	
	43340-1014	TRANSCEIVER	1	
	43340-1024	TRANSCEIVER TYPE 328T	1	
	42430-1024	TRANSCEIVER TYPE 528E-1	1	
	40550-0000	MOUNT-TRANSCEIVER	1	
	40550-0001	MOUNT-TRANSCEIVER	1	
	31640-0000	INDICATOR-VOR/LOC	1	
	31640-0001	INDICATOR-VOR/LOC	1	
	45010-1000	INDICATOR-VOR/LOC	1	
	32350-0000	INDICATOR-VOR/ILS	1	
	32350-0001	INDICATOR-VOR/ILS	1	
	45010-2000	INDICATOR-VOR/ILS	1	
	41010-0000	CONVERTER	1	
	0362	CONVERTER ADAV	1	
-15		CESSNA MARKER BEACON 300 BASIC COMPONENTS	NP	
	31240-0028	RECEIVER	1	
	31240-0000	RECEIVER	1	
	MS25041-10	LENS-OUTER BLUE	1	
	MS25041-4	LENS-MIDDLE AMBER	1	
	MS25041-1	LENS-INNER WHITE	1	
	MS25237-368	BULB 2.5 VOLT USED WITH 31240-0028	6	
	MS25237-328	BULB 5.0 VOLT	3	
-16		CESSNA DME 300 BASIC COMPONENTS	NP	
	C582602-0303	TRANSCEIVER	1	
-17		CESSNA TRANSPONDER 300 BASIC COMPONENTS	NP	
	C589504-0201	TRANSCEIVER	1	
	C589503-0201	CONTROL-TRANSCEIVER	1	
-18		CESSNA HIGH FREQUENCY 300 BASIC COMPONENTS	NP	
	C582103-0101	TRANSCEIVER	1	
	C582103-0301	POWER SUPPLY	1	
	C589502-0201	LOAD BOX	1	
-19		CESSNA ADF 300 BASIC COMPONENTS	NP	
	41240-1000	RECEIVER WITHOUT BFO	1	
	41240-0100	RECEIVER WITH BFO	1	
	41240-0001	RECEIVER WITH BFO	1	
	40900-0000	MOUNT-RECEIVER	1	
	41250-1000	INDICATOR TYPE IN546A	1	
	40980-1000	INDICATOR TYPE IN346A	1	
	40980-1100	INDICATOR TYPE IN346B	1	
	41360-1000	INDICATOR TYPE IN346C	1	
	41360-1100	INDICATOR TYPE IN346D	1	
	27310-0000	INDICATOR IN12-1	1	
	27470-0000	INDICATOR IN13A1	1	
	41950-0000	ACCESSORY UNIT TYPE RA446A SINGLE	1	
	41340-0001	ACCESSORY UNIT TYPE RA346A SINGLE	1	
	41340-0002	ACCESSORY UNIT TYPE RA346B DUAL	1	
	41350-0000	MOUNT-ACCESSORY UNIT	1	
	41376-0000	LIMITER-RADIO FREQUENCY SIGNAL	1	
		COLLINS		
-20		COLLINS PN101 PICTORIAL NAVIGATION BASIC COMPONENTS CR	NP	
	522-3241-00	GYRO-DIRECTIONAL CR	1	
	522-2638-006	INDICATOR-COURSE CR	1	
	522-2644-011	ACCESSORY UNIT-SLAVING CR	1	
	522-2930-00	SHOCKMOUNT-ACCESSORY UNIT CR	1	
	522-2643-001	DETECTOR-FLUX TYPE 323A3G CR	1	
	522-4945-001	DETECTOR-FLUX TYPE 323A2G		
	792-6134-001	COMPENSATOR CR	1	
		SUNAIR		
-21		T10R HIGH FREQUENCY RADIO BASIC COMPONENTS SUNA	NP	
	90976	TRANSCEIVER SUNA	1	
	91164	SHOCKMOUNT-TRANSCEIVER SUNA	1	
	99816	COUPLER-ANTENNA SUNA	1	
	33435	CONTROL SUNA	1	
-22		T22RA HIGH FREQUENCY RADIO BASIC COMPONENTS	NP	
	98382	TRANSCEIVER SUNA	1	
	91360	SHOCKMOUNT-TRANSCEIVER SUNA	1	
	95249	COUPLER-ANTENNA SUNA	1	
	33423	CONTROL SUNA	1	
-23		ASB100A SSB HIGH FREQUENCY RADIO BASIC COMPONENTS SUNA	NP	
	99912	TRANSCEIVER SUNA	1	
	99915	MOUNT-TRANSCEIVER SUNA	1	
	99914	POWER SUPPLY SUNA	1	
	99916	MOUNT-POWER SUPPLY SUNA	1	
	99816	COUPLER SUNA	1	
	99677	CONTROL SUNA	1	
		KING		
-24		KN65 DME	NP	
	066-1029-01	TRANSCEIVER INCLUDING MOUNT KG	1	
	066-3018-00	INDICATOR KG	1	
	071-0004-00	ADAPTER-CHANNEL KG	1	

CONTINUED

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
150				
-25		. KNC610 AREA NAVIGATION	NP	
	066-4002-00	. . COMPUTER	KG	1
	44100-1000	. . COMPUTER	ARC	1
	44091-0000	. . MOUNT-R-NAV	ARC	1
		RCA		
-26		. AVQ75 DME	NP	
	MI591083-1	. . TRANSCEIVER	RCA	1
	MI591085-7	. . INDICATOR	RCA	1
	MI591086	. . MOUNT-SHOCK	RCA	1
	MI592016	. . ADAPTER-CHANNEL	RCA	1
	MI591085-7A	. . INDICATOR USED WITH AREA NAV	RCA	1
		SPERRY		
-27		. AA215 RADAR ALTIMETER	NP	
	4004437-901	. . TRANSCEIVER	SPE	1
	4014267	. . INDICATOR	SPE	1
	4004512	. . ANTENNA	SPE	2
	4010193-2	. . GASKET-ANTENNA	SPE	2
	SC628	. . HORN	MAL	1
-28		. ENCODING ALTIMETER	NP	
	3252013 601	. . ALTIMETER INCHES MERCURY	BEND	1
	42540-6128	. . ALTIMETER INCHES MERCURY	ARC	1
	42540-3128	. . ALTIMETER FT & INCHES	ARC	1
	43300-6128	. . ALTIMETER INCHES MERCURY ALERTER SYSTEM	ARC	1
	3252013 701	. . ALTIMETER MILIBARS	BEND	1
	42540-3228	. . ALTIMETER MILIBARS	ARC	1
	42540-6228	. . ALTIMETER MILIBARS	ARC	1
	43300-6228	. . ALTIMETER MILIBARS ALERTER SYSTEM	ARC	1
	43310-0000	. . ALTITUDE-ALERTER	ARC	1
		PANTRONICS		
-29		. PT10A HIGH FREQUENCY COMMUNICATION BASIC COMPONENTS	NP	
	C582103-0101	. . TRANSCEIVER TYPE PT10A		1
	C582103-0301	. . POWER SUPPLY TYPE PT10PS28		1
	C589502-0201	. . LOAD BOX TYPE DX10 RL28		1
-30		. CESSNA MARKER BEACON 400 BASIC COMPONENTS	NP	
	42410-5128	. . RECEIVER TYPE R402A		1
	MS25041-10	. . LENS-OUTER BLUE		1
	MS25041-4	. . LENS-MIDDLE AMBER		1
	MS25041-1	. . LENS-INNER WHITE		1
	MS25237-328	. . BULB 5.0 VOLT		1
-31		. CESSNA DME 400 BASIC COMPONENTS	NP	
	44000-0000	. . TRANSCEIVER TYPE RTA 476A		1
	44088-0000	. . MOUNT-RT		1
	44020-1000	. . CONTROL TYPE C476A		1
-32		. ABS 130 SSB HIGH FREQUENCY RADIO BASIC COMPOMENTS	SUNA	NP
	99503	. . TRANSCEIVER	SUNA	1
	99499	. . MOUNT-TRANSCEIVER	SUNA	1
	99391	. . POWER SUPPLY	SUNA	1
	99916	. . MOUNT-POWER SUPPLY	SUNA	1
	99816	. . COUPLER	SUNA	1
	99508	. . CONTROL	SUNA	1
-33		. GLIDESLOPE/MARKER BEACON-EXPORT		NP
	4000412-4704	. . RECEIVER	BEND	1
	4007158 502	. MOUNT-RECEIVER	BEND	1
	MS25041-1	. LIGHT ASSY-WHITE-INNER		1
	MS25041-4	. LIGHT ASSY-AMBER-MIDDLE		1
	MS25041-10	. LIGHT ASSY-BLUE-OUTER		1
-34		. TPR-660 TRANSPONDER-EXPORT	BEND	NP A
	4000526-6101	. . TRANSCEIVER-TYPE TRP661A-HIGH ALTITUDE	BEND	1
	4007341 502	. . MOUNT-TRANSCEIVER	BEND	1
	4007415 501	. . VOLTAGE CONVERSION KIT	BEND	1

* SEE CESSNA 800 SERIES ELECTRONICS SERVICE/PARTS MANUAL FOR RADIO EQUIPMENT BREAKDOWN

** SEE CESSNA 400 SERIES ELECTRONICS SERVICE/PARTS MANUAL FOR RADIO EQUIPMENT BREAKDOWN

*** SEE CESSNA 300 SERIES ELECTRONICS SERVICE PARTS MANUAL FOR RADIO EQUIPMENT BREAKDOWN

A---340-0001 TO 340A0001

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
151 -		ANTENNAS INSTALLATION	NP	
-1		. HIGH FREQUENCY ANTENNAS INSTL	NP	
	9751038-7	. . WIRE-ANTENNA STRAIGHT	1	
	9751038-8	. . WIRE-ANTENNA OPEN V	1	
	50ARM300A	. . ADAPTOR-WIRE NOSE	LAPI	1
	25ARM300-20-30-1/2	. . FEEDTHRU-ANTENNA NOSE	LAPI	1
	MS43DD3-26	. . SPACER-FEEDTHRU NOSE	2	
	MS25171-2S	. . NIPPLE NOSE	1	
	9751038-5	. . DOUBLER-STANDOFF MAST CABIN TOP	1	
	12310-1113-34	. . STANDOFF-MAST CABIN TOP	1	
	5ARM300-8C	. . INSULATOR-TENSION VERTICAL FIN STRAIGHT ANTENNA	LAPI	1
	50ARM300C	. . ADAPTOR-WIRE VERTICAL FIN STRAIGHT ANTENNA	LAPI	1
	12310-1050-16	. . SHACKLE VERTICAL FIN STRAIGHT ANTENNA	1	
		ATTACHING PARTS		
	MS27039-0816	. . SCREW	1	
	NAS43DD3-6	. . SPACER	2	
	AN960-10	. . WASHER	2	
	MS21044N08	. . NUT	1	
		---*---		
	12310-1050-14	. . ANCHOR VERTICAL FIN STRAIGHT ANTENNA	1	
	12310-1392-11	. . BRACKET-RH VERTICAL FIN OPEN V ANTENNA	1	
	12310-1050-16	. . SHACKLE VERTICAL FIN OPEN V ANTENNA	1	
		ATTACHING PARTS		
	MS27039-0815	. . SCREW	1	
	AN960-8	. . WASHER	2	
	NAS43DD3-6	. . SPACER	2	
	MS21044N08	. . NUT	1	
		---*---		
	ARM300-3	. . INSULATOR-TENSION VERTICAL FIN OPEN V ANTENNA	LAPI	1
	10ARM300-13C	. . INSULATOR RH TIP TANK OPEN V ANTENNA	LAPI	1
	9751038-9	. . WIRE-GUY RH TIP TANK OPEN V ANTENNA	1	
	10ARM300-13C	. . INSULATOR RH TIP TANK OPEN V ANTENNA	LAPI	1
	ARM300C	. . ADAPTER-WIRE RH TIP TANK OPEN V ANTENNA	LAPI	3
	9751024-13	. . WIRE-GUY RH TIP TANK OPEN V ANTENNA	1	
	5ARM300-5C	. . TENSION ASSY RH TIP TANK OPEN V ANTENNA	LAPI	1
	12310-1050-16	. . SHACKLE RH TIP TANK OPEN V ANTENNA	1	
		ATTACHING PARTS		
	MS27039-0815	. . SCREW	1	
	AN960-8	. . WASHER	2	
	NAS43DD3-6	. . SPACER	2	
	MS21044N08	. . NUT	1	
		---*---		
	9751024-11	. . BRACKET-RH TIP TANK OPEN V ANTENNA	1	
		ATTACHING PARTS		
	MS27039-0808	. . SCREW	1	
		---*---		
-2		. VHF ANTENNAS INSTL	NP	
		. . CESSNA TRANSCEIVER ANTENNAS INSTL	NP	
	35180-0100	. . . ANTENNA CABIN BOTTOM	1	
	35180-0100	. . . ANTENNA CABIN TOP	1	
	35180-0300	. . . ANTENNA OFF CENTER PLUG	ARC	1
	24810-0100	. . . ANTENNA-MARKER BEACON	1	
	VF10-112	. . . ANTENNA-FIN TIP	CCC	1
-3		. NAVIGATION ANTENNAS INSTL	NP	
		. . CESSNA OMNI ANTENNA INSTL	NP	
	1270012-5	. . . ROD ASSY-ANTENNA	2	
	1270013-3	. . . BALUN STUB-ANTENNA	1	
	0812686-1	. . . MOUNT-ANTENNA	1	
	VT10-50	. . . ANTENNA FIN TIP	CCC	1
	VT11-50-5	. . . ANTENNA FIN TIP	CCC	1
	VT10-56-1	. . . ANTENNA-DUAL NAV	CCC	1
	DRC20-35	. . . ANTENNA-DUAL NAV	CCC	1
	VT10-50	. . . ANTENNA-SINGLE NAV	CCC	1
	RGS10-48	. . ANTENNA-GLIDESLOPE NOSE CAP	CCC	1
	DGSC20-02	. . COUPLER-GLIDESLOPE ANTENNA	CCC	1
		ATTACHING PARTS		
	MS35206-230	. . SCREW	2	
		---*---		
		. . CESSNA MARKER BEACON INSTL	NP	
	24810-0100	. . . ANTENNA	1	
		. . CESSNA DME ANTENNA INSTL	NP	
	071-1021-00	. . . ANTENNA	KG	1
	L10-216-1	. . . ANTENNA	CCC	1
		. . CESSNA TRANSPONDER ANTENNA INSTL	NP	
	34970-1000	. . . ANTENNA	1	
	L10-159	. . . ANTENNA	CCC	1
-4		. ADF ANTENNAS INSTL	NP	
		. . CESSNA ANTENNA INSTL-SENSE ANTI-PRECIP CABIN BOTTOM	NP	
	WS5C-U	. . . WIRE-ANTENNA BKI	AR	

CONTINUED

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
151	35ARM300-80B	. . . FEED THRU MAST LH & RH FWD . . . . . LAPI	2	
	35ARM300-80U	. . . FEED THRU MAST LH & RH FWD . . . . . LAPI ALT FOR 35ARM300-80B	2	
		ATTACHING PARTS		
	MS24693-273	. . . SCREW	4	
	MS21044N3	. . . NUT	4	
		---*---		
	9751034-10	. . . FILLER-FEEDTHRU LH & RH FWD	2	
	9751034-9	. . DOUBLER-FEED THRU LH & RH FWD	2	
	30ARM300-71	. . STANDOFF-INSULATED 90 DEGREE LH & RH CTR . . . . LAPI	2	
		ATTACHING PARTS		
	MS24693-273	. . SCREW	4	
		---*---		
	9751034-11	. . DOUBLER ASSY-STANDOFF LH & RH CTR	2	
	5ARM300-8CN1	. . TENSION UNIT-LH & RH AFT . . . . . LAPI	2	
	30ARM300-72	. . STANDOFF-MAST 27 DEGREE LH & RH AFT . . . . . LAPI	2	
		ATTACHING PARTS		
	MS24693-273	. . SCREW	4	
		---*---		
	9751034-13	. . DOUBLER ASSY-STANDOFF LH AFT	1	
	9751034-14	. . DOUBLER ASSY-STANDOFF RH AFT	1	
		. . CESSNA LOOP ANTENNAS INSTL	NP	
	41000-1000	. . . ANTENNA 300 SERIES	1	
	34390-0000	. . . ANTENNA 800 SERIES	1	
	071-1034-00	. . . ANTENNA 800 SERIES . . . . . KG	1	

ELECTRONIC EQUIPMENT

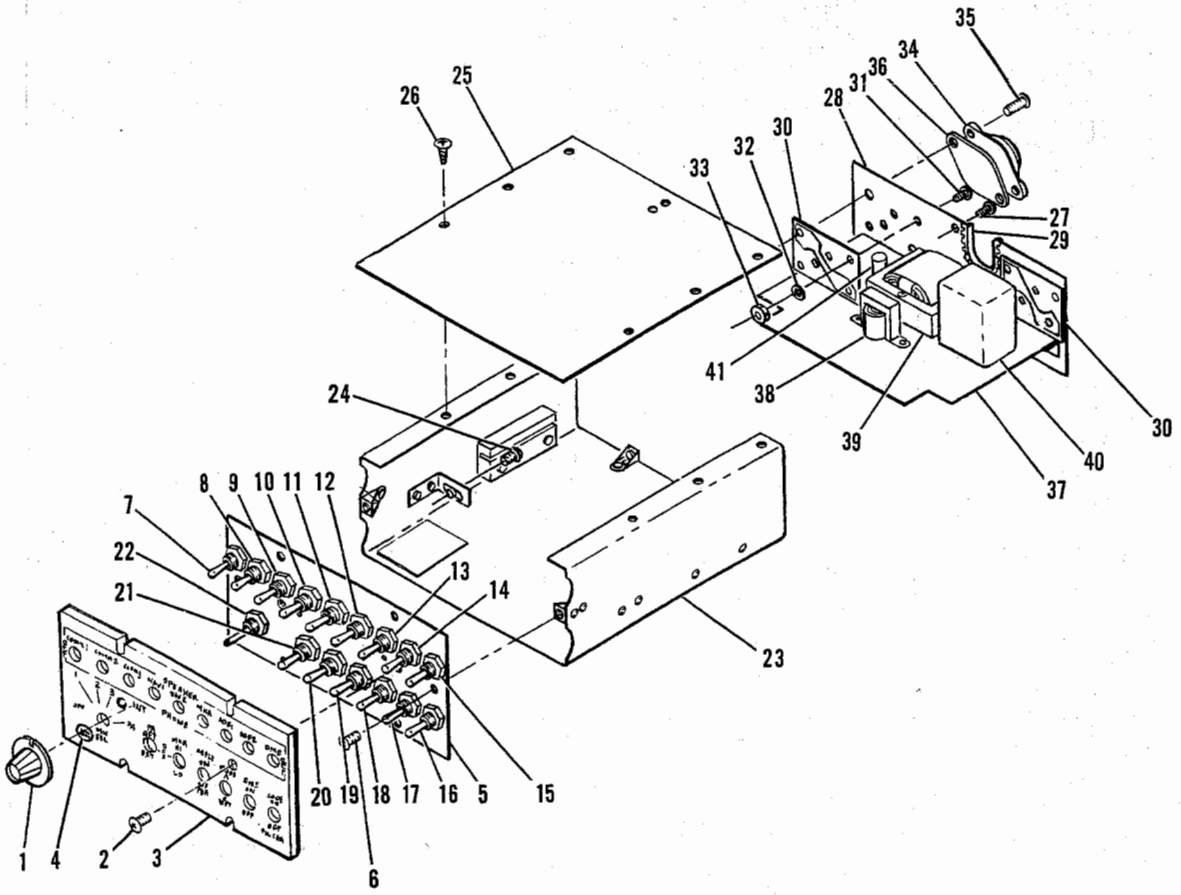

Figure 152. Cessna 800 Audio Amplifier Assembly

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
152 -		CESSNA 800 AUDIO AMPLIFIER ASSEMBLY	NP	
	5072400-10	. AMPLIFIER ASSY-AUDIO	1	C
		ATTACHING PARTS		
	MS35214-14	. SCREW	4	
		---*---		
-1	P106	. . KNOB-MIKE SELECTOR SWITCH CMN	1	A
	9715009-1	. . KNOB-MIKE SELECTOR SWITCH	1	B
	5072409-8	. . PANEL ASSY-EDGE LIGHTED	1	
		ATTACHING PARTS		
-2	AN500-2-5	. . SCREW	2	
		---*---		
-3	5072409-10	. . . PANEL ASSY	1	
-4	S1467-2	. . . . BUTTON CESSNA EMBLEM	1	
		ATTACHING PARTS		
	8040	. . . . NUT ARC	1	
		---*---		
-5	5072405-14	. . PANEL ASSY-FRONT	1	
		ATTACHING PARTS		
-6	MS35206-226	. . SCREW	2	
		---*---		
-7	S1695-1	. . . SWITCH-COMM 1	1	
-8	S1695-1	. . . SWITCH-COMM 2	1	
-9	S1695-1	. . . SWITCH-COMM3	1	
-10	S1695-1	. . . SWITCH-NAV 1	1	
-11	S1695-1	. . . SWITCH-NAV 2	1	
-12	S1695-1	. . . SWITCH-MARKER BEACON	1	
-13	S1695-1	. . . SWITCH-ADF 1	1	
-14	S1695-1	. . . SWITCH-ADF 2	1	
-15	S1695-1	. . . SWITCH-DME	1	
-16	S1696-1	. . . SWITCH-CODE FILTER	1	
-17	S1695-2	. . . SWITCH-DME	1	
-18	S1695-2	. . . SWITCH-MODE A TEST	1	
-19	S1695-2	. . . SWITCH-TRANSPONDER REPLY	1	
-20	S1695-2	. . . SWITCH-MARKER BEACON HI-LO	1	
-21	S1696-2	. . . SWITCH-AFT & EXTERNAL PA	1	
-22	2500-4N6	. . . SWITCH-MIKE SELECT JPN	1	
-23	5072405-1	. . BOX ASSY-AMPLIFIER	1	
		ATTACHING PARTS		
-24	MS35206-228	. . SCREW	2	
		---*---		
-25	5072405-3	. . PLATE ASSY-TOP	1	
		ATTACHING PARTS		
-26	S1022Z2-38	. . SCREW	6	
		---*---		
	5072401-6	. . PLATE BOARD ASSY-AMPLIFIER	1	
		ATTACHING PARTS		
-27	AN515-632R5	. . SCREW	3	
		---*---		
	5072401-5	. . . PLATE ASSY-TRANSISTOR	1	
-28	5072405-2	. . . . PLATE ASSY-REAR	1	
-29	S1050-1	. . . . . GROMMET BKI	AR	
-30	2TS1	. . . . SOCKET-TRANSISTOR CIN	2	
		ATTACHING PARTS		
-31	MS35206-215	. . . . SCREW	4	
-32	AN960-4L	. . . . WASHER	4	
-33	MS21042-04	. . . . NUT	4	
		---*---		
-34	2N2869	. . . . TRANSISTOR RCA	2	
		ATTACHING PARTS		
-35	S1021Z6-88	. . . . SCREW	2	
		---*---		
-36	1221643	. . . . INSULATOR-TRANSISTOR MICA DRC	2	
-37	5072410-2	. . . CIRCUIT BOARD ASSY	1	
		ATTACHING PARTS		
	MS35206-205	. . . SCREW	2	
	AN960-2L	. . . WASHER	2	
	MS21042-02	. . . NUT	2	
		---*---		
-38	TY35X	. . . . TRANSFORMER TIAD	1	
		ATTACHING PARTS		
	MS35206-203	. . . . SCREW	2	
	AN960-2L	. . . . WASHER	2	
	MS21042-02	. . . . NUT	2	
		---*---		
-39	TY30X	. . . . TRANSFORMER TIAD	1	
		ATTACHING PARTS		
	MS35206-208	. . . . SCREW	1	
	AN960-2L	. . . . WASHER	1	
	MS21042-02	. . . . NUT	1	
		---*---		
-40	KHS17D11-24V	. . . . RELAY PBR	1	
		ATTACHING PARTS		
	MS21042-02	. . . . NUT	1	
		---*---		
-41	2N1379	. . . . TRANSISTOR GPS	1	
	315001	. . . . FUSE LTF	1	
	AA108	. AMPLIFIER ASSY-AUDIO EDLT	1	D
	7101A42	. . SWITCH-TOGGLE SPDT CANK	1	
	7203AV2	. . SWITCH-TOGGLE DPDT CANK	1	
	7103AV2	. . SWITCH-TOGGLE SPDT CANK	1	
	71AD30-05-1-6S	. . SWITCH-ROTARY SELECT GRAY	1	

A---340-0001 THRU 340-0150
B---340-0151 & ON
C---340-0001 THRU 340-0300
D---340-0301 & ON

ELECTRONIC EQUIPMENT

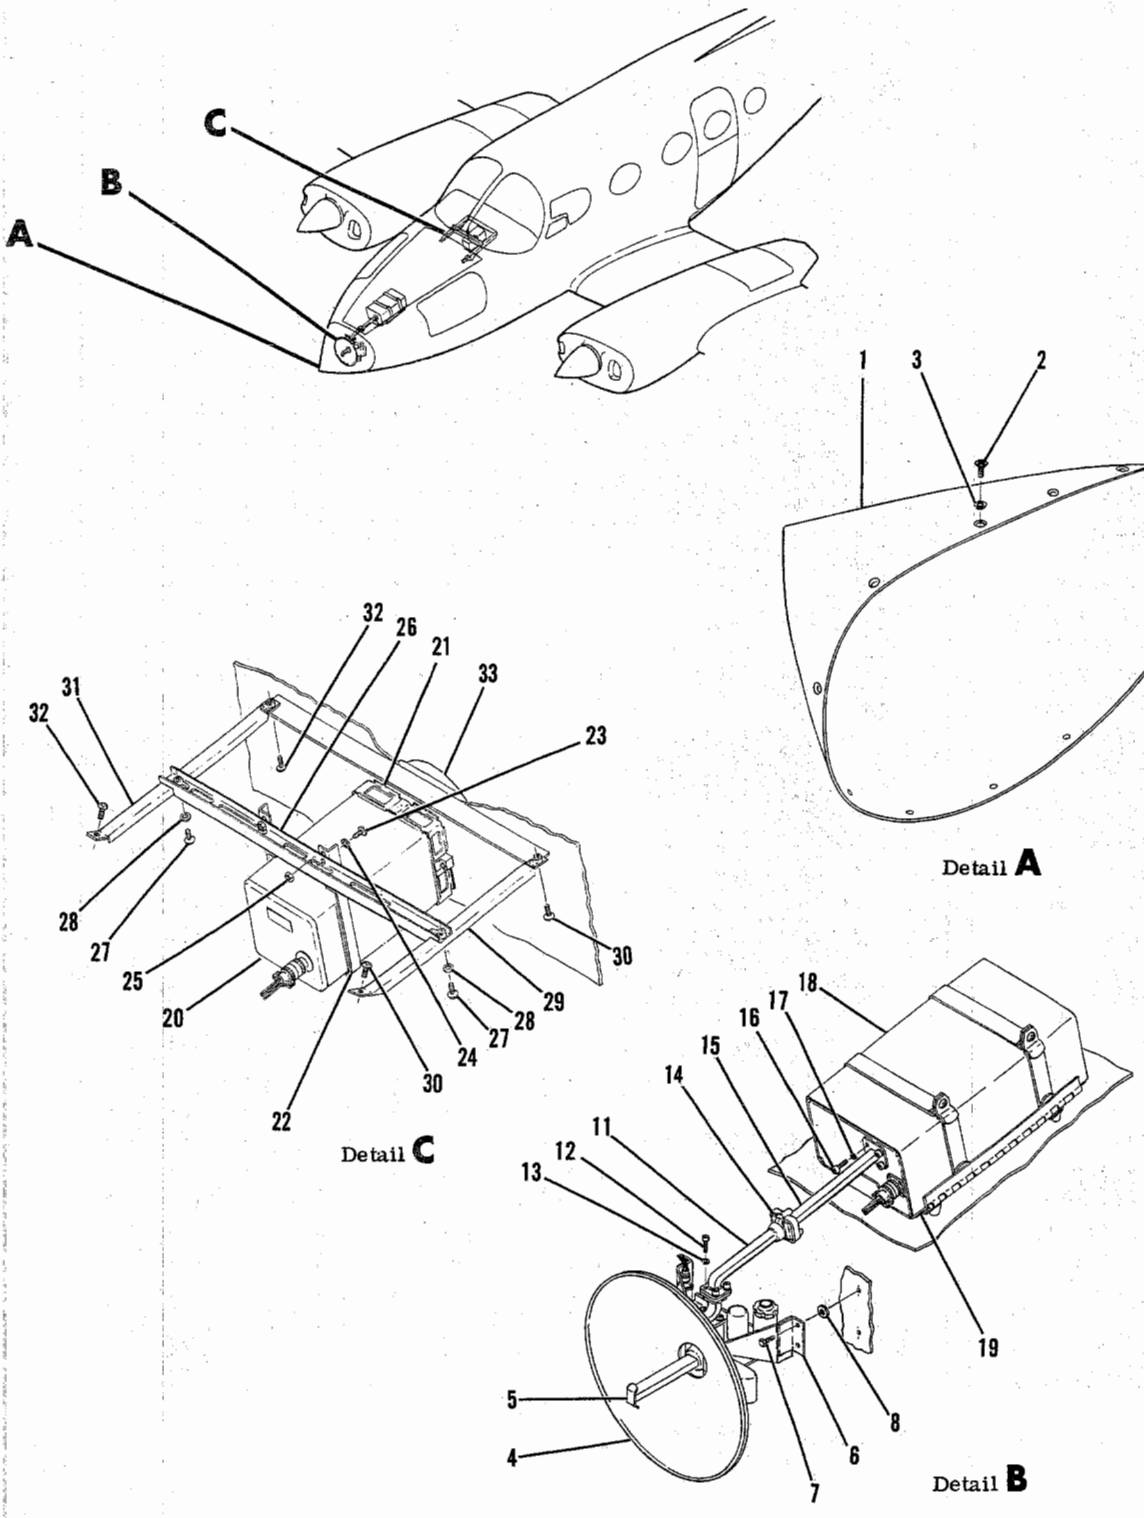

14143009
A14131002
B14143010
C14143010

Figure 153. AVQ-47 Radar Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
153 -		AVQ47 RADAR INSTALLATION	NP	
-1	5300926-2	. RADOME ASSY WEU 9711019-9	1	C
	9711019-9	. RADOME ASSY	1	D
-2	MS24694S48	. . SCREW	11	
-3	S290D1032	. . WASHER	11	
-4	MI592038	. REFLECTOR-ANTENNA RCA	1	A
	MI585084	. REFLECTOR-ANTENNA RCA	1	B
-5	MI585034-1	. ANTENNA RCA	1	A
	MI585086-1	. ANTENNA RCA	1	B
		ATTACHING PARTS		
-6	9751007-13	. BRACKET ASSY-LH	1	
	9751007-14	. BRACKET ASSY-RH	1	
-7	AN4-6A	. BOLT	2	
-8	AN960-416	. WASHER	1	
-9		. DELETED-NOT USED		
-10		. DELETED-NOT USED		
		---*---		
-11	9711015-4	. WAVEGUIDE ASSY	1	
		ATTACHING PARTS		
-12	NAS1352-08-8	. SCREW	4	
-13	MS35338-42	. WASHER	4	
		---*---		
-14	68004	. DISCONNECT-QUIK WAVEGUIDE ADLI	1	
-15	9711015-3	. WAVEGUIDE ASSY	1	
		ATTACHING PARTS		
-16	NAS1352-08-8	. SCREW	4	
-17	MS35338-42	. WASHER	4	
		---*---		
-18	MI585035	. RECEIVER-TRANSMITTER RCA	1	
-19	MI592083	. MOUNT-RECEIVER TRANSMITTER RCA	1	
		ATTACHING PARTS		
	MS27039-0816	. SCREW	4	
		---*---		
-20	MI585036-1	. INDICATOR WEU MI585036-3 RCA	1	
	MI585036-3	. INDICATOR RCA	1	
-21	MI592034	. CLAMP INDICATOR TO INSTRUMENT PANEL RCA	1	
-22	9756027-3	. STRAP ASSY-INDICATOR MOUNTING	1	
		ATTACHING PARTS		
-23	MS35206-247	. SCREW	2	
-24	MS35333-72	. WASHER	2	
-25	MS35649-284	. NUT	2	
		---*---		
-26	9756027-2	. BEAM ASSY	1	
		ATTACHING PARTS		
-27	MS35206-247	. SCREW	2	
-28	MS35333-72	. WASHER	2	
		---*---		
-29	9756044-3	. SUPPORT ASSY-LH	1	
		ATTACHING PARTS		
-30	MS27039-0807	. SCREW	2	
		---*---		
-31	9756044-2	. SUPPORT ASSY-RH	1	
		ATTACHING PARTS		
-32	MS27039-0807	. SCREW	2	
		---*---		
		ATTACHING PARTS		
-33	9711003-1	. HOOD-INDICATOR	1	

A---340-0001 THRU 340-0212
B---340-0213 & ON
C---340-0001 THRU 340-0314
D---340-0315 & ON

ELECTRONIC EQUIPMENT

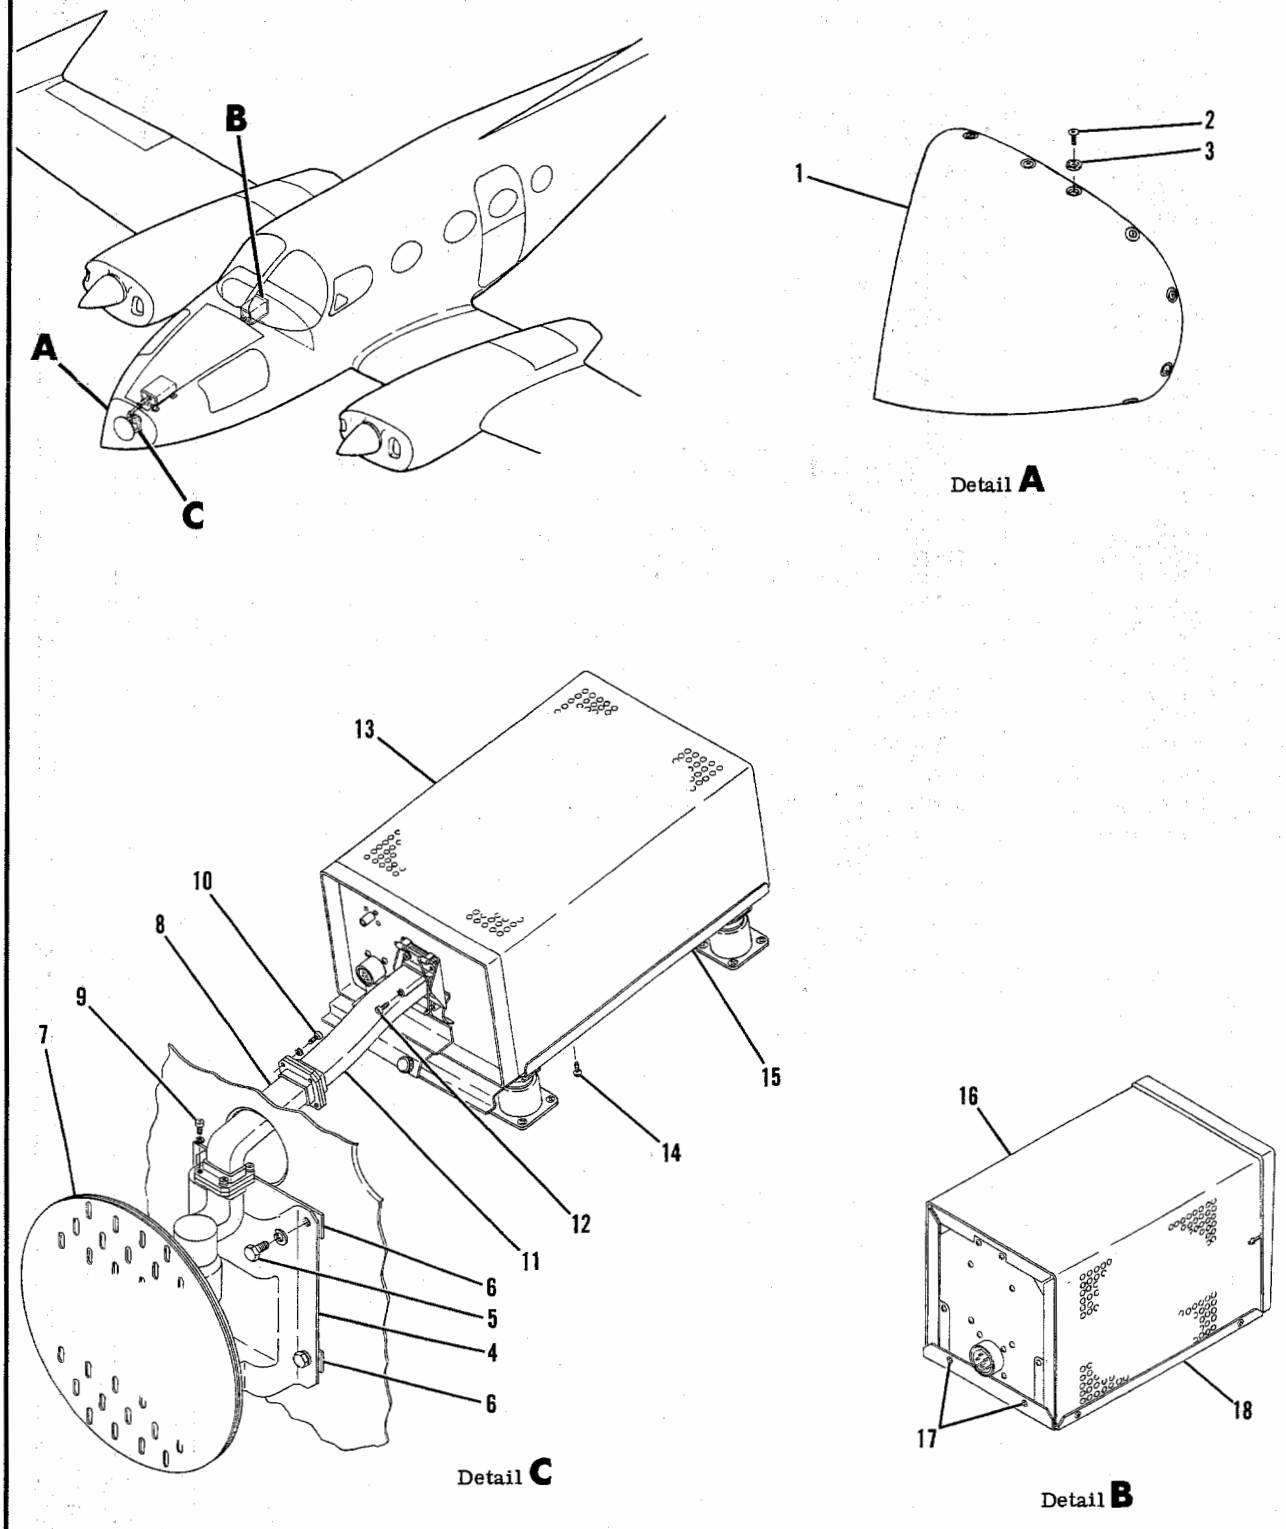

Figure 153A. RDR130 Weather Radar Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
153A-		RDR130 WEATHER RADAR INSTALLATION	NP	A
-1	9711019-9	. RADOME ASSY	1	
-2	MS24694S48	. . SCREW	11	
-3	S290-1032	. . WASHER	11	
-4	4000790-4406	. ANTENNA INVERTED BCAD	1	
		ATTACHING PARTS		
-5	AN4-5A	. BOLT	4	
	MS35338-44	. WASHER	4	
-6	9711015-7	. SPACER	2	
		---*---		
-7	4000525-1210	. ARRAY 10 IN BCAD	1	
-8	9711015-4	. WAVEGUIDE ASSY	1	
		ATTACHING PARTS		
-9	NAS1352-08-8	. SCREW	4	
	MS35338-42	. WASHER	4	
		---*---		
-10	NAS1352-08-08	. SCREW	4	
	MS35338-42	. WASHER	4	
-11	9711015-3	. WAVEGUIDE ASSY	1	
		ATTACHING PARTS		
-12	NAS1352-08-8	. SCREW	4	
	MS35338-42	. WASHER	4	
		---*---		
-13	4000763-3101	. RECEIVER-TRANSMITTER BCAD	1	
		ATTACHING PARTS		
-14	MS27039-0809	. SCREW	4	
		---*---		
-15	4007543 504	. MOUNT-RECEIVER TRANSMITTER BCAD	1	
-16	4000764-3201	. INDICATOR BCAD	1	
		ATTACHING PARTS		
-17	MS24693-27	. SCREW	2	
		---*---		
-18	4005088-0502	. TRAY-INDICATOR MOUNT BCAD	1	
		A---340-0540 & ON		

ELECTRONIC EQUIPMENT

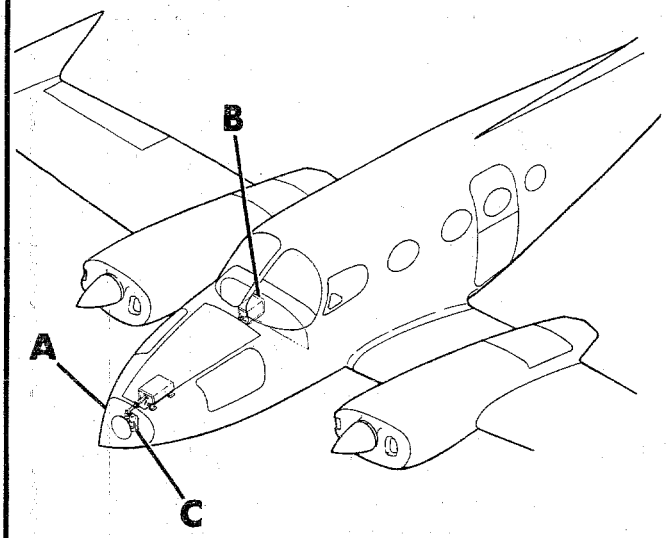

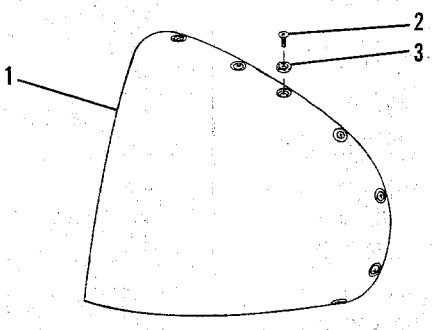

Detail **A**

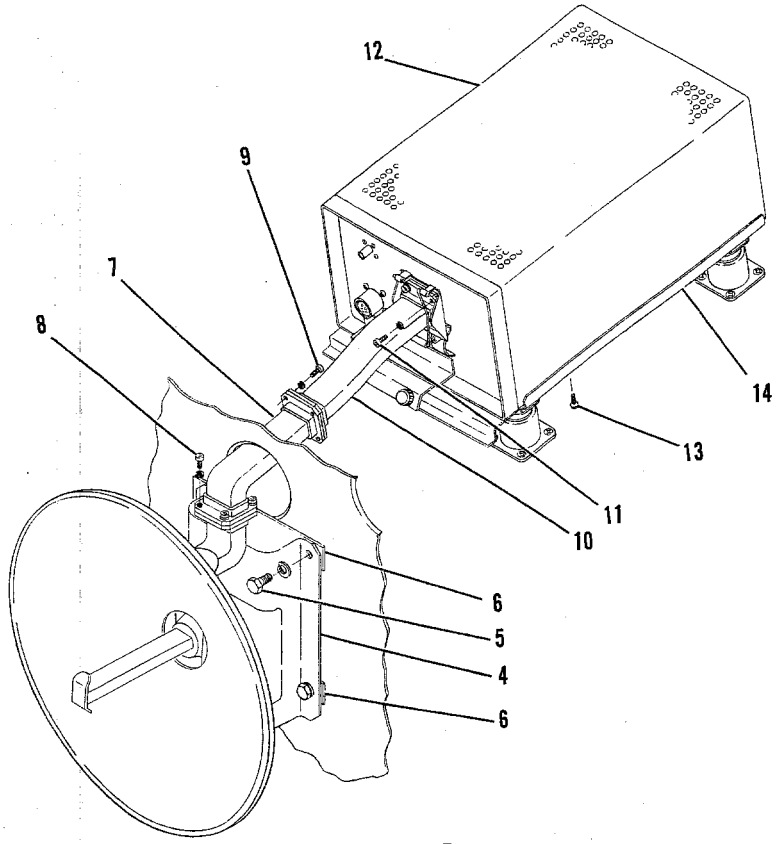

Detail **C**

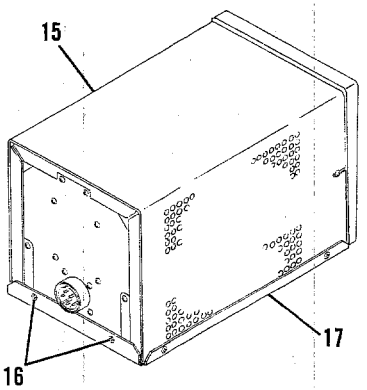

Detail **B**

14143062
A14131005
B51142051
C14143077

Figure 153B. RDR 150 Weather Radar Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
1538-		RDR150 WEATHER RADAR INSTALLATION	NP	A
-1	9711019-9	. RADOME ASSY	1	
-2	MS24694S48	. . SCREW	11	
-3	S290-1032	. . WASHER	11	
-4	4000765-3302	. ANTENNA INVERTED WITH 12 IN DISH BCAD	1	
		ATTACHING PARTS		
-5	AN4-5A	. BOLT	4	
	MS35338-44	. WASHER	4	
-6	9711015-7	. SPACER	2	
		---*---		
-7	9711015-4	. WAVEGUIDE ASSY	1	
		ATTACHING PARTS		
-8	NAS1352-08-8	. SCREW	4	
	MS35338-42	. WASHER	4	
		---*---		
-9	NAS1352-08-8	. SCREW	4	
	MS35338-42	. WASHER	4	
-10	9711015-3	. WAVEGUIDE ASSY	1	
		ATTACHING PARTS		
-11	NAS1352-08-8	. SCREW	4	
	MS35338-42	. WASHER	4	
		---*---		
-12	4000763-3101	. RECEIVER-TRANSMITTER BCAD	1	
		ATTACHING PARTS		
-13	MS27039-0809	. SCREW	4	
		---*---		
-14	4007543-0504	. MOUNT-RECEIVER TRANSMITTER BCAD	1	
-15	4000946-5201	. INDICATOR BCAD	1	
		ATTACHING PARTS		
-16	MS24693-27	. SCREW	2	
		---*---		
-17	4007926-0502	. TRAY-INDICATOR MOUNT BCAD	1	
		A---340A0001 & ON		

ELECTRONIC EQUIPMENT

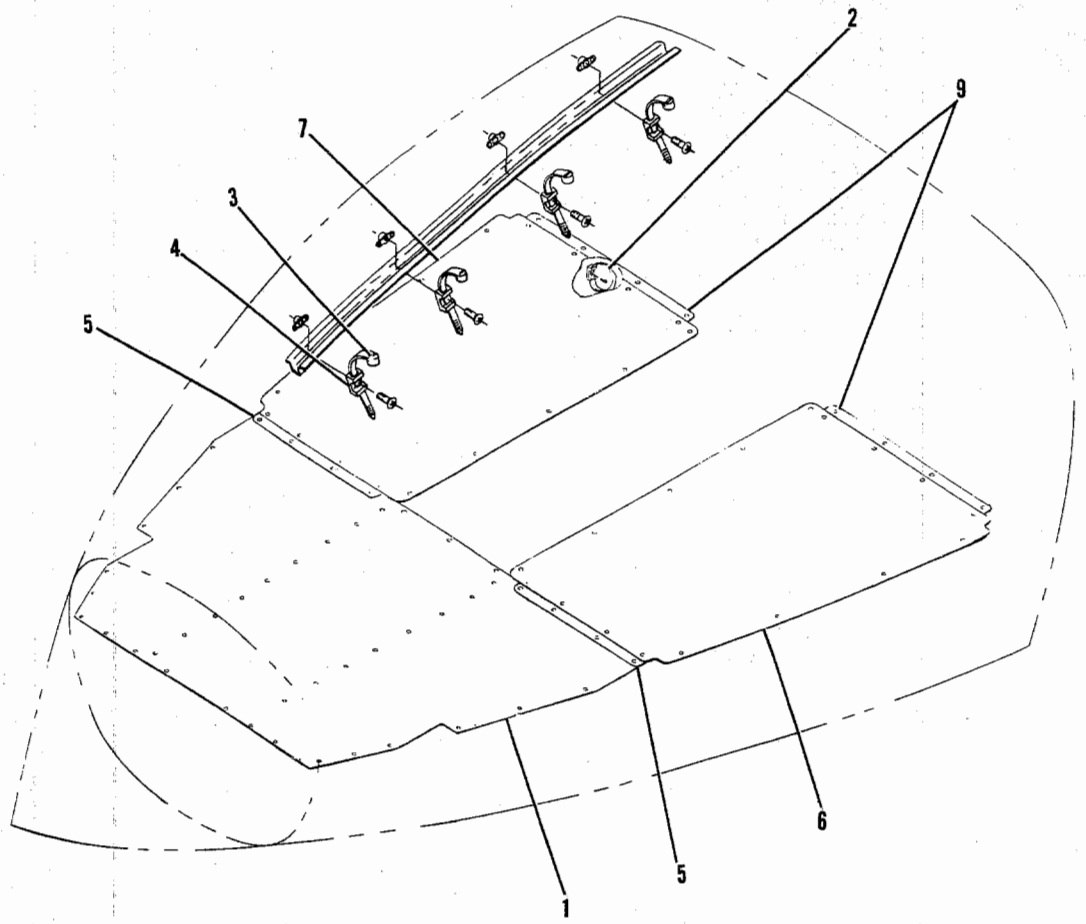

Figure 154. Nose Radio Shelves Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
154		NOSE RADIO SHELVES INSTALLATION	NP	
-1	9756041-6	. SHELF-FWD	1	
		ATTACHING PARTS		
-2	MS24694S4	. SCREW	53	
		---*---		
-3	S1693-2	. STA-STRAP	1	
-4	S1741-1	. ANCHOR	1	
		---*---		
-5	9756041-7	. SPLICE ASSY-FWD LH & RH	2	
		ATTACHING PARTS		
	MS24694S4	. SCREW	4	
		---*---		
-6	9756041-3	. SHELF-AFT LH	1	
-7	9756041-4	. SHELF-AFT RH	1	
		ATTACHING PARTS		
	MS24694S4	. SCREW	AR	
	S1693-2	. STA-STRAP	3	
	S1741-1	. ANCHOR	3	
		---*---		
-9	9756041-9	. SPLICE ASSY-AFT LH & RH	2	
		ATTACHING PARTS		
	MS24694S4	. SCREW	4	
		---*---		

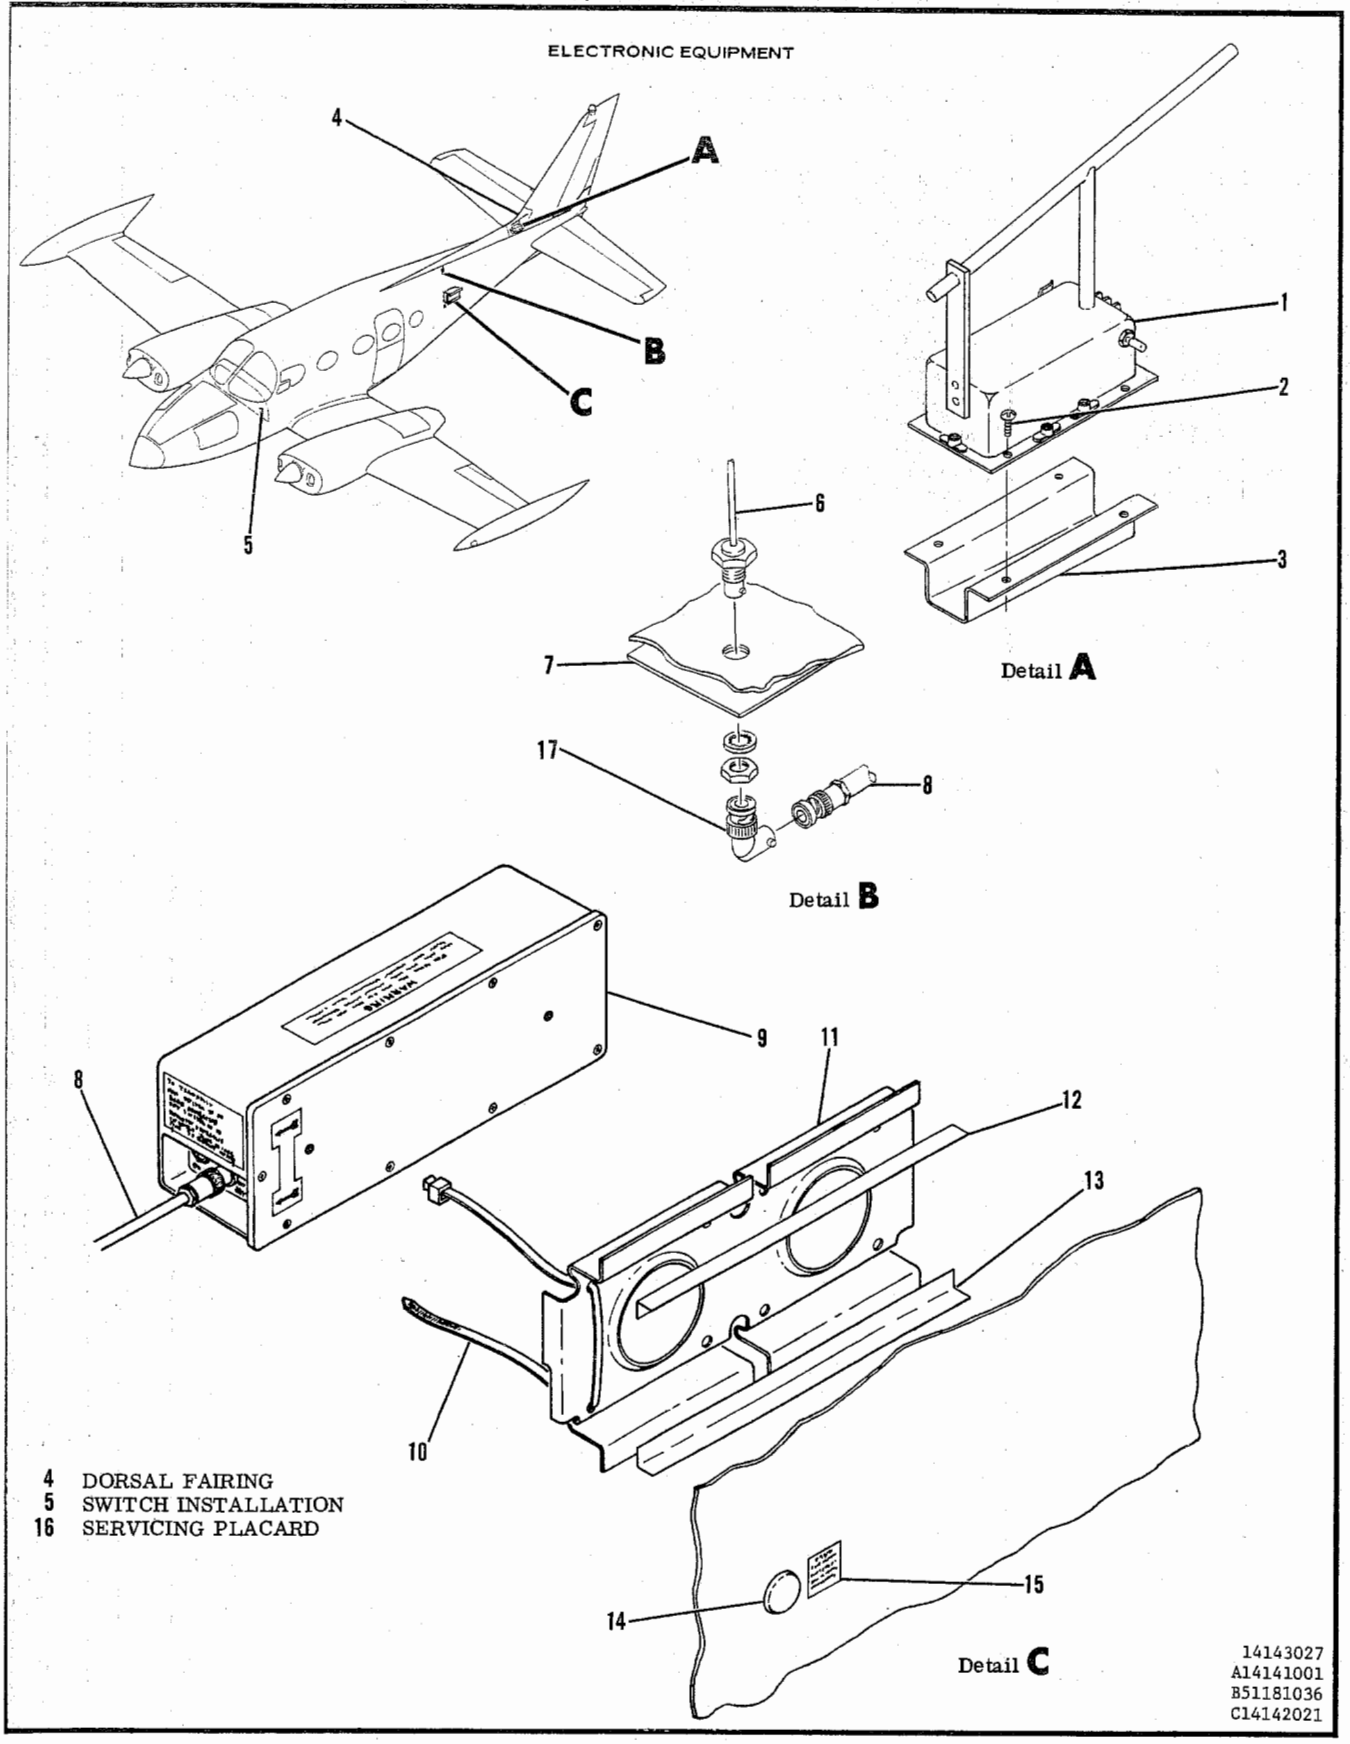

4 DORSAL FAIRING
5 SWITCH INSTALLATION
16 SERVICING PLACARD

Figure 155. Emergency Locator Transmitter Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
155 -		EMERGENCY LOCATOR TRANSMITTER INSTALLATION	NP	
-1	C1R10-4	. TRANSMITTER CCC	1	C
	C1R10-26	. TRANSMITTER CCC	1	D
		ATTACHING PARTS		
-2	MS35206-228	. SCREW	4	
		---*---		
	BP60-02	. . BATTERY MAGNESIUM USED ON C1R10-4	1	
	BP60	. . BATTERY LITHIUM USED ON C1R10-26	1	
-3	5300919-2	. SUPPORT ASSY	1	
-4	SEE FIG 41	. FAIRING-DORSAL	REF	
-5	SEE FIG 63	. SWITCH INSTL	REF	
		EMERGENCY LOCATOR TRANSMITTER INSTALLATION ECONOMY	NP	
-6	C589510-0103	. ANTENNA	1	A
	C589510-0203	. ANTENNA	1	B
	C589510-0107	. ANTENNA CANADA	1	
-7	1260474-2	. DOUBLER-ANTENNA	1	
-8	C589510-0104	. CABLE	1	A
	C589510-0207	. CABLE	1	B
-9	C589510-0102	. TRANSMITTER	1	A
	C589510-0202	. TRANSMITTER WEU C589510-0209	1	E
	C589510-0209	. TRANSMITTER	1	F
	C589510-0212	. TRANSMITTER CANADA	1	
		ATTACHING PARTS		
-10	S1693-3	. STA-STRAP	4	E
	1260480-7	. STA-STRAP	1	F
	1260480-7	. STA-STRAP CANADA	4	
		---*---		
	C589510-0105	. . BATTERY MAGNESIUM FSO C589510-0205	1	A
	C589510-0205	. . BATTERY LITHIUM	1	G
	C589510-0210	. . BATTERY LITHIUM	1	F
	C589510-0213	. . BATTERY CANADA	1	
-11	1260474-1	. BRACKET-TRANSMITTER SUPPORT	1	
-12	9754037-9	. ANGLE-UPR	1	
-13	9754037-8	. ANGLE-LWR	1	
-14	CM2692-36P1S	. PLUG BUTTON TAILCONE SKIN	1	
-15	9754037-11	. PLACARD ON OFF ARM	1	
-16	SEE FIG 47	. PLACARD-SERVICING	1	
-17	04-05-002	. SUPRESSOR-STATIC ELECTRICITY USED WITH MAGNESIUM BATTERY ONLY	1	A

A---340-0001 THRU 340-0322
B---340-0323 & ON
C---340-0001 THRU 340-0327
D---340-0328 & ON
E---340-0329 THRU 340-0527
F---340-0528 & ON
G---340-0323 THRU 340-0527

ELECTRONIC EQUIPMENT

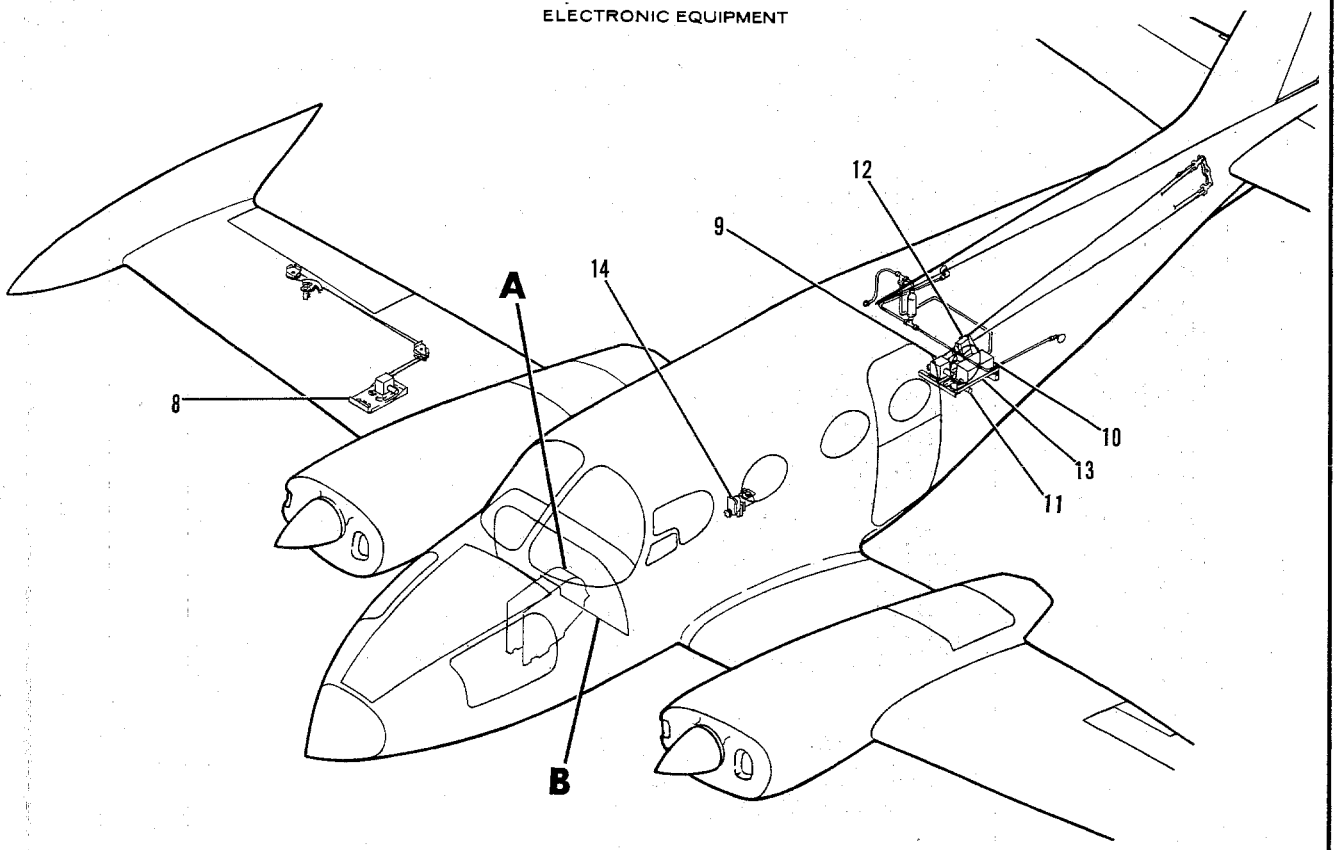

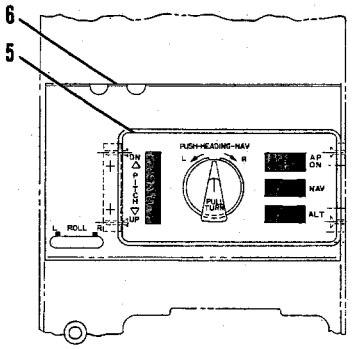

Detail **A**

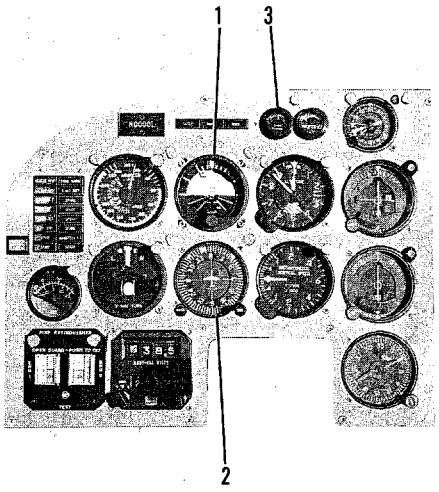

Detail **B**

1 HORIZON GYRO
2 DIRECTIONAL GYRO
3 SLAVING METER
4 AUTOPILOT CHECKLIST
6 CONTROLLER AMPLIFIER COVER ASSY
7 NAV SELECT SWITCH
13 ACTUATOR SUPPORTS AND CABLES
14 FLAP ACTUATOR AND REDUCTION UNIT

14153016
A
B

Figure 156. Cessna 400A Nav-O-Matic Autopilot Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
156 -		CESSNA 400A NAV-O-MATIC AUTOPILOT INSTALLATION	NP	F
-1	SEE FIG 63	. GYRO-HORIZON	1	
-2	SEE FIG 63	. GYRO-DIRECTIONAL	1	
	SEE FIG 63	. GYRO-DIRECTIONAL SLAVED	1	
-3	SEE FIG 63	. METER-SLAVING	1	
-4	SEE FIG 46	. CHECK LIST ASSY 400A AUTOPILOT	1	
-5	37960-1028	. CONTROLLER-AMPLIFIER	ARC	1
		ATTACHING PARTS		
	MS24693S28	. SCREW-LH	2	
	MS24693S25	. SCREW-RH	2	
	5017139-4	. BLOCK-HOLD RH	1	
		---*---		
-6	SEE FIG 20	. COVER ASSY-CONTROLLER AMPLIFIER	1	
-7	SEE FIG 61	. SWITCH-NAV SELECT	1	
-8	35070-0228	. ACTUATOR ASSY-AILERON SERVO ROLL	ARC	1
		ATTACHING PARTS		
	AN3-5A	. BOLT	4	
	9756060-13	. PLATE	1	C
	AN960-10	. WASHER	4	C
	MS35333-39	. WASHER-LOCK	4	
		---*---		
-9	35070-0328	. ACTUATOR-ELEVATOR SERVO PITCH	ARC	1 D
	35070-0428	. ACTUATOR-ELEVATOR SERVO PITCH	ARC	1 F
		ATTACHING PARTS		
	AN3-5A	. BOLT	4	
	9756060-13	. PLATE	1	C
	AN960-10	. WASHER	4	C
	MS35333-39	. WASHER-LOCK	4	
		---*---		
-10	37970-1128	. COMPUTER WITHOUT ILS	ARC	1 A
	37970-1228	. COMPUTER WITHOUTILS	ARC	1 B
	37970-1028	. COMPUTER WITH ILS	ARC	1 A
	37970-1328	. COMPUTER WITH ILS	ARC	1 B
	37980-0000	. MOUNT-COMPUTER	ARC	1
		ATTACHING PARTS		
	MS35206-228	. . SCREW	4	
		---*---		
-11	38100-0128	. ACTUATOR-ELEVATOR TRIM FOLLOW UP	ARC	1
		ATTACHING PARTS		
	AN3-5A	. BOLT	4	
	9756060-13	. PLATE	1	C
	AN960-10	. WASHER	4	C
	MS35333-39	. WASHER-LOCK	4	
		---*---		
-12	37580-0028	. SENSOR-ELEVATOR TRIM FOLLOW UP	ARC	1
		ATTACHING PARTS		
	MS35206-246	. SCREW	4	
		---*---		
-13	SEE FIG 157	. ACTUATOR SUPPORTS & CABLES	1	
-14	SEE FIG 93	. FLAP ACTUATOR & REDUCTION UNIT	1	

A---340-0001 THRU 340-0300
B---340-0301 TO 340A0001
C---340-0231 TO 340A0001
D---340-0001 THRU 340-0500
E---340-0501 TO 340A0001
F---340-0001 TO 340A0001

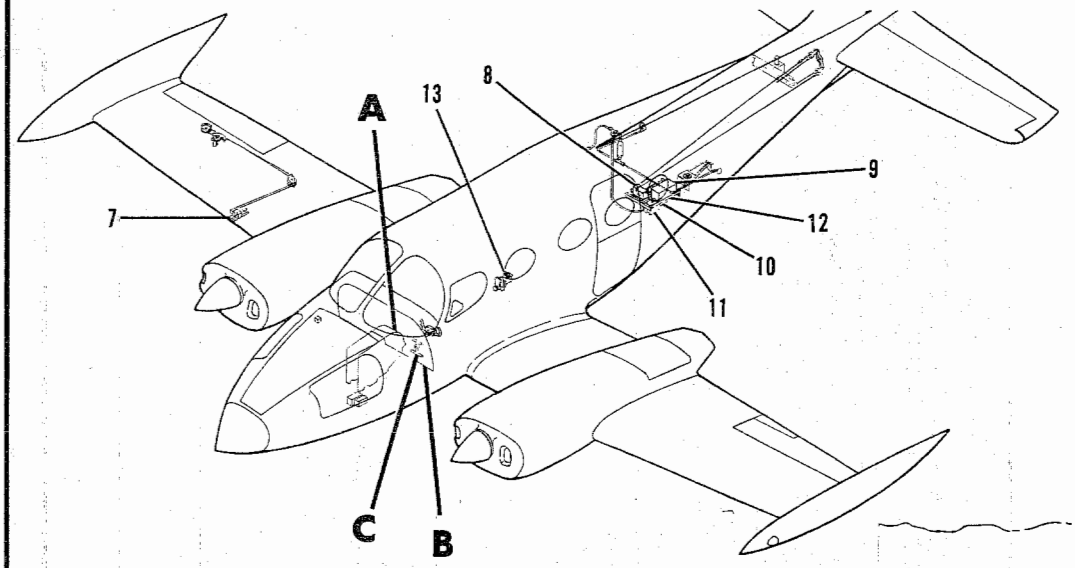

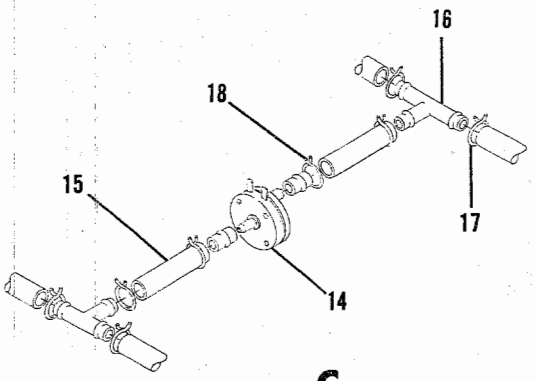

Detail **C**

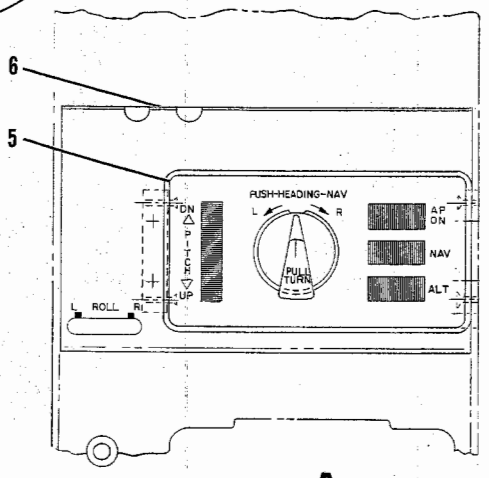

Detail **A**

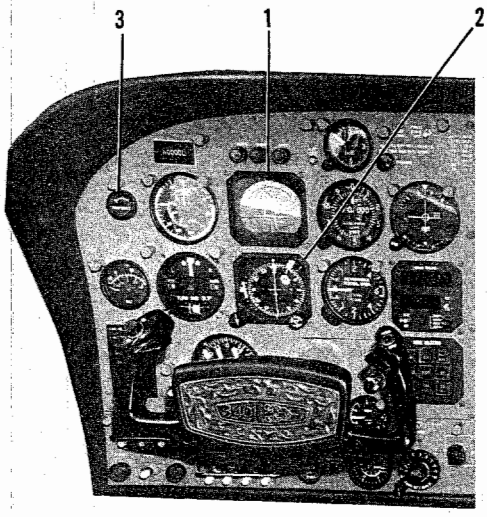

Detail **B**

1 HORIZON GYRO
2 DIRECTIONAL GYRO
3 SLAVING METER
4 AUTOPILOT CHECKLIST
6 CONTROLLER AMPLIFIER COVER ASSY
12 ACTUATOR SUPPORTS AND CABLES
13 FLAP ACTUATOR AND REDUCTION UNIT

14153023
A51141092
B
C10141072

Figure 156A. Cessna 400B Autopilot Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
156A–		CESSNA 400B AUTOPILOT INSTALLATION	NP	A
–1	SEE FIG 64	. GYRO–HORIZON	REF	
–2	SEE FIG 64	. GYRO–DIRETIONAL	REF	
	SEE FIG 64	. GYRO–DIRETIONAL SLAVED	REF	
–3	SEE FIG 64	. METER–SLAVING	REF	
–4	SEE FIG 46	. CHECK LIST ASSY 400B AUTOPILOT	REF	
–5	37960–1128	. CONTROL HEAD	ARC	1
		ATTACHING PARTS		
	MS24693S25	. SCREW		4
	5017139–4	. BLOCK–HOLD		1
		---*---		
–6	SEE FIG 20	. COVER ASSY–CONTROLLER AMPLIFIER		REF
–7	43989–3008	. ACTUATOR ASSY–AILERON SERVO ROLL	ARC	1
		ATTACHING PARTS		
	MS27039–1–07	. SCREW		4
	MS21083N3	. NUT		4
		---*---		
	44415–3100	. MOUNT–AILERON SERVO ACTUATOR	ARC	1
–8	43989–4008	. ACTUATOR ASSY–ELEVATOR SERVO PITCH	ARC	1
	44415–4100	. MOUNT–ELEVATOR SERVO ACTUATOR	ARC	1
–9	42680–0003	. COMPUTER	ARC	1
	43027–0000	. MOUNT–COMPUTER		
		ATTACHING PARTS		
	MS35206–228	. SCREW		4
		---*---		
–10	SEE FIG 90	. ACTUATOR–ELEVATOR TRIM	ARC	1
	SEE FIG 90	. MOUNT–ACTUATOR	ARC	1
–11	44400–0000	. SENSOR–ALTITUDE	ARC	1
		ATTACHING PARTS		
	MS35206–246	. SCREW		4
	MS2104L08	. NUT		4
		---*---		
–12	SEE FIG 157A	. SUPPORTS–ACTUATOR & CABLES		REF
–13	SEE FIG 93	. FLAP ACTUATOR & REDUCTION UNIT		REF
–14	44512–6164	. SWITCH–SENSOR	ARC	1
–15	CM2939–3–2	. HOSE		2
–16	1K14–4–4–3	. TEE	AIRB	2
		ATTACHING PARTS		
–17	A8S	. CLAMP	CBHC	2
–18	A6S	. CLAMP	CBHC	4
		---*---		
		A---340A0001 & ON		

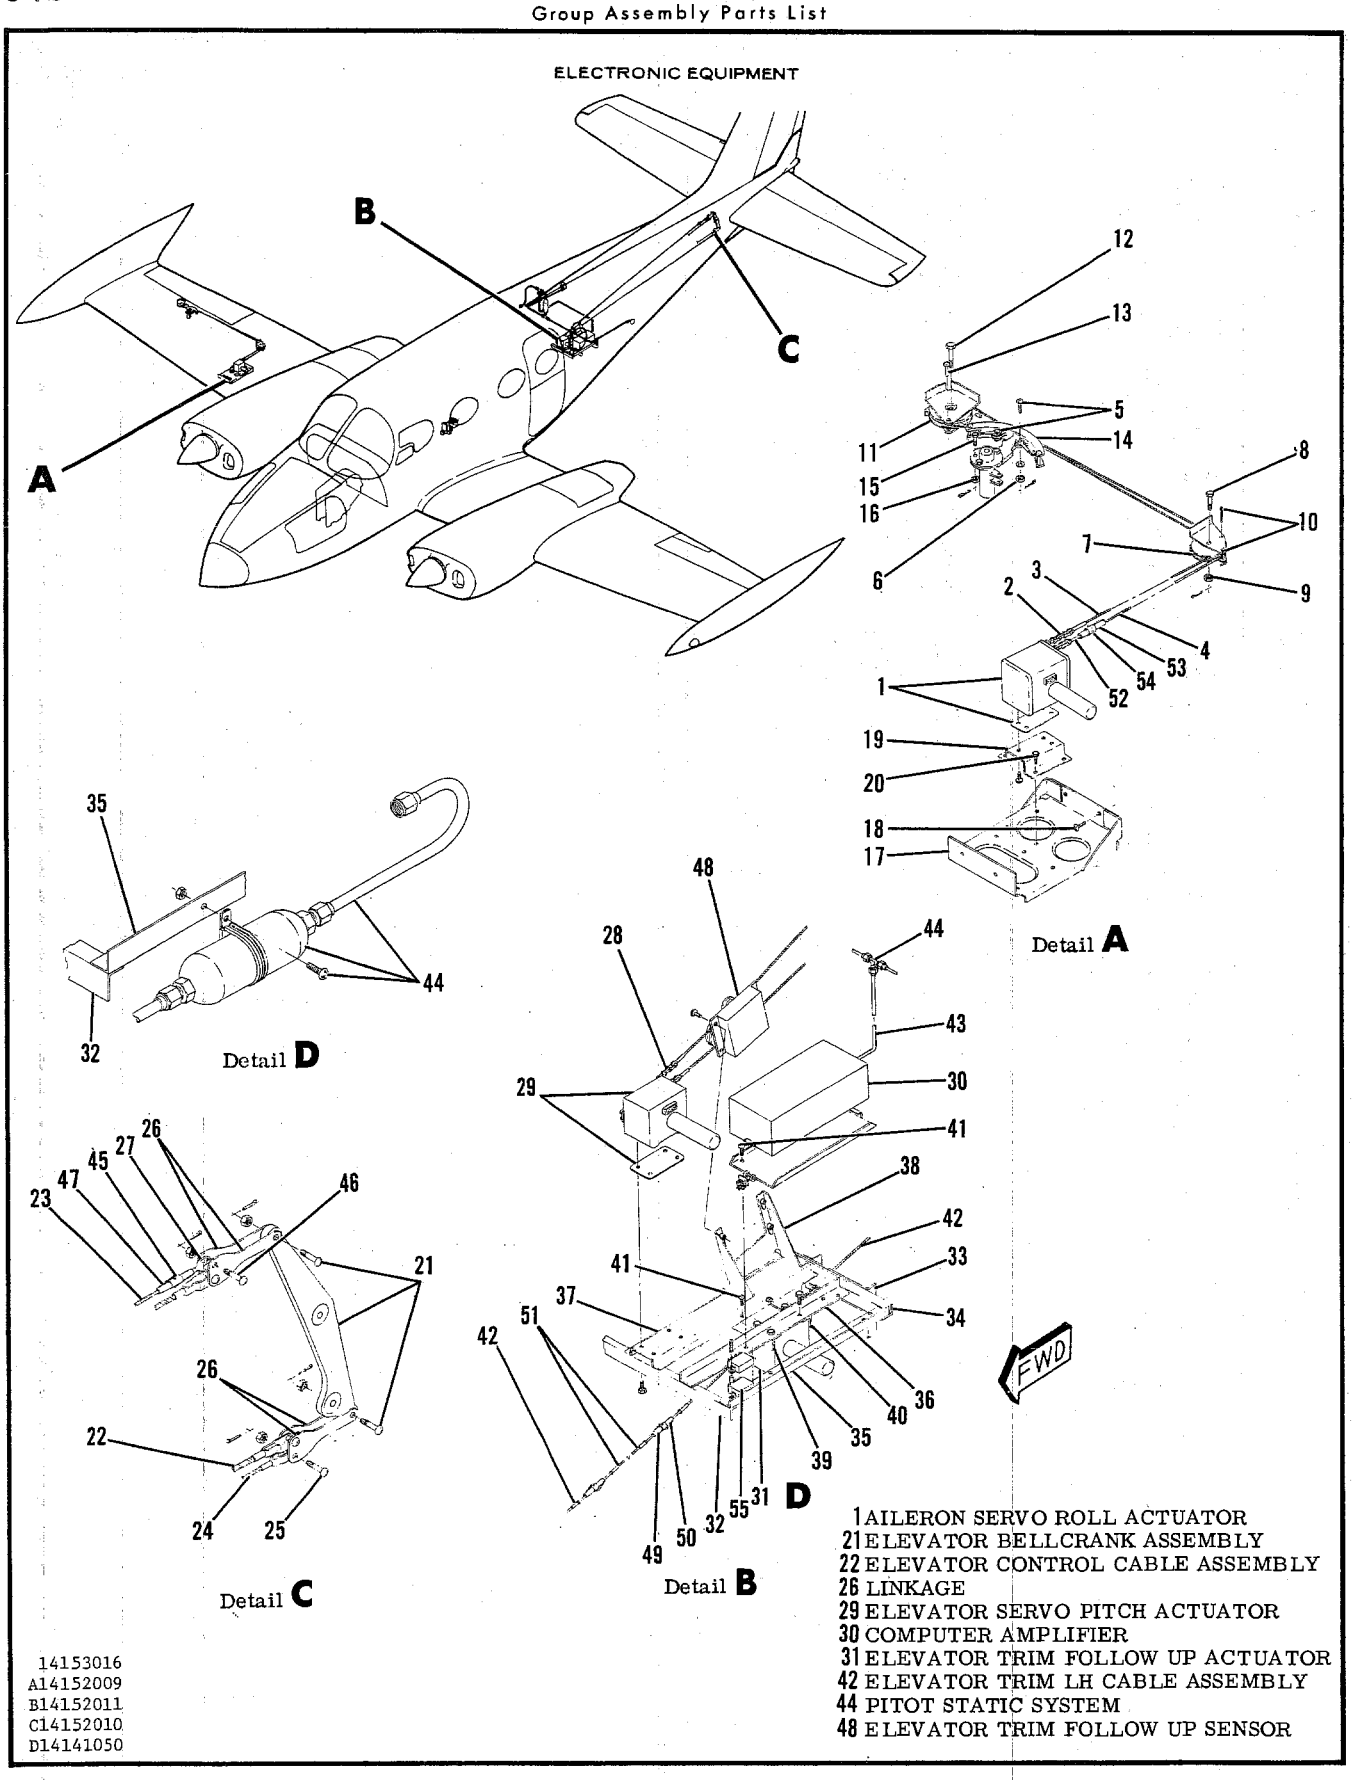

Figure 157. Cessna 400A Actuator Supports and Cables Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
157 -		CESSNA 400A ACTUATOR SUPPORTS AND CABLES INSTALLATION	NP	F
-1	SEE FIG 156	. ACTUATOR-AILERON SERVO ROLL	1	
-2	0860175-7	. CHAIN WITH MASTER LINK ON BOTH ENDS	1	
-3	9756035-15	. CABLE ASSY-UPR AILERON	1	
-4	9756035-17	. CABLE ASSY-LWR AILERON	1	
		ATTACHING PARTS		
-5	AN23-10	. BOLT	1	
-6	MS17826-3	. NUT	1	
	AN960-10	. WASHER	AR	
	MS24665-134	. PIN-COTTER	1	
		---*---		
-7	S378-2	. PULLEY	2	
		ATTACHING PARTS		
-8	AN3-10	. BOLT	1	
-9	AN310-3	. NUT	1	
	MS24665-134	. PIN-COTTER	1	
		---*---		
-10	MS24665-285	. PIN-COTTER CABLE GUARD	2	
-11	S378-4	. PULLEY	1	
		ATTACHING PARTS		
-12	AN4H10A	. BOLT	1	
		---*---		
-13	NAS427K12	. PIN-CABLE GUARD	1	
-14	5025000-5	. BELLCRANK ASSY-AILERON SERVO	1	
		ATTACHING PARTS		
-15	AN3-6	. BOLT	4	
-16	AN320-3	. NUT	4	
	MS24665-134	. PIN-COTTER	4	
		---*---		
-17	5300913-12	. PAN ASSY-AILERON ACTUATOR SUPPORT	1	
		ATTACHING PARTS		
-18	MS35206-245	. SCREW	4	
		---*---		
-19	9756036-23	. SUPPORT-AILERON ACTUATOR	1	
		ATTACHING PARTS		
-20	AN3H5A	. BOLT	4	
		---*---		
-21	SEE FIG 85	. BELLCRANK ASSY-ELEVATOR	REF	
-22	SEE FIG 85	. CABLE ASSY-ELEVATOR CONTROL	REF	
-23	9756035-11	. CABLE ASSY-ELEVATOR CONTROL UPR	1	
-24	9756035-13	. CABLE ASSY-ELEVATOR CONTROL LWR	1	
		ATTACHING PARTS		
-25	AN23-13	. BOLT	2	
	MS17826-3	. NUT	2	
	MS24665-132	. PIN-COTTER	2	
		---*---		
-26	SEE FIG 85	. LINKAGE	REF	
-27	MS21252-2LS	. CLEVIS END	1	D
	MS21254-2LS	. EYE END	1	E
-28	0860175-7	. CHAIN-CABLE ATTACH MASTER LINK ON BOTH ENDS	1	
-29	SEE FIG 156	. ACTUATOR-ELEVATOR SERVO PITCH	REF	
-30	SEE FIG 156	. COMPUTER AMPLIFIER	REF	
-31	SEE FIG 156	. ACTUATOR-ELEVATOR TRIM FOLLOW UP	REF	
-32	9756036-6	. ANGLE-FWD SUPPORT	1	
-33	9756036-3	. SUPPORT ASSY-AFT	1	
-34	9756036-5	. ANGLE-AFT	1	
-35	9756036-13	. ANGLE ASSY-OUTBD	1	
-36	9756036-11	. ANGLE ASSY-INBD	1	
	9756036-7	. SUPPORT ASSY-ELEVATOR ACTUATOR & SENSOR	1	
-37	9756036-8	. . SUPPORT-ELEVATOR ACTUATOR	1	
-38	9756036-9	. . SUPPORT ASSY-TRIM SENSOR	1	
-39	9756036-15	. ANGLE ASSY-TRIM ACTUATOR FWD	1	
-40	9756036-17	. ANGLE ASSY-TRIM ACTUATOR AFT	1	
		ATTACHING PARTS		
-41	MS27039-0808	. SCREW	2	
		---*---		
-42	SEE FIG 89	. CABLE ASSY-ELEVATOR TRIM LH	1	
-43	9756035-21	. LINE ASSY-PITOT STATIC SUMP TO COMPUTER	1	A
-44	SEE FIG 124	. PITOT STATIC SYSTEM	REF	
-45	MS21251B2S	. TURNBUCKLE	1	
-46	AN23-13	. BOLT	1	
	MS17826-3	. NUT	1	
	MS24665-132	. PIN-COTTER	1	
-47	MS21256-1	. CLIP-TURNBUCKLE LOCK	2	
-48	SEE FIGURE 156	. SENSOR-ELEVATOR TRIM FOLLOW UP	REF	
-49	MS21251B2S	. TURNBUCKLE	1	
-50	MS21256-1	. CLIP	2	
-51	9756035-25	. CABLE ASSEMBLY-SPLICE	1	
-52	CM2662-25LH	. TERMINAL	1	
-53	MS21251B2S	. TURNBUCKLE	1	
-54	MS21256-1	. CLIP-TURNBUCKLE LOCK	2	
-55	FC215-136	. RELAY SD	2	B
	IN5061	. DIODE	2	B
		ATTACHING PARTS		
	NAS43D0-1-48	. SPACER	2	
	MS35206-235	. SCREW	2	
		---*---		

A---340-0001 THRU 340-0051 EXCEPT AIRCRAFT
MODIFIED BY SK421-46
B---340-0001 THRU 340-0500
C---340-0501 TO 340A0001
D---340-0001 THRU 340-0357
E---340-0358 TO 340A0001
F---340-0001 TO 340A0001

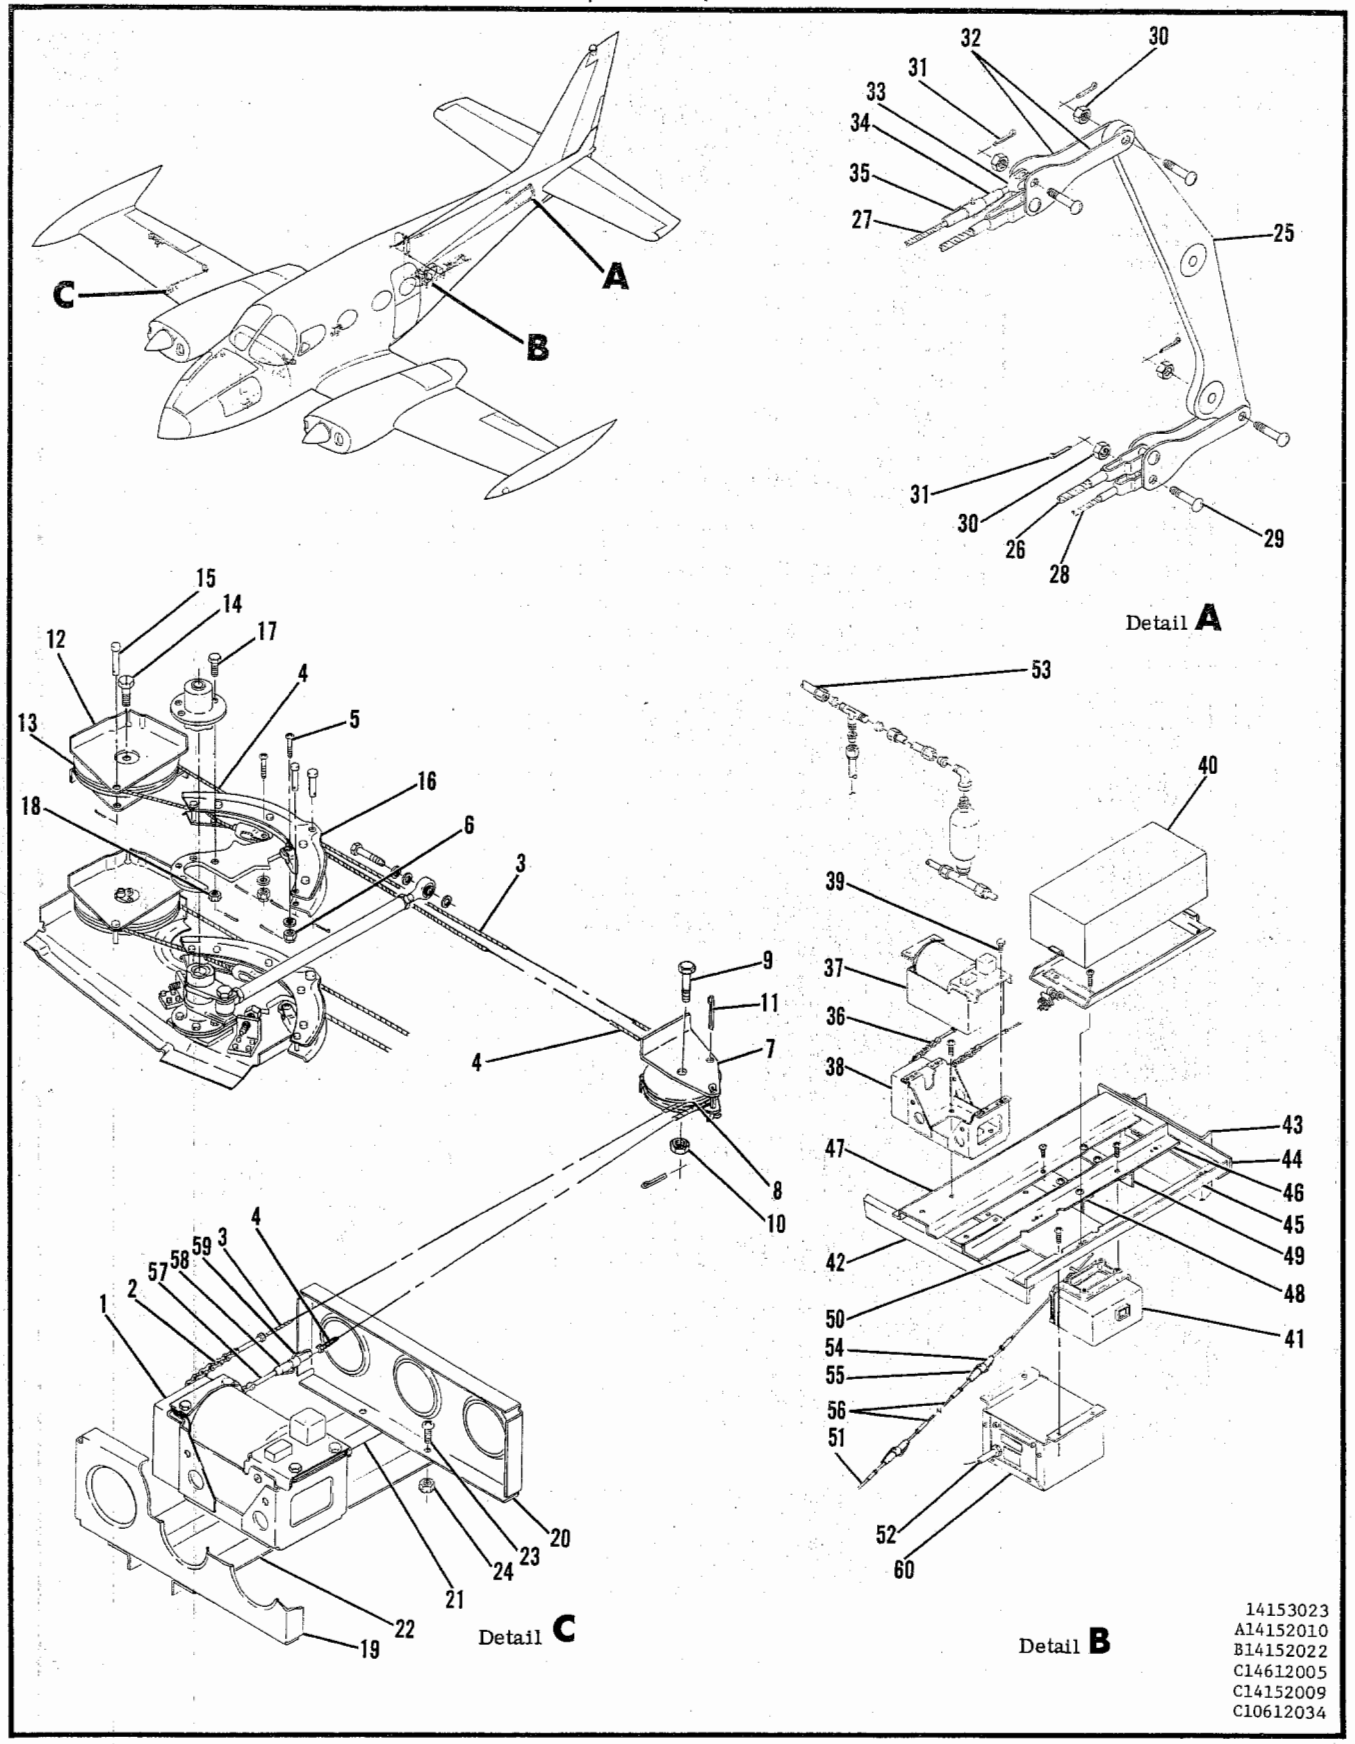

Figure 157A. Cessna 400B Actuator Supports and Cable Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
157A-		CESSNA 400B ACTUATOR SUPPORTS AND CABLE INSTALLATION	NP	A
-1	SEE FIG 156A	. ACTUATOR-AILERON SERVO ROLL	REF	
-2	0860175-7	. CHAIN WITH MASTER LINK ON BOTH ENDS	1	
-3	5000008-106	. CABLE ASSY-UPR AILERON	1	
-4	5000008-105	. CABLE ASSY-LWR AILERON	1	
		ATTACHING PARTS		
-5	AN23-10	. BOLT	2	
-6	AN320-3	. NUT	2	
	AN960-10	. WASHER	AR	
	MS24665-134	. PIN-COTTER	2	
		---*---		
-7	0814000-22	. BRACKET	1	
	0814000-21	. BRACKET	1	
-8	S378-2	. PULLEY	2	
		ATTACHING PARTS		
-9	AN3-10	. BOLT	1	
-10	AN310-3	. NUT	1	
	MS24665-134	. PIN-COTTER	1	
		---*---		
-11	MS24665-285	. PIN-COTTER CABLE GUARD	2	
-12	5025013-3	. BRACKET-PULLEY	1	
	5025013-6	. BRACKET-PULLEY	1	
-13	S378-4	. PULLEY	1	
		ATTACHING PARTS		
-14	AN4H10A	. BOLT	1	
		---*---		
-15	NAS427K12	. PIN-CABLE GUARD	1	
-16	5025000-5	. BELLCRANK ASSY	1	
		ATTACHING PARTS		
-17	AN3-6	. BOLT	4	
-18	AN320-3	. NUT	4	
	MS24665-134	. PIN-COTTER	4	
		---*---		
-19	0822005-59	. SUPPORT ASSY	1	
-20	0822005-25	. SUPPORT ASSY	1	
-21	5614583-2	. ANGLE ASSY	1	
-22	5614583-3	. ANGLE ASSY	1	
		ATTACHING PARTS		
-23	MS27039-1-07	. SCREW	4	
-24	MS21083N3	. NUT	4	
		---*---		
-25	SEE FIG 85	. BELLCRANK ASSY-ELEVATOR	REF	
-26	SEE FIG 85	. CABLE ASSY-ELEVATOR CONTROL	REF	
-27	5315091-5	. CABLE ASSY-ELEVATOR CONTROL UPR	1	
-28	5315091-6	. CABLE ASSY-ELEVATOR CONTROL LWR	1	
		ATTACHING PARTS		
-29	AN23-13	. BOLT	2	
-30	MS17826-3	. NUT	2	
-31	MS24665-132	. PIN-COTTER	2	
	AN960-10	. WASHER	8	
		---*---		
-32	SEE FIG 85	. LINKAGE	REF	
-33	MS21254-2LS	. EYE END	1	
-34	MS21251B25	. TURNBUCKLE	1	
-35	MS21256-1	. CLIP-TURNBUCKLE LOCK	2	
-36	0860175-7	. CHAIN-CABLE ATTACH MASTER LINK ON BOTH ENDS	1	
-37	SEE FIG 156A	. ACTUATOR-ELEVATOR SERVO PITCH	REF	
-38	44415-3030	. MOUNT	ARC	1
		ATTACHING PARTS		
-39	MS35206-260	. SCREW	4	
		---*---		
-40	SEE FIG 156A	. COMPUTER	REF	
-41	SEE FIG 90	. ACTUATOR-ELEVATOR TRIM	REF	
-42	9756036-23	. ANGLE-FWD SUPPORT	1	
-43	9756036-3	. SUPPORT ASSY-AFT	1	
-44	9756036-5	. ANGLE-AFT	1	
-45	9756036-26	. ANGLE ASSY-OUTBD	1	
-46	9756036-25	. ANGLE ASSY-INBD	1	
-47	9756036-24	. SUPPORT ASSY-ELEVATOR ACTUATOR	1	
-48	9756036-30	. ANGLE ASSY-TRIM ACTUATOR FWD	1	
-49	9756036-31	. ANGLE ASSY-TRIM ACTUATOR AFT	1	
-50	9756036-36	. PANEL ASSY-SENSOR MOUNT	1	
-51	SEE FIG 89	. CABLE ASSY-ELEVATOR TRIM LH	REF	
-52	5315091-8	. LINE ASSY-PITOT STATIC SUMP TO ALTITUDE SENSOR	1	
-53	SEE FIG 124	. PITOT STATIC SYSTEM	REF	
-54	MS21251B25	. TURNBUCKLE	1	
-55	MS21256-1	. CLIP	2	
-56	5315091-9	. CABLE ASSY-SPLICE	1	
-57	CM2662-25H	. TERMINAL	1	
-58	MS21251B3S	. TURNBUCKLE	1	
-59	MS21256-1	. CLIP-TURNBUCKLE LOCK		
-60	SEE FIG 156A	. SENSOR-ALTITUDE	REF	
	AS368	. POTENTIOMETER LOCATED IN RH PEDESTAL COVER PLATE	CLR	4
		A---340A0001 & ON		

AUTOPILOT

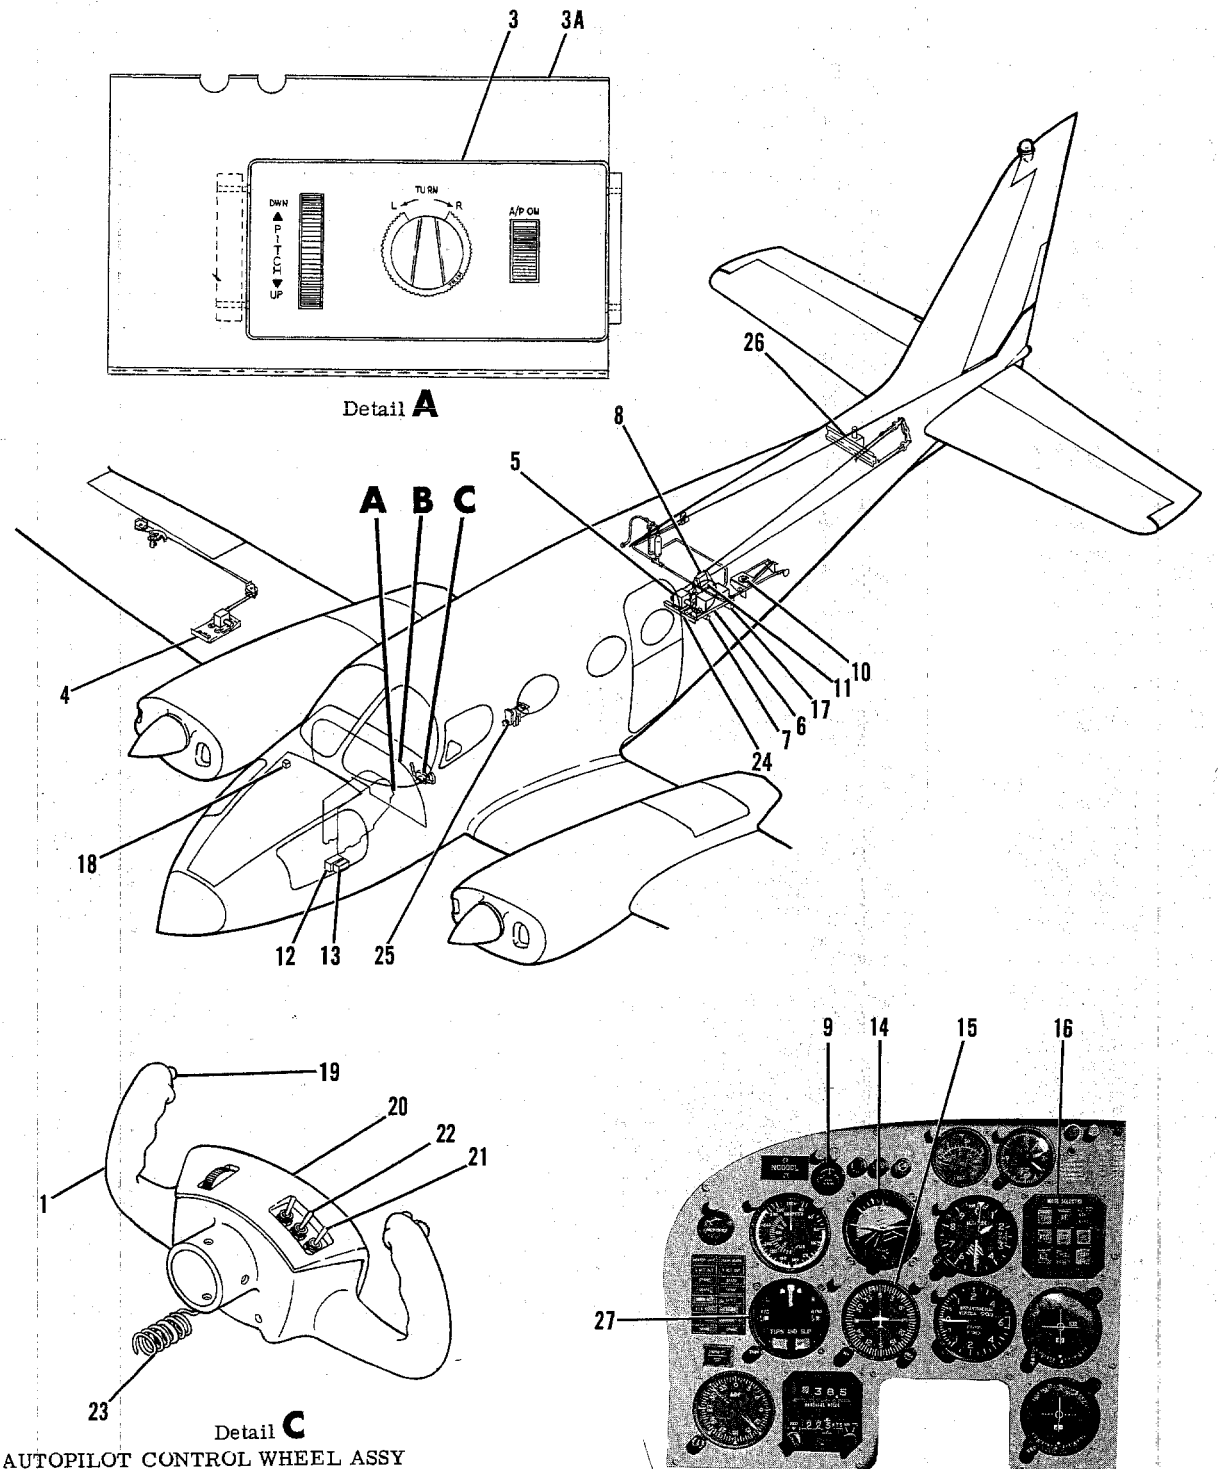

1 AUTOPILOT CONTROL WHEEL ASSY
2 AUTOPILOT CHECKLIST
3A CONTROLLER AMPLIFIER COVER ASSY
10 FLUX DETECTOR
24 NAV-O-MATIC 400A SUPPORTS AND CABLES INSTL
25 FLAP ACTUATOR AND REDUCTION UNIT
26 YAW DAMPER INSTL
27 GYRO-COMPUTER-YAW-DAMPER

A14141048
14153016
C14151028

Figure 158. Integrated Flight Control System

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
158 -			INTEGRATED FLIGHT CONTROL SYSTEM	NP	
-1	SEE FIG 86		. CONTROL WHEEL ASSY AUTOPILOT	REF	
-2	SEE FIG 46		. CHECKLIST ASSY	REF	
-3	41090-1028	*	. CONTROLLER ASSY TYPE C531A 300 & 400 IFCS	ARC	1
	41090-1128	*	. CONTROLLER ASSY USE WITH 300 & 400 IFCS & YAW DAMPER	ARC	1 L
	41780-0000	*	. CONTROLLER ASSY TYPE C830FD 800 IFCS	ARC	1 G
	41780-0028	*	. CONTROLLER ASSY TYPE C830FD 800 IFCS	ARC	1 F
			ATTACHING PARTS		
	MS24693S28		. SCREW		2
	MS24693S25		. SCREW		2
	5017139-4		. BLOCK		1
			---*---		
-3A	SEE FIG 20		. COVER ASSY-CONTROLLER AMPLIFIER	REF	
-4	35070-0228	*	. ACTUATOR ASSY-AILERON SERVO ROLL TYPE PA500A	ARC	1
			ATTACHING PARTS		
	AN3-5A		. SCREW		4
	9756060-13		. PLATE		1 H
	AN960-10		. WASHER		4 H
	MS35333-39		. WASHER-LOCK		4
			---*---		
-5	35070-0328	*	. ACTUATOR ASSY-ELEVATOR SERVO PITCH TYPE PA500A	ARC	1 J
	35070-0428	*	. ACTUATOR ASSY-ELEVATOR SERVO PITCH	ARC	1 K
			ATTACHING PARTS		
	AN3-5A		. SCREW		4
	9756060-13		. PLATE		1 H
	AN960-10		. WASHER		4 H
	MS35333-39		. WASHER-LOCK		4
			---*---		
-6	41120-1028	*	. COMPUTER ASSY-AMPLIFIER TYPE CA530FD	ARC	1 E
	41120-1328		. COMPUTER ASSY-AMPLIFIER TYPE CA530FD	ARC	1 F
	37980-0000		. MOUNT-COMPUTER	ARC	1
			ATTACHING PARTS		
	MS35206-228		. SCREW		4
			---*---		
-7	38100-0128	*	. ACTUATOR-ELEVATOR TRIM FOLLOW UP TYPE PA520A	ARC	1
			ATTACHING PARTS		
	AN3-5A		. BOLT		4
	9756060-13		. PLATE		1 H
	AN960-10		. WASHER		4 H
	MS35333-39		. WASHER-LOCK		4
			---*---		
-8	37580-0028	*	. SENSOR-ELEVATOR TRIM FOLLOW UP TYPE DT520A	ARC	1
			ATTCHING PARTS		
	MS35206-246		. SCREW		4
			---*---		
-9	4004623-501	*	. METER-SLAVING	BCAD	1 C
	40910-0000	*	. METER-SLAVING	ARC	1 D
-10	SEE FIG 160		. FLUX DETECTOR		1
-11	4000202-8501	*	. CORRECTOR NORTH, SOUTH-EAST & WEST	BCAD	1 C
-12	4000099-8503	*	. GYRO-REMOTE TYPE SG837B	BCAD	1 C
	4000099-8504	*	. GYRO-REMOTE TYPE SG837B ALT FOR 4000099-8503	BCAD	1 C
			ATTACHING PARTS		
	MS35206-245		. SCREW		4
			---*---		
-13	4000289-8501	*	. INVERTER-POWER SUPPLY TYPE PS815A FSO 4000289-8503	BCAD	1 A
	4000289-8503	*	. INVERTER-POWER SUPPLY	BCAD	1 B
	29100-0000	*	. DYNAVERTER 800IFCS & HSI	ARC	1 D
			ATTACHING PARTS		
	MS35206-245		. SCREW		4
			---*---		
-14	41100-0008	*	. INDICATOR-ATTITUDE HORIZON TYPE G519FD	ARC	1 E
	41100-0018	*	. INDICATOR-ATTITUDE HORIZON TYPE G519FD	ARC	1 F
			ATTACHING PARTS		
	CM3559-6-16G		. SCREW		4
			---*---		
-15	400172-8503	*	. INDICATOR-HORIZONTAL SITUATION TYPE IN831A	BCAD	1 C
	073-0044-00		. CLAMP-INDICATOR	KG	1 C
	CM3559-6-16G		. SCREW		4 C
	41600-0000	*	. INDICATOR-HORIZONTAL SITUATION TYPE IN830A 800IFCS	ARC	1 D
	64311		. CLAMP	MAIV	1 D
	40840-0105	*	. GYRO-DIRECTIONAL SLAVED TYPE G502B 300IFCS	ARC	1 E
	40840-0205	*	. GYRO-DIRECTIONAL SLAVED TYPE G502C 400IFCS	ARC	1 F
			ATTACHING PARTS		
	CM3559-6-16C		. SCREW		3 F
			---*---		
-16	41110-1028	*	. SELECTOR-MODE TYPE S530A	ARC	1 C
	41110-0001	*	. SELECTOR-MODE TYPE S530A 300IFCS	ARC	1 G
	41110-0000	*	. SELECTOR-MODE TYPE S530A 400/800IFCS	ARC	1 G
	41110-0004	*	. SELECTOR-MODE TYPE S530A 300IFCS	ARC	1 F
	41110-0003	*	. SELECTOR-MODE TYPE S530A 400/800IFCS	ARC	1 F
	64311		. CLAMP	MAIV	1
-17	41750-0201	*	. GYRO-ADF DIRECTIONAL TYPE IG830A 800IFCS & HSI	ARC	1 D
			ATTACHING PARTS		
	CM3559-6-16G		. SCREW		3
			---*---		
-18	CM3525-2		. RELAY		1
-19	913		. SWITCH-PITCH SYNCHRONIZER	SWIN	1

CONTINUED

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
158 -20	9754034-3	PAD ASSEMBLY-CONTROL WHEEL	1	
-21	T20057	SWITCH-GO AROUND	1	
-22	T20057	SWITCH-DISENGAGE AUTOPILOT CSDC	1	
	T20167	SWITCH-DISENGAGE YAW DAMPER CSDC	1	D
-23	5618104-2	CORD ASSEMBLY	1	J
	5618104-4	CORD ASSEMBLY	1	K
-24	SEE FIG 157	SUPPORT & CABLE INSTL-NAV-O-MATIC 400A	1	
-25	SEE FIG 93	ACTUATOR & REDUCTION UNIT-FLAP	1	
-26	SEE FIG 159	YAW DAMPER INSTL 800IFCS	1	
-27	SEE FIG 64	COMPUTER-TURN & BANK 800 IFCS	REF	

* SEE CESSNA CRAFTED INTEGRATED FLIGHT CONTROL SERVICE/PARTS MANUAL

A---340-0001 THRU 340-0039
B---340-0040 THRU 340-0150
C---340-0001 THRU 340-0150
D---340-0151 & ON
E---340-0001 THRU 340-0300
F---340-0301 & ON
G---340-0151 THRU 340-0300
H---340-0231 & ON
J---340-0001 THRU 340-0500
L---340A0001 & ON

AUTOPILOT

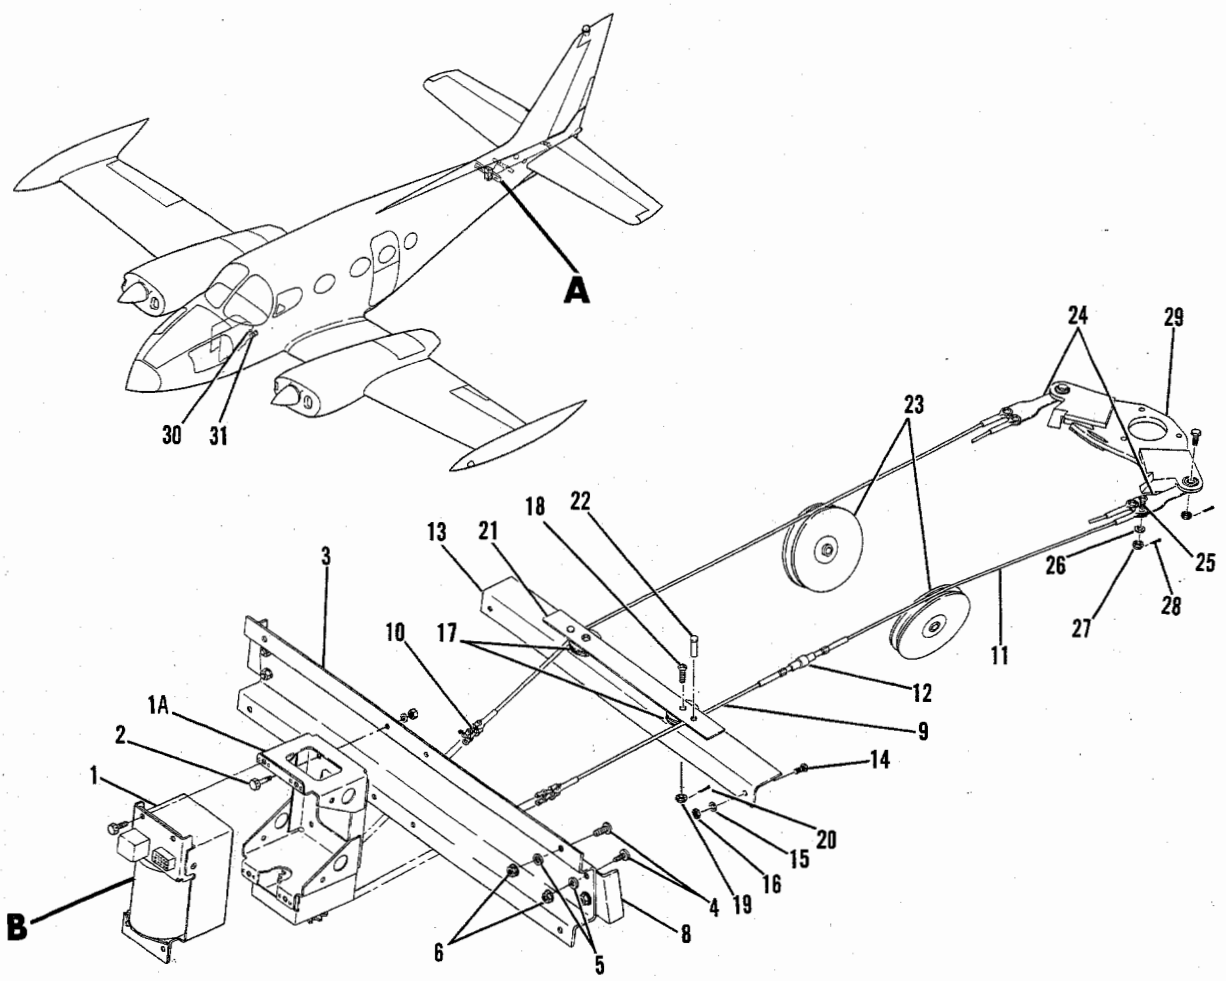

Detail **A**

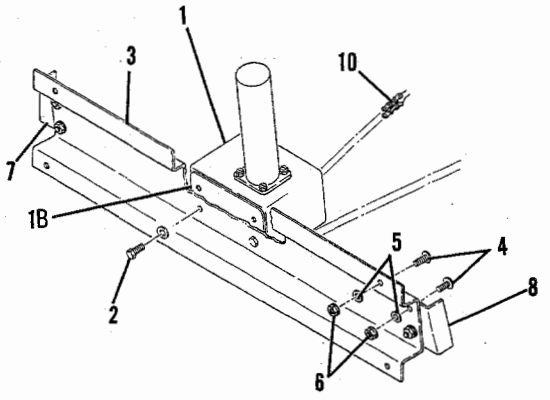

Detail **B**
CODE D

29 RUDDER STEERING BELLCRANK
30 YAW SWITCH
31 TURN & BANK COMPUTER

14613004
B14613001
A14613003

Figure 159. Yaw Damper Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
159 -		YAW DAMPER INSTALLATION	NP	A
-1	35070-0628	. ACTUATOR ARC	1	D
	42964-4000	. ACTUATOR MOTOR ASSY ARC	1	H
	43989-4008	. ACTUATOR MOTOR ASSY ARC	1	J
-1A	44415-4080	. MOUNT ARC	1	E
-1B	9756060-13	. PLATE-SUPPORT	1	B
		ATTACHING PARTS		
-2	AN3H5A	. BOLT	4	D
	AN3H-4A	. BOLT	4	E
	AN960-10	. WASHER	4	
	MS21083N3	. NUT	4	E
		---*---		
-3	9756060-2	. SUPPORT-ACTUATOR	1	D
	5312046-1	. SUPPORT-ACTUATOR	1	E
		ATTACHING PARTS		
-4	MS27039-1-06	. SCREW	8	D
	MS27039-1-06	. SCREW	4	E
-5	AN960-10L	. WASHER	8	D
	AN960-10L	. WASHER	4	E
-6	MS21042L3	. NUT	8	D
	MS21042L3	. NUT	4	E
		---*---		
-7	9756060-10	. BRACKET-RH	1	D
-8	9756060-11	. BRACKET-LH	1	D
-9	9756060-7	. CABLE & CHAIN ASSY	1	D
	9756060-18	. CABLE & CHAIN ASSY	1	E
-10	5000008-56	. CHAIN	1	
-11	9756060-5	. CABLE ASSY	1	
-12	MS21251B2S	. BARREL	1	
	MS21256-1	. CLIP	1	
-13	9756060-3	. SUPPORT-PULLEY	1	
		ATTACHING PARTS		
-14	MS27039-1-06	. SCREW	2	
-15	AN960-10L	. WASHER	2	
-16	MS21042L3	. NUT	2	
		---*---		
-17	S378-1	. PULLEY	2	
		ATTACHING PARTS		
-18	MS27039-1-11	. SCREW	1	
-19	AN320-3	. NUT	1	
-20	MS24665-134	. PIN-COTTER	1	
		---*---		
-21	9756060-4	. COVER-PULLEY	1	
-22	NAS427K8	. PIN-GUARD	2	
-23	S378-4	. PULLEY	2	C
-24	9756036-21	. LINKAGE	2	
		ATTACHING PARTS		
-25	AN23-10	. BOLT	2	F
	AN23-12	. BOLT	2	G
-26	AN960-10L	. WASHER	3	
	AN960-10	. WASHER	1	G
-27	MS17826-3	. NUT	2	
-28	MS24665-134	. PIN-COTTER	2	
		---*---		
-29	SEE FIG 82	. BELLCRANK-RUDDER STEERING	REF	
-30	SEE FIG 62	. SWITCH-YAW	REF	
-31	SEE FIG 64	. COMPUTER-TURN & BANK	REF	

A---340-0151 & ON
B---340-0231 THRU 340-0500 AND AIRCRAFT MODIFIED BY SK340-8
C---340-0151 THRU 340-0232
D---340-0151 THRU 340-0500
E---340-0501 & ON
F---340-0151 THRU 340-0357
G---340-0358 & ON
H---340-0501 TO 340A0001
J---340A0001 & ON

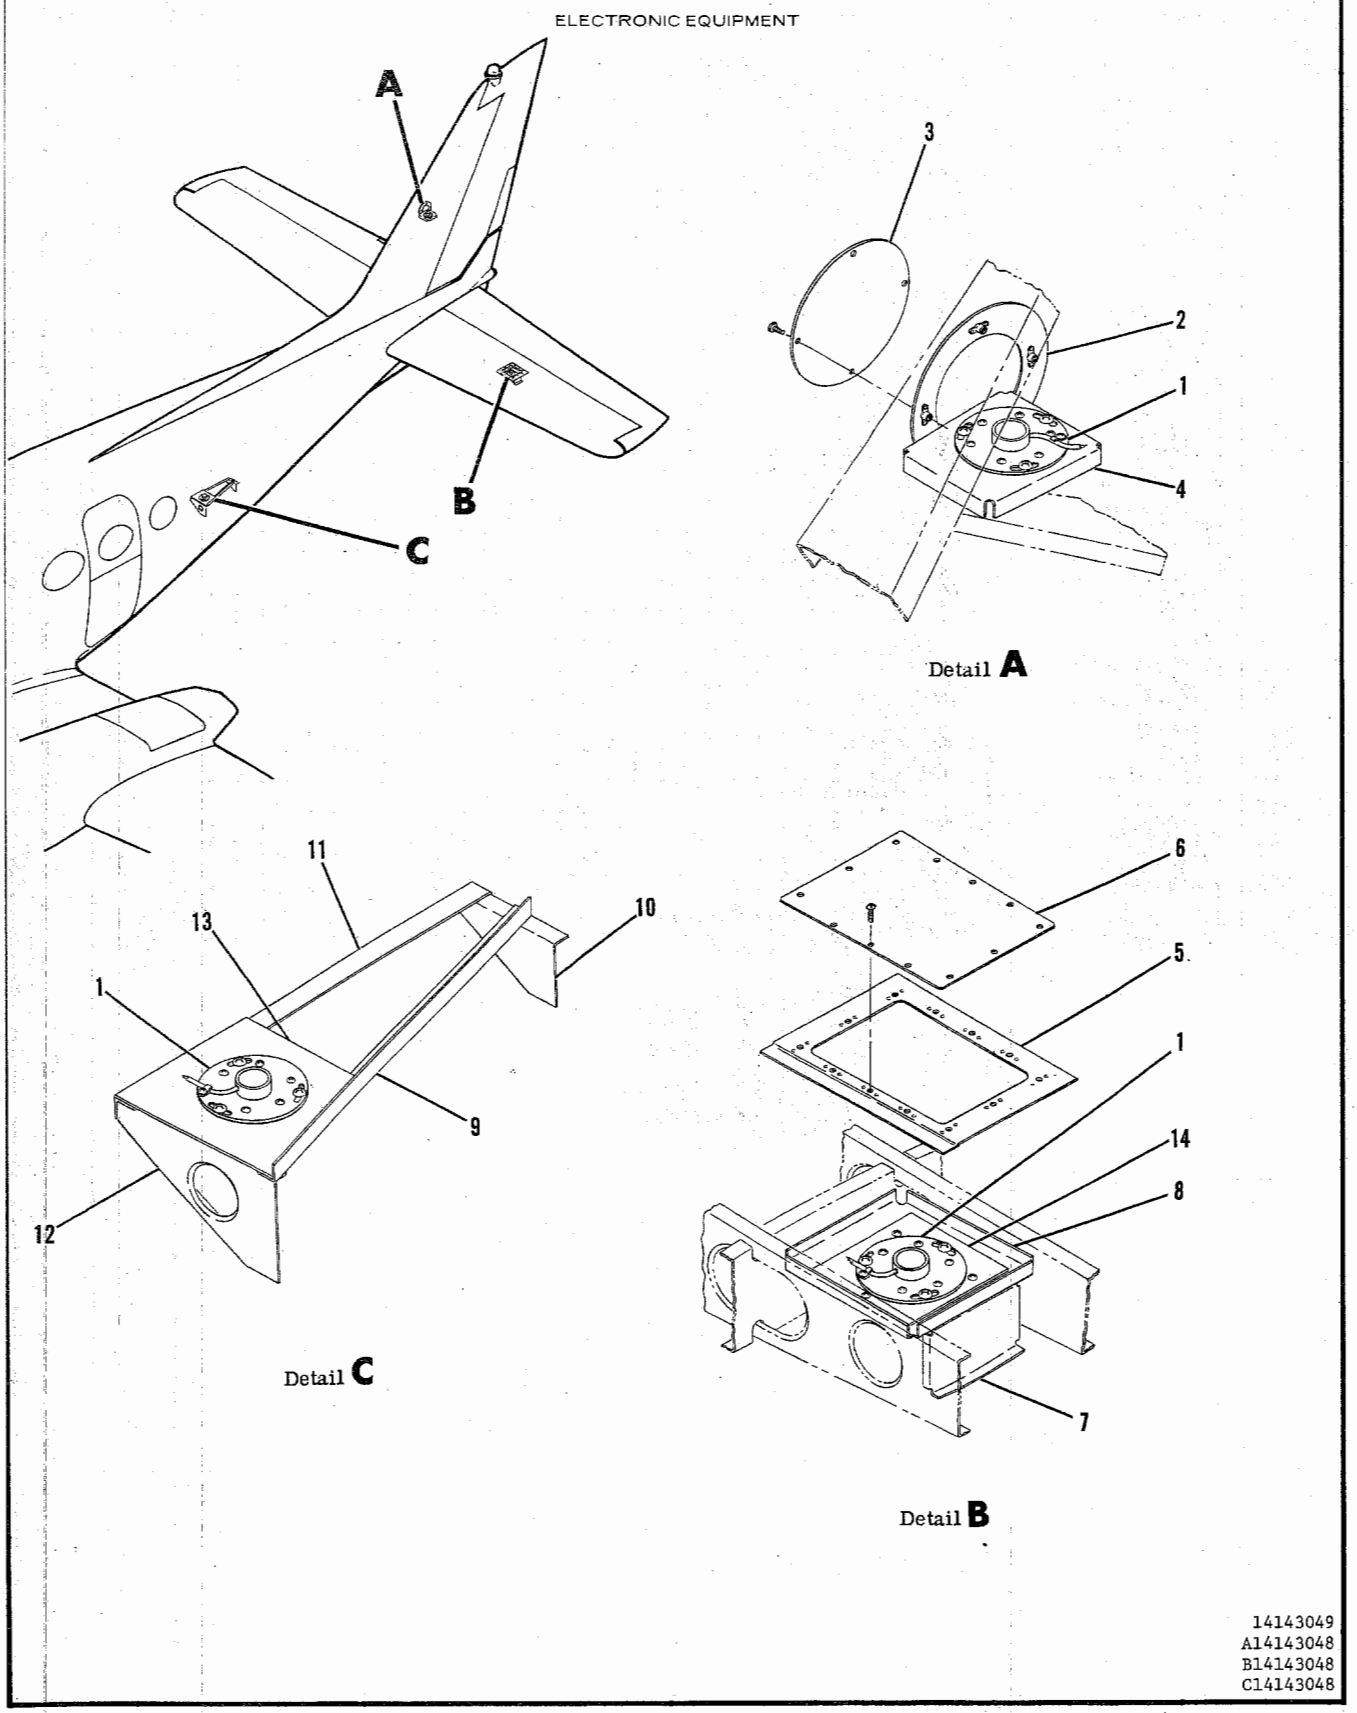

Figure 160. Flux Detector Installation

FIGURE AND INDEX NO.	PART NUMBER		1 2 3 4 5 6 7 DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
160 -			FLUX DETECTOR INSTALLATION	NP	
-1	400191-8501	*	. DETECTOR-FLUX BCAD	1	A
	41370-0000	*	. DETECTOR-FLUX ARC	1	C
	254-11		. DETECTOR-FLUX AIM	1	B
	44770-0000	*	. DETECTOR-FLUX ARC	1	D
			ATTACHING PARTS		
	MS35214-15		. SCREW	3	
	MS21083B04		. NUT	3	
			---*---		
-2	0822380-22		. DOUBLER	1	
-3	0822380-26		. ACCESS-DOOR	1	
			ATTACHING PARTS		
	MS24693B271		. SCREW	4	
			---*---		
-4	9756067-2		. SUPPORT	1	
			ATTACHING PARTS		
	MS24693-271		. SCREW	2	
			---*---		
-5	9717005-5		. DOUBLER	1	
-6	9717005-7		. COVER	1	
	9754008-20		. LABEL	1	D
			ATTACHING PARTS		
	MS51957-6		. SCREW	12	
			---*---		
-7	9717005-4		. BRACE	1	
-8	9717005-2		. SHELF ASSEMBLY	1	
-8A	9717005-8		. PLATE USED WITH ARC DETECTOR	1	
-9	9717004-13		. ANGLE-OUTBOARD LH INSTL	1	
	9717004-14		. ANGLE-OUTBOARD RH INSTL	1	
-10	9717004-11		. SUPPORT-AFT LH INSTL	1	
	9717004-12		. SUPPORT-AFT RH INSTL	1	
-11	9717004-15		. ANGLE-INBOARD	1	
-12	9717004-9		. SUPPORT-FWD LH INSTL	1	
	9717004-10		. SUPPORT-FWD RH INSTL	1	
-13	9717004-16		. SHELF LH OR RH INSTL	1	

* SEE CESSNA CRAFTED INTEGRATED FLIGHT CONTROL AND/OR 400A NAV-O-MATIC SERVICE/PARTS MANUAL

A---340-0001 THRU 340-0150
B---340-0151 & ON
C---340-0151 TO 340A0001
D---340A0001 & ON

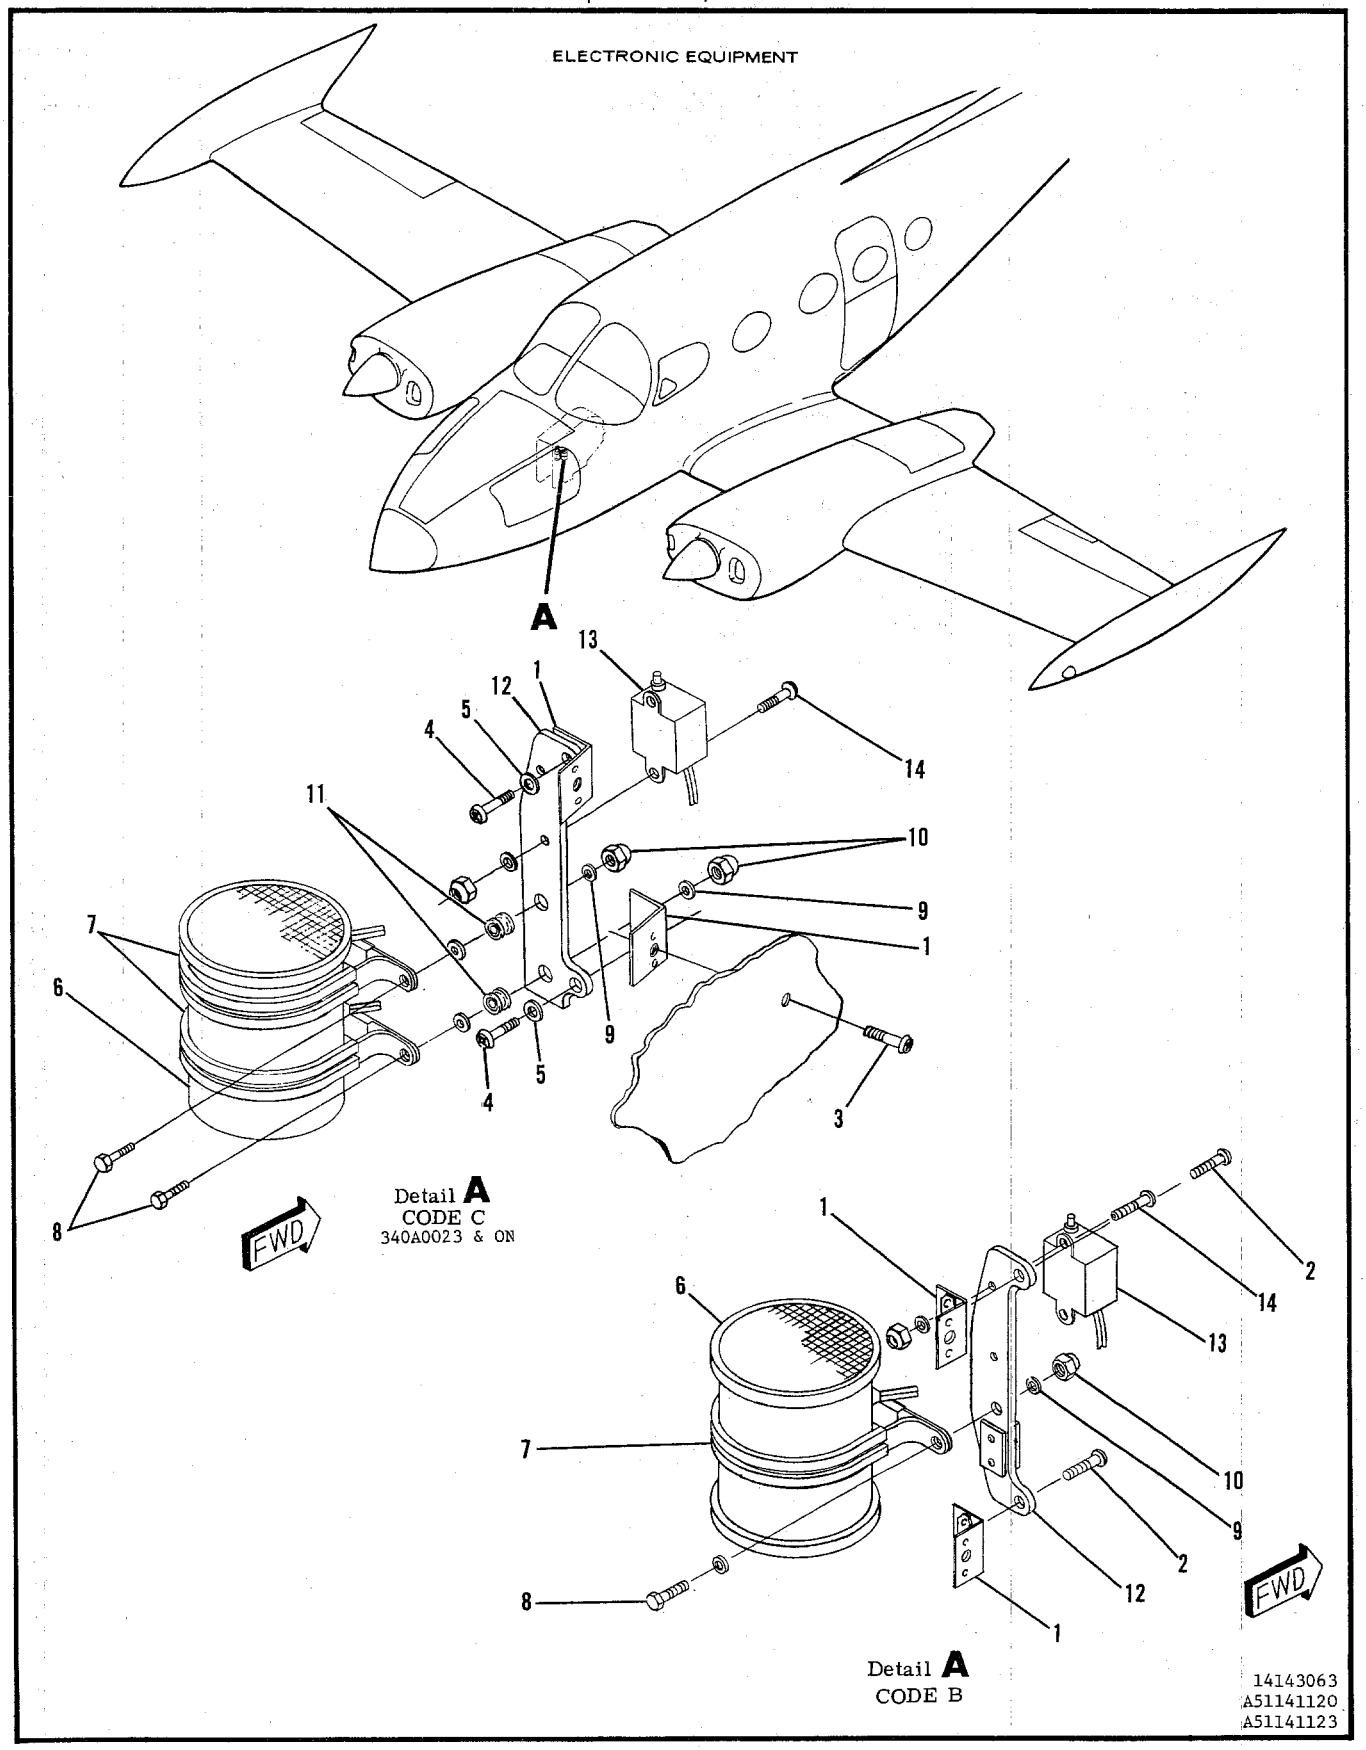

Figure 161. Avionics Cooling Blower Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
161 -		AVIONICS COOLING BLOWER INSTALLATION	NP	A
-1	0861356-6	. BRACKET ASSY	2	BC
	9756080-11	. BRACKET ASSY	2	C
		ATTACHING PARTS		
-2	MS27039B0806	. SCREW	2	BC
-3	MS27039-0806	. SCREW AESP	1	C
-4	MS27039-1-06	. SCREW	1	C
-5	AN960PD10L	. WASHER	1	C
		---*---		
	9756080-6	. BLOWER ASSY	1	
-6	5901-2	. . BLOWER AESP	1	
-7	MS21919DG48	. . CLAMP CLD	1	B
	MS21919DG48	. . CLAMP GLI	2	BC
		ATTACHING PARTS		
-8	AN3-4A	. . BOLT	2	B
	AN3-6A	. . BOLT	2	C
	9756080-15	. . SPACER	2	CBC
-9	MS35333-39	. . WASHER		
	S1450-4A11-063	. . WASHER	2	BC
-10	MS21044N3	. . NUT	1	
		---*---		
-11	J3112-8-3	. . MOUNT LO	2	C
-12	9756080-7	. . BRACKET ASSY	1	CBC
	5518130-6	. . STRAP	1	
-13	NF10411-1	. . FILTER CLD	1	
	A40D717	. . FILTER ALT FOR NF10411-1 GLI	1	
		ATTACHING PARTS		
-14	MS35214-14	. . SCREW	2	
	MS35338-40	. . WASHER	2	
	MS21044N04	. . NUT	2	
		---*---		

A---340-0501 & ON
B---3400501 THRU 340A0022
C---340A0023 & ON

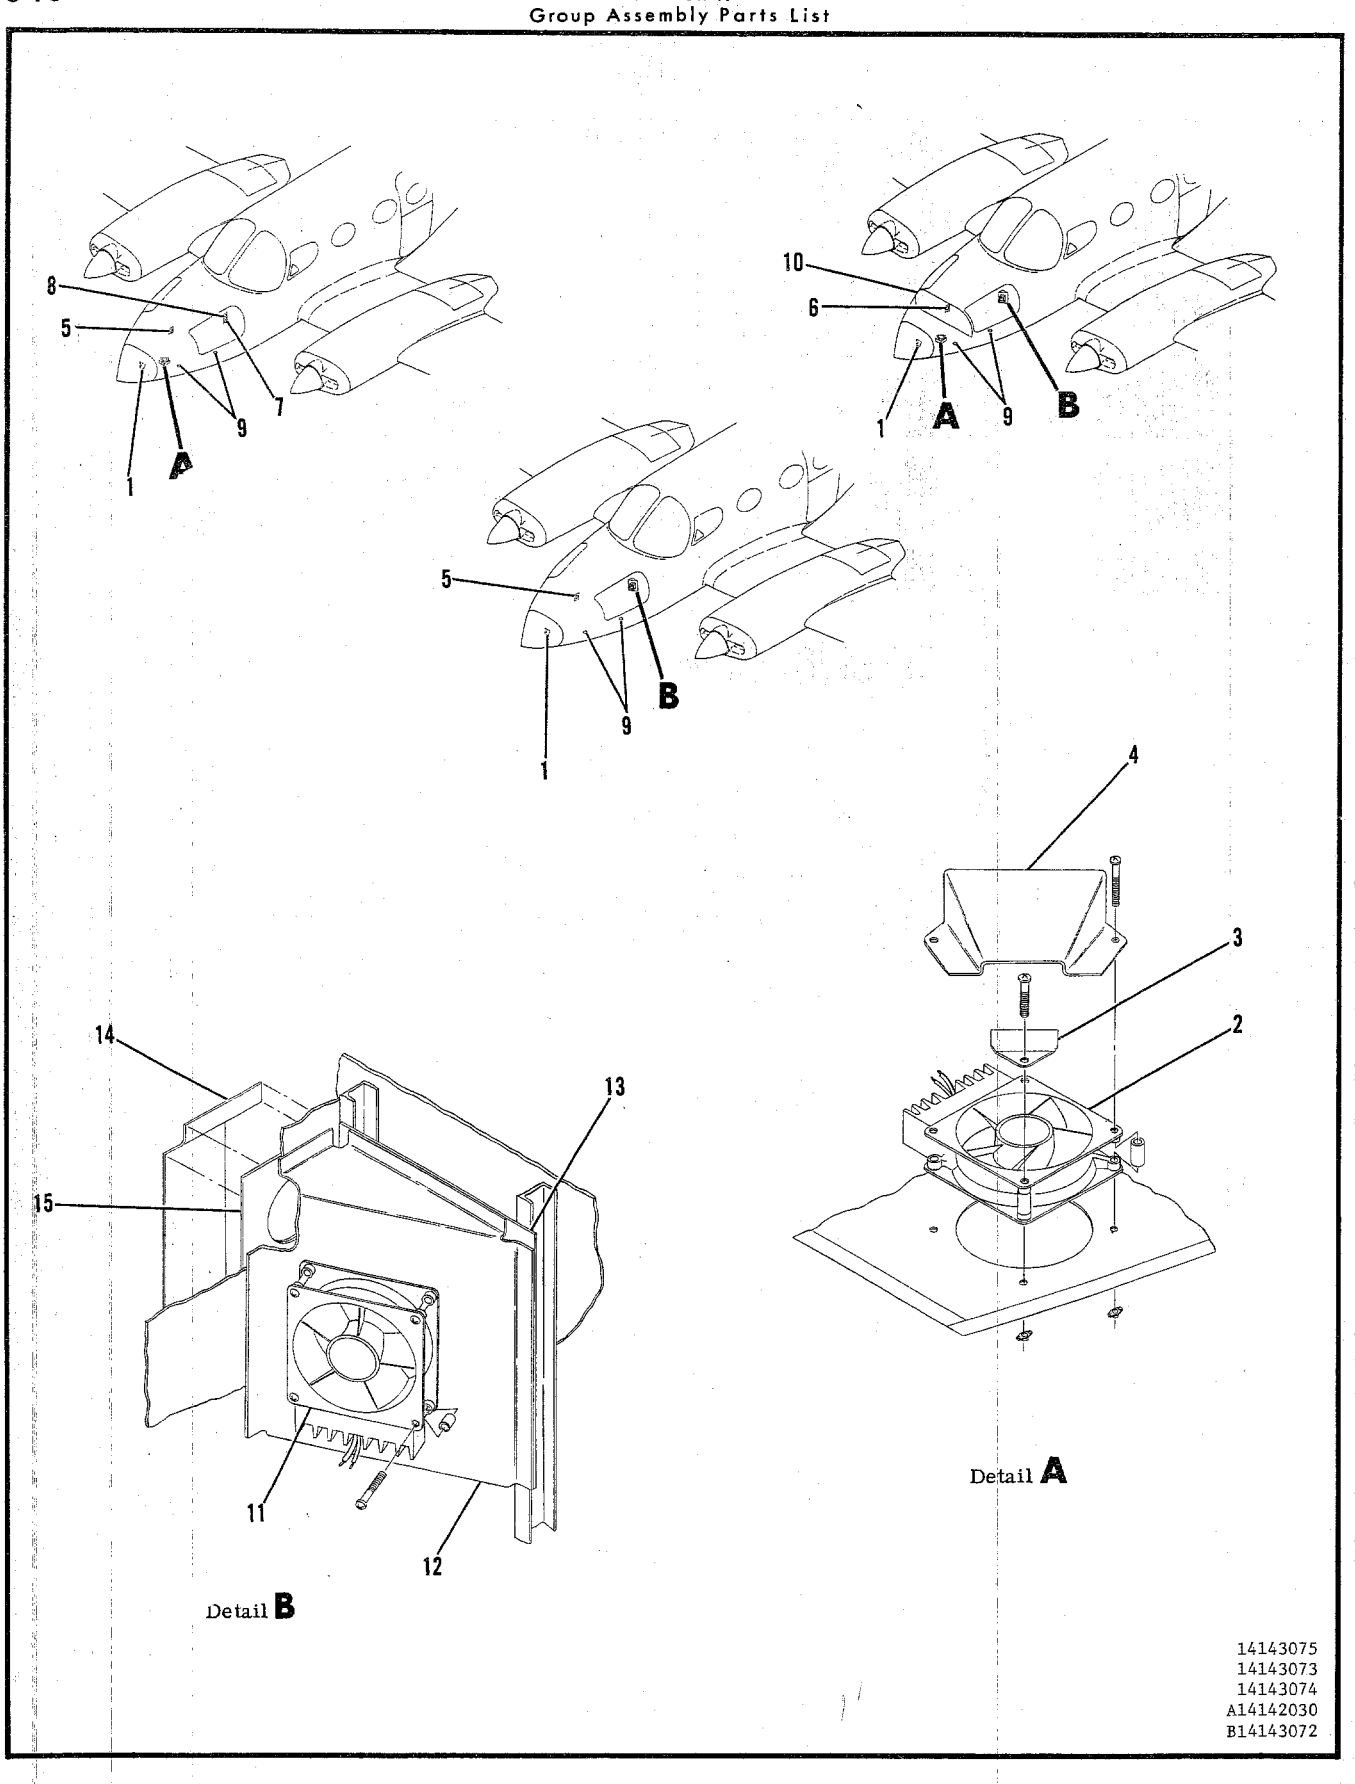

Figure 161A. Avionics Cooling Blower Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
161A-		AVIONICS COOLING BLOWER INSTALLATION	NP	A
-1	9756100-14	. PLATE-COVER STA 41.00	1	
	9756100-5	. FAN ASSY STA 41.00	1	
		ATTACHING PARTS		
	MS35206-238	. SCREW	4	
	NAS43DD1-48	. SPACER	4	
		---*---		
-2	BS2107F30	. . FAN IMCM	1	
-3	9756100-9	. . ANGLE-ATTACH	1	
-4	9756100-8	. . VENT	1	
-5	9756100-6	. HAT SECTION-LH	1	
	9756100-20	. DOUBLER-HAT SECTION	1	
-6	9756100-7	. HAT SECTION-RH	1	
	9756100-20	. DOUBLER-HAT SECTION	1	
-7	9756100-10	. VENT STA 100.00	1	
-8	9756100-11	. DOUBLER-VENT	1	
-9	0823337-2	. GROMMET	2	
-10	9756100-22	. DIVIDER STA 62.00 USED WITH DUAL FANS	1	
		ATTACHING PARTS		
	AN743-12	. BRACKET	2	
	AN743-13	. BRACKET	4	
	MS27039-0807	. SCREW	8	
	294671L	. NUT CIN	4	
		---*---		
	97560100-4	. FAN ASSY STA 100.00	1	
		ATTACHING PARTS		
	MS35206-238	. SCREW	4	
	NAS43DD1-48	. SPACER	4	
		---*---		
-11	BS2107F30	. . FAN IMCM	1	
-12	9756100-24	. . SUPPORT ASSY	1	
-13	9756100-13	. . PLATE	1	
-14	9756100-10	. . VENT STA 100.00	1	
-15	9756100-11	. . DOUBLER-VENT	1	
		A---340A0001 & ON		

SECTION III

NUMERICAL INDEX

PART NUMBER	FIGURE & INDEX NUMBER	QTY PER ART	SOURCE CODE	REPAIR CODE
.125-6	144 -7			
.187-6	62 -9			
.187-6	62 -10			
.187-6	62 -16			
.187-6	62 -18			
.187-6	62 -59			
.187-6	62 -60			
.187-6	62 -61			
#1939X	146 -27			
#1939X	146 -34			
#6	61 -27			
#6	62 -27			
AA108	152 -41			
AA684-02	139 -12			
AD5721R	143 -4			
AE1003785E 0332	117 -16			
AE1003785G 0226	117 -2			
AE1003785H 0224	SUPD BY AE2460001H0224			
AE1003882G 0235	102 -29			
AE1003882G 0250	117 -2			
AE1003957E 0296	102 -3			
AE1003957H 0240	102 -26			
AE1003957H 0240	117 -1			
AE1003957H 0244	117 -1			
AE1003957H 0280	117 -1			
AE1004199 G0163	102A-21			
AE1004199 G0202	102A-25			
AE1005816G 0226	117 -2			
AE1005816H 0224	102 -26			
AE1005816H 0224	117 -1			
AE1006526E 0225	102A-3			
AE1006526E 0186	102A-3			
AE1006526E 0236	117 -16			
AE1006526E 0176	117 -16			
AE1006526E 0213	117 -17			
AE1006526E 0210	117 -17			
AE1007211 G0253	102A-22			
AE1007217E 0110	117 -15			
AE2460001H 0224	132 -15			
AE2460001H	132A-9			
AE2763G0304-090	117 -2			
AE2847H0214 045	117 -1			
AE2847H0235-315	117 -1			
AE2964J0192 100	102A-38			
AE2964J0192-100	102 -45			
AE2965J0114 325	102A-38			
AE2965J0114-325	102 -45			
AE2970G02 00314	102A-25			
AE2975E0253-160	102 -3			
AE2975G0280-225	102 -29			
AF940-416	121 -48			
AGC3	146 -52A			
AGC3.0	142 -25			
AGC30	141 -92A			
AGC5	145 -12			
AJ3-25	37 -12			
AMA201411-06	97A-17			
AMA201411-06	98 -33			
AMA201411-800	97A-17			
AMA201411-800	98 -33			
AMA202067-156	97A-17			
AMA202067-156	98 -33			
AN10089	135 -45			
AN123862	121 -91			
AN173-13A	74 -8			
AN173-7A	75 -5			
AN174-11A	72 -29A			
AN174-31A	68 -11			
AN175-16	74 -38			
AN175-20	68 -35			
AN176-31	74 -33			
AN176-42	74 -44			
AN21-10	84 -5			
AN21-11	92 -4			
AN21-14	84 -6			
AN23-10	82 -37			
AN23-11	85 -4			
AN23-11A	85 -4			
AN23-12	82 -113			
AN23-13	82 -16			
AN23-14	85 -35			
AN23-24	82 -27			
AN23-28A	57 -18			
AN23-9	82 -20			
AN24-11	84 -43			
AN24-13	71 -102			
AN24-13A	77 -78			
AN24-14A	77 -68			
AN24-15	71 -101			
AN24-16A	77 -78			
AN24-23A	57 -1			
AN24-28A	57 -24			
AN24-29A	77 -70			
AN25-16	71 -52			
AN25-19A	77 -37			
AN25-31	86 -40			
AN25-38A	71 -73			
AN2552-3A	141 -113			
AN257Y3-2480	42 -43			
AN257Y3-4250	45 -65			
AN3-10	85 -8			
AN3-10A	5 -5			
AN3-12A	18 -27			
AN3-22A	53 -50			
AN3-13A	87 -25			
AN3-14A	28 -39			
AN3-16A	79 -27			
AN3-17A	18 -28			
AN3-20A	53 -4			
AN3-21	139 -4A			
AN3-21A	80 -21			
AN3-23A	74 -11			
AN3-3	118A-13			
AN3-3A	73 -32			
AN3-4	15 -42			
AN3-4A	77 -86			
AN3-43	141 -128			
AN3-5A	29 -11			
AN3-53	107 -35			
AN3-6	157 -15			
AN3-6A	51 -7			
AN3-62	89 -6			
AN3-7A	45 -6			
AN3C-10A	96 -8			
AN3CH4A	97 -3			
AN3C12A	83 -36			
AN3C13	100 -7			
AN3C20A	113 -8			
AN3C3	100 -17C			
AN3C4A	35 -11			
AN3C5A	106 -6			
AN3DD62A	101 -11			
AN3DD67A	101 -10			
AN3H-4A	159 -2			
AN3H14A	22 -24			
AN3H15A	23 -80			
AN3H16A	22 -24			
AN3H20A	23 -60			
AN3H27A	84 -35			
AN3H5A	35 -28			
AN3067S2	146 -3			
AN3067W3	146 -3			
AN310-3	82 -38			
AN310-4	121 -49			
AN310-5	68 -38			
AN310C3	100 -7			
AN315-3	24 -3			
AN315-3R	86 -28			
AN315-4R	106 -11			
AN315-5R	98 -10			
AN315-6R	128 -17			
AN316-10R	71 -50			
AN316-4	22 -37			
AN316-4R	71 -102			
AN316-6R	62 -93D			
AN316-7R	62 -93C			
AN316-8R	77 -34			
AN320-1	84 -5			
AN320-3	72 -35			
AN320-4	45 -14			
AN320-5	71 -55			
AN320-6	133 -40			
AN320-7	71 -89			
AN340-2	141 -24			
AN345-10	121 -28			
AN386-1-6A	86 -46			
AN386-10-2A	86 -59			
AN386-2-12A	86 -56			
AN4-10A	30 -13			
AN4-11	45 -11			
AN4-11A	30 -14			
AN4-12	77 -97			
AN4-12A	77 -64			
AN4-13	84 -80			
AN4-13A	87 -68			
AN4-14A	82 -82			
AN4-15A	73 -12			
AN4-16	85 -49			
AN4-16A	85 -53			
AN4-17	92 -72A			
AN4-17A	128 -2			
AN4-20A	85 -23			
AN4-21A	85 -13			
AN4-22A	30 -2			
AN4-24A	35 -43			
AN4-25	92 -63			
AN4-25A	35 -43			
AN4-26	92 -64			
AN4-26A	73 -16			
AN4-27A	132 -27			
AN4-3A	118 -18			
AN4-31A	70 -10			
AN4-33A	77 -9			
AN4-4A	118 -20A			
AN4-41	92 -62			
AN4-5A	25 -32			
AN4-51	42 -37			
AN4-6A	9 -3			
AN4-7	86 -51			
AN4-7A	45 -6			
AN4C10A	100 -12			
AN4C11A	40 -2			
AN4C7	51 -25			
AN4H10A	157 -12			
AN4H12A	35 -43			
AN4H13A	84 -83			
AN4H45A	84 -77			
AN4H5A	133 -91			
AN4H53A	92 -76			
AN4H57A	92 -46			
AN4H60A	92 -74			
AN42B-3A	5 -26			
AN43B C4A	23 -58			
AN43B5A	77 -60			
AN460-L4	122 -41			
AN486-3	22 -37			
AN486-4	23 -65			
AN5-10A	97 -12			
AN5-12A	30 -9			
AN5-13A	86 -41			
AN5-14A	77 -89			
AN5-16	130 -3			
AN5-16A	77 -81			
AN5-17A	77 -89			
AN5-22	130 -2			
AN5-22A	133 -21			
AN5-35A	76 -11			
AN5-57	76 -4			
AN5-6A	43 -3			
AN5-7A	12 -4			
AN500-2-5	152 -2			
AN500A8-7	118 -15			
AN502-416-10	139 -8A			
AN5023A	111 -11			
AN503-10-20	111 -9			
AN503-10-30	97 -25			
AN503-10-8	122 -39			
AN503-8-6	111 -2			
AN506-632R10	89 -1			
AN507-10R10	30 -6			
AN507-1032RG	28 -33			
AN507-428R7	119 -21			
AN507PB632-16	46 -67			
AN509-8-11	25 -20			
AN509-8R6	23 -12			
AN515-4S10	46 -87			
AN515-6R18	143 -4			
AN515-632R5	152 -27			
AN515-8R18	68 -44			
AN515-8R22	45 -65			
AN515-832R22	143 -8			
AN525-10R8	7 -25			
AN525-8-6	43 -3			
AN525-8R10	121 -35			
AN525-832-6	41 -18			
AN525-832R12	51 -15			
AN525-832R6	121 -65			
AN525-832R7	121 -66			
AN525-832R8	121 -61			
AN525-839R9	125 -42			
AN5251OR10	28 -42			
AN526-1032R22	94 -27			
AN526-832R8	2 -14			
AN531-4R8	142 -23			
AN531-6R6	142 -14			
AN565A6H6	46 -34			
AN565A6H8	46 -43			
AN565A832F3	52 -14			
AN565B8H12	93 -23			
AN565D6H2	61 -41			
AN565D6H3	83 -18			
AN565D8H8	71 -70			
AN565E1032H3	79 -57			
AN5812-1	124 -1			
AN6-12A	133 -1			
AN6-16A	133A-2			
AN6-17A	130 -25			
AN6-50A	133A-11			
AN6-7A	43 -3			
AN6C13A	98A-9			
AN6227-10	75 -11			
AN6227-18	75 -15			
AN6227-20	75 -10			
AN6227-36	74 -4			
AN6227-5	91 -10			
AN6227-7	75 -19			
AN6227B10	22 -28			
AN6227B27	70 -26			
AN6227B5	91 -10			
AN6227B7	70 -37			
AN6287-1	74 -18			
AN6289D6	121 -106			
AN6290-4	70 -42			
AN665-21L	107 -36			
AN665-21R	106 -5			
AN7-14A	132A-4			
AN7-33A	98 -1			
AN7-34A	97A-2			
AN734-12	132 -113			
AN735-36	112 -6			
AN737RM26	120 -2			
AN737RM30	119 -33			
AN737RM46	119 -31			
AN737RM66	119 -29			
AN737RM91	125 -9			
AN737TW-91	106 -12			
AN737TW10	133A-15			
AN737TW107	113 -10			
AN737TW22	120 -24			
AN737TW24	121 -9			
AN737TW26	46 -92			

PART NUMBER	FIGURE & INDEX NUMBER	QTY PER ART	SOURCE CODE	REPAIR CODE
AN737TW30	98 -36			
AN737TW34	114 -14			
AN737TW56	9 -11			
AN737TW58	128 -92			
AN737TW82	93 -4			
AN737TW91	118A-8			
AN742-6D	121 -13			
AN742D3	94 -26			
AN742D35	100 -25			
AN742F4	14D -38			
AN742F8	112 -8			
AN743-1	136 -32			
AN743-12	6 -21			
AN743-13	6 -15			
AN7503-15	70 -4			
AN783-8	114 -24			
AN783-8D	114 -43			
AN783D6	132 -79			
AN784-8D	132 -137			
AN807-6D	121 -106			
AN814-4D	132A-15			
AN814-5DL	75 -18			
AN814-8	114 -26			
AN815-10	114 -16			
AN815-10D	136 -28			
AN815-12D	130 -97			
AN815-4	97 -32			
AN815-4D	121 -92			
AN815-4D	124 -46B			
AN815-4D	124 -80B			
AN815-4D	124A-31B			
AN815-4J	140 -5			
AN815-4K	140 -21			
AN815-5D	134 -41			
AN815-6	102A-13			
AN815-6D	120 -4			
AN815-8	114 -27			
AN815-8D	114 -36			
AN816-2	102 -2A			
AN816-2D	115 -2			
AN816-3D	116 -32			
AN816-4	118A-37			
AN816-4-4	97 -16			
AN816-4D	103 -25			
AN816-4D	124A-34A			
AN816-5D	134 -16			
AN816-6	102 -42			
AN816-6-2D	12D -12			
AN816-6-6	102 -27			
0235				
AN816-6-6	102A-23			
AN818-12D	130 -53			
AN818-6	102 -28			
AN818-6D	120 -31			
AN818-8D	114 -70			
AN821-4D	94 -35			
AN821-4K	14D -18			
AN821-5D	134 -8			
AN821-6D	130 -84			
AN821-8D	118A-43			
AN824-12D	130 -50			
AN824-4D	124 -73	82		
AN824-5D	134 -11			
AN824-6	102 -34			
AN824-8D	114 -69			
AN827-6D	130 -59			
AN832-10	136 -5			
AN832-10D	139 -5			
AN832-16D	9 -27			
AN832-2	115 -31			
AN832-2D	115 -8			
AN832-3	115 -26			
AN832-4	103 -5			
AN832-4D	94 -9			
AN832-4J	140 -24			
AN832-5D	134 -2			
AN832-6	114 -10			
AN832-6D	120 -40			
AN832-8	132 -19			
AN832-8D	114 -39			
AN833-10	132 -7			
AN833-10D	114 -31			
AN833-12D	130 -93			
AN833-2D	123 -4			
AN833-4	102 -8			
AN833-4D	38A-5			
AN833-4J	140 -12			
AN833-6	102 -15			
AN833-6D	9 -26			
AN833-8D	118 -8			
AN834-10D	118 -2			
AN834-2	102 -4			
AN834-6D	130 -83			
AN837-10D	136 -18			
AN837-12D	130 -46			
AN837-2	123 -7			
AN837-3	132 -147			
AN837-4	102 -4			
AN837-4D	94 -4			
AN837-6	102A-15			
AN837-6D	130 -105			
AN837-8	114 -29A			
AN838-4	132 -12D			
AN840-4D	117 -13			
AN840-6D	138 -9			
AN840-8D	138 -41			
AN842-4	132 -12D			
AN849-4D	137 -18			
AN849-8D	138 -25			
AN893-12D	SUPD BY 5300108-41			
AN894-3-2	115 -29			
AN900-10	98 -11			
AN900-12	98 -11			
AN901-5A	68 -9			
AN901-8A	121 -55			

PART NUMBER	FIGURE & INDEX NUMBER	QTY PER ART	SOURCE CODE	REPAIR CODE
AN910-1D	124 -73A			
AN910-2D	130 -111			
AN911-1D	124 -36			
AN911-1J	124 -112			
AN912-2D	138 -10			
AN912-3D	138 -36			
AN916-1D	124 -55			
AN916-1D	124A-34B			
AN916PD716	130 -73A			
AN9161416L	136 -7			
AN917-1D	124 -34			
AN918-3D	138 -32			
AN919-1D	97 -20			
AN919-10D	119 -38			
AN919-12	102 -17			
AN919-12D	118A-4			
AN919-15D	114 -33			
AN919-19D	132 -129			
AN919-20D	132 -92			
AN919-6D	118A-65			
AN921-4	70 -40			
AN924-10	132 -9			
AN924-10D	114 -31			
AN924-12D	130 -48			
AN924-16D	9 -27			
AN924-2	115 -33			
AN924-2D	115 -14			
AN924-3	115 -28			
AN924-4	70 -41			
AN924-4D	38A-5			
AN924-5D	134 -5			
AN924-6	102 -15			
AN924-6D	9 -26			
AN924-8	114 -22			
AN924-8D	114 -12			
AN929-16D	9 -27			
AN929-2D	115 -9			
AN929-4	130 -73			
AN929-4D	124 -74			
AN929-6	130 -60			
AN929-6D	9 -26			
AN929-8	114 -25			
AN932-2	118A-9			
AN932-2D	134 -18			
AN932-4D	134 -25			
AN935-516L	98 -15			
AN935-8	148 -4			
AN935-8L	37 -40			
AN936A416	98 -8			
AN936A516	98 -10			
AN936A616	98 -7			
AN936A91EB	97 -36			
AN936A916B	97A-57			
AN938-8D	130 -136			
AN938D4	124 -80			
AN938D4	124A-31			
AN938D6	120 -5			
AN938D8	119 -36			
AN960-10	23 -37			
AN960-10L	11 -25			
AN960-1016	28 -6			
AN960-1016L	71 -88			
AN960-1216	137 -25			
AN960-1216L	114 -23			
AN960-1416	136 -16			
AN960-1416L	138 -14			
AN960-16L	30 -13			
AN960-1716L	121 -98			
AN960-2	37 -12			
AN960-2L	152 -37			
AN960-3L	73 -33			
AN960-4	28 -39			
AN960-4L	52 -26			
AN960-416	9 -3			
AN960-416L	11 -20			
AN960-516	12 -4			
AN960-516L	62 -45B			
AN960-5162	121 -3			
AN960-6	22 -43			
AN960-6L	9 -20			
AN960-616	41 -2			
AN960-616L	69 -3			
AN960-716	62 -93A			
AN960-716L	68 -34			
AN960-8	35 -40			
AN960-8L	20 -16			
AN960-816	134 -4			
AN960-916	102 -31			
AN960B516	89 -4			
AN960B516L	89 -5			
AN960CL8	24 -7			
AN960C10	35 -11			
AN960C10L	25 -13			
AN960C1216L	132 -22			
AN960C1416L	132 -10			
AN960C416	51 -27			
AN960C416L	92 -64			
AN960C516L	22 -25			
AN960C616L	24 -12			
AN960C716L	69 -38			
AN960C8L	22 -39			
AN960C816L	22 -29			
AN960D10	87 -9			
AN960D10L	80 -23			
AN960D4	87 -11			
AN960PD10	5 -7			
AN960PD10L	5 -29			
AN960PD1216	130 -71			
AN960PD1416	130 -43			
AN960PD1716	130 -49			
AN960PD416	130 -13			
AN960PD416L	9 -15			
AN960PD516	115 -13			
AN960PD516L	71 -75			
AN960PD6	61 -80			

PART NUMBER	FIGURE & INDEX NUMBER	QTY PER ART	SOURCE CODE	REPAIR CODE
AN960PD616	130 -28			
AN960PD616L	68 -3			
AN960PD716	103 -22			
AN960PD8	111 -8			
AN960PD816L	130 -27			
AN960PD916	130 -84			
AN970-3	22 -49			
AN970-4	71 -8			
AN974-4D	94 -4			
AN975-3	86 -46			
ARM300-3	151 -1			
ARM300C	151 -1			
AR75-10	141 -70			
AR75-15	141 -70			
AR75-25	SUPD BY AR75-10			
AS368	157A-60			
A049-7	83 -2			
A10S	138 -61			
A10S	138 -63			
A10959-014-3	121 -44			
A1157	141 -57			
A1190	74 -25			
A12S	138 -24			
A12S	138 -30			
A12S	138 -43			
A12S	138 -47			
A12S	138 -50			
A12S	138 -56			
A1261	68 -16			
A1261TYPEB	69 -17			
A1280-2	146 -16			
A1280-3	146 -16			
A15S	97A-38			
A15S	136 -22			
A15S	136 -26			
A1635-56	111 -9			
A1635-79	76 -31			
A1636-24	76 -30			
A1638-1	76 -32			
A1638-18	111 -9			
A1638-5	108 -4			
A1639-2	108 -2			
A17045-56	97A-17			
A17045-56	98 -33			
A1721	59 -25			
A1721-1	60 -44			
A2099	57 -34			
A2099	58 -40			
A210529H	98 -26			
A2109-3	146 -39			
A2980A9-27	124 -52			
A30010	76 -28			
A30014	76 -29			
A30015	76 -27			
A30079-1	76 -22			
A30079-2	76 -26			
A3551	147 -30			
A39070	76 -16			
A40D717	161 -13			
A40028	111 -3			
A4203	146 -3			
A4212	146 -6			
A4513-1	146 -38			
A4711	146 -4			
A505CDD	97A-21			
A53T2	94 -15			
A5326	146 -4			
A6S	156A-18			
A606C61-6	76 -19			
A646/C233	47 -56F			
A650C81-3	70 -1			
A7512-24	146 -17			
A7635A1	146 -28			
A7635A1	146 -35			
A8S	124 -12			
A8S	124 -16			
A8S	124 -19			
A8S	124 -23			
A8S	124 -27			
A8S	124 -31			
A8S	124 -89			
A8S	124 -92			
A8S	124 -94			
A8S	124 -95			
A8S	124 -98			
A8S	124 -101			
A8S	124 -103			
A8S	124 -104			
A8S	124 -106			
A8S	126 -28			
A8S	127 -3			
A8S	127 -23			
A8S	127 -35			
A8S	156A-17			
A850-8	94 -44			
A9163-1	148 -10			
A9164-1	148 -6			
A9164-1	148 -13			
A932-2D	134 -39			
BH108	72 -12			
BP60	155 -2			
BP60-02	155 -2			
BR1916	73 -10			
BR4	40 -32			
BS2107F30	161A-2			
BS2107F30	161A-11			
BZ3YT	SUPD BY BZ7RT04			
BZ7RT04	143 -4			
BZ7RT04	143 -4			
BZ7RWT80	93 -11			
B00322-1	141 -55			
B1-5-3	97A-22			
B1-6-1	97A-22			
B1-7-1	97A-22			
B1012	72 -5			

PART NUMBER	FIGURE & INDEX NUMBER	QTY PER ART	SOURCE CODE	REPAIR CODE
B168	83 -39			
B20162	112 -12			
B20162	112 -13			
B210446F	98 -26			
B248	86 -48			
B30076	76 -23			
B3550	147 -30			
B3626-1	146 -19			
B3731-3	111 -2			
B388081-24	146 -20A			
B3963A	146 -18			
B4	33 -28			
B40024-2	111 -11			
B40030-1	111 -11			
B4147	9 -9			
B415083-4626	146 -1			
B4209	146 -7			
B4213A	146 -2			
B4213B	146 -2			
B610	92 -47			
B610	92 -74			
B610	92 -76			
B610	92 -78			
B78	73 -22			
B8917-6	146 -26			
CMF860-4	145 -14			
CM2023-1	52 -40			
CM2023-1	54 -81			
CM2023-1	56 -79			
CM2023-2	41 -26			
CM2024-1	52 -40			
CM2024-1	54 -81			
CM2024-1	56 -79			
CM2024-2	41 -26			
CM2290G1	148 -1			
CM2609-1P	124 -84			
CM2609-1P	124A-43			
CM2613-1	49 -18			
CM2662-25H	157A-57			
CM2662-25LH	157 -52			
CM2662-35	92 -5			
CM2662-35LH	84 -5			
CM2662-35RH	84 -5			
CM2666T10	125 -71			
CM2666T12	125 -63			
CM2666T12	125 -79			
CM2673-4	10 -11			
CM2679-1	133 -52			
CM2679-1	133A-50			
CM2679-1	135 -11			
CM2679-1	135 -42			
CM2679-1	141 -92A			
CM2679-1	142 -7			
CM2679-2	131 -47			
CM2679-2	133 -58			
CM2679-2	133A-56			
CM2689-32	68 -12			
CM2689-32	69 -14			
CM2690-14	68 -20			
CM2690-14	69 -22			
CM2692-12.5K6	147 -23			
CM2692-12.5K6	147 -24			
CM2692-14A5S	61 -19			
CM2692-14A5S	62 -19			
CM2692-15A1S	62 -61			
CM2692-15A1S	63 -22			
CM2692-15A1S	64 -22			
CM2692-16-2S	129 -40			
CM2692-16-2S	129A-56			
CM2692-16-2S	144 -31			
CM2692-16-2S	144 -36			
CM2692-16-2S	144 -38			
CM2692-16-2S	144 -39			
CM2692-16-2S	144 -40			
CM2692-16-2S	144 -42			
CM2692-16-2S	144 -43			
CM2692-16-2S	144 -45			
CM2692-16-2S	144 -46			
CM2692-16-2S	144 -57			
CM2692-16-2S	144 -58			
CM2692-16-2S	144 -60			
CM2692-16-2S	144 -73			
CM2692-16-2S	144 -79			
CM2692-16-2S	144 -85			
CM2692-16-2S	144 -87			
CM2692-16-2S	144 -88			
CM2692-16-2S	144 -89			
CM2692-16-2S	144 -90			
CM2692-16-2S	144 -91			
CM2692-16-2S	144 -92			
CM2692-16-2S	144 -93			
CM2692-16-2S	144 -94			
CM2692-16-2S	144 -95			
CM2692-16-2S	144 -96			
CM2692-16-2S	144 -97			
CM2692-16-2S	144 -98			
CM2692-16-2S	144 -99			
CM2692-16-2S	144 -100			
CM2692-16-2S	144 -101			
CM2692-16-2S	144 -102			
CM2692-16-2S	144 -103			
CM2692-16-2S	144 -104			
CM2692-16-2S	144 -105			
CM2692-16-2S	144 -106			
CM2692-16-2S	144 -107			
CM2692-16-2S	144 -108			
CM2692-16-2S	144 -109			
CM2692-16-2S	144 -110			
CM2692-16-2S	144 -111			
CM2692-16-2S	144 -112			
CM2692-16-2S	144 -113			
CM2692-16-2S	144 -114			
CM2692-16-2S	144 -115			
CM2692-16-2S	144 -116			
CM2692-16-3B	86 -9			

PART NUMBER	FIGURE & INDEX NUMBER	QTY PER ART	SOURCE CODE	REPAIR CODE
CM2692-16A3S	61 -11			
CM2692-16A3S	62 -11			
CM2692-181S	101 -4			
CM2692-181S	101 -5			
CM2692-24-1H	28 -36			
CM2692-32-1S	41 -39			
CM2692-36P1S	155 -14			
CM2692-8-1B	86 -18			
CM2692-8-1B	86 -21			
CM2907-4	138 -19			
CM2909-6	97 -29			
CM2910-15	70 -3			
CM2916-125	141 -88			
CM2916-125	141 -107			
CM2919-2-25	24 -8			
CM2919-2-25	25 -48			
CM2919-2-25	25 -52			
CM2921-1	118 -43			
CM2921-1	118A-70			
CM2926-1	63 -43			
CM2926-1	64 -43			
CM2933-5	124 -84			
CM2933-5	124A-43			
CM2934-4	126 -45			
CM2938-8	138 -29			
CM2939-10	136 -21			
CM2939-10	136 -25			
CM2939-3-2	156A-15			
CM2939-4	124 -11			
CM2939-4	124 -15			
CM2939-4	124 -18			
CM2939-4	124 -22			
CM2939-4	124 -26			
CM2939-4	124 -30			
CM2939-4	124 -88			
CM2939-4	124 -91			
CM2939-4	124 -94			
CM2939-4	124 -95			
CM2939-4	124 -97			
CM2939-4	124 -100			
CM2939-4	124 -103			
CM2939-4	124 -104			
CM2939-4	124 -106			
CM2939-4	124A-6			
CM2939-4	126 -29			
CM2939-4	127 -2			
CM2939-4	127 -24			
CM2939-4	127 -35			
CM2939-4	137 -4			
CM2939-4	137 -12			
CM2939-4	137 -17			
CM2939-6	138 -61			
CM2939-6	138 -63			
CM2939-8	138 -23			
CM2939-8	138 -42			
CM2939-8	138 -146			
CM2939-8	138 -149			
CM2939-8	138 -156			
CM2941-1	18 -26			
CM2941-1	57 -17			
CM2941-1	58 -21			
CM2941-1	58A-21			
CM2941-1	59 -16			
CM2941-1	60 -33			
CM2941-1	60A-33			
CM2942-1	18 -29			
CM2944-4-13	97 -33			
CM2944-6-17	97 -36			
CM2947-1	142 -21			
CM2949LS120	128 -27			
CM2949LS120	128 -75			
CM2949LS136	128 -30			
CM2949LS136	128 -82			
CM2949LS152	98 -11			
CM2949152	98 -11			
CM2954-6D2	97 -3			
CM2960-4-4	61 -81			
CM2960-4-4	62 -81			
CM2968-4-2	144 -12			
CM2972-5	135 -34			
CM2979-1	131 -41			
CM2982-1	135 -43			
CM299081	61 -94			
CM299061	127 -40			
CM299061	148 -6			
CM299062	63 -37			
CM299062	148 -6			
CM299062	148 -13			
CM2991-1	121 -79			
CM3	46 -63			
CM3	46 -99			
CM3211-10B 48.0	125 -18			
CM3211-10B 36.0	125 -25			
CM3211-10B 38.0	125 -25			
CM3211-10B 36.0	128 -100			
CM3211-10B 17.0	128 -117			
CM3211-10B36	125 -8			
CM3211-12A25	131 -70			
CM3211-12A25	133 -81			
CM3211-12A25	133A-79			
CM3211-12A65	131 -54			
CM3211-12A65.	133 -65			
CM3211-12A65.	133A-63			
CM3211-12B 19.50	128 -83			
CM3211-12B 10.0	128 -113			
CM3211-6B6.7	128 -91			
CM3213-10	128 -107			
CM3213-16	128 -29			

PART NUMBER	FIGURE & INDEX NUMBER	QTY PER ART	SOURCE CODE	REPAIR CODE
CM3213-6	128 -94			
CM3220-1	22 -47			
CM3224-06B	25 -59			
CM3224-08	23 -61			
CM3224-1	58A-32			
CM3224-3	57 -22			
CM3224-3	58 -26			
CM3224-3	58A-26			
CM3224-3	59 -21			
CM3224-3B	25 -55			
CM3224-3B	25 -65			
CM3224-4	57 -28			
CM3224-4	58 -32			
CM3224-4	59 -14			
CM3224-8	47 -56E			
CM34852	147 -16			
CM3509-1	135 -35			
CM3524-2-9	135 -41			
CM3524-6-16	149 -3			
CM3524-8-20	126 -36			
CM3524-8-20	127 -31			
CM3525-2	158 -18			
CM3531	108 -2			
CM3535-2	144 -13			
CM3547-1	46A-1			
CM3547-1	46A-2			
CM3547-1	46A-3			
CM3547-1	46A-4			
CM3547-1	46A-4			
CM3547-1	46A-5			
CM3558-8-8G	25 -74			
CM3558-8-8G	25 -76			
CM3558-8-8G	25 -78			
CM3558-8-8G	25 -80			
CM3559-4-12G	62 -98			
CM3559-6-16C	158 -15			
CM3559-6-16G	63 -14			
CM3559-6-16G	63 -17			
CM3559-6-16G	64 -14			
CM3559-6-16G	64 -17			
CM3559-6-16G	158 -14			
CM3559-6-16G	158 -15			
CM3559-6-16G	158 -17			
CM3559-6-18G	61 -21			
CM3559-6-18G	61 -23			
CM3559-6-18G	61 -64			
CM3559-6-18G	61 -66			
CM3559-6-18G	61 -68			
CM3559-6-18G	61 -70			
CM3559-6-18G	62 -21			
CM3559-6-18G	62 -23			
CM3559-6-18G	62 -64			
CM3559-6-18G	62 -66			
CM3559-6-18G	62 -68			
CM3559-6-18G	62 -70			
CM3559-6-18G	63 -11			
CM3559-6-18G	63 -13			
CM3559-6-18G	63 -15			
CM3559-6-18G	63 -16			
CM3559-6-18G	63 -18			
CM3559-6-18G	63 -21			
CM3559-6-18G	63 -24			
CM3559-6-18G	63 -27			
CM3559-6-18G	63 -28			
CM3559-6-18G	63 -29			
CM3559-6-18G	63 -30			
CM3559-6-18G	63 -31			
CM3559-6-18G	63 -32			
CM3559-6-18G	64 -11			
CM3559-6-18G	64 -13			
CM3559-6-18G	64 -15			
CM3559-6-18G	64 -16			
CM3559-6-18G	64 -18			
CM3559-6-18G	64 -21			
CM3559-6-18G	64 -24			
CM3559-6-18G	64 -27			
CM3559-6-18G	64 -28			
CM3559-6-18G	64 -29			
CM3559-6-18G	64 -30			
CM3559-6-18G	64 -31			
CM3559-6-18G	64 -32			
CM3559-6-4	144 -67			
CM3559-6-49	63 -2			
CM3559-6-49	64 -2			
CM3559-8-10G	61 -72			
CM3559-8-10G	62 -72			
CM3575-1	16 -20			
CM3575-2	16 -20			
CM3578-1	135 -32			
CM3609	48 -2			
CM3609	48 -4			
CM3609	48 -9			
CM3609	48 -10			
CM3609	48 -11			
CM3609	48 -12			
CM3609	48 -14			
CM3609	48 -17			
CM3609	48 -18			
CM3609	48 -19			
CM3657-1	48 -2			
CM3657-1	48 -4			
CM3657-1	48 -8			
CM3657-1	48 -16			
CM3657-1	48 -19			
CM3658-1	48 -14			
CM366TD8	119A-17			
CM3667D8	118A-17			
CM3702-5	100 -26			
CM3702-5	145 -10			
CM3702-7	96 -3			
CM39-C3-07	62 -27			
CM39-03-07	61 -27			
CM39-03-7	61 -28			
CM39-03-7	62 -28			
CM4005	57 -35			

PART NUMBER	FIGURE & INDEX NUMBER	QTY PER ART	SOURCE CODE	REPAIR CODE
CM4005	58 -42			
CM4005	58A-48			
CM4005	59 -26			
CM4005	60 -46			
CM4005	60A-50			
CM4009	51 -24			
CM4009	52 -35			
CM4009	53 -65			
CM4009	54 -72			
CM4009	55 -65			
CM4009	56 -70			
CM4010	51 -29			
CM4010	52 -42			
CM4010	53 -70			
CM4010	54 -77			
CM4010	55 -70			
CM4010	56 -75			
CM4020	52 -40			
CM4020	54 -81			
CM4020	56 -79			
COML	91 -4			
COML	91 -5			
COML	91 -11			
CP2 3-4B	46 -5			
CP2-3-4	46 -5			
CR163C5-8	29 -13			
C1R10-26	155 -1			
C1R10-4	155 -1			
C15	61 -14			
C15	62 -14			
C165001-0202	97A-23			
C165001-0202	98 -38			
C165002-0101	97 -24			
C165006-0104	102 -11			
C165006-0106	102A-10			
C165006-0107	102A-10			
C165013-0102	111 -1			
C165013-0201	111 -1			
C165013-0301	111 -1			
C165013-0401	111 -1			
C165013-0501	SUPD BY C165013-0601			
C165013-0601	111 -1			
C166001-0813	135 -4			
C166001-0816	135 -4			
C166001-0818	135 -7			
C166001-0819	135 -7			
C166005-0603	134 -45			
C166005-0605	134 -45			
C166005-0605	134 -45			
C166005-0606	134 -47			
C166005-0802	134 -43			
C166005-0802	134 -43			
C166006-0201	134 -17			
C166006-0201	134 -24			
C166006-0201	134 -31			
C166006-0201	134 -38			
C166006-0201	134 -42			
C166006-0202	134 -17			
C166006-0202	134 -24			
C166006-0202	134 -31			
C166006-0202	134 -38			
C166006-0202	134 -42			
C166006-0202	134 -59			
C166008-0101	135 -35			
C166009-0701	134 -46			
C166009-0801	134 -44			
C166011-0101	135 -33			
C166011-0104	135 -42			
C166011-0106	135 -11			
C166011-0108	135 -42			
C166013-0101	135 -10			
C166015-0101	134 -45			
C166015-0201	134 -43			
C166015-0301	134 -45			
C166015-0301	134 -45			
C166015-0301	134 -47			
C166066-0202	134 -70			
C173001-0101	46 -72			
C173001-0103	46 -72			
C262003-0204	76 -19			
C262003-0210	70 -1			
C262023-0102	76 -20			
C262023-0105	70 -2			
C294501-0301	137 -28			
C294501-0302	137 -28			
C294505-0102	97A-8			
C40010	111 -9			
C40011	111 -9			
C40029	111 -10			
C431002-0103	SUPD BY 212CW			
C431003-0301	97A-21			
C431003-0301	98 -37			
C482002-0110	97A-24			
C582103-0101	150 -18			
C582103-0101	150 -29			
C582103-0301	150 -18			
C582103-0301	150 -29			
C582601-0103	150 -2			
C582601-0204	150 -2			
C582601-0205	150 -2			
C582601-0301	150 -2			
C582601-0401	150 -2			
C582601-0501	150 -2			
C582602-0303	150 -16			
C582607-0101	150 -3			
C582607-0105	150 -3			
C589502-0201	150 -18			
C589502-0201	150 -29			
C589503-0201	150 -17			
C589504-0201	150 -17			
C589510-0102	155 -9			
C589510-0103	155 -6			
C589510-0104	155 -8			
C589510-0105	SUPD BY C589510-0205			
C589510-0107	155 -6			
C589510-0202	SUPD BY C589510-0209			
C589510-0203	155 -6			
C589510-0205	155 -10			
C589510-0207	155 -8			
C589510-0209	155 -9			
C589510-0210	155 -10			
C589510-0212	155 -9			
C589510-0213	155 -10			
C596501-0103	46 -65			
C596502-0202	46 -65			
C596503-0101	46 -66			
C596506-0101	142 -11			
C621002-0108	146 -31			
C621002-0109	146 -23			
C622001-0103	146 -36			
C622001-0104	146 -37			
C622001-0501	146 -15			
C622001-0502	146 -15			
C622002-0102	146 -70			
C64P	9 -10			
C660501-0403	61 -78			
C660501-0403	62 -78			
C660502-0202	150 -5			
C661003-0203	63 -16			
C661003-0203	64 -16			
C661003-0505	63 -16			
C661003-0505	64 -16			
C661009-0101	63 -18			
C661009-0101	63 -32			
C661009-0101	64 -18			
C661009-0101	64 -32			
C661014-0101	63 -15			
C661014-0101	63 -29			
C661014-0101	64 -15			
C661014-0101	64 -29			
C661022-0102	150 -5			
C661023-0104	150 -5			
C661025-0101	63 -15			
C661025-0101	63 -29			
C661025-0101	64 -15			
C661025-0101	64 -29			
C661025-0102	64 -15			
C661025-0102	64 -29			
C661031-0101	63 -16			
C661031-0101	64 -16			
C661032-0101	63 -30			
C661032-0101	64 -30			
C661035-0101	63 -18			
C661035-0101	63 -32			
C661035-0101	64 -18			
C661035-0101	64 -32			
C661040-0106	63 -13			
C661040-0106	63 -27			
C661040-0106	64 -13			
C661040-0106	64 -27			
C661040-0206	64 -13			
C661040-0206	64 -27			
C661040-0210	64 -27			
C661040-0214	64 -13			
C661045-0106	63 -13			
C661045-0106	63 -27			
C661045-0106	64 -13			
C661045-0106	64 -27			
C661045-0306	64 -13			
C661045-0306	64 -27			
C661045-0310	64 -13			
C661045-0310	64 -27			
C661053-0101	63 -17			
C661053-0101	63 -31			
C661053-0101	64 -17			
C661053-0101	64 -31			
C661055-0102	SUPD BY C661055-0102			
C661055-0102	SUPD BY C661055-0103			
C661055-0102	SUPD BY C661055-0103			
C661055-0102	SUPD BY C661055-0103			
C661055-0103	63 -14			
C661055-0103	63 -28			
C661055-0103	64 -14			
C661055-0103	64 -28			
C662019-0101	61 -69			
C662019-0101	62 -69			
C662020-0106	61 -67			
C662020-0106	62 -67			
C662026-0106	61 -63			
C662026-0106	62 -63			
C662026-0113	62 -63			
C662503-0101	64 -47			
C662503-0102	63 -44			
C662503-0102	64 -47			
C664506-0102	63 -11			
C664506-0102	64 -11			
C664507-0101	63 -11			
C664507-0101	64 -11			
C668016-0101	61 -65			
C668016-0101	62 -65			
C668017-0101	61 -65			
C668017-0101	62 -65			
C668501-0110	145 -10			
C668501-0111	145 -10			
C668516-0101	61 -20			
C668516-0101	62 -20			
C668517-0101	SUPD BY 8-303			
C668517-0101	SUPD BY 8-303			
C668519-0101	63 -24			
C668519-0101	64 -24			
C668520-0101	63 -26			
C668520-0101	64 -26			
C668522-0101	63 -40			
C668522-0101	64 -40			
C668532-0101	62 -94			
C668532-0101	63 -25			
DA15P	144 -20			
DB25S	144 -17			
DCFS290D1/T3	98 -26			
DCFS290D2/T3	98 -26			
DCFS290D5/T3	97A-10			
DCFS2904/T3	97A-10			
DCFUS290D1/T3	98 -26			
DCFUS290D2/T3	98 -26			
DCFUS290D4/T3	97A-10			
DCFUS290D5/T3	97A-10			
DGSC20-02	151 -3			
DRC20-35	151 -3			
DSF859	63 -21			
DSF859	64 -21			
D2AF34C71¤-¤84JF3	108 -2			
D20418-2	144 -18			
D20418-2	144 -21			
D211-100-2	61 -27			
D211-100-2	61 -28			
D211-100-2	62 -27			
D211-100-2	62 -28			
D30210-3	76 -25			
D30210-4	76 -24			
D30321	76 -21			
D3534	108 -4			
D3796	108 -8			
D3800	108 -3			
D3818	108 -7			
D40000	111 -8			
D40034	111 -7			
D5855-1	111 -16			
D6086	146 -20			
ECM479135	121 -83			
ECM479136	121 -83			
EM2013	141 -112			
EM211-2	144 -119			
EM221	141 -57			
E103	106 -6			
E3/16X1.000	58A-43			
E3/16X1.000	60A-45			
E50R1-352A	86 -7			
E5735-2A	111 -23			
E5735-2C	111 -22			
E5735-2D	111 -21			
E5735-2E	111 -24			
E5735-4	111 -18			
E5735-4A	111 -19			
E5855-2	111 -30			
E5855-3	111 -26			
E5855-4	111 -31			
E5855-4B	111 -20			
E5855-5	111 -17			
E5855-6	111 -27			
E5855-6A	111 -29			
E5855-6B	111 -28			
FAD250	9 -17			
FAD250	20 -8			
FAD250	20 -17			
FCE51693	118 -14			
FCE51694	118 -14			
FC215-136	130 -74			
FC215-136	141 -19			
FC215-136	141 -61			
FC215-136	157 -55			
FC6446	70 -37			
FDA1480-2	46 -59			
FMB705-1	118 -17			
FMB705-2	118 -17			
FMF706	121 -75			
FR100-5	141 -79			
FR100-5	143 -6			
F391MS	SUPD BY CM3			
F4-35	37 -12			
F6500H	5 -23			
F6500H	22 -41			
F6500H	37 -44			
F8WP	141 -125			
GA3-200	37 -12			
GE1309	146 -67			
GE1385	146 -12			
GE4594	146 -5			
GF4-150	37 -12			
GMC632	146 -46			
G2	46 -24			
G2905-24	146 -21			
G456	97A-21			
HE7002-3	94 -44			
HE81106-3	61 -88			
HE81106-3	62 -88			
HE81106-3	64 -46			
HE81203	131 -2			
HE81205	130 -138			
HE81205	132 -141			
HE81205	132A-142			
HE81210	130 -154			
HE81213	130 -55			
HE81240	130 -121			
HE81260	129 -39			
HE81273	131 -7			
HE81298	131 -19			
HE81300-3	131 -32			
HE81300-4	131 -32			
HE81308	SUPD BY 5154042-2			
HE81310	SUPD BY 9910132-1			
HE81400	130 -87			
HE88030-2	127 -15			
HE88070-2E	SUPD BY 88070-2G1			
HE88070-2F	SUPD BY 88070-2G1			
HHJ-A	141 -92A			
HHJ-A	142 -25			
HKP	144 -59			
HKP	145 -11			
HR8H5ES	77 -42			
HSBG55	71 -59			
HW0004-1	46 -28			
HW0015-1	46 -109			
H2163-3	5 -18			
H26-13	3 -57			

PART NUMBER	FIGURE & INDEX NUMBER	QTY PER ART	SOURCE CODE	REPAIR CODE
H3222	88 -4			
H674-02A3	139 -4			
H9FF06	139 -8C			
H9W334-231	139 -8D			
H966-1	37 -29			
IN1201	20 -28A			
IN1201	141 -92B			
IN2482	141 -128			
IN5061	157 -55			
JE1	SUPD BY JE73			
JE73	143 -8			
JN14-1357B1	141 -57			
JV-5	122 -42A			
JV5	61 -31			
JV5	62 -31			
J12814-1	97A-6			
J3112-8-3	161 -11			
J9613-58	97A-5			
J9613-58	98 -3			
KHS17D11-24V	152 -40			
KM610-51	38 -5A			
KN678-1	61 -13			
KN678-1	62 -13			
KS4	86 -54			
KW85	71 -78			
K414-4-3-1	116 -3			
LC038E13	59 -6			
LC042E15	57 -14			
LC042E15	58 -18			
LC042E15	58A-18			
LC042E15	60 -11			
LC042E15	60A-14			
LM29710	70 -6			
LM29749	70 -16			
LP4-15AM	70 -29			
LP4-6AMX2	121 -70			
L10-159	151 -3			
L10-216-1	151 -3			
L18366-3	129 -26			
L18366-3	129A-25			
L18366-3	147 -5			
MCI-A106-216	145 -10			
MCI-A106A44S	145 -10			
MC508	133 -20			
MDX3.0	144 -59			
MDX5	141 -110			
MI585034-1	153 -5			
MI585035	153 -18			
MI585036-1	SUPD BY MI585036-3			
MI585036-3	153 -20			
MI585084	153 -4			
MI585086-1	153 -5			
MI591083-1	150 -26			
MI591085-7	150 -26			
MI591085-7A	150 -26			
MI591086	150 -26			
MI592016	150 -26			
MI592034	153 -21			
MI592038	153 -4			
MI592083	153 -19			
MSTL236N	61 -14			
MST205N	61 -11			
MST405N	20 -10			
MS134356	122 -25			
MS15001-1	74 -6			
MS15002-1	68 -29			
MS15002-3	69 -33			
MS15082-13	93 -21			
MS15570-303	147 -30			
MS16562-10	37 -34			
MS16562-129	79 -55			
MS16562-16	59 -7			
MS16562-220	128 -7			
MS16562-25	87 -2			
MS16562-27	88 -4			
MS16562-3	93 -22			
MS16562-4	62 -22			
MS16624-1035	53 -25			
MS16624-150	86 -32			
MS16624-37	91 -7			
MS16624-50	79 -53			
MS16624-81	91 -9			
MS16625-1131	75 -8			
MS17301-127	130 -30			
MS17301-147	130 -31			
MS17825-3	27 -57			
MS17825-4	77 -59			
MS17826-3	77 -99			
MS17826-4	84 -44			
MS17826-5	74 -42			
MS17826-6	74 -36			
MS20002-4	96 -13			
MS20002-6	28 -11			
MS20002-6C	71 -42			
MS20002C6	28 -10			
MS20004H4	93 -2			
MS20033-1	116 -16			
MS20074-33-05	97A-25			
MS20074-06-06	102 -44			
MS20074-06-07	102 -41			
MS20200KP3	86 -29			
MS20200KP4	45 -9			
MS20200KP6	29 -11			
MS20201KP5A	77 -84			
MS20202KP37B	74 -2			
MS202181	32 -7			
MS20219-2	87 -67			
MS20253-2-3400	40 -4			
MS20253-2-245C	42 -41			
MS20253-2-4210	45 -63			
MS20253-2-500	65 -15			
MS20253-3-674	96 -14			

PART NUMBER	FIGURE & INDEX NUMBER	QTY PER ART	SOURCE CODE	REPAIR CODE
MS20253-4-1162	15 -42			
MS20253P2-1000	80 -30			
MS20253P2-400	38 -5A			
MS20253P2-410	46 -82			
MS20257Y3-248	42 -38			
MS20314-4S	46 -88			
MS20341-10S	61 -39			
MS20341-2S	107 -38			
MS20341-8S	86 -17			
MS20364-1018C	28 -7			
MS20364-428	84 -14			
MS20365-428	86 -45			
MS20365-720C	71 -84			
MS20392-1C11	51 -16			
MS20392-1C13	51 -13			
MS20392-1C15	37 -35			
MS20392-1C19	79 -10			
MS20392-1C21	79 -4			
MS20392-1C29	37 -35			
MS20392-1C35	37 -38			
MS20392-1C39	28 -39			
MS20392-1C7	61 -7			
MS20392-1C9	57 -13			
MS20392-11	106 -6			
MS20392-2C11	23 -65			
MS20392-2C13	22 -31			
MS20392-2C17	22 -36			
MS20392-2C19	84 -75			
MS20392-2C23	58A-36			
MS20392-2C25	22 -27			
MS20392-2C33	58A-37			
MS20392-2C35	53 -40			
MS20392-2C37	77 -25			
MS20392-2C49	22 -23			
MS20392-2C51	77 -29			
MS20392-2C7	5 -27			
MS20392-2C71	57 -33			
MS20392-2C89	79 -58			
MS20392-209	23 -40			
MS20392-3C11	57 -11			
MS20392-3C37	51 -15			
MS20392-3C43	51 -15			
MS20392-3C53	83 -3			
MS20392-4C15	57 -30			
MS20392-4C35	60 -20			
MS20392-4C81	74 -13			
MS2044N3	120 -3			
MS2044N4	29 -19			
MS20464-08	147 -4			
MS20470AD4	89 -10			
MS20816-4D	124 -40			
MS20822-10	102 -46			
MS20822-2B	123 -12			
MS20822-3	152 -12C			
MS20822-3D	116 -18			
MS20822-4B	97A-18			
MS20822-4D	94 -14			
MS20822-4D	118A-38A			
MS20822-4D	119A-40A			
MS20822-4J	140 -8			
MS20822-4K	128 -71			
MS20822-40	121 -86			
MS20822-5D	134 -50			
MS20822-6D	97 -35			
MS20823-10	132 -12A			
MS20823-4D	94 -19			
MS20823-6D	113 -6			
MS20825-4D	97 -22			
MS20825-4D	124 -73			
MS20825-5D	134 -13			
MS20825-6D	130 -110			
MS20826-2D	115 -3			
MS20826-4D	124 -50			
MS20913-1	97 -22			
MS20913-1D	125 -3			
MS20913-1S	118A-9			
MS2104L08	156A-11			
MS21042-02	152 -37			
MS21042-04	141 -83			
MS21042-06	58 -36			
MS21042-08	53 -64			
MS21042-3	5 -8			
MS21042-4	9 -3			
MS21042-5	130 -23			
MS21042-6	68 -4			
MS21042C4	82 -46			
MS21042L04	61 -34			
MS21042L06	9 -21			
MS21042L08	10 -13			
MS21042L3	10 -6			
MS21042L4	25 -33			
MS21042L5	71 -16			
MS21042L6	41 -2			
MS21042N08	128 -24			
MS21042N3	11 -8			
MS21042N4	11 -6			
MS21043-08	114 -29			
MS21043L06	129 -25			
MS21043L3	86 -7			
MS21044D3	92 -7			
MS21044L08	10 -16			
MS21044L3	18 -31			
MS21044N04	61 -25			
MS21044N06	40 -3			
MS21044N08	22 -39			
MS21044N3	9 -6			
MS21044N4	42 -2			
MS21044N5	12 -4			
MS21044N6	45 -10			
MS21045-06	130 -77			
MS21045-3	106 -11			
MS21045-4	106 -12			
MS21045L06	126 -46			

PART NUMBER	FIGURE & INDEX NUMBER	QTY PER ART	SOURCE CODE	REPAIR CODE
MS21045L08	62 -52			
MS21045L3	18 -40			
MS21045L4	35 -43			
MS21045L5	111 -11			
MS21045L6	28 -12			
MS21045L7	133 -11			
MS21046C06	4 -30			
MS21046C3	61 -38			
MS21046C4	100 -12			
MS21046C6	100 -11			
MS21046L6	98A-9			
MS21069-4	53 -74			
MS21069L08	146 -56			
MS2108N06	125 -60			
MS21083-8	47 -56E			
MS21083B04	160 -1			
MS21083C3	37 -22			
MS21083C4	77 -6			
MS21083N04	63 -47			
MS21083N06	61 -27			
MS21083N08	20 -16			
MS21083N3	25 -14			
MS21083N4	121 -83			
MS21083N5	86 -41			
MS21083N6	23 -78			
MS21103D3	88 -67			
MS21201KP4A	86 -53			
MS21209F1-15	128 -12			
MS21251-5L	82 -87			
MS21251-5S	82 -34			
MS21251B2S	88 -19			
MS21251B25	157A-34			
MS21251B25S	87 -58			
MS21251B3S	157A-58			
MS21251B5S	82 -9			
MS21252-2LS	157 -27			
MS21252-5LS	82 -35			
MS21252-5RS	84 -45			
MS21254-2LS	157 -27			
MS21256-1	82 -10			
MS21256-2	82 -88			
MS21256-3	82 -88			
MS21260-S2LH	89 -45			
MS21318-8	122 -20			
MS21919	140 -34			
MS21919DF40	97A-16			
MS21919DF8	114 -29			
MS21919DG10	94 -40			
MS21919DG12	130 -96			
MS21919DG14	138 -33			
MS21919DG23	132 -99			
MS21919DG3	55 -63			
MS21919DG4	38A-4			
MS21919DG42	128 -101			
MS21919DG46	139 -22			
MS21919DG48	125 -49			
MS21919DG56	128 -28			
MS21919DG6	120 -3			
MS21919DG64	125 -21			
MS21919DG7	55 -61			
MS21919DG8	130 -131			
MS21919D26	124 -74E			
MS21919G14	105 -13			
MS21919G6	105 -12			
MS21919G8	69 -54			
MS21919H12	100 -25			
MS21919H28	100 -25			
MS21919WDF4	140 -17			
MS21919WDG-4	94 -46			
MS21919WDG10	114 -5A			
MS21919WDG14	130 -37			
MS21919WDG16	141 -44			
MS21919WDG20	132 -152			
MS21919WDG3	61 -19			
MS21919WDG4	118 -30			
MS21919WDG5	135 -20			
MS21919WDG6	114 -5B			
MS21919WDG7	99 -12			
MS21919WDG8	114 -75			
MS21919WDG9	113 -4			
MS21919WG26	124A-29			
MS21920-30R	135 -5			
MS21920-59R	135 -5			
MS24187D1	141 -19			
MS24364-1032	85 -6			
MS24461-12	29 -19			
MS24461-4	43 -7			
MS24461-5	77 -94			
MS244615	29 -20			
MS24462-4	41 -24			
MS24463-4	77 -13			
MS24463-5	77 -7			
MS24524-21	144 -33			
MS24524-22	SUPD BY 12TS1-3			
MS24615-132	55 -39			
MS24621-11	57 -33B			
MS24629-10	146 -60			
MS24665-1	84 -5			
MS24665-130	5 -28			
MS24665-132	23 -41			
MS24665-134	45 -15			
MS24665-136	85 -6			
MS24665-149	122 -10			
MS24665-151	122 -6			
MS24665-153	68 -39			
MS24665-168	22 -23			
MS24665-170	58A-38			
MS24665-208	57 -11			
MS24665-210	82 -65			
MS24665-22	38 -5A			
MS24665-230	76 -6			
MS24665-283	57 -30			
MS24665-285	71 -89			
MS24665-3	92 -4			
MS24665-302	99 -5			

PART NUMBER	FIGURE & INDEX NUMBER	QTY PER ART	SOURCE CODE	REPAIR CODE
MS24665-353	74 -15			
MS24665-357	70 -5			
MS24665-5	80 -30			
MS24665-69	9 -16			
MS24665-816	130 -8			
MS24679-1	65 -13			
MS24690	68 -9			
MS24693-26	65 -11			
MS24693-27	153A-17			
MS24693-271	160 -4			
MS24693-273	151 -4			
MS24693-28	65 -17			
MS24693-30	65 -17			
MS24693BB30	63 -40			
MS24693BB33	62 -94			
MS24693B271	160 -3			
MS24693S25	107 -25			
MS24693S250	147 -27			
MS24693S258	46 -90			
MS24693S26	126 -46			
MS24693S270	28 -28			
MS24693S271	28 -38			
MS24693S272	37 -62			
MS24693S273	29 -10			
MS24693S277	52 -40			
MS24693S28	25 -58			
MS24693S280	46 -110			
MS24693S293	37 -65			
MS24693S3	90 -9			
MS24693S47	100 -24			
MS24693S48	107 -			
MS24693S49	118 -22			
MS24693S5	19 -6			
MS24693S50	46 -9			
MS24693S53	86 -15			
MS24693S55	46 -11			
MS24693S7	61 -25			
MS24693S73	77 -87			
MS24693S95	118A-58			
MS24694-3	142 -4			
MS24694-4	95 -11			
MS24694-47	61 -2			
MS24694-64	52 -4			
MS24694-9	47 -56E			
MS24694C5	24 -25			
MS24694C53	46 -62			
MS24694C7	24 -19			
MS24694S10	25 -39			
MS24694S11	25 -70			
MS24694S12	24 -6			
MS24694S12	25 -46			
MS24694S151	12 -3			
MS24694S2	125 -38			
MS24694S3	25 -74			
MS24694S4	20 -4			
MS24694S42	37 -24			
MS24694S48	2 -6			
MS24694S49	2 -11			
MS24694S5	23 -23			
MS24694S50	17 -10			
MS24694S51	25 -10			
MS24694S52	2 -9			
MS24694S54	18 -40			
MS24694S55	29 -25			
MS24694S57	23 -64			
MS24694S58	25 -11			
MS24694S6	25 -40			
MS24694S63	25 -16			
MS24694S64	51 -			
MS24694S7	147 -3			
MS24694S8	24 -6			
MS24694S8	25 -46			
MS24694S8	25 -46			
MS24694S8	25 -51			
MS24694S8	25 -52			
MS24694S95	118 -23			
MS25041-1	150 -15			
MS25041-10	150 -15			
MS25041-4	150 -15			
MS25068-23	144 -46			
MS25081-4	61 -24			
MS25082-1	142 -20			
MS25082-12	133 -29C			
MS25082-3	34 -12			
MS25083-2BB3	40 -29			
MS25083-2BB5	40 -31			
MS25123-1-2	141 -120			
MS25123-1-4	141 -120			
MS25123-4-2	141 -119			
MS25123-4-3	141 -119			
MS25171-1	99 -18			
MS25171-2S	151 -1			
MS25171-3	99 -17			
MS25171-3S	141 -102			
MS25171-35	141 -105			
MS25171-4	99 -16			
MS25224-1	144 -48			
MS25237-321	148 -13			
MS25237-327	61 -25			
MS25237-328	150 -15			
MS25237-368	150 -15			
MS25253-1	61 -31			
MS25253-4	143 -7			
MS27039-	40 -25			
MS27039-*	11 -24			
MS27039-0804	65 -20			
MS27039-0805	20 -16			
MS27039-0806	2 -17			
MS27039-0807	6 -2			
MS27039-0807	24 -32			
MS27039-0808	20 -27			
MS27039-0809	10 -13			
MS27039-0810	128 -20			
MS27039-0812	94 -45			
MS27039-0814	86 -61			

PART NUMBER	FIGURE & INDEX NUMBER	QTY PER ART	SOURCE CODE	REPAIR CODE
MS27039-0815	23 -17			
MS27039-0816	46 -112			
MS27039-0818	46 -27			
MS27039-0821	37 -32			
MS27039-0825	130 -79			
MS27039-0834	130 -121			
MS27039-1-05	25 -53			
MS27039-1-06	9 -6			
MS27039-1-07	20 -5			
MS27039-1-08	17 -6			
MS27039-1-09	9 -5			
MS27039-1-10	18 -4			
MS27039-1-11	23 -49			
MS27039-1-12	22 -49			
MS27039-1-13	25 -61			
MS27039-1-14	82 -3			
MS27039-1-15	69 -52			
MS27039-1-16	23 -53			
MS27039-1-18	88 -49			
MS27039-1-19	89 -60			
MS27039-1-20	106 -19			
MS27039-1-21	37 -36			
MS27039-1-22	131 -39			
MS27039-1-25	23 -77			
MS27039-1-26	86 -58			
MS27039-1-29	79 -21			
MS27039-1-32	86 -			
MS27039-1-35	83 -39			
MS27039-1-37	94 -27			
MS27039-1-38	83 -51			
MS27039-1-42	61 -43			
MS27039-1-43	62 -43			
MS27039-1-6	37 -28			
MS27039-1-8	83 -42			
MS27039-108	146 -48			
MS27039-4-10	121 -81			
MS27039-4-11	51 -30			
MS27039-4-33	79 -44			
MS27039-4-44	42 -44			
MS27039B0806	161 -2			
MS27039C0804	100 -19			
MS27039C0807	100 -18			
MS27039C1-06	54 -10			
MS27039DD0806	65 -9			
MS27039DD0808	131 -57			
MS27039DD1-07	139 -23			
MS27129-10	61 -76			
MS27212-6-3	141 -83			
MS27405-19P	106 -12			
MS27975-4	83 -10			
MS27981-1N	46 -22			
MS27981-3N	46 -23			
MS27981-4N	46 -27			
MS27981-5N	46 -26			
MS28741-4-0520	94 -3			
MS28775-010	68 -22			
MS28775-011	132 -56C			
MS28775-012	102 -10			
MS28775-014	102 -14			
MS28775-113	102 -22			
MS28775-221	74 -49			
MS28775-222	68 -25			
MS28775-225	74 -17			
MS28775-228	68 -7			
MS28775-229	68 -17			
MS28775-342	128 -9			
MS28776-22	68 -18			
MS28776M2-22	69 -20			
MS28778-10	139 -5			
MS28778-113	132 -32			
MS28778-4	94 -2			
MS28778-8	102 -24			
MS28782-18	75 -14			
MS28889-1	68 -8			
MS29512-04	124 -80A			
MS29512-04	124A-31A			
MS29512-06	114 -46			
MS29512-08	114 -45			
MS29512-10	114 -18			
MS29512-8	114 -11			
MS29513-010	121 -55			
MS29513-011	122 -44			
MS29513-012	121 -55			
MS29513-016	122 -23			
MS29513-10	121 -39			
MS29513-113	122 -26			
MS29513-115	114 -26			
MS29513-155	122 -34			
MS29513-20	121 -56			
MS29513-21	121 -55			
MS29513-232	118 -26			
MS29573-232	121 -53			
MS29693S51	147 -10			
MS3108B20-15S	141 -112			
MS33737-16	61 -21			
MS35036-243	144 -120			
MS35058-27	144 -45			
MS35059-21	61 -87			
MS35059-22	SUPD BY 8501K4 OR 2TL1-2			
MS35059-23	61 -89			
MS35059-27	55 -59	425		
MS35171-1S	141 -118			
MS35171-3S	141 -118			
MS35190-225	146 -15			
MS35190-238	47 -18			
MS35190-239	146 -18			
MS35190-241	46 -15			
MS35191-275	141 -114			
MS35198-27	61 -79			
MS35198-57	61 -75			
MS35202-12	144 -6			
MS35206-203	141 -30			
MS35206-205	152 -37			
MS35206-208	107 -38			

PART NUMBER	FIGURE & INDEX NUMBER	QTY PER ART	SOURCE CODE	REPAIR CODE
MS35206-212	147 -30			
MS35206-213	63 -46			
MS35206-214	141 -83			
MS35206-215	146 -72			
MS35206-216	20 -28			
MS35206-217	141 -86			
MS35206-219	61 -32			
MS35206-220	144 -9			
MS35206-223	122 -41			
MS35206-225	86 -2			
MS35206-226	42 -17			
MS35206-227	61 -48			
MS35206-228	41 -2			
MS35206-229	4 -30			
MS35206-230	1 -10			
MS35206-231	22 -43			
MS35206-232	22 -43			
MS35206-233	146 -8			
MS35206-234	58 -36			
MS35206-235	142 -18			
MS35206-238	161A-1			
MS35206-241	141 -39			
MS35206-242	37 -40			
MS35206-243	21 -13			
MS35206-244	17 -26			
MS35206-245	18 -35			
MS35206-246	38A-17			
MS35206-247	141 -89			
MS35206-251	45 -65			
MS35206-252	141 -47			
MS35206-256	61 -51			
MS35206-259	133 -18			
MS35206-260	157A-39			
MS35206-261	124 -47			
MS35206-262	83 -13			
MS35206-263	18 -39			
MS35206-337	54 -27			
MS35206242	36 -9			
MS35207-0807	46 -5			
MS35207-205	97A-40			
MS35207-225	46 -65			
MS35207-227	124 -2			
MS35207-245	101 -10			
MS35207-260	36 -6			
MS35207-261	28 -26			
MS35207-262	101 -18			
MS35207-263	41 -2			
MS35207-264	45 -60			
MS35207-265	60 -21			
MS35207-267	45 -57			
MS35207-271	121 -28			
MS35207-275	45 -56			
MS35214-14	152 -			
MS35214-15	160 -1			
MS35214-24	124 -109			
MS35215-29	64 -44			
MS35215-53	58 -36			
MS35215-55	61 -40			
MS35215-59	61 -40			
MS35215-62	61 -36			
MS35218-17	146 -36			
MS35219-25	141 -71			
MS35219-27	141 -66			
MS35219-62	92 -7			
MS35265-3C	56 -36			
MS35265-30	55 -31			
MS35265-41	90 -7			
MS35265-44	118A-33			
MS35265-66	97A-24			
MS35266-62	104 -12			
MS35266-63	126 -22			
MS35273-79	122 -16			
MS35275-244	108 -10			
MS35333-105	124 -109			
MS35333-37	142 -19			
MS35333-38	86 -16			
MS35333-39	54 -11			
MS35333-40	93 -21			
MS35333-42	62 -93E			
MS35333-43	62 -93B			
MS35333-72	153 -24			
MS35335-30	65 -12			
MS35335-31	23 -61			
MS35337-16	63 -30			
MS35338-40	161 -14			
MS35338-42	153 -13			
MS35338-43	97 -26			
MS35338-44	153A-5			
MS35426-13	9 -31			
MS35478-305	146 -40			
MS35489-10	133 -100			
MS35489-10S	135 -29			
MS35489-11	37 -48			
MS35489-111	103 -20			
MS35489-14	38A-13			
MS35489-15	127 -10			
MS35489-15S	134 -7			
MS35489-17	132 -45			
MS35489-18S	138 -66			
MS35489-3	131 -39			
MS35489-33	131 -35			
MS35489-37S	134 -7			
MS35489-4	90 -4			
MS35489-4D	133A-29			
MS35489-40	131 -31			
MS35489-46	46 -93			
MS35489-6	118A-39			
MS35489-62	86 -6			
MS35489-7	132 -64			
MS35489-7S	119 -41			
MS35489-75	118 -37			
MS35489-8S	124A-13			
MS35649-284	153 -25			
MS35650-3382	85 -56			
MS35675-1	54 -11			

PART NUMBER	FIGURE & INDEX NUMBER	QTY PER ART	SOURCE CODE	REPAIR CODE
MS35675-18	23 -49A			
MS39070-6	102 -37			
MS39071-10D	114 -19			
MS43DD3-26	151 -1			
MS43HT1-4	88 -5			
MS45904-61	83 -61			
MS51957-27	93 -9			
MS51957-28	149 -7			
MS51957-34	93 -12			
MS51957-6	160 -6			
MS51959-17	122 -14			
MS51959-45	6 -28			
MS9021-038	98 -11			
MS9024-12	141 -130			
MS9024-31	126 -44			
MS9134-01	98 -12			
MS9320-06	58 -36			
MS9353-02	61 -40			
MTH5	141 -110			
MVT68892-200	100 -11B			
MVT68892-250	100 -10			
M124F7	132 -121			
M124F7	132A-120			
M27039DD1-09	94 -46			
M34-14	96 -7			
M3424PA	131 -13			
NAS1054-6-5	30 -9			
NAS1054-8-19	11 -11			
NAS1054-8-7	11 -13			
NAS1054-8-9	11 -12			
NAS1055-6-8	32 -9			
NAS1056C6-032	131 -30			
NAS1081C08A5L	69 -36			
NAS1103-10	11 -8			
NAS1103-11	11 -19			
NAS1103-9	11 -9			
NAS1104-13	11 -5			
NAS1104-16	11 -4			
NAS1104-17	11 -3			
NAS1104-27	11 -2			
NAS1104-42	11 -14			
NAS1104-44	11 -15			
NAS1104-46	11 -7			
NAS1191-04P11H	146 -69			
NAS1223-1L	53 -29			
NAS1291-7	132A-4			
NAS1304-34	71 -6			
NAS1329A06-12	48 -21			
NAS1329A06-12	48 -22			
NAS1329A06-12	48 -23			
NAS1329A06K	1 -10			
NAS1329A06K200	47 -63			
NAS1329A08K75	42 -1			
NAS1329C08-12	46 -114			
NAS1329S08K75	40 -1			
NAS1352-08-08	153A-10			
NAS1352-08-8	153 -12			
NAS146-40	71 -41			
NAS146-47	28 -8			
NAS146-49	28 -9			
NAS1473A4	121 -83			
NAS1515MLS	62 -45A			
NAS1564-6-4	102 -2			
NAS1564-6D4	130 -58			
NAS1594D12-6	130 -52			
NAS1595-12	130 -119			
NAS1595-4	130 -123			
NAS1595-6	130 -116			
NAS1595-8	130 -65			
NAS1714D2-4NW	140 -28			
NAS178-6-3	30 -14			
NAS179-6	30 -9			
NAS179-8	11 -13			
NAS220-6	9 -30			
NAS220-7	55 -62			
NAS221-11	23 -45			
NAS287-25-2	87 -14			
NAS2906-52	69 -2			
NAS333CPA6	133 -29B			
NAS359-84-915	23 -81			
NAS363-1H440	79 -41			
NAS367-4H1450	79 -49			
NAS388-6-8	147 -30			
NAS395-13	37 -4			
NAS395-4-3	52 -41			
NAS395-5-3	46 -13			
NAS395-7-1	49 -25			
NAS397-10	97A-14			
NAS397-16	97 -30			
NAS397-18	97A-12			
NAS397-8	38A-3			
NAS417K17	82 -86			
NAS42DD12-32	74 -46			
NAS427-10	89 -21			
NAS427K10	82 -96			
NAS427K11	82 -14			
NAS427K12	87 -45			
NAS427K13	87 -35			
NAS427K14	87 -29			
NAS427K15	87 -71			
NAS427K16	82 -107			
NAS427K17	87 -21			
NAS427K18	84 -72			
NAS427K19	82 -76			
NAS427K20	82 -59			
NAS427K32	84 -15			
NAS427K6	88 -16			
NAS427K8	82 -107			
NAS427K9	82 -31			
NAS428-3-6	128 -11			
NAS428-3-7	24 -2			
NAS428-4-12	59 -5			
NAS428-4-6	41 -26			

PART NUMBER	FIGURE & INDEX NUMBER	QTY PER ART	SOURCE CODE	REPAIR CODE
NAS428H3-4	77 -95			
NAS428H3-6	34 -12			
NAS43-3-86	80 -22			
NAS43-4-12	51 -15			
NAS43-5-87	83 -2			
NAS43DD-1-48	157 -55			
NAS43DD0-51	122 -41			
NAS43DD0-12	87 -10			
NAS43DD0-32	144 -10			
NAS43DD1-40	65 -18			
NAS43DD1-48	161A-1			
NAS43DD1-8	46 -41			
NAS43DD3-128	94 -28			
NAS43DD3-15	37 -35			
NAS43DD3-16	93 -7			
NAS43DD3-192	107 -35			
NAS43DD3-21	25 -62			
NAS43DD3-24	54 -27			
NAS43DD3-26	37 -37			
NAS43DD3-28	94 -17			
NAS43DD3-30	83 -53			
NAS43DD3-32	23 -36			
NAS43DD3-34	129 -8			
NAS43DD3-39	18 -30			
NAS43DD3-40	94 -26			
NAS43DD3-42	114 -75			
NAS43DD3-44	94 -28			
NAS43DD3-6	151 -1			
NAS43DD3-6A	135 -30			
NAS43DD3-61	79 -45			
NAS43DD3-64	37 -42			
NAS43DD3-78	83 -54			
NAS43DD3-8A	61 -19			
NAS43DD3-9	23 -54			
NAS43DD4-10	87 -6			
NAS43DD4-34	37 -38			
NAS43DD4-8	87 -7			
NAS43DD5-20	57 -21			
NAS43DD6-2	59 -13			
NAS43DD6-20	57 -27			
NAS43DD7-60	73 -21			
NAS43DD8-16	53 -35			
NAS43HT-5-42	130 -4			
NAS43HT0-12	89 -12			
NAS43HT3-11	82 -63			
NAS43HT3-119	74 -11			
NAS43HT3-13	72 -32			
NAS43HT3-16A	146 -105			
NAS43HT3-21	51 -7			
NAS43HT3-23	107 -35			
NAS43HT3-24	51 -6			
NAS43HT3-4	87 -20A			
NAS43HT3-43	61 -40			
NAS43HT3-52	69 -53			
NAS43HT3-60	61 -37			
NAS43HT3-7	84 -40			
NAS43HT3-79	79 -28			
NAS43HT3-8	22 -49			
NAS43HT3-9	82 -108			
NAS43HT4-12	82 -57			
NAS43HT4-122	11 -20			
NAS43HT4-13	51 -31			
NAS43HT4-15	83 -7			
NAS43HT4-16	83 -4			
NAS43HT4-17	52 -31			
NAS43HT4-18	84 -71			
NAS43HT4-20	133 -90			
NAS43HT4-24	83 -4			
NAS43HT4-26	83 -7			
NAS43HT4-28	83 -8			
NAS43HT4-31	82 -106			
NAS43HT4-56	57 -1			
NAS43HT4-7	52 -31			
NAS43HT4-72	59 -1			
NAS43HT4-77	60 -2			
NAS43HT4-8	51 -26			
NAS43HT4-9	79 -46			
NAS43HT5-54	79 -29			
NAS43HT5-87	83 -30			
NAS43HT6-5A	74 -34			
NAS43HT8-26	79 -15			
NAS435-4	38A-6			
NAS446-1-3	128 -48			
NAS446-2-1	80 -9			
NAS446-2-3	63 -40			
NAS446-4-1	135 -27			
NAS446-4-3	114 -5E			
NAS446-5-1	61 -93			
NAS464-4A4	121 -5			
NAS464-5A23	121 -1			
NAS464P10L32A	28 -5			
NAS464P3-11	72 -31			
NAS464P3-5	88 -75			
NAS464P3-8	87 -81			
NAS464P4-26	71 -61			
NAS464P4-8	87 -85			
NAS464P4A10	72 -22			
NAS464P4A13	77 -4			
NAS464P4A8	70 -20			
NAS464P4A9	72 -26			
NAS464P5-14	71 -53			
NAS464P5A11	71 -18			
NAS464P5A13	77 -15			
NAS464P5A14	71 -35			
NAS464P5A15	71 -26			
NAS464P5A17	78 -4			
NAS464P5A28	71 -13			
NAS464P5A9	77 -36			
NAS464P5LA10	71 -45			
NAS464P6LA13	41 -2			
NAS464P6LA47	72 -2			
NAS464P6LA5	41 -2			
NAS464P6LA53	68 -2			
NAS464P7-28	71 -95			
NAS464P7-29	71 -87			

PART NUMBER	FIGURE & INDEX NUMBER	QTY PER ART	SOURCE CODE	REPAIR CODE
NAS500WKDD10	37 -62			
NAS506-4	43 -7			
NAS509-8	130 -28			
NAS514P632-8	54 -13			
NAS549L616	147 -24			
NAS549L8	141 -48			
NAS549M4	144 -11			
NAS551-4D	132 -56B			
NAS551-8D	102 -25			
NAS552-4D	132 -56A			
NAS552-8D	132 -30			
NAS554-8D	102 -23			
NAS557-6A	121 -12			
NAS561-4-12	122 -17			
NAS561CF14	23 -71			
NAS561CF4-14	22 -33			
NAS561CF6-10	24 -11			
NAS561CF6-16	22 -22			
NAS561CF6-18	23 -32			
NAS561C3-20	83 -34			
NAS561P3-10	91 -3			
NAS561P3-6	107 -8			
NAS561P3-7	91 -4			
NAS561P4-10	53 -27			
NAS561P4-11	55 -33			
NAS561P4-12	53 -23			
NAS561P4-14	75 -12			
NAS561P4-28	67 -5			
NAS561P4-8	53 -32			
NAS561P5-10	68 -31			
NAS561P5-12	53 -37			
NAS564-25	62 -53			
NAS564D8-4	114 -71			
NAS601-6	141 -62			
NAS601-9	9 -19			
NAS603-56	45 -57			
NAS603-7	37 -27			
NAS623-2-3	72 -17			
NAS623-3-52	122 -37			
NAS648-22RS	82 -8			
NAS649-32L	84 -18			
NAS651-16L	84 -19			
NAS662C2-26	149 -1			
NAS670-231	74 -5			
NAS671B8	148 -5			
NAS679A06	93 -13			
NAS679A3	15 -43			
NAS69-143	29 -11			
NAS72-5-005	71 -15			
NAS75-3-005	75 -7			
NAS75-3-014	5 -6			
NAS75-3-025	93 -28			
NAS75-3-027	106 -11			
NAS75-3-028	75 -3			
NAS75-3-110	79 -22			
NAS76A4-004	90 -10			
NAS76A4-009	90 -8			
NAS77-10-45	71 -91			
NAS77-6-40	71 -66			
NAS77-8-88	74 -30			
NAS77A5-7	71 -48			
NAS77A8-6	18 -9			
NC401V	142 -6			
NF10-32	23 -55			
NF10411-1	161 -13			
NH1000897-50	100 -16			
NK507-428R10	71 -106			
NO.48	38A-12			
NTA2435	86 -33			
NO80T	47 -88			
N6505	61 -28			
N6505	62 -28			
QR55-1	141 -32			
QR55-1	141 -32			
QR55-2	130 -78			
PAA700-2	118 -21			
PDM40	141 -129			
PD5KE9136	86 -38			
PK76XZ6-4	146 -12			
PK76XZ6-6	146 -12			
PN3A	45 -65			
PN3A	91 -13			
PT06CE-10-98C	118 -14C			
PT06CE-10-98S	119 -15			
PT06CE10-98S	118A-56			
P101-421-1	65 -16			
P106	152 -1			
P3689	141 -80			
P3689	143 -6			
P4460W	46 -108			
P48A19-44	93 -18			
P48A9-21	93 -19			
RA4500C4AL	94 -38			
RC20GF151K	144 -14			
RC20GF152K	144 -15			
RC20GF391K	142 -6			
REM5S2	71 -57			
RGS10-48	151 -3			
RG4	95 -6			
RR375	122 -33			
RR45FT	142 -2			
R102-12V	141 -43			
R180H	132A-78			
R180H	132A-123			
R180H	132A-127			
R180H	132A-133			
R180H	132A-136			
R4G	95 -11			
R4T	95 -2			
S-1891-10	118 -15			
SA24SDX11-1	64 -7			
SA24SDX11-1	64 -78			
SC628	141 -130			
SC628	150 -27			
SC628H	141 -132			

PART NUMBER	FIGURE & INDEX NUMBER	QTY PER ART	SOURCE CODE	REPAIR CODE
SC628P	141 -131			
SL350	98 -13			
SL350	98A-3			
SPA66232-07	46 -75			
SPA66253-07	46 -74			
ST5A	71 -38			
ST5A	77 -19			
S1003-4A	89 -3			
S1003-64B	72 -3			
S1003-64B	72 -9			
S1003-7A	42 -42			
S1003-80A	22 -26			
S1003-80A	23 -80			
S1003-81A	23 -60			
S1003-84	90 -9			
S1003-87A	22 -26			
S1003-9A	128 -8			
S1004-11B	71 -67			
S1004-14A	71 -11			
S1004-14A	77 -12			
S1004-15A	92 -56			
S1004-44A	20 -8			
S1004-44A	20 -16			
S1004-44A	20 -20			
S1004-44A	90 -1			
S1004-51A	71 -12			
S1004-57A	24 -18A			
S1004-57A	24 -19A			
S1015	140 -3A			
S1021A4-10	49 -14			
S1021A4-4	1 -14			
S1021A4-4	1 -40			
S1021A4-4	1 -41			
S1021A4-4	1 -45			
S1021A4-4	1 -46			
S1021A4-4	47 -47			
S1021A4-4C	1 -44			
S1021A4-8C	1 -19			
S1021A4-8C	51 -4			
S1021A4-8C	52 -15			
S1021A4-8C	53 -15			
S1021A4-8C	54 -16			
S1021A4-8C	55 -15			
S1021A4-8C	56 -16			
S1021A4-8C	58A-45			
S1021A4-8C	60A-47			
S1021A6-6C	46 -15			
S1021A6-8	147 -6			
S1021A6-8	147 -32			
S1021A6-8C	46 -13			
S1021A8-12	38A-9			
S1021A8-6	47 -38			
S1021A8-6	47 -43			
S1021A8-8C	62 -74			
S1021A8-8C	131 -37			
S1021A8-8C	133 -48			
S1021A8-8C	133A-46			
S1021Z10-8C	61 -93			
S1021Z4-3	47 -98			
S1021Z4-4C	48 -2			
S1021Z4-4C	48 -4			
S1021Z4-4C	48 -8			
S1021Z4-4C	48 -16			
S1021Z4-4C	48 -19			
S1021Z4-5C	79 -70			
S1021Z4-6	1 -61			
S1021Z4-6	128 -47			
S1021Z4-6	135 -38			
S1021Z4-8	61 -83			
S1021Z4-8	61 -85			
S1021Z4-8	62 -83			
S1021Z4-8	62 -85			
S1021Z4-8C	1 -43			
S1021Z4-8C	53 -20			
S1021Z4-8C	53 -22			
S1021Z4-8C	54 -22			
S1021Z4-8C	54 -25			
S1021Z4-8C	55 -20			
S1021Z4-8C	55 -22			
S1021Z4-8C	56 -22			
S1021Z4-8C	56 -25			
S1021Z6-6	80 -8			
S1021Z6-6	80 -12			
S1021Z6-6	101 -2			
S1021Z6-6	129 -37			
S1021Z6-6	129A-53			
S1021Z6-6B	20 -13			
S1021Z6-6C	24 -14			
S1021Z6-6C	51 -2			
S1021Z6-8	142 -12			
S1021Z6-8B	152 -35			
S1021Z8-10	135 -26			
S1021Z8-5B	141 -116B			
S1021Z8-6	55 -64			
S1021Z8-6	56 -69			
S1021Z8-6	131 -3			
S1021Z8-6C	46 -57			
S1021Z8-7	21 -1			
S1021Z8-7	21 -2			
S1021Z8-7	21 -4			
S1021Z8-7	21 -7			
S1021Z8-7	21 -10			
S1021Z8-7	49 -2			
S1021Z8-7	49 -3			
S1021Z8-7	49 -4			
S1021Z8-7	49 -5			
S1021Z8-8	38A-4			
S1021Z8-8	38A-6			
S1021Z8-8	114 -5C			
S1021Z8-8	121 -7			
S1021Z8-8	121 -90			
S1021Z8-8C	63 -36			
S1021Z8-8C	63 -39			
S1021Z8-8C	63 -42			
S1021Z8-8C	64 -36			

PART NUMBER	FIGURE & INDEX NUMBER	QTY PER ART	SOURCE CODE	REPAIR CODE
S1021Z8-8C	64 -39			
S1021Z8-8C	64 -42			
S1021Z8-9	135 -11			
S1021Z8-9	135 -42			
S1022A4-6	46 -9C			
S1022A6-10	49 -27			
S1022A6-8	46 -17			
S1022A6-8C	47 -5			
S1022A6-8C	47 -6A			
S1022A6-8C	47 -9			
S1022A6-8C	47 -13			
S1022A6-8C	47 -16			
S1022A6-8C	47 -18			
S1022A6-8C	47 -23			
S1022A6-8C	47 -28			
S1022A6-8C	47 -31			
S1022A6-8C	47 -58			
S1022A6-8C	47 -58			
S1022A6-8C	47 -69			
S1022A6-8C	47 -73			
S1022A6-8C	47 -74			
S1022A6-8C	47 -76			
S1022A6-8C	47 -79			
S1022A6-8C	47 -91			
S1022A6-8C	47 -95			
S1022Z2-38	152 -26			
S1022Z4-12C	46 -102			
S1022Z4-4B	63 -8			
S1022Z4-4B	64 -8			
S1022Z4-6	35 -58			
S1022Z4-6	145 -6			
S1022Z4-6C	46 -96			
S1022Z6-4	52 -13			
S1022Z6-6	42 -30			
S1022Z6-6	51 -7			
S1022Z6-6	55 -12			
S1022Z6-6	55 -12			
S1022Z6-6	58A-41			
S1022Z6-6	144 -24			
S1022Z6-8C	52 -41			
S1022Z6-8C	54 -82			
S1022Z6-8C	56 -80			
S1022Z8-8	121 -88			
S1022Z8-6	28 -37			
S1023Z4-4	51 -22			
S1023Z6-6C	6 -29			
S1023Z6-6C	49 -23			
S1023Z6-8	51 -23			
S1023Z6-8C	49 -22			
S1026BG	125 -28			
S1026BG	125 -47			
S1026BG	125 -56			
S1026BG	125 -62			
S1026BG	128 -95			
S1026BG	128 -108			
S1026BG	129 -20			
S1026BG	129A-4			
S1026BG	129A-18			
S1026BG	131 -62			
S1026BG	131 -71			
S1026BG	132 -18A			
S1026BG	132A-27			
S1026BG	133 -73			
S1026BG	133 -82			
S1026BG	133A-71			
S1026BG	133A-80			
S1026B6	129 -16			
S1050-1	26 -3			
S1050-1	26 -4			
S1050-1	26 -5			
S1050-1	129 -22			
S1050-1	131 -55			
S1050-1	133 -66			
S1050-1	133A-64			
S1050-1	138 -67			
S1050-1	152 -29			
S1050-2	129 -17			
S1050-3	26 -6			
S1051-1	138 -58			
S1053E12T	129 -19			
S1053E12T	129A-17			
S1053E16T	129 -15			
S1053E16T	129 -43			
S1053E16T	129A-3			
S1053E20W	104 -17			
S1053E28W	128 -26			
S1053E32W12.0	125 -46			
S1053E32W16.0	125 -27			
S1053E32W67.0	125 -57			
S1053K32	128 -81			
S105B-2	80 -			
S1067B1	47 -18			
S1067C1	6 -28			
S1067C1	6 -29			
S1067C1	6 -32			
S1067C1	6 -33			
S1067C1	6 -34			
S1067C1	49 -24			
S1071-1	124 -74A			
S1071-1	124 -74J			
S11K-4R	85 -28			
S11K3A	87 -55			
S11K3A	88 -45			
S11K3A	89 -39			
S11K4R	82 -23			
S11K4R	84 -51			
S11K4R	92 -24			
S11L-62C	85 -30			
S11L31C	87 -56			
S11L31C	88 -47			
S11L31C	89 -40			
S11L61C	82 -24			
S11L61C	84 -53			
S11L61C	85 -29			
S11L61C	92 -25			

PART NUMBER	FIGURE & INDEX NUMBER	QTY PER ART	SOURCE CODE	REPAIR CODE
S11L62C	82 -25			
S11L62C	84 -52			
S11L62C	92 -26			
S11L74C	87 -57			
S11L74C	88 -46			
S11L74C	89 -41			
S1102-1	20 -7			
S1102-1	46 -65			
S1102-1	147 -24			
S1103-1	147 -23			
S1104-3	61 -35			
S1104-3	62 -35			
S1104-3	96 -4			
S1104-3	106 -6			
S1105-4	71 -102			
S1106-3	106 -11			
S1106-4	92 -70			
S11065-21	74 -26			
S1112-3	1 -10			
S1129-3-0300	117 -3			
S1129-3-0444	117 -3			
S1129-3-320	117 -3			
S1129-3-370	117 -3			
S1129-4-0130	97 -33			
S1129-4-0130	97A-53			
S1129-4-0130	117 -25			
S1129-4-130	117 -25			
S1129-6-017C	97A-56			
S1129-6-0170	97 -36			
S1130-1	124 -74B			
S1130-1	124A-34			
S1130-4	138 -22			
S1131-1	124 -74C			
S1131-4	138 -21			
S1133-6	138 -17			
S1155-2	99 -11			
S1167-4-	94 -21			
S1167-4-	94 -22			
S1167-4-214	94 -39			
S1167-4-300	94 -42			
S1168-2-	123 -3			
S1196-2	147 -24			
S1216-1	61 -24			
S1216-1	62 -24			
S1258-1	124 -74D			
S1258-1	124 -76			
S1258-1	124A-28			
S13B	46 -70			
S132-10P17	71 -94			
S132-10P24	SUPD BY 5041003-3			
S133-3P13	81 -4			
S133-4-10	73 -25			
S133-4P32	71 -62			
S1362-6	48 -15			
S138-1	116 -25			
S138-1	124 -58			
S138-1	124A-19			
S138-1	135 -19			
S1431-4	120 -24			
S1431-4	140 -4			
S1450-14S18-016	130 -44			
S1450-4-10-03	46 -113			
S1450-4-12-03	72 -29B			
S1450-4A11-06	161 -9			
S1450-5-10-12	71 -28			
S1450-5-16-03	130 -10			
S1467-2	152 -4			
S1477-08	6 -3			
S1477-08	6 -8			
S1477-08	6 -12			
S1477-08	6 -19			
S1477-08	6 -20			
S1477-08	6 -21			
S1477-08	17 -24			
S1477-08	21 -15			
S1477-08	129 -42			
S1477-08	129A-2			
S1477-08	144 -62			
S1477-3	20 -6			
S1477-3	21 -1			
S1477-3	21 -2			
S1477-3	21 -16			
S1477-3	21 -25			
S1481-1	124 -74H			
S1495-4	38A-3			
S1495-6	138 -2			
S1495-6	138 -5			
S1589-3	44 -2			
S1693-2	154 -3			
S1693-2	154 -7			
S1693-3	132 -100			
S1693-3	132A-82			
S1693-3	155 -10			
S1695-1	152 -7			
S1695-1	152 -8			
S1695-1	152 -9			
S1695-1	152 -10			
S1695-1	152 -11			
S1695-1	152 -12			
S1695-1	152 -13			
S1695-1	152 -14			
S1695-1	152 -15			
S1695-2	152 -17			
S1695-2	152 -18			
S1695-2	152 -19			
S1695-2	152 -20			
S1696-1	63 -49			
S1696-1	64 -52			
S1696-1	142 -9			
S1696-1	152 -16			
S1696-2	152 -21			
S1722-35	135 -46			
S1741-1	154 -4			
S1741-1	154 -7			

PART NUMBER	FIGURE & INDEX NUMBER	QTY PER ART	SOURCE CODE	REPAIR CODE
S1891-10	118A-47			
S1891-10	119 -62			
S1891-10	119A-82			
S1891-20	105 -18			
S1891-48	133 -25			
S1891-64	125 -78			
S2013-3	53 -27A			
S2013-3	54 -33			
S2014-3	53 -27B			
S2014-3	54 -34			
S202R8	41 -1			
S202R8	43 -44			
S202VW	48 -2			
S202VW	48 -4			
S202VW	48 -9			
S202VW	48 -10			
S202VW	48 -11			
S202VW	48 -12			
S202VW	48 -14			
S202VW	48 -17			
S202VW	48 -18			
S202VW	48 -19			
S259-4LL5.01	65 -3			
S290-1032	153A-3			
S290-1032	153B-3			
S290D1032	2 -7			
S290D1032	51 -			
S290D1032	52 -5			
S290D1032	153 -3			
S292-7-2.00	141 -21			
S295-2TT5.01	65 -14			
S3-11A	89 -28			
S3-175	37 -12			
S307-5	37 -47			
S378-1	87 -17			
S378-1	87 -24			
S378-1	87 -31			
S378-1	87 -41			
S378-1	87 -47			
S378-1	87 -74			
S378-1	88 -12			
S378-1	88 -24			
S378-1	88 -30			
S378-1	88 -39			
S378-1	88 -48			
S378-1	88 -56			
S378-1	89 -28			
S378-1	89 -31			
S378-1	89 -52			
S378-1	89 -60			
S378-1	159 -17			
S378-2	157 -7			
S378-2	157A-8			
S378-3	82 -11			
S378-3	84 -24			
S378-3	84 -29			
S378-3	84 -57			
S378-3	84 -62			
S378-3	92 -19			
S378-3	92 -34			
S378-3L	82 -71			
S378-3L	82 -92			
S378-3L	82 -98			
S378-3L	85 -12			
S378-3L	85 -43			
S378-4	82 -43			
S378-4	82 -54			
S378-4	82 -81			
S378-4	82 -103			
S378-4	84 -10			
S378-4	84 -68			
S378-4	85 -9			
S378-4	85 -22			
S378-4	92 -13			
S378-4	92 -29			
S378-4	92 -39			
S378-4	157 -11			
S378-4	157A-13			
S378-4	159 -23			
S382-1	61 -60			
S382-1	61 -61			
S382-1	62 -60			
S382-1	62 -61			
S382-2	61 -18			
S382-2	61 -59			
S382-2	62 -18			
S382-2	62 -59			
S382-3	144 -37			
S382-3	144 -47			
S387-4	92 -86			
S392-1	61 -10			
S392-1	62 -10			
S392-3	144 -47			
S394	82 -26			
S394	82 -61			
S45A12	128 -22			
S45A12	135 -12			
S45A13	114 -153B			
S51-10	114 -14			
S51-10	132 -35			
S51-10	132 -46			
S51-10	132 -49			
S51-10	132A-47			
S51-10	132A-51			
S51-10	132A-58			
S51-10	136 -3			
S51-10	136 -9			
S51-10	136 -12			
S51-10	139 -15			
S51-10	139 -19			
S51-10	139 -27			
S51-10	139 -32			
S51-10	139 -35			
S51-10	139 -38			
S51-12	97A-11			

PART NUMBER	FIGURE & INDEX NUMBER	QTY PER ART	SOURCE CODE	REPAIR CODE
S51-12	98 -27			
S51-4	97A-13			
S51-4	98 -29			
S51-4	117 -11			
S51-4	121 -8			
S51-4	121 -84			
S51-4	121 -85			
S51-4	128 -38			
S51-4	128 -42			
S51-4	128 -58			
S51-4	128 -63			
S51-4	132 -13			
S51-4	132 -62			
S51-4	132A-5			
S51-4	132A-16			
S51-4	139 -24			
S51-6	114 -4			
S51-6	118 -39			
S51-6	118A-66			
S51-6	119 -59			
S51-6	119A-80			
S51-6	120 -2			
S51-6	121 -10			
S51-6	121 -107			
S9028E905	127 -37			
TA607D13	69 -44			
TF10052	120 -17			
TRA2435	86 -34			
TSI0520K SPEC1	98 -			
TSI0520K SPEC2	98 -			
TSI0520K	98 -6			
TSI0520K	98 -6			
TSI0520N SPEC1	98A-			
TSI0520N SPEC2	98A-			
TSI0520N SPEC1	98A-			
TSI0520N SPEC2	98A-			
TVA1312	141 -130			
TVA1312	141 -131			
TVA1312	141 -132			
TWF41-52P	74 -3			
TY30X	152 -39			
TY35X	152 -38			
TY523M	99 -9			
T1-3-4	63 -3			
T1-3-4	64 -3			
T20057	86 -21			
T20057	158 -21			
T20057	158 -22			
T20167	86 -21			
T20167	158 -22			
T2114	86 -21			
T2153	86 -18			
T640369-6-0172	113 -2			
T66110-10-023	130 -35			
T791	147 -8			
UTC161619	147 -25			
U4301S12-200	97A-27			
U4301S12-200	98 -41			
U4301S12-200	125 -2			
U84-210SH	100 -13			
U84C400SS	100 -17			
U84C400SS	100 -17A			
U86C400SS	100 -17			
U86C500SS	104 -6			
U86C500SS	104 -16			
VA10074	143 -7			
VF10-112	151 -2			
VT10-50	151 -3			
VT10-50	151 -3			
VT10-56-1	151 -3			
VT11-50-5	151 -3			
V37A5019	SUPD BY V57A5019			
V57A5019	SUPD BY NH1000897-50			
WB4820	93 -25			
WC040	97A-17			
WC040	98 -33			
WM203	46 -89			
WS5C-U	151 -4			
WWD152	71 -3			
X260	99 -4			
ZF302	135 -15			
ZR675	134 -53			
OR55-2	141 -126			
03W041145	122 -35			
0310113	30 -13			
0310196-13	52 -34			
0310196-3	51 -21			
0310196-3	52 -28			
0310196-4	51 -20			
0310196-4	53 -61			
0310196-4	54 -68			
0310196-4	55 -55			
0310196-4	56 -60			
0310196-4	57 -9			
0310196-4	58 -13			
0310196-4	58A-13			
0310196-4	60 -14			
0310196-4	60A-17			
0310293-7	SUPD BY 1260074-6			
0310295	91 -6			
0310295	91 -6			
0310296	91 -14			
0310297-1	91 -5			
0310298-1	91 -11			
0310332	91 -4			
0310332	91 -4			
0310362-5	91 -12			
0310362-7	91 -12			

PART NUMBER	FIGURE & INDEX NUMBER	QTY PER ART	SOURCE CODE	REPAIR CODE
0310422-1	91 -2			
0312155-10	141 -117			
0312155-4	29 -28			
0322526-6	118 -15			
0322526-6	118A-47			
0322526-6	119 -62			
0322526-6	119A-82			
0322541	121 -77			
0322546	118 -20A			
0362	150 -14			
04-05-002	155 -17			
0411412-8	84 -65			
0411523	87 -62			
0411523	88 -53			
0411523	89 -42			
0411524	87 -65			
0411524	89 -43			
0411783	82 -28			
0411783	82 -66			
0411849	13 -34			
0412007-6	97 -31			
0412007-6	97A-39			
0412467	30 -16			
0412467	30 -17			
0413307-5	38A-8			
0413307-6	38A-8			
0432126	89 -64			
0432126-1	87 -79			
0432134-1	87 -4			
0432134-1	88 -8			
0450277-11	101 -25			
0450277-11	132A-56			
0450277-2	101 -23			
0450277-3	101 -24			
0510160	82 -2			
0510160	82 -109			
0511062-6	145 -6			
0511199-20	124 -35			
0511199-20	124 -56			
0511199-20	124A-24			
0511319-1	141 -59			
0513052-11	62 -99			
0514036-1	53 -23			
0514036-1	54 -28			
0514037-1	53 -39			
0514037-1	54 -46			
0522629	92 -47			
0522629	92 -74			
0522629	92 -76			
0522629	92 -78			
0523615-1	28 -39			
0523616-1	28 -39			
0541139	83 -14			
0541140	83 -11			
0541144	83 -20			
0541148	83 -19			
0541149	83 -16			
0541151	83 -15			
0543036-1	SUPD BY MS28889-1			
0543036-3	68 -8			
060745-00	142 -24			
066-1029-01	150 -24			
066-3018-00	150 -24			
066-4002-00	150 -25			
071-0004-00	150 -24			
071-1021-00	151 -3			
071-1034-00	151 -4			
07100	70 -17			
07196	70 -7			
0721303-3	37 -67			
0721303-3	118 -27			
0721303-3	118A-61			
0721303-3	119 -51			
0721303-3	119A-66			
0721303-37	37 -64			
0721303-38	37 -68			
0721303-4	118 -28			
0721303-4	118A-62			
0721303-7	37 -66			
0721303-7	118 -25			
0721303-7	118A-59			
0721303-7	119 -50			
0721303-7	119A-65			
0721303-8	118 -21			
0721303-8	118A-56			
0721304-1	31 -21			
073-0044-00	158 -15			
0750117-31	101 -11			
0770039-1	141 -18			
0771	141 -70			
0800007-3	SUPD BY CM3			
0800030-19	46 -73			
0800056-33	1 -17			
0800056-34	1 -17			
0800102-2	1 -33			
0800106-209	38A-4			
0800106-210	38A-6			
0800106-337	121 -93			
0800106-346	121 -93			
0800106-372	118 -42			
0800106-372	118A-69			
0800165-1	1 -9			
0800181-13	1 -70			
0800181-15	1 -32			
0800181-20	63 -48			
0800181-20	64 -51			
0800181-21	63 -50			
0800181-22	1 -49			
0800181-23	1 -48			
0800181-24	1 -49			
0800181-25	1 -48			
0800181-34	1 -60			
0800181-35	1 -60			
0800181-56	42 -45			
0800186-1	135 -8			

PART NUMBER	FIGURE & INDEX NUMBER	QTY PER ART	SOURCE CODE	REPAIR CODE
0800302-11	149 -			
0800302-6	149 -5			
0800303-5	149 -4			
0800351-7	1 -80			
0800400-201	119 -32			
0800400-201	119A-58			
0800400-202	119 -32			
0800400-202	119A-58			
0800400-204	119 -40			
0800400-214	119 -34			
0800400-214	119A-90			
0800400-217	119 -43			
0800400-218	119 -43			
0800400-49	118 -36			
0800400-64	118A-64			
0800400-73	94 -5			
0800400-74	94 -6			
0811088-1	24 -28			
0811132-3	122 -13			
0811132-4	122 -15			
0811133-1	1 -52			
0811133-10	1 -54			
0811133-2	1 -52			
0811133-3	1 -53			
0811133-4	1 -53			
0811133-9	1 -54			
0811296-1	52 -41			
0811296-1	54 -82			
0811296-1	56 -80			
0811350-1	SUPD BY 0811350-7			
0811350-2	SUPD BY 0811350-8			
0811350-7	11 -1			
0811350-8	11 -10			
0811388-3	46 -18			
0811419-1	46 -12			
0811419-1	46 -13			
0811419-4	46 -13			
0811419-5	46 -13			
0811419-6	46 -13			
0811500-1	2 -8			
0811500-1	29 -25			
0811575-7	46 -19			
0811581-5	49 -17			
0811581-5	49 -19			
0811723-5	25 -24			
0811790-1	47 -39			
0811790-3	47 -40			
0811790-4	47 -44			
0811790-5	47 -44			
0811835-1	51 -23			
0811835-1	52 -18			
0811835-2	51 -23			
0811835-2	52 -19			
0811870-1	22 -20			
0811875-15	46A-4			
0811876-16	46A-4			
0811893-6	22 -23			
0811893-7	22 -23			
0811894-1	22 -19			
0811895-1	22 -38			
0811993-3	52 -1			
0812113-1	52 -26			
0812115-2	53 -54			
0812115-2	54 -61			
0812115-2	55 -48			
0812115-2	56 -53			
0812115-3	52 -27			
0812200-102	51 -15			
0812200-102	52 -29			
0812200-103	51 -14			
0812200-111	51 -12			
0812200-128	53 -57			
0812200-128	54 -64			
0812200-128	55 -51			
0812200-128	56 -56			
0812200-129	51 -10			
0812200-129	52 -21			
0812200-130	51 -11			
0812200-130	52 -22			
0812200-135	51 -19			
0812200-142	51 -9			
0812200-147	52 -23			
0812200-38	51 -13			
0812200-38	52 -32			
0812200-47	51 -16			
0812200-49	51 -13			
0812200-50	51 -13			
0812200-50	52 -33			
0812200-52	51 -18			
0812200-81	51 -22			
0812200-81	52 -20			
0812201-1	51 -17			
0812209-4	1 -39			
0812224-1	51 -3			
0812224-1	53 -13			
0812224-1	55 -13			
0812224-5	51 -3			
0812224-5	52 -14			
0812224-5	53 -13			
0812224-5	54 -14			
0812224-5	55 -13			
0812224-5	56 -14			
0812480-97	1 -34			
0812686-1	151 -3			
0812730-16	52 -10			
0812730-16	53 -8			
0812730-16	54 -9			
0812730-16	55 -8			
0812730-16	56 -9			
0812730-17	52 -10			
0812730-17	53 -8			
0812730-17	54 -9			
0812730-17	55 -8			
0812730-17	56 -9			
0812730-31	53 -			
0812730-32	53 -			
0812730-35	53 -3			
0812730-35	55 -3			
0812730-36	53 -3			
0812730-36	55 -3			
0812730-37	53 -17			
0812730-41	55 -8			
0812730-41	56 -8			
0812730-45	53 -18			
0812730-45	54 -19			
0812730-45	55 -18			
0812730-45	56 -19			
0812730-49	53 -			
0812730-50	53 -			
0812730-53	53 -3			
0812730-53	55 -3			
0812730-54	53 -3			
0812730-54	55 -3			
0812730-55	53 -17			
0812730-56	54 -18			
0812730-57	53 -			
0812730-58	53 -			
0812730-59	53 -3			
0812730-59	54 -3			
0812730-59	55 -3			
0812730-59	56 -3			
0812730-60	53 -3			
0812730-60	54 -3			
0812730-60	55 -3			
0812730-60	56 -3			
0812730-61	53 -8			
0812730-61	54 -8			
0812730-61	55 -8			
0812730-61	56 -8			
0812730-67	54 -3			
0812730-67	56 -3			
0812730-68	54 -3			
0812730-68	56 -3			
0812730-70	54 -8			
0812730-70	56 -8			
0812732-10	54 -28			
0812732-11	56 -27			
0812732-2	53 -23			
0812732-3	55 -22			
0812732-6	53 -23			
0812732-7	55 -22			
0812732-8	54 -28			
0812732-9	56 -27			
0812742-1	53 -36			
0812742-1	54 -43			
0812742-2	SUPD BY 0812742-7			
0812742-7	53 -31			
0812742-7	54 -38			
0812743-5	53 -38			
0812743-5	54 -45			
0812743-8	55 -34			
0812743-8	56 -39			
0812743-9	53 -28			
0812743-9	54 -35			
0812745-1	53 -1			
0812745-1	55 -2			
0812745-2	53 -62			
0812745-2	54 -69			
0812745-2	55 -56			
0812745-2	56 -61			
0812746-1	53 -24			
0812746-1	54 -29			
0812751-3	53 -19			
0812751-4	53 -19			
0812751-5	53 -21			
0812751-5	55 -21			
0812751-5	56 -23			
0812751-6	54 -20			
0812751-7	54 -20			
0812751-8	55 -19			
0812751-8	56 -20			
0812751-9	55 -19			
0812751-9	56 -20			
0812755-1	53 -5			
0812755-1	55 -5			
0812755-2	53 -5			
0812755-2	54 -5			
0812755-2	55 -5			
0812755-2	56 -5			
0812756-1	53 -22			
0812756-1	55 -22			
0812757-1	18 -40			
0812757-13	53 -46			
0812757-13	54 -53			
0812757-13	55 -40			
0812757-13	56 -45			
0812757-15	53 -49			
0812757-15	54 -56			
0812757-15	55 -43			
0812757-15	56 -48			
0812757-16	18 -40			
0812757-2	53 -43			
0812757-2	54 -50			
0812757-2	55 -36			
0812757-2	56 -41			
0812757-5	55 -53			
0812757-5	56 -58			
0812757-8	53 -51			
0812757-8	53 -59			
0812757-8	54 -58			
0812757-8	54 -66			
0812757-8	55 -45			
0812757-8	56 -50			
0812760-21	55 -			
0812760-22	55 -			
0812760-25	55 -17			
0812760-28	55 -			
0812760-29	55 -			
0812760-32	55 -17			
0812760-33	56 -18			
0812760-34	55 -			
0812760-35	55 -			
0812764-2	55 -22			
0812764-2	56 -27			
0812765-1	55 -29			
0812765-1	56 -34			
0812767-1	55 -35			
0812767-1	56 -40			
0812780-15	54 -			
0812780-16	54 -			
0812780-7	54 -			
0812780-8	54 -			
0812781-10	56 -			
0812781-15	56 -			
0812781-16	56 -			
0812781-9	56 -			
0812782-10	52 -			
0812782-3	52 -			
0812782-4	52 -			
0812782-9	52 -			
0812785-1	54 -24			
0812785-1	56 -24			
0812786-1	54 -21			
0812786-15	54 -21			
0812786-16	56 -21			
0812786-3	SUPD BY 0812786-16			
0812787-1	54 -26			
0812787-1	56 -26			
0812787-2	54 -27			
0812787-2	56 -27			
0812808-1	46 -83			
0812808-1	57 -32			
0812808-1	59 -22			
0812809-11	52 -13			
0812809-11	53 -11			
0812809-11	54 -12			
0812809-11	55 -11			
0812809-11	56 -12			
0812809-12	52 -13			
0812809-12	53 -11			
0812809-12	54 -12			
0812809-12	55 -11			
0812809-12	56 -12			
0812809-15	52 -17			
0812809-32	52 -16			
0812809-34	52 -17			
0812809-35	52 -15			
0812809-36	52 -15			
0812816-20	58 -37			
0812816-20	60 -41			
0812816-21	58 -37			
0812816-21	60 -41			
0812821-12	57 -34			
0812821-15	57 -34			
0812863-1	57 -33A			
0812863-1	58 -38			
0812863-1	60 -42			
0812863-2	57 -33A			
0812863-2	58 -38			
0812863-2	60 -43			
0812863-3	57 -33B			
0812863-4	57 -33B			
0812863-7	58 -39			
0812863-7	60 -42			
0812863-8	58 -39			
0812863-8	60 -43			
0812876-3	46 -103			
0812907-3	92 -79			
0812907-7	92 -79			
0812938-2	57 -16			
0812938-2	58 -20			
0812938-2	58A-20			
0812938-2	59 -15			
0812938-2	60 -32			
0812938-2	60A-32			
0812966-1	51 -4			
0812966-1	52 -15			
0812966-1	53 -14			
0812966-1	54 -15			
0812966-1	55 -14			
0812966-1	56 -15			
0812966-1	58A-44			
0812966-1	60A-46			
0812977-1	51 -6			
0812977-1	53 -9			
0812977-1	55 -9			
0812977-1	57 -1			
0812977-1	58 -6			
0812977-1	58A-6			
0812977-1	59 -1			
0812977-1	60 -3			
0812977-1	60A-3			
0812978-1	51 -5			
0812978-1	51 -32			
0812978-1	52 -45			
0812978-1	53 -10			
0812978-1	53 -73			
0812978-1	54 -75			
0812978-1	54 -80			
0812978-1	55 -10			
0812978-1	55 -73			
0812978-1	56 -78			
0812998-1	57 -1			
0812998-1	58 -5			
0812998-1	58A-5			
0812998-2	60 -4			
0812998-2	60A-6			
0812999-1	57 -1			
0812999-1	58 -4			
0812999-1	58A-4			
0813017-1	42 -37			
0813017-2	42 -37			
0813277-1	91 -8			
0813300-129	77 -47			
0813300-131	77 -47			

PART NUMBER	FIGURE & INDEX NUMBER	QTY PER ART	SOURCE CODE	REPAIR CODE
0813300-33	77 -21			
0813300-35	73 -36			
0813300-74	77 -24			
0813301-1	77 -52			
0813301-3	77 -52			
0813313-1	73 -31			
0813468-6	63 -38			
0813468-6	63 -41			
0813468-6	64 -38			
0813468-6	64 -41			
0813474-1	61 -17			
0813474-1	62 -17			
0813474-2	61 -5			
0813474-2	62 -5			
0813475-7	61 -55			
0813475-7	61 -56			
0813475-7	61 -57			
0813475-7	61 -58			
0813475-7	62 -55			
0813475-7	62 -56			
0813475-7	62 -57			
0813475-7	62 -58			
0813475-7	144 -4			
0813500-128	62 -6			
0813500-23	61 -6			
0813500-23	61 -17			
0813500-23	62 -6			
0813500-23	62 -17			
0813502-5	61 -24			
0813502-5	62 -24			
0813508-7	65 -19			
0813525-4	61 -24			
0813525-4	62 -24			
0813526-8	61 -41			
0813526-8	62 -41			
0813601-3	97A-9			
0813601-3	98 -25			
0813601-4	97A-9			
0813601-4	98 -25			
0813601-8	13 -33			
0813627-1	115 -2			
0813674-1	46 -98			
0813742-3	128 -75			
0813839-1	128 -32			
0813839-1	128 -33			
0814000-21	157A-7			
0814000-22	157A-7			
0814000-320	124 -85			
0814000-320	124A-41			
0814109-1	124 -86			
0814109-1	124A-42			
0814109-2	124 -86			
0814109-2	124A-42			
0814118-1	27 -14			
0818105-1	38A-1			
0819005-1	46 -98			
0819005-6	46 -9A			
0819006-1	46 -10			
0819007-4	1 -44			
0819007-5	1 -43A			
0819011-3	86 -62			
0819011-5	86 -63			
0820001-1	141 -60			
0820006-1	1 -22			
0820006-2	1 -22			
0820027-1	39 -11			
0820027-2	39 -11			
0820029-1	88 -63			
0820501-1	SUPD BY 0820501-11			
0820501-11	146 -10			
0820501-5	146 -9			
0820501-7	146 -11			
0820502-1	146 -13			
0820502-2	146 -14			
0820517-10	138 -1			
0820517-14	138 -65			
0820517-9	138 -1			
0820529-1	138 -64			
0822000-25	29 -15			
0822000-26	29 -15			
0822000-45	29 -13			
0822000-46	29 -13			
0822000-9	31 -11			
0822001-3	80 -11			
0822005-25	29 -22			
0822005-25	31 -22			
0822005-25	157A-20			
0822005-29	31 -22			
0822005-38	28 -27			
0822005-44	28 -27			
0822005-47	37 -12			
0822005-52	29 -29			
0822005-59	157A-19			
0822005-60	37 -12			
0822005-8	28 -27			
0822006-1	141 -116			
0822010-8	38A-1			
0822011-1	38A-7			
0822011-3	38A-10			
0822012-1	1 -65			
0822022-10	30 -15			
0822022-9	30 -15			
0822023-1	30 -19			
0822023-10	30 -19			
0822023-15	118 -14B			
0822023-15	118A-55			
0822023-15	119 -27A			
0822023-15	119A-57			
0822023-2	30 -19			
0822023-9	30 -19			
0822024-1	31 -25			
0822024-2	31 -25			
0822025-1	31 -26			
0822025-2	31 -26			
0822026-1	31 -29			
0822026-2	31 -29			
0822027-5	30 -18			
0822027-8	30 -18			
0822028-1	31 -23			
0822028-2	31 -23			
0822029-1	31 -24			
0822029-2	31 -24			
0822030-1	31 -1			
0822030-10	31 -1			
0822030-2	31 -1			
0822030-3	31 -1			
0822030-4	31 -1			
0822030-5	31 -3			
0822030-6	31 -3			
0822030-7	31 -6			
0822030-8	31 -6			
0822030-9	31 -7			
0822031-5	31 -32			
0822031-6	31 -32			
0822032-1	29 -28			
0822035-2	30 -14			
0822035-7	30 -14			
0822037-13	31 -14			
0822037-13	31 -14			
0822037-14	31 -19			
0822037-17	35 -45			
0822037-18	31 -15			
0822038-11	31 -10			
0822038-18	31 -13			
0822038-18	31 -13			
0822038-43	29 -			
0822038-44	29 -			
0822038-9	31 -12			
0822039-1	141 -128			
0822040-1	30 -20			
0822040-10	30 -24			
0822040-13	30 -20			
0822040-14	30 -20			
0822040-17	30 -24			
0822040-18	30 -24			
0822040-19	30 -21			
0822040-2	30 -20			
0822040-20	30 -21			
0822040-3	30 -21			
0822040-4	30 -21			
0822040-5	30 -22			
0822040-6	30 -22			
0822040-7	30 -23			
0822040-8	30 -23			
0822040-9	30 -24			
0822042-1	31 -33			
0822042-2	31 -33			
0822042-3	31 -34			
0822100-45	29 -9			
0822100-45	30 -6			
0822100-46	29 -10			
0822100-46	30 -6			
0822100-59	30 -7			
0822100-79	33 -5			
0822100-80	33 -7			
0822175-74	SUPD BY 0822175-84			
0822175-79	SUPD BY 0822175-83			
0822175-83	30 -9			
0822175-84	30 -9			
0822176-1	33 -35			
0822176-2	33 -35			
0822180-7	67 -7			
0822180-8	67 -7			
0822275-123	33 -27			
0822275-124	33 -27			
0822275-131	30 -14			
0822275-132	30 -14			
0822275-152	30 -8			
0822275-153	30 -8			
0822275-154	32 -10			
0822275-155	32 -10			
0822275-164	28 -28			
0822275-165	28 -28			
0822275-168	34 -4			
0822275-169	34 -4			
0822275-170	33 -11			
0822275-173	30 -10			
0822275-174	30 -10			
0822275-29	31 -20			
0822275-30	31 -20			
0822275-35	34 -10			
0822275-39	34 -7			
0822275-40	34 -7			
0822275-43	34 -1			
0822275-44	34 -1			
0822275-47	34 -5			
0822275-52	33 -19			
0822275-55	34 -2			
0822275-57	34 -8			
0822275-58	34 -8			
0822275-59	34 -9			
0822275-61	34 -3			
0822275-62	34 -3			
0822275-77	33 -15			
0822275-78	33 -15			
0822275-79	34 -6			
0822275-85	28 -26			
0822350-1	33 -7			
0822350-10	33 -13			
0822350-100	30 -23			
0822350-11	33 -14			
0822350-12	33 -14			
0822350-170	30 -9			
0822350-170	30 -13			
0822350-172	33 -9			
0822350-173	33 -6			
0822350-2	33 -7			
0822350-201	30 -24			
0822350-202	30 -24			
0822350-23	33 -10			
0822350-24	33 -10			
0822350-25	33 -12			
0822350-26	33 -12			
0822350-269	33 -16			
0822350-270	33 -16			
0822350-271	33 -17			
0822350-272	33 -17			
0822350-274	34 -11			
0822350-275	34 -11			
0822350-280	SUPD BY 0822350-320			
0822350-281	SUPD BY 0822350-321			
0822350-283	30 -18			
0822350-287	33 -20			
0822350-288	33 -20			
0822350-291	33 -21			
0822350-292	33 -21			
0822350-307	30 -15			
0822350-308	30 -15			
0822350-311	30 -16			
0822350-312	30 -16			
0822350-315	30 -17			
0822350-316	30 -17			
0822350-320	30 -18			
0822350-320	30 -19			
0822350-321	30 -19			
0822350-7	33 -8			
0822350-8	33 -8			
0822350-9	33 -13			
0822350-93	30 -20			
0822350-94	30 -20			
0822350-95	30 -21			
0822350-96	30 -21			
0822350-97	30 -22			
0822350-98	30 -22			
0822350-99	30 -23			
0822361-1	28 -29			
0822367-1	28 -29			
0822380-1	31 -16			
0822380-1	31 -17			
0822380-19	31 -16			
0822380-19	31 -17			
0822380-2	31 -18			
0822380-20	31 -18			
0822380-20	41 -27			
0822380-22	160 -2			
0822380-23	28 -30			
0822380-23	28 -31			
0822380-24	28 -32			
0822380-26	41 -28			
0822380-26	43 -41			
0822380-26	160 -3			
0822380-28	43 -40			
0822380-30	32 -30			
0822380-32	32 -31			
0822380-32	32 -32			
0822380-42	28 -41			
0822380-43	28 -41			
0822500-34	32 -8			
0822500-40	32 -6			
0822500-49	32 -1			
0822500-5	32 -8			
0822500-50	32 -1			
0822500-56	32 -1			
0822500-57	32 -1			
0822510-11	32 -28			
0822510-15	28 -33			
0822510-57	1 -16			
0822510-58	1 -16			
0822511-13	32 -21			
0822513-13	28 -35			
0822513-16	32 -29			
0822513-17	32 -29			
0822513-9	28 -35			
0822550-10	SUPD BY 0822550-18			
0822550-11	SUPD BY 0822550-19			
0822550-12	SUPD BY 0822550-20			
0822550-13	32 -2			
0822550-14	32 -2			
0822550-15	32 -3			
0822550-16	32 -3			
0822550-17	32 -4			
0822550-18	32 -4			
0822550-19	32 -5			
0822550-20	32 -5			
0822550-5	SUPD BY 0822550-13			
0822550-6	SUPD BY 0822550-14			
0822550-7	SUPD BY 0822550-15			
0822550-8	SUPD BY 0822550-16			
0822550-9	SUPD BY 0822550-17			
0822565-5	32 -43			
0822565-6	32 -43			
0822569-12	32 -37			
0822569-7	32 -38			
0822574-5	32 -41			
0822574-6	32 -41			
0822600-29	33 -3			
0822600-30	33 -4			
0822600-39	33 -1			
0822600-40	33 -1			
0822600-59	33 -2			
0822600-60	33 -2			
0822600-69	33 -2			
0822600-70	33 -2			
0822608-1	33 -24			
0822608-19	33 -22			
0822608-2	33 -24			
0822608-20	33 -22			
0822608-3	33 -23			
0822608-4	33 -23			
0822608-7	33 -25			
0822608-8	33 -25			
0822609-11	33 -30			
0822609-12	33 -30			
0822609-5	33 -31			
0822609-6	33 -31			

PART NUMBER	FIGURE & INDEX NUMBER	QTY PER ART	SOURCE CODE	REPAIR CODE
0822610-39	33 -29			
0822610-40	33 -29			
0822611-3	33 -32			
0822611-4	33 -32			
0822613-1	33 -18			
0822613-2	33 -34			
0822720-18	29 -19			
0822720-19	29 -19			
0822724-10	29 -18			
0822724-11	29 -18			
0822790-1	30 -2			
0822790-10	30 -2			
0822790-11	30 -2			
0822790-2	30 -2			
0822815-1	32 -21			
0822815-10	31 -3			
0822815-19	31 -1			
0822815-2	32 -21			
0822815-20	31 -1			
0822815-3	32 -22			
0822815-31	32 -25			
0822815-32	32 -24			
0822815-33	32 -23			
0822815-34	32 -26			
0822815-35	31 -6			
0822815-36	31 -6			
0822815-37	31 -7			
0822815-38	31 -7			
0822815-4	32 -22			
0822815-43	31 -4			
0822815-44	31 -4			
0822815-45	31 -8			
0822815-46	31 -8			
0822815-47	31 -5			
0822815-48	31 -5			
0822815-49	31 -9			
0822815-5	31 -2			
0822815-50	31 -9			
0822815-51	31 -4			
0822815-52	31 -4			
0822815-6	31 -2			
0822815-9	31 -3			
0823007-1	121 -97			
0823007-2	121 -97			
0823008-1	121 -96			
0823009-1	121 -99			
0823332-6	30 -16			
0823332-7	30 -16			
0823333-5	30 -17			
0823333-6	30 -17			
0823337-2	31 -28			
0823337-2	35 -34			
0823337-2	37 -55			
0823337-2	161A-9			
0823340-2	31 -27			
0823355-1	118 -20B			
0823362-1	118 -14			
0823362-2	118 -14			
0823362-3	119 -44			
0823362-3	119A-47			
0823362-4	119 -44			
0823362-4	119A-47			
0823362-5	118 -14			
0823362-5	118A-46			
0823362-6	118 -14			
0823362-6	118A-46			
0823400-144	121 -108			
0823400-145	121 -108			
0823400-157	121 -72			
0823400-175	121 -54			
0823400-187	121 -20			
0823400-24	121 -71			
0823400-46	121 -23			
0823400-62	121 -27			
0823400-71	121 -24			
0823400-75	121 -59			
0823400-76	121 -59			
0823400-77	121 -27			
0823400-78	121 -29			
0823400-79	121 -30			
0823400-80	121 -31			
0823400-86	121 -16			
0823403-2	121 -17			
0823403-8	121 -18			
0823410-2	121 -35			
0823410-3	121 -51			
0823410-4	121 -52			
0823410-9	121 -34			
0823411-13	121 -61			
0823411-14	121 -61			
0823411-215	SUPD BY 0823411-215			
0823411-216	SUPD BY 0823411-215			
0823413-3	121 -87			
0823413-31	121 -67			
0823413-32	121 -67			
0823413-37	121 -67			
0823413-38	121 -67			
0823413-4	121 -87			
0823415-1	121 -58			
0825000-10	39 -20			
0825000-13	39 -22			
0825000-14	39 -22			
0825000-15	39 -6			
0825000-17	39 -1			
0825000-17	39 -2			
0825000-18	39 -1			
0825000-18	39 -2			
0825000-19	39 -3			
0825000-19	39 -4			
0825000-20	39 -3			
0825000-20	39 -4			
0825000-33	39 -12			
0825000-34	39 -12			
0825000-35	39 -13			
0825000-36	39 -13			

PART NUMBER	FIGURE & INDEX NUMBER	QTY PER ART	SOURCE CODE	REPAIR CODE
0825000-37	39 -14			
0825000-38	39 -14			
0825000-39	39 -15			
0825000-40	39 -15			
0825000-41	39 -16			
0825000-42	39 -16			
0825000-43	39 -17			
0825000-44	39 -17			
0825000-45	39 -18			
0825000-46	39 -18			
0825000-47	39 -19			
0825000-48	39 -19			
0825000-49	39 -9			
0825000-50	39 -9			
0825000-51	39 -25			
0825000-52	39 -25			
0825000-53	39 -26			
0825000-54	39 -26			
0825000-55	39 -21			
0825000-56	39 -21			
0825000-57	39 -5			
0825000-58	39 -5			
0825000-59	39 -27			
0825000-60	39 -27			
0825000-63	39 -7			
0825000-64	39 -24			
0825000-65	39 -8			
0825000-66	39 -8			
0825000-67	39 -23			
0825000-68	39 -23			
0825000-7	39 -11			
0825000-70	39 -11			
0825000-71	39 -11			
0825000-72	39 -10			
0825000-73	39 -10			
0825000-74	39 -			
0825000-75	39 -			
0825000-8	39 -11			
0825000-9	39 -20			
0826000-25	80 -28			
0826000-27	80 -27			
0826000-30	80 -31			
0826002-200	80 -20			
0826002-201	80 -20			
0826002-202	SUPD BY 0826002-208			
0826002-203	SUPD BY 0826002-209			
0826002-208	80 -30			
0826002-209	80 -30			
0826003-3	80 -32			
0826003-4	80 -32			
0826005-4	80 -3			
0826013-2	32 -10			
0826018-204	134 -64			
0826018-233	97A-15			
0826018-233	98 -31			
0826018-238	102 -12			
0826018-265	117 -10			
0831000-22	42 -29			
0831000-43	45 -46			
0831000-50	45 -65			
0831000-86	42 -30			
0831002-10	41 -21			
0831002-11	42 -24			
0831002-13	42 -25			
0831002-14	42 -27			
0831002-15	42 -28			
0831002-18	42 -26			
0831002-205	41 -2			
0831002-206	SUPD BY 0831002-52			
0831002-207	SUPD BY 0831002-53			
0831002-48	41 -33			
0831002-5	42 -41			
0831002-52	42 -2			
0831002-53	42 -2			
0831002-7	41 -16			
0831005-1	42 -2			
0831005-1	45 -10			
0831006-5	41 -38			
0831006-7	41 -37			
0831006-8	63 -45			
0831006-8	64 -48			
0831018-2	42 -45			
0831019-1	42 -45			
0831106-4	41 -25			
0831116-1	41 -2			
0831300-1	41 -3			
0831301-14	41 -4			
0831302-2	42 -3			
0831303-1	41 -5			
0831304-2	27 -5			
0831305-1	41 -9			
0831306-1	41 -10			
0831307-1	41 -11			
0831307-2	41 -12			
0831308-1	41 -13			
0831308-2	42 -4			
0831311-1	42 -5			
0831312-1	42 -6			
0831313-1	42 -7			
0831314-1	42 -8			
0831315-1	42 -9			
0831316-1	42 -10			
0831317-1	42 -11			
0831317-2	42 -12			
0831318-1	42 -13			
0831319-1	42 -20			
0831321-1	42 -21			
0831326-17	41 -26			
0831326-18	41 -26			
0831327-1	42 -31			
0831328-1	42 -14			
0831328-2	42 -15			
0831328-3	42 -16			
0831329-1	41 -14			
0831329-2	41 -15			

PART NUMBER	FIGURE & INDEX NUMBER	QTY PER ART	SOURCE CODE	REPAIR CODE
0831330-1	41 -6			
0831330-2	41 -6			
0831334-1	41 -7			
0831334-2	41 -7			
0831335-3	42 -44			
0831338-1	42 -22			
0831341-1	41 -32			
0831342-1	42 -23			
0831345-1	42 -18			
0831345-2	42 -19			
0831346-3	41 -30			
0831347-2	41 -31			
0831348-1	41 -8			
0831350-1	41 -22			
0831350-2	41 -23			
0831351-1	42 -32			
0831351-2	42 -33			
0831352-1	42 -35			
0831352-2	42 -35			
0831353-1	42 -34			
0831353-2	42 -35			
0831357-1	42 -17			
0831359-1	42 -36			
0831359-9	42 -36			
0831361-1	42 -39			
0831362-4	42 -40			
0831364-1	41 -29			
0831364-1	87 -72			
0831364-2	41 -29			
0831364-2	87 -73			
0832000-13	45 -66			
0832000-14	45 -40			
0832000-147	41 -24			
0832000-15	45 -41			
0832000-165	43 -30			
0832000-166	43 -31			
0832000-167	43 -32			
0832000-17	45 -43			
0832000-186	43 -33			
0832000-192	43 -36			
0832000-193	43 -35			
0832000-197	43 -37			
0832000-198	43 -39			
0832000-199	43 -38			
0832000-20	45 -29			
0832000-21	45 -30			
0832000-22	45 -31			
0832000-23	45 -32			
0832000-24	45 -33			
0832000-25	45 -34			
0832000-29	45 -38			
0832000-30	45 -39			
0832000-302	45 -39			
0832000-303	45 -2			
0832000-33	45 -2			
0832000-35	43 -28			
0832000-40	43 -43			
0832000-45	43 -42			
0832000-51	43 -27			
0832000-54	45 -48			
0832000-55	45 -49			
0832000-56	43 -6			
0832000-61	45 -35			
0832000-62	45 -36			
0832000-63	45 -50			
0832106-1	45 -47			
0832111-1	43 -12			
0832111-2	43 -13			
0832111-3	43 -14			
0832111-4	43 -15			
0832111-5	43 -16			
0832111-6	43 -17			
0832111-7	43 -26			
0832115-1	43 -34			
0832120-1	45 -37			
0832125-1	45 -53			
0832125-2	45 -54			
0832125-3	SUPD BY 0832125-6			
0832125-6	45 -55			
0832126-12	45 -62			
0832126-13	SUPD BY 0832126-20			
0832126-19	45 -42			
0832126-20	45 -42			
0832126-3	45 -44			
0832126-4	45 -45			
0832126-5	SUPD BY 0832126-19			
0832126-7	45 -40			
0832130-1	45 -19			
0832131-1	45 -21			
0832132-1	45 -22			
0832133-1	45 -23			
0832137-1	45 -64			
0832141-11	87 -80			
0832141-15	87 -80			
0832141-16	89 -65			
0832141-5	89 -65			
0832141-7	SUPD BY 0832141-11			
0832143-5	42 -42			
0832144-1	45 -51			
0832144-2	45 -52			
0832152-1	45 -65			
0832250-12	43 -8			
0832250-13	43 -9			
0832250-15	45 -16			
0832250-2	SUPD BY 0832250-70			
0832250-25	43 -18			
0832250-26	43 -19			
0832250-27	43 -20			
0832250-28	43 -21			
0832250-29	43 -22			
0832250-30	43 -23			
0832250-32	45 -27			
0832250-33	45 -28			
0832250-34	45 -18			
0832250-36	45 -22			

PART NUMBER	FIGURE & INDEX NUMBER	QTY PER ART	SOURCE CODE	REPAIR CODE
0832250-37	45 -23			
0832250-38	45 -24			
0832250-39	45 -25			
0832250-4	45 -26			
0832250-57	45 -20			
0832250-64	SUPD BY 0832250-72			
0832250-66	43 -24			
0832250-67	43 -25			
0832250-70	43 -7			
0832250-70	43 -10			
0832250-71	43 -11			
0832250-72	45 -17			
0840125-15	71 -51			
0841002-1	74 -29			
0841003-1	69 -45			
0841003-2	74 -31			
0841004-1	67 -6			
0841004-2	67 -6			
0841004-3	67 -6			
0841004-4	74 -39			
0841004-5	71 -74			
0841004-6	74 -40			
0841004-8	74 -54			
0841004-9	74 -35			
0841101-1	SUPD BY 0841111-3			
0841104-3	72 -7			
0841104-4	72 -7			
0841106-5	72 -1			
0841106-6	72 -1			
0841111-3	71 -72			
0841112-1	71 -68			
0841142-1	71 -100			
0841200-15	74 -27			
0841200-18	SUPD BY 0841200-60			
0841200-19	74 -19			
0841200-25	74 -28			
0841200-31	74 -22			
0841200-55	SUPD BY 0841200-57			
0841200-57	SUPD BY 0841211-1			
0841200-60	74 -20			
0841200-7	74 -48			
0841202-1	71 -87			
0841211-1	74 -24			
0841212-1	68 -15			
0841212-1	69 -18			
0841235-2	143 -8			
0841235-3	71 -71			
0842000-32	77 -73			
0842000-33	77 -77			
0842000-35	76 -2			
0842000-36	76 -1			
0842000-37	76 -3			
0842000-74	77 -85			
0842006-1	77 -22			
0842006-2	77 -23			
0842007-1	73 -5			
0842008-7	45 -59			
0842104-3	77 -31			
0842105-3	SUPD BY 0842105-5			
0842105-4	SUPD BY 0842105-6			
0842105-5	73 -27			
0842105-6	73 -27			
0842108-2	77 -67			
0842108-3	77 -67			
0842110-1	73 -37			
0842122-1	77 -80			
0842122-4	77 -88			
0842122-6	77 -77			
0842122-8	77 -85			
0842130-4	77 -27			
0842140-3	SUPD BY 0842140-5			
0842140-5	77 -63			
0842215-8	146 -1			
0842405-6	75 -17			
0842410-1	75 -1			
0842411-1	75 -16			
0842412-1	75 -13			
0842413-1	75 -7			
0843400-129	71 -7			
0843400-130	79 -59			
0843400-138	SUPD BY 0843400-142			
0843400-139	79 -11			
0843400-140	79 -12			
0843400-142	79 -1			
0843400-143	79 -12			
0843400-144	79 -11			
0843400-45	72 -14			
0843400-49	79 -54			
0843400-50	79 -52			
0843400-52	79 -56			
0843400-61	79 -7			
0843400-62	79 -8			
0843400-72	79 -14			
0843400-81	79 -20			
0843411	79 -12			
0843412	79 -13			
0843413-1	79 -15			
0843417-1	79 -65			
0843418-1	79 -62			
0843500-13	SUPD BY 5045025-1			
0843500-28	72 -21			
0843500-6	72 -25			
0843508-4	29 -11			
0850330-3	108 -6			
0850334-15	108 -2			
0850334-24	108 -2			
0850334-8	108 -1			
0850335-3	111 -2			
0850350-4	SUPD BY 0850350-5			
0850350-5	97A-9			
0850350-5	98 -25			
0850375-5	118 -35			
0850375-5	119 -42			
0850454-3	113 -3			
0850454-6	113 -7			

PART NUMBER	FIGURE & INDEX NUMBER	QTY PER ART	SOURCE CODE	REPAIR CODE
0850469-1	141 -100			
0850469-1	141 -101			
0850469-1	141 -105			
0850469-1	141 -128			
0850475-8	116 -6			
0850527-2	62 -92			
0850689-2	106 -6			
0850694-5	97A-17			
0850694-5	98 -33			
0850703-1	118 -38			
0850703-2	118 -38			
0850715-1	100 -19			
0850716-1	100 -19			
0851000-100	35 -32			
0851000-143	35 -36			
0851000-144	35 -36			
0851000-189	35 -24			
0851000-219	35 -24			
0851000-220	35 -24			
0851000-222	35 -38			
0851000-223	35 -38			
0851000-225	35 -29			
0851000-226	35 -29			
0851000-232	35 -31			
0851000-233	35 -31			
0851000-51	35 -37			
0851000-52	35 -37			
0851000-55	35 -20			
0851000-56	35 -20			
0851000-57	35 -21			
0851000-58	35 -21			
0851000-95	28 -37			
0851000-95	35 -57			
0851008-1	35 -23			
0851008-2	35 -23			
0851009-1	35 -22			
0851009-2	35 -22			
0851045-15	35 -46			
0851053-5	100 -21			
0851055-1	35 -47			
0851055-2	35 -47			
0851120-17	35 -33			
0851120-18	35 -33			
0851120-31	35 -35			
0851120-32	35 -35			
0851121-20	35 -1			
0851121-21	35 -2			
0851121-31	35 -1			
0851121-32	35 -2			
0851124-1	SUPD BY 0851124-2			
0851124-2	35 -3			
0851128-1	35 -8			
0851128-2	35 -7			
0851128-3	35 -6			
0851129-1	35 -5			
0851129-2	35 -5			
0851129-3	35 -5			
0851129-7	35 -5			
0851130-1	35 -4			
0851149-210	95 -10			
0851149-211	95 -10			
0851149-212	95 -10			
0851155-1	35 -12			
0851155-2	35 -12			
0851156-2	35 -48			
0851158-1	35 -19			
0851158-2	35 -19			
0851159-3	35 -35			
0851159-4	35 -35			
0851160-200	95 -3			
0851160-201	95 -4			
0851160-37	37 -70			
0851160-42	38 -5A			
0851160-43	38 -5A			
0851164-200	95 -5			
0851164-201	95 -5			
0851164-203	95 -5			
0851170-200	95 -7			
0851170-201	95 -7			
0851170-202	95 -7			
0851170-203	95 -7			
0851170-213	95 -7			
0851170-214	95 -7			
0851170-215	95 -7			
0851170-216	95 -7			
0851170-225	95 -7			
0851193-2	37 -26			
0851198-1	37 -20			
0851200-3	37 -23			
0851200-4	37 -24			
0851203-10	35 -43			
0851203-11	35 -42			
0851203-12	35 -42			
0851203-9	35 -42			
0851500-121	36 -14			
0851500-122	36 -14			
0851500-125	35 -25			
0851500-126	35 -25			
0851500-137	35 -27			
0851500-138	35 -27			
0851500-139	35 -28			
0851500-140	35 -28			
0851500-145	35 -39			
0851500-146	35 -39			
0851500-150	35 -39			
0851500-151	35 -39			
0851500-31	35 -25			
0851500-32	35 -25			
0851500-8	36 -15			
0851500-87	36 -15			
0851500-9	36 -16			
0851559-1	97A-3			
0851559-1	98 -2			
0851562-5	35 -33			
0851562-6	35 -33			

PART NUMBER	FIGURE & INDEX NUMBER	QTY PER ART	SOURCE CODE	REPAIR CODE
0851566-1	116 -14			
0851566-2	116 -13			
0851567-6	36 -13			
0851569-5	36 -11			
0851569-6	36 -11			
0851569-7	36 -12			
0851569-8	36 -12			
0851570-1	36 -10			
0851601-25	35 -9			
0851601-26	35 -9			
0851601-31	35 -9			
0851601-32	35 -9			
0851608-1	35 -49			
0851608-2	35 -49			
0851609-1	35 -50			
0851609-2	35 -50			
0851610-1	35 -51			
0851610-2	35 -51			
0851611-1	35 -52			
0851611-2	35 -52			
0851618-1	35 -17			
0851618-2	35 -17			
0851618-5	35 -18			
0851708-1	36 -18			
0851708-1	36 -18			
0851738-200	37 -17			
0851738-201	37 -17			
0851780-10	37 -15			
0851780-13	37 -6			
0851780-14	37 -6			
0851780-15	37 -6			
0851780-16	37 -5			
0851780-29	37 -15			
0851780-3	37 -8			
0851780-4	37 -8			
0851780-5	37 -7			
0851780-6	37 -7			
0851780-9	37 -15			
0851781-10	37 -35			
0851781-15	37 -38			
0851781-18	37 -29			
0851781-21	37 -29			
0851781-22	37 -40			
0851781-26	37 -29			
0851781-28	37 -31			
0851781-29	37 -30			
0851781-3	37 -36			
0851781-32	37 -32			
0851781-35	37 -29			
0851781-36	37 -31			
0851781-37	37 -30			
0851781-6	37 -37			
0851781-7	37 -39			
0851781-9	37 -33			
0851790-13	37 -14			
0851790-4	37 -16			
0851790-8	37 -14			
0851792-10	37 -10			
0851792-11	37 -9			
0851792-12	37 -9			
0851792-14	37 -11			
0851792-15	37 -12			
0851792-17	37 -11			
0851792-9	37 -10			
0851794-1	36 -8			
0851795-1	1 -30			
0851813-10	36 -7			
0851813-9	36 -7			
0851823-1	37 -27			
0851826-1	101 -10			
0851827-1	101 -3			
0851833-1	101 -12			
0851834-1	101 -13			
0851834-2	101 -14			
0851838-22	101 -1			
0851838-25	101 -2			
0851838-27	101 -2			
0851838-31	101 -1			
0851838-41	101 -1			
0851841-1	101 -19			
0851842-10	101 -20			
0851843-4	SUPD BY 0851843-5			
0851843-5	101 -21			
0851844-1	101 -22			
0851846-11	101 -15			
0851849-1	141 -111			
0851857-1	101 -18			
0851861-1	37 -28			
0851863-1	146 -63			
0851863-2	146 -65			
0851863-3	146 -66			
0851870-1	141 -116			
0851871-1	37 -73			
0851872-1	141 -116A			
0852000-41	106 -12			
0852000-41	106 -12			
0852000-43	106 -12			
0852013-201	95 -10			
0852013-202	95 -10			
0852013-203	95 -10			
0852602-1	113 -9			
0855030-3	108 -5			
0855042-3	108 -9			
0860175-5	89 -14			
0860175-5	89 -62			
0860175-7	157 -2			
0860175-7	157 -28			
0860175-7	157A-2			
0860175-7	157A-36			
0860175-9	87 -13			
0860175-9	88 -9			
0861100-127	87 -12			
0861100-127	88 -6			
0861100-164	89 -1			
0861100-165	87 -1			

PART NUMBER	FIGURE & INDEX NUMBER	QTY PER ART	SOURCE CODE	REPAIR CODE
0861100-44	89 -2			
0861104-1	107 -2			
0861104-2	107 -4			
0861104-3	107 -5			
0861108-5	20 -14			
0861108-5	20 -14A			
0861129-1	86 -19			
0861129-2	86 -19			
0861129-7	86 -23			
0861129-8	86 -23			
0861157-1	89 -9			
0861161-1	20 -14			
0861175-1	1 -57			
0861206-1	107 -28			
0861207-1	107 -27			
0861209-1	107 -20			
0861210-1	107 -19			
0861211-1	107 -21			
0861211-2	107 -1			
0861212-1	107 -18			
0861213-1	107 -10			
0861216-1	107 -13			
0861216-2	107 -9			
0861218-1	107 -7			
0861219-1	107 -24			
0861220-1	107 -6			
0861221-1	107 -23			
0861224-1	107 -31			
0861232-1	107 -3			
0861233-1	107 -29			
0861234-1	107 -30			
0861317-2	86 -3			
0861326-25	86 -1			
0861326-26	86 -1			
0861326-31	86 -1			
0861326-32	86 -1			
0861328-1	86 -6			
0861329-1	86 -8			
0861329-3	147 -17			
0861333-1	1 -37			
0861334-1	1 -36			
0861354-1	86 -20			
0861356-6	161 -1			
0861524-1	62 -45C			
0861700-20	83 -30			
0861700-22	83 -34			
0861700-50	83 -2			
0861700-50	83 -30			
0861700-6	83 -27			
0861700-6	83 -38			
0861702-2	83 -62			
0861706-1	83 -1			
0861706-1	83 -33			
0861711-2	83 -2			
0861711-3	83 -2			
0861712-1	83 -24			
0862100-12	92 -74			
0862100-13	92 -73			
0862100-14	92 -76			
0862100-15	92 -75			
0862100-16	92 -78			
0862100-17	92 -77			
0862100-18	92 -45			
0862100-19	92 -74			
0862100-20	92 -76			
0862100-21	92 -78			
0862100-45	92 -67			
0862100-50	92 -65			
0862100-51	92 -66			
0862100-52	92 -67			
0862100-53	92 -64A			
0862100-57	92 -69			
0862100-58	92 -70			
0862100-77	92 -71			
0862100-91	88 -76			
0862101-10	92 -53			
0862101-11	92 -54			
0862101-12	92 -55			
0862101-21	92 -57			
0862101-22	92 -58			
0862101-23	92 -59			
0862101-24	92 -60			
0862101-25	92 -61			
0862101-5	92 -48			
0862101-6	92 -49			
0862101-7	92 -50			
0862101-8	92 -51			
0862101-9	92 -52			
08700069-53	98 -37			
0870085-1	141 -103			
0870085-1	141 -106			
0870126-3	139 -34			
0870132-1	146 -18			
0893002-8	43 -3			
0893200-1	45 -10			
0893200-2	45 -10			
0893200-3	45 -10			
0893200-4	45 -10			
0894000-10	78 -3			
0894000-11	78 -3			
0894000-2	78 -2			
0894000-8	78 -2			
0904-2	129 -5			
0904-2	129A-46			
1-203739-5	141 -97			
1-203739-6	141 -98			
1-3/4D48F40	141 -46			
1CH1-6	143 -7			
1CH1-6	143 -9			
1C6-1	SUPD BY 1C6-10			
1C6-10	121 -69			
1D1194	138 -37			
1H19-5	97 -37			
1H19-5	97A-58			
1H5-10	137 -1			

PART NUMBER	FIGURE & INDEX NUMBER	QTY PER ART	SOURCE CODE	REPAIR CODE
1K1-2-4	124A-3			
1K1-4-8	137 -10			
1K1-4-8	137 -36			
1K1-48	137 -31			
1K1-6-10	136 -2			
1K1-6-8	138 -31			
1K1-8-10	139 -31			
1K10-2-4	124 -13			
1K10-2-4	124 -24			
1K10-2-4	124 -87			
1K10-2-4	124 -107			
1K10-2-4	124A-1			
1K10-2-4	124A-26			
1K10-2-4	132A-6			
1K10-4-8	137 -14			
1K10-8-10	139 -18			
1K10-8-10	139 -37			
1K12-8-8	137 -24			
1K13-8-10	114 -13			
1K14-4-4-3	156A-16			
1K14-4-4-4	124 -17			
1K14-4-4-4	124 -90			
1K14-4-4-4	124 -99			
1K14-4-4-4	124 -102			
1K14-4-4-4	126 -40			
1K14-4-4-4	127 -36			
1K14-8-8-8	137 -29			
1K14-8-8-8	137 -32			
1K16-3	114 -18			
1K21-8-10	132 -47			
1K21-8-10	132A-59			
1K27-1	124 -20			
1K27-1	124 -28			
1K27-1	124 -93			
1K27-1	124 -96			
1K27-1	124 -105			
1K27-1	124A-5			
1K27-1	132 -14			
1K27-1	132A-7			
1K30-8-6-6	138 -60			
1K37-8-8-4	137 -6			
1K37-8-8-4	137 -9			
1K38-8-8-8-4	137 -34			
1K9-8-10	139 -14			
1K9-8-10	139 -29			
1N1201	141 -69			
1N2482	141 -21			
1N4743	142 -6			
1N5061	63 -5			
1N5061	64 -5			
1N5061	141 -84			
1SE1	143 -8			
1SE1-3	143 -8			
1SM3	107 -38			
1ZM1375	142 -6			
10-12C50X-S	133 -9			
10-176487-242	SUPD BY 10-357487-242			
10-357487-242	141 -34			
10-357487-242	141 -75			
10-8V50X-S	132 -12A			
10ARM300-13C	151 -1			
10ARM300-13C	151 -1			
10C50X-S	132 -4			
10C50X-S	132A-12			
10C50X-S	132A-24			
10C50X-S	133A-4			
10C6BXS	132 -90			
10C6X-S	132A-67			
100-2M	129 -39			
100-2M	129A-55			
1000-19	46A-5			
1000-20	46A-5			
1000-21	46A-5			
1000-22	46A-5			
1000-23	46A-5			
1000-24	46A-5			
1000-25	46A-5			
10007467	100 -3A			
1006670-5	100 -3B			
1006670-5	100 -6B			
1006670-5	100 -7			
1007467	100 -6A			
1007467	SUPD BY 1008092			
1008092	100 -7			
101235-01154	64 -15			
101235-01155	64 -15			
103576-1	SUPD BY 103576-16			
103576-16	127 -16			
103576-18	127 -22			
103576-4	126 -27			
103576-4	SUPD BY 103576-18			
103576-8	126 -21			
105880	120 -28			
105881	121 -101			
107-700	105 -21			
107-700	105 -27			
11A20214-001	138 -68			
11A20215-101	138 -1			
11A20215-202	138 -1			
1100-19	46A-5			
1100-20	46A-5			
111D417-10D	132 -11			
1111-517702	114 -6			
112-205-101	144 -32			
112-205-101	144 -34			
112-205-101	144 -35			
112-205-101	144 -40			
112-205-101	144 -41			
112-205-101	144 -43			
112-220-101	144 -42			
112-235-101	144 -31			
112-507-101	144 -36			
12TS1-3	144 -44			
12081-8X1-8	97 -18			
1200-1	46A-4			

PART NUMBER	FIGURE & INDEX NUMBER	QTY PER ART	SOURCE CODE	REPAIR CODE
1200-10	46A-4			
1200-11	46A-4			
1200-12	46A-4			
1200-13	46A-4			
1200-14	46A-4			
1200-15	46A-4			
1200-2	46A-4			
1200-3	46A-4			
1200-4	46A-4			
1200-5	46A-4			
1200-6	46A-4			
1200-7	46A-4			
1200-8	46A-4			
1200-9	46A-4			
1200138-1	53 -27			
1200138-1	54 -32			
1200138-2	53 -37			
1200138-2	54 -44			
1200139-1	53 -33			
1200139-1	54 -40			
1200159-1	53 -34			
1200159-3	54 -41			
1201-1	46A-5			
1201-2	46A-5			
1201-3	46A-5			
1201-4	46A-5			
1201-5	46A-5			
1201-6	46A-5			
1201-7	46A-5			
1201-8	46A-5			
1201-9	46A-5			
1205085-1	47 -71			
1221643	152 -36			
12310-1050-14	151 -1			
12310-1050-16	151 -1			
12310-1050-16	151 -1			
12310-1050-16	151 -1			
12310-1113-34	151 -1			
12310-1392-11	151 -1			
1240S001-8CR	132 -15			
124D003-8CR-0280	117 -1			
124F002-10D0230	130 -35			
124F002-10SS0230	130 -35			
124002-8D0200	130 -36			
1241015-7	80 -34			
1241156-115	76 -6			
1260049-1	91 -8			
1260074-1	91 -1			
1260074-3	91 -1			
1260074-6	91 -1			
1260474-1	155 -11			
1260474-2	155 -7			
1260480-7	155 -10			
1260480-7	155 -10			
127B	118 -16			
1278	119 -63			
1278	119A-83			
1270012-5	151 -3			
1270013-3	151 -3			
130007	6 -11			
130007	6 -18			
130007	6 -22			
130007	6 -27			
130008	43 -3			
130306-1	126 -42			
130360-1	127 -37			
13083-5	105 -7A			
1309	86 -5			
1309	147 -15			
131358-2	127 -42			
13265	105 -3			
13265-1	105 -4			
133C1	SUPD BY 2H3-5			
138-3	SUPD BY 9910068-1			
13836	76 -8			
13836	76 -10			
13889	76 -14			
1400-20	46A-5			
14323	127 -37			
145-12	70 -38			
15J01	122 -31			
15PA17	61 -15			
15PA17	62 -15			
153-15	76 -15			
153-9	70 -13			
154-13	76 -17			
154-8	70 -14			
154G	129 -39			
154G	129A-55			
155-6	70 -19			
1552010-1	38 -5A			
1552010-1	95 -4			
156-8	144 -36			
1560	146 -61			
1560321-1	90 -9			
1560321-10	90 -9			
1560321-2	90 -9			
1560321-3	90 -9			
1560321-4	90 -9			
1560321-6	90 -9			
1560321-9	90 -9			
1560322-1	90 -1			
1560322-13	90 -15			
1560322-15	90 -17			
1560322-17	90 -18			
1560322-18	90 -5			
1560322-5	90 -6			
1560322-9	90 -14			
1560323-1	90 -9			
158-8	70 -18			
161-19	70 -6			
161-30	76 -7			

PART NUMBER	FIGURE & INDEX NUMBER	QTY PER ART	SOURCE CODE	REPAIR CODE
162-17	70 -7			
162-27	76 -9			
1625-5P-1	146 -61			
164-8	70 -9			
1641B	74 -32			
1646B1	71 -93A			
17-20370	63 -6			
17-20370	64 -6			
17-313-01	63 -6			
17-313-01	64 -6			
17189-200-N-1	100 -11B			
17189-250N1	100 -10			
1736	71 -93			
1736	71 -93A			
1750-21	SUPD BY 1751-2			
1751-1	SUPD BY 1751-2			
1751-2	149 -6			
1786-7	63 -7			
1786-7	64 -7			
183-1	70 -37			
186-225	100 -7			
1864	144 -27			
1864	144 -65			
1944	129 -25			
1944	129A-22			
1944	147 -4			
1944-1	129 -25			
1944-1	129A-22			
1944-1	147 -4			
1945	129 -25			
1945	129A-20			
1945	147 -2			
1945-1	129 -25			
1945-1	129A-20			
1945-1	147 -2			
1968-1	129A-14			
1999-1	63 -3			
1999-1	64 -3			
1999-11	63 -3			
1999-11	63 -3			
1999-11	63 -3			
1999-11	63 -3			
1999-11	63 -3			
1999-11	63 -3			
1999-11	63 -3			
1999-11	63 -3			
1999-11	63 -3			
1999-11	64 -3			
1999-11	64 -3			
1999-11	64 -3			
1999-11	64 -3			
1999-11	64 -3			
1999-11	64 -3			
1999-11	64 -3			
1999-11	64 -3			
1999-11	64 -3			
1999-11	64 -3			
1999-11	64 -3			
1999-11	64 -7A			
1999-11	64 -7A			
1999-11	64 -7A			
1999-11	64 -7A			
1999-11	64 -7A			
1999-11	64 -7A			
1999-11	64 -7A			
1999-11	64 -7A			
1999-11	64 -7A			
1999-11	64 -7A			
1999-11	64 -7A			
1999-12	63 -3			
1999-12	64 -3			
1999-12	64 -7A			
1999-13	63 -3			
1999-13	64 -3			
1999-13	64 -7A			
1999-14	63 -3			
1999-14	64 -3			
1999-14	64 -7A			
1999-15	63 -3			
1999-15	64 -3			
1999-15	64 -7A			
1999-16	63 -3			
1999-16	64 -3			
1999-16	64 -7A			
1999-17	63 -3			
1999-17	64 -3			
1999-17	64 -7A			
1999-18	63 -3			
1999-18	64 -3			
1999-18	64 -7A			
1999-19	64 -7A			
1999-2	63 -3			
1999-2	64 -3			
1999-2	64 -7A			
1999-20	64 -3			
1999-20	64 -7A			
1999-21	64 -7A			
1999-22	64 -7A			
1999-23	64 -7A			
1999-3	64 -7A			
1999-4	63 -3			
1999-4	64 -3			
1999-4	64 -7A			
1999-5	63 -3			
1999-5	64 -3			
1999-6	63 -3			
1999-6	64 -3			
1999-6	64 -7A			
1999-7	63 -3			
1999-7	64 -3			
1999-7	64 -7A			
1999-8	63 -3			
1999-8	64 -3			
1999-8	64 -7A			
2 1-2DCK	46 -5			
2 3-4DCK6	46 -5			
2-038S418-6	126 -3			
2-6	40 -1			

PART NUMBER	FIGURE & INDEX NUMBER	QTY PER ART	SOURCE CODE	REPAIR CODE
2-6	42 -1			
2-6	45 -1			
2H3-5	136 -11			
2N1379	152 -41			
2N2869	152 -34			
2N3055	142 -6			
2TL1-2	61 -9			
2TL1-2	62 -9			
2TS1	152 -30			
2VA20	143 -7			
2VA20	143 -7			
2VB1	143 -9			
20050-52	46 -61			
203540-1	141 -94			
203735-6	141 -96			
203735-7	141 -95			
205-21B	62 -94			
21-0230-9	148 -1			
21-0230-9	148 -7			
21-0249-1	148 -3			
21-0249-3	148 -9			
2105IC	139 -8E			
2109	86 -4			
2109	147 -14			
212-12N	3 -8			
212CW	97A-21			
212CW	98 -37			
21303RAB	133 -10			
213100	112 -2			
213158	112 -4			
213433	112 -1			
213447	112 -9			
21650-0000	150 -7			
21660-0000	150 -7			
22NKTM02	37 -28			
22NM26	143 -8			
2256-8	137 -30			
22876-25	146 -45			
23-4P	46 -5			
23-4P	46 -5			
23S2010-2-1	138 -68			
23S2010-5-1	138 -62			
232CW	97A-22			
2374	99 -6			
23867	98 -15			
23867	99 -7			
2392	129 -25			
2392	129A-23			
2392	147 -4			
2393	129 -25			
2393	129A-24			
2393	147 -4			
2394	129 -25			
2394	129 -34			
2394	129A-14			
2394	129A-23			
2394	147 -4			
24343LAD	132A-1			
244-16	95 -2			
244-16D	36 -7			
2441	98 -7			
2441	98 -11			
2441	98A-2			
24630-0028	150 -1			
2473	98 -10			
2473	98 -15			
2474	98 -7			
2474	98A-2			
24810-0100	151 -2			
24810-0100	151 -3			
249A6TT6	120 -8			
25-0491-1	146 -51			
25ARM300-20-30-1/2	151 -1			
250-215-10	136 -17			
250-215-12	130 -106			
250-215-12	132 -127			
250-215-12	132A-126			
250-215-16	9 -27			
250-215-2	115 -19			
250-215-2	123 -15			
250-215-3	116 -28			
250-215-4	94 -11			
250-215-4	103 -16			
250-215-4	116 -21			
250-215-4	124 -8			
250-215-4	124 -43			
250-215-4	124 -67			
250-215-4	124A-11			
250-215-4	124A-36			
250-215-4	126 -18			
250-215-4	126 -25			
250-215-4	127 -20			
250-215-4	137 -19			
250-215-4	140 -25			
250-215-4	140 -30			
250-215-5	134 -3			
250-215-6	9 -26			
250-215-6	130 -104			
250-215-6	132 -105			
250-215-6	132A-101			
250-215-8	114 -40			
250-215-8	114 -49			
250-215-8	114 -57			
250-215-8	114 -67			
250-215-8	137 -26			
250-215-8	138 -26			
250-215-8	138 -51			
2500-4N6	152 -22			
254-11	150 -5			
254-11	160 -1			
254-147	150 -5			
2556-8	137 -5			
2556-8	137 -8			
2556-8	137 -13			

PART NUMBER	FIGURE & INDEX NUMBER	QTY PER ART	SOURCE CODE	REPAIR CODE
2556-8	137 -21			
2556-8	137 -22			
2556-8	137 -33			
2556-8	137 -35			
2561	98 -11			
2585	129A-57			
2585	147 -36			
26R16-1	10 -12			
2682130	122 -18			
2682131	122 -32			
2682132	122 -29			
2682133	122 -30			
2682134	122 -28			
2682136	122 -21			
2682137	122 -22			
2682214	122 -38			
2682323	122 -19			
26891-1528	150 -7			
26904-0500	150 -7			
2691248	122 -24			
2691503-2	122 -17			
27S3-1	35 -41			
2700-16	10 -19			
2721191	122 -42			
2721192	122 -42			
27310-0000	150 -7			
27310-0000	150 -13			
27310-0000	150 -19			
27470-0000	150 -7			
27470-0000	150 -13			
27470-0000	150 -19			
27968	90 -9			
28393	90 -9			
289-3D	150 -5			
29100-0000	158 -13			
294617L	21 -25C			
294667	46 -16			
294667	46 -42			
294671L	21 -6			
294671L	21 -7			
294671L	21 -11			
294671L	161A-10			
294672L	21 -6			
294672L	21 -9			
294672L	21 -12			
3AF32C87¤-¤82NC4	108 -2			
3D113	118 -16			
3D113	118A-48			
3D113	119 -63			
3D113	119A-83			
3D1542-03	139 -12			
3D1549-02A3	139 -4			
3D1748-2	144 -45			
3E1150-3	141 -112			
3E1150-6	141 -112			
3E1375	111 -2			
3XR34-12	53 -26			
3XR34-12	54 -31			
30-0515-1	SUPD BY 30-1172-1			
30-0515-1A	SUPD BY 30-1172-1			
30-0516-5	SUPD BY 5618112-1			
30-1172-1	146 -47			
30-288	170 -19			
30ARM300-71	151 -4			
30ARM300-72	151 -4			
30R11102	105 -1			
3019	71 -90A			
3023	70 -15			
3023	76 -18			
305-4308	86 -20			
30771000	105 -9			
31-1720-1	146 -49			
31-1723-1	146 -50			
31-1725-1	146 -50			
31-1725-2	146 -50			
31-1748-3	146 -42			
31-1780-1	146 -44			
31-1781-1	146 -42			
31001000	105 -35			
312-12	8 -5			
31240-0000	150 -15			
31240-0028	150 -15			
313005	141 -110			
31301800	105 -10			
31302000	105 -25			
315001	152 -41			
31640-0000	150 -14			
31640-0001	150 -14			
320C062-262M	140 -22			
320DX2	97 -18			
320DX2	97A-42			
32100	46 -60			
32350-0000	150 -14			
32350-0001	150 -14			
3252013 601	150 -28			
3252013 701	150 -28			
32586800	105 -32			
32587000	105 -17			
32670-0000	150 -7			
32803-0000	150 -13			
33370500	105 -33			
33423	150 -22			
33435	150 -21			
33550-0000	150 -7			
33560-1000	150 -10			
33560-1100	150 -10			
33570-1000	150 -8			
33570-1200	150 -8			
33570-3000	150 -8			
33577700	105 -8			
33578100	105 -19			
33785-0010	150 -7			
33785-0020	150 -7			
33785-0030	150 -7			

PART NUMBER	FIGURE & INDEX NUMBER	QTY PER ART	SOURCE CODE	REPAIR CODE
33871400	105 -26			
33950-1100	150 -9			
33950-1300	150 -9			
3423-00-9	126 -30			
3423-00-9	127 -25			
34290-0000	150 -9			
34390-0000	151 -4			
34850-0028	150 -7			
34950-0028	150 -12			
34960-1000	150 -12			
34970-1000	151 -3			
34975200	105 -11			
34980-0000	150 -1			
34980-0000	150 -6			
34980-0000	150 -12			
35-0515-3	146 -50			
35ARM300-80B	151 -4			
35ARM300-80U	151 -4			
350106	139 -8B			
3502-18-00	46 -106			
3502-18-00	61 -45			
3502-18-00	62 -45			
3502-18-00	62 -45			
3502-22-01	122 -27			
35070-0228	156 -8			
35070-0228	158 -4			
35070-0328	156 -9			
35070-0328	158 -5			
35070-0428	156 -9			
35070-0428	158 -5			
35070-0628	159 -1			
351-21672-005	63 -3			
351-21672-005	64 -3			
351-21672-007	64 -3			
351-27988-001	64 -7A			
3515-09-01	25 -54			
35180-0100	151 -2			
35180-0100	151 -2			
35180-0300	151 -2			
353-11-08-001	141 -92			
353-11-10-001	20 -28			
353-11-10-001	141 -65			
35380-0000	150 -7			
35390-0000	150 -7			
35540-0000	150 -8			
35540-0000	150 -9			
35702	141 -109			
3591-4CNXO-25	86 -47			
3591-4NX 1-2	73 -23			
35950-0000	150 -4			
36050-0000	150 -4			
36280-0000	150 -6			
363-11-08-010	141 -93			
363-11-10-010	20 -28			
363-11-10-010	61 -97			
363-11-10-011	141 -64A			
36440-0000	150 -11			
36450-0000	150 -3			
36450-0000	150 -4			
36450-0000	150 -8			
36450-0000	150 -9			
36450-0000	150 -11			
367-00	114 -6			
36820-0000	150 -7			
37250-1000	150 -6			
37260-0000	150 -6			
37470-0000	150 -7			
37470-0000	150 -13			
37470-0001	150 -7			
37500-0000	150 -4			
37520-1000	150 -4			
37525-0061	150 -9			
37525-0071	150 -9			
37525-0081	150 -8			
37570-0002	63 -14			
37570-0106	63 -14			
37570-0106	64 -14			
37570-1002	63 -14			
37570-1002	64 -14			
37580-0028	156 -12			
37580-0028	158 -8			
37960-1028	156 -5			
37960-1128	156A-5			
37970-1028	156 -10			
37970-1128	156 -10			
37970-1228	156 -10			
37970-1328	156 -10			
37980-0000	156 -10			
37980-0000	158 -6			
38-701	105 -2			
38004	139 -8F			
38100-0128	156 -11			
38100-0128	158 -7			
38185-0000	150 -8			
38423-0074	112 -1			
38500-0000	150 -1			
38960-0028	150 -8			
38960-0028	150 -9			
39210-0028	150 -1			
39270-0000	150 -4			
39330-0000	150 -5			
39372300	105 -20			
39380-1014	150 -14			
39400-1000	150 -1			
39410-1000	150 -4			
39410-1000	150 -6			
39480-0000	150 -9			
4NCCP10P	73 -35			
4R6X-S	132 -61			
4R6X-S	132A-22			
4V50X-D	94 -38			
40-40A	70 -2			
40S5-4	95 -2			
40S5-4	95 -6			
40S5-5	95 -11			

PART NUMBER	FIGURE & INDEX NUMBER	QTY PER ART	SOURCE CODE	REPAIR CODE
4000099-8503	158 -12			
4000099-8504	158 -12			
4000202-8501	158 -11			
4000289-8501	158 -13			
4000289-8503	158 -13			
4000412-4704	150 -33			
4000525-1210	153A-7			
4000526-6101	150 -34			
4000763-3101	153A-13			
4000763-3101	153B-12			
4000764-3201	153A-16			
4000765-3302	153B-4			
4000790-4406	153A-4			
4000946-5201	153B-15			
400172-8503	158 -15			
400191-8501	160 -1			
4002-G	95 -6			
4002-H	95 -2			
4002-H	95 -11			
40044437-901	150 -27			
4004512	150 -27			
4004623-501	158 -9			
4005088-0502	153A-18			
4007158 502	150 -33			
4007341 502	150 -34			
4007415 501	150 -34			
4007543 504	153A-15			
4007543-0504	153B-14			
4007926-0502	153B-17			
4010193-2	150 -27			
4014267	150 -27			
401507	98 -11			
40200-0000	150 -7			
40220-1000	150 -7			
40550-0000	150 -14			
40550-0001	150 -9			
40550-0001	150 -14			
40760-0101	63 -17			
40760-0103	64 -17			
40760-0105	64 -17			
407810-1	97 -2			
407810-1	98A-9			
4080-312	144 -28			
4080-312	144 -66			
40830-0000	150 -7			
40840-0101	63 -17			
40840-0105	64 -17			
40840-0105	158 -15			
40840-0201	63 -17			
40840-0205	64 -17			
40840-0205	158 -15			
40900-0000	150 -13			
40900-0000	150 -19			
40910-0000	63 -51			
40910-0000	64 -54			
40910-0000	158 -9			
40950-1000	150 -13			
40980-1000	64 -57			
40980-1000	150 -7			
40980-1000	150 -13			
40980-1000	150 -19			
40980-1100	64 -57			
40980-1100	150 -7			
40980-1100	150 -13			
40980-1100	150 -19			
41-0578-1	146 -25			
41-0578-1	146 -33			
41-1058-21	146 -32			
41-1058-23	146 -24			
41000-1000	151 -4			
41010-0000	150 -14			
41090-1028	158 -3			
41090-1128	158 -3			
41100-0008	158 -14			
41100-0018	158 -14			
41110-0000	158 -16			
41110-0001	158 -16			
41110-0003	158 -16			
41110-0004	158 -16			
41110-1028	158 -16			
41120-1028	158 -6			
41120-1328	158 -6			
41195AA502	100 -16			
41240-0001	150 -19			
41240-0100	150 -19			
41240-1000	150 -19			
41250-1000	150 -13			
41250-1000	150 -19			
41277-0010	150 -13			
41340-0001	150 -7			
41340-0001	150 -13			
41340-0001	150 -19			
41340-0002	150 -7			
41340-0002	150 -13			
41340-0002	150 -19			
41350-0000	150 -7			
41350-0000	150 -13			
41350-0000	150 -19			
41360-1000	150 -7			
41360-1000	150 -13			
41360-1000	150 -19			
41360-1100	150 -7			
41360-1100	150 -13			
41360-1100	150 -19			
41370-0000	150 -9A			
41370-0000	160 -1			
41376-0000	150 -7			
41376-0000	150 -19			
4140-00-153	120 -16			
41470-1028	150 -12			
41480-0001	64 -16			
415-59	121 -42			
41536-0000	62 -98			
416-15	121 -43			
416-52	121 -40			

PART NUMBER	FIGURE & INDEX NUMBER	QTY PER ART	SOURCE CODE	REPAIR CODE
416-53	121 -37			
416-54	121 -36			
416-55	121 -45			
416-56	121 -47			
416-60	121 -46			
416-9-1	121 -38			
41600-0000	158 -15			
41606-0010	150 -7			
41606-0020	150 -7			
41630-0028	150 -8			
41630-0028	150 -9			
41640-1000	64 -55			
41640-1000	150 -9			
41640-1012	150 -9			
41640-1100	64 -55			
41640-1100	150 -9			
41640-1112	150 -9			
41640-2000	64 -56			
41640-2000	150 -9			
41640-2012	150 -9			
41640-2100	64 -56			
41640-2100	150 -9			
41640-2112	150 -9			
41650-0000	150 -11			
41700-0000	150 -6			
41710-0000	150 -6			
41720-1000	150 -6			
41740-1014	150 -14			
41750-0201	158 -17			
41780-0000	158 -3			
41780-0028	158 -3			
41790-0000	150 -4			
41810-0000	150 -9			
41820-1000	150 -10			
41830-1000	150 -8			
41910-1000	150 -6			
41920-1000	150 -4			
41950-0000	150 -7			
41950-0000	150 -13			
41950-0000	150 -19			
42NKE054	139 -8G			
42100-0000	150 -11			
422-13-11-026	141 -93			
42260-1028	150 -1			
42280-0000	150 -1			
42290-0028	150 -12			
42410-5128	150 -11			
42410-5128	150 -30			
42430-1014	150 -14			
42430-1024	150 -14			
42470-0000	150 -3			
42540-3128	63 -15			
42540-3128	64 -15			
42540-3128	150 -28			
42540-3228	63 -15			
42540-3228	64 -15			
42540-3228	150 -28			
42540-6128	64 -15			
42540-6128	150 -28			
42540-6228	64 -15			
42540-6228	150 -28			
42680-0003	156A-9			
42750-0000	150 -7			
42760-0000	150 -3			
42964-4000	159 -1			
4301AA200	97A-27			
4301AA200	98 -41			
4301AA200	125 -2			
4301BT250	100 -10			
43027-0000	156A-9			
43080-0000	64 -16			
43090-1000	150 -13			
43090-1028	150 -13			
431AA450	SUPD BY V57A5019			
43300-6128	150 -28			
43300-6228	150 -28			
43310-0000	150 -28			
43330-1014	150 -9			
43330-1028	150 -9			
43340-1014	150 -14			
43340-1024	150 -14			
43380	112 -1			
43910-1000	150 -9			
43910-1100	150 -9			
43910-2000	150 -9			
43910-2100	150 -9			
43989-3008	156A-7			
43989-4008	156A-8			
43989-4008	159 -1			
44000-0000	150 -31			
44020-1000	150 -31			
44088-0000	150 -31			
44091-0000	150 -25			
44100-1000	150 -25			
44400-0000	156A-11			
44415-3030	157A-38			
44415-3100	156A-7			
44415-4080	159 -1A			
44415-4100	156A-8			
44430-2848	90 -21			
44512-6164	156A-14			
44575-2502	90 -22			
44770-0000	160 -1			
44910-0000	150 -9			
45-2SN2-100A	144 -49			
45010-1000	150 -14			
45010-2000	150 -14			
4553	146 -22			
4626	146 -5			
470930-17	98 -21			
476122	97 -28			
476411	121 -80			
476411	140 -9			
496622K2215	80 -			
5-140	147 -22			

PART NUMBER	FIGURE & INDEX NUMBER	QTY PER ART	SOURCE CODE	REPAIR CODE
5ARM300-5C	151 -1			
5ARM300-8C	151 -1			
5ARM300-8CN1	151 -4			
5NBC713YJ	29 -20			
5NBC713YJ	77 -94			
50ARM300A	151 -1			
50ARM300C	151 -1			
50BSH5E	122 -43			
50BSH9	120 -7			
50BSH9	120 -32			
5000008-105	157A-4			
5000008-106	157A-3			
5000008-50	84 -2			
5000008-51	84 -3			
5000008-56	88 -61			
5000008-56	159 -10			
5000008-57	87 -77			
5000008-59	92 -3			
5000106-16	114 -15			
5008011-15	141 -104			
5008011-16	141 -104			
5011013-3	78 -11			
5011021-9	12 -5			
5011023-1	12 -1			
5011024-1	12 -2			
5011046-2	47 -63			
5011050-2	57 -36			
5011050-2	58 -43			
5011050-2	58A-49			
5011050-2	59 -27			
5011050-2	60 -47			
5011050-2	60A-51			
5011167-5	25 -23			
5011167-5	25 -25			
5011179-1	22 -48			
5011185-5	22 -40			
5011185-7	37 -44			
5011185-9	22 -40			
5011196-1	37 -44			
5011500-10	30 -4			
5011500-10	84 -56			
5011500-9	30 -4			
5011500-9	84 -55			
5011508-13	107 -26			
5011508-14	107 -26			
5011508-21	20 -10			
5011508-27	20 -17			
5011508-29	20 -18			
5011508-8	20 -16			
5011508-9	20 -16			
5011549-1	92 -6			
5011549-1	92 -6			
5011550-1	92 -6			
5011555-13	20 -10			
5011555-20	20 -8			
5011555-22	20 -10			
5011555-25	20 -10			
5011555-27	20 -10			
5011555-3	20 -10			
5011555-5	20 -10			
5011575-1	92 -28			
5011575-1	92 -38			
5013027-1	4 -31			
5013040-41	4 -31			
5013049-1	4 -9			
5013118-2	1 -46			
5013500-7	4 -28			
5013500-8	4 -29			
5013501-1	4 -10			
5013502-16	4 -30			
5014005-6	57 -29			
5014005-6	58 -33			
5014005-6	58A-33			
5014005-8	57 -29			
5014005-8	58 -33			
5014005-8	58A-33			
5014047-10	51 -7			
5014047-11	51 -7			
5014047-12	51 -7			
5014047-14	51 -8			
5014047-39	51 -			
5014047-40	51 -			
5014047-45	51 -			
5014047-46	51 -			
5014047-49	51 -7			
5014047-56	51 -			
5014047-57	51 -			
5014047-58	51 -			
5014047-59	51 -			
5014047-60	51 -1			
5014047-61	51 -1			
5014047-7	51 -1			
5014047-8	51 -1			
5014047-9	51 -7			
5015008-2	18 -36			
5015008-3	18 -36			
5015008-4	18 -37			
5015008-5	18 -37			
5015012-1	18 -25			
5015013-16	86 -59			
5015013-18	86 -58			
5015014-1	86 -49			
5015015-15	86 -35			
5015015-15	86 -35			
5015015-16	86 -35			
5015015-16	86 -37			
5015015-3	86 -36			
5015017-1	86 -37			
5015019-1	18 -13			
5015019-2	18 -14			
5015019-3	18 -14			
5015020-1	18 -8			
5015020-1	18 -12			
5015020-3	18 -9			
5015020-5	18 -10			

PART NUMBER	FIGURE & INDEX NUMBER	QTY PER ART	SOURCE CODE	REPAIR CODE
5015020-7	18 -9			
5015020-8	18 -11			
5015026-1	86 -55			
5015027-1	86 -56			
5015028-1	86 -57			
5015032-1	86 -47			
5015033-4	61 -90			
5015033-4	62 -90			
5015035-1	SUPD BY 5015035-4			
5015035-3	86 -42			
5015035-4	86 -41			
5015035-5	86 -41			
5015036-1	86 -45			
5015036-2	86 -45			
5015037-1	86 -46			
5015038-4	86 -43			
5015038-5	86 -43			
5015039-1	94 -34			
5015040-1	94 -33			
5015041-1	82 -15			
5015045-1	84 -6			
5015046-1	84 -7			
5015051-4	107 -22			
5015052-2	88 -1			
5015053-1	88 -3			
5015054-5	88 -5			
5015054-7	88 -5			
5015055-1	107 -32			
5015055-2	107 -33			
5015055-3	107 -34			
5015056-1	107 -35			
5015056-2	107 -37			
5015057-1	107 -38			
5015058-2	88 -7			
5015059-1	88 -2			
5015059-2	87 -3			
5015060-1	87 -8			
5015061-2	20 -24			
5015062-2	20 -19			
5015064-3	20 -9			
5015066-10	107 -15			
5015066-19	107 -17			
5015066-20	107 -16			
5015066-7	SUPD BY 5015066-9			
5015066-8	SUPD BY 5015066-10			
5015066-9	107 -14			
5015068-11	107 -11			
5015068-12	107 -12			
5015071-1	86 -54			
5015072-1	86 -39			
5015072-2	86 -41			
5015072-3	86 -39			
5015073-1	18 -17			
5015073-1	18 -17			
5015073-1	18 -18			
5015073-3	18 -21			
5015073-3	18 -21			
5015073-4	18 -22			
5015073-5	18 -19			
5015073-6	18 -23			
5015073-7	18 -17			
5015073-8	18 -21			
5015074-1	79 -26			
5015074-1	79 -32			
5015078-2	18 -15			
5015084-2	18 -32			
5015084-3	18 -33			
5015084-4	18 -34			
5015084-7	18 -32			
5015103-1	18 -16			
5015104-3	122 -12			
5015104-4	122 -12			
5015106-4	20 -11			
5015107-1	20 -13			
5015107-2	20 -13			
5015108-6	20 -12			
5015108-8	20 -12			
5017130-3	1 -12			
5017130-4	1 -12			
5017130-6	1 -71			
5017139-4	156 -5			
5017139-4	156A-5			
5017139-4	158 -3			
5017404-4	124 -51			
5017519-2	46 -86			
5017525-21	SUPD BY 5117289-32			
5017565-1	SUPD BY 5017565-3			
5017565-2	SUPD BY 5017565-3			
5017565-3	79 -69			
5018153-1	144 -4			
5018174-2	147 -26			
5018174-6	147 -28			
5018174-9	147 -26			
501867	98A-6			
5021002-12	33 -28			
5021002-13	33 -28			
5021013-10	28 -38			
5021013-9	28 -38			
5021014-5	34 -11			
5021023-7	29 -12			
5021023-8	29 -12			
5021023-9	29 -12			
5021028-14	29 -14			
5021028-15	29 -14			
5021028-18	28 -26			
5021502-205	28 -4			
5021502-206	28 -4			
5021503-1	80 -7			
5021503-2	80 -7			
5022010-3	32 -44			
5022010-4	32 -44			
5022014-48	28 -29			
5022017-3	32 -20			
5022017-4	32 -20			
5022018-1	32 -45			

PART NUMBER	FIGURE & INDEX NUMBER	QTY PER ART	SOURCE CODE	REPAIR CODE
5022018-2	32 -45			
5022050-67	33 -26			
5022050-68	33 -26			
5022053-2	29 -23			
5022104-51	30 -13			
5022104-52	30 -13			
5022104-65	30 -1			
5022104-66	30 -1			
5023000-5	121 -89			
5023000-6	121 -89			
5023001-200	121 -64			
5023001-201	121 -64			
5024000-14	40 -26			
5024000-15	40 -27			
5024000-16	40 -27			
5024000-18	40 -28			
5024000-2	40 -6			
5024000-23	40 -9			
5024000-24	40 -9			
5024000-25	40 -10			
5024000-26	40 -11			
5024000-27	40 -12			
5024000-28	40 -13			
5024000-29	40 -14			
5024000-3	40 -8			
5024000-4	40 -8			
5024000-40	40 -5			
5024000-49	40 -7			
5024000-54	40 -10			
5024000-55	40 -11			
5024000-56	40 -29			
5024000-60	40 -4			
5024000-61	40 -4			
5024000-62	40 -12			
5024000-63	40 -1			
5024000-64	40 -26			
5024000-65	40 -6			
5024000-66	40 -30			
5024000-74	40 -18			
5024000-75	40 -19			
5024000-76	40 -20			
5024000-77	40 -21			
5024000-78	40 -22			
5024000-79	40 -23			
5024000-81	40 -15			
5024000-82	40 -5			
5024002-7	40 -32			
5024002-8	40 -32			
5024003-1	40 -17			
5024004-1	40 -24			
5024004-10	40 -24			
5024004-11	40 -25			
5024004-2	40 -24			
5024004-3	40 -25			
5024004-4	40 -24			
5024004-7	40 -24			
5024004-8	40 -25			
5024004-9	40 -25			
5024005-1	40 -16			
5025000-3	84 -76			
5025000-5	157 -14			
5025000-5	157A-16			
5025000-6	84 -76			
5025005-1	92 -43			
5025005-10	SUPD BY 5025005-16			
5025005-16	92 -44			
5025005-17	92 -43			
5025005-2	92 -44			
5025005-3	92 -72			
5025005-9	SUPD BY 5025005-17			
5025010-1	34 -12			
5025010-2	34 -12			
5025011-10	34 -12			
5025011-9	34 -12			
5025012-1	34 -12			
5025013-3	84 -67			
5025013-3	157A-12			
5025013-6	84 -66			
5025013-6	157A-12			
5025014-1	30 -3			
5025014-1	84 -54			
5025016-1	SUPD BY 5025016-2			
5025016-2	30 -5			
5025018-1	84 -79			
5025019-1	88 -62			
5025019-1	88 -70			
5026000-4	114 -47			
5026000-4	114 -62			
5026005-1	118 -12			
5026005-1	118A-44			
5026005-1	119A-45			
5026005-5	118 -12			
5026005-5	119 -12			
5026008-2	119 -46			
5026008-2	119A-67			
5026009-4	118 -14A			
5026009-4	118 -20			
5026009-4	118A-52			
5026009-4	118A-54			
5026009-4	119 -18			
5026009-4	119 -27			
5026009-4	119 -58			
5026009-4	119A-56			
5026009-4	119A-78			
5026009-4	119A-88			
5026014-1	118 -24			
5026014-1	118A-63			
5026014-1	119 -22			
5026014-1	119 -49			
5026014-1	119A-51			
5026014-1	119A-70			
5026015-11	1 -27			
5026015-11	1 -27			
5026015-12	1 -27			
5026015-12	1 -27			

PART NUMBER	FIGURE & INDEX NUMBER	QTY PER ART	SOURCE CODE	REPAIR CODE
5026015-5	1 -21			
5026015-6	1 -21			
5026015-7	1 -15			
5026015-8	1 -15			
5026016-1	28 -40			
5026016-7	28 -40			
5026016-7	119 -19			
5026016-7	119A-48			
5026102-3	119 -45			
5026102-3	119A-64			
5026102-4	119 -45			
5026102-4	119A-64			
5026103-21	119 -30			
5026103-21	119A-60			
5026103-22	SUPD BY 5026103-24			
5026103-24	119 -28			
5026103-24	119A-62			
5027000-36	80 -14			
5027000-37	80 -14			
5027000-38	80 -15			
5027000-39	80 -15			
5027000-40	80 -16			
5027000-41	80 -16			
5027000-42	80 -17			
5027000-43	80 -17			
5027000-49	80 -25			
5027000-50	80 -25			
5027002-1	29 -20			
5027002-3	29 -20			
5031000-15	41 -18			
5031000-16	41 -20			
5031000-18	41 -19			
5031000-21	41 -17			
5032000-3	43 -29			
5032001-10	SUPD BY 5032001-11			
5032001-11	43 -4			
5032001-6	SUPD BY 5032001-11			
5041000-205	68 -1			
5041000-206	68 -1			
5041000-209	68 -			
5041000-210	68 -			
5041000-33	70 -43			
5041000-46	71 -79			
5041000-47	71 -79			
5041000-76	68 -10			
5041000-77	68 -10			
5041001-1	71 -60			
5041001-2	71 -60			
5041001-5	71 -60			
5041001-6	71 -60			
5041003-1	71 -96			
5041003-2	71 -83			
5041003-3	71 -90			
5041004-1	71 -82			
5041005-1	71 -107			
5041007-1	68 -45			
5041007-1	69 -46			
5041011-1	71 -80			
5041012-3	72 -30			
5041013-2	68 -28			
5041013-2	69 -32			
5041013-3	68 -37			
5041013-3	69 -41			
5041014-1	71 -105			
5041015-1	68 -24			
5041015-1	69 -25			
5041016-3	70 -2			
5041017-2	68 -27			
5041018-1	71 -69			
5041023-5	71 -104			
5041023-6	71 -104			
5041023-7	71 -103			
5041023-8	71 -103			
5041025-1	68 -33			
5041103-4	71 -92			
5041106-2	SUPD BY 0841212-1			
5041106-3	SUPD BY 0841212-1			
5041106-3	SUPD BY 0841212-1			
5041107-2	67 -4			
5041108-1	SUPD BY 5041108-2			
5041108-2	68 -13			
5041108-2	69 -15			
5041111-1	68 -19			
5041111-1	69 -21			
5041112-2	68 -14			
5041112-2	69 -16			
5041114-1	68 -26			
5041114-2	68 -26			
5041114-7	68 -26			
5041114-8	68 -26			
5041120-1	68 -30			
5041121-1	68 -32			
5041121-2	68 -33			
5042000-210	SUPD BY 5042000-217			
5042000-211	SUPD BY 5042000-218			
5042000-217	SUPD BY 5042000-223			
5042000-218	SUPD BY 5042000-224			
5042000-223	74 -			
5042000-224	74 -8			
5042000-229	74 -53	200		
5042000-230	74 -53			
5042001-3	SUPD BY 5042001-4			
5042001-4	74 -1			
5042001-5	74 -1			
5042002-1	77 -80			
5042003-2	73 -17			
5042004-1	73 -41			
5042005-3	74 -10			
5042005-7	74 -9			
5042005-8	74 -9			
5042009-1	74 -7			
5042009-2	74 -8			
5042010-1	73 -11			
5042012-3	73 -15			
5042012-4	73 -20			

PART NUMBER	FIGURE & INDEX NUMBER	QTY PER ART	SOURCE CODE	REPAIR CODE
5042015-1	68 -6			
5042015-1	69 -9			
5042017-1	74 -21			
5042018-1	73 -9			
5042020-1	77 -88			
5042020-3	77 -88			
5042020-5	77 -88			
5042022-9	73 -45			
5042024-1	73 -49			
5042024-6	73 -49			
5044000-2	83 -17			
5044000-3	83 -21			
5044000-4	83 -2			
5045000-3	78 -17			
5045001-10	SUPD BY 5045001-202			
5045001-7	SUPD BY 5045001-201			
5045001-8	SUPD BY 5045001-202			
5045001-9	SUPD BY 5045001-201			
5045003-4	71 -5			
5045004-3	77 -40			
5045007-1	78 -8			
5045008-3	78 -9			
5045008-7	78 -9			
5045009-16	71 -1			
5045010-18	71 -40			
5045010-19	71 -40			
5045018-1	68 -36			
5045018-1	69 -40			
5045018-1	71 -14			
5045025-1	72 -29			
5045026-1	72 -4			
5045026-1	72 -10			
5045029-1	143 -4			
5045201-3	77 -35			
5045202-1	77 -20			
5045203-1	77 -28			
5045204-4	SUPD BY 5045204-6			
5045204-6	77 -44			
5045209-1	77 -8			
5045210-1	77 -10			
5045211-2	77 -33			
5045212-1	77 -55			
5045213-10	SUPD BY 5045213-12			
5045213-12	77 -1			
5045213-3	71 -31			
5045213-9	77 -14			
5049200-1	146 -9			
5049200-2	146 -9			
5050200-3	1 -35			
5056002-5	102A-30			
5056002-5	102A-31			
5056002-5	103 -2			
5056010-1	97A-7			
5056010-1	98 -6			
5056010-2	97A-7			
5056010-2	98 -6			
5056010-3	97A-7			
5056010-3	98 -6			
5056010-4	97A-7			
5056010-4	98 -6			
5058561-15	145 -10			
5072400-10	152 -			
5072401-5	152 -27			
5072401-6	152 -26			
5072405-1	152 -23			
5072405-14	152 -5			
5072405-2	152 -28			
5072405-3	152 -25			
5072409-10	152 -3			
5072409-8	152 -1			
5072410-2	152 -37			
5072422-1	141 -124			
5091504-6	107 -			
5092300-15	121 -			
5092300-16	121 -19			
5092300-17	121 -			
5092300-18	121 -19			
5092300-19	121 -			
5092300-20	121 -19			
5092301-15	121 -			
5092301-16	121 -19			
5092301-17	121 -			
5092301-18	121 -19			
5092301-19	121 -			
5092301-20	121 -19			
5094102-7	68 -			
5094102-8	68 -			
510P1	122 -43			
5100106-274	130 -51			
5100106-274	132 -93			
5100106-274	132A-72			
5100106-342	130 -54			
5100106-347	130 -63			
5100106-351	130 -61			
5100106-352	130 -56			
5100106-353	130 -59A			
5100106-360	130 -82			
5100106-360	130 -88			
5100106-396	130 -54			
5100107-55	121 -102			
5100107-56	121 -102			
5100107-57	121 -105			
5100108-28	132 -23			
5100108-28	132A-31			
5100108-30	132 -6			
5100108-30	132A-11			
5100108-35	132 -59			
5100108-36	132 -64			
5100108-38	132 -63			
5100108-40	132 -55			
5100108-42	SUPD BY 5100108-51			
5100108-44	SUPD BY 5154043-1			
5100108-46	132A-23			
5100108-47	132A-20			
5100108-48	132A-18			

PART NUMBER	FIGURE & INDEX NUMBER	QTY PER ART	SOURCE CODE	REPAIR CODE
5100108-49	132 -59			
5100108-51	132 -150			
5100108-53	132A-44			
5100109-11	132 -84			
5100109-11	132A-92			
5100109-24	132 -70			
5100109-45	132A-63			
5100109-6	SUPD BY 5100109-24			
5100109-7	132 -91			
5100109-8	132 -82			
5100109-9	132 -77			
5100109-9	132A-84			
5100313-11	1 -6			
5100313-13	1 -7			
5100313-9	1 -5			
5100315-1	1 -63			
5111126-67	9 -5			
5111130-5	9 -12			
5111504-16	22 -7			
5111504-33	22 -20			
5111504-34	1 -13			
5111504-35	1 -13			
5111504-36	22 -9			
5111504-37	22 -8			
5111505-23	23 -19			
5111505-50	23 -18			
5111505-51	23 -18			
5111506-4	23 -76			
5111506-8	22 -34			
5111506-8	23 -71			
5111508-14	23 -57			
5111508-18	23 -35			
5111508-19	23 -34			
5111508-2	23 -33			
5111510-15	24 -31			
5111513-1	22 -18			
5111514-1	22 -19			
5111516-2	22 -35			
5111518-1	22 -30			
5111518-3	22 -30			
5111519-1	22 -38			
5111520-1	22 -23			
5111521-1	22 -21			
5111525-2	22 -23			
5111527-1	22 -33			
5111527-1	23 -70			
5111531-1	22 -39			
5111531-1	23 -69			
5111531-1	24 -24			
5111532-2	23 -72			
5111533-1	23 -73			
5111537-1	23 -62			
5111537-2	23 -62			
5111538-1	23 -79			
5111539-1	23 -61			
5111541-1	23 -77			
5111542-1	23 -80			
5111545-2	23 -82			
5111545-4	23 -67			
5111545-6	22 -32			
5111552-1	23 -17			
5111555-1	22 -38			
5111555-2	22 -38			
5111559-2	22 -22			
5111560-10	22 -43			
5111560-11	22 -42			
5111560-11	23 -68			
5111561-8	23 -57A			
5111565-1	23 -74			
5111565-2	23 -75			
5111566-1	1 -42			
5111566-5	1 -20			
5111566-6	1 -19			
5111567-1	22 -24			
5111567-5	22 -24			
5111605-1	25 -52			
5111605-12	25 -51			
5111605-2	24 -5			
5111605-2	25 -45			
5111605-7	25 -52			
5111605-8	24 -5			
5111605-8	25 -45			
5112021-13	64 -53			
5114133-9	138 -1			
5114146-4	1 -82			
5114211-3	141 -26			
5114212-6	1 -60			
5114243-1	46 -5			
5114425-2	68 -42			
5114425-3	68 -43			
5114511-1	133 -46			
5114511-1	133A-44			
5114520-11	132 -142			
5114520-11	132A-143			
5114529-27	130 -139			
5114529-32	130 -50			
5114532-3	131 -52			
5114532-3	133 -63			
5114532-3	133A-61			
5114554-1	54 -1			
5114554-1	56 -1			
5115207-2	91 -15			
5115210-3	91 -3			
5115210-4	91 -1			
5115212-1	91 -12			
5115213-3	82 -2			
5115213-3	82 -109			
5115217-15	61 -42			
5115217-15	62 -42			
5115218-7	61 -30			
5115218-7	62 -30			
5115223-4	61 -28			
5115223-4	62 -28			
5115223-5	61 -28			
5115223-5	62 -28			

PART NUMBER	FIGURE & INDEX NUMBER	QTY PER ART	SOURCE CODE	REPAIR CODE
5115223-6	61 -28			
5115223-6	62 -28			
5115227-2	1 -50			
5115227-5	1 -50			
5115228-1	61 -46			
5115228-2	61 -52			
5115228-7	62 -46			
5115231-10	90 -10			
5115231-15	90 -			
5115231-16	90 -			
5115231-17	90 -			
5115232-1	90 -20			
5115233-1	90 -2			
5115237-10	93 -16			
5115237-10	93 -16			
5115237-14	93 -22			
5115237-15	93 -22			
5115237-3	93 -5			
5115250-1	61 -27			
5115250-1	62 -27			
5115250-2	61 -27			
5115250-2	62 -27			
5115250-3	61 -27			
5115250-3	62 -27			
5115251-1	61 -29			
5115251-1	62 -29			
5115252-4	93 -8			
5115252-5	93 -8			
5115252-6	93 -8			
5115253-1	93 -15			
5115253-2	93 -14			
5115253-5	93 -17			
5115253-6	93 -20			
5117102-5	128 -50			
5117104-3	128 -4			
5117201-7	9 -24			
5117201-8	9 -24			
5117202-3	9 -22			
5117202-5	9 -23			
5117222-2	125 -15			
5117228-5	128 -32			
5117234-3	128 -3			
5117234-4	128 -1			
5117236-1	128 -6			
5117239-2	61 -56			
5117239-2	61 -58			
5117239-2	62 -56			
5117239-2	62 -58			
5117239-20	61 -12			
5117239-20	62 -12			
5117239-21	61 -19			
5117239-21	62 -19			
5117239-29	61 -19			
5117239-29	62 -19			
5117239-32	61 -91			
5117239-32	62 -91			
5117239-48	62 -12			
5117254-2	128 -10			
5117270-1	SUPD BY 5117270-3			
5117270-2	SUPD BY 5117270-4			
5117270-3	126 -3			
5117270-4	126 -3			
5117278-1	128 -46			
5117278-2	128 -45			
5118162-1	SUPD BY 5118162-5			
5118162-2	99 -10			
5118162-3	99 -7			
5118162-4	99 -8			
5118162-5	99 -9			
5118331-5	141 -37			
5118331-6	141 -37			
5118335-10	99 -12			
5118348-1	38A-16			
5118412-2	61 -25			
5118412-2	62 -25			
5118419-2	38A-14			
5118419-6	38A-15			
5118471-2	142 -13			
5118471-7	142 -13			
5118473-1	142 -5			
5118477-3	145 -13			
5118477-4	145 -13			
5118486-1	144 -3			
5118486-6	144 -3			
5118513-3	99 -1			
5118514-1	99 -1			
5118551-1	142 -17			
5118551-2	142 -16			
5118551-3	142 -22			
5118551-6	142 -17			
5119007-15	47 -49			
5119007-16	47 -49			
5119056-1	47 -89			
5119115-2	55 -48			
5119115-2	55 -48			
5119115-2	55 -51			
5119115-2	55 -52			
5119204-3	57 -23			
5119204-3	58 -27			
5119204-3	58A-27			
5119204-3	59 -9			
5119204-3	60 -26			
5119204-3	60A-26			
5119208-1	57 -20			
5119208-1	58 -24			
5119208-1	58A-24			
5119208-1	59 -19			
5119208-1	60 -36			
5119208-1	60A-36			
5119208-2	57 -26			
5119208-2	58 -30			
5119208-2	58A-30			
5119208-2	59 -12			
5119208-2	60 -29			
5119208-2	60A-29			

PART NUMBER	FIGURE & INDEX NUMBER	QTY PER ART	SOURCE CODE	REPAIR CODE
5119209-4	59 -8			
5119291-1	1 -61			
5119299-1	54 -23			
5119309-1	46 -64			
5119311-55	46A-1			
5119311-55	46A-2			
5119404-1	1 -11			
5119405-2	61 -81			
5119405-2	62 -81			
5119405-3	61 -81			
5119405-3	62 -81			
5119405-4	61 -81			
5119405-4	62 -81			
5119406-1	1 -44			
5119501-29	46 -55			
5119501-30	46 -56			
5119505-6	47 -50			
5119541-2	46 -94			
5119564-6	1 -19			
5122010-13	32 -33			
5122010-14	32 -33			
5122013-201	28 -1			
5122013-202	28 -1			
5126103-5	118A-32			
5126103-5	119A-33			
5126207-2	114 -73			
5126207-2	132 -60			
5126207-2	132A-21			
5126208-5	119 -55			
5126208-5	119A-75			
5132013-5	43 -7			
5137	132 -118			
5137	132 -140			
5137	132A-117			
5137	132A-141			
5137	71 -79			
5141001-10	69 -			
5141001-202	SUPD BY 5141001-212			
5141001-203	SUPD BY 5141001-211			
5141001-205	SUPD BY 5141001-213			
5141001-206	SUPD BY 5141001-214			
5141001-21	69 -			
5141001-211	69 -1			
5141001-212	69 -1			
5141001-213	69 -10			
5141001-214	69 -10			
5141001-22	69 -			
5141001-221	69 -1			
5141001-222	69 -1			
5141001-33	71 -79			
5141001-34	71 -79			
5141001-35	69 -			
5141001-36	69 -			
5141001-57	69 -			
5141001-58	69 -			
5141001-9	71 -79			
5141005-1	69 -29			
5141005-10	69 -30			
5141005-2	69 -29			
5141005-5	69 -30			
5141005-6	69 -30			
5141005-7	69 -29			
5141005-8	69 -29			
5141005-9	69 -30			
5141006-1	69 -34			
5141007-1	69 -51			
5141007-2	69 -50			
5141008-1	69 -31			
5141009-1	69 -36			
5141009-1	69 -36			
5141009-11	SUPD BY 5141009-13			
5141009-13	69 -36			
5141009-2	69 -37			
5141009-7	69 -36			
5141009-8	69 -37			
5141009-9	SUPD BY 5141009-13			
5141052-1	71 -49			
5141201-1	69 -50			
5141201-2	69 -50			
5142001-1	77 -48			
5151	61 -88			
5151	62 -88			
5151	64 -46			
5154000-10	133 -			
5154000-9	133 -15			
5154003-1	132 -1			
5154003-1	132A-13			
5154005-5	38 -6A			
5154006-10	131 -10			
5154006-11	131 -11			
5154006-12	131 -12			
5154006-3	131 -2			
5154006-4	131 -5			
5154006-7	131 -18			
5154006-8	131 -3			
5154008-2	SUPD BY 5154042-2			
5154008-6	SUPD BY 5154042-2			
5154008-6	SUPD BY 5154042-2			
5154009-1	SUPD BY 5154009-4			
5154009-4	133 -22			
5154010-13	125 -44			
5154016-6	131 -4			
5154017-3	131 -6			
5154019-1	131 -8			
5154020-4	132A-76			
5154021-1	133 -28			
5154022-2	133 -30			
5154022-9	133 -29			
5154022-9	133A-22			
5154023-2	133 -23			
5154023-4	31 -11			
5154025-1	133 -26			
5154026-1	132 -51			
5154026-14	132 -34			
5154026-14	132A-46			
5154026-19	132 -51			

PART NUMBER	FIGURE & INDEX NUMBER	QTY PER ART	SOURCE CODE	REPAIR CODE
5154026-19	132A-37			
5154026-6	132 -50			
5154026-6	132A-48			
5154028-1	132 -25			
5154028-1	132A-32			
5154029-2	131 -5			
5154030-1	132 -12			
5154030-3	132 -12E			
5154031-1	38 -5A			
5154031-5	38 -5A			
5154033-1	133 -12			
5154034-1	133 -16			
5154034-2	133 -13			
5154034-5	133 -14			
5154035-7	133 -17			
5154035-7	133A-8			
5154036-5	133 -32			
5154037-3	132 -38			
5154037-3	132A-55			
5154037-4	132 -39			
5154037-4	132A-54			
5154037-5	133 -29A			
5154037-6	132 -37			
5154037-6	132A-53			
5154037-7	132 -36			
5154037-7	132A-52			
5154037-8	132 -42			
5154037-8	132A-57			
5154039-12	132 -17			
5154039-12	132A-28			
5154039-32	132 -18			
5154039-32	132A-26			
5154039-5	SUPD BY 5154039-32			
5154040-1	132 -12F			
5154041-3	133 -92			
5154042-2	131 -14			
5154042-2	133 -34			
5154042-2	133A-30			
5154043-1	132 -146			
5154049-17	133A-23			
5154049-3	133A-16			
5154055-1	133A-5			
5154056-1	SUPD BY 5154056-3			
5154056-2	132A-2			
5154056-3	132A-3			
5154057-1	133A-12			
5154058-1	133A-6			
5154058-2	133A-7			
5154060-6	133A-			
5154062-1	133A-21			
5155101-10	97 -4			
5155105-1	104 -10			
5155113-1	106 -7			
5155121-4	98 -16			
5155121-4	125 -6			
5155121-5	98 -16			
5155121-5	125 -7			
5155130-3	97A-4			
5155137-1	100 -25			
5155138-1	SUPD BY 5155138-6			
5155138-6	115 -3			
5155166-1	100 -			
5155166-10	100 -5			
5155166-13	100 -3			
5155166-14	100 -6			
5155166-2	100 -38			
5155166-7	100 -1			
5155166-8	100 -4			
5155166-9	100 -2			
5172424-2	141 -125			
5172424-3	141 -125			
5172424-5	141 -125			
5190016-2	22 -43			
5190016-3	22 -46			
5190016-4	22 -45			
5190016-5	22 -44			
5190057-3	99 -7			
5190057-4	99 -7			
5194001-11	69 -			
5194001-12	69 -			
5194001-17	69 -			
5194001-18	69 -			
5194001-5	69 -			
5194001-6	69 -			
5195015-3	131 -21			
5195015-3	133 -101			
5200022-2	1 -18			
5200022-3	1 -18			
5200023-17	1 -41			
5200044-1	1 -14			
5200044-3	1 -3A			
5200044-5	1 -4A			
5200046-7	1 -48			
5200106-115	97A-19			
5200106-115	98 -35			
5200106-118	116 -4			
5200106-207	120 -18			
5200106-208	120 -18			
5200106-61	120 -19			
5200106-62	120 -19			
5200106-65	120 -15			
5200106-66	120 -15			
5200106-67	120 -25			
5200106-71	120 -3			
5200106-75	120 -9			
5200106-76	120 -9			
5200106-79	118 -10			
5200106-79	119 -10			
5200106-86	120 -18			
5200106-87	120 -18			
5200106-89	120 -38			
5200106-90	120 -34			
5200106-91	120 -34			
5200108-49	120 -9			
5200108-50	120 -9			

PART NUMBER	FIGURE & INDEX NUMBER	QTY PER ART	SOURCE CODE	REPAIR CODE
5200181-12	1 -50			
5211106-8	23 -57A			
5211183-1	SUPD BY 5211185-1			
5211183-2	SUPD BY 5211185-2			
5211185-1	5 -25			
5211185-1	37 -28			
5211185-2	5 -25			
5211185-2	22 -49			
5211347-2	25 -22			
5213085-1	5 -24			
5214017-14	47 -8A			
5214017-14	47 -29			
5215015-5	86 -35			
5215022-2	27 -16			
5215022-7	27 -21			
5215026-3	46 -58			
5215027-11	SUPD BY 5215027-12			
5215027-12	83 -56			
5215028-2	83 -57			
5215028-4	83 -58			
5215077-3	86 -24			
5215077-6	86 -25			
5215078-1	86 -26			
5215085-1	SUPD BY 5215085-5			
5215085-3	SUPD BY 5215085-5			
5215085-5	106 -18			
5215090-1	1 -56			
5217503-1	129 -23			
5217503-1	129A-19			
5217525-2	124 -85			
5217525-2	124A-41			
5217552-1	129 -23			
5217559-6	1 -38			
522-2638-006	150 -20			
522-2643-001	150 -20			
522-2644-011	150 -20			
522-2930-00	150 -20			
522-3241-00	150 -20			
522-4945-001	150 -20			
5220510-1	29 -27			
5220510-2	29 -27			
5221027-11	29 -17			
5221027-12	29 -17			
5222100-3	29 -16			
5222100-4	29 -16			
5222102-1	31 -31			
5222102-2	31 -31			
5222103-1	31 -30			
5222103-2	31 -30			
5222104-1	35 -30			
5222104-2	35 -30			
5222105-1	29 -21			
5222105-2	29 -21			
5222106-27	30 -11			
5222106-28	30 -11			
5222106-3	SUPD BY 5222106-27			
5222106-4	SUPD BY 5222106-28			
5222107-1	29 -26			
5222107-2	29 -26			
5222108-1	30 -12			
5222108-2	30 -12			
5222108-3	30 -12			
5222108-4	30 -12			
5222350-10	32 -15			
5222350-11	32 -16			
5222350-12	32 -16			
5222350-13	32 -17			
5222350-14	32 -17			
5222350-15	32 -18			
5222350-16	32 -18			
5222350-17	32 -19			
5222350-18	32 -19			
5222350-19	32 -12			
5222350-20	32 -12			
5222350-21	32 -11			
5222350-22	32 -11			
5222350-5	32 -13			
5222350-6	32 -13			
5222350-7	32 -14			
5222350-8	32 -14			
5222350-9	32 -15			
5222509-9	32 -39			
5222514-3	28 -34			
5222514-4	28 -34			
5222600-35	37 -57			
5222600-5	37 -49			
5222600-6	37 -49			
5222601-10	37 -56			
5222601-16	37 -61			
5222601-17	37 -58			
5222601-18	37 -60			
5222601-19	37 -59			
5222601-20	37 -59			
5222601-31	38 -9			
5222601-44	38 -9			
5222601-5	37 -64			
5222601-6	37 -64			
5222601-7	37 -63			
5222601-8	37 -63			
5222601-9	37 -56			
5226000-34	37 -53			
5226000-8	118 -9			
5226000-8	118A-28			
5226000-8	119 -9			
5226000-8	119A-29			
5226001-13	120 -26			
5226001-14	1 -23			
5226001-21	1 -23			
5226001-49	120 -16			
5226004-3	120 -29			
5226006-1	120 -21			
5226007-33	37 -52			
5226007-7	37 -51			
5226007-8	37 -50			
5226007-9	37 -54			

PART NUMBER	FIGURE & INDEX NUMBER	QTY PER ART	SOURCE CODE	REPAIR CODE
5226007-9	120 -23			
5226008-1	1 -31			
5226009-1	120 -33			
5226009-2	120 -33			
5241001-1	68 -20			
5241001-1	69 -22			
5241001-2	68 -21			
5241001-2	69 -23			
5241002-1	68 -5			
5241002-1	69 -7			
5241002-2	69 -8			
5241002-6	69 -8			
5241002-7	69 -7			
5242001-3	74 -51			
5242002-1	74 -12			
5242004-1	74 -16			
5243000-5	74 -47			
5243000-6	68 -47			
5243000-6	69 -56			
5250101-3	35 -55			
5250101-4	35 -55			
5250105-1	117 -7			
5251800-1	101 -15			
5251800-16	101 -15			
5251802-1	97A-17			
5251802-1	98 -33			
5254101-1	37 -13			
5254101-2	37 -13			
5254101-25	38 -12			
5254101-27	38 -12			
5254101-29	37 -13			
5254102-11	49 -20			
5254102-12	49 -20			
5254102-13	49 -21			
5254102-14	49 -21			
5254102-15	49 -17A			
5254102-16	SUPD BY 5254102-28			
5254102-17	49 -16			
5254102-18	SUPD BY 5254102-29			
5254102-2	37 -46			
5254102-20	49 -17			
5254102-21	49 -17			
5254102-22	49 -19			
5254102-23	49 -17			
5254102-26	49 -20			
5254102-27	49 -20			
5254102-28	49 -17A			
5254102-29	49 -16			
5254102-5	SUPD BY 5254102-21			
5254102-6	SUPD BY 5254102-20			
5254102-7	49 -17			
5254102-8	49 -19			
5254103-3	37 -1			
5254103-4	37 -1			
5254104-1	36 -17			
5254105-5	37 -45			
5254108-3	37 -1			
5254108-4	37 -1			
5254108-5	37 -1			
5254108-6	37 -1			
5255014-1	97A-20			
5255014-1	98 -36			
5261001-10	86 -			
5261001-3	86 -			
5261001-4	86 -			
5261001-9	86 -			
5261002-1	86 -10			
5272424-1	46 -97			
5295101-1	37 -13			
5295101-2	37 -13			
5295101-3	38 -12			
5300101-1	1 -77			
5300101-3	1 -78			
5300101-5	1 -79			
5300104-1	1 -68			
5300104-3	1 -69			
5300104-5	1 -67			
5300105-1	1 -66			
5300106-15	103 -4			
5300106-17	102 -7			
5300106-19	102 -16			
5300106-20	102 -18			
5300106-20	102 -33			
5300106-23	102 -40			
5300106-25	123 -6			
5300106-28	97 -21			
5300106-28	97A-46			
5300106-30	114 -73			
5300107-10	127 -14			
5300107-18	126 -16			
5300107-31	126 -31			
5300107-31	127 -26			
5300107-32	126 -32			
5300107-32	127 -27			
5300107-33	126 -35			
5300107-33	126 -37			
5300107-33	127 -30			
5300107-33	127 -32			
5300107-35	126 -38			
5300107-35	126 -39			
5300107-35	127 -33			
5300107-35	127 -34			
5300107-4	127 -4			
5300107-6	127 -9			
5300107-8	127 -12			
5300108-1	116 -31			
5300108-10	114 -42			
5300108-10	114 -64			
5300108-11	114 -50			
5300108-11	114 -55			
5300108-12	115 -21			
5300108-13	115 -22			
5300108-16	103 -19			
5300108-17	103 -19			
5300108-18	103 -24			

PART NUMBER	FIGURE & INDEX NUMBER	QTY PER ART	SOURCE CODE	REPAIR CODE
5300108-19	103 -24			
5300108-2	128 -44			
5300108-20	115 -15			
5300108-20	115 -16			
5300108-20	123 -17			
5300108-22	123 -21			
5300108-23	123 -21			
5300108-26	115 -11			
5300108-27	115 -11			
5300108-3	128 -60			
5300108-30	115 -10			
5300108-31	115 -10			
5300108-32	115 -4			
5300108-33	115 -5			
5300108-36	116 -19			
5300108-37	116 -23			
5300108-38	116 -2			
5300108-39	116 -9			
5300108-4	128 -65			
5300108-40	114 -53			
5300108-41	114 -52			
5300108-41	114 -53			
5330108-44	97A-50			
5300108-47	116 -2			
5300108-48	116 -19			
5300108-5	128 -62			
5300108-51	118 -10			
5300108-51	118A-19			
5300108-51	119A-19			
5300108-52	114 -42			
5300108-53	114 -53			
5300108-54	114 -52			
5300108-55	114 -37			
5300108-55	114 -63			
5300108-6	128 -72			
5300108-7	128 -37			
5300108-8	128 -41			
5300108-9	128 -35			
5300111-1	124 -4			
5300111-10	124 -57			
5300111-11	SUPD BY 5300111-16			
5300111-12	124 -41			
5300111-13	124 -10			
5300111-13	124A-9			
5300111-14	124 -32			
5300111-15	124 -46			
5300111-16	124 -75			
5300111-17	124A-22			
5300111-18	124A-39			
5300111-19	124A-38			
5300111-2	124 -6			
5300111-20	124A-34	11		
5300111-21	124A-30			
5330111-22	124A-33			
5300111-23	124 -46			
5300111-24	124 -46A			
5300111-25	124 -69			
5300111-26	124A-34			
5300111-3	124 -4			
5330111-3	124A-15			
5300111-4	124 -6			
5300111-4	124A-13			
5300111-5	124 -81			
5300111-6	124 -81			
5300111-7	SUPD BY 5300111-25			
5300111-8	124 -65			
5300111-9	124 -63			
5330112-10	SUPD BY 5300112-16			
5300112-11	SUPD BY 5300112-15			
5300112-12	136 -27			
5300112-13	136 -23			
5330112-14	136 -14			
5300112-15	136 -19			
5330112-16	136 -19			
5300112-4	136 -29			
5300112-6	136 -30			
5300112-7	136 -31			
5300112-8	136 -38			
5300113-1	135 -24			
5300113-10	134 -22			
5300113-10	134 -36			
5300113-11	134 -12			
5300113-12	134 -14			
5300113-13	134 -15			
5300113-14	135 -31			
5330113-14	135 -31			
5300113-15	135 -18			
5300113-16	134 -40			
5330113-18	134 -33			
5300113-19	134 -9			
5300113-2	134 -6			
5300113-20	134 -26			
5300113-21	134 -15			
5300113-22	135 -18			
5330113-23	134 -16			
5330113-24	134 -54			
5330113-25	134 -52			
5330113-26	135 -31			
5300113-27	135 -18			
5300113-28	134 -57			
5300113-29	134 -61			
5300113-3	135 -18			
5300113-30	134 -62			
5330113-31	134 -65			
5300113-32	134 -55			
5300113-33	134 -66			
5300113-34	134 -68			
5300113-4	135 -31			
5330113-6	134 -9			
5300113-7	134 -19			
5300113-7	134 -26			
5300113-9	134 -29			
5300116-1	94 -10			
5300116-2	94 -10			
5300116-3	94 -12			

PART NUMBER	FIGURE & INDEX NUMBER	QTY PER ART	SOURCE CODE	REPAIR CODE
5300116-4	94 -13			
5300116-5	94 -36			
5300116-6	94 -37			
5300116-7	94 -46			
5300116-8	94 -46			
5300117-1	140 -22			
5300117-2	140 -27			
5300117-3	140 -37			
5300117-4	140 -40			
5300117-5	140 -32			
5300118-1	130 -99			
5300118-1	132 -124			
5300118-1	132A-123			
5300118-10	130 -140			
5300118-10	132 -143			
5300118-10	132A-144			
5300118-11	130 -143			
5300118-11	132 -122			
5300118-11	132A-121			
5300118-12	130 -88			
5300118-13	130 -82			
5300118-14	123 -13			
5300118-14	132 -136			
5300118-14	132A-136			
5300118-15	132 -116			
5300118-15	132A-115			
5300118-16	132 -113			
5300118-16	132A-109			
5300118-17	132 -134			
5300118-17	132A-133			
5300118-18	132 -72			
5300118-19	132 -75			
5300118-2	130 -100			
5300118-2	132 -102			
5300118-2	132A-98			
5300118-3	130 -108			
5300118-3	132 -128			
5300118-3	132A-127			
5300118-4	130 -109			
5300118-4	132 -107			
5300118-4	132A-103			
5300118-5	130 -128			
5300118-6	130 -129			
5300118-7	130 -113			
5300118-8	130 -126			
5300118-9	130 -127			
5300181-1	1 -24			
5300181-10	1 -40			
5300181-11	SUPD BY 5013118-2			
5300181-12	1 -45			
5300181-13	1 -47			
5300181-13	142 -9A			
5300181-14	1 -14			
5300181-15	1 -55			
5300181-15	119A-71			
5300181-16	1 -56			
5300181-17	1 -58			
5300181-18	1 -59			
5300181-19	1 -40			
5300181-2	63 -12			
5300181-2	64 -12			
5300181-20	1 -25			
5300181-22	1 -44			
5300181-23	1 -45			
5300181-26	1 -41			
5300181-27	1 -38			
5300181-28	1 -40			
5300181-29	1 -40			
5300181-30	1 -43A			
5300181-34	1 -28			
5300181-34	1 -28			
5300181-35	1 -25			
5300181-6	1 -29			
5300181-7	1 -43			
5300181-8	1 -25			
5300181-9	1 -26			
5300305-1	86 -12			
5300306-1	86 -12			
5300306-2	86 -12			
5300310-1	1 -8			
5300315-1	1 -4			
5300315-2	1 -4			
5300315-3	1 -1			
5300315-4	1 -1			
5300315-5	1 -2			
5300315-6	1 -2			
5300315-7	1 -3			
5300316-2	1 -64			
5300316-4	1 -64			
530038-2	124 -110			
5300400-10	82 -89			
5300400-11	82 -89			
5300400-12	82 -48			
5300400-13	82 -48			
5300400-14	82 -33			
5300400-15	87 -15			
5300400-16	87 -16			
5300400-17	89 -46			
5300400-18	89 -47			
5300400-18	90 -19			
5300400-19	89 -15			
5300400-20	89 -16			
5300400-37	88 -18			
5300400-41	84 -42			
5300400-43	84 -20			
5300400-45	84 -48			
5300400-48	88 -17			
5300400-5	85 -52			
5300400-50	87 -61			
5300400-51	87 -60			
5300400-54	88 -22			
5300400-56	88 -21			
5300400-58	84 -9			
5300400-60	84 -48			
5300400-62	82 -89			

PART NUMBER	FIGURE & INDEX NUMBER	QTY PER ART	SOURCE CODE	REPAIR CODE
5300400-64	89 -16			
5300400-66	89 -47			
5300400-67	89 -47			
5300400-69	89 -16			
5300400-8	85 -3			
5300400-9	85 -2			
5300529-7	131 -40			
5300529-8	131 -48			
5300901-4	138 -20			
5300901-5	138 -28			
5300901-6	138 -28			
5300901-7	138 -44			
5300901-8	138 -48			
5300901-9	138 -54			
5300908-10	64 -19			
5300908-11	64 -19			
5300908-12	64 -19			
5300908-14	64 -19			
5300909-2	146 -55			
5300911-11	89 -50			
5300911-12	89 -16A			
5300911-14	90 -19			
5300911-16	90 -19			
5300911-2	89 -49			
5300911-5	89 -51			
5300913-12	157 -17			
5300918-2	46 -68			
5300918-4	46 -95			
5300918-4	46 -97			
5300919-2	155 -3			
5300919-4	41 -34			
5300919-5	41 -35			
5300920-13	142 -48			
5300920-14	142 -4A			
5300920-2	142 -13			
5300920-3	142 -13			
5300920-4	142 -13			
5300920-5	142 -13			
5300920-6	142 -3			
5300925-3	130 -120			
5300926-2	SUPD BY 9711019-9			
5300927-13	131 -72			
5300927-13	133 -83			
5300927-13	133A-81			
5300927-15	131 -74			
5300927-15	133 -85			
5300927-15	133A-83			
5300927-16	131 -75			
5300927-16	133 -86			
5300927-16	133A-84			
5300927-19	21 -26			
5300927-20	131 -38			
5300927-22	133 -49			
5300927-22	133A-47			
5300927-5	131 -73			
5300927-5	133 -74			
5300927-5	133A-72			
5300927-8	131 -65			
5300927-8	133 -76			
5300927-8	133A-74			
5300929-2	130 -103			
5300929-2	132 -106			
5300929-2	132A-102			
5300929-6	131 -51			
5300929-6	133 -62			
5300929-6	133A-60			
5300929-7	133 -51			
5300929-7	133A-49			
5300929-8	133 -59			
5300929-8	133A-57			
5300929-9	131 -53			
5300929-9	133 -64			
5300929-9	133A-62			
5300935-5	61 -86			
5300935-5	62 -86			
5300937-1	131 -37			
5300937-1	133 -47			
5300937-1	133A-45			
5300938-2	129 -36			
5300938-6	129 -36			
5300938-6	129A-52			
5300938-8	129 -39			
5300938-8	129A-55			
5300942-1	SUPD BY 5300942-3			
5300942-2	64 -35			
5300942-3	64 -35			
5300943-2	64 -46			
5300948-3	52 -40			
5300948-3	54 -81			
5300948-3	56 -79			
5310010-2	2 -20			
5310015-2	2 -22			
5310015-3	2 -21			
5310110-2	9 -29			
5310110-3	9 -29			
5310120-2	10 -20			
5310120-4	10 -20			
5310125-1	10 -18			
5311010-1	16 -5			
5311010-10	16 -12			
5311010-11	16 -13			
5311010-12	16 -13			
5311010-13	16 -15			
5311010-14	16 -17			
5311010-15	16 -8			
5311010-16	16 -9			
5311010-17	16 -3			
5311010-18	16 -2			
5311010-19	16 -1			
5311010-2	16 -5			
5311010-20	16 -11			
5311010-21	16 -14			
5311010-22	16 -16			
5311010-23	16 -5			
5311010-3	16 -10			

PART NUMBER	FIGURE & INDEX NUMBER	QTY PER ART	SOURCE CODE	REPAIR CODE
5311010-4	16 -10			
5311010-5	16 -4			
5311010-6	16 -4			
5311010-7	16 -6			
5311010-8	16 -7			
5311010-9	16 -12			
5311012-2	2 -10			
5311012-2	125 -36			
5311012-5	2 -12			
5311012-5	125 -39			
5311015-10	13 -3			
5311015-11	13 -2			
5311015-12	13 -1			
5311015-13	14 -13			
5311015-14	15 -13			
5311015-15	15 -11			
5311015-16	13 -12			
5311015-17	13 -10			
5311015-18	13 -9			
5311015-19	13 -11			
5311015-20	14 -18			
5311015-20	14 -20			
5311015-21	14 -16			
5311015-22	15 -16			
5311015-23	15 -14			
5311015-24	14 -3			
5311015-25	14 -11			
5311015-27	14 -12			
5311015-28	14 -4			
5311015-29	15 -9			
5311015-30	15 -4			
5311015-31	15 -10			
5311015-32	15 -5			
5311015-33	14 -14			
5311015-34	15 -12			
5311015-35	13 -6			
5311015-36	14 -8			
5311015-37	14 -9			
5311015-38	14 -15			
5311015-39	13 -5			
5311015-4	13 -4			
5311015-40	15 -2			
5311015-41	13 -7			
5311015-42	13 -8			
5311015-43	14 -2			
5311015-44	13 -10			
5311015-45	13 -9			
5311015-46	14 -19			
5311015-47	15 -15			
5311015-48	13 -6			
5311015-49	13 -5			
5311015-5	14 -10			
5311015-50	15 -7			
5311015-51	15 -8			
5311015-52	14 -6			
5311015-53	15 -17			
5311015-54	15 -3			
5311015-55	13 -12			
5311015-56	14 -7			
5311015-57	14 -17			
5311015-6	14 -5			
5311015-7	14 -1			
5311015-8	15 -6			
5311015-9	15 -1			
5311016-10	14 -32			
5311016-11	14 -31			
5311016-12	14 -28			
5311016-13	14 -27			
5311016-14	13 -25			
5311016-15	13 -25			
5311016-16	13 -24			
5311016-17	13 -24			
5311016-18	15 -23			
5311016-19	15 -19			
5311016-4	15 -22			
5311016-5	15 -18			
5311016-6	15 -21			
5311016-7	15 -20			
5311016-8	14 -30			
5311016-9	14 -29			
5311020-16	11 -23			
5311020-17	11 -26			
5311021-14	11 -21			
5311021-15	11 -28			
5311021-16	11 -27			
5311021-17	11 -20			
5311021-18	11 -22			
5311035-12	7 -29			
5311035-13	7 -29			
5311035-17	7 -19			
5311035-18	7 -19			
5311035-21	7 -29			
5311035-22	7 -29			
5311035-7	7 -19			
5311035-8	7 -19			
5311036-3	26 -2			
5311036-31	26 -7			
5311036-32	26 -7			
5311036-35	26 -2			
5311036-36	26 -2			
5311036-37	SUPD BY 5311036-53			
5311036-38	SUPD BY 5311036-54			
5311036-4	26 -2			
5311036-5	26 -1			
5311036-51	26 -7			
5311036-52	26 -7			
5311036-53	26 -1			
5311036-54	26 -1			
5311036-6	26 -1			
5311037-10	7 -23			
5311037-11	7 -22			
5311037-12	7 -22			
5311037-13	7 -26			
5311037-14	7 -26			
5311037-15	SUPD BY 5311037-19			

PART NUMBER	FIGURE & INDEX NUMBER	QTY PER ART	SOURCE CODE	REPAIR CODE
5311037-16	SUPD BY 5311037-20			
5311037-17	7 -23			
5311037-18	7 -23			
5311037-19	7 -20			
5311037-20	7 -20			
5311037-5	7 -26			
5311037-6	7 -26			
5311037-7	7 -20			
5311037-8	7 -20			
5311037-9	7 -23			
5311040-2	9 -2			
5311040-3	9 -1			
5311040-7	9 -2			
5311040-8	9 -2			
5311041-1	9 -3			
5311041-10	9 -7			
5311041-11	9 -7			
5311041-12	9 -7			
5311041-17	9 -8			
5311041-21	9 -4			
5311041-8	9 -6			
5311041-9	9 -7			
5311050-10	10 -4			
5311050-14	10 -4			
5311050-16	10 -4			
5311050-2	10 -4			
5311050-7	10 -1			
5311050-8	10 -2			
5311050-9	10 -3			
5311051-1	10 -8			
5311051-10	10 -7			
5311051-15	10 -15			
5311051-16	10 -15			
5311051-17	10 -13			
5311051-17	10 -16			
5311051-18	10 -13			
5311051-18	10 -16			
5311051-19	10 -14			
5311051-2	10 -9			
5311051-20	10 -14			
5311051-23	10 -15			
5311051-24	10 -15			
5311051-3	10 -6			
5311051-7	10 -5			
5311051-8	10 -5			
5311051-9	10 -7			
5311052-1	10 -10			
5311052-2	10 -10			
5311052-4	10 -10			
5311060-13	17 -5			
5311060-25	17 -24			
5311060-3	17 -1			
5311060-32	17 -2			
5311060-33	17 -2			
5311060-4	17 -1			
5311060-5	17 -2			
5311060-6	17 -2			
5311062-1	58 -43			
5311062-1	58A-49			
5311062-1	60 -47			
5311062-1	60A-51			
5311062-2	58 -43			
5311062-2	58A-49			
5311062-2	60 -47			
5311062-2	60A-51			
5311065-3	17 -3			
5311065-4	17 -3			
5311065-46	17 -4			
5311065-5	17 -4			
5311065-51	17 -4			
5311065-52	17 -4			
5311065-6	SUPD BY 5311065-46			
5311066-2	17 -4			
5311066-3	17 -2			
5311066-4	17 -4			
5311066-5	17 -2			
5311070-10	17 -28			
5311070-11	17 -25			
5311070-12	17 -26			
5311070-13	17 -11			
5311070-13	17 -14			
5311070-13	17 -17			
5311070-13	17 -21			
5311070-13	17 -22			
5311070-14	17 -12			
5311070-14	17 -15			
5311070-14	17 -19			
5311070-19	17 -27			
5311070-2	17 -9			
5311070-20	17 -8			
5311070-22	21 -15			
5311070-23	21 -13			
5311070-24	21 -13			
5311070-25	21 -14			
5311070-3	17 -7			
5311070-32	17 -26			
5311070-33	17 -28			
5311070-34	17 -7			
5311070-34	17 -9			
5311070-36	17 -11			
5311070-36	17 -12			
5311070-36	17 -14			
5311070-36	17 -15			
5311070-36	17 -17			
5311070-36	17 -19			
5311070-36	17 -21			
5311070-36	17 -22			
5311070-38	17 -10			
5311070-38	17 -13			
5311070-38	17 -16			
5311070-38	17 -18			
5311070-38	17 -20			
5311070-38	17 -23			
5311070-4	17 -16			
5311070-40	17 -8			

PART NUMBER	FIGURE & INDEX NUMBER	QTY PER ART	SOURCE CODE	REPAIR CODE
5311070-44	17 -9			
5311070-45	17 -6			
5311070-5	17 -10			
5311070-5	17 -13			
5311070-5	17 -18			
5311070-5	17 -20			
5311070-5	17 -23			
5311071-15	21 -20			
5311071-16	21 -19			
5311071-17	21 -24			
5311071-18	21 -23			
5311071-19	21 -16			
5311071-20	21 -17			
5311071-21	21 -18			
5311071-22	21 -21			
5311071-23	21 -22			
5311071-25	21 -32			
5311071-26	21 -33			
5311071-30	21 -20			
5311071-31	21 -19			
5311071-32	21 -18			
5311071-33	21 -32			
5311075-10	17 -30			
5311075-12	17 -31			
5311075-13	SUPD BY 5311075-29			
5311075-19	17 -32			
5311075-19	17 -32			
5311075-2	SUPD BY 5311075-23			
5311075-20	17 -33			
5311075-23	17 -29			
5311075-24	17 -29			
5311075-26	17 -34			
5311075-29	21 -25			
5311075-30	21 -25C			
5311075-31	21 -25A			
5311075-32	21 -25B			
5311080-2	8 -3			
5311082-2	8 -4			
5311084-2	8 -10			
5311084-7	8 -11			
5311086-2	8 -12			
5311086-6	8 -13			
5311090-4	8 -18			
5311090-5	SUPD BY 5311090-7			
5311090-7	8 -18			
5311092-19	8 -16			
5311092-21	8 -15			
5311092-3	8 -16			
5311092-4	8 -16			
5311092-5	SUPD BY 5311092-21			
5311092-6	8 -15			
5311092-7	8 -17			
5311092-8	8 -14			
5311092-9	8 -14			
5311094-3	8 -25			
5311094-4	8 -20			
5311098-20	8 -22			
5311098-20	8 -24			
5311098-22	8 -23			
5311098-3	8 -21			
5311102-2	8 -26			
5311102-9	8 -26			
5311104-29	8 -28			
5311106-2	8 -29			
5311106-8	8 -30			
5311110-3	8 -31			
5311110-4	8 -31			
5311110-5	8 -32			
5311110-6	8 -33			
5311112-2	8 -34			
5311112-5	8 -34A			
5311114-2	8 -35			
5311116-2	8 -36			
5311116-4	8 -37			
5311120-2	15 -38			
5311120-3	15 -39			
5311120-4	15 -37			
5311120-5	15 -35			
5311120-6	15 -34			
5311120-7	15 -36			
5311125-2	15 -38			
5311125-3	15 -39			
5311125-4	15 -37			
5311125-5	15 -35			
5311125-6	15 -34			
5311125-7	15 -36			
5311130-2	15 -41			
5311130-3	15 -41			
5311130-4	15 -41			
5311132-2	15 -31			
5311132-4	15 -33			
5311132-5	15 -32			
5311134-10	14 -35			
5311134-11	14 -37			
5311134-12	14 -34			
5311134-13	14 -33			
5311134-15	14 -38			
5311134-16	15 -28			
5311134-17	15 -27			
5311134-18	15 -25			
5311134-19	15 -24			
5311134-20	15 -26			
5311134-22	14 -36			
5311134-23	14 -35			
5311134-24	14 -38			
5311134-5	15 -28			
5311134-6	15 -27			
5311134-7	15 -29			
5311134-8	15 -30			
5311134-9	14 -36			
5311136-10	14 -24			
5311136-11	14 -23			
5311136-12	14 -23			
5311136-13	14 -25			
5311136-14	14 -25			

PART NUMBER	FIGURE & INDEX NUMBER	QTY PER ART	SOURCE CODE	REPAIR CODE
5311136-18	14 -22			
5311136-2	14 -21			
5311136-3	14 -22			
5311136-5	14 -26			
5311136-6	14 -26			
5311136-7	14 -26			
5311136-8	14 -26			
5311136-9	14 -24			
5311140-10	13 -30			
5311140-11	13 -26			
5311140-3	13 -26			
5311140-4	13 -26			
5311140-5	13 -28			
5311140-6	13 -28			
5311140-7	13 -27			
5311140-8	13 -27			
5311140-9	13 -29			
5311142-3	13 -31			
5311142-4	13 -31			
5311145-10	8 -8			
5311145-11	8 -9			
5311145-12	8 -9			
5311145-13	8 -9			
5311145-14	8 -9			
5311145-2	8 -8			
5311145-3	8 -9			
5311145-4	8 -9			
5311145-6	8 -6			
5311145-7	8 -7			
5311145-8	8 -7			
5311145-9	8 -9			
5311150-12	13 -21			
5311150-13	13 -21			
5311150-14	13 -14			
5311150-15	13 -18			
5311150-16	13 -17			
5311150-2	13 -23			
5311150-20	13 -19			
5311150-24	48 -3			
5311150-27	13 -20			
5311150-28	13 -20			
5311150-3	13 -23			
5311150-30	13 -18			
5311150-4	13 -22			
5311150-5	13 -22			
5311150-8	13 -16			
5311150-9	13 -15			
5311157-11	13 -32			
5311157-12	13 -32			
5311157-3	13 -32			
5311157-4	13 -32			
5311158-10	14 -41			
5311158-15	14 -41			
5311158-20	14 -42			
5311158-3	14 -39			
5311158-4	14 -39			
5311200-1	23 -			
5311200-2	23 -1			
5311200-3	23 -2			
5311200-4	23 -4			
5311200-5	23 -5			
5311200-6	23 -6			
5311200-8	23 -10			
5311200-9	23 -11			
5311201-1	23 -13			
5311201-10	23 -9			
5311201-11	23 -3			
5311201-12	23 -6			
5311201-13	23 -6			
5311201-14	23 -16			
5311201-16	23 -21			
5311201-19	23 -21			
5311201-2	23 -13			
5311201-21	23 -20			
5311201-22	23 -3			
5311201-22	23 -20			
5311201-3	23 -15			
5311201-9	23 -8			
5311210-10	23 -30			
5311210-2	23 -42			
5311210-8	23 -29			
5311211-1	23 -47			
5311211-17	23 -22			
5311211-2	SUPD BY 5311211-32			
5311211-21	23 -39			
5311211-26	23 -43			
5311211-28	23 -24			
5311211-29	23 -25			
5311211-30	SUPD BY 5311211-35			
5311211-31	23 -26			
5311211-32	23 -28			
5311211-35	23 -31			
5311211-4	23 -44			
5311211-43	23 -47			
5311211-49	23 -43			
5311220-1	22 -			
5311220-10	22 -12			
5311220-11	22 -13			
5311220-12	22 -15			
5311220-13	22 -14			
5311220-14	22 -			
5311220-15	22 -1			
5311220-16	22 -2			
5311220-3	22 -1			
5311220-4	22 -2			
5311220-5	22 -11			
5311220-6	22 -10			
5311220-7	22 -5			
5311220-8	22 -6			
5311220-9	22 -16			
5311225-5	23 -61			
5311226-1	22 -27			
5311226-14	22 -31			
5311226-2	23 -80			
5311226-3	23 -59			

PART NUMBER	FIGURE & INDEX NUMBER	QTY PER ART	SOURCE CODE	REPAIR CODE
5311226-4	22 -36			
5311226-5	23 -66			
5311234-1	141 -53A			
5311234-3	141 -54A			
5311235-4	15 -43			
5311235-5	15 -43			
5311235-6	15 -42			
5311235-6	15 -43			
5311236-1	15 -42			
5311236-1	15 -43			
5311236-2	23 -7			
5311236-3	23 -17			
5311236-4	15 -42			
5311236-4	15 -43			
5311240-10	23 -51			
5311240-11	23 -56			
5311240-12	23 -49A			
5311240-13	23 -51			
5311240-15	23 -50			
5311240-5	23 -50			
5311242-3	23 -48			
5311242-4	23 -48			
5311242-5	SUPD BY 5311242-7			
5311242-6	SUPD BY 5311242-8			
5311242-7	23 -48			
5311242-8	23 -48			
5311245-2	141 -29			
5311245-3	141 -25			
5311250-2	24 -1			
5311251-1	24 -4			
5311255-12	24 -16			
5311255-2	24 -18			
5311255-3	24 -19			
5311255-6	24 -21			
5311256-1	24 -17			
5311257-1	24 -20			
5311260-11	25 -51			
5311260-12	25 -52			
5311260-9	24 -9			
5311260-9	25 -49			
5311261-1	25 -37			
5311261-10	25 -38			
5311261-11	25 -37			
5311261-2	25 -38			
5311261-5	25 -51			
5311262-3	25 -35			
5311262-4	25 -36			
5311262-7	25 -35A			
5311263-1	24 -10			
5311264-1	24 -13			
5311264-2	24 -15			
5311264-3	24 -13			
5311264-4	24 -13			
5311265-10	25 -4			
5311265-11	25 -4			
5311265-12	25 -6			
5311265-13	25 -6			
5311265-16	25 -2			
5311265-17	25 -2			
5311265-18	25 -2			
5311265-19	25 -5			
5311265-2	SUPD BY 5311265-16-17-18			
5311265-3	25 -5			
5311265-4	25 -5			
5311265-5	25 -7			
5311265-6	25 -8			
5311265-7	25 -9			
5311265-8	25 -3			
5311265-9	25 -3			
5311266-1	25 -1			
5311266-2	25 -1			
5311267-1	25 -15			
5311267-2	25 -44			
5311268-1	25 -42			
5311268-1	25 -71			
5311268-1	25 -83			
5311268-2	25 -12			
5311269-1	25 -66			
5311269-1	25 -66			
5311270-3	25 -17			
5311271-1	25 -18			
5311272-1	25 -19			
5311272-3	25 -21			
5311272-4	25 -27			
5311272-5	25 -26			
5311273-1	25 -28			
5311274-1	25 -34			
5311275-1	25 -29			
5311277 5	25 -68			
5311277-3	25 -52			
5311277-4	25 -52			
5311277-6	25 -68			
5311277-7	25 -66			
5311278-2	25 -60			
5311278-1	25 -81			
5311278-11	25 -69			
5311278-12	25 -81			
5311278-15	25 -81			
5311278-16	25 -81			
5311278-17	25 -73			
5311278-17	25 -77			
5311278-18	25 -75			
5311278-18	25 -79			
5311278-3	25 -73			
5311278-3	25 -75			
5311278-4	25 -69			
5311278-5	25 -56			
5311278-6	25 -57			
5311278-7	25 -63			
5311278-9	25 -60			
5311279-1	25 -67			
5311279-2	25 -67			
5311280-10	62 -76A			
5311280-2	61 -74			
5311280-6	62 -76			

PART NUMBER	FIGURE & INDEX NUMBER	QTY PER ART	SOURCE CODE	REPAIR CODE
5311280-7	62 -73			
5311285-2	2 -19			
5311290-4	13 -13			
5311290-6	13 -13			
5311295-10	18 -2			
5311295-12	17 -35			
5311295-14	18 -1			
5311295-17	17 -36			
5311295-18	21 -34			
5311295-3	17 -37			
5311296-1	18 -2			
5311296-2	18 -2			
5311296-3	18 -24			
5311296-4	18 -20			
5311296-5	18 -5			
5311296-6	18 -7			
5311296-7	18 -38			
5311296-8	18 -38			
5311296-9	18 -6			
5311300-1	20 -1			
5311300-10	20 -15			
5311300-15	20 -3			
5311300-17	20 -20			
5311300-2	20 -2			
5311300-5	20 -20			
5311300-8	20 -22			
5311301-1	114 -53B			
5311301-2	114 -53A			
5311505-10	47 -46			
5311505-12	47 -36			
5311505-13	47 -41			
5311505-14	47 -45			
5311505-15	47 -48			
5311505-8	47 -35			
5311505-9	47 -34			
5311508-6	129 -38			
5311508-6	129A-54			
5311510-11	47 -6			
5311510-11	47 -10			
5311510-11	47 -14			
5311510-11	47 -19			
5311510-11	47 -29			
5311510-11	47 -93			
5311510-12	SUPD BY 5311510-39 & 40			
5311510-15	47 -27			
5311510-2	47 -22			
5311510-24	47 -29A			
5311510-27	47 -25A			
5311510-28	47 -25			
5311510-39	47 -17			
5311510-40	47 -17			
5311510-41	47 -17			
5311510-42	47 -91			
5311510-43	47 -17			
5311510-5	47 -24			
5311510-5	47 -76			
5311510-6	47 -26			
5311510-6	47 -78			
5311510-7	47 -25			
5311511-16	47 -15			
5311511-16	47 -30			
5311511-2	47 -30			
5311511-46	47 -30			
5311511-50	47 -30			
5311511-55	47 -30			
5311512	48 -24			
5311512-2	48 -23			
5311512-5	48 -21			
5311512-6	48 -22			
5311512-8	48 -22			
5311512-9	48 -21			
5311513-10	47 -61			
5311513-11	47 -60			
5311513-14	47 -62			
5311513-18	47 -57			
5311513-19	47 -57			
5311513-21	47 -61			
5311513-22	47 -61			
5311513-25	47 -57			
5311513-26	47 -57			
5311513-7	47 -59			
5311513-8	47 -60			
5311513-9	47 -61			
5311514-10	47 -8			
5311514-14	47 -6A			
5311514-14	47 -92			
5311514-16	47 -90			
5311514-19	47 -12			
5311514-2	47 -4			
5311514-23	47 -10A			
5311514-24	47 -8			
5311514-27	47 -4			
5311514-31	47 -8			
5311514-8	47 -7			
5311514-8	47 -76			
5311514-9	47 -11			
5311514-9	47 -78			
5311515-10	48 -19			
5311515-11	48 -20			
5311515-3	48 -9			
5311515-4	48 -10			
5311515-5	48 -11			
5311515-6	48 -12			
5311515-8	48 -17			
5311515-9	48 -18			
5311516-12	48 -7			
5311516-13	48 -4			
5311516-14	48 -4			
5311516-15	48 -4			
5311516-16	48 -8			
5311516-17	48 -4			
5311516-18	48 -4			
5311516-19	48 -4			
5311516-2	48 -2			
5311516-20	48 -4			

PART NUMBER	FIGURE & INDEX NUMBER	QTY PER ART	SOURCE CODE	REPAIR CODE
5311516-3	48 -1			
5311516-4	48 -4			
5311516-5	48 -4			
5311516-7	48 -8			
5311516-8	48 -5			
5311516-9	48 -6			
5311517-2	47 -32			
5311518-2	47 -3			
5311518-3	47 -2			
5311519-2	61 -84			
5311519-3	61 -82			
5311519-3	62 -82			
5311519-4	62 -84			
5311520-10	49 -1			
5311520-14	49 -11			
5311520-16	49 -10			
5311520-2	49 -13			
5311520-3	49 -12			
5311520-4	49 -11			
5311520-5	49 -7			
5311520-6	49 -10			
5311520-7	49 -8			
5311520-8	49 -9			
5311520-9	49 -6			
5311521-2	46 -8			
5311521-4	SUPD BY 5311549-1			
5311521-5	46 -9			
5311522-1	46 -6			
5311522-12	46 -6			
5311522-16	46 -6			
5311522-17	46 -6			
5311523-2	49 -26			
5311527-10	47 -56A			
5311527-11	47 -56B			
5311527-12	47 -56			
5311527-15	47 -53			
5311527-2	47 -53			
5311527-5	47 -56			
5311527-6	47 -56D			
5311527-7	49 -15			
5311527-9	47 -53			
5311528-10	47 -65B			
5311528-13	47 -65A			
5311528-14	47 -65			
5311528-3	47 -65			
5311528-7	47 -67			
5311529-8	48 -13			
5311530-3	46 -45			
5311530-3	46 -47			
5311530-3	46 -51			
5311530-3	46 -53			
5311530-4	46 -49			
5311530-4	46 -54			
5311530-5	46 -50			
5311530-6	46 -48			
5311530-7	46 -46			
5311530-7	46 -52			
5311531-10	46 -39			
5311531-11	46 -39			
5311531-12	46 -36			
5311531-13	46 -38			
5311531-3	46 -36			
5311531-4	46 -37			
5311531-5	46 -38			
5311531-7	46 -40			
5311531-8	46 -35			
5311532-2	47 -68			
5311532-3	47 -70			
5311533-2	47 -51			
5311534-10	21 -2			
5311534-14	21 -12			
5311534-15	49 -2			
5311534-16	49 -3			
5311534-17	49 -4			
5311534-18	49 -5			
5311534-2	21 -8			
5311534-3	21 -3			
5311534-6	21 -7			
5311534-9	21 -1			
5311535-2	46 -57			
5311535-3	46 -57			
5311536-6	46 -33			
5311536-7	46 -32			
5311536-8	46 -32			
5311536-9	46 -33			
5311538-2	65 -24			
5311539-3	46 -58			
5311539-4	46 -58			
5311539-5	46 -59			
5311539-6	46 -59			
5311539-7	46 -59			
5311541-10	SUPD BY 5311541-16			
5311541-14	46 -85			
	4 -10			
5311541-16	46 -78			
5311541-2	46 -83			
5311541-3	46 -84			
5311541-4	46 -81			
5311541-5	46 -77			
5311541-6	46 -76			
5311541-7	46 -80			
5311541-9	46 -91			
5311543-10	46 -21A			
5311543-2	46 -21			
5311543-3	46 -25			
5311543-8	46 -14			
5311543-9	46 -20			
5311545-10	SUPD BY 5311545-13			
5311545-12	46 -29			
5311545-13	46 -29A			
5311545-2	46 -27			
5311545-3	SUPD BY 5311545-7			
5311545-3	SUPD BY 5311545-7			
5311545-4	46 -31			
5311545-5	46 -30			

PART NUMBER	FIGURE & INDEX NUMBER	QTY PER ART	SOURCE CODE	REPAIR CODE
5311545-7	46 -29			
5311545-7	46 -29A			
5311545-8	46 -27			
5311545-9	SUPD BY 5311545-12			
5311549-1	46 -10			
5311553-1	22 -19			
5311554-16	47 -32A			
5311554-2	47 -33			
5311554-3	47 -33A			
5311554-4	47 -32A			
5311556-1	47 -56E			
5311557-1	47 -56C			
5311559-15	47 -97			
5311559-16	47 -97			
5311559-18	47 -98			
5311559-19	47 -94			
5311559-20	47 -94			
5311559-25	47 -96			
5311559-26	47 -96			
5311559-29	47 -98			
5311559-32	47 -97			
5311559-33	47 -97			
5311559-36	47 -96			
5311559-39	47 -96			
5311559-41	47 -94			
5311559-42	47 -94			
5311559-43	47 -94			
5311559-44	47 -94			
5311559-5	47 -96			
5311559-8	47 -96			
531178	98 -12			
531179	98 -12			
5312000-10	27 -69			
5312000-11	27 -70			
5312000-12	27 -70			
5312000-13	27 -71			
5312000-14	27 -72			
5312000-2	27 -14			
5312000-20	27 -64			
5312000-21	27 -64			
5312000-22	27 -66			
5312000-23	27 -66			
5312000-25	27 -65			
5312000-26	27 -68			
5312000-8	27 -67			
5312000-9	27 -67			
5312004-2	27 -20			
5312005-2	27 -26			
5312008-2	27 -27			
5312010-2	27 -22			
5312012-3	27 -18			
5312012-4	27 -19			
5312014-15	27 -24			
5312014-2	27 -24			
5312016-2	SUPD BY 5312016-3			
5312016-3	27 -25			
5312018-3	27 -17			
5312018-4	27 -15			
5312020-2	27 -23			
5312022-10	27 -44			
5312022-11	27 -44			
5312022-12	27 -45			
5312022-13	27 -45			
5312022-14	27 -46			
5312022-15	27 -46			
5312022-16	27 -47			
5312022-17	27 -47			
5312022-18	27 -48			
5312022-19	27 -48			
5312022-2	27 -40			
5312022-20	27 -49			
5312022-21	27 -49			
5312022-22	27 -50			
5312022-23	27 -50			
5312022-24	SUPD BY 5312022-36			
5312022-25	SUPD BY 5312022-37			
5312022-26	27 -37			
5312022-27	27 -36			
5312022-28	27 -35			
5312022-29	27 -34			
5312022-3	27 -40			
5312022-30	27 -33			
5312022-31	27 -32			
5312022-32	27 -31			
5312022-33	27 -30			
5312022-34	27 -38			
5312022-35	27 -39			
5312022-36	27 -51			
5312022-37	27 -51			
5312022-4	27 -41			
5312022-5	27 -41			
5312022-6	27 -42			
5312022-7	27 -42			
5312022-8	27 -43			
5312022-9	27 -43			
5312025-2	27 -60			
5312025-4	27 -59			
5312025-5	27 -58			
5312025-7	27 -61			
5312028-2	27 -29			
5312028-3	27 -29			
5312032-12	44 -5			
5312032-3	44 -			
5312032-4	44 -3			
5312032-5	44 -3			
5312033-4	44 -6			
5312033-5	44 -7			
5312033-6	44 -8			
5312034-2	27 -7			
5312034-3	27 -8			
5312034-4	27 -9			
5312034-5	27 -10			
5312034-6	27 -11			
5312038-2	2 -13			
5312038-3	2 -15			

PART NUMBER	FIGURE & INDEX NUMBER	QTY PER ART	SOURCE CODE	REPAIR CODE
5312038-3	27 -52			
5312039-2	2 -18			
5312039-2	27 -53			
5312039-3	2 -16			
5312040-17	43 -1			
5312040-18	43 -2			
5312040-5	43 -3			
5312040-6	43 -3			
5312040-7	27 -28			
5312040-8	27 -28			
5312041-2	27 -12			
5312041-4	27 -13			
5312044-2	27 -55			
5312044-3	27 -54			
5312045-10	27 -7			
5312045-11	27 -1			
5312045-13	16 -18			
5312045-14	27 -1			
5312045-15	27 -2			
5312045-2	SUPD BY 5312045-14			
5312045-3	27 -3			
5312045-4	27 -4			
5312045-5	27 -2			
5312045-6	27 -6			
5312045-9	27 -7			
5312046-1	159 -3			
5313000-10	3 -77			
5313000-11	3 -78			
5313000-3	3 -72			
5313000-4	3 -72			
5313000-5	3 -73			
5313000-6	3 -73			
5313000-7	3 -74			
5313000-8	3 -75			
5313000-9	3 -76			
5313005-10	3 -46			
5313005-11	3 -49			
5313005-12	3 -50			
5313005-13	3 -36			
5313005-14	3 -37			
5313005-15	3 -38			
5313005-17	3 -39			
5313005-18	3 -40			
5313005-3	3 -43			
5313005-4	3 -44			
5313005-5	3 -47			
5313005-6	3 -48			
5313005-7	3 -41			
5313005-8	3 -42			
5313005-9	3 -45			
5313010-10	4 -3			
5313010-11	4 -4			
5313010-5	4 -1			
5313010-6	4 -1			
5313010-7	4 -2			
5313010-8	4 -2			
5313010-9	4 -3			
5313011-1	4 -11			
5313011-10	4 -8			
5313011-13	4 -18			
5313011-14	4 -18			
5313011-15	4 -19			
5313011-16	4 -19			
5313011-17	4 -20			
5313011-18	4 -20			
5313011-19	4 -22			
5313011-20	4 -22			
5313011-21	4 -23			
5313011-22	4 -14			
5313011-23	4 -26			
5313011-24	4 -24			
5313011-25	4 -25			
5313011-26	4 -27			
5313011-27	4 -21			
5313011-28	4 -12			
5313011-29	4 -7			
5313011-3	4 -13			
5313011-30	4 -7			
5313011-31	4 -17			
5313011-32	4 -16			
5313011-33	4 -6			
5313011-34	4 -6			
5313011-4	4 -13			
5313011-5	4 -15			
5313011-6	4 -15			
5313011-7	4 -5			
5313011-8	4 -5			
5313011-9	4 -8			
5313020-2	3 -8			
5313024-10	3 -12			
5313024-11	3 -15			
5313024-3	3 -9			
5313024-4	3 -11			
5313024-5	3 -10			
5313024-6	3 -14			
5313024-7	3 -13			
5313024-8	3 -13			
5313024-9	3 -12			
5313026-2	3 -18			
5313026-2	3 -35			
5313026-3	3 -16			
5313026-4	3 -17			
5313028-2	3 -34			
5313028-3	3 -32			
5313028-4	3 -30			
5313028-5	3 -30			
5313028-6	3 -31			
5313028-7	3 -31			
5313028-8	3 -33			
5313031-10	3 -29			
5313031-2	3 -27			
5313031-3	3 -26			
5313031-9	3 -28			
5313033-10	3 -24			
5313033-11	3 -23			

PART NUMBER	FIGURE & INDEX NUMBER	QTY PER ART	SOURCE CODE	REPAIR CODE
5313033-12	3 -22			
5313033-13	3 -25			
5313033-3	3 -19			
5313033-4	3 -20			
5313033-5	3 -21			
5313033-6	3 -21			
5313033-9	3 -22			
5313035-2	3 -80			
5313035-5	3 -82			
5313035-6	3 -83			
5313037-11	124 -3			
5313037-11	124A-16			
5313037-3	124 -3			
5313037-4	124 -3			
5313037-4	124A-16			
5313040-10	3 -54			
5313040-11	3 -52			
5313040-12	3 -52			
5313040-17	3 -53			
5313040-18	3 -53			
5313040-3	3 -55			
5313040-4	3 -55			
5313040-5	3 -51			
5313040-6	3 -51			
5313040-7	3 -56			
5313040-8	3 -56			
5313040-9	3 -54			
5313041-2	3 -59			
5313041-3	3 -58			
5313050-10	4 -33			
5313050-11	4 -34			
5313050-12	4 -35			
5313050-2	4 -41			
5313050-3	4 -40			
5313050-4	4 -42			
5313050-6	4 -39			
5313050-7	4 -38			
5313050-8	4 -37			
5313050-9	4 -36			
5313055-2	4 -32			
5313060-12	5 -2			
5313060-13	5 -2			
5313060-3	5 -1			
5313060-5	SUPD BY 5313060-13			
5313060-7	5 -3			
5313060-8	5 -3			
5313062-6	3 -6			
5313062-7	3 -5			
5313062-8	3 -4			
5313062-9	3 -3			
5313065-11	3 -62			
5313065-12	3 -62			
5313065-13	3 -63			
5313065-14	3 -63			
5313065-15	3 -60			
5313065-16	3 -60			
5313065-17	3 -61			
5313065-18	3 -61			
5313065-19	5 -21			
5313065-20	5 -21			
5313065-21	5 -21			
5313065-22	5 -21			
5313065-23	5 -20			
5313065-24	5 -20			
5313065-25	5 -21			
5313065-26	5 -21			
5313065-27	5 -22			
5313065-28	5 -12			
5313065-29	5 -10			
5313065-3	5 -4			
5313065-30	3 -64			
5313065-35	5 -9			
5313065-36	5 -11			
5313065-37	5 -12			
5313065-38	5 -17			
5313065-39	5 -16			
5313065-4	5 -4			
5313065-40	5 -16			
5313065-41	5 -14			
5313065-42	5 -14			
5313065-43	5 -15			
5313065-44	5 -13			
5313068-3	6 -23			
5313070-17	81 -10			
5313070-18	81 -11			
5313070-19	81 -8			
5313070-20	81 -9			
5313070-200	81 -1			
5313070-201	81 -2			
5313070-21	81 -6			
5313070-22	81 -7			
5313070-4	81 -14			
5313070-5	81 -13			
5313070-6	81 -12			
5313080-2	2 -5			
5313085-12	6 -6			
5313085-13	SUPD BY 5313085-30			
5313085-14	SUPD BY 5313085-31			
5313085-15	6 -1			
5313085-16	SUPD BY FSO 5313085-32			
5313085-17	3 -68			
5313085-19	6 -5			
5313085-20	6 -4			
5313085-22	6 -14			
5313085-23	6 -20			
5313085-24	6 -21			
5313085-30	6 -12			
5313085-31	6 -13			
5313085-32	3 -67			
5313085-4	6 -9			
5313085-5	6 -22			
5313085-6	3 -66			
5313085-7	3 -65			
5313090-10	SUPD BY 5313090-25			
5313090-11	SUPD BY 5313090-26			

PART NUMBER	FIGURE & INDEX NUMBER	QTY PER ART	SOURCE CODE	REPAIR CODE
5313090-12	SUPD BY 5313090-27			
5313090-13	SUPD BY 5313090-28			
5313090-14	SUPD BY 5313090-29			
5313090-23	6 -31			
5313090-24	6 -30			
5313090-25	6 -28			
5313090-26	6 -33			
5313090-27	6 -34			
5313090-28	6 -32			
5313090-29	6 -29			
5313090-4	6 -31			
5313090-5	6 -30			
5313090-8	SUPD BY 5313090-23			
5313090-9	SUPD BY 5313090-24			
5314101-2	144 -1			
5314101-29	144 -1			
5314101-40	144 -1			
5314102-1	126 -47			
5314105-22	19 -3			
5314105-28	19 -5			
5314105-30	19 -8			
5314105-33	19 -7			
5314105-36	19 -10			
5314105-38	19 -11			
5314105-40	19 -12			
5314105-42	19 -3A			
5314105-43	19 -4			
5314105-45	19 -9			
5314105-46	19 -1			
5314105-47	19 -2			
5314105-48	19 -3A			
5314105-48	19 -6			
5314105-52	19 -3A			
5314105-53	19 -4			
5314105-68	19 -3A			
5314105-69	19 -4			
5314105-73	19 -4			
5314105-74	19 -3A			
5314105-75	19 -3A			
5314106-10	63 -1			
5314106-11	SUPD BY 5314106-15			
5314106-12	SUPD BY 5314106-16			
5314106-13	SUPD BY 5314106-17			
5314106-14	SUPD BY 5314106-18			
5314106-15	64 -1			
5314106-16	64 -1			
5314106-17	64 -1			
5314106-18	64 -1			
5314106-19	64 -1			
5314106-20	64 -1			
5314106-21	64 -1			
5314106-22	64 -1			
5314106-24	64 -1			
5314106-25	64 -1			
5314106-26	64 -1			
5314106-27	64 -1			
5314106-28	64 -1			
5314106-29	64 -1			
5314106-3	63 -1			
5314106-30	64 -1			
5314106-4	63 -1			
5314106-5	63 -1			
5314106-6	63 -1			
5314106-7	63 -1			
5314106-8	63 -1			
5314106-9	63 -1			
5314107-3	61 -72			
5314107-4	61 -72			
5314107-4	62 -72			
5314108-10	63 -19			
5314108-11	63 -19			
5314108-4	63 -19			
5314108-5	63 -19			
5314108-5	64 -19			
5314110-2	63 -34			
5314110-2	64 -34			
5314110-3	63 -33			
5314110-3	64 -33			
5314110-4	63 -32			
5314110-7	64 -32			
5314111-1	46 -58			
5314112-12	65 -21			
5314112-15	65 -22			
5314112-2	65 -			
5314112-3	65 -2			
5314112-4	65 -10			
5314112-5	65 -23			
5314113-1	65 -35			
5314113-10	65 -5			
5314113-11	65 -6			
5314115-12	65 -7			
5314115-13	65 -8			
5314115-2	65 -2			
5314115-3	65 -10			
5314115-9	65 -4			
5314116-7	1 -81			
5314501-1	58 -7			
5314501-2	60 -5			
5314503-2	60 -45			
5314503-2	60A-49			
5314503-28	58 -41			
5314503-34	58A-47			
5314505-1	58 -40			
5314506-1	60 -44			
5314510-1	57 -			
5314510-11	57 -			
5314510-12	57 -			
5314510-2	57 -			
5314510-3	57 -3			
5314510-4	57 -3			
5314510-5	57 -			
5314510-6	57 -2			
5314510-7	57 -4			
5314511-11	46 -100			
5314511-2	46 -101			

PART NUMBER	FIGURE & INDEX NUMBER	QTY PER ART	SOURCE CODE	REPAIR CODE
5314511-4	46 -102			
5314511-9	46 -100			
5314512-20	57 -10			
5314512-20	58 -14			
5314512-20	58A-14			
5314512-20	60 -15			
5314512-20	60A-18			
5314512-30	58 -16			
5314512-30	57 -12			
5314512-30	58A-16			
5314512-30	60 -8			
5314512-30	60A-11			
5314512-37	57 -15			
5314512-37	58 -19			
5314512-37	58A-19			
5314512-37	60 -10			
5314512-37	60A-13			
5314512-38	57 -5			
5314512-38	58 -10			
5314512-38	58A-10			
5314513-1	58 -			
5314513-11	58 -			
5314513-12	58 -			
5314513-13	58 -			
5314513-14	58A-46			
5314513-15	58A-46			
5314513-17	58A-			
5314513-18	58A-			
5314513-19	58A-9			
5314513-2	58 -			
5314513-20	58A-9			
5314513-3	58 -8			
5314513-4	58 -8			
5314513-6	58 -9			
5314513-6	58A-9			
5314513-7	58 -			
5314513-9	58 -8			
5314514-10	60 -			
5314514-11	60 -			
5314514-12	60 -			
5314514-13	60 -			
5314514-14	60 -			
5314514-15	60 -6			
5314514-16	60 -6			
5314514-17	60 -			
5314514-18	60A-48			
5314514-19	60A-			
5314514-20	60A-			
5314514-21	60A-			
5314514-22	60A-			
5314514-25	60A-9			
5314514-26	60A-9			
5314514-6	60 -7			
5314514-6	60A-10			
5314514-9	60 -6			
5314515-1	59 -			
5314515-2	59 -			
5314515-3	59 -3			
5314515-4	59 -3			
5314515-5	59 -			
5314515-6	59 -2			
5314515-7	59 -4			
5314518-1	57 -31			
5314518-1	59 -21			
5314518-2	57 -31			
5314518-2	59 -21			
5314518-3	57 -33			
5314518-3	59 -24			
5314519-1	59 -25			
5314519-5	59 -25			
5314532-1	58 -34			
5314532-1	60 -38A			
5314532-2	58 -34			
5314532-2	60 -38A			
5314532-2 00	58 -36			
5314532-2 00	60 -40			
5314532-9	58 -36			
5314532-9	60 -40			
5314537-1	51 -6			
5314537-1	52 -11			
5314537-1	53 -9			
5314537-1	54 -10			
5314537-1	55 -9			
5314537-1	56 -10			
5314538-1	52 -3			
5314538-2	52 -3			
5314538-3	52 -8			
5314538-6	52 -8			
5314538-7	52 -3			
5314538-8	52 -3			
5314544-1	58A-25			
5314544-1	58A-31			
5314600-3	126 -23			
5314600-3	127 -18			
5315000-2	106 -24			
5315000-5	106 -24			
5315001-1	SUPD BY 5315002-3			
5315001-10	61 -13			
5315001-10	62 -13			
5315001-11	122 -3			
5315001-12	61 -40			
5315001-12	62 -40			
5315001-13	61 -93			
5315001-13	SUPD BY 5315002-7			
5315001-14	61 -93			
5315001-14	SUPD BY 5315002-8			
5315001-2	SUPD BY 5315002-4			
5315001-3	SUPD BY 5315002-5			
5315001-4	SUPD BY 5315002-6			
5315001-5	SUPD BY 5315002-1			
5315001-6	SUPD BY 5315002-2			
5315001-7	61 -92			
5315001-7	SUPD BY 5315002-9			
5315002-1	SUPD BY 9910269-1			
5315002-2	SUPD BY 9910269-2			

PART NUMBER	FIGURE & INDEX NUMBER	QTY PER ART	SOURCE CODE	REPAIR CODE
5315002-3	SUPD BY 9910269-3			
5315002-4	SUPD BY 9910269-4			
5315002-5	SUPD BY 9910269-5			
5315002-6	SUPD BY 9910269-6			
5315002-7	SUPD BY 9910269-7			
5315002-8	SUPD BY 9910269-8			
5315002-9	SUPD BY 9910269-9			OR -10
5315091-5	157A-27			
5315091-6	157A-28			
5315091-8	157A-52			
5315091-9	157A-56			
5316002-11	21 -28			
5316002-13	21 -29			
5316002-2	21 -30			
5316003-1	61 -56			
5316003-1	61 -57			
5316003-1	62 -55			
5316003-1	62 -57			
5316004-1	129A-10			
5316501-10	9 -18			
5316501-14	125 -72			
5316501-15	125 -67			
5316501-19	125 -58			
5316501-2	9 -12			
5316501-21	125 -58			
5316501-21	125 -58			
5316501-21	125 -64			
5316501-22	125 -61			
5316501-26	125 -20			
5316501-31	125 -24			
5316501-36	125 -48			
5316501-37	125 -76			
5316501-4	9 -13			
5316501-7	9 -14			
5316502-2	128 -80			
5316502-34	128 -33			
5316502-36	128 -51			
5316502-4	128 -25			
5316502-5	3 -69			
5316502-6	3 -70			
5316502-7	128 -54			
5316502-8	128 -53			
5316502-8	128 -56			
5316502-9	128 -79			
5316503-12	125 -10			
5316503-15	125 -14			
5316503-17	125 -17			
5316503-20	126 -6			
5316503-21	125 -10			
5316503-23	126 -6			
5316505-10	128 -89			
5316505-13	128 -109			
5316505-14	128 -96			
5316505-2	128 -119			
5316505-5	128 -115			
5316507-1	125 -34			
5316508-12	129 -32A			
5316508-12	129A-12			
5316508-6	129 -33			
5316508-6	129A-13			
5316508-8	129 -27			
5316508-8	129A-26			
5316508-8	147 -1			
5316509-2	3 -71			
5316510-2	129 -5			
5316510-2	129A-46			
5316510-3	129 -10			
5316510-3	129A-51			
5316510-4	129 -12			
5316510-4	129A-41			
5316510-5	129 -6			
5316510-5	129A-47			
5316510-6	129 -11			
5316513-1	129 -31			
5316513-12	129 -28			
5316513-12	129A-27			
5316513-4	129 -18			
5316513-6	129 -21			
5316514-1	125 -29			
5316517-10	125 -45			
5316517-11	125 -40			
5316517-12	SUPD BY 5316517-16			
5316517-13	SUPD BY 5316517-17			
5316517-15	125 -43			
5316517-16	125 -32			
5316517-17	125 -32			
5316517-3	125 -31			
5316517-4	125 -31			
5316518-2	127 -13			
5316519-1	125 -61			
5316519-1	125 -61			
5316519-2	125 -77			
5316523-1	129 -42			
5316523-1	129A-2			
5316523-10	129 -45			
5316523-6	129 -44			
5316523-9	129 -45			
5316525-11	129A-32			
5316525-14	129A-34			
5316525-17	129A-31			
5316525-20	129A-35			
5316525-23	129A-29			
5316525-26	129A-16			
5316525-29	129A-8			
5316525-32	129A-9			
5316525-35	129A-7			
5316525-38	129A-38			
5316525-41	129A-10			
5316525-44	129A-38			
5316525-47	129A-37			
5316525-50	129A-36			
5316525-55	129A-30			
5316525-56	129A-6			
5316525-59	129A-8			
5316525-61	129A-5			

PART NUMBER	FIGURE & INDEX NUMBER	QTY PER ART	SOURCE CODE	REPAIR CODE
5316525-64	129A-39			
5316525-67	129A-33			
5316526-1	129A-40			
5317270-1	126 -3			
5317270-2	126 -3			
5318100-3	9 -5			
5318100-6	9 -5			
5318101-3	141 -51			
5318101-4	141 -54			
5318101-5	141 -53			
5318102-2	146 -30			
5318102-3	146 -29			
5318106-19	SUPD BY 5318106-44			
5318106-22	147 -10			
5318106-23	SUPD BY 5318106-45			
5318106-24	147 -11			
5318106-25	147 -13			
5318106-26	147 -12			
5318106-29	147 -7			
5318106-32	147 -20			
5318106-35	147 -10			
5318106-37	147 -35			
5318106-38	SUPD BY 5318106-44			
5318106-39	SUPD BY 5318106-45			
5318106-40	147 -10			
5318106-41	147 -21			
5318106-44	147 -6			
5318106-45	147 -10			
5318106-46	147 -10			
5318106-48	147 -11			
5318106-6	SUPD BY 5318106-41			
5318108-3	20 -28A			
5318108-3	141 -68			
5318108-3	141 -92B			
5318108-4	141 -73			
5318108-6	141 -74			
5318113-1	144 -23			
5318113-2	144 -26			
5318113-3	144 -60			
5318113-4	144 -63			
5318113-5	144 -64			
5318114-1	144 -5A			
5318114-2	144 -23			
5318115-10	144 -86			
5318115-15	144 -37			
5318115-22	144 -49			
5318115-23	141 -108			
5318115-24	61 -17			
5318115-24	62 -17			
5318115-3	144 -56			
5318115-4	144 -80			
5318203-3	112 -1			
5318207-2	147 -29			
5318500-2	20 -			
5318500-4	20 -21			
5318500-6	20 -23			
5318501-29	124 -39			
5318501-5	124 -48			
5318501-6	124 -48			
5318503-2	115 -6			
5318504-2	94 -32			
5318507-11	135 -3			
5318507-14	135 -39			
5318507-15	SUPD BY 5318507-9			
5318507-17	135 -1			
5318507-18	135 -2			
5318507-24	135 -39			
5318507-9	135 -2			
5318508-2	137 -3			
5318509-1	20 -26			
5318510-1	20 -12			
5319000-1	46A-1			
5319000-10	46A-2			
5319000-11	46A-2			
5319000-12	46A-2			
5319000-13	46A-2			
5319000-14	46A-4			
5319000-15	46A-4			
5319000-16	46A-3			
5319000-17	46A-3			
5319000-18	46A-3			
5319000-19	46A-3			
5319000-2	46A-1			
5319000-20	46A-3			
5319000-21	46A-3			
5319000-22	46A-3			
5319000-23	46A-2			
5319000-24	46A-2			
5319000-25	46A-2			
5319000-26	46A-2			
5319000-3	46A-1			
5319000-4	46A-1			
5319000-5	46A-1			
5319000-51	46A-4			
5319000-52	46A-4			
5319000-53	46A-4			
5319000-54	46A-4			
5319000-55	46A-4			
5319000-59	46A-4			
5319000-6	46A-1			
5319000-60	46A-4			
5319000-61	46A-4			
5319000-7	46A-1			
5319000-7	46A-2			
5319000-8	46A-2			
5319000-9	46A-2			
5319005-1	46 -8A			
5319005-3	46 -8A			
5319006-10	47 -77			
5319006-12	47 -79			
5319006-14	47 -80			
5319006-15	47 -87			
5319006-16	47 -81			
5319006-17	47 -84			
5319006-18	47 -76			

PART NUMBER	FIGURE & INDEX NUMBER	QTY PER ART	SOURCE CODE	REPAIR CODE
5319006-20	47 -73			
5319006-22	47 -78			
5319006-24	47 -82			
5319006-25	47 -85			
5319006-28	47 -83			
5319006-29	47 -86			
5319006-4	47 -72			
5319006-6	47 -74			
5319006-8	47 -75			
5319019-2	147 -30			
5319019-3	147 -31			
5319019-4	147 -33			
5319019-5	147 -33			
5319019-6	147 -34			
5319020-1	54 -15			
5319020-1	56 -15			
5319020-1	58A-44			
5319020-1	60A-46			
5319145-3	60 -17			
5319145-3	60A-20			
5319146-1	60 -38A			
5319146-1	60A-39			
5319146-2	60 -4C			
5319146-2	60A-8			
5319148-2	129A-13			
5319148-4	129A-13			
5319148-5	129A-13			
5319148-7	129A-13			
5319148-9	129A-13			
5319149-2	46 -57			
5319149-3	46 -57			
5319149-6	46 -57			
5319153-1	60A-4			
5319153-14	60A-5			
5319153-8	60A-4			
5319154-11	58A-8			
5319155-5	52 -9			
5319156-14	54 -9			
5319156-14	56 -9			
5319158-1	52 -10			
5319158-1	54 -9			
5319158-1	56 -9			
5319158-1	58A-39			
5319158-1	60A-40			
5319158-2	52 -10			
5319158-2	54 -9			
5319158-2	56 -9			
5319158-2	58A-39			
5319158-2	60A-40			
5319158-5	52 -13			
5319158-5	54 -12			
5319158-5	56 -12			
5319158-5	58A-41			
5319158-5	60A-43			
5319158-6	52 -13			
5319158-6	54 -12			
5319158-6	56 -12			
5319158-6	58A-41			
5319158-6	60A-43			
5319161-12	52 -14			
5319161-12	54 -14			
5319161-12	56 -14			
5319161-12	58A-42			
5319161-12	60A-44			
5319161-9	SUPD BY 5319161-12			
5319161-9	SUPD BY 5319161-12			
5319161-9	SUPD BY 5319161-12			
5319161-9	SUPD BY 5319161-12			
5319161-9	SUPD BY 5319161-12			
5319162-1	58A-35			
5322110-12	28 -42			
5322110-13	28 -42			
532432	98 -11			
5326000-7	145 -18			
5326000-8	145 -18			
5326001-1	114 -53C			
5326001-2	114 -53C			
5326011-1	118A-10			
5326011-1	119A-10			
5326011-2	118A-11			
5326011-2	119A-11			
5326011-4	118A-12			
5326011-4	119A-12			
5326012-1	145 -19			
5328101-3	SUPD BY 5228101-6			
5328101-5	141 -99			
5328101-6	141 -90			
5340001-1	SUPD BY 5340001-10			
5340001-10	71 -22			
5340001-4	71 -29			
5340001-6	71 -17			
5341000-2	78 -14			
5341004-1	78 -7			
5342004-5	77 -96			
5342004-6	77 -96			
5342103-11	79 -39			
5342103-12	79 -38			
5342103-2	79 -18			
5342103-3	79 -16			
5342103-4	79 -25			
5342103-5	79 -40			
5342103-6	79 -43			
5342103-7	79 -39			
5342103-8	79 -38			
534743	98 -11			
534750	98 -12			
534861	98 -12			
534863	98 -12			
5354000-10	35 -34			
5354000-11	35 -26			
5354000-3	35 -26			
5354000-9	35 -34			
5354001-2	35 -40			
5354005-1	97 -10			
5354006-1	35 -41			

PART NUMBER	FIGURE & INDEX NUMBER	QTY PER ART	SOURCE CODE	REPAIR CODE
5354007-1	35 -41			
5354009-1	35 -43			
5355100-200	SUPD BY 5355100-203			
5355100-201	SUPD BY 5355100-204			
5355100-203	100 -			
5355100-204	100 -3B			
5355100-29	100 -2			
5355100-30	100 -5			
5355100-31	100 -1			
5355100-32	100 -4			
5355100-51	100 -3			
5355100-52	100 -6			
5355100-56	100 -11			
5355100-64	100 -13			
5355101-1	125 -1			
5355102-1	97 -27			
5355103-1	101 -4			
5355103-2	101 -5			
5355103-25	101 -3			
5355103-26	101 -3			
5355103-27	101 -3			
5355103-28	101 -3			
5355103-3	101 -4			
5355103-31	101 -3			
5355103-33	101 -3			
5355103-36	101 -3			
5355103-4	101 -5			
5355103-5	101 -6			
5355103-6	101 -7			
5355103-7	101 -8			
5355103-8	101 -9			
5355103-9	101 -9			
5355108-1	SUPD BY 5355108-4			
5355108-4	100 -7			
5355109-1	97A-44			
5355110-1	102 -11			
535847	98 -12			
535847	98 -14			
535847	98A-4			
5360000-10	92 -17			
5360000-12	92 -27			
5360000-13	SUPD BY 5360000-35			
5360000-13	SUPD BY 5360000-36			
5360000-15	92 -10			
5360000-16	92 -11			
5360000-17	92 -8			
5360000-18	92 -9			
5360000-23	SUPD BY 5360000-32			
5360000-27	92 -33			
5360000-30	92 -12			
5360000-32	92 -80			
5360000-35	92 -18			
5360000-36	92 -18			
5360000-37	92 -18			
5360000-38	92 -18			
5360000-6	93 -3			
5360701-11	83 -39			
5360701-12	83 -40			
5360701-13	83 -28			
5360701-16	83 -32			
5360701-17	83 -31			
5360701-20	83 -32			
5360701-21	83 -31			
5360701-29	83 -35			
5360701-3	83 -41			
5360701-34	83 -47			
5360701-36	83 -44			
5360701-40	9 -28			
5360701-45	SUPD BY 5360701-53			
5360701-46	SUPD BY 5360701-55			
5360701-50	83 -50			
5360701-53	83 -27			
5360701-56	83 -38			
5360701-9	83 -35			
5360703-2	82 -7			
5360703-4	82 -19			
5360703-7	82 -19			
5360704-1	83 -29			
5360704-5	83 -29			
5360801-4	85 -48			
5360802-11	85 -56			
5360802-12	85 -56			
5360802-13	85 -56			
5360802-8	SUPD BY 5360802-12			
5360901-18	20 -29			
5360901-19	84 -16			
5360901-19	85 -7			
5360901-2	SUPD BY 5360901-24			
5360901-20	84 -17			
5360901-20	85 -8			
5360901-21	20 -30			
5360901-22	86 -61			
5360901-24	9 -25			
5360901-5	86 -60			
5361001-12	86 -24			
5361001-13	86 -24			
5361001-15	86 -24			
5361002-10	82 -97			
5361002-2	82 -106A			
5361002-21	106 -23			
5361002-23	82 -41			
5361002-24	82 -40			
5361002-24	82 -42			
5361002-26	82 -60			
5361002-27	82 -52			
5361002-28	82 -53			
5361002-3	82 -106B			
5361002-4	82 -77			
5361002-5	82 -90			
5361002-5	85 -40A			
5361002-6	82 -91			
5361003-12	SUPD BY 5361003-26			
5361003-13	SUPD BY 5361003-27			
5361003-17	89 -30			
5361003-18	87 -46			

PART NUMBER	FIGURE & INDEX NUMBER	QTY PER ART	SOURCE CODE	REPAIR CODE
5361003-2	87 -66			
5361003-21	SUPD BY 5361003-35			
5361003-21	SUPD BY 5361003-35			
5361003-23	87 -36			
5361003-24	87 -37			
5361003-26	87 -22			
5361003-27	87 -23			
5361003-30	87 -46			
5361003-31	89 -30			
5361003-35	87 -53			
5361003-35	89 -37			
5361004-12	84 -33			
5361004-15	84 -33			
5361004-4	82 -70			
5361004-4	85 -11			
5361004-6	87 -30			
5361004-6	89 -27			
5361004-7	84 -33			
5361005-10	85 -42			
5361005-11	85 -41			
5361005-12	SUPD BY 5361005-14			
5361005-13	SUPD BY 5361005-15			
5361005-14	85 -42			
5361005-15	85 -41			
5361005-4	85 -18			
5361005-5	85 -40			
5361005-9	85 -42A			
5361006-12	89 -22			
5361006-2	89 -58			
5361006-3	89 -59			
5361006-4	89 -55			
5361007-6	84 -28			
5361009-1	84 -34			
5361009-2	84 -34			
5361010-1	84 -36			
5361010-2	84 -36			
5361010-5	84 -37			
5361011-1	84 -38			
5361012-10	88 -11			
5361012-2	88 -35			
5361012-4	88 -29			
5361012-6	88 -23			
5361012-8	88 -10			
5361013-2	82 -106A			
5361013-3	82 -106B			
5361013-4	82 -117			
5361013-5	82 -117			
5362402-3	10 -17			
5390350-1	82 -999Z			
5393000-1	3 -6			
55-0206-3	146 -43			
55-0221-1	146 -52			
550-21	149 -2			
5513045-1	5 -19			
5518130-6	161 -12			
5519028-5	46 -11			
553-1	149 -			
5579654	97A-8			
5600106-10	114 -73			
5600106-12	114 -68			
5600106-16	117 -8			
5600106-17	114 -5			
5600106-19	114 -7			
5600106-2	117 -10			
5600106-21	114 -17			
5600106-23	118 -5			
5600106-23	118A-24			
5600106-23	119 -5			
5600106-23	119A-24			
5600106-24	118 -5			
5600106-25	114 -32			
5600106-26	114 -77			
5600106-27	118 -29			
5600106-29	114 -21			
5600106-3	117 -10			
5600106-31	114 -35			
5600106-31	114 -79			
5600106-33	114 -34			
5600106-33	114 -75			
5600106-35	118A-42			
5600106-35	119A-42			
5600106-36	118A-29			
5600106-36	119A-30			
5600106-37	117 -20			
5600106-38	117 -24			
5600106-39	118 -7			
5600106-39	118A-26			
5600106-39	119 -7			
5600106-39	119A-26			
5600106-4	117 -13			
5600106-40	118 -7			
5600106-43	117 -19			
5600106-46	117 -22			
5600106-5	117 -13			
5600106-50	118A-16			
5600106-50	119A-16			
5600106-51	118A-3			
5600106-51	119A-3			
5600106-52	118A-15			
5600106-52	119A-15			
5600106-53	114 -21			
5600106-54	114 -32			
5600106-55	118A-16			
5600106-55	119A-16			
5600106-56	118A-3			
5600106-56	119A-3			
5600106-57	118A-15			
5600106-57	119A-15			
5600106-7	114 -37			
5600106-7	114 -63			
5600106-9	114 -38			
5600107-1	103 -4			
5600107-11	103 -8			
5600107-13	103 -12			
5600107-14	103 -12			
5600107-17	97A-18			
5600107-17	98 -34			
5600107-19	97 -31			
5600107-23	102 -39			
5600107-23	102A-33			
5600107-24	102A-34			
5600107-25	102A-7			
5600107-26	139 -26			
5600107-28	97A-43			
5600107-3	102A-29			
5600107-4	102A-14			
5600107-8	102A-14			
5600107-9	102A-7			
5600108-1	136 -4A			
5600108-15	103 -15			
5600108-15	136 -8			
5600108-18	115 -25			
5600108-18	115 -30			
5600108-18	123 -10			
5600108-19	94 -8			
5600108-22	112 -5			
5600108-23	139 -11			
5600108-24	136 -4A			
5600108-24	139 -40			
5600108-25	139 -2			
5600108-30	97 -21			
5600108-30	97A-35			
5600108-31	97 -15			
5600108-31	97A-32			
5600108-32	97 -13			
5600108-32	97A-30			
5600108-33	97 -21A			
5600108-33	97A-34			
5600108-35	97 -19			
5600108-35	97 -19			
5600108-50	SUPD BY 5600108-59			
5600108-50	SUPD BY 5600108-59			
5600108-52	126 -26			
5600108-52	127 -21			
5600108-59	118A-38			
5600108-59	119A-40			
5600118-1	139 -40			
5600118-15	138 -12			
5600118-16	130 -95			
5600118-16	130 -96			
5600118-16	132 -97			
5600118-16	132A-77			
5600118-18	132 -88			
5600118-18	132A-96			
5600118-2	139 -2			
5600118-20	130 -69			
5600118-28	138 -4			
5600118-29	140 -7			
5600118-30	140 -11			
5600118-31	140 -15			
5600118-32	140 -19			
5600118-4	97 -13			
5600118-4	97A-30			
5600118-43	132A-70			
5600118-52	132A-90			
5614205-1	138 -11			
5614211-1	137 -23			
5614211-2	137 -23			
5614212-1	9 -31			
5614212-1	137 -23			
5614212-1	137 -23			
5614212-2	SUPD BY 5614212-1			
5614212-4	9 -31			
5614583-2	157A-21			
5614583-3	157A-22			
5615002-1	114 -81			
5615002-4	114 -81			
5615004-3	116 -15			
5615012-1	86 -2			
5615012-2	86 -2			
5615221-10	SUPD BY 5615221-13			
5615221-13	62 -4			
5615221-8	61 -4			
5615221-8	SUPD BY 5615221-10			
5617113-2	126 -24			
5617113-2	127 -19			
5617115-1	126 -20			
5617115-1	126 -25			
5617115-1	127 -20			
5618006-2	147 -18			
5618007-14	61 -96			
5618007-14	141 -64A			
5618008-1	141 -35			
5618008-10	141 -35			
5618009-14	64 -2			
5618009-7	63 -2			
5618104-1	86 -11			
5618104-2	158 -23			
5618104-3	86 -11			
5618104-4	158 -23			
5618106-17	121 -20A			
5618106-18	121 -20A			
5618106-19	121 -20B			
5618106-20	121 -20B			
5618106-4	121 -108			
5618106-5	121 -108			
5618111-2	55 -60			
5618111-2	56 -55			
5618112-1	146 -41			
5619102-1	57 -3			
5619102-11	57 -3			
5619102-6	57 -3			
5619102-9	57 -3			
5619131-1	59 -3			
5619131-7	59 -3			
5619135-1	86 -14			
5619135-2	86 -14			
5619135-3	86 -14			
5619135-4	86 -14			
5619145-10	57 -34A			
5619145-10	59 -28			
5619148-1	60 -19			
5619148-1	60A-22			
5619148-5	60 -12			
5619148-5	60A-15			
5619193-1	46 -90			
5619232-11	53 -8			
5619232-11	55 -8			
5619232-15	51 -2			
5619232-15	52 -9			
5619232-19	53 -8			
5619232-19	54 -9			
5619232-19	55 -8			
5619232-19	56 -9			
5619232-29	54 -9			
5619232-29	56 -9			
5619232-7	51 -2			
5619300-36	46A-4			
5620100-10	31 -12			
5620100-11	31 -13			
5620100-12	31 -13			
5620100-14	31 -19			
5620100-15	SUPD BY 0822037-13			
5620100-18	29 -			
5620100-19	29 -			
5620100-22	29 -			
5620100-23	29 -			
5620100-8	31 -15			
5620100-9	31 -10			
5621000-3	32 -9			
5621000-4	32 -9			
5621000-5	32 -27			
5621000-6	32 -27			
5621100-1	32 -32			
5621100-2	32 -32			
5621100-3	32 -40			
5621100-4	32 -40			
5621101-15	32 -36			
5621101-16	32 -36			
5621101-3	32 -36			
5621101-4	32 -36			
5621102-3	32 -35			
5621102-4	32 -35			
5621103-3	32 -34			
5621103-4	32 -34			
5622013-200	28 -2			
5622013-201	28 -2			
5622013-202	28 -3			
5622013-203	28 -3			
5622564-1	32 -42			
5624204-7	138 -18			
5626001-1	122 -1			
5626002-2	122 -1			
5626003-1	122 -11			
5626003-2	122 -11			
5626010-1	122 -42			
5626015-11	140 -36			
5626015-13	37 -70			
5626015-14	37 -72			
5626015-18	140 -36			
5626015-8	1 -62			
5626016-1	140 -1			
5650001-1	98 -16			
5650001-1	125 -4			
5650001-2	98 -16			
5650001-2	125 -4			
5650003-1	SUPD BY 5650003-29			
5650003-29	SUPD BY 5650003-38			
5650003-31	101 -17			
5650003-37	101 -17			
5650003-38	101 -16			
5650003-7	62 -93G			
5650003-7	106 -15			
5650005-1	100 -24			
5650005-2	100 -24			
5650006-4	97 -38			
5650006-4	97A-40			
5650007-1	97A-41			
5650007-1	98A-8			
5650008-5	100 -20			
5650008-6	100 -20			
5650012-1	97 -23			
5650012-1	97A-36			
5650013-1	SUPD BY 5650013-2			
5650013-2	97 -14			
5650013-2	97A-31			
5650015-1	97 -17			
5650015-1	97A-48			
5650015-4	97A-41			
5650015-4	98 -22			
5650015-7	97 -17			
5650015-7	97A-42			
5652001-208	SUPD BY 5652001-212			
5652001-209	SUPD BY 5652001-212			
5652001-212	95 -1			
5653001-1	36 -3			
5653001-2	36 -4			
5653002-1	36 -2			
5653002-2	36 -2			
5653004-1	36 -5			
5653005-1	36 -1			
5653005-11	36 -1			
5653005-2	36 -1			
5653005-7	36 -1			
5653005-9	36 -1			
5653006-1	36 -20			
5654000-10	35 -34			
5654000-11	35 -34			
5654000-3	35 -26			
5654000-4	35 -26			
5654000-9	35 -44			
5654001-16	95 -8			
5654001-17	95 -8			
5654001-18	95 -8			
5654003-1	35 -6			

PART NUMBER	FIGURE & INDEX NUMBER	QTY PER ART	SOURCE CODE	REPAIR CODE
5654004-3	35 -7			
5654005-1	35 -8			
5654006-1	35 -53			
5654007-1	35 -54			
5654009-1	106 -20			
5654009-2	106 -21			
5654010-1	96 -14			
5654010-11	96 -14			
5654010-12	96 -14			
5654010-2	96 -14			
5654010-3	96 -14			
5654010-4	96 -14			
5654011-1	96 -6			
5654011-9	96 -6			
5654012-4	96 -11			
5654013-2	35 -13			
5654013-3	35 -13			
5654017-2	35 -10			
5654017-2	35 -15			
5654017-3	35 -10			
5654017-3	35 -15			
5654017-5	SUPD BY 5654017-7			
5654017-7	35 -10			
5654018-5	36 -4			
5654022-2	35 -56			
5654022-3	35 -56			
5654023-7	102A-11			
5654024-1	35 -40			
5654025-1	35 -40			
5654026-14	38 -2			
5654026-16	38 -10			
5654026-17	38 -6			
5654026-23	38 -11			
5654026-26	38 -7			
5654026-27	38 -8			
5654026-34	SUPD BY 5654026-39			
5654026-35	38 -5A			
5654026-36	38 -2			
5654026-39	38 -5A			
5654027-2	38 -13			
5654027-3	38 -14			
5654028-2	38 -15			
5654028-8	38 -15			
5654030-1	36 -19			
5654030-2	100 -17B			
5654551-3	100 -13			
5654551-4	100 -11A			
5654551-5	100 -8			
5654551-6	100 -9			
5654551-7	100 -15			
5654551-8	100 -15			
5654551-9	100 -11			
5654552-5	100 -18			
5654554-1	35 -14			
5655202-1	SUPD BY 5655202-5			
5655202-10	35 -11			
5655202-11	35 -11			
5655202-2	SUPD BY 5655202-4			
5655202-4	SUPD BY 5655202-10			
5655202-5	SUPD BY 5655202-11			
5655203-1	102 -44			
5655203-1	102A-37			
5655203-5	102 -44			
5655204-1	SUPD BY 5655204-2			
5655204-2	102 -41			
5655204-2	102A-35			
5655206-1	125 -1			
5655208-1	97 -11			
5655208-1	97A-28			
5655208-3	97 -11			
5655208-3	97A-28			
5655212-1	97A-25			
5655212-1	98 -39			
5655214-1	100 -25			
5655219-1	97A-26			
5655219-1	98 -40			
5655300-204	95 -5			
5655300-205	95 -5			
5655301-1	104 -3			
5655304-10	104 -4			
5655304-11	104 -5			
5655304-17	104 -3			
5655304-18	104 -4			
5655304-18	104 -4			
5655304-200	104 -3			
5655304-22	104 -6			
5655304-23	104 -7			
5655304-24	104 -8			
5655304-25	104 -9			
5655304-27	104 -5			
5655304-28	104 -4			
5655304-29	104 -5			
5655304-30	104 -3			
5655304-31	104 -14			
5655304-32	104 -13			
5655304-33	104 -15			
5655304-34	104 -3			
5655304-36	104 -3			
5655304-37	104 -3			
5655304-38	104 -3			
5655305-1	104 -11			
5655306-1	104 -11			
5655308-5	SUPD BY 5655308-7			
5655308-6	SUPD BY 5655308-8			
5655308-7	35 -16			
5655308-8	35 -16			
5655311-1	97 -3			
5655312-1	104 -2			
5655312-2	104 -2			
5655317-1	114 -28			
5659003-1	139 -8			
5659006-1	139 -23			
5659007-1	139 -13			
5659008-1	35 -56			
5659010-1	139 -17			
5659011-1	112 -3			
5659014-1	112 -7			
5659015-5	97A-41			
5659015-6	97A-41			
5690501-2	130 -5			
5690501-2	130 -21			
5690501-3	130 -1			
5690501-4	130 -18			
5690501-5	130 -11			
5690502-1	130 -29			
5690503-1	130 -19			
5690505-1	130 -15			
5690506-1	130 -24			
5690507-4	130 -47			
5690508-7	130 -45			
5690511-1	130 -32			
5710-121-15	112 -9			
5712-38	121 -55			
5734-1	132 -119			
5734-1	132 -139			
5734-1	132A-118			
5734-1	132A-140			
5735-2B	111 -25			
5760	131 -13			
58T1	61 -27			
58T1	61 -28			
58T1	62 -27			
58T1	62 -28			
5845	132 -120			
5845	132 -141			
5845	132A-119			
5845	132A-142			
5855CH	111 -15			
5901-2	161 -6			
5952-8ND14	148 -6			
5952-8ND15	148 -6			
5952-8ND16	148 -6			
5952-8ND2	148 -6			
5952-8ND20	148 -6			
5952-8ND3	148 -6			
5954-8ND14	148 -13			
5954-8ND15	148 -13			
5954-8ND16	148 -13			
5954-8ND2	148 -13			
5954-8ND20	148 -13			
5954-8ND3	148 -13			
6C6X-S	132A-69			
60-1520-3	146 -53			
600-001-1/4 0	121 -82			
600-001-10	125 -12			
600-001-10-0S	118 -19			
600-001-100S	121 -26			
600-015-010	122 -36			
600-015-10	37 -19			
6041H201A	141 -19			
6041H220	141 -76			
6041H220	143 -5			
61-26	70 -23			
62-7	70 -24			
620001-10	132A-25			
620001-10-0224	132 -11			
62140	142 -15			
62629-00	141 -18			
627282	130 -9			
62800-00	46 -65			
62802-00	46 -65			
628572	102 -41			
628572	102A-35			
628739	98 -12			
628740	98 -12			
629422	98 -12			
629436	99 -2A			
63-934D	146 -62			
630387	98A-6			
630691	99 -3			
630736	98 -14			
630817-1	98 -23			
630849	98 -7			
630849	98A-2			
630899	98 -11			
630916	98 -10			
631034	98 -8			
631059	98 -7			
631641	97A-8			
631645	97A-8			
632266	98 -9			
632347	98 -15			
632655	97A-8			
632710	102 -44			
632710	102A-37			
632748-14	98 -14			
632818-2A2	98 -14			
632818-2A2	98 -14			
632818-2A2	98A-4			
632818-2A3	98 -14			
632881	97A-8			
632881	98 -9			
632916-11	98A-6			
632916-11A1	98 -17			
632958	98 -12			
632959	98 -12			
632970	98 -8			
633068	98 -12			
633233-7	98 -15			
633233-7	98A-5			
633233-8	98 -15			
633233-8	98A-5			
633287	98 -7			
633531	98A-1			
634011	98 -15			
634065	98 -7			
634326-4A1	98 -19			
634433	98 -11			
634445	SUPD BY 5118514-1			
634788	SUPD BY 5118513-3			
635061A2	98 -10			
635837	141 -55			
635919A1	98A-8			
635930	98A-8			
635938	98A-8			
636204-3	98A-7			
636603	98 -11			
636915	98 -20			
637356	98 -24			
637357	98 -22			
637565	99 -2			
637584	98 -9			
637735A1	98 -16			
637736A1	SUPD BY 6329116-11A1			
639229	SUPD BY 5118513-3			
639808	141 -55			
640053	SUPD BY 5118513-3			
641583	97A-8			
64311	158 -15			
64311	158 -16			
6435640	97A-8			
6436635	97A-8			
6436637	97A-8			
6514	46 -70			
6526	46 -69			
66-33	70 -31			
67-6	70 -8			
68-16	70 -32			
68004	153 -14			
69-4	70 -33			
70-0075-1	146 -57			
7088	133A-10			
71-0188-1	146 -59			
71AD30-05-1-6	152 -41			
710-3-1/8B	124 -108			
71003-8	135 -44			
7101A42	152 -41			
7103AV2	152 -41			
716-3010-01	132 -54			
716-3010-1	132A-39			
72090	125 -29			
7203AV2	152 -41			
723061NG-213181	112 -12			
723061NG-213181	112 -13			
7270-5-235	144 -46			
7270-5-35	144 -60			
7271-8-10	144 -110			
7271-8-25	144 -115			
7277-2-10	144 -52			
7277-2-10	144 -85			
7277-2-10	144 -86			
7277-2-10	144 -94			
7277-2-10	144 -95			
7277-2-15	144 -50			
7277-2-15	144 -70			
7277-2-15	144 -71			
7277-2-15	144 -72			
7277-2-15	144 -93			
7277-2-15	144 -112			
7277-2-15	144 -113			
7277-2-15	144 -114			
7277-2-5	144 -38			
7277-2-5	144 -39			
7277-2-5	144 -51			
7277-2-5	144 -56			
7277-2-5	144 -57			
7277-2-5	144 -58			
7277-2-5	144 -69			
7277-2-5	144 -73			
7277-2-5	144 -74			
7277-2-5	144 -75			
7277-2-5	144 -76			
7277-2-5	144 -77			
7277-2-5	144 -78			
7277-2-5	144 -79			
7277-2-5	144 -80			
7277-2-5	144 -81			
7277-2-5	144 -82			
7277-2-5	144 -83			
7277-2-5	144 -88			
7277-2-5	144 -88			
7277-2-5	144 -89			
7277-2-5	144 -89			
7277-2-5	144 -90			
7277-2-5	144 -90			
7277-2-5	144 -91			
7277-2-5	144 -91			
7277-2-5	144 -92			
7277-2-5	144 -98			
7277-2-5	144 -99			
7277-2-5	144 -100			
7277-2-5	144 -101			
7277-2-5	144 -102			
7277-2-5	144 -102			
7277-2-5	144 -103			
7277-2-5	144 -103			
7277-2-5	144 -104			
7277-2-5	144 -105			
7277-2-5	144 -106			
7277-2-5	144 -109			
7277-2-5	144 -116			
7277-2-7.5	144 -53			
7277-2-7.5	144 -54			
7277-2-7.5	144 -55			
7277-2-7.5	144 -84			
7277-2-7.5	144 -87			
7277-2-7.5	144 -96			
7277-2-7.5	144 -97			
7277-2-7.5	144 -105			
7277-2-7.5	144 -106			
7277-2-7.5	144 -107			
7277-2-7.5	144 -108			

PART NUMBER	FIGURE & INDEX NUMBER	QTY PER ART	SOURCE CODE	REPAIR CODE
7277-2-7.5	144 -111			
73-5	70 -27			
74-5	70 -28			
7401	20 -10			
74118LAA	133A-1			
7415	63 -23			
7415	64 -23			
75-198	70 -38			
792-6134-001	150 -20			
8-10C50X-S	118A-2			
8-10C50X-S	119A-2			
8-10F50X-S	133 -6			
8-10F50X-S	133A-3			
8-8VTX-S	132 -12B			
8C50X-S	132A-8			
8C6X-S	132A-64			
8E2011	62 -14			
8X4075	99 -5			
800-001-6	83 -22			
8040	152 -4			
807.2	47 -66			
81-2	70 -36			
8142K20E6M50	64 -44			
8144K22A1M50	64 -45			
8150	118A-5			
8150	118A-34			
8150	119A-5			
8150	119A-36			
8150B	118A-4			
8150B	118A-30			
8150B	118A-33			
8150B	119A-4			
8150B	119A-32			
816-3-1D	120 -17			
8406K1	146 -68			
8406K1	146 -71			
85D87-1	127 -1			
8501K4	61 -9			
8501K4	62 -9			
85280	SUPD BY 85280-2			
85280-2	125 -16			
855SI-A4D	63 -22			
855SI-A4D	64 -22			
855SI-A4D	64 -58			
855SIA4D	61 -95			
8636-20	46 -109			
8710-1	46 -28			
8710-2	46 -28			
88-1	70 -25			
88000-2B	126 -9			
88020-2	126 -10			
88070-2G	SUPD BY 88070-2G1			
88070-2G1	127 -1			
8834K5	62 -16			
8850-4	118A-7			
8850-4	118A-36			
8850-4	119A-7			
8850-4	119A-38			
8905	118A-6			
8905	118A-35			
8905	119A-6			
8905	119A-37			
90E14	63 -7			
90E14	64 -7			
90E537	64 -7			
90976	150 -21			
91164	150 -21			
913	86 -22			
913	158 -19			
91360	150 -22			
92510322	141 -19			
92702-01	98 -3			
929436	98 -15			
93-713	105 -31			
94078100	105 -34			
94078200	105 -34			
95249	150 -22			
971D	121 -55			
9711003-1	153 -33			
9711015-3	153 -15			
9711015-3	153A-11			
9711015-3	153B-10			
9711015-4	153 -11			
9711015-4	153A-8			
9711015-4	153B-7			
9711015-7	153A-6			
9711015-7	153B-6			
9711019-9	153 -1			
9711019-9	153A-1			
9711019-9	153B-1			
9712025-1	93 -21			
9712025-2	93 -21			
9712025-3	93 -29			
9715009-1	152 -1			
9717004-10	160 -12			
9717004-11	160 -10			
9717004-12	160 -10			
9717004-13	160 -9			
9717004-14	160 -9			
9717004-15	160 -11			
9717004-16	160 -13			
9717004-9	160 -12			
9717005-2	160 -8			
9717005-4	160 -7			
9717005-5	160 -5			
9717005-7	160 -6			
9717005-8	160 -8A			
9751007-13	153 -6			
9751007-14	153 -6			
9751024-11	151 -1			
9751024-13	151 -1			
9751034-10	151 -4			
9751034-11	151 -4			
9751034-13	151 -4			
9751034-14	151 -4			
9751034-9	151 -4			
9751038-5	151 -1			
9751038-7	151 -1			
9751038-8	151 -1			
9751038-9	151 -1			
9754008-20	160 -6			
9754034-3	158 -20			
9754034-40	86 -			
9754034-42	86 -			
9754036-1	1 -51			
9754037-11	1 -72			
9754037-11	155 -15			
9754037-8	155 -13			
9754037-9	155 -12			
97560100-4	161A-10			
9756027-2	153 -26			
9756027-3	153 -22			
9756035-11	157 -23			
9756035-13	157 -24			
9756035-15	157 -3			
9756035-17	157 -4			
9756035-21	157 -43			
9756035-25	157 -51			
9756035-33	85 -34			
9756035-34	85 -33			
9756035-7	SUPD BY 9756035-33			
9756035-9	SUPD BY 9756035-34			
9756036-11	157 -36			
9756036-13	157 -35			
9756036-15	157 -39			
9756036-17	157 -40			
9756036-21	82 -109			
9756036-21	85 -37			
9756036-21	159 -24			
9756036-23	157 -19			
9756036-23	157A-42			
9756036-24	157A-47			
9756036-25	157A-46			
9756036-26	157A-45			
9756036-3	157 -33			
9756036-3	157A-43			
9756036-30	157A-48			
9756036-31	157A-49			
9756036-36	157A-50			
9756036-5	157 -34			
9756036-5	157A-44			
9756036-6	157 -32			
9756036-7	157 -36			
9756036-8	157 -37			
9756036-9	157 -38			
9756041-3	154 -6			
9756041-4	154 -7			
9756041-6	154 -1			
9756041-7	154 -5			
9756041-9	154 -9			
9756044-2	153 -31			
9756044-3	153 -29			
9756060-10	159 -7			
9756060-11	159 -8			
9756060-13	156 -8			
9756060-13	156 -9			
9756060-13	156 -11			
9756060-13	158 -4			
9756060-13	158 -5			
9756060-13	158 -7			
9756060-13	159 -18			
9756060-18	159 -9			
9756060-2	159 -3			
9756060-3	159 -13			
9756060-4	159 -21			
9756060-5	159 -11			
9756060-7	159 -9			
9756067-2	160 -4			
9756080-11	161 -1			
9756080-15	161 -8			
9756080-6	161 -5			
9756080-7	161 -12			
97561100-10	161A-7			
97561100-10	161A-14			
97561100-11	161A-8			
97561100-11	161A-15			
97561100-13	161A-13			
97561100-14	161A-1			
97561100-20	161A-5			
97561100-20	161A-6			
97561100-22	161A-10			
97561100-24	161A-12			
97561100-5	161A-1			
97561100-6	161A-5			
97561100-7	161A-6			
97561100-8	161A-4			
97561100-9	161A-3			
98382	150 -22			
9910002-3	78 -1			
9910008-1	125 -16			
9910011-1	71 -2			
9910017-1	15 -40			
9910017-3	23 -14			
9910021-1	121 -95			
9910023-3	120 -22			
9910023-4	120 -22			
9910054-1	124 -37			
9910055-1	93 -1			
9910058-1	120 -13			
9910058-2	97 -12			
9910058-2	97A-29			
9910059-2	90 -11			
9910060-7	122 -16			
9910060-8	122 -16			
9910068-1	141 -49			
9910068-2	141 -49			
9910072-11	142 -6			
9910072-13	SUPD BY 9910072-14			
9910072-14	64 -4			
9910072-6	63 -4			
9910079-1	61 -15			
9910079-1	62 -15			
9910080-1	141 -39			
9910080-2	141 -40			
9910082-10	119 -24			
9910082-14	119 -52			
9910082-14	119A-72			
9910082-15	119 -53			
9910082-16	119 -53			
9910082-17	118 -21			
9910082-17	118A-49			
9910082-17	119 -14			
9910082-17	119A-84			
9910082-18	118 -14C			
9910082-18	118A-56			
9910082-19	119 -15			
9910082-2	SUPD BY 9910082-32			
9910082-21	118 -17			
9910082-21	118A-53			
9910082-21	119 -15			
9910082-21	119A-85			
9910082-22	118 -17			
9910082-22	118A-53			
9910082-22	119 -15			
9910082-22	119A-85			
9910082-23	119 -24			
9910082-23	119A-53			
9910082-24	119 -24			
9910082-24	119A-53			
9910082-25	119 -53			
9910082-25	119A-73			
9910082-26	119 -53			
9910082-26	119A-73			
9910082-29	121 -78			
9910082-3	121 -78			
9910082-30	121 -79A			
9910082-31	121 -79A			
9910082-32	145 -14			
9910082-6	118 -17			
9910082-6	119 -15			
9910082-7	118 -17			
9910082-7	119 -15			
9910082-8	119 -23			
9910082-8	119A-52			
9910082-9	119 -24			
9910086-2	55 -25			
9910086-2	56 -30			
9910086-3	55 -24			
9910086-3	56 -29			
9910087-1	55 -32			
9910087-1	56 -37			
9910087-6	55 -26			
9910087-6	56 -31			
9910088-10	128 -40			
9910088-13	128 -31			
9910088-14	128 -74			
9910088-3	116 -33			
9910088-4	116 -11			
9910088-5	128 -77			
9910088-8	128 -34			
9910090-1	55 -27			
9910090-1	56 -32			
9910091-1	55 -30			
9910091-1	56 -35			
9910093-1	130 -112			
9910094-1	99 -13			
9910094-2	SUPD BY 9910094-3			
9910094-3	99 -13			
9910095-1	141 -85			
9910113-1	129 -1			
9910113-1	129A-43			
9910115-1	61 -26			
9910115-1	62 -26			
9910115-2	61 -25			
9910115-2	62 -25			
9910126-1	SUPD BY 9910126-3			
9910126-2	SUPD BY 9910126-3			
9910126-3	141 -55			
9910128-2	141 -59			
9910132-1	131 -49			
9910132-1	133 -60			
9910132-1	133A-58			
9910134-1	133 -27			
9910155-1	133 -33			
9910155-1	133A-25			
9910157-1	133 -24			
9910157-3	133A-14			
9910158-2	133 -42			
9910158-2	133A-40			
9910158-3	133 -42			
9910158-3	133A-40			
9910163-1	132 -117			
9910163-1	132A-116			
9910167-1	132 -71			
9910169-1	1 -8A			
9910173-1	133 -38			
9910173-1	133A-36			
9910174-1	132 -81			
9910174-1	132A-89			
9910175-1	46 -110			
9910176-1	46 -109			
9910182-3	58 -40			
9910182-4	60 -44			
9910190-1	130 -34			
9910192-1	1 -8A			
9910194-1	76 -20			
9910220-1	62 -99			
9910220-3	62 -99			
9910220-4	62 -99			
9910220-8	62 -99			
9910221-1	142 -22			
9910224-1	141 -88			
9910224-1	141 -107			
9910226-1	144 -117			
9910227-1	46 -111			

CLARK AIRCRAFT REPAIR INC.
MUNICIPAL AIRPORT
KEOKUK, IOWA 52632

PART NUMBER	FIGURE & INDEX NUMBER	QTY PER ART	SOURCE CODE	REPAIR CODE
9910231-9	1 -76			
9910238-1	46 -27			
9910240-1	139 -7			
9910269-1	106 -3			
9910269-10	62 -92			
9910269-2	106 -3			
9910269-3	106 -5			
9910269-4	106 -5			
9910269-5	106 -4			
9910269-6	106 -4			
9910269-7	62 -93			
9910269-8	62 -93			
9910269-9	62 -92			
9913001-1	104 -13			
99391	150 -32			
99499	150 -32			
99503	150 -32			
99508	150 -32			
99677	150 -23			
99816	150 -21			
99816	150 -23			
99816	150 -32			
99912	150 -23			
99914	150 -23			
99915	150 -23			
99916	150 -23			
99916	150 -32			

PART NUMBER	FIGURE & INDEX NUMBER	QTY PER ART	SOURCE CODE	REPAIR CODE

PART NUMBER	FIGURE & INDEX NUMBER	QTY PER ART	SOURCE CODE	REPAIR CODE