

Illustrated Parts Catalog

**1978
thru
1985**

MODEL 152 SERIES



THIS CATALOG SUPERSEDES AND REPLACES ALL 152 SERIES PARTS CATALOGS DATED: 1 APRIL 1977 THRU 15 JULY 1983, AND INCORPORATES REVISION 1 DATED: 21 NOVEMBER 1984 AND TEMPORARY REVISION 1 DATED: 22 JANUARY 1995.

COPYRIGHT © 1996
CESSNA AIRCRAFT COMPANY
WICHITA, KANSAS, USA

15 MARCH 1996

P692-13
(RGI-50-1/03)

CESSNA AIRCRAFT COMPANY
MODEL 152 & A152
Parts Catalog

LIST OF EFFECTIVE PAGES

Dates of Issue for original and revised pages are:

Original 0 15 March 1996

TOTAL NUMBER OF PAGES IN THIS PUBLICATION IS 426 CONSISTING OF THE FOLLOWING:

Page No.	Revision No.	Page No.	Revision No.	Page No.	Revision No.	Page No.	Revision No.
Cover	0	205 thru 220 . .	0				
A	0	221 blank	0				
i thru ii	0	222 thru 240 . .	0				
ii-a	0	241 blank	0				
ii-b	0	242 thru 251 . .	0				
ii-c blank	0	252 blank	0				
ii-d	0	253	0				
iii thru vi	0	254	0				
vi-a thru vi-f . . .	0	255 blank	0				
vii thru xxv	0	256 thru 276 . .	0				
xxvi blank	0	277 blank	0				
1 thru 6	0	278 thru 280 . .	0				
7 blank	0	281 blank	0				
8 thru 10	0	282 thru 288 . .	0				
11 blank	0	289 blank	0				
12 thru 18	0	290 thru 294 . .	0				
19 blank	0	295 blank	0				
20 thru 30	0	296 thru 330 . .	0				
31 blank	0	331 blank	0				
32 thru 60	0	332 thru 352 . .	0				
61 blank	0	353 blank	0				
62 thru 66	0	354 thru 390 . .	0				
67 blank	0						
68 thru 72	0						
73 blank	0						
74 thru 78	0						
79 blank	0						
80 thru 87	0						
88 blank	0						
89 thru 100	0						
101 blank	0						
102 thru 122	0						
123 blank	0						
124 thru 140	0						
141 blank	0						
142 thru 160	0						
161 blank	0						
162 thru 182	0						
183 blank	0						
184 thru 203	0						
204 blank	0						

Upon receipt of the second and subsequent revisions to this book, personnel responsible for maintaining this publication in current status should ascertain that all previous revisions have been received and incorporated.

* The asterisk indicates pages revised, added, or deleted by the current revision

152 & A152 Parts Catalog

INTRODUCTION.

The information in this publication is based on data available at the time of publication and is updated, supplemented, and automatically amended by all information issued in Service News Letters, Service Bulletins, Supplier Service Notices, Publication Changes, Revisions, Reissues and Temporary Revisions. All such amendments become part of and are specifically incorporated within this publication. Users are urged to keep abreast of the latest amendments to this publication through information available at Cessna Authorized Service Stations or through the Cessna Product Support subscription services. Cessna Service Stations have also been supplied with a group of supplier publications which provide disassembly, overhaul, and parts breakdowns for some of the various supplier issued revisions and service information which may be reissued by Cessna thereby automatically amending this publication and are communicated to the field through Cessna's Authorized Service Stations and/or through Cessna's subscription services.

WARNING:

ALL INSPECTION INTERVALS, REPLACEMENT TIME LIMITS, OVERHAUL TIME LIMITS, THE METHOD OF INSPECTION, LIFE LIMITS, CYCLE LIMITS, ETC., RECOMMENDED BY CESSNA ARE SOLELY BASED ON THE USE OF NEW, REMANUFACTURED, OR OVERHAULED CESSNA APPROVED PARTS. IF PARTS ARE DESIGNED, MANUFACTURED, REMANUFACTURED, OVERHAULED AND/OR APPROVED BY ENTITIES OTHER THAN CESSNA, THEN THE DATA IN CESSNA'S MAINTENANCE/SERVICE MANUAL AND PARTS CATALOGS ARE NO LONGER APPLICABLE AND THE PURCHASER IS WARNED NOT TO RELY ON SUCH DATA FOR NON-CESSNA PARTS. ALL INSPECTION INTERVALS, REPLACEMENT TIME LIMITS, OVERHAUL TIME LIMITS, THE METHOD OF INSPECTION, LIFE LIMITS, CYCLE LIMITS, ETC., FOR SUCH NON-CESSNA PARTS MUST BE OBTAINED FROM THE MANUFACTURER AND/OR SELLER OF SUCH NON-CESSNA PARTS.

Inspection, maintenance and parts requirements for STC installations are not included in this manual. When an STC installation is incorporated on the airplane, those portions of the airplane affected by the installation must be inspected in accordance with the inspection program published by the owner of the STC. Since STC installations may change systems interface, operating characteristics and component loads or stresses on adjacent structures, Cessna provided inspection criteria may not be valid for airplanes with STC installations.

This illustrated parts catalog has been prepared to aid you in easily and quickly identifying parts of the models covered herein. The information in this catalog is based on data available at the time of publication.

This catalog features an index system consisting of:

1. An alphabetical index located in the front of the catalog.
2. A numerical index located in the back of the catalog, which lists all parts and figures in which they appear.

AEROFICHE. . . . This catalog has been designed for Aerofiche presentation. To facilitate the use of the catalog for Aerofiche, fiche and frame numbers have been added to the alphabetical and numerical indexes. Frame numbers appear at the bottom center of each page. Refer to the header of the applicable fiche for location of various indexing information.

STANDARD PARTS.

Many parts having standard usage have been incorporated into the Cessna Standard System. Parts in this group are designated with the part number prefix "S".

For standard hardware items such as Tinnerman nuts, clamps, etc. "AN" and "NAS" numbers have been used.

USABLE ON CODES. . . . Serial listings in this catalog are noted by a letter code located in the usable on code column which is the extreme right hand column of the parts list page. Usable on codes are applicable only to the figure on which they appear. The code letters and the serials to which they apply are listed at the end of the figure.

If no usable on code appears opposite a first column listing of the figure, the usage is applicable to all models and serials covered by this catalog. If no usable on code appears opposite any indented listing, the usage is applicable to all models and serials covered by the figure on which it appears.

152 & A152 Parts Catalog

Bold face type serials appearing on certain figures are for quick reference to large blocks of airplanes. Reims Aviation serial usage is listed together with the Cessna Aircraft Company serial usage immediately following the parts listing on each individual figure where applicable.

NON-INTERCHANGEABLE PARTS. . . .When parts are not interchangeable with earlier models, all parts applicable to the particular usage is listed in the usable on column opposite each part. Care should be exercised in determining proper serial when ordering to insure receipt of correct part.

INTERCHANGEABLE PARTS. . . .When a later design part is completely interchangeable with the part it replaces, both parts will be serialized and the notation "when exhausted use__", or the abbreviation, "WEU__" will be entered following the listing of the earlier design part. This means that the earlier design part should be used on airplanes to which they apply until the supply of these parts is exhausted--- after which time the later design part must be used. This is done to simplify stocking of parts by our distributors and service stations. The earlier part is as good physically and functionally, as the later design part--- the difference being the later design part can be used on more than one block of airplane serials.

SYMBOLS & PART NUMBER TERMS.

NP - The symbol "NP" appearing in the units per assembly column denotes that the item it appears opposite is not procurable.

AR - The symbol "AR" appearing in the units per assembly column denotes "As Required" and is used to indicate bulk quantity where an indefinite amount is used.

The following is a list of abbreviations that may appear in the description nomenclature:

ALT	Alternate Part	LH	Left Hand
ASSY	Assembly	M/G	Main Gear
BHD	Bulkhead	N/G	Nose Gear
BKI	Bulk item	PNL	Panel
COMP	Components	PRESS	Pressure
FSO	For spares order	RH	Right Hand
FWD	Forward	SECT	Section
IND	Indicator	UPR	Upper
INSTL	Installation	WEU	When Ex- hausted Use

Other key letter symbols spaced apart from and following the part nomenclature are for cataloging and manufacturing purposes only and are not to be considered by the customer.

A blank entry in the part number column appears before an unprocurable part or installation which is also denoted in the "Units Per Assembly" column by the use of the symbol "NP".

GROUP ASSEMBLY PARTS LIST ARRANGEMENT.

This section lists all replaceable items in the airplane and these items are detailed on illustrations throughout the section. The index numbers on the illustration are keyed to each accompanying parts list. The purpose of the index numbers is to provide complete and positive identification of the article, but should not be used for procurement purposes.

- a. The figure and index number column of the parts list shows the figure number once at the beginning of the list. The figure number is followed by a dash and the indexed number. The remaining index numbers are preceded by dash only.
- b. The part number column identifies the item by part number.
- c. In the description column, relationship of items covered is shown by the degree of indention of each item, for example: The wing assembly (Figure 3) is listed in column (1) of the description column. The wing structure, is the next lower assembly and is therefore listed in column (2).
- d. If two or more assemblies contain a majority of identical parts or the assemblies are left or right hand, the assemblies are listed together and the next lower assemblies or detail parts are listed as common for both assemblies, with the differing parts coded for usage on the correct major assembly.
- e. Attaching parts are listed immediately beneath the item to be attached and preceding any detail parts of the item. They are listed in the same column as the item they attach and are preceded by the caption "Attaching Parts". The end of the attaching parts listing is followed by a separating symbol ---*---

152 & A152 Parts Catalog

- f. The quantity listed in the "Units Per Assembly" column for attaching parts denotes the quantity necessary to attach only one part. Total quantity necessary to attach more than one part is obtained by multiplying the attaching parts quantity by the number of parts attached.
- g. Component parts of the complete airplane which are not included in any assembly, but which are used in conjunction with, or attach to certain assemblies, are listed with preceding the first detail or following the last detail of the assembly or installation, and in the same column as the major assembly or installation.
- h. The quantities listed in the "Units Per Assembly" column are the quantity used per figure.

ACCESSORY KITS.

For accessory kit listings, refer to separate Accessory Kit Catalog.

BULK ITEMS.

Certain items such as flexible air hose, rubber moldings and channels, windshield sealing strips etc., are noted in the catalog listings as bulk items. These listings also note the cut length of these materials for one installation. When an item is listed as bulk item, it will be supplied to the dealer in the most convenient bulk length or quantity. Reference to the cut length or quantity per installation provides for the most satisfactory disbursement to the customer.

HOW TO ORDER.

USE YOUR CATALOG TO ORDER PARTS. Use Parts and Accessories Order Form, which will be supplied by Cessna on request. Give complete information on addresses and make sure the part number and part name are as shown in the catalog. Be sure to specify quantities. Specify how the order is to be shipped, otherwise it will be sent out in the manner that seems best to the shipper.

SERIAL, COLOR, & CORROSION PROOFING.

Be sure to indicate model and serial number of the airplane. Serial number is very important to properly identify parts used on each airplane. When color is involved refer to "Upholstery & Interior Trim" section for example. If corrosion proofing is desired add the letters "CO" following the part number.

RETAIL ORDERS.

Retail orders will not be honored by the factory. They are to be placed with the dealer or distributor in the owner's territory and when received directly by the factory will be forwarded to the distributor from whose territory it was received. Considerable saving in time will result to the owner if his orders are placed with his dealer or distributor.

ADDITIONAL PUBLICATIONS.

In addition to the information in this Parts Catalog, a group of vendor publications is available from the Cessna Parts Distribution, which describe complete disassembly, overhaul and parts breakdown of some of the various vendor equipment items. A listing of these publications is issued periodically in the "Customer Care Supplies Catalog" which includes listings of Autopilots, Avionics Communications, and Navigation Equipment which are not covered in this manual. These publications are available from the Cessna Parts Distribution, Cessna Aircraft Company, Box 1521, Wichita, Kansas 67218.

Cessna Aircraft Company reserves the right to cancel, add or change the parts and assemblies described in the catalog without notice.

152 & A152 Parts Catalog

IMPORTANT INFORMATION CONCERNING KEEPING CESSNA PUBLICATIONS CURRENT

This Publication is kept current in two ways:

1. REVISIONS/CHANGES.

Revisions/changes are issued for this publication as required and include only pages that require updating.

2. REISSUE.

A reissue is issued as required, and is a complete manual incorporating all the latest information and outstanding revisions/changes. It supersedes and replaces previous issue(s).

REVISIONS/CHANGES and REISSUES can be purchased from your Cessna Dealer or directly from the Cessna Parts Distribution, Cessna Aircraft Company, 5800 East Pawnee, Wichita, Kansas 67201. This catalog lists all publications and Customer Care Supplies available from Cessna for prior year models as well as new products.

CUSTOMER COMMENTS ON MANUAL

Cessna Aircraft Company has endeavored to furnish you with an accurate, useful, up-to-date manual. This manual can be improved with your help. Please use the return cards, provided with your manual, to report any errors, discrepancies, and omissions in this manual as well as any general comments you wish to make.

152 & A152 Parts Catalog

"All aircraft, regardless of manufacturer, are certificated under model number designations. However, popular names are often used for marketing purposes. To provide a consistent method of referring to the various aircraft, model numbers will be used in this publication unless names are required to differentiate between versions of the same basic model. The following table provides a cross reference listing of popular name vs. model numbers."

NAME	MODEL YEAR	MODEL	SERIALS	
			BEGINNING	ENDING
152 152 II	1978 1979	152 152	15279406 15282032 15283592 15284542 15285162 15285595 15285834	15282031 15283591 15284541 15285161 15285594 15285833 15285939
152	1985	152	15285940	
152 TRAINER	1981 1982 1983 1984	152 152 152 152	15284542 15285162 15285595 15285834	15285161 15285594 15285833 15285939
152 AEROBAT	1978 1979 1980 1981 1982 1983 1984 1985	A152 A152 A152 A152 A152 A152 A152 A152	A1520735 A1520809 A1520879 A1520944 A1520984 A1521015 A1521026 A1521028	A1520808 A1520878 A1520943 A1520983 A1521014 A1521025 A1521027
F152 F152 II	1978 1979 1980 1981 1982 1983 1984	F152 F152 F152 F152 F152 F152 F152	F15201429 F15201529 F15201674 F15201809 F15201894 F15201929 F15201944	F15201528 F15201673 F15201808 F15201893 F15201928 F15201943 F15201952
F152	1985	F152	NONE	NONE
F152 TRAINER	1981 1982 1983 1984	F152 F152 F152 F152	F15201809 F15201894 F15201929 F15201944	F15201893 F15201928 F15201943 F15201952
FA152 AEROBAT	1978 1979 1980 1981 1982 1983 1984 1985	FA152 FA152 FA152 FA152 FA152 FA152 FA152 FA152	FA1520337 FA1520348 FA1520358 FA1520373 FA1520378 FA1520383 NONE NONE	FA1520347 FA1520357 FA1520372 FA1520377 FA1520382 FA1520387 NONE NONE

152 & A152 Parts Catalog

FINISH & TRIM PLATE

1978 MODEL YEAR THRU 1980 MODEL YEAR


The "FINISH AND TRIM" plate is located on the seat pan next to the outboard left hand seat rail.

This plate indicates model year, interior color scheme and the exterior color combination.

Interpretation of information stamped on the Finish and Trim Plate is obtained by use of the Color Code Chart for the respective year.

Color Code Charts for yearly models appear on pages immediately following this page.

The Finish and Trim Plate is explained below. Explanatory remarks are keyed to the illustrated example.

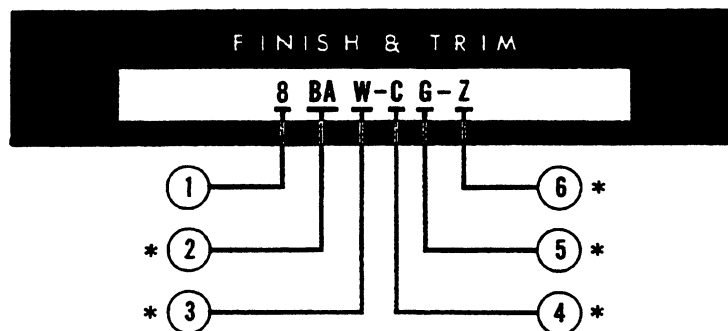

- ① First column number indicates year.
 - ② Second column letter or letters indicate interior color code of aircraft.
 - ③ Third column letter or letters indicate overall exterior color.
 - ④ First letter following hyphen indicates major stripe color.
 - ⑤ Second letter following hyphen indicates accent color.
 - ⑥ This area is left blank when standard paint is used.
Standard paints are modified urethane for domestic aircraft & lacquer for French aircraft.
A letter Z following second hyphen indicates optional acrylic paint.
- * Special exterior and/or interior is denoted by the letters "SP" in lieu of the standard codes.

Interpretation of the example Finish & Trim Code 8 BA W-CG-Z that is obtained from 1978 Color Code Chart is:

8 = 1978 model year
BA = Dutch Blue & Cloud Gray interior scheme
W = Vestal White overall exterior paint
C = Satin Blue major stripe paint
G = Avant Orange accent area paint
Z = Optional acrylic exterior paint

152 & A152 Parts Catalog

FINISH & TRIM PLATE

1981 MODEL YEAR & ON


The "FINISH AND TRIM" plate is located on the seat pan next to the outboard left hand seat rail.

This plate indicates model year and the exterior color combination.

Interpretation of information stamped on the Finish and Trim Plate is obtained by use of the Color Code Chart for the respective year.

Color Code Charts for yearly models appear on pages immediately following this page.

The Finish and Trim Plate is explained below. Explanatory remarks are keyed to the illustrated example.

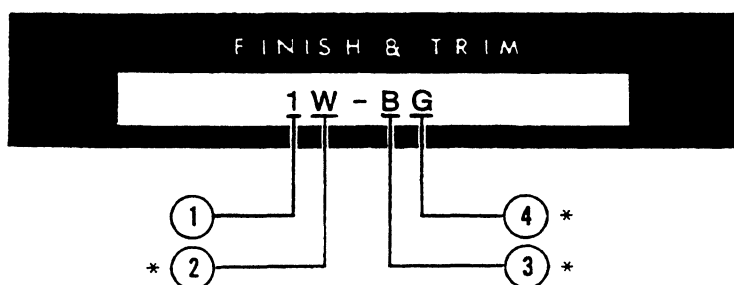

- ① Number indicates year.
- ② Letter or letters indicate overall exterior color.
- ③ First letter following hyphen indicates major stripe color.
- ④ Second letter following hyphen indicates accent color.

* Special exteriors are denoted by the letters "SP" in lieu of the standard codes.

Interpretation of the example Finish & Trim code 1 W - B G that is obtained from 1981 Color Code Chart is:

1 = 1981 model year
W = Vestal White overall exterior paint
B = Flag Red major stripe
G = Night Blue accent stripe

152 & A152 Parts Catalog

1978 PAINT CODE CHART

15279406 THRU 15282031
F15201429 THRU F15201528

A1520735 THRU A1520808
FA1520337 THRU FA1520347

INTERIOR COLOR & PAINT				EXTERIOR PAINT			
CODE	COLOR	LACQUER	VINYL	CODE	ACRYLIC	MODIFIED URETHANE	*LACQUER
AC	CHESTNUT PERF. INSERTS	CHESTNUT BROWN CES1054-B41	CHESTNUT BROWN CES1054-B42	W	VESTAL WHITE CES1054-802	VESTAL WHITE CES1054-C53	VESTAL WHITE CES1054-398
AF	CHESTNUT VINYL & FABRIC	CHESTNUT BROWN CES1054-B41	CHESTNUT BROWN CES1054-B42	B	FLAG RED CES1054-A93	FLAG RED CES1054-C43	FLAG RED CES1054-B03
BA	DUTCH BLUE & CLOUD GREY	DUTCH BLUE CES1054-C22	DUTCH BLUE CES1054-C23	C	SATIN BLUE CES1054-B62	SATIN BLUE CES1054-C44	SATIN BLUE CES1054-B66
BC	DUTCH BLUE PERF. INSERTS	DUTCH BLUE CES1054-C22	DUTCH BLUE CES1054-C23	D	FLEET BLUE CES1054-A20	FLEET BLUE CES1054-C45	FLEET BLUE CES1054-A37
BF	DUTCH BLUE VINYL & FABRIC	DUTCH BLUE CES1054-C22	DUTCH BLUE CES1054-C23	E	VILLA GREEN CES1054-C15	VILLA GREEN CES1054-C46	VILLA GREEN CES1054-C37
CC	COLONIAL GREY PERF. INSERTS	COLONIAL GREY CES1054-C26	COLONIAL GREY CES1054-C27	F	PECAN BROWN CES1054-C16	PECAN BROWN CES1054-C47	PECAN BROWN CES1054-C38
CF	COLONIAL GREY VINYL & FABRIC	COLONIAL GREY CES1054-C26	COLONIAL GREY CES1054-C27	G	AVANT ORANGE CES1054-C19	AVANT ORANGE CES1054-C48	AVANT ORANGE CES1054-C41
EC	CLOUD GREY PERF. INSERTS	CLOUD GREY CES1054-531	CLOUD GREY CES1054-533	H	SPRINGBOCK CES1054-C17	SPRINGBOCK CES1054-C49	SPRINGBOCK CES1054-C39
GC	MAIZE PERF. INSERTS	MAIZE CES1054-C34	MAIZE CES1054-C35	J	JAGUAR YELLOW CES1054-C18	JAGUAR YELLOW CES1054-C50	JAGUAR YELLOW CES1054-C40
GF	MAIZE VINYL & FABRIC	MAIZE CES1054-C34	MAIZE CES1054-C35	K	CARNIVAL YELLOW CES1054-A15	CARNIVAL YELLOW CES1054-C54	CARNIVAL YELLOW CES1054-A34
HC	HUNTER RED PERF. INSERTS	HUNTER RED CES1054-A85	HUNTER RED CES1054-A86	M	ANCIANO BLUE CES1054-C20	ANCIANO BLUE CES1054-C51	ANCIANO BLUE CES1054-C42
HF	HUNTER RED VINYL & FABRIC	HUNTER RED CES1054-A85	HUNTER RED CES1054-A86	N	VELVET BLACK CES1054-807	VELVET BLACK CES1054-C52	VELVET BLACK CES1054-151
INTERIOR PAINT COMMON TO ALL INTERIORS				NOTE: WHEN ORDERING PAINT SPECIFY CES1054 PART NUMBER. EXAMPLE: CES1054-531 *LACQUER PAINT USED ON FRENCH AIRCRAFT ONLY.			
BLACK SEMI-GLOSS (LACQUER) CES1054-156		DULL BLACK (LACQUER) CES1054-193					
CLOUD GREY (LACQUER) CES1054-531		CLOUD GREY (VINYL) CES1054-533					

152 & A152 Parts Catalog

15282032 THRU 15283591
F15201529 THRU F15201673

1979 PAINT CODE CHART

A1520809 THRU A1520878
FA1520348 THRU FA1520357

INTERIOR COLOR & PAINT				EXTERIOR PAINT		
CODE	COLOR	LACQUER	VINYL	CODE	MODIFIED URETHANE	*MODIFIED URETHANE
AC	CHESTNUT PERF. INSERTS	CHESTNUT BROWN CES1054-B41	CHESTNUT BROWN CES1054-B42	W	VESTAL WHITE CES1054-C53	VESTAL WHITE CES1054-D16
AF	CHESTNUT VINYL & FABRIC	CHESTNUT BROWN CES1054-B41	CHESTNUT BROWN CES1054-B42	B	FLAG RED CES1054-C43	FLAG RED CES1054-D14
BA	BLUE & CLOUD GREY	DUTCH BLUE CES1054-C22	DUTCH BLUE CES1054-C23	C	CARDINAL RED CES1054-C89	CARDINAL RED CES1054-D02
BC	BLUE PERF. INSERTS	DUTCH BLUE CES1054-C22	DUTCH BLUE CES1054-C23	D	BURNT ORANGE CES1054-C90	BURNT ORANGE CES1054-D03
BF	BLUE VINYL & FABRIC	DUTCH BLUE CES1054-C22	DUTCH BLUE CES1054-C23	E	BUTTERSCOTCH CES1054-C91	BUTTERSCOTCH CES1054-D04
CC	BEIGE PERF. INSERTS	BEIGE CES1054-D31	BEIGE CES1054-D32	F	DARK YELLOW CES1054-C92	DARK YELLOW CES1054-D05
CF	BEIGE VINYL & FABRIC	BEIGE CES1054-D31	BEIGE CES1054-D32	G	DARK BLUE CES1054-C93	DARK BLUE CES1054-D06
DC	RUST PERF. INSERTS	RUST CES1054-C84	RUST CES1054-C83	H	MEDIUM BLUE CES1054-C94	MEDIUM BLUE CES1054-D07
DF	RUST VINYL & FABRIC	RUST CES1054-C84	RUST CES1054-C83	J	TAN CES1054-C95	TAN CES1054-D08
EC	CLOUD GREY PERF. INSERTS	CLOUD GREY CES1054-531	CLOUD GREY CES1054-533	K	BROWN CES1054-C96	BROWN CES1054-D09
GC	GREEN PERF. INSERTS	GREEN CES1054-D23	GREEN CES1054-D24	M	PARROT GREEN CES1054-C97	PARROT GREEN CES1054-D10
GF	GREEN VINYL & FABRIC	GREEN CES1054-D23	GREEN CES1054-D24	N	DARK GREEN CES1054-C98	DARK GREEN CES1054-D11
HC	RED PERF. INSERTS	HUNTER RED CES1054-A85	HUNTER RED CES1054-A86	Q	BLUE GREEN CES1054-C99	BLUE GREEN CES1054-D12
HF	RED VINYL & FABRIC	HUNTER RED CES1054-A85	HUNTER RED CES1054-A86	R	BLACK CES1054-C52	BLACK CES1054-D15
INTERIOR PAINT COMMON TO ALL INTERIORS				NOTE: WHEN ORDERING PAINT SPECIFY CES1054 PART NUMBER. EXAMPLE: CES1054-531 *USED ON FRENCH AIRCRAFT ONLY.		
BLACK SEMI-GLOSS (LACQUER) CES1054-156		DULL BLACK (LACQUER) CES1054-193				
CLOUD GREY (LACQUER) CES1054-531		CLOUD GREY (VINYL) CES1054-533				

152 & A152 Parts Catalog

15283592 THRU 15284541
F15201674 THRU F15201808

1980 PAINT CODE CHART

A1520879 THRU A1520943
FA1520358 THRU FA1520372

INTERIOR COLOR & PAINT				EXTERIOR PAINT			
CODE		COLOR	LACQUER	VINYL	CODE	MODIFIED URETHANE	*MODIFIED URETHANE
AC	AF	CHESTNUT	CHESTNUT BROWN CES1054-B41	CHESTNUT BROWN CES1054-B42	W	VESTAL WHITE CES1054-C53	VESTAL WHITE CES1054-D16
BA		BLUE & CLOUD GREY	DUTCH BLUE CES1054-C22	DUTCH BLUE CES1054-C23	B	FLAG RED CES1054-C43	FLAG RED CES1054-D14
BC	BF	BLUE	DUTCH BLUE CES1054-C22	DUTCH BLUE CES1054-C23	C	MAROON CES1054-D47	MAROON CES1054-D54
CC	CF	BEIGE	BEIGE CES1054-D31	BEIGE CES1054-D32	D	CENTURY ORANGE CES1054-D48	CENTURY ORANGE CES1054-D55
DC	DF	RUST	RUST CES1054-C84	RUST CES1054-C83	E	BUTTERSCOTCH CES1054-C91	BUTTERSCOTCH CES1054-D04
EC		CLOUD GREY	CLOUD GREY CES1054-531	CLOUD GREY CES1054-533	F	BENGAL YELLOW CES1054-D49	BENGAL YELLOW CES1054-D56
GC	GF	GREEN	GREEN CES1054-D23	GREEN CES1054-D24	G	NIGHT BLUE CES1054-C93	NIGHT BLUE CES1054-D06
HC	HF	RED	HUNTER RED CES1054-A85	HUNTER RED CES1054-A86	H	LIGHT BLUE CES1054-D50	LIGHT BLUE CES1054-D57
					J	HUNTER TAN CES1054-C95	HUNTER TAN CES1054-D08
					K	TOFFEE BROWN CES1054-C96	TOFFEE BROWN CES1054-D09
					M	LOMBARDY GREEN CES1054-D51	LOMBARDY GREEN CES1054-D58
					N	SHADE GREEN CES1054-C98	SHADE GREEN CES1054-D11
					Q	BLUE GREEN CES1054-C99	BLUE GREEN CES1054-D12
					R	VELVET BLACK CES1054-C52	VELVET BLACK CES1054-D15
					T	ULTRA PURPLE CES1054-D52	ULTRA PURPLE CES1054-D59
					U	ADOBE BEIGE CES1054-D53	ADOBE BEIGE CES1054-D60
INTERIOR PAINT COMMON TO ALL INTERIORS					NOTE: WHEN ORDERING PAINT SPECIFY CES1054 PART NUMBER. EXAMPLE: CES1054-531 * USED ON FRENCH AIRCRAFT ONLY.		
BLACK SEMI-GLOSS (LACQUER) CES1054-156			DULL BLACK (LACQUER) CES1054-193				
CLOUD GREY (LACQUER) CES1054-531			CLOUD GREY (VINYL) CES1054-533				

152 & A152 Parts Catalog

1981 PAINT CODE CHART

15284542 THRU 15285161 A1520944 THRU A1520983 F15201809 THRU F15201893 FA1520373 THRU FA1520377

INTERIOR COLOR & PAINT			EXTERIOR PAINT		
COLOR	LACQUER	VINYL	CODE	MODIFIED URETHANE	*MODIFIED URETHANE
GOLD	CLOUD GREY CES1054-531	CLOUD GREY CES1054-533	W	VESTAL WHITE CES1054-C53	VESTAL WHITE CES1054-D16
BEIGE	CLOUD GREY CES1054-531	CLOUD GREY CES1054-533	B	FLAG RED CES1054-C43	FLAG RED CES1054-D14
BROWN	CLOUD GREY CES1054-531	CLOUD GREY CES1054-533	C	MAROON CES1054-D47	MAROON CES1054-D54
RED	CLOUD GREY CES1054-531	CLOUD GREY CES1054-533	D	MIDNIGHT RED CES1054-D71	MIDNIGHT RED CES1054-D78
BLUE	CLOUD GREY CES1054-531	CLOUD GREY CES1054-533	E	SIGNAL ORANGE CES1054-D72	SIGNAL ORANGE CES1054-D79
CLOUD GREY	CLOUD GREY CES1054-531	CLOUD GREY CES1054-533	F	DARK YELLOW CES1054-C92	DARK YELLOW CES1054-D05
BLACK	CLOUD GREY CES1054-531	CLOUD GREY CES1054-533	G	NIGHT BLUE CES1054-C93	NIGHT BLUE CES1054-D06
			H	MEDIUM BLUE CES1054-C94	MEDIUM BLUE CES1054-D07
			J	BERBER TAN CES1054-D73	BERBER TAN CES1054-D80
			K	COPPER BROWN CES1054-D74	COPPER BROWN CES1054-D81
			M	AVENUE BROWN CES1054-D75	AVENUE BROWN CES1054-D82
			N	SHADE GREEN CES1054-C98	SHADE GREEN CES1054-D11
			Q	FIELD GREEN CES1054-D76	FIELD GREEN CES1054-D83
			R	VELVET BLACK CES1054-C52	VELVET BLACK CES1054-D15
			T	JAY GREY CES1054-D77	JAY GREY CES1054-D84
			U	ADOBE BEIGE CES1054-D53	ADOBE BEIGE CES1054-D60
INTERIOR PAINT COMMON TO ALL INTERIORS			NOTE: WHEN ORDERING PAINT SPECIFY CES1054 PART NUMBER. EXAMPLE: CES1054-531 * USED ON FRENCH AIRCRAFT ONLY.		
BLACK SEMI-GLOSS (LACQUER) CES1054-156		DULL BLACK (LACQUER) CES1054-193			
CLOUD GREY (LACQUER) CES1054-531		CLOUD GREY (VINYL) CES1054-533			

152 & A152 Parts Catalog

1982 PAINT CODE CHART

15285162 THRU 15285594 A1520984 THRU A1521014 F15201894 THRU F15201928 FA1520378 THRU FA1520382

INTERIOR COLOR & PAINT			EXTERIOR PAINT		
COLOR	LACQUER		CODE	MODIFIED URETHANE	*MODIFIED URETHANE
GOLD	CLOUD GREY CES1054-E38		W	VESTAL WHITE CES1054-C53	VESTAL WHITE CES1054-C53
BEIGE	CLOUD GREY CES1054-E38		A	CHOCOLATE BROWN CES1054-D90	CHOCOLATE BROWN CES1054-E01
BROWN	CLOUD GREY CES1054-E38		B	FLAG RED CES1054-C43	FLAG RED CES1054-D14
RED	CLOUD GREY CES1054-E38		C	MAROON CES1054-D47	MAROON CES1054-D54
BLUE	CLOUD GREY CES1054-E38		D	MIDNIGHT RED CES1054-D71	MIDNIGHT RED CES1054-D78
CLOUD GREY	CLOUD GREY CES1054-E38		E	SIGNAL ORANGE II CES1054-E16	SIGNAL ORANGE II CES1054-E17
BLACK	CLOUD GREY CES1054-E38		F	SUNBURST YELLOW CES1054-D89	SUNBURST YELLOW CES1054-D99
			G	MOCA BROWN CES1054-D91	MOCA BROWN CES1054-E02
			H	DESERT GOLD CES1054-D92	DESERT GOLD CES1054-E03
			J	ARCTIC BLUE CES1054-D93	ARCTIC BLUE CES1054-E04
			K	COPPER BROWN II CES1054-E15	COPPER BROWN II CES1054-E18
			M	OLYMPIC BLUE CES1054-D94	OLYMPIC BLUE CES1054-E05
			N	BRIGHT BLUE CES1054-D95	BRIGHT BLUE CES1054-E06
			P	TOMATO RED CES1054-E10	TOMATO RED CES1054-E10
			Q	GLADE GREEN CES1054-D96	GLADE GREEN CES1054-E07
			R	VELVET BLACK CES1054-C52	VELVET BLACK CES1054-D15
			T	SEAL GRAY CES1054-D98	SEAL GRAY CES1054-D09
			U	ADOBE BEIGE CES1054-D53	ADOBE BEIGE CES1054-D60
			V	MOSS GREEN CES1054-D97	MOSS GREEN CES1054-E08
			Y	DARK BLUE CES1054-E11	DARK BLUE CES1054-E11
INTERIOR PAINT COMMON TO ALL INTERIORS			NOTE: WHEN ORDERING PAINT SPECIFY CES1054 PART NUMBER. EXAMPLE: CES1054-E38 * USED ON FRENCH AIRCRAFT ONLY.		
BLACK SEMI-GLOSS (LACQUER) CES1054-156		DULL BLACK (LACQUER) CES1054-193			
CLOUD GREY (LACQUER) CES1054-E38					

152 & A152 Parts Catalog

1983 PAINT CODE CHART

15285595 THRU 15285833
F15201929 THRU F15201943

A1521015 THRU A1521025
FA1520383 THRU FA1520387

EXTERIOR PAINT

CODE	COLOR	TYPE	CESSNA NO.	DUPONT NO.
A	CHOCOLATE BROWN	MODIFIED URETHANE	CES1054-D90	IMRON 74121U
B	FLAG RED	MODIFIED URETHANE	CES1054-C43	IMRON 43805
C	MAROON	MODIFIED URETHANE	CES1054-D47	IMRON 143UH
D	MIDNIGHT RED	MODIFIED URETHANE	CES1054-D71	IMRON 4990U
E	SIGNAL ORANGE II	MODIFIED URETHANE	CES1054-E16	IMRON 60659U
F	SUNBURST YELLOW	MODIFIED URETHANE	CES1054-D89	IMRON 7275U
G	MOCHA BROWN	MODIFIED URETHANE	CES1054-D91	IMRON 24546U
H	DESERT GOLD	MODIFIED URETHANE	CES1054-D92	IMRON 29056U
J	ARCTIC BLUE	MODIFIED URETHANE	CES1054-D93	IMRON 2063UH
K	COPPER BROWN II	MODIFIED URETHANE	CES1054-E15	IMRON 29607U
M	OLYMPIC BLUE	MODIFIED URETHANE	CES1054-D94	IMRON 7576U
N	BRIGHT BLUE	MODIFIED URETHANE	CES1054-D95	IMRON 78387U
Q	GLADE GREEN	MODIFIED URETHANE	CES1054-D96	IMRON 7666U
R	VELVET BLACK	MODIFIED URETHANE	CES1054-C52	IMRON 99U
T	SEAL GRAY	MODIFIED URETHANE	CES1054-D98	IMRON 23947U
U	ADOBE BEIGE	MODIFIED URETHANE	CES1054-D53	IMRON 78390U
V	MOSS GREEN	MODIFIED URETHANE	CES1054-D97	IMRON 80334U
W	VESTAL WHITE	MODIFIED URETHANE	CES1054-C53	IMRON 45414
A	CHOCOLATE BROWN	MODIFIED URETHANE *	CES1054-E01	*
B	FLAG RED	MODIFIED URETHANE *	CES1054-D14	*
C	MAROON	MODIFIED URETHANE *	CES1054-D54	*
D	MIDNIGHT RED	MODIFIED URETHANE *	CES1054-D78	*
E	SIGNAL ORANGE II	MODIFIED URETHANE *	CES1054-E17	*
F	SUNBURST YELLOW	MODIFIED URETHANE *	CES1054-D99	*
G	MOCHA BROWN	MODIFIED URETHANE *	CES1054-E02	*
H	DESERT GOLD	MODIFIED URETHANE *	CES1054-E03	*
J	ARCTIC BLUE	MODIFIED URETHANE *	CES1054-E04	*
K	COPPER BROWN II	MODIFIED URETHANE *	CES1054-E18	*
M	OLYMPIC BLUE	MODIFIED URETHANE *	CES1054-E05	*
N	BRIGHT BLUE	MODIFIED URETHANE *	CES1054-E06	*
Q	GLADE GREEN	MODIFIED URETHANE *	CES1054-E07	*
R	VELVET BLACK	MODIFIED URETHANE *	CES1054-D15	*
T	SEAL GRAY	MODIFIED URETHANE *	CES1054-D09	*
U	ADOBE BEIGE	MODIFIED URETHANE *	CES1054-D60	*
V	MOSS GREEN	MODIFIED URETHANE *	CES1054-E08	*
W	VESTAL WHITE	MODIFIED URETHANE *	CES1054-C53	*

NOTE: *USED ON FRENCH AIRCRAFT ONLY.

INTERIOR PAINT

COLOR	TYPE	CESSNA NO.	DUPONT NO.
CLOUD GRAY	MODIFIED URETHANE	CES1054-E77	IMRON W8270U
BLACK SEMI-GLOSS	LACQUER	CES1054-156	
DULL BLACK	LACQUER	CES1054-196	

NOTE: WHEN ORDERING PAINT SPECIFY CES1054 PART NUMBER EXAMPLE: CES1054-156

152 & A152 Parts Catalog

1984 PAINT CODE CHART

15285834 THRU 15285939

A1521026 THRU A1521027

F15201944 THRU F15201952

EXTERIOR PAINT

CODE	COLOR	TYPE	CESSNA NO.	DUPONT NO.
A	CAMEL TAN	MODIFIED URETHANE	CES1054-E26	IMRON 96939U
B	FLAG RED	MODIFIED URETHANE	CES1054-C43	IMRON 43805
C	MAROON	MODIFIED URETHANE	CES1054-D47	IMRON 143UH
D	NAVY BLUE (ALT. NO. 2)	MODIFIED URETHANE	CES1054-E34	IMRON 63203U
E	SIGNAL ORANGE II	MODIFIED URETHANE	CES1054-E16	IMRON 60659UH
F	SUNBURST YELLOW	MODIFIED URETHANE	CES1054-D89	IMRON 7275U
G	MOCHA BROWN	MODIFIED URETHANE	CES1054-D91	IMRON 24546U
H	HONEY GOLD	MODIFIED URETHANE	CES1054-E24	IMRON 27271U
J	DEEP BROWN	MODIFIED URETHANE	CES1054-E28	IMRON 74121U
M	OLYMPIC BLUE	MODIFIED URETHANE	CES1054-D94	IMRON 7576U
N	BRIGHT BLUE	MODIFIED URETHANE	CES1054-D95	IMRON 78387U
Q	AUGUSTA GREEN	MODIFIED URETHANE	CES1054-E30	IMRON 1650U
R	VELVET BLACK	MODIFIED URETHANE	CES1054-C52	IMRON 99U
T	SEAL GRAY	MODIFIED URETHANE	CES1054-D98	IMRON 23947U
V	DARK GREEN	MODIFIED URETHANE	CES1054-E32	IMRON 65541UH
				PRATT & LAMBERT NO.
U	WIMBLEDON WHITE	MODIFIED URETHANE	CES1054-E49	ENFLEX III 570-603
W	VESTAL WHITE	MODIFIED URETHANE	CES1054-C53	ENFLEX III 570-850
A	CAMEL TAN	MODIFIED URETHANE *	CES1054-E27	*
B	FLAG RED	MODIFIED URETHANE *	CES1054-D14	*
C	MAROON	MODIFIED URETHANE *	CES1054-D54	*
D	NAVY BLUE (ALT. NO. 2)	MODIFIED URETHANE *	CES1054-E35	*
E	SIGNAL ORANGE II	MODIFIED URETHANE *	CES1054-E17	*
F	SUNBURST YELLOW	MODIFIED URETHANE *	CES1054-D99	*
G	MOCHA BROWN	MODIFIED URETHANE *	CES1054-E02	*
H	HONEY GOLD	MODIFIED URETHANE *	CES1054-E25	*
J	DEEP BROWN	MODIFIED URETHANE *	CES1054-E29	*
M	OLYMPIC BLUE	MODIFIED URETHANE *	CES1054-E05	*
N	BRIGHT BLUE	MODIFIED URETHANE *	CES1054-E06	*
Q	AUGUSTA GREEN	MODIFIED URETHANE *	CES1054-E31	*
R	VELVET BLACK	MODIFIED URETHANE *	CES1054-D15	*
T	SEAL GRAY	MODIFIED URETHANE *	CES1054-D09	*
U	WIMBLEDON WHITE	MODIFIED URETHANE *	CES1054-E49	*
V	DARK GREEN	MODIFIED URETHANE *	CES1054-E33	*
W	VESTAL WHITE	MODIFIED URETHANE *	CES1054-C53	*

NOTE: *USED ON FRENCH AIRCRAFT ONLY.

INTERIOR PAINT

COLOR	TYPE	CESSNA NO.	DUPONT NO.
CLOUD GRAY	MODIFIED URETHANE	CES1054-E77	IMRON W8270U
BLACK SEMI-GLOSS	LACQUER	CES1054-156	
DULL BLACK	LACQUER	CES1054-196	

NOTE: WHEN ORDERING PAINT SPECIFY CES1054 PART NUMBER EXAMPLE: CES1054-156

152 & A152 Parts Catalog

1985 PAINT CODE CHART

15285940 & ON

A1521028 & ON

EXTERIOR PAINT

[illegible]

INTERIOR PAINT

COLOR	TYPE	CESSNA NO.	DUPONT NO.
CLOUD GRAY	MODIFIED URETHANE	CES1054-E77	IMRON W8270U
BLACK SEMI-GLOSS	LACQUER	CES1054-156	
DULL BLACK	LACQUER	CES1054-196	

NOTE: WHEN ORDERING PAINT SPECIFY CES1054 PART NUMBER EXAMPLE: CES1054-156

152 & A152 Parts Catalog

Upholstery & Interior Trim

152 & A152 Parts Catalog


UPHOLSTERED PARTS - HOW TO ORDER

1978 MODEL YEAR THRU 1980 MODEL YEAR

PARTS MARKED WITH # FOLLOWING THE PART NUMBER REQUIRE A SECOND DASH NUMBER FOR COLOR & MATERIAL. (BE SURE TO SPECIFY SERIAL NUMBER OF AIRCRAFT)


HOW TO DETERMINE 2nd DASH NUMBER

1. Find part number of desired part in catalog.
2. Refer to "FINISH & TRIM" plate, in the airplane, for your "Year Code" and "Interior Color Code."



3. Add the "Year Code" and "Interior Color Code," to the part number from catalog.

EXAMPLE OF COMPLETE NUMBER

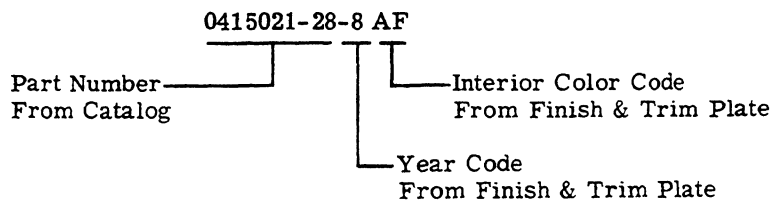

1981 MODEL YEAR & ON

PARTS MARKED WITH A # FOLLOWING THE PART NUMBER NEED ONLY BE ACCOMPANIED BY THE AIRCRAFT SERIAL NUMBER.

152 & A152 Parts Catalog

INTERIOR PAINTED OR PLASTIC PARTS HOW TO ORDER

1978 MODEL YEAR THRU 1980 MODEL YEAR


PARTS MARKED WITH < FOLLOWING THE PART NUMBER REQUIRE A SECOND DASH NUMBER FOR COLOR. (BE SURE TO SPECIFY SERIAL NUMBER OF AIRCRAFT)

HOW TO DETERMINE 2nd DASH NUMBER

To obtain second dash number use of correct table, for your model year, is required.

To use table,

1. Find part number of desired part in catalog.
2. Refer to the "Finish and Trim" plate, in the airplane, for your "Interior Color Code."



3. Locate part number from catalog in table.
4. Add dash number for color that appears under your "Interior Color Code."

INTERIOR PAINTED OR PLASTIC PARTS 1978 MODEL YEAR		INTERIOR COLOR CODE							
15279400 & ON A1520735 & ON		P15201449 & ON P15200337 & ON							
PART NUMBER	PART NAME	AF	BA	BF	CF	EC	GF	HF	
0400134-5	FRAME ASSY	533	533	533	533	533	533	533	
0400138-1	SUPPORT ASSY - BACKREST LH	533	533	533	533	533	533	533	
0400138-2	SUPPORT ASSY - BACKREST RH	533	533	533	533	533	533	533	
0411481	STRIP - WINDSHIELD	531	531	531	531	531	531	531	
0411590-5	SHIELD - RUDDER BAR LH	156	156	156	156	156	156	156	
0411836-3	SHIELD - RUDDER BAR RH	156	156	156	156	156	156	156	
0411870	STRIP - WINDSHIELD SIDE	531	531	531	531	531	531	531	
0411921-1	SHIELD - RUDDER BAR RH	156	156	156	156	156	156	156	
0413463-1	COVER ASSY - CONTROL	B40	B40	B40	B40	B40	B40	B40	
0413463-1	COVER - ACCELEROMETER	279	279	279	279	279	279	279	
0413544-9	COVER ASSY - SHOCK PANEL	A59	A59	A59	A59	A59	A59	A59	
0413544-11	COVER - STATIONARY PANEL	A59	A59	A59	A59	A59	A59	A59	

EXAMPLES OF COMPLETE NUMBER

0413463-1 -B40

Part Number
From Catalog

2nd Dash Number
From Table
(Interior Color Code AF)

1981 MODEL YEAR & ON

SECOND DASH NUMBERS, WHEN NEEDED, ARE INCLUDED IN PART NUMBER COLUMN OF APPLICABLE PARTS LISTING IN CATALOG.

152 & A152 Parts Catalog

INTERIOR PAINTED OR PLASTIC PARTS 1978 MODEL YEAR		INTERIOR COLOR CODE (From Finish and Trim Plate)						
15279406 THRU 15282031 F15201429 THRU F15201528		A1520735 THRU A1520808 FA1520337 THRU FA1520347						
PART NUMBER	PART NAME	AF AC	BA	BF BC	CF CC	EC	GF GC	HF HC
0400134-5	FRAME ASSY	533	533	533	533	533	533	533
0400138-1	SUPPORT ASSY - BACKREST LH	533	533	533	533	533	533	533
0400138-2	SUPPORT ASSY - BACKREST RH	533	533	533	533	533	533	533
0411481	STRIP - WINDSHIELD	531	531	531	531	531	531	531
0411599-5	SHIELD - RUDDER BAR LH	156	156	156	156	156	156	156
0411870	STRIP - WINDSHIELD SIDE	531	531	531	531	531	531	531
0411971-1	SHIELD - RUDDER BAR RH	156	156	156	156	156	156	156
0413463-5	COVER ASSY - CONTROL	B40	C21	C21	C25	279	C33	A84
0413470-1	COVER - ACCELEROMETER	279	279	279	279	279	279	279
0413544-9	COVER ASSY - SHOCK PANEL	A59	A59	A59	A59	A59	A59	A59
0413544-11	COVER - STATIONARY PANEL	A59	A59	A59	A59	A59	A59	A59
0413546-13	MAP CASE ASSY	B40	C21	C21	C25	279	C33	A84
0413546-14	DOOR ASSY - MAP CASE	B40	C21	C21	C25	279	C33	A84
0413554-1	COVER ASSY - RADIO CUTOFF RH	A59	A59	A59	A59	A59	A59	A59
0413554-4	COVER ASSY - BACK UP ALTIMETER	A59	A59	A59	A59	A59	A59	A59
0413559-2	COVER - LOWER INSTRUMENT PANEL	B40	C21	C21	C25	279	C33	A84
0414018-2	RETAINER - HEADLINER	531	531	531	531	531	531	531
0414018-4	RETAINER - HEADLINER	531	531	531	531	531	531	531
0415025-1	INSERT - EYEBROW	A59	A59	A59	A59	A59	A59	A59
0415025-2	INSERT - EYEBROW	A59	A59	A59	A59	A59	A59	A59

152 & A152 Parts Catalog

INTERIOR PAINTED OR PLASTIC PARTS 1979 MODEL YEAR		INTERIOR COLOR CODE (From Finish and Trim Plate)							
15282032 THRU 15283591 F15201529 THRU F15201673		A1520809 THRU A1520878 FA1520348 THRU FA1520357							
PART NUMBER	PART NAME	AF AC	BA	BF BC	CF CC	DF DC	EC	GC	HF HC
0400134-5	FRAME ASSY	533		533	533	533	533	533	533
0400138-1	SUPPORT ASSY - BACKREST LH	533		533	533	533	533	533	533
0400138-2	SUPPORT ASSY - BACKREST RH	533		533	533	533	533	533	533
0411481	STRIP - WINDSHIELD	531	531	531	531	531	531	531	531
0411599-5	SHIELD - RUDDER BAR LH	156	156	156	156	156	156	156	156
0411870	STRIP - WINDSHIELD SIDE	531	531	531	531	531	531	531	531
0411971-1	SHIELD - RUDDER BAR RH	156	156	156	156	156	156	156	156
0413463-5	COVER ASSY - CONTROL	B40	C21	C21	D30	C82	279	D22	A84
0413470-1	COVER - ACCELEROMETER	279	279	279	279	279	279	279	279
0413546-13	MAP CASE ASSY	B40	C21	C21	D30	C82	279	D22	A84
0413546-14	DOOR ASSY - MAP CASE	B40	C21	C21	D30	C82	279	D22	A84
0413554-1	COVER ASSY - RADIO CUTOUT RH	A59	A59	A59	A59	A59	A59	A59	A59
0413554-6	COVER ASSY - BACK UP ALTIMETER	A59	A59	A59	A59	A59	A59	A59	A59
0413559-3	COVER - LOWER INSTRUMENT PANEL	B40	C21	C21	D30	C82	279	D22	A84
0413574-1	COVER ASSY - SHOCK PANEL	A59	A59	A59	A59	A59	A59	A59	A59
0413574-2	COVER - STATIONARY PANEL	A59	A59	A59	A59	A59	A59	A59	A59
0413577-3	COVER ASSY - POSTLIGHTED LH	A59	A59	A59	A59	A59	A59	A59	A59
0413577-4	COVER ASSY - POSTLIGHTED RH	A59	A59	A59	A59	A59	A59	A59	A59
0413577-6	COVER ASSY - POSTLIGHTED RH	A59	A59	A59	A59	A59	A59	A59	A59
0414018-2	RETAINER - HEADLINER	531	531	531	531	531	531	531	531
0414018-4	RETAINER - HEADLINER	531	531	531	531	531	531	531	531
0415033-1	RETAINER ASSY - BAGGAGE	B40	C21	C21	D30	C82	279	D22	A84

152 & A152 Parts Catalog

INTERIOR PAINTED OR PLASTIC PARTS		INTERIOR COLOR CODE							
1980 MODEL YEAR		(From Finish and Trim Plate)							
15283592 THRU 15284541 F15201674 THRU F15201808		A1520879 THRU A1520943 FA1520358 THRU FA1520372							
PART NUMBER	PART NAME	1	2	3	4	5	6	7	8
0400134-5	FRAME ASSY.	533		533	533	533	533	533	533
0400138-1	SUPPORT ASSY - BACKREST LH	533		533	533	533	533	533	533
0400138-2	SUPPORT ASSY - BACKREST RH	533		533	533	533	533	533	533
0411481	STRIP - WINDSHIELD	531	531	531	531	531	531	531	531
0411599-5	SHIELD - RUDDER BAR LH	156	156	156	156	156	156	156	156
0411870	STRIP - WINDSHIELD SIDE	531	531	531	531	531	531	531	531
0411971-1	SHIELD - RUDDER BAR RH	156	156	156	156	156	156	156	156
0413463-5	COVER ASSY - CONTROL	279	279	279	279	279	279	279	279
0413470-1	COVER - ACCELEROMETER	279	279	279	279	279	279	279	279
0413546-13	MAP CASE ASSY	C12	C12	C12	C12	C12	C12	C12	C12
0413546-14	DOOR ASSY - MAP CASE	C12	C12	C12	C12	C12	C12	C12	C12
0413554-1%	COVER ASSY - RADIO CUTOFF RH	A59	A59	A59	A59	A59	A59	A59	A59
0413554-6%	COVER ASSY - BACK UP ALTIMETER	A59	A59	A59	A59	A59	A59	A59	A59
0413554-7%	COVER - EGT & ACCELEROMETER	A59	A59	A59	A59	A59	A59	A59	A59
0413574-1%	COVER ASSY - SHOCK PANEL	A59	A59	A59	A59	A59	A59	A59	A59
0413574-2%	COVER - STATIONARY PANEL	A59	A59	A59	A59	A59	A59	A59	A59
0413577-3%	COVER ASSY - POSTLIGHTED LH	A59	A59	A59	A59	A59	A59	A59	A59
0413577-4%	COVER ASSY - POSTLIGHTED RH	A59	A59	A59	A59	A59	A59	A59	A59
0413577-6%	COVER ASSY - POSTLIGHTED RH	A59	A59	A59	A59	A59	A59	A59	A59
0413577-11%	COVER ASSY - POSTLIGHTED RH	A59	A59	A59	A59	A59	A59	A59	A59
0414018-2	RETAINER - HEADLINER	531	531	531	531	531	531	531	531
0414018-5	RETAINER - HEADLINER	531	531	531	531	531	531	531	531
0415033-1	RETAINER ASSY - BAGGAGE	532	532	532	532	532	532	532	532

% THESE COVER ASSEMBLIES ARE ALSO
AVAILABLE IN OPTIONAL BLACK 279
MATERIAL.

* COLUMN 1 IS APPLICABLE TO: AF & AC
COLUMN 2 IS APPLICABLE TO: BA
COLUMN 3 IS APPLICABLE TO: BF & BC
COLUMN 4 IS APPLICABLE TO: CF & CC
COLUMN 5 IS APPLICABLE TO: DF & DC
COLUMN 6 IS APPLICABLE TO: EC
COLUMN 7 IS APPLICABLE TO: GF & GC
COLUMN 8 IS APPLICABLE TO: HF & HC

Alphabetical Index

152 & A152 Parts Catalog

ALPHABETICAL INDEX

NOMENCLATURE	FIGURE	NOMENCLATURE	FIGURE
A		B	
ABRASION BOOT	18	BAFFLE SEAL	66
ABRASION BOOT	18A	BAFFLES ENGINE	66
ABRASION BOOT	19	BAGGAGE COMPARTMENT PANEL	45
ABRASION BOOT	19A	BAGGAGE COMPARTMENT PANEL	45A
ACCELEROMETER	52	BAGGAGE NET	45
ACCELEROMETER	52A	BAGGAGE NET	45A
ACCELEROMETER	52B	BAGGAGE PLACARD	2
ACCESSORY KITS-SEE ACCY KIT CATALOG		BAGGAGE PLACARD	2A
ADAPTER OIL FILTER	84	BARREL SHIMMY DAMPENER	37
ADHESIVE GASKET	1	BARREL TURNBUCKLE	72
ADJUSTABLE SEAT VERTICAL	48	BARREL TURNBUCKLE	72A
ADJUSTABLE SEAT VERTICAL	48A	BARREL TURNBUCKLE	75
ADJUSTABLE SEAT VERTICAL	50	BARREL TURNBUCKLE	75A
ADJUSTABLE SEAT VERTICAL	50A	BARREL TURNBUCKLE	76
AFT CARPET	45	BATTERY	86
AFT CARPET	45A	BATTERY BOX	24
AFT TAILCONE	31	BATTERY BOX LID	24
AILERON	15	BATTERY BOX TRAY	24
AILERON BALANCE WEIGHT	15	BATTERY CABLE	86
AILERON BELLCRANK	15	BATTERY CONTACTOR	86
AILERON CABLE	72	BATTERY CONTACTOR DIODE	86
AILERON CABLE	72A	BATTERY DRAIN TUBE	86
AILERON CONTROL SYSTEM	72	BATTERY GROUND CABLE	86
AILERON CONTROL SYSTEM	72A	BATTERY GROUND STRAP	86
AILERON HINGE	15	BATTERY MANIFOLD	86
AILERON PULLEY BRACKET	4	BATTERY TRAY	24
AILERON PULLEY BRACKET	5	BEACON LIGHT FLASHER	89
AILERON PULLEY BRACKET	6	BEACON LIGHT FLASHING	89
AILERON PULLEY BRACKET	7	BELLCRANK & BRACKET ELEVATOR	25
AILERON PUSH PULL ROD	15	BELLCRANK AILERON	15
AILERON RIB	15	BELLCRANK ELEVATOR	21
AIR OUTLET CAP	67	BELLCRANK ELEVATOR	21A
AIR OUTLET CAP	67A	BELLCRANK ELEVATOR	75
AIRBOX CARBURETOR	62	BELLCRANK ELEVATOR	75A
AIRCRAFT IDENTIFICATION NAMEPLATE	24	BELLCRANK ELEVATOR CONTROL	70
AIRSPEED INDICATOR	52	BELLCRANK FLAP	74
AIRSPEED INDICATOR	52A	BELT ALTERNATOR	86A
AIRSPEED INDICATOR	52B	BELT SEAT	56
AIRSPEED INDICATOR	77	BLIND ENCODER	78
AIRSPEED INDICATOR	78	BLOCK FUSELAGE SPAR	30
ALTERNATOR	63	BOOT ABRASION	18
ALTERNATOR	86A	BOOT ABRASION	18A
ALTERNATOR BELT	86A	BOOT ABRASION	19
ALTERNATOR CONTROL UNIT	63	BOOT ABRASION	19A
ALTERNATOR CONTROL UNIT	86	BOTTOM SEAT	47
ALTIMETER	52	BOTTOM SEAT	48
ALTIMETER	52A	BOTTOM SEAT	48A
ALTIMETER	52B	BOTTOM SEAT	49
ALTIMETER	77	BOTTOM SEAT	50
ALTIMETER	78	BOTTOM SEAT	50A
ALTIMETER DUAL	78	BOTTOM SEAT	51
ALTIMETER ENCODING	78	BOWL FUEL STRAINER	83
AMMETER	52	BOX BATTERY	24
AMMETER	52A	BRAKE & RUDDER RETURN SPRING	68
AMMETER	52B	BRAKE CYLINDER	39
ANCHOR BRAKE CYLINDER	27	BRAKE CYLINDER	40
ANCHOR BRAKE CYLINDER	27A	BRAKE CYLINDER ANCHOR	27
APPROACH PLATE HOLDER	70	BRAKE CYLINDER ANCHOR	27A
ARMREST	41	BRAKE CYLINDER BRACKET	68
ASH RECEIVER	41	BRAKE DISC	39
ASH RECEIVER	45A	BRAKE DISC	40
ASSIST HANDLE	41	BRAKE FAIRING	38
AUTO PILOT-SEE ELECTRONICS MANUAL		BRAKE HOSE	80
AUXILIARY SEAT	51	BRAKE LINE	38
AXLE	38	BRAKE LINE	80
AXLE MAIN LANDING GEAR	38	BRAKE LINING	39
		BRAKE LINING	40
		BRAKE MAIN GEAR	39

ALPHABETICAL INDEX

NOMENCLATURE	FIGURE	NOMENCLATURE	FIGURE
B (Cont)		C (Cont)	
BRAKE MAIN GEAR	40	CABIN HEATING	67A
BRAKE SYSTEM.	80	CABIN HEATING & VENTILATING SYSTEM. .	67
BREAKER 20 AMP CIRCUIT.	53	CABIN HEATING & VENTILATING SYSTEM. .	67A
BREAKER 60 AMP CIRCUIT.	53	CABIN SOUNDPROOFING	46
BULB ALSO SEE LIGHTS.		CABIN TOP	25
BULB COMPASS.	57	CABIN TOP & FIREWALL UPHOLSTERY . . .	44
BULB FLASHING BEACON.	89	CABIN TOP SKYLIGHT.	25
BULB INSTRUMENT CLUSTER	53A	CABIN TOP UPHOLSTERY.	44
BULB INSTRUMENT CLUSTER	53B	CABIN UPHOLSTERY.	45
BULB INSTRUMENT LIGHT	87	CABIN UPHOLSTERY.	45A
BULB LANDING LIGHT.	88	CABLES-CONTROL-SEE APPLICABLE SYSTEM.	
BULB MAP LIGHT.	90	CAM DOOR LOCK	41
BULB MAP LIGHT.	91	CAM RECLINING SEAT.	47
BULB OVERHEAD LIGHT	87	CAM RECLINING SEAT.	48
BULB POST LIGHT	53A	CAM RECLINING SEAT.	48A
BULB POST LIGHT	53B	CAM RECLINING SEAT.	49
BULK ITEMS-LIST OF.		CAM RECLINING SEAT.	50
BULKHEAD CONTROL TEE.	27	CAM RECLINING SEAT.	50A
BULKHEAD CONTROL TEE.	27A	CAP AIR OUTLET.	67
BULKHEAD FLOORBOARD	27	CAP AIR OUTLET.	67A
BULKHEAD FLOORBOARD	27A	CAP FUEL TANK	12
BULKHEAD FRONT DOORPOST	28	CAP FUEL TANK	13
BULKHEAD FRONT DOORPOST	29	CAP MAIN GEAR HUB	38
BULKHEAD MAIN LANDING GEAR.	26	CAP NOSE.	33
BULKHEAD REAR DOORPOST.	30	CAP NOSE.	61
BULKHEAD SPINNER.	60	CAP NOSE.	61A
BULKHEAD TANK WELL.	6	CAP NOSE.	61B
BULKHEAD TANK WELL.	7	CAP NOSE.	61C
BUS BAR	53	CAP NOSE WHEEL HUB.	33
BUTTON PITOT STATIC LINE.	27	CAP UPPER NOSE.	61
BUTTON PITOT STATIC LINE.	27A	CAP UPPER NOSE.	61A
BUTTON PITOT STATIC LINE.	77	CAP UPPER NOSE.	61B
		CAP UPPER NOSE.	61C
C		CAPACITOR	52
CABIN AIR CONTROL	52A	CARB HEAT SHROUD.	62
CABIN AIR CONTROL	52B	CARBURETOR.	63
CABIN AIR CONTROL	67	CARBURETOR AIR FILTER	62
CABIN AIR CONTROL	67A	CARBURETOR AIR FILTER	63
CABIN AIR OUTLET.	67	CARBURETOR AIRBOX	62
CABIN AIR CUTLET.	67A	CARBURETOR AIRBOX GASKET.	62
CABIN AIR VENT ELBOW.	8	CARBURETOR HEAT CONTROL	52
CABIN AIR VENT ELBOW.	9	CARBURETOR HEAT CONTROL	52A
CABIN AIR VENT ELBOW.	67	CARBURETOR HEAT CONTROL	52B
CABIN AIR VENT SCOOP.	8	CARBURETOR HEAT CONTROL	62
CABIN AIR VENT SCOOP.	9	CARGO TIE DOWN LATCH.	45
CABIN DOOR.	41	CARGO TIE DOWN LATCH.	45A
CABIN DOOR CATCH.	4	CARPET.	45
CABIN DOOR CATCH.	5	CARPET.	45A
CABIN DOOR CATCH.	6	CARPET AFT.	45
CABIN DOOR CATCH.	7	CARPET AFT.	45A
CABIN DOOR HANDLE	41	CASE MAP.	54
CABIN DOOR LATCH.	42	CASE MAP.	54A
CABIN DOOR LOCK	41	CATALOG-HOW TO USE-SEE INTRODUCTION .	
CABIN DOOR WEDGE.	41	CATCH CABIN DOOR.	4
CABIN DOOR WINDOW.	41	CATCH CABIN DOOR.	5
CABIN ENTRANCE STEP	38	CATCH CABIN DOOR.	6
CABIN HEAT CONTROL.	52A	CATCH CABIN DOOR.	7
CABIN HEAT CONTROL.	52B	CENTER FLOORBOARD	25
CABIN HEAT CONTROL.	67	CENTER STRIP COVER.	44
CABIN HEAT CONTROL.	67A	CHAIN CONTROL Y	70
CABIN HEATER DEFLECTOR.	44	CHAIN ELEVATOR TRIM	76
CABIN HEATER DEFLECTOR.	67	CHAIN PARKING BRAKE	80
CABIN HEATER VALVE.	67	CHECK LIST PILOT.	2
CABIN HEATER VALVE.	67A	CHECK VALVE MANIFOLD.	85B
CABIN HEATING	67	CIGAR LIGHTER	52
		CIGAR LIGHTER	52A
		CIGAR LIGHTER FUSE.	52
		CIGAR LIGHTER FUSE.	52A

152 & A152 Parts Catalog

ALPHABETICAL INDEX

NOMENCLATURE	FIGURE	NOMENCLATURE	FIGURE
C (Cont)		D (Cont)	
CIGAR LIGHTER KNOB.	52	DEADENER SOUND.	1
CIGAR LIGHTER KNOB.	52A	DECALS-SEE PLACARDS	
CIGAR LIGHTER RESISTOR.	52	DECK SKIN	27
CIGAR LIGHTER RESISTOR.	52A	DECK SKIN	27A
CIRCUIT BREAKER	52	DEFLECTOR	67A
CIRCUIT BREAKER	52A	DEFLECTOR CABIN HEATER.	44
CIRCUIT BREAKER	53	DEFLECTOR CABIN HEATER.	67
CIRCUIT BREAKER 20 AMP.	53	DEFROSTER NOZZLE.	27
CIRCUIT BREAKER 60 AMP.	53	DEFROSTER NOZZLE.	27A
CLOCK	52A	DEFROSTER NOZZLE.	67
CLOCK DIGITAL	52B	DEFROSTER NOZZLE.	67A
CLOCK ELECTRIC.	52	DIGITAL CLOCK	52B
CLOCK ELECTRIC.	52A	DIMMING TRANSISTORIZED LIGHT.	86
CLOCK ELECTRIC.	52B	DIODE BATTERY CONTACTOR	86
CLOCK FUSE.	86	DIODE EXTERNAL POWER.	86
CLUSTER INSTRUMENT.	52	DIRECTIONAL GYRC.	52
CLUSTER INSTRUMENT.	52A	DIRECTIONAL GYRC.	52A
CLUSTER INSTRUMENT.	52B	DIRECTIONAL GYRC.	52B
CLUTCH ROTARY	25	DIRECTIONAL GYRC.	85
CLUTCH ROTARY	30	DIRECTIONAL GYRC.	85A
CLUTCH ROTARY DOOR LATCH.	25	DISC BRAKE.	39
COAT HANGER	44	DISC BRAKE.	40
COLD AIR INLET.	67	DISCHARGER STATIC	59
COLD AIR INLET.	67A	DOOR CABIN.	41
COLD AIR INLET DOOR	67	DOOR CABIN LH	41
COLD AIR INLET DOOR	67A	DOOR CABIN RH	41
COMPASS	57	DOOR COLD AIR INLET	67
COMPASS BULB.	57	DOOR COLD AIR INLET	67A
COMPONENTS & ACCESSORIES ENGINE	63	DOOR COWL ACCESS.	61
COMPONENTS ENGINE	63	DOOR COWL ACCESS.	61A
CONNECTOR PITOT TUBE.	77	DOOR COWL ACCESS.	61B
CONTACTOR BATTERY	86	DOOR COWL ACCESS.	61C
CONTACTOR STARTER	86	DOOR GUIDE.	25
CONTROL CABLES-SEE INDIVIDUAL SYSTEM.		DOOR GUIDE.	30
CONTROL SYSTEMS-SEE INDIVID SYSTEMS .		DOOR JAMB	25
CONTROL WHEEL SEE WHEEL-CONTROL		DOOR LATCH.	42
CONTROL-PUSHPULL-SEE ENGINE INSTL.		DOOR LATCH BRACKET.	41
CONTROL-PUSHPULL-SEE INSTRUMENT PANEL		DOOR LATCH CABIN.	42
COOLER OIL.	63A	DOOR LATCH HANDLE	42
CORD TOW HOOK	55	DOOR MAP CASE	54
COWL ACCESS DOOR.	61	DOOR MAP CASE	54A
COWL ACCESS DOOR.	61A	DOOR RELEASE EMERGENCY.	43
COWL ACCESS DOOR.	61B	DOOR SILL	25
COWL ACCESS DOOR.	61C	DOOR WEDGE.	41
COWL DOOR LATCH	61	DOORPOST BULKHEAD REAR.	30
COWL DOOR LATCH	61A	DOORPOST FRONT.	28
COWL DOOR LATCH	61B	DOORPOST FRONT.	29
COWL DOOR LATCH	61C	DORSAL.	22
COWL ENGINE	61	DORSAL FIN FAIRING.	22
COWL ENGINE	61A	DUAL ALTIMETER.	78
COWL ENGINE	61B		
COWL ENGINE	61C		
COWL LOWER.	61	E	
COWL UPPER.	61		
COWL UPPER.	61A	ELBOW CABIN AIR VENT.	8
COWL UPPER.	61B	ELBOW CABIN AIR VENT.	9
COWL UPPER.	61C	ELBOW CABIN AIR VENT.	67
CUP FUEL SAMPLER.	14	ELECTRIC CLOCK.	52
CYLINDER BRAKE.	39	ELECTRIC CLOCK.	52A
CYLINDER BRAKE.	40	ELECTRIC CLOCK.	52B
CYLINDER MASTER BRAKE	69	ELECTRICAL EQUIPMENT.	86
CYLINDER MASTER BRAKE	69A	ELECTRONIC EQUIP-SEE ELECT MANUAL	
		ELEMENT FILTER.	85
		ELEMENT FILTER.	85A
		ELEMENT RELIEF VALVE FILTER	85
		ELEMENT RELIEF VALVE FILTER	85A
		ELEMENT VACUUM AIR FILTER	85
D			
DAMPENER SHIMMY	37		

152 & A152 Parts Catalog

ALPHABETICAL INDEX

NOMENCLATURE	FICHE	FIGURE	NOMENCLATURE	FICHE	FIGURE
E (Cont)			E (Cont)		
ELEMENT VACUUM AIR FILTER		85A	EYEBOLT		45
ELEMENT VACUUM FILTER		85	EYEBOLT		45A
ELEMENT VACUUM FILTER		85A	EYEBOLT		56
ELEVATOR		21	EYEBOLT MOORING		17
ELEVATOR		21A	EYEBOLT MOORING		31
ELEVATOR BALANCE WEIGHT		21	EYEBROW INSTRUMENT PANEL		52
ELEVATOR BALANCE WEIGHT		21A			
ELEVATOR BELLCRANK		21	F		
ELEVATOR BELLCRANK		21A	FAIRING BRAKE		38
ELEVATOR BELLCRANK		75	FAIRING DORSAL FIN		22
ELEVATOR BELLCRANK		75A	FAIRING MAIN GEAR		38
ELEVATOR CONTROL BELLCRANK		70	FAIRING NOSE GEAR SPEED		33
ELEVATOR CONTROL CABLE		75	FAIRING SPEED		33
ELEVATOR CONTROL CABLE		75A	FAIRING STRUT		17
ELEVATOR CONTROL LINK		70	FAIRING WHEEL		38
ELEVATOR CONTROL SYSTEM		75	FAIRING WING		3
ELEVATOR CONTROL SYSTEM		75A	FELT GREASE SEAL		40
ELEVATOR TAB		21	FILTER CARBURETOR AIR		62
ELEVATOR TAB CONTROL BRACKET		31	FILTER CARBURETOR AIR		63
ELEVATOR TIP		21	FILTER ELEMENT		85
ELEVATOR TIP		21A	FILTER ELEMENT		85A
ELEVATOR TRIM CHAIN		76	FILTER ELEMENT RELIEF VALVE		85
ELEVATOR TRIM CONTROL		76	FILTER ELEMENT RELIEF VALVE		85A
ELEVATOR TRIM CONTROL SYSTEM		76	FILTER ELEMENT VACUUM		85
ELEVATOR TRIM TAB		20	FILTER ELEMENT VACUUM		85A
ELEVATOR TRIM TAB		21A	FILTER ELEMENT VACUUM AIR		85
ELEVATOR TRIM TAB ACTUATOR		20	FILTER ELEMENT VACUUM AIR		85A
ELT PLACARD		2A	FILTER FUEL STRAINER		83
EMBLEM CONTROL WHEEL		2	FILTER OIL		84
EMBLEM CONTROL WHEEL		2A	FILTER VACUUM AIR		85
EMERGENCY DCOR RELEASE		43	FILTER VACUUM AIR		85A
EMERGENCY RELEASE HANDLE		43	FIN ATTACH FITTING		22
ENCODER BLIND		78	FINISH & TRIM PLATE		2
ENCODING ALTIMETER		78	FINISH & TRIM PLATE		2A
ENGINE		62	FINISH & TRIM PLATE		24
ENGINE BAFFLES		66	FINISH & TRIM-HOW TO READ-PAGE III		
ENGINE COMPONENTS		63	FIRE EXTINGUISHER		59A
ENGINE COMPONENTS & ACCESSORIES		63	FIRE EXTINGUISHER BRACKET		59A
ENGINE COWL		61	FIREWALL		27
ENGINE COWL		61A	FIREWALL		27A
ENGINE COWL		61B	FIREWALL SHEET		27
ENGINE COWL		61C	FIREWALL SHEET		27A
ENGINE GROUND STRAP		62	FLAP		16
ENGINE MOUNT		62	FLAP ACTUATOR MOTOR		73
ENGINE MOUNT BRACKET		27	FLAP BELLCRANK		74
ENGINE MOUNT BRACKET		27A	FLAP CABLE		73
ENGINE MOUNT STRINGER		27	FLAP CONTROL BRACKET		16
ENGINE MOUNT STRINGER		27A	FLAP CONTROL BRACKET		74
ENGINE OIL PLACARD		2	FLAP CONTROL CABLE		74
ENGINE OIL PLACARD		2A	FLAP EXTENSION		16
EQUIPMENT ELECTRICAL		86	FLAP INDICATOR		74
EQUIPMENT FUSELAGE		55	FLAP LEVER		74
EQUIPMENT WINTERIZATION		61D	FLAP LEVER KNOB		74
EXHAUST GAS TEMPERATURE INDICATOR		52A	FLAP LIMIT SWITCH		73
EXHAUST GAS TEMPERATURE INDICATOR		52B	FLAP LIMIT SWITCH		74
EXHAUST GAS TEMPERATURE PROBE		52A	FLAP MOTOR HINGE		73
EXHAUST GAS TEMPERATURE PROBE		52B	FLAP POSITION INDICATOR		74
EXHAUST SYSTEM		64	FLAP PULLEY BRACKET		4
EXHAUST SYSTEM		64A	FLAP PULLEY BRACKET		5
EXHAUST SYSTEM		64B	FLAP PULLEY BRACKET		6
EXHAUST SYSTEM		65	FLAP PULLEY BRACKET		7
EXTENSION FLAP		16	FLAP PUSH PULL ROD		16
EXTENSION PEDAL		68	FLAP PUSH ROD		16
EXTENSION VALVE		33	FLAP SPAR		16
EXTENSION VALVE		38	FLAP SYSTEM ELECTRIC		73
EXTERNAL POWER DIODE		86			
EXTERNAL POWER FUSE		86			
EXTINGUISHER FIRE		59A			

152 & A152 Parts Catalog

ALPHABETICAL INDEX

NOMENCLATURE	FIGURE	NOMENCLATURE	FIGURE
F (Cont)		F (Cont)	
FLASHER BEACON LIGHT	89	FUEL TRANSMITTER GROUND STRAP	7
FLASHING BEACON BULB	89	FUEL TRANSMITTER GROUND STRAP	12
FLASHING BEACON LIGHT	89	FUEL TRANSMITTER GROUND STRAP	13
FLASHING BEACON RESISTOR	89	FUEL TRANSMITTER RESISTOR	12
FLASHING BEACON TIP	89	FUEL TRANSMITTER RESISTOR	13
FLCORBOARD	25	FUEL VALVE	14
FLCORBOARD	30	FUEL VENT VALVE	12
FLOORBOARD BULKHEAD	27	FUEL VENT VALVE	13
FLOORBOARD BULKHEAD	27A	FUSE CIGAR LIGHTER	52
FLCORBOARD CENTER	25	FUSE CIGAR LIGHTER	52A
FLCORBOARD FRONT	27	FUSE CLOCK	86
FLOORBOARD FRONT	27A	FUSE EXTERNAL POWER	86
FRONT & CENTER SECTION FUSELAGE	25	FUSE HOLDER CLOCK	86
FRONT DOORPOST	28	FUSE MAP LIGHT	90
FRONT DOORPOST	29	FUSELAGE	24
FRONT DOORPOST BULKHEAD	28	FUSELAGE	27
FRONT DOORPOST BULKHEAD	29	FUSELAGE	27A
FRONT DOORPOST SPAR	28	FUSELAGE EQUIPMENT	55
FRONT DOORPOST SPAR	29	FUSELAGE SPAR BLOCK	30
FRONT FLOORBOARD	27	FUSELAGE TAILCONE	30
FRONT FLOORBOARD	27A		
FRONT SECTION	27	G	
FRONT SECTION	27A	GAGE-SEE INDIVIDUAL LISTING	
FRONT SECTION FUSELAGE	27	GAS CAP-SEE FUEL CAP	
FRONT SECTION FUSELAGE	27A	GAS GAGE-SEE INSTRUMENT PANEL	
FUEL DRAIN VALVE	81	GASKET ADHESIVE	1
FUEL GAGE	52	GASKET CARBURETOR AIRBOX	62
FUEL GAGE	52A	GLARESHIELD	52A
FUEL GAGE	52B	GLARESHIELD	52B
FUEL GAGE ACCESS COVER	3	GLASS WINDOW	41
FUEL GAGE TRANSMITTER	12	GREASE SEAL FELT	35
FUEL GAGE TRANSMITTER	13	GREASE SEAL FELT	36
FUEL HOSE	1	GREASE SEAL FELT	39
FUEL LINE	81	GREASE SEAL FELT	40
FUEL PRIMER	52	GROUND SERVICE PLUG	86
FUEL PRIMER	52A	GROUND SERVICE PLUG BRACKET	86
FUEL PRIMER	52B	GROUND SERVICE PLUG RESISTOR	86
FUEL SAMPLER CUP	14	GROUND STRAP	12
FUEL SHUT OFF VALVE	82	GROUND STRAP	13
FUEL STRAINER	83	GROUND STRAP	52
FUEL STRAINER BOWL	83	GROUND STRAP	52A
FUEL STRAINER BRACKET	62	GROUND STRAP	86
FUEL STRAINER BRACKET	81	GUIDE DOOR	25
FUEL STRAINER DRAIN CONTROL	62	GUIDE DOOR	30
FUEL STRAINER FILTER	83	GYRO DIRECTIONAL	52
FUEL STRAINER TOP	83	GYRO DIRECTIONAL	52A
FUEL SYSTEM	81	GYRO DIRECTIONAL	52B
FUEL TANK	12	GYRO DIRECTIONAL	85
FUEL TANK	13	GYRO DIRECTIONAL	85A
FUEL TANK	14	GYRO HORIZON	52
FUEL TANK CAP	12	GYRO HORIZON	52A
FUEL TANK CAP	13	GYRO HORIZON	52B
FUEL TANK COVER	3	GYRO HORIZON	85
FUEL TANK DRAIN VALVE	14	GYRO HORIZON	85A
FUEL TANK SPACER	10		
FUEL TANK SPACER	11	H	
FUEL TANK STRAINER	81	HANDLE ASSIST	41
FUEL TANK STRAP	4	HANDLE CABIN DOOR	41
FUEL TANK STRAP	5	HANDLE DOOR LATCH	42
FUEL TANK STRAP	6	HANDLE EMERGENCY RELEASE	43
FUEL TANK STRAP	7	HANDLE REFUELING	58
FUEL TANK STRAP	12	HANDLE SEAT	48
FUEL TANK STRAP	13		
FUEL TANK WING	12		
FUEL TANK WING	13		
FUEL TRANSMITTER GROUND STRAP	4		
FUEL TRANSMITTER GROUND STRAP	5		
FUEL TRANSMITTER GROUND STRAP	6		

152 & A152 Parts Catalog

ALPHABETICAL INDEX

NOMENCLATURE	FIGURE	NOMENCLATURE	FIGURE
H (Cont)		I (Cont)	
HANDLE SEAT	50	INSTRUMENT LIGHT LENS	87
HANDLE SEAT ADJUST.	48A	INSTRUMENT PANEL.	52
HANDLE SEAT ADJUST.	50A	INSTRUMENT PANEL.	52A
HANDLE WINDOW LATCH	41	INSTRUMENT PANEL.	52B
HANGER COAT	44	INSTRUMENT PANEL & EQUIPMENT.	52
HARNESS IGNITION.	63	INSTRUMENT PANEL & EQUIPMENT.	52A
HARNESS SHOULDER.	56	INSTRUMENT PANEL & EQUIPMENT.	52B
HEADLINER	44	INSTRUMENT PANEL EYEBROW.	52
HEADLINER RETAINER.	44	INSTRUMENT PANEL LIGHT.	87
HEATER.	67A	INSTRUMENT PANEL STATIONARY	27
HEATER HOSE	67	INSTRUMENT PANEL STATIONARY	27A
HEATER PITOT.	77	INSTRUMENT-SEE INDIVIDUAL LISTINGS.	
HEATER SHROUD	64		
HEATER SHROUD	64A	J	
HEATER SHROUD	64B	JACK MICROPHONE-SEE ELECT MANUAL.	
HEATER SHROUD	65	JACK-HEADSET-SEE ELECT MANUAL	
HEATER VALVE TO SHROUD HOSE	67	JAMB DOOR	25
HEATING & VENTILATING SYSTEM CABIN.	67	JOINT UNIVERSAL	70
HEATING & VENTILATING SYSTEM CABIN.	67A		
HEATING CABIN	67	K	
HEATING CABIN	67A	KIT IGNITION SWITCH	53
HINGE AILERON	15	KITS-SEE ACCESSORY KIT CATALOG.	
HINGE FLAP MOTOR.	73	KNOR CIGAR LIGHTER.	52
HINGE HALF TAB.	21	KNOB CIGAR LIGHTER.	52A
HINGE WINDOW.	41	KNOB FLAP LEVER	74
HOLDER CLOCK FUSE	86	KNOB PRIMER	52
HOLDER EXTERNAL POWER FUSE.	86	KNOR PRIMER	52A
HOLDER FUSE	86	KNOB PRIMER	52B
HOOK TOW.	55	KNOB RHEOSTAT	90
HORIZON GYRO.	52	KNOB-SEE INDIVIDUAL APPLICATIONS	
HORIZON GYRO.	52A		
HORIZON GYRO.	52B	L	
HORIZON GYRO.	85	LAMP TAIL	23
HORIZON GYRO.	85A	LAMP WING POSITION.	3
HOSE BRAKE.	80	LAMPS-SEE BULBS	
HOSE FUEL	1	LAMPS-SEE LIGHTS.	
HOSE HEATER	67	LANDING GEAR MAIN	38
HOSE HEATER VALVE TO SHROUD	67	LANDING GEAR SPRING	38
HOSE OIL PRESSURE	84	LANDING LIGHT	88
HOSES-SEE APPLICABLE SYSTEM		LANDING LIGHT	88A
HOURLY METER	52	LANDING LIGHT BRACKET	8
HOURLY METER	52A	LANDING LIGHT BRACKET	9
HOURLY METER	52B	LANDING LIGHT BRACKET	88
HOURLY METER SWITCH.	84	LANDING LIGHT BULB.	88
HOW TO ORDER PARTS-SEE INTRODUCTION		LANDING LIGHT LENS.	88A
HOW TO ORDER UPHOL PARTS-PAGE VIII.		LANDING LIGHT SWITCH.	53
HOW TO READ FINISH & TRIM-PAGE III.		LATCH CARGO TIE DOWN.	45
HOW TO USE CATALOG-SEE INTRODUCTION		LATCH CARGO TIE DOWN.	45A
I		LATCH COWL DOOR	61
IGNITION HARNESS.	63	LATCH COWL DOOR	61A
IGNITION SWITCH COVER	53	LATCH COWL DOOR	61B
IGNITION SWITCH KIT	53	LATCH COWL DOOR	61C
INDICATOR-SEE INSTRUMENT PANEL.		LATCH DOOR.	42
INERTIA REEL.	56	LATCH MAP CASE.	54
INLET COLD AIR.	67	LATCH MAP CASE.	54A
INLET COLD AIR.	67A	LATCH WHEEL FAIRING DOOR.	33
INSTRUMENT CLUSTER.	52	LATCH WHEEL FAIRING DOOR.	38
INSTRUMENT CLUSTER.	52A	LATCH WINDOW.	41
INSTRUMENT CLUSTER.	52B	LEADING EDGE SKIN	8
INSTRUMENT CLUSTER BULB	53A		
INSTRUMENT CLUSTER BULB	53B		
INSTRUMENT CLUSTER LIGHT.	53B		
INSTRUMENT LIGHT BULB	87		

152 & A152 Parts Catalog

ALPHABETICAL INDEX

NOMENCLATURE		FIGURE	NOMENCLATURE		FIGURE
L (Cont)			M (Cont)		
LEADING EDGE SKIN	9		MAP CASE	54	
LEADING EDGE SKIN	18		MAP CASE	54A	
LEADING EDGE SKIN	18A		MAP CASE DOOR	54	
LEADING EDGE SKIN	19		MAP CASE DOOR	54A	
LEADING EDGE SKIN	19A		MAP CASE LATCH	54	
LEADING EDGE WING	8		MAP CASE LATCH	54A	
LEADING EDGE WING	9		MAP LIGHT	90	
LENS INSTRUMENT LIGHT	87		MAP LIGHT	91	
LENS LANDING LIGHT	88A		MAP LIGHT BULB	90	
LENS STROBE LIGHT	3		MAP LIGHT BULB	91	
LENS TAIL LIGHT	23		MAP LIGHT FUSE	90	
LENS WING POSITION LIGHT	3		MARKER BEACON PLACARD	2	
LEVER FLAP	74		MASTER BRAKE CYLINDER	69	
LID BATTERY BOX	24		MASTER BRAKE CYLINDER	69A	
LIGHT FLASHING BEACON	89		MASTER SWITCH	53	
LIGHT INSTRUMENT CLUSTER	53A		METERING PIN	34	
LIGHT INSTRUMENT CLUSTER	53B		MIKE SWITCH	90	
LIGHT LANDING	88		MIKE SWITCH	90A	
LIGHT LANDING	88A		MIRROR REAR VIEW	52	
LIGHT LOW VACUUM	52B		MIXTURE CONTROL	52	
LIGHT LOW VOLTAGE	52A		MIXTURE CONTROL	52A	
LIGHT LCW VOLTAGE	52B		MIXTURE CONTROL	52B	
LIGHT MAP	90		MIXTURE CONTROL	62	
LIGHT MAP	91		MORING EYEBOLT	17	
LIGHT OVERVOLTAGE	52		MORING EYEBOLT	31	
LIGHT POST	53A		MOTOR FLAP ACTUATOR	73	
LIGHT POST	53B		MOUNT ENGINE	62	
LIGHT TAIL	23		MUFFLER	64	
LIGHTED INSTRUMENT PANEL POST	53A		MUFFLER	64A	
LIGHTED INSTRUMENT PANEL POST	53B		MUFFLER	64B	
LIGHTER CIGAR	52		MUFFLER	65	
LIGHTER CIGAR	52A				
LIMIT SWITCHES-SEE SWITCHES			N		
LINES-SEE INDIVIDUAL SYSTEM			NAMEPLATE AIRCRAFT IDENTIFICATION	24	
LINING BRAKE	39		NAMEPLATES & EXTERIOR MARKINGS	2	
LINING BRAKE	40		NAMEPLATES & EXTERIOR MARKINGS	2A	
LINK ELEVATOR CONTRCL	70		NAVOMATIC-SEE ELECTRONICS MANUAL		
LINK TORQUE LOWER	34		NET BAGGAGE	45	
LINK TORQUE UPPER	34		NET BAGGAGE	45A	
LIST PILOT CHECK	2		NOSE CAP	33	
LOCK CABIN DOOR	41		NOSE CAP	61	
LOCK CONTROL	55		NOSE CAP	61A	
LOW VACUUM LIGHT	52B		NOSE CAP	61B	
LOW VACUUM SWITCH	85A		NOSE CAP	61C	
LOW VACUUM WARNING SWITCH	85A		NOSE CAP	61	
LOW VOLTAGE LIGHT	52A		NOSE CAP UPPER	61A	
LCW VOLTAGE LIGHT	52B		NOSE CAP UPPER	61B	
LOWER COWL	61		NOSE CAP UPPER	61C	
LUBRICATION FITTING	34		NOSE GEAR	33	
LUBRICATOR FITTING	34		NOSE GEAR SHOCK STRUT PLACARD	2	
			NOSE GEAR SHOCK STRUT PLACARD	2A	
			NOSE GEAR SHOCK STRUT PLACARD	34	
			NOSE GEAR STRUT	34	
			NOSE GEAR WHEEL	35	
			NOSE GEAR WHEEL	36	
			NOSE GEAR WHEEL & TIRE	35	
			NOSE GEAR WHEEL & TIRE	36	
			NOSE WHEEL HUB CAP	33	
			NOZZLE DEFROSTER	27	
			NOZZLE DEFROSTER	27A	
			NOZZLE DEFROSTER	67	
			NOZZLE DEFROSTER	67A	
M					
MAGNETO	63				
MAIN GEAR BRAKE	39				
MAIN GEAR BRAKE	40				
MAIN GEAR FAIRING	38				
MAIN GEAR HUB CAP	38				
MAIN GEAR WHEEL	39				
MAIN GEAR WHEEL	40				
MAIN LANDING GEAR	38				
MAIN LANDING GEAR AXLE	38				
MAIN LANDING GEAR BULKHEAD	26				
MANIFOLD BATTERY	86				
MANIFOLD BATTERY SUPPORT	24				
MANIFOLD CHECK VALVE	85B				

152 & A152 Parts Catalog

ALPHABETICAL INDEX

NOMENCLATURE	FIGURE	NOMENCLATURE	FIGURE
O		P (Cont)	
OIL COOLER	63A	PISTON MASTER CYLINDER	69
OIL FILTER	84	PISTON SHIMMY DAMPENER	37
OIL FILTER ADAPTER	84	PISTON SUPPORT ORIFICE	34
OIL FILTER PLACARD	2	PITOT HEATER	77
OIL FILTER PLACARD	2A	PITOT STATIC LINE BUTTON	27
OIL PRESSURE GAGE	52	PITOT STATIC LINE BUTTON	27A
OIL PRESSURE GAGE	52A	PITOT STATIC LINE BUTTON	77
OIL PRESSURE GAGE	52B	PITOT SYSTEM	77
OIL PRESSURE GAGE	84	PITOT TUBE	8
OIL PRESSURE HOSE	84	PITOT TUBE	9
OIL PRESSURE LINE	84	PITOT TUBE	77
OIL SYSTEM	84	PITOT TUBE CONNECTOR	77
OIL TEMP GAGE	52	PLACARDS SEE FIG 2	
OIL TEMP GAGE	52A	PLATE CARPET SCUFF	45
OIL TEMP GAGE	52B	PLATE CARPET SCUFF	45A
OPERATIONAL LIMITATIONS PLACARD	2	PLATE FINISH & TRIM	2
OPERATIONAL LIMITATIONS PLACARD	2A	PLATE FINISH & TRIM	2A
ORIFICE PISTON SUPPORT	34	PLATE FINISH & TRIM	24
OUTBOARD AUXILIARY SPAR	10	PLATE HOLDER APPROACH	70
OUTBOARD AUXILIARY SPAR	11	PLATE PRESSURE	39
OUTLET CABIN AIR	67	PLATE PRESSURE	40
OUTLET CABIN AIR	67A	PLATE SCUFF	48
OUTSIDE AIR TEMP GAGE	55	PLATE SCUFF	50
OVERHEAD LIGHT BULB	87	PLATE SCUFF	50A
OVERVOLTAGE LIGHT	52	PLATE WINDOW STRIKER	41
OVERVOLTAGE SENSOR	86	PLUG PIN BASE	34
		PLUG SPARK	63
		POSITION INDICATOR FLAP	74
		POST LIGHT	53A
		POST LIGHT	53B
		POST LIGHT BULB	53A
		POST LIGHT BULB	53B
		POST LIGHTED INSTRUMENT PANEL	53A
		POST LIGHTED INSTRUMENT PANEL	53B
		POWER SUPPLY STROBE LIGHT	3
		PRESSURE PLATE	39
		PRESSURE PLATE	40
		PRIMER	1
		PRIMER FUEL	52
		PRIMER FUEL	52A
		PRIMER FUEL	52B
		PRIMER KNOB	52
		PRIMER KNOB	52A
		PRIMER KNOB	52B
		PRIMER LINE	81
		PRIMER ZINC CHROMATE	1
		PROBE EXHAUST GAS TEMPERATURE	52A
		PROBE EXHAUST GAS TEMPERATURE	52B
		PROPELLER	60
		PROPELLER & SPINNER	60
		PROPELLER SPINNER	60
		PULLEYS-SEE APPLICABLE SYSTEM	
		PUMP VACUUM	85
		PUMP VACUUM	85A
		PUMP VACUUM	85B
		Q	
		QUICK DRAIN OIL VALVE	84
		R	
		RADIO CUTOUT COVER	52
		RADIO CUTOUT COVER	52A
P			
PAD CONTROL WHEEL	70		
PAINT-SEE FINISH & TRIM PLATE-PAGE III			
PAINTED PARTS-HOW TO ORDER-PAGE IX			
PANEL & EQUIPMENT INSTRUMENT	52		
PANEL & EQUIPMENT INSTRUMENT	52A		
PANEL & EQUIPMENT INSTRUMENT	52B		
PANEL BAGGAGE COMPARTMENT	45		
PANEL BAGGAGE COMPARTMENT	45A		
PANEL INSTRUMENT	52		
PANEL INSTRUMENT	52A		
PANEL INSTRUMENT	52B		
PANEL LIGHT INSTRUMENT	87		
PANEL REMOVABLE	52B		
PANEL SHOCK MOUNTED	52		
PANEL SHOCK MOUNTED	52A		
PANEL SHOCK MOUNTED INSTRUMENT	52		
PANEL SHOCK MOUNTED INSTRUMENT	52A		
PANEL STATIONARY INSTRUMENT	52		
PANEL STATIONARY INSTRUMENT	52A		
PANEL STATIONARY INSTRUMENT	52B		
PARKING BRAKE CHAIN	80		
PARKING BRAKE CONTROL	52		
PARKING BRAKE CONTRL	52A		
PARKING BRAKE CONTRL	52B		
PARKING BRAKE CONTRL	80		
PARKING BRAKE CONTRL	69		
PARKING BRAKE SPRING	69A		
PARKING BRAKE SPRING	68		
PEDAL EXTENSION	68		
PEDAL RUDDER	68		
PEDAL RUDDER & BRAKE	68		
PEDESTAL	48		
PEDESTAL	48A		
PEDESTAL	50		
PEDESTAL	50A		
PIN BASE PLUG	34		
PIN DOOR HINGE	41		
PIN METERING	34		

152 & A152 Parts Catalog

ALPHABETICAL INDEX

NOMENCLATURE	FIGURE	NOMENCLATURE	FIGURE
R (Cont)		S	
RADIO CUTOUT COVER.	52B	SAFETY BELT—ALSO SEE SEAT BELTS	
RADIOS—SEE CESSNA ELECTRONICS MANUAL. . .		SCOOP CABIN AIR VENT.	8
RAIL SEAT	47	SCOOP CABIN AIR VENT.	9
RAIL SEAT	48	SCOOP STALL WARNING	79
RAIL SEAT	48A	SCUFF PLATE	48
RAIL SEAT	49	SCUFF PLATE	50
RAIL SEAT	50	SCUFF PLATE	50A
RAIL SEAT	50A	SCUFF PLATE CARPET.	45
REAR DOORPOST SPAR.	30	SCUFF PLATE CARPET.	45A
REAR VIEW MIRROR.	52	SEAL BAFFLE	66
REAR WINDOW	30	SEAL FELT GREASE.	35
REAR WINDOW RETAINER.	30	SEAL FELT GREASE.	36
RECEIVER ASH.	41	SEAL FELT GREASE.	39
RECEIVER ASH.	45A	SEAL STEERING LINK.	27
RECLINING SEAT.	47	SEAL STEERING LINK.	27A
RECLINING SEAT.	49	SEALANT	1
RECLINING SEAT CAM.	47	SEAT AUXILIARY.	51
RECLINING SEAT CAM.	48	SEAT BELT	56
RECLINING SEAT CAM.	48A	SEAT BELT BRACKET	25
RECLINING SEAT CAM.	49	SEAT BELT BRACKET	56
RECLINING SEAT CAM.	50	SEAT RAIL	47
RECLINING SEAT CAM.	50A	SEAT RAIL	48
RECLINING SEAT HANDLE	47	SEAT RAIL	48A
RECLINING SEAT HANDLE	48	SEAT RAIL	49
RECLINING SEAT HANDLE	48A	SEAT RAIL	50
RECLINING SEAT HANDLE	49	SEAT RAIL	50A
RECLINING SEAT HANDLE	50	SEAT RECLINING.	47
RECLINING SEAT HANDLE	50A	SEAT RECLINING.	49
REEL INERTIA.	56	SEAT STOP	47
REFUELING HANDLE.	58	SEAT STOP	48
REFUELING STEP & HANDLE	58	SEAT STOP	48A
REGULATOR VOLTAGE	63	SEAT STOP	49
REGULATOR VOLTAGE	86	SEAT STOP	50
REMOVABLE PANEL	52B	SEAT STOP	50A
RESISTOR.	52	SEAT VERTICAL ADJUSTABLE.	48
RESISTOR.	52A	SEAT VERTICAL ADJUSTABLE.	48A
RESISTOR.	86	SEAT VERTICAL ADJUSTABLE.	50
RESISTOR CIGAR LIGHTER.	52	SEAT VERTICAL ADJUSTABLE.	50A
RESISTOR CIGAR LIGHTER.	52A	SENDING UNIT OIL TEMP	62
RESISTOR FLASHING BEACON.	89	SENSOR OVERVOLTAGE.	86
RESISTOR FUEL TRANSMITTER	12	SERVICE PLUG GROUND	86
RESISTOR FUEL TRANSMITTER	13	SET KIT RIVET	39
RESISTOR GROUND SERVICE PLUG.	86	SHAFT TACHOMETER.	52
RESISTOR VARIABLE	53	SHAFT TACHOMETER.	52A
RESISTOR VARIABLE TANDEM.	53	SHAFT TACHOMETER.	52B
RETAINER HEADLINER.	44	SHEET FIREWALL.	27
RETAINER REAR WINDOW.	30	SHEET FIREWALL.	27A
RETAINER WINDOW	30	SHIMMY DAMPENER	37
RHEOSTAT KNOB	90	SHOCK MOUNTED INSTRUMENT PANEL.	52
RIBS—SEE APPLICABLE STRUCTURE		SHOCK MOUNTED INSTRUMENT PANEL.	52A
RIVET SET KIT	39	SHOCK MOUNTED PANEL	52
ROD AILERON PUSH PULL	15	SHOCK MOUNTED PANEL	52A
ROD FLAP PUSH	16	SHOCK PANEL COVER	52
ROD FLAP PUSH PULL	16	SHOCK PANEL COVER	52A
ROTARY CLUTCH	25	SHOCK STRUT LOWER	34
ROTARY CLUTCH	30	SHOULDER HARNESS.	56
ROTARY DOOR LATCH CLUTCH.	25	SHROUD CARB HEAT.	62
RUDDER.	23	SHROUD HEATER	64
RUDDER.	31	SHROUD HEATER	64A
RUDDER & BRAKE PEDAL.	68	SHROUD HEATER	64B
RUDDER BALANCE WEIGHT	23	SHROUD HEATER	65
RUDDER BAR SHIELD	45	SHUT OFF VALVE FUEL	82
RUDDER BAR SHIELD	45A	SIDE BAFFLE	66
RUDDER CONTROL SYSTEM	71	SILL DOOR	25
RUDDER PEDAL.	68	SKINS—SEE APPLICABLE STRUCTURE.	
RUDDER TRIM TAB	23	SKYLIGHT WINDOW	25
		SOUND DEADENER.	1
		SOUNDPROOFING	46

ALPHABETICAL INDEX

[illegible]

152 & A152 Parts Catalog

ALPHABETICAL INDEX

NOMENCLATURE	FICHE	FIGURE	NOMENCLATURE	FIGURE
T (Cont)			U (Cont)	
TANK WELL BULKHEAD.		6	UPHOLSTERY CABIN TOP.	44
TANK WELL BULKHEAD.		7	UPHOLSTERY CABIN TOP & FIREWALL	44
TANK WING FUEL.		12	UPPER COWL.	61
TANK WING FUEL.		13	UPPER COWL.	61A
THROTTLE CONTROL.		52	UPPER COWL.	61B
THROTTLE CONTROL.		52A	UPPER COWL.	61C
THROTTLE CONTROL.		52B		
THROTTLE CONTROL.		62		
TIARA.		44	V	
TIARA MOUNTING BRACKET.		30	VACUUM AIR FILTER.	85
TINTED WINDSHIELD.		32	VACUUM AIR FILTER.	85A
TIP ELEVATOR.		21	VACUUM PUMP.	85
TIP ELEVATOR.		21A	VACUUM PUMP.	85A
TIP FLASHING BEACON.		89	VACUUM PUMP.	85B
TIP STABILIZER.		18	VACUUM RELIEF VALVE.	85
TIP STABILIZER.		18A	VACUUM RELIEF VALVE.	85A
TIP STABILIZER.		19	VACUUM SYSTEM.	85
TIP STABILIZER.		19A	VACUUM SYSTEM.	85A
TIP WING.		4	VALVE CABIN HEATER.	67
TIP WING.		5	VALVE CABIN HEATER.	67A
TIP WING.		6	VALVE EXTENSION.	33
TIP WING.		7	VALVE EXTENSION.	38
TIRE.		35	VALVE FUEL.	14
TIRE.		36	VALVE FUEL DRAIN.	81
TIRE.		39	VALVE FUEL TANK DRAIN.	14
TIRE.		40	VALVE FUEL VENT.	12
TOP CABIN.		25	VALVE FUEL VENT.	13
TOP FUEL STRAINER.		83	VALVE QUICK DRAIN OIL.	84
TOP SKYLIGHT CABIN.		25	VALVE VACUUM RELIEF.	85
TORQUE LOWER LINK.		34	VALVE VACUUM RELIEF.	85A
TORQUE UPPER LINK.		34	VARIABLE RESISTOR.	53
TOW BAR.		55	VARIABLE TANDEM RESISTOR.	53
TOW HOOK.		55	VENT LINE.	81
TOW HOOK CORD.		55	VERTICAL ADJUSTABLE SEAT.	48
TRANSISTORIZED LIGHT DIMMING.		86	VERTICAL ADJUSTABLE SEAT.	48A
TRANSMITTER FUEL GAGE.		12	VERTICAL ADJUSTABLE SEAT.	50
TRANSMITTER FUEL GAGE.		13	VERTICAL ADJUSTABLE SEAT.	50A
TRAY BATTERY.		24	VERTICAL SPEED INDICATOR.	52
TRAY BATTERY BOX.		24	VERTICAL SPEED INDICATOR.	52A
TRIM CONTROL ELEVATOR.		76	VERTICAL SPEED INDICATOR.	52B
TRIM CONTROL SYSTEM ELEVATOR.		76	VERTICAL SPEED INDICATOR.	77
TRIM TAB ACTUATOR ELEVATOR.		20	VERTICAL SPEED INDICATOR.	78
TRIM TAB ELEVATOR.		20	VISOR SUN.	57
TRIM TAB HORN.		21A	VOLTAGE REGULATOR.	63
TRUE AIRSPEED INDICATOR.		52	VOLTAGE REGULATOR.	86
TRUE AIRSPEED INDICATOR.		52A		
TRUE AIRSPEED INDICATOR.		52B		
TUBE BATTERY DRAIN.		86	W	
TUBE PITOT.		8	WARNING HORN STALL.	79
TUBE PITOT.		9	WEDGE CABIN DOOR.	41
TUBE PITOT.		77	WEDGE DOOR.	41
TUBE POLYETHYLENE.		1	WEIGHT AILERON BALANCE.	15
TUBE SHOCK STRUT.		34	WEIGHT ELEVATOR BALANCE.	21
TUBE STROBE.		3	WEIGHT ELEVATOR BALANCE.	21A
TURN & BANK INDICATOR.		52	WEIGHT RUDDER BALANCE.	23
TURN & BANK INDICATOR.		52A	WHEEL & BRAKE.	39
TURN & BANK INDICATOR.		52B	WHEEL & BRAKE.	40
TURN COORDINATOR INDICATOR.		52	WHEEL & BRAKE MAIN LANDING GEAR.	39
TURN COORDINATOR INDICATOR.		52A	WHEEL & BRAKE MAIN LANDING GEAR.	40
TURN COORDINATOR INDICATOR.		52B	WHEEL CONTROL.	70
			WHEEL CONTROL.	90
U			WHEEL FAIRING.	38
UNIVERSAL JOINT.		70	WHEEL FAIRING DOOR LATCH.	33
UPHOLSTERY CABIN.		45	WHEEL FAIRING DOOR LATCH.	38
UPHOLSTERY CABIN.		45A		

152 & A152 Parts Catalog

ALPHABETICAL INDEX

NOMENCLATURE	FIGURE	NOMENCLATURE	FIGURE
W (Cont)			
WHEEL MAIN GEAR	39		
WHEEL MAIN GEAR	40		
WHEEL PILOT CONTROL	70		
WHEEL TAB CONTROL	76		
WINDOW CABIN DCOR	41		
WINDOW GLASS.	41		
WINDOW HINGE	41		
WINDOW LATCH.	41		
WINDOW LATCH HANDLE	41		
WINDOW REAR	30		
WINDOW SKYLIGHT	25		
WINDSHIELD.	32		
WINDSHIELD STRIP.	32		
WINDSHIELD TINTED	32		
WING.	5		
WING.	7		
WING.	86		
WING COMPLETE	3		
WING FAIRING.	3		
WING FRONT SPAR	10		
WING FRONT SPAR	11		
WING POSITION LAMP.	3		
WING POSITION LIGHT LENS.	3		
WING REAR SPAR.	10		
WING REAR SPAR.	11		
WING ROOT RIB	4		
WING ROOT RIB	5		
WING ROOT RIB	6		
WING ROOT RIB	7		
WING SPAR	5		
WING SPAR	7		
WING SPAR	11		
WING SPAR FITTING	10		
WING SPAR FITTING	11		
WING SPARS.	10		
WING STRINGER	4		
WING STRINGER	5		
WING STRINGER	6		
WING STRINGER	7		
WING STRUCTURE.	4		
WING STRUCTURE.	5		
WING STRUCTURE.	6		
WING STRUCTURE.	7		
WING STRUT.	17		
WING TIP.	4		
WING TIP.	5		
WING TIP.	6		
WING TIP.	7		
WINTERIZATION EQUIPMENT	61D		
WINTERIZATION PLACARD	2		
WINTERIZATION PLACARD	2A		
Y			
YOKE CONTRL.	70		

152 & A152 Parts Catalog

Parts Listing

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
1 -		MISCELLANEOUS BULK ITEMS -----	AR	
- 1	C1C2	CONLEY-WELD EPOXY BASE ADHESIVE.		
		CEMENTING ----- PLASTIC TO PLASTIC PLASTIC TO METAL FIBERGLASS TO FIBERGLASS FIBERGLASS TO METAL METAL TO METAL		
- 2	EC1300L	ADHESIVE-CHLOROPHENE BASE		
		FOR BONDING RUBBER, ----- FABRIC, VINYL, GLASS, BATTING, CARPET, LEATHER TO THEMSELVES OR TO ABS OR METALS.		
- 3	1024A-B	CEMENT PARTS A & B		
		CEMENTING DE-ICER ----- AND ABRASION BOOTS TO WING AND STAB ILIZER LEADING EDGES.		
- 4	1007	PRIMER		
		USED ONLY FOR PRIMING ----- AREAS WHERE DE-ICER AND ABRASION BOOTS ARE TO BE INSTALLED WITH 1024A-B.		
- 5	576.1	SEALANT-EXTRUDED PERMAGUM		
		WEATHER SEALING ----- OF METAL LAP JOINTS.		
- 6	579.6	SEALANT-EXTRUDED ZINC CHROMATE		
		WEATHER SEALING ----- OF WINDOWS.		
- 7	S1078-1	SEALANT-SYNTHETIC RUBBER-FABRIC REINFORCED .06 THICK .50 WIDE		
		WINDSHIELD SEALING -----		
- 8	S1078-2	SEALANT-SYNTHETIC RUBBER-FABRIC REINFORCED .12 THICK .50 WIDE		
		WINDSHIELD SEALING -----		
- 9	S1078-3	SEALANT-SYNTHETIC RUBBER-FABRIC REINFORCED 2 MIL MYLAR TAPE BACKING. .06 THICK 1.50 WIDE		
		WINDSHIELD SEALING -----		
-10	EC1239AB	SEALANT-CATALYTIC		
		GENERAL PURPOSE ----- FOR FAYING SURFACES FILLET & RIVET SEALS FUEL SEALING AND AREAS WHERE SKYDROL IS PRESENT		
-11	700	SEALANT-FIREWALL		
		SEALING FIREWALL JOINTS ----- AND OPENINGS. WITHSTANDS 2000 DEGREE TEMP FOR 5 MINUTES.		
-12	EC776	ADHESIVE-GASKET FUEL RESISTANT SYNTHETIC RUBBER BASE.		
		CEMENTING GASKETS -----		
-13	550	SOUND DEADENER- LIQUID VIBRATION DAMPENER		
		VIBRATION DAMPENING ----- CAN BE BRUSHED OR SPRAYED.		
-14	TT-P-1757	PRIMER-ZINC CHROMATE GREEN		
		CORROSION PROOFING -----		
		CONTINUED ON NEXT PAGE		

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
1 -14A	EC1675A-B	SEALANT-CATALYTIC		
		HOPPER ADAPTER TO ----- HOPPER-CANTILEVER WING FUEL BAY		
-14B	PR0890	SEALANT-CATALYTIC		
		ALTERNATE FOR ----- EC1675A-B		
-14C	LOCTITE 5381	EPOXY		
		MIXER CUP		
		URETHANE TO URETHANE ----- URETHANE TO METAL POLYCARBONATE TO METAL ABS TO METAL	AR	
-14D	EC22168/A	ADHESIVE PARTS A & B		
		METAL TO METAL -----	AR	
-14E	LOCTITE 8721	LOCKING & RETAINING COMPOUND		
		METAL TO METAL -----	AR	
-15	S51-4	HOSE-FUEL & OIL-1/4 ID -----	AR	
	S51-6	HOSE-FUEL & OIL-3/8 ID -----	AR	
	S51-8	HOSE-FUEL & OIL-1/2 ID -----	AR	
	S51-10	HOSE-FUEL & OIL-5/8 ID -----	AR	
	S51-12	HOSE-FUEL & OIL-3/4 ID -----	AR	
	S51-16	HOSE-FUEL & OIL-1.00 ID -----	AR	
	S51-32	HOSE-FUEL & OIL-2.00 ID -----	AR	
-16	S202RB	CHANNEL-EXTRUDED BLACK -----	AR	
	S202VW	CHANNEL-EXTRUDED WHITE -----	AR	
-17	S292-1	INSULATION SLEEVING-ELEC-.118 ID -----	AR	
	S292-2	INSULATION SLEEVING-ELEC-.133 ID -----	AR	
	S292-3	INSULATION SLEEVING-ELEC-.148 ID -----	AR	
	S292-4	INSULATION SLEEVING-ELEC-.166 ID -----	AR	
	S292-5	INSULATION SLEEVING-ELEC-.186 ID -----	AR	
	S292-6	INSULATION SLEEVING-ELEC-.208 ID -----	AR	
	S292-8	INSULATION SLEEVING-ELEC-.263 ID -----	AR	
	S292-11	INSULATION SLEEVING-ELEC-5/16 ID -----	AR	
	S292-12	INSULATION SLEEVING-ELEC-3/8 ID -----	AR	
	S292-14	INSULATION SLEEVING-ELEC-1/2 ID -----	AR	
	S292-16	INSULATION SLEEVING-ELEC-3/4 ID -----	AR	
	S292-18	INSULATION SLEEVING-ELEC-1 ID -----	AR	
	S292-28	INSULATION SLEEVING-ELEC-2-1/2 ID -----	AR	
-18	S1026BG	CLAMP-WRAP TYPE -----	AR	
-19	S1053E7T	DUCT-FLEXIBLE-NEOPRENE IMPREGNATED 7/8 DIA -----	AR	
	S1053E8T	DUCT-FLEXIBLE-NEOPRENE IMPREGNATED 1.00 DIA -----	AR	
	S1053E10T	DUCT-FLEXIBLE-NEOPRENE IMPREGNATED 1-1/4 DIA -----	AR	
	S1053K10T	DUCT-FLEXIBLE-SILICONE IMPREGNATED 1-1/4 DIA -----	AR	
	S1053E12T	DUCT-FLEXIBLE-NEOPRENE IMPREGNATED 1-1 1/2 DIA -----	AR	
	S1053K12T	DUCT-FLEXIBLE-SILICONE IMPREGNATED 1-1/2 DIA -----	AR	
	S1053E20T	DUCT-FLEXIBLE-NEOPRENE IMPREGNATED 2-1/2 DIA -----	AR	
	S1053K20T	DUCT-FLEXIBLE-SILICONE IMPREGNATED 2-1/2 DIA -----	AR	
	S1053E24T	DUCT-FLEXIBLE-NEOPRENE IMPREGNATED 3.00 DIA -----	AR	
	S1053K24T	DUCT-FLEXIBLE-SILICONE IMPREGNATED 3.00 DIA -----	AR	
	S1053K24W	DUCT-FLEXIBLE-SILICONE IMPREGNATED 2 PLY 3.00 DIA -----	AR	
	S1053E28T	DUCT-FLEXIBLE-NEOPRENE IMPREGNATED 3-1/2 DIA -----	AR	
	S1053K28W	DUCT-FLEXIBLE-SILICONE IMPREGNATED 2 PLY 3-1/2 DIA -----	AR	
	S1053E32T	DUCT-FLEXIBLE-NEOPRENE IMPREGNATED 4.00 DIA -----	AR	
	S1053K32T	DUCT-FLEXIBLE-SILICONE IMPREGNATED 4.00 DIA -----	AR	
-20	S1047-1	SEAL-SPONGE RUBBER-5/16 THICK -----	AR	
	S1047-2	SEAL-SPONGE RUBBER-1/4 THICK -----	AR	
-21	S1055-1	CHANNEL-EXTRUDED RUBBER -----	AR	
-22	S1071-1	TUBE-POLYETHYLENE-1/4 DIA -----	AR	
	S1071-3	TUBE-POLYETHYLENE-3/8 DIA -----	AR	
	S1071-4	TUBE-POLYETHYLENE-1/2 DIA -----	AR	
	S1071-5	TUBE-POLYETHYLENE-5/8 DIA -----	AR	

CONTINUED ON NEXT PAGE

152 & A152 Parts Catalog

Bulk Items (Cont)

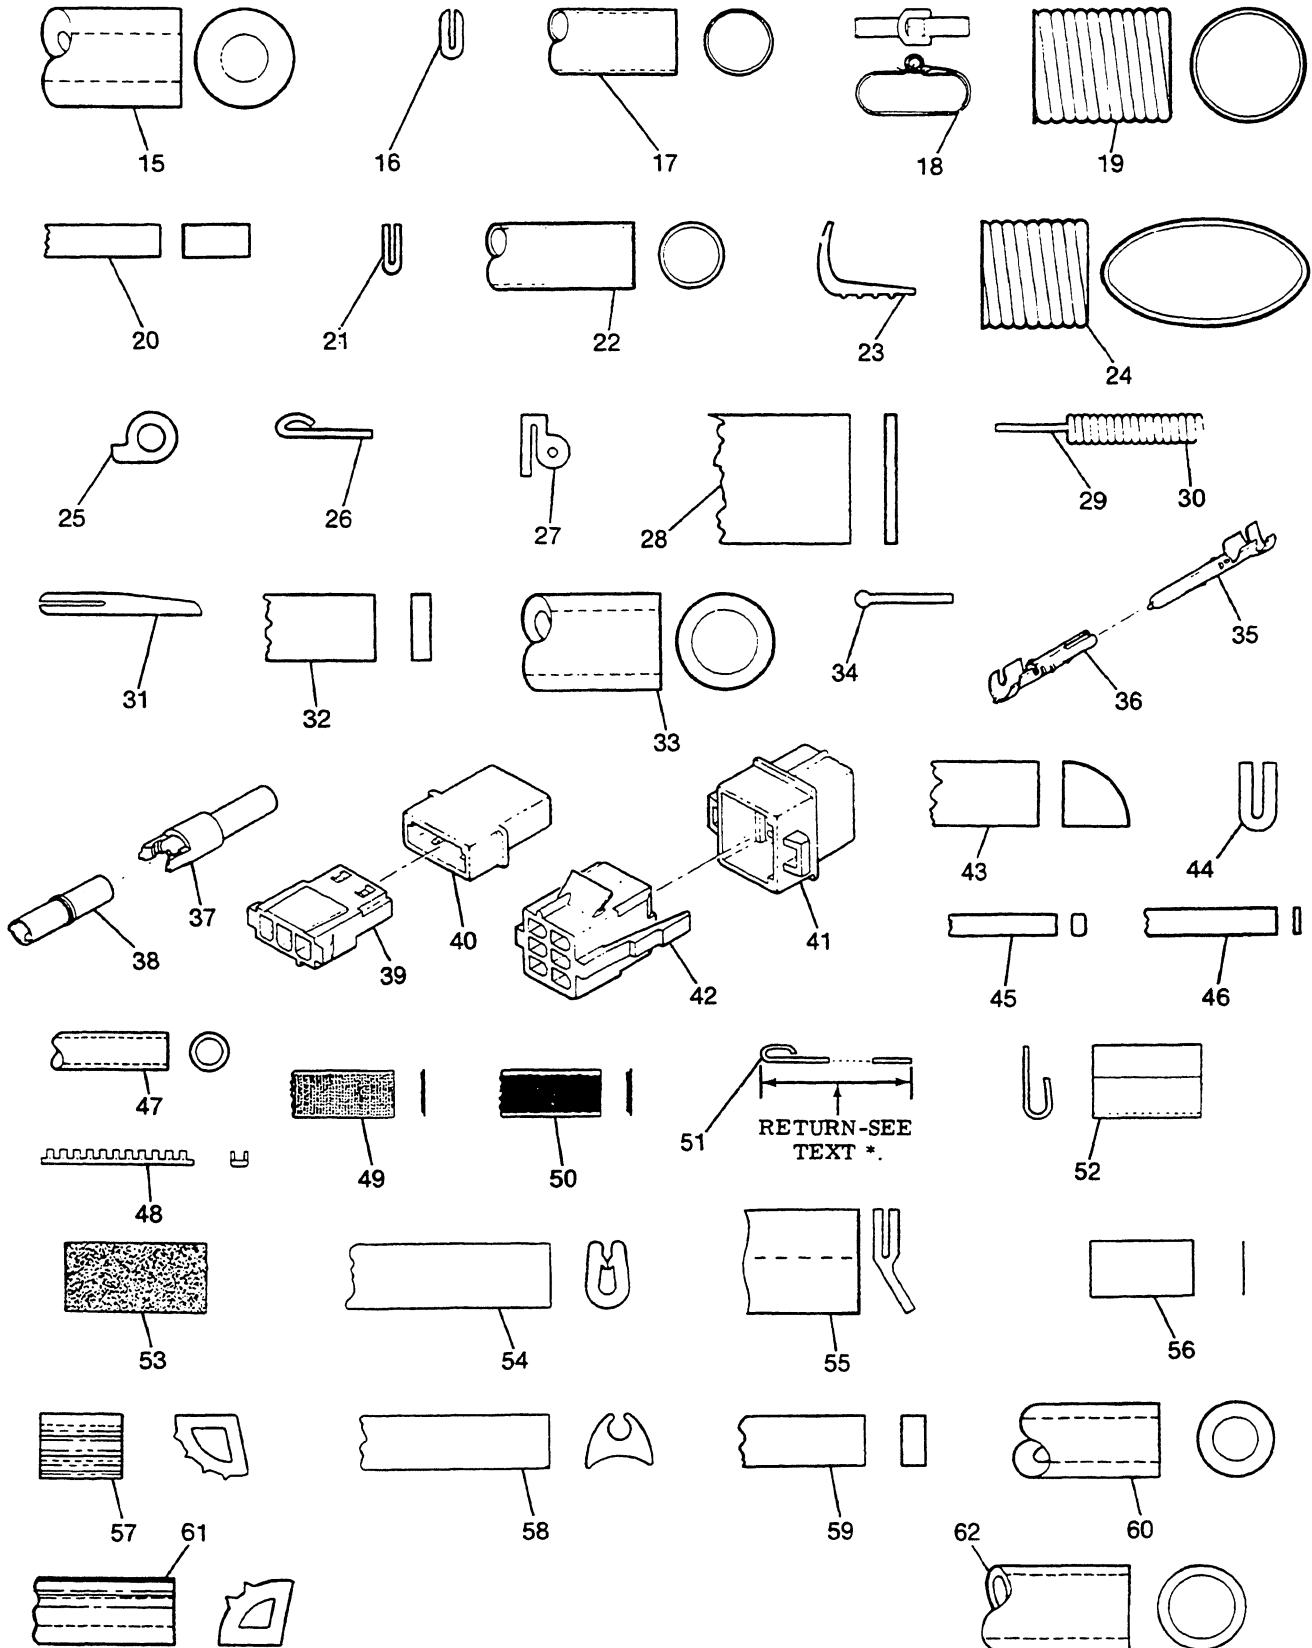


Figure 1. Miscellaneous Bulk Items

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION							UNITS PER ASSY	USABLE ON CODE
		1	2	3	4	5	6	7		
1 -23	S1084-1	SEAL-EXTRUDED RUBBER	-----	-----	-----	-----	-----	-----	AR	
-24	S1110ET	DUCT-OVAL-FLEXIBLE-NEOPRENE IMPREGNATED	-----	-----	-----	-----	-----	-----	AR	
-25	S1346-1	SEAL-SPONGE RUBBER	-----	-----	-----	-----	-----	-----	AR	
-26	S1366-1	MOULDING-EXTRUDED PLASTIC-SAND	-----	-----	-----	-----	-----	-----	AR	
	S1366-2	MOULDING-EXTRUDED PLASTIC-FAWN	-----	-----	-----	-----	-----	-----	AR	
	S1366-3	MOULDING-EXTRUDED PLASTIC-BLACK	-----	-----	-----	-----	-----	-----	AR	
-27	S1378-1	SEAL-SPONGE RUBBER-BEIGE	-----	-----	-----	-----	-----	-----	AR	
	S1378-2	SEAL-SPONGE RUBBER-CLOUD GRAY	-----	-----	-----	-----	-----	-----	AR	
-28	S1389-1	SEALER STRIP-FELT-1.00 WIDE	-----	-----	-----	-----	-----	-----	AR	
	S1389-2	SEALER STRIP-FELT-1-1/2 WIDE	-----	-----	-----	-----	-----	-----	AR	
	S1389-3	SEALER STRIP-FELT-2.00 WIDE	-----	-----	-----	-----	-----	-----	AR	
	S1389-4	SEALER STRIP-FELT 1-3/4 WIDE	-----	-----	-----	-----	-----	-----	AR	
	S1389-5	SEALER STRIP-FELT-1-1/4 WIDE	-----	-----	-----	-----	-----	-----	AR	
	S1389-6	SEALER STRIP-FELT-2-1/4 WIDE	-----	-----	-----	-----	-----	-----	AR	
	S1389-7	SEALER STRIP-FELT-1-3/8 WIDE	-----	-----	-----	-----	-----	-----	AR	
-29	S1398-1	CONTROL-PUSH PULL-WIRE	-----	-----	-----	-----	-----	-----	AR	
-30	S1398-2	CONTROL-PUSH PULL-CASING	-----	-----	-----	-----	-----	-----	AR	
-31	S1415-1	MOULDING-EXTRUDED VINYL	-----	-----	-----	-----	-----	-----	AR	
-32	S1441-1	SEAL-SPONGE RUBBER-3/8 WIDE	-----	-----	-----	-----	-----	-----	AR	
	S1441-2	SEAL-SPONGE RUBBER-1/4 WIDE	-----	-----	-----	-----	-----	-----	AR	
	S1441-3	SEAL-SPONGE RUBBER-1/2 WIDE	-----	-----	-----	-----	-----	-----	AR	
-33	S1495-4	HOSE-RUBBER-1/4 ID	-----	-----	-----	-----	-----	-----	AR	
	S1495-6	HOSE-RUBBER-3/8 ID	-----	-----	-----	-----	-----	-----	AR	
	S1495-8	HOSE-RUBBER-1/2 ID	-----	-----	-----	-----	-----	-----	AR	
	S1495-10	HOSE-RUBBER-5/8 ID	-----	-----	-----	-----	-----	-----	AR	
-34	S1611-1	SEAL-EXTRUDED VINYL	-----	-----	-----	-----	-----	-----	AR	
-35	S1635-1	ELECTRICAL PIN	WIRE SIZE 22-18	-----	-----	-----	-----	-----	AR	
	S1635-2	ELECTRICAL PIN	WIRE SIZE 18-14	-----	-----	-----	-----	-----	AR	
	S1635-3	ELECTRICAL PIN	WIRE SIZE 18 GA-2 WIRE	-----	-----	-----	-----	-----	AR	
-36	S1636-1	ELECTRICAL SOCKET	WIRE SIZE 22-18	-----	-----	-----	-----	-----	AR	
	S1636-2	ELECTRICAL SOCKET	WIRE SIZE 18-14	-----	-----	-----	-----	-----	AR	
	S1636-3	ELECTRICAL SOCKET	WIRE SIZE 18 GA-2 WIRE	-----	-----	-----	-----	-----	AR	
-37	S1637-1	HOUSING-ELECTRICAL PIN	-----	-----	-----	-----	-----	-----	AR	
-38	S1637-2	HOUSING-ELECTRICAL SOCKET	-----	-----	-----	-----	-----	-----	AR	
-39	S1638-1	HOUSING-ELECTRICAL SOCKET-3 CIRCUIT	-----	-----	-----	-----	-----	-----	AR	
-40	S1638-2	HOUSING-ELECTRICAL PIN-3 CIRCUIT	-----	-----	-----	-----	-----	-----	AR	
-41	S1640-6	HOUSING-ELECTRICAL PIN-6 CAVITY	-----	-----	-----	-----	-----	-----	AR	
	S1640-9	HOUSING-ELECTRICAL PIN-9 CAVITY	-----	-----	-----	-----	-----	-----	AR	
	S1640-12	HOUSING-ELECTRICAL PIN-12 CAVITY	-----	-----	-----	-----	-----	-----	AR	
	S1640-15	HOUSING-ELECTRICAL PIN-15 CAVITY	-----	-----	-----	-----	-----	-----	AR	
-42	S1641-6	HOUSING-ELECTRICAL SOCKET-6 CAVITY	-----	-----	-----	-----	-----	-----	AR	
	S1641-9	HOUSING-ELECTRICAL SOCKET-9 CAVITY	-----	-----	-----	-----	-----	-----	AR	
	S1641-12	HOUSING-ELECTRICAL SOCKET-12 CAVITY	-----	-----	-----	-----	-----	-----	AR	
	S1641-15	HOUSING-ELECTRICAL SOCKET-15 CAVITY	-----	-----	-----	-----	-----	-----	AR	
-43	S1116	SEAL-NEOPRENE	-----	-----	-----	-----	-----	-----	AR	
-44	S1356-1	SEAL-EXTRUDED RUBBER	-----	-----	-----	-----	-----	-----	AR	
-45	S1614	LACING-KOROSEAL	-----	-----	-----	-----	-----	-----	AR	
-46	3690-1/8	FILM-BLACK VINYL-1/8 IN WIDE	-----	-----	-----	-----	-----	-----	AR	
	3690-1/4	FILM-BLACK VINYL-1/4 IN WIDE	-----	-----	-----	-----	-----	-----	AR	
	3690-1/2	FILM-BLACK VINYL-1/2 IN WIDE	-----	-----	-----	-----	-----	-----	AR	
-47	110691	WIRE-TEFLON	-----	-----	-----	-----	-----	-----	AR	
-48	S1050-1	GROMMET-CATERPILLAR .056 WIDE	-----	-----	-----	-----	-----	-----	AR	
	S1050-2	GROMMET-CATERPILLAR .090 WIDE	-----	-----	-----	-----	-----	-----	AR	
	S1050-3	GROMMET-CATERPILLAR .131 WIDE	-----	-----	-----	-----	-----	-----	AR	
-49	S2092-3	FABRIC FASTENER-HOOK	-----	-----	-----	-----	-----	-----	AR	
-50	S2092-4	FABRIC FASTENER-PILE	-----	-----	-----	-----	-----	-----	AR	
-51	S1948-2-1	TRIM-EXTRUDED CLOUD GRAY	-----	-----	-----	-----	-----	-----	AR	
	S1948-2-2	TRIM-EXTRUDED EBONY	-----	-----	-----	-----	-----	-----	AR	
	S1948-2-3	TRIM-EXTRUDED SILVER TEAL BLUE	-----	-----	-----	-----	-----	-----	AR	
	S1948-2-4	TRIM-EXTRUDED MARIGOLD	-----	-----	-----	-----	-----	-----	AR	
	S1948-2-5	TRIM-EXTRUDED SUN GOLD	-----	-----	-----	-----	-----	-----	AR	
	S1948-2-6	TRIM-EXTRUDED LIGHT OLIVE	-----	-----	-----	-----	-----	-----	AR	
	S1948-2-7	TRIM-EXTRUDED CLOVE BROWN	-----	-----	-----	-----	-----	-----	AR	

CONTINUED ON NEXT PAGE

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION							UNITS PER ASSY	USABLE ON CODE
		1	2	3	4	5	6	7		
1 -	S1948-2-8 *	TRIM-EXTRUDED	HOLIDAY BLUE	-----	-----	-----	-----	-----	AR	
	S1948-2-9 *	TRIM-EXTRUDED	FIESTA RED	-----	-----	-----	-----	-----	AR	
	S1948-2-10 *	TRIM-EXTRUDED	PICNIC GREEN	-----	-----	-----	-----	-----	AR	
	S1948-2-11 *	TRIM-EXTRUDED	BOGOTA BLUE	-----	-----	-----	-----	-----	AR	
	S1948-2-12 *	TRIM-EXTRUDED	TAHITIAN RED	-----	-----	-----	-----	-----	AR	
	S1948-2-13 *	TRIM-EXTRUDED	CYPRUS GREEN	-----	-----	-----	-----	-----	AR	
	S1948-2-14 *	TRIM-EXTRUDED	PEACOCK BLUE	-----	-----	-----	-----	-----	AR	
	S1948-2-15 *	TRIM-EXTRUDED	POPPY RED	-----	-----	-----	-----	-----	AR	
	S1948-2-16 *	TRIM-EXTRUDED	GOLDEN OLIVE & OLIVE GREEN	-----	-----	-----	-----	-----	AR	
	S1948-2-17 *	TRIM-EXTRUDED	SUNSET RED	-----	-----	-----	-----	-----	AR	
	S1948-2-18 *	TRIM-EXTRUDED	COPEN BLUE	-----	-----	-----	-----	-----	AR	
	S1948-2-19 *	TRIM-EXTRUDED	CHESTNUT BROWN	-----	-----	-----	-----	-----	AR	
	S1948-2-20 *	TRIM-EXTRUDED	OLD GOLD	-----	-----	-----	-----	-----	AR	
-52	S1029-1	J-SECTION	-----	-----	-----	-----	-----	-----	AR	
-53	S2108-1	SEAL-VINYL FOAM	.50 X .25	-----	-----	-----	-----	-----	AR	
	S2108-2	SEAL-VINYL FOAM	.25 X .062	-----	-----	-----	-----	-----	AR	
	S2108-3	SEAL-VINYL FOAM	.38 X .25	-----	-----	-----	-----	-----	AR	
	S2108-4	SEAL-VINYL FOAM	.50 X .18	-----	-----	-----	-----	-----	AR	
	S2108-5	SEAL-VINYL FOAM	.25 X .25	-----	-----	-----	-----	-----	AR	
	S2272-1	SEAL-NEOPRENE SPONGE	.31 WIDE	-----	-----	-----	-----	-----	AR	
	S2272-2	SEAL-NEOPRENE SPONGE	.25 WIDE	-----	-----	-----	-----	-----	AR	
-54	S2195-1	TRIM-MOULDING	-----	-----	-----	-----	-----	-----	AR	
	S2195-2	TRIM-MOULDING	-----	-----	-----	-----	-----	-----	AR	
-55	S2145-1	SEAL-EXTRUDED RUBBER	-----	-----	-----	-----	-----	-----	AR	
-56	Y8562	TAPE-POLYURETHANE	-----	-----	-----	-----	-----	-----	AR	
-57	S2249-1	SEAL-NEOPRENE	-----	-----	-----	-----	-----	-----	AR	
-58	S1511-1	FAIRING-EXTRUDED VINYL	-----	-----	-----	-----	-----	-----	AR	
-59	CM2919-2	SEAL-NEOPRENE	.125 THICK	-----	-----	-----	-----	-----	AR	
	CM2919-3	SEAL-NEOPRENE	.187 THICK	-----	-----	-----	-----	-----	AR	
	CM2919-4	SEAL-NEOPRENE	.250 THICK	-----	-----	-----	-----	-----	AR	
-60	S1453-1	SEAL-SPONGE RUBBER	-----	-----	-----	-----	-----	-----	AR	
-61	S2287-1	SEAL-NEOPRENE	-----	-----	-----	-----	-----	-----	AR	
-62	S1775-1	HOSE-POLYVINYLCHLORIDE-3/4 ID	-----	-----	-----	-----	-----	-----	AR	
	S1775-2	HOSE-POLYVINYLCHLORIDE-1/4 ID	-----	-----	-----	-----	-----	-----	AR	
	S1775-3	HOSE-POLYVINYLCHLORIDE-5/8 ID	-----	-----	-----	-----	-----	-----	AR	
	S1775-4	HOSE-POLYVINYLCHLORIDE-3/8 ID	-----	-----	-----	-----	-----	-----	AR	
NOTE. *PART NUMBER LISTED IN TEXT IS .04 THICK WITH A 1/2 INCH RETURN. FOR .04 THICK & 7/8 INCH RETURN CHANGE FIRST DASH NUMBER TO -1. EXAMPLE S1948-1-4. FOR .13 THICK & 1/2 INCH RETURN CHANGE FIRST DASH NUMBER TO -3. EXAMPLE S1948-3-4. NOTE. CHECK CESSNA SUPPLY DIVISION FOR AVAILABILITY & UNIT OF MEASURE BEFORE ORDERING.										

152 & A152 Parts Catalog

Registration Markings

***ABCDEFGHIJKLMN
OPQRSTUVWXYZ
-1234567890***

LEFT HAND SLANT
(LEFT SIDE OF AIRPLANE)

**ABCDEFGHIJKLMN
OPQRSTUVWXYZ
-1234567890**

RIGHT HAND SLANT
(RIGHT SIDE OF AIRPLANE)

**ABCDEFGHIJKLMN
OPQRSTUVWXYZ
-1234567890**

Figure 1A. (Sheet 1 of 3) Registration Markings

152 & A152 Parts Catalog

Registration Markings (Cont)

S1500 TYPE STENCILS * FOR SLANT GOTHIC LETTERS & NUMERALS

LETTERS AND NUMERALS ARE AVAILABLE IN 10 INCH AND 12 INCH HEIGHTS IN EITHER LEFT HAND OR RIGHT HAND SLANT.

LETTERS AVAILABLE ARE A THRU Z.
NUMERALS AVAILABLE ARE 0 THRU 9.

TO ORDER:

EACH LETTER OR NUMERAL WANTED MUST BE ORDERED BY GIVING BASIC PART NUMBER, FOLLOWED BY HEIGHT DESIRED, FOLLOWED BY SPECIFIC LETTER OR NUMERAL AND THE DESIGNATOR L OR R TO INDICATE LEFT OR RIGHT HAND SLANT.

EXAMPLE:

EXAMPLE:

	51500	-	10	-	M	L	
BASIC PART NO.							DIRECTION OF SLANT
							LETTER WANTED
			HEIGHT WANTED				

**S1600 TYPE STENCILS *
FOR VERTICAL GOTHIC LETTERS & NUMERALS**

LETTERS AND NUMERALS ARE AVAILABLE IN 6 INCH, 12 INCH AND 20 INCH HEIGHTS. LETTERS AVAILABLE ARE A THRU Z. NUMERALS AVAILABLE ARE 0 THRU 9.

TO ORDER:

EACH LETTER OR NUMERAL WANTED MUST BE ORDERED BY
GIVING BASIC PART NUMBER, FOLLOWED BY HEIGHT DESIRED,
FOLLOWED BY SPECIFIC LETTER OR NUMERAL WANTED.

EXAMPLE:

EXAMPLE: 51600 - 20 - N

BASIC PART NO.				LETTER WANTED
				HEIGHT WANTED

★ EACH STENCIL PROVIDES FOR EITHER
BACKGROUND OR CENTER MASK.

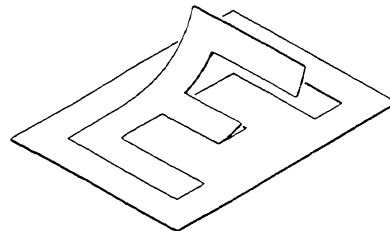


Figure 1A. (Sheet 2 of 3) Registration Markings

152 & A152 Parts Catalog

Registration Markings (Cont)

**ABCDEFGHIJKLMN
OPQRSTUVWXYZ
1234567890**

S2400 TYPE DECALS*

3 INCH VERTICAL GOTHIC LETTERS & NUMERALS

LETTERS & NUMERALS ARE 3 INCHES IN HEIGHT AND AVAILABLE IN WHITE (W), GOLD (G) OR BRONZE (B). LETTERS AVAILABLE ARE A THRU Z. NUMERALS AVAILABLE ARE 0 THRU 9.

TO ORDER:

EACH LETTER OR NUMERAL WANTED MUST BE ORDERED GIVING THE BASIC PART NUMBER, FOLLOWED BY THE COLOR, FOLLOWED BY THE HEIGHT(3), FOLLOWED BY THE SPECIFIC LETTER OR NUMERAL WANTED.

EXAMPLE:

	<u>S2400</u>	<u>G</u>	<u>3</u>	<u>A</u>	
BASIC PART NO.	_____	_____	_____	_____	LETTER WANTED
COLOR WANTED	_____	_____	_____	_____	HEIGHT

* PRESSURE SENSITIVE ADHESIVE BACKED VINYL FILM

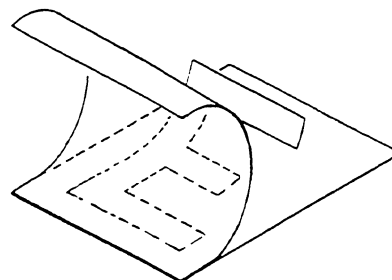


Figure 1A. (Sheet 3 of 3) Registration Markings

152 & A152 Parts Catalog

Placards

1 CESSNA 2 REIMS/CESSNA 3 CESSNA/aerobat

1A *CESSNA* 2A *REIMS/CESSNA* 3A *aerobat*

1B CESSNA 2B REIMS/CESSNA 3B AEROBAT



4 152 5 152 II 6 F152 7 F152 II

4A **152** 5A **152 II** 6A **F152** 7A **F152 II**

4B CESSNA 152 5B CESSNA 152 II 6B F152

7B F152 II 7C FA152 7D TakeOff


7E 152 7F AEROBAT 7G 

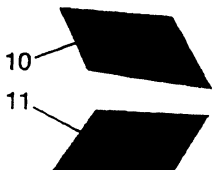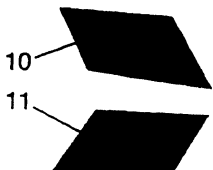8 *152* 9 *152 II* 9A *152 T* 10  11 

152 SERIAL 15279406 THRU 15285594
F152 SERIAL F15201429 THRU F15201928
A152 SERIAL A1520735 THRU A1521014
FA152 SERIAL FA1520337 THRU FA1520382

Figure 2. (Sheet 1 of 3) Placards, Nameplates & Exterior Markings


152 & A152 Parts Catalog

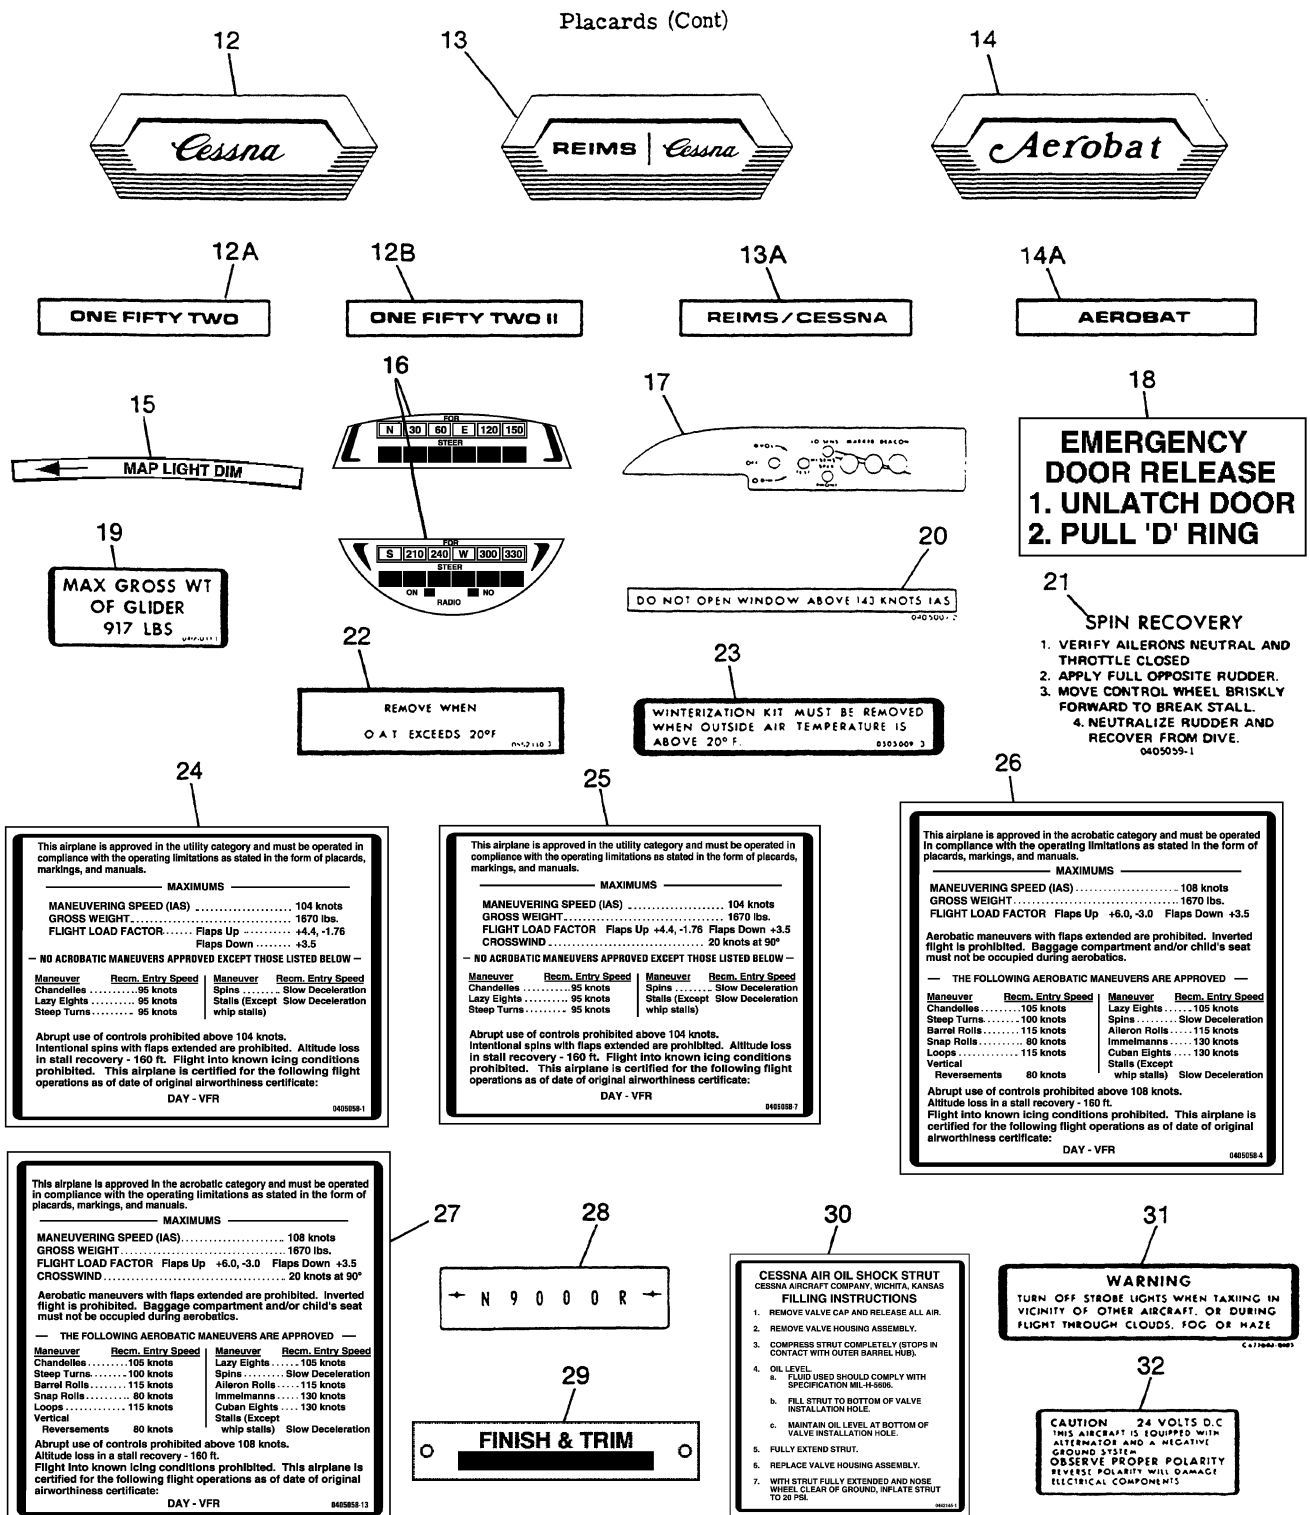

152 SERIAL 15279406 THRU 15285594
F152 SERIAL F15201429 THRU F15201928
A152 SERIAL A1520735 THRU A1521014
FA152 SERIAL FA1520337 THRU FA1520382
Figure 2. (Sheet 2 of 3) Placards, Nameplates & Exterior Markings

152 & A152 Parts Catalog

Placards (Cont)

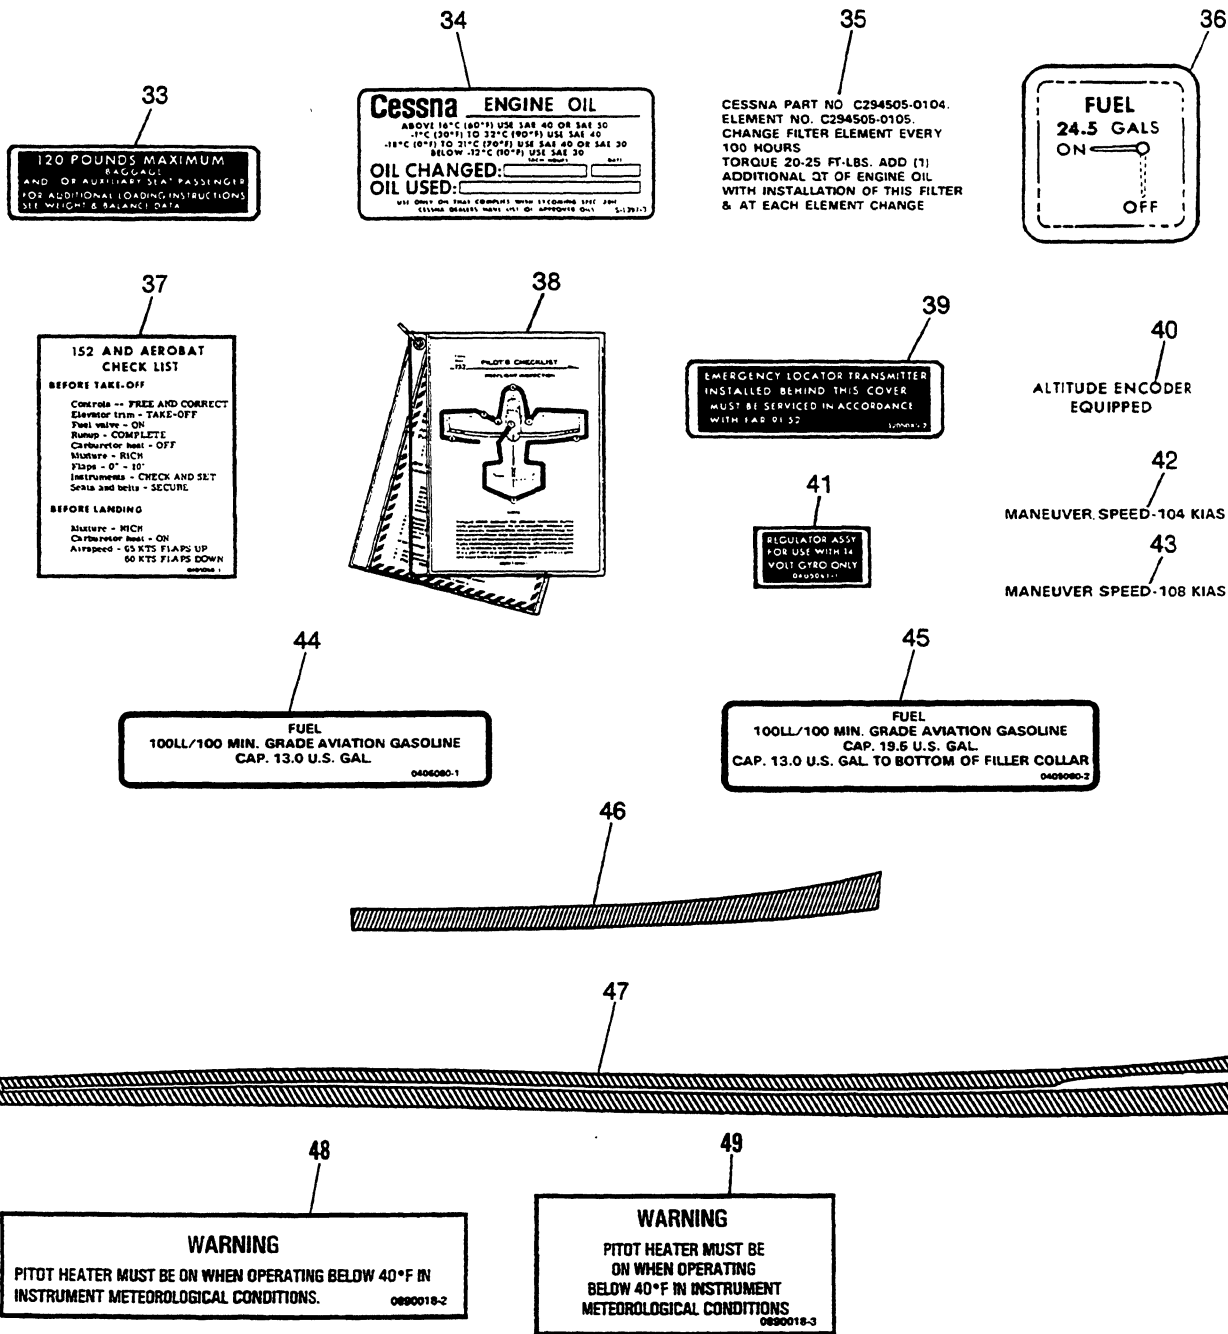

152 SERIAL 15279406 THRU 15285594
F152 SERIAL F15201429 THRU F15201928
A152 SERIAL A1520735 THRU A1521014
FA152 SERIAL FA1520337 THRU FA1520382

Figure 2. (Sheet 3 of 3) Placards, Nameplates & Exterior Markings

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
2 -		PLACARDS, NAMEPLATES & EXTERIOR MARKINGS -----	NP	BC
- 1	1705041-1	NAMEPLATE-EXTERIOR LH CESSNA GOLD LETTERS -----	1	J
	1705041-2	NAMEPLATE-EXTERIOR RH CESSNA GOLD LETTERS -----	1	K
	1205237-1	NAMEPLATE-EXTERIOR CESSNA BLACK LETTERS -----	1	K
	1205237-2	NAMEPLATE-EXTERIOR CESSNA WHITE LETTERS -----	2	K
- 1A	0405064-1	NAMEPLATE-EXTERIOR CESSNA BLACK LETTERS -----	2	V
	0405064-3	NAMEPLATE-EXTERIOR CESSNA WHITE LETTERS -----	2	M
- 1B	0405072-2	NAMEPLATE-EXTERIOR CESSNA BRONZE LETTERS -----	2	X
	0405072-1	NAMEPLATE-EXTERIOR CESSNA WHITE LETTERS -----	2	BB
	0405072-3	NAMEPLATE-EXTERIOR CESSNA BLUE LETTERS -----	2	AS
- 2	1705042-1	NAMEPLATE-EXTERIOR REIMS/CESSNA BLACK LETTERS -----	2	B
	1705042-2	NAMEPLATE-EXTERIOR REIMS/CESSNA WHITE LETTERS -----	2	B
- 2A	0405064-2	NAMEPLATE-EXTERIOR REIMS/CESSNA BLACK LETTERS -----	2	Z
	0405064-4	NAMEPLATE-EXTERIOR REIMS/CESSNA WHITE LETTERS -----	2	P
- 2B	0405074-1	NAMEPLATE-EXTERIOR REIMS/CESSNA BRONZE LETTERS -----	2	AB
	0405074-3	NAMEPLATE-EXTERIOR REIMS/CESSNA BRONZE LETTERS -----	2	AM
- 3	0405048-1	NAMEPLATE-EXTERIOR CESSNA/AEROBAT -----	2	Q
- 3A	0405065-1	NAMEPLATE-EXTERIOR AEROBAT BLACK LETTERS -----	2	Y
- 3B	0405071-1	NAMEPLATE-EXTERIOR AEROBAT WHITE LETTERS -----	2	AC
- 4	0405056-7	PLACARD-EXTERIOR 152 BLACK LETTERS -----	2	A
	0405056-8	PLACARD-EXTERIOR 152 WHITE LETTERS -----	2	A
- 4A	0405063-1	PLACARD-EXTERIOR 152 GOLD LETTERS -----	2	V
- 4B	0405075-2	NAMEPLATE-EXTERIOR CESSNA 152 BRONZE LETTERS -----	2	W
	0405075-1	NAMEPLATE-EXTERIOR CESSNA 152 WHITE LETTERS -----	2	W
- 5	0405056-9	PLACARD-EXTERIOR 152II BLACK LETTERS -----	2	A
	0405056-11	PLACARD-EXTERIOR 152II WHITE LETTERS -----	2	A
- 5A	0405063-2	PLACARD-EXTERIOR 152II GOLD LETTERS -----	2	V
- 5B	0405075-4	NAMEPLATE-EXTERIOR CESSNA 152II BRONZE LETTERS -----	2	W
	0405075-3	NAMEPLATE-EXTERIOR CESSNA 152II WHITE LETTERS -----	2	W
- 6	0405056-5	PLACARD-EXTERIOR F152 BLACK LETTERS -----	2	D
	0405056-6	PLACARD-EXTERIOR F152 WHITE LETTERS -----	2	D
- 6A	0405063-3	PLACARD-EXTERIOR F152 GOLD LETTERS -----	2	Z
- 6B	0405073-1	PLACARD-EXTERIOR F152 WHITE LETTERS -----	2	AA
- 7	0405056-10	PLACARD-EXTERIOR F152II BLACK LETTERS -----	2	D
	0405056-12	PLACARD-EXTERIOR F152II WHITE LETTERS -----	2	D
- 7A	0405063-4	PLACARD-EXTERIOR F152II GOLD LETTERS -----	2	Z
- 7B	0405073-3	PLACARD-EXTERIOR F152II WHITE LETTERS -----	2	AA
- 7C	0405073-2	PLACARD-EXTERIOR FA152 BRONZE LETTERS -----	2	AD
- 7D	0405046-2	PLACARD-EXTERIOR DISCOVER FLYING -----	2	H
- 7E	0405062-1	MASK-EXTERIOR 152 -----	2	K
- 7F	0405078-1	NAMEPLATE-EXTERIOR AEROBAT BLACK & RED -----	2	AP
	0405078-2	NAMEPLATE-EXTERIOR AEROBAT BLUE & RED -----	2	AT
- 7G	0405077-1	PLACARD-EXTERIOR BLACK & WHITE -----	2	AP
	0405077-2	PLACARD-EXTERIOR BLUE & RED -----	2	AT
- 8	0405076-1	PLACARD-EXTERIOR 152 -----	2	AN
- 9	0405076-2	PLACARD-EXTERIOR 152II -----	2	AN
- 9A	0405079-1	PLACARD-EXTERIOR 152T -----	2	AU
- 10	0405054-1	PLACARD-EXTERIOR LH -----	1	E
- 11	0405054-2	PLACARD-EXTERIOR RH -----	1	E
- 12	0405031-1	EMBLEM-CONTROL WHEEL -----	2	A
- 12A	0405066-3	EMBLEM-CONTROL WHEEL -----	2	L
- 12B	0405066-4	EMBLEM-CONTROL WHEEL -----	2	L
- 13	0405031-2	EMBLEM-CONTROL WHEEL -----	2	D
- 13A	0405066-2	EMBLEM-CONTROL WHEEL -----	2	N
- 14	0405031-9	EMBLEM-CONTROL WHEEL -----	2	Q
- 14A	0405066-1	EMBLEM-CONTROL WHEEL -----	2	R
- 15	1205004-1	PLACARD-MAP LIGHT -----	1	T
	0415035-1	PLACARD-MAP LIGHT -----	1	AR
- 16	0400213-6	PLACARD SET-COMPASS CORRECTION -----	1	
- 17	0405026-4	PLACARD-MARKER BEACON -----	1	T
- 18	0405003-2	PLACARD-EMERGENCY DOOR RELEASE -----	2	C
- 19	0405033-1	PLACARD-GLIDER TOW HOOK -----	1	
- 20	0405007-2	PLACARD-WINDOW LIMITATIONS -----	2	Q
- 21	0405059-1	PLACARD-SPIN BLACK LETTERS -----	1	AF
	0405059-2-E85	PLACARD-SPIN WHITE ON BLACK BACKGROUND -----	1	AG
- 22	0552110-3	PLACARD-WINTERIZATION COVER -----	2	
- 23	0505009-3	PLACARD-WINTERIZATION BLACK LETTERS -----	1	AF
	0505009-2-E85	PLACARD-WINTERIZATION WHITE ON BLACK BACKGROUND -----	1	AG

CONTINUED ON NEXT PAGE

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE		
		1 2 3 4 5 6 7				
2 -24	0405058-3	PLACARD-OPERATIONAL LIMITATIONS	152	VFR-IFR -----	AR	A
	0405058-2	PLACARD-OPERATIONAL LIMITATIONS	152	DAY-NIGHT-VFR ---	AR	A
	0405058-1	PLACARD-OPERATIONAL LIMITATIONS	152	DAY-VFR -----	AR	A
	0405068-3	PLACARD-OPERATIONAL LIMITATIONS	152 & F152	-----	AR	U
		DAY-NIGHT-VFR-IFR				
	0405068-2	PLACARD-OPERATIONAL LIMITATIONS	152 & F152	-----	AR	U
		DAY-NIGHT-VFR				
	0405068-1	PLACARD-OPERATIONAL LIMITATIONS	152 & F152	DAY-VFR --	AR	U
	0405068-9	PLACARD-OPERATIONAL LIMITATIONS	F152	-----	AR	N
		DAY-NIGHT-VFR-IFR (IN FRENCH)				
-25	0405068-8	PLACARD-OPERATIONAL LIMITATIONS	F152	-----	AR	N
		DAY-NIGHT-VFR (IN FRENCH)				
	0405068-7	PLACARD-OPERATIONAL LIMITATIONS	F152	-----	AR	N
		DAY-VFR (IN FRENCH)				
	0405058-11	PLACARD-OPERATIONAL LIMITATIONS	F152	VFR-IFR -----	AR	D
	0405058-9	PLACARD-OPERATIONAL LIMITATIONS	F152	DAY-NIGHT-VFR --	AR	D
	0405058-7	PLACARD-OPERATIONAL LIMITATIONS	F152	DAY-VFR -----	AR	D
	0405058-12	PLACARD-OPERATIONAL LIMITATIONS	F152	VFR-IFR -----	AR	D
		(IN FRENCH)				
	0405058-10	PLACARD-OPERATIONAL LIMITATIONS	F152	DAY-NIGHT-VFR --	AR	D
-26		(IN FRENCH)				
	0405058-8	PLACARD-OPERATIONAL LIMITATIONS	F152	DAY-VFR -----	AR	D
		(IN FRENCH)				
	0405058-6	PLACARD-OPERATIONAL LIMITATIONS	A152	VFR-IFR -----	AR	F
	0405058-5	PLACARD-OPERATIONAL LIMITATIONS	A152	DAY-NIGHT-VFR --	AR	F
	0405058-4	PLACARD-OPERATIONAL LIMITATIONS	A152	DAY-VFR -----	AR	F
	0405068-6	PLACARD-OPERATIONAL LIMITATIONS	A152 & FA152	-----	AR	AY
		DAY-NIGHT-VFR-IFR				
	0405068-15	PLACARD-OPERATIONAL LIMITATIONS	A152 & FA152	-----	AR	AZ
		DAY-NIGHT-VFR-IFR				
-27	0405068-5	PLACARD-OPERATIONAL LIMITATIONS	A152 & FA152	-----	AR	AY
		DAY-NIGHT-VFR				
	0405068-14	PLACARD-OPERATIONAL LIMITATIONS	A152 & FA152	-----	AR	AZ
		DAY-NIGHT-VFR				
	0405068-4	PLACARD-OPERATIONAL LIMITATIONS	A152 & FA152	DAY-VFR	AR	AY
	0405068-13	PLACARD-OPERATIONAL LIMITATIONS	A152 & FA152	DAY-VFR	AR	AZ
	0405068-12	PLACARD-OPERATIONAL LIMITATIONS	FA152	-----	AR	S
		DAY-NIGHT-VFR-IFR (IN FRENCH)				
	0405068-11	PLACARD-OPERATIONAL LIMITATIONS	FA152	-----	AR	S
		DAY-NIGHT-VFR (IN FRENCH)				
-28	0405068-10	PLACARD-OPERATIONAL LIMITATIONS	FA152	-----	AR	S
		DAY-VFR (IN FRENCH)				
	0405058-17	PLACARD-OPERATIONAL LIMITATIONS	FA152	VFR-IFR -----	AR	G
	0405058-15	PLACARD-OPERATIONAL LIMITATIONS	FA152	DAY-NIGHT-VFR --	AR	G
	0405058-13	PLACARD-OPERATIONAL LIMITATIONS	FA152	DAY-VFR -----	AR	G
	0405058-18	PLACARD-OPERATIONAL LIMITATIONS	FA152	VFR-IFR -----	AR	G
		(IN FRENCH)				
	0405058-16	PLACARD-OPERATIONAL LIMITATIONS	FA152	DAY-NIGHT-VFR --	AR	G
		(IN FRENCH)				
	0405058-14	PLACARD-OPERATIONAL LIMITATIONS	FA152	DAY-VFR -----	AR	G
	(IN FRENCH)					
-29	0713047	PLACARD ASSY-AIRPLANE IDENTIFICATION		-----	NP	
-30	0442145-1	PLATE-FINISH & TRIM		-----	1	
-31	C622003-0105	PLACARD-NOSE GEAR SHOCK STRUT		-----	1	
-32	1205024-2	PLACARD-STROBE		-----	1	T
-33	0505007-1	PLACARD-BATTERY BOX & GROUND SERVICE PLUG		-----	1	
	0505007-4	PLACARD-BAGGAGE & OR AUXILIARY SEAT		-----	1	BA
-34	S1397-13	PLACARD-BAGGAGE		-----	1	AZ
-35	0405070-1	PLACARD-ENGINE OIL CHANGE		-----	1	
-36	0405050-1	PLACARD-OIL FILTER		-----	1	
	0405050-2	PLACARD-FUEL VALVE 24.5 GALS		-----	1	
-37	0405060-1	PLACARD-FUEL VALVE 37.5 GALS LONG RANGE		-----	1	
		PLACARD-PILOTS CHECK LIST		-----	1	
CONTINUED ON NEXT PAGE						

152 & A152 Parts Catalog


FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION							UNITS PER ASSY	USABLE ON CODE
		1	2	3	4	5	6	7		
2 -38	D6009	CHECK	LIST	ASSY-PILOT	-----				1	E
	D6026	CHECK	LIST	ASSY-PILOT	-----				1	AE
	D6042	CHECK	LIST	ASSY-PILOT	-----				1	AK
	D6063	CHECK	LIST	ASSY-PILOT	-----				1	AV
	D6081	CHECK	LIST	ASSY-PILOT	-----				1	AW
	D6010	CHECK	LIST	ASSY-PILOT	AEROBAT	-----			1	Q
	D6027	CHECK	LIST	ASSY-PILOT	AEROBAT	-----			1	Y
	D6043	CHECK	LIST	ASSY-PILOT	AEROBAT	-----			1	AL
	D6064	CHECK	LIST	ASSY-PILOT	AEROBAT	-----			1	AP
	D6082	CHECK	LIST	ASSY-PILOT	AEROBAT	-----			1	AT
-39	1205085-2	PLACARD-EMERGENCY LOCATOR	TRANSMITTER	-----					1	
-40	0405044-1	PLACARD-BLIND ENCODER	BLACK LETTERS	-----					1	AF
	0405044-3-E85	PLACARD-BLIND ENCODER	WHITE ON BLACK BACKGROUND	-----					1	AG
-41	0405061-1	PLACARD-REGULATOR	-----						1	
-42	0405069-1	PLACARD-MANEUVERING SPEED	BLACK LETTERS	-----					1	AE
	0405069-3-E85	PLACARD-MANEUVERING SPEED	WHITE ON BLACK BACKGROUND	-----					1	AH
-43	0405069-2	PLACARD-MANEUVERING SPEED	BLACK LETTERS	-----					1	Y
	0405069-4-E85	PLACARD-MANEUVERING SPEED	WHITE ON BLACK BACKGROUND	-----					1	AJ
-44	0405080-1	PLACARD-FUEL CAPACITY	STD RANGE	-----					2	AX
-45	0405080-2	PLACARD-FUEL CAPACITY	EXTENDED RANGE	-----					2	AX
-46	0405081-1	PLACARD-EXTERIOR LH	BLUE	-----					1	AS
	0405081-2	PLACARD-EXTERIOR RH	BLUE	-----					1	AS
-47	C0757660A	DECAL KIT-EXTERIOR STRIPE	MDAI	-----					1	AS
-48	0890018-2	STICKER-PITOT HEAT WARNING	POH MANUAL	-----					1	
-49	0890018-3	PLACARD-PITOT HEAT WARNING	-----						1	
A---152 SERIAL 15279406 THRU 15282031 B---F152 SERIAL F15201429 THRU F15201528 FA152 SERIAL FA1520337 THRU FA1520347 C---A152 SERIAL A1520735 THRU A1521014 FA152 SERIAL FA1520337 THRU FA1520382 D---F152 SERIAL F15201429 THRU F15201528 E---152 SERIAL 15279406 THRU 15282031 F152 SERIAL F15201429 THRU F15201528 F---A152 SERIAL A1520735 THRU A1520808 G---FA152 SERIAL FA1520337 THRU FA1520347 H---152 SERIAL 15279406 THRU 15282031 A152 SERIAL A1520735 THRU A1520808 J---152 SERIAL 15279497 & 15279498 K---152 SERIAL 15279406 THRU 15279476 & 15279499 THRU 15282031 L---152 SERIAL 15282032 THRU 15285611 M---152 SERIAL 15282032 THRU 15283591 A152 SERIAL A1520809 THRU A1520878 N---F152 SERIAL F15201529 THRU F15201928 P---F152 SERIAL F15201529 THRU F15201673 FA152 SERIAL FA1520348 THRU FA1520357 Q---A152 SERIAL A1520735 THRU A1520808 FA152 SERIAL FA1520337 THRU FA1520347 R---A152 SERIAL A1520809 THRU A1521014 FA152 SERIAL FA1520348 THRU FA1520382 S---FA152 SERIAL FA1520348 THRU FA1520387 T---152 SERIAL 15279406 THRU 15282031 F152 SERIAL F15201429 THRU F15201528 A152 SERIAL A1520735 THRU A1520808 FA152 SERIAL FA1520337 THRU FA1520347 U---152 SERIAL 15282032 THRU 15285594 F152 SERIAL F15201529 THRU F15201928 V---152 SERIAL 15282032 THRU 15283591 W---152 SERIAL 15283592 THRU 15284541 X---152 SERIAL 15283592 THRU 15285594 A152 SERIAL A1520879 THRU A1520983 Y---A152 SERIAL A1520809 THRU A1520878 FA152 SERIAL FA1520348 THRU FA1520357 Z---F152 SERIAL F15201529 THRU F15201673 AA---F152 SERIAL F15201674 THRU F15201808 AB---F152 SERIAL F15201674 THRU F15201808 FA152 SERIAL FA1520358 THRU FA1520372 AC---A152 SERIAL A1520879 THRU A1520943 AD---FA152 SERIAL FA1520358 THRU FA1520372 AE---152 SERIAL 15282032 THRU 15283591 F152 SERIAL F15201529 THRU F15201673										
CONTINUED ON NEXT PAGE										

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
2 -		AF---152 SERIAL 15279406 THRU 15283591 F152 SERIAL F15201429 THRU F15201673 A152 SERIAL A1520735 THRU A1520878 FA152 SERIAL FA1520337 THRU FA1520357 AG---152 SERIAL 15283592 THRU 15285594 F152 SERIAL F15201674 THRU F15201928 A152 SERIAL A1520879 THRU A1521014 FA152 SERIAL FA1520358 THRU FA1520382 AH---152 SERIAL 15283592 THRU 15285594 F152 SERIAL F15201674 THRU F15201928 AJ---A152 SERIAL A1520879 THRU A1521014 FA152 SERIAL FA1520358 THRU FA1520382 AK---152 SERIAL 15283592 THRU 15284541 F152 SERIAL F15201674 THRU F15201808 AL---A152 SERIAL A1520879 THRU A1520943 FA152 SERIAL FA1520358 THRU FA1520373 AM---F152 SERIAL F15201809 THRU F15201928 FA152 SERIAL FA1520373 THRU FA1520382 AN---152 SERIAL 15284542 THRU 15285594 F152 SERIAL F15201809 THRU F15201928 AP---A152 SERIAL A1520944 THRU A1520983 FA152 SERIAL FA1520373 THRU FA1520377 AR---152 SERIAL 15282032 THRU 15285594 F152 SERIAL F15201529 THRU F15201928 A152 SERIAL A1520809 THRU A1521014 FA152 SERIAL FA1520348 THRU FA1520382 AS---A152 SERIAL A1520984 THRU A1521014 AT---A152 SERIAL A1520984 THRU A1521014 FA152 SERIAL FA1520378 THRU FA1520382 AU---152 SERIAL 15284542 THRU 15285594 AV---152 SERIAL 15284542 THRU 15285161 F152 SERIAL F15201809 THRU F15201893 AW---152 SERIAL 15285162 THRU 15285594 F152 SERIAL F15201894 THRU F15201928 AX---152 SERIAL 15284669 THRU 15285594 F152 SERIAL F15201909 THRU F15201928 A152 SERIAL A1520958 THRU A1521014 FA152 SERIAL FA1520378 THRU FA1520382 AY---A152 SERIAL A1520809 THRU A1520973 FA152 SERIAL FA1520348 THRU FA1520382 AZ---A152 SERIAL A1520974 THRU A1521014 BA---152 SERIAL 15279406 THRU 15285594 F152 SERIAL F15201429 THRU F15201928 A152 SERIAL A1520735 THRU A1520973 FA152 SERIAL F1520337 THRU FA1520382 BB---152 SERIAL 15283592 THRU 15285594 BC---152 SERIAL 15279406 THRU 15285594 F152 SERIAL F15201429 THRU F15201928 A152 SERIAL A1520735 THRU A1521014 FA152 SERIAL FA1520337 THRU FA1520382		

152 & A152 Parts Catalog

Placards (Cont)

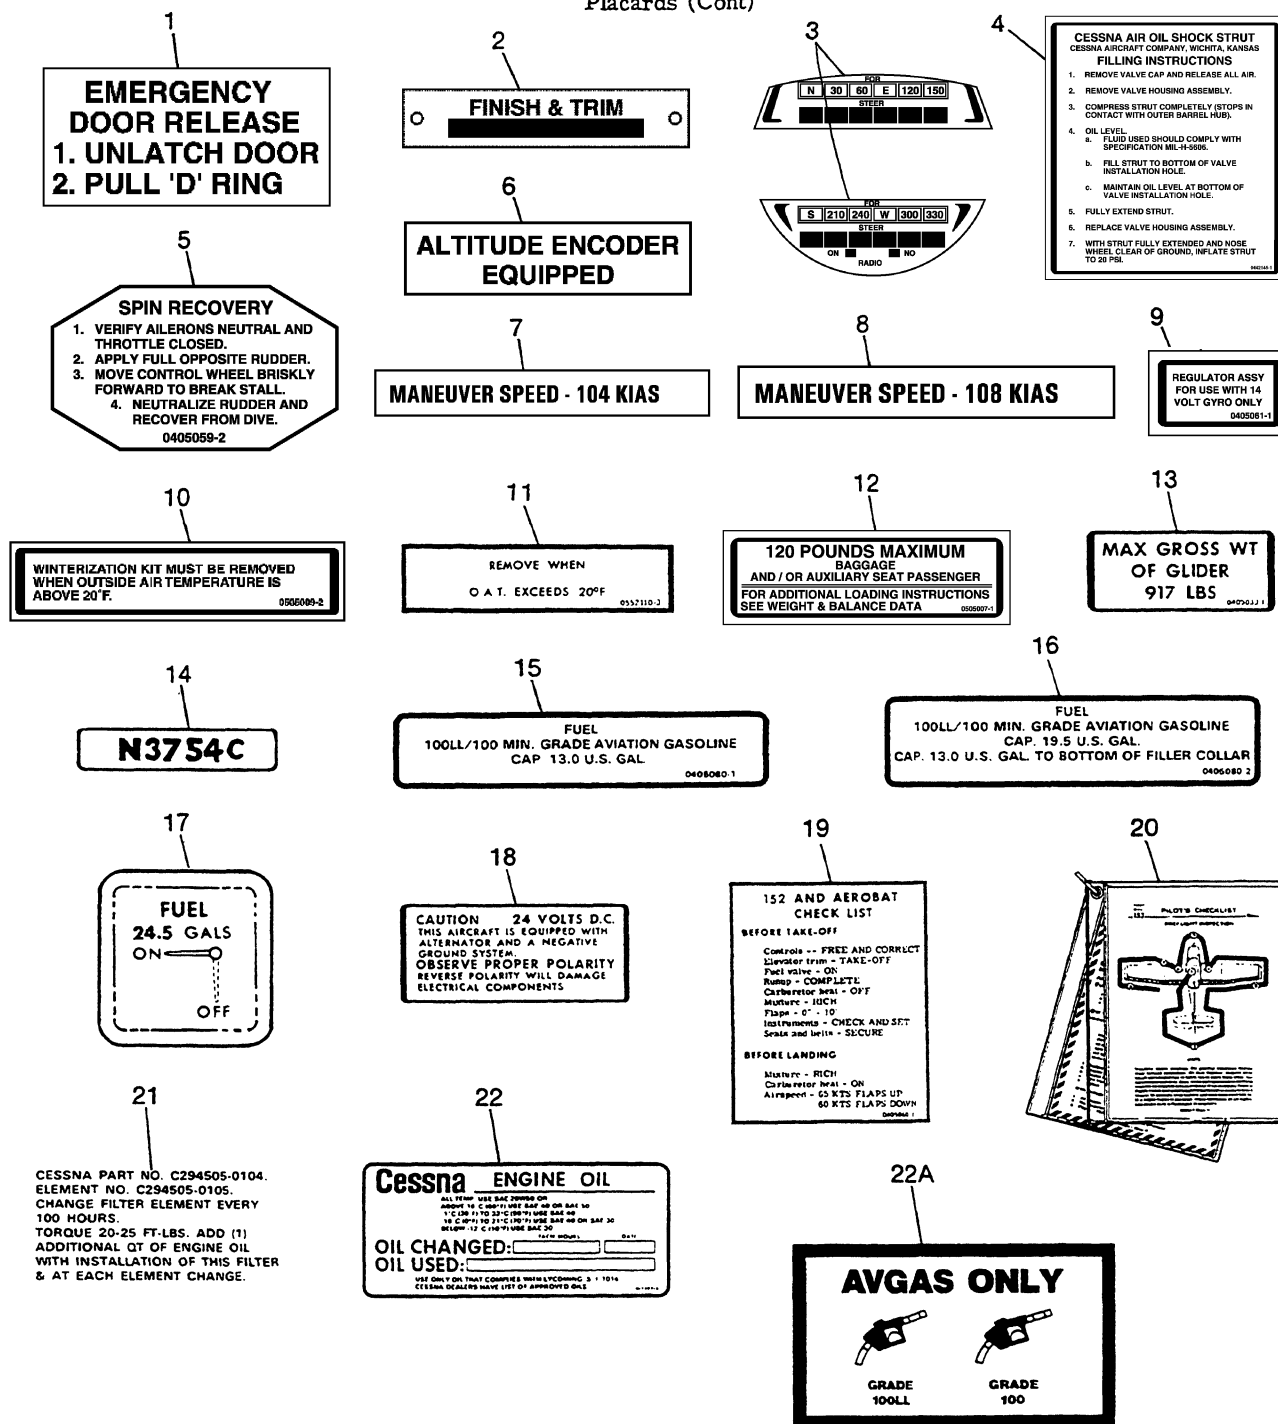


152 SERIAL 15285595 & ON
F152 SERIAL F15201929 & ON
A152 SERIAL A1521015 & ON
FA152 SERIAL FA1520383 & ON

Figure 2A. (Sheet 1 of 2) Placards, Nameplates & Exterior Markings

152 & A152 Parts Catalog

Placards (Cont)

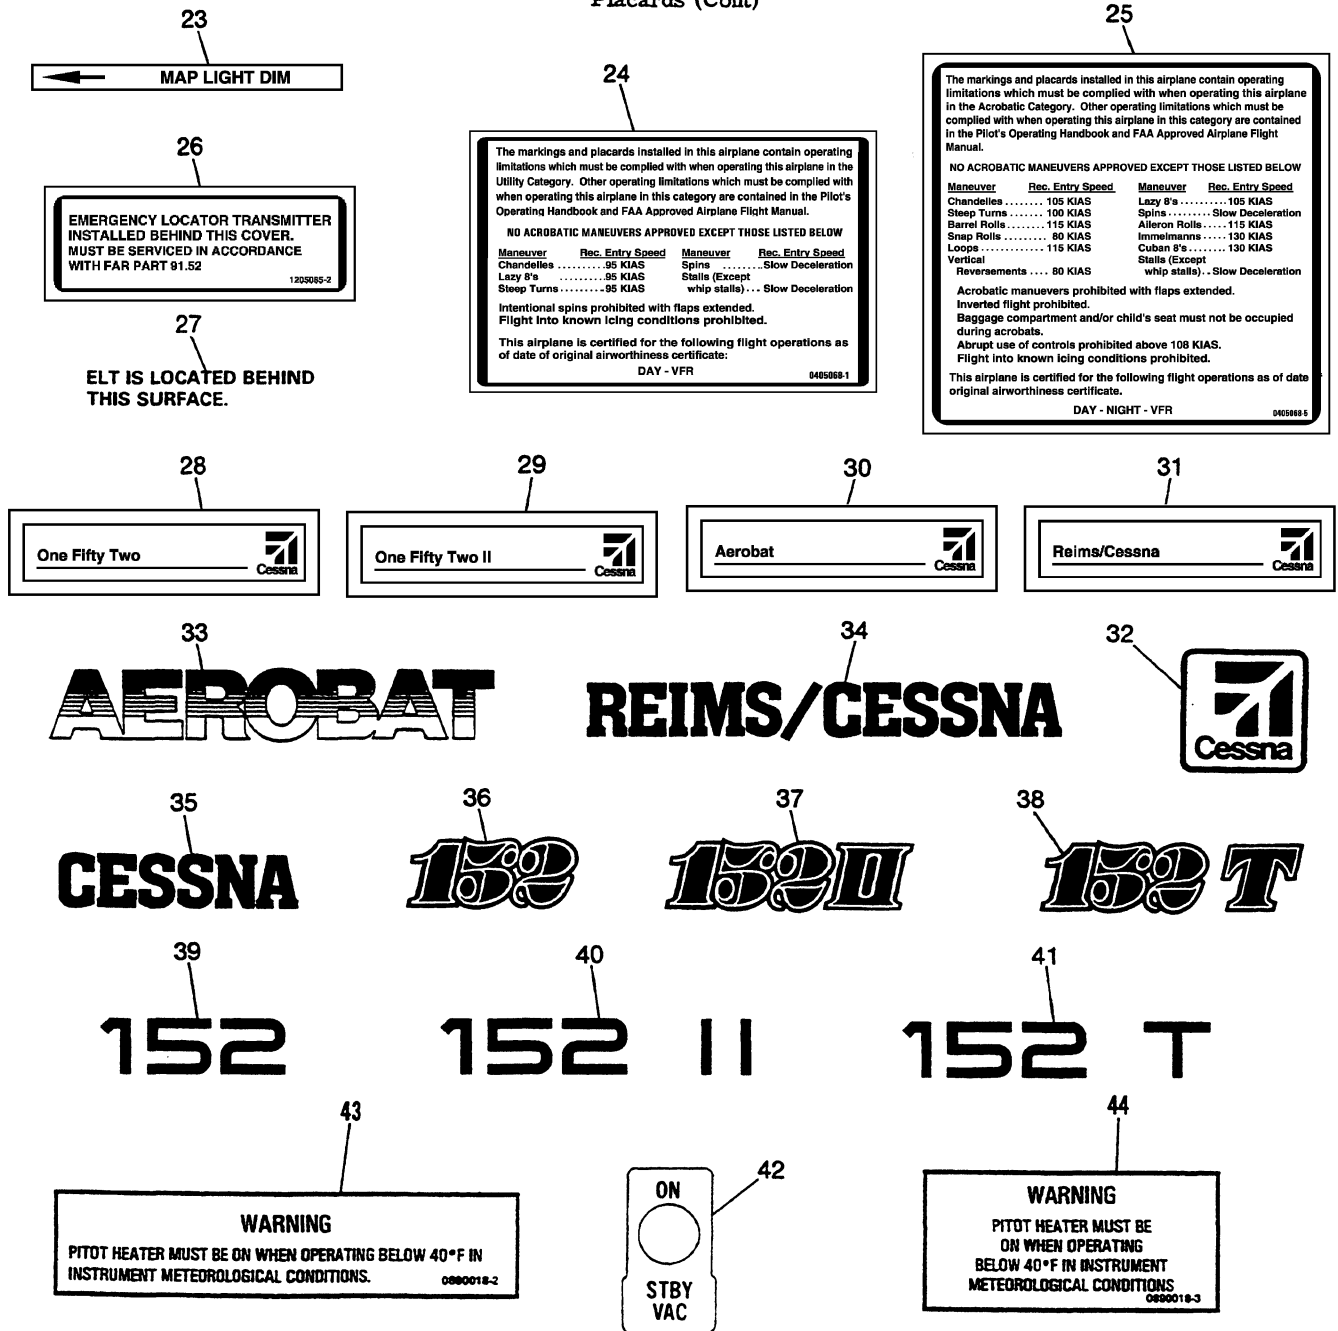

152 SERIAL 15285595 & ON
F152 SERIAL F15201929 & ON
A152 SERIAL A1521015 & ON
FA152 SERIAL FA1520383 & ON

Figure 2A. (Sheet 2 of 2) Placards, Nameplates & Exterior Markings

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
2A-		PLACARDS, NAMEPLATES & EXTERIOR MARKINGS -----	NP	A
- 1	0405003-2	PLACARD-EMERGENCY DOOR RELEASE -----	2	B
- 2	0713047	PLATE-FINISH & TRIM -----	1	
- 3	0400213-6	PLACARD SET-COMPASS CORRECTION -----	1	
- 4	0442145-1	PLACARD-NOSE GEAR SHOCK STRUT -----	1	
- 5	0405059-2-E85	PLACARD-SPIN WHITE ON BLACK BACKGROUND -----	1	
	0405059-2-E84	PLACARD-SPIN WHITE ON CLEAR BACKGROUND -----	1	Q
- 6	0405044-3-E85	PLACARD-BLIND ENCODER WHITE ON BLACK BACKGROUND -----	1	
	0405044-3-E84	PLACARD-BLIND ENCODER WHITE ON CLEAR BACKGROUND -----	1	Q
- 7	0405069-3-E85	PLACARD-MANEUVERING SPEED WHITE ON BLACK BACKGROUND -----	1	C
	0405069-3-E84	PLACARD-MANEUVERING SPEED WHITE ON CLEAR BACKGROUND -----	1	R
- 8	0405069-4-E85	PLACARD-MANEUVERING SPEED WHITE ON BLACK BACKGROUND -----	1	B
	0405069-4-E84	PLACARD-MANEUVERING SPEED WHITE ON CLEAR BACKGROUND -----	1	S
- 9	0405061-1	PLACARD-REGULATOR -----	1	
-10	0505009-2-E85	PLACARD-WINTERIZATION WHITE ON BLACK BACKGROUND -----	1	
	0505009-2-E84	PLACARD-WINTERIZATION WHITE ON CLEAR BACKGROUND -----	1	Q
-11	0552110-3	PLACARD-WINTERIZATION COVER -----	3	
-12	0505007-1	PLACARD-BAGGAGE & OR AUXILIARY SEAT -----	1	D
	0505007-4	PLACARD-BAGGAGE -----	1	E
-13	0405033-1	PLACARD-GLIDER TOW HOOK -----	1	
-14		PLACARD-AIRPLANE IDENTIFICATION -----	NP	
-15	0405080-1	PLACARD-FUEL CAPACITY STD RANGE -----	2	
-16	0405080-2	PLACARD-FUEL CAPACITY EXTENDED RANGE -----	2	
-17	0405050-1	PLACARD-FUEL VALVE 24.5 GAL -----	1	
	0405050-2	PLACARD-FUEL VALVE 37.5 GAL LONG RANGE -----	1	
-18	1205024-2	PLACARD-BATTERY BOX & GROUND SERVICE PLUG -----	3	
-19	0405060-1	PLACARD-PILOTS CHECKLIST -----	1	P
-20	D6103	CHECKLIST ASSY-PILOT -----	1	N
	D6123	CHECKLIST ASSY-PILOT -----	1	W
	D6141	CHECKLIST ASSY-PILOT -----	1	Y
	D6104	CHECKLIST ASSY-PILOT AEROBAT -----	1	M
	D6124	CHECKLIST ASSY-PILOT AEROBAT -----	1	X
	D6142	CHECKLIST ASSY-PILOT AEROBAT -----	1	Z
-21	0405070-1	PLACARD-OIL FILTER -----	1	
-22	S1397-13	PLACARD-ENGINE OIL CHANGE -----	1	
-22A	S2608-1	PLACARD-AVGAS -----	2	T
-23	0415035-1	PLACARD-MAP LIGHT -----	1	
-24	0405068-3	PLACARD-OPERATIONAL LIMITATIONS 152 & F152 -----	AR	C
	0405068-2	PLACARD-OPERATIONAL LIMITATIONS 152 & F152 -----	AR	C
	0405068-1	PLACARD-OPERATIONAL LIMITATIONS 152 & F152 DAY-VFR -----	AR	C
	0405068-9	PLACARD-OPERATIONAL LIMITATIONS F152 -----	AR	F
	0405068-8	PLACARD-OPERATIONAL LIMITATIONS F152 -----	AR	F
	0405068-7	PLACARD-OPERATIONAL LIMITATIONS F152 -----	AR	F
-25	0405068-6	PLACARD-OPERATIONAL LIMITATIONS FA152 -----	AR	G
	0405068-15	PLACARD-OPERATIONAL LIMITATIONS A152 & F152 -----	AR	E
	0405068-5	PLACARD OPERATIONAL LIMITATIONS FA152 -----	AR	G
	0405068-14	PLACARD-OPERATIONAL LIMITATIONS A152 & FA152 -----	AR	E
	0405068-4	PLACARD-OPERATIONAL LIMITATIONS FA152 DAY-VFR -----	AR	G
	0405068-13	PLACARD-OPERATIONAL LIMITATIONS A152 & FA152 DAY-VFR -----	AR	E
	0405068-12	PLACARD-OPERATIONAL LIMITATIONS FA152 -----	AR	G
	0405068-18	PLACARD-OPERATIONAL LIMITATIONS FA152 -----	AR	H
	0405068-11	PLACARD-OPERATIONAL LIMITATIONS FA152 -----	AR	G
	0405068-17	PLACARD-OPERATIONAL LIMITATIONS -----	AR	H
	0405068-10	PLACARD-OPERATIONAL LIMITATIONS FA152 -----	AR	G
	0405068-16	PLACARD-OPERATIONAL LIMITATIONS -----	AR	H
-26	1205085-2	PLACARD-EMERGENCY LOCATOR -----	1	
-27	0405101-2	PLACARD-ELT LOCATOR BLACK LETTERS CANADIAN ACFT ONLY -----	AR	J
	0405101-1	PLACARD-ELT LOCATOR WHITE LETTERS CANADIAN ACFT ONLY -----	AR	J

CONTINUED ON NEXT PAGE

152 & A152 Parts Catalog

FIGURES AND INDEX NO.	PART NUMBER	DESCRIPTION							UNITS PER ASSY	USABLE ON CODE
		1	2	3	4	5	6	7		
2A-28	0405100-2	EMBLEM-CONTROL WHEEL	152	-----	-----	-----	-----	-----	AR	K
-29	0405100-3	EMBLEM-CONTROL WHEEL	152II	-----	-----	-----	-----	-----	AR	
-30	0405100-1	EMBLEM-CONTROL WHEEL	AEROBAT	-----	-----	-----	-----	-----	AR	V
-31	0405100-4	EMBLEM-CONTROL WHEEL	REIMS/CESSNA	-----	-----	-----	-----	-----	AR	
-32	0505103-1	EMBLEM-EXTERIOR	-----	-----	-----	-----	-----	-----	2	U
-33	0405078-2	NAMEPLATE-EXTERIOR	AEROBAT	BLUE & RED	-----	-----	-----	-----	2	
-34	0405074-3	NAMEPLATE-EXTERIOR	REIMS/CESSNA	BRONZE	-----	-----	-----	-----	2	B
-35	0405072-1	NAMEPLATE-EXTERIOR	CESSNA	WHITE LETTERS	-----	-----	-----	-----	2	
	0405072-2	NAMEPLATE-EXTERIOR	CESSNA	BRONZE LETTERS	-----	-----	-----	-----	2	L
-36	0405072-3	NAMEPLATE-EXTERIOR	CESSNA	BLUE LETTERS	-----	-----	-----	-----	2	
	0405076-1	NAMEPLATE-EXTERIOR	152	-----	-----	-----	-----	-----	2	N
-37	0405076-2	NAMEPLATE-EXTERIOR	152II	-----	-----	-----	-----	-----	2	
	0405079-1	NAMEPLATE-EXTERIOR	152T	-----	-----	-----	-----	-----	2	N
-39	0405082-1	NAMEPLATE-EXTERIOR	152	BLACK LETTERS	-----	-----	-----	-----	2	
	0405082-2	NAMEPLATE-EXTERIOR	152	WHITE LETTERS	-----	-----	-----	-----	2	R
-40	0405082-3	NAMEPLATE-EXTERIOR	152II	BLACK LETTERS	-----	-----	-----	-----	2	
	0405082-4	NAMEPLATE-EXTERIOR	152II	WHITE LETTERS	-----	-----	-----	-----	2	R
-41	0405082-5	NAMEPLATE-EXTERIOR	152T	BLACK LETTERS	-----	-----	-----	-----	2	
	0405082-6	NAMEPLATE-EXTERIOR	152T	WHITE LETTERS	-----	-----	-----	-----	2	W
-42	0405084-3	PLACARD-STANDBY VACUUM	-----	-----	-----	-----	-----	-----	1	
-43	0890018-2	STICKER-PITOT HEAT WARNING	POH MANUAL	-----	-----	-----	-----	-----	1	AA
-44	0890018-3	PLACARD-PITOT HEAT WARNING	-----	-----	-----	-----	-----	-----	1	
A---152 SERIAL 15285595 & ON F152 SERIAL F15201929 & ON A152 SERIAL A1521015 & ON FA152 SERIAL FA1520383 & ON B---A152 SERIAL A1521015 & ON FA152 SERIAL FA1520383 & ON C---152 SERIAL 15285595 & ON F152 SERIAL F15201929 & ON D---152 SERIAL 15285595 & ON F152 SERIAL F15201929 & ON FA152 SERIAL FA1520383 THRU FA1520387 E---A152 SERIAL A1521015 & ON FA152 SERIAL FA1520388 & ON F---F152 SERIAL F15201929 & ON FA152 SERIAL FA1520383 & ON G---FA152 SERIAL FA1520383 THRU FA1520387 H---FA152 SERIAL FA1520388 & ON J---152 SERIAL 15285595 & ON A152 SERIAL A1521015 & ON K---152 SERIAL 15285595 & ON L---F152 SERIAL F15201929 & ON FA152 SERIAL FA1520383 & ON M---A152 SERIAL A1521015 THRU A1521025 FA152 SERIAL FA1520383 THRU FA1520387 N---152 SERIAL 15285595 THRU 15285833 F152 SERIAL F15201929 THRU F15201943 P---152 SERIAL 15285595 THRU 15285833 F152 SERIAL F15201929 THRU F15201943 A152 SERIAL A1521015 THRU A1521025 FA152 SERIAL FA1520383 THRU FA1520387 Q---152 SERIAL 15285834 & ON F152 SERIAL FA15201944 & ON A152 SERIAL A1521026 & ON FA152 SERIAL FA152388 & ON R---152 SERIAL 15285834 & ON F152 SERIAL F15201944 & ON S---A152 SERIAL A1521026 & ON FA152 SERIAL FA1520388 & ON T---152 SERIAL 15285690 & ON F152 SERIAL F15201944 & ON A152 SERIAL A1521021 & ON FA152 SERIAL FA1520388 & ON U---A152 SERIAL A1521015 & ON V---152 SERIAL 15285595 THRU 15285939 W---152 SERIAL 15285834 THRU 15285939 F152 SERIAL F15201944 THRU F15201952 X---A152 SERIAL A1521026 THRU A1521027 Y---152 SERIAL 15285940 & ON Z---A152 SERIAL A1521028 & ON AA---152 SERIAL 15285940 & ON A152 SERIAL A1521028 & ON										

152 & A152 Parts Catalog

Wing

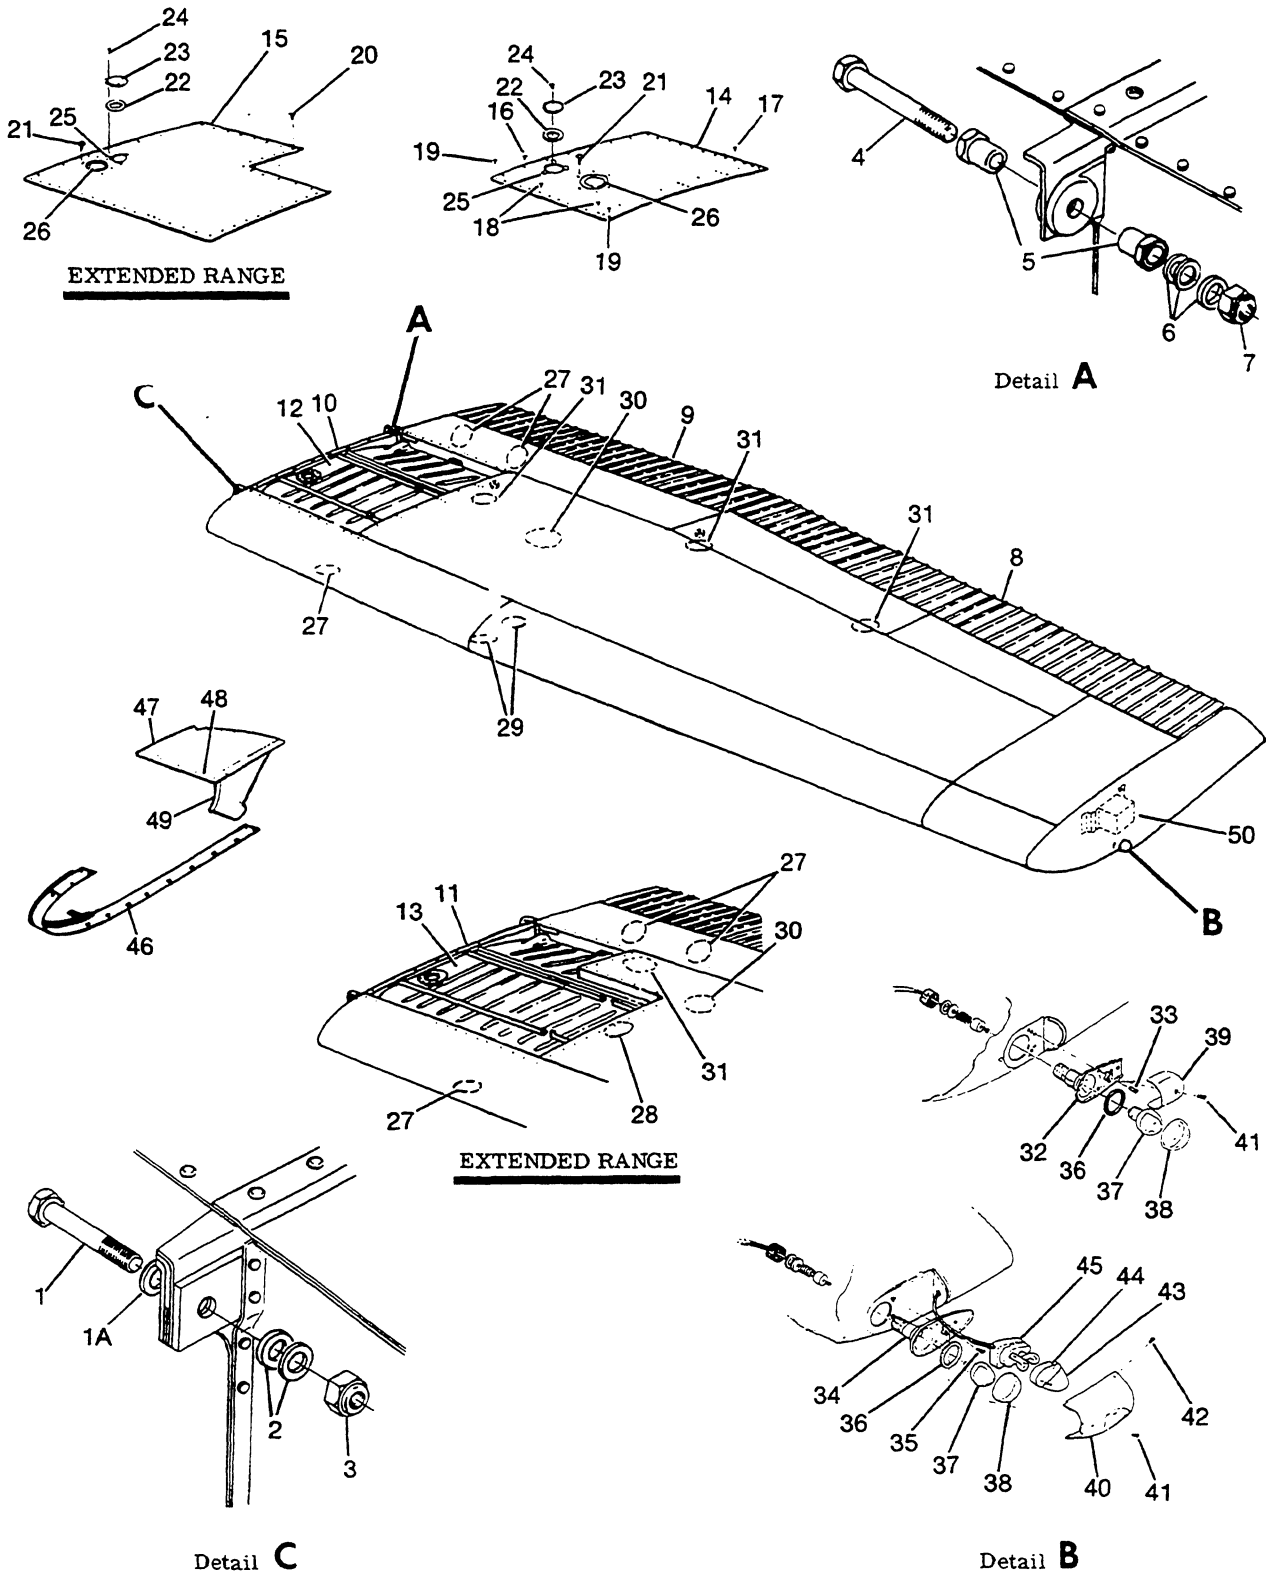


Figure 3. Wing Assembly Complete - Standard & Extended Range

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
3 -		WING ASSEMBLY-COMplete LH STANDARD RANGE -----	NP	
		WING ASSEMBLY-COMplete RH STANDARD RANGE -----	NP	
		WING ASSEMBLY-COMplete LH EXTENDED RANGE -----	NP	
		WING ASSEMBLY-COMplete RH EXTENDED RANGE -----	NP	
		ATTACHING PARTS		
- 1	AN8-23A	BOLT -----	1	
- 1A	AN960-816L	WASHER -----	1	
- 2	AN960-816	WASHER -----	2	
- 3	MS20365-820C	NUT -----	1	
- 4	AN7-25A	BOLT -----	1	
- 5	0512123	BUSHING -----	2	
- 6	AN960-716	WASHER -----	3	
- 7	MS20365-720C	NUT -----	1	
		-----*		
- 8	SEE FIG 15	AILERON INSTALLATION -----	1	
- 9	SEE FIG 16	FLAP INSTALLATION -----	1	
-10	SEE FIG 4	STRUCTURE ASSY-WING 150 STANDARD RANGE -----	1	A
	SEE FIG 5	STRUCTURE ASSY-WING AEROBAT STANDARD RANGE -----	1	B
-11	SEE FIG 6	STRUCTURE ASSY-WING 150 EXTENDED RANGE -----	1	A
	SEE FIG 7	STRUCTURE ASSY-WING AEROBAT EXTENDED RANGE -----	1	B
-12	SEE FIG 12	FUEL TANK INSTALLATION STANDARD RANGE -----	1	
-13	SEE FIG 13	FUEL TANK INSTALLATION EXTENDED RANGE -----	1	
-14	0426511-19	COVER ASSY-FUEL TANK LH 150 STANDARD RANGE -----	1	A
	0426511-18	COVER ASSY-FUEL TANK RH 150 STANDARD RANGE -----	1	A
	0420030-5	COVER ASSY-FUEL TANK LH AEROBAT STANDARD RANGE -----	1	B
	0420030-6	COVER ASSY-FUEL TANK RH AEROBAT STANDARD RANGE -----	1	B
-15	0426516-15	COVER ASSY-FUEL TANK LH 150 EXTENDED RANGE -----	1	A
	0426516-16	COVER ASSY-FUEL TANK RH 150 EXTENDED RANGE -----	1	A
	0420030-7	COVER ASSY-FUEL TANK LH AEROBAT EXTENDED RANGE -----	1	B
	0420030-8	COVER ASSY-FUEL TANK RH AEROBAT EXTENDED RANGE -----	1	B
		ATTACHING PARTS		
-16	NAS220-6	SCREW 150 STANDARD RANGE -----	7	A
	NAS220-6	SCREW AEROBAT STANDARD RANGE -----	10	B
-17	NAS220-8	SCREW STANDARD RANGE -----	25	
-18	NAS220-9	SCREW STANDARD RANGE -----	7	
-19	NAS220-12	SCREW STANDARD RANGE -----	3	
-20	NAS220-8	SCREW 150 EXTENDED RANGE -----	51	A
	NAS220-8	SCREW AEROBAT EXTENDED RANGE -----	54	B
-21	AN520-10R8	SCREW -----	6	
		-----*		
-22	0523619-1	GASKET-FUEL GAGE ACCESS -----	1	
-23	0523558-1	COVER-FUEL GAGE ACCESS -----	1	
		ATTACHING PARTS		
-24	S1021Z8-8	SCREW -----	3	
-25	NAS395-14-3	NUT -----	3	
		-----*		
-26	0426011-4	FUEL FILLER NECK-CAP ADAPTER -----	1	
	0426013-2	GASKET BETWEEN FILLER NECK & COVER -----	1	
	C156001-0104	CHAIN ASSEMBLY -----	1	
-27	S225-1	PLATE-INSPECTION -----	3	
-28	S225-1	PLATE-INSPECTION EXTENDED RANGE LH ONLY -----	1	
-29	S225-2	PLATE-INSPECTION -----	2	
		ATTACHING PARTS		
	S1021Z8-8	SCREW -----	3	
		-----*		
-30	S225-7	PLATE-INSPECTION RH WING ONLY -----	1	
	AN515-8R6	ATTACHING PARTS		
		SCREW -----	6	
		-----*		
-31	S329	PLATE-INSPECTION -----	3	
		ATTACHING PARTS		
	S1021Z8-6	SCREW -----	4	
		-----*		
-32	C622001-0202	BASE ASSY-WING POSITION LIGHT USED ON STANDARD TIP -----	1	C
		ATTACHING PARTS		
-33	S1021Z8-6	SCREW -----	2	C
	NAS446-4-3	NUT -----	2	C
		-----*		
-34	C622001-0201	BASE ASSY-WING POSITION LIGHT USED ON -----	1	
		CONICAL CAMBER WING TIP		
		ATTACHING PARTS		
-35	AN507-632R8	SCREW -----	3	
		-----*		

CONTINUED ON NEXT PAGE

152 & A152 Parts Catalog


FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION							UNITS PER ASSY	USABLE ON CODE
		1	2	3	4	5	6	7		
3 -36	A1257A	GASKET GMC -----							1	C
-37	MS25309-7512	LAMP-WING POSITION GMC -----							1	
-38	A1280-2	LENS-WING POSITION LIGHT RED GMC -----							1	
	A1280-3	LENS-WING POSITION LIGHT GREEN GMC -----							1	
-39	0423007-1	SHIELD-WING LIGHT USE ON STANDARD WING TIP -----							1	
-40	0523566-1	SHIELD-WING LIGHT LH USE ON CONICAL CAMBER WING TIP -----							1	
	0523566-5	SHIELD-WING LIGHT LH CUTOUT FOR STROBE LIGHT USE -----							1	
	0523566-2	ON CONICAL CAMBER WING TIP							1	
	0523566-6	SHIELD-WING LIGHT RH USE ON CONICAL CAMBER WING TIP -----							1	
		SHIELD-WING LIGHT RH CUTOUT FOR STROBE LIGHT USE -----							1	
		ON CONICAL CAMBER WING TIP								D E F D E F
		ATTACHING PARTS								
-41	AN507-632R14	SCREW -----							1	
-42	AN507-632R8	SCREW -----							2	
		*-----								
-43	C622006-0103	LENS-STROBE LIGHT -----							1	
-44	C622006-0105	GASKET-STROBE LIGHT LENS -----							1	
-45	C622006-0108	STROBE TUBE ASSEMBLY -----							1	
-46	0426003-18	FAIRING ASSY-WING LH -----							1	
	0426003-23	FAIRING ASSY-WING LH -----							1	
	0426003-29	FAIRING ASSY-WING LH -----							1	
	0426003-19	FAIRING ASSY-WING RH -----							1	
	0426003-24	FAIRING ASSY-WING RH -----							1	
	0426003-30	FAIRING ASSY-WING RH -----							1	
		ATTACHING PARTS								G
	S102278-8	SCREW -----							6	
	S290D832	WASHER -----							6	
	S102178-8	SCREW -----							3	
		*-----								
-47	0412032-1	FAIRING ASSY-WING TO FUSELAGE LH -----							1	
	0412032-2	FAIRING ASSY-WING TO FUSELAGE RH -----							1	
		ATTACHING PARTS								
	S102178-8	SCREW -----							12	
		*-----								
-48	S1078-1	SEAL-12.75 IN LG BKI -----							1	
-49	S202VW	CHANNEL-12.75 IN LG BKI -----							1	
-50	C622008-0102	POWER SUPPLY-STROBE LIGHT -----							1	
		ATTACHING PARTS								G
	AN520-10R7	SCREW -----							4	
	0420034-1	BRACKET ASSY-POWER SUPPLY -----							2	
		*-----								
-51	SEE FIG 88A	LANDING & TAXI LIGHT INSTALLATION -----							1	
		A---152 SERIAL 15279406 & ON								
		F152 SERIAL F15201429 & ON								
		B---A152 SERIAL A1520735 & ON								
		FA152 SERIAL FA1520337 & ON								
		C---152 SERIAL 15279406 & ON								
		A152 SERIAL A1520735 & ON								
		D---152 SERIAL 15279406 THRU 15281519								
		F152 SERIAL F15201429 THRU F15201538								
		A152 SERIAL A1520735 THRU A1520789								
		FA152 SERIAL FA1520337 THRU FA1520351								
		E---152 SERIAL 15281520 THRU 15285284								
		F152 SERIAL F15201539 THRU F15201908								
		A152 SERIAL A1520790 THRU A1520989								
		FA152 SERIAL FA1520352 THRU FA1520387								
		F---152 SERIAL 15285285 & ON								
		F152 SERIAL F15201909 & ON								
		A152 SERIAL A1520990 & ON								
		FA152 SERIAL FA1520388 & ON								
		G---152 SERIAL 15285834 & ON								
		F152 SERIAL F15201944 & ON								
		A152 SERIAL A1521026 & ON								
		FA152 SERIAL FA1520388 & ON								

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
4 -	0426005-101	STRUCTURE ASSEMBLY-WING LH STD RANGE -----	1	A D K L A D E
	0426005-105	STRUCTURE ASSEMBLY-WING LH STD RANGE -----	1	
	0426005-113	STRUCTURE ASSEMBLY-WING LH STD RANGE -----	1	
	0426005-125	STRUCTURE ASSEMBLY-WING LH STD RANGE -----	1	
	0426005-102	STRUCTURE ASSEMBLY-WING RH STD RANGE -----	1	
	0426005-106	STRUCTURE ASSEMBLY-WING RH STD RANGE -----	1	
	0426005-114	STRUCTURE ASSEMBLY-WING RH STD RANGE -----	1	
- 1	SEE FIG 8	LEADING EDGE ASSY-WING -----	1	
- 2	SEE FIG 10	SPAR ASSEMBLIES-WING -----	1	
- 3	0426507-13	RIB ASSY-WING ROOT LH WEU 0426507-21 -----	1	H J H J
	0426507-21	RIB ASSY-WING ROOT LH -----	1	
	0426507-12	RIB ASSY-WING ROOT RH WEU 0426507-20 -----	1	
	0426507-20	RIB ASSY-WING ROOT RH -----	1	
	S1860-2A	NUTPLATE -----	6	
- 4	0516006-1	STRAP-FUEL TRANSMITTER GROUND -----	1	
- 5	0426506	HAT SECTION-FUEL TANK LOWER -----	4	
- 6	S2127-21.69	PAD-HAT SECTION -----	4	
- 7	0523522-11	STRAP ASSY-FUEL TANK INBOARD -----	2	
- 8	0523522-1	STRAP ASSY-FUEL TANK OUTBOARD -----	2	
- 9	0523508-43	RIB ASSY-LEFT FUEL CELL STA 44.125 -----	1	F 6
	0523508-34	RIB ASSY-RIGHT FUEL CELL STA 44.125 -----	1	
-10	NAS680A08	NUTPLATE -----	11	
-11	0523509-1	RIB-WING CENTER SECTION STA 56.875 LH -----	1	
	0523509-20	RIB-WING CENTER SECTION STA 56.875 RH -----	1	
	0523509-4	SPACER-RIB FORWARD STA 56.875 -----	1	
-12	0722201-2	RIB-WING CENTER SECTION STA 69.625 -----	1	
-13	0523510-7	RIB-WING CENTER SECTION STA 84 LH -----	1	
	0523510-6	RIB-WING CENTER SECTION STA 84 RH -----	1	
-14	0523511-3	RIB-WING CENTER SECTION STA 102 -----	1	
-15	0523512-3	RIB-WING CENTER SECTION STA 120 -----	1	
-16	0523513-9	RIB-WING CENTER SECTION LH STA 138 -----	1	
	0523513-10	RIB-WING CENTER SECTION RH STA 138 -----	1	
-17	0523514-3	RIB-WING CENTER SECTION STA 156 -----	1	
-18	0523515-3	RIB-WING CENTER SECTION STA 174 -----	1	
-19	0720608-7	RIB-WING CENTER SECTION STA 192 -----	1	
	S1863-3A	NUTPLATE -----	10	
-20	NAS395-14-3	NUT -----	3	
-21	0523232-2	RIB-WING ROOT TRAILING EDGE STA 22.125 -----	1	
-22	0523231-23	RIB ASSY-FLAP TRACK STA 31.750 & 69.875 WEU 2425001-1 -----	2	
	2425001-1	RIB ASSY-FLAP TRACK STA 31.750 & 69.875 -----	2	
	0523231-5	BRACKET -----	2	
-23	0523233-24	RIB ASSY-WING TRAILING EDGE STA 44.125 -----	1	
	0523233-8	RUB STRIP -----	1	
-24	0523233-4	RIB ASSY-WING TRAILING EDGE STA 56.875 -----	1	
-25	0523233-3	RUB STRIP -----	1	
-26	0523230	RIB ASSY-WING TRAILING EDGE STA 84 LH -----	1	
	0523230-1	RIB ASSY-WING TRAILING EDGE STA 84 RH -----	1	
	0523230-4	ANGLE LH ONLY -----	1	
	0523230-5	ANGLE RH ONLY -----	1	
-27	0523511-4	RIB-WING TRAILING EDGE STA 102 -----	1	
-28	0523512-4	RIB-WING TRAILING EDGE STA 120 -----	1	
-29	0523408	BRACKET-AILERON PULLEY -----	1	
-30	0523407	BRACKET-FLAP PULLEY -----	1	
-31	0523407-1	BRACKET-FLAP PULLEY -----	1	
-32	0426515-2	BRACKET-FLAP BELLCRANK SUPPORT UPPER LH -----	1	
	0426515-3	BRACKET-FLAP BELLCRANK SUPPORT UPPER RH -----	1	
-33	0426515-4	BRACKET-FLAP BELLCRANK SUPPORT LOWER LH -----	1	
	0426515-5	BRACKET-FLAP BELLCRANK SUPPORT LOWER RH -----	1	
-34	0420015-1	BRACKET-FLAP ACTUATOR MOUNT UPPER RH -----	1	
-35	0420015-2	BRACKET-FLAP ACTUATOR MOUNT LOWER RH -----	1	
-36	0460204-1	BRACKET-FLAP PULLEY INBOARD UPPER -----	1	
-37	0460204-2	BRACKET-FLAP PULLEY INBOARD LOWER -----	1	
-38	0460205-1	BRACKET-FLAP PULLEY OUTBOARD UPPER -----	1	
-39	0460205-2	BRACKET-FLAP PULLEY OUTBOARD LOWER -----	1	
-40	0720005-2	STIFFENER-TRAILING EDGE -----	1	
-41	0523219-2	CHANNEL-AILERON BELLCRANK SUPPORT UPPER LH -----	1	
	0523219-3	CHANNEL-AILERON BELLCRANK SUPPORT UPPER RH -----	1	
-42	0523219-4	CHANNEL-AILERON BELLCRANK SUPPORT LOWER LH -----	1	
	0523219-5	CHANNEL-AILERON BELLCRANK SUPPORT LOWER RH -----	1	

CONTINUED ON NEXT PAGE

152 & A152 Parts Catalog

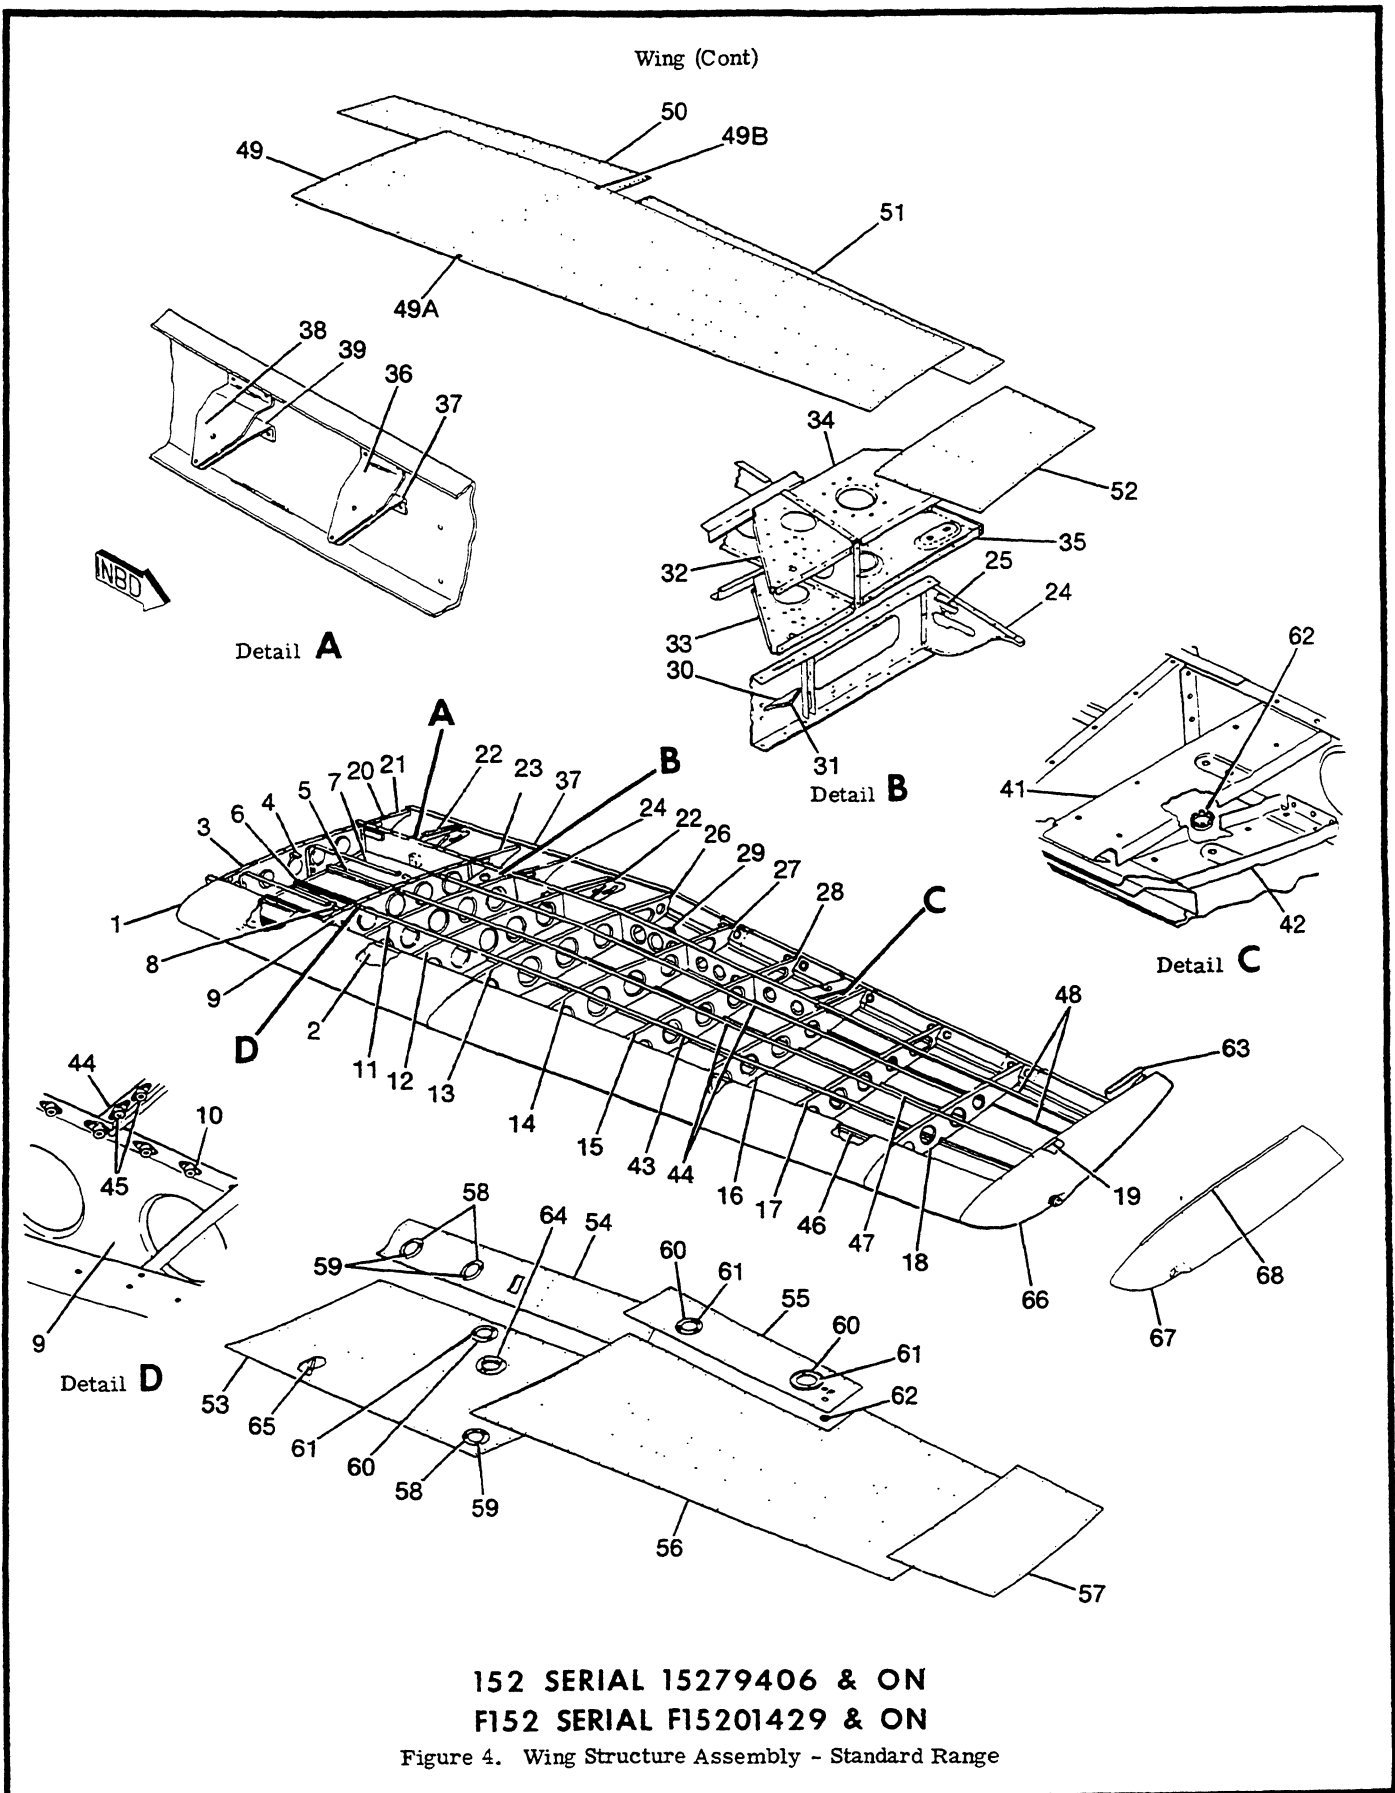

152 & A152 Parts Catalog


FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
4 -43	0423541-13	STRINGER-WING LH UPPER FORWARD -----	1	
	0423541-14	STRINGER-WING RH UPPER FORWARD -----	1	
-44	0423541-15	STRINGER-WING LH UPPER CENTER & UPPER AFT -----	2	
	0423541-16	STRINGER-WING RH UPPER CENTER & UPPER AFT -----	2	
-45	NAS680A08	NUTPLATE -----	2	
-46	0423541-7	STRINGER-WING LH LOWER FORWARD -----	1	
	0423541-8	STRINGER-WING RH LOWER FORWARD -----	1	
-47	0423541-9	STRINGER-WING LH LOWER CENTER & LOWER AFT -----	2	
	0423541-10	STRINGER-WING RH LOWER CENTER & LOWER AFT -----	2	
-48	0523003-40	STRINGER-AFT OUTBOARD -----	2	
-49	0523007-14	SKIN-UPPER CENTER SECTION STA 44.125 TO 174 LH -----	1	
	0426005-26	SKIN-UPPER CENTER SECTION STA 44.125 TO 174 RH -----	1	
		ATTACHING PARTS		
-49A	AN525-10R11	SCREW -----	1	C
-49B	AN525-10R6	SCREW -----	1	
		-----*		
-50	0523007-16	SKIN-UPPER TRAILING EDGE STA 21.375 TO 84 -----	1	
-51	0523003-80	SKIN-UPPER TRAILING EDGE STA 84 TO 174 -----	1	
-52	0523003-81	SKIN-UPPER CENTER SECTION STA 174 TO 192 -----	1	
-53	0426005-14	SKIN-LOWER CENTER SECTION STA 22.125 TO 84 LH -----	1	
	0426005-27	SKIN-LOWER CENTER SECTION STA 22.125 TO 84 RH -----	1	
-54	0523007-20	SKIN-LOWER TRAILING EDGE STA 21.375 TO 84 LH -----	1	
	0523007-19	SKIN-LOWER TRAILING EDGE STA 21.375 TO 84 RH -----	1	
-55	0523003-62	SKIN-LOWER TRAILING EDGE STA 84 TO 138 -----	1	
-56	0523003-74	SKIN-LOWER CENTER SECTION STA 84 TO 174 -----	1	
-57	0523003-83	SKIN-LOWER CENTER SECTION STA 174 TO 192 -----	1	
-58	S237-2	DOUBLER ASSY-INSPECTION OPENING -----	3	
-59	NAS395-14-3	NUT -----	3	
-60	S330-2	DOUBLER ASSY-INSPECTION OPENING -----	4	
-61	NAS395-14-3	NUT -----	4	
-62	CM2692-28-1S	PLUG BUTTON -----	1	
-63	0721107-1	FAIRING-LH -----	1	
	0721107-2	FAIRING-RH -----	1	
-64	S1209-1	DOUBLER ASSY-INSPECTION OPENING RH WING -----	1	
	NAS680A08K	NUTPLATE -----	6	
-65	0426209-4	CATCH ASSY-CABIN DOOR -----	1	
		ATTACHING PARTS		
	AN515-6R6	SCREW -----	1	
		-----*		
-66	0423008-3	TIP-WING STANDARD -----	2	B
-67	0523565-29	TIP ASSY-WING LH CONICAL CAMBER -----	1	
	0523565-30	TIP ASSY-WING RH CONICAL CAMBER -----	1	
		ATTACHING PARTS		
	S102178-8	SCREW -----	12	
	0423008-4	STIFFENER USE ON UPPER SIDE LH TIP & LOWER SIDE RH TIP -----	1	B
		USED WITH STANDARD WING TIP ONLY		
	0423008-5	STIFFENER USE ON UPPER SIDE RH TIP & LOWER SIDE LH TIP -----	1	B
		USED WITH STANDARD WING TIP ONLY		
-68	0523565-21	STIFFENER USE ON UPPER SIDE LH TIP & LOWER SIDE RH TIP -----	1	
		USED WITH CONICAL CAMBER WING TIP ONLY		
	0523565-22	STIFFENER USE ON UPPER SIDE RH TIP & LOWER SIDE LH TIP -----	1	
		USED WITH CONICAL CAMBER WING TIP ONLY		
		-----*		
	NAS1329A06K120	NUT -----	5	
NOTE. *WHEN INITIALLY ORDERING THIS PART FOR SPARES PRIOR TO SERIAL 15285565 & F15201909 ALSO ORDER TWO 1220114-1 SPACERS. SEE FIGURE 16 FOR INSTALLATION. A---152 SERIAL 15279406 THRU 15281298, 15281300 THRU 15281314, 15281316 THRU 15281326, 15281328 THRU 15281340, 15281342 THRU 15281349, 15281351 THRU 15281359, 15281361 THRU 15281369, 15281371 THRU 15281380, 15281382 THRU 15281389, 15281391 THRU 15281400, 15281402 THRU 15281409, 15281411 THRU 15281420, 15281422 THRU 15281426 F152 SERIAL F15201429 THRU F15201538 CONTINUED ON NEXT PAGE				

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
4 -		B---152 SERIAL 15279406 & ON C---152 SERIAL 15281299, 15281315, 15281327, 15281341, 15281350, 15281360, 15281370, 15281381, 15281390, 15281401, 15281410, 15281421, 15281427 & ON F152 SERIAL F15201539 & ON D---152 SERIAL 15281299, 15281315, 15281327, 15281341, 15281350, 15281360, 15281370, 15281381, 15281390, 15281401, 15281410, 15281421, 15281427 THRU 15283591 F152 SERIAL F15201539 THRU F15201673 E---152 SERIAL 15283592 & ON F152 SERIAL F15201674 & ON F---152 SERIAL 15279406 THRU 15285564 F152 SERIAL F15201429 THRU F15201908 G---152 SERIAL 15285565 & ON F152 SERIAL F15201909 & ON H---152 SERIAL 15279406 THRU 15285719 F152 SERIAL F15201429 THRU F15201936 J---152 SERIAL 15285720 & ON F152 SERIAL F15201937 & ON K---152 SERIAL 15283592 THRU 15285833 F152 SERIAL F15201674 THRU F15201943 L---152 SERIAL 15285834 & ON F152 SERIAL F15201944 & ON		

152 & A152 Parts Catalog

Wing (Cont)

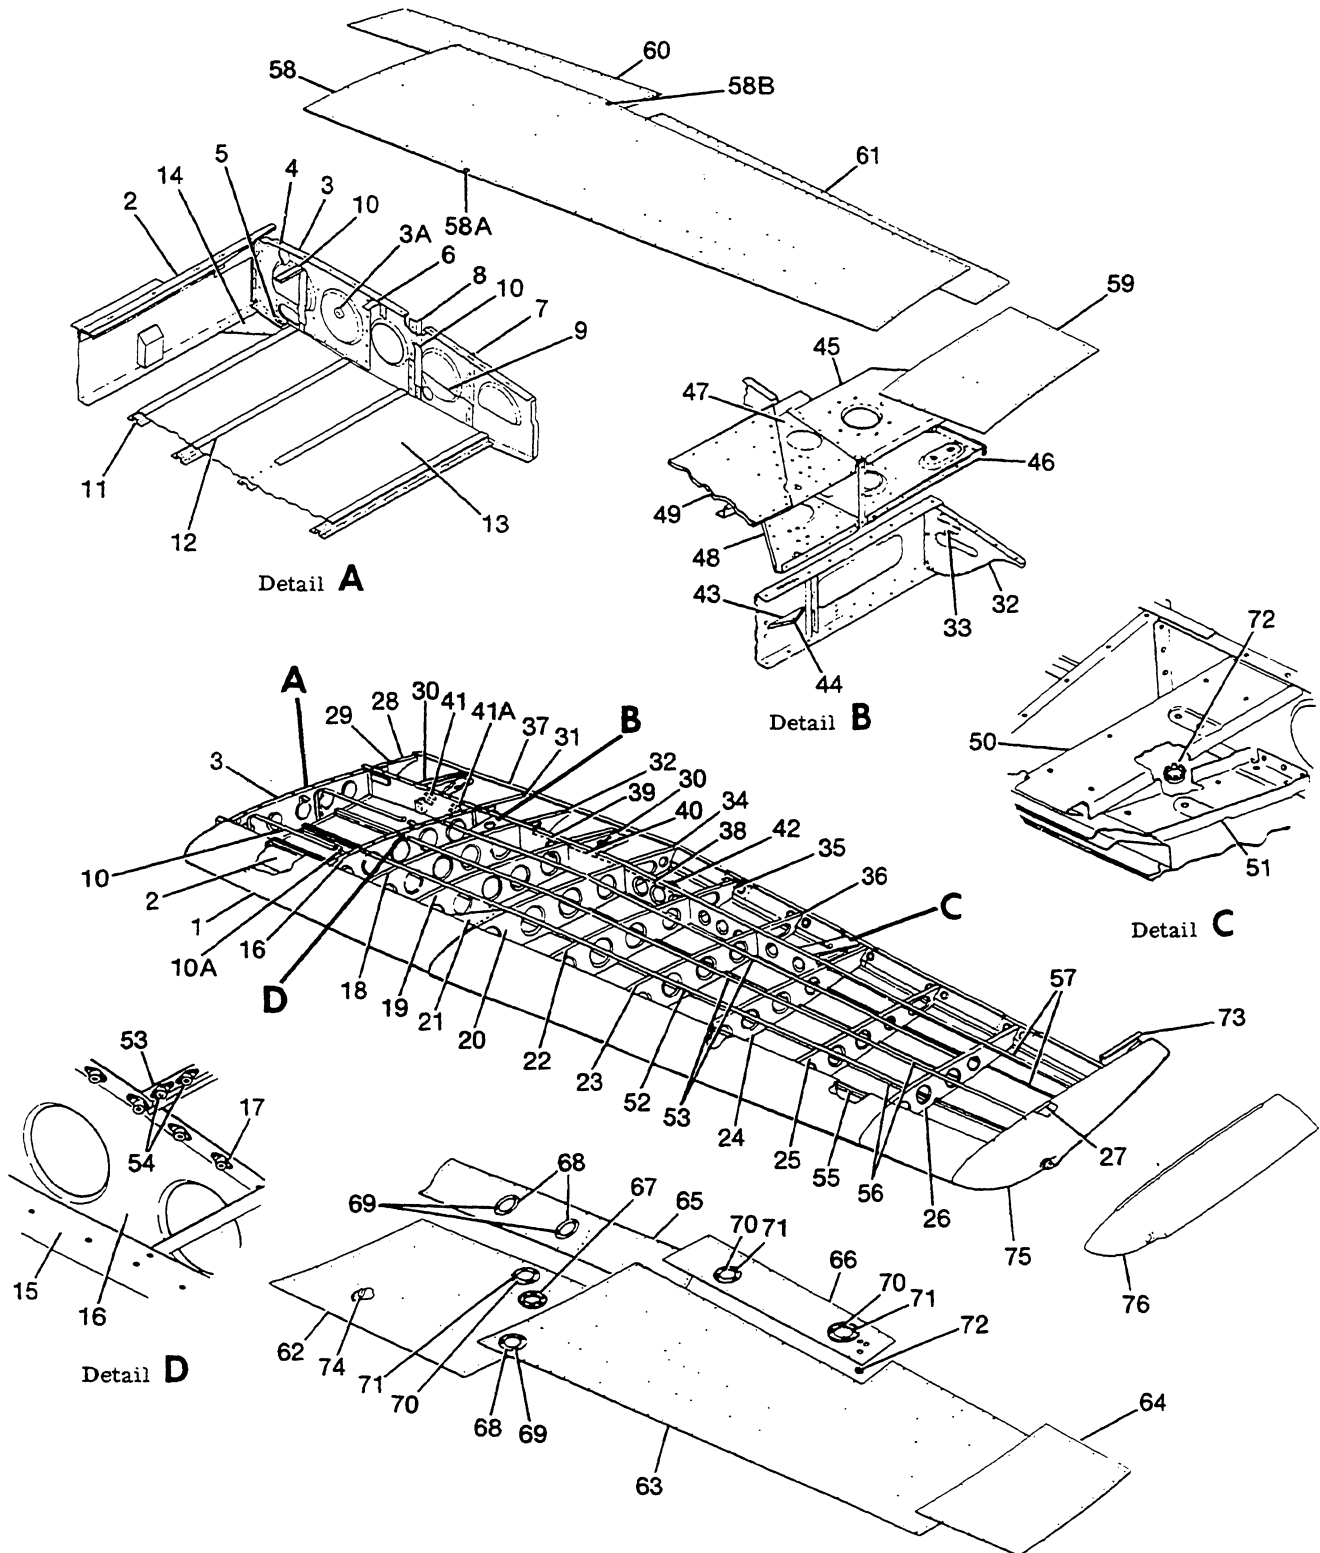

A152 SERIAL A1520735 & ON
FA152 SERIAL FA1520337 & ON

Figure 5. Wing Structure Assembly - Aerobat Standard Range

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
5 -	0422401-31	STRUCTURE ASSEMBLY-WING LH STANDARD RANGE AEROBAT -----	1	A
	0422401-35	STRUCTURE ASSEMBLY-WING LH STANDARD RANGE AEROBAT -----	1	D
	0422401-41	STRUCTURE ASSEMBLY-WING LH STANDARD RANGE AEROBAT -----	1	K
	0422401-49	STRUCTURE ASSEMBLY-WING LH STANDARD RANGE AEROBAT -----	1	L
	0422402-22	STRUCTURE ASSEMBLY-WING RH STANDARD RANGE AEROBAT -----	1	A
	0422402-26	STRUCTURE ASSEMBLY-WING RH STANDARD RANGE AEROBAT -----	1	D
	0422402-30	STRUCTURE ASSEMBLY-WING RH STANDARD RANGE AEROBAT -----	1	E
- 1	SEE FIG 9	LEADING EDGE ASSY-WING -----	1	
- 2	SEE FIG 11	SPAR ASSY-WING -----	1	
- 3	0426507-15	RIB ASSY-WING ROOT LH WEU 0426507-23 -----	1	H
	0426507-23	RIB ASSY-WING ROOT LH -----	1	J
	0426507-14	RIB ASSY-WING ROOT RH WEU 0426507-22 -----	1	H
	0426507-22	RIB ASSY-WING ROOT RH -----	1	J
- 3A	MS35489-9	GROMMET -----	1	
- 4	NAS680A08K	NUTPLATE -----	10	
- 5	S1860-2A	NUTPLATE -----	4	
- 6	0516006-1	STRAP-FUEL TRANSMITTER GROUND -----	1	
- 7	0422417-1	STIFFENER -----	1	
- 8	0422417-2	STIFFENER -----	1	
- 9	0426522-1	STIFFENER ASSY-LH -----	1	
	0426522-2	STIFFENER ASSY-RH -----	1	
	S1860-2A	NUTPLATE -----	2	
-10	0523522-11	STRAP ASSY-FUEL TANK INBOARD -----	2	
-10A	0523522-1	STRAP ASSY-FUEL TANK OUTBOARD -----	2	
-11	0426506-2	HAT SECTION-FUEL TANK LOWER LH -----	4	
	0426506	HAT SECTION-FUEL TANK LOWER RH -----	4	
-12	S2127-21.69	PAD-HAT SECTION -----	4	
-13	0422418-1	REINFORCEMENT-LOWER FUEL BAY -----	1	
-14	0422416-1	GUSSET -----	1	
-15	0523003-48	DOUBLER -----	1	
-16	0523508-45	RIB ASSY-LEFT FUEL CELL STA 44.12 -----	1	
	0523508-36	RIB ASSY-RIGHT FUEL CELL STA 44.12 -----	1	
-17	NAS680A08	NUTPLATE -----	11	
-18	0523509-12	RIB-WING CENTER SECTION STA 56.87 LH REF 0523509-10 -----	1	
	0523509-18	RIB-WING CENTER SECTION STA 56.87 RH -----	1	
	0523564-2	DOUBLER-RH WING STA 56.87 -----	1	
	0523517-4	SPACER -----	1	
-19	0523509-13	RIB-WING CENTER SECTION STA 69.62 -----	1	
-20	0523510-19	RIB-WING CENTER SECTION STA 84 LH -----	1	
	0523510-20	RIB-WING CENTER SECTION STA 84 RH -----	1	
-21	0422410-1	GUSSET-WING STA 84 LH -----	1	
	0422410-2	GUSSET-WING STA 84 RH -----	1	
-22	0523511-14	RIB-WING CENTER SECTION STA 102 -----	1	
-23	0523512-19	RIB-WING CENTER SECTION STA 120 -----	1	
-24	0523513-13	RIB-WING CENTER SECTION STA 138 LH -----	1	
	0523513-14	RIB-WING CENTER SECTION STA 138 RH -----	1	
-25	0523514-7	RIB-WING CENTER SECTION STA 156 -----	1	
-26	0523515-7	RIB-WING CENTER SECTION STA 174 -----	1	
-27	0720608-7	RIB ASSY-WING CENTER SECTION STA 192 -----	1	
	S1863-3A	NUTPLATE -----	10	
-28	0523232-6	RIB-WING ROOT TRAILING EDGE STA 22.12 -----	1	
-29	NAS395-14-3	NUT -----	4	
-30	0523231-23	RIB ASSY-FLAP TRACK STA 31.75 & 69.87 WEU 2425001-1 -----	2	F
	2425001-1	RIB ASSY-FLAP TRACK STA 31.75 & 69.87 -----	2	G
	0523231-5	BRACKET -----	2	
-31	0523233-24	RIB ASSY-WING TRAILING EDGE STA 44.12 -----	1	
	0523233-8	RUB STRIP -----	1	
-32	0523233-13	RIB ASSY-WING TRAILING EDGE STA 56.87 -----	1	
-33	0523233-5	RUB STRIP -----	1	
-34	0523230-9	RIB ASSY-WING TRAILING EDGE STA 84 LH -----	1	
	0523230-8	RIB ASSY-WING TRAILING EDGE STA 84 RH -----	1	
	0523230-4	ANGLE LH -----	1	
	0523230-5	ANGLE RH -----	1	
-35	0523511-15	RIB-WING TRAILING EDGE STA 102 -----	1	
-36	0523512-22	RIB-WING TRAILING EDGE STA 120 -----	1	
-37	0720005-2	STIFFENER-TRAILING EDGE -----	1	
-38	0422419-1	STIFFENER-WING SPAR LH -----	1	
	0422419-2	STIFFENER-WING SPAR RH -----	1	
-39	0422419-3	STIFFENER-WING SPAR LH -----	1	
	0422419-4	STIFFENER-WING SPAR RH -----	1	
-40	0422419-5	STIFFENER-WING SPAR LH -----	1	
	0422419-6	STIFFENER-WING SPAR RH -----	1	

CONTINUED ON NEXT PAGE

152 & A152 Parts Catalog


FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
5 -41	0460204-1	BRACKET-FLAP PULLEY INBOARD UPPER -----	1	
	0460204-2	BRACKET-FLAP PULLEY INBOARD LOWER -----	1	
-41A	0460205-1	BRACKET-FLAP PULLEY OUTBOARD UPPER -----	1	
	0460205-2	BRACKET-FLAP PULLEY OUTBOARD LOWER -----	1	
-42	0523408	BRACKET-AILERON PULLEY -----	1	
-43	0523407	BRACKET-FLAP PULLEY -----	1	
-44	0523407-1	BRACKET-FLAP PULLEY -----	1	
-45	0420015-1	BRACKET-FLAP ACTUATOR MOUNT UPPER RH ONLY -----	1	
-46	0420015-2	BRACKET-FLAP ACTUATOR MOUNT LOWER RH ONLY -----	1	
-47	0426515-2	BRACKET-FLAP BELLCRANK SUPPORT UPPER LH -----	1	
	0426515-3	BRACKET-FLAP BELLCRANK SUPPORT UPPER RH -----	1	
-48	0426515-4	BRACKET-FLAP BELLCRANK SUPPORT LOWER LH -----	1	
	0426515-5	BRACKET-FLAP BELLCRANK SUPPORT LOWER RH -----	1	
-49	0422408-1	PLATE-REINFORCEMENT -----	1	
-50	0523219-2	CHANNEL-AILERON BELLCRANK SUPPORT UPPER LH -----	1	
	0523219-3	CHANNEL-AILERON BELLCRANK SUPPORT UPPER RH -----	1	
-51	0523219-4	CHANNEL-AILERON BELLCRANK SUPPORT LOWER LH -----	1	
	0523219-5	CHANNEL-AILERON BELLCRANK SUPPORT LOWER RH -----	1	
-52	0422413-1	STRINGER-WING LH UPPER FORWARD -----	1	
	0422413-2	STRINGER-WING RH UPPER FORWARD -----	1	
-53	0422413-3	STRINGER-WING LH UPPER CENTER & UPPER AFT -----	2	
	0422413-4	STRINGER-WING RH UPPER CENTER & UPPER AFT -----	2	
-54	NAS680A08	NUTPLATE -----	2	
-55	0422413-25	STRINGER-WING LH LOWER FORWARD -----	1	
	0422413-26	STRINGER-WING RH LOWER FORWARD -----	1	
-56	0422413-7	STRINGER-WING LH LOWER CENTER & LOWER AFT -----	2	
	0422413-8	STRINGER-WING RH LOWER CENTER & LOWER AFT -----	2	
-57	0523003-40	STRINGER-AFT OUTBOARD -----	2	
-58	0422401-20	SKIN-UPPER CENTER SECTION STA 44.12 TO 174 LH -----	1	A
	0422401-36	SKIN-UPPER CENTER SECTION STA 44.12 TO 174 LH -----	1	C
	0422402-11	SKIN-UPPER CENTER SECTION STA 44.12 TO 174 RH -----	1	A
	0422402-27	SKIN-UPPER CENTER SECTION STA 44.12 TO 174 RH -----	1	C
		ATTACHING PARTS		
-58A	AN525-10R11	SCREW -----	1	C
-58B	AN525-10R6	SCREW -----	1	C
		-----*		
-59	0422401-7	SKIN-UPPER CENTER SECTION STA 174 TO 192 -----	1	
-60	0422401-8	SKIN-UPPER TRAILING EDGE STA 22.12 TO 84 -----	1	
-61	0422401-9	SKIN-UPPER TRAILING EDGE STA 84 TO 174 -----	1	A
	0422401-39	SKIN-UPPER TRAILING EDGE STA 84 TO 174 -----	1	C
-62	0422401-10	SKIN-LOWER CENTER SECTION STA 22.12 TO 69.62 LH -----	1	
	0422402-1	SKIN-LOWER CENTER SECTION STA 22.12 TO 69.62 RH -----	1	
-63	0422401-11	SKIN-LOWER CENTER SECTION STA 69.62 TO 174 LH -----	1	
	0422402-34	SKIN-LOWER CENTER SECTION STA 69.62 TO 174 RH -----	1	
-64	0422401-12	SKIN-LOWER CENTER SECTION STA 174 TO 192 -----	1	
-65	0422401-13	SKIN-LOWER TRAILING EDGE STA 22.12 TO 84 LH -----	1	
	0422402-7	SKIN-LOWER TRAILING EDGE STA 22.12 TO 84 RH -----	1	
-66	0422401-14	SKIN-LOWER TRAILING EDGE STA 84 TO 138 -----	1	
-67	S1209-1	DOUBLER-INSPECTION OPENING RH WING -----	1	
	NAS680A08K	NUT -----	6	
-68	S237-2	DOUBLER-INSPECTION OPENING -----	3	
-69	NAS395-14-3	NUT -----	3	
-70	S330-2	DOUBLER-INSPECTION OPENING -----	3	
-71	NAS395-14-3	NUT -----	4	
-72	CM2692-28-1B	PLUG BUTTON -----	1	
-73	0721107-1	FAIRING LH -----	1	
	0721107-2	FAIRING RH -----	1	
-74	0426209-4	CATCH ASSY-CABIN DOOR -----	1	
		ATTACHING PARTS		
	AN515-6R6	SCREW -----	1	
	NAS680A06	NUTPLATE -----	1	
		-----*		

CONTINUED ON NEXT PAGE

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION							UNITS PER ASSY	USABLE ON CODE
		1	2	3	4	5	6	7		
5 -75 -76	0423008-3	TIP-WING	STANDARD	-----					2	B
	0523565-29	TIP ASSY-WING LH	CONICAL CAMBER	-----					1	
	0523565-30	TIP ASSY-WING RH	CONICAL CAMBER	-----					1	
		ATTACHING PARTS								
	S102178-8	SCREW	-----						12	
	0423008-4	STIFFENER	USE ON UPPER SIDE LH TIP & LOWER SIDE RH TIP	----					1	B
		USED WITH	STANDARD WING TIP							
	0423008-5	STIFFENER	USE ON UPPER SIDE RH TIP & LOWER SIDE LH TIP	----					1	B
		USED WITH	STANDARD WING TIP							
	0523565-21	STIFFENER	USE ON UPPER SIDE LH TIP & LOWER SIDE RH TIP	----					1	
		USED WITH	CONICAL CAMBER WING TIP							
	0523565-22	STIFFENER	USE ON UPPER SIDE RH TIP & LOWER SIDE LH TIP	----					1	
		USED WITH	CONICAL CAMBER WING TIP							
		---*---								
	NAS1329A06K120	NUT	-----						5	
NOTE. *WHEN INITIALLY ORDERING THIS PART FOR SPARES PRIOR TO SERIAL A1521015 & FA1520388 ALSO ORDER TWO 1220114-1 SPACERS. SEE FIGURE 16 FOR INSTALLATION. A---A152 SERIAL A1520735 THRU A1520785 FA152 SERIAL FA1520337 THRU FA1520352 B---A152 SERIAL A1520735 & ON C---A152 SERIAL A1520786 & ON FA152 SERIAL FA1520353 & ON D---A152 SERIAL A1520786 THRU A1520878 FA152 SERIAL FA1520353 THRU FA1520357 E---A152 SERIAL A1520879 & ON FA152 SERIAL FA1520358 & ON F---A152 SERIAL A1520735 THRU A1521014 FA152 SERIAL FA1520337 THRU FA1520387 G---A152 SERIAL A1521015 & ON FA152 SERIAL FA1520388 & ON H---A152 SERIAL A1520735 THRU A1521020 FA152 SERIAL FA1520337 THRU FA1520387 J---A152 SERIAL A1521021 & ON FA152 SERIAL FA1520388 & ON K---A152 SERIAL A1520879 THRU A1521025 FA152 SERIAL FA1520358 THRU FA1520387 L---A152 SERIAL A1521026 & ON FA152 SERIAL FA1520388 & ON										

152 & A152 Parts Catalog

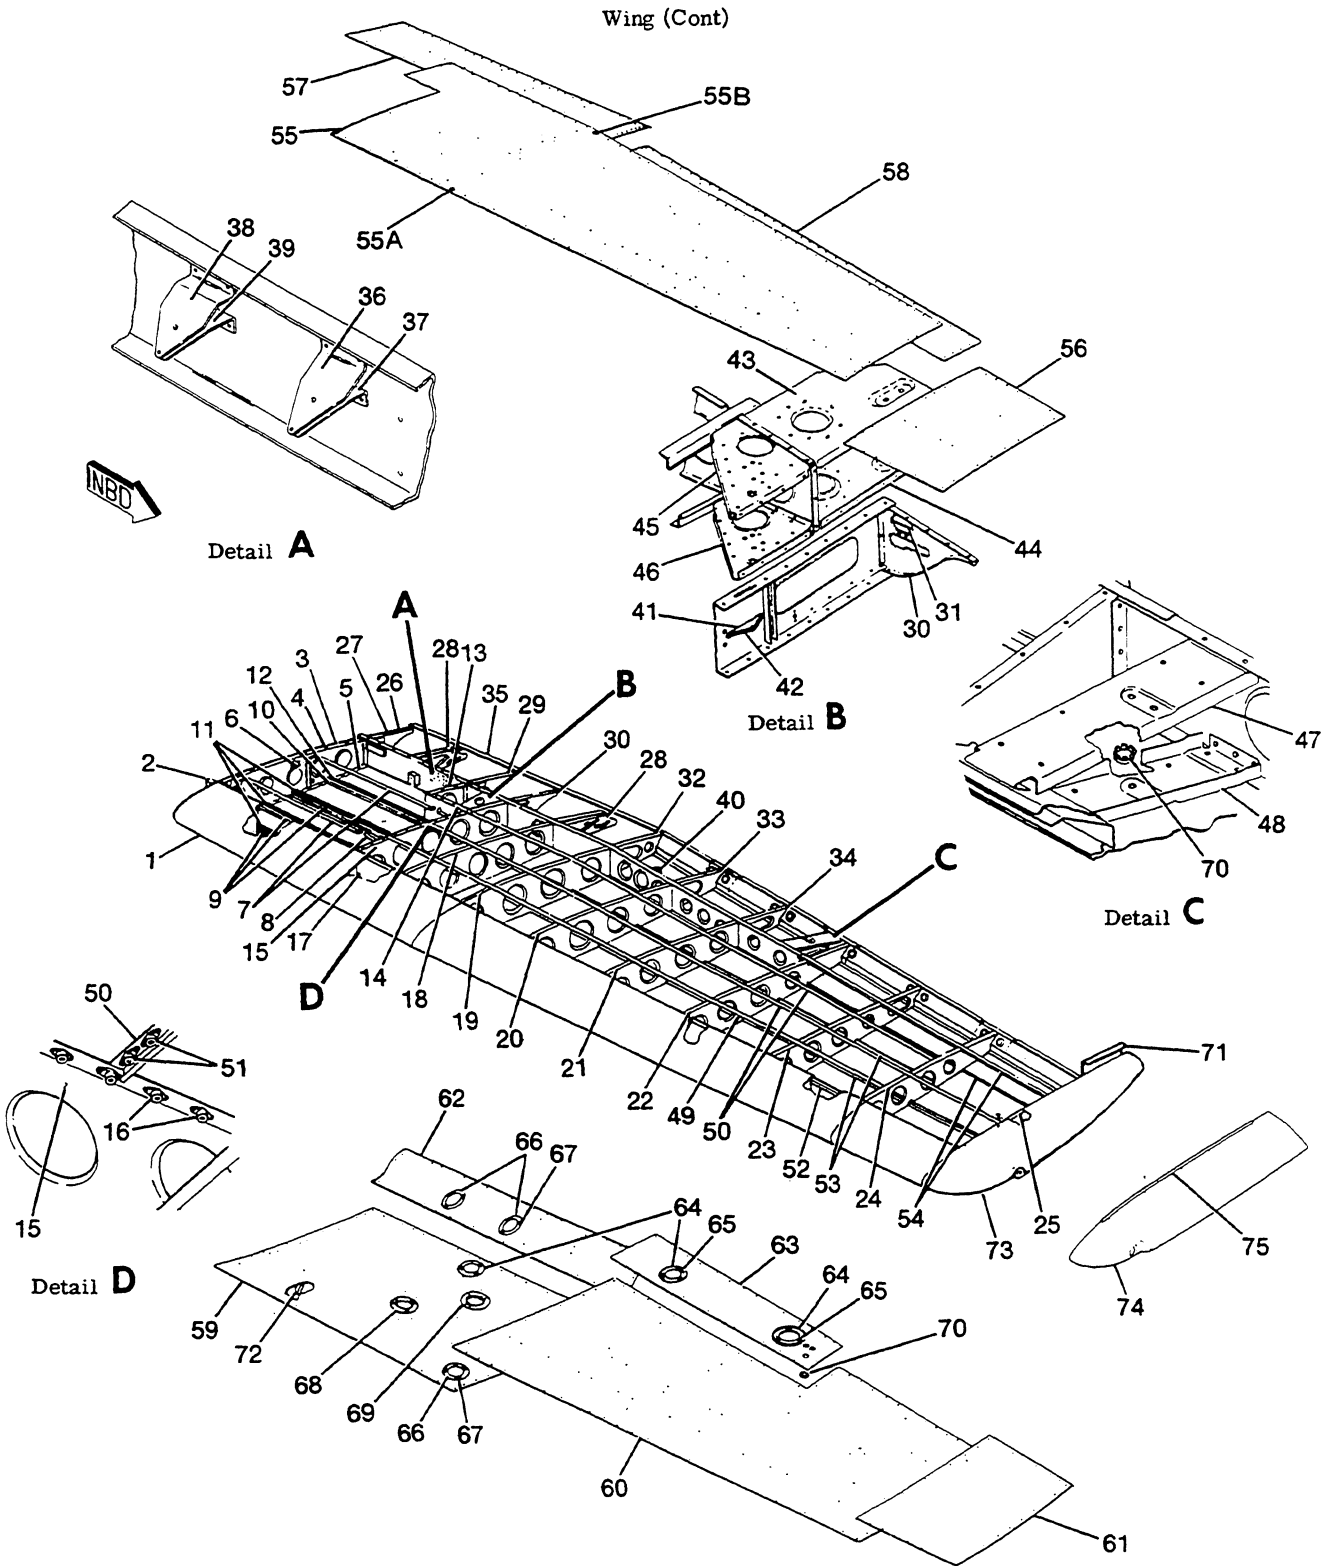

152 SERIAL 15279406 & ON
F152 SERIAL F15201429 & ON

Figure 6. Wing Structure Assembly - Extended Range

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
6 -	0426005-103	STRUCTURE ASSEMBLY-WING LH EXTENDED RANGE -----	1	A D K L A D E
	0426005-107	STRUCTURE ASSEMBLY-WING LH EXTENDED RANGE -----	1	
	0426005-115	STRUCTURE ASSEMBLY-WING LH EXTENDED RANGE -----	1	
	0426005-127	STRUCTURE ASSEMBLY-WING LH EXTENDED RANGE -----	1	
	0426005-104	STRUCTURE ASSEMBLY-WING RH EXTENDED RANGE -----	1	
	0426005-108	STRUCTURE ASSEMBLY-WING RH EXTENDED RANGE -----	1	
	0426005-116	STRUCTURE ASSEMBLY-WING RH EXTENDED RANGE -----	1	
- 1	SEE FIG 8	LEADING EDGE ASSY-WING -----	1	
- 2	SEE FIG 10	SPAR ASSY-WING -----	1	
- 3	0426507-13	RIB ASSY-WING ROOT LH WEU 0426507-21 -----	1	F G F G
	0426507-21	RIB ASSY-WING ROOT LH -----	1	
	0426507-12	RIB ASSY-WING ROOT RH WEU 0426507-20 -----	1	
	0426507-20	RIB ASSY-WING ROOT RH -----	1	
- 4	NAS680A08	NUTPLATE -----	7	
- 5	S1860-2A	NUTPLATE -----	6	
- 6	0516006-1	STRAP-FUEL TRANSMITTER GROUND -----	1	
- 7	0426512-6	STRAP ASSY-FUEL TANK -----	2	
- 8	0523522-1	STRAP ASSY-FUEL TANK -----	2	
- 9	0426506-1	HAT SECTION-FUEL TANK LOWER -----	3	
-10	0426506	HAT SECTION-FUEL TANK LOWER -----	1	
-11	S2127-35.56	PAD-HAT SECTION -----	3	
-12	S2127-21.69	PAD-HAT SECTION -----	1	
-13	0721111-37	RIB ASSY-STUB STA 44.125 LH -----	1	
	0721111-38	RIB ASSY-STUB STA 44.125 RH -----	1	
	NAS680A08	NUTPLATE -----	2	
-14	0523505-1	BULKHEAD ASSY-TANK WELL LH -----	1	
	0523505-2	BULKHEAD ASSY-TANK WELL RH -----	1	
	NAS680A08	NUTPLATE -----	4	
-15	0523508-25	RIB ASSY-LEFT FUEL CELL STA 58 -----	1	
	0523508-26	RIB ASSY-RIGHT FUEL CELL STA 58 -----	1	
-16	NAS680A08	NUTPLATE -----	9	
-17	0523517-4	SPACER-RIB FORWARD STA 58 -----	1	
-18	0722201-2	RIB-WING CENTER SECTION STA 69.625 -----	1	
-19	0523510-7	RIB-WING CENTER SECTION STA 84 LH -----	1	
	0523510-6	RIB-WING CENTER SECTION STA 84 RH -----	1	
-20	0523511-3	RIB-WING CENTER SECTION STA 102 -----	1	
-21	0523512-3	RIB-WING CENTER SECTION STA 120 -----	1	
-22	0523513-9	RIB-WING CENTER SECTION STA 138 LH -----	1	
	0523513-10	RIB-WING CENTER SECTION STA 138 RH -----	1	
-23	0523514-3	RIB-WING CENTER SECTION STA 156 -----	1	
-24	0523515-3	RIB-WING CENTER SECTION STA 174 -----	1	
-25	0720608-7	RIB ASSY-WING CENTER SECTION STA 192 -----	1	
	NAS680A08	NUTPLATE -----	10	
-26	0523232-2	RIB-WING ROOT TRAILING EDGE STA 22.125 -----	1	
-27	NAS395-14-3	NUT -----	4	
-28	0523231-23	RIB ASSY-FLAP TRACK STA 31.750 & 69.875 WEU 2425001-1 -----	2	H J
	2425001-1	RIB ASSY-FLAP TRACK STA 31.750 & 69.875 -----	1	
	0523231-5	BRACKET -----	2	
-29	0523233-24	RIB ASSY-WING TRAILING EDGE STA 44.125 -----	1	
	0523233-8	RUB STRIP -----	1	
-30	0523233-4	RIB ASSY-WING TRAILING EDGE STA 56.875 -----	1	
-31	0523233-5	RUB STRIP -----	1	
-32	0523230	RIB-WING TRAILING EDGE STA 84 LH -----	1	
	0523230-1	RIB-WING TRAILING EDGE STA 84 RH -----	1	
	0523230-4	ANGLE LH ONLY -----	1	
	0523230-5	ANGLE RH ONLY -----	1	
-33	0523511-4	RIB-WING TRAILING EDGE STA 102 -----	1	
-34	0523512-4	RIB-WING TRAILING EDGE STA 120 -----	1	
-35	0720005-2	STIFFENER-TRAILING EDGE -----	1	
-36	0460204-1	BRACKET-FLAP PULLEY INBOARD UPPER -----	1	
-37	0460204-2	BRACKET-FLAP PULLEY INBOARD LOWER -----	1	
-38	0460205-1	BRACKET-FLAP PULLEY OUTBOARD UPPER -----	1	
-39	0460205-2	BRACKET-FLAP PULLEY OUTBOARD LOWER -----	1	
-40	0523408	BRACKET-AILERON PULLEY -----	1	
-41	0523407	BRACKET-FLAP PULLEY -----	1	
-42	0523407-1	BRACKET-FLAP PULLEY -----	1	
-43	0420015-1	BRACKET-FLAP ACTUATOR MOUNT UPPER RH -----	1	
-44	0420015-2	BRACKET-FLAP ACTUATOR MOUNT LOWER RH -----	1	
-45	0523539-7	BRACKET-FLAP BELLCRANK SUPPORT UPPER LH -----	1	
	0523539-8	BRACKET-FLAP BELLCRANK SUPPORT UPPER RH -----	1	
-46	0523539-9	BRACKET-FLAP BELLCRANK SUPPORT LOWER LH -----	1	
	0523539-10	BRACKET-FLAP BELLCRANK SUPPORT LOWER RH -----	1	

CONTINUED ON NEXT PAGE


152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
6 -47	0523219-2	CHANNEL-AILERON BELLCRANK SUPPORT UPPER LH -----	1	
	0523219-3	CHANNEL-AILERON BELLCRANK SUPPORT UPPER RH -----	1	
-48	0523219-4	CHANNEL-AILERON BELLCRANK SUPPORT LOWER LH -----	1	
	0523219-5	CHANNEL-AILERON BELLCRANK SUPPORT LOWER RH -----	1	
-49	0423541-19	STRINGER-WING LH UPPER FORWARD -----	1	
	0423541-20	STRINGER-WING RH UPPER FORWARD -----	1	
-50	0423541-21	STRINGER-WING LH UPPER CENTER & UPPER AFT -----	2	
	0423541-22	STRINGER-WING RH UPPER CENTER & UPPER AFT -----	2	
-51	NAS680A08	NUTPLATE -----	2	
-52	0423541-31	STRINGER-WING LH LOWER FORWARD -----	1	
	0423541-32	STRINGER-WING RH LOWER FORWARD -----	1	
-53	0423541-33	STRINGER-WING LH LOWER CENTER & LOWER AFT -----	2	
	0423541-34	STRINGER-WING RH LOWER CENTER & LOWER AFT -----	2	
-54	0523003-40	STRINGER-AFT OUTBOARD -----	2	
-55	0523007-24	SKIN-UPPER CENTER SECTION STA 44.125 TO 174 LH -----	1	
	0426005-31	SKIN-UPPER CENTER SECTION STA 44.125 TO 174 RH -----	1	
		ATTACHING PARTS		
-55A	AN525-10R11	SCREW -----	1	C
-55B	AN525-10R6	SCREW -----	1	C
		-----*		
-56	0523003-81	SKIN-UPPER CENTER SECTION STA 174 TO 192 -----	1	
-57	0523007-16	SKIN-UPPER TRAILING EDGE STA 21.375 TO 84 -----	1	
-58	0523003-80	SKIN-UPPER TRAILING EDGE STA 84 TO 174 -----	1	
-59	0426005-14	SKIN-LOWER CENTER SECTION STA 22.125 TO 84 LH -----	1	
	0426005-32	SKIN-LOWER CENTER SECTION STA 22.125 TO 84 RH -----	1	
-60	0523003-74	SKIN-LOWER CENTER SECTION STA 84 TO 174 -----	1	
-61	0523003-83	SKIN-LOWER CENTER SECTION STA 174 TO 192 -----	1	
-62	0523007-20	SKIN-LOWER TRAILING EDGE STA 21.375 TO 84 LH -----	1	
	0523007-19	SKIN-LOWER TRAILING EDGE STA 21.375 TO 84 RH -----	1	
-63	0523003-62	SKIN-LOWER TRAILING EDGE STA 84 TO 138 -----	1	
-64	S330-2	DOUBLER-INSPECTION OPENING -----	3	
-65	NAS395-14-3	NUTPLATE -----	4	
-66	S237-2	DOUBLER-INSPECTION OPENING -----	3	
-67	NAS395-14-3	NUTPLATE -----	3	
-68	S237-2	DOUBLER-INSPECTION OPENING LH WING ONLY -----	1	
	NAS395-14-3	NUTPLATE -----	3	
-69	S1209-1	DOUBLER-INSPECTION OPENING RH WING ONLY -----	1	
	NAS680A08K	NUTPLATE -----	6	
-70	CM2692-28-1S	PLUG BUTTON -----	1	
-71	0721107-1	FAIRING-LH -----	1	
	0721107-2	FAIRING-RH -----	1	
-72	0426209-4	CATCH ASSY-CABIN DOOR -----	1	
		ATTACHING PARTS		
	AN515-6R6	SCREW -----	1	
	NAS680A06	NUTPLATE -----	1	
		-----*		
-73	0423008-3	TIP-WING STANDARD -----	2	B
-74	0523565-29	TIP ASSY-WING LH CONICAL CAMBER -----	1	
	0523565-30	TIP ASSY-WING RH CONICAL CAMBER -----	1	
		ATTACHING PARTS		
	S102178-8	SCREW -----	12	
	0423008-4	STIFFENER USE ON UPPER SIDE LH TIP & LOWER SIDE RH TIP -----	1	B
		USED WITH STANDARD WING TIP ONLY		
	0423008-5	STIFFENER USE ON UPPER SIDE RH TIP & LOWER SIDE LH TIP -----	1	B
		USED WITH STANDARD WING TIP ONLY		
-75	0523565-21	STIFFENER USE ON UPPER SIDE LH TIP & LOWER SIDE RH TIP -----	1	
		USED WITH CONICAL CAMBER WING TIP ONLY		
	0523565-22	STIFFENER USE ON UPPER SIDE RH TIP & LOWER SIDE LH TIP -----	1	
		USED WITH CONICAL CAMBER WING TIP ONLY		
		-----*		
	NAS1329A06K120	NUT -----	5	
NOTE. *WHEN INITIALLY ORDERING THIS PART FOR SPARES PRIOR TO SERIAL 15285565 & F17201909 ALSO ORDER TWO 1220114-1 SPACERS. SEE FIGURE 16 FOR INSTALLATION. CONTINUED ON NEXT PAGE				

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION							UNITS PER ASSY	USABLE ON CODE
		1	2	3	4	5	6	7		
6 -		A---152 SERIAL 15279406 THRU 15281298, 15281300 THRU 15281314, 15281316 THRU 15281326, 15281328 THRU 15281340, 15281342 THRU 15281349, 15281351 THRU 15281359, 15281361 THRU 15281369, 15281371 THRU 15281380, 15281382 THRU 15281389, 15281391 THRU 15281400, 15281402 THRU 15281409, 15281411 THRU 15281420, 15281422 THRU 15281426 F152 SERIAL F15201429 THRU F15201538 B---152 SERIAL 15279406 & ON C---152 SERIAL 15281299, 15281315, 15281327, 15281341, 15281350, 15281360, 15281370, 15281381, 15281390, 15281401, 15281410, 15281421, 15281427 & ON F152 SERIAL F15201539 & ON D---152 SERIAL 15281299, 15281315, 15281327, 15281341, 15281350, 15281360, 15281370, 15281381, 15281390, 15281401, 15281410, 15281421, 15281427 THRU 15283591 F152 SERIAL F15201539 THRU F15201673 E---152 SERIAL 15283592 & ON F152 SERIAL F15201674 & ON F---152 SERIAL 15279406 THRU 15285719 F152 SERIAL F15201429 THRU F15201936 G---152 SERIAL 15285720 & ON F152 SERIAL F15201937 & ON H---152 SERIAL 15279406 THRU 15285564 F152 SERIAL F15201429 THRU F15201908 J---152 SERIAL 15285565 & ON F152 SERIAL F15201909 & ON K---152 SERIAL 15283592 THRU 15285833 F152 SERIAL F15201674 THRU F15201943 L---152 SERIAL 15285834 & ON F152 SERIAL F15201944 & ON								

152 & A152 Parts Catalog

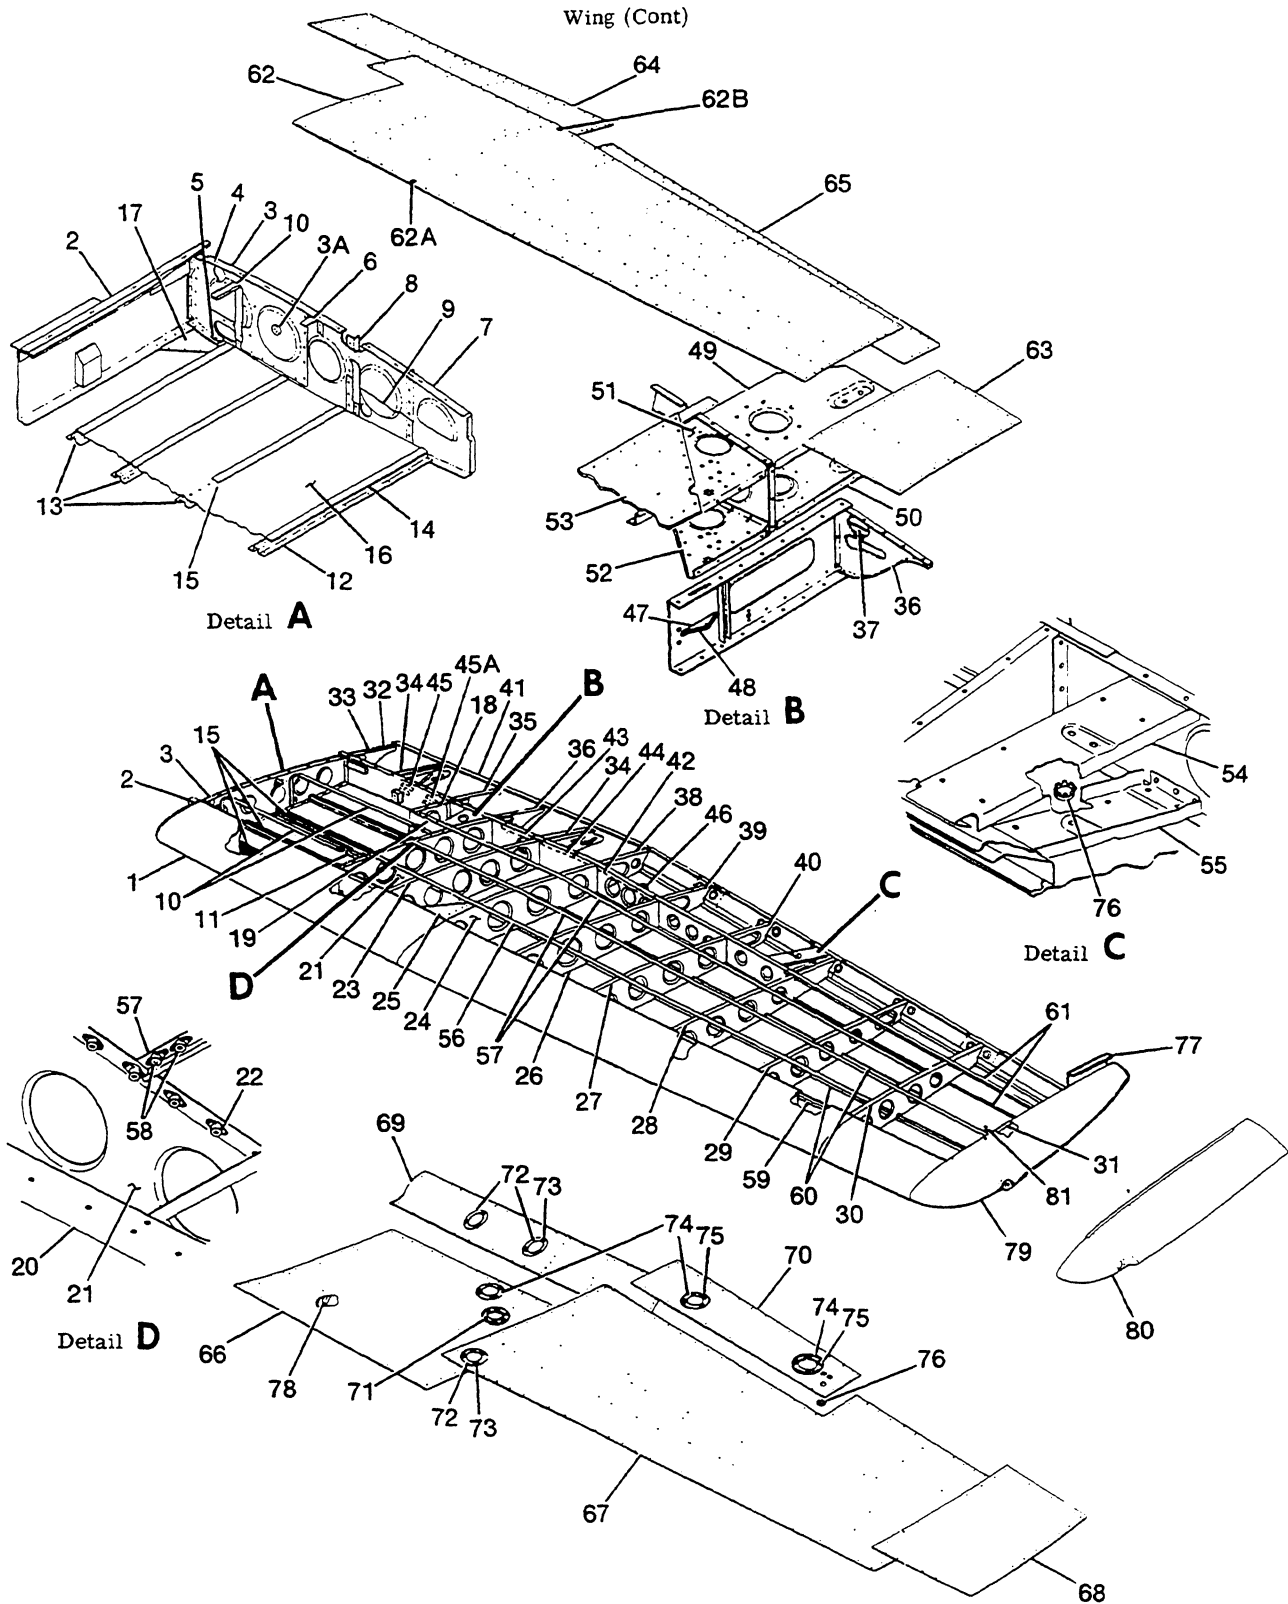

A152 SERIAL A1520735 & ON
FA152 SERIAL FA1520337 & ON

Figure 7. Wing Structure Assembly - Aerobat Extended Range

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
7 -	0422401-33	STRUCTURE ASSY-WING LH EXTENDED RANGE AEROBAT -----	1	A
	0422401-37	STRUCTURE ASSY-WING LH EXTENDED RANGE AEROBAT -----	1	D
	0422401-43	STRUCTURE ASSY-WING LH EXTENDED RANGE AEROBAT -----	1	K
	0422401-51	STRUCTURE ASSY-WING LH EXTENDED RANGE AEROBAT -----	1	L
	0422402-24	STRUCTURE ASSY-WING RH EXTENDED RANGE AEROBAT -----	1	A
	0422402-28	STRUCTURE ASSY-WING RH EXTENDED RANGE AEROBAT -----	1	D
	0422402-32	STRUCTURE ASSY-WING RH EXTENDED RANGE AEROBAT -----	1	E
- 1	SEE FIG 9	LEADING EDGE ASSY-WING -----	1	
- 2	SEE FIG 11	SPAR ASSY-WING FRONT -----	1	
- 3	0426507-15	RIB ASSY-WING ROOT LH WEU 0426507-23 -----	1	H
	0426507-23	RIB ASSY-WING ROOT LH -----	1	J
	0426507-14	RIB ASSY-WING ROOT RH WEU 0426507-22 -----	1	J
	0426507-22	RIB ASSY-WING ROOT -----	1	
- 3A	MS35489-9	GROMMET -----	1	
- 4	NAS680A08K	NUTPLATE -----	10	
- 5	S1860-2A	NUTPLATE -----	4	
- 6	1516006-1	STRAP-FUEL TRANSMITTER GROUND -----	1	
- 7	0422417-1	STIFFENER -----	1	
- 8	0422417-2	STIFFENER -----	1	
- 9	0426522-1	STIFFENER ASSY-LH -----	1	
	0426522-2	STIFFENER ASSY-RH -----	1	
	S1860-2A	NUTPLATE -----	2	
-10	0426512-6	STRAP ASSY-FUEL TANK -----	2	
-11	0523522-1	STRAP ASSY-FUEL TANK -----	2	
-12	0426506-2	HAT SECTION-FUEL TANK LOWER LH -----	1	
	0426506	HAT SECTION-FUEL TANK LOWER RH -----	1	
-13	0426506-3	HAT SECTION-FUEL TANK LOWER LH -----	3	
	0426506-1	HAT SECTION-FUEL TANK LOWER RH -----	3	
-14	S2127-21.69	PAD-HAT SECTION -----	1	
-15	S2127-35.56	PAD-HAT SECTION -----	3	
-16	0422418-1	REINFORCEMENT-LOWER FUEL BAY -----	1	
-17	0422416-1	GUSSET -----	1	
-18	0721111-37	RIB ASSY-STUB STA 44.12 LH -----	1	
	0721111-38	RIB ASSY-STUB STA 44.12 RH -----	1	
	NAS680A08	NUTPLATE -----	2	
-19	0523505-5	BULKHEAD ASSY-TANK WELL LH -----	1	
	0523505-6	BULKHEAD ASSY-TANK WELL RH -----	1	
	NAS680A08	NUTPLATE -----	4	
-20	0523003-48	DOUBLER -----	1	
-21	0523508-29	RIB ASSY-LEFT FUEL CELL STA 58 -----	1	
	0523508-28	RIB ASSY-RIGHT FUEL CELL STA 58 -----	1	
-22	NAS680A08	NUTPLATE -----	9	
	0523561-1	DOUBLER-RH WING STA 58 -----	1	
-23	0523509-13	RIB-WING CENTER SECTION STA 69.62 -----	1	
-24	0523510-19	RIB-WING CENTER SECTION STA 84 LH -----	1	
	0523510-20	RIB-WING CENTER SECTION STA 84 RH -----	1	
-25	0422410-1	GUSSET-WING STA 84 LH -----	1	
	0422410-2	GUSSET-WING STA 84 RH -----	1	
-26	0523511-14	RIB-WING CENTER SECTION STA 102 -----	1	
-27	0523512-19	RIB-WING CENTER SECTION STA 120 -----	1	
-28	0523513-13	RIB-WING CENTER SECTION STA 138 LH -----	1	
	0523513-14	RIB-WING CENTER SECTION STA 138 RH -----	1	
-29	0523514-7	RIB-WING CENTER SECTION STA 156 -----	1	
-30	0523515-7	RIB-WING CENTER SECTION STA 174 -----	1	
-31	0720608-7	RIB ASSY-WING CENTER SECTION STA 192 -----	1	
	S1863-3A	NUTPLATE -----	10	
-32	0523232-6	RIB-WING ROOT TRAILING EDGE STA 22.12 -----	1	
-33	NAS395-14-3	NUT -----	4	
-34	0523231-23	RIB ASSY-FLAP TRACK STA 31.75 & 69.37 WEU 2425001-1 -----	2	F
	2425001-1	RIB ASSY-FLAP TRACK STA 31.75 & 69.37 -----	2	G
	0523231-5	BRACKET -----	2	
-35	0523233-24	RIB ASSY-WING TRAILING EDGE STA 44.12 -----	1	
	0523233-8	RUB STRIP -----	1	
-36	0523233-13	RIB ASSY-WING TRAILING EDGE STA 56.87 -----	1	
-37	0523233-5	RUB STRIP -----	1	
-38	0523230-9	RIB ASSY-WING TRAILING EDGE STA 84 LH -----	1	
	0423230-8	RIB ASSY-WING TRAILING EDGE STA 84 RH -----	1	
	0523230-4	ANGLE LH -----	1	
	0523230-5	ANGLE RH -----	1	
-39	0523511-15	RIB-WING TRAILING EDGE STA 102 -----	1	
-40	0523512-22	RIB-WING TRAILING EDGE STA 120 -----	1	
-41	0720005-2	STIFFENER-TRAILING EDGE -----	1	

CONTINUED ON NEXT PAGE

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION							UNITS PER ASSY	USABLE ON CODE
		1	2	3	4	5	6	7		
7 -42	0422419-1	STIFFENER-WING SPAR LH	----	----	----	----	----	----	1	
	0422419-2	STIFFENER-WING SPAR RH	----	----	----	----	----	----	1	
-43	0422419-3	STIFFENER-WING SPAR LH	----	----	----	----	----	----	1	
	0422419-4	STIFFENER-WING SPAR RH	----	----	----	----	----	----	1	
-44	0422419-5	STIFFENER-WING SPAR LH	----	----	----	----	----	----	1	
	0422419-6	STIFFENER-WING SPAR RH	----	----	----	----	----	----	1	
-45	0460204-1	BRACKET-FLAP PULLEY INBOARD UPPER	----	----	----	----	----	----	1	
	0460204-2	BRACKET-FLAP PULLEY INBOARD LOWER	----	----	----	----	----	----	1	
-45A	0460205-1	BRACKET-FLAP PULLEY OUTBOARD UPPER	----	----	----	----	----	----	1	
	0460205-2	BRACKET-FLAP PULLEY OUTBOARD LOWER	----	----	----	----	----	----	1	
-46	0523408	BRACKET-AILERON PULLEY	----	----	----	----	----	----	1	
-47	0523407	BRACKET-FLAP PULLEY	----	----	----	----	----	----	1	
-48	0523407-1	BRACKET-FLAP PULLEY	----	----	----	----	----	----	1	
-49	0420015-1	BRACKET-FLAP ACTUATOR MOUNT UPPER RH ONLY	----	----	----	----	----	----	1	
-50	0420015-2	BRACKET-FLAP ACTUATOR MOUNT LOWER RH ONLY	----	----	----	----	----	----	1	
-51	0523539-7	BRACKET-FLAP BELLCRANK SUPPORT UPPER LH	----	----	----	----	----	----	1	
	0523539-8	BRACKET-FLAP BELLCRANK SUPPORT UPPER RH	----	----	----	----	----	----	1	
-52	0523539-9	BRACKET-FLAP BELLCRANK SUPPORT LOWER LH	----	----	----	----	----	----	1	
	0523539-10	BRACKET-FLAP BELLCRANK SUPPORT LOWER RH	----	----	----	----	----	----	1	
-53	0422408-2	PLATE-REINFORCEMENT	----	----	----	----	----	----	1	
-54	0523219-2	CHANNEL-AILERON BELLCRANK SUPPORT UPPER LH	----	----	----	----	----	----	1	
	0523219-3	CHANNEL-AILERON BELLCRANK SUPPORT UPPER RH	----	----	----	----	----	----	1	
-55	0523219-4	CHANNEL-AILERON BELLCRANK SUPPORT LOWER LH	----	----	----	----	----	----	1	
	0523219-5	CHANNEL-AILERON BELLCRANK SUPPORT LOWER RH	----	----	----	----	----	----	1	
-56	0422413-9	STRINGER-WING LH UPPER FORWARD	----	----	----	----	----	----	1	
	0422413-10	STRINGER-WING RH UPPER FORWARD	----	----	----	----	----	----	1	
-57	0422413-11	STRINGER-WING LH UPPER CENTER & UPPER AFT	----	----	----	----	----	----	2	
	0422413-12	STRINGER-WING RH UPPER CENTER & UPPER AFT	----	----	----	----	----	----	2	
-58	NAS680A08	NUTPLATE	----	----	----	----	----	----	2	
-59	0422413-27	STRINGER-WING LH LOWER FORWARD	----	----	----	----	----	----	1	
	0422413-28	STRINGER-WING RH LOWER FORWARD	----	----	----	----	----	----	1	
-60	0422413-15	STRINGER-WING LH LOWER CENTER & LOWER AFT	----	----	----	----	----	----	2	
	0422413-16	STRINGER-WING RH LOWER CENTER & LOWER AFT	----	----	----	----	----	----	2	
-61	0523003-40	STRINGER-AFT OUTBOARD	----	----	----	----	----	----	2	
-62	0422401-21	SKIN-UPPER CENTER SECTION STA 44.12 TO 174 LH	----	----	----	----	----	----	1	A C A C
	0422401-40	SKIN-UPPER CENTER SECTION STA 44.12 TO 174 LH	----	----	----	----	----	----	1	
	0422402-12	SKIN-UPPER CENTER SECTION STA 44.12 TO 174 RH	----	----	----	----	----	----	1	
	0422402-29	SKIN-UPPER CENTER SECTION STA 44.12 TO 174 RH	----	----	----	----	----	----	1	
		ATTACHING PARTS	----	----	----	----	----	----		
-62A	AN525-10R11	SCREW	----	----	----	----	----	----	1	C C
-62B	AN525-10R6	SCREW	----	----	----	----	----	----	1	
		----	----	----	----	----	----	----		
-63	0422401-7	SKIN-UPPER CENTER SECTION STA 174 TO 192	----	----	----	----	----	----	1	A C
-64	0422401-17	SKIN-UPPER TRAILING EDGE STA 22.12 TO 84	----	----	----	----	----	----	1	
-65	0422401-9	SKIN-UPPER TRAILING EDGE STA 84 TO 174	----	----	----	----	----	----	1	
	0422401-39	SKIN-UPPER TRAILING EDGE STA 84 TO 174	----	----	----	----	----	----	1	
-66	0422401-16	SKIN-LOWER CENTER SECTION STA 22.12 TO 69.62 LH	----	----	----	----	----	----	1	
	0422402-9	SKIN-LOWER CENTER SECTION STA 22.12 TO 69.62 RH	----	----	----	----	----	----	1	
-67	0422401-11	SKIN-LOWER CENTER SECTION STA 69.62 TO 174 LH	----	----	----	----	----	----	1	
	0422402-34	SKIN-LOWER CENTER SECTION STA 69.62 TO 174 RH	----	----	----	----	----	----	1	
-68	0422401-12	SKIN-LOWER CENTER SECTION STA 174 TO 192	----	----	----	----	----	----	1	
-69	0422401-18	SKIN-LOWER TRAILING EDGE STA 22.12 TO 84 LH	----	----	----	----	----	----	1	
	0422402-10	SKIN-LOWER TRAILING EDGE STA 22.12 TO 84 RH	----	----	----	----	----	----	1	
-70	0422401-14	SKIN-LOWER TRAILING EDGE STA 84 TO 138	----	----	----	----	----	----	1	
-71	S1209-1	DOUBLER-INSPECTION OPENING RH WING	----	----	----	----	----	----	1	
	NAS680A08K	NUT	----	----	----	----	----	----	6	
-72	S237-2	DOUBLER-INSPECTION OPENING	----	----	----	----	----	----	3	
-73	NAS395-14-3	NUT	----	----	----	----	----	----	3	
-74	S330-2	DOUBLER-INSPECTION OPENING	----	----	----	----	----	----	3	
-75	NAS395-14-3	NUT	----	----	----	----	----	----	4	
-76	CM2692-28-1B	PLUG BUTTON	----	----	----	----	----	----	1	
-77	0721107-1	FAIRING LH	----	----	----	----	----	----	1	
	0721107-2	FAIRING RH	----	----	----	----	----	----	1	
-78	0426209-4	CATCH ASSY-CABIN DOOR	----	----	----	----	----	----	1	
		ATTACHING PARTS	----	----	----	----	----	----		
	AN515-6R6	SCREW	----	----	----	----	----	----	1	
	NAS680A06	NUTPLATE	----	----	----	----	----	----	1	
		----	----	----	----	----	----	----		


CONTINUED ON NEXT PAGE

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION							UNITS PER ASSY	USABLE ON CODE
		1	2	3	4	5	6	7		
7 -79 -80 -81	0423008-3	TIP-WING STANDARD -----							2	B
	0523565-29	TIP ASSY-WING LH CONICAL CAMBER -----							1	
	0523565-30	TIP ASSY-WING RH CONICAL CAMBER -----							1	
		ATTACHING PARTS -----								
	S102178-8	SCREW -----							12	
	0423008-4	STIFFENER USE ON UPPER SIDE LH TIP & LOWER SIDE RH TIP ----							1	B
		USED WITH STANDARD WING TIP -----								
	0423008-5	STIFFENER USE ON UPPER SIDE RH TIP & LOWER SIDE LH TIP ----							1	
		USED WITH STANDARD WING TIP -----								
	0523565-21	STIFFENER USE ON UPPER SIDE LH TIP & LOWER SIDE RH TIP ----							1	
		USED WITH CONICAL CAMBER WING TIP -----								
	0523565-22	STIFFENER USE ON UPPER SIDE RH TIP & LOWER SIDE LH TIP ----							1	
		USED WITH CONICAL CAMBER WING TIP -----								
		*-----								
	NAS1329A06K120	NUT -----							5	
NOTE. *WHEN INITIALLY ORDERING THIS PART FOR SPARES PRIOR TO SERIAL A1521015 & FA1520388 ALSO ORDER TWO 1220114-1 SPACERS. SEE FIGURE 16 FOR INSTALLATION. A---A152 SERIAL A1520735 THRU A1520785 FA152 SERIAL FA1520337 THRU FA1520352 B---A152 SERIAL A1520735 & ON C---A152 SERIAL A1520786 & ON FA152 SERIAL FA1520353 & ON D---A152 SERIAL A1520786 THRU A1520878 FA152 SERIAL FA1520353 THRU FA1520357 E---A152 SERIAL A1520879 & ON FA152 SERIAL FA1520358 & ON F---A152 SERIAL A1520735 THRU A1521014 FA152 SERIAL FA1520337 THRU FA1520387 G---A152 SERIAL A1521015 & ON FA152 SERIAL FA1520388 & ON H---A152 SERIAL A1520735 THRU A1521020 FA152 SERIAL FA1520337 THRU FA1520387 J---A152 SERIAL A1521021 & ON FA152 SERIAL FA1520388 & ON K---A152 SERIAL A1520879 THRU A1521025 FA152 SERIAL FA1520358 THRU FA1520387 L---A152 SERIAL A1521026 & ON FA152 SERIAL FA1520388 & ON										


152 & A152 Parts Catalog

Wing (Cont)

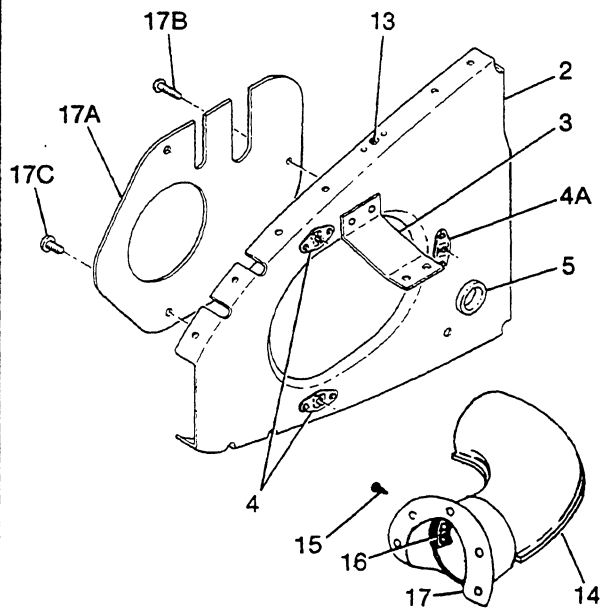


CODE B

Detail **A**

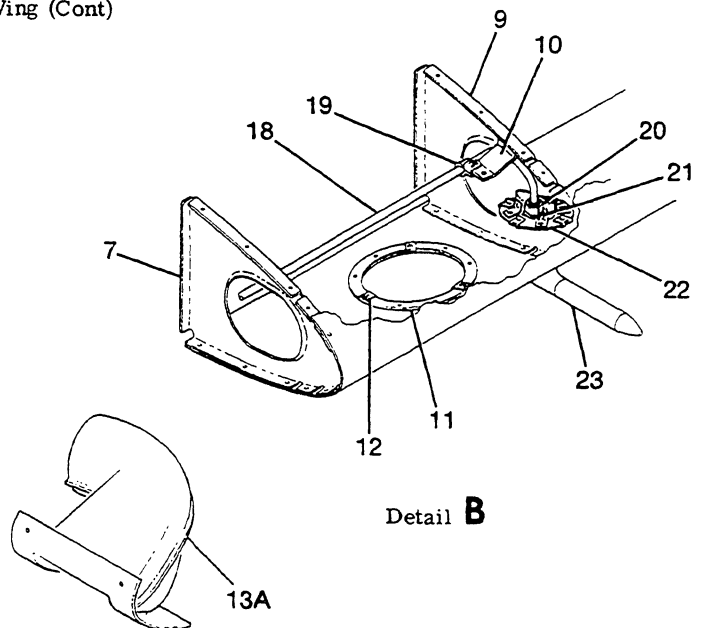

Detail **B**

CODE C

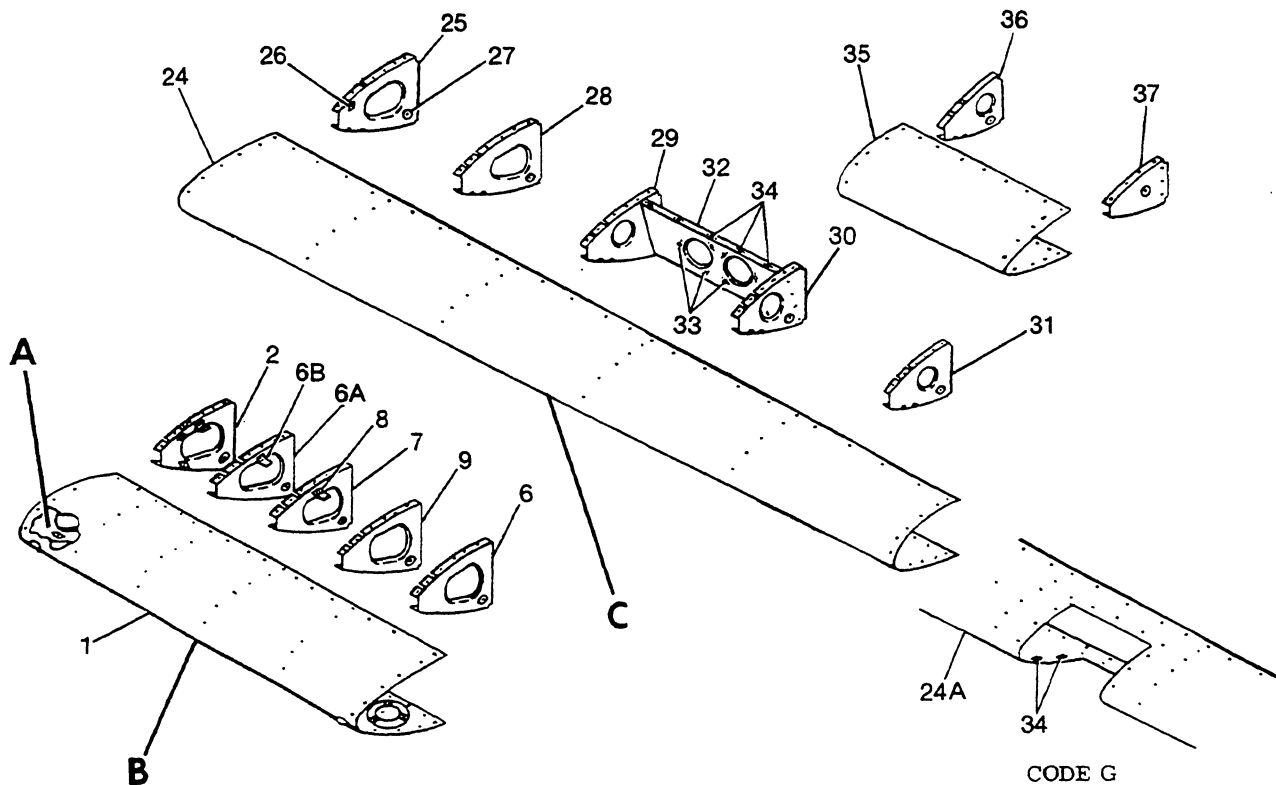

CODE G

Detail **C**

152 SERIAL 15279406 & ON
F152 SERIAL F15201429 & ON

Figure 8. Wing Leading Edge Assembly

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
8 -		LEADING EDGE ASSEMBLY-WING -----	NP	A
	0426005-221	LEADING EDGE ASSY-INBD LH STA. 22.125 TO 84 -----	1	B
	0426005-227	LEADING EDGE ASSY-INBD LH STA. 22.125 TO 84 -----	1	C
	0426005-61	LEADING EDGE ASSY-INBD RH STA. 22.125 TO 84 -----	1	B
	0426005-226	LEADING EDGE ASSY-INBD RH STA. 22.125 TO 84 -----	1	C
- 1	0426005-93	SKIN-LEADING EDGE STA. 22.125 TO 84 LH -----	1	B
	0426005-109	SKIN-LEADING EDGE STA. 22.125 TO 84 LH -----	1	C
	0523007-11	SKIN-LEADING EDGE STA. 22.125 TO 84 RH -----	1	B
	0426005-110	SKIN-LEADING EDGE STA. 22.125 TO 84 RH -----	1	C
- 2	0523107-2	RIB ASSY-NOSE STA. 22.125 LH -----	1	D
	0523107-11	RIB ASSY-NOSE STA. 22.125 LH -----	1	E
	0523107	RIB ASSY-NOSE STA. 22.125 RH -----	1	D
	0523107-12	RIB ASSY-NOSE STA. 22.125 RH -----	1	E
- 3	0422291	BRACKET LH ONLY -----	1	
- 4	S1863-3A	NUTPLATE -----	2	
- 4A	S1863-1	NUTPLATE -----	1	E
- 5	MS20230-A2	GROMMET -----	1	
- 6	0523108	RIB ASSY-NOSE STA. 69.625 -----	1	
	MS20230-A2	GROMMET -----	1	
- 6A	0523108	RIB ASSY-NOSE STA. 33.125 LH -----	1	B
	0523108-3	RIB ASSY-NOSE STA. 33.125 LH -----	1	C
	0523108	RIB ASSY-NOSE STA. 33.125 RH -----	1	
- 6B	0422292	BRACKET LH ONLY -----	1	C
	MS20230-A2	GROMMET -----	1	
- 7	0523108-3	RIB ASSY-NOSE STA. 44.125 LH -----	1	
	0523108	RIB ASSY-NOSE STA. 44.125 RH -----	1	
- 8	0422292	BRACKET LH ONLY -----	1	
	MS20230-A2	GROMMET -----	1	
- 9	0523108-4	RIB ASSY-NOSE STA. 56.875 LH -----	1	
	0523108	RIB ASSY-NOSE STA. 56.875 RH -----	1	
-10	0422291	BRACKET LH ONLY -----	1	
	MS20230-A2	GROMMET -----	1	
-11	S237-2	DOUBLER ASSY-INSPECTION OPENING -----	2	
-12	NAS395-4-3	NUTPLATE -----	3	
-13	S1863-3A	NUTPLATE LH ONLY -----	2	
-13A	0413589-1	DUCT ASSY-AIR VENT LH -----	1	C
	0413589-2	DUCT ASSY-AIR VENT RH -----	1	C
	AN960PD4	WASHER -----	4	C
-14	0422014-4	ELBOW-CABIN AIR VENT -----	2	B
		ATTACHING PARTS -----		
-15	S1021Z8-8	SCREW -----	1	B
-16	NAS446-4-3	NUT -----	1	B
		*-----		
-17	0413157	SCOOP-CABIN AIR VENT -----	2	B
-17A	0523113-3	PLATE-LH -----	1	E
	0523113-4	PLATE-RH -----	1	E
		ATTACHING PARTS -----		
-17B	S1021Z4-8	SCREW -----	1	E
-17C	S1021Z8-6	SCREW -----	2	E
		*-----		
-18	S1071-1	TUBE-PITOT TO AIRSPEED 80.0 IN LG BKI -----	1	
		ATTACHING PARTS -----		
-19	AN742D4	CLAMP -----	3	
	S1021Z8-8	SCREW -----	3	
	NAS-395-12-3	NUT -----	3	
		*-----		
-20	S1130-1	NUT -----	2	
	S1131-1	INSERT -----	2	
-21	S1133-1	CONNECTOR -----	1	
-22	SEE FIG 77	CONNECTOR ASSY-PITOT TUBE LH ONLY -----	1	
		ATTACHING PARTS -----		
	S1021Z8-8	SCREW -----	4	
		*-----		
-23	SEE FIG 77	PITOT TUBE ASSY LH ONLY -----	1	
CONTINUED ON NEXT PAGE				

152 & A152 Parts Catalog



FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
8 -	0426005-229	LEADING EDGE ASSY-CENTER LH STA. 84 TO 174 -----	1	F
	0426005-231	LEADING EDGE ASSY-CENTER LH STA. 84 TO 174 -----	1	G
	0426005-228	LEADING EDGE ASSY-CENTER RH STA. 84 TO 174 -----	1	
-24	0523003-63	SKIN-LEADING EDGE STA. 84 TO 174 LH -----	1	F
-24A	0523003-10	SKIN-LEADING EDGE STA. 84 TO 174 LH -----	1	G
	0523003-11	SKIN-LEADING EDGE STA. 84 TO 174 RH -----	1	
-25	0523109	RIB ASSY-NOSE STA. 84 LH -----	1	
	0523109-1	RIB ASSY-NOSE STA. 84 RH -----	1	
-26	S1863-2	NUTPLATE -----	1	
-27	MS20230-A2	GROMMET -----	1	
-28	0523511-5	RIB ASSY-NOSE STA. 102 -----	1	
	MS20230-A2	GROMMET -----	1	
-29	0523512-5	RIB ASSY-NOSE STA. 120 -----	1	
	MS20230-A2	GROMMET -----	1	
-30	0523513-4	RIB ASSY-NOSE STA. 138 -----	1	
	MS20230-A2	GROMMET -----	1	
-31	0523514-4	RIB ASSY-NOSE STA. 156 -----	1	
	MS20230-A2	GROMMET -----	1	
-32	0523106	BRACKET ASSY-LANDING LIGHT LH ONLY -----	1	6
-33	NAS680A08	NUTPLATE -----	6	6
-34	S1863-3A	NUTPLATE LH ONLY -----	18	6
	0426005-219	LEADING EDGE ASSY-OUTBOARD LH STA. 174 TO 192 -----	1	
	0426005-218	LEADING EDGE ASSY-OUTBOARD RH STA. 174 TO 192 -----	1	
-35	0523003-56	SKIN-LEADING EDGE STA. 174 TO 197 LH -----	1	
	0523003-57	SKIN-LEADING EDGE STA. 174 TO 192 RH -----	1	
-36	0523515-4	RIB ASSY-NOSE STA. 174 -----	1	
	MS20230-A2	GROMMET -----	1	
-37	0720608-26	RIB ASSY-NOSE STA. 192 -----	1	
	MS20230-A2	GROMMET -----	1	
A---152 SERIAL 15279406 & ON F152 SERIAL F15201429 & ON B---152 SERIAL 15279406 THRU 15283591 F152 SERIAL F15201429 THRU F15201673 C---152 SERIAL 15283592 & ON F152 SERIAL F15201674 & ON D---152 SERIAL 15279406 THRU 15285713 F152 SERIAL F15201429 THRU F15201943 E---152 SERIAL 15285714 & ON F152 SERIAL F15201944 & ON F---152 SERIAL 15279406 THRU 15285833 F152 SERIAL F15201429 THRU F15201943 G---152 SERIAL 15285834 & ON F152 SERIAL F15201944 & ON				

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION							UNITS PER ASSY	USABLE ON CODE
		1	2	3	4	5	6	7		
9 -		LEADING EDGE ASSEMBLIES-WING AEROBAT -----							NP	A
	0422401-213	LEADING EDGE ASSY-INBD	LH	STA	22.12	TO	84.00	-----	1	D
	0422401-219	LEADING EDGE ASSY-INBD	LH	STA	22.12	TO	84.00	-----	1	E
	0422402-204	LEADING EDGE ASSY-INBD	RH	STA	22.12	TO	84.00	-----	1	D
	0422402-210	LEADING EDGE ASSY-INBD	RH	STA	22.12	TO	84.00	-----	1	E
- 1	0422401-25	SKIN-LEADING EDGE	LH	STA	22.12	TO	84.00	-----	1	D
	0422401-42	SKIN-LEADING EDGE	LH	STA	22.12	TO	84.00	-----	1	E
	0422402-3	SKIN-LEADING EDGE	RH	STA	22.12	TO	84.00	-----	1	D
	0422402-31	SKIN-LEADING EDGE	RH	STA	22.12	TO	84.00	-----	1	E
- 2	0523107-5	RIB ASSY-NOSE	LH	STA	22.12	-----	-----	-----	1	F
	0523107-11	RIB ASSY-NOSE	LH	STA	22.12	-----	-----	-----	1	F
	0523107-6	RIB SSSY-NOSE	RH	STA	22.12	-----	-----	-----	1	F
	0523107-12	RIB ASSY-NOSE	RH	STA	22.12	-----	-----	-----	1	F
- 3	0422291	BRACKET	LH	ONLY	-----	-----	-----	-----	1	G
- 4	S1863-3A	NUTPLATE	-----	-----	-----	-----	-----	-----	2	G
- 4A	S1863-1	NUTPLATE	-----	-----	-----	-----	-----	-----	1	
- 5	MS20230A2	GROMMET	-----	-----	-----	-----	-----	-----	1	
- 6	0523111-6	RIB ASSY-NOSE	LH	STA	33.12	-----	-----	-----	1	
	0523111-5	RIB ASSY-NOSE	RH	STA	33.12	-----	-----	-----	1	
- 6A	0422292	BRACKET	LH	ONLY	-----	-----	-----	-----	1	
	MS20230A2	GROMMET	-----	-----	-----	-----	-----	-----	1	
- 7	0523111-6	RIB ASSY-NOSE	LH	STA	44.12	-----	-----	-----	1	
	0523111-5	RIB ASSY-NOSE	RH	STA	44.12	-----	-----	-----	1	
- 8	0422292	BRACKET	LH	ONLY	-----	-----	-----	-----	1	
	MS20230A2	GROMMET	-----	-----	-----	-----	-----	-----	1	
- 9	0523111-7	RIB ASSY-NOSE	LH	STA	56.87	-----	-----	-----	1	
	0523111-5	RIB ASSY-NOSE	RH	STA	56.87	-----	-----	-----	1	
-10	0422291	BRACKET	LH	ONLY	-----	-----	-----	-----	1	
	MS20230A2	GROMMET	-----	-----	-----	-----	-----	-----	1	
-10A	0523111-5	RIB ASSY-NOSE	STA	69.62	-----	-----	-----	-----	1	
	MS20230A2	GROMMET	-----	-----	-----	-----	-----	-----	1	
-11	S237-2	DOUBLER ASSY	-----	-----	-----	-----	-----	-----	2	
-12	NAS395-4-3	NUTPLATE	-----	-----	-----	-----	-----	-----	3	
-13	0422409-1	STIFFENER-LH	-----	-----	-----	-----	-----	-----	1	
	0422409-2	STIFFENER-RH	-----	-----	-----	-----	-----	-----	1	
-14	0413157	SCOOP-CABIN AIR VENT	-----	-----	-----	-----	-----	-----	1	D E E F
-14A	0413589-1	DUCT ASSY-AIR VENT LH	-----	-----	-----	-----	-----	-----	1	
	0413589-2	DUCT ASSY-AIR VENT RH	-----	-----	-----	-----	-----	-----	1	
	AN960PD4	WASHER	-----	-----	-----	-----	-----	-----	4	
CONTINUED ON NEXT PAGE										

152 & A152 Parts Catalog

Wing (Cont)

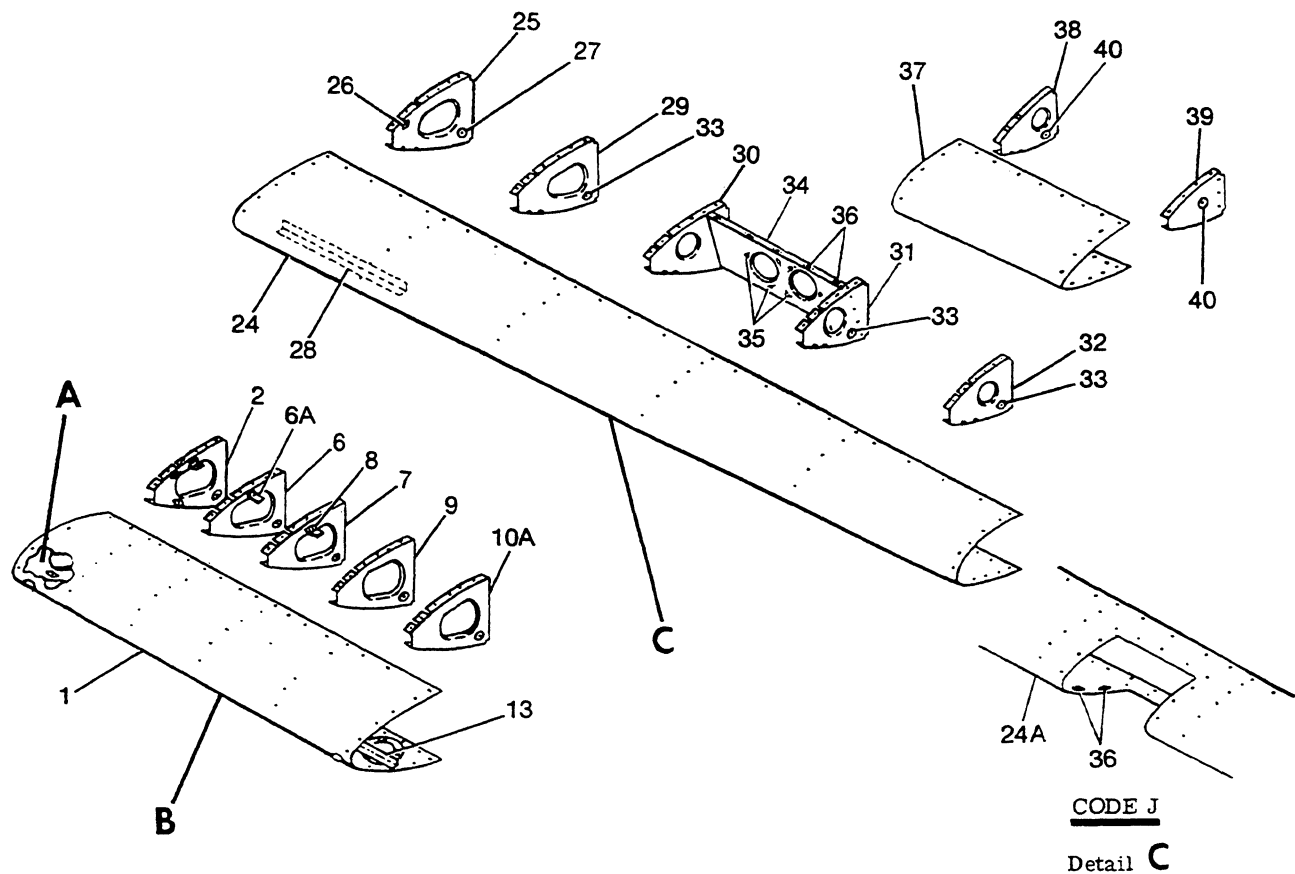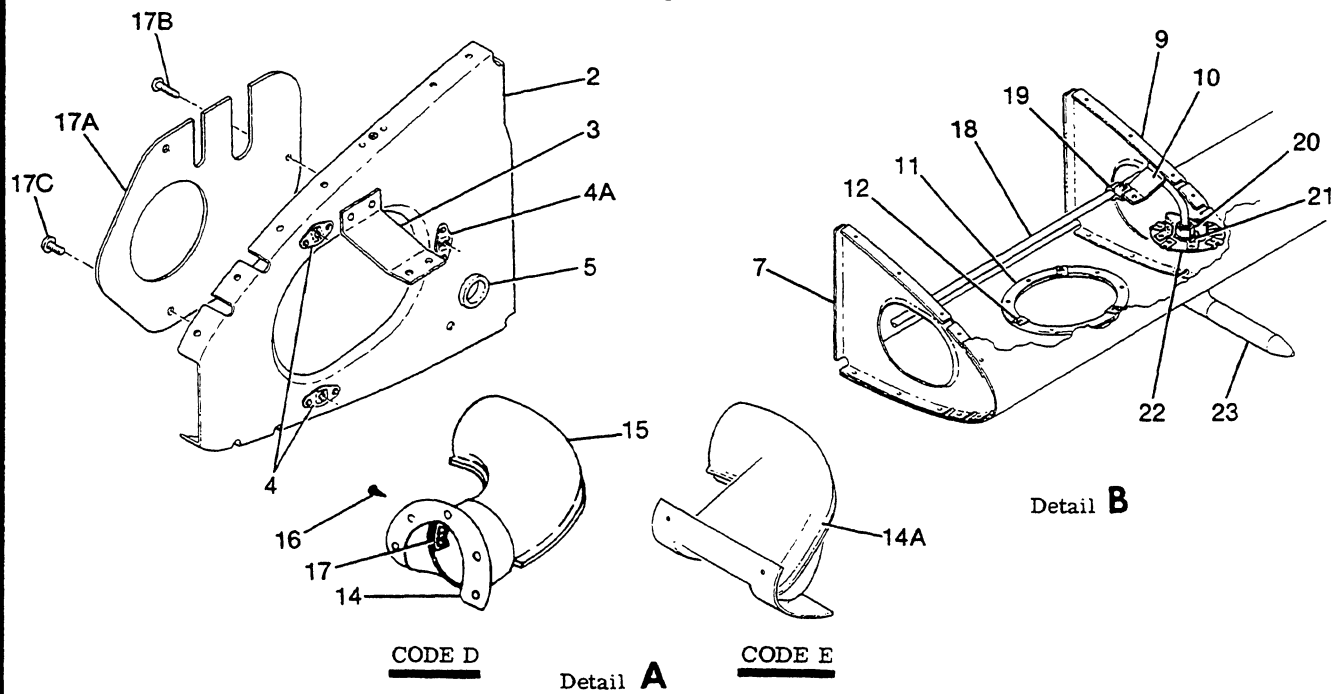


A152 SERIAL A1520735 & ON
FA152 SERIAL FA1520337 & ON

Figure 9. Wing Leading Edge Assembly

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
9 -15	0422014-4	ELBOW-CABIN AIR VENT -----	2	D
-16	S102178-8	ATTACHING PARTS -----	1	D
-17	NAS446-4-3	SCREW -----	1	D
		NUT -----	1	D
		*-----		
-17A	0523113-3	PLATE-LH -----	1	G
	0523113-4	PLATE-RH -----	1	G
		ATTACHING PARTS -----		
-17B	S102174-8	SCREW -----	1	G
-17C	S102178-6	SCREW -----	2	G
		*-----		
-18	S1071-1	TUBE-POLYETHELENE-PITOT 80.0 IN LG BULK ITEM -----	1	
		REF S1071-1-80.0 LH ONLY -----		
		ATTACHING PARTS -----		
-19	AN742D4	CLAMP -----	3	
	S102178-8	SCREW -----	3	
	NAS395-12-13	NUT -----	3	
		*-----		
-20	S1130-1	NUT -----	2	
	S1131-1	INSERT -----	2	
-21	S1133-1	CONNECTOR -----	1	
-22	SEE FIG 77	CONNECTOR ASSY-PITOT TUBE LH ONLY -----	1	
		ATTACHING PARTS -----		
	S102178-8	SCREW -----	4	
		*-----		
-23	SEE FIG 77	PITOT TUBE ASSY LH ONLY -----	1	
	0422401-211	LEADING EDGE ASSY-CENTER LH STA 84.00 TO 174.00 -----	1	H
	0422401-221	LEADING EDGE ASSY-CENTER LH STA 84.00 TO 174.00 -----	1	K
	0422402-206	LEADING EDGE ASSY-CENTER RH STA 84.00 TO 174.00 -----	1	
-24	0422401-24	SKIN-LEADING EDGE LH STA 84.00 TO 174.00 -----	1	B
	0523003-63	SKIN-LEADING EDGE LH STA 84.00 TO 174.00 -----	1	J
-24A	0523003-10	SKIN-LEADING EDGE LH STA 84.00 TO 174.00 -----	1	H
	0422402-5	SKIN-LEADING EDGE RH STA 84.00 TO 174.00 -----	1	B
	0422402-25	SKIN-LEADING EDGE RH STA 84.00 TO 174.00 -----	1	C
-25	0523110-11	RIB ASSY-NOSE LH STA 84.00 -----	1	
	0523110-10	RIB ASSY-NOSE RH STA 84.00 -----	1	
-26	S1863-2	NUTPLATE LH ONLY -----	1	
-27	MS20230A2	GROMMET -----	1	
-28	0422409-3	STIFFENER-LH -----	1	
	0422409-4	STIFFENER-RH -----	1	
-29	0523542-4	RIB ASSY-NOSE STA 102.00 -----	1	
-30	0523512-21	RIB ASSY-NOSE STA 120.00 -----	1	
-31	0523513-12	RIB ASSY-NOSE STA 138.00 -----	1	
-32	0523514-6	RIB ASSY-NOSE STA 156.00 -----	1	
-33	MS20230A2	GROMMET -----	1	
-34	0523106	BRACKET ASSY-LANDING LIGHT -----	1	K
-35	NAS680A08	NUTPLATE -----	6	K
-36	S1863-3A	NUTPLATE -----	18	K
	0422401-209	LEADING EDGE ASSY-OUTBOARD LH STA 174.00 TO 192.00 -----	1	
	0422402-208	LEADING EDGE ASSY-OUTBOARD RH STA 174.00 TO 192.00 -----	1	
-37	0422401-6	SKIN-LEADING EDGE LH STA 174.00 TO 192.00 -----	1	
	0422402-6	SKIN-LEADING EDGE RH STA 174.00 TO 192.00 -----	1	
-38	0523515-6	RIB ASSY-NOSE STA 174.00 -----	1	
-39	0720608-26	RIB ASSY-NOSE STA 192.00 -----	1	
-40	MS20230A2	GROMMET -----	1	
A---A152 SERIAL A1520735 & ON FA152 SERIAL FA1520337 & ON B---A152 SERIAL A1520735 THRU A1520785 FA152 SERIAL FA1520337 THRU FA1520352 C---A152 SERIAL A1520786 & ON FA152 SERIAL FA1520353 & ON D---A152 SERIAL A1520735 THRU A1520878 FA152 SERIAL FA1520337 THRU FA1520357 E---A152 SERIAL A1520879 & ON FA152 SERIAL FA1520358 & ON F---A152 SERIAL A1520735 THRU A1521020 FA152 SERIAL FA1520337 THRU FA1520387 G---A152 SERIAL A1521021 & ON FA152 SERIAL FA1520388 & ON H---A152 SERIAL A1520735 THRU A1521025 FA152 SERIAL FA1520337 THRU FA1520387 J---A152 SERIAL A1520786 THRU A1521025 FA152 SERIAL FA1520353 THRU FA1520387 K---A152 SERIAL A1521026 & ON FA152 SERIAL FA1520388 & ON				

152 & A152 Parts Catalog

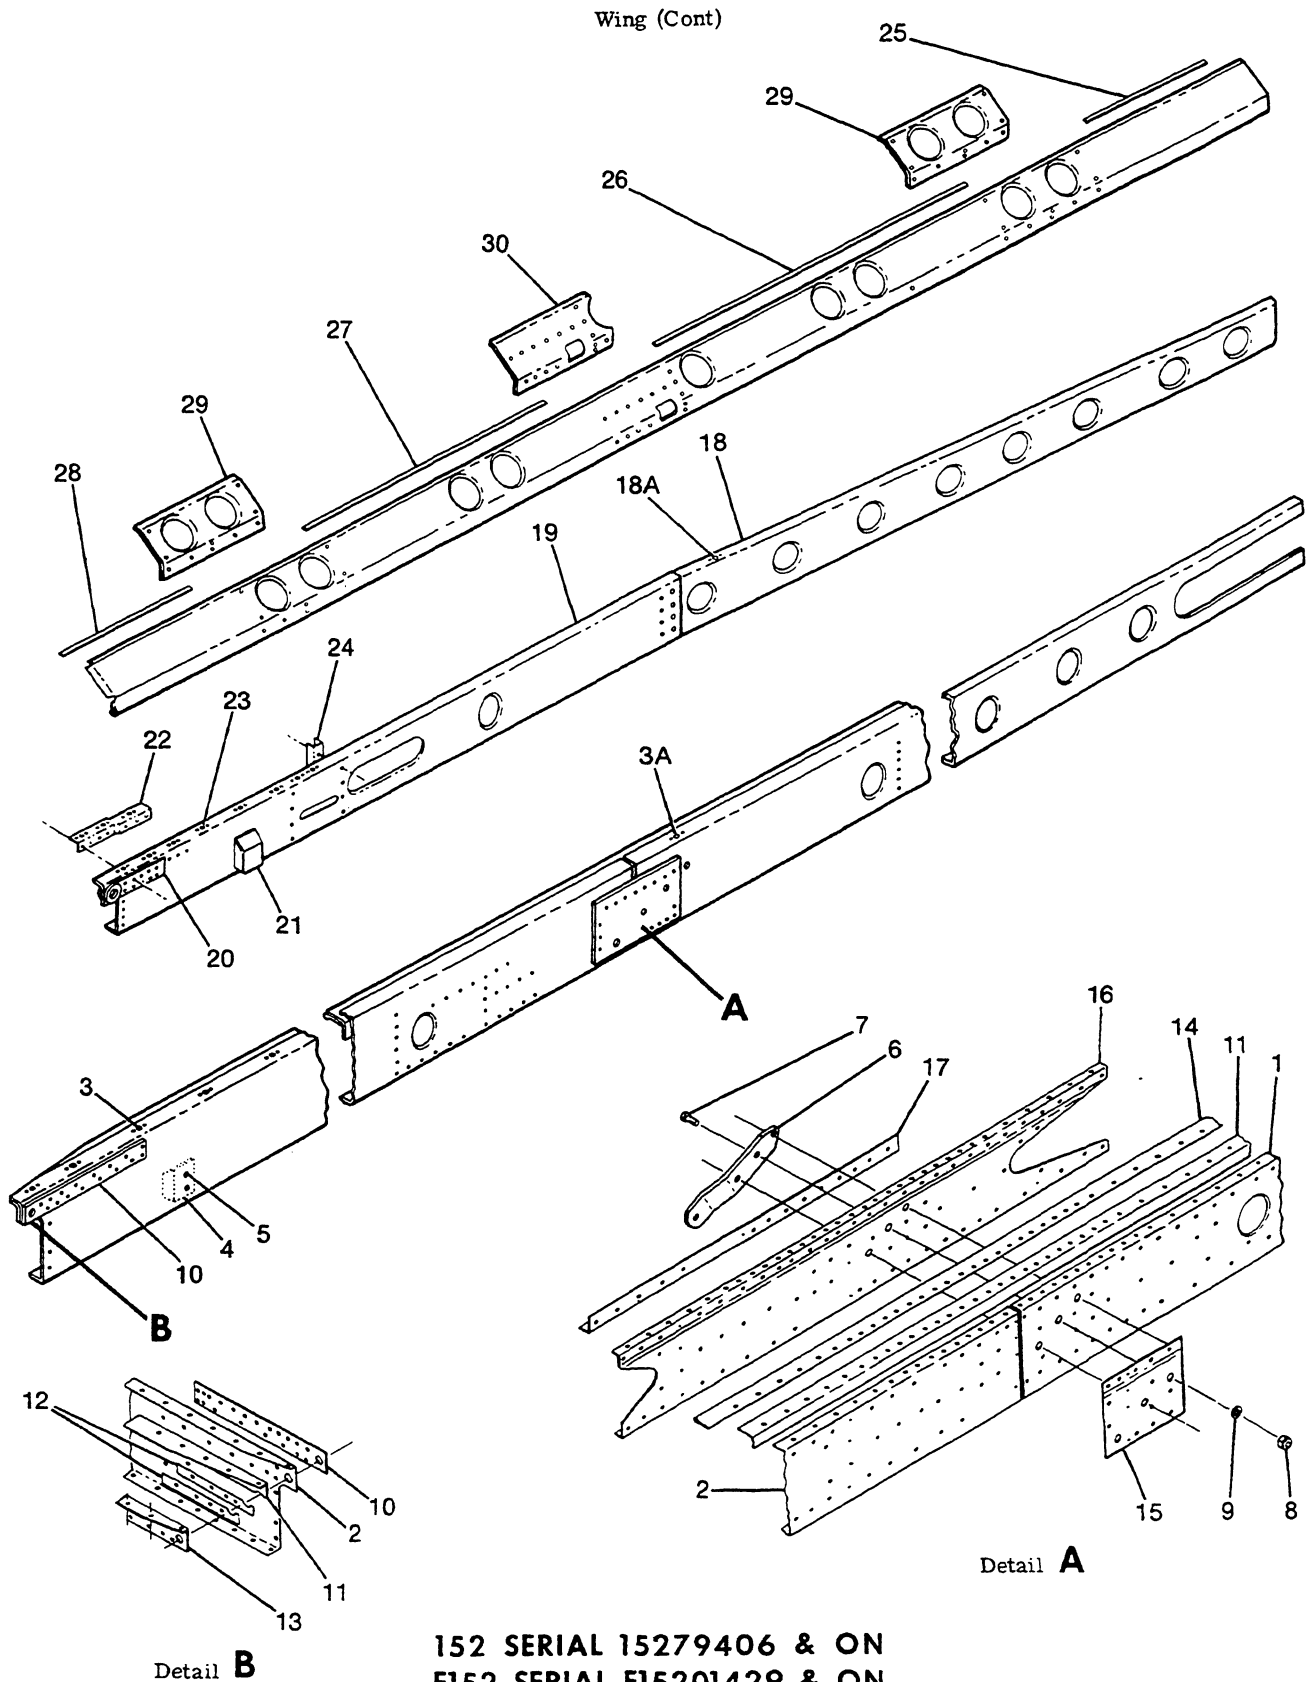

152 SERIAL 15279406 & ON
F152 SERIAL F15201429 & ON

Figure 10. Wing Spar Assemblies

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION							UNITS PER ASSY	USABLE ON CODE
		1	2	3	4	5	6	7		
10 -		SPARS ASSEMBLIES-WING -----							NP	A B C B C B C B C
	0426300	SPAR ASSY-WING	FRONT	LH	STANDARD	RANGE	-----	-----	1	
	0426300-10	SPAR ASSY-WING	FRONT	LH	STANDARD	RANGE	-----	-----	1	
	0426300-7	SPAR ASSY-WING	FRONT	LH	EXTENDED	RANGE	-----	-----	1	
	0426300-11	SPAR ASSY-WING	FRONT	LH	EXTENDED	RANGE	-----	-----	1	
	0426300-1	SPAR ASSY-WING	FRONT	RH	STANDARD	RANGE	-----	-----	1	
	0426300-9	SPAR ASSY-WING	FRONT	RH	STANDARD	RANGE	-----	-----	1	
	0426300-6	SPAR ASSY-WING	FRONT	RH	EXTENDED	RANGE	-----	-----	1	
	0426300-12	SPAR ASSY-WING	FRONT	RH	EXTENDED	RANGE	-----	-----	1	
- 1	0523317	CHANNEL-SPAR	OUTBOARD	LH	-----	-----	-----	-----	1	
	0523317-1	CHANNEL-SPAR	OUTBOARD	RH	-----	-----	-----	-----	1	
- 2	0426300-2	CHANNEL-SPAR	INBOARD	LH	-----	-----	-----	-----	1	
	0426300-3	CHANNEL-SPAR	INBOARD	RH	-----	-----	-----	-----	1	
- 3	NAS680A08	NUTPLATE	-----	-----	-----	-----	-----	-----	10	
	NAS680A08	NUTPLATE	EXTENDED	RANGE	-----	-----	-----	-----	15	
- 3A	NAS680A3	NUTPLATE	-----	-----	-----	-----	-----	-----	1	C
- 4	0523524	SPACER-FUEL TANK	-----	-----	-----	-----	-----	-----	1	
	0523524	SPACER-FUEL TANK	EXTENDED	RANGE	-----	-----	-----	-----	2	B C B C B C B C B C C
		ATTACHING PARTS	-----	-----	-----	-----	-----	-----		
- 5	S1021A10-10	SCREW	-----	-----	-----	-----	-----	-----	2	
		-----*	-----	-----	-----	-----	-----	-----		
- 6	0523306	FITTING-STRUT ATTACHMENT	-----	-----	-----	-----	-----	-----	1	
		ATTACHING PARTS	-----	-----	-----	-----	-----	-----		
- 7	AN5-7A	BOLT	-----	-----	-----	-----	-----	-----	3	
- 8	MS21042L5	NUT	-----	-----	-----	-----	-----	-----	3	
- 9	AN960-516	WASHER	-----	-----	-----	-----	-----	-----	3	
		-----*	-----	-----	-----	-----	-----	-----		
-10	0722707-1	PLATE-REINFORCEMENT	-----	-----	-----	-----	-----	-----	1	
-11	0426307	ANGLE-CAP LH	-----	-----	-----	-----	-----	-----	1	
	0426307-1	ANGLE-CAP RH	-----	-----	-----	-----	-----	-----	1	
-12	0523311	SPACER	-----	-----	-----	-----	-----	-----	2	
-13	0523309	ANGLE-LH	-----	-----	-----	-----	-----	-----	1	
	0523309-1	ANGLE-RH	-----	-----	-----	-----	-----	-----	1	
-14	0426306	CAP PLATE-LH	-----	-----	-----	-----	-----	-----	1	
	0426306-1	CAP PLATE-RH	-----	-----	-----	-----	-----	-----	1	
-15	0523319-1	SPLICE-PLATE	-----	-----	-----	-----	-----	-----	1	
-16	0523318	CHANNEL-SPLICE LH	-----	-----	-----	-----	-----	-----	1	
	0523318-1	CHANNEL-SPLICE RH	-----	-----	-----	-----	-----	-----	1	
-17	0523316	ANGLE-LH	-----	-----	-----	-----	-----	-----	1	
	0523316-1	ANGLE-RH	-----	-----	-----	-----	-----	-----	1	
	0426400-35	SPAR ASSY-WING	REAR	LH	STANDARD	RANGE	-----	-----	1	B C B C B C B C B C C
	0426400-43	SPAR ASSY-WING	REAR	LH	STANDARD	RANGE	-----	-----	1	
	0426400-37	SPAR ASSY-WING	REAR	LH	EXTENDED	RANGE	-----	-----	1	
	0426400-45	SPAR ASSY-WING	REAR	LH	EXTENDED	RANGE	-----	-----	1	
	0426400-36	SPAR ASSY-WING	REAR	RH	STANDARD	RANGE	-----	-----	1	
	0426400-44	SPAR ASSY-WING	REAR	RH	STANDARD	RANGE	-----	-----	1	
	0426400-38	SPAR ASSY-WING	REAR	RH	EXTENDED	RANGE	-----	-----	1	
	0426400-46	SPAR ASSY-WING	REAR	RH	EXTENDED	RANGE	-----	-----	1	
-18	0523406-3	CHANNEL-SPAR	OUTBD	LH	-----	-----	-----	-----	1	
	0523406-7	CHANNEL-SPAR	OUTBD	LH	-----	-----	-----	-----	1	
	0523406-2	CHANNEL-SPAR	OUTBD	RH	-----	-----	-----	-----	1	
	0523406-6	CHANNEL-SPAR	OUTBD	RH	-----	-----	-----	-----	1	
-18A	NAS680A3	NUTPLATE	-----	-----	-----	-----	-----	-----	1	
-19	0426400-31	CHANNEL-SPAR	INBOARD	LH	-----	-----	-----	-----	1	
	0426400-32	CHANNEL-SPAR	INBOARD	RH	-----	-----	-----	-----	1	
-20	0422229-11	FITTING-WING SPAR REINFORCEMENT	-----	-----	-----	-----	-----	-----	2	
-21	0523524	SPACER-FUEL TANK	-----	-----	-----	-----	-----	-----	1	
	0426400-14	SPACER-PHENOLIC	EXTENDED	RANGE	-----	-----	-----	-----	1	
		ATTACHING PARTS	-----	-----	-----	-----	-----	-----		
	S1021A10-10	SCREW	-----	-----	-----	-----	-----	-----	2	
		-----*	-----	-----	-----	-----	-----	-----		
-22	0426400-12	ANGLE-SPAR REINFORCEMENT	LH	-----	-----	-----	-----	-----	1	8
	0426400-13	ANGLE-SPAR REINFORCEMENT	RH	-----	-----	-----	-----	-----	1	
-23	NAS680A08	NUTPLATE	-----	-----	-----	-----	-----	-----	1	
-24	0523409	CHANNEL-REINFORCEMENT	-----	-----	-----	-----	-----	-----	1	

CONTINUED ON NEXT PAGE


152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION							UNITS PER ASSY	USABLE ON CODE
		1	2	3	4	5	6	7		
10 - -25 -26 -27 -28 -29 -30	0523005-50	SPAR ASSY-OUTBOARD AUXILIARY LH -----							1	
	0523005-51	SPAR ASSY-OUTBOARD AUXILIARY RH -----							1	
	0523813-3	FILLER-TRAILING EDGE -----							1	
	0523813-2	FILLER-TRAILING EDGE -----							1	
	0523813-4	FILLER-TRAILING EDGE -----							1	
	0523813-5	FILLER-TRAILING EDGE -----							1	
	0523216	REINFORCEMENT -----							2	
	0523215	REINFORCEMENT LH -----							1	
	0523215-1	REINFORCEMENT RH -----							1	
		A---152 SERIAL 15279406 & ON								
		F152 SERIAL F15201429 & ON								
		B---152 SERIAL 15279406 THRU 15281298, 15281300 THRU								
		15281314, 15281316 THRU 15281326, 15281328 THRU								
		15281340, 15281342 THRU 15281349, 15281351 THRU								
		15281359, 15281361 THRU 15281369, 15281371 THRU								
		15281380, 15281382 THRU 15281389, 15281391 THRU								
		15281400, 15281402 THRU 15281409, 15281411 THRU								
		15281420, 15281422 THRU 15281426								
		F152 SERIAL F15201429 THRU F15201538								
		C---152 SERIAL 15281299, 15281315, 15281327, 15281341,								
		15281350, 15281360, 15281370, 15281381, 15281390,								
		15281401, 15281410, 15281421, 15281427 & ON								
		F152 SERIAL F15201539 & ON								

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION							UNITS PER ASSY	USABLE ON CODE
		1	2	3	4	5	6	7		
11 -		SPAR ASSEMBLIES-WING AEROBAT -----							NP	A
	0422405-1	SPAR ASSY-WING FRONT LH STANDARD RANGE -----							1	B
	0422405-21	SPAR ASSY-WING FRONT LH STANDARD RANGE -----							1	C
	0422405-3	SPAR ASSY-WING FRONT LH EXTENDED RANGE -----							1	B
	0422405-23	SPAR ASSY-WING FRONT LH EXTENDED RANGE -----							1	C
	0422405-2	SPAR ASSY-WING FRONT RH STANDARD RANGE -----							1	B
	0422405-22	SPAR ASSY-WING FRONT RH STANDARD RANGE -----							1	C
	0422405-4	SPAR ASSY-WING FRONT RH EXTENDED RANGE -----							1	B
	0422405-24	SPAR ASSY-WING FRONT RH EXTENDED RANGE -----							1	C
- 1	0422405-9	CHANNEL-SPAR OUTBOARD LH -----							1	B
	0422405-19	CHANNEL-SPAR OUTBOARD LH -----							1	C
	0422405-10	CHANNEL-SPAR OUTBOARD RH -----							1	B
	0422405-20	CHANNEL-SPAR OUTBOARD RH -----							1	C
- 2	0422405-5	CHANNEL-SPAR INBOARD LH -----							1	B
	0422405-7	CHANNEL-SPAR INBOARD LH EXTENDED RANGE -----							1	C
	0422405-6	CHANNEL-SPAR INBOARD RH -----							1	B
	0422405-8	CHANNEL-SPAR INBOARD RH EXTENDED RANGE -----							1	C
- 3	0523524	SPACER-FUEL TANK -----							1	
	0523524	SPACER-FUEL TANK EXTENDED RANGE -----							2	
- 4	S1021A10-10	ATTACHING PARTS								
		SCREW -----							2	
- 5	0523306	FITTING-STRUT ATTACHMENT -----							1	
		ATTACHING PARTS								
- 6	AN5-7A	BOLT -----							3	
- 7	MS21042L5	NUT -----							3	
- 8	AN960-516	WASHER -----							3	
- 9	0722707-1	PLATE-REINFORCEMENT -----							1	
-10	0422415-1	STIFFENER-LH -----							1	B
	0422415-5	STIFFENER-LH -----							1	C
	0422415-3	STIFFENER-LH EXTENDED RANGE -----							1	B
	0422415-7	STIFFENER-LH EXTENDED RANGE -----							1	C
	0422415-2	STIFFENER-RH -----							1	B
	0422415-6	STIFFENER-RH -----							1	C
	0422415-4	STIFFENER-RH EXTENDED RANGE -----							1	B
	0422415-8	STIFFENER-RH EXTENDED RANGE -----							1	C
CONTINUED ON NEXT PAGE										

152 & A152 Parts Catalog

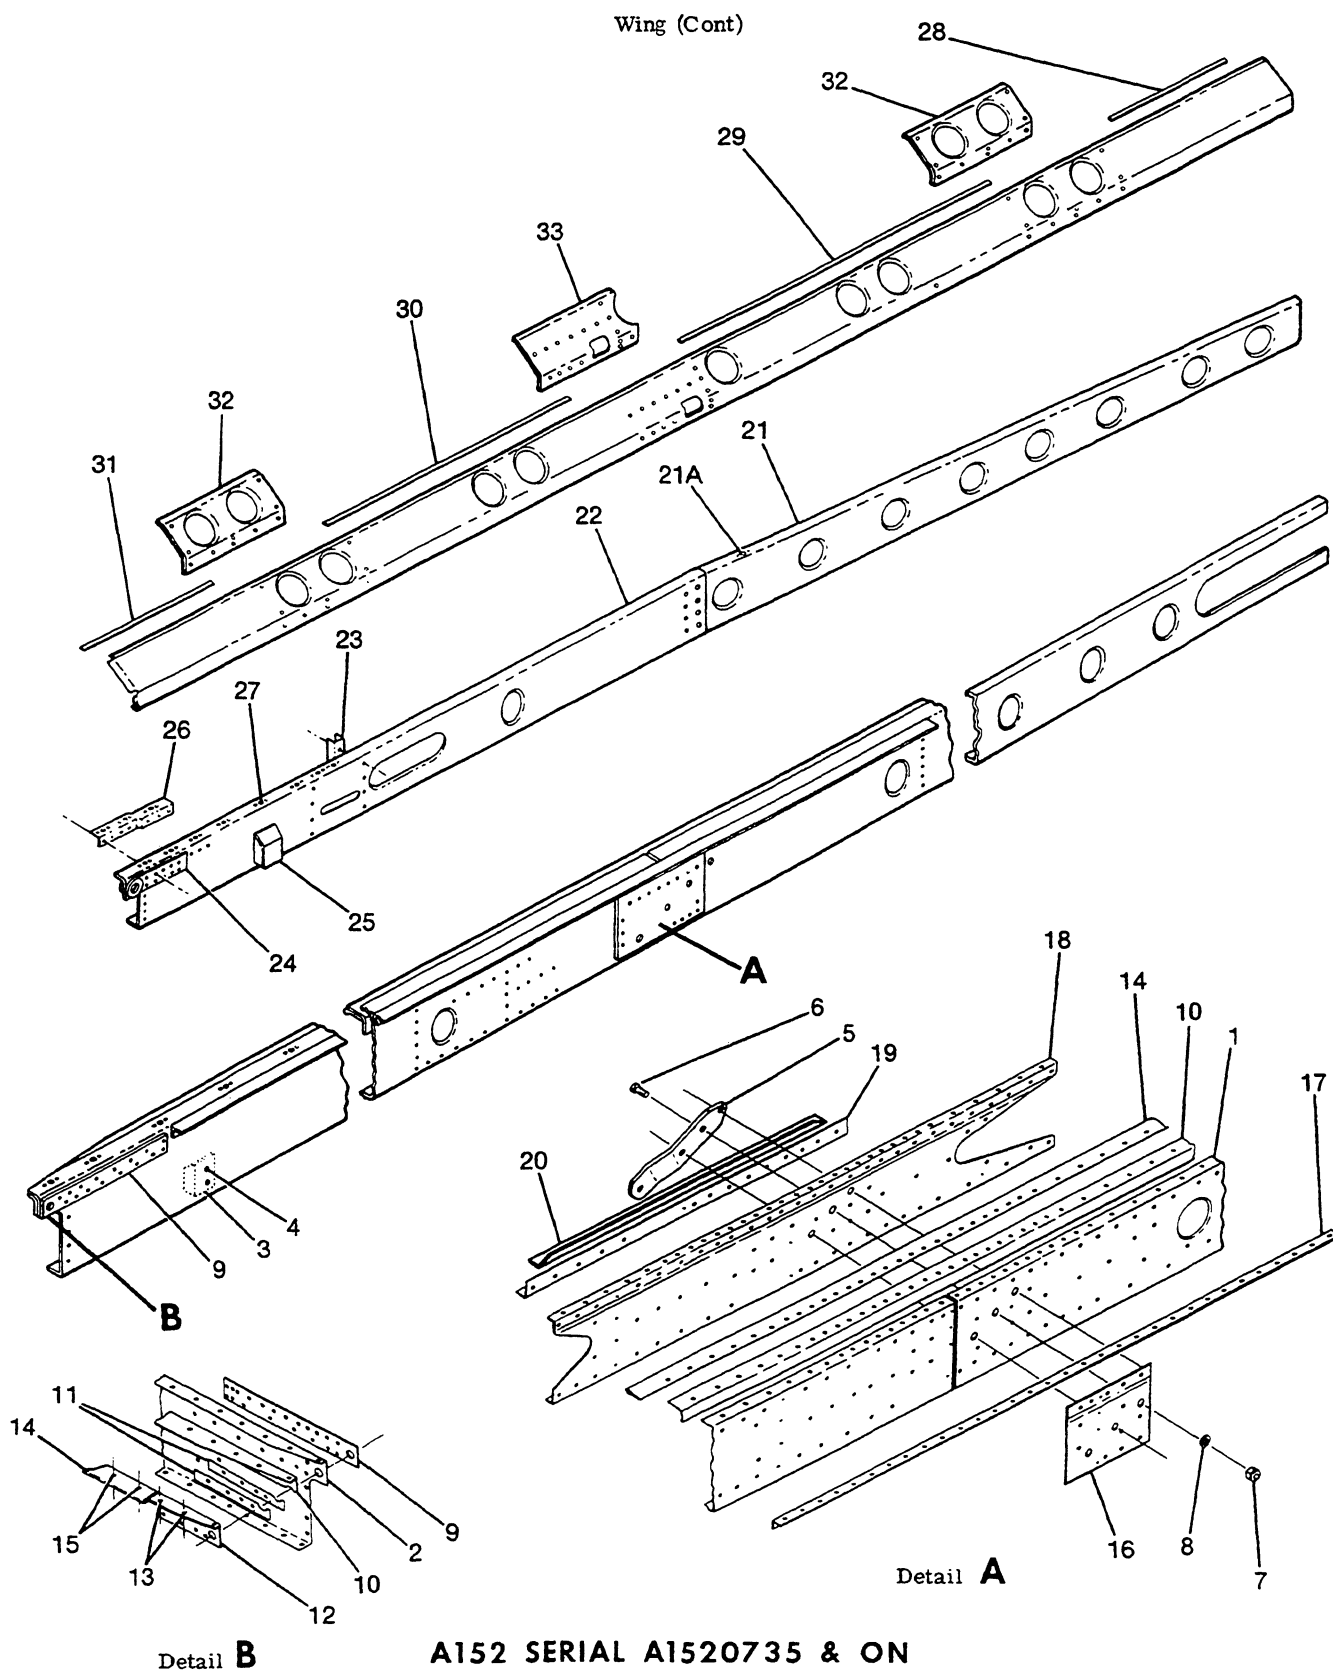

A152 SERIAL A1520735 & ON
FA152 SERIAL FA1520337 & ON

Figure 11. Wing Spar Assemblies

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
11 -11	0523311-1	SPACER -----	1	
-12	0523309-5	ANGLE ASSY-LH -----	1	
	0523309-4	ANGLE ASSY-RH -----	1	
-13	NAS680A08	NUTPLATES -----	2	
-14	0422407-5	PLATE ASSY-FORWARD SPAR LH -----	1	B
	0422407-13	PLATE ASSY-FORWARD SPAR LH -----	1	C
	0422407-7	PLATE ASSY-FORWARD SPAR LH EXTENDED RANGE -----	1	B
	0422407-15	PLATE ASSY-FORWARD SPAR LH EXTENDED RANGE -----	1	C
	0422407-6	PLATE ASSY-FORWARD SPAR RH -----	1	B
	0422407-14	PLATE ASSY-FORWARD SPAR RH -----	1	C
	0422407-8	PLATE ASSY-FORWARD SPAR RH EXTENDED RANGE -----	1	B
	0422407-16	PLATE ASSY-FORWARD SPAR RH EXTENDED RANGE -----	1	C
-15	NAS680A08	NUTPLATE -----	8	
	NAS680A08	NUTPLATE EXTENDED RANGE -----	13	
-16	0422412-1	PLATE-FORWARD SPAR SPLICE LH -----	1	
	0422412-2	PLATE-FORWARD SPAR SPLICE RH -----	1	
-17	0422406-3	STIFFENER-LH -----	1	
	0422406-4	STIFFENER-RH -----	1	
-18	0422414-1	CHANNEL-SPLICE LH -----	1	B
	0422414-9	CHANNEL ASSY-SPLICE LH -----	1	C
	0422414-2	CHANNEL-SPLICE RH -----	1	B
	0422414-10	CHANNEL ASSY-SPLICE RH -----	1	C
	NAS680A3	NUTPLATE -----	1	C
-19	0422411-1	SPLICE-LH -----	1	
	0422411-2	SPLICE-RH -----	1	
-20	0422406-1	STIFFENER-LH -----	1	
	0422406-2	STIFFENER-RH -----	1	
	0426400-39	SPAR ASSY-WING REAR LH STANDARD RANGE -----	1	B
	0426400-47	SPAR ASSY-WING REAR LH STANDARD RANGE -----	1	C
	0426400-41	SPAR ASSY-WING REAR LH EXTENDED RANGE -----	1	B
	0426400-49	SPAR ASSY-WING REAR LH EXTENDED RANGE -----	1	C
	0426400-40	SPAR ASSY-WING REAR RH STANDARD RANGE -----	1	B
	0426400-48	SPAR ASSY-WING REAR RH STANDARD RANGE -----	1	C
	0426400-42	SPAR ASSY-WING REAR RH EXTENDED RANGE -----	1	B
	0426400-50	SPAR ASSY-WING REAR RH EXTENDED RANGE -----	1	C
-21	0523406-5	CHANNEL-SPAR OUTBOARD LH -----	1	B
	0523406-9	CHANNEL-SPAR OUTBOARD LH -----	1	C
	0523406-4	CHANNEL-SPAR OUTBOARD RH -----	1	B
	0523406-8	CHANNEL-SPAR OUTBOARD RH -----	1	C
-21A	NAS680A3	NUTPLATE -----	1	C
-22	0426400-33	CHANNEL-SPAR INBOARD LH -----	1	
	0426400-34	CHANNEL-SPAR INBOARD RH -----	1	
-23	0523409	CHANNEL -----	1	
-24	0422229-11	FITTING-WING SPAR REINFORCEMENT LH -----	2	
-25	0523524	SPACER-FUEL TANK -----	1	
	0422400-14	SPACER-PHENOLIC EXTENDED RANGE -----	1	
	S1021A10-10	ATTACHING PARTS -----	2	
		SCREWS -----	2	
-26	0426400-12	ANGLE-SPAR REINFORCEMENT LH -----	1	
	0426400-13	ANGLE-SPAR REINFORCEMENT RH -----	1	
-27	NAS680A08	NUTPLATE -----	8	
	0523005-50	SPAR ASSY-OUTBOARD AUXILIARY LH -----	1	
	0523005-51	SPAR ASSY-OUTBOARD AUXILIARY RH -----	1	
-28	0523813-3	FILLER-TRAILING EDGE -----	1	
-29	0523813-2	FILLER-TRAILING EDGE -----	1	
-30	0523813-4	FILLER-TRAILING EDGE -----	1	
-31	0523813-5	FILLER-TRAILING EDGE -----	1	
-32	0523216	REINFORCEMENT -----	2	
-33	0523215	REINFORCEMENT LH -----	1	
	0523215-1	REINFORCEMENT RH -----	1	
		A---A152 SERIAL A1520735 & ON FA152 SERIAL FA1520337 & ON B---A152 SERIAL A1520735 THRU A1520785 FA152 SERIAL FA1520337 THRU FA1520352 C---A152 SERIAL A1520786 & ON FA152 SERIAL FA1520353 & ON		

152 & A152 Parts Catalog

Wing (Cont)

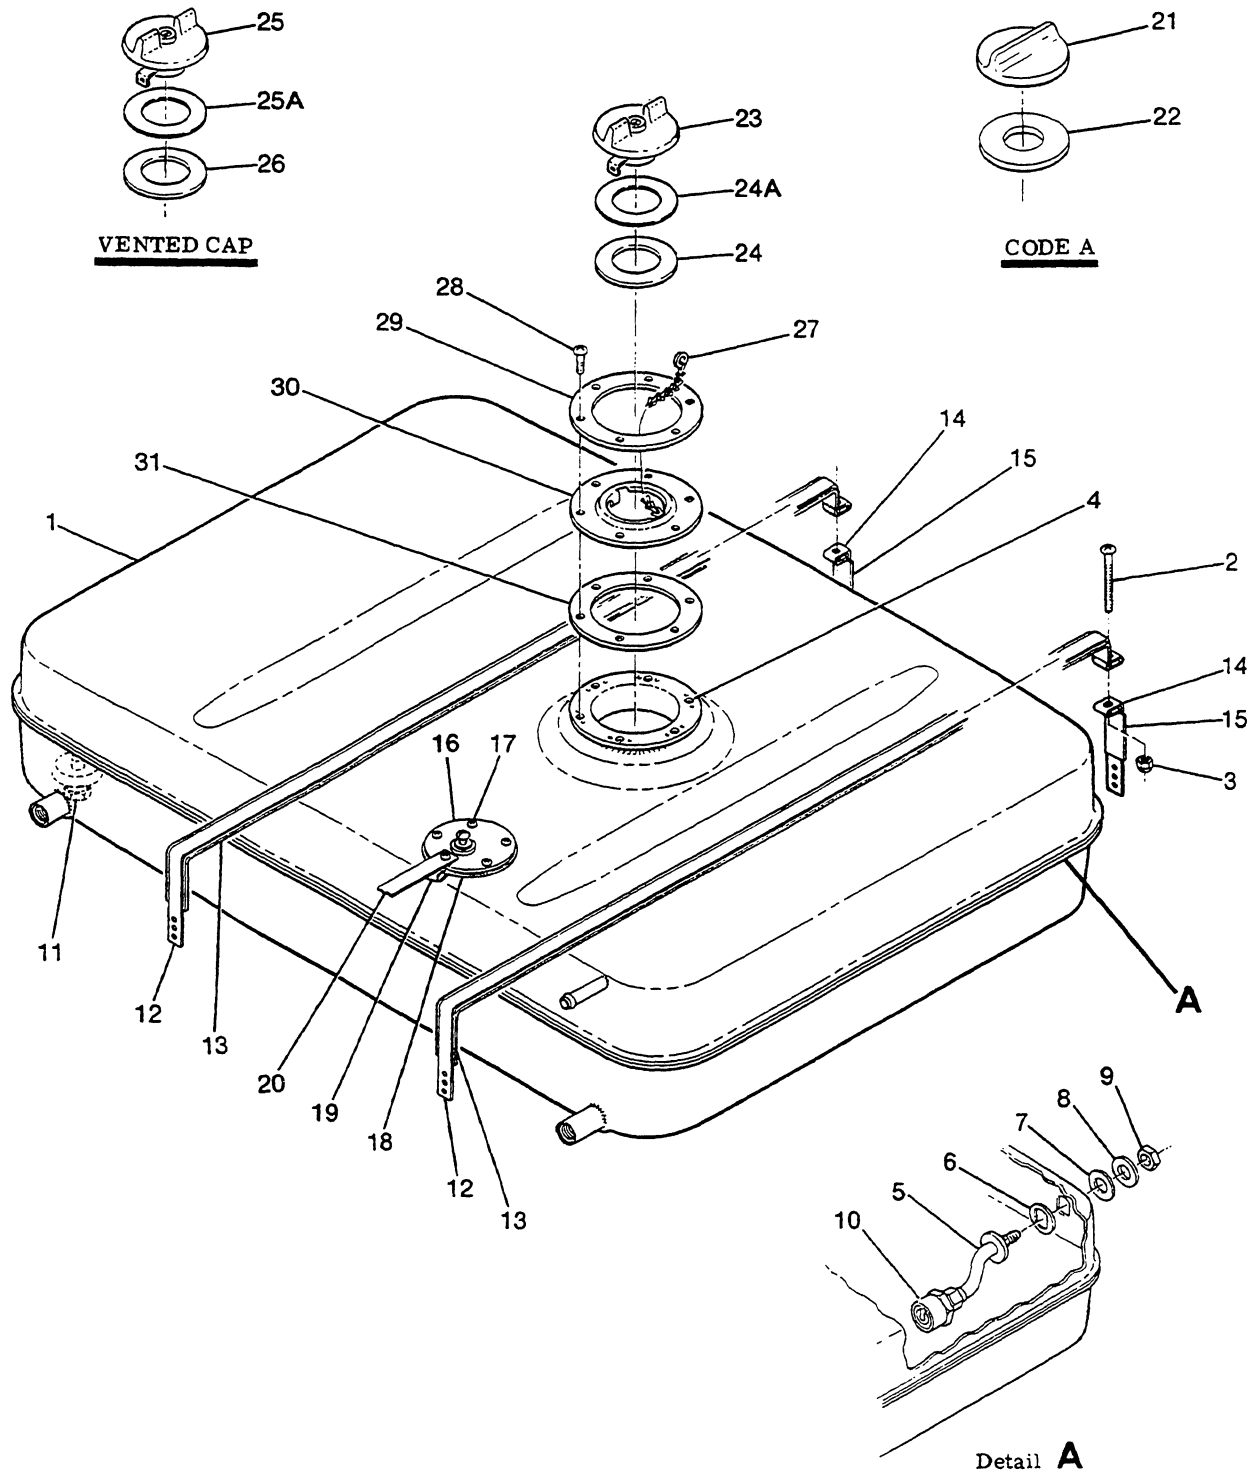


Figure 12. Fuel Tank Installation

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
12 -		FUEL TANK INSTALLATION-WING RH STANDARD RANGE -----	NP	
- 1	0426019-23	TANK ASSY-FUEL LH -----	1	
	0426019-24	TANK ASSY-FUEL RH -----	1	
- 2	AN520-10R36	ATTACHING PARTS -----	2	
- 3	MS21044N3	SCREW -----	2	
		NUT -----		
- 4	NAS680A3	*-----	6	
- 5	0523552-2	NUTPLATE -----	1	
		WELD ASSY-FUEL CELL VENT LH TANK ONLY -----		
- 6	0523554-1	ATTACHING PARTS -----	1	
- 7	0523554-2	GASKET -----	1	
- 8	S1450-21-20-063	GASKET -----	1	
- 9	AN924-6D	WASHER -----	1	
		NUT -----		
-10	S2359-1	*-----	1	
-11	SEE FIG 14	VALVE ASSY-FUEL VENT LH TANK ONLY -----	1	
-12	0523522-11	VALVE & GASKET-FUEL DRAIN -----	2	
-13	0523522-13	STRAP ASSY-FUEL TANK INBOARD -----	1	
-14	0523522-1	PAD-NEOPRENE -----	2	
-15	0523522-7	STRAP ASSY-FUEL TANK OUTBOARD -----	1	
-16	C668050-1201	PAD-NEOPRENE -----	NP	
		TRANSMITTER-FUEL GAGE STEWART-WARNER -----	2	
		TRANSMITTER-FUEL GAGE ROCHESTER -----		
-17	AN520-10R10	ATTACHING PARTS -----	5	
	S350	SCREW -----	5	
	AN960D10L	WASHER -----	5	
		WASHER -----		
-18	S1588-1	*-----	1	
-19	0413247	GASKET-TRANSMITTER -----	1	
-20	0516006-1	GROUND STRAP -----	1	
-21	0426015-1	STRAP-FUEL TRANSMITTER GROUND -----	1	
-22	0426015-5	CAP ASSY-FUEL TANK LH WEU C156004-0101 -----	1	
-23	C156004-0101	GASKET-FUEL CAP -----	1	
-24	4969	CAP ASSY-FUEL TANK LH NON VENTED -----	1	
	487-4	GASKET-FUEL CAP 2.44 OD WISO -----	1	
-24A	4970	GASKET-FUEL CAP 2.62 OD SADA -----	1	
	487-3	FRICTIONLESS WASHER 2.44 OD WISO -----	1	
-25	C156003-0101	FRICTIONLESS WASHER 2.62 OD SADA -----	1	
-25A	4970	CAP ASSY-FUEL TANK RH VENTED -----	1	
	487-3	FRICTIONLESS WASHER 2.44 OD WISO -----	1	
-26	4969	FRICTIONLESS WASHER 2.62 OD SADA -----	1	
	487-4	GASKET-FUEL CAP 2.44 OD WISO -----	1	
-27	C156001-0104	GASKET-FUEL CAP 2.62 OD SADA -----	1	
-28	AN520-10R8	CHAIN -----	6	
-29	0426013-2	SCREW -----	1	
-30	0426011-4	GASKET-FUEL FILLER NECK -----	1	
-31	0426013-1	FUEL FILLER NECK-CAP ADAPTOR -----	1	
		GASKET-FUEL FILLER NECK -----	1	
NOTE. @ WHEN INITIALLY REPLACING THIS PART ORDER SK152-19 (GAGE KIT) OR SK152-21 (CLUSTER KIT).				
NOTE. * THIS PART IS FOR AIRPLANES THAT HAVE INCORPORATED SK152-19 OR SK 152-21.				
A---152 SERIAL 15279406 THRU 15279629				
F152 SERIAL F15201429 THRU F15201528				
A152 SERIAL A1520735 THRU A1520741				
FA152 SERIAL FA1520337 THRU FA1520347				
B---152 SERIAL 15279630 & ON				
F152 SERIAL F15201529 & ON				
A152 SERIAL A1520742 & ON				
FA152 SERIAL FA1520348 & ON				

152 & A152 Parts Catalog

Wing (Cont)

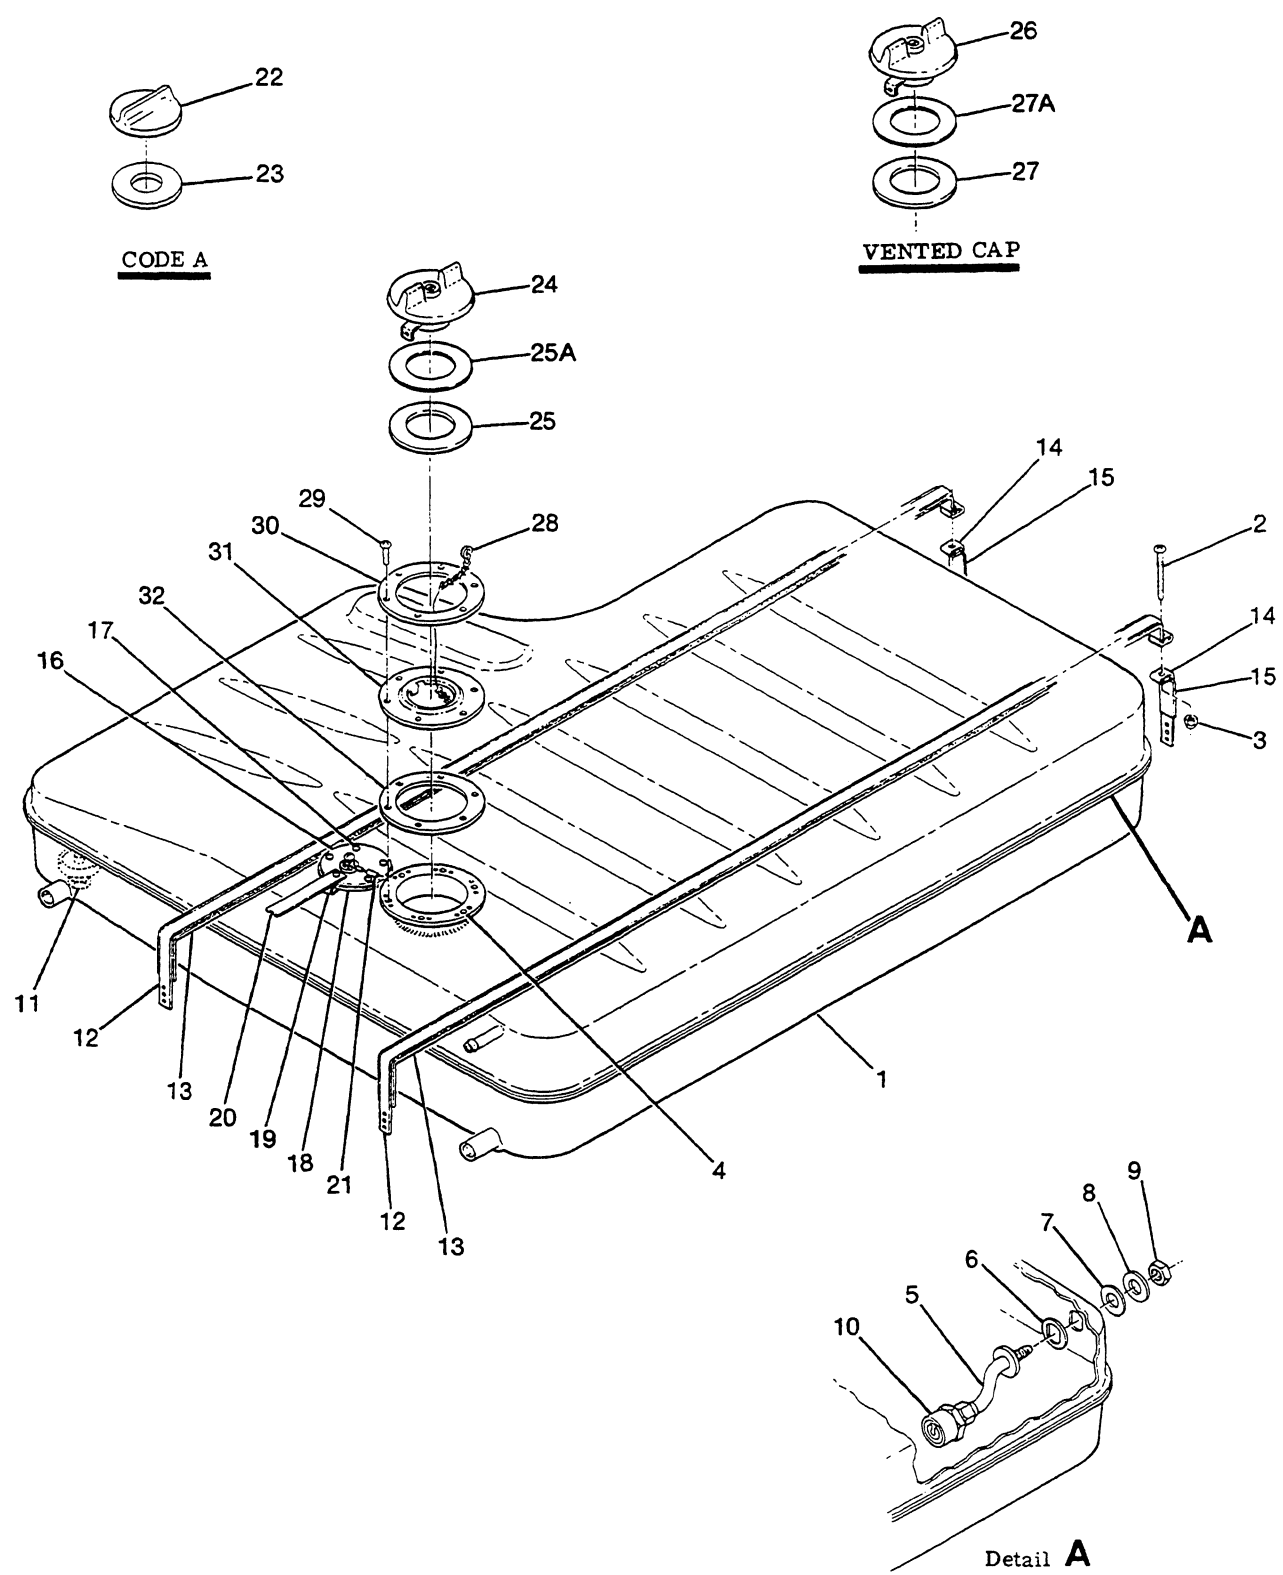


Figure 13. Extended Range Fuel Tank Installation

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
13 -		FUEL TANK INSTALLATION-WING LH EXTENDED RANGE -----	NP	
- 1	0426021-25	FUEL TANK INSTALLATION-WING RH EXTENDED RANGE -----	NP	
	0426021-26	TANK ASSY-FUEL LH -----	1	
		TANK ASSY-FUEL RH -----	1	
- 2	AN520-10R6	ATTACHING PARTS -----		
- 3	MS21044N3	SCREW -----	2	
		NUT -----	2	
- 4	NAS680A3	-----*		
- 5	0523552-2	NUTPLATE -----	6	
		WELD ASSY-FUEL CELL VENT LH TANK ONLY -----	1	
- 6	0523554-1	ATTACHING PARTS -----		
- 7	0523554-2	GASKET -----	1	
- 8	S1450-21-20-063	GASKET -----	1	
- 9	AN924-60	WASHER -----	1	
		NUT -----	1	
-10	S2359-1	-----*		
-11	SEE FIG 14	VALVE ASSY-FUEL VENT LH TANK ONLY -----	1	
-12	0426512-6	VALVE & GASKET-FUEL DRAIN -----	1	
-13	0426512-8	STRAP ASSY-FUEL TANK INBOARD -----	2	
-14	0523522-1	PAD-NEOPRENE -----	1	
-15	0523522-7	STRAP ASSY-FUEL TANK OUTBOARD -----	2	
-16		PAD-NEOPRENE -----	1	
	C668050-1203	TRANSMITTER-FUEL GAGE STEWART-WARNER -----	NP	
		TRANSMITTER-FUEL GAGE ROCHESTER -----	2	
-17	AN520-10R10	ATTACHING PARTS -----		
	S350	SCREW -----	5	
	AN960D10L	WASHER -----	5	
		WASHER -----	5	
-18	S1588-1	-----*		
-19	0413247	GASKET-TRANSMITTER -----	1	
-20	0516006-1	GROUND STRAP -----	1	
-21	20 OHM 5W	STRAP-FUEL TRANSMITTER GROUND -----	1	
	S292-15	RESISTOR-FUEL TRANSMITTER OM -----	1	
-22	0426015-1	SLEEVING-INSULATION 6.00 IN LG BKI -----	1	
-23	0426015-5	CAP ASSY-FUEL TANK LH WEU C156004-0101 -----	1	
-24	C156004-0101	GASKET-FUEL CAP -----	1	
-25	4969	CAP ASSY-FUEL TANK LH NON VENTED -----	1	
	487-4	GASKET-FUEL CAP 2.44 OD WISO -----	1	
-25A	4970	GASKET-FUEL CAP 2.62 OD SADA -----	1	
	487-3	FRICITIONLESS WASHER 2.44 OD WISO -----	1	
-26	C156003-0101	FRICITIONLESS WASHER 2.62 OD SADA -----	1	
-27	4969	CAP ASSY-FUEL TANK RH VENTED -----	1	
	487-4	GASKET-FUEL CAP 2.44 OD WISO -----	1	
-27A	4970	GASKET-FUEL CAP 2.62 OD SADA -----	1	
	487-3	FRICITIONLESS WASHER 2.44 OD WISO -----	1	
-28	C156001-0104	FRICITIONLESS WASHER 2.62 OD SADA -----	1	
-29	AN520-10R8	CHAIN ASSY -----	1	
-30	0426013-2	SCREW -----	6	
-31	0426011-4	GASKET-FUEL FILLER NECK -----	1	
-32	0426013-1	FUEL FILLER NECK-CAP ADAPTOR -----	1	
		GASKET-FUEL FILLER NECK -----	1	
NOTE. @ WHEN INITIALLY REPLACING THIS PART ORDER SK152-20 (GAGE KIT) OR SK152-22 (CLUSTER KIT).				
NOTE. * THIS PART IS FOR AIRPLANES THAT HAVE INCORPORATED SK152-20 OR SK 152-22.				
A---152 SERIAL 15279406 THRU 15279629				
F152 SERIAL F15201429 THRU F15201528				
A152 SERIAL A1520735 THRU A1520741				
FA152 SERIAL FA1520337 THRU FA1520347				
B---152 SERIAL 15279630 & ON				
F152 SERIAL F15201529 & ON				
A152 SERIAL A1520742 & ON				
FA152 SERIAL FA1520348 & ON				
C---152 SERIAL 15279406 THRU 15280294				
F152 SERIAL F15201429 THRU F15201481				
A152 SERIAL A1520735 THRU A1520756				
FA152 SERIAL FA1520337 THRU FA1520342				
D---152 SERIAL 15280295 & ON				
F152 SERIAL F15201482 & ON				
A152 SERIAL A1520757 & ON				
FA152 SERIAL FA1520343 & ON				

A
A
B
B
B
B
B

152 & A152 Parts Catalog

Wing (Cont)

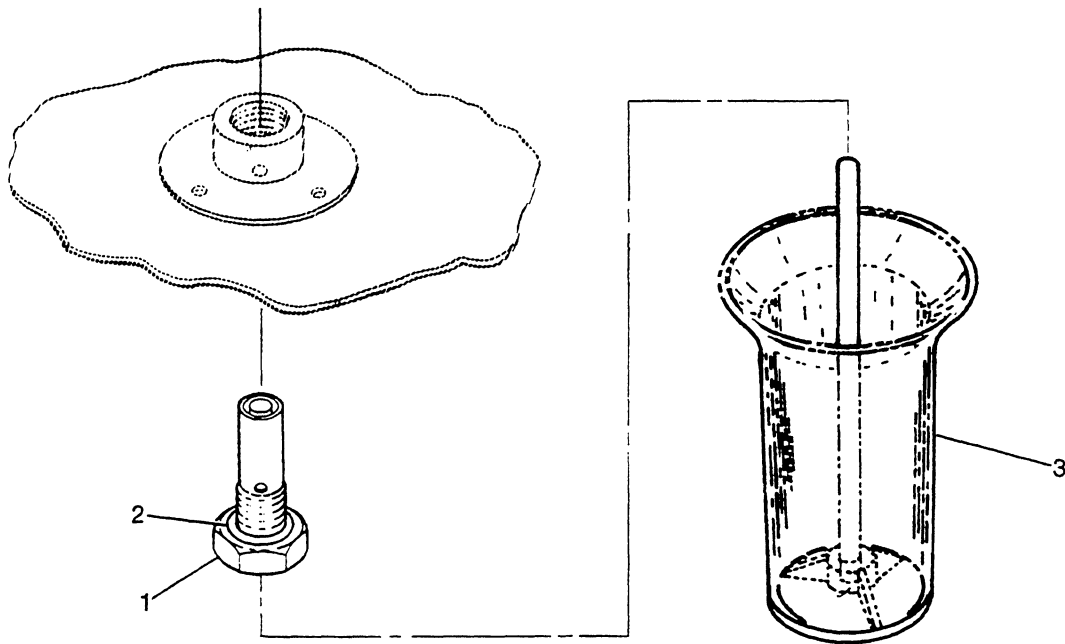


Figure 14. Fuel Tank Drain Valve Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION							UNITS PER ASSY	USABLE ON CODE
		1	2	3	4	5	6	7		
14 -		FUEL TANK DRAIN VALVE INSTALLATION -----							1	A B C
- 1	S2106-2	VALVE-FUEL TANK DRAIN -----							2	
- 2	MS29513-12	O RING -----							1	
- 3	S2107-1	CUP-FUEL SAMPLER			WEU 0756035-1		-----		1	
	0756035-1	CUP-FUEL SAMPLER			WEU 0756035-5		-----		1	
	0756035-5	CUP-FUEL SAMPLER -----							1	
		A---152 SERIAL 15279406 THRU 15285833								
		F152 SERIAL F15201429 THRU F15201943								
		A152 SERIAL A1520735 THRU A1521025								
		FA152 SERIAL FA1520337 THRU FA1520387								
		B---152 SERIAL 15285834 THRU 15285845								
		F152 SERIAL F15201944 THRU F15201951								
		A152 SERIAL A1521026 ONLY								
		C---152 SERIAL 15285846 & ON								
		F152 SERIAL F15201952 & ON								
		A152 SERIAL A1521027 & ON								
		FA152 SERIAL FA1520388 & ON								

152 & A152 Parts Catalog

Wing (Cont)


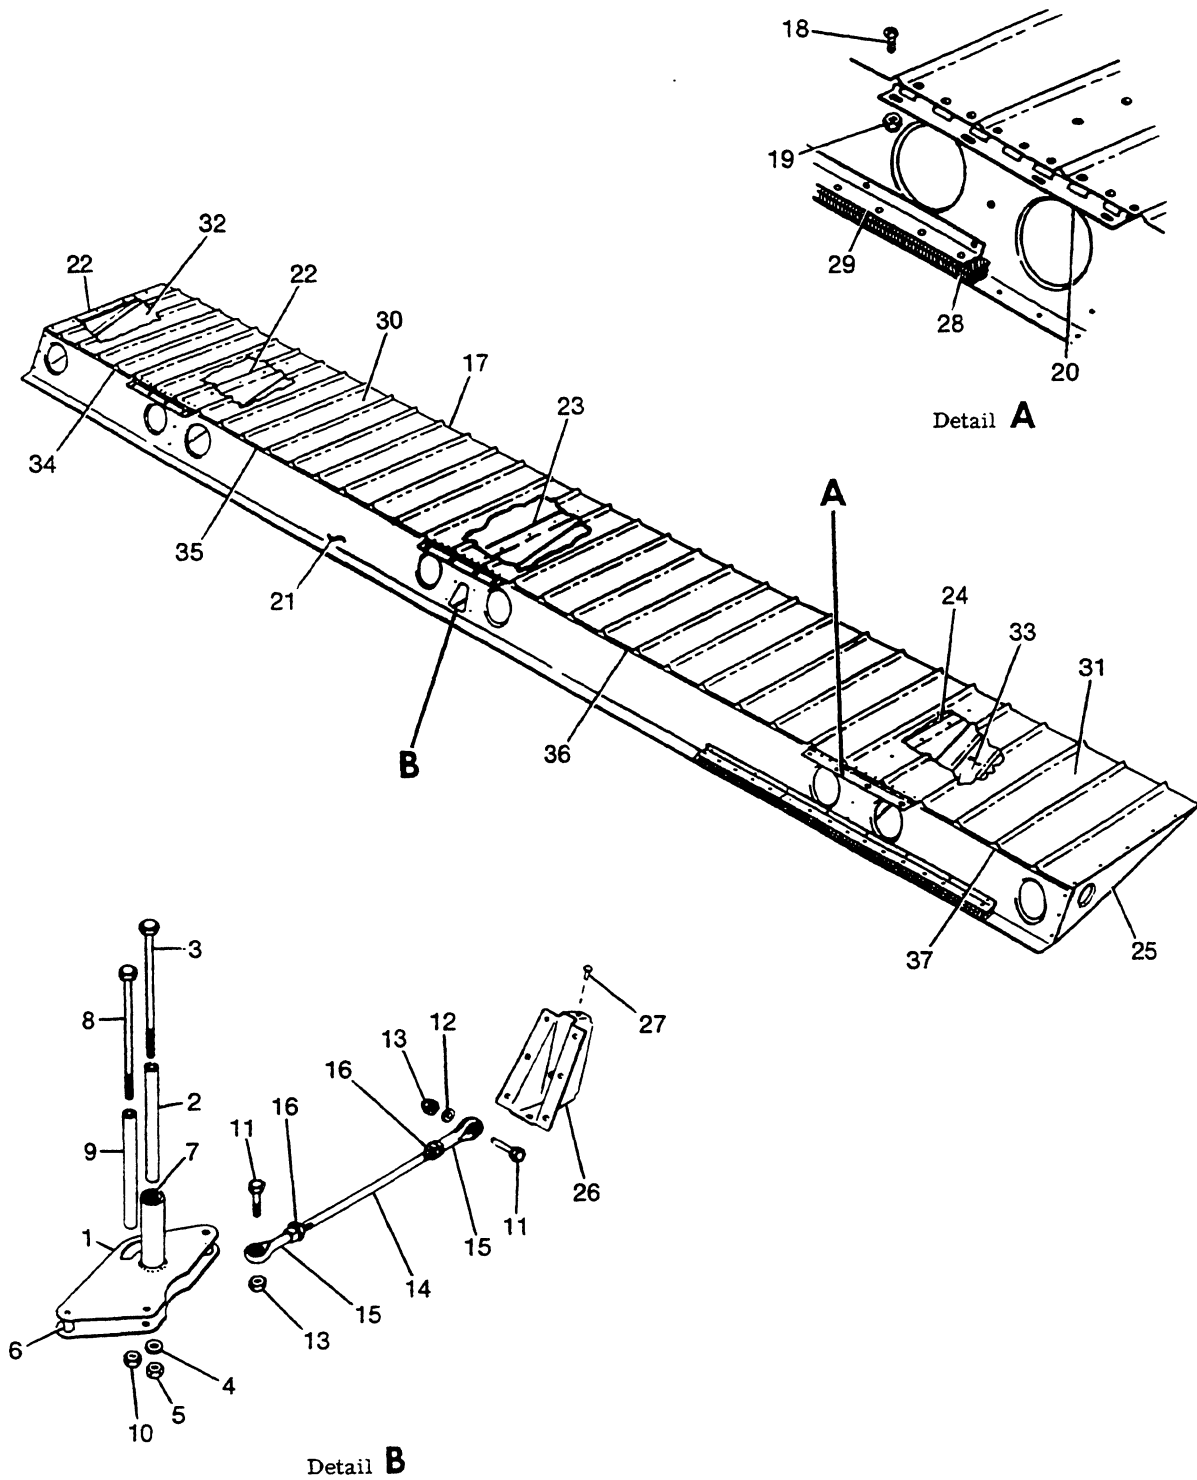


Figure 15. Aileron Installation

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
15 -		AILERON INSTALLATION -----	NP	
- 1	0523223	BELLCRANK ASSY-AILERON LH WEU 0422430-1 -----	1	A
	0422430-1	BELLCRANK ASSY-AILERON LH -----	1	B
	0523223-1	BELLCRANK ASSY-AILERON RH WEU 0422430-2 -----	1	A
	0422430-2	BELLCRANK ASSY-AILERON RH -----	1	B
		ATTACHING PARTS -----		
- 2	0523221	BUSHING -----	1	
- 3	AN4-42A	BOLT -----	1	
- 4	S1450-20B12-032	WASHER -----	1	
- 5	MS21042L4	NUT -----	1	
		*-----		
- 6	0422280	BUSHING -----	2	
- 7	S1997-6-10	BEARING -----	2	
- 8	AN4-42A	BOLT -----	1	
- 9	0523222	BUSHING-BELLCRANK STOP -----	1	
-10	MS21042L4	NUT -----	1	
	0523218	ROD ASSY-AILERON PUSH PULL -----	2	
		ATTACHING PARTS -----		
-11	AN3-7A	BOLT -----	2	
-12	AN960-10	WASHER -----	1	
-13	MS21044N3	NUT -----	2	
		*-----		
-14	0523218-2	ROD-AILERON PUSH PULL -----	1	
-15	S1819-3	END-ROD -----	2	
-16	AN316-4R	NUT-CHECK -----	2	
-17	0523800	AILERON ASSY-LH -----	1	
	0523800-1	AILERON ASSY-RH -----	1	
		ATTACHING PARTS -----		
-18	NAS221-8	SCREW -----	12	
-19	MS21044N3	NUT -----	12	
		*-----		
-20	0523807	HINGE ASSY-AILERON WEU 0523816-1 -----	3	C
	0523816-1	HINGE ASSY-AILERON -----	3	D
-21	0523806	SPAR-AILERON LH -----	1	
	0523806-1	SPAR-AILERON RH -----	1	
-22	0523808	RIB NO. 1-AILERON LH -----	2	
	0523808-2	RIB NO. 1-AILERON RH -----	2	
-23	0523809	RIB NO. 2-AILERON LH -----	1	
	0523809-1	RIB NO. 2-AILERON RH -----	1	
-24	0523810	RIB NO. 3-AILERON -----	1	
-25	0523811-1	RIB NO. 4-AILERON LH -----	1	
	0523811	RIB NO. 4-AILERON RH -----	1	
-26	0760011-2	BRACKET-CONTROL -----	1	
		ATTACHING PARTS -----		
-27	CR163-4-8	RIVET CY -----	1	
		*-----		
-28	0724115-2	WEIGHT-AILERON BALANCE -----	3	
		ATTACHING PARTS -----		
-29	0523814-3	BRACKET -----	1	
		*-----		
-30	0523800-6	SKIN-UPPER INBOARD LH -----	1	
	0523800-7	SKIN-UPPER INBOARD RH -----	1	
-31	0523800-8	SKIN-UPPER OUTBOARD LH -----	1	
	0523800-9	SKIN-UPPER OUTBOARD RH -----	1	
-32	0523800-10	SKIN-LOWER INBOARD LH -----	1	
	0523800-11	SKIN-LOWER INBOARD RH -----	1	
-33	0523800-12	SKIN-LOWER OUTBOARD LH -----	1	
	0523800-13	SKIN-LOWER OUTBOARD RH -----	1	
-34	0523813-1	SPACER -----	1	
-35	0523813-8	SPACER -----	1	
-36	0523813-6	SPACER -----	1	
-37	0523813-7	SPACER -----	1	
		A---152 SERIAL 15279406 THRU 15279473 A152 SERIAL A1520735 & A1520736		
		B---152 SERIAL 15279474 & ON F152 SERIAL F15201429 & ON A152 SERIAL A1520737 & ON FA152 SERIAL FA1520337 & ON		
		C---152 SERIAL 15279406 THRU 15285883 F152 SERIAL F15201429 THRU 15201952 A152 SERIAL A1520735 THRU A1521027 FA152 SERIAL FA1520337 THRU FA1520387		
		D---152 SERIAL 15285884 & ON A152 SERIAL A1521027 & ON F152 SERIAL F15201953 & ON FA152 SERIAL FA1520388 & ON		

152 & A152 Parts Catalog

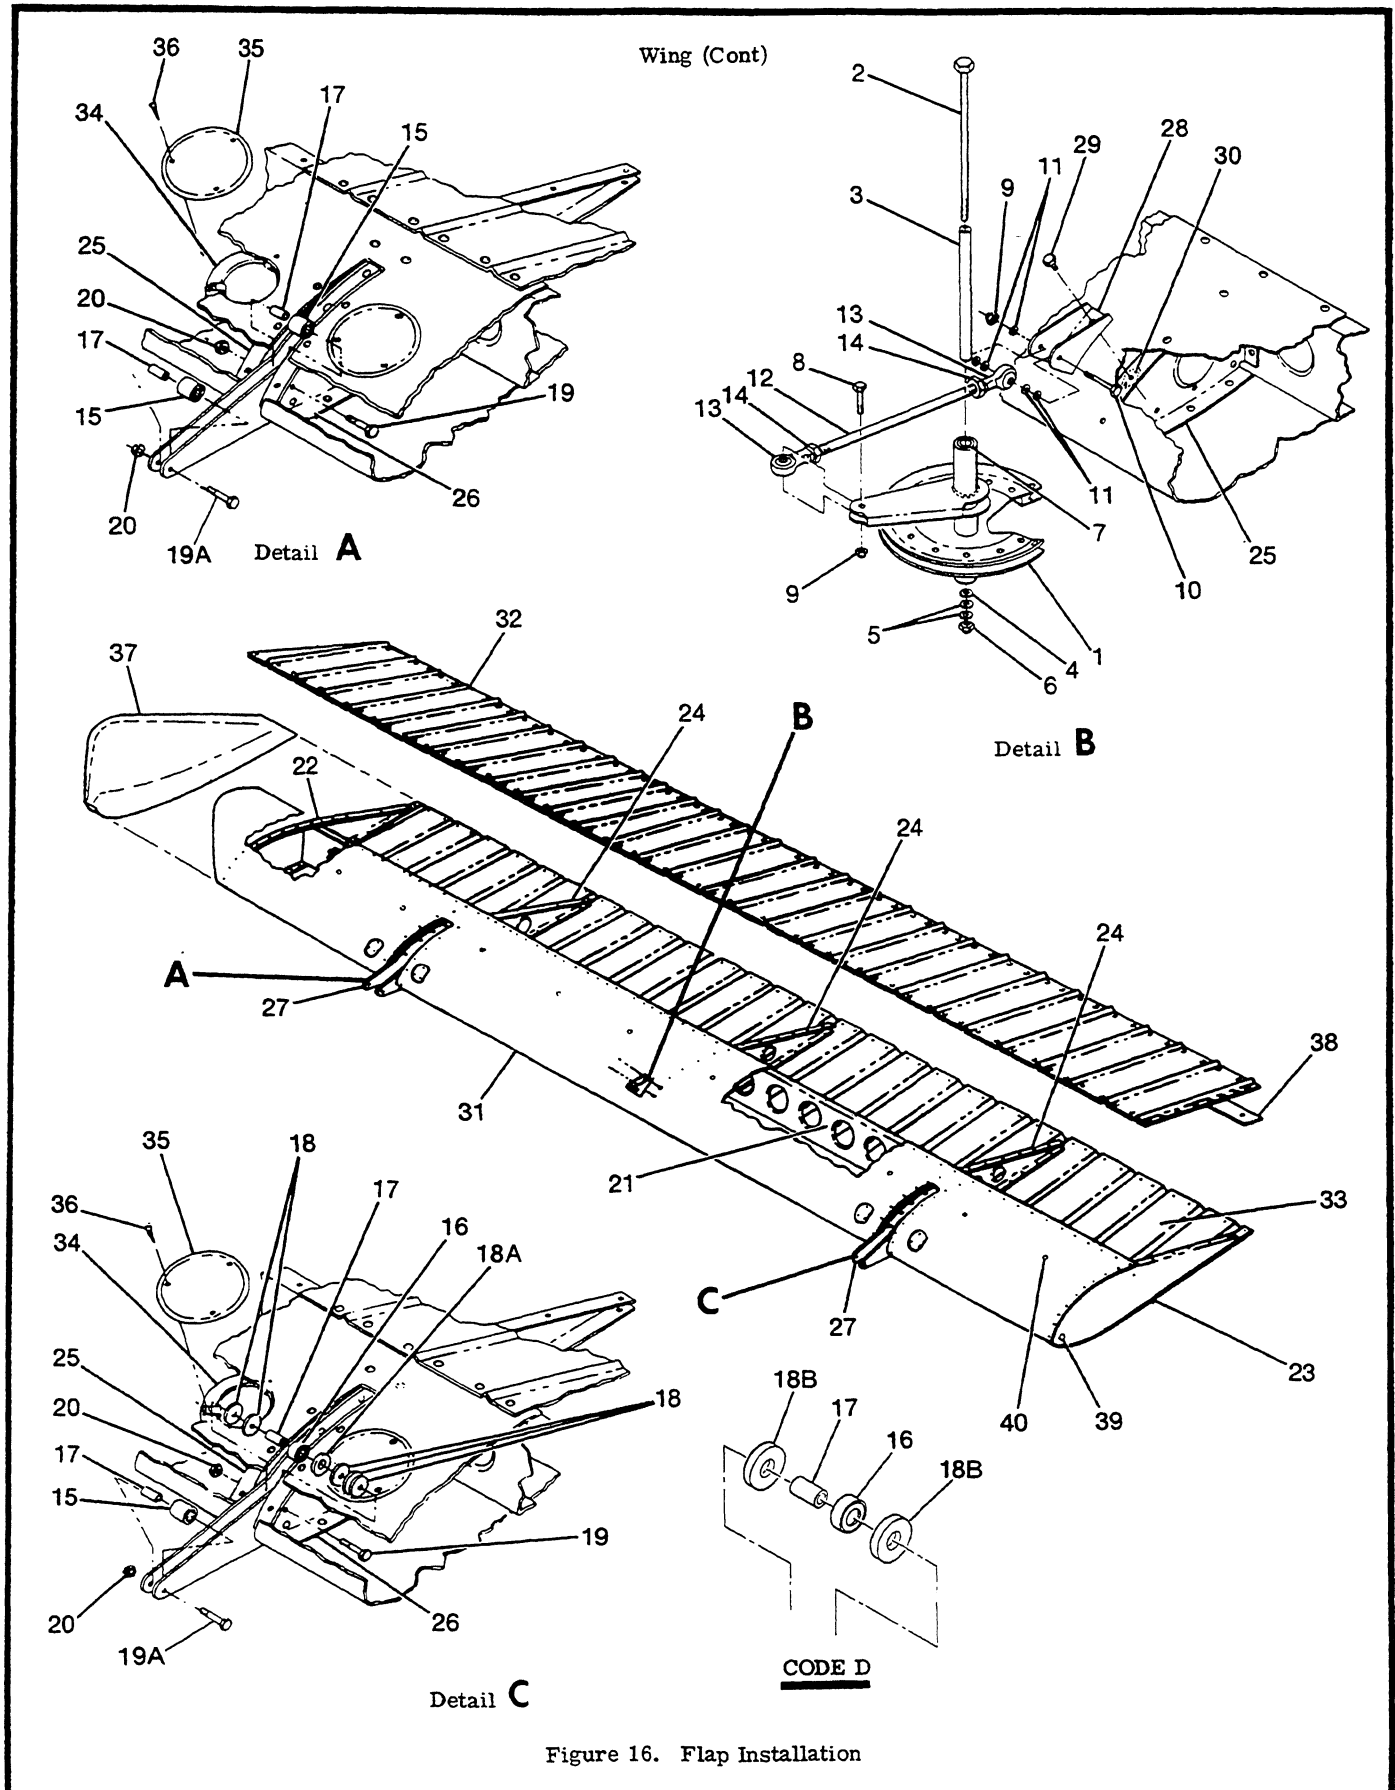

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
16 -		FLAP INSTALLATION -----	NP	
- 1	0760612-7	DRIVE PULLEY ASSY-LEFT FLAP -----	1	A
	0762054-5	DRIVE PULLEY ASSY-LEFT FLAP -----	1	B
	0760612-1	DRIVE PULLEY ASSY-RIGHT FLAP -----	1	A
	0762054-4	DRIVE PULLEY ASSY-RIGHT FLAP -----	1	B
		ATTACHING PARTS -----		
- 2	AN4-60A	BOLT -----	1	
- 3	0523536	BUSHING -----	1	
- 4	S1450-20B12-032	WASHER -----	1	
- 5	AN960D416	WASHER -----	2	
- 6	MS21042L4	NUT -----	1	
		*-----		
- 7	S1997-6H10	BEARING -----	2	A
	S1997-6-10	BEARING -----	2	B
	0523537	ROD ASSY-FLAP PUSH PULL -----	2	
		ATTACHING PARTS -----		
- 8	AN3-7A	BOLT -----	1	
- 9	MS21044N3	NUT -----	2	
-10	AN3-11A	BOLT -----	1	
-11	AN960-10	WASHER -----	5	
		*-----		
-12	0523537-2	ROD-FLAP PUSH PULL -----	1	
-13	S1819-3	END-ROD -----	2	
-14	AN316-4R	NUT-CHECK -----	2	
	0426901-15	FLAP ASSY-LEFT WING -----	1	
	0426901-16	FLAP ASSY-RIGHT WING -----	1	
		ATTACHING PARTS -----		
-15	0523921	ROLLER ASSY -----	3	
	S2398-1	BEARING ASSY ALTERNATE -----	3	
-16	0523920	ROLLER ASSY -----	1	
-17	0523919	BUSHING-ROLLER -----	4	
	S2397-1	BUSHING-ROLLER ALTERNATE -----	4	
-18	S1450-5N12-050	SPACER-ROLLER OUTBOARD ONLY -----	AR	C
-18A	1220114-2	SPACER-ROLLER OUTBOARD ONLY -----	1	C
-18B	1220114-1	SPACER-FLAP ATTACHMENT -----	2	D
-19	AN3-11A	BOLT -----	2	
-19A	AN3-10A	BOLT -----	2	
-20	MS21044N3	NUT -----	4	
		*-----		
-21	0426908	SPAR-FLAP LH ONLY -----	1	
	0426908-1	SPAR-FLAP RH ONLY -----	1	
-22	0523912	RIB-FLAP INBOARD -----	1	
-23	0523912-1	RIB-FLAP OUTBOARD -----	1	
-24	0523923	RIB-FLAP TRAILING EDGE -----	3	
-25	0523914	RIB-FLAP SUPPORT ARM RIGHT -----	1	
-26	0523901-13	RIB ASSY-FLAP SUPPORT ARM LEFT -----	2	
-27	0523901-14	RIB ASSY-FLAP SUPPORT ARM RIGHT -----	2	
-28	0523918	BRACKET-FLAP CONTROL -----	1	
		ATTACHING PARTS -----		
-29	AN3-3A	BOLT -----	2	
-30	NAS680A3	NUTPLATE -----	2	
		*-----		
-31	0426901-13	SKIN-FLAP LEADING EDGE LH ONLY -----	1	
	0426901-12	SKIN-FLAP LEADING EDGE RH ONLY -----	1	
-32	0426901-11	SKIN-FLAP UPPER LH ONLY -----	1	
	0426901-10	SKIN-FLAP UPPER RH ONLY -----	1	
-33	0426901-6	SKIN-FLAP LOWER LH ONLY -----	1	
	0426901-7	SKIN-FLAP LOWER RH ONLY -----	1	
-34	S237-4	DOUBLER-ACCESS HOLE -----	4	
-35	S225-3	COVER-ACCESS HOLE -----	4	
-36	S1021Z8-8	SCREW -----	3	
-37	0425142-1	EXTENSION-FLAP LH -----	1	
	0425142-2	EXTENSION-FLAP RH -----	1	
-38	0426901-17	REINFORCEMENT -----	1	
-39	CM2692-20-1S	PLUG BUTTON -----	1	


CONTINUED ON NEXT PAGE

152 & A152 Parts Catalog


FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
16 -40	S1093-1	PLUG BUTTON ----- A---152 SERIAL 15279406 THRU 15281559 F152 SERIAL F15201429 THRU F15201538 A152 SERIAL A1520735 THRU A1520789 FA152 SERIAL FA1520337 THRU FA1520351 B---152 SERIAL 15281560 & ON F152 SERIAL F15201539 & ON A152 SERIAL A1520790 & ON FA152 SERIAL FA1520352 & ON C---152 SERIAL 15279406 THRU 15285564 F152 SERIAL F15201429 THRU F15201908 A152 SERIAL A1520735 THRU A1521014 FA152 SERIAL FA1520337 THRU FA1520387 D---152 SERIAL 15285565 & ON F152 SERIAL F15201909 & ON A152 SERIAL A1521015 & ON FA152 SERIAL FA1520388 & ON	12	

152 & A152 Parts Catalog



Strut

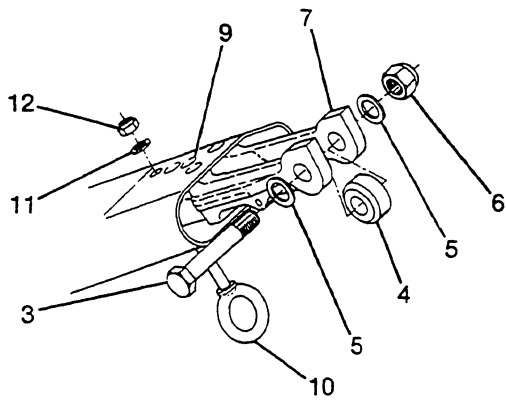


Detail A

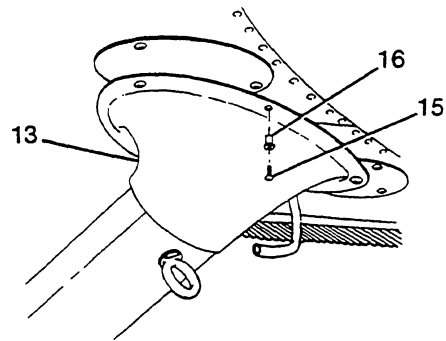

Detail B

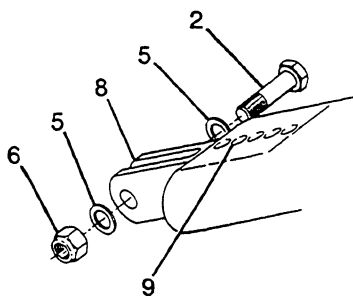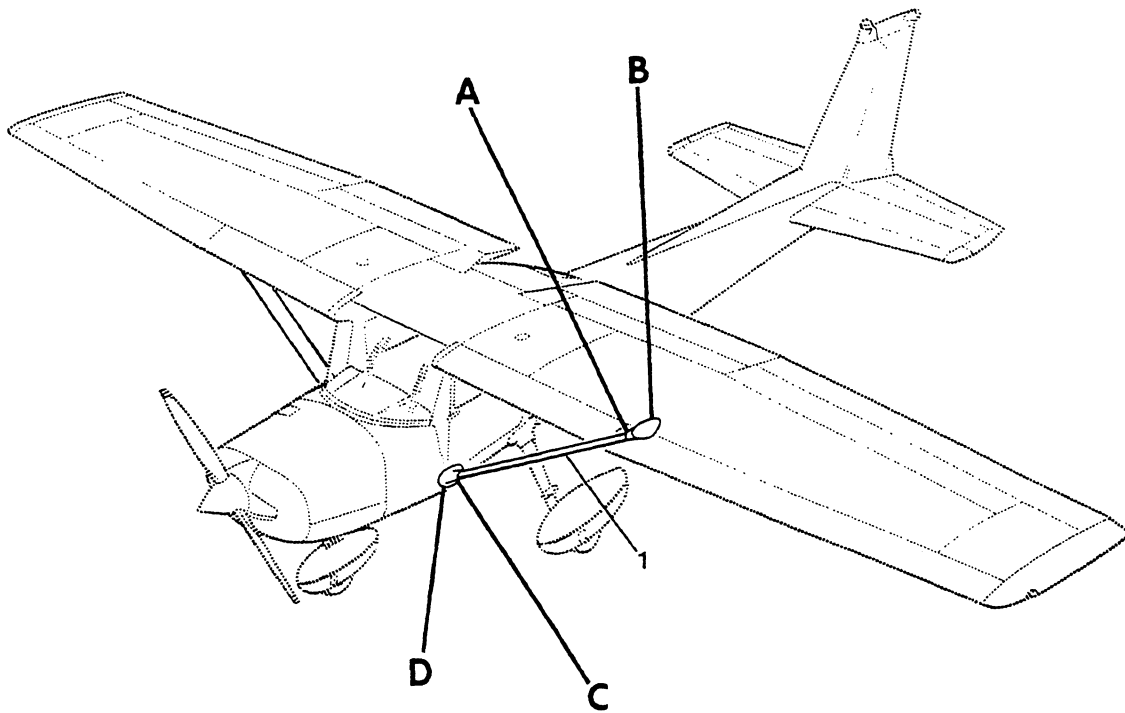

Detail D

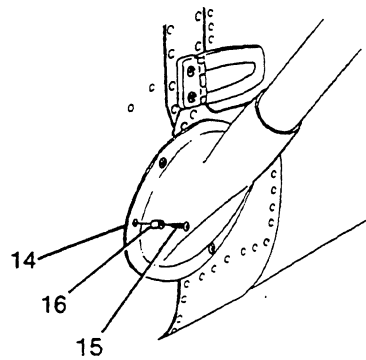


Detail C

Figure 17. Wing Strut Installation

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION							UNITS PER ASSY	USABLE ON CODE
		1	2	3	4	5	6	7		
17 -		WING STRUT INSTALLATION -----							NP	
- 1	0421000-1	STRUT ASSEMBLY-WING LH -----							1	A
	0421000-7	STRUT ASSEMBLY-WING LH -----							1	B
	0421000-2	STRUT ASSEMBLY-WING RH -----							1	A
	0421000-8	STRUT ASSEMBLY-WING RH -----							1	B
		ATTACHING PARTS -----								
- 2	AN8-17A	BOLT -----							1	
- 3	AN8-25A	BOLT -----							1	
- 4	0523307	SPACER -----							1	A
	0523307-1	SPACER -----							1	B
- 5	AN960-816	WASHER -----							4	
- 6	MS20365-820C	NUT -----							2	
		---*---								
- 7	0523614-1	FITTING-STRUT UPPER -----							1	
- 8	0421001-1	FITTING-STRUT LOWER LH & RH -----							1	A
	0421001-3	FITTING-STRUT LOWER LH -----							1	B
	0421001-2	FITTING-STRUT LOWER RH -----							1	B
		ATTACHING PARTS -----								
- 9	MS20470AD10-31	RIVET -----							5	
		---*---								
-10	0523613-1	EYEBOLT-MOORING -----							1	
-11	AN960-516	WASHER -----							1	
-12	MS21042L5	NUT -----							1	
-13	0522150-3	FAIRING-STRUT UPPER LH -----							1	A
	0522150-7	FAIRING-STRUT UPPER LH -----							1	B
	0522150-4	FAIRING-STRUT UPPER RH -----							1	A
	0522150-6	FAIRING-STRUT UPPER RH -----							1	B
-14	0421002-1	FAIRING-STRUT LOWER LH -----							1	A
	0421002-3	FAIRING-STRUT LOWER LH -----							1	B
	0421002-2	FAIRING-STRUT LOWER RH -----							1	A
	0421002-4	FAIRING-STRUT LOWER RH -----							1	B
		ATTACHING PARTS -----								
-15	AN515-8R8	SCREW -----							3	
-16	NAS1329A08-75	RIVNUT -----							3	
		---*---								
		A---152 SERIAL 15279406 & ON F152 SERIAL F15201429 & ON B---A152 SERIAL A1520735 & ON FA152 SERIAL FA1520337 & ON								

152 & A152 Parts Catalog

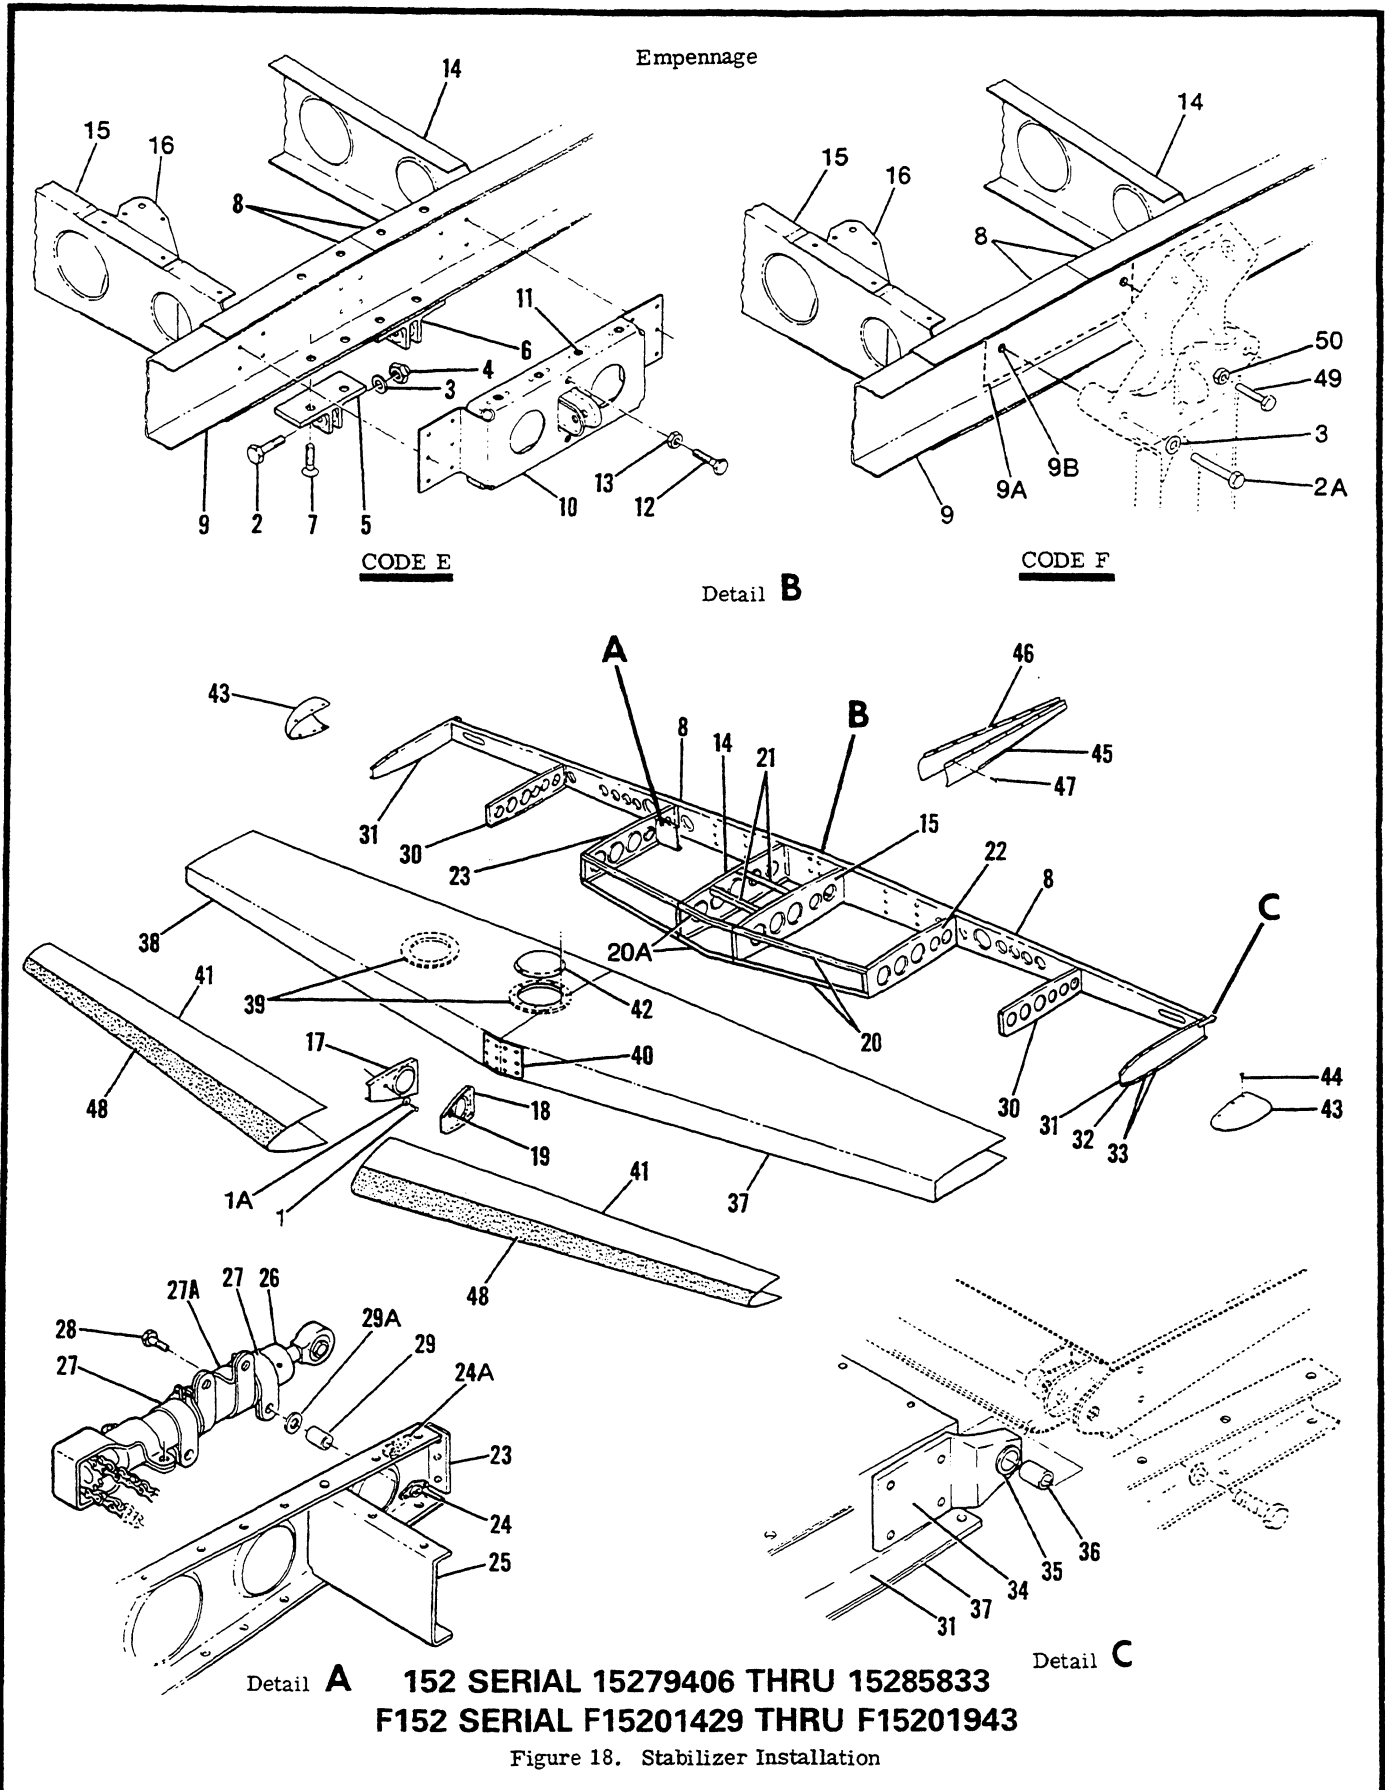

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
18 -		STABILIZER INSTALLATION -----	NP	A
	0432001-59	STABILIZER ASSEMBLY -----	1	E
	0432001-77	STABILIZER ASSEMBLY -----	1	F
		ATTACHING PARTS -----		
- 1	AN4-5A	BOLT -----	2	
- 1A	S1450-4A10-071	WASHER -----	2	
- 2	AN4-7A	BOLT -----	2	E
	0412537-1	SHIM-STABILIZER ONE SHIM MAX PER LH & RH FITTING -----	AR	B
- 2A	AN4H16A	BOLT -----	2	F
- 3	AN960-416L	WASHER -----	2	
- 4	MS21042L4	NUT -----	2	E
		-----*		
- 5	0432005-1	FITTING-LH -----	1	E
- 6	0432005-2	FITTING-RH -----	1	E
		ATTACHING PARTS -----		
- 7	AN509-416R12	SCREW -----	2	E
		-----*		
- 8	0432001-56	SPAR-STABILIZER -----	2	
- 9	0432001-15	REINFORCEMENT -----	1	
- 9A	0432001-81	PLATE -----	1	F
- 9B	NAS680A4	NUTPLATE -----	2	F
- 10	0432004-9	BRACKET ASSY -----	1	F
- 11	NAS1068A4	NUTPLATE -----	8	E
- 12	NAS428H3-7	BOLT-ELEVATOR STOP -----	2	E
- 13	AN315-3R	NUT-ELEVATOR STOP -----	2	E
- 14	0432001-8	RIB-RH -----	1	
- 15	0432001-9	RIB-LH -----	1	
- 16	0432001-19	BRACKET-UPPER HALF -----	1	
	0432001-20	BRACKET-LOWER HALF -----	1	
- 17	0432001-6	RIB ASSY-LEADING EDGE RH -----	1	
- 18	0432001-46	RIB ASSY-LEADING EDGE LH -----	1	
- 19	NAS686A4	NUTPLATE -----	1	
- 20	0432001-37	ANGLE -----	2	
- 20A	0432007-3	REINFORCEMENT -----	2	F
- 21	0432001-41	STIFFENER -----	2	
- 22	0432001-75	RIB-LH -----	1	
- 23	0432001-74	RIB ASSY-RH -----	1	
- 24	NAS680A3K	NUTPLATE RH ONLY -----	2	
- 24A	NAS683A3K	NUTPLATE RH ONLY -----	2	
- 25	0432001-43	RIB RH ONLY -----	1	
- 26	SEE FIG 20	ACTUATOR ASSY-ELEVATOR TAB -----	1	
		ATTACHING PARTS -----		
- 27	AN742D13	CLAMP -----	2	
- 27A	AN742D13	CLAMP -----	2	D
- 28	AN520-10R12	SCREW -----	2	C
	AN3-3A	BOLT -----	4	C
- 29	S355	SPACER -----	AR	C
- 29A	AN960-10	WASHER -----	4	D
		-----*		
- 30	0432001-12	RIB -----	2	
- 31	0432001-53	RIB -----	2	
- 32	S1863-3A	NUTPLATE -----	4	
- 33	S1862-2A	NUTPLATE -----	8	
- 34	0432165-1	HINGE ASSY -----	2	
- 35	S1003-65A	BEARING -----	1	
- 36	0432003-1	BUSHING -----	1	
- 37	0432001-55	SKIN-STABILIZER LH -----	1	E
	0432001-83	SKIN-STABILIZER LH -----	1	F
- 38	0432001-54	SKIN-STABILIZER RH -----	1	F
	0432001-82	SKIN-STABILIZER RH -----	1	F
- 39	S237-2	DOUBLER RH ONLY -----	2	
- 40	0432001-44	PLATE-REINFORCEMENT -----	1	
- 41	0432001-16	SKIN-LEADING EDGE -----	2	
- 42	S225-1	PLATE-INSPECTION -----	2	
		ATTACHING PARTS -----		
	S1021Z8-8	SCREW -----	3	
		-----*		
- 43	0430004-11	TIP-STABILIZER -----	2	
		ATTACHING PARTS -----		
- 44	S1021Z8-6	SCREW -----	6	
		-----*		


CONTINUED ON NEXT PAGE

152 & A152 Parts Catalog


FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION							UNITS PER ASSY	USABLE ON CODE
		1	2	3	4	5	6	7		
18 -45	0431015-7	FAIRING ASSY-LH -----							1	F F
-46	0431015-8	FAIRING ASSY-RH -----							1	
		ATTACHING PARTS								
-47	S102126-6	SCREW -----							11	
		*-----								
	S1863-2A	NUTPLATE -----							2	
-48	1232040-3	BOOT-ABRASION -----							2	
-49	NAS428H3-7	BOLT-ELEVATOR STOP -----							2	
-50	AN315-3R	NUT-ELEVATOR STOP -----							2	
		NOTE. *WHEN INITIALLY ORDERING THIS PART FOR								
		AIRCRAFT EQUIPPED WITH EXTRUDED ABRASION								
		BOOTS BOTH LH & RH BOOTS MUST BE REPLACED								
		WITH 1232040-3 CONSTANT THICKNESS BOOTS.								
		A---152 SERIAL 15279406 THRU 15285833								
		F152 SERIAL F15201429 THRU F15201943								
		B---152 SERIAL 15281090 THRU 15284541								
		F152 SERIAL F15201499 THRU F15201828								
		C---152 SERIAL 15279406 THRU 15282055								
		F152 SERIAL F15201429 THRU F15201578								
		D---152 SERIAL 15282056 THRU 15285833								
		F152 SERIAL F15201579 THRU F15201943								
		E---152 SERIAL 15279406 THRU 15284541								
		F152 SERIAL F15201429 THRU F15201828								
		F---152 SERIAL 15284542 THRU 15285833								
		F152 SERIAL F15201829 THRU F15201943								

152 & A152 Parts Catalog


Empennage (Cont)

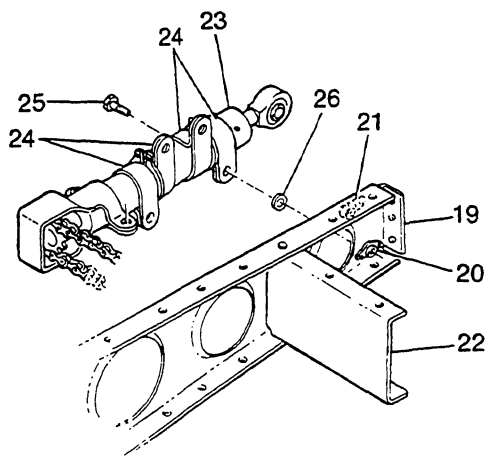

Detail A

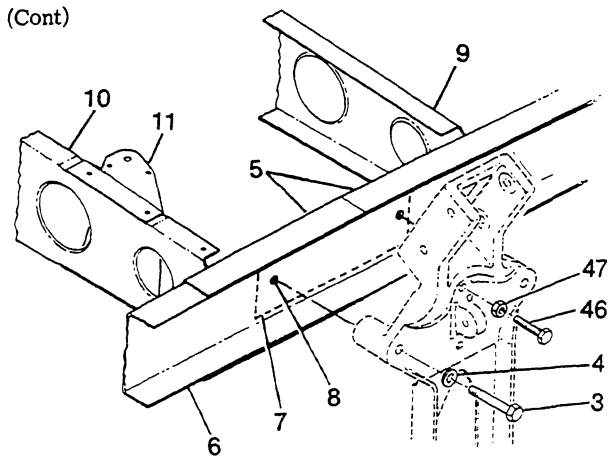

Detail B

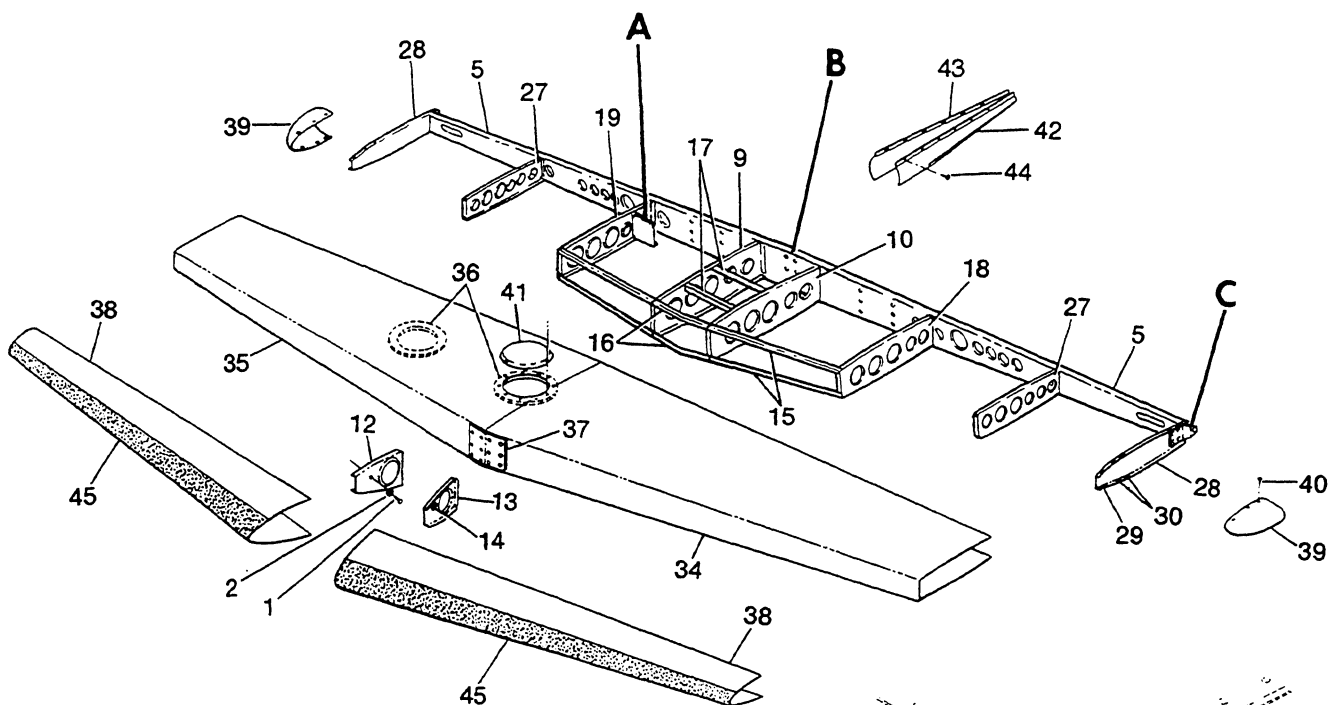

Detail C



152 SERIAL 15285834 & ON
F152 SERIAL F15201944 & ON

Figure 18A. Stabilizer Installation

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
18A-	0432020-3	STABILIZER INSTALLATION -----	NP	A
		STABILIZER ASSEMBLY -----	1	
		ATTACHING PARTS -----		
- 1	AN4-5A	BOLT -----	2	
- 2	S1450-4A10-071	WASHER -----	2	
- 3	AN4H16A	BOLT -----	2	
- 4	AN960-416L	WASHER -----	2	
		-----*		
- 5	0432001-56	SPAR-STABILIZER -----	2	
- 6	0432001-15	REINFORCEMENT -----	1	
- 7	0432001-81	PLATE -----	1	
- 8	NAS680A4	NUTPLATE -----	2	
- 9	0432001-8	RIB-RH -----	1	
-10	0432001-9	RIB-LH -----	1	
-11	0432001-19	BRACKET-UPPER HALF -----	1	
	0432001-20	BRACKET-LOWER HALF -----	1	
-12	0432001-6	RIB ASSY-LEADING EDGE RH -----	1	
-13	0432001-46	RIB ASSY-LEADING EDGE LH -----	1	
-14	NAS686A4	NUTPLATE -----	1	
-15	0432001-37	ANGLE -----	2	
-16	0432007-3	REINFORCEMENT -----	2	
-17	0432001-41	STIFFENER -----	2	
-18	0432001-75	RIB-LH -----	1	
-19	0432001-74	RIB ASSY-RH -----	1	
-20	NAS680A3K	NUTPLATE RH ONLY -----	2	
-21	NAS683A3K	NUTPLATE RH ONLY -----	2	
-22	0432001-43	RIB RH ONLY -----	1	
-23	SEE FIG 20	ACTUATOR ASSY-ELEVATOR TAB -----	1	
		ATTACHING PARTS -----		
-24	AN742D13	CLAMP -----	4	
-25	AN3-3A	BOLT -----	4	
-26	AN960-10	WASHER -----	4	
		-----*		
-27	0432001-12	RIB -----	2	
-28	0432175-1	RIB ASSY -----	2	
-29	S1863-3A	NUTPLATE -----	2	
-30	S1862-2A	NUTPLATE -----	4	
-31	0432173-1	HINGE HALF ASSY -----	2	
-32	S1003-28A	BEARING -----	1	
-33	0432173-3	BUSHING -----	1	
-34	0432001-83	SKIN-STABILIZER LH -----	1	
-35	0432001-82	SKIN-STABILIZER RH -----	1	
-36	S237-2	DOUBLER RH ONLY -----	2	
-37	0432001-44	REINFORCEMENT -----	1	
-38	0432001-16	SKIN-LEADING EDGE -----	2	
-39	0430004-11	TIP-STABILIZER -----	2	
		ATTACHING PARTS -----		
-40	S1021Z8-6	SCREW -----	6	
		-----*		
-41	S225-1	PLATE-INSPECTION -----	2	
		ATTACHING PARTS -----		
	S1021Z8-8	SCREW -----	3	
		-----*		
-42	0431015-7	FAIRING ASSY-LH -----	1	
-43	0431015-8	FAIRING ASSY-RH -----	1	
		ATTACHING PARTS -----		
-44	S1021Z6-6	SCREW -----	11	
		-----*		
	S1863-2A	NUTPLATE -----	2	
-45	1232040-3	BOOT-ABRASION -----	2	
-46	NAS428H3-7	BOLT-ELEVATOR STOP -----	2	
-47	AN315-3R	NUT-ELEVATOR STOP -----	2	
		A---152 SERIAL 15285834 & ON F152 SERIAL F15201944 & ON		

152 & A152 Parts Catalog

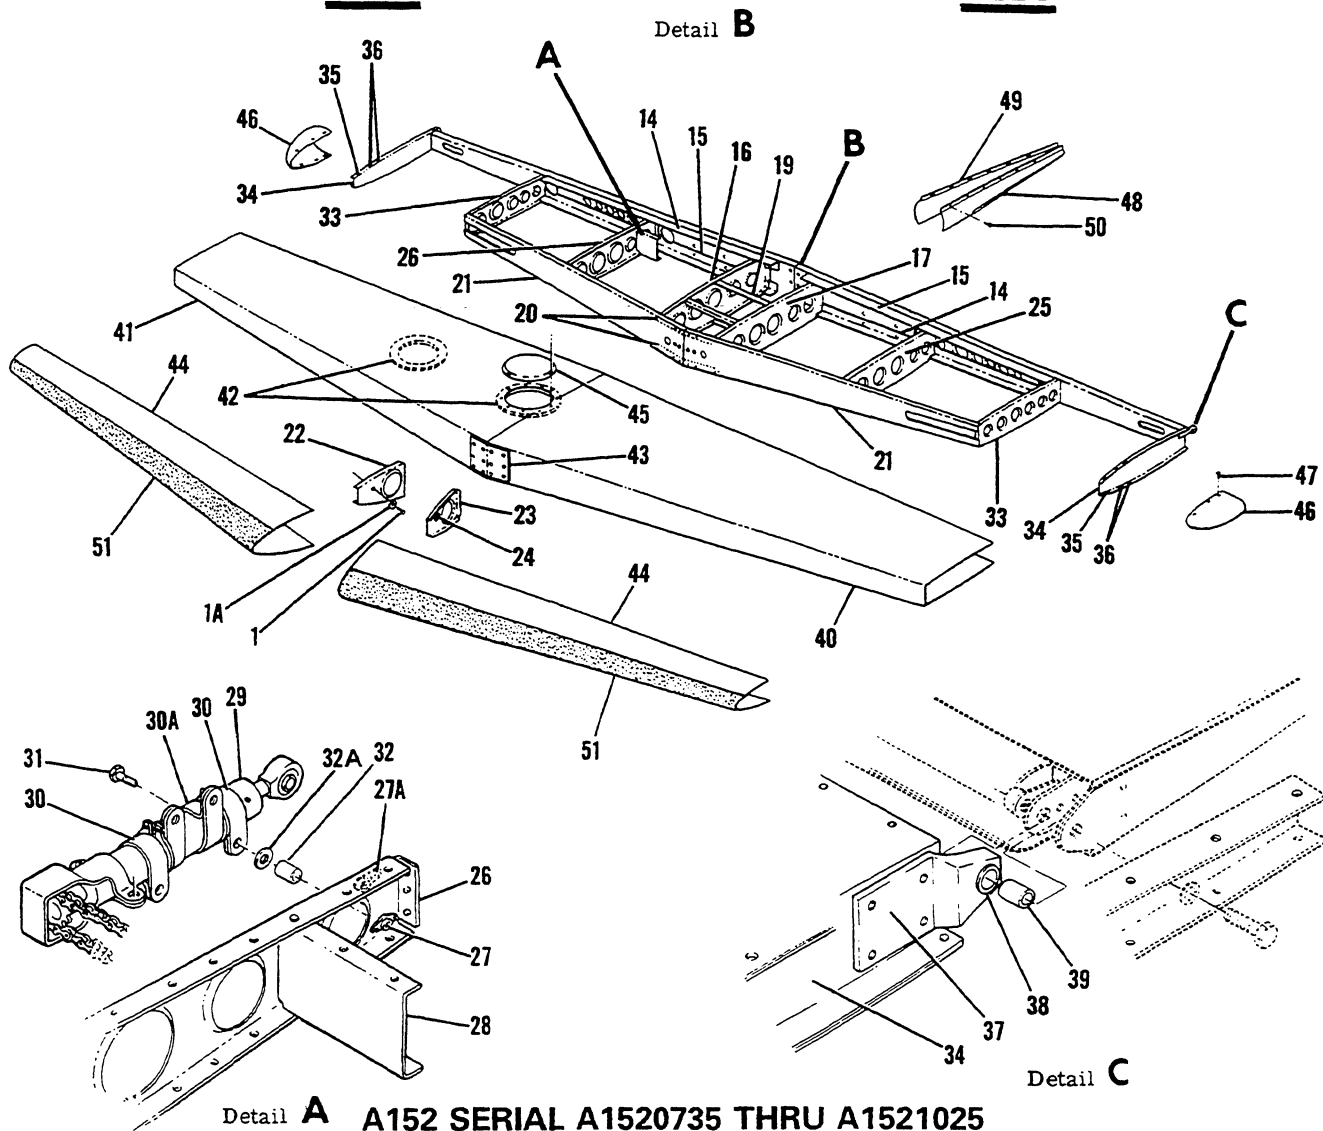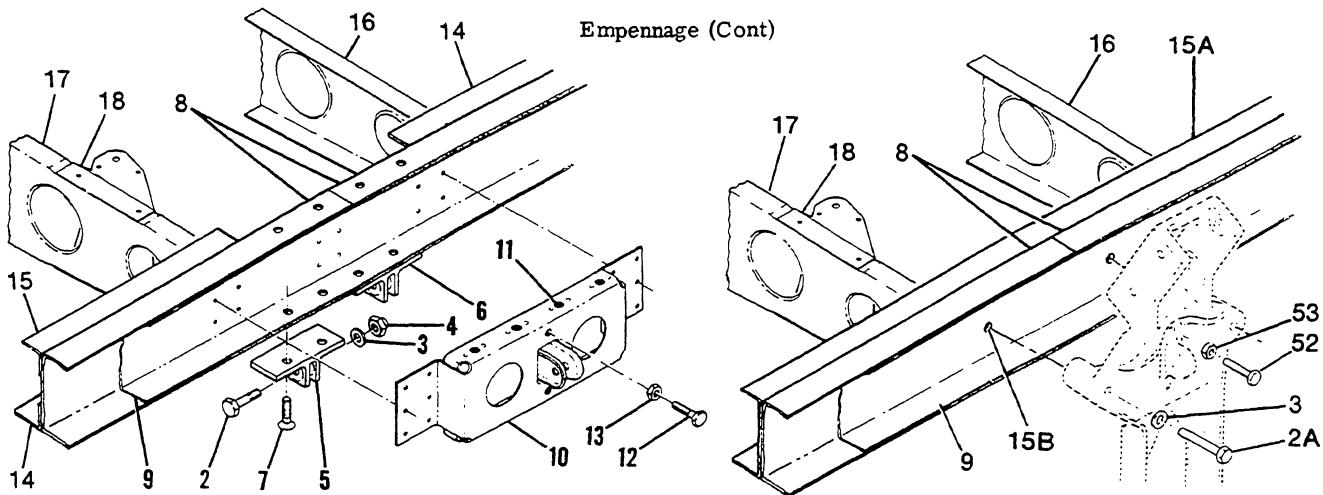

Detail A A152 SERIAL A1520735 THRU A1521025
FA152 SERIAL FA1520337 THRU FA1520387

Figure 19. Stabilizer Installation-Aerobat

152 & A152 Parts Catalog


FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
19 -		STABILIZER INSTALLATION-AEROBAT -----	NP	A
	0432001-61	STABILIZER ASSEMBLY -----	1	E
	0432001-79	STABILIZER ASSEMBLY -----	1	F
		ATTACHING PARTS -----		
- 1	AN4-5A	BOLT -----	2	
- 1A	S1450-4A10-071	WASHER -----	2	
- 2	AN4-7A	BOLT -----	2	E
	0412537-1	SHIM-STABILIZER ONE SHIM MAX PER LH & RH FITTING -----	AR	B
- 2A	AN4H16A	BOLT -----	2	F
- 3	AN960-416L	WASHER -----	2	
- 4	MS21042L4	NUT -----	2	E
		-----*		
- 5	0432005-1	FITTING-LH -----	1	E
- 6	0432005-2	FITTING-RH -----	1	E
		ATTACHING PARTS -----		
- 7	AN509-416R12	SCREW -----	2	E
		-----*		
- 8	0432001-56	SPAR-STABILIZER -----	2	
- 9	0432001-15	REINFORCEMENT -----	1	
-10	0432004-9	BRACKET ASSY -----	1	E
-11	NAS1068A4	NUTPLATE -----	8	E
-12	NAS428H3-7	BOLT-ELEVATOR STOP -----	2	E
-13	AN315-3R	NUT-ELEVATOR STOP -----	2	E
-14	0432007-1	REINFORCEMENT-STABILIZER UPPER RH & LOWER LH -----	2	E
-15	0432007-2	REINFORCEMENT-STABILIZER UPPER LH & LOWER RH -----	2	E
-15A	0432001-80	REINFORCEMENT-STABILIZER -----	1	E
-15B	NAS680A4	NUTPLATE -----	2	F
-16	0432001-66	RIB-RH -----	1	
-17	0432001-67	RIB-LH -----	1	
-18	0432001-19	BRACKET-UPPER HALF -----	1	
	0432001-20	BRACKET-LOWER HALF -----	1	
-19	0432001-41	STIFFENER -----	4	
-20	0432007-3	REINFORCEMENT -----	2	
-21	0432006-1	SPAR DOUBLER-STABILIZER -----	2	
-22	0432001-6	RIB ASSY-LEADING EDGE RH -----	1	
-23	0432001-46	RIB ASSY-LEADING EDGE LH -----	1	
-24	NAS686A4	NUTPLATE -----	1	
-25	0432001-73	RIB-LH -----	1	
-26	0432001-72	RIB ASSY-RH -----	1	
-27	NAS680A3K	NUTPLATE RH ONLY -----	2	
-27A	NAS683A3K	NUTPLATE RH ONLY -----	2	
-28	0432001-43	RIB RH ONLY -----	1	
-29	SEE FIG 20	ACTUATOR ASSY-ELEVATOR TAB -----	1	
		ATTACHING PARTS -----		
-30	AN742D13	CLAMP -----	2	
-30A	AN742D13	CLAMP -----	2	
-31	AN520-10R12	SCREW -----	2	
	AN3-3A	BOLT -----	4	
-32	S355	SPACER -----	AR	
-32A	AN960-10	WASHER -----	4	D
		-----*		
-33	0432001-70	RIB -----	2	
-34	0432001-53	RIB -----	2	
-35	S1863-3A	NUTPLATE -----	4	
-36	S1862-2A	NUTPLATE -----	8	
-37	0432165-1	HINGE ASSY -----	2	
-38	S1003-65A	BEARING -----	1	
-39	0432003-1	BUSHING -----	1	
-40	0432001-65	SKIN-STABILIZER LH -----	1	
-41	0432001-64	SKIN-STABILIZER RH -----	1	
-42	S237-2	DOUBLER RH ONLY -----	2	
-43	0432001-63	PLATE-REINFORCEMENT -----	1	
-44	0432001-62	SKIN-LEADING EDGE -----	2	
-45	S225-1	PLATE-INSPECTION -----	2	
		ATTACHING PARTS -----		
	S1021Z8-8	SCREW -----	3	
		-----*		
-46	0430004-11	TIP-STABILIZER -----	2	
		ATTACHING PARTS -----		
-47	S1021Z8-6	SCREW -----	6	
		-----*		
CONTINUED ON NEXT PAGE				

152 & A152 Parts Catalog


FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
19 -48	0431015-7	FAIRING ASSY-LH -----	1	
-49	0431015-8	FAIRING ASSY-RH -----	1	
		ATTACHING PARTS -----		
-50	S1021Z6-6	SCREW -----	11	
		*-----		
	S1893-2A	NUTPLATE -----	2	
-51	1232040-3	BOOT-ABRASION -----	2	
-52	NAS428H3-7	BOLT-ELEVATOR STOP -----	2	F
-53	AN315-3R	NUT-ELEVATOR STOP -----	2	F
		NOTE. *WHEN INITIALLY ORDERING THIS PART FOR AIRCRAFT EQUIPPED WITH EXTRUDED ABRASION BOOTS BOTH LH & RH BOOTS MUST BE REPLACED WITH 1232040-3 CONSTANT THICKNESS BOOTS.		
		A---A152 SERIAL A1520735 THRU A1521025 FA152 SERIAL FA1520337 THRU FA1520387		
		B---A152 SERIAL A1520776 THRU A1520943 FA152 SERIAL FA1520347 THRU FA1520372		
		C---A152 SERIAL A1520735 THRU A1520809 FA152 SERIAL FA1520337 THRU FA1520357		
		D---A152 SERIAL A1520810 THRU A1521025 FA152 SERIAL FA1520358 THRU FA1520387		
		E---A152 SERIAL A1520735 THRU A1520943 FA152 SERIAL FA1520337 THRU FA1520372		
		F---A152 SERIAL A1520944 THRU A1521025 FA152 SERIAL FA1520373 THRU FA1520387		

152 & A152 Parts Catalog


Empennage (Cont)

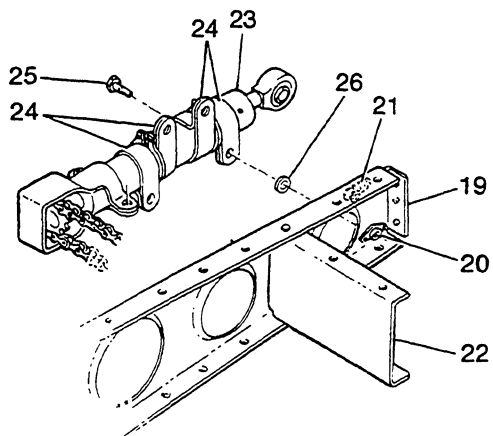

Detail A

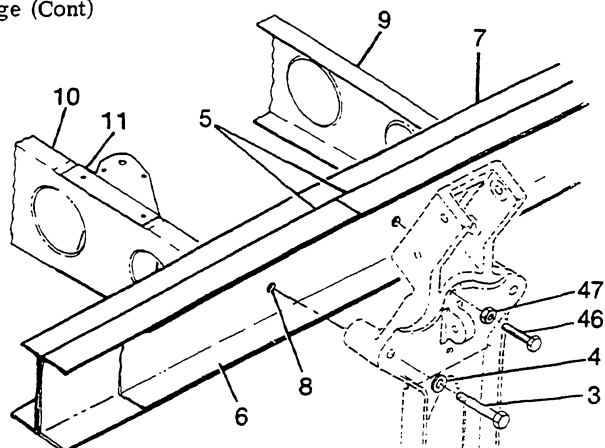

Detail B

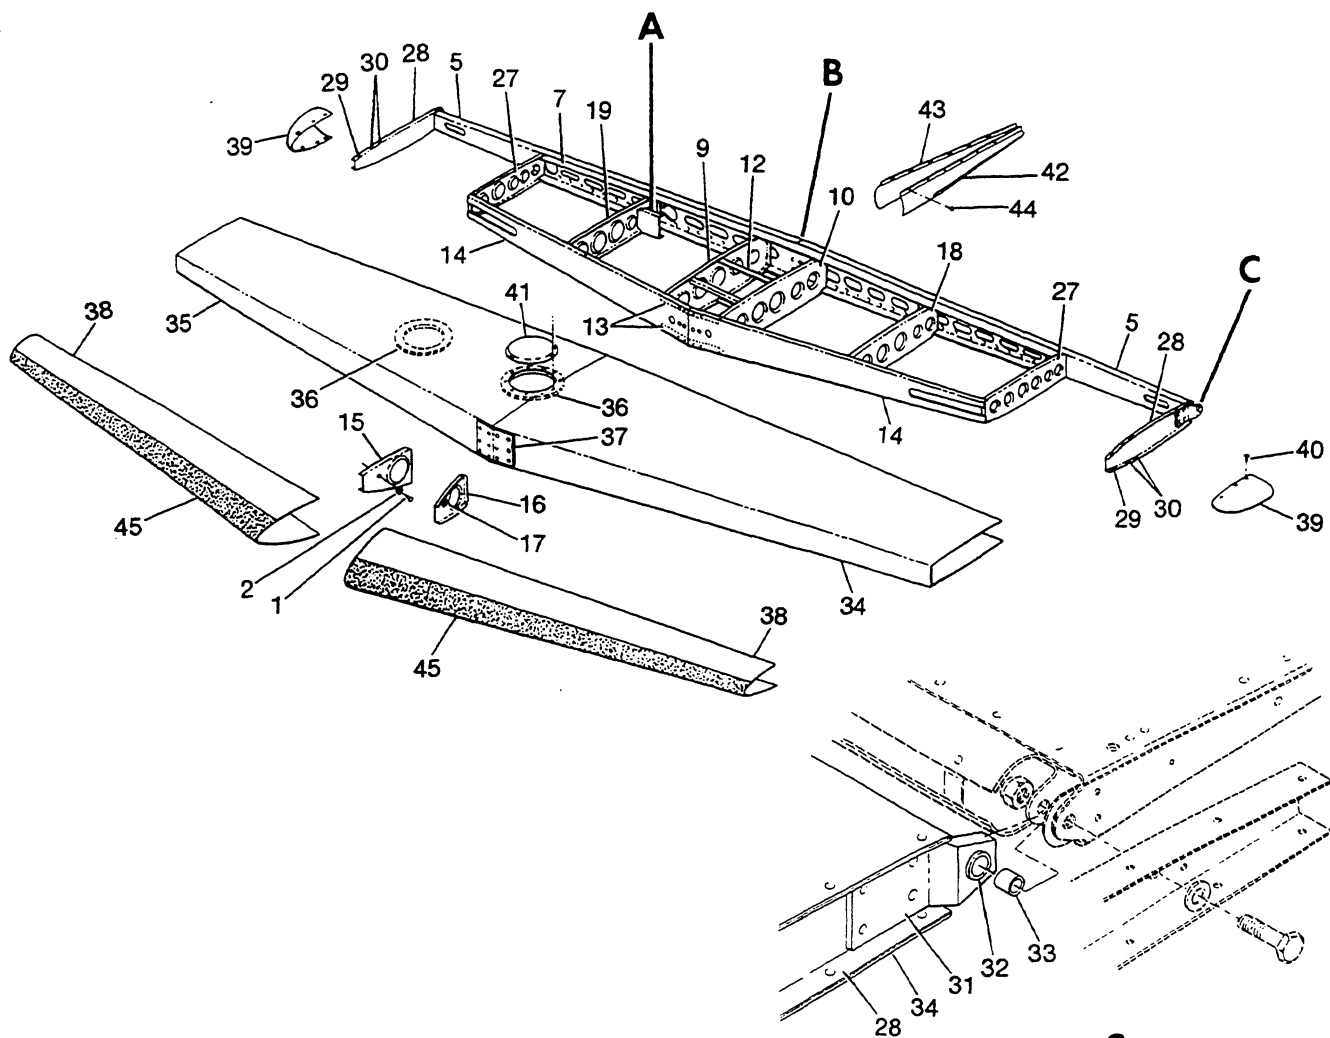

Detail C

A152 SERIAL A1521026 & ON
FA152 SERIAL FA1520388 & ON

Figure 19A. Stabilizer Installation - Aerobat

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
19A-	0432020-4	STABILIZER INSTALLATION-AEROBAT -----	NP	A
		STABILIZER ASSEMBLY -----	1	
		ATTACHING PARTS -----		
- 1	AN4-5A	BOLT -----	2	
- 2	S1450-4A10-071	WASHER -----	2	
- 3	AN4H16A	BOLT -----	2	
- 4	AN960-416L	WASHER -----	2	
		---*---		
- 5	0432001-56	SPAR-STABILIZER -----	2	
- 6	0432001-15	REINFORCEMENT -----	1	
- 7	0432001-80	REINFORCEMENT -----	1	
- 8	NAS680A4	NUTPLATE -----	2	
- 9	0432001-66	RIB-RH -----	1	
-10	0432001-67	RIB-LH -----	1	
-11	0432001-19	BRACKET-UPPER HALF -----	1	
	0432001-20	BRACKET-LOWER HALF -----	1	
-12	0432001-41	STIFFENER -----	4	
-13	0432007-3	REINFORCEMENT -----	2	
-14	0432006-1	SPAR DOUBLER-STABILIZER -----	2	
-15	0432001-6	RIB ASSY-LEADING EDGE RH -----	1	
-16	0432001-46	RIB ASSY-LEADING EDGE LH -----	1	
-17	NAS686A4	NUTPLATE -----	1	
-18	0432001-73	RIB-LH -----	1	
-19	0432001-72	RIB ASSY-RH -----	1	
-20	NAS680A3K	NUTPLATE RH ONLY -----	2	
-21	NAS683A3K	NUTPLATE RH ONLY -----	2	
-22	0432001-43	RIB RH ONLY -----	1	
-23	SEE FIG 20	ACTUATOR ASSY-ELEVATOR TRIM TAB -----	1	
		ATTACHING PARTS -----		
-24	AN742D13	CLAMP -----	4	
-25	AN3-3A	BOLT -----	4	
-26	AN960-10	WASHER -----	4	
		---*---		
-27	0432001-70	RIB -----	2	
-28	0432175-1	RIB ASSY -----	2	
-29	S1863-3A	NUTPLATE -----	2	
-30	S1862-2A	NUTPLATE -----	4	
-31	0432173-1	HINGE HALF ASSY -----	2	
-32	S1003-28A	BEARING -----	1	
-33	0432173-3	BUSHING -----	1	
-34	0432001-65	SKIN-STABILIZER LH -----	1	
-35	0432001-64	SKIN-STABILIZER RH -----	1	
-36	S237-2	DOUBLER RH ONLY -----	2	
-37	0432001-63	PLATE-REINFORCEMENT -----	1	
-38	0432001-62	SKIN-LEADING EDGE -----	2	
-39	0430004-11	TIP-STABILIZER -----	2	
		ATTACHING PARTS -----		
-40	S1021Z8-6	SCREW -----	6	
		---*---		
-41	S225-1	PLATE-INSPECTION -----	2	
		ATTACHING PARTS -----		
	S1021Z8-8	SCREW -----	3	
		---*---		
-42	0431015-7	FAIRING ASSY-LH -----	1	
-43	0431015-8	FAIRING ASSY-RH -----	1	
		ATTACHING PARTS -----		
-44	S1021Z6-6	SCREW -----	11	
		---*---		
	S1893-2A	NUTPLATE -----	2	
-45	1232040-3	BOOT-ABRASION -----	2	
-46	NAS428H3-7	BOLT-ELEVATOR STOP -----	2	
-47	AN315-3R	NUT-ELEVATOR STOP -----	2	
		A---A152 SERIAL A1521026 & ON FA152 SERIAL FA1520388 & ON		

152 & A152 Parts Catalog

Empennage (Cont)

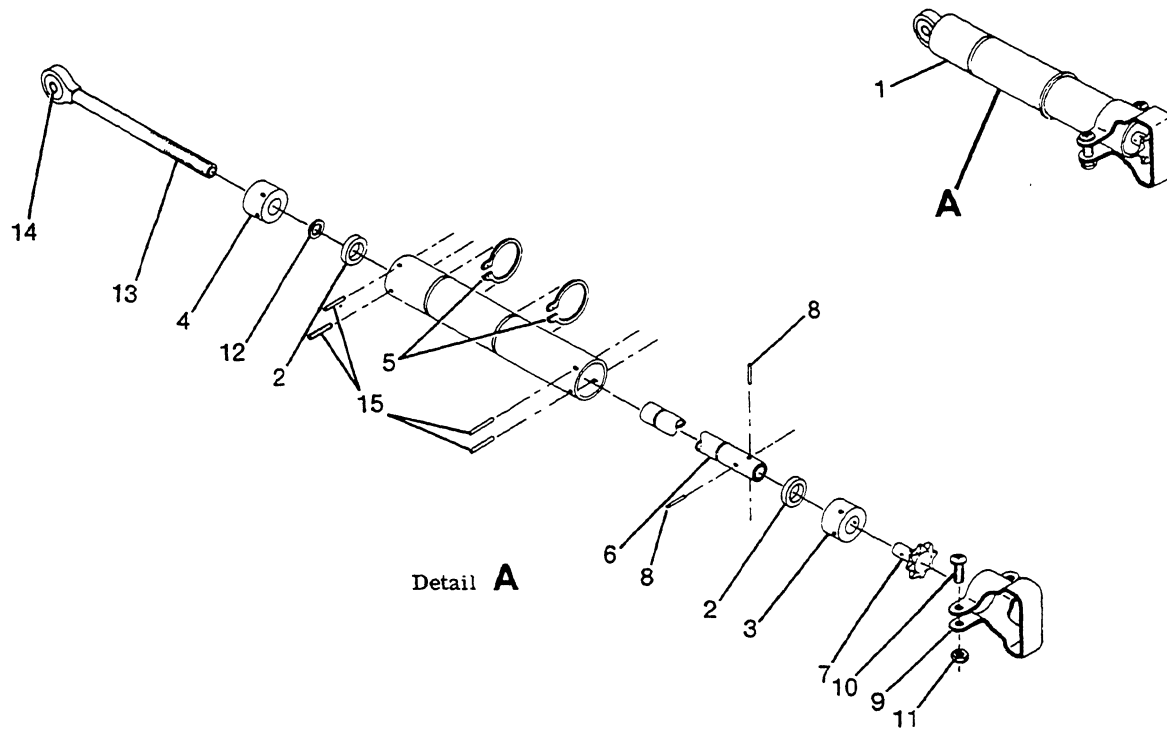


Figure 20. Elevator Trim Tab Actuator Assembly

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
20 - 1	1260074-1	ELEVATOR TRIM TAB ACTUATOR ASSEMBLY -----	1	
- 2	0310295	COLLAR-ACTUATOR -----	2	
- 3	0310297-1	BEARING-ACTUATOR -----	1	
- 4	0310298-1	BEARING-ACTUATOR -----	1	
- 5	MS16624-1081	RING-RETAINER OUTSIDE -----	2	
- 6	1260049-1	SCREW INTERNAL THREADS -----	1	
- 7	0310332	SPROCKET-ROLL CHAIN -----	1	
		ATTACHING PARTS		
- 8	3/32X.375TYPE3	GROOV-PIN -----	2	
		-----*		
- 9	0310422-1	GUARD-ROLL CHAIN -----	1	
		ATTACHING PARTS		
-10	AN515-8R8	SCREW -----	2	
-11	MS21044N08	NUT -----	2	
		-----*		
-12	AN6227B5	PACKING ACTUATOR -----	1	
-13	0310362-5	SCREW ASSEMBLY-ACTUATOR -----	1	
-14	PN3A	BEARING TOR -----	1	
-15	3/32X.625TYPE3	GROOV-PIN -----	4	


152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
21 -		ELEVATOR INSTALLATION -----	NP	J
- 1	0432166-5	BELLCRANK ASSY-ELEVATOR WEU 0432012-4 -----	1	C
	0432012-4 *	BELLCRANK ASSY-ELEVATOR SEE NOTE * -----	1	H
		ATTACHING PARTS -----		
- 2	AN3-5A	BOLT -----	4	
- 3	AN3-6A	BOLT -----	1	C
	AN173-11A	BOLT -----	1	E
	NAS1305-13	BOLT -----	1	G
	NAS1305-13D	BOLT -----	1	G
- 4	AN960-10	BOLT ALTERNATE FOR NAS1305-13 -----	1	
- 4A	AN960-10	WASHER -----	4	
	S2385-5	WASHER -----	2	F
- 5	MS21044N3	WASHER -----	2	G
- 5A	MS21044N3	NUT -----	4	
	MS21042L5	NUT -----	1	F
		NUT -----	1	G
- 6	S1866-3	-----*		
	NAS76A5-008	BEARING -----	1	C
- 6A	0432003-2	BUSHING -----	1	D
	0432001-51	BUSHING -----	1	E
	0432001-52	ELEVATOR ASSY-LH -----	1	
		ELEVATOR ASSY-RH -----	1	
		ATTACHING PARTS -----		
- 7	AN3-7A	BOLT -----	1	
- 8	AN960-10	WASHER -----	1	
- 9	MS21044N3	NUT -----	1	
-10		DELETED -----		
		-----*		
-11	0432001-71	HINGE-HALF WEU 0432001-85 SPAR ASSY -----	1	
-12	0432001-21	SPAR-ELEVATOR WEU 0432001-85 SPAR ASSY -----	1	
	0432001-85	SPAR ASSY-ELEVATOR INCLUDES HINGE BRACKET -----	1	
-13	0534126-1	CLIP -----	1	
-14	0534126-4	CLIP -----	5	
-15	0434155-1	TUBE ASSY-TORQUE LH -----	1	
-16	0434155-2	TUBE ASSY-TORQUE RH -----	1	
		ATTACHING PARTS -----		
-17	AN520-10R7	SCREW -----	5	
		-----*		
-18	0432001-23	SKIN-ELEVATOR LH -----	1	
-19	0432001-22	SKIN-ELEVATOR RH -----	1	
	NAS680A3K	NUTPLATE -----	5	
	0432001-42	DOUBLER RH ONLY -----	1	
-20	0432001-34	SKIN-LH ELEVATOR TRAILING EDGE -----	1	
-21	0431001-31	RIB -----	1	
-22	S1863-3A	NUTPLATE -----	2	
-23	0431001-30	CHANNEL -----	1	
-24	0433134-3	WEIGHT-ELEVATOR BALANCE LH -----	1	
-25	0433134-6	WEIGHT-ELEVATOR BALANCE RH -----	1	
		ATTACHING PARTS -----		
	AN525-8R8	SCREW -----	2	
		-----*		
-26	0432001-57	RIB ASSY-RH ONLY -----	1	
	S1863-3A	NUTPLATE -----	2	
-27	0432001-33	STRIP-TAB HINGE REINFORCEMENT RH ONLY. -----	1	
-28	0432001-28	HINGE HALF-TAB RH ONLY -----	1	
		ATTACHING PARTS -----		
	MS20253P2-44.13	PIN -----	1	
		-----*		

CONTINUED ON NEXT PAGE

152 & A152 Parts Catalog

Empennage (Cont)

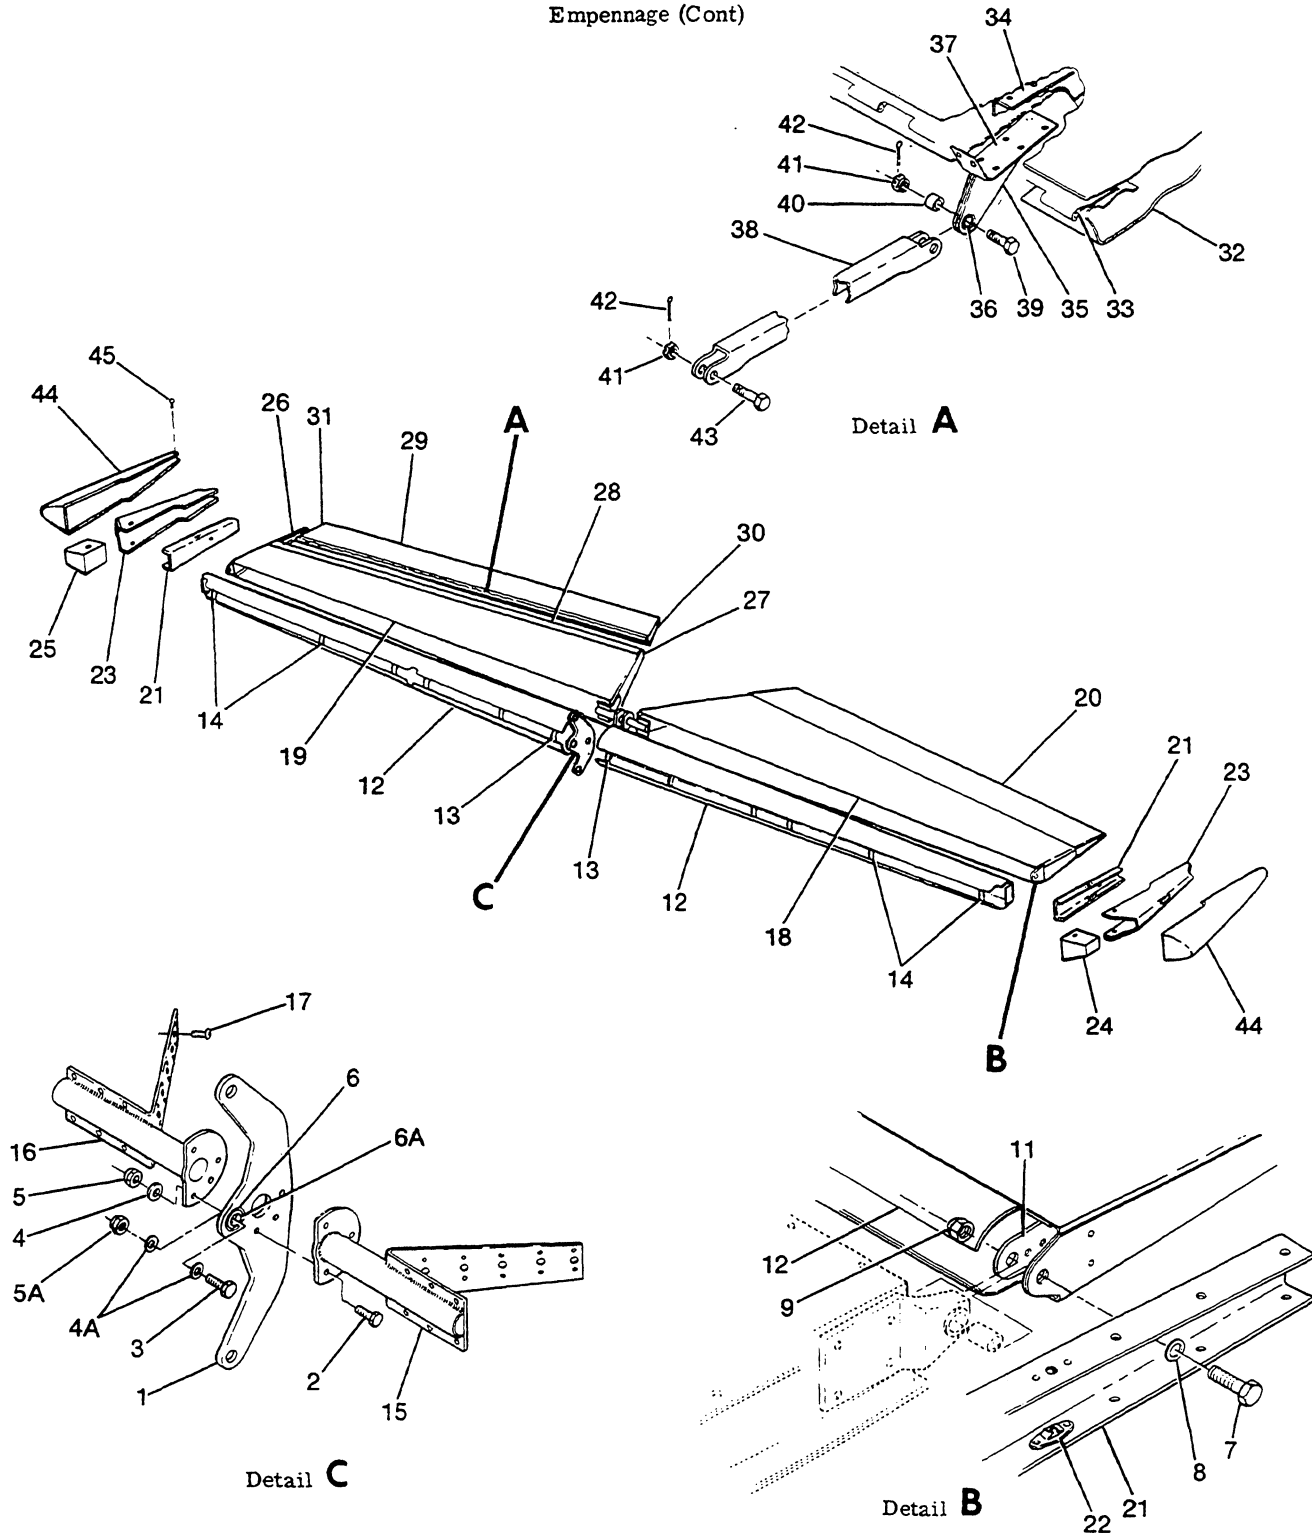

152 SERIAL 15279406 THRU 15285833
 F152 SERIAL F15201429 THRU F15201943
 A152 SERIAL A1520735 THRU A1521025
 FA152 SERIAL FA1520337 THRU FA1520387


Figure 21. Elevator Installation

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
21 -29	0432001-5	TAB ASSY-ELEVATOR RH ONLY -----	1	A B
-30	0432001-35	RIB-TAB -----	1	
-31	0432001-36	RIB-TAB -----	1	
-32	0432001-26	SKIN-TAB -----	1	
-33	0432001-27	HINGE HALF -----	1	
-34	0432001-30	RIB-HORN REINFORCEMENT -----	1	
-35	0412527-1	HORN ASSY-TAB -----	1	
-36	S1004-15B	BEARING -----	1	
-37	0412527-2	PLATE-TRIM TAB HORN -----	1	
-38	0432163-3	TUBE ASSY-TAB ACTUATOR WEU 0432011-1 -----	1	
	0432011-1	CHANNEL-TAB ACTUATOR -----	1	
		ATTACHING PARTS -----		
-39	AN3-5	BOLT -----	1	
-40	NAS74A3-004	BUSHING -----	1	
-41	AN320-3	NUT -----	2	
-42	MS24665-132	PIN-COTTER -----	2	
-43	AN3-6	BOLT -----	1	
		*-----		
-44	0430004-10	TIP-ELEVATOR -----	2	
		ATTACHING PARTS -----		
-45	S1021Z8-6	SCREW -----	8	
		*-----		
NOTE. *WHEN INITIALLY ORDERING THIS PART FOR AIRCRAFT SERIALS 15284651 THRU 15285833 F15201891, F15201892, F15201894 THRU F15201943, A1520956 THRU A1521025 & FA1520378 THRU FA1520387. YOU MUST ALSO ORDER ONE AN173-11A BOLT, TWO 0432013-1 BUSHINGS & ONE MS21044N3 NUT. NOTE. **WHEN INITIALLY REPLACING THIS PART ALSO REPLACE OTHER PART MARKED **. NOTE. *WHEN INITIALLY ORDERING THIS PART ALSO ORDER AN3-7A BOLT & MS21044N3 NUT. A---152 SERIAL 15279406 THRU 15284355 F152 SERIAL F15201429 THRU F15201828 A152 SERIAL A1520735 THRU A1520940 FA152 SERIAL FA1520337 THRU FA1520372 B---152 SERIAL 15284356 THRU 15285833 F152 SERIAL F15201829 THRU F15201943 A152 SERIAL A1520941 THRU A1521025 FA152 SERIAL FA1520373 THRU FA1520387 C---152 SERIAL 15279406 THRU 15284541 F152 SERIAL F15201429 THRU F15201828 A152 SERIAL A1520735 THRU A1520943 FA152 SERIAL FA1520337 THRU FA1520372 D---152 SERIAL 15284542 THRU 15285833 F152 SERIAL F15201829 THRU F15201943 A152 SERIAL A1520944 THRU A1521025 FA152 SERIAL FA1520373 THRU FA1520387 E---152 SERIAL 15284542 THRU 15284650 F152 SERIAL F15201829 THRU F15201890, F15201893 A152 SERIAL A1520944 THRU A1520955 FA152 SERIAL FA1520373 THRU FA1520377 F---152 SERIAL 15270406 THRU 15284650 F152 SERIAL F15201429 THRU F15201890, F15201893 A152 SERIAL A1520735 THRU A1520955 FA152 SERIAL FA1520337 THRU FA1520377 G---152 SERIAL 15284651 THRU 15285833 F152 SERIAL F15201891, F15201892, F15201894 THRU F15201943 A152 SERIAL A1520956 THRU A1521025 FA152 SERIAL FA1520378 THRU FA1520387 H---152 SERIAL 15284542 THRU 15285833 F152 SERIAL F15201829 THRU F15201943 A152 SERIAL A1520944 THRU A1521025 FA152 SERIAL FA1520373 THRU FA1520387 J---152 SERIAL 15279406 THRU 15285833 F152 SERIAL F15201429 THRU F15201943 A152 SERIAL A1520735 THRU A1521025 FA152 SERIAL FA1520337 THRU FA1520387				

152 SERIAL 15285834 & ON
F152 SERIAL F15201944 & ON
A152 SERIAL A1521026 & ON
FA152 SERIAL FA1520388 & ON

86

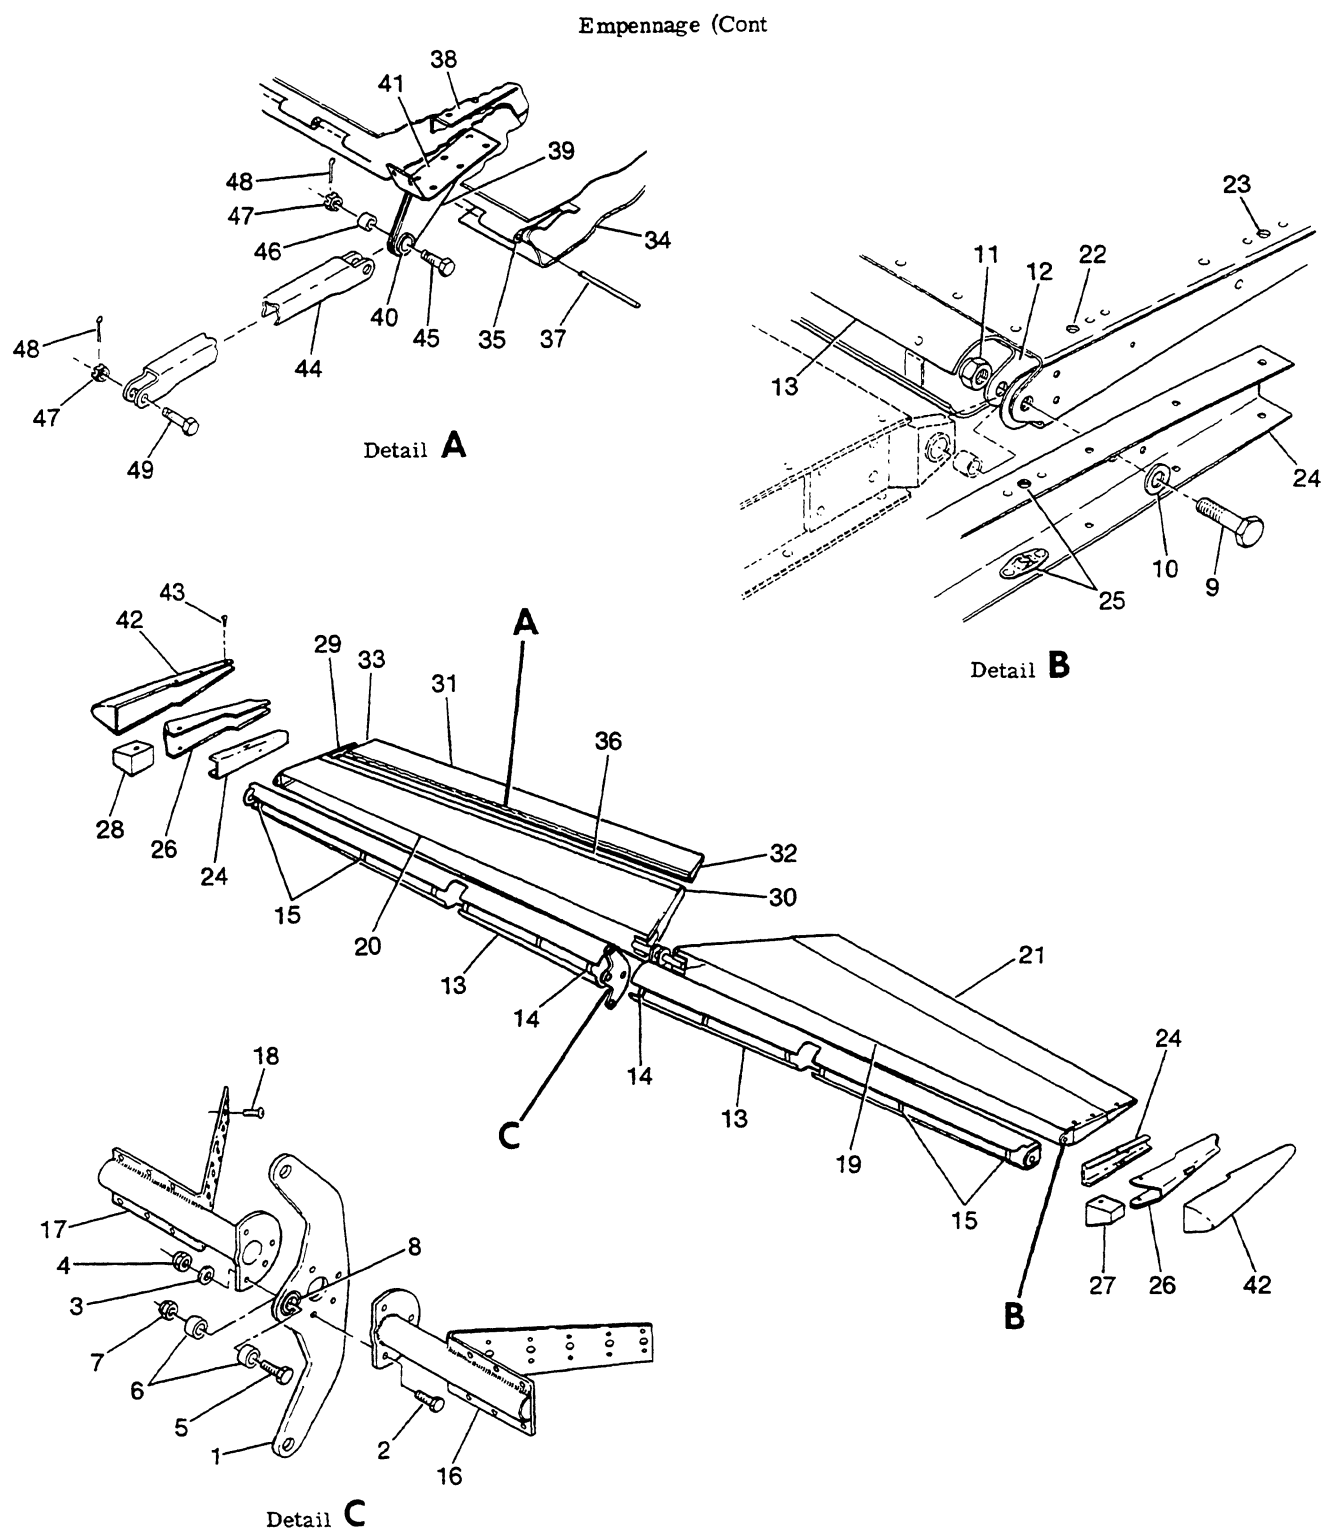

152 & A152 Parts Catalog


FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
21A-		ELEVATOR INSTALLATION -----	NP	A
- 1	0432012-4	BELLCRANK ASSY-ELEVATOR -----	1	
		ATTACHING PARTS -----		
- 2	AN3-5A	BOLT -----	4	
- 3	AN960-10	WASHER -----	4	
- 4	MS21044N3	NUT -----	4	
- 5	AN173-11A	BOLT -----	1	
- 6	0432013-1	BUSHING -----	2	
- 7	MS21044N3	NUT -----	1	
		---*---		
- 8	S2015-3	BEARING -----	1	
	0432001-34	ELEVATOR ASSY-LH -----	1	
	0432020-6	ELEVATOR ASSY-RH -----	1	
		ATTACHING PARTS -----		
- 9	AN4-7A	BOLT -----	1	
-10	AN960-416	WASHER -----	1	
-11	MS21042L4	NUT -----	1	
		---*---		
-12	0432172-1	BRACKET-ELEVATOR HINGE -----	1	
-13	0432171-1	SPAR-ELEVATOR -----	1	
-14	0534126-1	CLIP -----	2	
-15	0534126-4	CLIP -----	4	
-16	0434155-1	TUBE ASSY-TORQUE LH -----	1	
-17	0434155-2	TUBE ASSY-TORQUE RH -----	1	
		ATTACHING PARTS -----		
-18	AN520-10R7	SCREW -----	5	
	NAS680A3K	NUTPLATE -----	5	
		---*---		
-19	0432001-23	SKIN-ELEVATOR LH -----	1	
-20	0432001-22	SKIN-ELEVATOR RH -----	1	
	0432001-42	DOUBLER RH ONLY -----	1	
-21	0432001-34	SKIN-ELEVATOR TRAILING EDGE LH -----	1	
-22	S1862-2A	NUTPLATE -----	2	
-23	S1863-3A	NUTPLATE -----	4	
-24	0432174-1	RIB ASSY -----	1	
-25	S1863-3A	NUTPLATE -----	2	
-26	0431001-30	CHANNEL -----	1	
-27	0433134-3	WEIGHT-ELEVATOR BALANCE LH -----	1	
-28	0433134-6	WEIGHT-ELEVATOR BALANCE RH -----	1	
		ATTACHING PARTS -----		
	AN525-832R8	SCREW -----	2	
		---*---		
-29	0432001-57	RIB ASSY RH ONLY -----	1	
	S1863-3A	NUTPLATE -----	2	
-30	0432001-33	STRIP-TAB HINGE REINFORCEMENT RH ONLY -----	1	
-31	0432020-7	TAB ASSY-ELEVATOR TRIM RH ONLY -----	1	
-32	0432001-35	RIB-TRIM TAB -----	1	
-33	0432001-36	RIB-TRIM TAB -----	1	
-34	0432001-26	SKIN-TRIM TAB -----	1	
-35	0432001-27	HINGE HALF -----	1	
-36	0432001-28	HINGE HALF -----	1	
-37	MS20253P2-44.13	PIN-HINGE -----	1	
-38	0432001-30	RIB-HORN REINFORCEMENT -----	1	
-39	0412527-1	HORN ASSY-TRIM TAB -----	1	
-40	S1004-15B	BEARING -----	1	
-41	0412527-2	PLATE-TRIM TAB HORN -----	1	
-42	0430004-10	TIP-ELEVATOR -----	1	
		ATTACHING PARTS -----		
-43	S1021Z8-6	SCREW -----	8	
		---*---		
-44	0432011-1	CHANNEL-TAB ACTUATOR -----	1	
		ATTACHING PARTS -----		
-45	AN3-5	BOLT -----	1	
-46	NAS74A3-004	BUSHING -----	1	
-47	AN320-3	NUT -----	2	
-48	MS24665-132	PIN-COTTER -----	2	
-49	AN3-6	BOLT -----	1	
		---*---		
		A---152 SERIAL 15285834 & ON F152 SERIAL F15201944 & ON A152 SERIAL A1521026 & ON FA152 SERIAL FA1520388 & ON		

152 & A152 Parts Catalog


FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE	
		1 2 3 4 5 6 7			
22 -		FIN INSTALLATION -----	NP		
	0431032-1	FIN ASSEMBLY -----	1	C	
	0431032-23	FIN ASSEMBLY -----	1	E	
	0431032-2	FIN ASSEMBLY AEROBAT -----	1	D	
	0431032-24	FIN ASSEMBLY AEROBAT -----	1	F	
		ATTACHING PARTS			
	- 1	AN4-6A	BOLT -----	2	
		AN960-416	WASHER ONE UNDER BOLT & ONE UNDER NUT -----	4	
	- 2	MS21042L4	NUT -----	2	
	- 3	AN4-6A	BOLT -----	4	G
	- 3A	AN4-10A	BOLT -----	4	H
		AN960-416	WASHER -----	4	H
		MS21042L4	NUT -----	4	H
		-----*			
	- 4	0431032-3	SKIN -----	1	A
		0431032-4	SKIN AEROBAT -----	1	B

152 & A152 Parts Catalog


Empennage (Cont)

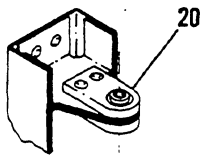

Detail **A**

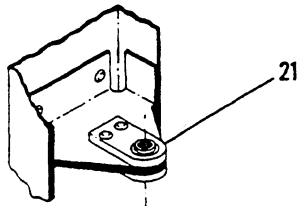

Detail **B**

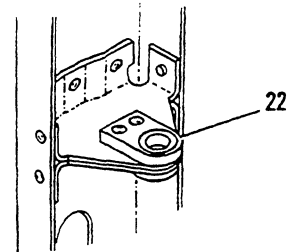

Detail **C**

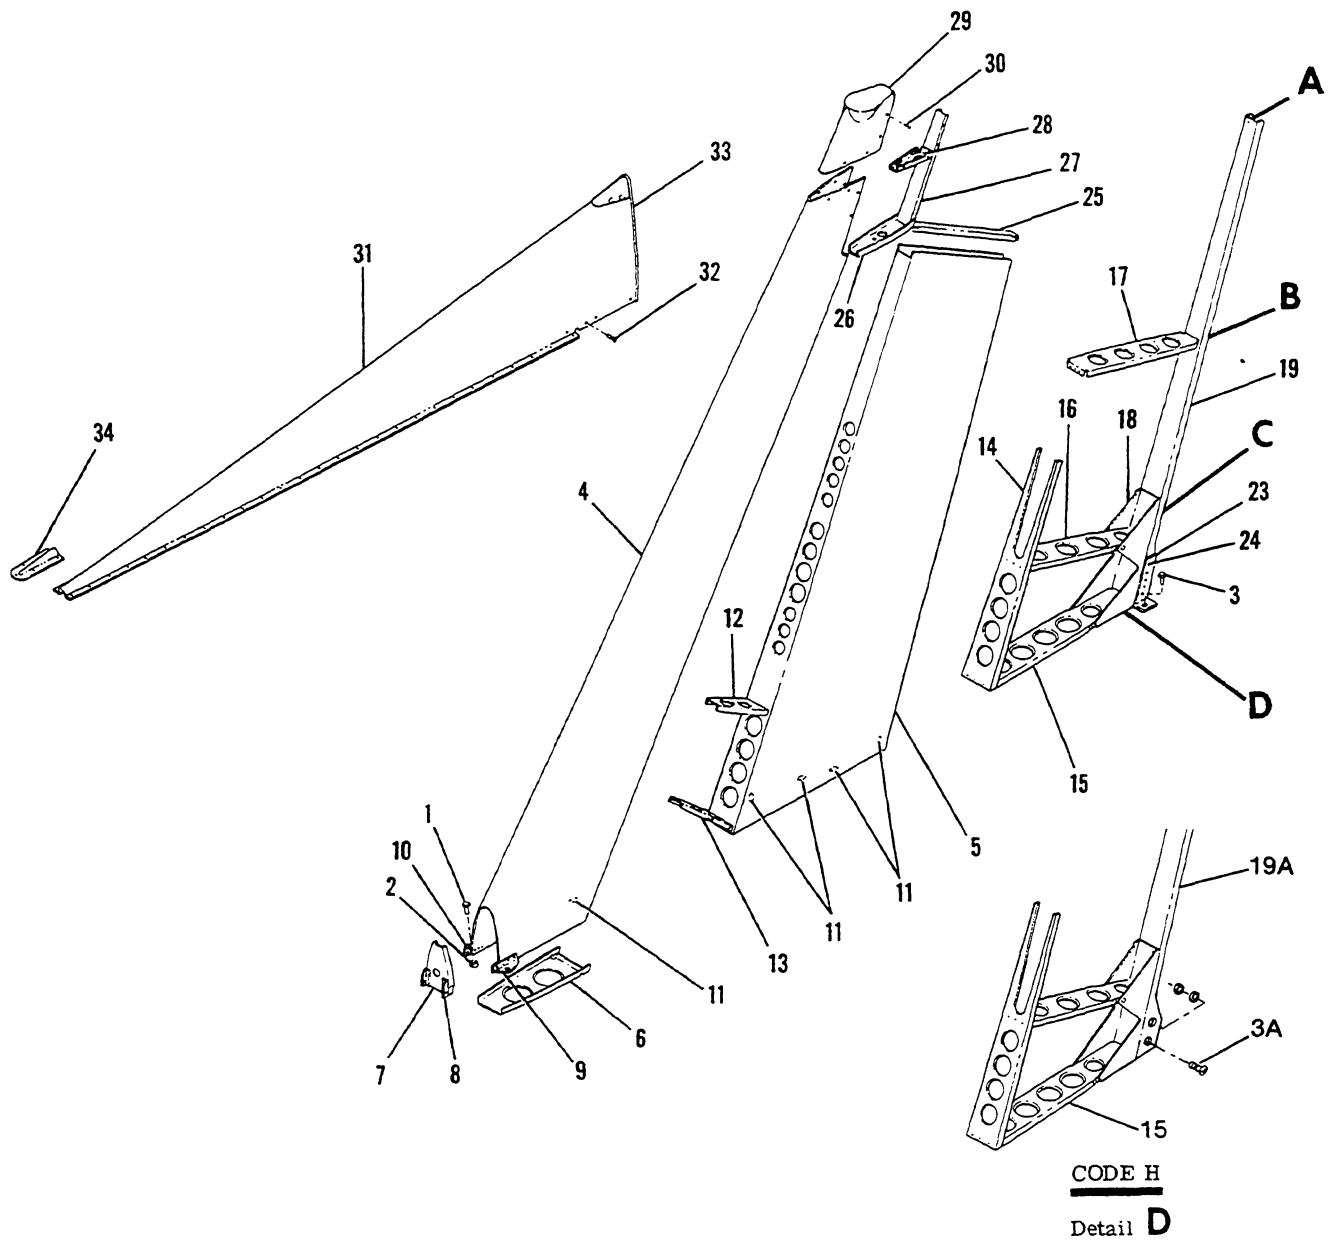


Figure 22. Fin Installation

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION							UNITS PER ASSY	USABLE ON CODE
		1	2	3	4	5	6	7		
22 - 5	0431032-5	SKIN	-----	-----	-----	-----	-----	-----	1	G H
	0431032-26	SKIN	-----	-----	-----	-----	-----	-----	1	
- 6	0431004-10	RIB	-----	-----	-----	-----	-----	-----	1	B
- 7	0431032-13	RIB ASSY	-----	-----	-----	-----	-----	-----	1	
- 8	0431032-15	BRACKET-LH	-----	-----	-----	-----	-----	-----	1	
	0431032-16	BRACKET-RH	-----	-----	-----	-----	-----	-----	1	
- 9	0431034-1	FITTING LH-FIN ATTACH	FWD	-----	-----	-----	-----	-----	1	
-10	0431034-2	FITTING RH-FIN ATTACH	FWD	-----	-----	-----	-----	-----	1	
-11	S1863-2A	NUTPLATE	-----	-----	-----	-----	-----	-----	10	
-12	0431004-11	RIB	-----	-----	-----	-----	-----	-----	1	
-13	0431022-2	RIB	-----	-----	-----	-----	-----	-----	1	
-14	0431004-18	SPAR-REINFORCEMENT	-----	-----	-----	-----	-----	-----	1	
-15	0431004-12	RIB	-----	-----	-----	-----	-----	-----	1	
-16	0431004-13	RIB	-----	-----	-----	-----	-----	-----	1	
-17	0431004-14	RIB	-----	-----	-----	-----	-----	-----	1	
-18	0431004-48	CHANNEL	-----	-----	-----	-----	-----	-----	1	
-19	0431032-17	SPAR ASSY	-----	-----	-----	-----	-----	-----	1	
-19A	0431032-19	SPAR ASSY	-----	-----	-----	-----	-----	-----	1	
-20	0431033-1	HINGE HALF ASSY	UPPER	-----	-----	-----	-----	-----	1	
-21	0431010-7	HINGE HALF ASSY	MIDDLE	-----	-----	-----	-----	-----	1	
-22	0431010-1	HINGE HALF ASSY	LOWER	-----	-----	-----	-----	-----	1	
-23	0431009-3	FITTING	-----	-----	-----	-----	-----	-----	2	
		ATTACHING PARTS	-----	-----	-----	-----	-----	-----		
-24	NAS464P3A7	BOLT	-----	-----	-----	-----	-----	-----	5	
	AN960-10	WASHER	-----	-----	-----	-----	-----	-----	5	
	MS21043-3	NUT	-----	-----	-----	-----	-----	-----	5	
		---*---	-----	-----	-----	-----	-----	-----		
-25	0431032-9	RIB	-----	-----	-----	-----	-----	-----	1	
-26	0431032-8	RIB	-----	-----	-----	-----	-----	-----	1	
-27	0431032-6	SPAR ASSY	-----	-----	-----	-----	-----	-----	1	
	S1862-1A	NUTPLATE	-----	-----	-----	-----	-----	-----	4	
-28	0431032-10	RIB ASSY	-----	-----	-----	-----	-----	-----	1	
	S1862-1A	NUTPLATE	-----	-----	-----	-----	-----	-----	4	
	NAS697A06L	NUTPLATE	-----	-----	-----	-----	-----	-----	1	
-29	0430011-1	CAP-FIN	-----	-----	-----	-----	-----	-----	1	
		ATTACHING PARTS	-----	-----	-----	-----	-----	-----		
-30	S1021Z6-4	SCREW	-----	-----	-----	-----	-----	-----	8	
		---*---	-----	-----	-----	-----	-----	-----		
-31	0431023-1	DORSAL ASSY	-----	-----	-----	-----	-----	-----	1	
	0431023-7	DORSAL ASSY	-----	-----	-----	-----	-----	-----	1	
		ATTACHING PARTS	-----	-----	-----	-----	-----	-----		
-32	S1021Z6-6	SCREW	-----	-----	-----	-----	-----	-----	8	
		---*---	-----	-----	-----	-----	-----	-----		
-33	S1611-1	SEAL-20.00 IN LG	BKI	REF S1611-1-20.0	-----	-----	-----	-----	1	
-34	0431024-1	FAIRING-DORSAL FIN TIP	-----	-----	-----	-----	-----	-----	1	
A---152 SERIAL 15279406 & ON F152 SERIAL F15201429 & ON										
B---A152 SERIAL A1520735 & ON FA152 SERIAL FA1520337 & ON										
C---152 SERIAL 15279406 THRU 15284541 F152 SERIAL F15201429 THRU F15201808										
D---A152 SERIAL A1520735 THRU A1520943 FA152 SERIAL FA1520337 THRU FA1520372										
E---152 SERIAL 15284542 & ON F152 SERIAL F15201829 & ON										
F---A152 SERIAL A1520944 & ON FA152 SERIAL FA1520373 & ON										
G---152 SERIAL 15279406 THRU 15284541 F152 SERIAL F15201429 THRU F15201828 A152 SERIAL A1520735 THRU A1520943 FA152 SERIAL FA1520337 THRU FA1520372										
H---152 SERIAL 15284542 & ON F152 SERIAL F15201829 & ON A152 SERIAL A1520944 & ON FA152 SERIAL FA1520373 & ON										
J---152 SERIAL 15279406 THRU 15285030 F152 SERIAL F15201429 THRU F15201893 A152 SERIAL A1520735 THRU A1520973 FA152 SERIAL FA1520348 THRU FA1520377										
K---152 SERIAL 15285031 & ON F152 SERIAL F15201894 & ON A152 SERIAL A1520974 & ON FA152 SERIAL FA1520378 & ON										

152 & A152 Parts Catalog

Empennage (Cont)

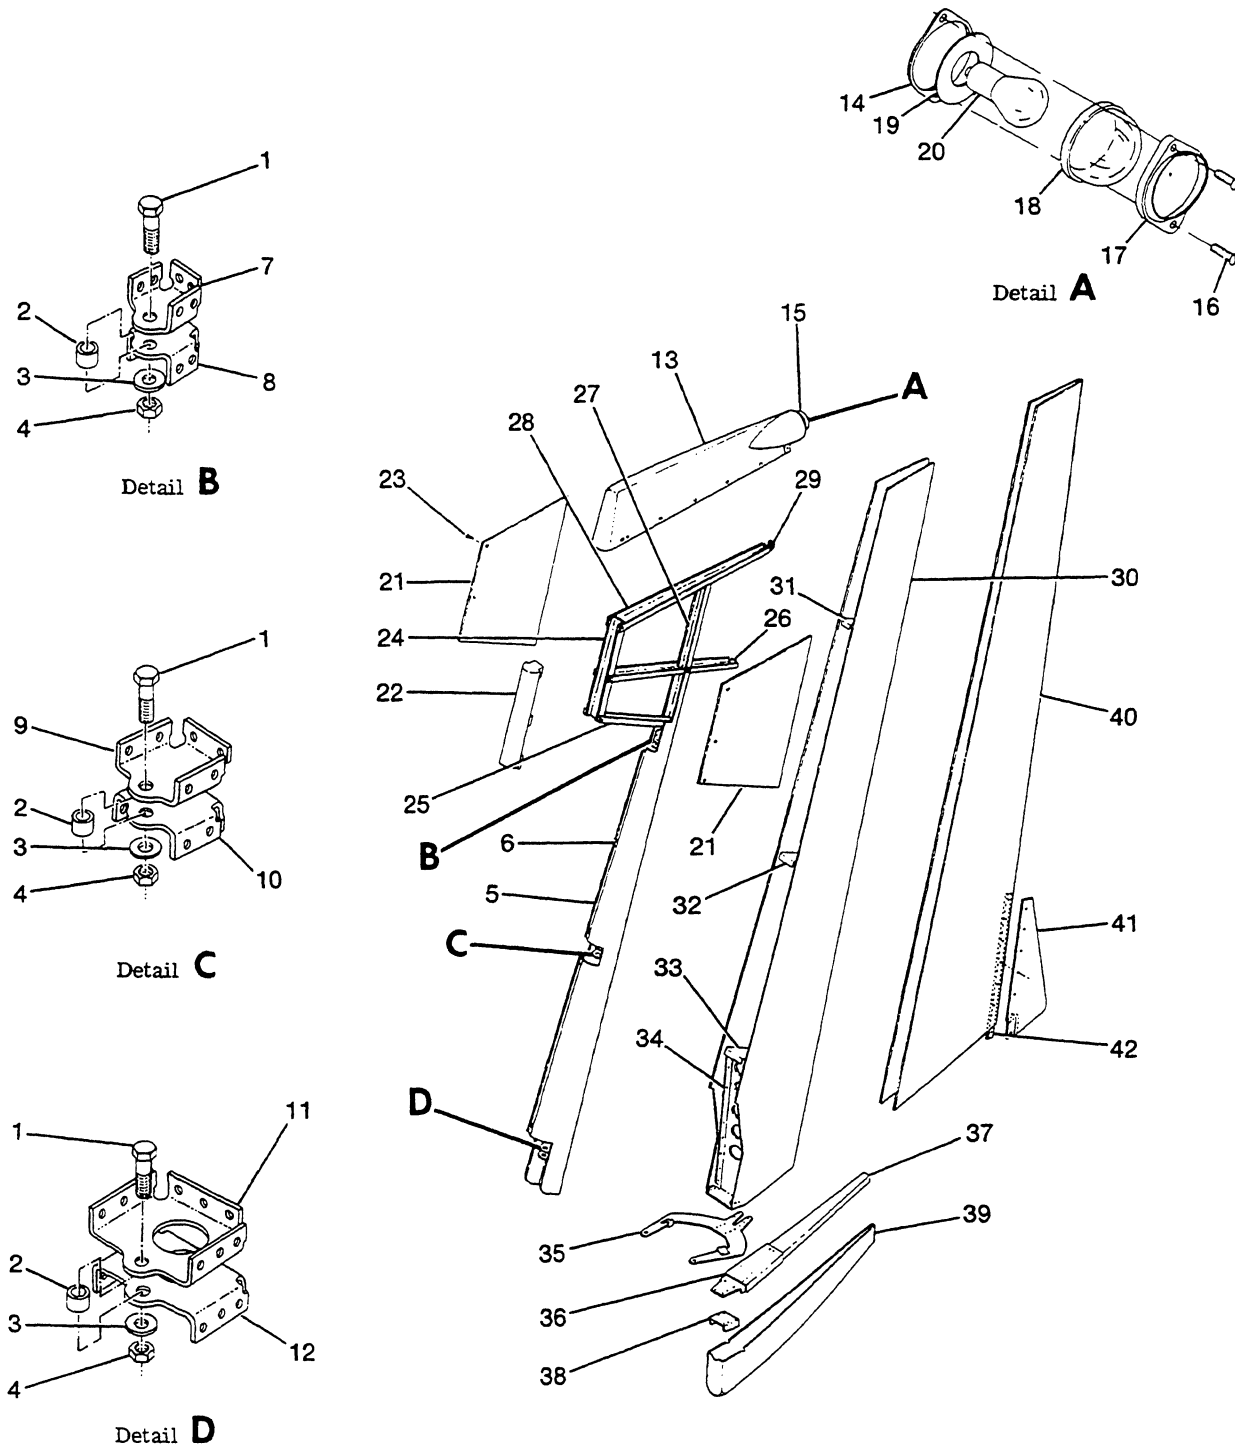



Figure 23. Rudder Assembly

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
23 -	0433010-1	RUDDER ASSEMBLY -----	1	A B
	0433010-15	RUDDER ASSEMBLY -----	1	
		ATTACHING PARTS -----		
- 1	AN4-10A	BOLT -----	3	
- 2	0532104	BUSHING -----	3	
- 3	AN960-416L	WASHER -----	3	
- 4	MS21042L4	NUT -----	3	
		---*---		
- 5	0433010-6	SKIN -----	1	
- 6	0534126-6	CLIP -----	5	
- 7	0431028-6	BRACKET-UPPER -----	1	
- 8	0431028-5	BRACKET-UPPER -----	1	
- 9	0431028-4	BRACKET-MIDDLE -----	1	
-10	0431028-3	BRACKET-MIDDLE -----	1	
-11	0431028-2	BRACKET-LOWER -----	1	
-12	0431028-1	BRACKET-LOWER -----	1	
-13	0430011-2	CAP ASSY-RUDDER -----	1	
		ATTACHING PARTS -----		
	CR763-4	RIVET CY -----	10	
		---*---		
-14	0433007	MOUNT -----	1	
	AN960PD2	WASHER -----	5	
-15	C622001-0102	LIGHT ASSY-TAIL -----	1	
		ATTACHING PARTS -----		
-16	AN515-4R6	SCREW -----	2	
	AN515-8R6	SCREW GROUND WIRE -----	1	
		---*---		
-17	C622001-0104	RETAINER-LENS -----	1	
-18	A4513-1	LENS-TAIL LIGHT CLEAR GMC -----	1	
-19	A2109-3	GASKET GMC -----	1	
-20	MS35478-307	LAMP-TAIL -----	1	
-21	0433010-5	SKIN -----	2	
-22	0433139-1	WEIGHT ASSY-RUDDER BALANCE -----	1	
-23	AN525-832R8	SCREW -----	6	
-24	0433010-4	RIB -----	1	
-25	0433010-2	RIB -----	1	
-26	0433010-10	RIB -----	1	
-27	0433010-9	SPAR-STUB -----	1	
-28	0433010-3	RIB ASSY -----	1	
-29	0433010-12	BRACKET -----	1	
	NAS1067A08	NUTPLATE -----	1	
-30	0433010-7	SKIN -----	1	
-31	0431004-26	RIB -----	1	
-32	0431004-37	RIB -----	1	
-33	0431004-25	RIB -----	1	
-34	0431004-24	RIB -----	1	
-35	0431007-4	HORN ASSY -----	1	A B
	0433140-1	HORN ASSY -----	1	
	S1004-15B	BEARING -----	2	
-36	0431004-22	CHANNEL -----	1	
-37	0431004-23	RIB -----	1	
-38	0431004-21	CHANNEL -----	1	
-39	0431005-1	BUTT-RUDDER -----	1	
-40	0433010-8	SKIN -----	1	
-41	0433137-1	TAB-RUDDER TRIM -----	1	
-42	0433137-2	SPACER -----	1	
A---152 SERIAL 15279406 THRU 15282336, 15282338 & 15282340 F152 SERIAL F15201429 THRU F15201578 A152 SERIAL A1520735 THRU A1520821 & A1520823 FA152 SERIAL FA1520337 THRU FA1520357 B---152 SERIAL 15282337, 15282339, 15282341 & ON F152 SERIAL F15201579 & ON A152 SERIAL A1520822, A1520824 & ON FA152 SERIAL FA1520358 & ON				

152 & A152 Parts Catalog

Fuselage

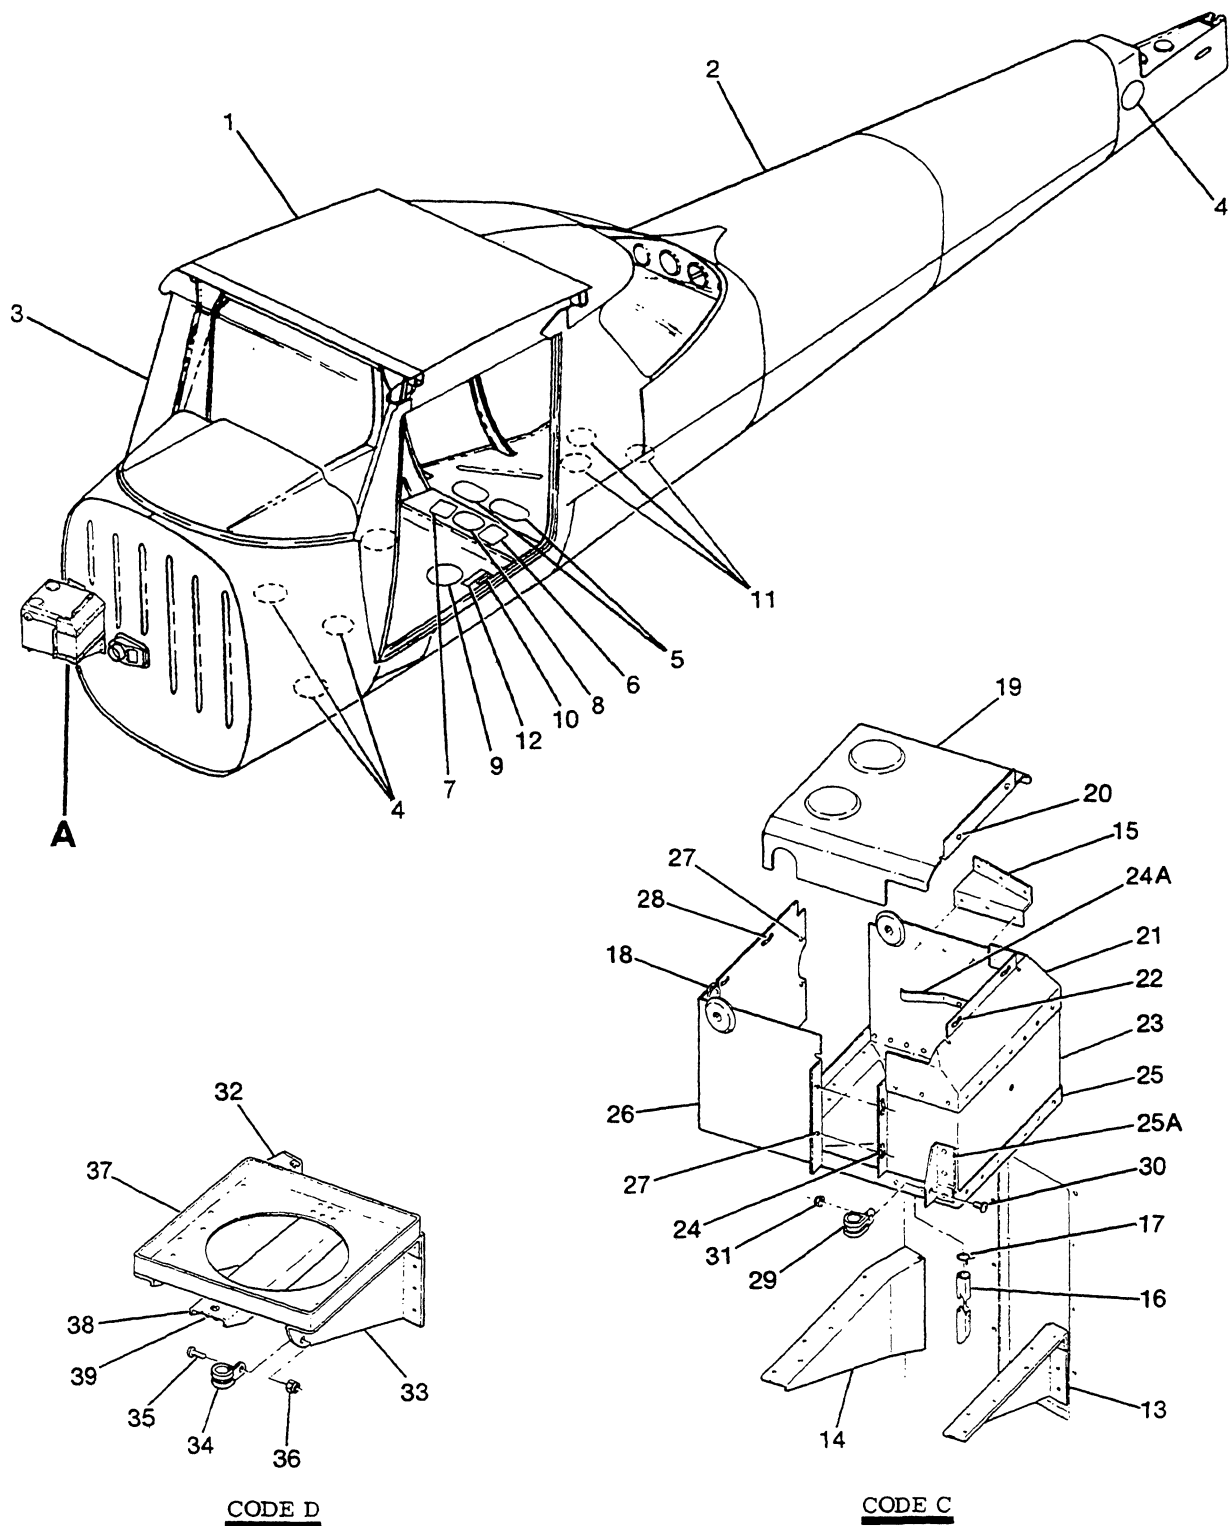

Detail **A**

Figure 24. Fuselage Assembly

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
24 -		FUSELAGE ASSEMBLY -----	NP	
- 1	SEE FIG 25	FRONT & CENTER SECTION-FUSELAGE -----	1	
- 2	SEE FIG 30	TAILCONE ASSY-FUSELAGE -----	1	
- 3	SEE FIG 32	WINDSHIELD INSTALLATION -----	1	
- 4	S225-1	PLATE-INSPECTION -----	5	
	S1021Z8-8	ATTACHING PARTS -----		
		SCREW -----	3	
- 5	0412061-1	PLATE-INSPECTION -----	2	
	S1021Z8-8	ATTACHING PARTS -----		
		SCREW -----	6	
- 6	0713173-5	PLATE-ACCESS LH -----	1	
- 7	0713173-6	PLATE-ACCESS RH -----	1	
	S1021Z8-8	ATTACHING PARTS -----		
		SCREW -----	6	
- 8	0410229-1	PLATE-INSPECTION -----	1	
	S1021Z8-8	ATTACHING PARTS -----		
		SCREW -----	3	
- 9	0411371	COVER-SEAT PAN INSPECTION -----	2	
	S1021Z8-8	ATTACHING PARTS -----		
		SCREW -----	6	
-10	0713047	PLATE-FINISH & TRIM -----	1	
	AN535-2-3	ATTACHING PARTS -----		
		SCREW -----	2	
-11	S225-1	PLATE-INSPECTION -----	3	
	S1878-1	ATTACHING PARTS -----		
		STUD -----	3	
-12		NAMEPLATE-AIRCRAFT IDENTIFICATION -----	NP	
-13	0413561-1	BATTERY BOX INSTL -----	NP	
-14	0413561-2	SUPPORT BRACE-INBD -----	1	
	NAS696A3	SUPPORT BRACE-OUTBD -----	1	
-15	0413561-3	NUTPLATE -----	2	
-16	S1071-4	SUPPORT BRACE-BACK -----	1	
-17	S1494-8	HOSE-16.00 IN LG BKT -----	1	
-18	S1908-7	CLAMP -----	1	
	0413564-14	PLUG BUTTON -----	1	
	0413564-39	BOX ASSY-BATTERY WEU 0413564-39 -----	1	
-19		BOX ASSY-BATTERY -----	1	
	0413564-29	LID ASSY-BATTERY BOX FSO 0413564-39 -----	NP	
-20	S1115-30	LID ASSY-BATTERY BOX -----	1	
	S1115-9	STUD -----	4	
		RING -----	4	
	0413564-38	BOX SUB ASSY-BATTERY FSO 0413564-39 -----	NP	
-21		BOX SUB ASSY-BATTERY -----	1	
	0413564-31	CAP ASSY-BATTERY BOX -----	NP	
-22	S1115-19	CAP ASSY-BATTERY BOX -----	1	
-23		RECEPTACLE -----	2	
	0413564-35	BACK ASSY-BATTERY BOX -----	NP	
-24	S1115-19	BACK ASSY-BATTERY BOX -----	1	
-24A	0513470-1	RECEPTACLE -----	4	
-25	0413564-12	SPRING -----	2	
-25A	0413539-1	TRAY ASSY-BATTERY BOX -----	1	
-26		BRACKET -----	1	
	0413564-33	FRONT ASSY-BATTERY BOX FSO 0413564-39 -----	NP	
-27	S1115-30	FRONT ASSY-BATTERY BOX -----	1	
	S1115-9	STUD -----	4	
-28	S1115-19	RING -----	4	
	0413584-1	RECEPTACLE -----	2	
-29	MS21919D68	LINER-BATTERY BOX FRONT -----	1	
-30	MS21043-3	CLAMP -----	1	
-31	NAS221-5	NUT -----	1	
		SCREW -----	1	
CONTINUED ON NEXT PAGE				

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION							UNITS PER ASSY	USABLE ON CODE
		1	2	3	4	5	6	7		
24 -		SUPPORT INSTL-MANIFOLD BATTERY -----							NP	D
-32	0413581-6	SUPPORT BRACE-OUTBD -----							1	D
-33	0413581-7	SUPPORT BRACE-INBD -----							1	D
-34	MS21919DG8	CLAMP -----							1	D
-35	AN515-10R8	SCREW -----							1	D
-36	MS21044N3	NUT -----							1	D
	0413581-2	TRAY ASSY-BATTERY -----							1	D
-37	0413581-3	TRAY-BATTERY -----							1	D
-38	0413581-4	SUPPORT-TIE DOWN -----							1	D
-39	NAS687A4	NUTPLATE -----							2	D
		A---152 SERIAL 15279406 THRU 15280459 F152 SERIAL F15201429 THRU F15201439 A152 SERIAL A1520735 THRU A1520763 FA152 SERIAL FA1520337 THRU FA1520337								
		B---152 SERIAL 15280460 THRU 15283591 F152 SERIAL F15201440 THRU F15201673 A152 SERIAL A1520764 THRU A1520878 FA152 SERIAL FA1520338 THRU FA1520357								
		C---152 SERIAL 15279406 THRU 15283591 F152 SERIAL F15201429 THRU F15201673 A152 SERIAL A1520735 THRU A1520878 FA152 SERIAL FA1520337 THRU FA1520357								
		D---152 SERIAL 15283592 & ON F152 SERIAL F15201674 & ON A152 SERIAL A1520879 & ON FA152 SERIAL FA1520358 & ON								

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
25 -		FRONT & CENTER SECTION ASSY-FUSELAGE -----	NP	
- 1	SEE FIG 27 & 27A	FRONT SECTION ASSY-FUSELAGE -----	1	
- 2	0413488-1	RETAINER -----	1	
		CABIN TOP ASSY-SKYLIGHT -----	NP	
	0413492-201	CABIN TOP ASSY -----	1	
- 3	0413492-17	SKIN-CABIN TOP SKYLIGHT WEU 0413492-19 -----	1	A
	0413492-19	SKIN-CABIN TOP SKYLIGHT -----	1	H
	0413492-18	SKIN-CABIN TOP WEU 0413492-20 -----	1	J
	0413492-20	SKIN-CABIN TOP -----	1	F
- 4	0411144-1	WINDOW-SKYLIGHT BRONZE -----	2	G
- 5	0411174	FRAME -----	2	
- 6	S1055-1	CHANNEL-53.25 IN LG BKI REF S1051-1-53.25 -----	2	
- 7	0411175	STIFFENER -----	2	
- 8	0411175-8	STIFFENER -----	1	
- 9	S1863-3	NUTPLATE -----	2	
-10	S1862-2	NUTPLATE -----	8	
-11	0511484-2	BRACKET-INSTRUMENT LIGHT CONSOLE -----	1	
-12	0414014-2	BRACKET-SKYLIGHT -----	4	
-13	0414014-2	BRACKET-SKYLIGHT -----	12	
-14	0513426-4	SUPPORT ASSY-SPEAKER & INSTRUMENT PANEL LIGHTS -----	2	C
	NAS696A3	NUTPLATE -----	2	C
	0413105-1	SUPPORT ASSY-SPEAKER & INSTRUMENT PANEL LIGHTS -----	1	C
	NAS696A3	NUTPLATE -----	4	D
-15	1210032-5	DAMPENER ASSY-ANTENNA VIBRATION LH -----	1	
	1210032-6	DAMPENER ASSY-ANTENNA VIBRATION RH -----	1	
-16	0413327-31	RIB ASSY-FUSELAGE CENTER SECTION LH -----	1	A
	0413327-33	RIB ASSY-FUSELAGE CENTER SECTION LH -----	1	B
-17	0413327-30	RIB ASSY-FUSELAGE CENTER SECTION RH -----	1	A
	0413327-32	RIB ASSY-FUSELAGE CENTER SECTION RH -----	1	B
-18	NAS557-10A	GROMMET -----	1	
	S1050-1	GROMMET-4.32 IN LG BKI FUEL VENT LINE HOLE -----	1	
-19	0410204-1	FILLET-DOOR JAMB UPPER FORWARD -----	2	
-20	0410126-1	FILLET-DOOR JAMB LOWER FORWARD -----	2	
	0410120-2	FILLER-DOOR JAMB LOWER FORWARD -----	2	
-21	0410132-3	SILL-DOOR LOWER LH -----	1	
-22	0410132-4	SILL-DOOR LOWER RH -----	1	
-23	0410239-2	SUPPORT-DOOR SILL LOWER RH -----	1	
	0410239-1	SUPPORT-DOOR SILL LOWER LH -----	1	
-24	0410135-3	FILLET-DOOR SILL LOWER REAR LH -----	1	
-25	0410135-4	FILLET-DOOR SILL LOWER REAR RH -----	1	
-26	0410133-2	STRAP-REAR DOOR JAMB -----	6	
	NAS42DD4-5	SPACER BETWEEN STRAP & DOOR JAMB -----	6	
-27	0410131-1	GUSSET-DOOR SILL UPPER REAR -----	2	
	0410205-1	FILLER-DOOR SILL UPPER REAR -----	2	
-28	SEE FIG 30	REAR DOORPOST ASSY -----	1	
-29	0410137-1	JAMB-DOOR REAR LH -----	1	
-30	0410137-2	JAMB-DOOR REAR RH -----	1	
-31	0412066-1	CLUTCH ASSY-ROTARY DOOR LATCH LH -----	1	
-32	0412066-2	CLUTCH ASSY-ROTARY DOOR LATCH RH -----	1	
		ATTACHING PARTS -----		
-33	AN525-10R8	SCREW -----	2	
		-----*		
-34	S1438-12	GUIDE-DOOR LATCH -----	2	
		ATTACHING PARTS -----		
	NAS43DD3-9	SPACER -----	1	
	AN525-10R8	SCREW -----	1	
		-----*		
-35	0410127-2	STIFFENER-BULKHEAD RH -----	1	
	0410127-1	STIFFENER-BULKHEAD LH -----	1	
-36	0410247-2	BRACKET ASSY-SEAT BELT RH -----	1	
	0410247-1	BRACKET ASSY-SEAT BELT LH -----	1	
		ATTACHING PARTS -----		
	NAS220-6	SCREW -----	2	
	AN960-8	WASHER -----	2	
	MS21044N08	NUT -----	2	
		-----*		
	NAS680A4	NUTPLATE -----	1	
	NAS463WDD416	SHIM -----	1	
-37	0410246-2	DOUBLER-SEAT BELT BRACKET RH -----	1	
	0410246-1	DOUBLER-SEAT BELT BRACKET LH -----	1	

CONTINUED ON NEXT PAGE

152 & A152 Parts Catalog

Fuselage (Cont)

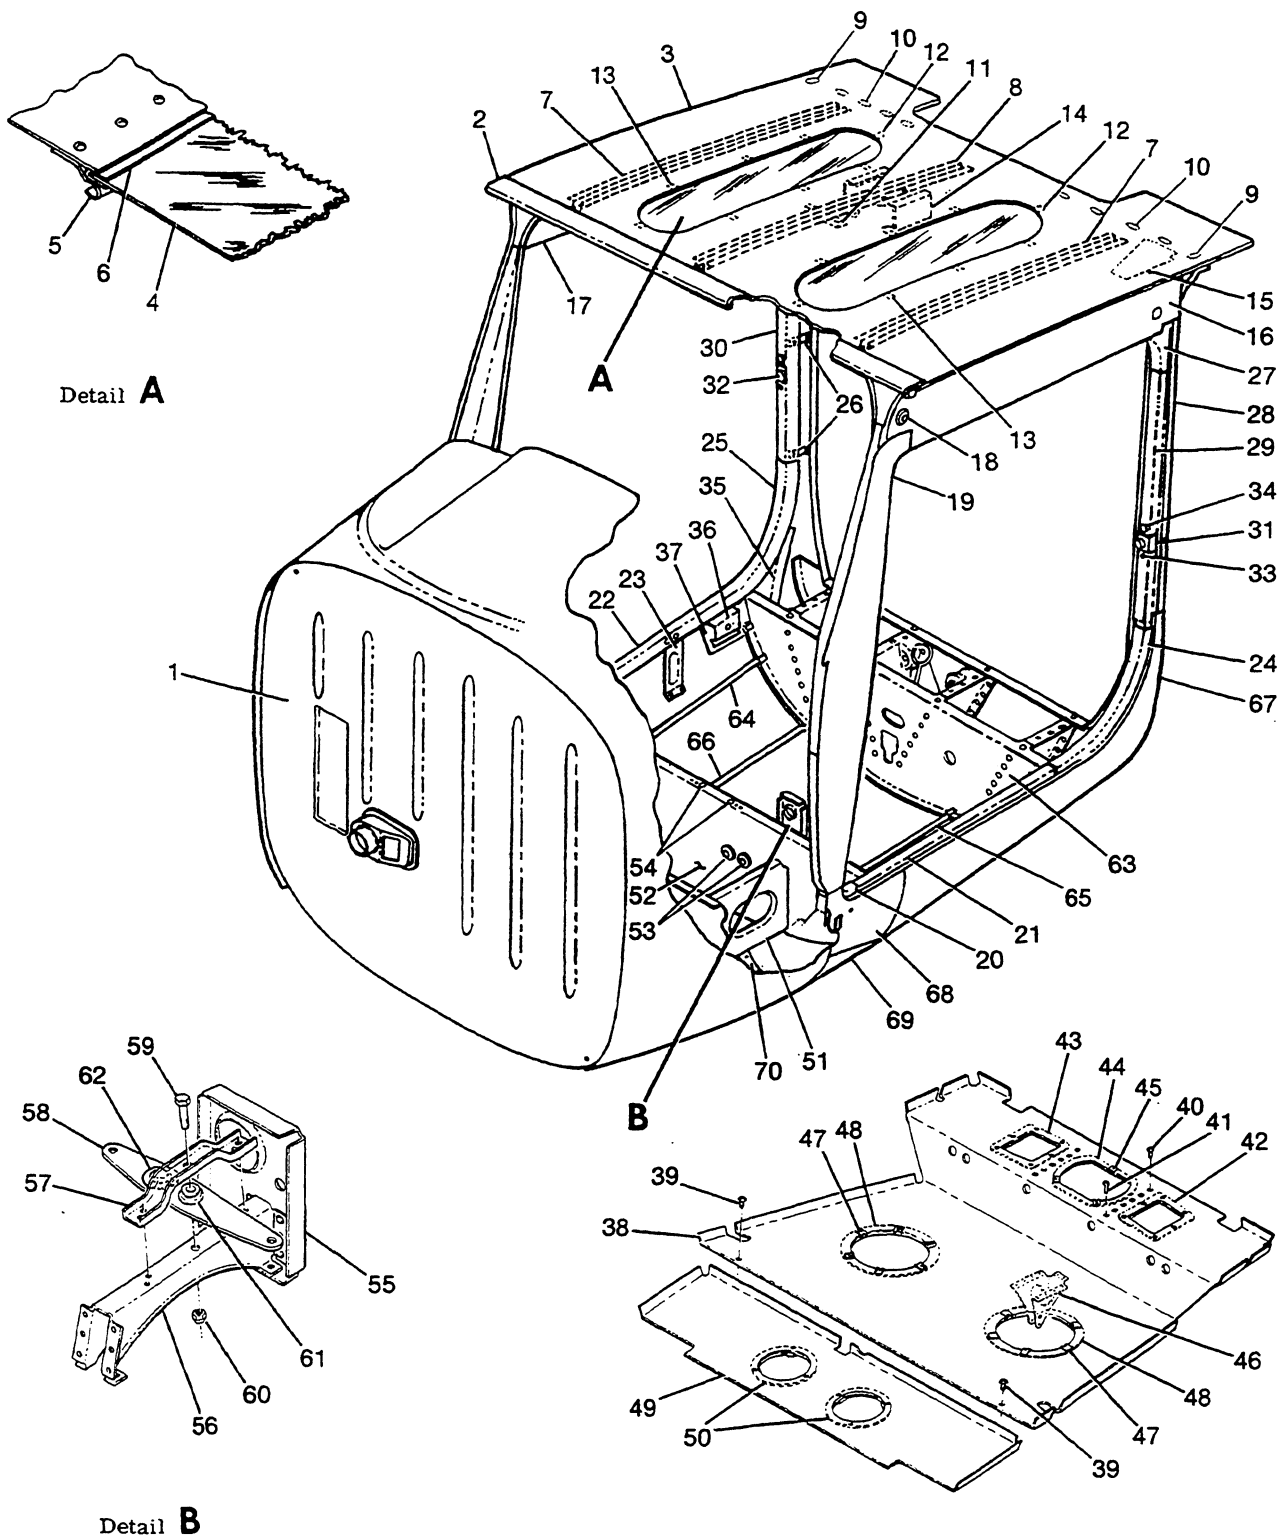


Figure 25. Fuselage Front & Center Section Assembly

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
25 -38	0410238-1	FLOORBOARD ASSY-STA 27.92 TO 56.69 ----- ATTACHING PARTS	1	
-39	NAS221-7	SCREW -----	2	
-40	NAS220-9	SCREW -----	10	
-41	NAS220-11	SCREW -----	2	
	AN960-8	WASHER -----	12	
	MS21044N08	NUT -----	12	
		-----*		
-42	0713173-1	DOUBLER ASSY-LH -----	1	
-43	0713173-2	DOUBLER ASSY-RH -----	1	
-44	0410229-2	DOUBLER -----	1	
-45	NAS395-14-3	NUT -----	3	
-46	0410234-1	BRACKET-TAB CONTROL PULLEY -----	1	
-47	NAS395-17-3	NUT -----	12	
-48	0411370	DOUBLER -----	2	
-49	0413410-5	FLOORBOARD ASSY-CENTER -----	1	A
	0413410-7	FLOORBOARD ASSY-CENTER -----	1	B
-50	S237-2P	DOUBLER ASSY -----	2	
	NAS395-14-3	NUT -----	3	
-51	0413497-1	BULKHEAD-BELLY LH -----	1	B
	0413497-2	BULKHEAD-BELLY RH -----	1	B
-52	0410237-1	BULKHEAD ASSY-CANTED STA 27.92 -----	1	
-53	MS35489-7	GROMMET -----	2	
	MS35489-20	GROMMET -----	1	
-54	NAS696A3	NUTPLATE -----	2	E
	0411958-6	SUPPORT & BELLCRANK ASSY -----	1	
-55	0410233-1	SUPPORT -----	1	
	0411288	BELLCRANK & BRACKET ASSY-ELEVATOR -----	1	
-56	0411289-1	BRACKET -----	1	
-57	0411290	BRACKET -----	1	
-58	0411258-1	BELLCRANK ASSY -----	1	
		ATTACHING PARTS		
-59	AN4-10A	BOLT -----	1	
-60	MS21042L4	NUT -----	1	
		-----*		
-61	4NCC910P	BEARING -----	1	
-62	MS27261KSP4	BEARING -----	1	
-63	SEE FIG 26	BULKHEAD ASSY-MAIN GEAR -----	1	
-64	0411953-3	STIFFENER-BELLY SKIN OUTBD RH -----	1	
	0411953-4	STIFFENER-BELLY SKIN OUTBD LH -----	1	
-65	0411953-6	STIFFENER-BELLY SKIN INBD LH -----	1	
-66	0411953-5	STIFFENER-BELLY SKIN INBD RH -----	1	
-67	0411126-5	SKIN-FUSELAGE STA 27.92 TO 56.69 -----	1	
		ATTACHING PARTS		
	AN515-8R8	SCREW -----	1	
	NAS220-10	SCREW -----	10	
	AN960-8	WASHER -----	11	
	MS21044N08	NUT -----	11	
		-----*		
-68	0411959-5	SKIN-FUSELAGE LH -----	1	
	0411959-6	SKIN-FUSELAGE RH -----	1	
-69	0411127-4	SKIN-FUSELAGE -----	1	A
	0411127-5	SKIN-FUSELAGE -----	1	B
-70	0413499-1	GUSSET-BELLY SKIN LH STA 20.50 -----	1	B
	0413499-2	GUSSET-BELLY SKIN RH STA 20.50 -----	1	B
A---152 SERIAL 15279406 & ON F152 SERIAL F15201429 & ON				
B---A152 SERIAL A1520735 & ON FA152 SERIAL FA1520337 & ON				
C---152 SERIAL 15279406 THRU 15280807 F152 SERIAL F15201429 THRU F15201498 A152 SERIAL A1520735 THRU A1520769 FA152 SERIAL FA1520337 THRU FA1520346				
D---152 SERIAL 15280808 & ON F152 SERIAL F15201499 & ON A152 SERIAL A1520770 & ON FA152 SERIAL FA1520347 & ON				
E---152 SERIAL 15282230 & ON F152 SERIAL F15201529 & ON A152 SERIAL A1520816 & ON FA152 SERIAL FA1520347 & ON				
CONTINUED ON NEXT PAGE				

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION							UNITS PER ASSY	USABLE ON CODE
		1	2	3	4	5	6	7		
25 -		F---152 SERIAL 15279406 THRU 15285934 F152 SERIAL F15201429 THRU F15201952 G---152 SERIAL 15285935 & ON F152 SERIAL F15201953 & ON H---152 SERIAL 15279406 THRU 15285934 F152 SERIAL F15201429 THRU F15201952 A152 SERIAL A1520735 THRU A1521028 FA152 SERIAL FA1520337 THRU FA1520387 J---152 SERIAL 15285935 & ON F152 SERIAL F15201953 & ON A152 SERIAL A1521029 & ON FA152 SERIAL FA1520338 & ON								

152 & A152 Parts Catalog

Fuselage (Cont)

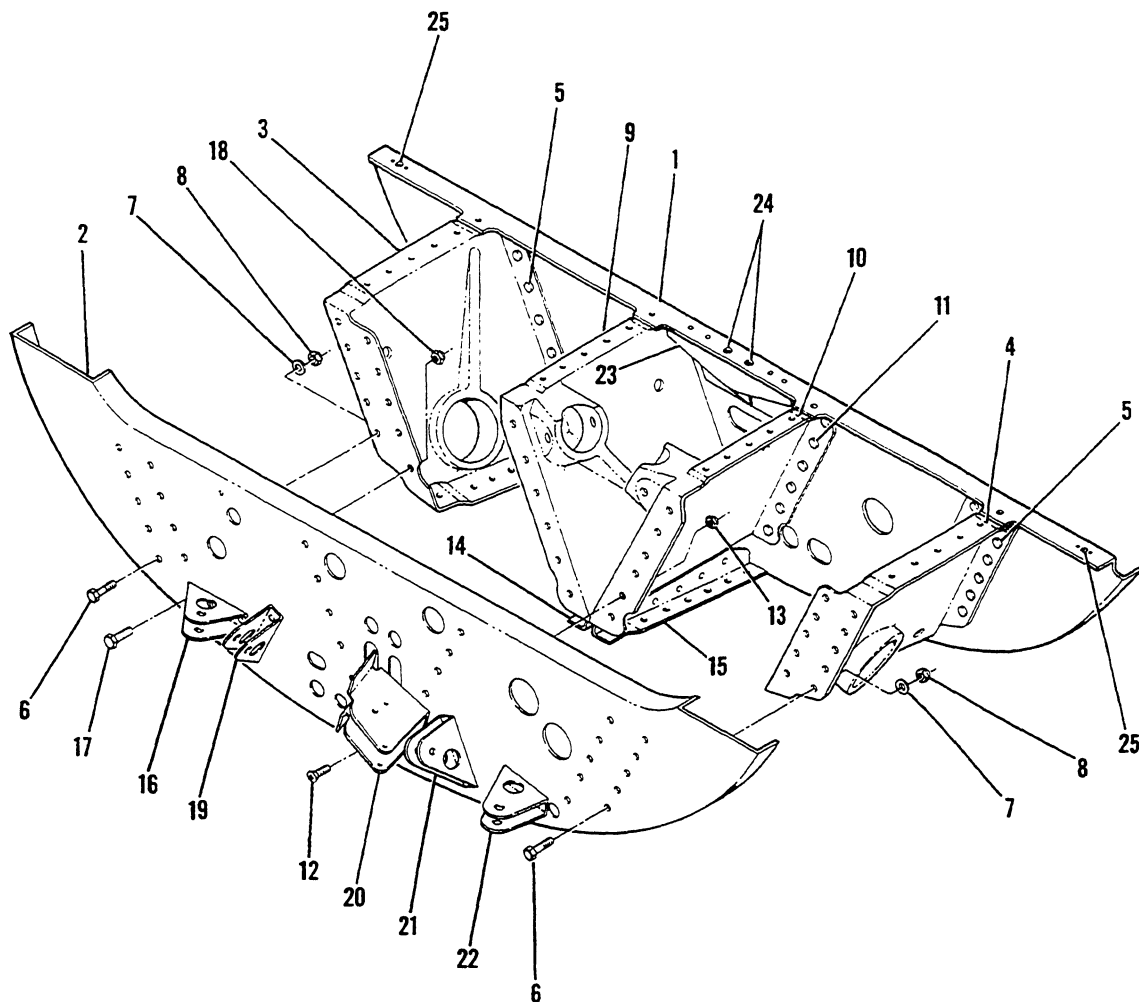


Figure 26. Main Landing Gear Bulkhead Assembly

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
26 -	0412074-3	BULKHEAD ASSEMBLY-MAIN LANDING GEAR -----	1	
- 1	0411951-10	BULKHEAD-STA 49.69 -----	1	
- 2	0411951-8	BULKHEAD-LOWER STA 56.69 -----	1	
- 3	0441209-1	SUPPORT-MAIN LANDING GEAR OUTBD LH -----	1	
- 4	0441209-2	SUPPORT-MAIN LANDING GEAR OUTBD RH -----	1	
		ATTACHING PARTS		
- 5	NAS178-6-6	PIN-HI SHEAR -----	20	
	NAS1426-6	PIN-HI SHEAR ALTERNATE -----	20	
	NAS179-6	COLLAR -----	20	
	NAS1080C06	COLLAR ALTERNATE -----	20	
- 6	NAS464P3-7	BOLT -----	1	
- 7	AN960-10L	WASHER -----	1	
- 8	MS21044N3	NUT -----	1	
		*-----		
- 9	0441204-11	SUPPORT-MAIN LANDING GEAR INBD LH WEU 0441204-15 ----	1	A
	0441204-15	SUPPORT-MAIN LANDING GEAR INBD LH WEU 0441204-19 ----	1	B
	0441204-19	SUPPORT-MAIN LANDING GEAR INBD LH -----	1	C
-10	0441204-12	SUPPORT-MAIN LANDING GEAR INBD RH WEU 0441204-16 ----	1	A
	0441204-16	SUPPORT-MAIN LANDING GEAR INBD RH WEU 0441204-20 ----	1	B
	0441204-20	SUPPORT-MAIN LANDING GEAR INBD RH -----	1	C
		ATTACHING PARTS		
-11	NAS178-8-5	PIN-HI SHEAR AFT SIDE RH -----	5	
	NAS1428-6	PIN-HI SHEAR AFT SIDE RH ALTERNATE -----	5	
	NAS1446-6	PIN-HI SHEAR AFT SIDE RH ALTERNATE -----	5	
	NAS178-8-5	PIN-HI SHEAR AFT SIDE LH -----	6	
	NAS1428-6	PIN-HI SHEAR AFT SIDE LH ALTERNATE -----	6	
	NAS1448-6	PIN-HI SHEAR AFT SIDE LH ALTERNATE -----	6	
	NAS178-8-5	PIN-HI SHEAR FORWARD SIDE -----	6	
	NAS178-8-5	PIN-HI SHEAR FORWARD SIDE ALTERNATE -----	6	
	NAS179-8	COLLAR-AFT SIDE RH -----	5	
	NAS1080C08	COLLAR-AFT SIDE RH ALTERNATE -----	5	
	NAS179-8	COLLAR-AFT SIDE LH -----	6	
	NAS1080C08	COLLAR-AFT SIDE LH ALTERNATE -----	6	
	NAS179-8	COLLAR-FORWARD SIDE -----	6	
	NAS1080C08	COLLAR-FORWARD SIDE ALTERNATE -----	6	
-12	AN509-416R13	SCREW -----	1	
-13	MS21042L4	NUT -----	1	
		*-----		
-14	0441204-7	BRACKET-LH -----	1	
-15	0441204-8	BRACKET-RH -----	1	
-16	0411452	BRACKET -----	1	
		ATTACHING PARTS		
-17	NAS1303-5	BOLT -----	1	
	NAS464P3A5	BOLT ALTERNATE -----	1	
-18	MS21044N3	NUT -----	1	
		*-----		
-19	0411449	BRACKET -----	1	
		ATTACHING PARTS		
	AN520-10R7	SCREW -----	1	
	MS21044N3	NUT -----	1	
		*-----		
-20	0412048-1	BRACKET -----	1	
		ATTACHING PARTS		
	AN520-10R12	SCREW -----	1	
	MS21044N3	NUT -----	1	
		*-----		
-21	0411671	BRACKET -----	1	
		ATTACHING PARTS		
	AN520-10R7	SCREW -----	2	
	MS21044N3	NUT -----	2	
		*-----		
-22	0411451	BRACKET -----	1	
		ATTACHING PARTS		
	AN520-10R7	SCREW -----	1	
	MS21044N3	NUT -----	1	
		*-----		
CONTINUED ON NEXT PAGE				

152 & A152 Parts Catalog


FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION							UNITS PER ASSY	USABLE ON CODE	
		1	2	3	4	5	6	7			
26 -23 -24 -25	0414046-1 NAS696A4 NAS697A3	SUPPORT ASSY-SEAT BELT ATTACH -----								1	
		NUTPLATE -----								2	
		NUTPLATE -----								2	
		A---152 SERIAL 15279406 THRU 15281714 F152 SERIAL F15201429 THRU F15201538 A152 SERIAL A1520735 THRU A1520791 FA152 SERIAL FA1520337 THRU FA1520351 B---152 SERIAL 15281715 THRU 15285110 F152 SERIAL F15201539 THRU F15201908 A152 SERIAL A1520792 THRU A1520972 FA152 SERIAL FA1520352 THRU FA1520387 C---152 SERIAL 15285111 & ON F152 SERIAL F15201909 & ON A152 SERIAL A1520973 & ON FA152 SERIAL FA1520388 & ON									

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
27 -	0413004-32	FRONT SECTION ASSEMBLY-FUSELAGE -----	1	C E L N D F M P A B
	0413004-37	FRONT SECTION ASSEMBLY-FUSELAGE -----	1	
	0413004-39	FRONT SECTION ASSEMBLY-FUSELAGE -----	1	
	0413004-42	FRONT SECTION ASSEMBLY-FUSELAGE -----	1	
	0413004-33	FRONT SECTION ASSEMBLY-FUSELAGE -----	1	
	0413004-38	FRONT SECTION ASSEMBLY-FUSELAGE -----	1	
	0413004-40	FRONT SECTION ASSEMBLY-FUSELAGE -----	1	
	0413004-43	FRONT SECTION ASSEMBLY-FUSELAGE -----	1	
- 1	SEE FIG 28	BULKHEAD ASSY-FRONT DOORPOST -----	1	
	SEE FIG 29	BULKHEAD ASSY-FRONT DOORPOST -----	1	
- 2	SEE FIG 52 & 52A	STATIONARY INSTRUMENT PANEL ASSY -----	1	Q R V O R
- 3	0413346-2	STIFFENER-STATIONARY INSTRUMENT PANEL -----	1	
- 4	0413004-34	SKIN-DECK -----	1	
	0413004-41	SKIN-DECK -----	1	
- 4A	S1741-1	ANCHOR -----	1	
- 5	0413452-1	NOZZLE ASSY-DEFROSTER -----	1	
- 5A	0413587-7	NOZZLE ASSY-DEFROSTER -----	2	
- 6	0413423-9	STRINGER ASSY-ENGINE MOUNT LH -----	1	
- 7	0413423-10	STRINGER ASSY-ENGINE MOUNT RH -----	1	
- 8	0411281-12	BRACKET-ENGINE MOUNT LH -----	1	
	0411281-11	BRACKET-ENGINE MOUNT RH -----	1	G H H
- 9	1213675-1	SUPPORT ASSY-HEAT SINK -----	1	
	NAS682A3	NUTPLATE -----	4	
-10	0413004-35	SKIN-LOWER LH -----	1	
-11	0413004-36	SKIN-LOWER RH -----	1	
-12	0413305-5	STIFFENER-FRONT SECTION LH -----	1	
	0413305-6	STIFFENER-FRONT SECTION RH -----	1	
-13	0413305-7	STIFFENER-FRONT SECTION LH -----	1	
	0413305-8	STIFFENER-FRONT SECTION RH -----	1	
-14	0413425-5	STIFFENER-FORWARD DOOR POST LH -----	1	
	0413425-6	STIFFENER-FORWARD DOOR POST RH -----	1	H
-15	S1776-1	BUTTON-PITOT STATIC LINE -----	1	
-16	0413548-1	STIFFENER-LOWER INSTRUMENT PANEL -----	1	
	0413430-1	FLOORBOARD ASSY-FRONT WEU 0413430-5, -6 & -8 -----	1	
-17	0413430-5	FLOORBOARD ASSY-FRONT LH -----	1	
-17A	0413430-6	FLOORBOARD ASSY-FRONT RH -----	1	
-18	A1793-6Z3	NUT -----	3	
-19	NAS395-12-3	NUT -----	2	
-19A	S1863-3	NUTPLATE -----	1	
-19B	0413430-8	FLOORBOARD ASSY-FRONT CENTER -----	1	
-20	S1863-3	NUTPLATE -----	3	Q R Q
-20A	NAS395-12-3	NUT -----	6	
-21	0413391-1	STIFFENER-FUSELAGE INBOARD -----	2	
-22	0413391-2	STIFFENER-FUSELAGE OUTBOARD -----	2	
-23	S237-2	DOUBLER ASSY -----	1	
	NAS395-14-3	NUT -----	3	
-24	0413573-1	STRINGER ASSY-ENGINE MOUNT LOWER LH -----	1	
-25	0411281-10	BRACKET-ENGINE MOUNT LH -----	1	
-26	0413573-2	STRINGER ASSY-ENGINE MOUNT LOWER RH -----	1	
-27	0411281-9	BRACKET-ENGINE MOUNT RH -----	1	
-28	0413397-3	BULKHEAD ASSY-FLOORBOARD STA 8.37 LH -----	1	
	0413397-2	BULKHEAD-FLOORBOARD STA 8.37 RH -----	1	
-29	0413396-3	BULKHEAD-FRONT FLOORBOARD OUTBD LH -----	1	
	0413396-4	BULKHEAD-FRONT FLOORBOARD OUTBD RH -----	1	
-30	0413395-6	BULKHEAD ASSY-FRONT FLOORBOARD INBD LH -----	1	
	0413395-4	BULKHEAD-FRONT FLOORBOARD INBD RH -----	1	
-31	0713624-2	ANCHOR-BRAKE CYLINDER LH ONLY -----	1	
-32	0460126-4	BRACKET-TRIM CONTROL -----	1	
	AN520-10R6	ATTACHING PARTS -----	1	
	MS20365-1032C	SCREW -----	1	
		NUT -----	1	
-33	0413394-3	BULKHEAD ASSY-CONTROL TEE LH -----	1	
-34	0413394-4	BULKHEAD ASSY-CONTROL TEE RH -----	1	
-35	NAS680A3	NUTPLATE LH BULKHEAD ONLY -----	5	
	NAS680A3	NUTPLATE RH BULKHEAD ONLY -----	6	
-35A	0413404-1	ANGLE-LH -----	1	
	0413404-2	ANGLE-RH -----	1	
-36	0413304-1	SEAL ASSY-STEERING LINK LH -----	1	
-37	0413304-2	SEAL ASSY-STEERING LINK RH -----	1	
-38	0460126-1	BRACKET ASSY-TRIM CONTROL -----	1	
-39	SEE FIG 67	DISTRIBUTOR ASSY-CABIN AIR -----	1	
-39A	SEE FIG 67A	HEATER ASSY -----	1	
-40	SEE FIG 67	VALVE ASSY-CABIN HEATER -----	1	

CONTINUED ON NEXT PAGE

152 & A152 Parts Catalog

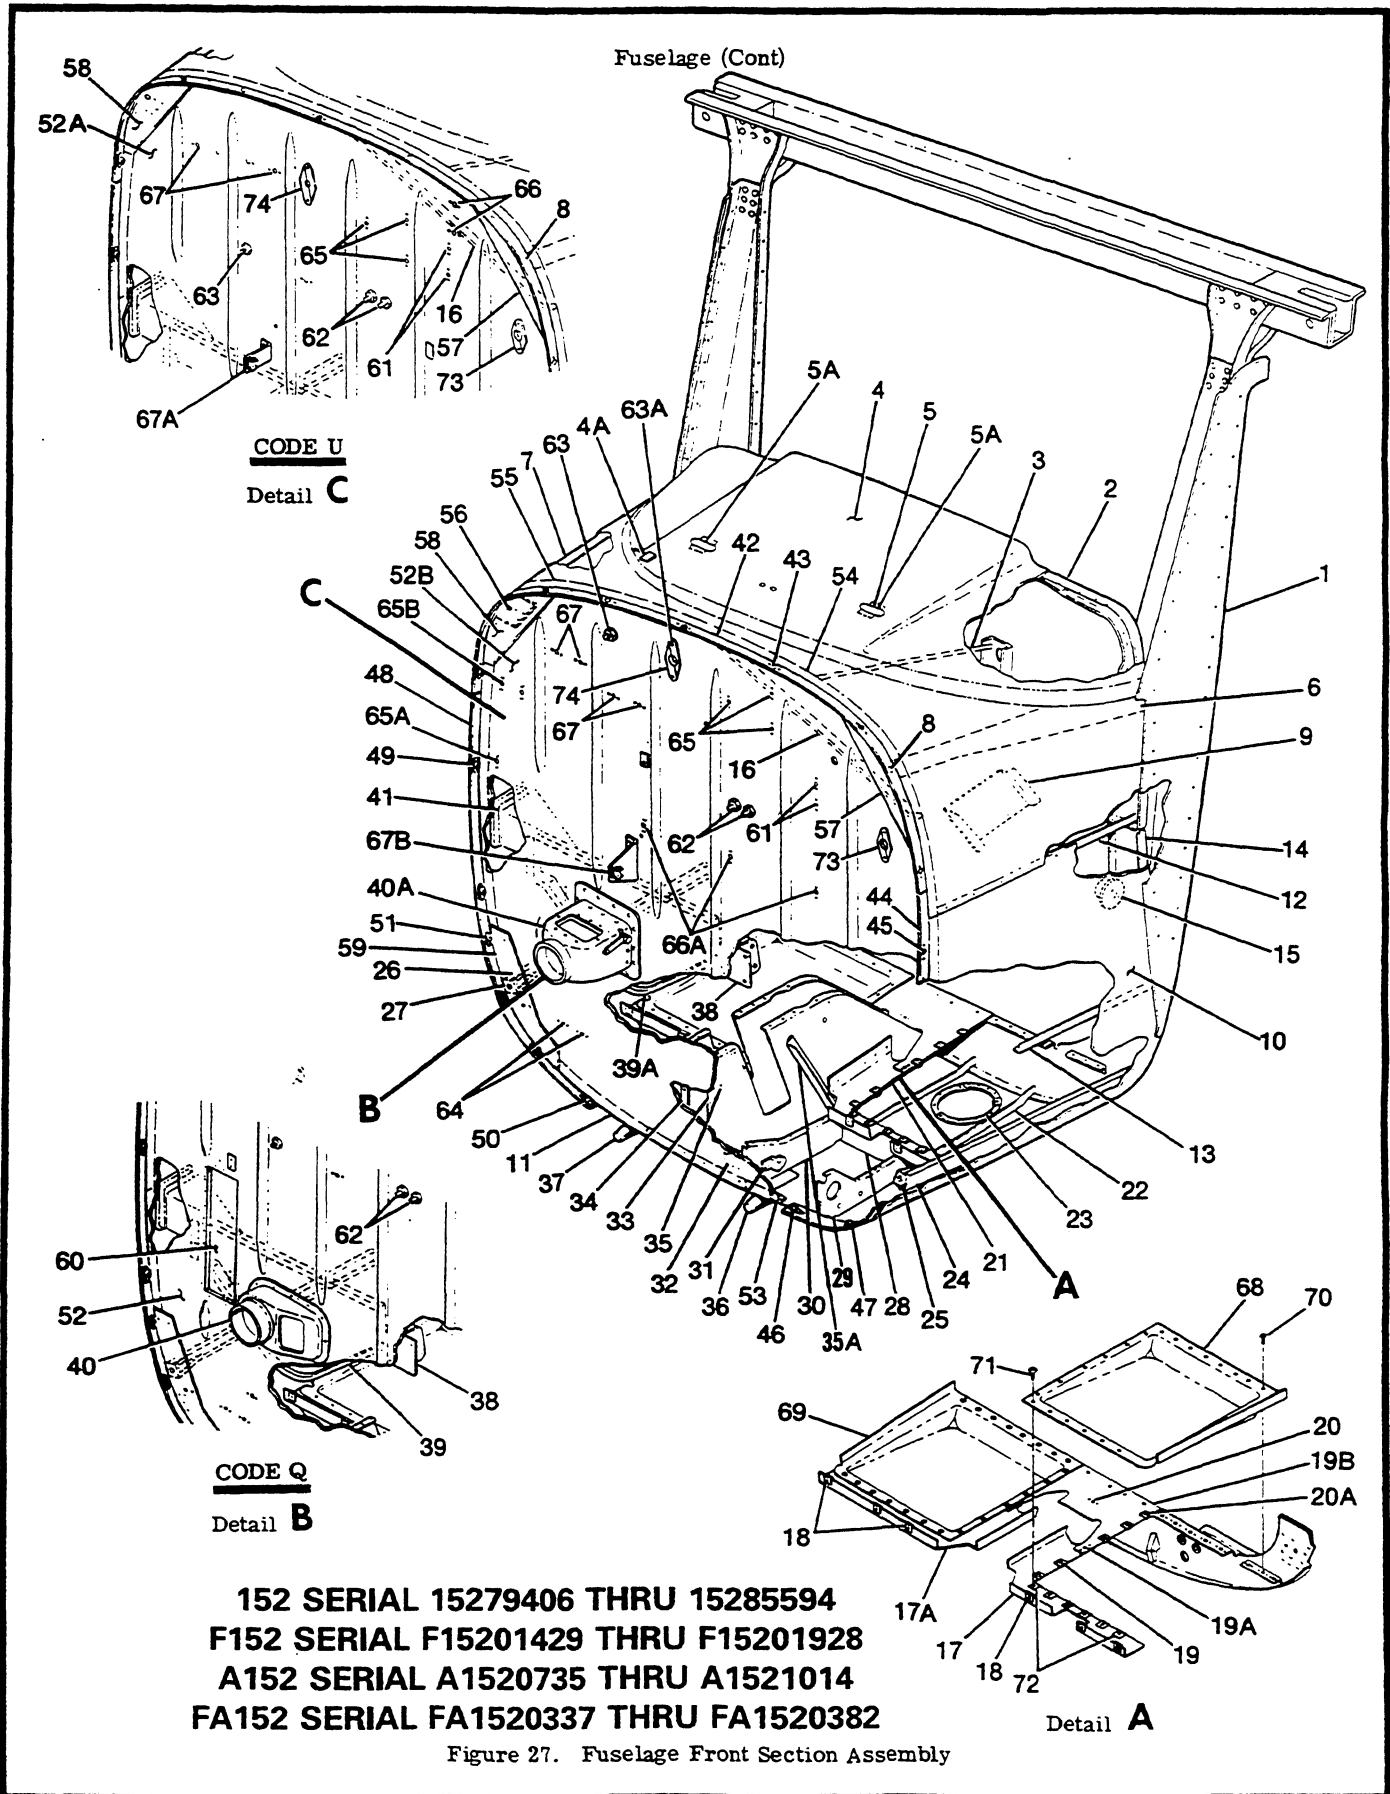

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
27 -40A	SEE FIG 67A	VALVE ASSY-CABIN HEATER -----	1	R
-41	SEE FIG 67	INLET & DUCT ASSY-OUTSIDE AIR -----	1	R
	SEE FIG 67A	INLET & DUCT ASSY-OUTSIDE AIR -----	1	R
-42	0453009-9	STRIP ASSY-UPPER -----	1	
-43	214-16	RECEPTACLE -----	7	
-44	0453009-7	STRIP ASSY-LWR LH -----	1	K
	0453009-13	STRIP ASSY-LWR LH -----	1	J
-45	214-16	RECEPTACLE -----	2	
-46	NAS682A4	NUTPLATE -----	1	K
	214-16	RECEPTACLE -----	1	J
-47	NAS680A4	NUTPLATE -----	3	K
	214-16	RECEPTACLE -----	3	J
-48	0453009-8	STRIP ASSY-LWR RH -----	1	K
	0453009-14	STRIP ASSY-LWR RH -----	1	J
-49	214-16	RECEPTACLE -----	2	
-50	NAS682A4	NUTPLATE -----	1	K
	214-16	RECEPTACLE -----	1	J
-51	NAS680A4	NUTPLATE -----	3	K
	214-16	RECEPTACLE -----	3	J
	5423	TAPE-POLYETHYLENE FILM 1.00 IN WIDE 73681 BKI -----	AR	
	0453001-7	FIREWALL ASSY -----	1	Q
	0453001-8	FIREWALL ASSY -----	1	V
	0453120-1	FIREWALL ASSY -----	1	V
-52	0453114-6	SHEET-FIREWALL -----	1	Q
-52A	0453114-7	SHEET-FIREWALL -----	1	V
-52B	0453119-1	SHEET-FIREWALL -----	1	V
-53	0453115-2	ANGLE -----	1	
-54	0453107-5	ANGLE-LH -----	1	
-55	0453107-4	ANGLE-RH -----	1	
-56	0453110	PLATE-FIREWALL LOCATED ON AFT SIDE OF FIREWALL -----	4	
-57	0453116-11	DOUBLER-UPPER ENGINE MOUNT LH -----	1	
-58	0453116-12	DOUBLER-UPPER ENGINE MOUNT RH -----	1	
-59	0453116-14	DOUBLER-LOWER MOUNT RH -----	1	
	0453116-13	DOUBLER-LOWER MOUNT LH -----	1	
-60	0453012-1	PAN -----	1	Q
-61	NAS680A08	NUTPLATE -----	2	J
-62	AN832-2	UNION -----	2	
	AN924-2	NUT -----	2	
-63	S2289-4	UNION -----	1	
	AN924-3	NUT -----	1	
	AN960-616	WASHER -----	2	
-63A	S1860-2A	NUTPLATE -----	2	
-64	S1863-3A	NUTPLATE -----	13	W
	S1863-3A	NUTPLATE -----	9	V
-65	NAS697A4K	NUTPLATE -----	3	
-65A	NAS680A4K	NUTPLATE -----	1	V
-65B	NAS680A3K	NUTPLATE -----	2	X
	AN520-10R8	SCREW -----	2	X
-66	NAS697A08K	NUTPLATE -----	2	W
-66A	S1863-3A	NUTPLATE -----	3	X
-67	NAS680A3K	NUTPLATE -----	4	
-67A	0413582-1	BRACKET ASSY-HEATER CONTROL -----	1	S
-67B	0413591-1	BRACKET ASSY-HEATER CONTROL -----	1	T
	SEE FIG 24	BATTERY BOX INSTL -----	1	O
	SEE FIG 24	MANIFOLD BATTERY SUPPORT INSTL -----	1	R
-68	0413429-3	FEET PAN ASSY-FRONT FLOORBOARD LH -----	1	Y
	0413429-1	FEET PAN-FRONT FLOORBOARD LH -----	1	Z
-69	0413429-4	FEET PAN ASSY-FRONT FLOORBOARD RH -----	1	Z
	0413429-2	FEET PAN-FRONT FLOORBOARD RH -----	1	
		ATTACHING PARTS -----		
-70	AN515-8R8	SCREW -----	8	
-71	S1021Z8-8	SCREW -----	11	
-72	NAS395-17-3	NUTPLATE -----	6	
		*-----		
	S1863-1	NUTPLATE -----	4	Y
-73	NAS557-10A	GROMMET-SPLIT PLASTIC -----	1	
	S1095-5	SHIELD HALF-WIRING HARNESS -----	2	
		ATTACHING PARTS -----		
	S1021Z8-6	SCREW -----	2	
	NAS446-4-3	NUT -----	2	
		*-----		
-74	NAS557-6A	GROMMET-SPLIT PLASTIC -----	1	
	S1095-3	SHIELD HALF-TACHOMETER SHAFT -----	2	
		ATTACHING PARTS -----		
	S1021Z8-8	SCREW -----	2	
		*-----		
		CONTINUED ON NEXT PAGE		

152 & A152 Parts Catalog


FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION							UNITS PER ASSY	USABLE ON CODE
		1	2	3	4	5	6	7		
27 -		A---152 SERIAL 15279406 THRU 15285594 F152 SERIAL F15201429 THRU F15201928 B---A152 SERIAL A1520735 THRU A1521014 FA152 SERIAL FA1520337 THRU FA1520382 C---152 SERIAL 15279406 THRU 15282031 F152 SERIAL F15201429 THRU F15201528 D---A152 SERIAL A1520735 THRU A1520808 FA152 SERIAL FA1520337 THRU FA1520347 E---152 SERIAL 15282032 THRU 15283591 F152 SERIAL F15201529 THRU F15201673 F---A152 SERIAL A1520809 THRU A1520878 FA152 SERIAL FA1520348 THRU FA1520357 G---152 SERIAL 15279406 THRU 15281394 F152 SERIAL F15201429 THRU F15201538 A152 SERIAL A1520735 THRU A1520785 FA152 SERIAL FA1520337 THRU FA1520351 H---152 SERIAL 15281395 THRU 15285594 F152 SERIAL F15201539 THRU F15201928 A152 SERIAL A1520786 THRU A1521014 FA152 SERIAL FA1520352 THRU FA1520382 J---152 SERIAL 15282332 THRU 15285594 F152 SERIAL F15201529 THRU F15201928 A152 SERIAL A1520809 THRU A1521014 FA152 SERIAL FA1520348 THRU FA1520382 K---152 SERIAL 15279406 THRU 15282031 F152 SERIAL F15201429 THRU F15201528 A152 SERIAL A1520735 THRU A1520808 FA152 SERIAL FA1520337 THRU FA1520347 L---152 SERIAL 15283592 THRU 15284541 F152 SERIAL F15201674 THRU F15201808 M---A152 SERIAL A1520879 THRU A1520943 FA152 SERIAL FA1520358 THRU FA1520372 N---152 SERIAL 15284542 THRU 15285594 F152 SERIAL F15201809 THRU F15201928 P---A152 SERIAL A1520944 THRU A1521014 FA152 SERIAL FA1520373 THRU FA1520382 Q---152 SERIAL 15279406 THRU 15283591 F152 SERIAL F15201429 THRU F15201673 A152 SERIAL A1520735 THRU A1520878 FA152 SERIAL FA1520337 THRU FA1520357 R---152 SERIAL 15283592 THRU 15285594 F152 SERIAL F15201674 THRU F15201928 A152 SERIAL A1520879 THRU A1521014 FA152 SERIAL FA1520358 THRU FA1520382 S---152 SERIAL 15283592 THRU 15284297 F152 SERIAL F15201674 THRU F15201828 A152 SERIAL A1520879 THRU A1520936 FA152 SERIAL FA1520358 THRU FA1520372 T---152 SERIAL 15284298 THRU 15285594 F152 SERIAL F15201829 THRU F15201928 A152 SERIAL A1520937 THRU A1521014 FA152 SERIAL FA1520373 THRU FA1520382 U---152 SERIAL 15283592 THRU 15284541 F152 SERIAL F15201674 THRU F15201808 A152 SERIAL A1520879 THRU A1520943 FA152 SERIAL FA1520358 THRU FA1520372 V---152 SERIAL 15284542 THRU 15285594 F152 SERIAL F15201809 THRU F15201928 A152 SERIAL A1520944 THRU A1521014 FA152 SERIAL FA1520373 THRU FA1520382 W---152 SERIAL 15279406 THRU 15284541 F152 SERIAL F15201429 THRU F15201808 A152 SERIAL A1520735 THRU A1520943 FA152 SERIAL FA1520337 THRU FA1520372 X---152 SERIAL 15285475 THRU 15285594 F152 SERIAL F15201809 THRU F15201928 A152 SERIAL A1521010 THRU A1521014 FA152 SERIAL FA1520373 THRU FA1520382 Y---152 SERIAL 15279406 THRU 15285279 F152 SERIAL F15201429 THRU F15201928 A152 SERIAL A1520735 THRU A1520989 FA152 SERIAL FA1520337 THRU FA1520382 Z---152 SERIAL 15285280 THRU 15285594 A152 SERIAL A1520990 THRU A1521014								

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
27A-	0413004-42	FRONT SECTION ASSEMBLY-FUSELAGE -----	1	C E D F A B
	0413004-44	FRONT SECTION ASSEMBLY-FUSELAGE -----	1	
	0413004-43	FRONT SECTION ASSEMBLY-FUSELAGE -----	1	
	0413004-45	FRONT SECTION ASSEMBLY-FUSELAGE -----	1	
- 1	SEE FIG 28	BULKHEAD ASSY-FRONT DOORPOST -----	1	
	SEE FIG 29	BULKHEAD ASSY-FRONT DOORPOST -----	1	
- 2	SEE FIG 52B	STATIONARY INSTRUMENT PANEL ASSY -----	1	
- 3	0413346-2	STIFFENER-STATIONARY INSTRUMENT PANEL -----	1	
- 4	0413004-41	SKIN-DECK -----	1	
- 5	S1741-1	ANCHOR -----	1	
- 6	0413587-7	NOZZLE ASSY-DEFROSTER -----	2	
- 7	0413423-9	STRINGER ASSY-ENGINE MOUNT LH -----	1	
- 8	0413423-10	STRINGER ASSY-ENGINE MOUNT RH -----	1	
- 9	0411281-12	BRACKET-ENGINE MOUNT LH -----	1	
	0411281-11	BRACKET-ENGINE MOUNT RH -----	1	
-10	1213675-1	SUPPORT ASSY-HEAT SINK -----	1	
	NAS682A3	NUTPLATE -----	4	
-11	0413004-35	SKIN-LOWER LH -----	1	
	0413004-36	SKIN-LOWER RH -----	1	
-12	0413305-5	STIFFENER-FRONT SECTION LH -----	1	
	0413305-6	STIFFENER-FRONT SECTION RH -----	1	
-13	0413305-7	STIFFENER-FRONT SECTION LH -----	1	
	0413305-8	STIFFENER-FRONT SECTION RH -----	1	
-14	0413425-5	STIFFENER-FWD DOORPOST LH -----	1	
	0413425-6	STIFFENER-FWD DOORPOST RH -----	1	
-15	S1776-1	BUTTON-PITOT STATIC LINE -----	1	
-16	0413548-1	STIFFENER-LOWER INSTRUMENT PANEL -----	1	
-17	0413430-5	FLOORBOARD ASSY-FRONT LH -----	1	
-18	0413430-6	FLOORBOARD ASSY-FRONT RH -----	1	
-19	A1793-6Z3	NUT -----	3	
-20	NAS395-12-3	NUT -----	2	
-21	S1863-3	NUTPLATE -----	1	
-22	0413430-8	FLOORBOARD ASSY-FRONT CENTER -----	1	
-23	S1863-3	NUTPLATE -----	3	
-24	NAS395-12-3	NUT -----	6	
-25	0413391-1	STIFFENER-FUSELAGE INBD -----	2	
-26	0413391-2	STIFFENER-FUSELAGE OUTBD -----	2	
-27	S237-2	DOUBLER ASSY -----	1	
	NAS395-14-3	NUT -----	3	
-28	0413573-1	STRINGER ASSY-ENGINE MOUNT LWR LH -----	1	
-29	0411281-10	BRACKET-ENGINE MOUNT LH -----	1	
-30	0413573-2	STRINGER ASSY-ENGINE MOUNT LWR RH -----	1	
-31	0411281-9	BRACKET-ENGINE MOUNT RH -----	1	
-32	0413397-3	BULKHEAD ASSY-FLOORBOARD STA 8.37 LH -----	1	
	0413397-5	BULKHEAD ASSY-FLOORBOARD STA 8.37 LH -----	1	
	0413397-2	BULKHEAD-FLOORBOARD STA 8.37 RH -----	1	
-33	0413396-3	BULKHEAD-FRONT FLOORBOARD OUTBD LH -----	1	
	0413396-4	BULKHEAD-FRONT FLOORBOARD OUTBD RH -----	1	
-34	0413395-6	BULKHEAD ASSY-FRONT FLOORBOARD INBD LH -----	1	
	0413395-4	BULKHEAD-FRONT FLOORBOARD INBD RH -----	1	
-35	0713624-2	ANCHOR-BRAKE CYLINDER -----	1	
-36	0460126-4	BRACKET-TRIM CONTROL -----	1	
	AN520-10R6	ATTACHING PARTS -----	1	
	MS20365-1032C	SCREW -----	1	
		NUT -----	1	
		-----*		
-37	0413394-3	BULKHEAD ASSY-CONTROL TEE LH -----	1	
-38	0413394-4	BULKHEAD ASSY-CONTROL TEE RH -----	1	
-39	NAS680A3	NUTPLATE -----	5	
	NAS680A3	NUTPLATE -----	6	
-39A	0413404-1	ANGLE-LH -----	1	
	0413404-2	ANGLE-RH -----	1	
-40	0413304-1	SEAL ASSY-STEERING LINK LH -----	1	
-41	0413304-2	SEAL ASSY-STEERING LINK RH -----	1	
-42	0460126-1	BRACKET ASSY-TRIM CONTROL -----	1	
-43	SEE FIG 67A	HEATER ASSY -----	1	
-44	SEE FIG 67A	VALVE ASSY-CABIN HEATER -----	1	
-45	SEE FIG 67A	INLET & DUCT ASSY-OUTSIDE AIR -----	1	
CONTINUED ON NEXT PAGE				

152 & A152 Parts Catalog

Fuselage (Cont)

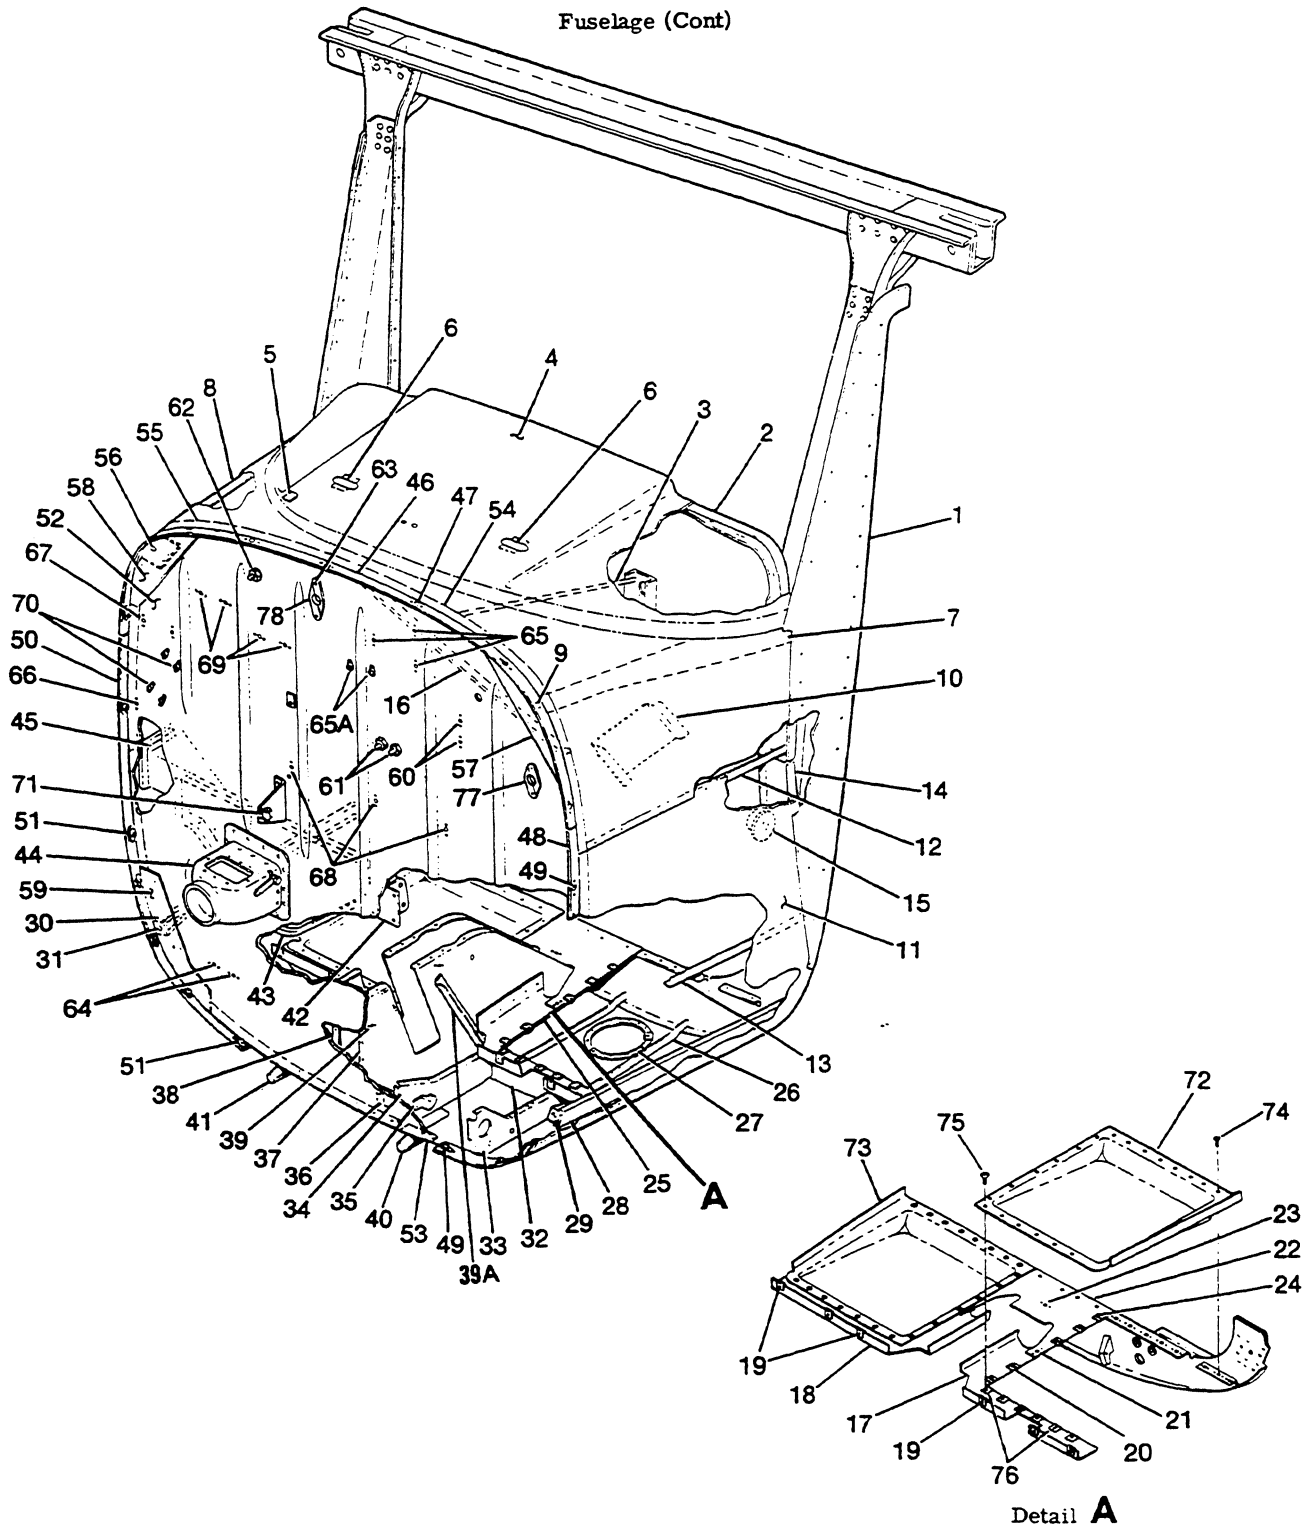


152 SERIAL 15285595 & ON
F152 SERIAL F15201929 & ON
A152 SERIAL A1521015 & ON
FA152 SERIAL FA1520383 & ON
 Figure 27A. Fuselage Front Section Assembly

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION							UNITS PER ASSY	USABLE ON CODE
		1	2	3	4	5	6	7		
27A-46	0453009-9	STRIP ASSY-UPPER	-----	-----	-----	-----	-----	-----	1	
-47	214-16	RECEPTACLE	-----	-----	-----	-----	-----	-----	7	
-48	0453009-13	STRIP ASSY-LWR LH	-----	-----	-----	-----	-----	-----	1	
-49	214-16	RECEPTACLE	-----	-----	-----	-----	-----	-----	6	
-50	0453009-14	STRIP ASSY-LWR RH	-----	-----	-----	-----	-----	-----	1	
-51	214-16	RECEPTACLE	-----	-----	-----	-----	-----	-----	6	
	5423	TAPE-POLYETHYLENE FILM	1.00 IN WIDE	73681	BKI	----	AR			
	0453120-1	FIREWALL ASSY	-----	-----	-----	-----	-----	-----	1	
-52	0453119-1	SHEET-FIREWALL	-----	-----	-----	-----	-----	-----	1	
-53	0453115-2	ANGLE	-----	-----	-----	-----	-----	-----	1	
-54	0453107-5	ANGLE-LH	-----	-----	-----	-----	-----	-----	1	
-55	0453107-4	ANGLE-RH	-----	-----	-----	-----	-----	-----	1	
-56	0453110	PLATE-FIREWALL	LOCATED ON AFT SIDE OF FIREWALL	-----	-----	-----	-----	-----	4	
-57	0453116-11	DOUBLER-UPR ENGINE MOUNT LH	-----	-----	-----	-----	-----	-----	1	
-58	0453116-12	DOUBLER-UPR ENGINE MOUNT RH	-----	-----	-----	-----	-----	-----	1	
-59	0453116-14	DOUBLER-LWR ENGINE MOUNT RH	-----	-----	-----	-----	-----	-----	1	
	0453116-13	DOUBLER-LWR ENGINE MOUNT LH	-----	-----	-----	-----	-----	-----	1	
-60	NAS680A08	NUTPLATE	-----	-----	-----	-----	-----	-----	2	
-61	AN832-2	UNION	-----	-----	-----	-----	-----	-----	2	
	AN924-2	NUT	-----	-----	-----	-----	-----	-----	2	
-62	S2289-4	UNION	-----	-----	-----	-----	-----	-----	1	
	AN924-3	NUT	-----	-----	-----	-----	-----	-----	1	
	AN960-616	WASHER	-----	-----	-----	-----	-----	-----	2	
-63	S1860-2A	NUTPLATE	-----	-----	-----	-----	-----	-----	2	
-64	S1863-3A	NUTPLATE	-----	-----	-----	-----	-----	-----	9	
-65	NAS697A4K	NUTPLATE	-----	-----	-----	-----	-----	-----	3	
-65A	NAS680A3K	NUTPLATE	ATTACH VACUUM FILTER	-----	-----	-----	-----	-----	2	
-66	NAS680A4K	NUTPLATE	-----	-----	-----	-----	-----	-----	1	
-67	NAS680A3K	NUTPLATE	-----	-----	-----	-----	-----	-----	2	
	AN520-10R8	SCREW	-----	-----	-----	-----	-----	-----	2	
-68	S1863-3A	NUTPLATE	-----	-----	-----	-----	-----	-----	3	
-69	NAS680A3K	NUTPLATE	-----	-----	-----	-----	-----	-----	4	
-70	NAS680A3K	NUTPLATE	-----	-----	-----	-----	-----	-----	4	
-71	0413591-1	BRACKET ASSY-HEATER CONTROL	-----	-----	-----	-----	-----	-----	1	
	SEE FIG 24	MANIFOLD BATTERY SUPPORT INSTL	-----	-----	-----	-----	-----	-----	1	
-72	0413429-1	FEET PAN-FRONT FLOORBOARD LH	-----	-----	-----	-----	-----	-----	1	
-73	0413429-2	FEET PAN-FRONT FLOORBOARD RH	-----	-----	-----	-----	-----	-----	1	
		ATTACHING PARTS	-----	-----	-----	-----	-----	-----		
-74	AN515-8R8	SCREW	-----	-----	-----	-----	-----	-----	8	
-75	S1021Z8-8	SCREW	-----	-----	-----	-----	-----	-----	11	
-76	NAS395-17-3	NUTPLATE	-----	-----	-----	-----	-----	-----	6	
		-----*	-----	-----	-----	-----	-----	-----		
-77	NAS557-10A	GROMMET-SPLIT PLASTIC	-----	-----	-----	-----	-----	-----	1	
	S1095-5	SHIELD HALF-WIRING HARNESS	-----	-----	-----	-----	-----	-----	2	
		ATTACHING PARTS	-----	-----	-----	-----	-----	-----		
	S1021Z8-6	SCREW	-----	-----	-----	-----	-----	-----	2	
	NAS446-4-3	NUT	-----	-----	-----	-----	-----	-----	2	
		-----*	-----	-----	-----	-----	-----	-----		
-78	NAS557-6A	GROMMET-SPLIT PLASTIC	-----	-----	-----	-----	-----	-----	1	
	S1095-3	SHIELD HALF-TACHOMETER SHAFT	-----	-----	-----	-----	-----	-----	2	
		ATTACHING PARTS	-----	-----	-----	-----	-----	-----		
	S1021Z8-8	SCREW	-----	-----	-----	-----	-----	-----	2	
		-----*	-----	-----	-----	-----	-----	-----		
		A---152 SERIAL 15285595 & ON								
		F152 SERIAL F15201929 & ON								
		B---A152 SERIAL A1521015 & ON								
		FA152 SERIAL FA1520383 & ON								
		C---152 SERIAL 15285595 THRU 15285833								
		F152 SERIAL F15201929 THRU F15201943								
		D---A152 SERIAL A1521015 THRU A1521025								
		FA152 SERIAL FA1520383 THRU FA1520387								
		E---152 SERIAL 15285834 & ON								
		F152 SERIAL F15201944 & ON								
		F---A152 SERIAL A1521026 & ON								
		FA152 SERIAL FA1520388 & ON								
		G---152 SERIAL 15285595 THRU 15285997								
		F152 SERIAL F15201929 THRU F15201952								
		A152 SERIAL A1521015 THRU A1521031								
		FA152 SERIAL FA1520383 THRU FA1520387								
		H---152 SERIAL 15285998 & ON								
		F152 SERIAL F15201953 & ON								
		A152 SERIAL A1521032 & ON								
		FA152 SERIAL FA1520388 & ON								

152 & A152 Parts Catalog

Fuselage (Cont)

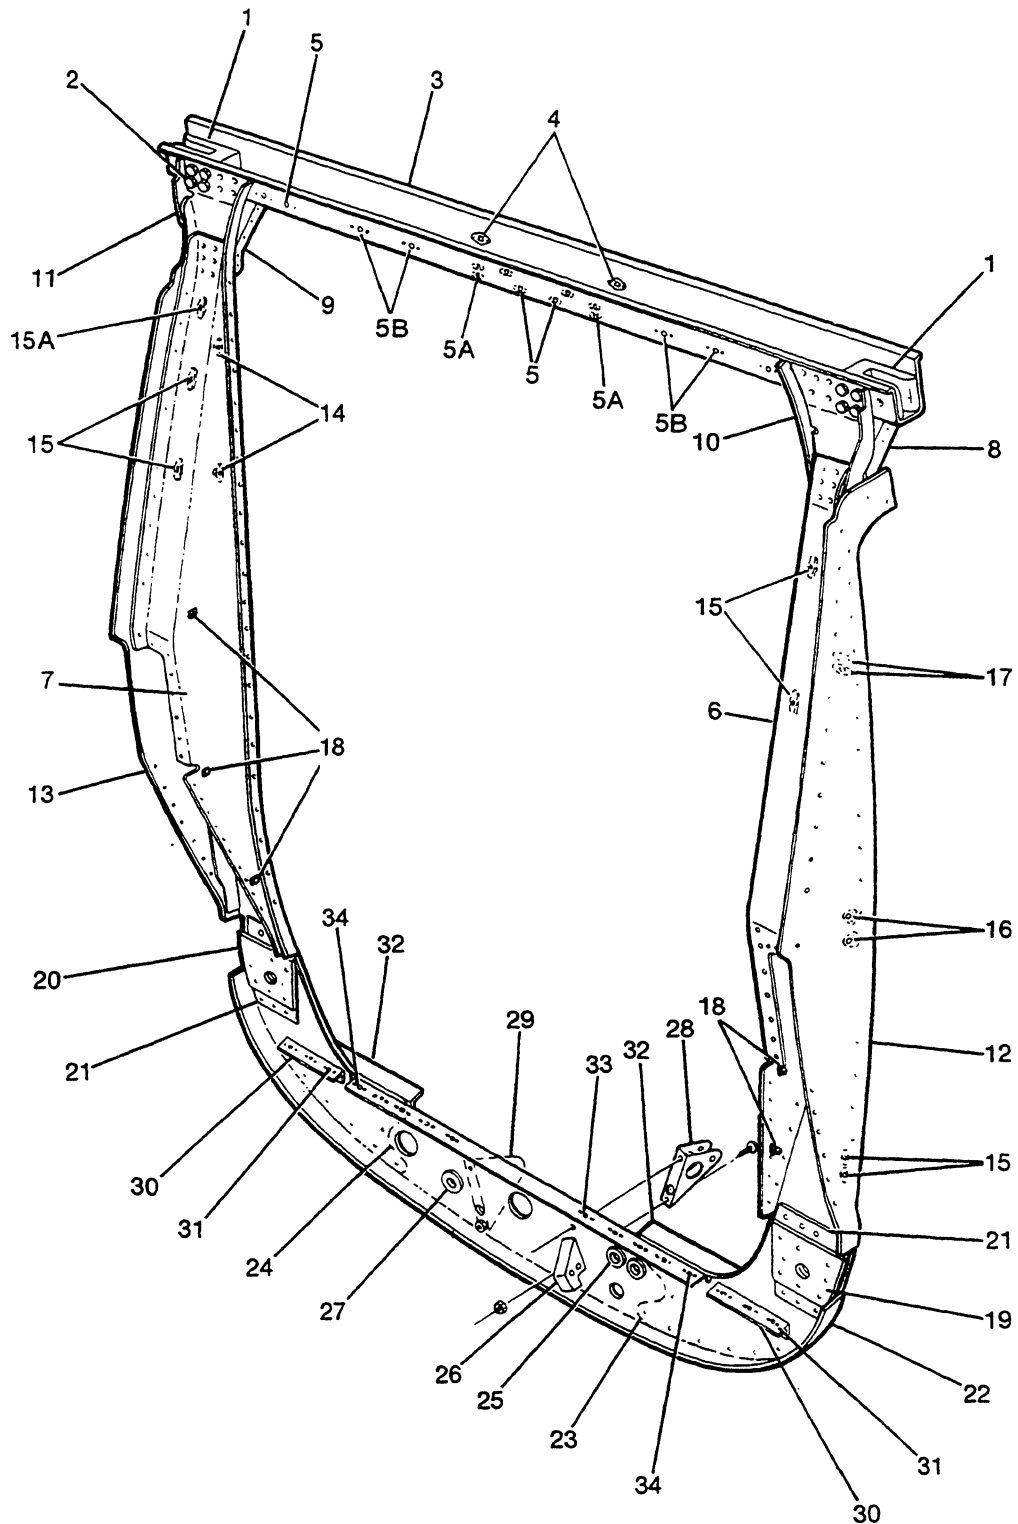

152 SERIAL 15279406 & ON
F152 SERIAL F15201429 & ON


Figure 28. Front Doorpost Bulkhead Assembly

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
28 -	0413424-5	BULKHEAD ASSEMBLY-FRONT DOORPOST STA 20.5 -----	1	A
- 1	0411129	BLOCK-BEARING -----	2	
		ATTACHING PARTS -----		
- 2	AN3-21A	BOLT -----	4	B C
	AN960-10L	WASHER -----	4	
	MS21044N3	NUT -----	4	
		-----*		
- 3	0411131-6	SPAR ASSY-FRONT DOORPOST -----	1	B C
	0411131-10	SPAR ASSY-FRONT DOORPOST -----	1	
- 4	S1863-3A	NUTPLATE -----	2	B B C
- 5	NAS680A3	NUTPLATE -----	10	
- 5A	NAS697A06L	NUTPLATE -----	4	
- 5B	NAS680A3	NUTPLATE -----	4	
- 6	0413424-203	DOORPOST ASSY-FRONT LH -----	1	
- 7	0413424-202	DOORPOST ASSY-FRONT RH -----	1	
- 8	0411132	BRACE LH -----	1	
- 9	0411132-1	BRACE RH -----	1	
-10	0413325-11	CHANNEL-UPPER SIDE LH -----	1	
-11	0413325-10	CHANNEL-UPPER SIDE RH -----	1	
-12	0411868-5	SKIN-CABIN LH -----	1	
-13	0411868-4	SKIN-CABIN RH -----	1	
-14	NAS682A06	NUTPLATE -----	2	
-15	NAS680A3	NUTPLATE -----	4	
-15A	NAS680A3	NUTPLATE RH ONLY -----	1	
-16	MS21073L3	NUTPLATE -----	2	
-17	NAS680A06	NUTPLATE -----	2	
-18	S1992-1	INSERT -----	14	
-19	0411276	PLATE-LH -----	1	
-20	0411276-1	PLATE-RH -----	1	
-21	0411141	DOUBLER -----	2	
-22	0413386-1	BULKHEAD ASSY-LOWER SECTION CANTED STA 20.5 -----	1	
-23	0413412-1	DOUBLER-LH -----	1	
-24	0413412-2	DOUBLER-RH -----	1	
-25	MS35489-7	GROMMET -----	2	
-26	0412467	BRACKET-ELEVATOR TAB CONTROL PULLEY -----	1	
-27	MS35489-14	GROMMET -----	1	
-28	0411907	BRACKET-PULLEY LH -----	1	
-29	0411907-1	BRACKET-PULLEY RH -----	1	
		ATTACHING PARTS -----		
	AN520-10R8	SCREW -----	1	
	MS21044N3	NUT -----	1	
		-----*		
-30	0413411-3	ANGLE-FLOORBOARD SUPPORT -----	2	
-31	NAS697A08	NUTPLATE -----	3	
-32	0413411-1	ANGLE-FLOORBOARD SUPPORT -----	2	
-33	NAS697A08	NUTPLATE -----	8	
-34	NAS696A08	NUTPLATE -----	2	
A---152 SERIAL 15279406 & ON F152 SERIAL F15201429 & ON B---152 SERIAL 15279406 THRU 15283591 F152 SERIAL F15201429 THRU F15201673 C---152 SERIAL 15283592 & ON F152 SERIAL F15201674 & ON				

152 & A152 Parts Catalog

Fuselage (Cont)

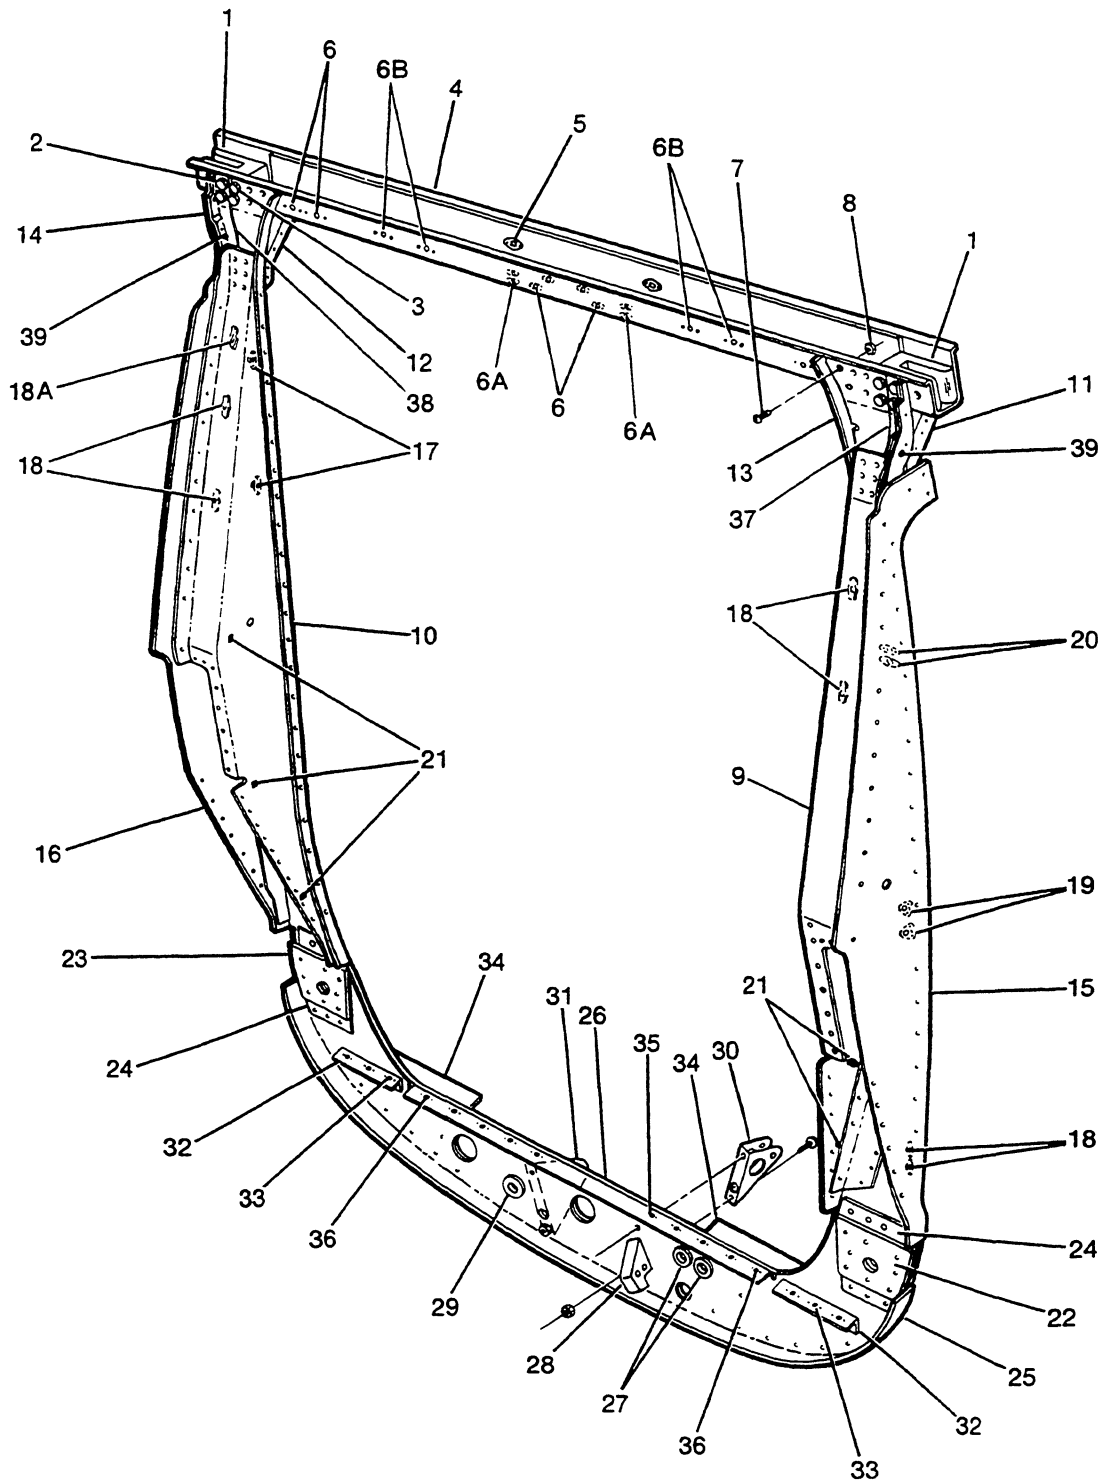

A152 SERIAL A1520735 & ON
FA152 SERIAL FA1520337 & ON

Figure 29. Front Doorpost Bulkhead Assembly - Aerobat

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
29 -	0413424-4	BULKHEAD ASSEMBLY-FRONT DOORPOST STA 20.5 AEROBAT -----	1	A
- 1	0411129	BLOCK-BEARING -----	2	
		ATTACHING PARTS -----		
- 2	AN3-22A	BOLT -----	2	
- 3	AN3-21A	BOLT -----	2	
	AN960-10L	WASHER -----	4	
	MS21044N3	NUT -----	4	
		---*---		
- 4	0411131-8	SPAR ASSY-FRONT DOORPOST -----	1	
	0411131-11	SPAR ASSY-FRONT DOORPOST -----	1	B C
- 5	S1863-3A	NUTPLATE -----	2	
- 6	NAS680A3	NUTPLATE -----	10	
- 6A	NAS697A06L	NUTPLATE -----	4	B B C
- 6B	NAS680A3	NUTPLATE -----	4	
- 7	NAS221-9	SCREW -----	4	
- 8	MS21044N3	NUT -----	4	
- 9	0413424-205	DOORPOST ASSY-FRONT LH -----	1	
-10	0413424-204	DOORPOST ASSY-FRONT RH -----	1	
-11	0411132	BRACE-LH -----	1	
-12	0411132-1	BRACE-RH -----	1	
-13	0413325-9	CHANNEL-UPPER SIDE LH -----	1	
-14	0413325-8	CHANNEL-UPPER SIDE RH -----	1	
-15	0411868-7	SKIN-CABIN LH -----	1	
-16	0411868-6	SKIN-CABIN RH -----	1	
-17	NAS682A06	NUTPLATE -----	2	
-18	NAS680A3	NUTPLATE -----	4	
-18A	NAS680A3	NUTPLATE RH ONLY -----	1	
-19	MS21073L3	NUTPLATE -----	2	
-20	NAS680A06	NUTPLATE -----	2	
-21	S1992-1	INSERT -----	14	
-22	0411276	PLATE-LH -----	1	
-23	0411276-1	PLATE-RH -----	1	
-24	0411141	DOUBLER -----	2	
-25	0413386-3	BULKHEAD ASSY-LOWER SECTION CANTED STA 20.5 -----	1	
-26	0413498-1	SUPPORT -----	1	
-27	MS35489-65	GROMMET -----	2	
-28	0412467	BRACKET-ELEVATOR TAB CONTROL PULLEY -----	1	
-29	MS35489-72	GROMMET -----	1	
-30	0411907	BRACKET-PULLEY LH -----	1	
-31	0411907-1	BRACKET-PULLEY RH -----	1	
		ATTACHING PARTS -----		
	AN520-10R10	SCREW -----	1	
	MS21044N3	NUT -----	1	
		---*---		
-32	0413411-5	ANGLE-FLOORBOARD SUPPORT -----	2	
-33	MS21044N08	NUTPLATE -----	3	
-34	0413411-6	ANGLE-FLOORBOARD SUPPORT -----	2	
-35	NAS697A08	NUTPLATE -----	8	
-36	NAS696A08	NUTPLATE -----	2	
-37	0413508-1	REINFORCEMENT-FRONT DOOR POST LH -----	1	
-38	0413508-2	REINFORCEMENT-FRONT DOOR POST RH -----	1	
		ATTACHING PARTS -----		
-39	AN525-832-8	SCREW -----	1	
	MS21044N08	NUT -----	1	
	AN960-8L	WASHER -----	1	
		---*---		
A---A152 SERIAL A1520735 & ON FA152 SERIAL FA1520337 & ON B---A152 SERIAL A1520735 THRU A1520878 FA152 SERIAL FA1520337 THRU FA1520357 C---A152 SERIAL A1520879 & ON FA152 SERIAL FA1520358 & ON				

152 & A152 Parts Catalog

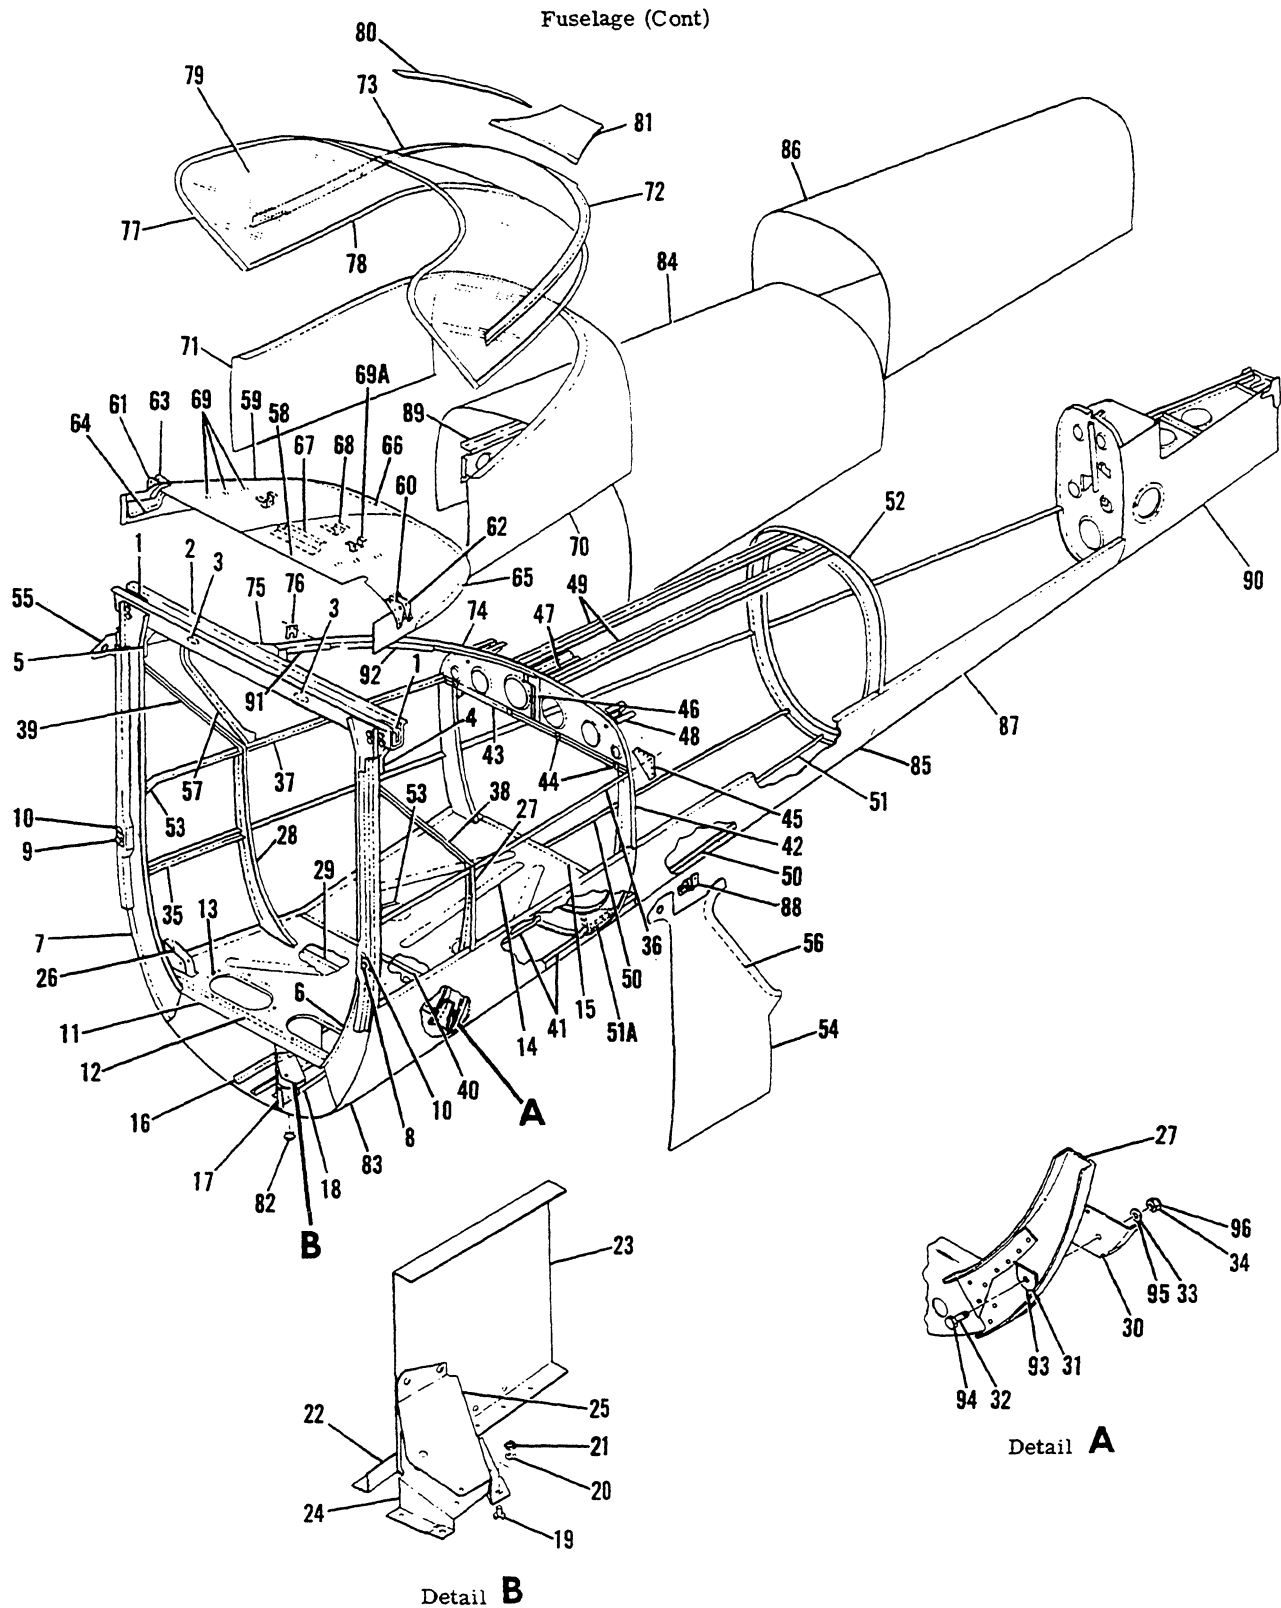


Figure 30. Fuselage Tailcone Assembly

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
30 -	0412020-213	TAILCONE ASSEMBLY-FUSELAGE -----	1	F H K F H K G J L G J L A B
	0412020-40	TAILCONE ASSEMBLY-FUSELAGE -----	1	
	0412020-47	TAILCONE ASSEMBLY-FUSELAGE -----	1	
	0412020-214	TAILCONE ASSEMBLY-FUSELAGE WITH TINTED WINDOW -----	1	
	0412020-215	TAILCONE ASSEMBLY-FUSELAGE WITH TINTED WINDOW -----	1	
	0412020-216	TAILCONE ASSEMBLY-FUSELAGE WITH TINTED WINDOW -----	1	
	0412020-217	TAILCONE ASSEMBLY-FUSELAGE AEROBAT -----	1	
	0412020-44	TAILCONE ASSEMBLY-FUSELAGE AEROBAT -----	1	
	0412020-48	TAILCONE ASSEMBLY-FUSELAGE AEROBAT -----	1	
	0412020-218	TAILCONE ASSEMBLY-FUSELAGE WITH TINTED WINDOW AEROBAT -----	1	
	0412020-219	TAILCONE ASSEMBLY-FUSELAGE WITH TINTED WINDOW AEROBAT -----	1	
	0412020-220	TAILCONE ASSEMBLY-FUSELAGE WITH TINTED WINDOW AEROBAT -----	1	
	0412533-1	DOORPOST BULKHEAD ASSY-REAR -----	1	
	0412533-2	DOORPOST BULKHEAD ASSY-REAR AEROBAT -----	1	
- 1	0512122	BLOCK-FUSELAGE SPAR -----	2	
		ATTACHING PARTS -----		
	AN3-20A	BOLT -----	4	
	AN960-10L	WASHER -----	4	
	MS21044N3	NUT -----	4	
		-----*		
- 2	0412534-1	SPAR-REAR DOORPOST -----	1	A B A
	0412534-3	SPAR-REAR DOORPOST AEROBAT -----	1	
- 3	NAS680A4	NUTPLATE -----	2	
- 4	0411525-1	BRACE-LH -----	1	
- 5	0411525-2	BRACE-RH -----	1	
- 6	0412533-3	CHANNEL-BULKHEAD LH -----	1	
- 7	0412533-4	CHANNEL-BULKHEAD RH -----	1	
- 8	0412066-1	CLUTCH ASSY-ROTARY DOOR LATCH LH -----	1	
- 9	0412066-2	CLUTCH ASSY-ROTARY DOOR LATCH RH -----	1	
		ATTACHING PARTS -----		
	AN525-10R8	SCREW -----	2	
		-----*		
-10	S1438-12	GUIDE-DOOR LATCH -----	2	
		ATTACHING PARTS -----		
	NAS43DD3-9	SPACER -----	1	
	AN525-10R8	SCREW -----	1	
		-----*		
-11	0412030-5	FLOORBOARD ASSY STA 56.69 TO 76.44 -----	1	
-12	0412060-1	ANGLE -----	1	
-13	S1863-3	NUTPLATE -----	12	
-14	0412067-2	FLOORBOARD-STA 76.44 TO 95.0 -----	1	
-15	0412067-3	ANGLE -----	1	
	0412067-4	RETAINER-FAIRLEAD ELEVATOR CABLE -----	1	
-16	0412171-1	ANGLE -----	1	
-17	0412054-1	CLIP-TAILCONE SKIN STIFFENER -----	1	
-18	0412055-1	STIFFENER-TAILCONE SKIN -----	1	
	0412047-3	BRACKET ASSY-PULLEY -----	1	
		ATTACHING PARTS -----		
-19	AN515-8R8	SCREW -----	2	
-20	AN960-8	WASHER -----	2	
-21	MS21044N08	NUT -----	2	
		-----*		
-22	0412171-1	ANGLE -----	1	
-23	0412049-1	BULKHEAD -----	1	
-24	0412050-3	BRACKET-AILERON CONTROL LOWER -----	1	
-25	0412050-2	BRACKET-AILERON CONTROL UPPER -----	1	
-26	0412043-4	BRACKET ASSY-PULLEY RH -----	1	
	0412043-3	BRACKET ASSY-PULLEY LH -----	1	
	0412024-4	BULKHEAD ASSY-STA 70.69 -----	1	
-27	0412027-7	BULKHEAD ASSY-UPPER LH -----	1	
-28	0412027-8	BULKHEAD ASSY-UPPER RH -----	1	
	NAS680A3K	NUTPLATE -----	2	
	NAS697A3	NUTPLATE -----	1	
-29	0411209	BULKHEAD-LOWER -----	1	
	0412467	BRACKET-ELEVATOR TAB CONTROL PULLEY -----	1	
	MS35489-14	GROMMET -----	1	
-30	0412531-1	BRACKET-LH -----	1	
	0412531-2	BRACKET-RH -----	1	
CONTINUED ON NEXT PAGE				

152 & A152 Parts Catalog


FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
30 -31	0412530-1	LUG-SEAT BELT ----- ATTACHING PARTS -----	2	Q
-32	AN4-4A	BOLT -----	1	Q
-33	AN960-416	WASHER -----	1	Q
-34	MS21042L4	NUT -----	1	Q
		---*---		
-35	0412033-6	ANGLE-RH -----	1	
	0412033-5	ANGLE-LH -----	1	
-36	0412033-3	ANGLE-LH -----	1	
-37	0412033-4	ANGLE-RH -----	1	
	1089	STUD DIGR -----	2	
-38	0412028-3	BULKHEAD ASSY-CANTED STA 70.69 -----	1	
-39	0412028-4	BULKHEAD ASSY-CANTED STA 70.69 -----	1	
	NAS680A3K	NUTPLATE -----	1	
-40	0411210-3	BULKHEAD-STA 76.44 -----	1	
-41	0412033-1	STRINGER-FWD -----	3	
-42	0412025-13	BULKHEAD ASSY-STA 95.00 -----	1	
-43	0412025-11	ANGLE -----	1	
-44	0412078-2	CLIP -----	4	
-45	0412532-1	STIFFENER-LH -----	1	
	0412532-2	STIFFENER-RH -----	1	
-46	0412058-1	STIFFENER-BULKHEAD -----	1	
-47	0412057-1	GUSSET-TAILCONE -----	1	
-48	0412526-1	BRACKET ASSY-SHOULDER HARNESS ATTACH LH -----	1	
	0412526-2	BRACKET ASSY-SHOULDER HARNESS ATTACH RH -----	1	
-49	0412023-1	STRINGER-TOP STA 95.00 TO 133.31 -----	2	
-50	0412065-3	STRINGER-AFT -----	2	
	0412033-9	STRINGER-AFT AEROBAT -----	2	A
-51	0412033-9	STRINGER-AFT -----	1	B
	0412033-10	STRINGER-AFT AEROBAT -----	1	A
-51A	0412536-1	STIFFENER-STRINGER -----	3	B
-52	0412026-3	BULKHEAD ASSY-STA 133.31 WEU 0412026-5 -----	1	C
	0412026-5	BULKHEAD ASSY-STA 133.31 -----	1	D
	0412648	STRIP-RUB -----	1	
-53	0412064-1	BRACKET-BULKHEAD -----	2	
-54	0412020-45	SKIN-FORWARD WINDOW LH -----	1	
-55	0412020-46	SKIN-FORWARD WINDOW RH -----	1	
-56	0412039-3	RETAINER-REAR WINDOW LH -----	1	
-57	0412039-4	RETAINER-REAR WINDOW RH -----	1	
-58	0412020-42	SKIN-CABIN TOP LH -----	1	
-59	0412020-43	SKIN-CABIN TOP RH -----	1	
-60	0412044-1	BRACKET-PULLEY FWD LH -----	1	
-61	0412044-2	BRACKET-PULLEY FWD RH -----	1	
-62	0412044-3	BRACKET-PULLEY REAR LH -----	1	
-63	0412044-4	BRACKET-PULLEY REAR RH -----	1	
-64	0412052-2	STIFFENER-PULLEY RH -----	1	
	0412052-1	STIFFENER-PULLEY LH -----	1	
-65	0412039-2	RETAINER-WINDOW UPPER INNER LH -----	1	
-66	0412039-5	RETAINER-WINDOW UPPER INNER RH -----	1	
-67	0460215-1	GUIDE-FLAP INDICATOR -----	1	
-68	0460214-4	BRACKET ASSY-FLAP INDICATOR -----	1	
	NAS680A3	NUTPLATE -----	1	
-69	S1863-3	NUTPLATE -----	6	
-69A	0514130-1	BRACKET-TIARA MOUNTING -----	2	E
-70	0412020-5	SKIN-LOWER WINDOW LH -----	1	
-71	0412020-6	SKIN-LOWER WINDOW RH -----	1	
-72	0412039-1	RETAINER-WINDOW LOWER OUTER LH -----	1	
-73	0412039-6	RETAINER-WINDOW LOWER OUTER RH -----	1	
-74	0412040-2	CHANNEL-REAR WINDOW -----	1	
-75	0412037-1	CLIP -----	1	
	0412097-1	SUPPORT-FAIRLEAD AILERON CARRY THRU -----	1	
-76	0412535-1	BRACKET-FAP INDICATOR -----	1	
-77	S1389-5	PAD-FELT 55.50 IN LG BKI REF S1389-5-55.50 -----	1	
-78	S1389-2	PAD-FELT 61.50 IN LG BKI REF S1389-2-61.50 -----	1	
-79	0412020-10	WINDOW-REAR CLEAR -----	1	
	0412020-21	WINDOW-REAR TINTED -----	1	
		ATTACHING PARTS -----		
-80	0412042-1	RETAINER-REAR WINDOW -----	1	
	S1389-1	PAD-FELT 19.50 IN LG BKI REF S1389-1-19.50 -----	2	
	AN525-10R10	SCREW TWO CENTER SCREWS -----	2	
	AN525-10R12	SCREW TWO END SCREWS -----	2	
	AN960-10L	WASHER -----	4	
	MS21044N3	NUT -----	4	
		---*---		
CONTINUED ON NEXT PAGE				

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION							UNITS PER ASSY	USABLE ON CODE
		1	2	3	4	5	6	7		
30 -81	0412073-1	DOUBLER -----							1	A B
-82	CM2692-32-1S	PLUG BUTTON UC -----							1	
-83	0412020-7	SKIN-LOWER REAR SPAR BULKHEAD TO STA 95.00 -----							1	
-84	0412020-26	SKIN-UPPER STA 95.00 TO 133.31 -----							1	
-85	0412020-36	SKIN-LOWER STA 95.00 TO 133.31 -----							1	
	0412020-37	SKIN-LOWER STA 95.00 TO 133.31 AEROBAT -----							1	
-86	0412020-28	SKIN-UPPER STA 133.31 TO 173.41 -----							1	
-87	0412121-3	SKIN-LOWER STA 133.31 TO 173.41 -----							1	
-88	0400209-2	CLIP ASSY-COAT HANGER -----							2	
-89	1260474-7	BRACKET-ELT MOUNTING -----							1	M N P
	1270623-5	BRACKET-ELT MOUNTING -----							1	
	1260474-5	BRACKET-ELT MOUNTING -----							1	
	NAS697A3	NUTPLATE -----							1	
-90	SEE FIG 31	TAILCONE ASSY-AFT -----							1	R
-91	S202VW	CHANNEL-7.00 IN LG BKI REF S202V0700W -----							2	
-92	S202VW	CHANNEL-7.62 IN LG BKI REF S202V0726W -----							2	
-93	0412530-1	LUG-SEAT BELT -----							2	
		ATTACHING PARTS -----								R R R
-94	AN4-4A	BOLT -----							1	
-95	AN960-416	WASHER -----							1	
-96	MS21042L4	NUT -----							1	
		-----*								
		A---152 SERIAL 15279406 & ON F152 SERIAL F15201429 & ON								
		B---A152 SERIAL A1520735 & ON FA152 SERIAL FA1520337 & ON								
		C---152 SERIAL 15279406 THRU 15281446 F152 SERIAL F15201429 THRU F15201538 A152 SERIAL A1520735 THRU A1520785 FA152 SERIAL FA1520337 THRU FA1520351								
		D---152 SERIAL 15281447 & ON F152 SERIAL F15201539 & ON A152 SERIAL A1520786 & ON FA152 SERIAL FA1520352 & ON								
		E---152 SERIAL 15281299 & ON F152 SERIAL F15201539 & ON A152 SERIAL A1520786 & ON FA152 SERIAL FA1520353 & ON								
		F---152 SERIAL 15279406 THRU 15282336, 15282338 & 15282340 F152 SERIAL F15201429 THRU F15201578								
		G---A152 SERIAL A1520735 THRU A1520821 & A1520823 FA152 SERIAL FA1520337 THRU FA1520356								
		H---152 SERIAL 15282337, 15282339, 15282341 THRU 15284541 F152 SERIAL F15201579 THRU F15201828								
		J---A152 SERIAL A1520822, A1520824 THRU A1520943 FA152 SERIAL FA1520357 THRU FA1520372								
		K---152 SERIAL 15284542 & ON F152 SERIAL F15201829 & ON								
		L---A152 SERIAL A1520944 & ON FA152 SERIAL FA1520373 & ON								
		M---152 SERIAL 15279406 THRU 15280055 F152 SERIAL F15201429 THRU F15201448 A152 SERIAL A1520735 THRU A1520750								
		N---152 SERIAL 15280056 THRU 15283833 F152 SERIAL F15201449 THRU F15201783 A152 SERIAL A1520751 THRU A1520898 FA152 SERIAL FA1520337 THRU FA1520372								
		P---152 SERIAL 15283834 & ON F152 SERIAL F15201784 & ON A152 SERIAL A1520899 & ON FA152 SERIAL FA1520373 & ON								
		Q---152 SERIAL 15282337, 15282339, 15282341 THRU 15283900 F152 SERIAL F15201579 THRU F15201798 A152 SERIAL A1520822, A1520824 THRU A1520904 FA152 SERIAL FA1520357 THRU FA1520372								
		R---152 SERIAL 15283901 & ON F152 SERIAL F15201799 & ON A152 SERIAL A1520905 & ON FA152 SERIAL FA1520373 & ON								

152 & A152 Parts Catalog

Fuselage (Cont)

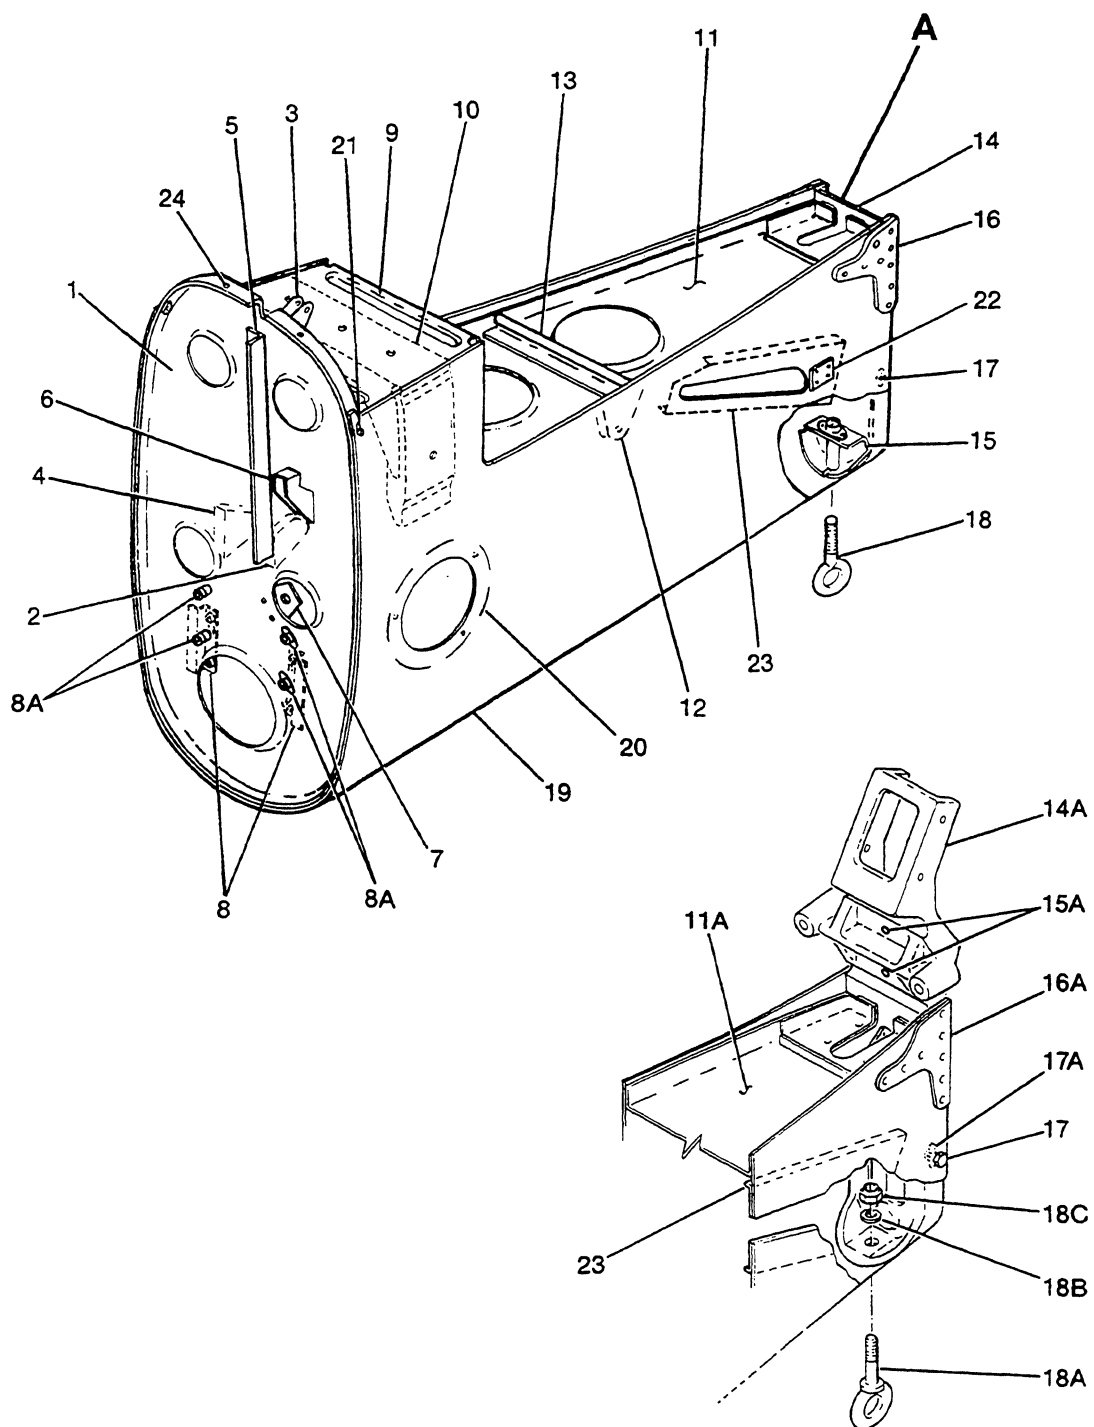

CODE J

Detail **A**

Figure 31. Aft Tailcone Assembly

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
31 -	0412020-207	TAILCONE ASSEMBLY-AFT -----	1	A
	0412020-209	TAILCONE ASSEMBLY-AFT -----	1	C
	0412020-211	TAILCONE ASSEMBLY-AFT -----	1	G
	0412020-208	TAILCONE ASSEMBLY-AFT -----	1	B
	0412020-210	TAILCONE ASSEMBLY-AFT -----	1	D
	0412020-212	TAILCONE ASSEMBLY-AFT -----	1	H
- 1	0412173-4	BULKHEAD ASSY-ST A 173.41 WEU 0412173-6 -----	1	K
	0412173-5	BULKHEAD ASSY-ST A 173.41 WEU 0412173-6 -----	1	M
	0412173-6	BULKHEAD ASSY-ST A 173.41 -----	1	P
- 2	0411458	BRACKET-ELEVATOR PULLEY LOWER LH -----	1	
- 3	0411458-1	BRACKET-ELEVATOR PULLEY UPPER RH -----	1	
- 4	0411447	BRACKET-RUDDER PULLEY -----	1	
		ATTACHING PARTS		
	AN520-10R7	SCREW -----	1	
	MS21044N3	NUT -----	1	
		-----*		
- 5	0412132	ANGLE -----	1	
- 6	0412467	BRACKET-ELEVATOR TAB CONTROL -----	1	
- 7	0433133-1	FAIRLEAD -----	1	K
	0433141-1	FAIRLEAD -----	1	L
- 8	0412529-1	BRACKET ASSY-FLASHER -----	2	N
	NAS682A08K	NUTPLATE -----	2	P
- 8A	NAS680A08	NUTPLATE -----	4	
- 9	0412177-2	BULKHEAD-STABILIZER ATTACHMENT -----	1	
-10	0432169-1	STIFFENER ASSEMBLY -----	1	
	S1863-2A	NUTPLATE -----	2	
-11	0412174-2	BULKHEAD ASSY-HORIZONTAL -----	1	F
-11A	0412547-1	BULKHEAD ASSY-HORIZONTAL -----	1	J
-12	0411447	BRACKET-RUDDER PULLEY -----	2	
		ATTACHING PARTS		
	AN520-10R7	SCREW -----	1	
	MS20365-1032C	NUT -----	1	
		-----*		
-13	S202RB	CHANNEL-6.00 IN LG BKT REF S202R600B -----	1	
-14	0412008-1	BULKHEAD ASSY STA 200.375 -----	1	F
-14A	0412548-6	BULKHEAD ASSY STA 200.375 -----	1	J
-15	0412184-1	BRACKET ASSY-MOORING RING -----	1	F
	NAS680A5	NUTPLATE -----	1	F
-15A	MS21209F1-10	INSERT-HELICAL COIL -----	2	F
-16	0412010-1	PLATE -----	2	T
-16A	0412010-2	PLATE -----	2	Q
-17	NAS428H3-7	BOLT -----	2	
	NAS697A3K	NUTPLATE -----	2	F
-17A	NAS680A3K	NUTPLATE -----	2	J
-18	0523613-1	EYEBOLT-MOORING -----	1	F
-18A	0523613-4	EYEBOLT-MOORING -----	1	J
-18B	AN960-516L	WASHER -----	1	J
-18C	MS21044N5	NUT -----	1	J
-19	0412176-2	SKIN -----	1	A
	0412544-1	SKIN -----	1	C
	0412544-3	SKIN -----	1	B
	0412176-3	SKIN AEROBAT -----	1	D
	0412544-2	SKIN AEROBAT -----	1	H
	0412544-4	SKIN AEROBAT -----	1	
-20	S237-2	DOUBLER ASSY -----	2	
	NAS395-14-3	NUTPLATE -----	3	
-21	S1862-1	NUTPLATE -----	2	
-22	0412020-17	STRIP-RUB -----	2	
-23	0412515-1	STIFFENER-RUDDER CABLE CUTOUT LH -----	1	B
	0412545-1	STIFFENER-RUDDER CABLE CUTOUT LH -----	1	E
	0412515-2	STIFFENER-RUDDER CABLE CUTOUT RH -----	1	E
	0412545-2	STIFFENER-RUDDER CABLE CUTOUT RH -----	1	E
-24	S1863-2	NUTPLATE -----	2	
NOTE. *WHEN INITIALLY ORDERING THIS PART FOR AIRCRAFT PRIOR TO SERIALS 15284651, F15201894, A1520956 & F1520378 ALSO ORDER ONE NAS1305-13 BOLT, TWO S2385-5 WASHERS & ONE MS21042L5 NUT. A---152 SERIAL 15279406 THRU 15282336, 15282338 & 15282340 F152 SERIAL F15201429 THRU F15201578 CONTINUED ON NEXT PAGE				

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION							UNITS PER ASSY	USABLE ON CODE
		1	2	3	4	5	6	7		
31 -		B---A152 SERIAL A1520735 THRU A1520821 & A1520823 FA152 SERIAL FA1520337 THRU FA1520356 C---152 SERIAL 15282337, 15282339, 15282341 THRU 15284541 F152 SERIAL F15201579 THRU F15201828 D---A152 SERIAL A1520822, A1520824 THRU A1520943 FA152 SERIAL FA1520357 THRU FA1520372 E---A152 SERIAL A1520822, A1520824 & ON FA152 SERIAL FA1520357 & ON F---152 SERIAL 15279406 THRU 15284541 F152 SERIAL F15201429 THRU F15201828 A152 SERIAL A1520735 THRU A1520943 FA152 SERIAL FA1520337 THRU FA1520372 G---152 SERIAL 15284542 & ON F152 SERIAL F15201829 & ON H---A152 SERIAL A1520944 & ON FA152 SERIAL FA1520373 & ON J---152 SERIAL 15284542 & ON F152 SERIAL F15201829 & ON A152 SERIAL A1520944 & ON FA152 SERIAL FA1520373 & ON K---152 SERIAL 15279406 THRU 15283843 F152 SERIAL F15201429 THRU F15201723 A152 SERIAL A1520735 THRU A1520898 FA152 SERIAL FA1520337 THRU FA1520372 L---152 SERIAL 15283844 & ON F152 SERIAL F15201724 & ON A152 SERIAL A1520899 & ON FA152 SERIAL FA1520373 & ON M---152 SERIAL 15283844 THRU 15284895 F152 SERIAL F15201724 THRU F15201893 A152 SERIAL A1520899 THRU A1520970 FA152 SERIAL FA1520373 THRU FA1520387 N---152 SERIAL 15279406 THRU 15284895 F152 SERIAL F15201429 THRU F15201893 A152 SERIAL A1520735 THRU A1520970 FA152 SERIAL FA1520337 THRU FA1520387 P---152 SERIAL 15284896 & ON F152 SERIAL F15201894 & ON A152 SERIAL A1520971 & ON FA152 SERIAL FA1520388 & ON Q---152 SERIAL 15285052 & ON F152 SERIAL F15201894 & ON A152 SERIAL A1520975 & ON FA152 SERIAL FA1520378 & ON								

152 & A152 Parts Catalog

Fuselage (Cont)

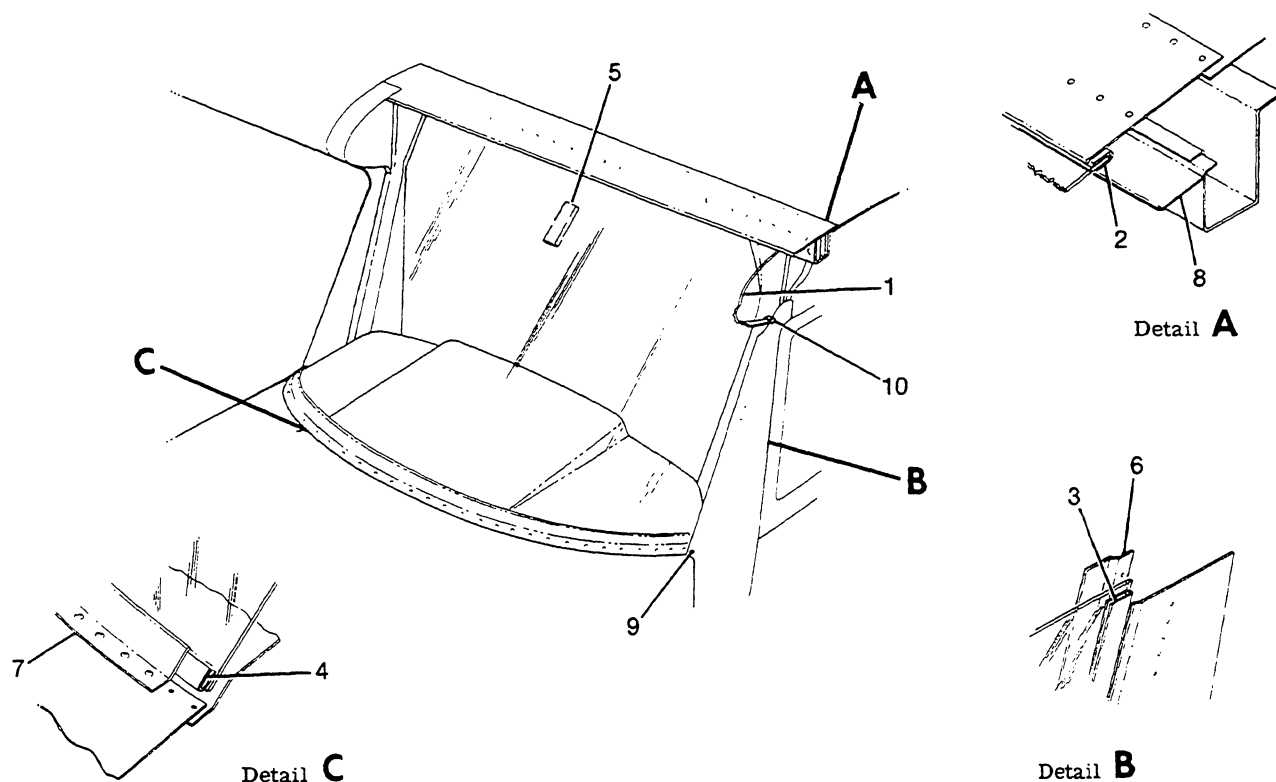


Figure 32. Windshield Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
32 -		WINDSHIELD INSTALLATION -----	NP	
- 1	0413419-201	WINDSHIELD ASSEMBLY-CLEAR -----	1	
	0413419-202	WINDSHIELD ASSEMBLY-TINTED -----	1	
- 2	S1389-5	PAD-FELT 44.0 IN LG BKI REF S1389-5-44.0 -----	1	
- 3	S1389-5	PAD-FELT 18.00 IN LG BKI REF S1389-5-18.0 -----	2	
- 4	S1389-5	PAD-FELT 78.0 IN LG BKI REF S1389-5-78.0 -----	1	
- 5	0413437-1	BASE PLATE ASSY-COMPASS MOUNT -----	1	
- 6	0411870	STRIP-WINDSHIELD SIDE -----	2	A
	0411870-0-531	STRIP-WINDSHIELD SIDE -----	2	B
- 7	0411479-50	STRIP-WINDSHIELD LOWER OUTER -----	1	
- 8	0411481	STRIP-WINDSHIELD ATTACHMENT -----	1	A
	0411481-0-531	STRIP-WINDSHIELD ATTACHMENT -----	1	B
- 9	AN525-832R8	SCREW -----	2	
	AN960-8L	WASHER -----	4	
	MS21044N08	NUT -----	2	
-10	0413530-1	COVER -----	2	
NOTE. <THIS PART NUMBER MUST HAVE A SECOND DASH NUMBER ADDED TO DENOTE COLOR. REFER TO HOW TO ORDER INTERIOR PARTS-PAGE IX. A---152 SERIAL 15279406 THRU 15284541 F152 SERIAL F15201429 THRU F15201808 A152 SERIAL A1520735 THRU A1520943 FA152 SERIAL FA1520337 THRU FA1520372 B---152 SERIAL 15284542 & ON F152 SERIAL F15201809 & ON A152 SERIAL A1520944 & ON FA152 SERIAL FA1520373 & ON				

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
33 -		NOSE GEAR INSTALLATION -----	NP	
- 1	SEE FIG 34	STRUT ASSY-NOSE -----	1	
		ATTACHING PARTS -----		
- 2	NAS561P12-48	ROLL PIN -----	1	
- 3	AN5-24A	BOLT -----	1	
- 4	MS21042L5	NUT -----	1	
	AN960-516	WASHER -----	2	
		-----*		
- 5	0543022-3	TUBE ASSY-NOSE GEAR STEERING LH -----	1	
	0543022-4	TUBE ASSY-NOSE GEAR STEERING RH -----	1	
		ATTACHING PARTS -----		
- 6	AN3-10A	BOLT -----	1	
	MS21044N3	NUT -----	1	
- 7	MS20364-624C	NUT -----	1	
	NAS43HT6-29	BUSHING -----	1	
		-----*		
- 8	MS20435M4-14	RIVET -----	1	
- 9	0543023	CLEVIS -----	1	
-10	AN316-6R	NUT -----	1	
-11	C109	BALL JOINT TOK -----	1	
		CONTINUED ON NEXT PAGE		

152 & A152 Parts Catalog

Aligning Gear

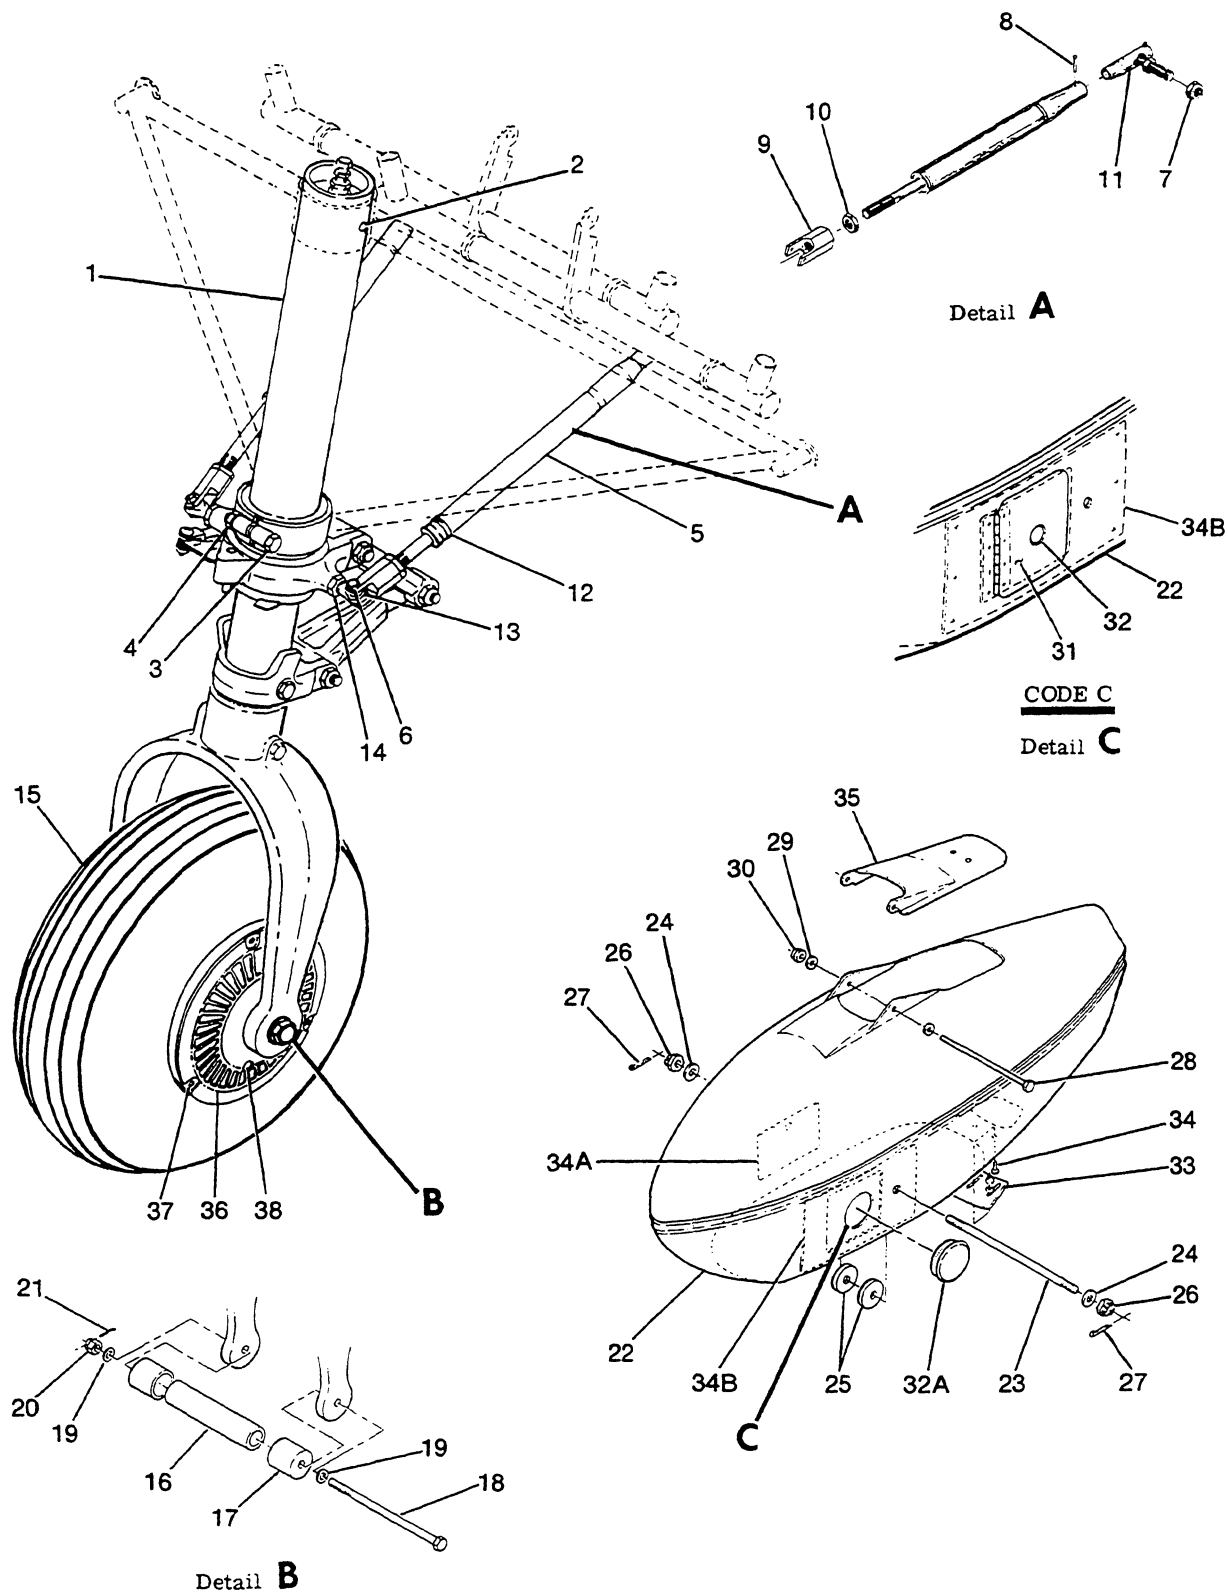


Figure 33. Nose Gear Installation

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION							UNITS PER ASSY	USABLE ON CODE
		1	2	3	4	5	6	7		
33 -12	NAS397-16	CLAMP	-----	-----	-----	-----	-----	-----	2	
-13	S1823-3	BEARING-ROD END	-----	-----	-----	-----	-----	-----	2	
-14	AN316-6R	NUT	-----	-----	-----	-----	-----	-----	2	
-15	SEE FIG 35	WHEEL ASSY-NOSE	-----	-----	-----	-----	-----	-----	1	
	SEE FIG 36	WHEEL ASSY-NOSE ALTERNATE	-----	-----	-----	-----	-----	-----	1	
		ATTACHING PARTS	-----	-----	-----	-----	-----	-----		
-16	0442142-1	TUBE-AXLE	-----	-----	-----	-----	-----	-----	1	
-17	0442143-2	FERRULE	-----	-----	-----	-----	-----	-----	2	
-18	AN7-74	BOLT	-----	-----	-----	-----	-----	-----	1	
-19	AN960C716	WASHER	-----	-----	-----	-----	-----	-----	2	
-20	AN320-7	NUT	-----	-----	-----	-----	-----	-----	1	
-21	MS24665-285	PIN-COTTER	-----	-----	-----	-----	-----	-----	1	
		-----*	-----	-----	-----	-----	-----	-----		
-22	0543079-1	SPEED FAIRING ASSY-NOSE GEAR	-----	-----	-----	-----	-----	-----	1	C D
	0543079-10	SPEED FAIRING ASSY-NOSE GEAR	-----	-----	-----	-----	-----	-----	1	
		ATTACHING PARTS	-----	-----	-----	-----	-----	-----		
-23	0742410-28	STUD	-----	-----	-----	-----	-----	-----	1	
-24	AN960-716L	WASHER	-----	-----	-----	-----	-----	-----	2	
-25	AN970-7	WASHER BETWEEN FORK & FAIRING	-----	-----	-----	-----	-----	-----	2	
-26	AN320-7	NUT	-----	-----	-----	-----	-----	-----	2	
-27	MS24665-285	COTTER PIN	-----	-----	-----	-----	-----	-----	2	
-28	AN5-37A	BOLT	-----	-----	-----	-----	-----	-----	1	
-29	AN960-516L	WASHER	-----	-----	-----	-----	-----	-----	AR	
-30	MS21042L5	NUT	-----	-----	-----	-----	-----	-----	1	
		-----*	-----	-----	-----	-----	-----	-----		
-31	0541223-13	DOOR ASSY-WHEEL FAIRING WEU 0543084-1	-----	-----	-----	-----	-----	-----	1	A B A D
	0543084-1	DOOR ASSY-WHEEL FAIRING	-----	-----	-----	-----	-----	-----	1	
-32	KM610-64	LATCH-WHEEL FAIRING DOOR USED WITH 0541223-13 ONLY	-----	-----	-----	-----	-----	-----	1	
-32A	S2446-32	PLUG	-----	-----	-----	-----	-----	-----	1	
-33	0541221-2	SCRAPER	-----	-----	-----	-----	-----	-----	1	
		ATTACHING PARTS	-----	-----	-----	-----	-----	-----		
-34	AN520-10R12	SCREW	-----	-----	-----	-----	-----	-----	3	
	AN960-10	WASHER	-----	-----	-----	-----	-----	-----	6	
	MS21044N3	NUT	-----	-----	-----	-----	-----	-----	3	
		-----*	-----	-----	-----	-----	-----	-----		
-34A	0541207-4	DOUBLER	-----	-----	-----	-----	-----	-----	1	
-34B	0541222-3	DOUBLER	-----	-----	-----	-----	-----	-----	1	
-35	0743625-17	COVER PLATE ASSY	-----	-----	-----	-----	-----	-----	1	
-36	0743627-5	CAP-NOSE WHEEL HUB VALVE STEM SIDE	-----	-----	-----	-----	-----	-----	1	
	0743627-6	CAP-NOSE WHEEL HUB	-----	-----	-----	-----	-----	-----	1	
		ATTACHING PARTS	-----	-----	-----	-----	-----	-----		
-37	AN515-8R4	SCREW USED WITH 1241156-12	-----	-----	-----	-----	-----	-----	3	
	S2191-8-4	SCREW USED WITH C163005-0201	-----	-----	-----	-----	-----	-----	3	
	AN936A8	WASHER	-----	-----	-----	-----	-----	-----	3	
		-----*	-----	-----	-----	-----	-----	-----		
-38	6241B	EXTENSION-VALVE .50 IN LONG DL	-----	-----	-----	-----	-----	-----	1	
A---152 SERIAL 15279406 THRU 15282762 F152 SERIAL F15201429 THRU F15201578 A152 SERIAL A1520735 THRU A1520839 FA152 SERIAL FA1520337 THRU FA1520356 B---152 SERIAL 15282763 THRU 15283958 F152 SERIAL F15201579 THRU F15201783 A152 SERIAL A1520840 THRU A1520909 FA152 SERIAL FA1520357 THRU FA1520372 C---152 SERIAL 15279406 THRU 15283958 F152 SERIAL F15201429 THRU F15201783 A152 SERIAL A1520735 THRU A1520909 FA152 SERIAL FA1520337 THRU FA1520372 D---152 SERIAL 15283959 & ON F152 SERIAL F15201784 & ON A152 SERIAL A1520910 & ON FA152 SERIAL FA1520373 & ON										

152 & A152 Parts Catalog

Aligning Gear (Cont)

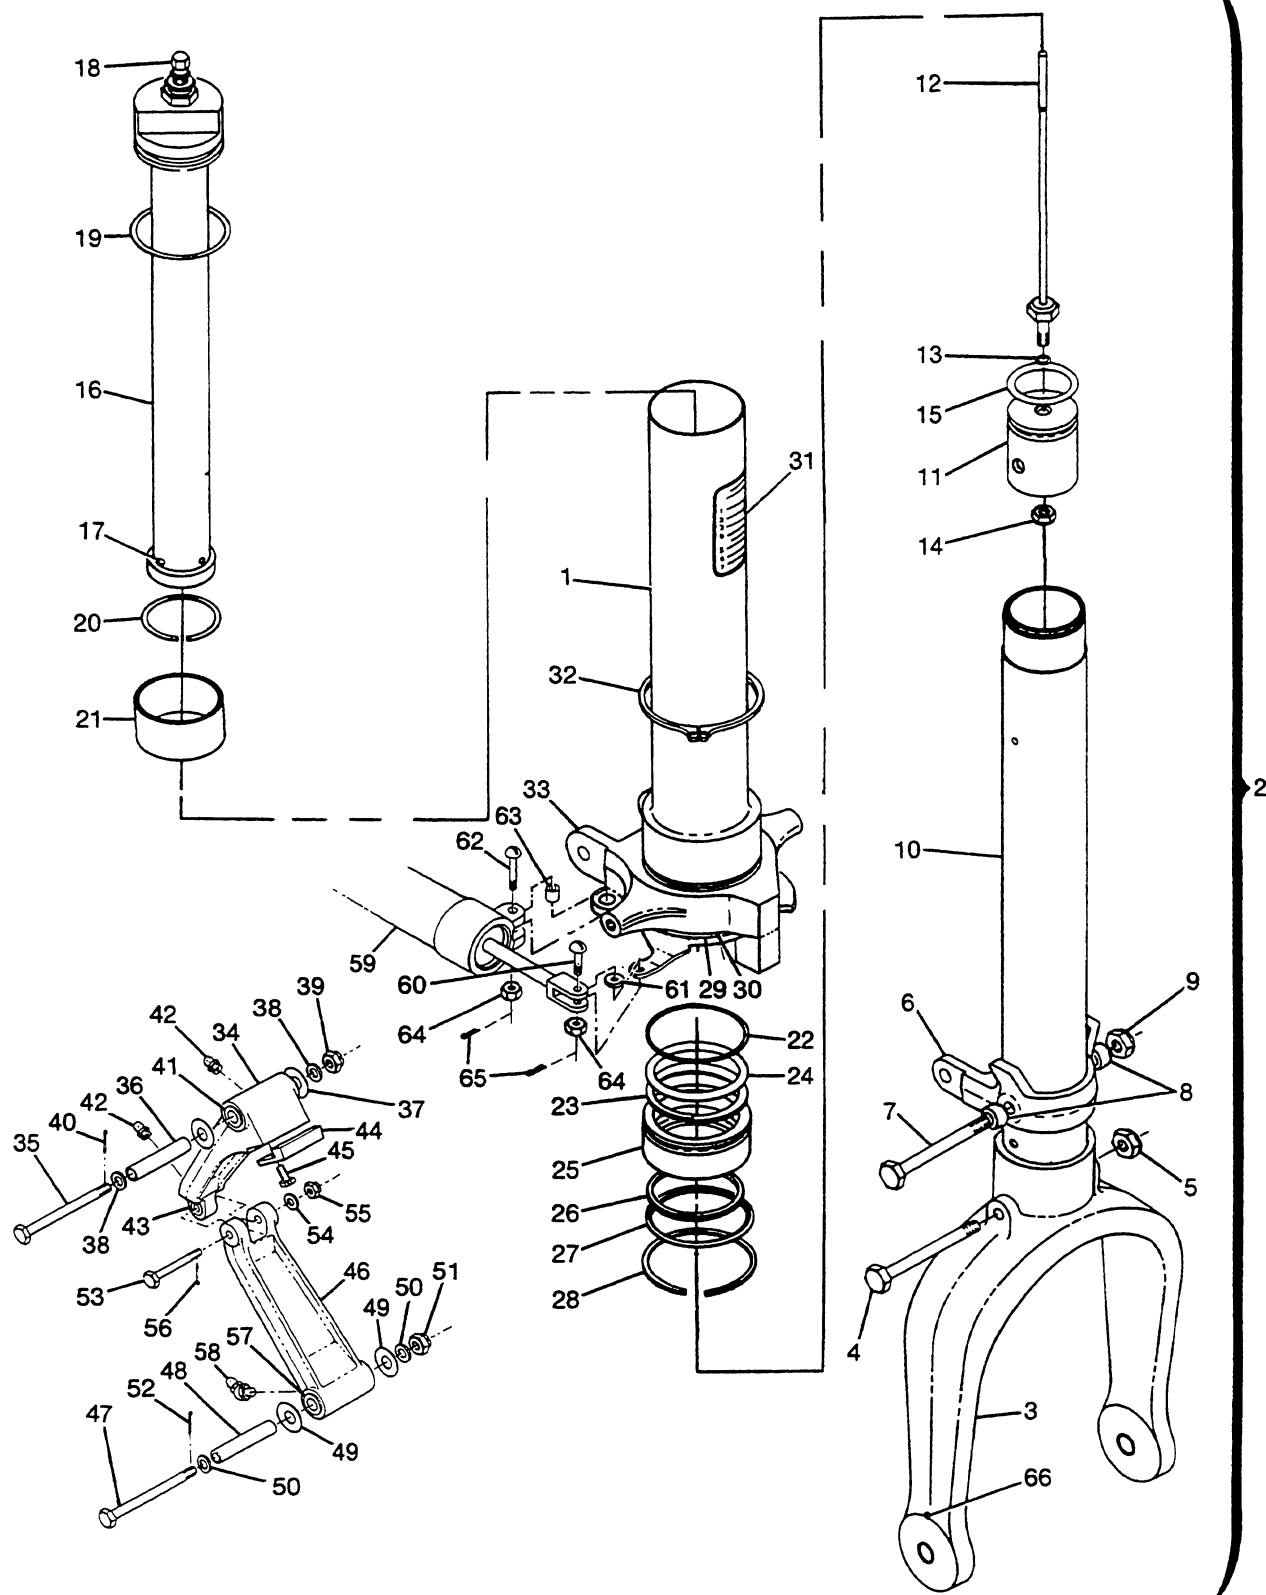


Figure 34. Nose Gear Strut Assembly

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
34 -	0442504-13	STRUT ASSEMBLY-NOSE GEAR -----	1	
- 1	0543008-6	TUBE-SHOCK STRUT -----	1	
- 2	0442504-201	SHOCK STRUT ASSY-LOWER -----	1	
- 3	0442503-7	FORK-NOSE GEAR -----	NP	
		ATTACHING PARTS		
- 4	AN5-33A	BOLT -----	1	
- 5	MS21042L5	NUT -----	1	
		---*---		
- 6	0543007-2	FITTING -----	NP	
		ATTACHING PARTS		
- 7	AN5-43A	BOLT -----	1	
- 8	0743009-1	SPACER -----	2	
- 9	MS21042L5	NUT -----	1	
		---*---		
-10	0543006-5	TUBE-INNER -----	NP	
-11	0743612-1	PLUG-PIN BASE -----	1	
-12	0442017-1	PIN-METERING -----	1	
		ATTACHING PARTS		
-13	AN6227B5	O RING -----	1	
-14	MS21042L4	NUT -----	1	
		---*---		
-15	AN6227B26	O RING -----	1	
-16	0543000-27	ORIFICE-PISTON SUPPORT ASSY -----	1	
-17	AN500A6-8	SCREW -----	4	
-18	0543036-1	VALVE ASSY -----	1	
	S1827-1	VALVE ASSY -----	1	
	AN901-5A	GASKET -----	1	
-19	AN6230B3	O RING -----	1	
-20	0841200-19	LOCK RING -----	1	
-21	1243021-1	BEARING -----	1	
-22	AN6230B6	O RING -----	1	
-23	S1628-329	RING-BACK UP -----	2	
-24	AN6227B32	O RING -----	1	
-25	1243626-1	RING-PACK SUPPORT -----	1	
-26	S2418-1	SCRAPER -----	1	
-27	0841200-15	RING-PACK RETAINER -----	1	
-28	0841200-25	LOCK RING -----	1	
-29	0543029	WASHER -----	1	
-30	1243030-5	SHIM .006 THICK -----	AR	
	1243030-6	SHIM .012 THICK -----	AR	
	1243030-7	SHIM .020 THICK -----	AR	
-31	0442145-1	PLACARD-NOSE GEAR SHOCK STRUT -----	1	
-32	MS16624-1275	RING-RETAINER -----	1	
-33	0743011-6	ARM ASSY-STEERING -----	1	
	B4416D	BEARING TOR -----	1	
	AN944-101A	FITTING-LUBRICATION -----	1	
-34	0442506-1	LINK ASSY-TORQUE UPPER -----	1	
		ATTACHING PARTS		
-35	AN4-31	BOLT -----	1	
-36	0543047-1	SPACER -----	1	
-37	S1450-6B14-010	WASHER -----	AR	
-38	AN960-416L	WASHER -----	2	
-39	AN310-4	NUT -----	1	
-40	MS24665-134	PIN-COTTER -----	1	
		---*---		
-41	NAS77-6-88	BUSHING -----	2	
-42	AN944-101A	FITTING-LUBRICATOR -----	2	
-43	NAS77-3-23	BUSHING -----	2	
-44	0442506-8	STOP LUG -----	1	
		ATTACHING PARTS		
-45	AN3-3A	BOLT -----	2	
	0442506-9	LUG-SAFETY -----	1	
		---*---		

CONTINUED ON NEXT PAGE

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION							UNITS PER ASSY	USABLE ON CODE
		1	2	3	4	5	6	7		
34 -46	0442506-2	LINK ASSY-TORQUE LOWER -----							1	
		ATTACHING PARTS								
-47	AN4-31	BOLT -----							1	
-48	0543047-1	SPACER -----							1	
-49	S1450-6814-010	WASHER -----							AR	
-50	AN960-416L	WASHER -----							AR	
-51	AN310-4	NUT -----							1	
-52	MS24665-134	PIN-COTTER -----							1	
-53	NAS464-3-22	BOLT -----							1	
-54	AN960-10L	WASHER -----							1	
-55	AN310-3	NUT -----							1	
-56	MS24665-132	PIN-COTTER -----							1	
		---*---								
-57	NAS77-6-88	BUSHING -----							2	
-58	MS15002-3	FITTING-LUBRICATOR -----							1	
-59	SEE FIG 37	DAMPENER ASSY -----							1	
		ATTACHING PARTS								
-60	AN23-11	BOLT -----							1	
-61	AN960-10L	WASHER -----							AR	
-62	AN23-17	BOLT -----							1	
-63	NAS75-3-009	SPACER -----							1	
-64	AN320-3	NUT -----							2	
-65	MS24665-132	PIN-COTTER -----							2	
		---*---								
-66	NAS561P4-10	PIN-ROLL -----							2	
		A---152 SERIAL 15279406 THRU 15281183 F152 SERIAL F15201429 THRU F15201484 A152 SERIAL A1520735 THRU A1520777 FA152 SERIAL FA1520337 THRU FA1520342 B---152 SERIAL 15281184 & ON F152 SERIAL F15201485 & ON A152 SERIAL A1520778 & ON FA152 SERIAL FA1520343 & ON								

152 & A152 Parts Catalog


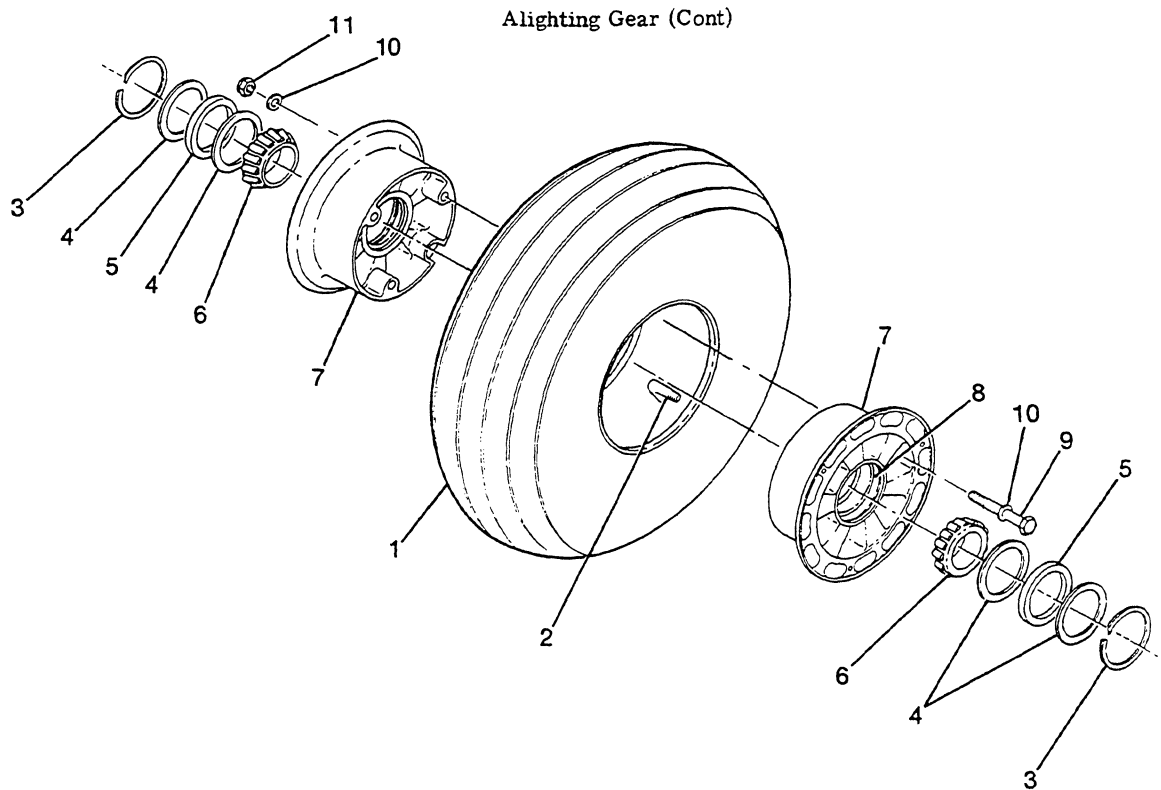


Figure 35. Nose Gear Wheel & Tire Assembly

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION							UNITS PER ASSY	USABLE ON CODE
		1	2	3	4	5	6	7		
35 -		NOSE GEAR WHEEL & TIRE ASSEMBLY -----							NP	
- 1	C262003-0102	TIRE-BLACKWALL 5.00X5 4 PLY RATED -----							1	
- 2	C262023-0101	TUBE 5.00X5 -----							1	
	C163005-0201	WHEEL ASSY -----							1	
- 3	A1636-23	RING-RETAINING MCL -----							2	
- 4	A30048	RING-GREASE SEAL MCL -----							4	
- 5	A30047	GREASE SEAL-FELT MCL -----							2	
- 6	A30078-2	BEARING MCL -----							2	
- 7	C30598	WHEEL HALF ASSY MCL -----							2	
- 8	A30078-1	CUP-BEARING MCL -----							1	
- 9	AN5-22A	BOLT -----							3	
-10	AN960-516	WASHER -----							6	
-11	MS20365-524A	NUT -----							3	

152 & A152 Parts Catalog

Aligning Gear (Cont)

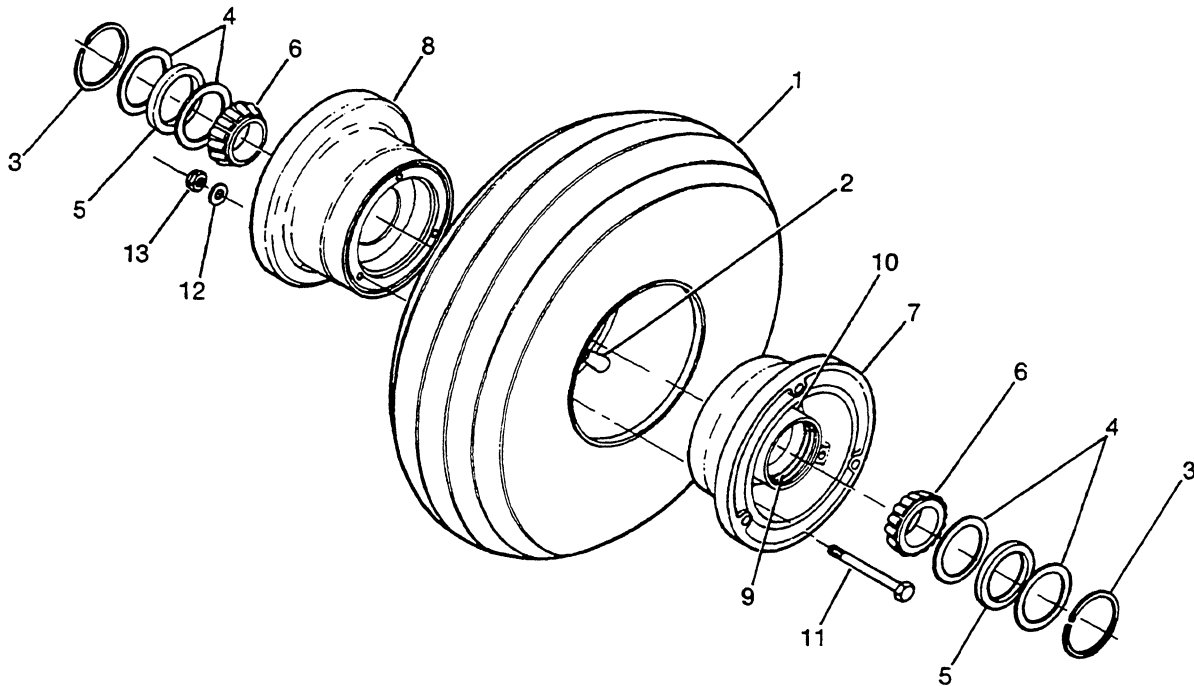

ALTERNATE

Figure 36. Nose Gear Wheel & Tire Assembly

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION							UNITS PER ASSY	USABLE ON CODE
		1	2	3	4	5	6	7		
36 -		NOSE GEAR WHEEL & TIRE ASSEMBLY							NP	
- 1	C262003-0102	TIRE-BLACKWALL 5.00X5 4 PLY RATED							1	
- 2	C262023-0101	TUBE-5.00X5							1	
	1241156-12	WHEEL ASSY CFP 40-77							1	
- 3	155-00200	RING CFP							2	
- 4	153-00800	RING-GREASE SEAL CFP							4	
- 5	154-00600	GREASE SEAL-FELT CFP							2	
- 6	214-00400	CONE-BEARING CFP							2	
- 7	161-03100	WHEEL HALF-MALE CFP							1	
- 8	162-02800	WHEEL HALF-FEMALE CFP							1	
- 9	214-00300	CUP-BEARING CFP							1	
-10	217-00100	GROMMET CFP							1	
-11	AN4-22A	BOLT							3	
-12	AN960-416	WASHER							3	
-13	MS20365-428C	NUT							3	

152 & A152 Parts Catalog

Aligning Gear (Cont)

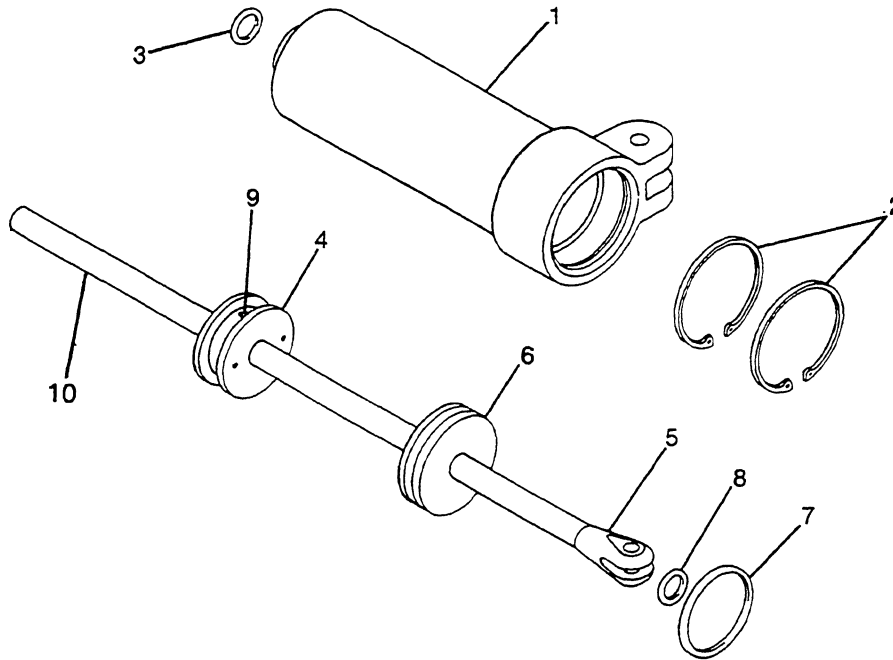


Figure 37. Shimmy Dampener Assembly

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION							UNITS PER ASSY	USABLE ON CODE
		1	2	3	4	5	6	7		
37 -	0442512-1	DAMPENER ASSEMBLY-SHIMMY -----							1	
- 1	0542100-6	BARREL-SHIMMY DAMPENER -----							1	
- 2	MS16625-1118	RING-RETAINING -----							2	
- 3	AN6227B6	O RING -----							1	
- 4	0542118-5	PISTON ASSY-SHIMMY DAMPENER -----							1	
- 5	0542101-1	SHAFT ASSY -----							1	
- 6	0542102-3	HEAD BEARING -----							1	
- 7	MS28775-213	O RING -----							1	
- 8	MS28775-011	O RING -----							1	
- 9	NAS561P4-14	ROLL PIN -----							1	
- 10	0842400-3	PISTON -----							1	

152 & A152 Parts Catalog

Aligning Gear (Cont)

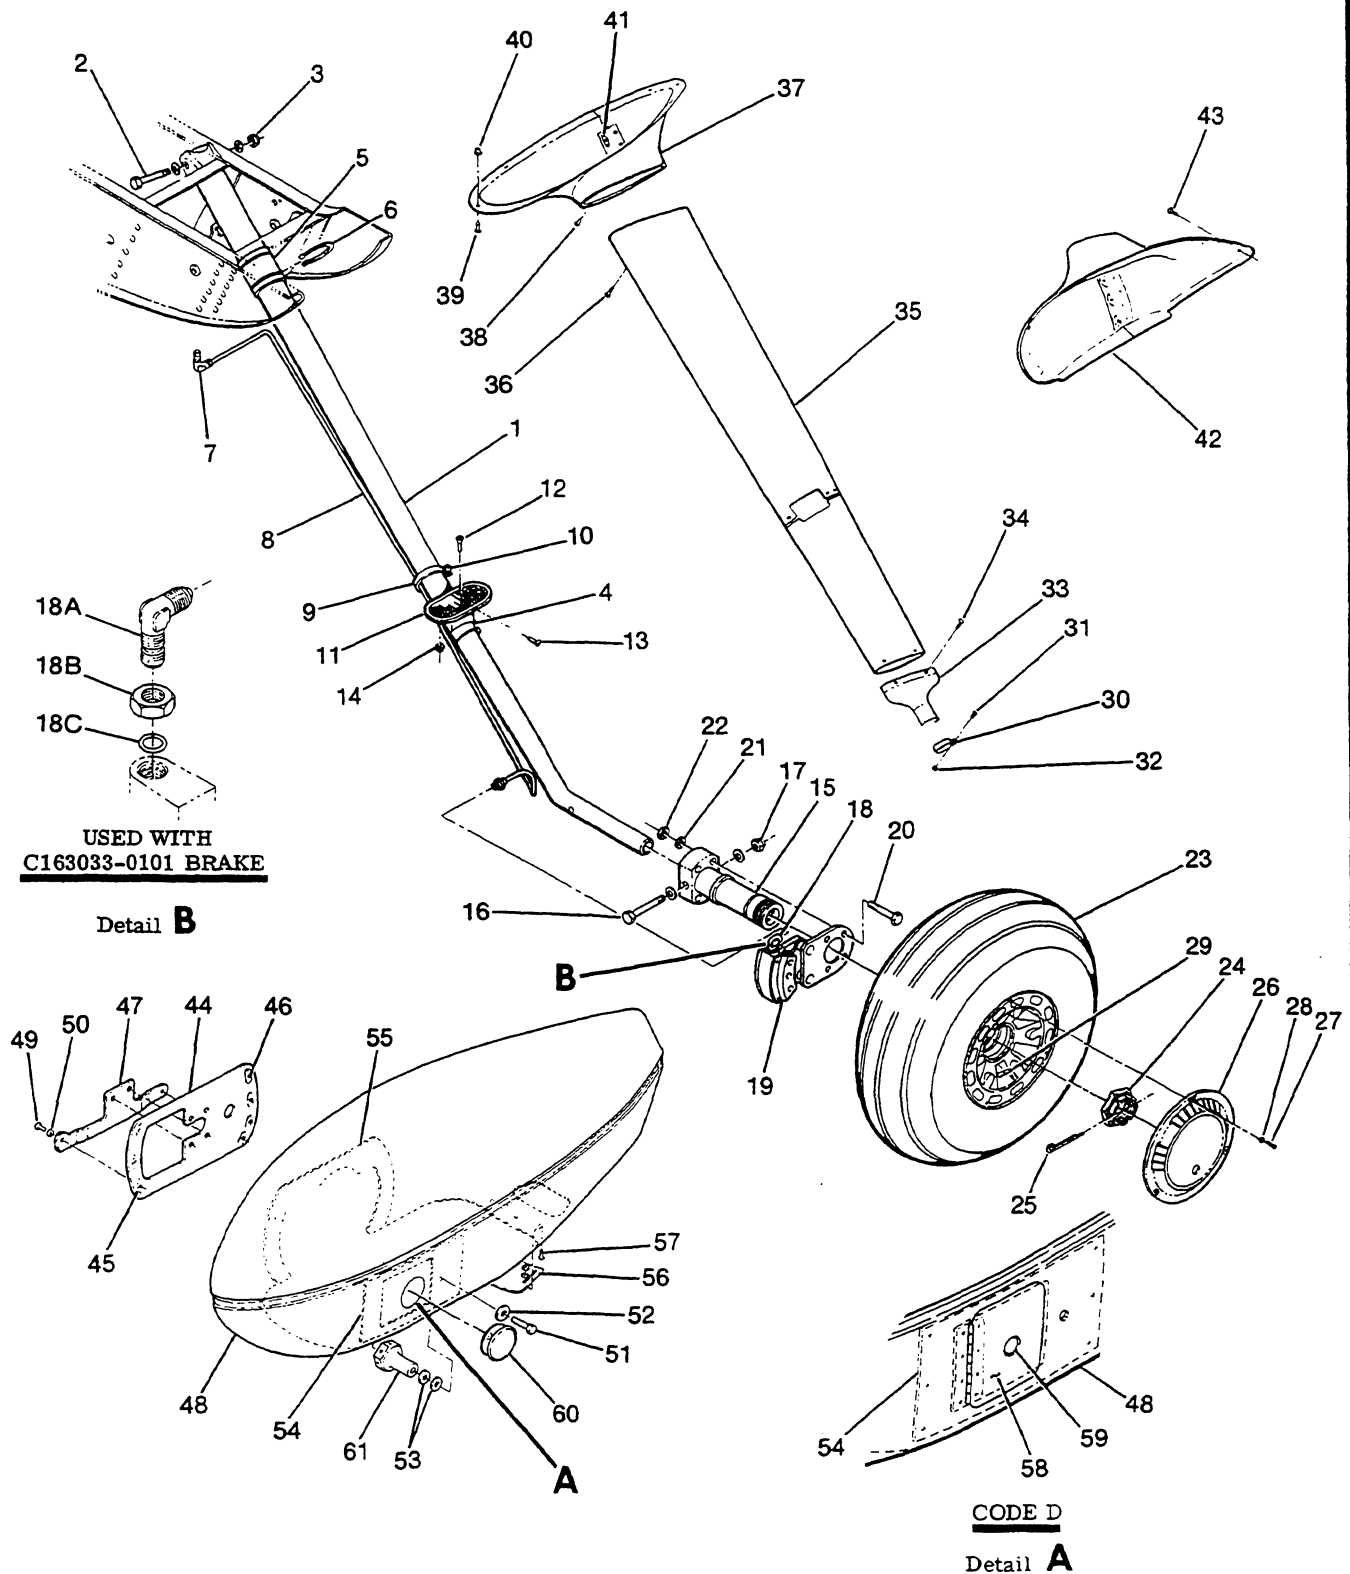


Figure 38. Main Landing Gear Installation

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
38 -		MAIN LANDING GEAR INSTALLATION -----	NP	
- 1	0441212-5	SPRING ASSY-LANDING GEAR LH -----	1	
	0441212-6	SPRING ASSY-LANDING GEAR RH -----	1	
		ATTACHING PARTS -----		
- 2	0441221-1	BOLT -----	1	
	AN960-516L	WASHER -----	2	
- 3	MS21042L5	NUT -----	1	
		-----*		
- 4	0441214-7	BRACKET ASSY-STEP LH -----	1	
	0441214-8	BRACKET ASSY-STEP RH -----	1	
- 5	0441224-1	BUSHING -----	2	
- 6	MS16624-1206	SNAP RING -----	4	
- 7	AN833-3D	ELBOW -----	2	
- 8	0400311-109	LINE ASSY-BRAKE LH -----	1	
	0400311-108	LINE ASSY-BRAKE RH -----	1	
		ATTACHING PARTS -----		
- 9	AN735D24	CLAMP -----	1	
	S1071-3	TUBE-1.0 IN LG BKI -----	1	
-10	NAS221-6	SCREW -----	1	
	MS21044N3	NUT -----	1	
		-----*		
-11	0541211-1	STEP-CABIN ENTRANCE -----	2	
		ATTACHING PARTS -----		
-12	AN507-1032R10	SCREW -----	1	
-13	NAS221-9	SCREW -----	2	
-14	MS21044N3	NUT -----	3	
		-----*		
-15	0441203-1	AXLE-MAIN LANDING GEAR -----	2	
		ATTACHING PARTS -----		
-16	0441221-1	BOLT -----	1	
	AN960-516L	WASHER -----	2	
-17	MS21042L5	NUT -----	1	
		-----*		
-18	MS20822-3D	ELBOW USED WITH C163032-0110 & C163030-0113 BRAKES -----	2	F G G G
	MS20822-3D	ELBOW USED WITH C163030-0113 BRAKE ONLY -----	2	
-18A	AN921-3D	ELBOW USED WITH C163033-0101 BRAKE ONLY -----	2	
-18B	AN924-3D	NUT USED WITH C163033-0101 BRAKE ONLY -----	2	
-18C	MS28778-3	O RING USED WITH C163033-0101 BRAKE ONLY -----	2	
-19	SEE FIG 39	BRAKE ASSY -----	2	
	SEE FIG 40	BRAKE ASSY ALTERNATE -----	2	
		ATTACHING PARTS -----		
-20	AN5-12A	BOLT UPPER -----	2	
	AN6-13A	BOLT LOWER -----	2	
-21	AN960-516L	WASHER UPPER -----	2	
	AN960-616L	WASHER LOWER -----	2	
-22	MS21042L5	NUT UPPER -----	2	
	MS21042L6	NUT LOWER -----	2	
		-----*		
-23	SEE FIG 39	WHEEL & TIRE ASSY -----	NP	
	SEE FIG 40	WHEEL & TIRE ASSY ALTERNATE -----	NP	
-24	S1117-24	NUT -----	2	
-25	MS24665-351	PIN-COTTER -----	2	
-26	0741048-8	CAP-MAIN GEAR HUB -----	2	
		ATTACHING PARTS -----		
-27	S2191-8-4	SCREW USE WITH C163005-0101 WHEEL ASSY -----	3	
	AN515-8R4	SCREW USE WITH C163001-0104 WHEEL ASSY -----	3	
-28	AN936A8	WASHER -----	3	
		-----*		
-29	6241M	EXTENSION-VALVE DL -----	2	
	3680C	EXTENSION-VALVE ALTERNATE SV -----	2	
-30	AN735D18	CLAMP -----	2	
		ATTACHING PARTS -----		
-31	NAS221-6	SCREW -----	1	
-32	MS21044N3	NUT -----	1	
		-----*		
-33	0441218-1	COVER PLATE-MAIN GEAR SPRING FAIRING LH -----	1	
	0441218-2	COVER PLATE-MAIN GEAR SPRING FAIRING RH -----	1	
		ATTACHING PARTS -----		
-34	AN515-6R6	SCREW -----	2	
		-----*		

CONTINUED ON NEXT PAGE

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
38 -35	0441228-1 0441228-2	FAIRING ASSY-MAIN GEAR SPRING LH ----- FAIRING ASSY-MAIN GEAR SPRING RH -----	1 1	
-36	AN515-8R6	ATTACHING PARTS SCREW -----	8	
	NAS680A08	NUTPLATE DOUBLE LUG -----	4	
	NAS696A06L	NUTPLATE -----	2	
	NAS696A08	NUTPLATE SINGLE LUG -----	4	
-37	0441217-215 0441217-19	FAIRING ASSY-MAIN GEAR LH VESTAL WHITE ONLY ----- FAIRING ASSY-MAIN GEAR LH USED ON AIRCRAFT REQUIRING ----- PAINTED COLOR OTHER THAN VESTAL WHITE	1 1 1	A
	0441217-214 0441217-18	FAIRING ASSY-MAIN GEAR RH VESTAL WHITE ONLY ----- FAIRING ASSY-MAIN GEAR RH USED ON AIRCRAFT REQUIRING ----- PAINTED COLOR OTHER THAN VESTAL WHITE	1 1 1	A
-38	AN515-6R4	ATTACHING PARTS SCREW -----	2	
-39	AN515-8R12	SCREW -----	5	
-40	S1613-08-75	RIVNUT -----	5	
-41	NAS680A06	NUTPLATE -----	2	
-42	0441227-1 0441227-2	FAIRING ASSY-BRAKE LH ----- FAIRING ASSY-BRAKE RH -----	1 1	
-43	AN525-10R10 S1021Z6-6	ATTACHING PARTS SCREW ----- SCREW -----	6 3	
-44	0441225-1 0441225-2	PLATE ASSY-MAIN GEAR WHEEL FAIRING LH ----- PLATE ASSY-MAIN GEAR WHEEL FAIRING RH -----	1 1	
-45	NAS680A3K	NUTPLATE -----	3	
-46	NAS686A3	NUTPLATE -----	4	
-47	0441226-1 0441226-2	STIFFENER-WHEEL FAIRING LH ----- STIFFENER-WHEEL FAIRING RH -----	1 1	
-48	0541223-17 0541223-39 0541223-16 0541223-40	FAIRING ASSY-MAIN GEAR WHEEL LH ----- FAIRING ASSY-MAIN GEAR WHEEL LH ----- FAIRING ASSY-MAIN GEAR WHEEL RH ----- FAIRING ASSY-MAIN GEAR WHEEL RH -----	1 1 1 1	D E D E
-49	AN525-10R10	ATTACHING PARTS SCREW -----	7	
-50	S1450-309-032	WASHER -----	7	
-51	AN6-6A	BOLT -----	1	
-52	AN960-616L	WASHER -----	1	
-53	AN960-616	WASHER -----	2	
-54	0541222-1	DOUBLER -----	1	
-55	0541219-1 0541219-2	DOUBLER-LH ----- DOUBLER-RH -----	1 1	
-56	0541221-1	SCRAPER -----	1	
-57	AN520-10R12 AN960-10 MS21044N3	ATTACHING PARTS SCREW ----- WASHER ----- NUT -----	3 6 3	
-58	0541223-13 0543084-1	DOOR ASSY-WHEEL FAIRING ACCESS WEU 0543084-1 ----- DOOR ASSY-WHEEL FAIRING ACCESS -----	1 1	B C
-59	KM610-64 NAS686A3	LATCH-WHEEL FAIRING DOOR USED WITH 0541223-13 ONLY -- NUTPLATE ATTACH BRAKE FAIRING -----	1 6	B E
-60	S2446-32	PLUG -----	1	
-61	0741047-2 MS24665-362	NUT ----- PIN-COTTER -----	2 2	
A---152 SERIAL 15279406 & ON F152 SERIAL F15201429 & ON				
CONTINUED ON NEXT PAGE				

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION							UNITS PER ASSY	USABLE ON CODE
		1	2	3	4	5	6	7		
38 -		B---152 SERIAL 15279406 THRU 15282762 F152 SERIAL F15201429 THRU F15201578 A152 SERIAL A1520735 THRU A1520839 FA152 SERIAL FA1520337 THRU FA1520356 C---152 SERIAL 15282763 THRU 15283958 F152 SERIAL F15201579 THRU F15201783 A152 SERIAL A1520840 THRU A1520909 FA152 SERIAL FA1520357 THRU FA1520372 D---152 SERIAL 15279406 THRU 15283958 F152 SERIAL F15201429 THRU F15201783 A152 SERIAL A1520735 THRU A1520909 FA152 SERIAL FA1520337 THRU FA1520372 E---152 SERIAL 15283959 & ON F152 SERIAL F15201784 & ON A152 SERIAL A1520910 & ON FA152 SERIAL FA1520373 & ON F---152 SERIAL 15279406 THRU 15285161 F152 SERIAL F15201429 & ON A152 SERIAL A1520735 THRU A1520983 FA152 SERIAL FA1520337 & ON G---152 SERIAL 15285162 & ON A152 SERIAL A1520984 & ON								

152 & A152 Parts Catalog

Aligning Gear (Cont)

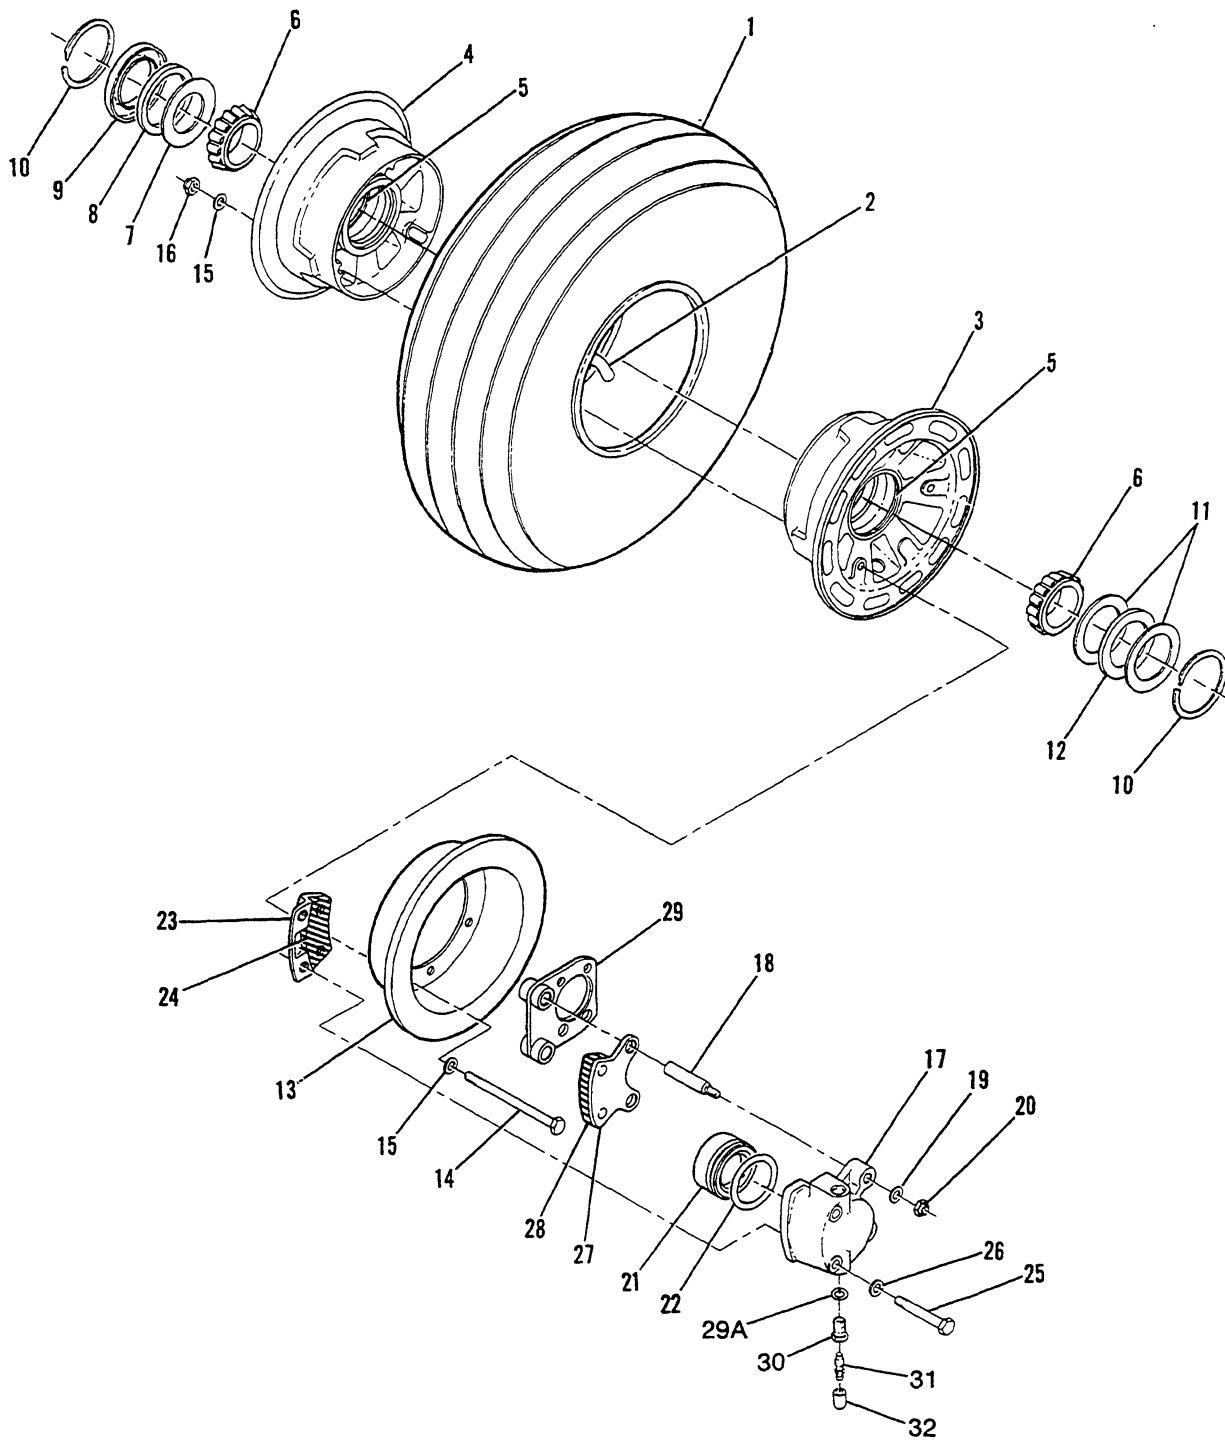


Figure 39. Main Landing Gear Wheel & Brake Assembly

152 & A152 Parts Catalog


FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
39 -		WHEEL & BRAKE ASSEMBLY-MAIN LANDING GEAR -----	NP	
- 1	C262003-0101	TIRE-BLACKWALL 6.00X6 4 PLY RATED -----	1	
	C262003-0103	TIRE-BLACKWALL 6.00X6 4 PLY RATED -----	1	
	C262006-0102	TIRE-BLACKWALL 15X6.00X6 4 PLY RATED -----	1	C
- 2	C262023-0102	TUBE-6.00X6 USED WITH C262003-0101 & C262003-0103 TIRES -	1	
	C262026-0101	TUBE 15X6.00X6 USED WITH C262006-0102 TIRE -----	1	
	C163005-0101 *	WHEEL ASSY-MAIN GEAR WEU C163006-0101 -----	1	C
	C163006-0101 *	WHEEL ASSY-MAIN GEAR INTERLOCK -----	1	A
- 3	C30612	WHEEL HALF ASSY-INBOARD MCL -----	1	B
	D30662	WHEEL HALF ASSY-INBOARD INTERLOCK MCL -----	1	A
- 4	C30605	WHEEL HALF ASSY-OUTBOARD MCL -----	1	B
	D30657	WHEEL HALF ASSY-OUTBOARD INTERLOCK MCL -----	1	A
- 5	A30079-1	CUP-BEARING MCL -----	1	
- 6	A30079-2	CONE-BEARING MCL -----	2	
- 7	A30015	RETAINER-GREASE SEAL MCL -----	1	
- 8	A30010	GREASE SEAL-FELT MCL -----	1	
- 9	A30014	RETAINER-GREASE SEAL MCL -----	1	
-10	A1636-24	RING-RETAINER MCL -----	2	
-11	A30013	RETAINER-GREASE SEAL MCL -----	2	
-12	A30011	GREASE SEAL-FELT MCL -----	1	
-13	C30615-1	DISC ASSY-BRAKE MCL -----	1	A
	164-30615-1	DISC ASSY-BRAKE MCL -----	1	B
-14	AN5-37A	BOLT -----	3	
-15	AN960-516	WASHER -----	6	A
	AN960-516L	WASHER -----	6	B
-16	MS20365-524A	NUT -----	3	
	C163032-0110 **	BRAKE ASSY-MAIN GEAR WEU C163033-0101 SEE NOTE @ -----	1	D
	C163033-0101 @**	BRAKE ASSY-MAIN GEAR -----	1	E
-17	C30019	CYLINDER ASSY-BRAKE USED WITH C163032-0110 ONLY MCL -----	1	
	C30762	CYLINDER ASSY-BRAKE USED WITH C163033-0101 ONLY MCL -----	1	
-18	A30023	PIN-GUIDE MCL -----	2	
-19	AN960-416L	WASHER -----	2	
-20	MS20364-428A	NUT -----	2	
-21	B30022	PISTON MCL -----	1	
-22	AN6230B2	O RING -----	1	
-23	B30027	BACK PLATE ASSY-BRAKE MCL -----	1	
-24	B30026	LINING-BRAKE MCL -----	1	
	A30087	RIVET MCL -----	2	
-25	AN4H21A	BOLT -----	2	
-26	AN960-416L	WASHER -----	2	
-27	B30024	PRESSURE PLATE ASSY MCL -----	1	
-28	B30026	LINING-BRAKE MCL -----	1	
	A30087	RIVET MCL -----	2	
-29	B30649	TORQUE PLATE ASSY MCL -----	1	
-29A	A1633-47	O RING USED WITH C163033-0101 ONLY MCL -----	1	E
-30	A30030	FITTING-BLEEDER USED WITH C163032-0110 ONLY MCL -----	1	D
	A30169	FITTING-BLEEDER USED WITH C163033-0101 ONLY MCL -----	1	E
-31	A30085	FITTING-BLEEDER MCL -----	1	
-32	A30040	CAP-DUST MCL -----	1	
	R561	RIVET SET KIT -----	AR	
NOTE. *THIS WHEEL ASSEMBLY MUST BE USED ONLY ON AIRCRAFT EQUIPPED WITH C163005-0101 OR C163006-0101 MAIN GEAR WHEELS. SEE FIG 40 FOR ALTERNATE. NOTE. **THIS BRAKE ASSEMBLY MUST BE USED WITH C163005-0101 OR C163006-0101 WHEEL ASSY ONLY. SEE FIG 40 FOR ALTERNATE. NOTE. @WHEN INITIALLY ORDERING THIS PART FOR AIRCRAFT PRIOR TO SERIAL 15285162 & A1520984 ALSO ORDER ONE AN921-3D ELBOW, ONE AN924-4D NUT & ONE MS28778-3 O RING. A---152 SERIAL 15279406 THRU 15280899 A152 SERIAL A1520735 THRU A1520770 B---152 SERIAL 15280900 & ON F152 SERIAL F15201429 & ON A152 SERIAL A1520771 & ON FA152 SERIAL FA1520337 & ON CONTINUED ON NEXT PAGE				

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
39 -		C---152 SERIAL 15284542 & ON F152 SERIAL F15201809 & ON A152 SERIAL A1520944 & ON FA152 SERIAL FA1520373 & ON D---152 SERIAL 15279406 THRU 15285161 F152 SERIAL F15201429 & ON A152 SERIAL A1520735 THRU A1520983 FA152 SERIAL FA1520337 & ON E---152 SERIAL 15285162 & ON A152 SERIAL A1520984 & ON		

152 & A152 Parts Catalog

Aligning Gear (Cont)

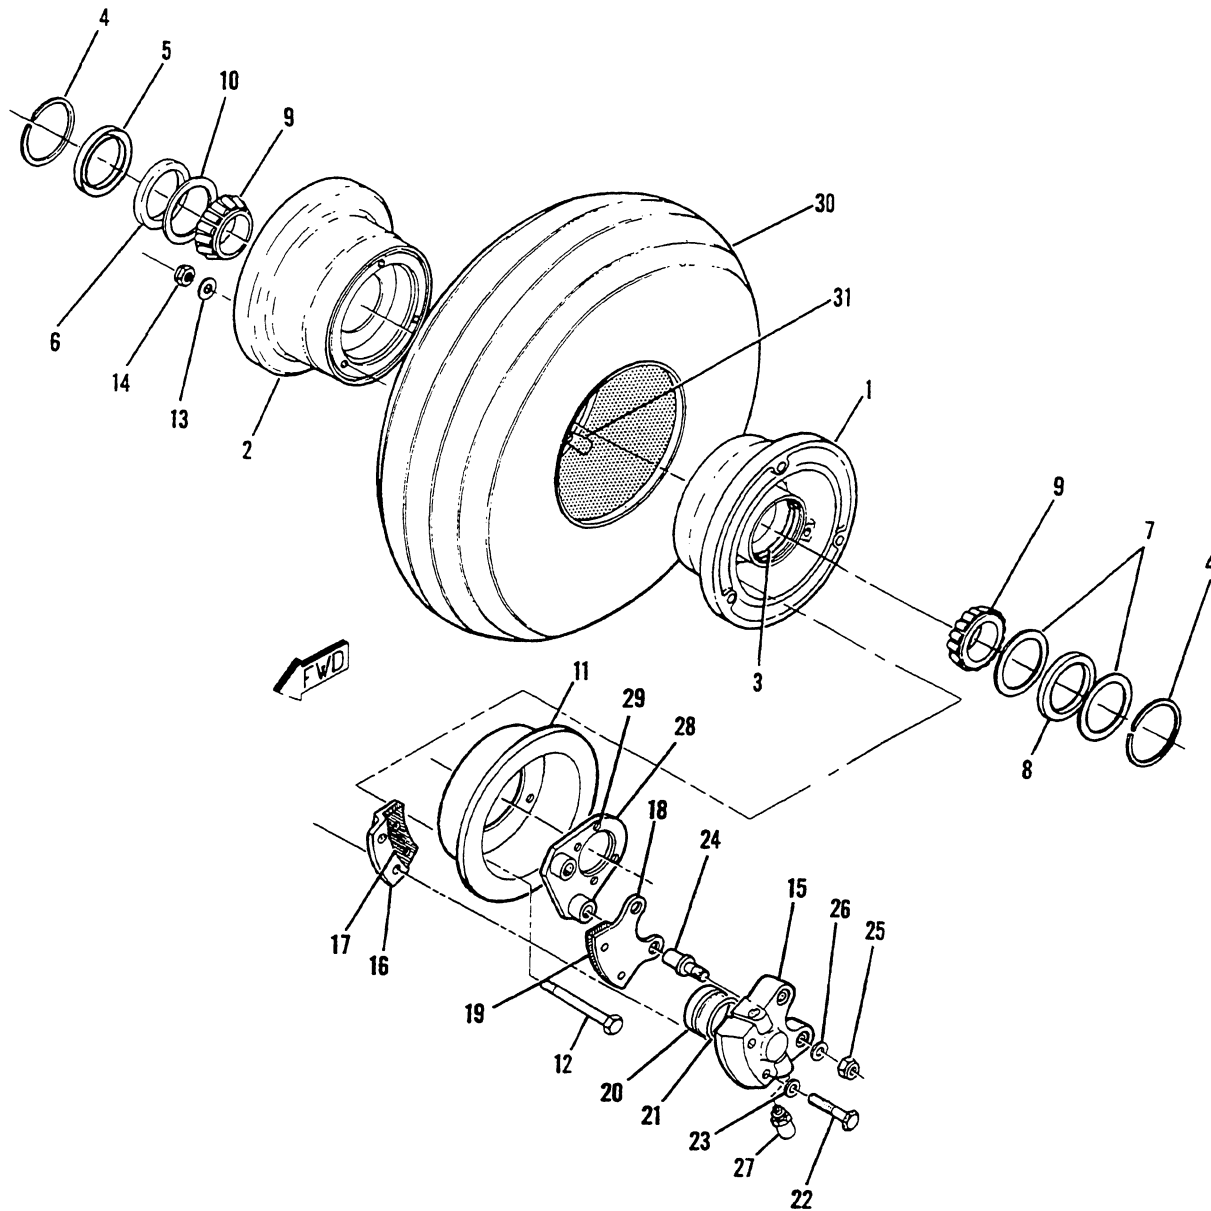

ALTERNATE

Figure 40. Main Landing Gear Wheel & Brake Assembly

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
40 -	C163001-0104 *	WHEEL & BRAKE ASSEMBLY-MAIN LANDING GEAR ALTERNATE -----	NP	
- 1	161-04900	WHEEL ASSY-MAIN GEAR CFP 40-113 -----	1	
- 2	162-04700	WHEEL HALF ASSY-MALE CFP -----	1	
- 3	214-00100	WHEEL HALF ASSY-FEMALE CFP -----	1	
- 4	155-00100	CUP-BEARING CFP -----	1	
- 5	153-01500	SNAP RING CFP -----	1	
- 6	154-01300	RING-GREASE SEAL CFP -----	1	
- 7	153-00400	FELT-GREASE SEAL CFP -----	1	
- 8	154-00300	RING-GREASE SEAL CFP -----	2	
- 9	214-00200	FELT-GREASE SEAL CFP -----	1	
-10	153-00300	CONE-BEARING CFP -----	2	
-11	164-04000	RING-GREASE SEAL CFP -----	1	
-12	AN4-36A	DISC ASSY-BRAKE CFP -----	1	
-13	AN960-416	BOLT -----	3	
-14	AN365-428	WASHER -----	3	
	C163030-0113 %**	NUT -----	3	
-15	091-04400	BRAKE ASSY-MAIN GEAR CFP 30-75 -----	1	
-16	061-03700	CYLINDER ASSY-BRAKE CFP -----	1	
-17	074-01000	CYLINDER CFP -----	1	
-18	066-03000	BACK PLATE ASSY CFP -----	1	
-19	105-00200	LINING-BRAKE CFP -----	1	
-20	073-01100	RIVET CFP -----	2	
-21	066-03000	PRESSURE PLATE ASSY CFP -----	1	
-22	105-00200	LINING-BRAKE CFP -----	1	
-23	092-01700	RIVET CFP -----	2	
-24	AN6230B2	PISTON ASSY CFP -----	1	
-25	193-11700	O RING -----	1	
-26	AN960-416L	BOLT CFP -----	2	
-27	079-00300	WASHER -----	2	
-28	183-00100	WASHER -----	2	
-29	081-00100	WASHER -----	2	
-30	075-03700	BOLT-ANCHOR CFP -----	2	
-31	145-01000	NUT -----	2	
	C262003-0101	WASHER -----	2	
	C262006-0102	SCREW-BLEEDER CFP -----	1	
	C262023-0102	CAP-BLEEDER SCREW CFP -----	1	
	C262026-0101	SEAT-BLEEDER SCREW CFP -----	1	
		TORQUE PLATE ASSY CFP -----	1	
		BUSHING-TORQUE PLATE CFP -----	2	
		TIRE-BLACKWALL 6.00X6 4 PLY RATED -----	1	
		TIRE-BLACKWALL 15X6.00X6 4 PLY RATED -----	1	
		TUBE-6.00X6 USED WITH C262003-0101 TIRE -----	1	
		TUBE-15X6.00X6 USED WITH C262006-0102 TIRE -----	1	
		NOTE. *THIS WHEEL ASSEMBLY MUST BE USED ONLY ON AIRCRAFT EQUIPPED WITH C163001-0104 MAIN GEAR WHEEL.		
		NOTE. **BRAKE ASSEMBLIES DESCRIBED ARE NORMALLY LH, REVERSE FITTINGS & TORQUE PLATE BUSHINGS FOR RH INSTALLATION.		
		NOTE. %THIS BRAKE ASSEMBLY MUST BE USED WITH C163001-0104 WHEEL ASSEMBLY ONLY.		
		A---152 SERIAL 15284542 & ON F152 SERIAL F15201809 & ON A152 SERIAL A1520944 & ON FA152 SERIAL FA1520373 & ON		A A

152 & A152 Parts Catalog

Door & Window

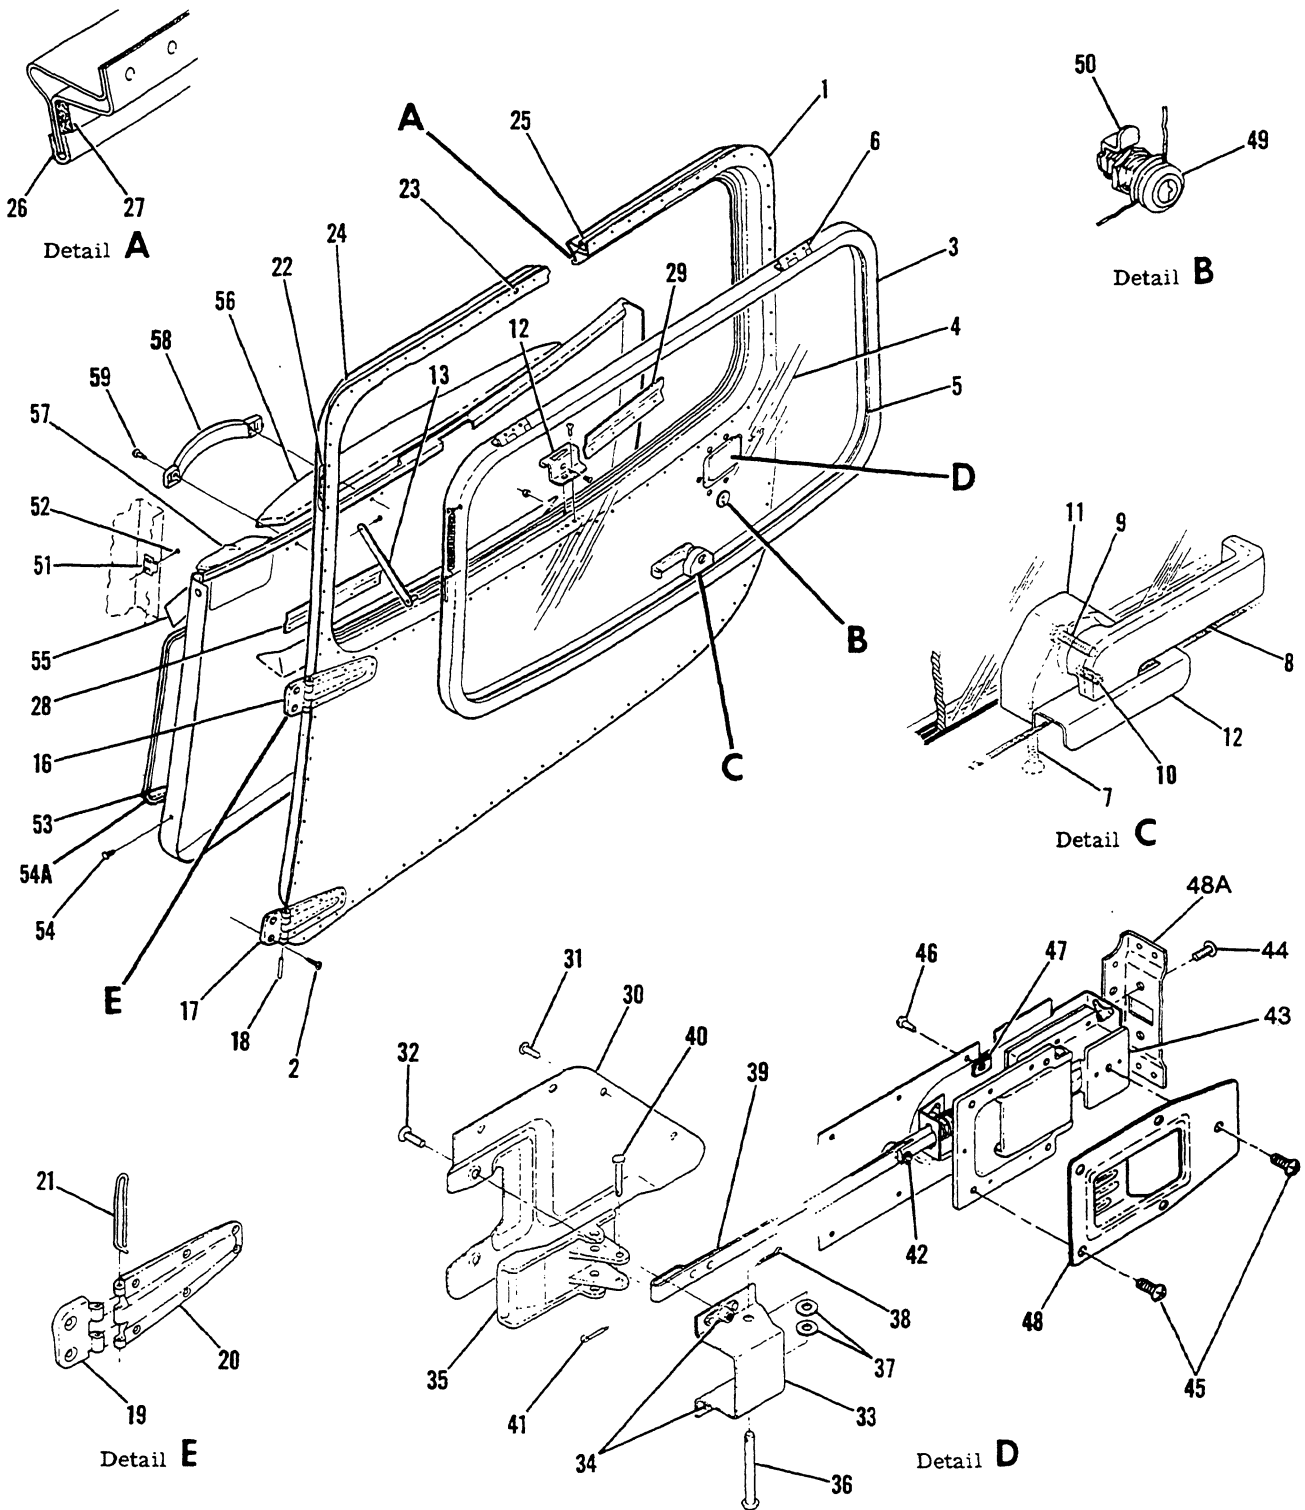


Figure 41. Cabin Door Installation

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION							UNITS PER ASSY	USABLE ON CODE
		1	2	3	4	5	6	7		
41 -		CABIN DOOR INSTALLATION							NP	
- 1	0417008-33 *	DOOR ASSY-CABIN LH	WITH CLEAR WINDOW						1	A
	0417008-211 *	DOOR ASSY-CABIN LH	WITH TINTED WINDOW						1	B
	0417008-35 *	DOOR ASSY-CABIN LH	WITH CLEAR WINDOW					AEROBAT	1	B
	0417008-213 *	DOOR ASSY-CABIN LH	WITH TINTED WINDOW					AEROBAT	1	B
	0417008-34 *	DOOR ASSY-CABIN RH	WITH CLEAR WINDOW						1	A
	0417008-210 *	DOOR ASSY-CABIN RH	WITH TINTED WINDOW						1	B
	0417008-36 *	DOOR ASSY-CABIN RH	WITH CLEAR WINDOW					AEROBAT	1	B
	0417008-212 *	DOOR ASSY-CABIN RH	WITH TINTED WINDOW					AEROBAT	1	B
		ATTACHING PARTS								
- 2	AN507-1032R10	SCREW							4	E
	AN525-10R10	SCREW							4	F
		*-----								
- 3	0417008-13	WINDOW ASSY-CABIN DOOR LH	CLEAR						1	
	0417008-201	WINDOW ASSY-CABIN DOOR LH	TINTED						1	
	0417008-14	WINDOW ASSY-CABIN DOOR RH	CLEAR						1	
	0417008-200	WINDOW ASSY-CABIN DOOR RH	TINTED						1	
- 4	0417008-15	GLASS-WINDOW LH	CLEAR						1	
	0417008-17	GLASS-WINDOW LH	TINTED						1	
	0417008-16	GLASS-WINDOW RH	CLEAR						1	
	0417008-18	GLASS-WINDOW RH	TINTED						1	
- 5	S1356-1	SEAL-78.90 IN LG	BKI	REF S1356-1-78.00					1	
- 6	0411185-7	HINGE ASSY-WINDOW							2	
	1217066-1	LATCH ASSY-WINDOW LH							1	
	1217066-2	LATCH ASSY-WINDOW RH							1	
		ATTACHING PARTS								
- 7	AN509-10R15	SCREW							2	
	NAS43HT3-39	SPACER							2	
		*-----								
- 8	1217063-1	HANDLE-WINDOW LATCH LH							1	
	1217063-2	HANDLE-WINDOW LATCH RH							1	
		ATTACHING PARTS								
- 9	S1931-8	SCREW							1	
	AN960C8	WASHER							1	
		*-----								
-10	MS24585-1020	SPRING							1	
	S272-5	BALL							1	
-11	1217063-3	BRACKET							1	
-12	1217065-3	STRIKER PLATE-WINDOW LH							1	
	1217065-4	STRIKER PLATE-WINDOW RH							1	
		ATTACHING PARTS								
	AN507-832R6	SCREW							2	
	NAS696A08K	NUTPLATE							2	
	AN507-832R5	SCREW							1	
	MS21044N08	NUT							1	
		*-----								
-13	0413390-23	ARM ASSY							1	
		ATTACHING PARTS								
	MS20392-1C7	PIN							1	
	AN960-4L	WASHER							1	
	MS24665-132	COTTER PIN							1	
-14	0711021-9	SPRING							1	
		ATTACHING PARTS								
-15	MS20392-1C23	PIN							1	
	AN960C4	WASHER							1	
	MS24665-132	COTTER PIN							1	
		*-----								
-16	0413426-3	HINGE ASSY-LH UPPER							1	
	0413426-4	HINGE ASSY-RH UPPER							1	
	0413426-21	HINGE ASSY-LH UPPER							1	
	0413426-22	HINGE ASSY-RH UPPER							1	
-17	0413426-17	HINGE ASSY-LH LOWER							1	
	0413426-18	HINGE ASSY-RH LOWER							1	
	0413426-23	HINGE ASSY-LH LOWER							1	
	0413426-24	HINGE ASSY-RH LOWER							1	
-18	0711038-1	PIN-DOOR HINGE							1	
-19	0413426-6	HINGE HALF-LH UPPER FWD & RH LOWER FWD							2	
	0413426-5	HINGE HALF-LH LOWER FWD & RH UPPER FWD							2	
	0413426-30	HINGE HALF-LH UPPER FWD & RH LOWER FWD							2	
	0413426-29	HINGE HALF-LH LOWER FWD & RH UPPER FWD							2	
CONTINUED ON NEXT PAGE										

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
41 -20	0413426-9	HINGE HALF-LH UPPER AFT -----	1	J
	0413426-10	HINGE HALF-RH UPPER AFT -----	1	J
	0413426-31	HINGE HALF-LH UPPER AFT -----	1	K
	0413426-32	HINGE HALF-RH UPPER AFT -----	1	K
	0413426-16	HINGE HALF-LH LOWER AFT -----	1	J
	0413426-15	HINGE HALF-RH LOWER AFT -----	1	J
	0413426-33	HINGE HALF-LH LOWER AFT -----	1	K
	0413426-34	HINGE HALF-RH LOWER AFT -----	1	K
-21	0511771-7	PIN-HINGE UPPER & LOWER LH DOOR ONLY -----	2	B
	0511771-8	PIN-HINGE UPPER & LOWER RH DOOR ONLY -----	2	B
-22	0710638-1	WEDGE-CABIN DOOR -----	1	
-23	A1663-022-1	NUTPLATE TIN -----	1	
-24	0417007-1	RETAINER-CABIN DOOR SEAL -----	1	
-25	S2287-1	SEAL-120.00 IN LG BKT REF S2287-1-120.00 -----	1	
-26	S2195-4	SEAL-78.90 IN LG BKT REF S2195-4-78.90 -----	1	
-27	S2108-1	SEAL-78.90 IN LG BKT REF S2108-1-78.90 -----	1	
-28	0413390-32	RETAINER-UPHOLSTERY -----	1	
-29	0413390-34	RETAINER-UPHOLSTERY -----	1	
-30	0413388-5	HANDLE PLATE-LH -----	1	
	0413388-6	HANDLE PLATE-RH -----	1	
		ATTACHING PARTS		
-31	AN515-6R6	SCREW -----	3	
	NAS682A06K	NUTPLATE -----	1	
	NAS680A06K	NUTPLATE -----	2	
-32	AN507-832R8	SCREW -----	2	
		-----*		
-33	0417011-2	BRACKET-DOOR LATCH -----	1	
-34	NAS681A08K	NUTPLATE -----	2	
-35	0415018-2	HANDLE-CABIN DOOR -----	1	
		ATTACHING PARTS		
-36	MS20392-2C51	PIN -----	1	
-37	AN960-10L	WASHER -----	2	
-38	MS24665-132	COTTER PIN -----	1	
		-----*		
-39	0413406-8	DRAWBAR ASSEMBLY -----	1	
		ATTACHING PARTS		
-40	MS20392-1C23	PIN -----	1	
-41	MS24665-132	COTTER PIN -----	1	
-42	MS20392-1C13	PIN -----	1	
	AN960-4	WASHER -----	1	
	MS24665-132	COTTER PIN -----	1	
		-----*		
-43	SEE FIG 42	LATCH ASSY-CABIN DOOR -----	1	
		ATTACHING PARTS		
-44	AN525-832R6	SCREW -----	4	
-45	S1021A6-6	SCREW -----	5	
-46	S1021Z6-6	SCREW -----	9	
-47	NAS395-5-3	NUT -----	7	
	S1863PA2	NUTPLATE -----	2	
		-----*		
-48	0413450-1-294	COVER-DOOR LATCH HOUSING -----	1	
-48A	0417015-1	STIFFENER-CABIN DOOR -----	1	
-49	C253001-0101	LOCK ASSY-CABIN DOOR LH DOOR ONLY -----	1	
-50	0511263-1	CAM-DOOR LOCK LH DOOR ONLY -----	1	
-51	0413428-1	WEDGE-DOOR -----	2	
	0413428-2	SHIM-DOOR WEDGE -----	AR	
		ATTACHING PARTS		
-52	AN515-6R6	SCREW -----	2	
		-----*		
-53	0415017-13	PANEL ASSY-DOOR UPHOLSTERY LH -----	1	C
	0415017-14	PANEL ASSY-DOOR UPHOLSTERY RH -----	1	C
	0415031-1	PANEL ASSY-DOOR UPHOLSTERY-LH -----	1	M
	0415031-2	PANEL ASSY-DOOR UPHOLSTERY RH -----	1	M
	0415031-23	PANEL ASSY-DOOR UPHOLSTERY LH -----	1	N
	0415031-24	PANEL ASSY-DOOR UPHOLSTERY RH -----	1	N
		ATTACHING PARTS		
-54	S1898-2	STUD -----	8	
		-----*		
-54A	0415032-1	PANEL ASSY-PADDED DOOR INSERT LH -----	1	D
	0415032-2	PANEL ASSY-PADDED DOOR INSERT RH -----	1	D
-55	0415024-4	INSERT-ASHTRAY LH WOODGRAIN -----	1	C
	0415024-5	INSERT-ASHTRAY RH WOODGRAIN -----	1	C
	0415024-3	INSERT-DOOR WOODGRAIN -----	2	C
		CONTINUED ON NEXT PAGE		

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION							UNITS PER ASSY	USABLE ON CODE		
			1	2	3	4	5	6	7				
41 -56	0415022-1	#	ARMREST-LH	-----							1	C C P P O R R L	
	0415022-2	#	ARMREST-RH	-----							1		
	0415022-3	#	ARMREST-LH	STANDARD & DELUXE INTERIOR	-----						1		
	0415022-3	#	ARMREST-LH	DELUXE INTERIOR	-----						1		
	0415022-4	#	ARMREST-RH	STANDARD & DELUXE INTERIOR	-----						1		
	0415022-4	#	ARMREST-RH	DELUXE INTERIOR	-----						1		
	0415022-5	#	ARMREST-LH	STANDARD INTERIOR	-----						1		
	0415022-6	#	ARMREST-RH	STANDARD INTERIOR	-----						1		
	-57	S1957-2		ASH RECEIVER	-----								2
	-58	S1685-3		HANDLE ASSY-ASSIST	-----								2
				ATTACHING PARTS	-----								
	-59	AN515-6R8		SCREW	-----								2
		NAS682A06K		NUTPLATE	-----								2
				---*---									
	NOTE. #THIS PART NUMBER MUST HAVE A SECOND DASH NUMBER ADDED TO DENOTE COLOR. REFER TO HOW TO ORDER UPHOLSTERED PARTS-PAGE VIII. NOTE. *WHEN INITIALLY ORDERING THESE DOOR ASSEMBLIES PRIOR TO SERIALS THRU 15282929 & A1520846 ALSO ORDER (4) AN507-1032R10 SCREWS. A---152 SERIAL 15279406 & ON F152 SERIAL F15201429 & ON B---A152 SERIAL A1520735 & ON FA152 SERIAL FA1520337 & ON C---152 SERIAL 15279406 THRU 15282031 F152 SERIAL F15201429 THRU F15201528 A152 SERIAL A1520735 THRU A1520808 FA152 SERIAL FA1520337 THRU FA1520347 D---152 SERIAL 15282032 & ON F152 SERIAL F15201529 & ON A152 SERIAL A1520809 & ON FA152 SERIAL FA1520348 & ON E---152 SERIAL 15279406 THRU 15282929 F152 SERIAL F15201429 THRU F15201633 A152 SERIAL A1520735 THRU A1520846 FA152 SERIAL FA1520337 THRU FA1520357 F---152 SERIAL 15282930 & ON F152 SERIAL F15201634 & ON A152 SERIAL A1520847 & ON FA152 SERIAL FA1520358 & ON G---152 SERIAL 15279406 THRU 15282929 F152 SERIAL F15201429 THRU F15201633 H---152 SERIAL 15282930 & ON F152 SERIAL F15201634 & ON J---A152 SERIAL A1520735 THRU A1520846 FA152 SERIAL FA1520337 THRU FA1520357 K---A152 SERIAL A1520847 & ON FA152 SERIAL FA1520358 & ON L---152 SERIAL 15279406 THRU 15285594 F152 SERIAL F15201429 THRU F15201928 A152 SERIAL A1520735 THRU A1521014 FA152 SERIAL FA1520337 THRU FA1520382 M---152 SERIAL 15282032 THRU 15285594 F152 SERIAL F15201529 THRU F15201928 A152 SERIAL A1520809 THRU A1521014 FA152 SERIAL FA1520348 THRU FA1520382 N---152 SERIAL 15285595 & ON F152 SERIAL F15201929 & ON A152 SERIAL A1521015 & ON FA152 SERIAL FA1520383 & ON P---152 SERIAL 15282032 THRU 15285834 F152 SERIAL F15201529 THRU F15201943 A152 SERIAL A1521809 THRU A1521026 FA152 SERIAL FA1520348 THRU FA1520387 Q---152 SERIAL 15285835 & ON F152 SERIAL F15201944 & ON R---152 SERIAL 15285835 & ON F152 SERIAL F15201944 & ON A152 SERIAL A1521027 & ON FA152 SERIAL FA1520388 & ON												

152 & A152 Parts Catalog

Door & Window (Cont)

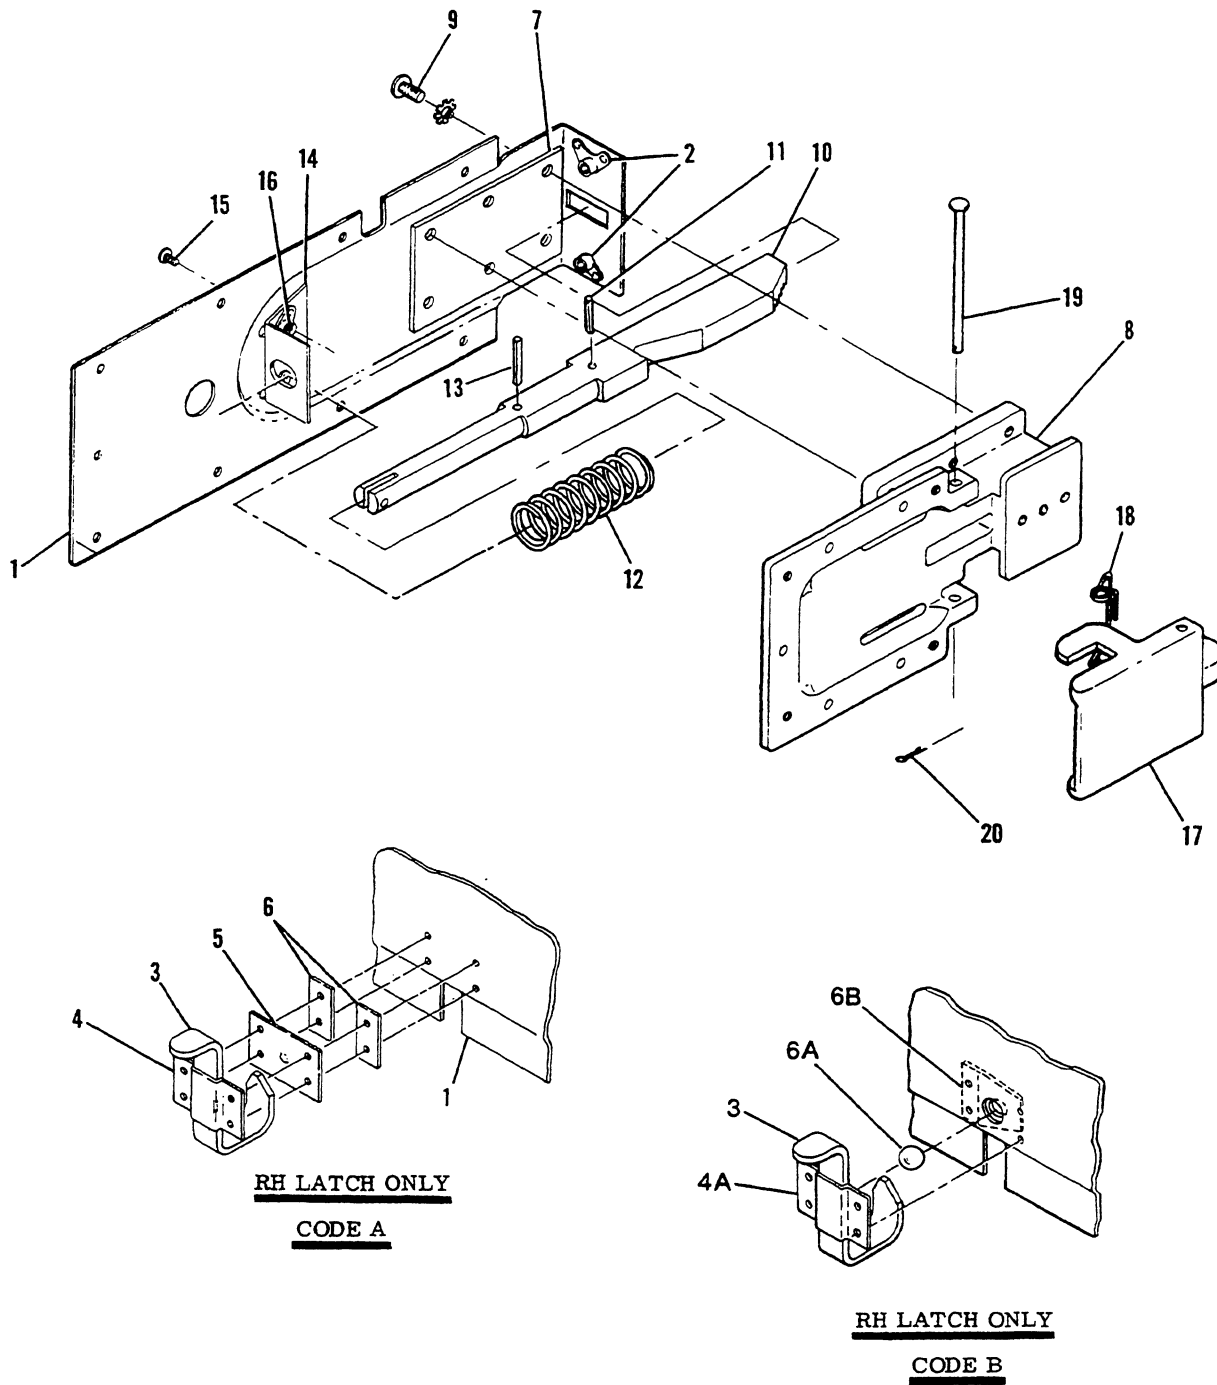




Figure 42. Cabin Door Latch Assembly

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION							UNITS PER ASSY	USABLE ON CODE
		1	2	3	4	5	6	7		
42 -	0413387-3	CABIN DOOR LATCH ASSEMBLY	LH	-----	-----	-----	-----	-----	1	A B
	0413387-6	CABIN DOOR LATCH ASSEMBLY	RH	WEU 0413387-7	-----	-----	-----	-----	1	
	0413387-7	CABIN DOOR LATCH ASSEMBLY	RH	-----	-----	-----	-----	-----	1	
- 1	0413388-1	MOUNTING PLATE ASSY	-----	-----	-----	-----	-----	-----	1	A B A B A B B
- 2	NAS698A08	NUTPLATE	-----	-----	-----	-----	-----	-----	2	
- 3	0417006-3	LATCH-DOOR LOCK	RH ONLY	-----	-----	-----	-----	-----	1	
- 4	0417006-1	GUIDE-LATCH	RH ONLY	-----	-----	-----	-----	-----	1	
- 4A	0417006-5	GUIDE-LATCH	RH ONLY	-----	-----	-----	-----	-----	1	
- 5	0417006-2	DETENT-DOOR LOCK	RH ONLY	-----	-----	-----	-----	-----	1	
- 6	0417006-4	SPACER	RH ONLY	-----	-----	-----	-----	-----	2	
- 6A	S272-9	BALL	RH ONLY	-----	-----	-----	-----	-----	1	
- 6B	0417006-6	SPRING PLATE	RH ONLY	-----	-----	-----	-----	-----	1	
- 7	0511264-1	SPACER	-----	-----	-----	-----	-----	-----	1	
- 8	0511258-2	HOUSING	-----	-----	-----	-----	-----	-----	1	A B A B A B B
		ATTACHING PARTS	-----	-----	-----	-----	-----	-----	1	
- 9	AN515-832R6	SCREW	-----	-----	-----	-----	-----	-----	4	
	AN936B8	WASHER	-----	-----	-----	-----	-----	-----	4	
		---*---	-----	-----	-----	-----	-----	-----	1	
-10	0511260-1	BOLT-LH	-----	-----	-----	-----	-----	-----	1	
	0511260-2	BOLT-RH	-----	-----	-----	-----	-----	-----	1	
-11	NAS561-3-8	ROLL PIN	-----	-----	-----	-----	-----	-----	1	
-12	0511261-3	SPRING	-----	-----	-----	-----	-----	-----	1	
-13	NAS561-3-14	ROLL PIN	-----	-----	-----	-----	-----	-----	1	
-14	0511266-1	SUPPORT ASSY-BOLT	-----	-----	-----	-----	-----	-----	1	A B A B A B B
		ATTACHING PARTS	-----	-----	-----	-----	-----	-----	1	
-15	AN525-832R7	SCREW	-----	-----	-----	-----	-----	-----	2	
		---*---	-----	-----	-----	-----	-----	-----	1	
-16	NAS698A08	NUTPLATE	-----	-----	-----	-----	-----	-----	2	
-17	0417010-4	HANDLE-DOOR LATCH	-----	-----	-----	-----	-----	-----	1	
		ATTACHING PARTS	-----	-----	-----	-----	-----	-----	1	
-18	0417016-1	SPRING	-----	-----	-----	-----	-----	-----	1	
	0417016-2	SPRING	-----	-----	-----	-----	-----	-----	1	
-19	MS20392-1C67	PIN	-----	-----	-----	-----	-----	-----	1	
-20	MS24665-132	COTTER PIN	-----	-----	-----	-----	-----	-----	1	
		---*---	-----	-----	-----	-----	-----	-----	1	A B A B A B B
		A---152 SERIAL 15279406 THRU 15284729	-----	-----	-----	-----	-----	-----	1	
		F152 SERIAL F15201429 THRU F15201888	-----	-----	-----	-----	-----	-----	1	
		A152 SERIAL A1520735 THRU A1520960	-----	-----	-----	-----	-----	-----	1	
		FA152 SERIAL FA1520337 THRU FA1520377	-----	-----	-----	-----	-----	-----	1	
		B---152 SERIAL 15284730 & ON	-----	-----	-----	-----	-----	-----	1	
		F152 SERIAL F15201889 & ON	-----	-----	-----	-----	-----	-----	1	
		A152 SERIAL A1520961 & ON	-----	-----	-----	-----	-----	-----	1	
		FA152 SERIAL FA1520378 & ON	-----	-----	-----	-----	-----	-----	1	
		---	-----	-----	-----	-----	-----	-----	1	

152 & A152 Parts Catalog

Door & Window (Cont)

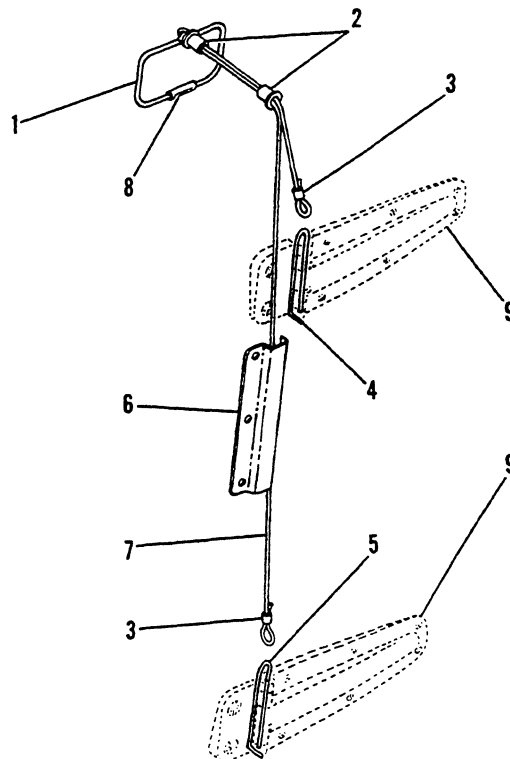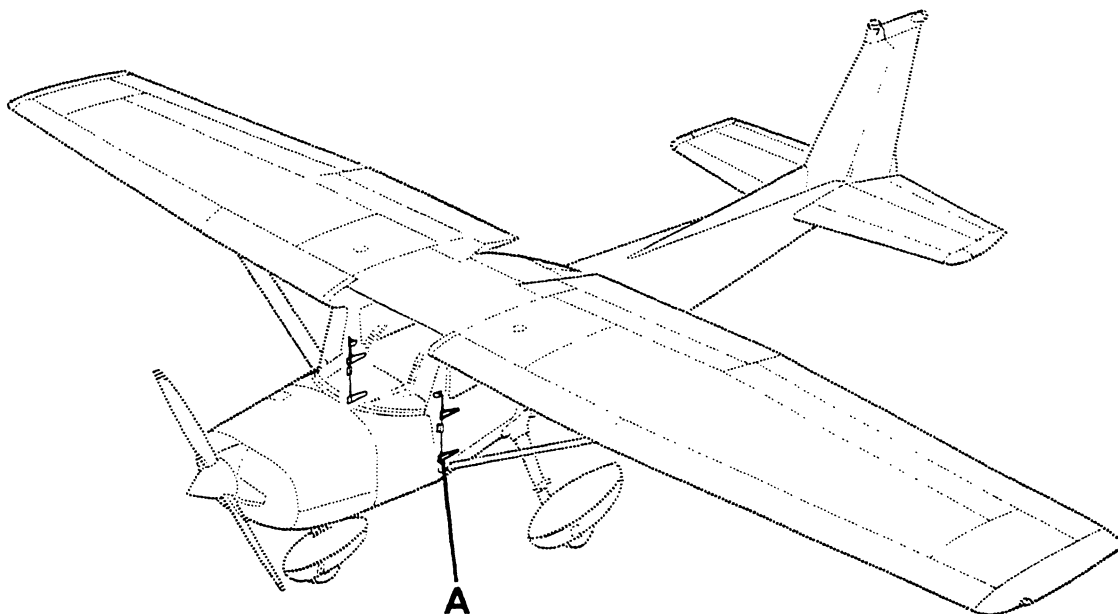

Detail **A**

A152 SERIAL A1520735 & ON
FA152 SERIAL FA1520337 & ON

Figure 43. Emergency Door Release Installation

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
43 -		EMERGENCY DOOR RELEASE INSTALLATION -----	NP	A
- 1	0513246-4	HANDLE ASSEMBLY-EMERGENCY RELEASE -----	2	
- 2	S1291-3	GROMMET -----	4	
- 3	S1958-1	SLEEVE -----	6	
- 4	0511771-7	PIN-HINGE LH DOOR ONLY -----	1	
	0511771-8	PIN-HINGE RH DOOR ONLY -----	1	
- 5	0511771-7	PIN-HINGE LH DOOR ONLY -----	1	
	0511771-8	PIN-HINGE RH DOOR ONLY -----	1	
- 6	0513245-2	GUARD-CABLE -----	2	
- 7	0417005-3	CABLE-EMERGENCY DOOR RELEASE -----	2	
- 8	0417012-1	RETAINER-HANDLE ASSY -----	1	
		ATTACHING PARTS -----		
	S1022A4-6	SCREW -----	1	
		---*---		
- 9	SEE FIG 41	HINGE ASSEMBLY -----	4	
A---A152 SERIAL A1520735 & ON FA152 SERIAL FA1520337 & ON				

152 & A152 Parts Catalog

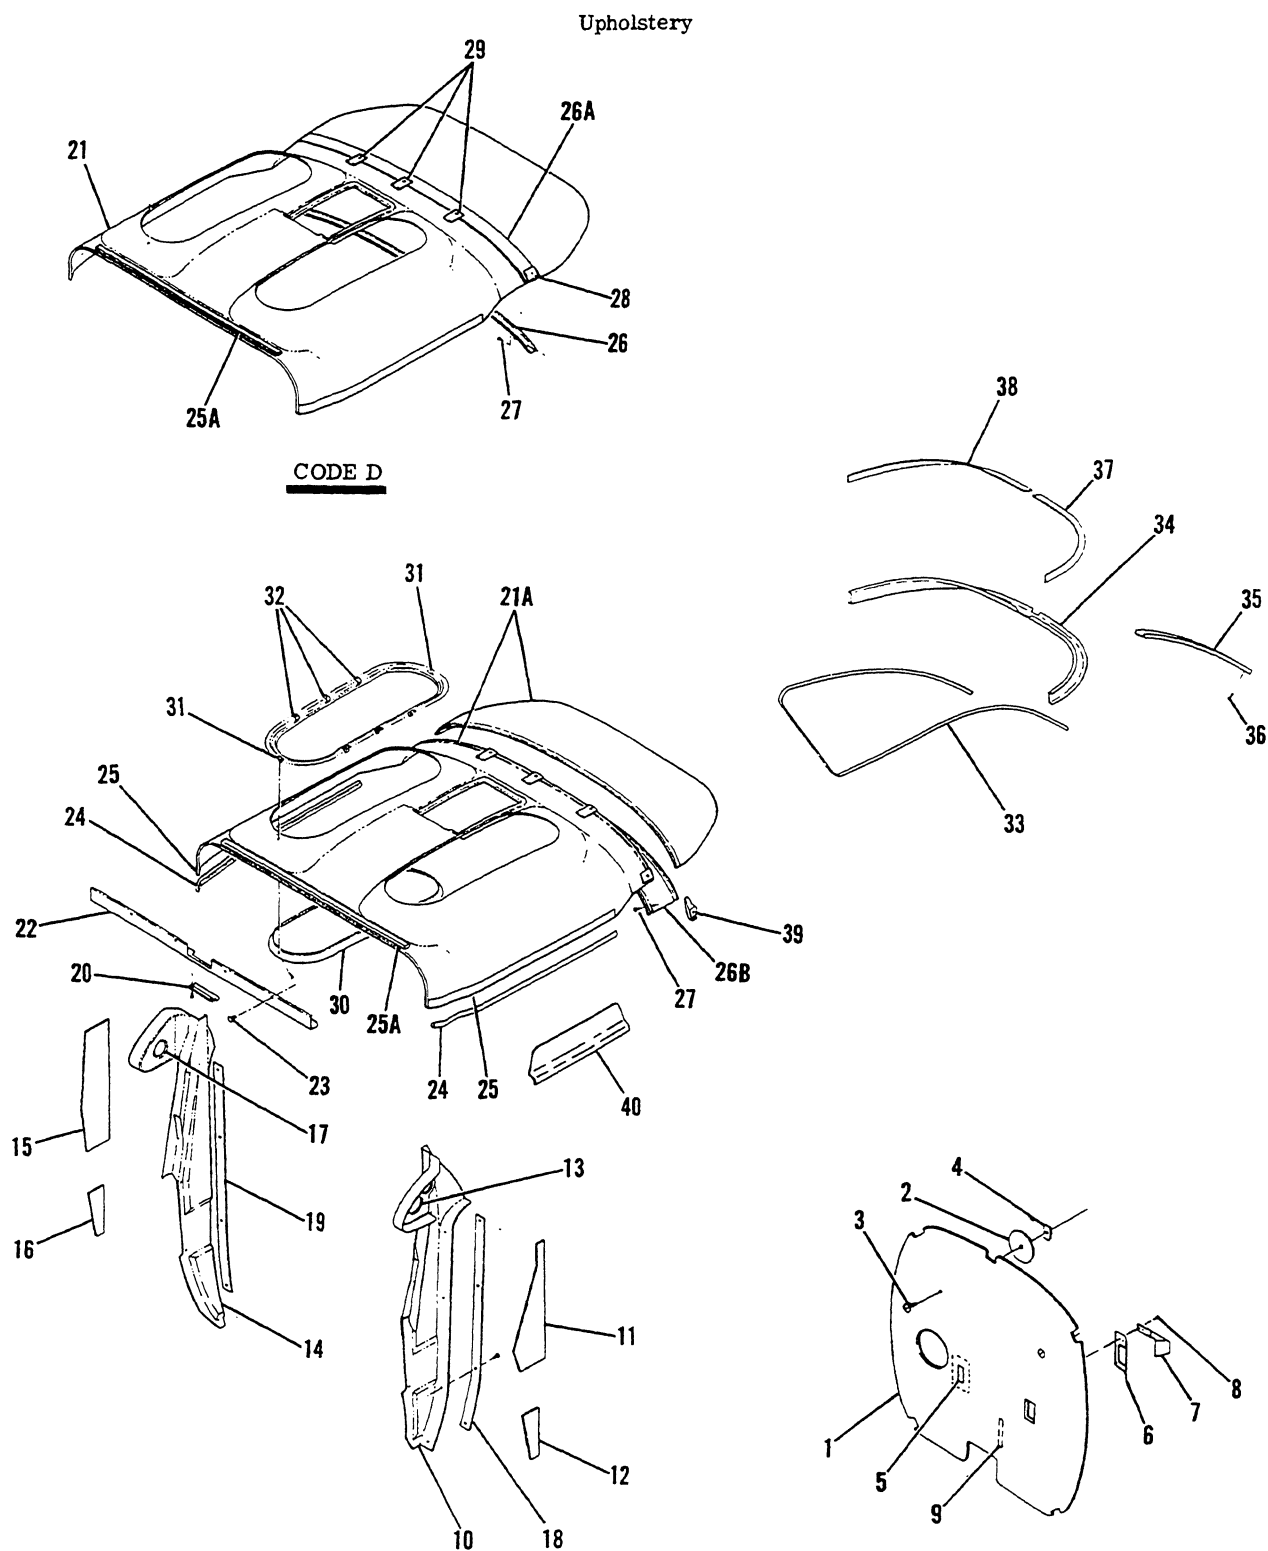


Figure 44. Cabin Top & Firewall Upholstery Installation

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
			1 2 3 4 5 6 7		
44 -			UPHOLSTERY INSTALLATION-CABIN TOP & FIREWALL -----	NP	
- 1	0415021-17	#	PANEL-FIREWALL -----	1	
- 2	0400123-1		DISC -----	2	
			ATTACHING PARTS -----		
- 3	S1021Z10-10		SCREW -----	1	
- 4	NAS446-5-3		NUT -----	1	
			-----*		
- 5	0400207-2		RETAINER-FIREWALL UPHOLSTERY -----	1	
			ATTACHING PARTS -----		
	S1021A6-6C		SCREW -----	4	
			-----*		
- 6	0400207-1		RETAINER-FIREWALL UPHOLSTERY -----	1	
- 7	0400329-1		DEFLECTOR-CABIN HEATER -----	1	
			ATTACHING PARTS -----		
- 8	S1021A6-6C		SCREW -----	3	
			-----*		
- 9	0400141-1		RETAINER-FIREWALL UPHOLSTERY -----	1	
			ATTACHING PARTS -----		
	S1021Z8-8		SCREW -----	2	
	NAS446-4-3		NUT -----	2	
			-----*		
-10	0413484-27		SHIELD ASSY-LH -----	1	
	0413484-28		SHIELD ASSY-LH USED WITH MAPLIGHT -----	1	
-11	0413516-3		PAD-FWD DOORPOST UPPER LH -----	1	
-12	0413516-5		PAD-FWD DOORPOST LOWER LH -----	1	
-13	0415023-3		ESCUTCHEON ASSY-LH -----	1	
-14	0415013-7		SHIELD-RH -----	1	
-15	0413516-4		PAD-FWD DOORPOST UPPER RH -----	1	
-16	0413516-6		PAD-FWD DOORPOST LOWER RH -----	1	
-17	0415023-1		ESCUTCHEON ASSY-RH -----	1	
-18	0414019-1		RETAINER-DOORPOST SHIELD LH -----	1	
-19	0414019-2		RETAINER-DOORPOST SHIELD RH -----	1	
-20	0413504-1		COVER-SUNVISOR SUPPORT -----	1	
			ATTACHING PARTS -----		
	AN525-10R16		SCREW -----	2	
			-----*		
-21	0414010-7		HEADLINER -----	1	
	0414010-9		HEADLINER -----	1	
-21A	0414010-20		HEADLINER ASSY -----	1	
-22	0414018-4	<	RETAINER-HEADLINER -----	1	
	0414018-5	<	RETAINER-HEADLINER -----	1	
	0414018-5-531		RETAINER-HEADLINER -----	1	
			ATTACHING PARTS -----		
-23	S1898-2		FASTENER -----	4	
			-----*		
-24	0414018-2	<	RETAINER-HEADLINER -----	2	
	0414018-2-531		RETAINER-HEADLINER -----	2	
-25	0413507-1		STIFFENER -----	2	
-25A	0514061-8		BUSHING -----	1	
-26	0414016-2		TRIM-HEADLINER -----	1	
			ATTACHING PARTS -----		
-26A	0414016-3		SUPPORT-HEADLINER -----	1	
-26B	0414072-3		TIARA ASSY -----	1	
			ATTACHING PARTS -----		
-27	S1021Z10-8C		SCREW -----	2	
-28	0413506-1		BRACKET -----	4	
-29	0414017-1		BRACKET -----	3	
	S1950-2E		SCREW -----	3	
	S1950-2E		SCREW -----	4	
			-----*		
-30	0414015-1		TRIM-WINDOW -----	2	
-31	0414014-2		BRACKET-WINDOW TRIM -----	4	
-32	0414014-2		BRACKET-WINDOW TRIM -----	12	
-33	S1948-2		SEAL-120.00 IN LG BKI -----	2	
-34	0414030-2		TRIM COVER-REAR WINDOW -----	1	
			ATTACHING PARTS -----		
	S1021Z4-4		SCREW -----	8	
			-----*		
-35	0415021-16		COVER-CENTER STRIP -----	1	
			ATTACHING PARTS -----		
-36	S1021Z4-6		SCREW -----	1	
	S1021Z4-4		SCREW -----	4	
			-----*		
-37	0412509-1		RETAINER ASSY-HEADLINER LH -----	1	
-38	0412509-2		RETAINER ASSY-HEADLINER RH -----	1	
CONTINUED ON NEXT PAGE					

152 & A152 Parts Catalog


FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS	USABLE ON CODE
			PER ASSY	
		1 2 3 4 5 6 7		
44 -39	0715038-1	COAT HANGER -----	2	
	AN520-10R10	ATTACHING PARTS -----		
		SCREW -----	1	
		-----*		
-40	0515010-10	TRAY-SHOULDER HARNESS STORAGE -----	2	
	S1021A4-6	ATTACHING PARTS -----		
		SCREW -----	4	
		-----*		
NOTE. #THIS PART NUMBER MUST HAVE A SECOND DASH NUMBER ADDED TO DENOTE COLOR. REFER TO HOW TO ORDER UPHOLSTERED PARTS-PAGE VIII. NOTE. <THIS PART NUMBER MUST HAVE A SECOND DASH NUMBER ADDED TO DENOTE COLOR. REFER TO HOW TO ORDER INTERIOR PARTS-PAGE IX. A---152 SERIAL 15279406 THRU 15279799 F152 SERIAL F15201429 THRU F15201498 A152 SERIAL A1520735 THRU A1520745 FA152 SERIAL FA1520337 THRU FA1520346 B---152 SERIAL 15279800 & ON F152 SERIAL F15201499 & ON A152 SERIAL A1520746 & ON FA152 SERIAL FA1520347 & ON C---152 SERIAL 15279800 THRU 15281298, 15281300 THRU 15281314, 15281316 THRU 15281326, 15281328 THRU 15281340, 15281342 THRU 15281349, 15281351 THRU 15281359, 15281361 THRU 15281369, 15281371 THRU 15281380, 15281382 THRU 15281389, 15281391 THRU 15281400, 15281402 THRU 15281409, 15281411 THRU 15281420, 15281422 THRU 15281426 F152 SERIAL F15201499 THRU F15201538 A152 SERIAL A1520746 THRU A1520785 FA152 SERIAL FA1520347 THRU FA1520352 D---152 SERIAL 15279406 THRU 15281298, 15281300 THRU 15281314, 15281316 THRU 15281326, 15281328 THRU 15281340, 15281342 THRU 15281349, 15281351 THRU 15281359, 15281361 THRU 15281369, 15281371 THRU 15281380, 15281382 THRU 15281389, 15281391 THRU 15281400, 15281402 THRU 15281409, 15281411 THRU 15281420, 15281422 THRU 15281426 F152 SERIAL F15201429 THRU F15201538 A152 SERIAL A1520735 THRU A1520785 FA152 SERIAL FA1520337 THRU FA1520352 E---152 SERIAL 15281299, 15281315, 15281327, 15281341, 15281350, 15281360, 15281370, 15281381, 15281390, 15281401, 15281410, 15281421, 15281427 & ON F152 SERIAL F15201529 & ON A152 SERIAL A1520786 & ON FA152 SERIAL FA1520353 & ON F---152 SERIAL 15282332 & ON F152 SERIAL F15201529 & ON A152 SERIAL A1520809 & ON FA152 SERIAL FA1520348 & ON G---152 SERIAL 15279406 THRU 15283591 F152 SERIAL F15201429 THRU F15201673 A152 SERIAL A1520735 THRU A1520878 FA152 SERIAL FA1520337 THRU FA1520357 H---152 SERIAL 15283592 THRU 15284541 F152 SERIAL F15201674 THRU F15201808 A152 SERIAL A1520879 THRU A1520943 FA152 SERIAL FA1520358 THRU FA1520372 J---152 SERIAL 15279406 THRU 15284541 F152 SERIAL F15201429 THRU F15201808 A152 SERIAL A1520735 THRU A1520943 FA152 SERIAL FA1520337 THRU FA1520372 K---152 SERIAL 15284542 & ON F152 SERIAL F15201809 & ON A152 SERIAL A1520944 & ON FA152 SERIAL FA1520373 & ON				

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
			1 2 3 4 5 6 7		
45 -			UPHOLSTERY INSTALLATION-CABIN SIDE PANELS & FLOORBOARD -----	NP	G
- 1	0415021-33	#	PANEL ASSY-COWL LH CARPETED -----	1	
- 2	0415021-34	#	PANEL ASSY-COWL RH CARPETED -----	1	
- 3	0415017-3		PANEL-CABIN SIDE LH COMPLETE PANEL -----	1	
- 3A	0415017-21		PANEL ASSY-CABIN SIDE UPPER LH -----	1	
- 3B	0415017-19		PANEL ASSY-CABIN SIDE LOWER LH -----	1	
- 4	0415017-4		PANEL-CABIN SIDE RH COMPLETE PANEL -----	1	
- 4A	0415017-22		PANEL ASSY-CABIN SIDE UPPER RH -----	1	
- 4B	0415017-20		PANEL ASSY-CABIN SIDE LOWER RH -----	1	
- 5	0415024-2		INSERT-SIDE PANEL WOODGRAIN -----	2	
- 6	0415017-12		PANEL ASSY-BAGGAGE COMPARTMENT LWR AFT -----	1	
- 7	H323-3-1-1		PLUNGER HWL -----	6	
	H559-3-1		GROMMET HWL -----	6	
- 8	S2092-3		FASTENER-24.0 IN LG BKI -----	1	
- 9	0415024-1		INSERT-AFT PANEL WOODGRAIN -----	1	
-10	0415021-13		PANEL ASSY-BAGGAGE COMPARTMENT UPPER AFT WEU 0415021-42 -	1	
	0415021-42		PANEL ASSY-BAGGAGE COMPARTMENT UPPER AFT -----	1	
			ATTACHING PARTS		
	S1021A6-8		SCREW USED WITH 0415021-42 PANEL ASSY -----	4	
			-----*		
-11	0411599-5	<	SHIELD-RUDDER BAR LH -----	1	
-12	0411971-1	<	SHIELD-RUDDER BAR RH -----	1	
	0411836-3		SHIELD-RUDDER BAR RH USE WITH RH CONTROLS ONLY -----	1	
	0411836-6		SHIELD ASSY-RUDDER BAR RH USE WITH RH CONTROLS ONLY -----	1	
			ATTACHING PARTS		
	S1021Z8-6		SCREW -----	9	
			-----*		
CONTINUED ON NEXT PAGE					

152 & A152 Parts Catalog

Upholstery (Cont)

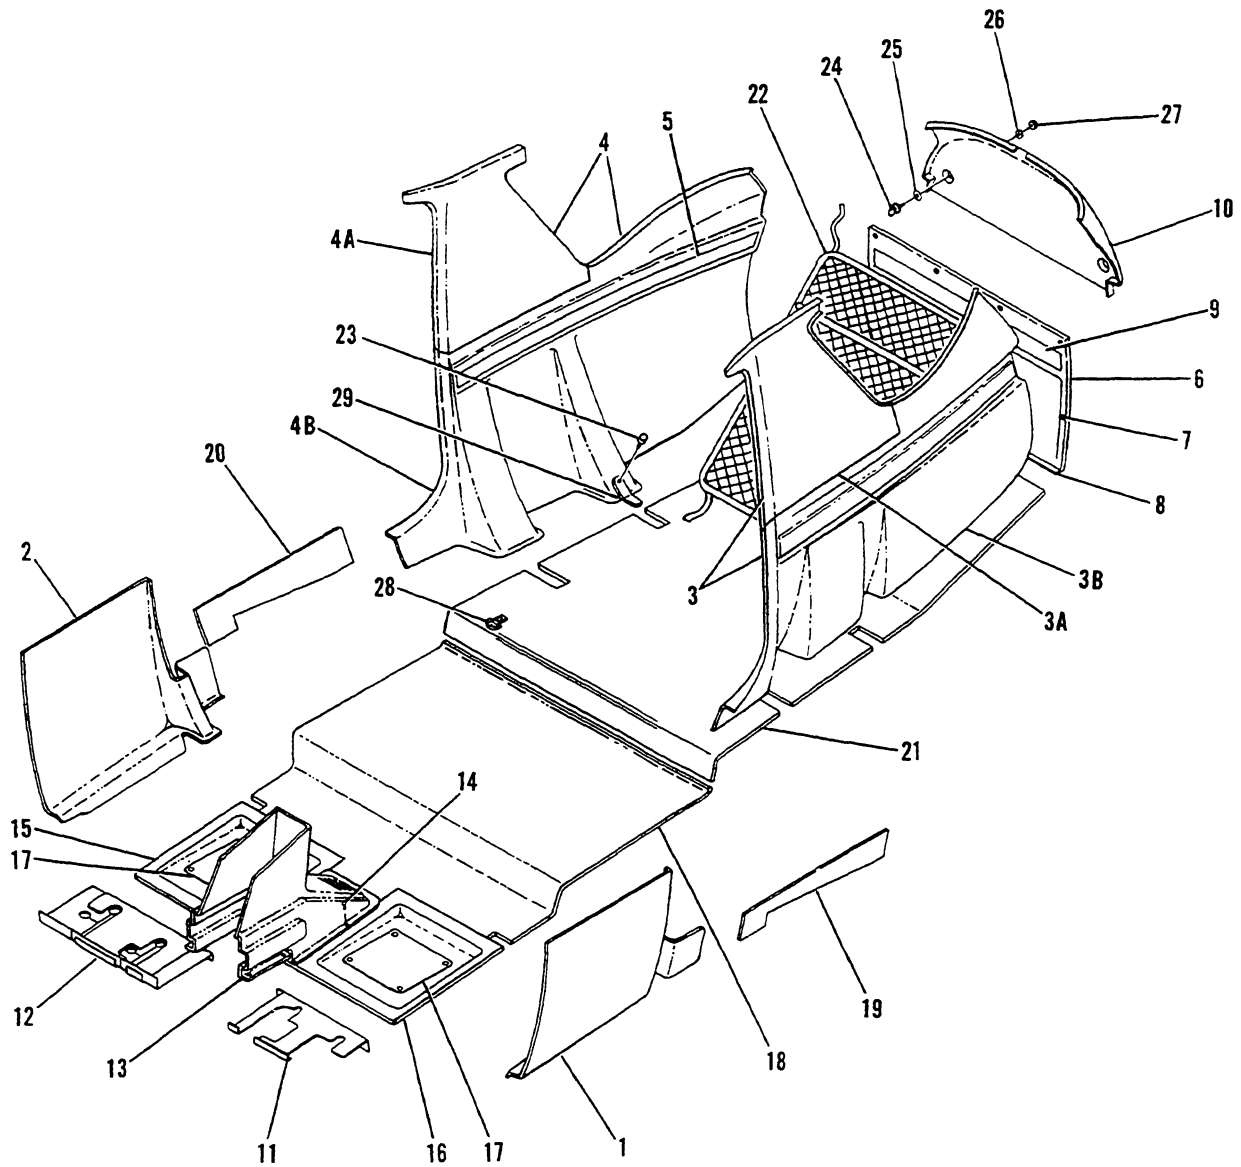


152 SERIAL 15279406 THRU 15282031
F152 SERIAL F15201429 THRU F15201528
A152 SERIAL A1520735 THRU A1520808
FA152 SERIAL FA1520337 THRU FA1520347
Figure 45. Cabin Side Panels & Floorboard Upholstery Installation

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION							UNITS PER ASSY	USABLE ON CODE
			1	2	3	4	5	6	7		
45 -13	0413463-3	<	COVER ASSY-CONTROL WEU 0413463-5 -----							1	A B A B A B A B B
	0413463-5	<	COVER ASSY-CONTROL -----							1	
-14	S1021Z8-6		ATTACHING PARTS -----							7	
			SCREW -----							1	
			-----*							1	
-15	0415021-28	#	CARPET-FWD RH -----							1	
-16	0415021-29	#	CARPET-FWD LH -----							1	
-17	0415026-1		SCUFF PLATE-CARPET -----							2	
			ATTACHING PARTS -----							4	
	S1021Z4-8		SCREW -----							4	
			-----*							1	
-18	0415021-2	#	CARPET ASSY-CENTER -----							1	
-19	0415021-23	#	CARPET-SCUFF LH -----							1	
-20	0415021-22	#	CARPET-SCUFF RH -----							1	
-21	0415021-3	#	CARPET ASSY-AFT -----							1	
-22	2015009-2		NET-BAGGAGE -----							1	
			ATTACHING PARTS -----							2	
-23	1211203-1		EYEBOLT -----							2	
-24	1211203-1		EYEBOLT -----							2	
	0511165		EYEBOLT AEROBAT -----							2	
-25	1200127-1		WASHER -----							2	
	AN970-4		WASHER AEROBAT -----							2	
-26	AN960-10		WASHER -----							2	
	AN960-416		WASHER AEROBAT -----							2	
-27	MS21044N3		NUT -----							2	
	MS21042L4		NUT AEROBAT -----							2	
-28	0711083-1		LATCH ASSY-CARGO TIE DOWN -----							2	
	NAS221-10		SCREW -----							2	
	AN960-10		WASHER -----							2	
			-----*							2	
-29	0414022-1		RETAINER AEROBAT -----							2	B
NOTE. #THIS PART NUMBER MUST HAVE A SECOND DASH NUMBER ADDED TO DENOTE COLOR. REFER TO HOW TO ORDER UPHOLSTERED PARTS-PAGE VIII. NOTE. <THIS PART NUMBER MUST HAVE A SECOND DASH NUMBER ADDED TO DENOTE COLOR. REFER TO HOW TO ORDER INTERIOR PARTS-PAGE IX. A---152 SERIAL 15279406 THRU 15282031 F152 SERIAL F15201429 THRU F15201528 B---A152 SERIAL A1520735 THRU A1520808 FA152 SERIAL FA1520337 THRU FA1520347 C---152 SERIAL 15279406 THRU 15279886 F152 SERIAL F15201429 THRU F15201498 A152 SERIAL A1520735 THRU A1520747 FA152 SERIAL FA1520337 THRU FA1520346 D---152 SERIAL 15279887 THRU 15282031 F152 SERIAL F15201499 THRU F15201528 A152 SERIAL A1520748 THRU A1520808 FA152 SERIAL FA1520347 ONLY E---152 SERIAL 15279406 THRU 15281298, 15281300 THRU 15281314, 15281316 THRU 15281326, 15281328 THRU 15281340, 15281342 THRU 15281349, 15281351 THRU 15281359, 15281361 THRU 15281369, 15281371 THRU 15281380, 15281382 THRU 15281389, 15281391 THRU 15281400, 15281402 THRU 15281409, 15281411 THRU 15281420, 15281422 THRU 15281426 F152 SERIAL F15201429 THRU F15201528 A152 SERIAL A1520735 THRU A1520785 FA152 SERIAL FA1520337 THRU FA1520347 F---152 SERIAL 15281299, 15281315, 15281327, 15281341, 15281350, 15281360, 15281370, 15281381, 15281390, 15281401, 15281410, 15281421, 15281427 THRU 15282031 A152 SERIAL A1520786 THRU A1520808 G---152 SERIAL 15279406 THRU 15282031 F152 SERIAL F15201429 THRU F15201528 A152 SERIAL A1520735 THRU A1520808 FA152 SERIAL FA1520337 THRU FA1520347											

152 & A152 Parts Catalog

Upholstery (Cont)

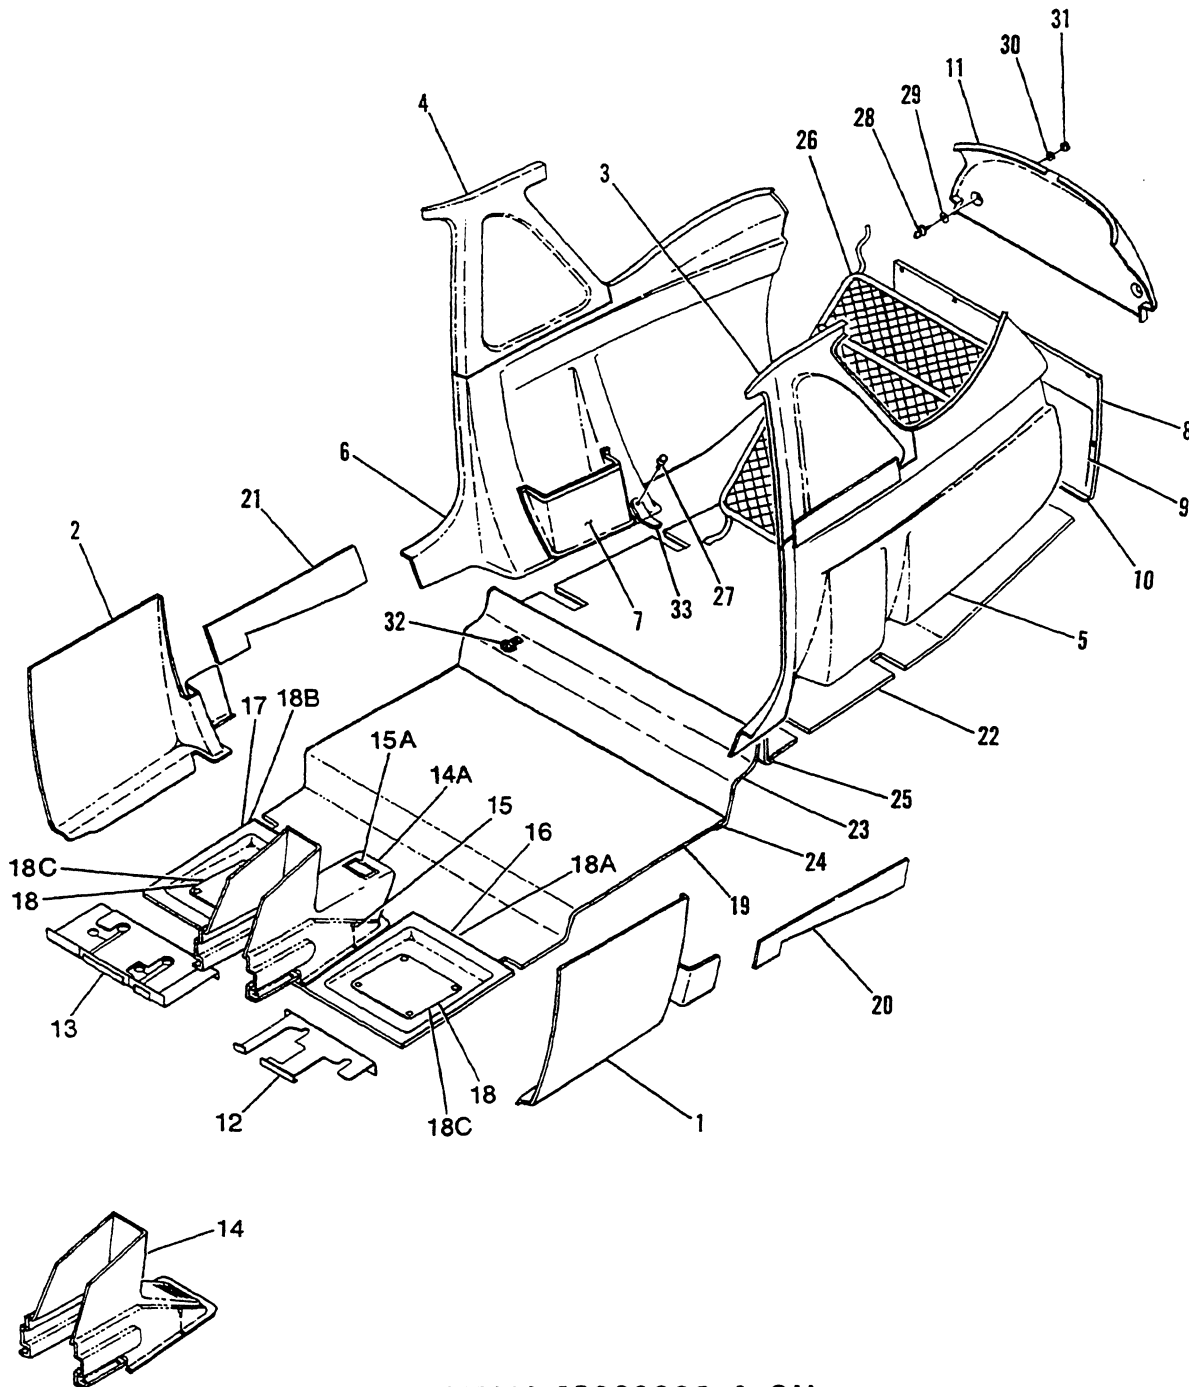

CODE K

152 SERIAL 15282032 & ON
F152 SERIAL F15201529 & ON
A152 SERIAL A1520809 & ON
FA152 SERIAL FA1520348 & ON

Figure 45A. Cabin Side Panels & Floorboard Upholstery Installation

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
			1 2 3 4 5 6 7		
45A-			UPHOLSTERY INSTALLATION-CABIN SIDE PANELS & FLOORBOARD -----	NP	A
- 1	0415021-33	#	PANEL ASSY-COML LH CARPETED -----	1	R
	0415021-43	#	PANEL ASSY-COML LH CARPETED -----	1	S
- 2	0415021-34	#	PANEL ASSY-COML RH CARPETED -----	1	S
	0415021-44	#	PANEL ASSY-COML RH CARPETED -----	1	S
- 3	0415031-3		PANEL ASSY-CABIN SIDE UPR LH -----	1	
- 4	0415031-4		PANEL ASSY-CABIN SIDE UPR RH -----	1	
- 5	0415031-19		PANEL ASSY-CABIN SIDE LWR LH -----	1	
- 6	0415031-18		PANEL ASSY-CABIN SIDE LWR RH -----	1	
	S2092-2		FABRIC FASTENER-PILE 2.00 IN LG BKI -----	1	
- 7	0415034-2		POCKET-RH -----	1	B
	0415034-1		POCKET-LH -----	1	B
			ATTACHING PARTS		
	S1021Z4-8		SCREW -----	4	
	NAS446-1-1		NUT -----	4	
			-----*		
- 8	0415031-14		PANEL ASSY-BAGGAGE COMPARTMENT LWR AFT WEU 0415031-16 ---	1	M
	0415031-16		PANEL ASSY-BAGGAGE COMPARTMENT LWR AFT -----	1	N
- 9	HM5P-54-1-1		PLUNGER HWL -----	6	M
	H559-4-1		GROMMET HWL -----	6	M
-10	S2092-3		FABRIC FASTENER-HOOK 24.00 IN LG BKI -----	1	
	S2092-2		FABRIC FASTENER-PILE 7.00 IN LG BKI -----	3	N
	S2092-2		FABRIC FASTENER-PILE 1.00 IN LG BKI -----	4	N
-11	0415021-13		PANEL ASSY-BAGGAGE COMPARTMENT UPR AFT WEU 0415021-42 ---	1	M
	0415021-42		PANEL ASSY-BAGGAGE COMPARTMENT UPR AFT -----	1	N
			ATTACHING PARTS		
	S1021A6-8		SCREW -----	4	N
			-----*		
-12	0411599-5	<	SHIELD-RUDDER BAR LH -----	1	D
	0411599-5-156		SHIELD-RUDDER BAR LH -----	1	E
-13	0411971-1	<	SHIELD-RUDDER BAR RH -----	1	E
	0411971-1-156		SHIELD-RUDDER BAR RH -----	1	E
	0411836-6		SHIELD ASSY-RUDDER BAR RH USED WITH RH CONTROLS ONLY -----	1	K
	0411836-3		SHIELD ASSY-RUDDER BAR RH USED WITH RH CONTROLS ONLY -----	1	L
			ATTACHING PARTS		
	S1021Z8-6		SCREW -----	9	
			-----*		
-14	0413463-3	<	COVER ASSY-CONTROL WEU 0413463-5 -----	1	D
	0413463-3-279		COVER ASSY-CONTROL WEU 0413463-5-279 -----	1	H
	0413463-5-279		COVER ASSY-CONTROL -----	1	J
-14A	0413463-7-279		COVER ASSY-CONTROL -----	1	L
			ATTACHING PARTS		
-15	S1021Z8-6		SCREW -----	7	
			-----*		
-15A	S2533-1		ASH RECEIVER ASSY -----	1	L
-16	0415021-29	#	CARPET-FWD LH -----	1	P
-17	0415021-28	#	CARPET-FWD RH -----	1	P
-18	0415026-1		SCUFF PLATE-CARPET -----	2	P
			ATTACHING PARTS		
	S1021Z4-8		SCREW -----	4	P
			-----*		
-18A	0415021-27	#	CARPET ASSY-FWD LH -----	1	Q
-18B	0415021-26	#	CARPET ASSY-FWD RH -----	1	Q
-18C	0415026-3		SCUFF PLATE-CARPET -----	1	Q
			ATTACHING PARTS		
	S2016-3		RIVET -----	6	Q
	S1450-24A10-025		WASHER -----	6	Q
			-----*		
-19	0415021-38	#	CARPET ASSY-CENTER -----	1	
-20	0415021-23	#	CARPET-SCUFF LH -----	1	
-21	0415021-22	#	CARPET-SCUFF RH -----	1	
-22	0415021-37	#	CARPET ASSY-AFT -----	1	
-23	0415033-1	<	RETAINER ASSY-BAGGAGE -----	1	D
	0415033-1-532		RETAINER ASSY-BAGGAGE -----	1	F
	0415033-1-279		RETAINER ASSY-BAGGAGE -----	1	G
-24	S2092-2		FASTENER-FABRIC PILE 10.40 IN LG BKI -----	1	
-25	S2092-6		FASTENER-FABRIC PILE 32.80 IN LG BKI -----	1	
-26	2015009-2		NET-BAGGAGE -----	1	
			ATTACHING PARTS		
-27	1211203-1		EYEBOLT -----	2	
-28	1211203-1		EYEBOLT -----	2	B
	0511165		EYEBOLT AEROBAT -----	2	C
-29	1200127-1		WASHER -----	2	C
	AN970-4		WASHER AEROBAT -----	2	C

CONTINUED ON NEXT PAGE

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
45A-30	AN960-10	WASHER -----	2	B
	AN960-416	WASHER AEROBAT -----	2	C
-31	MS21044N3	NUT -----	2	B
	MS21042L4	NUT AEROBAT -----	2	C
-32	0711083-1	LATCH ASSY-CARGO TIE DOWN -----	2	
	NAS221-14	SCREW -----	2	
	AN960-10	WASHER -----	2	
-33	0414022-1	RETAINER AEROBAT -----	2	C
NOTE. #THIS PART NUMBER MUST HAVE A SECOND DASH NUMBER ADDED TO DENOTE COLOR. REFER TO HOW TO ORDER UPHOLSTERED PARTS-PAGE VIII. NOTE. <THIS PART NUMBER MUST HAVE A SECOND DASH NUMBER ADDED TO DENOTE COLOR. REFER TO HOW TO ORDER INTERIOR PARTS-PAGE IX. A---152 SERIAL 15282032 & ON F152 SERIAL F15201529 & ON A152 SERIAL A1520809 & ON FA152 SERIAL FA1520348 & ON B---152 SERIAL 15282032 & ON F152 SERIAL F15201529 & ON C---A152 SERIAL A1520809 & ON FA152 SERIAL FA1520348 & ON D---152 SERIAL 15282023 THRU 15284541 F152 SERIAL F15201529 THRU F15201808 A152 SERIAL A1520809 THRU A1520943 FA152 SERIAL FA1520348 THRU FA1520372 E---152 SERIAL 15284542 & ON F152 SERIAL F15201809 & ON A152 SERIAL A1520944 & ON FA152 SERIAL FA1520373 & ON F---152 SERIAL 15284542 & ON F152 SERIAL F15201809 & ON G---A152 SERIAL A1520944 & ON FA152 SERIAL FA1520373 & ON H---152 SERIAL 15284542 THRU 15285373 F152 SERIAL F15201809 THRU F15201928 A152 SERIAL A1520944 THRU A1520999 FA152 SERIAL FA1520373 THRU FA1520382 J---152 SERIAL 15285374 THRU 15285594 A152 SERIAL A1521000 THRU A1521014 K---152 SERIAL 15282032 THRU 15285594 F152 SERIAL F15201529 THRU F15201928 A152 SERIAL A1520809 THRU A1521014 FA152 SERIAL FA1520348 THRU FA1520382 L---152 SERIAL 15285595 & ON F152 SERIAL F15201929 & ON A152 SERIAL A1521015 & ON FA152 SERIAL FA1520383 & ON M---152 SERIAL 15282032 THRU 15285584 F152 SERIAL F15201529 THRU F15201943 A152 SERIAL A1520809 THRU A1521015 FA152 SERIAL FA1520348 THRU FA1520387 N---152 SERIAL 15285585 & ON F152 SERIAL F15201944 & ON A152 SERIAL A1521016 & ON FA152 SERIAL FA1520388 & ON P---152 SERIAL 15282032 THRU 15285279 F152 SERIAL F15201529 THRU F15201928 A152 SERIAL A1520809 THRU A1520989 FA152 SERIAL FA1520348 THRU FA1520382 Q---152 SERIAL 15285280 & ON F152 SERIAL F15201929 & ON A152 SERIAL A1520990 & ON FA152 SERIAL FA1520383 & ON R---152 SERIAL 15282032 THRU 15285833 F152 SERIAL F15201529 THRU F15201828 A152 SERIAL A1520809 THRU A1521025 FA152 SERIAL FA1520348 THRU FA1520382 S---152 SERIAL 15285834 & ON F152 SERIAL F15201829 & ON A152 SERIAL A1521026 & ON FA152 SERIAL FA1520383 & ON				

152 & A152 Parts Catalog

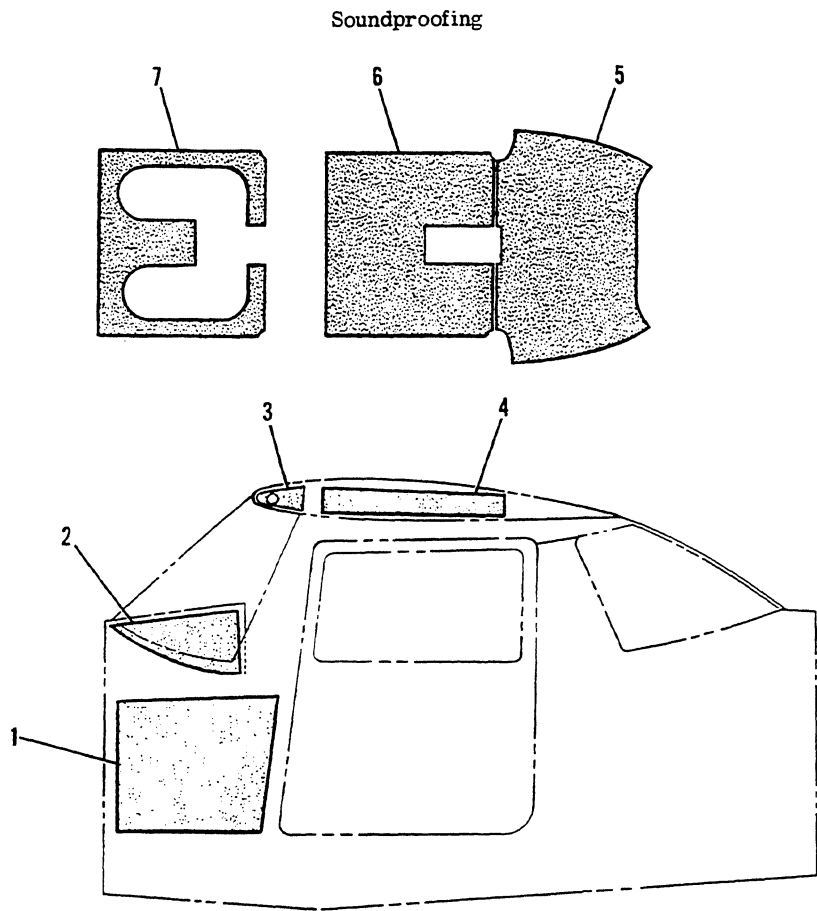


Figure 46. Soundproofing Installation


FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
46 -		SOUNDPROOFING INSTALLATION -----	NP	
- 1	0415016-2	SOUNDPROOFING-COWL -----	2	
- 2	0415016-3	SOUNDPROOFING-DECK -----	1	
- 3	0415016-4	SOUNDPROOFING-WINGROOT LEADING EDGE -----	6	
- 4	0415016-5	SOUNDPROOFING-WING ROOT -----	6	
- 5	0415016-7	SOUNDPROOFING-CABIN TOP AFT -----	1	A
- 6	0415016-6	SOUNDPROOFING-CABIN TOP USED WITHOUT SKYLIGHT -----	1	A
- 7	0415016-8	SOUNDPROOFING-CABIN TOP USED WITH SKYLIGHT -----	1	A
		A---152 SERIAL 15279800 & ON F152 SERIAL F15201499 & ON A152 SERIAL A1520746 & ON FA152 SERIAL FA1520347 & ON		

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION							UNITS PER ASSY	USABLE ON CODE
		1	2	3	4	5	6	7		
47 -		RECLINING SEAT INSTALLATION -----							NP	A
	0414070-2 #	SEAT ASSY-RECLINING RH -----							1	B
	0414084-2 #	SEAT ASSY-RECLINING RH -----							1	C
	0414090-2 #	SEAT ASSY-RECLINING RH -----							1	G
	0414070-1 #	SEAT ASSY-RECLINING LH -----							1	B
	0414084-1 #	SEAT ASSY-RECLINING LH -----							1	C
	0414090-1 #	SEAT ASSY-RECLINING LH -----							1	G
	- 1 0414070-5 #	SEAT BACK ASSY -----							1	B
	0414084-5 #	SEAT BACK ASSY -----							1	C
	0414090-5 #	SEAT BACK ASSY -----							1	G
		ATTACHING PARTS								
	- 2 AN4-14A	BOLT -----							2	
	AN960-416	WASHER UNDER BOLT HEAD -----							2	
	MS21042L4	NUT -----							2	
		-----*								
	- 3 0414070-6 #	COVER ASSY-SEAT BACK -----							1	B
	0414084-6 #	COVER ASSY-SEAT BACK -----							1	C
	0414090-6 #	COVER ASSY-SEAT BACK -----							1	G
		ATTACHING PARTS								
	S1021A4-6	SCREW -----							4	
	AN960-4L	WASHER -----							4	
		-----*								
	- 4 0414070-10	CUSHION ASSY-SEAT BACK -----							1	B
	0414084-10	CUSHION ASSY-SEAT BACK -----							1	C
	0414090-10	CUSHION ASSY-SEAT BACK -----							1	G
	- 5 0414063-1 #	TRIM ASSY-SEAT BACK -----							1	
		ATTACHING PARTS								
	S1021A4-6	SCREW -----							6	
	S1023A6-6	SCREW -----							4	
	S2255-1	WASHER -----							4	
		-----*								
	- 6 0414070-4 #	SEAT BOTTOM ASSY-RH -----							1	B
	0414084-4 #	SEAT BOTTOM ASSY-RH -----							1	C
	0414090-4 #	SEAT BOTTOM ASSY-RH -----							1	G
	0414070-3 #	SEAT BOTTOM ASSY-LH -----							1	B
	0414084-3 #	SEAT BOTTOM ASSY-LH -----							1	C
	0414090-3 #	SEAT BOTTOM ASSY-LH -----							1	G
	- 7 0414070-7 #	COVER ASSY-SEAT BOTTOM -----							1	B
	0414084-7 #	COVER ASSY-SEAT BOTTOM -----							1	C
	0414090-7 #	COVER ASSY-SEAT BOTTOM -----							1	G
	- 8 0414070-11	CUSHION ASSY-SEAT BOTTOM -----							1	B
	0414084-11 #	CUSHION ASSY-SEAT BOTTOM -----							1	C
	0414090-11 #	CUSHION ASSY-SEAT BOTTOM -----							1	G

CONTINUED ON NEXT PAGE

152 & A152 Parts Catalog

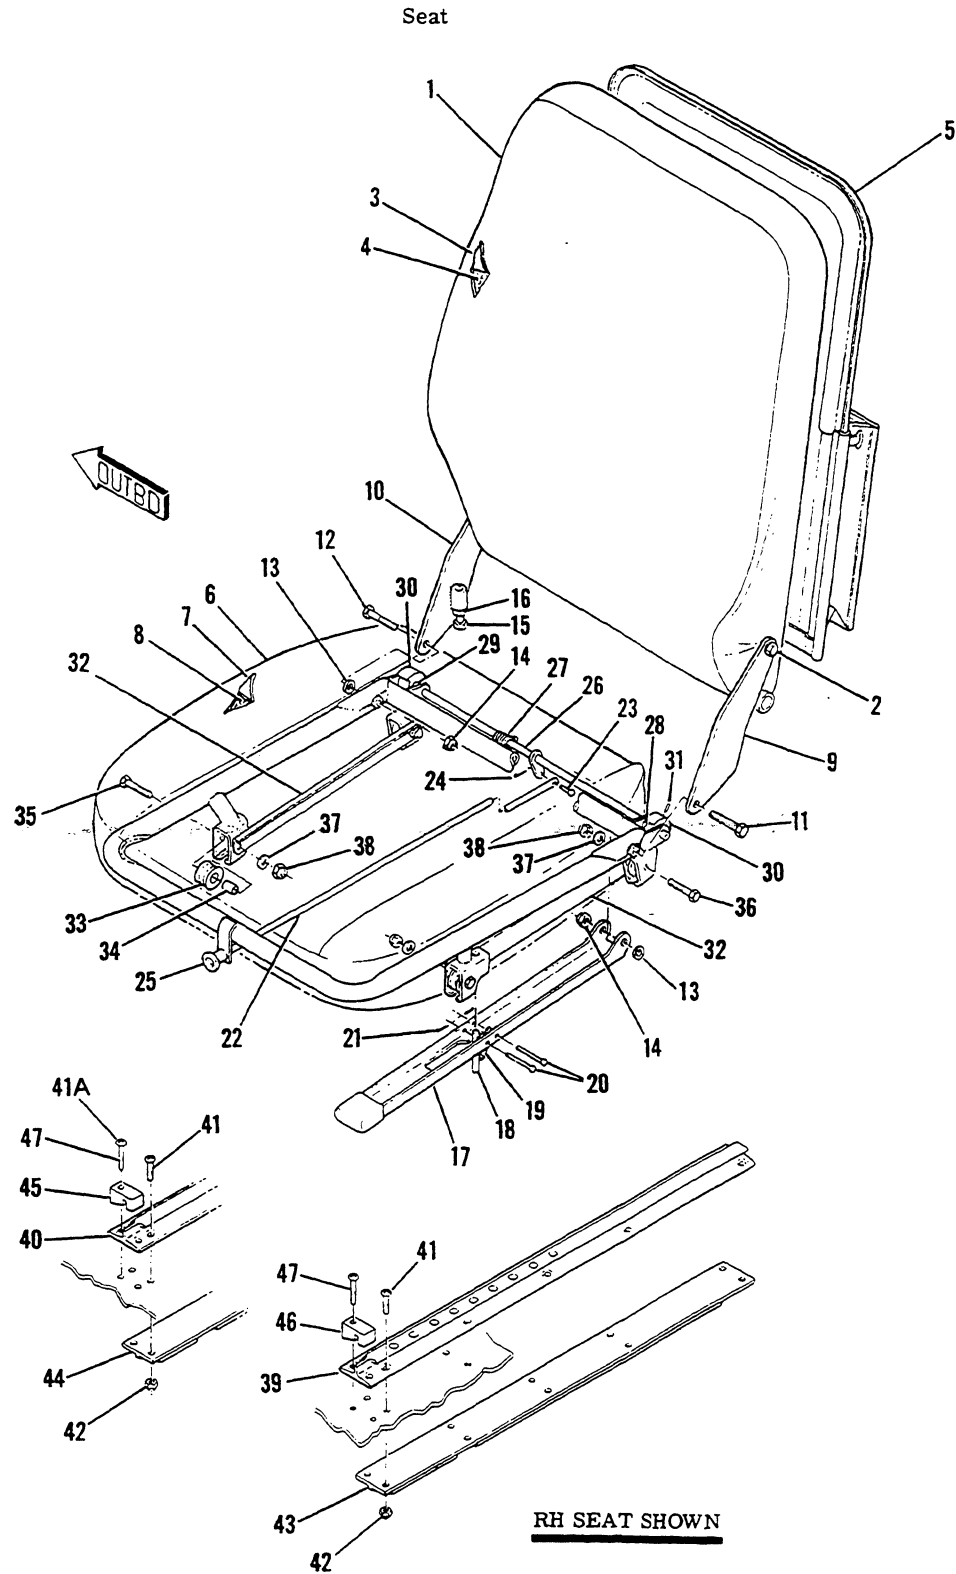

152 SERIAL 15279406 & ON
F152 SERIAL F15201429 & ON


Figure 47. Reclining Seat Installation

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
47 - 9	0414039-1	HINGE ASSY-LH -----	1	
-10	0414039-2	HINGE ASSY-RH -----	1	
		ATTACHING PARTS		
-11	AN4-15A	BOLT INBD -----	1	
-12	AN4-14A	BOLT OUTBD -----	1	
-13	AN960-416L	WASHER -----	1	
-14	MS21042L4	NUT -----	1	
		-----*		
-15	NAS428-4-6	BOLT SEAT STOP -----	2	
-16	AN315-4R	NUT SEAT STOP -----	2	
-17	0414040-11	LEVER ASSY-SEAT LATCH -----	1	
-18	0414035-6	PIN-SEAT LATCH -----	1	
-19	0411265-2	SPRING-SEAT LATCH -----	1	
-20	MS20392-1C35	PIN -----	2	
-21	MS24665-132	COTTER PIN -----	2	
-22	0411268-3	HANDLE ASSY-RECLINING SEAT -----	1	
		ATTACHING PARTS		
-23	MS20392-1C11	PIN -----	1	
-24	MS24665-132	COTTER PIN -----	1	
		-----*		
-25	0713303-19	KNOB-HANDLE -----	1	
		ATTACHING PARTS		
	NAS561CF2-6	ROLL PIN -----	1	
		-----*		
-26	0414040-15	SHAFT ASSY-RECLINING SEAT -----	1	
-27	0411266-1	SPRING -----	1	
-28	NAS43HT5-14	SPACER INBD -----	1	
-29	NAS43HT5-24	SPACER OUTBD -----	1	
-30	0411267-1	CAM-RECLINING SEAT -----	2	
		ATTACHING PARTS		
-31	NAS561C3-14	ROLL PIN -----	1	
		-----*		
-32	0414066-1	BRACE -----	2	
-33	0311310	ROLLER -----	4	
		ATTACHING PARTS		
-34	0311586	BUSHING -----	1	
-35	AN3-12A	BOLT FWD ROLLERS -----	1	
-36	AN3-13A	BOLT AFT ROLLERS -----	1	
-37	AN960-10	WASHER -----	1	
-38	MS21044N3	NUT -----	1	
		-----*		
-39	0410235-6	SEAT RAIL-INBD -----	2	
-40	0410235-2	SEAT RAIL-RH OUTBD -----	1	
	0410235-1	SEAT RAIL-LH OUTBD -----	1	
		ATTACHING PARTS		
-41	NAS221-8	SCREW -----	10	
-41A	NAS221-9	SCREW OUTBD RAILS ONLY -----	1	
-42	MS21044N3	NUT -----	10	
		-----*		
-43	0410236-2	STIFFENER RH INBD ONLY -----	1	
-44	0410236-1	STIFFENER OUTBD -----	2	
-45	0410232-1	SEAT STOP OUTBD RAIL ONLY -----	2	
	DEV042878-1	SEAT STOP OUTBD RAILS ONLY -----	2	
-46	0410232-1	SEAT STOP INBD RAILS ONLY -----	2	
		ATTACHING PARTS		
-47	NAS221-17	SCREW -----	1	
		-----*		
NOTE. #THIS PART NUMBER MUST HAVE A SECOND DASH NUMBER ADDED TO DENOTE COLOR. REFER TO HOW TO ORDER UPHOLSTERED PARTS-PAGE VIII. A---152 SERIAL 15279406 & ON F152 SERIAL F15201429 & ON B---152 SERIAL 15279406 THRU 15282031 F152 SERIAL F15201429 THRU F15201528 C---152 SERIAL 15282032 THRU 15285161 F152 SERIAL F15201529 THRU F15201893 D---152 SERIAL 15279406 THRU 15282031 F152 SERIAL F15201429 THRU F15201528 E---152 SERIAL 15282032 THRU 15282229 F---152 SERIAL 15282230 & ON F152 SERIAL F15201529 & ON G---152 SERIAL 15285162 & ON F152 SERIAL F15201894 & ON				

152 & A152 Parts Catalog

Seat (Cont)

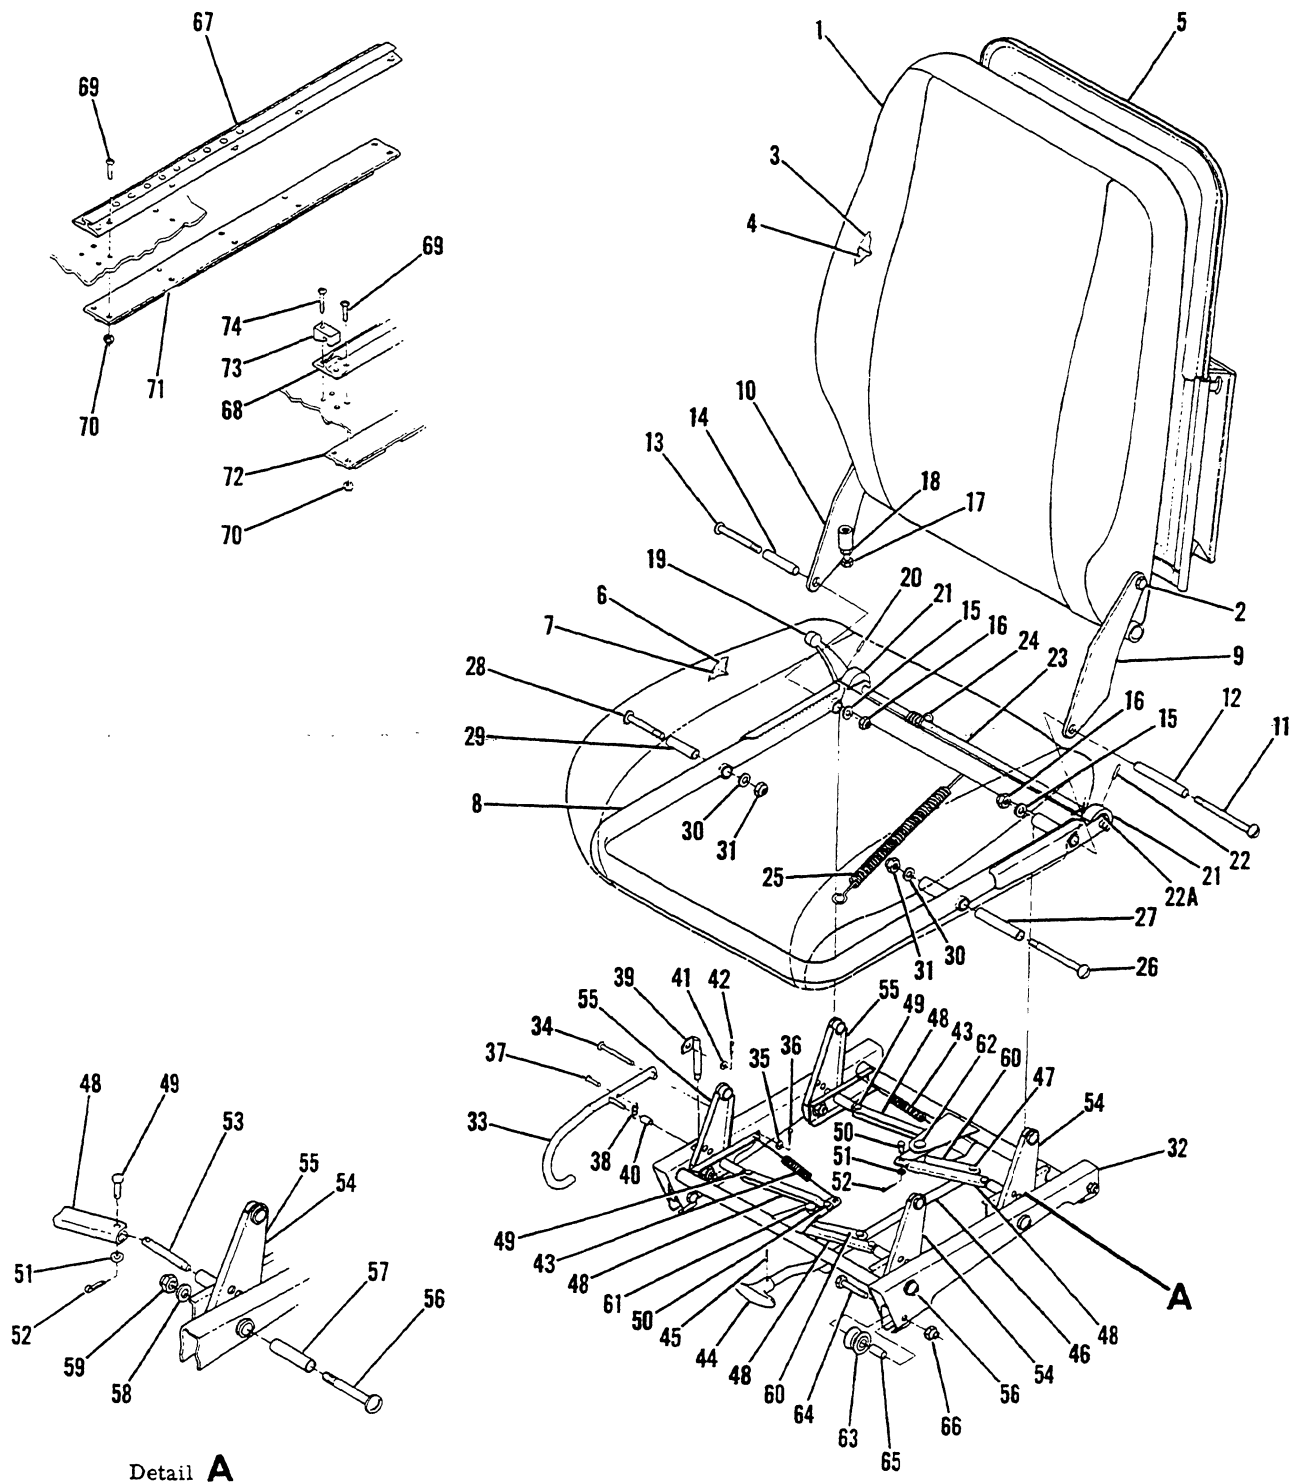

152 SERIAL 15279406 THRU 15282031
F152 SERIAL F15201429 THRU F15201528

Figure 48. Vertical Adjustable Seat Installation

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
48 -		VERTICAL ADJUSTABLE SEAT INSTALLATION -----	NP	A
	0414071-1 #	SEAT ASSY-VERTICAL ADJUSTABLE LH -----	1	
	0414071-2 #	SEAT ASSY-VERTICAL ADJUSTABLE RH -----	1	
- 1	0414070-5 #	SEAT BACK ASSY-UPHOLSTERED -----	1	
		ATTACHING PARTS -----		
- 2	AN4-14A	BOLT -----	2	
	AN960-416	WASHER UNDER BOLT HEAD -----	2	
	MS21042L4	NUT -----	2	
		-----*		
- 3	0414070-6 #	COVER ASSY-SEAT BACK -----	1	
- 4	0414070-10	CUSHION ASSY-SEAT BACK -----	1	
- 5	0414063-1 #	TRIM ASSY-SEAT BACK -----	1	
		ATTACHING PARTS -----		
	S1021A4-6	SCREW -----	6	
	S1023A6-6	SCREW -----	4	
	S2255-1	WASHER -----	4	
		-----*		
	0414071-3 #	SEAT BOTTOM ASSY-UPHOLSTERED LH -----	1	
	0414071-4 #	SEAT BOTTOM ASSY-UPHOLSTERED RH -----	1	
- 6	0414070-7 #	COVER ASSY-SEAT BOTTOM -----	1	
- 7	0414070-11	CUSHION ASSY-SEAT BOTTOM -----	1	
	0414041-4	DIAPHRAGM-SEAT BOTTOM -----	1	
	0414065-1	SCUFF PLATE-DIAPHRAGM -----	2	
- 8	0414053-1	FRAME ASSY-LH -----	1	
	0414053-2	FRAME ASSY-RH -----	1	
- 9	0414039-5	HINGE ASSY-LH -----	1	
-10	0414039-6	HINGE ASSY-RH -----	1	
		ATTACHING PARTS -----		
-11	AN24-48A	BOLT OUTBD -----	1	
-12	0414054-22	SPACER OUTBD -----	1	
-13	AN24-32A	BOLT INBD -----	1	
-14	0414054-20	SPACER INBD -----	1	
-15	AN960-416	WASHER -----	1	
-16	MS21044N4	NUT -----	1	
		-----*		
-17	NAS428-4-6	BOLT-SEAT STOP -----	2	
-18	AN315-4R	NUT-SEAT STOP -----	2	
-19	0710312-3	HANDLE-RECLINING SEAT -----	1	
		ATTACHING PARTS -----		
-20	NAS561C3-10	ROLL PIN -----	1	
		-----*		
-21	0411267-1	CAM-RECLINING SEAT -----	2	
		ATTACHING PARTS -----		
-22	NAS561C3-14	ROLL PIN -----	1	
		-----*		
-22A	AN960-516	WASHER -----	4	
-23	0414054-24	SHAFT-RECLINING SEAT-LH -----	1	
	0414054-35	SHAFT-RECLINING SEAT-RH -----	1	
-24	0411266-1	SPRING-RECLINING SEAT -----	1	
-25	0414061-1	SPRING-VERTICAL SEAT ADJUST -----	1	
-26	AN24-44A	BOLT OUTBD -----	1	
-27	0414054-21	SPACER OUTBD -----	1	
-28	AN24-27A	BOLT INBD -----	1	
-29	0414054-18	SPACER INBD -----	1	
-30	AN960-416	WASHER -----	2	
-31	MS21044N4	NUT -----	2	
-32	0414053-3	PEDESTAL ASSY-WELDED LH -----	1	
	0414053-4	PEDESTAL ASSY-WELDED RH -----	1	
-33	0414054-41	HANDLE ASSY-LH -----	1	
	0414054-40	HANDLE ASSY-RH -----	1	
		ATTACHING PARTS -----		
-34	MS20392-1C47	PIN -----	1	
-35	AN960-4L	WASHER -----	1	
-36	MS24665-172	COTTER PIN -----	1	
		-----*		
-37	MS20392-1C11	PIN -----	1	
-38	0411265-2	SPRING -----	1	
-39	0414054-37	PIN ASSY-LOCKING LH -----	1	
	0414054-38	PIN ASSY-LOCKING RH -----	1	
		ATTACHING PARTS -----		
-40	NAS43HT1-27	SPACER -----	1	
-41	AN960-4L	WASHER -----	1	
-42	MS24665-172	COTTER PIN -----	1	
		-----*		
-43	1414116-3	SPRING -----	2	

CONTINUED ON NEXT PAGE

152 & A152 Parts Catalog


FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
48 -44	0414057-1	HANDLE-SEAT RELEASE ----- ATTACHING PARTS -----	1	
-45	NAS561-3-8	ROLL PIN ----- -----*	1	
-46	0414054-11	SHAFT-SEAT RELEASE ----- ATTACHING PARTS -----	1	
-47	MS20392-1C15	PIN -----	2	
	AN960-10L	WASHER -----	2	
	MS24665-132	COTTER PIN ----- -----*	2	
-48	0414054-5	LINKAGE ----- ATTACHING PARTS -----	4	
-49	MS20392-1C11	PIN -----	1	
-50	MS20392-1C7	PIN -----	1	
-51	AN960-4L	WASHER -----	2	
-52	MS24665-170	COTTER PIN ----- -----*	2	
-53	0414054-10	PIN-SEAT RELEASE -----	4	
-54	0414054-8	BELLCRANK ASSY-LH -----	2	
-55	0414054-7	BELLCRANK ASSY-RH ----- ATTACHING PARTS -----	2	
-56	AN24-30A	BOLT -----	1	
-57	0414054-19	SPACER -----	1	
-58	AN960-416	WASHER -----	1	
-59	MS21044N4	NUT ----- -----*	1	
-60	0414054-31	BELLCRANK ASSY ----- ATTACHING PARTS -----	2	
-61	MS20392-3C39	PIN FWD -----	1	
-62	MS20392-3C33	PIN AFT -----	1	
	AN960-416L	WASHER -----	1	
	MS24665-134	COTTER PIN ----- -----*	1	
-63	0311310	ROLLER ----- ATTACHING PARTS -----	4	
-64	AN3-12A	BOLT -----	1	
-65	0311586	BUSHING -----	1	
-66	MS21044N3	NUT ----- -----*	1	
-67	0410235-6	SEAT RAIL INBD -----	2	
-68	0410235-1	SEAT RAIL-LH OUTBD -----	1	
	0410235-2	SEAT RAIL-RH OUTBD ----- ATTACHING PARTS -----	1	
-69	NAS221-8	SCREW -----	10	
-70	MS21044N3	NUT ----- -----*	10	
-71	0410236-2	STIFFENER RH INBD ONLY -----	1	
-72	0410236-1	STIFFENER OUTBD -----	2	
-73	0410232-1	SEAT STOP OUTBD RAILS ONLY ----- ATTACHING PARTS -----	2	
-74	NAS221-17	SCREW ----- -----*	1	
NOTE. #THIS PART NUMBER MUST HAVE A SECOND DASH NUMBER ADDED TO DENOTE COLOR. REFER TO HOW TO ORDER UPHOLSTERED PARTS-PAGE VIII A---152 SERIAL 15279406 THRU 15282031 F152 SERIAL F15201429 THRU F15201528				

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION							UNITS PER ASSY	USABLE ON CODE			
		1	2	3	4	5	6	7					
48A-										NP	A D E D E D E		
	0414085-1	#										1	
	0414089-1	#										1	
	0414085-2	#										1	
	0414089-2	#										1	
	- 1 0414084-5	#										1	
	0414090-5	#										1	
	- 2 AN4-14A											2	
	AN960-416											2	
	MS21042L4											2	
	- 3 0414084-6	#										1	
	0414090-6	#										1	
	- 4 0414084-10											1	
	0414090-10											1	
	- 5 0414063-1	#										1	
	S1021A4-6											6	
	S1023A6-6											4	
	S2255-1											4	
	CONTINUED ON NEXT PAGE												

152 & A152 Parts Catalog

Seat (Cont)

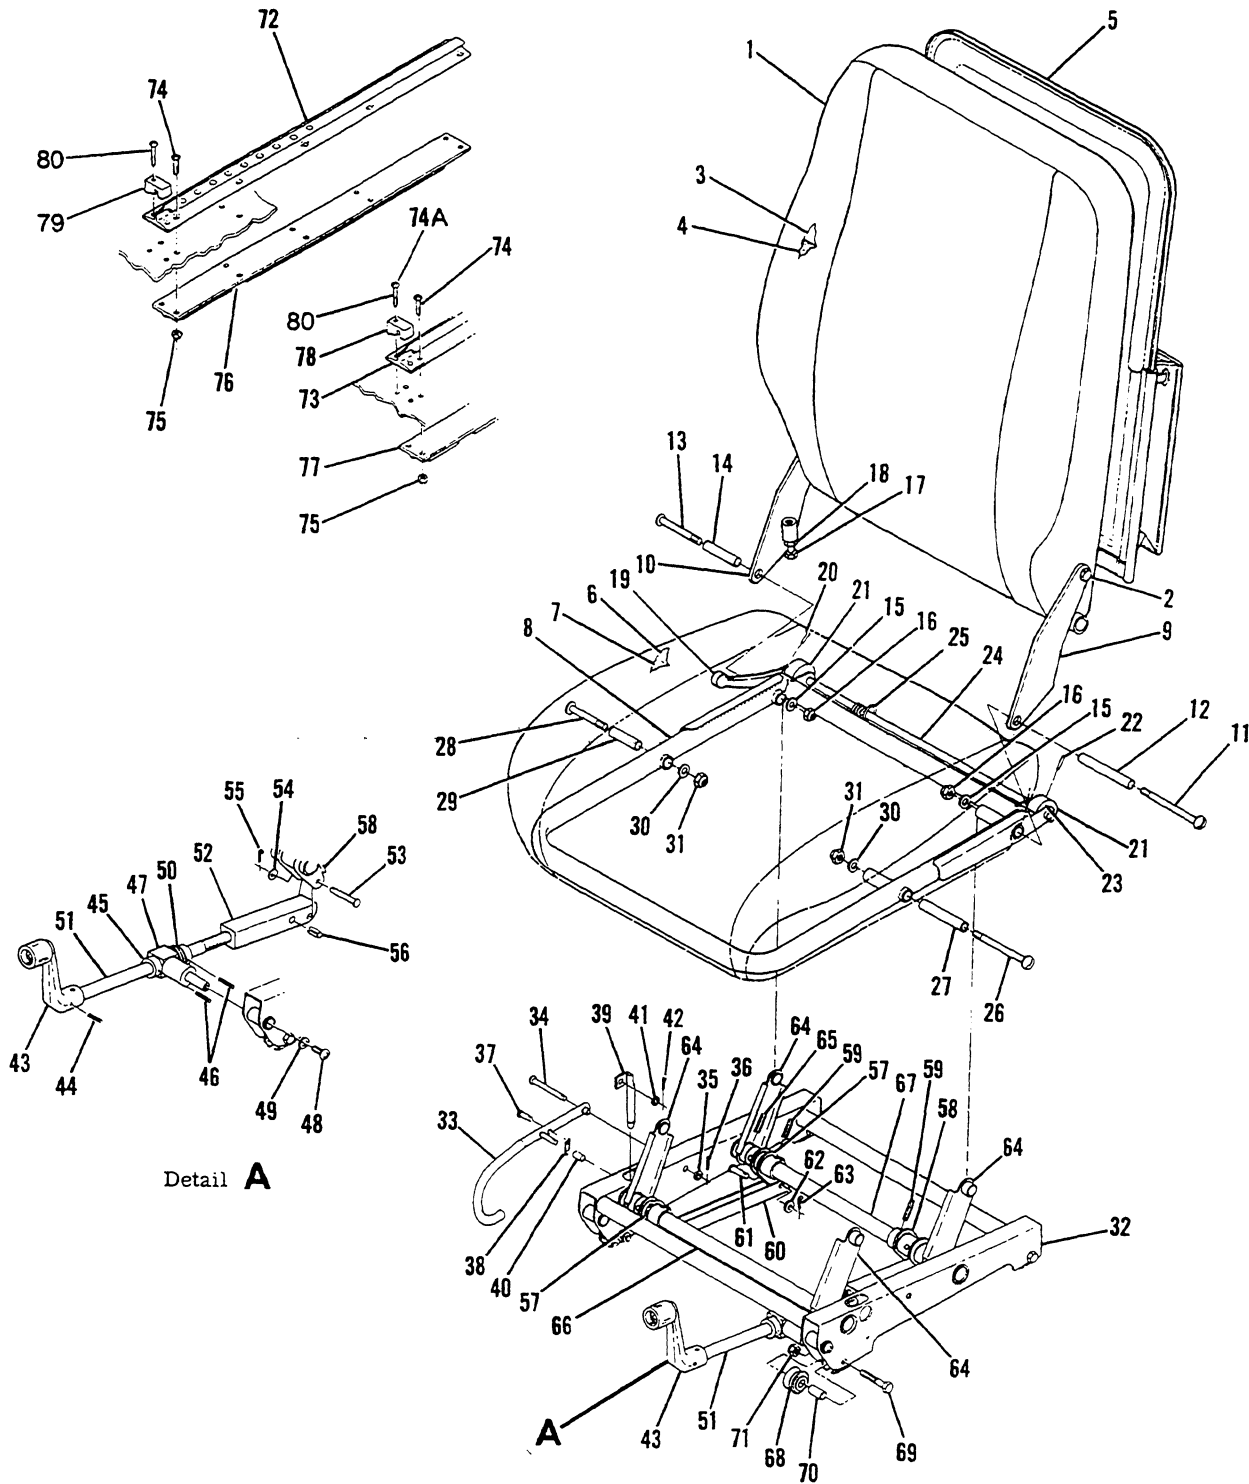

152 SERIAL 15282032 & ON
 F152 SERIAL F15201529 & ON
 Figure 48A. Vertical Adjustable Seat Installation

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
			1 2 3 4 5 6 7		
48A-	0414085-3	#	SEAT BOTTOM ASSY-UPHOLSTERED LH	1	D
	0414089-3	#	SEAT BOTTOM ASSY-UPHOLSTERED LH	1	E
	0414085-4	#	SEAT BOTTOM ASSY-UPHOLSTERED RH	1	D
	0414089-4	#	SEAT BOTTOM ASSY-UPHOLSTERED RH	1	E
- 6	0414084-7	#	COVER ASSY-SEAT BOTTOM	1	E
	0414090-7	#	COVER ASSY-SEAT BOTTOM	1	D
- 7	0414084-11		CUSHION ASSY-SEAT BOTTOM	1	E
	0414090-11		CUSHION ASSY-SEAT BOTTOM	1	E
	0414041-4		DIAPHRAGM-SEAT BOTTOM	1	
- 8	0414053-1		FRAME ASSY-LH	1	
	0414053-2		FRAME ASSY-RH	1	
- 9	0414039-5		HINGE ASSY-LH	1	
-10	0414039-6		HINGE ASSY-RH	1	
			ATTACHING PARTS		
-11	AN24-50A		BOLT OUTBD	1	
-12	NAS43HT4-177		SPACER OUTBD	1	
-13	AN24-34A		BOLT INBD	1	
-14	NAS43HT4-112		SPACER INBD	1	
-15	AN960-416		WASHER	1	
-16	MS21044N4		NUT	1	

-17	NAS428-4-6		BOLT-SEAT STOP	2	
-18	AN315-4R		NUT-SEAT STOP	2	
-19	0710312-3		HANDLE-RECLINING SEAT	1	
			ATTACHING PARTS		
-20	NAS561C3-12		ROLL PIN	1	

-21	0411267-1		CAM-RECLINING SEAT	2	
			ATTACHING PARTS		
-22	NAS561C3-16		ROLL PIN	1	

-23	AN960-516		WASHER	4	
-24	0414054-24		SHAFT-RECLINING SEAT LH	1	
	0414054-35		SHAFT-RECLINING SEAT RH	1	
-25	0411266-1		SPRING-RECLINING SEAT	1	
-26	AN24-44A		BOLT OUTBD	1	
-27	NAS43HT4-157		SPACER OUTBD	1	
-28	AN24-29A		BOLT INBD	1	
-29	NAS43HT4-96		SPACER INBD	1	
-30	AN960-416		WASHER	2	
-31	MS21044N4		NUT	2	
-32	0414078-1		PEDESTAL ASSY-WELDED	1	
-33	0414054-41		HANDLE ASSY-LH	1	
	0414054-40		HANDLE ASSY-RH	1	
			ATTACHING PARTS		
-34	MS20392-1C47		PIN	1	
-35	AN960-4L		WASHER	1	
-36	MS24665-172		COTTER PIN	1	

-37	MS20392-1C11		PIN	1	
-38	0411265-2		SPRING	1	
-39	0414082-1		PIN ASSY-LOCKING LH SEAT	1	
	0414082-4		PIN ASSY-LOCKING RH SEAT	1	
			ATTACHING PARTS		
-40	NAS43HT1-27		SPACER	1	
-41	AN960-4L		WASHER	1	
-42	MS24665-172		COTTER PIN	1	

-43	0514121-1		HANDLE ASSY-SEAT ADJUST	1	
			ATTACHING PARTS		
-44	NAS561P4-12		PIN	2	

-45	1200138-2		COLLAR	2	
			ATTACHING PARTS		
-46	NAS561P4-14		PIN	2	

-47	0414083-1		BEARING BLOCK	1	
			ATTACHING PARTS		
-48	AN520-10R8		SCREW	1	
-49	AN960-10L		WASHER	1	

CONTINUED ON NEXT PAGE

152 & A152 Parts Catalog


FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
48A-50	S2013-2	BEARING -----	1	
	S2014-2	RACE-BEARING -----	2	
-51	0514027-32	SCREW ASSY -----	1	
-52	1514119-5	NUT-VERTICAL ADJUST -----	1	
		ATTACHING PARTS		
-53	MS20392-2C39	PIN -----	1	
-54	AN960-10	WASHER -----	1	
-55	MS24665-132	COTTER PIN -----	1	
-56	NAS561P4-10	PIN -----	1	
		---*---		
-57	0414074-5	BELLCRANK ASSY -----	2	
-58	0414074-9	BELLCRANK ASSY LH SEAT -----	1	
	0414074-6	BELLCRANK ASSY RH SEAT -----	1	
		ATTACHING PARTS		
-59	NAS561P6-14	PIN -----	2	
		---*---		
-60	0414079-1	LINK -----	1	
		ATTACHING PARTS		
-61	MS20392-2C17	PIN -----	2	
-62	AN960-10L	WASHER -----	2	
-63	MS24665-132	COTTER PIN -----	2	
		---*---		
-64	0414074-4	BELLCRANK ASSY -----	4	
		ATTACHING PARTS		
-65	NAS561P4-14	PIN -----	2	
		---*---		
-66	0414080-1	TORQUE TUBE-FWD -----	1	
-67	0414080-2	TORQUE TUBE-REAR -----	1	
-68	0311310	ROLLER -----	4	
		ATTACHING PARTS		
-69	AN3-12A	BOLT -----	1	
-70	0311586	BUSHING -----	1	
-71	MS21044N3	NUT -----	1	
		---*---		
-72	0410235-6	SEAT RAIL-INBD -----	2	
-73	0410235-1	SEAT RAIL-LH OUTBD -----	1	
	0410235-2	SEAT RAIL-RH OUTBD -----	1	
		ATTACHING PARTS		
-74	NAS221-8	SCREW -----	10	
-74A	NAS221-9	SCREW OUTBD RAILS ONLY -----	1	C
-75	MS21044N3	NUT -----	10	
		---*---		
-76	0410236-2	STIFFENER RH INBD ONLY -----	1	
-77	0410236-1	STIFFENER OUTBD -----	2	
-78	DEV041878-1	SEAT STOP OUTBD RAILS ONLY -----	2	B
-79	0410232-1	SEAT STOP INBD RAILS ONLY -----	2	C
		ATTACHING PARTS		
-80	NAS221-17	SCREW -----	1	
		---*---		
NOTE. #THIS PART NUMBER MUST HAVE A SECOND DASH NUMBER ADDED TO DENOTE COLOR. REFER TO HOW TO ORDER UPHOLSTERED PARTS-PAGE VIII A---152 SERIAL 15282032 & ON F152 SERIAL F15201529 & ON B---152 SERIAL 15282032 THRU 15282229 C---152 SERIAL 15282230 & ON F152 SERIAL F15201529 & ON D---152 SERIAL 15282032 THRU 15285161 F152 SERIAL F15201529 THRU F15201893 E---152 SERIAL 15285162 & ON F152 SERIAL F15201894 & ON				

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
49 -		RECLINING SEAT INSTALLATION-AEROBAT -----	NP	A
	0414049-2 #	SEAT ASSY-RECLINING RH -----	1	B
	0414086-2 #	SEAT ASSY-RECLINING RH -----	1	C
	0414049-1 #	SEAT ASSY-RECLINING LH -----	1	B
	0414086-1 #	SEAT ASSY-RECLINING LH -----	1	C
	- 1 0414049-4 #	UPHOLSTERED CUSHION ASSY-SEAT BACK -----	1	B
	0414086-6 #	UPHOLSTERED CUSHION ASSY-SEAT BACK -----	1	C
	- 2 0414049-9 #	SEAT BACK ASSY -----	1	B
	0414086-7 #	SEAT BACK ASSY -----	1	C
		ATTACHING PARTS		
	- 3 AN4-14A	BOLT -----	2	
	AN960-416	WASHER UNDER BOLT HEAD -----	2	
	MS21042L4	NUT -----	2	
		---*---		
	- 4 0415008-23 #	COVER ASSY-SEAT BACK FRAME -----	1	
	- 5 0414033-8 #	DIAPHRAGM-SEAT BACK -----	1	
		ATTACHING PARTS		
	S1021A4-6	SCREW -----	4	
	AN960-4L	WASHER -----	4	
		---*---		
	- 6 0414049-3 #	UPHOLSTERED CUSHION ASSY-SEAT BOTTOM -----	1	B
	0414086-5 #	UPHOLSTERED CUSHION ASSY-SEAT BOTTOM -----	1	C
	0414049-6 #	SEAT BOTTOM ASSY-RH -----	1	B
	0414086-4 #	SEAT BOTTOM ASSY-RH -----	1	C
	0414049-5 #	SEAT BOTTOM ASSY-LH -----	1	B
	0414086-3 #	SEAT BOTTOM ASSY-LH -----	1	C
	- 7 0415008-24 #	COVER ASSY-SEAT BOTTOM FRAME -----	1	
	- 8 0414041-4 #	DIAPHRAGM-SEAT BOTTOM -----	1	
CONTINUED ON NEXT PAGE				

152 & A152 Parts Catalog

Seat (Cont)

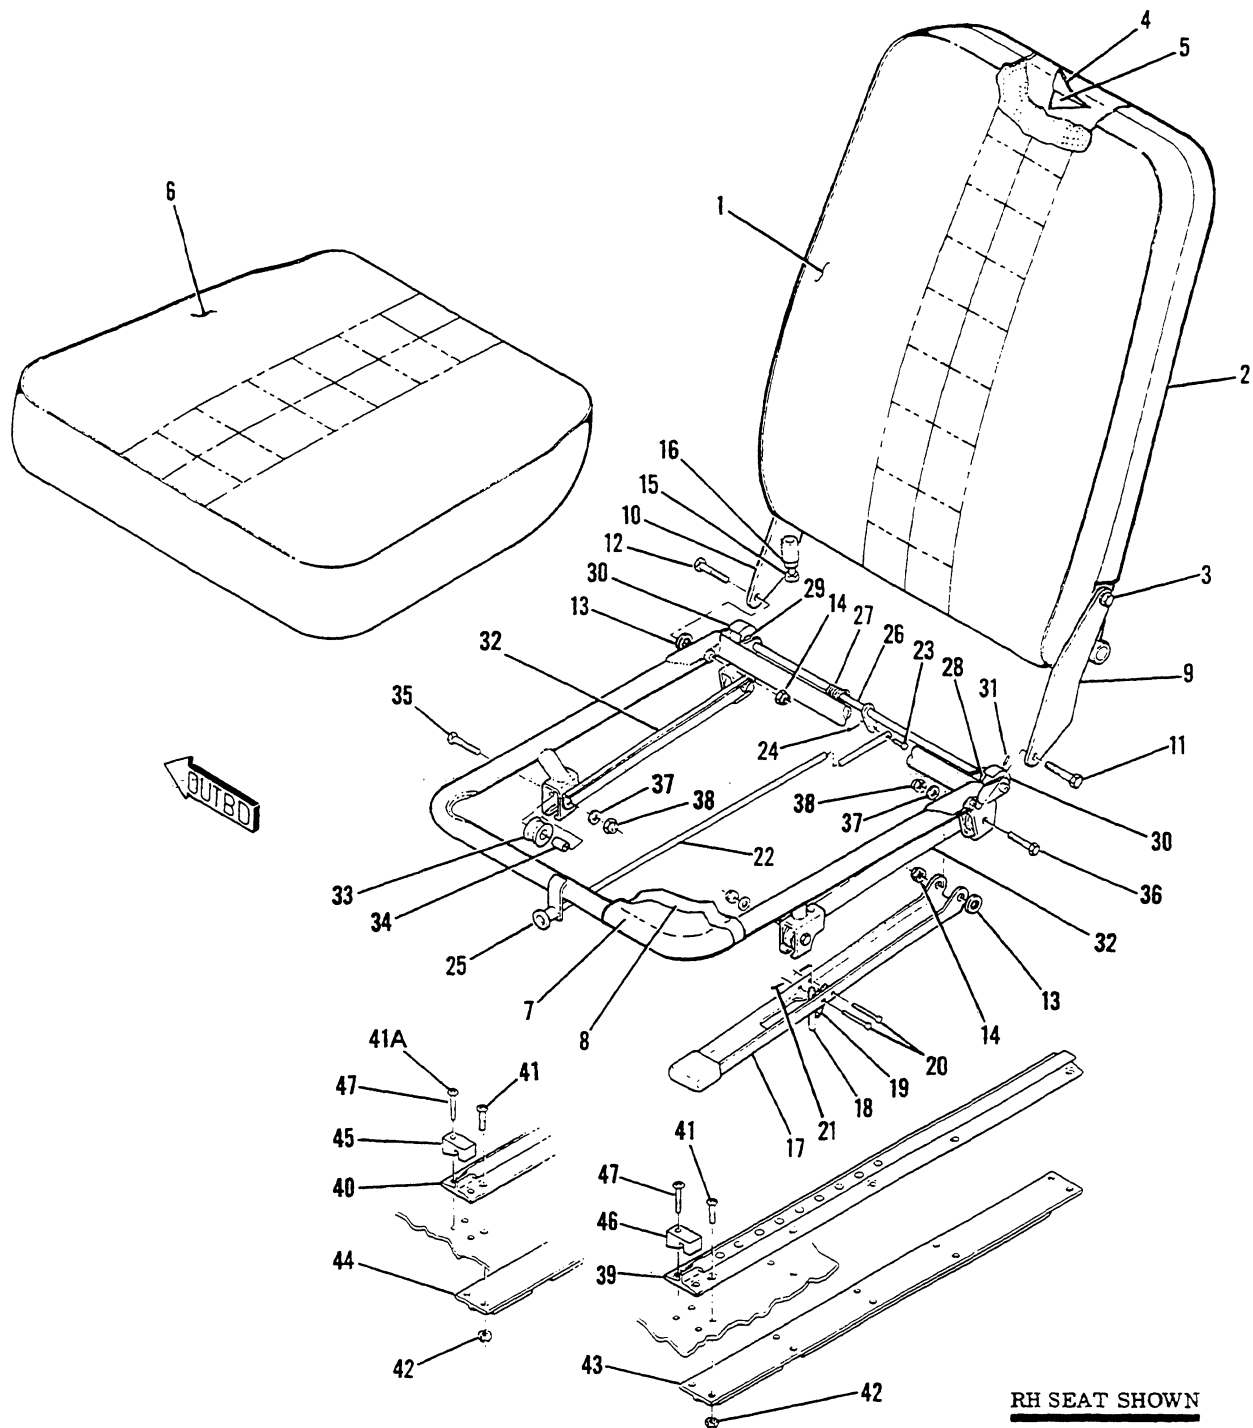

A152 SERIAL A1520735 & ON
FA152 SERIAL FA1520337 & ON


Figure 49. Reclining Seat Installation - Aerobat

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
49 - 9	0414039-1	HINGE ASSY-LH -----	1	
-10	0414039-2	HINGE ASSY-RH -----	1	
		ATTACHING PARTS		
-11	AN4-15A	BOLT INBD -----	1	
-12	AN4-14A	BOLT OUTBD -----	1	
-13	AN960-416L	WASHER -----	1	
-14	MS21042L4	NUT -----	1	
		---*---		
-15	NAS428-4-6	BOLT-SEAT STOP -----	2	
-16	AN315-4R	NUT-SEAT STOP -----	2	
-17	0414040-11	LEVER ASSY-SEAT LATCH -----	1	
-18	0414035-6	PIN-SEAT LATCH -----	1	
-19	0411265-2	SPRING-SEAT LATCH -----	1	
-20	MS20392-1C35	PIN -----	2	
-21	MS24665-132	COTTER PIN -----	2	
-22	0411268-3	HANDLE ASSY-RECLINING SEAT -----	1	
		ATTACHING PARTS		
-23	MS20392-1C11	PIN -----	1	
-24	MS24665-132	COTTER PIN -----	1	
		---*---		
-25	0713303-19	KNOB-RECLINING SEAT -----	1	
		ATTACHING PARTS		
	NAS561CF2-6	ROLL PIN -----	1	
		---*---		
-26	0414040-15	SHAFT ASSY-RECLINING SEAT -----	1	
-27	0411266-1	SPRING -----	1	
-28	NAS43HT5-14	SPACER INBD -----	1	
-29	NAS43HT5-24	SPACER OUTBD -----	1	
-30	0411267-1	CAM-RECLINING SEAT -----	2	
		ATTACHING PARTS		
-31	NAS561C3-14	ROLL PIN -----	1	
		---*---		
-32	0414066-1	BRACE -----	2	
-33	0311310	ROLLER -----	4	
		ATTACHING PARTS		
-34	0311586	BUSHING -----	1	
-35	AN3-12A	BOLT FWD ROLLERS -----	1	
-36	AN3-13A	BOLT AFT ROLLERS -----	1	
-37	AN960-10	WASHER USED WITH 0414066-1 BRACE -----	1	
-38	MS21044N3	NUT -----	1	
		---*---		
-39	0410235-6	SEAT RAIL-INBD -----	2	
-40	0410235-1	SEAT RAIL-LH OUTBD -----	1	
	0410235-2	SEAT RAIL-RH OUTBD -----	1	
		ATTACHING PARTS		
-41	NAS221-8	SCREW -----	10	
-41A	NAS221-9	SCREW OUTBD RAILS ONLY -----	1	
-42	MS21044N3	NUT -----	10	
		---*---		
-43	0410236-2	STIFFENER RH INBD ONLY -----	1	
-44	0410236-1	STIFFENER OUTBD -----	2	
-45	0410232-1	SEAT STOP OUTBD RAIL ONLY -----	2	
	DEV041878-1	SEAT STOP OUTBD RAILS ONLY -----	2	
-46	0410232-1	SEAT STOP INBD RAILS ONLY -----	2	
		ATTACHING PARTS		
-47	NAS221-17	SCREW -----	1	
		---*---		
NOTE. #THIS PART NUMBER MUST HAVE A SECOND DASH NUMBER ADDED TO DENOTE COLOR. REFER TO HOW TO ORDER UPHOLSTERED PARTS-PAGE VIII. A---A152 SERIAL A1520735 & ON FA152 SERIAL FA1520337 & ON B---A152 SERIAL A1520735 THRU A1520878 F152 SERIAL FA1520337 THRU FA1520357 C---A152 SERIAL A1520879 & ON FA152 SERIAL FA1520358 & ON D---A152 SERIAL A1520735 THRU A1520808 FA152 SERIAL FA1520337 THRU FA1520347 E---A152 SERIAL A1520809 THRU A1520815 F---A152 SERIAL A1520816 & ON FA152 SERIAL FA1520348 & ON				

152 & A152 Parts Catalog

Seat (Cont)

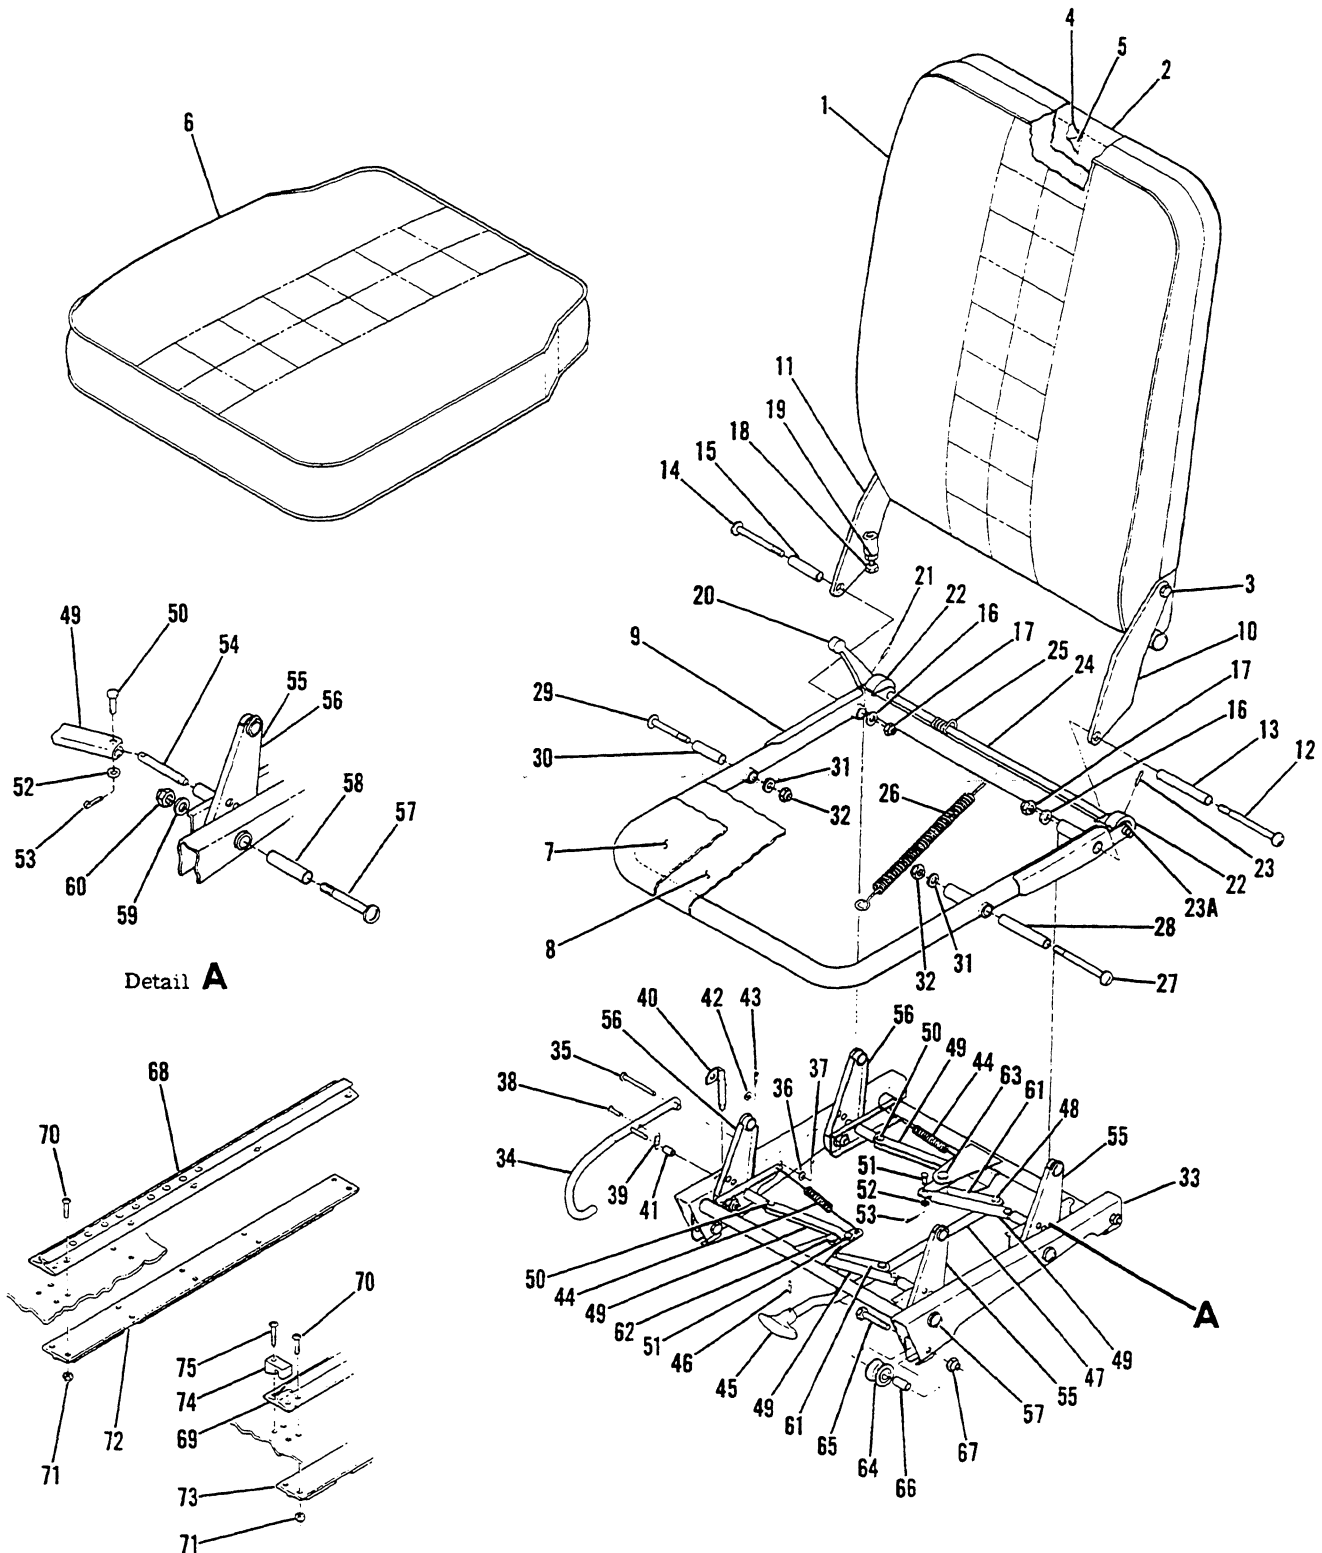

A152 SERIAL A1520735 THRU A1520808
FA152 SERIAL FA1520337 THRU FA1520347

Figure 50. Vertical Adjustable Seat Installation - Aerobat

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER		DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
			1 2 3 4 5 6 7		
50 -			VERTICAL ADJUSTABLE SEAT INSTALLATION-AEROBAT -----	N	A
	0414058-1	#	SEAT ASSY-VERTICAL ADJUSTABLE LH -----	1	
	0414058-2	#	SEAT ASSY-VERTICAL ADJUSTABLE RH -----	1	
- 1	0414049-4	#	UPHOLSTERED CUSHION ASSY-SEAT BACK -----	1	
- 2	0414049-9	#	SEAT BACK ASSY -----	1	
			ATTACHING PARTS -----		
- 3	AN4-14A		BOLT -----	2	
	AN960-416		WASHER UNDER BOLT HEAD -----	2	
	MS21042L4		NUT -----	2	
			-----*		
- 4	0415008-23	#	COVER ASSY-SEAT BACK FRAME -----	1	
- 5	0414033-8		DIAPHRAGM-SEAT BACK -----	1	
			ATTACHING PARTS -----		
	S1021A4-6		SCREW -----	4	
	AN960-41L		WASHER -----	4	
			-----*		
- 6	0414049-3	#	UPHOLSTERED CUSHION ASSY-SEAT BOTTOM -----	1	
	0414058-3	#	SEAT BOTTOM ASSY-LH -----	1	
	0414058-4	#	SEAT BOTTOM ASSY-RH -----	1	
- 7	0415008-24	#	COVER ASSY-SEAT BOTTOM FRAME -----	1	
- 8	0414041-4		DIAPHRAGM-SEAT BOTTOM -----	1	
	0414065-1		SCUFF PLATE-DIAPHRAGM -----	2	
- 9	0414053-1		FRAME ASSY-LH -----	1	
	0414053-2		FRAME ASSY-RH -----	1	
-10	0414039-5		HINGE ASSY-LH -----	1	
-11	0414039-6		HINGE ASSY-RH -----	1	
			ATTACHING PARTS -----		
-12	AN24-48A		BOLT OUTBD -----	1	
-13	0414054-22		SPACER OUTBD -----	1	
-14	AN24-32A		BOLT INBD -----	1	
-15	0414054-20		SPACER INBD -----	1	
-16	AN960-416		WASHER -----	1	
-17	MS21044N4		NUT -----	1	
			-----*		
-18	NAS428-4-6		BOLT-SEAT STOP -----	2	
-19	AN315-4R		NUT-SEAT STOP -----	2	
-20	0710312-3		HANDLE-RECLINING SEAT -----	1	
			ATTACHING PARTS -----		
-21	NAS561C3-10		ROLL PIN -----	1	
			-----*		
-22	0411267-1		CAM-RECLINING SEAT -----	2	
			ATTACHING PARTS -----		
-23	NAS561C3-14		ROLL PIN -----	1	
			-----*		
-23A	AN960-516		WASHER -----	4	
-24	0414054-24		SHAFT-RECLINING SEAT-LH -----	1	
	0414054-35		SHAFT-RECLINING SEAT RH -----	1	
-25	0411266-1		SPRING-RECLINING SEAT -----	1	
-26	0414061-1		SPRING-VERTICAL SEAT ADJUST -----	1	
-27	AN24-44A		BOLT OUTBD -----	1	
-28	0414054-21		SPACER OUTBD -----	1	
-29	AN24-27A		BOLT INBD -----	1	
-30	0414054-18		SPACER INBD -----	1	
-31	AN960-416		WASHER -----	2	
-32	MS21044N3		NUT -----	2	
-33	0414053-3		PEDESTAL ASSY-WELDED LH -----	1	
	0414053-4		PEDESTAL ASSY-WELDED RH -----	1	
-34	0414054-41		HANDLE ASSY-LH -----	1	
	0414054-40		HANDLE ASSY-RH -----	1	
			ATTACHING PARTS -----		
-35	MS20392-1C47		PIN -----	1	
-36	AN960-41L		WASHER -----	1	
-37	MS24665-172		COTTER PIN -----	1	
			-----*		
-38	MS20392-1C11		PIN -----	1	
-39	0411265-2		SPRING -----	1	
-40	0414054-37		PIN ASSY-LOCKING LH -----	1	
	0414054-38		PIN ASSY-LOCKING RH -----	1	
			ATTACHING PARTS -----		
-41	NAS43HT1-27		SPACER -----	1	
-42	AN960-41L		WASHER -----	1	
-43	MS24665-172		COTTER PIN -----	1	
			-----*		
-44	1414116-3		SPRING -----	2	

CONTINUED ON NEXT PAGE

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
50 -45	0414057-1	HANDLE-SEAT RELEASE ----- ATTACHING PARTS -----	1	
-46	NAS561-3-8	ROLL PIN ----- -----*	1	
-47	0414054-11	SHAFT-SEAT RELEASE ----- ATTACHING PARTS -----	1	
-48	MS20392-1C15	PIN -----	2	
	AN960-10L	WASHER -----	2	
	MS24665-132	COTTER PIN ----- -----*	2	
-49	0414054-5	LINKAGE ----- ATTACHING PARTS -----	4	
-50	MS20392-1C11	PIN -----	1	
-51	MS20392-1C7	PIN -----	1	
-52	AN960-4L	WASHER -----	2	
-53	MS24665-170	COTTER PIN ----- -----*	2	
-54	0414054-10	PIN-SEAT RELEASE -----	4	
-55	0414054-8	BELLCRANK ASSY-LH -----	2	
-56	0414054-7	BELLCRANK ASSY-RH ----- ATTACHING PARTS -----	2	
-57	AN24-30A	BOLT -----	1	
-58	0414054-19	SPACER -----	1	
-59	AN960-416	WASHER -----	1	
-60	MS21044N4	NUT ----- -----*	1	
-61	0414054-31	BELLCRANK ASSY ----- ATTACHING PARTS -----	2	
-62	MS20392-3C39	PIN FWD -----	1	
-63	MS20392-3C33	PIN AFT -----	1	
	AN960-416L	WASHER -----	1	
	MS24665-134	COTTER PIN ----- -----*	1	
-64	0311310	ROLLER ----- ATTACHING PARTS -----	4	
-65	AN3-12A	BOLT -----	1	
-66	0311586	BUSHING -----	1	
-67	MS21044N3	NUT ----- -----*	1	
-68	0410235-6	SEAT RAIL-INBD -----	2	
-69	0410235-1	SEAT RAIL-LH OUTBD -----	1	
	0410235-2	SEAT RAIL-RH OUTBD ----- ATTACHING PARTS -----	1	
-70	NAS221-8	SCREW -----	10	
-71	MS21044N3	NUT ----- -----*	10	
-72	0410236-2	STIFFENER RH INBD ONLY -----	1	
-73	0410236-1	STIFFENER OUTBD -----	2	
-74	0410232-1	SEAT STOP OUTBD RAILS ONLY ----- ATTACHING PARTS -----	2	
-75	NAS221-17	SCREW ----- -----*	1	
NOTE. #THIS PART NUMBER MUST HAVE A SECOND DASH NUMBER ADDED TO DENOTE COLOR. REFER TO HOW TO ORDER UPHOLSTERED PARTS-PAGE VIII. A---A152 SERIAL A1520735 THRU A1520808 FA152 SERIAL FA1520337 THRU FA1520347				


152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
50A-		VERTICAL ADJUSTABLE SEAT INSTALLATION-AEROBAT -----	NP	A
	0414058-5 #	SEAT ASSY-VERTICAL ADJUSTABLE LH -----	1	D
	0414087-1 #	SEAT ASSY-VERTICAL ADJUSTABLE LH -----	1	E
	0414058-6 #	SEAT ASSY-VERTICAL ADJUSTABLE RH -----	1	D
	0414087-2 #	SEAT ASSY-VERTICAL ADJUSTABLE RH -----	1	E
- 1	0414049-4 #	UPHOLSTERED CUSHION ASSY-SEAT BACK -----	1	D
	0414086-6 #	UPHOLSTERED CUSHION ASSY-SEAT BACK -----	1	E
- 2	0414049-9 #	SEAT BACK ASSY -----	1	D
	0414086-7 #	SEAT BACK ASSY -----	1	E
		ATTACHING PARTS		
- 3	AN4-14A	BOLT -----	2	
	AN960-416	WASHER UNDER BOLT HEAD -----	2	
	MS21042L4	NUT -----	2	
		-----*		
- 4	0415008-23 #	COVER ASSY-SEAT BACK FRAME -----	1	
- 5	0414033-8 #	DIAPHRAGM-SEAT BACK -----	1	
		ATTACHING PARTS		
	S1021A4-6	SCREW -----	4	
	AN960-4L	WASHER -----	4	
		-----*		
- 6	0414049-3 #	UPHOLSTERED CUSHION ASSY-SEAT BOTTOM -----	1	D
	0414086-5 #	UPHOLSTERED CUSHION ASSY-SEAT BOTTOM -----	1	E
	0414058-7 #	SEAT BOTTOM ASSY-LH -----	1	D
	0414087-3 #	SEAT BOTTOM ASSY-LH -----	1	E
	0414058-8 #	SEAT BOTTOM ASSY-RH -----	1	D
	0414087-4 #	SEAT BOTTOM ASSY-RH -----	1	E
- 7	0415008-24 #	COVER ASSY-SEAT BOTTOM FRAME -----	1	
- 8	0414041-4	DIAPHRAGM-SEAT BOTTOM -----	1	
	0414088-1	SCUFF PLATE-DIAPHRAGM -----	1	
- 9	0414053-1	FRAME ASSY-LH -----	1	
	0414053-2	FRAME ASSY-RH -----	1	
-10	0414039-5	HINGE ASSY-LH -----	1	
-11	0414039-6	HINGE ASSY-RH -----	1	
		ATTACHING PARTS		
-12	AN24-50A	BOLT OUTBD -----	1	
-13	NAS43HT4-177	SPACER OUTBD -----	1	
-14	AN24-34A	BOLT INBD -----	1	
-15	NAS43HT4-112	SPACER INBD -----	1	
-16	AN960-416	WASHER -----	1	
-17	MS21044N4	NUT -----	1	
		-----*		
-18	NAS428-4-6	BOLT-SEAT STOP -----	2	
-19	AN315-4R	NUT-SEAT STOP -----	2	
-20	0710312-3	HANDLE-RECLINING SEAT -----	1	
		ATTACHING PARTS		
-21	NAS561C3-12	ROLL PIN -----	1	
		-----*		
-22	0411267-1	CAM-RECLINING SEAT -----	2	
		ATTACHING PARTS		
-23	NAS561C3-16	ROLL PIN -----	1	
		-----*		

CONTINUED ON NEXT PAGE

152 & A152 Parts Catalog

Seat (Cont)

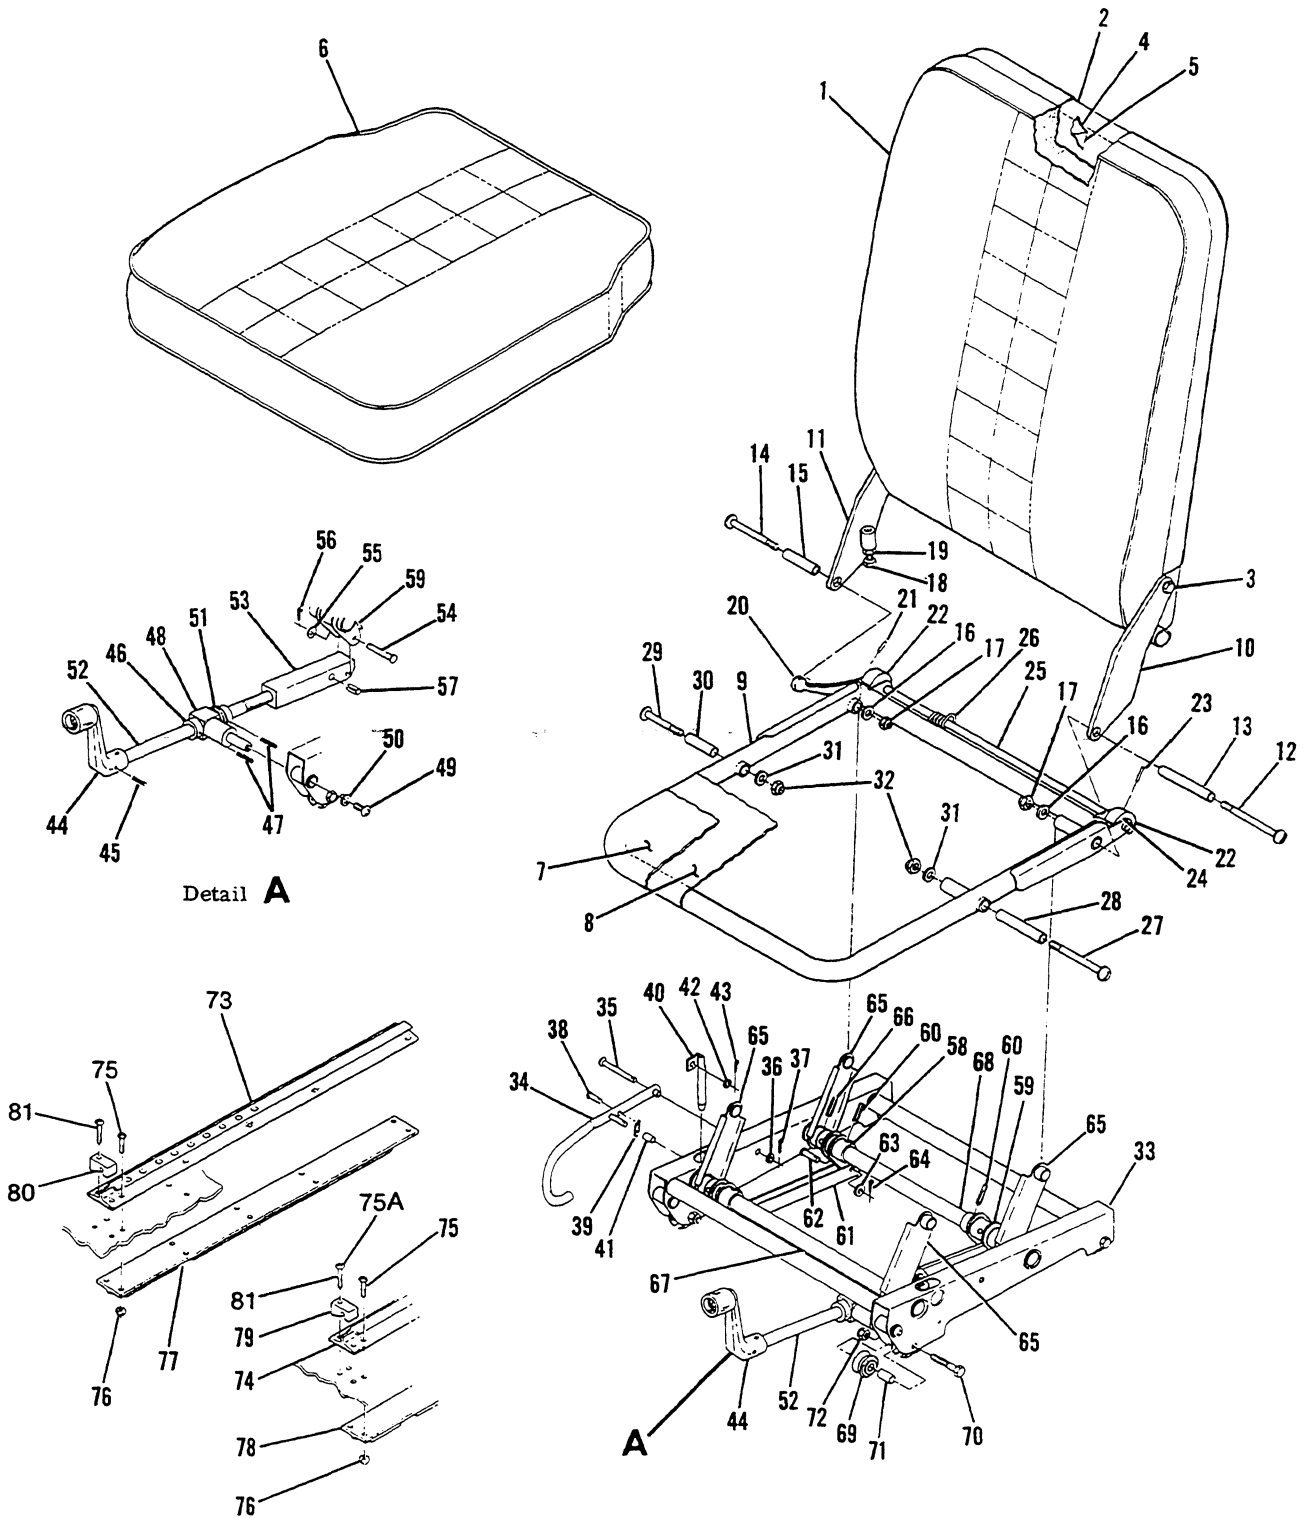

A152 SERIAL A1520809 & ON
FA152 SERIAL FA1520348 & ON

Figure 50A. Vertical Adjustable Seat Installation - Aerobat

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION							UNITS PER ASSY	USABLE ON CODE
		1	2	3	4	5	6	7		
50A-24	AN960-516	WASHER	-----	-----	-----	-----	-----	-----	4	
-25	0414054-24	SHAFT-RECLINING SEAT LH	-----	-----	-----	-----	-----	-----	1	
	0414054-35	SHAFT-RECLINING SEAT RH	-----	-----	-----	-----	-----	-----	1	
-26	0411266-1	SPRING-RECLINING SEAT	-----	-----	-----	-----	-----	-----	1	
-27	AN24-44A	BOLT	OUTBD	-----	-----	-----	-----	-----	1	
-28	NAS43HT4-157	SPACER	OUTBD	-----	-----	-----	-----	-----	1	
-29	AN24-29A	BOLT	INBD	-----	-----	-----	-----	-----	1	
-30	NAS43HT4-96	SPACER	INBD	-----	-----	-----	-----	-----	1	
-31	AN960-416	WASHER	-----	-----	-----	-----	-----	-----	2	
-32	MS21044N3	NUT	-----	-----	-----	-----	-----	-----	2	
-33	0414078-1	PEDESTAL ASSY-WELDED	-----	-----	-----	-----	-----	-----	1	
-34	0414054-41	HANDLE ASSY-LH	-----	-----	-----	-----	-----	-----	1	
	0414054-40	HANDLE ASSY-RH	-----	-----	-----	-----	-----	-----	1	
		ATTACHING PARTS	-----	-----	-----	-----	-----	-----		
-35	MS20392-1C47	PIN	-----	-----	-----	-----	-----	-----	1	
-36	AN960-4L	WASHER	-----	-----	-----	-----	-----	-----	1	
-37	MS24665-172	COTTER PIN	-----	-----	-----	-----	-----	-----	1	
		-----*	-----	-----	-----	-----	-----	-----		
-38	MS20392-1C11	PIN	-----	-----	-----	-----	-----	-----	1	
-39	0411265-2	SPRING	-----	-----	-----	-----	-----	-----	1	
-40	0414082-1	PIN ASSY-LOCKING	LH SEAT	-----	-----	-----	-----	-----	1	
	0414082-4	PIN ASSY-LOCKING	RH SEAT	-----	-----	-----	-----	-----	1	
		ATTACHING PARTS	-----	-----	-----	-----	-----	-----		
-41	NAS43HT1-27	SPACER	-----	-----	-----	-----	-----	-----	1	
-42	AN960-4L	WASHER	-----	-----	-----	-----	-----	-----	1	
-43	MS24665-172	COTTER PIN	-----	-----	-----	-----	-----	-----	1	
		-----*	-----	-----	-----	-----	-----	-----		
-44	0514121-1	HANDLE ASSY-SEAT ADJUST	-----	-----	-----	-----	-----	-----	1	
		ATTACHING PARTS	-----	-----	-----	-----	-----	-----		
-45	NAS561P4-12	PIN	-----	-----	-----	-----	-----	-----	2	
		-----*	-----	-----	-----	-----	-----	-----		
-46	1200138-2	COLLAR	-----	-----	-----	-----	-----	-----	2	
		ATTACHING PARTS	-----	-----	-----	-----	-----	-----		
-47	NAS561P4-14	PIN	-----	-----	-----	-----	-----	-----	2	
		-----*	-----	-----	-----	-----	-----	-----		
-48	0414083-1	BEARING BLOCK	-----	-----	-----	-----	-----	-----	1	
		ATTACHING PARTS	-----	-----	-----	-----	-----	-----		
-49	AN520-10R8	SCREW	-----	-----	-----	-----	-----	-----	1	
-50	AN960-10L	WASHER	-----	-----	-----	-----	-----	-----	1	
		-----*	-----	-----	-----	-----	-----	-----		
-51	S2013-2	BEARING	-----	-----	-----	-----	-----	-----	1	
	S2014-2	RACE-BEARING	-----	-----	-----	-----	-----	-----	2	
-52	0514027-32	SCREW-ASSY	-----	-----	-----	-----	-----	-----	1	
-53	1514119-5	NUT-VERTICAL ADJUST	-----	-----	-----	-----	-----	-----	1	
		ATTACHING PARTS	-----	-----	-----	-----	-----	-----		
-54	MS20392-2C29	PIN	-----	-----	-----	-----	-----	-----	1	
-55	AN960-10	WASHER	-----	-----	-----	-----	-----	-----	1	
-56	MS24665-132	COTTER PIN	-----	-----	-----	-----	-----	-----	1	
-57	NAS561P4-10	PIN	-----	-----	-----	-----	-----	-----	1	
		-----*	-----	-----	-----	-----	-----	-----		
-58	0414074-5	BELLCRANK ASSY	-----	-----	-----	-----	-----	-----	2	
-59	0414074-9	BELLCRANK ASSY	LH SEAT	-----	-----	-----	-----	-----	1	
	0414074-6	BELLCRANK ASSY	RH SEAT	-----	-----	-----	-----	-----	1	
		ATTACHING PARTS	-----	-----	-----	-----	-----	-----		
-60	NAS561P6-14	PIN	-----	-----	-----	-----	-----	-----	2	
		-----*	-----	-----	-----	-----	-----	-----		
-61	0414079-1	LINK	-----	-----	-----	-----	-----	-----	1	
		ATTACHING PARTS	-----	-----	-----	-----	-----	-----		
-62	MS20392-2C17	PIN	-----	-----	-----	-----	-----	-----	2	
-63	AN960-10L	WASHER	-----	-----	-----	-----	-----	-----	2	
-64	MS24665-132	COTTER PIN	-----	-----	-----	-----	-----	-----	2	
		-----*	-----	-----	-----	-----	-----	-----		
-65	0414074-4	BELLCRANK ASSY	-----	-----	-----	-----	-----	-----	4	
		ATTACHING PARTS	-----	-----	-----	-----	-----	-----		
-66	NAS561P4-14	PIN	-----	-----	-----	-----	-----	-----	2	
		-----*	-----	-----	-----	-----	-----	-----		
-67	0414080-1	TORQUE TUBE-FWD	-----	-----	-----	-----	-----	-----	1	
-68	0414080-2	TORQUE TUBE-REAR	-----	-----	-----	-----	-----	-----	1	
-69	0311310	ROLLER	-----	-----	-----	-----	-----	-----	4	
		ATTACHING PARTS	-----	-----	-----	-----	-----	-----		
-70	AN312-A	BOLT	-----	-----	-----	-----	-----	-----	1	
-71	0311586	BUSHING	-----	-----	-----	-----	-----	-----	1	
-72	MS21044N3	NUT	-----	-----	-----	-----	-----	-----	1	
		-----*	-----	-----	-----	-----	-----	-----		


CONTINUED ON NEXT PAGE

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION							UNITS PER ASSY	USABLE ON CODE
		1	2	3	4	5	6	7		
50A-73	0410235-6	SEAT RAIL-INBD -----							2	C
-74	0410235-1	SEAT RAIL-LH OUTBD -----							1	
	0410235-2	SEAT RAIL-RH OUTBD -----							1	
		ATTACHING PARTS								
-75	NAS221-8	SCREW -----							10	
-75A	NAS221-9	SCREW OUTBD RAILS ONLY -----							1	
-76	MS21044N3	NUT -----							10	
		---*---								
-77	0410236-2	STIFFENER RH INBD ONLY -----							1	
-78	0410236-1	STIFFENER OUTBD -----							2	
-79	DEV041878-1	SEAT STOP OUTBD RAILS ONLY -----							2	B C
-80	0410232-1	SEAT STOP INBD RAILS ONLY -----							2	
		ATTACHING PARTS								
-81	NAS221-17	SCREW -----							1	
		---*---								
NOTE. #THIS PART NUMBER MUST HAVE A SECOND DASH NUMBER ADDED TO DENOTE COLOR. REFER TO HOW TO ORDER UPHOLSTERED PARTS-PAGE IX										
A---A152 SERIAL A1520809 & ON FA152 SERIAL FA1520348 & ON B---A152 SERIAL A1520809 THRU A1520815 C---A152 SERIAL A1520816 & ON FA152 SERIAL FA1520348 & ON D---A152 SERIAL A1520809 THRU A1520878 FA152 SERIAL FA1520348 THRU FA1520357 E---A152 SERIAL A1520879 & ON FA152 SERIAL FA1520358										

152 & A152 Parts Catalog

Seat (Cont)

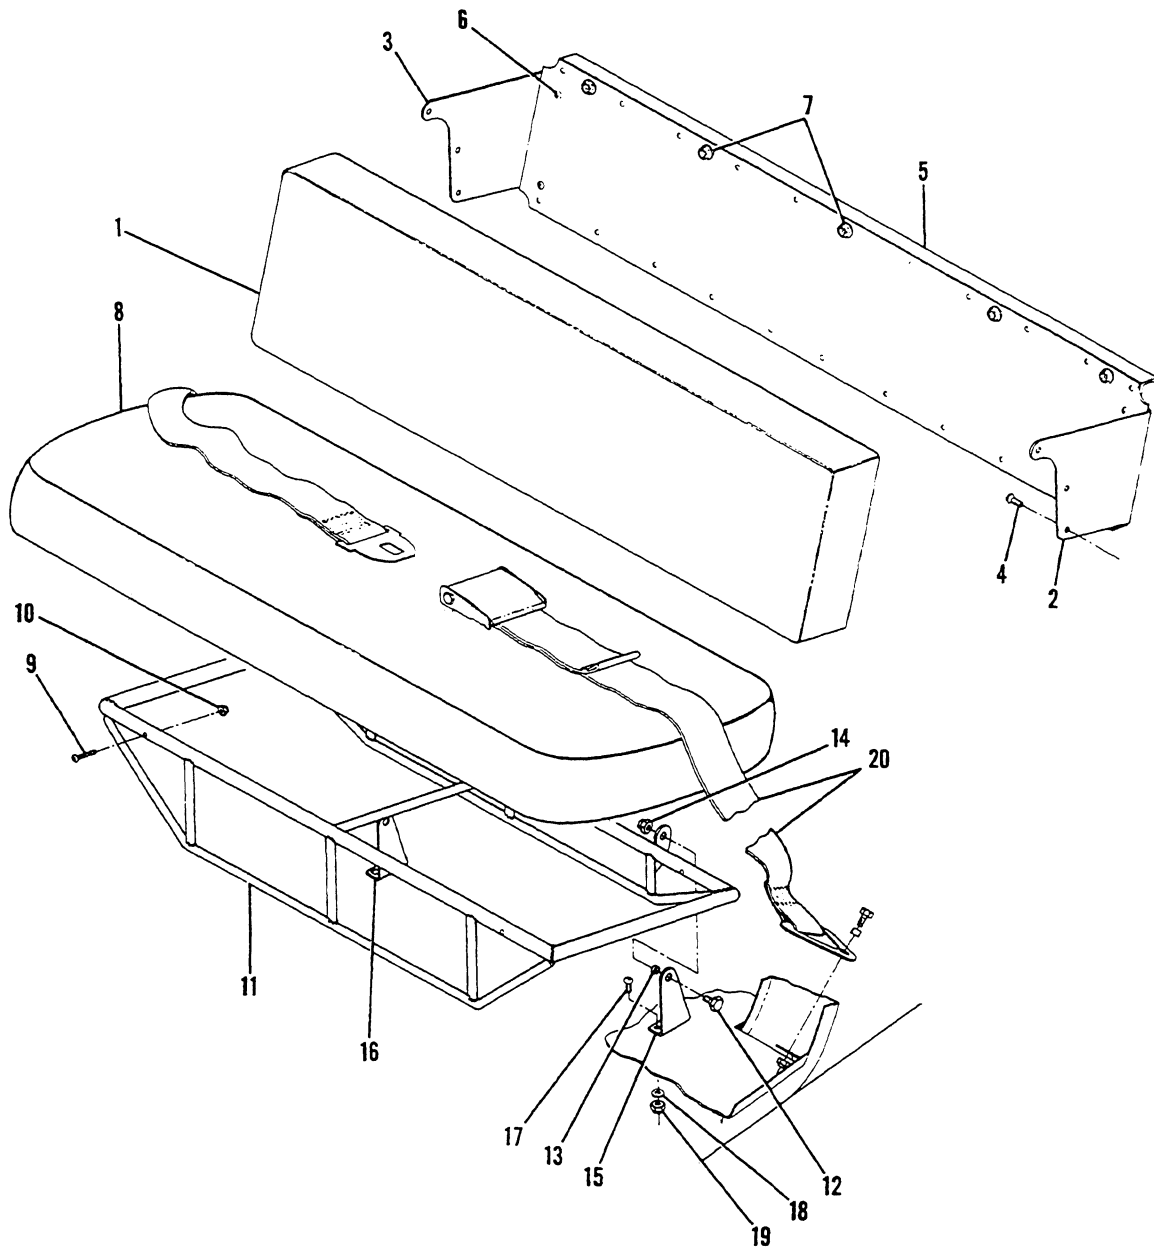

152 SERIAL 15279406 & ON
F152 SERIAL F15201429 & ON
A152 SERIAL A1520735 THRU A1520808
FA152 SERIAL FA1520337 THRU FA1520347


Figure 51. Auxiliary Seat Installation

152 & A152 Parts Catalog


FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
51 -		AUXILIARY SEAT INSTALLATION -----	NP	A
- 1	0711080-1 #	BACKREST ASSY -----	1	
	AN227-7	SOCKET -----	5	
	AN227-6	BUTTON -----	5	
- 2	0400138-1 <	SUPPORT ASSY-BACKREST LH -----	1	B
	0400138-1-533	SUPPORT ASSY-BACKREST LH -----	1	C
- 3	0400138-2 <	SUPPORT ASSY-BACKREST RH -----	1	B
	0400138-2-533	SUPPORT ASSY-BACKREST RH -----	1	C
- 4	NAS221-6	ATTACHING PARTS -----		
		SCREW -----	3	
		-----*		
	NAS682A3K	NUTPLATE -----	2	
- 5	0400131-1	SEAT BACK SUPPORT ASSY -----	1	
		ATTACHING PARTS -----		
- 6	AN520-10R5	SCREW -----	4	
		-----*		
- 7	AN227-8	STUD -----	5	
	AN227-9	STUD -----	5	
- 8	0400136-9 #	SEAT BOTTOM ASSY -----	1	
		ATTACHING PARTS -----		
- 9	AN315-8R14	SCREW -----	4	
-10	MS21044N08	NUT -----	4	
		-----*		
-11	0400134-5 <	FRAME ASSY -----	1	B
	0400134-5-533	FRAME ASSY -----	1	C
		ATTACHING PARTS -----		
-12	AN3-4A	BOLT -----	2	
-13	NAS43HT3-6	SPACER -----	2	
-14	MS21044N3	NUT -----	2	
		-----*		
-15	0711098-7	HINGE-FLOOR FITTING LH -----	1	
-16	0711098-8	HINGE-FLOOR FITTING RH -----	1	
		ATTACHING PARTS -----		
-17	AN515-8R8	SCREW -----	2	
-18	AN960-8	WASHER -----	2	
-19	MS21044N08	NUT -----	2	
		-----*		
-20	SEE FIG 56	SEAT BELT INSTL -----	1	
NOTE. #THIS PART NUMBER MUST HAVE A SECOND DASH NUMBER ADDED TO DENOTE COLOR. REFER TO HOW TO ORDER UPHOLSTERED PARTS-PAGE VIII. NOTE. <THIS PART NUMBER MUST HAVE A SECOND DASH NUMBER ADDED TO DENOTE COLOR. REFER TO HOW TO ORDER INTERIOR PARTS-PAGE IX. A---152 SERIAL 15279406 & ON F152 SERIAL F15201429 & ON A152 SERIAL A1520735 THRU A1520808 FA152 SERIAL FA1520337 THRU FA1520347 B---152 SERIAL 15279406 THRU 15284541 F152 SERIAL F15201429 THRU F15201808 A152 SERIAL A1520735 THRU A1520808 FA152 SERIAL FA1520337 THRU FA1520347 C---152 SERIAL 15284542 & ON F152 SERIAL F15201809 & ON				

152 & A152 Parts Catalog



Instruments

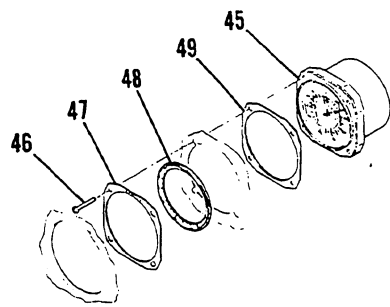


TRUE AIRSPEED INSTL

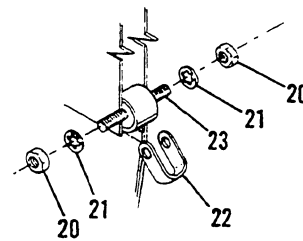

Detail A

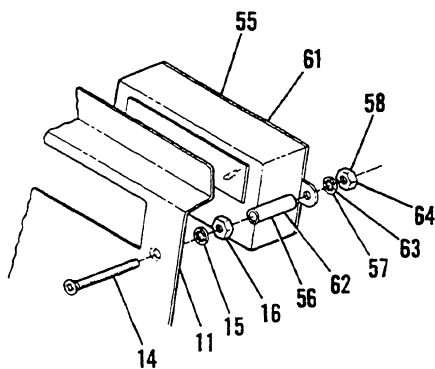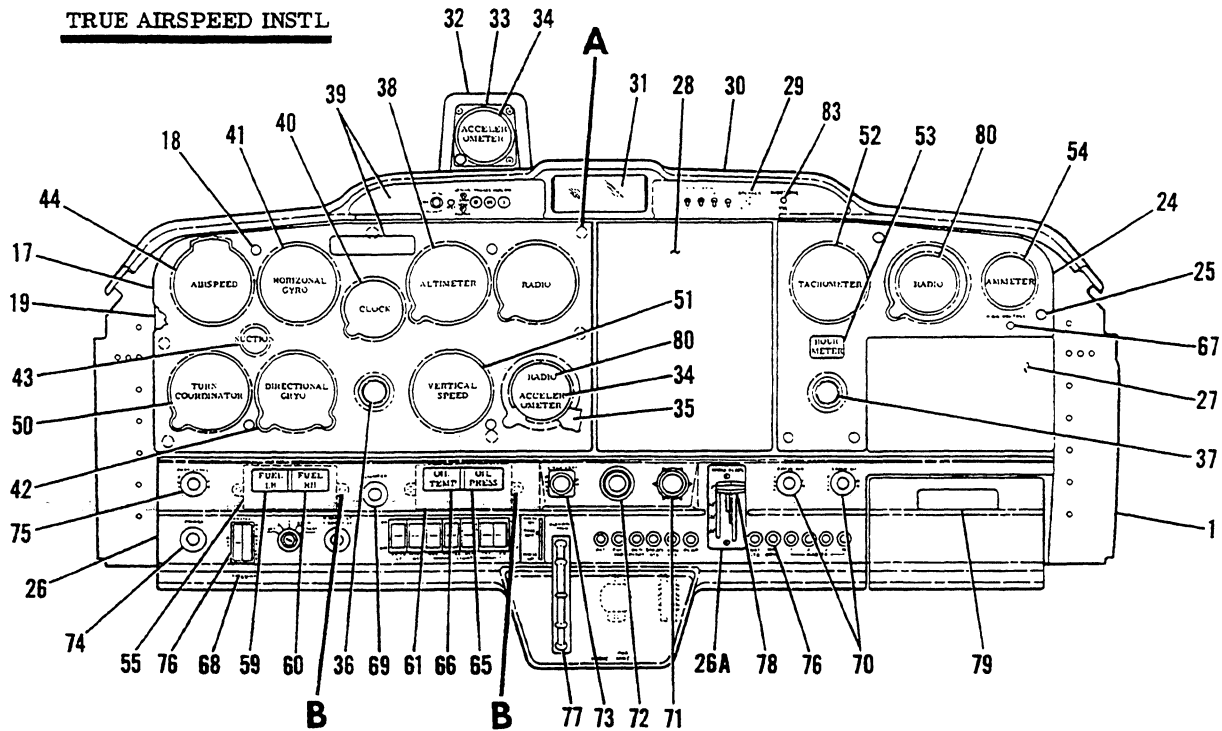

Detail B

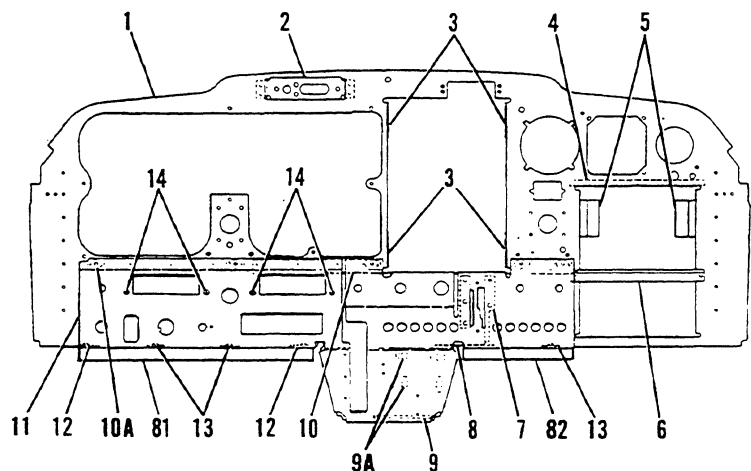

152 SERIAL 15279406 THRU 15282031
 F152 SERIAL F15201429 THRU F15201528
 A152 SERIAL A1520735 THRU A1520808
 FA152 SERIAL FA1520337 THRU FA1520347

Figure 52. Instrument Panel Equipment Installation

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
52 -		INSTRUMENT PANEL & EQUIPMENT INSTALLATION -----	NP	G E F
- 1	0413540-8	PANEL ASSY-STATIONARY INSTRUMENT -----	1	
	0413540-7	PANEL ASSY-STATIONARY INSTRUMENT -----	1	
- 2	0413534-1	BRACKET-MARKER BEACON -----	1	
- 3	S2092-3	FASTENER-HOOK BKI -----	AR	
- 4	0413542-1	STIFFENER -----	1	
- 5	0413557-1	BRACKET ASSY -----	2	
- 6	0413538-1	STIFFENER -----	1	
- 7	0460208-1	BRACKET-FLAP INDICATOR -----	1	
- 8	0413543-2	STRAP -----	1	
- 9	0413566-1	MOUNTING BRACKET-AUDIO JACKS -----	1	F F F F F F F F F F
- 9A	NAS680A06	NUTPLATE -----	4	
-10	0413550-1	STIFFENER -----	1	
-10A	S1863-2	NUTPLATE -----	5	
-11	0413558-3	PANEL ASSY-LOWER -----	1	
-12	S1862-1A	NUTPLATE -----	2	
-13	S1863-2A	NUTPLATE -----	3	
-14	AN507-632R24	SCREW -----	4	
-15	AN936A6	WASHER -----	4	
-16	AN340B6	NUT -----	4	
-17	0413544-9	< COVER ASSY-SHOCK PANEL -----	1	H
		ATTACHING PARTS -----		
-18	1513174-3	NUT -----	4	
		*-----		
-19	0413459-10	PANEL ASSY-SHOCK MOUNTED INSTRUMENT -----	1	
		ATTACHING PARTS -----		
-20	MS25082B2	NUT -----	14	
-21	AN936A8	WASHER -----	14	
-22	0413247	STRAP-GROUND -----	2	
-23	0413523-4	SHOCKMOUNT -----	7	
		*-----		F F F F F F F F F F
-24	0413544-11	< COVER-STATIONARY INSTRUMENT RH -----	1	
		ATTACHING PARTS -----		
-25	1513174-3	NUT -----	4	
		*-----		
-26	0413559-2	< COVER-LOWER INSTRUMENT PANEL -----	1	
		ATTACHING PARTS -----		
	S102176-8	SCREW -----	6	
		*-----		
-26A	0460219-1	COVER-FLAP INDICATOR -----	1	
		ATTACHING PARTS -----		
	S1021A4-6B	SCREW -----	2	
		*-----		F F F F F F F F F F
-27	0413554-1	< COVER ASSY-RADIO CUTOUT RH -----	1	
	S2092-3	FASTENER-HOOK BKI -----	AR	
-28	0413553-1	COVER ASSY-RADIO CUTOUT 9.24 IN LG -----	AR	
	0413553-2	COVER ASSY-RADIO CUTOUT 6.24 IN LG -----	AR	
	0413553-3	COVER ASSY-RADIO CUTOUT 3.24 IN LG -----	AR	
	0413553-7	COVER ASSY-RADIO CUTOUT 6.73 IN LG -----	AR	
	0413553-8	COVER ASSY-RADIO CUTOUT 4.22 IN LG -----	AR	
	0413553-9	COVER ASSY-RADIO CUTOUT 2.41 IN LG -----	AR	
	0413553-14	COVER ASSY-RADIO CUTOUT 4.92 IN LG -----	AR	
-29	0415025-1	< INSERT-EYEBROW WITHOUT MIRROR INSTL -----	1	H
	0415025-3	< INSERT-EYEBROW WITHOUT MIRROR INSTL -----	1	
	0415025-2	< INSERT-EYEBROW USED WITH MIRROR INSTL -----	1	
	0415025-4	< INSERT-EYEBROW USED WITH MIRROR INSTL -----	1	
-30	0415003-8	EYEBROW ASSY-INSTRUMENT PANEL WEU 0415003-9 -----	1	
	0415003-9	EYEBROW ASSY-INSTRUMENT PANEL -----	1	
		ATTACHING PARTS -----		
	S1023A6-16B	SCREW -----	7	
	S2255-1	WASHER -----	7	
		*-----		
-31	0400339-1	MIRROR ASSY-REAR VIEW -----	1	H
		ATTACHING PARTS -----		
	MS21042L4	NUT -----	1	
	AN960-416	WASHER -----	1	
		*-----		
-32	0413470-1	< COVER-ACCELEROMETER -----	1	
		ATTACHING PARTS -----		
	S102124-6	SCREW -----	4	
	NAS446-1-1	NUT -----	4	
		*-----		

CONTINUED ON NEXT PAGE

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
52 -33	0413491-1	BRACKET-ACCELEROMETER ----- ATTACHING PARTS -----	1	H
	AN515B8R6	SCREW -----	3	
	MS21044N08	NUT -----	3	
		-----*		
-34	C661015-0102 @	ACCELEROMETER ----- ATTACHING PARTS -----	1	H
	AN515B8R10	SCREW -----	3	
	AN936A8	WASHER -----	3	
	AN340B8	NUT -----	3	
		-----*		
-35	0413509-1	ADAPTER-ACCELEROMETER ----- ATTACHING PARTS -----	1	H
	AN515B8R10	SCREW -----	3	
	AN936A8	WASHER -----	3	
	AN340B8	NUT -----	3	
		-----*		
-36	0760131-6	SUPPORT & COLLAR-CONTROL LOCK LH -----	1	
-37	0760131-5	SUPPORT & COLLAR-CONTROL LOCK RH ----- ATTACHING PARTS -----	1	
	AN515-6R10	SCREW -----	4	
	AN960-6L	WASHER -----	4	
	MS21044N06	NUT -----	4	
		-----*		
-38	C661071-0101	ALTIMETER-20,000 FT SENSITIVE -----	1	B
	C661071-0102	ALTIMETER-20,000 FT FEET/MILLIBARS -----	1	
	C661025-0102	ALTIMETER-35,000 FT FEET/MILLIBARS -----	1	
	SEE FIG 78	ENCODING & DUAL ALTIMETER INSTL -----	AR	
		ATTACHING PARTS -----		
	AN5156R10	SCREW -----	3	
		-----*		
-39	SEE FIG 2	PLACARDS -----	AR	
-40	C664508-0101	CLOCK-ELECTRIC WEU C664508-0102 ----- ATTACHING PARTS -----	1	
	AN515B6R12	SCREW -----	2	
		-----*		
-41	C661076-0102 @*	GYRO-HORIZON -----	1	
	C661076-0101 @*	GYRO-HORIZON -----	1	
	C661076-0103 *	GYRO-HORIZON -----	1	
	C661076-0105 *	GYRO-HORIZON -----	1	
	C661076-0107 *	GYRO-HORIZON -----	1	
		ATTACHING PARTS -----		
	AN515B6R6	SCREW -----	4	
		-----*		
-42	C661075-0103 %	GYRO-DIRECTIONAL -----	1	
	C661075-0104 %	GYRO-DIRECTIONAL -----	1	
	C661075-0101 %	GYRO-DIRECTIONAL -----	1	
	C661075-0106 %	GYRO-DIRECTIONAL -----	1	
	C661075-0108 %	GYRO-DIRECTIONAL -----	1	B
		ATTACHING PARTS -----		
	AN515B6R8	SCREW -----	4	
		-----*		
-43	C668509-0101	GAGE-SUCTION -----	1	
-44	C661064-0107	INDICATOR-AIRSPEED 152 & F152 ONLY -----	1	C
	C661064-0216 @	INDICATOR-AIRSPEED A152 & FA152 ONLY ----- ATTACHING PARTS -----	1	A
	AN515B6R10	SCREW -----	4	
		-----*		
		TRUE AIRSPEED INSTL -----	NP	
-45	C661065-0105 @	INDICATOR-TRUE AIRSPEED 152 & F152 ONLY -----	1	C
	C661065-0216	INDICATOR-TRUE AIRSPEED A152 & FA152 ONLY ----- ATTACHING PARTS -----	1	A
		SCREW -----	4	
		-----*		
-46	AN515B6R16	RETAINER ASSY -----	1	
-47	0700162-1	RING ASSY 152 & F152 ONLY -----	1	C
-48	S2234-1	RING ASSY A152 & FA152 ONLY -----	1	A
	S2234-2	SPACER .050 THICK -----	AR	
-49	0700162-3	SPACER .060 THICK -----	AR	
	0700162-4	SPACER .071 THICK -----	AR	
	0700162-6	SPACER .040 THICK -----	AR	
	0700162-7	-----*		
		CONTINUED ON NEXT PAGE		

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
52 -50	C661003-0505 C661003-0506 C661003-0504	INDICATOR-TURN COORDINATOR 24V ----- INDICATOR-TURN COORDINATOR 10V TO 30V ALT ----- INDICATOR-TURN COORDINATOR 12V MUST BE USED ----- WITH 0470421-1 REGULATOR FOR 24V INSTL ALT	1 1 1	
	0470421-1	REGULATOR ASSY-TURN COORDINATOR MOUNTED ON ----- BACK OF C661003-0504	1	
	S1303-2	INDICATOR-TURN & BANK ----- ATTACHING PARTS	1	D
	AN515B6R16	SCREW -----	4	D
	AN936A6B	WASHER ----- *-----	4	D
-51	C661080-0101	INDICATOR-VERTICAL SPEED ----- ATTACHING PARTS	1	
	AN507B632R12	SCREW -----	3	
	S1066B1	WASHER ----- *-----	3	
-52	C668020-0119	TACHOMETER ----- ATTACHING PARTS	1	
	AN515B8R10	SCREW -----	4	
	NAS43DD3-22	SPACER -----	4	
	AN936A8	WASHER -----	4	
	AN340B8	NUT ----- *-----	4	
-53	S1605-12 C664502-0101 C664503-0101	SHAFT-TACHOMETER ----- HOURMETER WEU C664503-0101 ----- HOURMETER ----- ATTACHING PARTS	1 1 1	J K
	AN515B6R12	SCREW -----	4	
	NAS43DD1-26	SPACER -----	4	
	AN936A6	WASHER -----	4	
	AN340B6	NUT ----- *-----	4	
-54	S1320-5 0413427-3	AMMETER-60 AMP ----- SPACER-AMMETER -----	1 1	
-55	C669562-0113 C669562-0112	INSTRUMENT CLUSTER STEWART-WARNER ----- INSTRUMENT CLUSTER ROCH STD RANGE TANK ----- INSTRUMENT CLUSTER ROCH LONG RANGE TANK ----- ATTACHING PARTS	NP 1 1	
-56	NAS43DD1-56	SPACER -----	2	
-57	AN936A6	WASHER -----	2	
-58	AN340B6	NUT ----- *-----	2	
-59		GAGE-FUEL LH STEWART-WARNER -----	NP	
-60		GAGE-FUEL RH STEWART-WARNER -----	NP	
	6246-00479	GAGE-FUEL LH & RH ROCH STD RANGE TANK -----	2	
	6246-00480	GAGE-FUEL LH & RH ROCH LONG RANGE TANK -----	2	
-61	C664564-0113	INSTRUMENT CLUSTER STEWART-WARNER ----- INSTRUMENT CLUSTER ROCHESTER ----- ATTACHING PARTS	NP 1	
-62	NAS43DD1-56	SPACER -----	2	
-63	AN936A6	WASHER -----	2	
-64	AN340B6	NUT ----- *-----	2	
-65	2646-00053	GAGE-OIL PRESSURE STEWART-WARNER ----- GAGE-OIL PRESSURE ROCHESTER -----	NP 1	
-66	6246-00370	GAGE-OIL TEMP STEWART-WARNER ----- GAGE-OIL TEMP ROCHESTER -----	NP 1	
-67	S2135-2 S2519-2 SEE FIG 86	LIGHT ASSY-OVERVOLTAGE ----- LIGHT ASSY-OVERVOLTAGE ALTERNATE ----- SENSOR-OVERVOLTAGE -----	1 1 1	
-68	TVA-1315	CAPACITOR -----	1	
-69	0513039-7 0513039-1 S1982-1 60232-1 AN936A8 S2041-50-1.6	CIGAR LIGHTER ----- PLUG-HEATER ----- KNOB-CIGAR LIGHTER ----- CIRCUIT BREAKER ON BACK OF CIGAR LIGHTER ----- WASHER ON BACK OF CIGAR LIGHTER ----- RESISTOR-CIGAR LIGHTER ----- ATTACHING PARTS	1 1 1 1 1 1	
	AN515-4R5 MS21044N04	SCREW ----- NUT ----- *-----	2 2	
	HHH-A SFE 7.5	FUSEHOLDER-CIGAR LIGHTER BUS ----- FUSE-CIGAR LIGHTER BUS -----	1 1	
-70	S1239-46	CONTROL-CABIN HEAT, CABIN AIR -----	2	
-71	9862010-3	CONTROL-MIXTURE -----	1	

CONTINUED ON NEXT PAGE

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION							UNITS PER ASSY	USABLE ON CODE
		1	2	3	4	5	6	7		
52 -72	9863053-12	CONTROL-THROTTLE WEU 9863053-20 -----							1	
-73	S1450-19A18-040	WASHER BETWEEN PANEL COVER & CONTROL -----							1	
-74	S1230-19	CONTROL-CARBURETOR HEAT -----							1	
	C291502-0106	PRIMER ASSY-FUEL -----							1	
	S1974-1	KNOB-PRIMER -----							1	
	NAS1593-012	O RING -----							2	
-75	S1239-49	CONTROL-PARKING BRAKE -----							1	
-76	SEE FIG 53	SWITCH & CIRCUIT BREAKER INSTL -----							1	
-77	SEE FIG 76	ELEVATOR TRIM CONTROL INSTL -----							1	
-78	SEE FIG 74	FLAP POSITION INDICATOR INSTL -----							1	
-79	SEE FIG 54	MAP CASE INSTL -----							1	
-80		RADIO INSTL SEE CESSNA AVIONICS SERVICE/PARTS MANUAL ----							AR	
-81	0513292-1	PROTECTOR ASSY-LH -----							1	
		ATTACHING PARTS								
	S1021Z6-6	SCREW -----							4	
		*-----								
-82	0513292-2	PROTECTOR ASSY-RH -----							1	
		ATTACHING PARTS								
	S1021Z6-6	SCREW -----							2	
		*-----								
-83		POTENTIOMETER-SIDETONE SEE AVIONICS SERVICE/PARTS MANUAL							1	F
NOTE. < THIS PART NUMBER MUST HAVE A SECOND DASH NUMBER ADDED TO DENOTE COLOR. REFER TO HOW TO ORDER INTERIOR PARTS-PAGE IX. NOTE. * THESE GYROS ARE PHYSICALLY & FUNCTIONALLY INTERCHANGABLE. NOTE. % THESE GYROS ARE PHYSICALLY & FUNCTIONALLY INTERCHANGABLE. NOTE. @ AN EXCHANGE PART IS ALSO AVAILABLE, REFER TO THE MASTER PRICE LIST. NOTE. ** WHEN INITIALLY REPLACING THIS PART ORDER SK152-21 (FOR STD RANGE TANK) OR SK152-22 (FOR LONG RANGE TANK). NOTE. @@ WHEN INITIALLY REPLACING THIS PART ORDER SK152-19 (FOR STD RANGE TANK) OR SK152-20 (FOR LONG RANGE TANK). NOTE. %% THESE PARTS ARE FOR AIRPLANES THAT HAVE INCORPORATED SK152-19, SK152-20, SK152-21 OR SK152-22 SERVICE KITS. NOTE. *** WHEN INITIALLY ORDERING THIS PART, ORDER SK152-23. NOTE. @@@ THIS PART IS USED ON AIRPLANES THAT HAVE INCORPORATED SK152-23 SERVICE KIT. A---A152 SERIAL A1520735 THRU A1520808 FA152 SERIAL FA1520337 THRU FA1520347 B---152 SERIAL 15279406 THRU 15282031 A152 SERIAL A1520735 THRU A1520808 C---152 SERIAL 15279406 THRU 15282031 F152 SERIAL F15201429 THRU F15201528 D---F152 SERIAL F15201429 THRU F15201528 A152 SERIAL A1520735 THRU A1520808 FA152 SERIAL FA1520337 THRU FA1520347 E---152 SERIAL 15279406 THRU 15280169 A152 SERIAL A1520735 THRU A1520753 F---152 SERIAL 15280170 THRU 15282031 F152 SERIAL F15201429 THRU F15201528 A152 SERIAL A1520735 THRU A1520808 FA152 SERIAL FA1520337 THRU FA1520347 G---152 SERIAL 15279406 THRU 15282031 F152 SERIAL F15201429 THRU F15201528										
CONTINUED ON NEXT PAGE										

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION							UNITS PER ASSY	USABLE ON CODE
		1	2	3	4	5	6	7		
52 -		A152 SERIAL A1520735 THRU A1520808 FA152 SERIAL FA1520337 THRU FA1520347 H---152 SERIAL 15279406 THRU 15282031 A152 SERIAL A1520735 THRU A1520808 FA152 SERIAL FA1520337 THRU FA1520347 J---152 SERIAL 15279406 THRU 15282031 F152 SERIAL F15201429 THRU F15201528 A152 SERIAL A1520735 THRU A1520804 FA152 SERIAL FA1520337 THRU FA1520347 K---A152 SERIAL A1520805 THRU A1520808								


152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
52A-		INSTRUMENT PANEL & EQUIPMENT INSTALLATION -----	NP	A
- 1	0413540-14	PANEL ASSY-STATIONARY INSTRUMENT -----	1	N
	0413540-15	PANEL ASSY-STATIONARY INSTRUMENT -----	1	Q
- 2	S2093-3	FASTENER-HOOK BKI -----	AR	
- 3	0413542-1	STIFFENER -----	1	
- 4	0413557-1	BRACKET ASSY -----	2	
- 5	0413538-1	STIFFENER -----	1	
- 6	0460208-1	BRACKET-FLAP INDICATOR -----	1	
- 7	0413543-2	STRAP -----	1	
- 8	0413566-1	MOUNTING BRACKET-AUDIO JACKS -----	1	N
	0413593-1	MOUNTING BRACKET-AUDIO JACKS -----	1	Q
- 9	NAS680A06	NUTPLATE -----	4	
-10	0413550-1	STIFFENER -----	1	
-11	S1863-2	NUTPLATE -----	5	
-11A	NAS680A3	NUTPLATE -----	1	AC
-12	0413558-5	PANEL ASSY-LOWER -----	1	N
	0413558-9	PANEL ASSY-LOWER -----	1	Q
-13	S1862-1A	NUTPLATE -----	2	
-14	S1863-2A	NUTPLATE -----	3	
-15	AN507-632R24	SCREW -----	4	
-16	AN936A6	WASHER -----	4	
-17	AN340B6	NUT -----	4	
-18	0413574-1 %<	COVER ASSY-SHOCK PANEL -----	1	N
	0413574-1-A59 %	COVER ASSY-SHOCK PANEL LT GREY -----	1	Q
	0413574-1-279 %	COVER ASSY-SHOCK PANEL BLACK -----	1	Q
		ATTACHING PARTS -----	5	
-19	1513174-3	NUT GREY -----	5	K
	1513174-5	NUT BLACK -----	5	
		-----*		
-20	0413568-1	PANEL ASSY-SHOCK MOUNTED INSTRUMENT -----	1	
		ATTACHING PARTS -----		
-21	MS25082B2	NUT -----	14	J
	MS25082B2	NUT -----	12	K
-22	AN936A8	WASHER -----	14	J
	AN936A8	WASHER -----	12	K
-23	0413247	STRAP-GROUND -----	2	
-24	0413523-4	SHOCKMOUNT -----	7	J
	0413523-4	SHOCKMOUNT -----	6	K
		-----*		
-25	0413574-2 %<	COVER-STATIONARY INSTRUMENT RH -----	1	N
	0413574-2-A59 %	COVER-STATIONARY INSTRUMENT PANEL RH LT GREY -----	1	Q
	0413574-2-279 %	COVER-STATIONARY INSTRUMENT PANEL RH BLACK -----	1	Q
		ATTACHING PARTS -----		
-26	1513174-3	NUT GREY -----	4	
	1513174-5	NUT BLACK -----	4	K
		-----*		
-27	0413559-3 <	COVER-LOWER INSTRUMENT PANEL -----	1	J
-27A	0413559-6	COVER-LOWER INSTRUMENT PANEL -----	1	P
	0413559-7-C12	COVER-LOWER INSTRUMENT PANEL ELM BURL -----	1	W
	0413559-7-279	COVER-LOWER INSTRUMENT PANEL BLACK -----	1	X
	0413559-8-C12	COVER-LOWER INSTRUMENT PANEL ELM BURL -----	1	Y
	0413559-8-279	COVER-LOWER INSTRUMENT PANEL BLACK -----	1	Z
		ATTACHING PARTS -----		
	S1021Z6-8	SCREW -----	6	
		-----*		
-28	0460219-1	COVER-FLAP INDICATOR -----	1	
		ATTACHING PARTS -----		
	S1021A4-6B	SCREW -----	2	
		-----*		
-29	0413554-1 <	COVER ASSY-RADIO CUTOFF RH -----	1	N
	0413554-1-A59	COVER ASSY-RADIO CUTOFF RH LT GREY -----	1	Q
	0413554-1-279	COVER ASSY-RADIO CUTOFF RH BLACK -----	1	Q
	S2092-3	FASTENER-HOOK BKI -----	AR	
-29A	0413554-7 %<	COVER-EGT & ACCELEROMETER -----	1	P
	0413554-7-A59 %	COVER-EGT & ACCELEROMETER LT GREY -----	1	Q
	0413554-7-279 %	COVER-EGT & ACCELEROMETER BLACK -----	1	Q
		ATTACHING PARTS -----		
-29B	1513178-3	NUT -----	2	K
		-----*		


CONTINUED ON NEXT PAGE

152 & A152 Parts Catalog


Instruments (Cont)

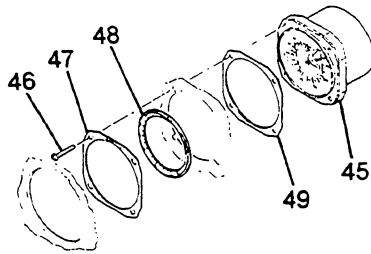



TRUE AIRSPEED INSTR

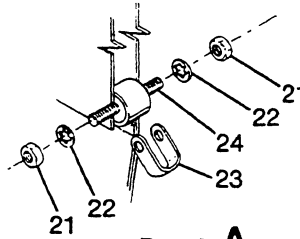


Detail A

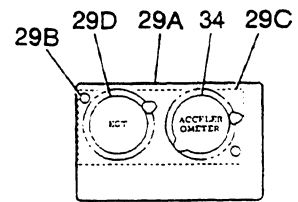


Detail B CODE K

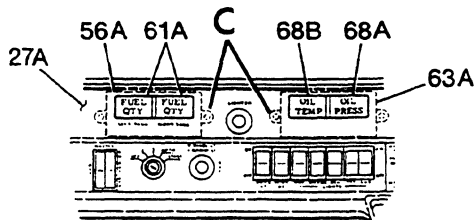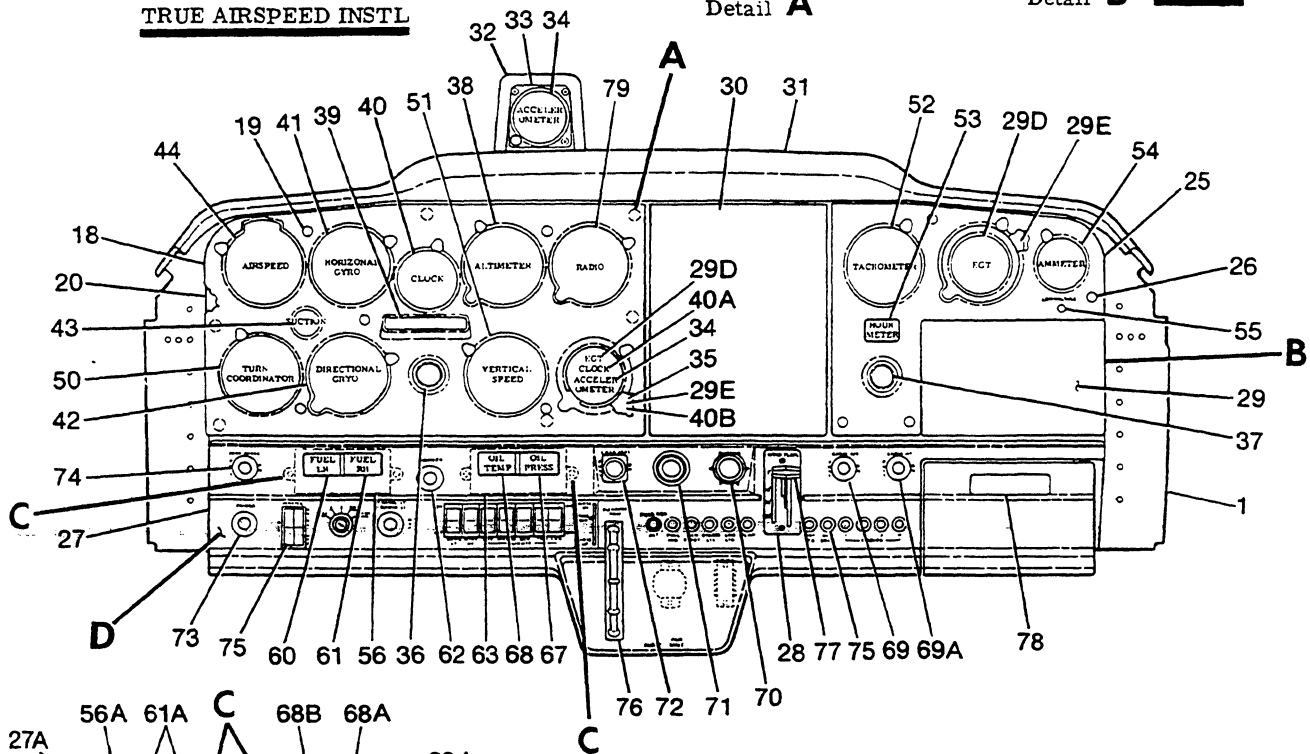

Detail D CODE K

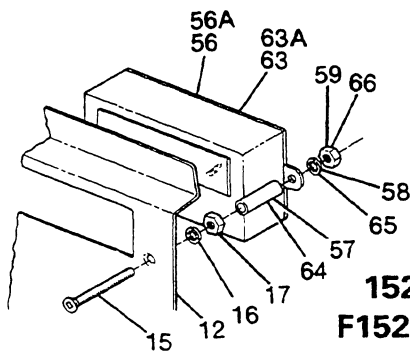

Detail C

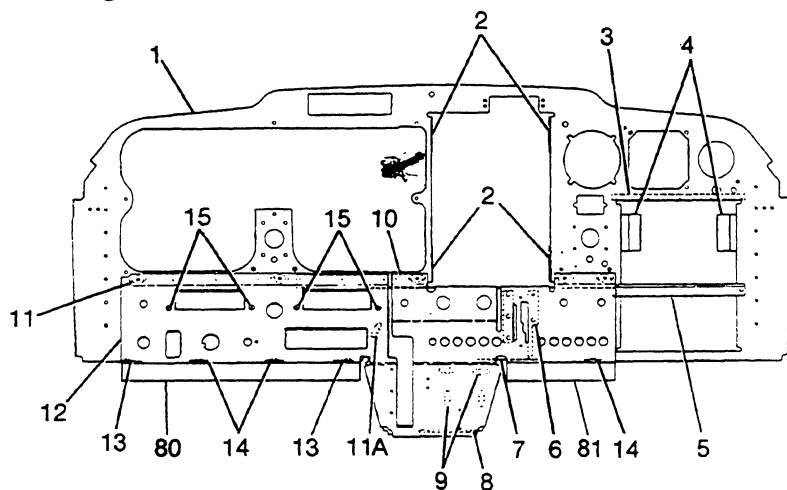

152 SERIAL 15282032 THRU 15285594
F152 SERIAL F15201529 THRU F15201928
A152 SERIAL A1520809 THRU A1521014
FA152 SERIAL FA1520348 THRU FA1520382

Figure 52A. Instrument Panel Equipment Installation

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
52A-29C	0413569-1	BRACKET ASSY-EGT & ACCELEROMETER -----	1	K
-29D	C668501-0213	INDICATOR-EXHAUST GAS TEMPERATURE -----	1	K
		ATTACHING PARTS		
	AN515B6R10	SCREW -----	4	K
	AN936A6B	WASHER -----	4	K
	AN340B6	NUT -----	4	K
		-----*		
	C668501-0206	LEAD-EXHAUST GAS TEMPERATURE -----	1	K
	C668501-0204	PROBE-EXHAUST GAS TEMPERATURE -----	1	K
-29E	0413572-1	ADAPTOR-EXHAUST GAS TEMPERATURE -----	1	K
		ATTACHING PARTS		
	AN515B6R6	SCREW -----	4	K
	AN936A6B	WASHER -----	4	K
	AN340B6	NUT -----	4	K
		-----*		
-30	0413553-1	COVER ASSY-RADIO CUTOUT 9.24 IN LG LT GREY -----	AR	J
	0413553-2	COVER ASSY-RADIO CUTOUT 6.24 IN LG LT GREY -----	AR	J
	0413553-3	COVER ASSY-RADIO CUTOUT 3.24 IN LG LT GREY -----	AR	J
	0413553-7	COVER ASSY-RADIO CUTOUT 6.73 IN LG LT GREY -----	AR	J
	0413553-8	COVER ASSY-RADIO CUTOUT 4.22 IN LG LT GREY -----	AR	J
	0413553-9	COVER ASSY-RADIO CUTOUT 2.41 IN LG LT GREY -----	AR	J
	0413553-14	COVER ASSY-RADIO CUTOUT 4.92 IN LG LT GREY -----	AR	J
	0413553-16	COVER ASSY-RADIO CUTOUT 3.00 IN LG LT GREY -----	AR	J
	0413553-18	COVER ASSY-RADIO CUTOUT 1.90 IN LG LT GREY -----	AR	J
	0413553-20	COVER ASSY-RADIO CUTOUT .55 IN LG LT GREY -----	AR	J
	0413553-22	COVER ASSY-RADIO CUTOUT 9.24 IN LG BLACK -----	AR	K
	0413553-24	COVER ASSY-RADIO CUTOUT 6.24 IN LG BLACK -----	AR	K
	0413553-26	COVER ASSY-RADIO CUTOUT 3.24 IN LG BLACK -----	AR	K
	0413553-28	COVER ASSY-RADIO CUTOUT 6.73 IN LG BLACK -----	AR	K
	0413553-30	COVER ASSY-RADIO CUTOUT 4.22 IN LG BLACK -----	AR	K
	0413553-32	COVER ASSY-RADIO CUTOUT 2.25 IN LG BLACK -----	AR	K
	0413553-34	COVER ASSY-RADIO CUTOUT 4.84 IN LG BLACK -----	AR	K
	0413553-36	COVER ASSY-RADIO CUTOUT 2.92 IN LG BLACK -----	AR	K
	0413553-38	COVER ASSY-RADIO CUTOUT 1.82 IN LG BLACK -----	AR	K
	0413553-40	COVER ASSY-RADIO CUTOUT .39 IN LG BLACK -----	AR	K
-31	0415029-1	GLAESHIELD ASSY-INSTRUMENT PANEL -----	1	
		ATTACHING PARTS		
	S1023A6-16B	SCREW -----	7	
	S2255-1	WASHER -----	7	
		-----*		
-32	0413470-1	COVER-ACCELEROMETER -----	1	R
	0413470-1-279	COVER-ACCELEROMETER -----	1	S
		ATTACHING PARTS		
	S102174-6	SCREW -----	4	
	NAS446-1-1	NUT -----	4	
		-----*		
-33	0413491-1	BRACKET-ACCELEROMETER -----	1	E
		ATTACHING PARTS		
	AN515B8R6	SCREW -----	3	
	MS21044N08	NUT -----	3	
		-----*		
-34	C661015-0102	ACCELEROMETER -----	1	E
		ATTACHING PARTS		
	AN515B8R10	SCREW -----	3	
	AN936A8	WASHER -----	3	
	AN340B8	NUT -----	3	
		-----*		
-35	0413509-1	ADAPTER-ACCELEROMETER -----	1	E
		ATTACHING PARTS		
	AN515B8R10	SCREW -----	3	
	AN936A8	WASHER -----	3	
	AN340B8	NUT -----	3	
		-----*		
-36	0760131-6	SUPPORT & COLLAR-CONTROL LOCK LH -----	1	
-37	0760131-5	SUPPORT & COLLAR-CONTROL LOCK RH -----	1	
		ATTACHING PARTS		
	AN515-6R10	SCREW -----	4	
	AN960-6L	WASHER -----	4	
	MS21044N06	NUT -----	4	
		-----*		

CONTINUED ON NEXT PAGE

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
52A-38	C661071-0101	ALTIMETER-20,000 FT SENSITIVE -----	1	C
	C661071-0102	ALTIMETER-20,000 FT FEET/MILLIBARS -----	1	
	C661025-0102	ALTIMETER-35,000 FT FEET/MILLIBARS -----	1	
	SEE FIG 78	ENCODING & DUAL ALTIMETER INSTL -----	AR	
-39	SEE FIG 2	PLACARDS -----	AR	
-40	C664508-0101	CLOCK-ELECTRIC WEU C664508-0102 -----	1	
	C664508-0102	CLOCK-ELECTRIC -----	1	
	AN515B6R12	ATTACHING PARTS		
		SCREW -----	2	
-40A	C664511-0102	CLOCK-DIGITAL -----	1	H
	MS35206-228	ATTACHING PARTS		
		SCREW -----	3	H
	MS25231-1819	LIGHT-DIGITAL CLOCK -----	1	H
	S2413-1	SOCKET-LIGHT -----	1	H
-40B	0413572-1	ADAPTOR-DIGITAL CLOCK -----	1	H
		ATTACHING PARTS		
	MS35206-228	SCREW -----	4	H
	AN936A6B	WASHER -----	4	H
	AN340B6	NUT -----	4	H
-41	C661076-0102 @@*	GYRO-HORIZON -----	1	V
	C661076-0101 @@*	GYRO-HORIZON -----	1	
	C661076-0103 *	GYRO-HORIZON -----	1	
	C661076-0105 *	GYRO-HORIZON -----	1	
	C661076-0107 *	GYRO-HORIZON -----	1	
	C661076-0108 *	GYRO-HORIZON -----	1	
		ATTACHING PARTS		
	AN515B6R6	SCREW -----	4	
-42	C661075-0103 **	GYRO-DIRECTIONAL -----	1	
	C661075-0104 **	GYRO-DIRECTIONAL -----	1	
	C661075-0101 **	GYRO-DIRECTIONAL -----	1	
	C661075-0106 **	GYRO-DIRECTIONAL -----	1	
	C661075-0108 **	GYRO-DIRECTIONAL -----	1	
		ATTACHING PARTS		
	AN515B6R8	SCREW -----	4	
-43	C668509-0101	GAGE-SUCTION -----	1	
-44	C661064-0107	INDICATOR-AIRSPD 152 & F152 ONLY -----	1	D
	C661064-0216 @@	INDICATOR-AIRSPD A152 & FA152 ONLY -----	1	B
		ATTACHING PARTS		
	AN515B6R10	SCREW -----	4	
		TRUE AIRSPD INSTL -----	NP	
-45	C661065-0105 @@	INDICATOR-TRUE AIRSPD 152 & F152 ONLY -----	1	D
	C661065-0216	INDICATOR-TRUE AIRSPD A152 & FA152 ONLY -----	1	B
		ATTACHING PARTS		
-46	AN515B6R16	SCREW -----	4	
-47	0700162-1	RETAINER ASSY -----	1	
-48	S2234-1	RING ASSY 152 & F152 ONLY -----	1	D
	S2234-2	RING ASSY A152 & FA152 ONLY -----	1	B
-49	0700162-3	SPACER .050 THICK -----	AR	
	0700162-4	SPACER .060 THICK -----	AR	
	0700162-6	SPACER .071 THICK -----	AR	
	0700162-7	SPACER .040 THICK -----	AR	
-50	C661003-0506 @@	INDICATOR-TURN COORDINATOR 10 TO 30V -----	1	
	C661003-0507	INDICATOR-TURN COORDINATOR 24 VOLT ALTERNATE -----	1	
	C661003-0505	INDICATOR-TURN COORDINATOR 24 VOLT FSO C661003-0506 -----	NP	
	C661003-0504	INDICATOR-TURN COORDINATOR 12 VOLT MUST BE USED -----	NP	J
		WITH 0470421-1 REGULATOR FOR 24V INSTL ALTERNATE		
	0470421-1	REGULATOR ASSY-TURN COORDINATOR MOUNTED ON -----	1	J
	S1303-2	BACK OF C661003-0504		
		INDICATOR-TURN & BANK -----	1	B
		ATTACHING PARTS		
	AN515B6R16	SCREW -----	4	B
	AN936A6B	WASHER -----	4	B
		-----*		

CONTINUED ON NEXT PAGE

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
52A-51	C661080-0101	INDICATOR-VERTICAL SPEED -----	1	
		ATTACHING PARTS		
	AN507B632R12	SCREW -----	3	
	S1066B1	WASHER -----	3	
		-----*		
-52	C668020-0120	TACHOMETER USED WITH S1605-12 TACH SHAFT ONLY -----	1	
	C668020-0220	TACHOMETER USED WITH S2250-12 TACH SHAFT ONLY -----	1	AA
		ATTACHING PARTS		
	AN515B8R10	SCREW -----	4	
	NAS43DD1-22	SPACER -----	4	
	AN936A8	WASHER -----	4	
	AN340B8	NUT -----	4	
		-----*		
	S1605-12	SHAFT-TACHOMETER USED WITH C668020-0120 ONLY -----	1	
	S2550-12	SHAFT-TACHOMETER USED WITH C668020-0220 ONLY -----	1	AA
-53	C664503-0101	HOURLY -----	1	
		ATTACHING PARTS		
	AN515B6R12	SCREW -----	4	
	NAS43DD1-26	SPACER -----	4	
	AN936A6	WASHER -----	4	
	AN340B6	NUT -----	4	
		-----*		
-54	S1320-5	AMMETER-60 AMP -----	1	
	0413427-3	SPACER-AMMETER -----	1	
-55	S2135-2	LIGHT ASSY-LOW VOLTAGE -----	1	
	S2519-2	LIGHT ASSY-LOW VOLTAGE ALTERNATE -----	1	
-56		INSTRUMENT CLUSTER STEWART-WARNER -----	NP	
-56A		INSTRUMENT CLUSTER STEWART-WARNER -----	NP	
	C669562-0113	INSTRUMENT CLUSTER ROCH STD RANGE TANK -----	1	
	C669562-0112	INSTRUMENT CLUSTER ROCH LONG RANGE TANK -----	1	
		ATTACHING PARTS		
-57	NAS43DD1-56	SPACER -----	2	J
-58	NAS43DD1-64	SPACER -----	2	K
-59	AN936A6	WASHER -----	2	
	AN340B6	NUT -----	2	
		-----*		
-60		GAGE-FUEL LH STEWART-WARNER -----	NP	
-61		GAGE-FUEL RH STEWART-WARNER -----	NP	
		GAGE-FUEL STEWART-WARNER -----	NP	
	6246-00479	GAGE-FUEL ROCH STD RANGE TANK -----	2	
	6246-00480	GAGE-FUEL ROCH LONG RANGE TANK -----	2	
-62	0513039-7	CIGAR LIGHTER -----	1	U
	0513039-1	PLUG-HEATER -----	1	U
	S1982-1	KNOB-CIGAR LIGHTER -----	1	U
	60232-1	CIRCUIT BREAKER ON BACK OF CIGAR LIGHTER -----	1	U
	AN936A8	WASHER ON BACK OF CIGAR LIGHTER -----	1	U
	S2041-50-1.6	RESISTOR-CIGAR LIGHTER -----	1	U
		ATTACHING PARTS		
	AN515-4R5	SCREW -----	2	U
	MS21044N04	NUT -----	2	U
		-----*		
	HHH-A	FUSEHOLDER-CIGAR LIGHTER BUS -----	1	U
	SFE7.5	FUSE-CIGAR LIGHTER BUS -----	1	U
	S2209-2	STA STRAP -----	1	U
-63		INSTRUMENT CLUSTER STEWART-WARNER -----	NP	
-63A		INSTRUMENT CLUSTER STEWART-WARNER -----	NP	
	C669564-0101	INSTRUMENT CLUSTER ROCHESTER -----	1	
		ATTACHING PARTS		
-64	NAS43DD1-56	SPACER STEWART-WARNER -----	2	J
	NAS43DD1-64	SPACER STEWART-WARNER -----	2	K
	NAS43DD1-48	SPACER ROCHESTER -----	2	
-65	AN936A6	WASHER -----	2	
-66	AN340B6	NUT -----	2	
		-----*		
-67		GAGE-OIL PRESSURE STEWART-WARNER -----	NP	
-68		GAGE-OIL TEMP STEWART-WARNER -----	NP	
-68A		GAGE-OIL PRESSURE STEWART-WARNER -----	NP	
	2646-00053	GAGE-OIL PRESSURE ROCHESTER -----	1	
-68B		GAGE-OIL TEMP STEWART-WARNER -----	NP	
	6246-00370	GAGE-OIL TEMP ROCHESTER -----	1	

CONTINUED ON NEXT PAGE


152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
52A-69	S1239-46	CONTROL-CABIN AIR -----	1	
-69A	S1239-46	CONTROL-CABIN HEAT -----	1	J
	S1239-47	CONTROL-CABIN HEAT -----	1	K
-70	9862010-3	CONTROL-MIXTURE -----	1	
-71	9863055-1	CONTROL-THROTTLE WEU 9863056-1 -----	1	F
	9863056-1	CONTROL-THROTTLE -----	1	G
	S1450-19A18-040	WASHER BETWEEN PANEL COVER & CONTROL -----	1	
-72	S1230-19	CONTROL-CARBURETOR HEAT -----	1	L
	S1230-20	CONTROL-CARBURETOR HEAT -----	1	M
-73	C291502-0106	PRIMER ASSY-FUEL -----	1	
	S1974-1	KNOB-PRIMER -----	1	
	NAS1593-012	O RING -----	2	
-74	S1239-49	CONTROL-PARKING BRAKE -----	1	
-75	SEE FIG 53	SWITCH & CIRCUIT BREAKER INSTL -----	1	
-76	SEE FIG 76	ELEVATOR TRIM CONTROL INSTL -----	1	
-77	SEE FIG 74	FLAP POSITION INDICATOR INSTL -----	1	
-78	SEE FIG 54 & 54A	MAP CASE INSTL -----	1	
-79		RADIO INSTL SEE CESSNA AVIONICS SERVICE/PARTS MANUAL -----	AR	
-80	0513292-1	PROTECTOR ASSY-LH -----	1	
		ATTACHING PARTS		
	S1021Z6-6	SCREW -----	4	
		-----*		
-81	0513292-2	PROTECTOR ASSY-RH -----	1	
		ATTACHING PARTS		
	S1021Z6-6	SCREW -----	2	
		-----*		
		NOTE. < THIS PART NUMBER MUST HAVE A SECOND DASH NUMBER ADDED TO DENOTE COLOR. REFER TO HOW TO ORDER INTERIOR PARTS-PAGE IX.		
		NOTE. % THESE COVERS ARE NOT APPLICABLE TO AIRCRAFT EQUIPPED WITH INSTRUMENT POST LIGHTING-FOR POST LIGHTED COVERS SEE FIGURE 53A		
		NOTE. * THESE GYROS ARE PHYSICALLY & FUNCTIONALLY INTERCHANGEABLE.		
		NOTE. + WHEN INITIALLY ORDERING THIS PART, ORDER SK152-23.		
		NOTE. @@@ WHEN INITIALLY REPLACING THIS PART, ORDER SK152-21 (FOR STD RANGE TANK) OR SK152-22 (FOR LONG RANGE TANK).		
		NOTE. %% WHEN INITIALLY REPLACING THIS PART, ORDER SK152-19 (FOR STD RANGE TANK) OR SK152-20 (FOR LONG RANGE TANK).		
		NOTE. *** THIS PART IS FOR AIRPLANES THAT HAVE INCORPORATED SK152-19, SK152-20, SK152-21 OR SK152-22 SERVICE KITS.		
		NOTE. ++ THIS PART WAS INSTALLED AS AN ALTERNATE OR HAS BEEN INSTALLED ON AIRPLANES THAT HAVE INCORPORATED SK152-23.		
		NOTE. ** THESE GYROS ARE PHYSICALLY & FUNCTIONALLY INTERCHANGEABLE.		
		NOTE. @@ AN EXCHANGE PART IS ALSO AVAILABLE, REFER TO THE MASTER PRICE LIST.		
		A---152 SERIAL 15282032 THRU 15285594 F152 SERIAL F15201529 THRU F15201928 A152 SERIAL A1520809 THRU A1521014 FA152 SERIAL FA1520348 THRU FA1520382		
		B---A152 SERIAL A1520809 THRU A1521014 FA152 SERIAL FA1520348 THRU FA1520382		
		C---152 SERIAL 15282032 THRU 15285594 A152 SERIAL A1520809 THRU A1521014		
		CONTINUED ON NEXT PAGE		

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION							UNITS PER ASSY	USABLE ON CODE
		1	2	3	4	5	6	7		
52A-		D---	152	SERIAL	15282032	THRU	15285594			
		F152	SERIAL	F15201529	THRU	F15201928				
		E---	152	SERIAL	15282032	THRU	15285594			
		A152	SERIAL	A1520809	THRU	A1521014				
		FA152	SERIAL	FA1520348	THRU	FA1520382				
		F---	152	SERIAL	15282032	THRU	15283243			
		F152	SERIAL	F15201529	THRU	F15201633				
		A152	SERIAL	A1520809	THRU	A1520859				
		FA152	SERIAL	FA1520347	THRU	FA1520356				
		G---	152	SERIAL	15283244	THRU	15285594			
		F152	SERIAL	F15201634	THRU	F15201928				
		A152	SERIAL	A1520860	THRU	A1521014				
		FA152	SERIAL	FA1520357	THRU	FA1520382				
		H---	152	SERIAL	15282563	THRU	15285594			
		A152	SERIAL	A1520831	THRU	A1521016				
		J---	152	SERIAL	15282032	THRU	15283591			
		F152	SERIAL	F15201529	THRU	F15201673				
		A152	SERIAL	A1520809	THRU	A1520878				
		FA152	SERIAL	FA1520348	THRU	FA1520357				
		K---	152	SERIAL	15283592	THRU	15285594			
		F152	SERIAL	F15201674	THRU	F15201928				
		A152	SERIAL	A1520879	THRU	A1521014				
		FA152	SERIAL	FA1520358	THRU	FA1520382				
		L---	152	SERIAL	15282032	THRU	15283833			
		F152	SERIAL	F15201529	THRU	F15201723				
		A152	SERIAL	A1520809	THRU	A1520898				
		FA152	SERIAL	FA1520348	THRU	FA1520372				
		M---	152	SERIAL	15283834	THRU	15285594			
		F152	SERIAL	F15201724	THRU	F15201928				
		A152	SERIAL	A1520899	THRU	A1521014				
		FA152	SERIAL	FA1520373	THRU	FA1520382				
		N---	152	SERIAL	15282032	THRU	15284541			
		F152	SERIAL	F15201529	THRU	F15201808				
		A152	SERIAL	A1520809	THRU	A1520943				
		FA152	SERIAL	FA1520348	THRU	FA1520372				
		P---	152	SERIAL	15283592	THRU	15284541			
		F152	SERIAL	F15201674	THRU	F15201808				
		A152	SERIAL	A1520879	THRU	A1520943				
		FA152	SERIAL	FA1520358	THRU	FA1520372				
		Q---	152	SERIAL	15284542	THRU	15285594			
		F152	SERIAL	F15201809	THRU	F15201928				
		A152	SERIAL	A1520944	THRU	A1521014				
		FA152	SERIAL	FA1520373	THRU	FA1520382				
		R---	152	SERIAL	15282032	THRU	15284541			
		A152	SERIAL	A1520809	THRU	A1520943				
		FA152	SERIAL	FA1520348	THRU	FA1520372				
		S---	152	SERIAL	15284542	THRU	15285594			
		A152	SERIAL	A1520944	THRU	A1521014				
		FA152	SERIAL	FA1520373	THRU	FA1520382				
		T---	152	SERIAL	15283592	THRU	15284598			
		F152	SERIAL	F15201674	THRU	F15201808				
		A152	SERIAL	A1520879	THRU	A1520947				
		FA152	SERIAL	FA1520358	THRU	FA1520372				
		U---	152	SERIAL	15282032	THRU	15285161			
		F152	SERIAL	F15201529	THRU	F15201893				
		A152	SERIAL	A1520809	THRU	A1520983				
		FA152	SERIAL	FA1520348	THRU	FA1520377				
		V---	152	SERIAL	15282032	THRU	15284604			
		F152	SERIAL	F15201529	THRU	F15201808				
		A152	SERIAL	A1520809	THRU	A1520950				
		FA152	SERIAL	FA1520348	THRU	FA1520372				
		W---	152	SERIAL	15284542	THRU	15285161			
		A152	SERIAL	A1520944	THRU	A1520983				
		X---	F152	SERIAL	F15201809	THRU	F15201893			
		FA152	SERIAL	FA1520373	THRU	FA1520377				
		Y---	152	SERIAL	15285162	THRU	15285594			
		A152	SERIAL	A1520984	THRU	A1521014				
		Z---	F152	SERIAL	F15201894	THRU	F15201928			
		FA152	SERIAL	FA1520378	THRU	FA1520382				
		AA---	152	SERIAL	15285075	THRU	15285594			
		A152	SERIAL	A1520976	THRU	A1521014				
		AB---	152	SERIAL	15285035	THRU	15285594			
		A152	SERIAL	A1520975	THRU	A1521014				
		AC---	152	SERIAL	15285378	THRU	15285594			
		F152	SERIAL	F15201896	THRU	F15201928				
		A152	SERIAL	A1520997	THRU	A1521014				
		FA152	SERIAL	FA1520379	THRU	FA1520382				

152 & A152 Parts Catalog

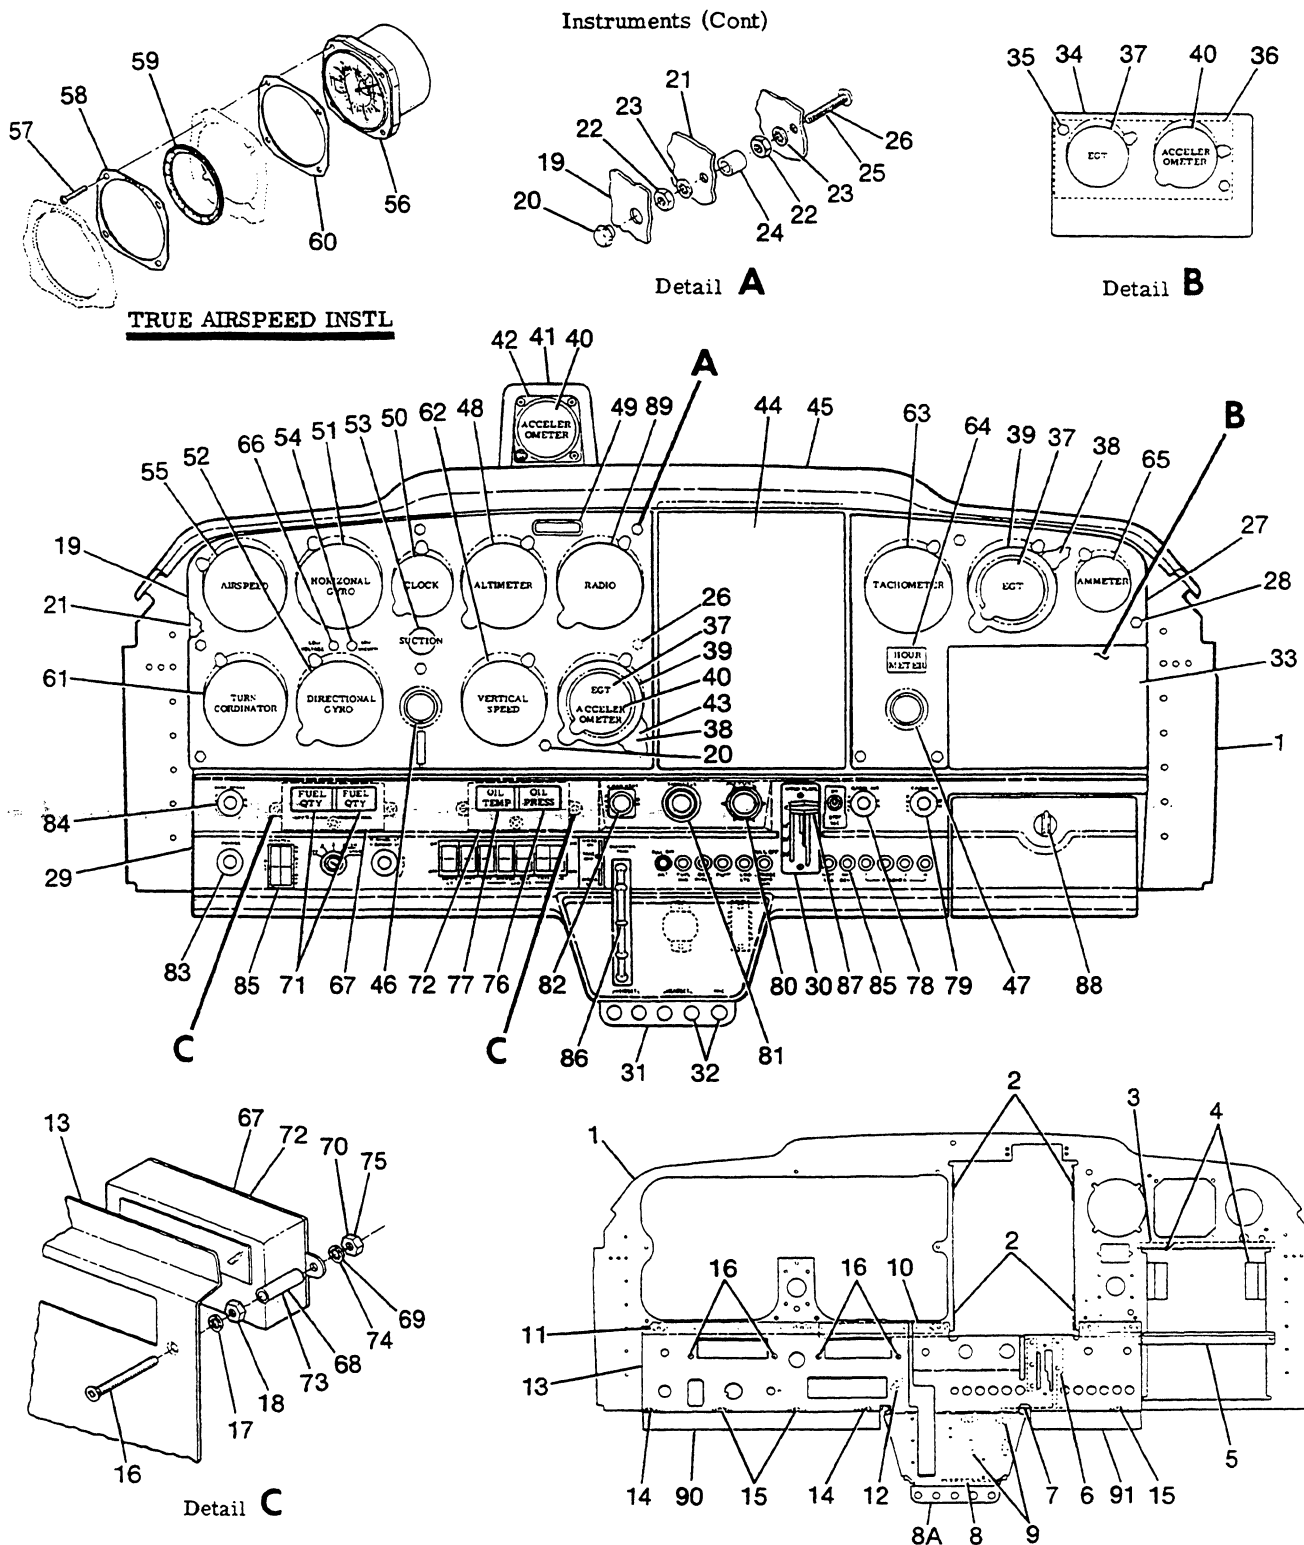

152 SERIAL 15285595 & ON
F152 SERIAL F15201929 & ON
A152 SERIAL A1521015 & ON
FA152 SERIAL FA1520383 & ON

Figure 52B. Instrument Panel Equipment Installation

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION							UNITS PER ASSY	USABLE ON CODE
		1	2	3	4	5	6	7		
52B-		INSTRUMENT PANEL & EQUIPMENT INSTALLATION -----							NP	A G H
- 1	0413540-15	PANEL ASSY-STATIONARY INSTRUMENT -----							1	
	0413540-16	PANEL ASSY-STATIONARY INSTRUMENT -----							1	
- 2	S2093-3	FASTENER-HOOK BKI -----							AR	
- 3	0413542-1	STIFFENER -----							1	
- 4	0413557-1	BRACKET ASSY -----							2	
- 5	0413538-1	STIFFENER -----							1	
- 6	0460208-1	BRACKET-FLAP INDICATOR -----							1	
- 7	0413543-2	STRAP -----							1	
- 8	0413593-1	BRACKET-MIKE & PHONE -----							1	G H
- 8A	0413617-1	BRACKET-MIKE & PHONE -----							1	
- 9	NAS680A06	NUTPLATE -----							4	
-10	0413550-1	STIFFENER -----							1	
-11	S1863-2	NUTPLATE -----							5	
-12	NAS680A3	NUTPLATE -----							1	
-13	0413558-9	PANEL ASSY-LOWER -----							1	
-14	S1862-1A	NUTPLATE -----							2	
-15	S1863-2A	NUTPLATE -----							3	
-16	AN507-632R24	SCREW -----							4	
-17	AN936A6	WASHER -----							4	
-18	AN340B6	NUT -----							4	
-19	0413611-1-A59 %	COVER ASSY-REMOVABLE PANEL LT GREY -----							1	G G H H
	0413611-1-279 %	COVER ASSY-REMOVABLE PANEL BLACK -----							1	
	0413611-4-E83 %	COVER ASSY-REMOVABLE PANEL GREY -----							1	
	0413611-4-279 %	COVER ASSY-REMOVABLE PANEL BLACK -----							1	
		ATTACHING PARTS -----								
-20	0413613-1-A59	NUT LT GREY -----							6	G H
	0413613-1-E83	NUT GREY -----							6	
	0413613-1-279	NUT BLACK -----							6	
		*-----								
-21	0413610-1	PANEL ASSY-REMOVABLE -----							1	
		ATTACHING PARTS -----								
-22	AN340A8	NUT -----							12	
-23	AN936A8	WASHER -----							12	
-24	NAS43DD3-22	SPACER -----							6	
-25	AN515-8R16	SCREW -----							5	
-26	AN515-8R14	SCREW -----							1	
		*-----								
-27	0413611-2-A59 %	COVER-STATIONARY INSTRUMENT PANEL RH LT GREY -----							1	G H
	0413611-2-E83	COVER-STATIONARY INSTRUMENT PANEL RH GREY -----							1	
	0413611-2-279 %	COVER-STATIONARY INSTRUMENT PANEL RH BLACK -----							1	
		ATTACHING PARTS -----								
-28	0413613-1-A59	NUT LT GREY -----							4	G H
	0413613-1-E83	NUT GREY -----							4	
	0413613-1-279	NUT BLACK -----							4	
		*-----								
-29	0413559-8-C12	COVER-LOWER INSTRUMENT PANEL ELM BURL -----							1	J C K H
	0413559-8-279	COVER-LOWER INSTRUMENT PANEL BLACK -----							1	
	0413559-9-C12	COVER-LOWER INSTRUMENT PANEL ELM BURL -----							1	
	0413559-9-279	COVER-LOWER INSTRUMENT PANEL BLACK -----							1	
		ATTACHING PARTS -----								
	S1021Z6-8	SCREW -----							6	
		*-----								
-30	0460219-1	COVER-FLAP INDICATOR -----							1	
		ATTACHING PARTS -----								
	S1021A4-6B	SCREW -----							2	
		*-----								
-31	0413616-1-C12	COVER-MIKE & PHONE ELM BURL -----							1	K L H
	0413616-1-279	COVER-MIKE & PHONE BLACK -----							1	
-32	0413618-1	PLUG BUTTON -----							5	
-33	0413554-1-A59 %	COVER ASSY-RADIO CUTOFF RH LT GREY -----							1	G H
	0413554-1-E83 %	COVER ASSY-RADIO CUTOFF RH GREY -----							1	
	0413554-1-279 %	COVER ASSY-RADIO CUTOFF RH BLACK -----							1	
	S2092-3	FASTENER-HOOK BKI -----							AR	
-34	0413615-1-A59 %	COVER-EGT & ACCELEROMETER LT GRAY -----							1	G H
	0413615-1-E83	COVER-EGT & ACCELEROMETER GREY -----							1	
	0413615-1-279 %	COVER-EGT & ACCELEROMETER BLACK -----							1	
		ATTACHING PARTS -----								
-35	0413613-1-A59	NUT LT GRAY -----							2	G H
	0413613-1-E83	NUT GREY -----							2	
	0413613-1-279	NUT BLACK -----							2	
		*-----								

CONTINUED ON NEXT PAGE

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
52B-36 -37	0413569-1	BRACKET ASSY-EGT & ACCELEROMETER -----	1	
	C668501-0213	INDICATOR-EXHAUST GAS TEMPERATURE -----	1	
	AN515B6R10	ATTACHING PARTS -----	4	
	AN936A6B	SCREW -----	4	
	AN340B6	WASHER -----	4	
		NUT -----	4	
		*-----		
	C668501-0206	LEAD-EXHAUST GAS TEMPERATURE -----	1	
	C668501-0204	PROBE-EXHAUST GAS TEMPERATURE -----	1	
-38	0413572-1	ADAPTOR-EXHAUST GAS TEMPERATURE -----	1	
		ATTACHING PARTS -----		
	AN515B6R6	SCREW -----	4	
	AN936A6B	WASHER -----	4	
	AN340B6	NUT -----	4	
		*-----		
-39	1513190-61-A59	CAP-LT GREY USED WHEN EGT OR ACCELEROMETER IS INSTALLED -	AR	G
	1513190-61-E83	CAP-GREY USED WHEN EGT OR ACCELEROMETER IS INSTALLED ----	AR	H
	1513190-61-279	CAP-BLACK USED WHEN EGT OR ACCELEROMETER IS INSTALLED ---	AR	
	1513190-66-A59	CAP-LT GREY USED WHEN INSTRUMENTS ARE NOT INSTALLED -----	AR	G
	1513190-66-E83	CAP-GREY USED WHEN INSTRUMENTS ARE NOT INSTALLED -----	AR	H
	1513190-66-279	CAP-BLACK USED WHEN INSTRUMENTS ARE NOT INSTALLED -----	AR	
-40	C661015-0102	ACCELEROMETER -----	1	D
		ATTACHING PARTS -----		
	AN515B8R10	SCREW -----	3	
	AN936A8	WASHER -----	3	
	AN340B8	NUT -----	3	
		*-----		
-41	0413470-1-279	COVER-ACCELEROMETER -----	1	D
		ATTACHING PARTS -----		
	S1021Z4-6	SCREW -----	4	
	NAS446-1-1	NUT -----	4	
		*-----		
-42	0413491-1	BRACKET-ACCELEROMETER -----	1	D
		ATTACHING PARTS -----		
	AN515B8R6	SCREW -----	3	
	MS21044N08	NUT -----	3	
		*-----		
-43	0413509-1	ADAPTER-ACCELEROMETER -----	1	D
		ATTACHING PARTS -----		
	AN515B8R10	SCREW -----	3	
	AN936A8	WASHER -----	3	
	AN340B8	NUT -----	3	
		*-----		
-44	0413553-22	COVER ASSY-RADIO CUTOUT 9.24 IN LG BLACK -----	AR	
	0413553-24	COVER ASSY-RADIO CUTOUT 6.24 IN LG BLACK -----	AR	
	0413553-26	COVER ASSY-RADIO CUTOUT 3.24 IN LG BLACK -----	AR	
	0413553-28	COVER ASSY-RADIO CUTOUT 6.73 IN LG BLACK -----	AR	
	0413553-30	COVER ASSY-RADIO CUTOUT 4.22 IN LG BLACK -----	AR	
	0413553-32	COVER ASSY-RADIO CUTOUT 2.25 IN LG BLACK -----	AR	
	0413553-34	COVER ASSY-RADIO CUTOUT 4.84 IN LG BLACK -----	AR	
	0413553-36	COVER ASSY-RADIO CUTOUT 2.92 IN LG BLACK -----	AR	
	0413553-38	COVER ASSY-RADIO CUTOUT 1.82 IN LG BLACK -----	AR	
	0413553-40	COVER ASSY-RADIO CUTOUT .39 IN LG BLACK -----	AR	
-45	0415029-1	GLARESHIELD ASSY-INSTRUMENT PANEL -----	1	
		ATTACHING PARTS -----		
	S1023A6-16B	SCREW -----	7	
	S2255-1	WASHER -----	7	
		*-----		
-46	0760131-6	SUPPORT & COLLAR-CONTROL LOCK LH -----	1	
-47	0760131-5	SUPPORT & COLLAR-CONTROL LOCK RH -----	1	
		ATTACHING PARTS -----		
	AN515-6R10	SCREW -----	4	
	AN960-6L	WASHER -----	4	
	MS21044N06	NUT -----	4	
		*-----		
-48	C661071-0101	ALTIMETER-20,000 FT SENSITIVE -----	1	B
	C661071-0102	ALTIMETER-20,000 FT FEET/MILLIBARS -----	1	
	C661025-0102	ALTIMETER-35,000 FT FEET/MILLIBARS -----	1	
	SEE FIG 78	ENCODING & DUAL ALTIMETER INSTL -----	AR	
CONTINUED ON NEXT PAGE				

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
52B-49	1213004-1	RETAINER-AIRCRAFT IDENTIFICATION NUMBER -----	1	
		ATTACHING PARTS		
	S102276-8	SCREW -----	2	
	NAS446-2	NUT -----	2	
		-----*		
	SEE FIG 2	PLACARDS -----	AR	
-50	C664508-0102	CLOCK-ELECTRIC -----	1	
	C664511-0102	CLOCK-DIGITAL -----	1	
		ATTACHING PARTS		
	AN515B6R12	SCREW ELECTRIC CLOCK -----	2	
	MS35206-228	SCREW DIGITAL CLOCK -----	3	
		-----*		
	MS25231-1819	LIGHT-DIGITAL CLOCK -----	1	
	S2413-1	SOCKET-LIGHT -----	1	
	1513190-68-A59	CAP-LT GREY USED WHEN CLOCK IS NOT INSTALLED -----	AR	G
	1513190-68-E83	CAP-GREY USED WHEN CLOCK IS NOT INSTALLED -----	AR	H
	1513190-68-279	CAP-BLACK USED WHEN CLOCK IS NOT INSTALLED -----	AR	
-51	C661076-0102 @*	GYRO-HORIZON -----	1	
	C661076-0103 *	GYRO-HORIZON -----	1	
	C661076-0105 *	GYRO-HORIZON -----	1	
	C661076-0107 @*	GYRO-HORIZON -----	1	
	C661076-0108 *	GYRO-HORIZON -----	1	
		ATTACHING PARTS		
	AN515B6R6	SCREW -----	4	
		-----*		
	1513190-26-A59	CAP-LT GREY USED WHEN GYRO IS NOT INSTALLED -----	AR	G
	1513190-26-E83	CAP-GREY USED WHEN GYRO IS NOT INSTALLED -----	AR	H
	1513190-26-279	CAP-BLACK USED WHEN GYRO IS NOT INSTALLED -----	AR	
-52	C661075-0103 **	GYRO-DIRECTIONAL -----	1	
	C661075-0101 **	GYRO-DIRECTIONAL -----	1	
	C661075-0106 **	GYRO-DIRECTIONAL -----	1	
	C661075-0108 **	GYRO-DIRECTIONAL -----	1	
	C661075-0104 **	GYRO-DIRECTIONAL -----	1	
		ATTACHING PARTS		
	AN515B6R8	SCREW -----	4	
		-----*		
	1513190-66-A59	CAP-LT GREY USED WHEN GYRO IS NOT INSTALLED -----	AR	G
	1513190-66-E83	CAP-GREY USED WHEN GYRO IS NOT INSTALLED -----	AR	H
	1513190-66-279	CAP-BLACK USED WHEN GYRO IS NOT INSTALLED -----	AR	
-53	C668509-0101	GAGE-SUCTION -----	1	
	1513190-63-A59	CAP-LT GREY USED WHEN GAGE IS NOT INSTALLED -----	AR	G
	1513190-63-E83	CAP-GREY USED WHEN GAGE IS NOT INSTALLED -----	AR	H
	1513190-63-279	CAP-BLACK USED WHEN GAGE IS NOT INSTALLED -----	AR	
-54	S2519-2	LIGHT ASSY-LOW VACUUM -----	1	
-55	C661064-0107	INDICATOR-AIRSPEED 152 & F152 ONLY -----	1	E
	C661064-0216 @	INDICATOR-AIRSPEED A152 & FA152 ONLY -----	1	F
		ATTACHING PARTS		
	AN515B6R10	SCREW -----	4	
		-----*		
		TRUE AIRSPEED INSTL -----	NP	
-56	C661065-0105 @	INDICATOR-TRUE AIRSPEED 152 & F152 ONLY -----	1	E
	C661065-0216	INDICATOR-TRUE AIRSPEED A152 & FA152 ONLY -----	1	F
		ATTACHING PARTS		
-57	AN515B6R16	SCREW -----	4	
-58	0700162-1	RETAINER ASSY -----	1	
-59	S2234-1	RING ASSY 152 & F152 ONLY -----	1	E
	S2234-2	RING ASSY A152 & FA152 ONLY -----	1	F
-60	0700162-3	SPACER .050 THICK -----	AR	
	0700162-4	SPACER .060 THICK -----	AR	
	0700162-6	SPACER .071 THICK -----	AR	
	0700162-7	SPACER .040 THICK -----	AR	
		-----*		
-61	C661003-0506 @	INDICATOR-TURN COORDINATOR 10 TO 30 VOLT -----	1	
	C661003-0507	INDICATOR-TURN COORDINATOR 24 VOLT ALTERNATE -----	1	
	S1303-2	INDICATOR-TURN & BANK -----	1	F
		ATTACHING PARTS		
	AN515B6R16	SCREW -----	4	F
	AN936A6B	WASHER -----	4	F
		-----*		
	1513190-26-A59	CAP-LT GREY USED WHEN INDICATOR IS NOT INSTALLED -----	AR	G
	1513190-26-E83	CAP-GREY USED WHEN INDICATOR IS NOT INSTALLED -----	AR	H
	1513190-26-279	CAP-BLACK USED WHEN INDICATOR IS NOT INSTALLED -----	AR	

CONTINUED ON NEXT PAGE

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
52B-62	C661080-0101	INDICATOR-VERTICAL SPEED -----	1	
	AN507B632R12	ATTACHING PARTS -----		
	S1066B1	SCREW -----	3	
		WASHER -----	3	
		---*---		
	1513190-26-A59	CAP-LT GREY USED WHEN INDICATOR IS NOT INSTALLED -----	AR	G
	1513190-26-E83	CAP-GREY USED WHEN INDICATOR IS NOT INSTALLED -----	AR	H
	1513190-26-279	CAP-BLACK USED WHEN INDICATOR IS NOT INSTALLED -----	AR	
-63	C668020-0120	TACHOMETER -----	1	
		ATTACHING PARTS -----		
	AN515B8R10	SCREW -----	4	
	NAS43DD3-22	SPACER -----	4	
	AN936A8	WASHER -----	4	
	AN340B8	NUT -----	4	
		---*---		
	S1605-12	SHAFT-TACHOMETER -----	1	
-64	C664503-0101	HOURLY -----	1	
		ATTACHING PARTS -----		
	AN515B6R12	SCREW -----	4	
	NAS43DD1-26	SPACER -----	4	
	AN936A6	WASHER -----	4	
	AN340B6	NUT -----	4	
		---*---		
	1513190-62-A59	CAP-LT GREY USED WHEN HOURLY IS NOT INSTALLED -----	AR	G
	1513190-62-E83	CAP-GREY USED WHEN HOURLY IS NOT INSTALLED -----	AR	H
	1513190-62-279	CAP-BLACK USED WHEN HOURLY IS NOT INSTALLED -----	AR	
-65	S1320-5	AMMETER-60 AMP -----	1	
	0413427-3	SPACER-AMMETER -----	1	
-66	S2135-2	LIGHT ASSY-LOW VOLTAGE -----	1	
	S2519-2	LIGHT ASSY-LOW VOLTAGE ALTERNATE -----	1	
-67		INSTRUMENT CLUSTER STEWART-WARNER -----	NP	
	C669562-0113 ***	INSTRUMENT CLUSTER ROCH STD RANGE TANK -----	1	
	C669562-0112 ***	INSTRUMENT CLUSTER ROCH LONG RANGE TANK -----	1	
		ATTACHING PARTS -----		
-68	NAS43DD1-64	SPACER -----	2	
-69	AN936A6	WASHER -----	2	
-70	AN340B6	NUT -----	2	
		---*---		
-71		GAGE-FUEL STEWART-WARNER -----	NP	
	6246-00479 ***	GAGE-FUEL ROCH STD RANGE TANK -----	1	
	6246-00480 ***	GAGE-FUEL ROCH LONG RANGE TANK -----	1	
-72		INSTRUMENT CLUSTER STEWART-WARNER -----	NP	
	C669564-0101 ***	INSTRUMENT CLUSTER ROCHESTER -----	1	
		ATTACHING PARTS -----		
-73	NAS43DD1-64	SPACER -----	2	
-74	AN936A6	WASHER -----	2	
-75	AN340B6	NUT -----	2	
		---*---		
-76		GAGE-OIL PRESSURE STEWART-WARNER -----	NP	
	2646-00053 ***	GAGE-OIL PRESSURE ROCHESTER -----	1	
-77		GAGE-OIL TEMP STEWART-WARNER -----	NP	
	6246-00370 ***	GAGE-OIL TEMP ROCHESTER -----	1	
-78	S1239-46	CONTROL-CABIN AIR -----	1	
-79	S1239-47	CONTROL-CABIN HEAT -----	1	
-80	9862010-3	CONTROL-MIXTURE -----	1	
-81	9863056-1	CONTROL-THROTTLE -----	1	
	S1450-19A18-040	WASHER BETWEEN PANEL COVER & CONTROL -----	1	
-82	S1230-20	CONTROL-CARBURETOR HEAT -----	1	
-83	C291502-0106	PRIMER ASSY-FUEL -----	1	
	S1974-1	KNOB-PRIMER -----	1	
	NAS1593-012	O RING -----	2	
-84	S1239-49	CONTROL-PARKING BRAKE -----	1	
-85	SEE FIG 53	SWITCH & CIRCUIT BREAKER INSTL -----	1	
-86	SEE FIG 76	ELEVATOR TRIM CONTROL INSTL -----	1	
-87	SEE FIG 74	FLAP POSITION INDICATOR INSTL -----	1	
-88	SEE FIG 54A	MAP CASE INSTL -----	1	
-89		RADIO INSTL SEE CESSNA AVIONICS SERVICE/PARTS MANUAL -----	AR	
	1513190-66-A59	CAP-LT GREY USED WHEN RADIO IS NOT INSTALLED -----	AR	G
	1513190-66-E83	CAP-GREY USED WHEN RADIO IS NOT INSTALLED -----	AR	H
	1513190-66-279	CAP-BLACK USED WHEN RADIO IS NOT INSTALLED -----	AR	
CONTINUED ON NEXT PAGE				

152 & A152 Parts Catalog


FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION							UNITS PER ASSY	USABLE ON CODE
		1	2	3	4	5	6	7		
52B-90	0513292-1	PROTECTOR ASSY-LH -----							1	
	S102176-6	ATTACHING PARTS							3	
-91	0513292-2	SCREW -----							1	
	S102176-6	PROTECTOR ASSY-RH -----							2	
		ATTACHING PARTS								
		SCREW -----								
		-----*								
		NOTE. % THESE COVERS ARE NOT APPLICABLE TO								
		AIRCRAFT EQUIPPED WITH INSTRUMENT								
		POST LIGHTING-FOR POST LIGHTED COVERS.								
		SEE FIGURE 53A.								
		NOTE. * THESE GYROS ARE PHYSICALLY & FUNCTIONALLY								
		INTERCHANGEABLE.								
		NOTE. ** THESE GYROS ARE PHYSICALLY & FUNCTIONALLY								
		INTERCHANGEABLE.								
		NOTE. @ AN EXCHANGE PART IS ALSO AVAILABLE,								
		REFER TO THE MASTER PRICE LIST.								
		NOTE. @@ WHEN INITIALLY REPLACING THIS PART, ORDER								
		SK152-21 (FOR STD RANGE TANK) OR SK152-22								
		(FOR LONG RANGE TANK).								
		NOTE. %% WHEN INITIALLY REPLACING THIS PART, ORDER								
		SK152-19 (FOR STD RANGE TANK) OR SK152-20								
		(FOR LONG RANGE TANK).								
		NOTE. *** THIS PART IS FOR AIRPLANES THAT HAVE								
		INCORPORATED SK152-19, SK152-20, SK152-21								
		OR SK152-22 SERVICE KITS.								
		NOTE. @@@ WHEN INITIALLY REPLACING THIS PART,								
		ORDER SK152-23.								
		NOTE. %%% THIS PART WAS INSTALLED AS AN ALTERNATE								
		OR HAS BEEN INSTALLED ON AIRPLANES THAT								
		HAVE INCORPORATED SK152-23.								
		A---152 SERIAL 15285595 & ON								
		F152 SERIAL F15201929 & ON								
		A152 SERIAL A1521015 & ON								
		FA152 SERIAL FA1520383 & ON								
		B---152 SERIAL 15285595 & ON								
		A152 SERIAL A1521015 & ON								
		C---F152 SERIAL F15201929 THRU F15201943								
		FA152 SERIAL FA1520383 THRU FA1520387								
		D---152 SERIAL 15285595 & ON								
		A152 SERIAL A1521015 & ON								
		FA152 SERIAL FA1520383 & ON								
		E---152 SERIAL 15285595 & ON								
		F152 SERIAL F15201929 & ON								
		F---A152 SERIAL A1521015 & ON								
		FA152 SERIAL FA1520383 & ON								
		G---152 SERIAL 15285595 THRU 15285833								
		F152 SERIAL F15201929 THRU F15201943								
		A152 SERIAL A1521015 THRU A1521025								
		FA152 SERIAL FA1520383 THRU FA1520387								
		H---152 SERIAL 15285834 & ON								
		F152 SERIAL F15201944 & ON								
		A152 SERIAL A1521026 & ON								
		FA152 SERIAL FA1520388 & ON								
		J---152 SERIAL 15285595 THRU 15285833								
		A152 SERIAL A1521015 THRU A1521025								
		K---152 SERIAL 15285834 & ON								
		A152 SERIAL A1521026 & ON								
		L---F152 SERIAL F15201944 & ON								
		FA152 SERIAL FA1520388 & ON								

152 & A152 Parts Catalog


FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
53 -		SWITCH & CIRCUIT BREAKER INSTALLATION -----	NP	
- 1	S1994-1-1	SWITCH-MASTER -----	1	
	S1843-1	BEZEL-MASTER SWITCH -----	1	
- 2	C292501-0104 *	KIT-IGNITION SWITCH -----	1	
	0713221-1	COVER-IGNITION SWITCH -----	1	
- 3	S1995-4	KNOB ASSY-VARIABLE RESISTOR -----	1	
		ATTACHING PARTS -----		
	AN565B2H3	SCREW-SET -----	1	
		-----*		
	S2091-7	RESISTOR ASSY-VARIABLE TANDEM -----	1	
	S2000B271J	RESISTOR-VARIABLE -----	1	C
	S2000C201J	RESISTOR-VARIABLE -----	1	D
- 4	S2160-1	SWITCH -----	5	
	S2161-1	COVER-SWITCH CUTOUT -----	AR	
- 5	S2160-4	SWITCH-LANDING & TAXI LIGHT INSTL -----	1	
	S2160-5	SWITCH-LANDING LIGHT INSTL ONLY -----	1	K
	S2161-2	COVER-SWITCH CUTOUT -----	AR	
- 6	1270704-5	BUS BAR -----	1	A
- 6A	0470423-4	BUS BAR -----	1	G
- 6B	0470423-6	BUS BAR ASSY -----	1	J
	0713821-4	INSULATION STRIP -----	1	
- 7	1270704-1	BUS BAR -----	1	A
- 7A	0470423-2	BUS BAR -----	1	B
	0713821-4	INSULATION STRIP -----	1	
- 8	S1707-60	CIRCUIT BREAKER-60 AMP -----	1	E
	S1232-60	CIRCUIT BREAKER-60 AMP -----	1	F
	2070033-3	SPACER -----	1	A
	55-008B	NUT WDF -----	1	
CONTINUED ON NEXT PAGE				

152 & A152 Parts Catalog

Instruments (Cont)

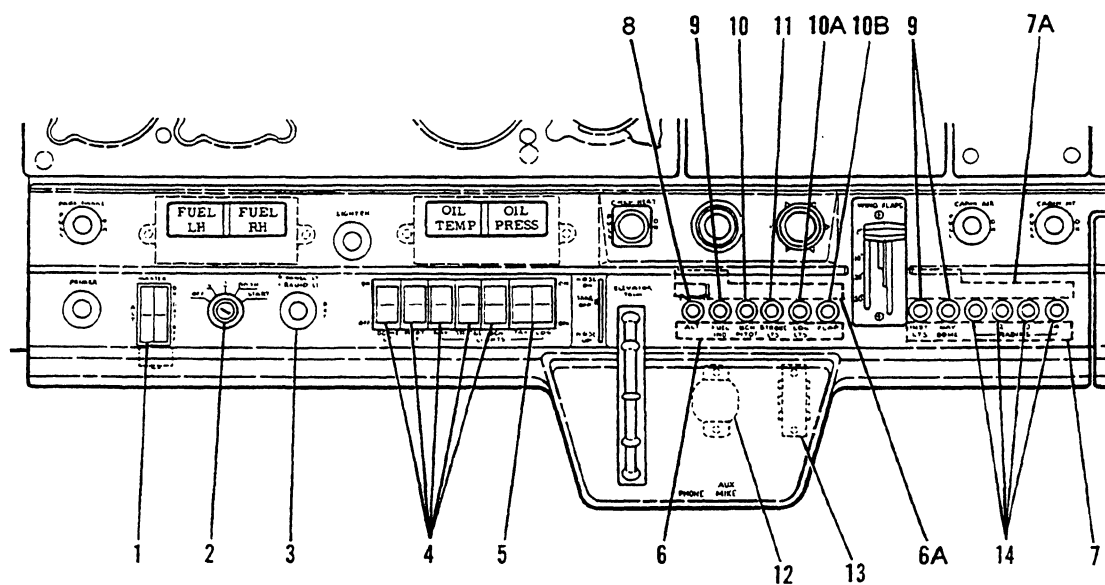

1978 THRU 1980

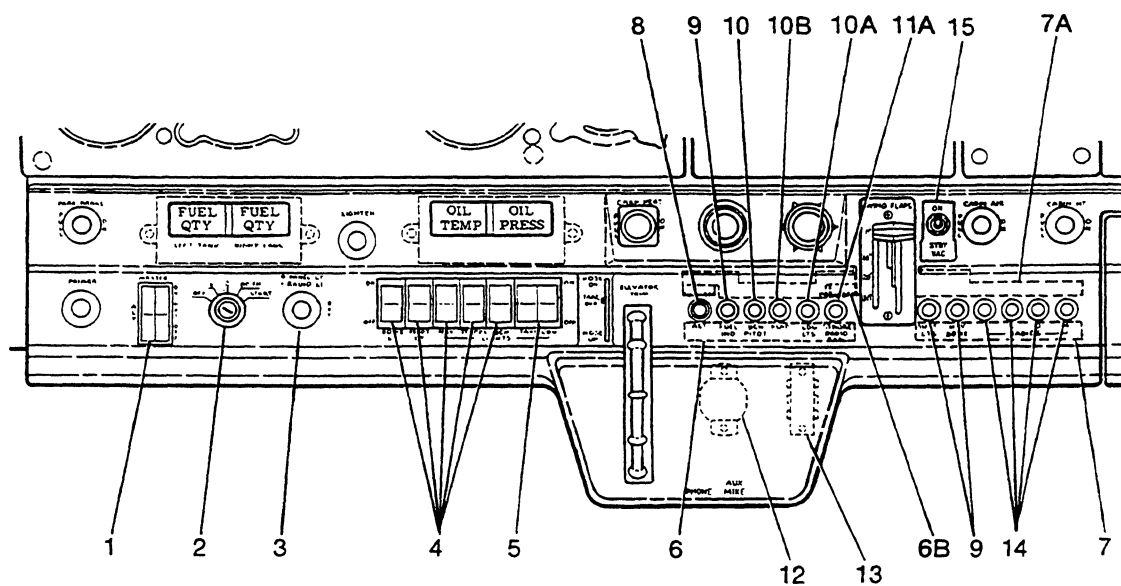

1981 & ON


Figure 53. Switch & Circuit Breaker Installation

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
53 - 9	S1360-5L	CIRCUIT BREAKER-5 AMP -----	3	K L E F H
-10	S1360-15L	CIRCUIT BREAKER-15 AMP -----	1	
-10A	S1360-15L	CIRCUIT BREAKER-15 AMP -----	1	
	S1360-20L	CIRCUIT BREAKER-20 AMP -----	1	
-10B	S1360-15L	CIRCUIT BREAKER-15 AMP -----	1	
	S1360-10L	CIRCUIT BREAKER-10 AMP -----	1	
-11	S1360-5L	CIRCUIT BREAKER-5 AMP -----	1	
	S2122-1	NUT-CIRCUIT BREAKER ATTACH -----	AR	
-11A	S1232-5	CIRCUIT BREAKER-5 AMP -----	1	
	2070033-3	SPACER -----	1	
	55-008B	NUT WDF -----	1	J J J
-12	CA5	CIRCUIT BREAKER-ALTERNATOR FIELD -----	1	
		ATTACHING PARTS -----		
	AN515-6R10	SCREW -----	2	
	AN960-8L	WASHER -----	2	
		-----*		
-13	34003-817	TERMINAL BLOCK -----	1	
		ATTACHING PARTS -----		
	AN515-6R10	SCREW -----	2	
		-----*		
-14		RADIO INSTL SEE CESSNA AVIONICS SERVICE/PARTS MANUAL -----	AR	M M
-15	CM3589-15	SWITCH/CIRCUIT BREAKER-15 AMP -----	1	
	S2122-1	NUT -----	1	
NOTE. *THIS KIT ALSO INCLUDES DOORLOCK & KEYS.				
A---152 SERIAL 15279406 THRU 15282031 F152 SERIAL F15201429 THRU F15201528 A152 SERIAL A1520735 THRU A1520808 FA152 SERIAL FA1520337 THRU FA1520347				
B---152 SERIAL 15282032 & ON F152 SERIAL F15201529 & ON A152 SERIAL A1520809 & ON FA152 SERIAL FA1520348 & ON				
C---152 SERIAL 15279406 THRU 15282032 F152 SERIAL F15201429 THRU F15201528 A152 SERIAL A1520735 THRU A1520809 FA152 SERIAL FA1520337 THRU FA1520346				
D---152 SERIAL 15282033 & ON F152 SERIAL F15201529 & ON A152 SERIAL A1520810 & ON FA152 SERIAL FA1520347 & ON				
E---152 SERIAL 15279406 THRU 15283591 F152 SERIAL F15201429 THRU F15201673 A152 SERIAL A1520735 THRU A1520878 FA152 SERIAL FA1520337 THRU FA1520357				
F---152 SERIAL 15283592 & ON F152 SERIAL F15201674 & ON A152 SERIAL A1520879 & ON FA152 SERIAL FA1520358 & ON				
G---152 SERIAL 15282032 THRU 15284541 F152 SERIAL F15201529 THRU F15201808 A152 SERIAL A1520809 THRU A1520943 FA152 SERIAL FA1520348 THRU FA1520372				
H---152 SERIAL 15279406 THRU 15284541 F152 SERIAL F15201429 THRU F15201808 A152 SERIAL A1520735 THRU A1520943 FA152 SERIAL FA1520337 THRU FA1520372				
J---152 SERIAL 15284542 & ON F152 SERIAL F15201809 & ON A152 SERIAL A1520944 & ON FA152 SERIAL FA1520373 & ON				
K---152 SERIAL 15279406 THRU 15285833 F152 SERIAL F15201429 THRU F15201943 A152 SERIAL A1520735 THRU A1521025 FA152 SERIAL FA1520337 THRU FA1520387				
L---152 SERIAL 15285834 & ON F152 SERIAL F15201944 & ON A152 SERIAL A1521026 & ON FA152 SERIAL FA1520388 & ON				
M---152 SERIAL 15285940 & ON F152 SERIAL F15201953 & ON A152 SERIAL A1521028 & ON FA152 SERIAL FA1520388 & ON				

152 & A152 Parts Catalog

Instruments (Cont)

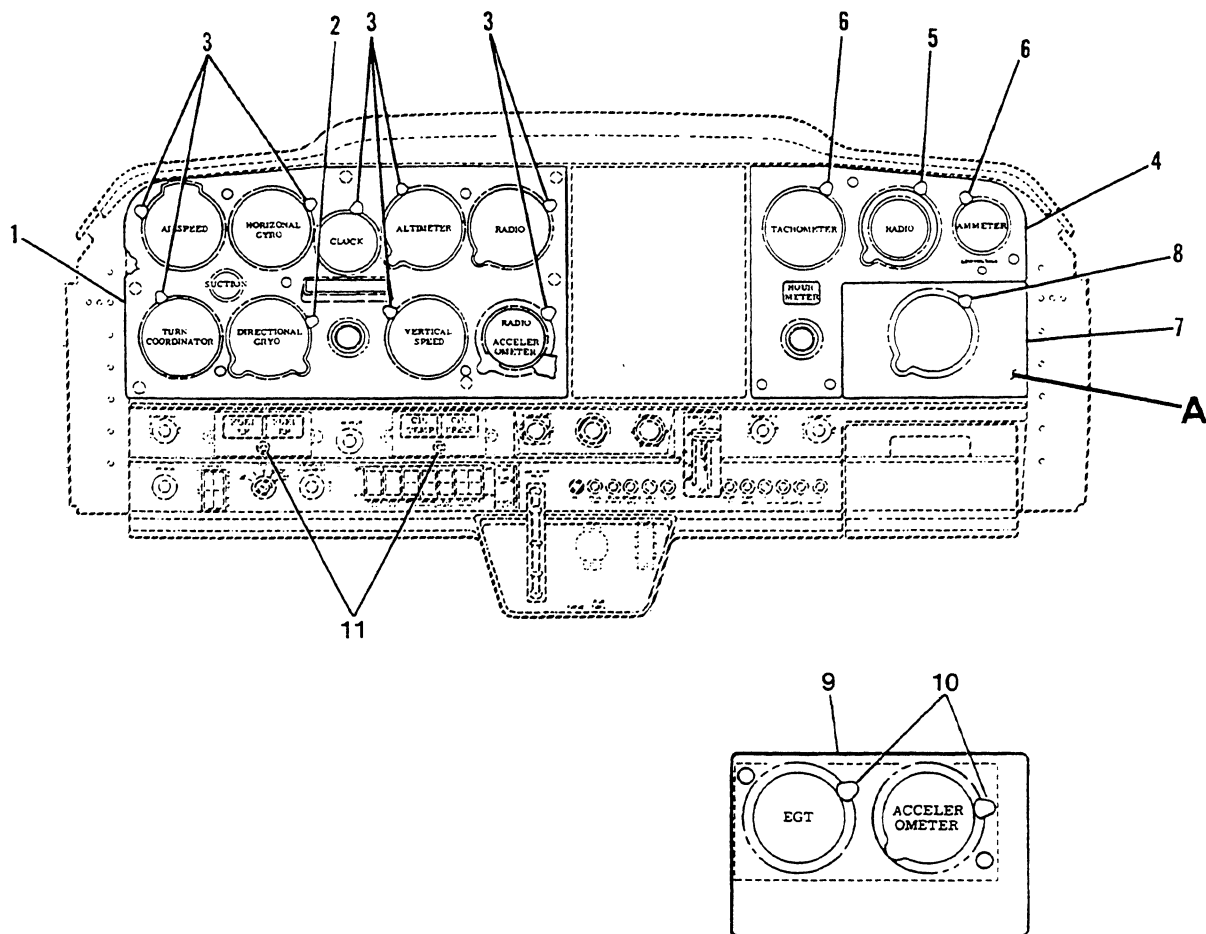

CODE B

Detail **A**

152 SERIAL 15282032 THRU 15285594
F152 SERIAL F15201529 THRU F15201928
A152 SERIAL A1520809 THRU A1521014
FA152 SERIAL FA1520348 THRU FA1520382



Figure 53A. Post Lighted Instrument Panel Installation

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION							UNITS PER ASSY	USABLE ON CODE
		1	2	3	4	5	6	7		
53A-		POST LIGHTED INSTRUMENT PANEL INSTALLATION 24 VOLT -----							NP	A
- 1	0413577-3 <	COVER ASSY-POST LIGHTED LH -----							1	C
	0413577-3-A59	COVER ASSY-POST LIGHTED LH LT GREY -----							1	E
	0413577-3-279	COVER ASSY-POST LIGHTED LH BLACK -----							1	E
- 2	2106002-14-A58	POST LIGHT ASSY LT GREY -----							1	
	2106002-14-156	POST LIGHT ASSY BLACK -----							1	B
- 3	2106002-6-A58	POST LIGHT ASSY LT GREY -----							8	
	2106002-6-156	POST LIGHT ASSY BLACK -----							8	B
	MS25237-327	BULB-POST LIGHT -----							1	
- 4	0413577-4 <	COVER ASSY-POST LIGHTED RH -----							1	C
	0413577-4-A59	COVER ASSY-POST LIGHTED RH LT GREY -----							1	E
	0413577-4-279	COVER ASSY-POST LIGHTED RH BLACK -----							1	E
- 5	2106002-14-A58	POST LIGHT ASSY LT GREY -----							1	
	2106002-14-156	POST LIGHT ASSY BLACK -----							1	B
- 6	2106002-6-A58	POST LIGHT ASSY LT GREY -----							2	
	2106002-6-156	POST LIGHT ASSY BLACK -----							2	B
	MS25237-327	BULB-POST LIGHT -----							1	
- 7	0413577-6 <	COVER ASSY-POSTLIGHTED RH -----							1	C
	0413577-6-A59	COVER ASSY-POST LIGHTED RH LT GREY -----							1	E
	0413577-6-279	COVER ASSY-POST LIGHTED RH BLACK -----							1	E
- 8	2106002-14-A58	POST LIGHT ASSY LT GREY -----							1	
	2106002-14-156	POST LIGHT ASSY BLACK -----							1	B
	MS25237-327	BULB-POST LIGHT -----							1	
- 9	0413577-11 <	COVER ASSY-POST LIGHTED RH -----							1	D
	0413577-11-A59	COVER ASSY-POST LIGHTED RH LT GREY -----							1	E
	0413577-11-279	COVER ASSY-POST LIGHTED RH BLACK -----							1	E
-10	2106002-14-A58	POST LIGHT ASSY LT GREY -----							2	B
	2106002-14-156	POST LIGHT ASSY BLACK -----							2	B
	MS25237-327	BULB-POST LIGHT -----							1	B
-11	1270479-16	LIGHT ASSY-INSTRUMENT CLUSTER -----							1	
	S1894-2	BULB-INSTRUMENT CLUSTER RED -----							2	
NOTE. <THIS PART NUMBER MUST HAVE A SECOND DASH NUMBER ADDED TO DENOTE COLOR. REFER TO HOW TO ORDER INTERIOR PARTS-PAGE IX A---152 SERIAL 15282032 THRU 15285594 F152 SERIAL F15201529 THRU F15201928 A152 SERIAL A1520809 THRU A1521014 FA152 SERIAL FA1520348 THRU FA1520382 B---152 SERIAL 15283592 THRU 15285594 F152 SERIAL F15201674 THRU F15201928 A152 SERIAL A1520879 THRU A1521014 FA152 SERIAL FA1520358 THRU FA1520382 C---152 SERIAL 15282032 THRU 15284541 F152 SERIAL F15201529 THRU F15201808 A152 SERIAL A1520809 THRU A1520943 FA152 SERIAL FA1520348 THRU FA1520372 D---152 SERIAL 15283592 THRU 15284541 F152 SERIAL F15201674 THRU F15201808 A152 SERIAL A1520879 THRU A1520943 FA152 SERIAL FA1520358 THRU FA1520372 E---152 SERIAL 15284542 THRU 15285594 F152 SERIAL F15201809 THRU F15201928 A152 SERIAL A1520944 THRU A1521014 FA152 SERIAL FA1520373 THRU FA1520382										

152 & A152 Parts Catalog

Instruments (Cont)

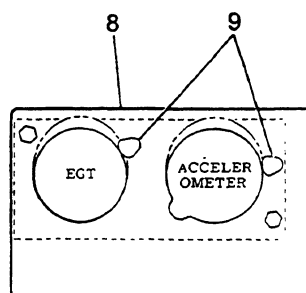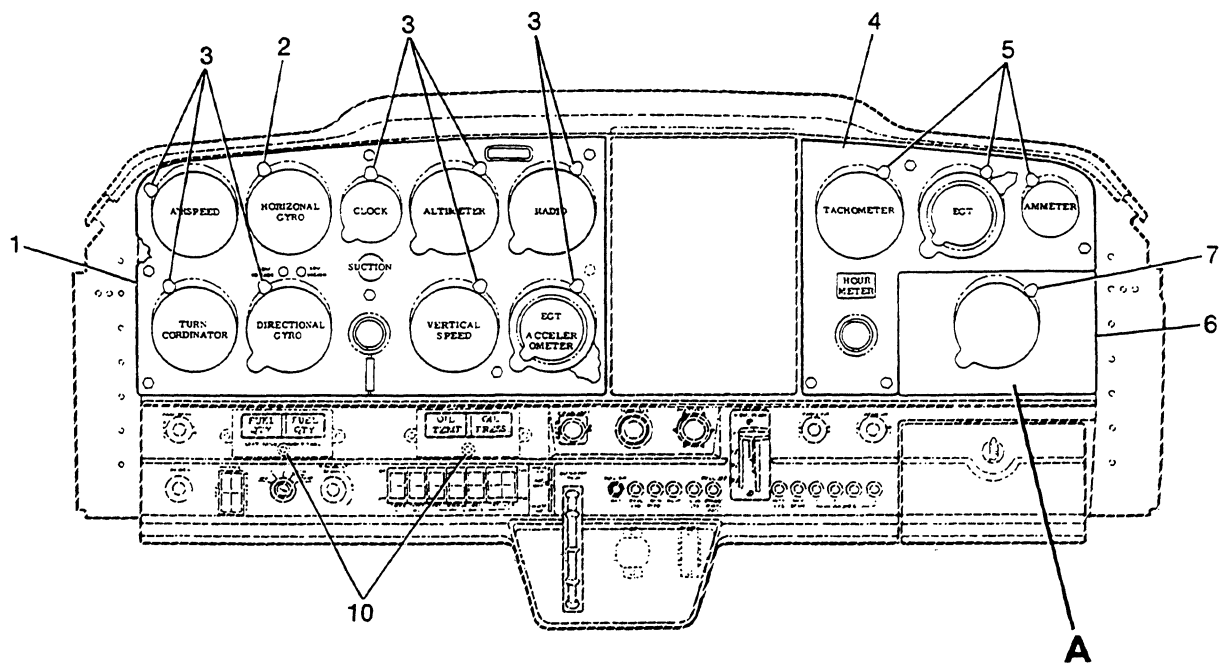

Detail **A**

152 SERIAL 15285595 & ON
F152 SERIAL F15201929 & ON
A152 SERIAL A1521015 & ON
FA152 SERIAL FA1520383 & ON


Figure 53B. Post Lighted Instrument Panel Installation

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
538-		POST LIGHTED INSTRUMENT PANEL INSTALLATION -----	NP	A
- 1	0413612-4-A59	COVER ASSY-POST LIGHTED LH LT GREY -----	1	B
	0413612-4-E83	COVER ASSY-POST LIGHTED LH GREY -----	1	C
	0413612-4-279	COVER ASSY-POST LIGHTED LH BLACK -----	1	
- 2	2106002-14-A58	POST LIGHT ASSY LT GREY -----	1	B
	2106002-14-E80	POST LIGHT ASSY GREY -----	1	C
	2106002-14-156	POST LIGHT ASSY BLACK -----	1	
- 3	2106002-6-A58	POST LIGHT ASSY LT GREY -----	8	B
	2106002-6-E80	POST LIGHT ASSY GREY -----	8	C
	2106002-6-156	POST LIGHT ASSY BLACK -----	8	
	MS25237-327	BULB-POST LIGHT -----	1	
- 4	0413612-5-A59	COVER ASSY-POST LIGHTED RH LT GREY -----	1	B
	0413612-5-E83	COVER ASSY-POST LIGHTED RH GREY -----	1	C
	0413612-5-279	COVER ASSY-POST LIGHTED RH BLACK -----	1	
- 5	2106002-6-A58	POST LIGHT ASSY LT GREY -----	3	B
	2106002-6-E80	POST LIGHT ASSY GREY -----	3	C
	2106002-6-156	POST LIGHT ASSY BLACK -----	3	
	MS25237-327	BULB-POST LIGHT -----	1	
- 6	0413612-6-A59	COVER ASSY-POST LIGHTED RH LT GREY -----	1	B
	0413612-6-E83	COVER ASSY POST LIGHTED RH GREY -----	1	C
	0413612-6-279	COVER ASSY POST LIGHTED RH BLACK -----	1	
- 7	2106002-14-A58	POST LIGHT ASSY LT GREY -----	1	B
	2106002-14-E80	POST LIGHT ASSY GREY -----	1	C
	2106002-14-156	POST LIGHT ASSY BLACK -----	1	
	MS25237-327	BULB-POST LIGHT -----	1	
- 8	0413612-7-A59	COVER ASSY-POST LIGHTED RH LT GREY -----	1	B
	0413612-7-E83	COVER ASSY-POST LIGHTED RH GREY -----	1	C
	0413612-7-279	COVER ASSY-POST LIGHTED RH BLACK -----	1	
- 9	2106002-6-A58	POST LIGHT ASSY LT GREY -----	2	B
	2106002-6-E80	POST LIGHT ASSY GREY -----	2	C
	2106002-6-279	POST LIGHT ASSY BLACK -----	2	
	MS25237-327	BULB-POST LIGHT -----	1	
-10	1270479-16	LIGHT ASSY-INSTRUMENT CLUSTER -----	1	
	S1894-2	BULB-INSTRUMENT CLUSTER RED -----	2	
A---152 SERIAL 15285595 & ON F152 SERIAL F15201929 & ON A152 SERIAL A1521015 & ON FA152 SERIAL FA1520383 & ON B---152 SERIAL 15285595 THRU 15285833 F152 SERIAL F15201929 THRU F15201943 A152 SERIAL A1521015 THRU A1521025 FA152 SERIAL FA1520383 THRU FA1520387 C---152 SERIAL 15285834 & ON F152 SERIAL F15201944 & ON A152 SERIAL A1521026 & ON FA152 SERIAL FA1520388 & ON				

152 & A152 Parts Catalog

Map Compartment

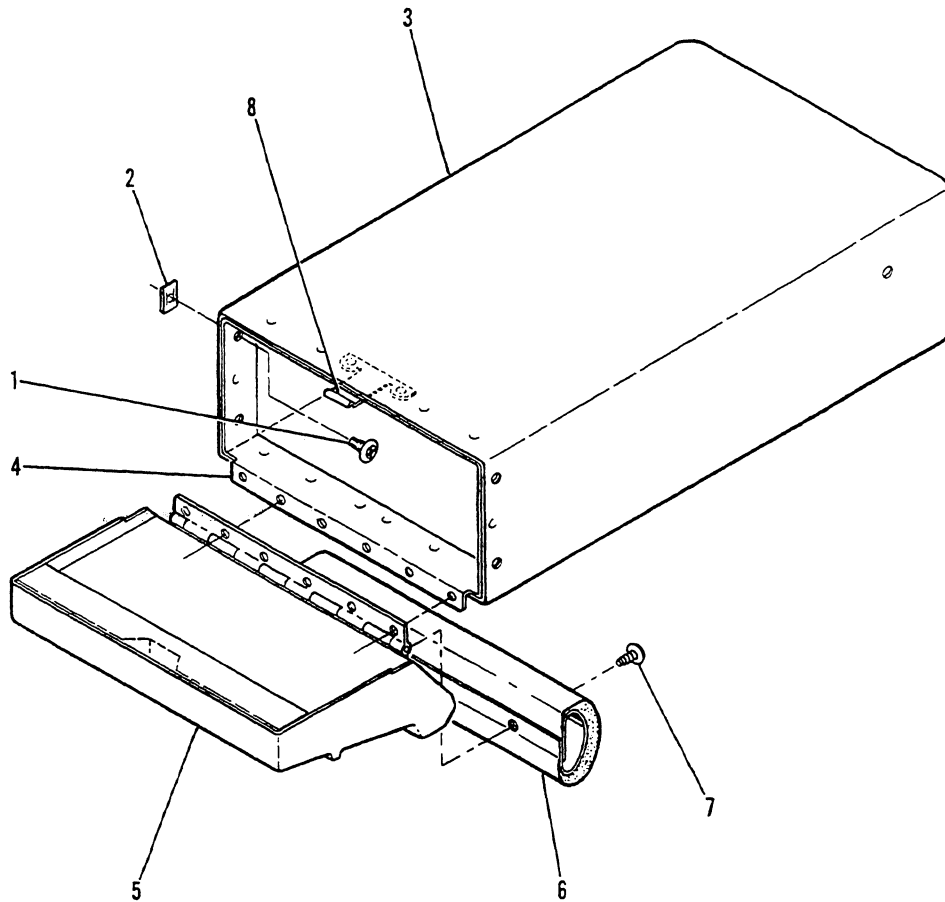

**152 SERIAL 15279406 THRU 15285161
F152 SERIAL F15201429 THRU F15201893
A152 SERIAL A1520735 THRU A1520983
FA152 SERIAL FA1520337 THRU FA1520377**


Figure 54. Map Case Installation

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
54 -		MAP CASE INSTALLATION -----	NP	D
	0413546-13 <	MAP CASE ASSY-REMOVABLE -----	1	A
	0413546-13-C12	MAP CASE ASSY-REMOVABLE ELM BURL -----	1	B
	0413546-13-279	MAP CASE ASSY-REMOVABLE BLACK -----	1	C
		ATTACHING PARTS		
- 1	S1021Z6-6	SCREW -----	4	
- 2	NAS446-2-3	NUT -----	4	
		-----*		
- 3	0513085-3	CASE-MAP CASE -----	1	
- 4	0413546-9	STIFFENER-MAP CASE -----	1	
- 5	0413546-14 <	DOOR ASSY-MAP CASE -----	1	A
	0413546-14-C12	DOOR ASSY-MAP CASE ELM BURL -----	1	B
	0413546-14-279	DOOR ASSY-MAP CASE BLACK -----	1	C
- 6	0513292-3	PROTECTOR ASSY -----	1	
		ATTACHING PARTS		
- 7	S1021Z6-6	SCREW -----	2	
		-----*		
- 8	0413546-10	LATCH-MAP CASE -----	1	
		NOTE. <THIS PART NUMBER MUST HAVE A SECOND DASH NUMBER ADDED TO DENOTE COLOR. REFER TO HOW TO ORDER INTERIOR PARTS-PAGE IX.		
		A---152 SERIAL 15279406 THRU 15284541 F152 SERIAL F15201429 THRU F15201808 A152 SERIAL A1520735 THRU A1520943 FA152 SERIAL FA1520337 THRU FA1520372 B---152 SERIAL 15284542 THRU 15285161 A152 SERIAL A1520944 THRU A1520983 C---F152 SERIAL F15201809 THRU F15201893 FA152 SERIAL FA1520373 THRU FA1520377 D---152 SERIAL 15279406 THRU 15285161 F152 SERIAL F15201429 THRU F15201893 A152 SERIAL A1520735 THRU A1520983 FA152 SERIAL FA1520337 THRU FA1520377		

152 & A152 Parts Catalog

Map Compartment (Cont)

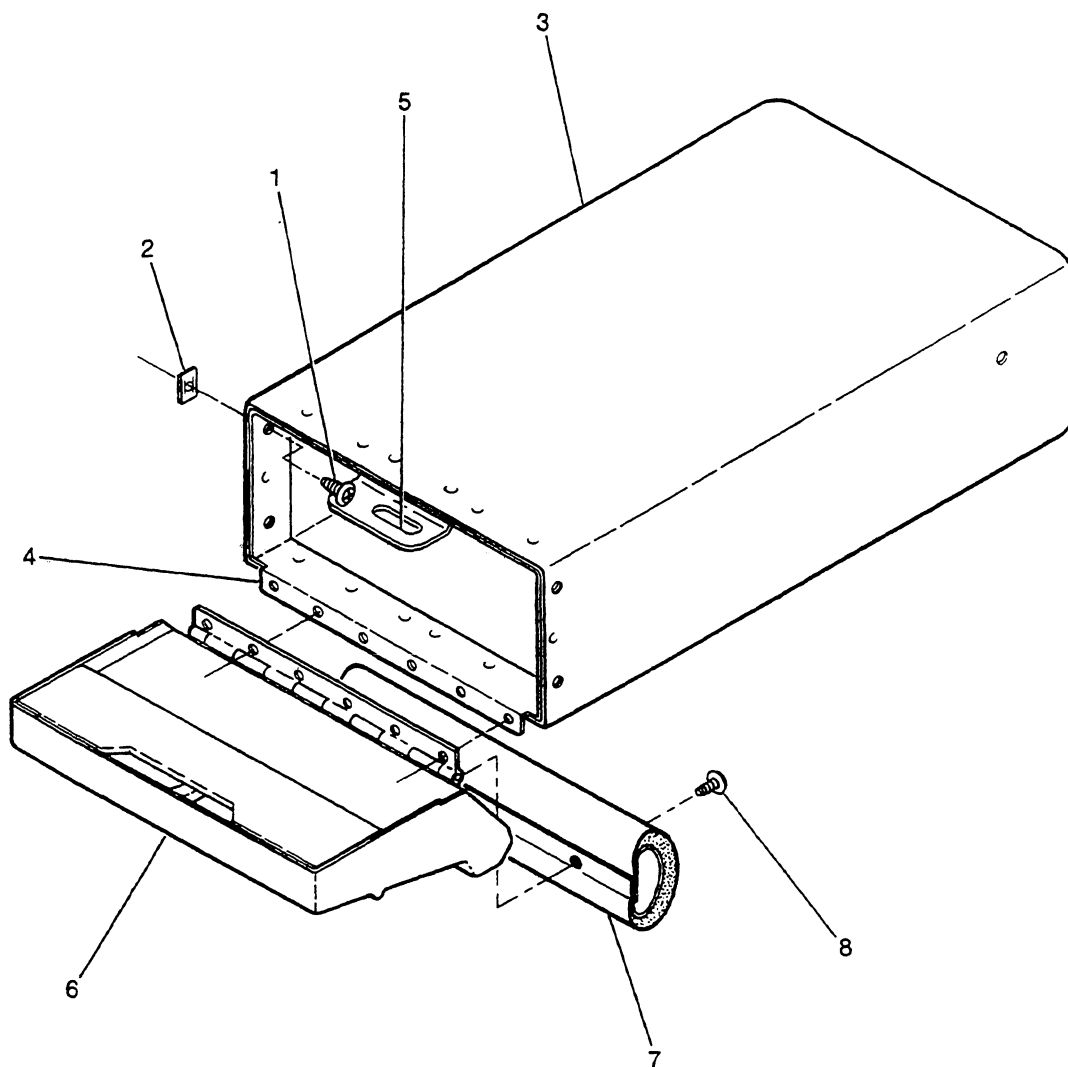

**152 SERIAL 15285162 & ON
F152 SERIAL F15201894 & ON
A152 SERIAL A1520984 & ON
FA152 SERIAL FA1520378 & ON**

Figure 54A. Map Case Installation

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION							UNITS PER ASSY	USABLE ON CODE
		1	2	3	4	5	6	7		
54A-		MAP CASE INSTALLATION -----							NP	A B C
	0413608-1-C12	MAP CASE ASSY -----							1	
	0413608-1-279	MAP CASE ASSY -----							1	
	- 1	ATTACHING PARTS							4	B C
	- 2	SCREW -----							4	
		NUT -----							4	
		---*---								
	- 3	CASE-MAP -----							1	
	- 4	STIFFENER-MAP CASE -----							1	
	- 5	LATCH-MAP CASE -----							1	
	- 6	DOOR ASSY-MAP CASE -----							1	
		DOOR ASSY-MAP CASE -----							1	
	- 7	DOOR ASSY-MAP CASE -----							1	
		PROTECTOR ASSY -----							1	
		ATTACHING PARTS								
	- 8	SCREW -----							2	
		---*---								
		A---152 SERIAL 15285162 & ON								
		F152 SERIAL F15201894 & ON								
		A152 SERIAL A1520984 & ON								
		FA152 SERIAL FA1520378 & ON								
		B---152 SERIAL 15285162 & ON								
		A152 SERIAL A1520984 & ON								
		C---F152 SERIAL F15201894 & ON								
		FA152 SERIAL FA1520378 & ON								

152 & A152 Parts Catalog

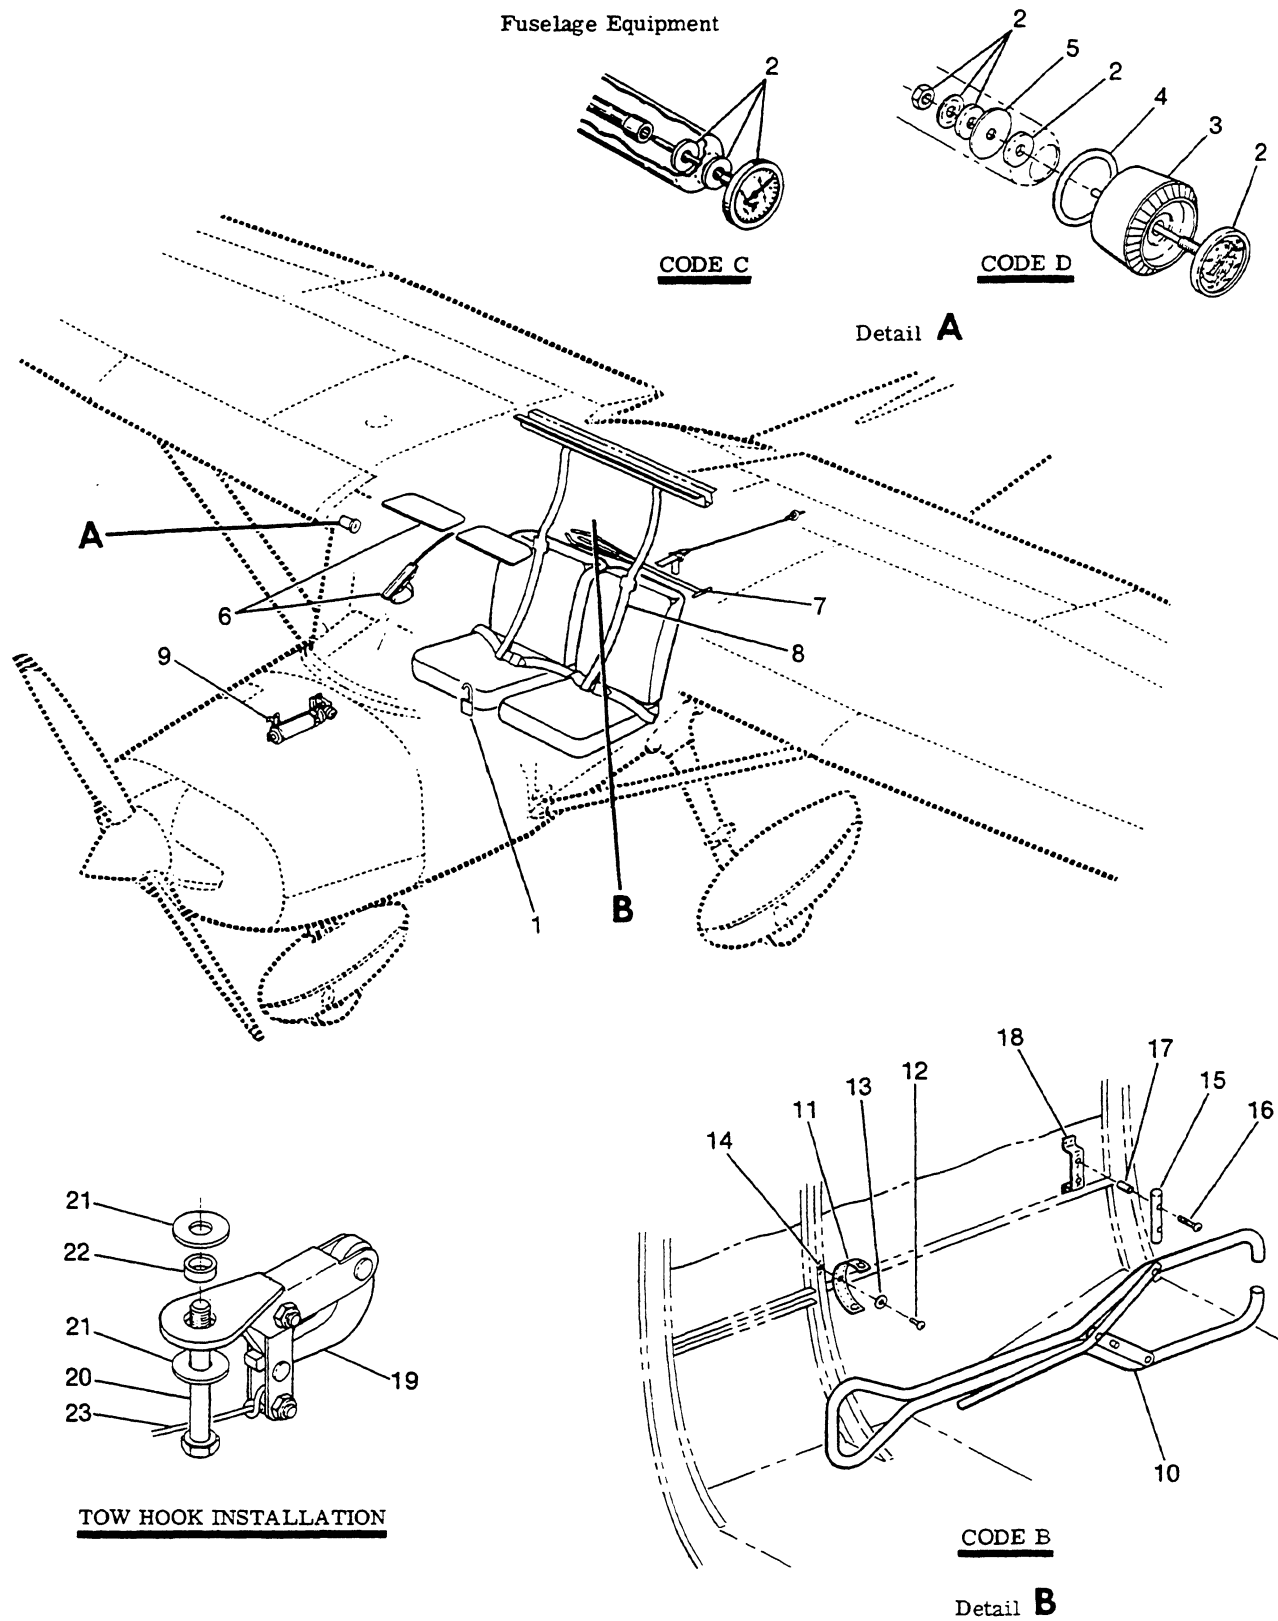


Figure 55. Fuselage Equipment Installation

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION							UNITS PER ASSY	USABLE ON CODE
		1	2	3	4	5	6	7		
55 -		FUSELAGE EQUIPMENT INSTALLATION -----							NP	
- 1	0460155-1	LOCK ASSY-CONTROL -----							1	A
	0460155-3	LOCK ASSY-CONTROL -----							1	B
- 2	C668507-0101	GAGE-OUTSIDE AIR TEMP INCLUDES 3 WASHERS & NUT -----							1	
- 3	0413599-1	KNOB ASSY -----							1	D
- 4	MS9068-136	O RING -----							1	D
- 5	S1450-5A24-040	WASHER -----							1	D
- 6	SEE FIG 57	COMPASS & SUN VISOR INSTL -----							1	
- 7	0501019-1	TOW BAR-NOSE WHEEL -----							1	A
- 8	SEE FIG 56	SHOULDER HARNESS & SEAT BELT INSTL -----							1	
- 9	SEE FIG 59A	FIRE EXTINGUISHER INSTL -----							1	
		TOW BAR INSTL-NOSE WHEEL -----							NP	B
-10	0501019-1	TOW BAR-NOSE WHEEL -----							1	B
-11	0515061-1	STRAP ASSY-TOW BAR -----							1	B
		ATTACHING PARTS -----								
-12	AN515-8R8	SCREW -----							1	B
-13	S1450-2-10-032	WASHER -----							1	B
-14	NAS680A08	NUTPLATE -----							1	B
		---*---								
-15	0512242-1	HOLDER-TOW BAR -----							1	B
		ATTACHING PARTS -----								
-16	AN515-8R24	SCREW -----							2	B
-17	NAS43DD3-64	SPACER -----							2	B
		---*---								
-18	0512243-1	SUPPORT ASSY-TOW BAR -----							1	B
	NAS680A08	NUTPLATE -----							1	B
	SEE FIG 14	CUP-FUEL SAMPLER -----							1	
		TOW HOOK INSTALLATION -----							NP	
-19	0500228-2	TOW HOOK -----							1	
-20	AN5-23A	BOLT -----							1	
-21	S1450-5-14-063	WASHER -----							2	
-22	0500228-5	BUSHING -----							1	
-23	0500228-2	CORD-TOW HOOK -----							1	
		A---152 SERIAL 15279406 THRU 15285161								
		F152 SERIAL F15201429 THRU F15201893								
		A152 SERIAL A1520735 THRU A1520983								
		FA152 SERIAL FA1520337 THRU FA1520377								
		B---152 SERIAL 15285162 & ON								
		F152 SERIAL F15201894 & ON								
		A152 SERIAL A1520984 & ON								
		FA152 SERIAL FA1520378 & ON								
		C---152 SERIAL 15279406 THRU 15284923								
		F152 SERIAL F15201429 THRU F15201893								
		A152 SERIAL A1520735 THRU A1520971								
		FA152 SERIAL FA1520337 THRU FA1520377								
		D---152 SERIAL 15284924 & ON								
		F152 SERIAL F15201894 & ON								
		A152 SERIAL A1520972 & ON								
		FA152 SERIAL FA1520378 & ON								

152 & A152 Parts Catalog

Fuselage Equipment (Cont)

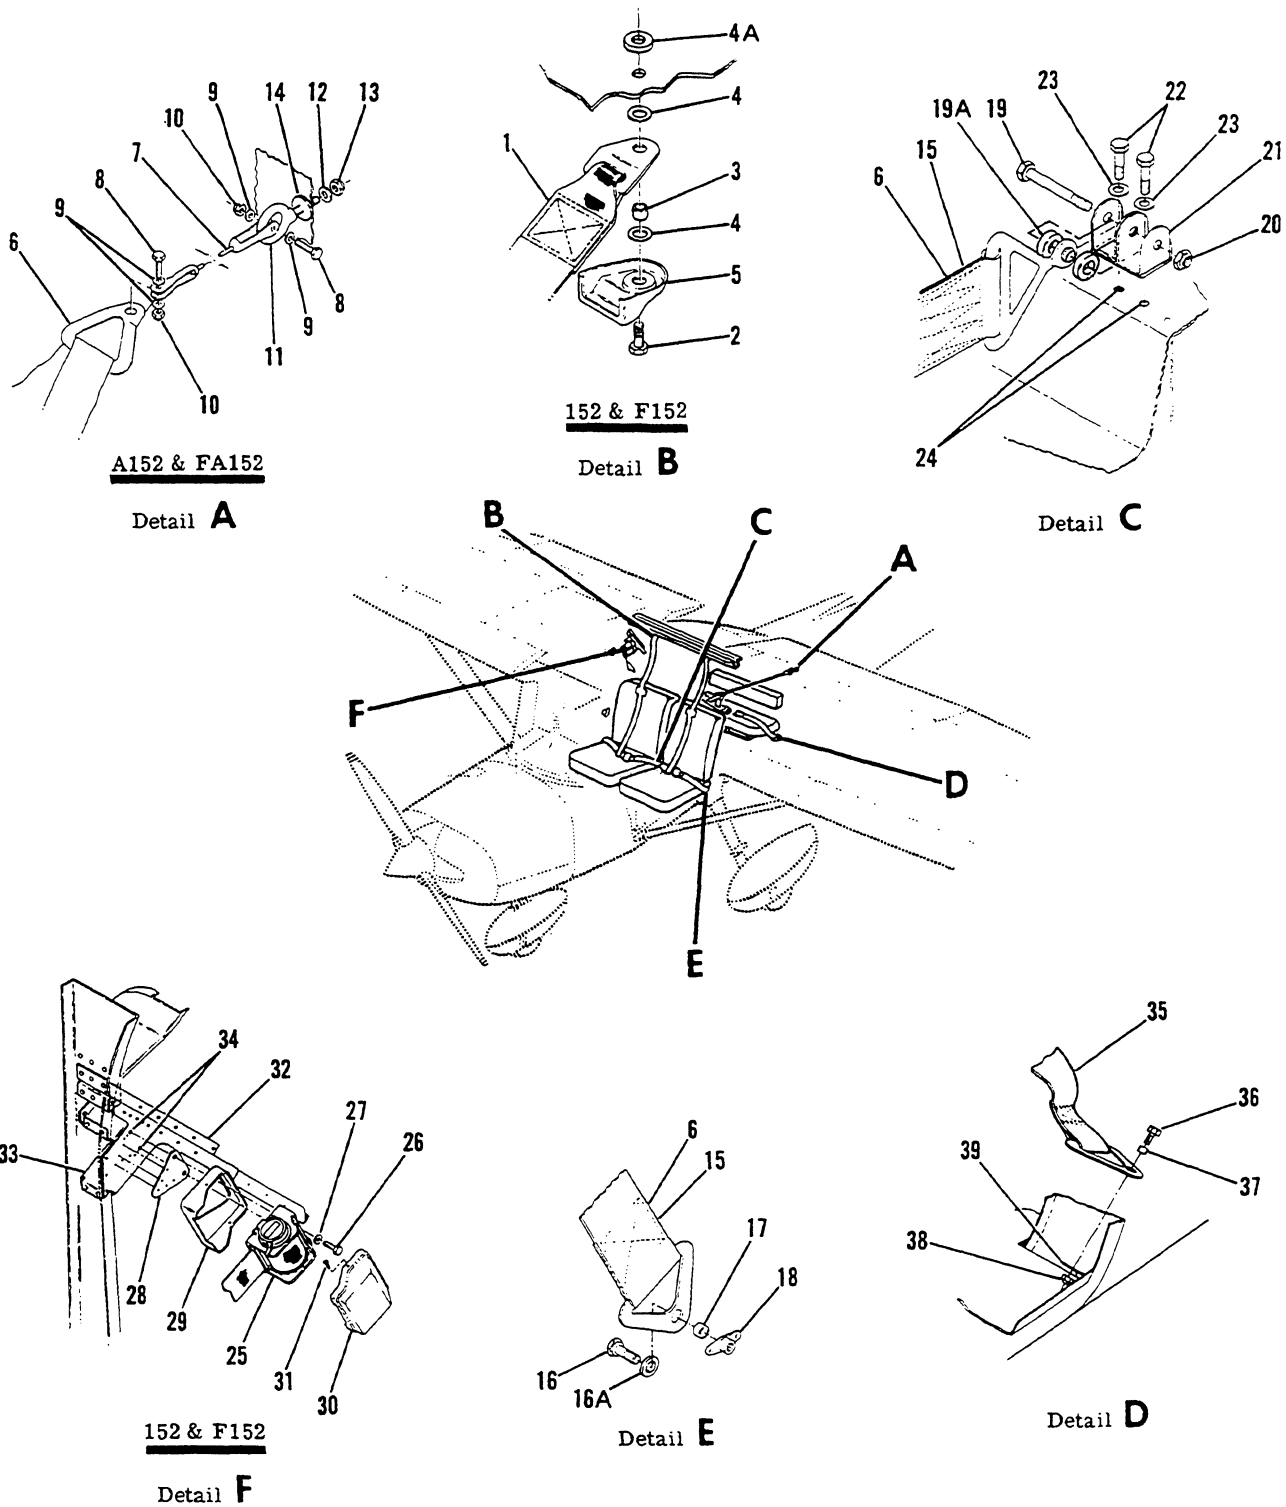


Figure 56. Seat Belt & Shoulder Harness Installation

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
56 -		SEAT BELT & SHOULDER HARNESS INSTALLATION -----	NP	
- 1	S2275B202	SHOULDER HARNESS ASSY BLACK -----	2	A
	S2275CC202	SHOULDER HARNESS ASSY CHESTNUT -----	2	H
	S2275JJ202	SHOULDER HARNESS ASSY BLUE -----	2	A
	S2275KK202	SHOULDER HARNESS ASSY MAIZE -----	2	C
	S2275Z202	SHOULDER HARNESS ASSY RED -----	2	A
	S2275LL202	SHOULDER HARNESS ASSY RUST -----	2	G
	S2275MM202	SHOULDER HARNESS ASSY BEIGE -----	2	D
	S2275NN202	SHOULDER HARNESS ASSY GREEN -----	2	G
	S2275CC202	SHOULDER HARNESS ASSY GOLD -----	2	J
	S2275PP202	SHOULDER HARNESS ASSY BROWN -----	2	J
	S2275WD202	SHOULDER HARNESS ASSY RUST -----	2	K
	S2275WG202	SHOULDER HARNESS ASSY GREY -----	2	K
	S2275WJ202	SHOULDER HARNESS ASSY BURGUNDY -----	2	K
		ATTACHING PARTS		
- 2	NAS464P4A8	BOLT -----	1	C
	NAS464P4A12	BOLT -----	1	D
- 3	NAS43HT4-22	SPACER -----	1	A
- 4	AN960-616	WASHER -----	2	A
- 4A	2013131-1	SPACER -----	1	D
- 5	0415010-1	COVER -----	1	A
		-----*		
- 6	S1996-7	SHOULDER HARNESS & SEAT BELT ASSY AEROBAT -----	2	B
- 7	0414024-4	CABLE ASSY -----	2	B
- 8	AN5-7A	BOLT -----	4	B
- 9	AN960-516L	WASHER -----	8	B
-10	MS21042L5	NUT -----	4	B
-11	0511165	EYEBOLT -----	2	B
-12	AN960-416	WASHER -----	2	B
-13	MS21042L4	NUT -----	2	B
-14	AN970-4	WASHER -----	2	B
-15	S2275B104	BELT ASSY-SEAT BLACK -----	2	A
	S2275CC104	BELT ASSY-SEAT CHESTNUT -----	2	H
	S2275JJ104	BELT ASSY-SEAT BLUE -----	2	A
	S2275KK104	BELT ASSY-SEAT MAIZE -----	2	C
	S2275Z104	BELT ASSY-SEAT RED -----	2	A
	S2275LL104	BELT ASSY-SEAT RUST -----	2	G
	S2275MM104	BELT ASSY-SEAT BEIGE -----	2	D
	S2275NN104	BELT ASSY-SEAT GREEN -----	2	G
	S2275CC104	BELT ASSY-SEAT GOLD -----	2	J
	S2275PP104	BELT ASSY-SEAT BROWN -----	2	J
	S2275WD104	BELT ASSY-SEAT RUST -----	2	K
	S2275WG104	BELT ASSY-SEAT GREY -----	2	K
	S2275WJ104	BELT ASSY-SEAT BURGUNDY -----	2	K
-16	NAS1304-5	BOLT-SEAT BELT -----	2	A
	NAS1304-7	BOLT-SEAT BELT -----	2	B
-16A	S1450-4H12-050	WASHER -----	2	
-17	NAS43HT4-12	SPACER-SEAT BELT -----	2	A
	0413496-2	BUSHING-SEAT BELT -----	2	B
-18	NAS680A4	NUTPLATE-SEAT BELT -----	2	A
-19	AN5-21A	BOLT-SEAT BELT -----	1	
-19A	MS35489-9	GROMMET -----	4	E
-20	MS21042L5	NUT-SEAT BELT -----	1	
-21	0414045-1	BRACKET ASSY-SEAT BELT ATTACH -----	1	
		ATTACHING PARTS		
-22	AN4-10A	BOLT -----	2	
-23	AN960-416L	WASHER -----	2	
-24	NAS696A4	NUTPLATE -----	2	
		-----*		
-25	S2199-6	INERTIA REEL SEAT BELT & SHOULDER HARNESS INSTALLATION -----	NP	A
	S2199-5	BELT ASSY-INERTIA REEL RH SEAT BLACK ONLY -----	1	
		BELT ASSY-INERTIA REEL LH SEAT BLACK ONLY -----	1	
		ATTACHING PARTS		
-26	NAS464P4A6	BOLT -----	2	
-27	AN960-416L	WASHER -----	2	
-28	0415015-1	SPACER -----	1	
-29	0415014-1	COVER-BOTTOM -----	1	
		-----*		
-30	0415014-2	COVER-TOP -----	1	
		ATTACHING PARTS		
-31	S1021Z4-6	SCREW -----	2	
		-----*		


CONTINUED ON NEXT PAGE

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION							UNITS PER ASSY	USABLE ON CODE
		1	2	3	4	5	6	7		
56 -32	0412018-2	REINFORCEMENT-RH -----							1	F H A C A G D G J K K K
	0412018-1	REINFORCEMENT-LH -----							1	
-33	0412017-2	BRACKET ASSY-RH -----							1	
	0412017-1	BRACKET ASSY-LH -----							1	
-34	NAS696A4	NUTPLATE -----							2	
-35	S1746B2	BELT ASSY-AUXILIARY SEAT BLACK -----							1	
	S1746CC2	BELT ASSY-AUXILIARY SEAT CHESTNUT -----							1	
	S1746JJ2	BELT ASSY-AUXILIARY SEAT BLUE -----							1	
	S1746KK2	BELT ASSY-AUXILIARY SEAT MAIZE -----							1	
	S1746Z2	BELT ASSY-AUXILIARY SEAT RED -----							1	
	S1746LL2	BELT ASSY-AUXILIARY SEAT RUST -----							1	
	S1746MM2	BELT ASSY-AUXILIARY SEAT BEIGE -----							1	
	S1746NN2	BELT ASSY-AUXILIARY SEAT GREEN -----							1	
	S1746CC2	BELT ASSY-AUXILIARY SEAT GOLD -----							1	
	S1746PP2	BELT ASSY-AUXILIARY SEAT BROWN -----							1	
	S1746WD2	BELT ASSY-AUXILIARY SEAT RUST -----							1	
	S1746WG2	BELT ASSY-AUXILIARY SEAT GREY -----							1	
	S1746WJ2	BELT ASSY-AUXILIARY SEAT BURGUNDY -----							1	
		ATTACHING PARTS -----								
-36	AN4-6A	BOLT -----							2	
-37	NAS43HT4-20	SPACER -----							2	
-38	MS21042L4	NUT -----							2	
		---*---								
-39	SEE FIG 30	LUG-SEAT BELT ATTACH -----							2	
NOTE. *THESE PARTS ARE ALSO REQD ON ALL 152'S DELIVERED TO GERMANY. A---152 SERIAL 15279406 & ON F152 SERIAL F15201429 & ON B---A152 SERIAL A1520735 & ON FA152 SERIAL FA1520337 & ON C---152 SERIAL 15279406 THRU 15282031 F152 SERIAL F15201429 THRU F15201528 D---152 SERIAL 15282032 & ON F152 SERIAL F15201529 & ON E---152 SERIAL 15282230 & ON F152 SERIAL F15201529 & ON A152 SERIAL A1520816 & ON FA152 SERIAL FA1520347 & ON F---152 SERIAL 15279406 & ON F152 SERIAL F15201429 & ON A152 SERIAL A1520735 THRU A1520808 FA152 SERIAL FA1520337 THRU FA1520347 G---152 SERIAL 15282032 THRU 15284541 F152 SERIAL F15201529 THRU F15201808 H---152 SERIAL 15279406 THRU 15284541 F152 SERIAL F15201429 THRU F15201808 J---152 SERIAL 15284542 & ON F152 SERIAL F15201809 & ON K---152 SERIAL 15285834 & ON F152 SERIAL F15201944 & ON										

152 & A152 Parts Catalog

Fuselage Equipment (Cont)

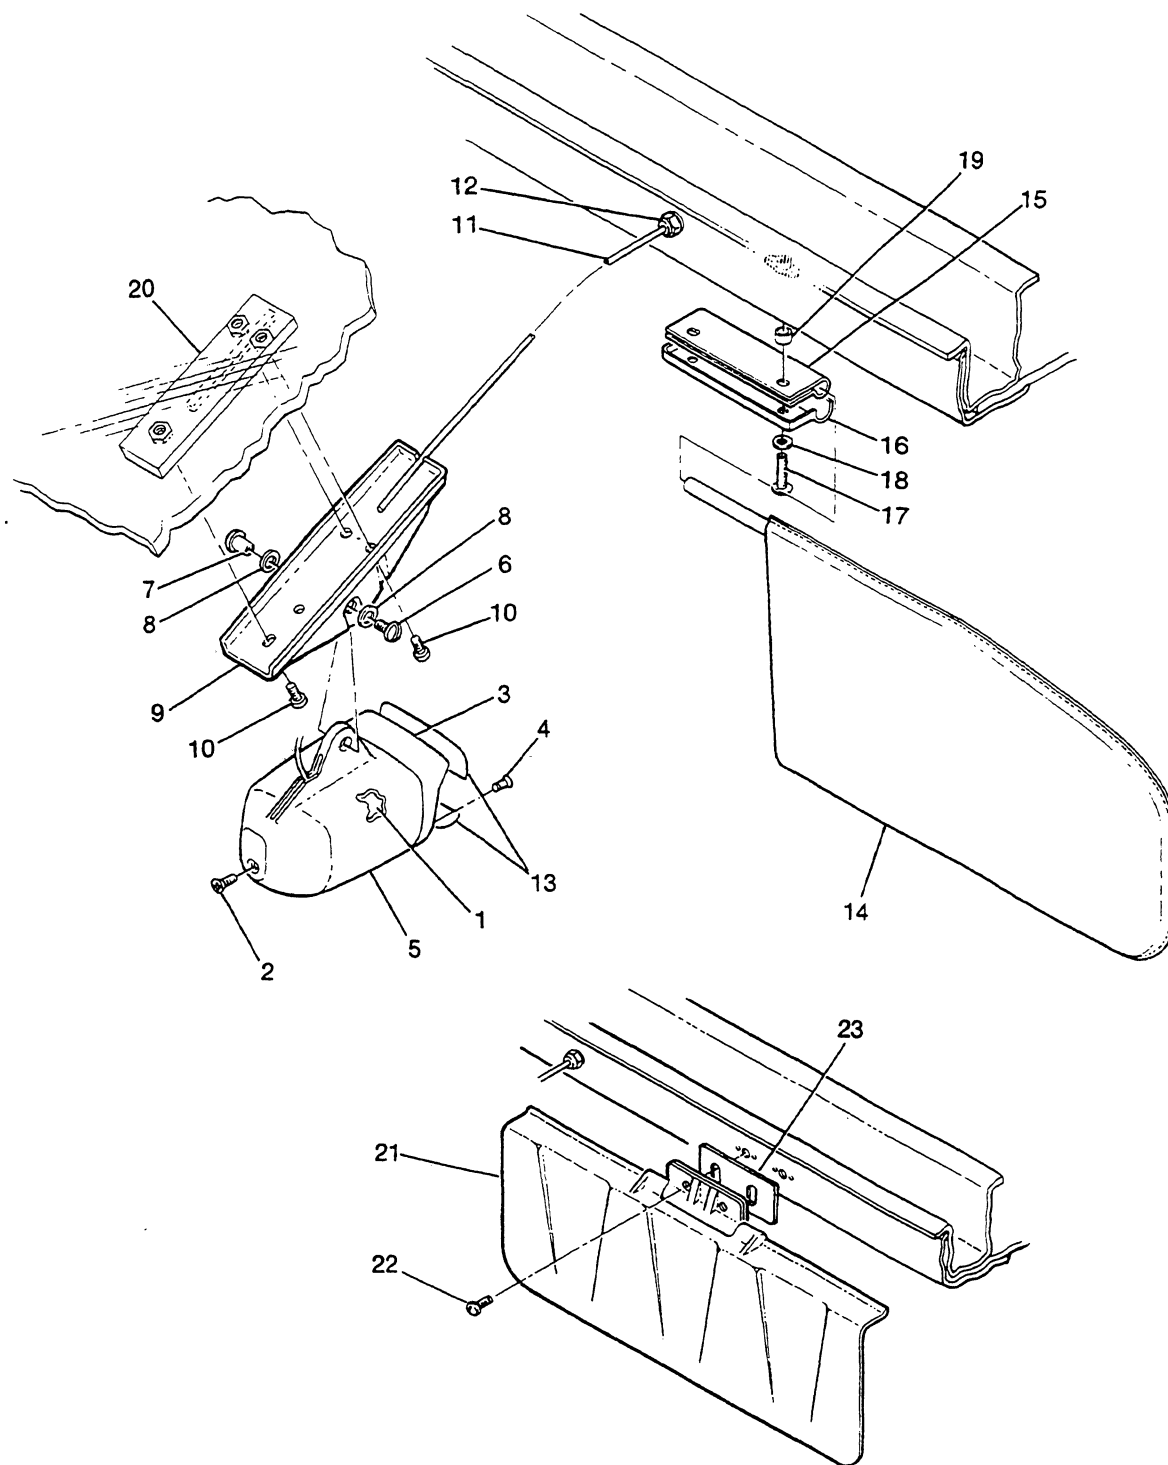

CODE B

Figure 57. Compass & Sun Visor Installation

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
57 -		COMPASS & SUN VISOR INSTALLATION -----	NP	
- 1	C660501-0102	COMPASS 24 VOLT -----	1	
- 2	AN507B832R14	ATTACHING PARTS -----	1	
	MS25237-327	SCREW -----	1	
- 3	0413517-15	*-----	1	
		BULB-COMPASS 24 VOLT -----	1	
- 4	AN510B4R8	BEZEL-COMPASS -----	1	
- 5	0413517-5	ATTACHING PARTS -----	2	
- 6	D366	SCREW -----	1	
- 7	D4023X.375	CUP-COMPASS -----	1	
- 8	AN960D10	ATTACHING PARTS -----	1	
- 9	0413517-3	POST-SCREW -----	2	
-10	AN500B8-6	WASHER -----	1	
-11	0413441-1	*-----	1	
-12	S1216-3	BASE-COMPASS -----	3	
	AN936A416	ATTACHING PARTS -----	1	
	NAS620A416L	SCREW -----	1	
-13	SEE FIG 2	*-----	1	
-14	1414087-13	TUBE ASSY -----	2	
-15	1414087-15	ATTACHING PARTS -----	1	
-16	0413504-1	NUT -----	1	
-17	AN525-10R14	WASHER -----	1	
-18	AN960-10L	WASHER -----	2	
-19	NAS43HT3-20	WASHER -----	2	
-20	0413437-1	*-----	1	
-21	0514163-1	PLACARD SET-COMPASS CORRECTION -----	2	
-22	AN525-10R14	SUN VISOR ASSY -----	1	
-23	0514178-1	CLAMP -----	1	
		COVER-SUN VISOR -----	1	
		ATTACHING PARTS -----	2	
		SCREW -----	2	
		WASHER -----	2	
		SPACER -----	2	
		*-----	1	
		BASE PLATE ASSY-COMPASS MOUNT -----	2	
		SUN VISOR ASSY -----	1	
		ATTACHING PARTS -----	2	
		SCREW -----	1	
		SHIM -----	1	
		*-----		
NOTE. #THIS PART NUMBER MUST HAVE A SECOND DASH NUMBER ADDED TO DENOTE COLOR. REFER TO HOW TO ORDER UPHOLSTERED PARTS-PAGE VIII.				
A---152 SERIAL 15279406 THRU 15283591 F152 SERIAL F15201429 THRU F15201673 A152 SERIAL A1520735 THRU A1520878 FA152 SERIAL FA1520337 THRU FA1520357				
B---152 SERIAL 15283592 & ON F152 SERIAL F15201674 & ON A152 SERIAL A1520879 & ON FA152 SERIAL FA1520358 & ON				

152 & A152 Parts Catalog

Fuselage Equipment (Cont)

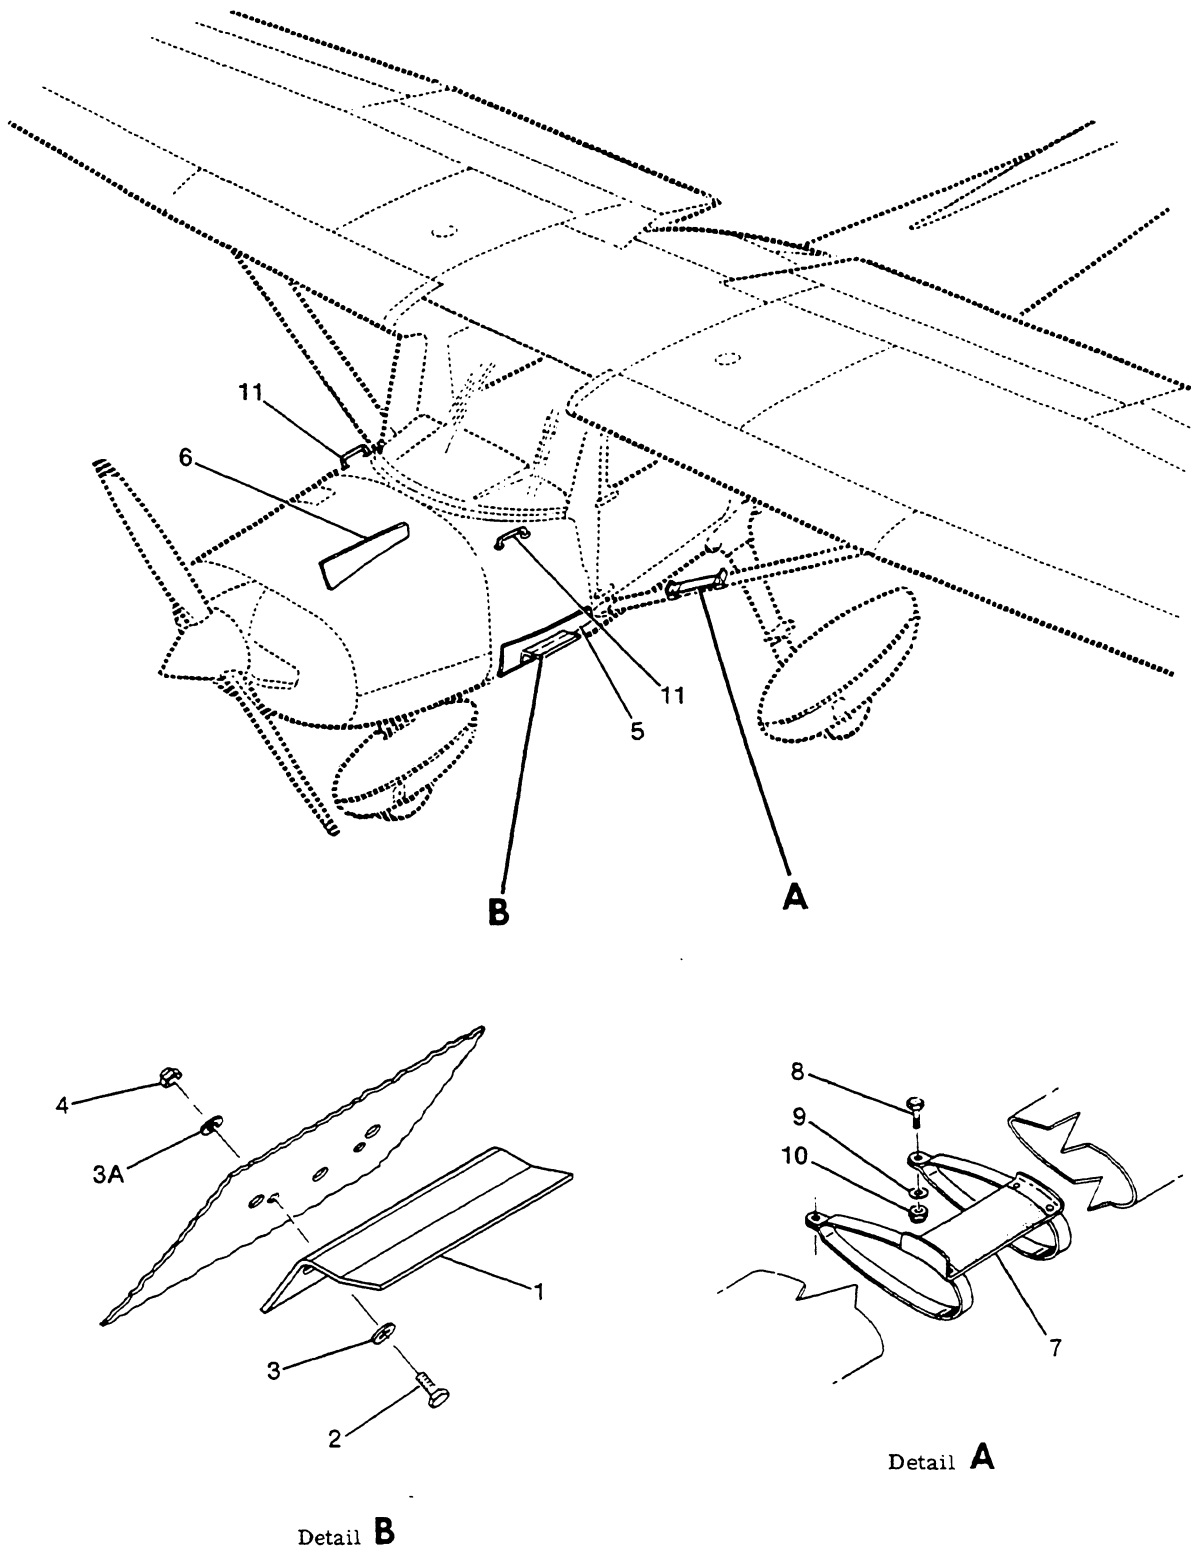


Figure 58. Refueling Step and Handle Installation

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION							UNITS PER ASSY	USABLE ON CODE
		1	2	3	4	5	6	7		
58 -		REFUELING STEP & HANDLE INSTALLATION -----							NP	A A B B
- 1	0413399-1	STEP-LH -----							1	
	0413399-2	STEP-RH -----							1	
		ATTACHING PARTS -----								
- 2	AN3-5A	BOLT -----							2	
- 3	AN960D10L	WASHER -----							2	
- 3A	AN970-3	WASHER -----							2	
- 4	MS21044N3	NUT -----							2	
		---*---								
- 5	0413351-5	DOUBLER-LH -----							1	
- 6	0413351-6	DOUBLER-RH -----							1	
- 7	0500276-1	STEP ASSY-STRUT LH -----							1	
	0500276-2	STEP ASSY-STRUT RH -----							1	
	0500276-5	STEP ASSY-STRUT LH -----							1	
	0500276-6	STEP ASSY-STRUT RH -----							1	
		ATTACHING PARTS -----								
- 8	AN3-3A	BOLT -----							2	
- 9	AN960D10L	WASHER -----							2	
-10	MS21044N3	NUT -----							2	
		---*---								
-11	1613224-2	HANDLE-REFUELING -----							2	
		ATTACHING PARTS -----								
	S1450-4H12-050	WASHER UPPER -----							1	
	AN960-416L	WASHER LOWER -----							1	
	MS21042L4	NUT -----							1	
		---*---								
A---152 SERIAL 15279406 & ON F152 SERIAL F15201429 & ON B---A152 SERIAL A1520735 & ON FA152 SERIAL FA1520337 & ON										

152 & A152 Parts Catalog

Fuselage Equipment (Cont)

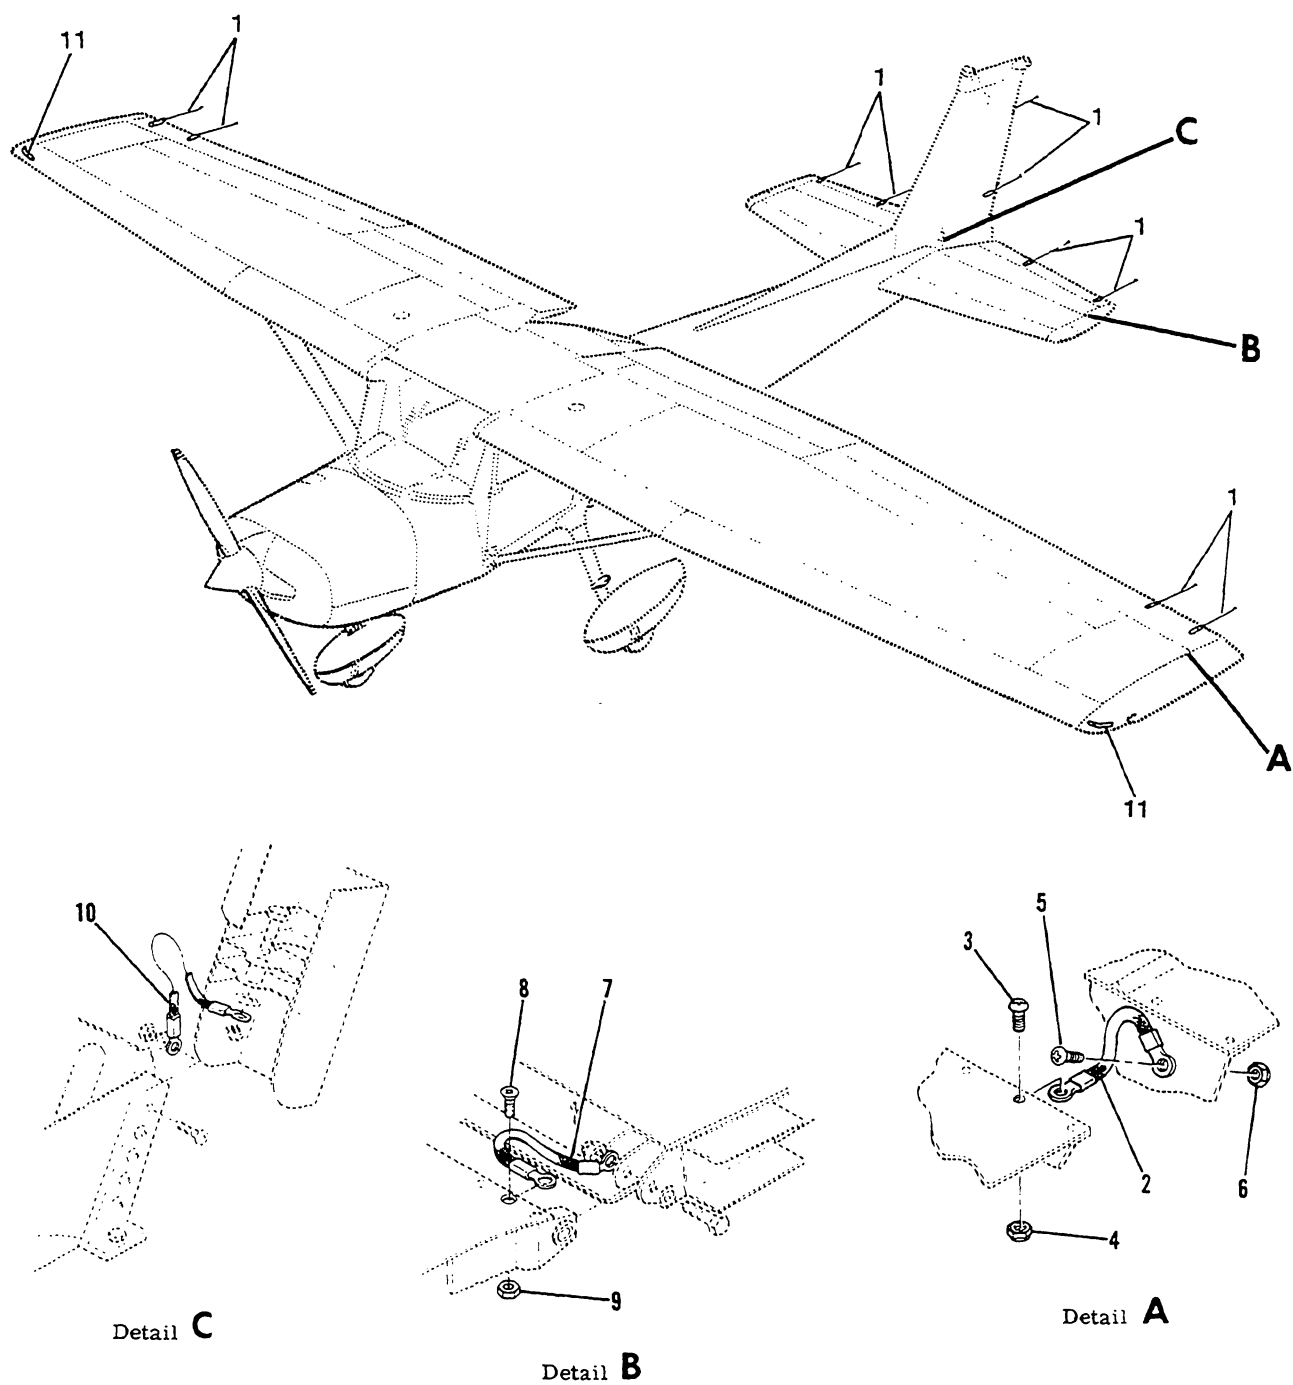



Figure 59. Static Discharger Installation

152 & A152 Parts Catalog


FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION							UNITS PER ASSY	USABLE ON CODE
		1	2	3	4	5	6	7		
59 -		STATIC DISCHARGER INSTALLATION -----							NP	
- 1	C592001-0201	WICK-STATIC DISCHARGE -----							10	
	S2230-1	ATTACHING PARTS -----							2	
		RIVET-BLIND -----								
		-----*								
- 2	1570102-19	STRAP ASSY-BONDED -----							2	
		ATTACHING PARTS -----								
- 3	AN515-8R6	SCREW -----							1	
- 4	MS21044N08	NUT -----							1	
- 5	AN525-10R6	SCREW -----							1	
- 6	MS21044N3	NUT -----							1	
		-----*								
- 7	1570102-20	STRAP ASSY-BONDED -----							2	
	1570102-14	STRAP ASSY-BONDED -----							2	C
		ATTACHING PARTS -----								D
- 8	AN515-8R6	SCREW -----							1	
- 9	MS21044N08	NUT -----							1	
		-----*								
-10	1570102-18	STRAP ASSY-BONDED -----							1	A
	1570102-24	STRAP ASSY-BONDED -----							1	B
-11	1570102-26	STRAP ASSY-BONDED -----							2	
		A---152 SERIAL 15279406 THRU 15284541 F152 SERIAL F15201429 THRU F15201828 A152 SERIAL A1520735 THRU A1520943 FA152 SERIAL FA1520337 THRU FA1520372 B---152 SERIAL 15284542 & ON F152 SERIAL F15201829 & ON A152 SERIAL A1520944 & ON FA152 SERIAL FA1520373 & ON C---152 SERIAL 15279406 THRU 15285833 F152 SERIAL F15201429 THRU F15201943 A152 SERIAL A1520735 THRU A1521025 FA152 SERIAL FA1520337 THRU FA1520387 D---152 SERIAL 15285834 & ON F152 SERIAL F15201944 & ON A152 SERIAL A1521026 & ON FA152 SERIAL FA1520380 & ON								

152 & A152 Parts Catalog

Fuselage Equipment (Cont)

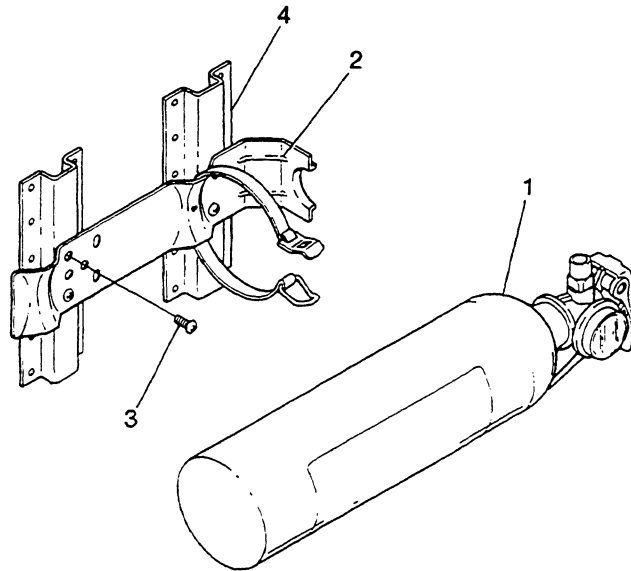

CODE A

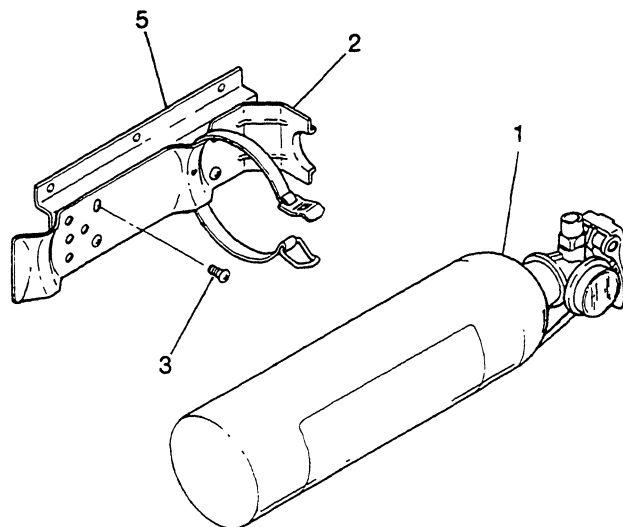

CODE B

Figure 59A. Fire Extinguisher Installation

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
59A-		FIRE EXTINGUISHER INSTALLATION-SIDEWALL -----	NP	
- 1	C421001-0101	FIRE EXTINGUISHER -----	1	
- 2	C421001-0102	BRACKET-FIRE EXTINGUISHER -----	1	
		ATTACHING PARTS -----		
- 3	AN507-10R7	SCREW -----	4	
		-----*		
- 4	0413510-1	BRACKET ASSY-FIRE EXTINGUISHER -----	2	A
	NAS680A3	NUTPLATE -----	2	
- 5	0413607-1	BRACKET ASSY-FIRE EXTINGUISHER -----	1	B
	NAS680A3K	NUTPLATE -----	4	
		 A---152 SERIAL 15279406 THRU 15285614 F152 SERIAL F15201429 THRU F15201943 A152 SERIAL A1520735 THRU A1521013 FA152 SERIAL FA1520337 THRU FA1520387 B---152 SERIAL 15285615 & ON F152 SERIAL F15201944 & ON A152 SERIAL A1521014 & ON FA152 SERIAL FA1520388 & ON		

152 & A152 Parts Catalog

Propeller


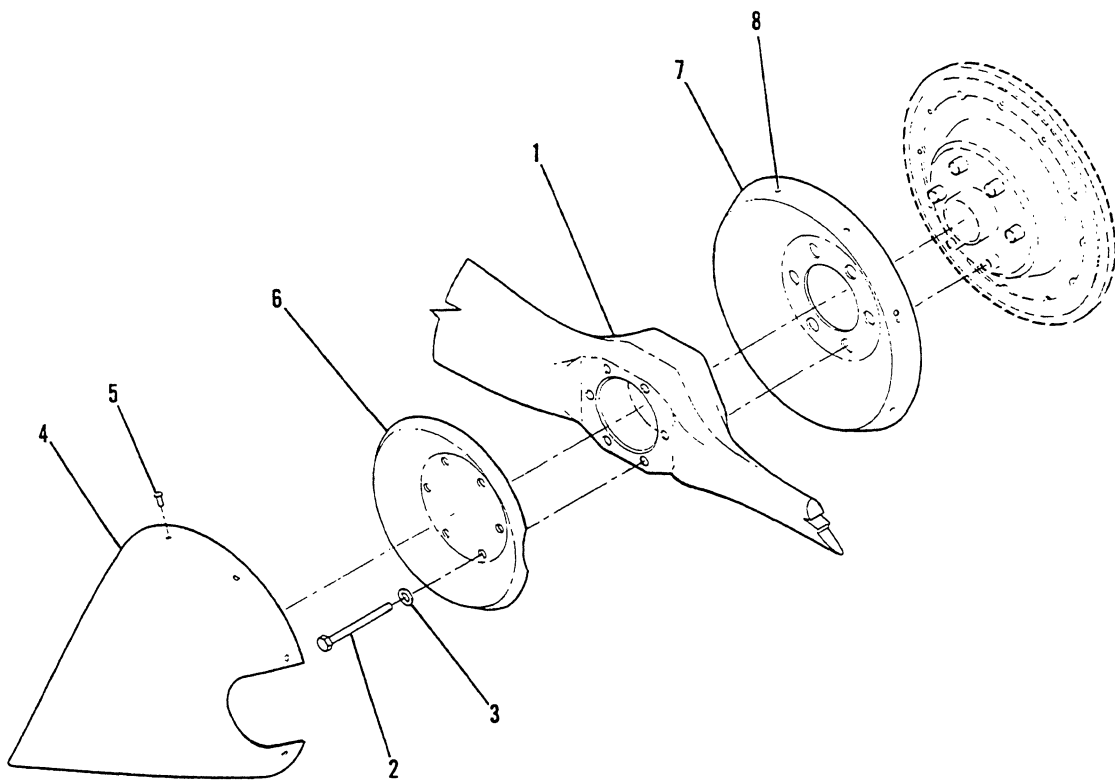


Figure 60. Propeller & Spinner Installation

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION							UNITS PER ASSY	USABLE ON CODE
		1	2	3	4	5	6	7		
60 -		PROPELLER & SPINNER INSTALLATION -----							NP	
- 1	C161001-0501	PROPELLER ASSY 1A103/TCM6958 MCCAULEY -----							1	
- 2	A2513-78	ATTACHING PARTS -----							6	
- 3	AN960-616	BOLT -----							6	
- 4	0450073-1	WASHER -----							1	
- 5	AN525-832R7	*-----							8	
- 6	0450076-1	SPINNER-PROPELLER -----							1	
- 7	0450072-1	ATTACHING PARTS -----							1	
- 8	NAS680A08	SCREW -----							8	
		*-----								
		BULKHEAD-SPINNER FWD -----							1	
		BULKHEAD ASSY-SPINNER AFT -----							1	
		NUTPLATE -----							8	

152 & A152 Parts Catalog

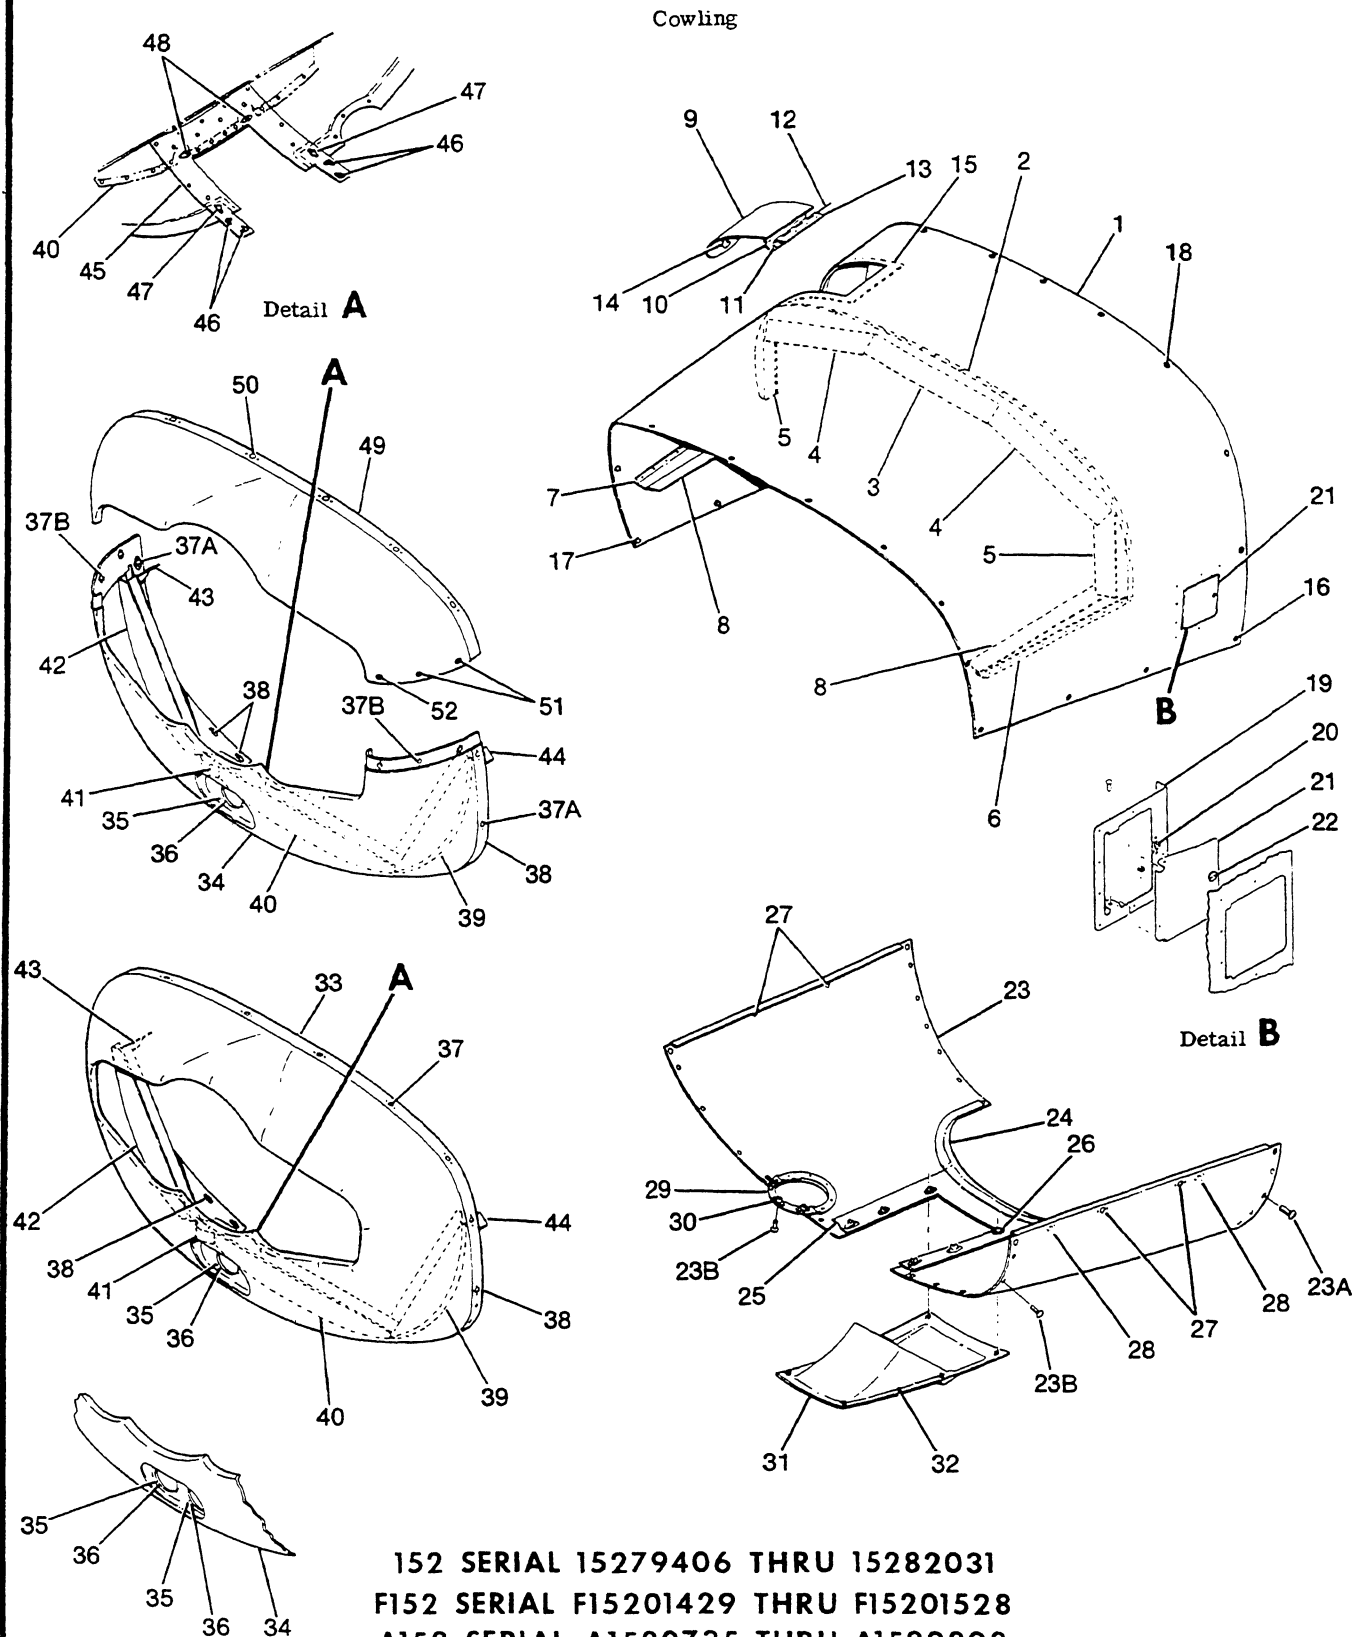

152 SERIAL 15279406 THRU 15282031
 F152 SERIAL F15201429 THRU F15201528
 A152 SERIAL A1520735 THRU A1520808
 FA152 SERIAL FA1520337 THRU FA1520347

Figure 61. Engine Cowling Assembly

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
61 -		ENGINE COWL ASSY -----	NP	
- 1	041840-1	COWL ASSY-UPPER -----	1	C
	0452217-31	COWL ASSY-UPPER -----	1	A
	0452217-39	COWL ASSY-UPPER WITH EXTERNAL POWER ACCESS DOOR -----	1	B
- 2	0455026-1	BAFFLE ASSY -----	1	
- 3	0455026-3	SEAL ASBESTOS -----	1	
- 4	0455026-4	SEAL ASBESTOS -----	2	
- 5	0455026-5	SEAL ASBESTOS -----	2	
- 6	0452220-1	BAFFLE ASSY -----	1	
- 7	0452220-2	BAFFLE ASSY -----	1	
- 8	0452220-5	SEAL ASBESTOS -----	1	
- 9	0552173-29	DOOR ASSY-COWL ACCESS -----	1	
-10	1552004-24	RETAINER ASSY -----	1	
-11	1552004-23	HINGE HALF -----	1	
-12	1552004-17	PIN -----	1	
	1552010-1	SPRING -----	1	
-13	1552004-22	HINGE HALF -----	1	
-14	KM610-064	LATCH-COWL DOOR -----	1	
-15	1552004-66	DOUBLER -----	1	
	1552004-25	STRIKER -----	1	
-16	S2319-3	STUD -----	2	
-17	S2319-4	STUD -----	2	
-18	S2319-2	STUD -----	21	
	S2319-20	GROMMET -----	25	
-19	0552161-2	DOUBLER ASSY USED ON 0452217-39 -----	1	
-20	S1115-19	RECEPTACLE -----	1	
-21	0552161-4	DOOR ASSY USED ON 0452217-39 -----	1	
-22	S1115-9	RING -----	1	
	S1115-1	STUD -----	1	
-23	0452217-32	COWL ASSY-LOWER -----	1	
-23A	AN525-416R9	ATTACHING PARTS -----	8	
-23B	AN525-832R8	SCREW -----	20	
		SCREW -----		
-24	0452217-11	DOUBLER-LOWER AFT -----	1	
-25	0452217-37	DOUBLER ASSY -----	1	
-26	212-12	RECEPTACLE -----	6	
-27	214-16	RECEPTACLE -----	4	
	40R8-16-1A	SHIM -----	4	
-28	0512006-2	BRACKET-ANGLE -----	2	
-29	0452217-41	DOUBLER ASSY -----	1	
-30	NAS680A08	NUTPLATE -----	3	
-31	0452218-1	SCOOP ASSY-INDUCTION AIR -----	1	
-32	27S3-4	STUD -----	8	
	2600SW2	WASHER-SPLIT -----	8	
-33	DEV041839-3	NOSE CAP ASSY PROVISION FOR SINGLE LANDING LIGHT -----	1	A
	0452203-24	WEU 0452230-2 & 0452230-201 SEE INDEX 49 & 34 -----	1	B
	0452203-37	NOSE CAP ASSY PROVISION FOR SINGLE LANDING LIGHT -----	1	B
	DEV041839-2	WEU 0452230-2 & 0452230-3 SEE INDEX 49 & 34 -----	1	A
	0452203-23	NOSE CAP ASSY PROVISION FOR DUAL LANDING LIGHT -----	1	B
	0452203-36	WEU 0452230-2 & 0452230-4 SEE INDEX 49 & 34 -----	1	B
	DEV041839-1	NOSE CAP ASSY PROVISION FOR DUAL LANDING LIGHT -----	1	A
	0452203-14	WEU 0452230-2 & 0452230-200 SEE INDEX 49 & 34 -----	1	B
	0452203-35	NOSE CAP ASSY WITH OUT LANDING LIGHT PROVISION -----	1	B
-34	0452230-201	WEU 0452230-2 & 0452230-1 SEE INDEX 49 & 34 -----	1	A
	0452230-3	NOSE CAP ASSY-LWR PROVISION FOR SINGLE LANDING LIGHT -----	1	B
	0452230-202	NOSE CAP ASSY-LWR PROVISION FOR SINGLE LANDING LIGHT -----	1	A
	0452230-4	NOSE CAP ASSY-LWR PROVISION FOR DUAL LANDING LIGHT -----	1	B
	0452230-200	NOSE CAP ASSY-LWR PROVISION FOR DUAL LANDING LIGHT -----	1	A
	0452230-1	NOSE CAP ASSY-LWR WITHOUT LANDING LIGHT PROVISION -----	1	B
-35	NAS680A08	NUTPLATE USED WITH SINGLE LANDING LIGHT -----	3	
	NAS680A08	NUTPLATE USED WITH DUAL LANDING LIGHT -----	6	
-36	NAS696A08	NUTPLATE USED WITH SINGLE LANDING LIGHT -----	3	
	NAS696A08	NUTPLATE USED WITH DUAL LANDING LIGHT -----	6	

CONTINUED ON NEXT PAGE


152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION							UNITS PER ASSY	USABLE ON CODE
		1	2	3	4	5	6	7		
61 -37	S2319-30	RECEPTACLE	USED ON ONE PIECE NOSE CAP ONLY	-----					10	
-37A	S2319-30	RECEPTACLE	USED ON LWR NOSE CAP ONLY	-----					4	
-37B	212-12	RECEPTACLE	USED ON LWR NOSE CAP ONLY	-----					6	
-38	NAS680A08	NUTPLATE	-----						9	
-39	0455024-2	BAFFLE ASSY-FWD LH	-----						1	
	0455024-6	SEAL	-----						1	
	MS35489-6	GROMMET	-----						1	
-40	0455024-1	BAFFLE ASSY-FWD CENTER	-----						1	
	0455024-5	SEAL	-----						1	
-41	0455024-16	BAFFLE ASSY-LWR RH	-----						1	
	0455024-18	SEAL	-----						1	
-42	0455024-3	BAFFLE ASSY-FWD RH	-----						1	
	0455024-8	SEAL	-----						1	
-43	0455024-10	BAFFLE ASSY-UPPER RH	-----						1	A
	0455024-24	BAFFLE ASSY-UPPER RH	-----						1	B
	0455024-11	SEAL	-----						1	
-44	0455024-19	BAFFLE ASSY-UPPER LH	-----						1	A
	0455024-23	BAFFLE ASSY-UPPER LH	-----						1	B
	0455024-14	SEAL	-----						1	
-45	0452226-3	DOUBLER ASSY	-----						1	
-46	NAS684A08	NUTPLATE	-----						4	
-47	NAS680A08	NUTPLATE	-----						2	
-48	212-12	RECEPTACLE	-----						2	
-49	0452230-2	NOSE CAP ASSY-UPPER	-----						1	
-50	S2319-30	RECEPTACLE	-----						6	
-51	27538	STUD	-----						4	
	2600-SW2	WASHER-SPLIT	-----						4	
-52	2753-4	STUD	-----						2	
	2600-SW2	WASHER-SPLIT	-----						2	
NOTE. *WHEN INITIALLY ORDERING THESE PARTS BOTH UPPER & LOWER NOSE CAP ASSEMBLIES MUST BE ORDERED. A---152 SERIAL 15279406 THRU 15281195 F152 SERIAL F15201429 THRU F15201528 A152 SERIAL A1520735 THRU A1520779 FA152 SERIAL FA1520337 THRU FA1520346 B---152 SERIAL 15281196 THRU 15282031 A152 SERIAL A1520780 THRU A1520808 FA152 SERIAL FA1520347 ONLY C---152 SERIAL 15279406 THRU 15282031 F152 SERIAL F15201429 THRU F15201528 A152 SERIAL A1520735 THRU A1520808 FA152 SERIAL FA1520337 THRU FA1520347										

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
61A-		ENGINE COWL ASSEMBLY -----	NP	A
- 1	0452217-31	COWL ASSY-UPPER -----	1	
	0452217-39	COWL ASSY-UPPER WITH EXTERNAL POWER ACCESS DOOR -----	1	
- 2	0455026-1	BAFFLE ASSY -----	1	
- 3	0455026-3	SEAL ASBESTOS -----	1	
- 4	0455026-4	SEAL ASBESTOS -----	2	
- 5	0455026-5	SEAL ASBESTOS -----	2	
- 6	0452220-1	BAFFLE ASSY -----	1	
- 7	0452220-2	BAFFLE ASSY -----	1	
- 8	0452220-5	SEAL ASBESTOS -----	1	
CONTINUED ON NEXT PAGE				

152 & A152 Parts Catalog

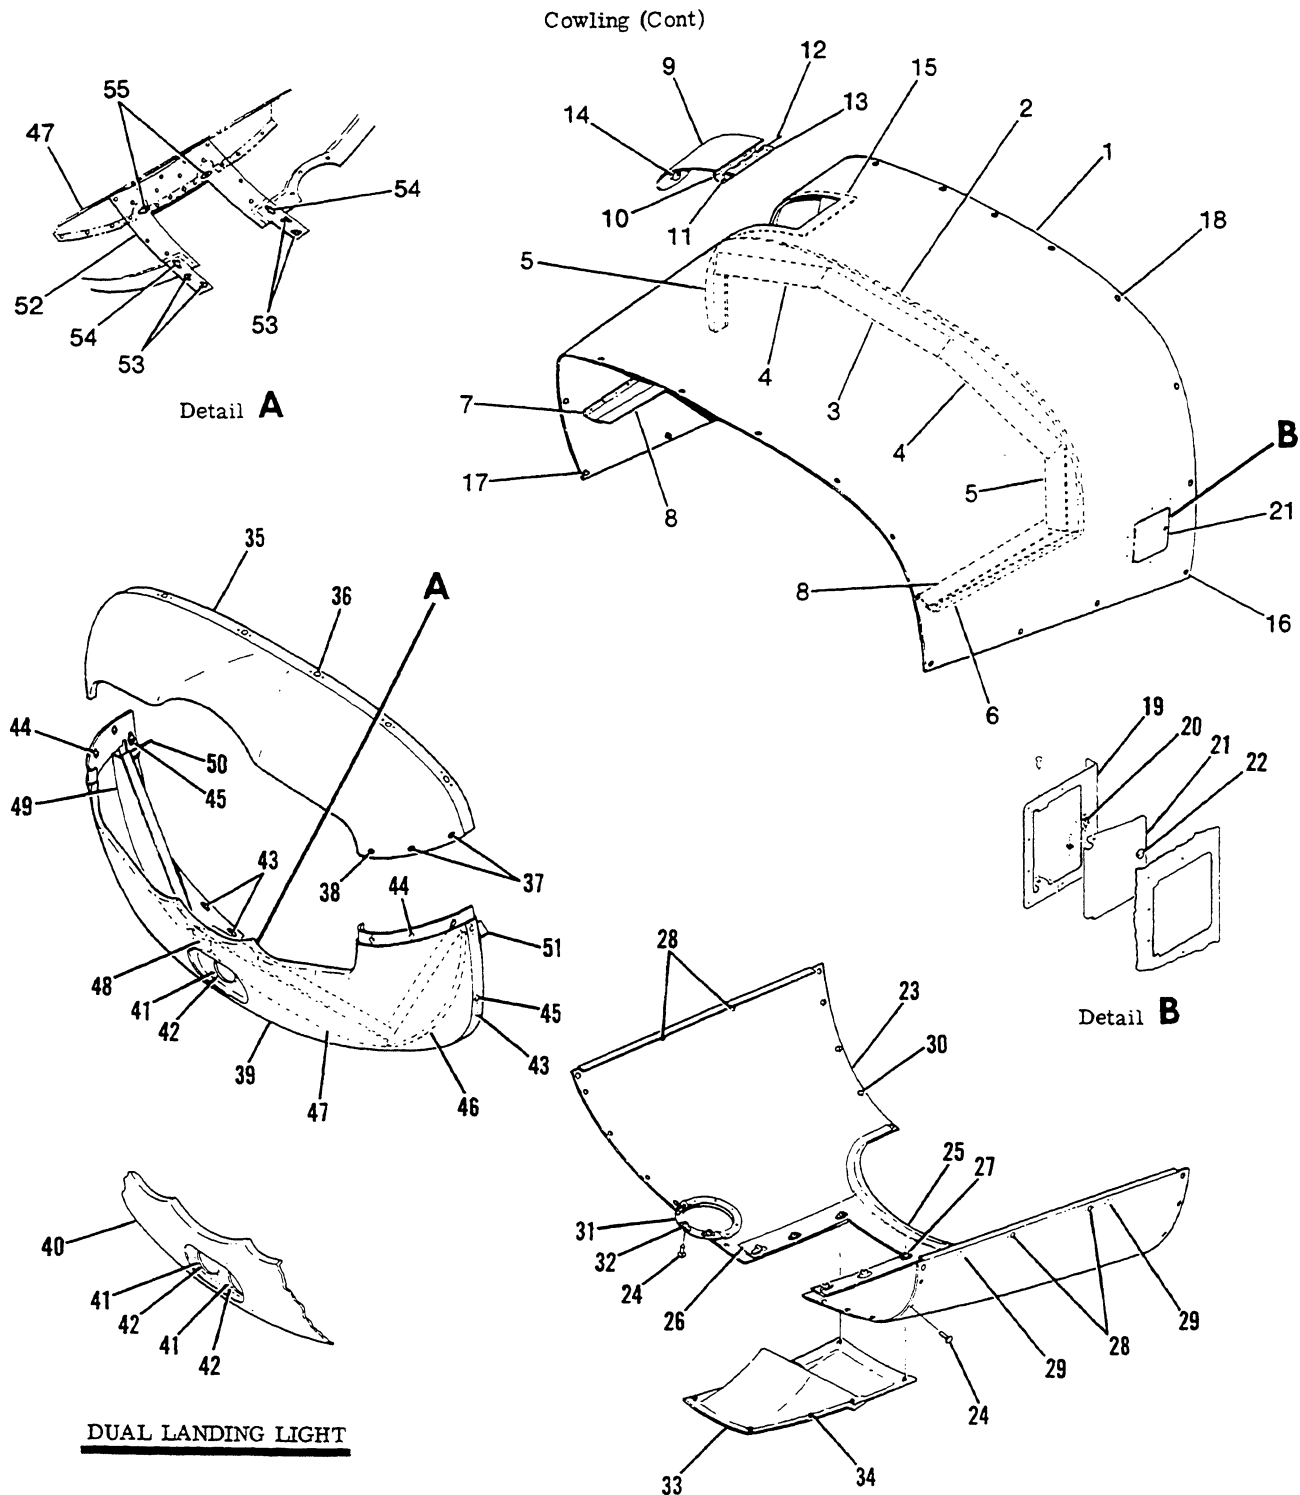


152 SERIAL 15282032 THRU 15283352
 F152 SERIAL F15201529 THRU F15201673
 A152 SERIAL A1520809 THRU A1520868
 FA152 SERIAL FA1520348 THRU FA1520357

Figure 61A. Engine Cowling Assembly

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	1 2 3 4 5 6 7							UNITS PER ASSY	USABLE ON CODE	
61A- 9	0552173-29	DOOR ASSY-COWL ACCESS -----									1	
-10	1552004-24	RETAINER ASSY -----									1	
-11	1552004-23	HINGE HALF -----									1	
-12	1552004-17	PIN -----									1	
	1552010-1	SPRING -----									1	
-13	1552004-22	HINGE HALF -----									1	
-14	KW610-064	LATCH-COWL DOOR -----									1	
-15	1552004-66	DOUBLER -----									1	
	1552004-25	STRIKER -----									1	
-16	S2319-3	STUD -----									2	
-17	S2319-4	STUD -----									2	
-18	S2319-2	STUD -----									21	
	S2319-20	GROMMET -----									25	
-19	0552161-2	DOUBLER ASSY USED ON 0452217-39 -----									1	
-20	S1115-19	RECEPTACLE -----									1	
-21	0552161-4	DOOR ASSY USED ON 0452217-39 -----									1	
-22	S1115-9	RING -----									1	
	S1115-1	STUD -----									1	
-23	0452217-43	COWL ASSY-LWR -----									1	
		ATTACHING PARTS										
-24	AN525-832R8	SCREW -----									20	
		-----*										
-25	0452217-11	DOUBLER-LWR AFT -----									1	
-26	0452217-37	DOUBLER ASSY -----									1	
-27	212-12	RECEPTACLE -----									6	
-28	S2319-30	RECEPTACLE -----									4	
	40R8-16-1A	SHIM -----									4	
-29	0512006-2	BRACKET-ANGLE -----									2	
-30	S2319-2	STUD -----									8	
	S2319-20	GROMMET -----									8	
	CM2791-1	SNAP RING -----									8	
-31	0452217-41	DOUBLER ASSY -----									1	
-32	NAS680A08	NUTPLATE -----									3	
-33	0452218-1	SCOOP ASSY-INDUCTION AIR -----									1	
-34	27S3-4	STUD -----									8	
	2600SW2	WASHER-SPLIT -----									8	
-35	0452230-2	NOSE CAP ASSY-UPPER -----									1	
-36	S2319-30	RECEPTACLE -----									6	
-37	27S3-8	STUD -----									4	
	2600-SW2	WASHER-SPLIT -----									4	
-38	27S3-4	STUD -----									2	
	2600-SW2	WASHER-SPLIT -----									2	
-39	0452230-3	NOSE CAP ASSY-LWR PROVISION FOR SINGLE LANDING LIGHT -----									1	
-40	0452230-4	NOSE CAP ASSY-LWR PROVISION FOR DUAL LANDING LIGHT -----									1	
	0452230-1	NOSE CAP ASSY-LWR WITH OUT LANDING LIGHT PROVISION -----									1	
-41	NAS680A08	NUTPLATE USED WITH 0452230-3 -----									3	
	NAS680A08	NUTPLATE USED WITH 0452230-4 -----									6	
-42	NAS696A08	NUTPLATE USED WITH 0452230-3 -----									3	
	NAS696A08	NUTPLATE USED WITH 0452230-4 -----									6	
-43	NAS680A08	NUTPLATE -----									9	
-44	212-12	RECEPTACLE -----									6	
-45	S2319-30	RECEPTACLE -----									4	
-46	0455024-2	BAFFLE ASSY-FWD LH -----									1	
	0455024-6	SEAL -----									1	
	MS35489-6	GROMMET -----									1	
-47	0455024-1	BAFFLE ASSY-FWD CENTER -----									1	
	0455024-5	SEAL -----									1	
-48	0455024-16	BAFFLE ASSY-LWR RH -----									1	
	0455024-18	SEAL -----									1	
-49	0455024-3	BAFFLE ASSY-FWD RH -----									1	
	0455024-8	SEAL -----									1	
-50	0455024-24	BAFFLE ASSY-UPPER RH -----									1	
	0455024-11	SEAL -----									1	
-51	0455024-23	BAFFLE ASSY-UPPER LH -----									1	
	0455024-14	SEAL -----									1	
-52	0452226-3	DOUBLER ASSY -----									1	
-53	NAS684A08	NUTPLATE -----									4	
-54	NAS680A08	NUTPLATE -----									2	
-55	212-12	RECEPTACLE -----									2	
A---152 SERIAL 15282032 THRU 15283352												
F152 SERIAL F15201529 THRU F15201673												
A152 SERIAL A1520809 THRU A1520868												
FA152 SERIAL FA1520348 THRU FA1520357												

152 & A152 Parts Catalog

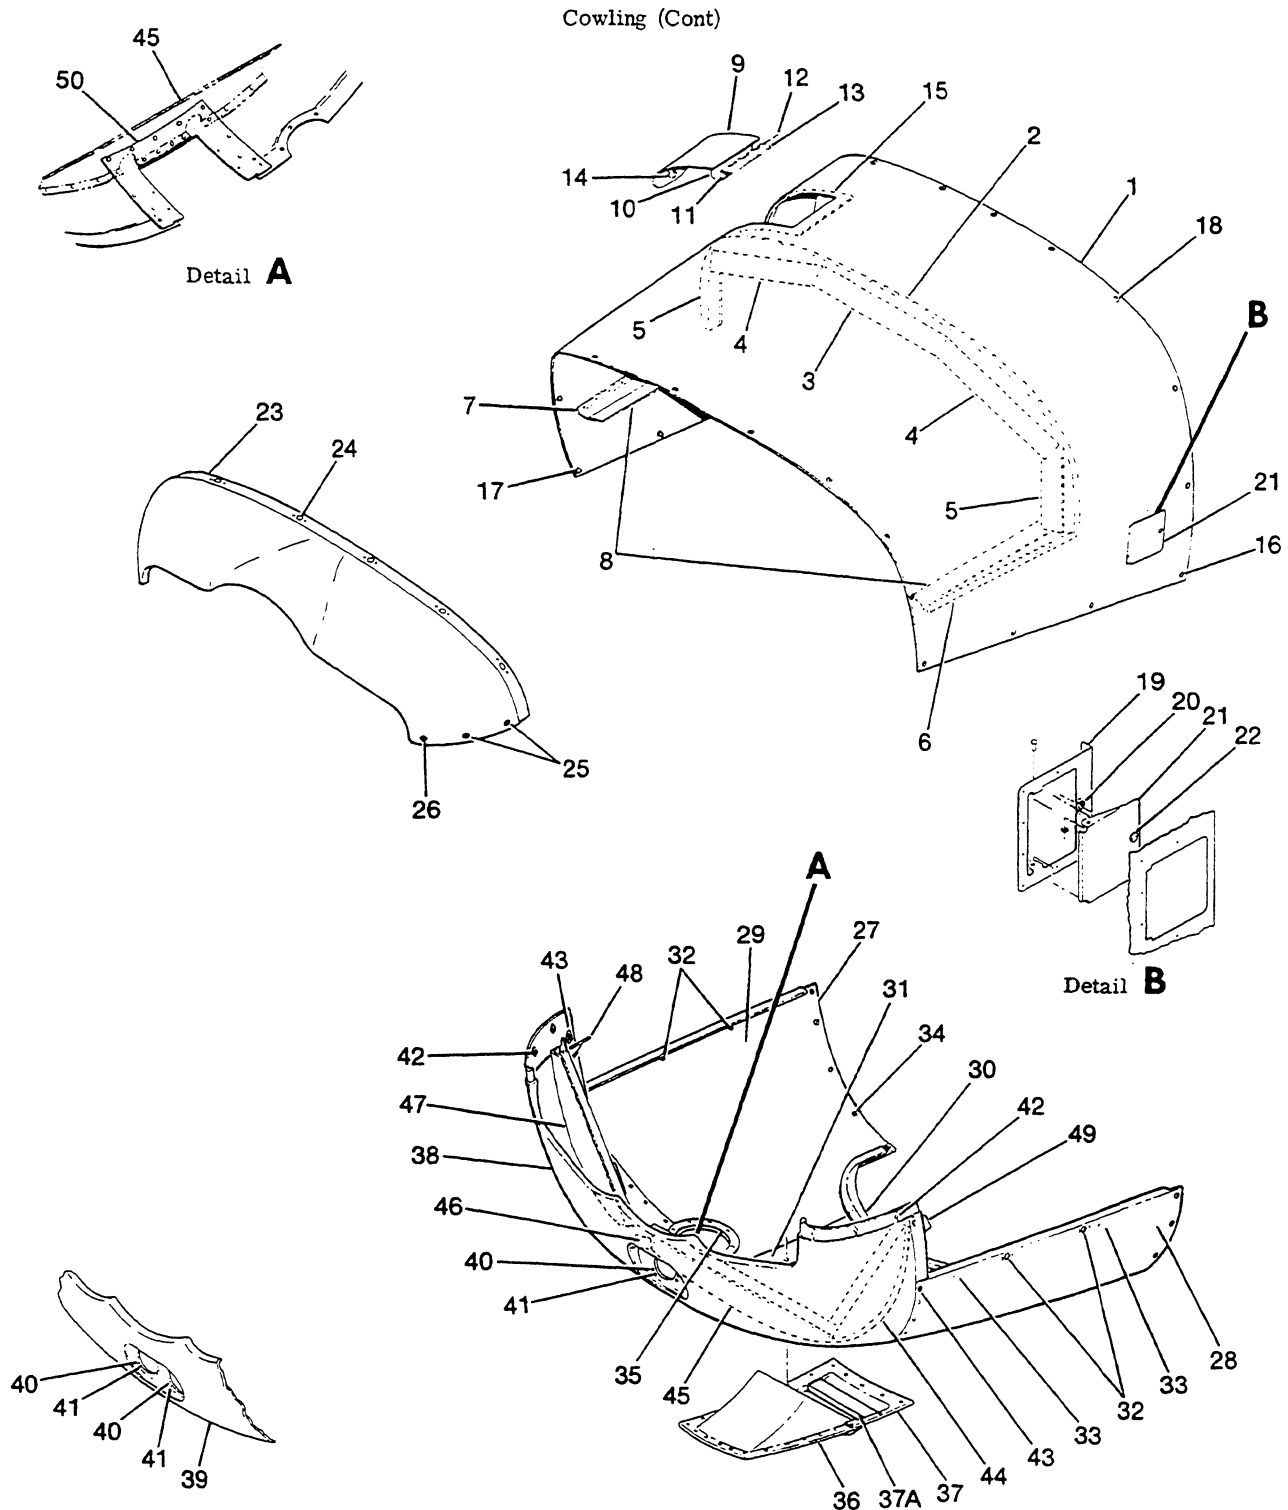

152 SERIAL 15283353 THRU 15285833
F152 SERIAL F15201674 THRU F15201943
A152 SERIAL A1520869 THRU A1521025
FA152 SERIAL FA1520358 THRU FA1520387

Figure 61B. Engine Cowl Assembly


152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
61B-		ENGINE COWL ASSEMBLY -----	NP	A
- 1	0452217-31	COWL ASSY-UPPER -----	1	
	0452217-39	COWL ASSY-UPPER WITH EXTERNAL POWER ACCESS DOOR -----	1	
- 2	0455026-1	BAFFLE ASSY -----	1	
- 3	0455026-3	SEAL ASBESTOS -----	1	
- 4	0455026-4	SEAL ASBESTOS -----	2	
- 5	0455026-5	SEAL ASBESTOS -----	2	
- 6	0452220-1	BAFFLE ASSY-LH -----	1	
- 7	0452220-2	BAFFLE ASSY-RH -----	1	
- 8	0452220-5	SEAL ASBESTOS -----	1	
- 9	0552173-29	DOOR ASSY-COWL ACCESS -----	1	
-10	1552004-24	RETAINER ASSY -----	1	
-11	1552004-23	HINGE HALF -----	1	
-12	1552004-17	PIN -----	1	
	1552010-1	SPRING -----	1	
-13	1552004-22	HINGE HALF -----	1	
-14	KM610-064	LATCH-COWL DOOR -----	1	
-15	1552004-66	DOUBLER -----	1	
	1552004-25	STRIKER -----	1	
-16	S2319-3	STUD -----	2	
-17	S2319-4	STUD -----	2	
-18	S2319-2	STUD -----	21	
	S2319-40	GROMMET -----	25	
-19	0552161-2	DOUBLER ASSY USED ON 0452217-39 -----	1	
-20	S1115-19	RECEPTACLE -----	1	
-21	0552161-4	DOOR ASSY USED ON 0452217-39 -----	1	
-22	S1115-9	RING -----	1	
	S1115-1	STUD -----	1	
-23	0452230-2	NOSE CAP ASSY-UPPER -----	1	
-24	S2319-30	RECEPTACLE -----	6	
-25	27S3-8	STUD CLC -----	4	
	2600-SW2	WASHER-SPLIT -----	4	
-26	27S3-4	STUD CLC -----	2	
	2600-SW2	WASHER-SPLIT -----	2	
-27	0452233-13	COWL ASSY-LWR PROVISION FOR SINGLE LANDING LIGHT -----	1	
	0452233-14	COWL ASSY-LWR PROVISION FOR DUAL LANDING LIGHTS -----	1	
	0452233-12	COWL ASSY-LWR WITHOUT LANDING LIGHT PROVISION -----	1	
-28	0452233-3	SKIN-LH -----	1	
-29	0452233-4	SKIN-RH -----	1	
-30	0452233-15	DOUBLER-LWR AFT -----	1	
-31	0452233-5	DOUBLER -----	1	
-32	S2319-30	RECEPTACLE -----	4	
	S2319-40	SHIM -----	4	
-33	0512006-2	BRACKET-ANGLE -----	2	
-34	S2319-2	STUD -----	8	
	S2319-20	GROMMET -----	8	
	CM2791-1	SNAP RING -----	8	
-35	0452233-6	DOUBLER -----	1	
-36	0452232-1	SCOOP-FWD -----	1	
-37	0452232-8	SCOOP ASSY-AFT -----	1	
-37A	0452232-7	STRIP-BUMPER -----	1	
-38	0452235-3	NOSE CAP ASSY-LWR PROVISION FOR SINGLE LANDING LIGHT -----	1	
-39	0452235-4	NOSE CAP ASSY-LWR PROVISION FOR DUAL LANDING LIGHT -----	1	
	0452235-1	NOSE CAP ASSY-LWR WITHOUT LANDING LIGHT PROVISION -----	1	
-40	NAS680A08	NUTPLATE USED WITH 0452235-3 -----	3	
	NAS680A08	NUTPLATE USED WITH 0452235-4 -----	6	
-41	NAS696A08	NUTPLATE USED WITH 0452235-3 -----	3	
	NAS696A08	NUTPLATE USED WITH 0452235-4 -----	6	
-42	212-12	RECEPTACLE CLC -----	6	
-43	S2319-30	RECEPTACLE -----	4	
-44	0455024-2	BAFFLE ASSY-FWD LH -----	1	
	0455024-6	SEAL -----	1	
	MS35489-6	GROMMET -----	1	
-45	0455024-1	BAFFLE ASSY-FWD CENTER -----	1	
	0455024-26	BAFFLE ASSY-FWD CENTER -----	1	
	0455024-5	SEAL -----	1	
	0455024-25	SEAL -----	1	
-46	0455024-16	BAFFLE ASSY-LWR RH -----	1	
	0455024-18	SEAL -----	1	
-47	0455024-3	BAFFLE ASSY-FWD RH -----	1	
	0455024-8	SEAL -----	1	
-48	0455024-24	BAFFLE ASSY-UPPER RH -----	1	
	0455024-11	SEAL -----	1	
CONTINUED ON NEXT PAGE				

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION							UNITS PER ASSY	USABLE ON CODE
		1	2	3	4	5	6	7		
61B-49 -50	0455024-23	BAFFLE ASSY-UPPER LH -----							1	
	0455024-14	SEAL -----							1	
	0452234-1	DOUBLER -----							1	
		A---152 SERIAL 15283353 THRU 15285833 F152 SERIAL F15201674 THRU F15201943 A152 SERIAL A1520869 THRU A1521025 FA152 SERIAL FA1520358 THRU FA1520387								
		B---152 SERIAL 15283353 THRU 15285066 F152 SERIAL F15201674 THRU F15201928 A152 SERIAL A1520869 THRU A1520974 FA152 SERIAL FA1520358 THRU FA1520382								
		C---152 SERIAL 15285067 THRU 15285833 F152 SERIAL F15201929 THRU F15201943 A152 SERIAL A1520975 THRU A1521025 FA152 SERIAL FA1520383 THRU FA1520387								

152 & A152 Parts Catalog

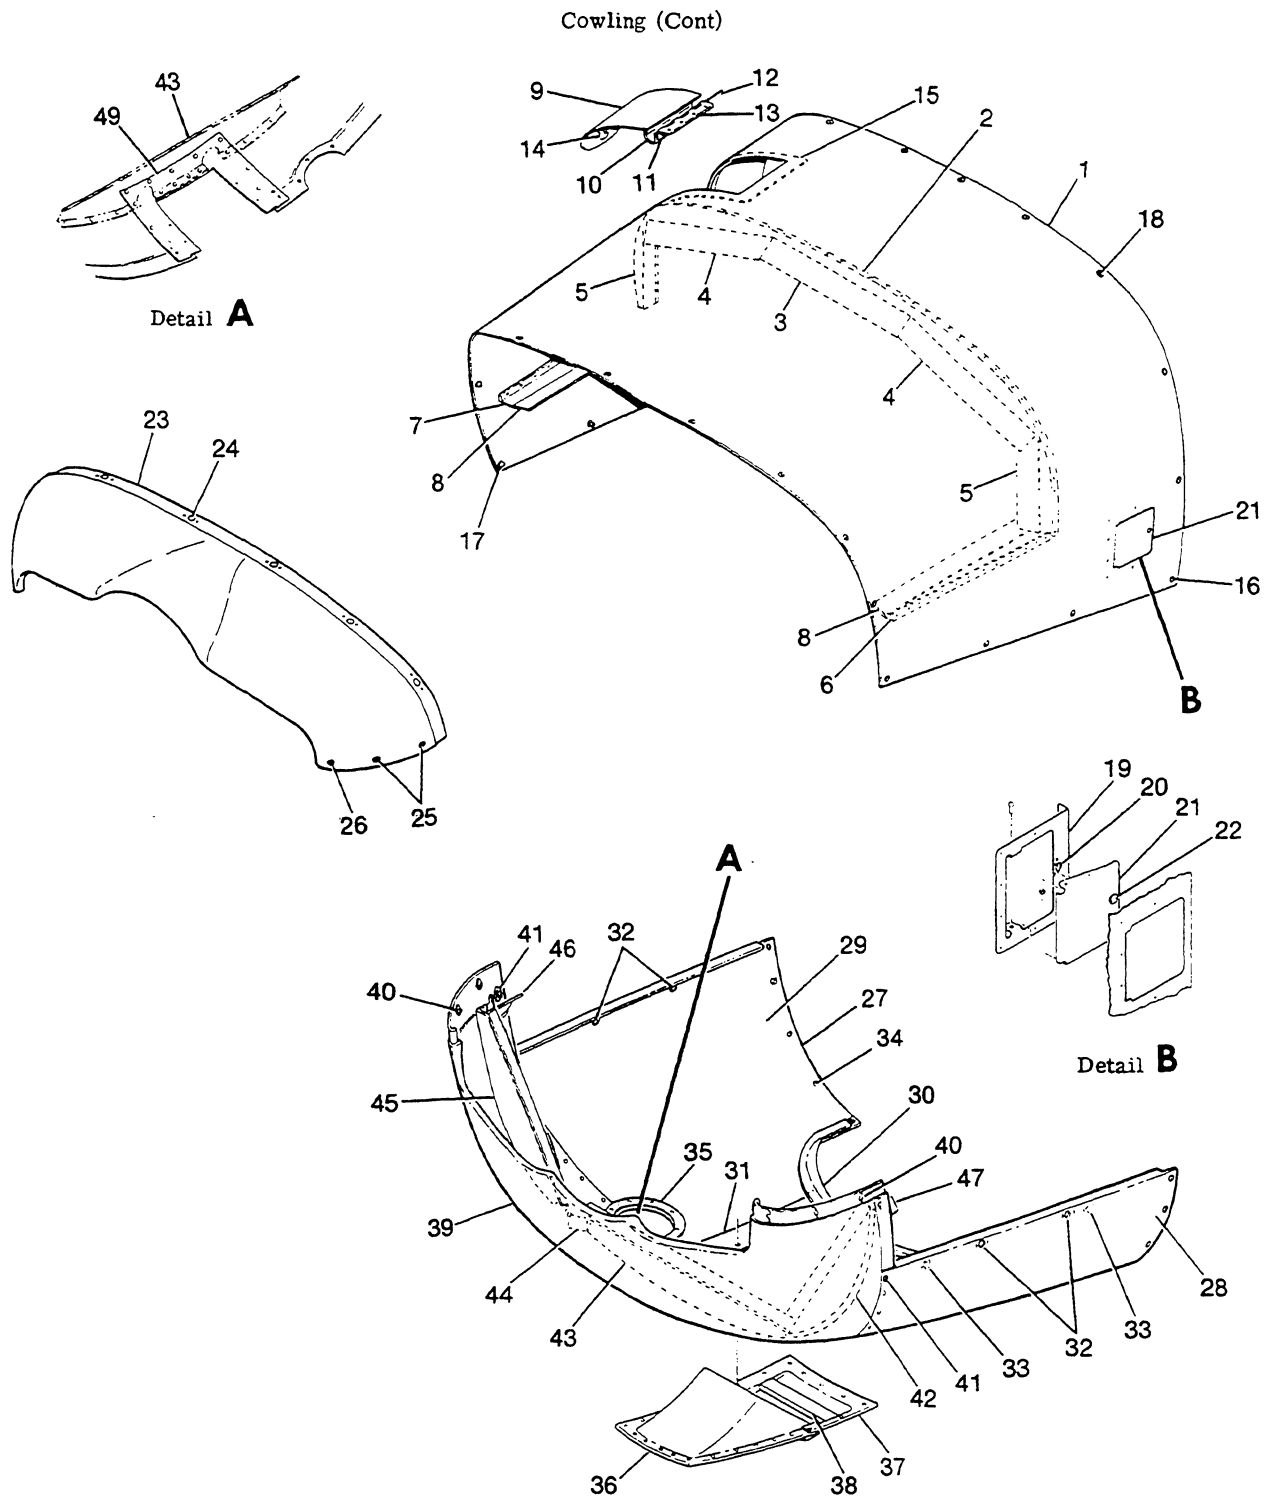

152 SERIAL 15285834 & ON
F152 SERIAL F15201944 & ON
A152 SERIAL A1521026 & ON
FA152 SERIAL FA1520388 & ON

Figure 61C. Engine Cowling Assembly

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
61C-		ENGINE COWL ASSEMBLY -----	NP	A
- 1	0452217-31	COWL ASSY-UPPER -----	1	
	0452217-39	COWL ASSY-UPPER WITH EXTERNAL POWER ACCESS DOOR -----	1	
- 2	0455026-1	BAFFLE ASSY -----	1	
- 3	0455026-3	SEAL ASBESTOS -----	1	
- 4	0455026-4	SEAL ASBESTOS -----	2	
- 5	0455026-5	SEAL ASBESTOS -----	2	
- 6	0452220-1	BAFFLE ASSY-LH -----	1	
- 7	0452220-2	BAFFLE ASSY-RH -----	1	
- 8	0452220-5	SEAL ASBESTOS -----	1	
- 9	0552173-29	DOOR ASSY-COWL ACCESS -----	1	
-10	1552004-24	RETAINER ASSY -----	1	
-11	1552004-23	HINGE HALF -----	1	
-12	1552004-17	PIN-HINGE -----	1	
	1552010-1	SPRING -----	1	
-13	1552004-22	HINGE HALF -----	1	
-14	KM610-064	LATCH-COWL DOOR -----	1	
-15	1552004-66	DOUBLER -----	1	
	1552004-25	STRIKER -----	1	
-16	S2319-3	STUD -----	2	
-17	S2319-4	STUD -----	2	
-18	S2319-2	STUD -----	21	
	S2319-20	GROMMET -----	25	
-19	0552161-2	DOUBLER ASSY USED ON 0452217-39 -----	1	
-20	S1115-19	RECEPTACLE -----	1	
-21	0552161-4	DOOR ASSY USED ON 0452217-39 -----	1	
-22	S1115-9	RING -----	1	
	S1115-1	STUD -----	1	
-23	0452230-2	NOSE CAP ASSY-UPPER -----	1	
-24	S2319-30	RECEPTACLE -----	6	
-25	27S3-8	STUD CLC -----	4	
	2600-SW2	WASHER-SPLIT -----	4	
-26	27S3-4	STUD CLC -----	2	
	2600-SW2	WASHER-SPLIT -----	2	
-27	0452233-11	COWL ASSY-LWR -----	1	
-28	0452233-3	SKIN-LH -----	1	
-29	0452233-4	SKIN-RH -----	1	
-30	0452233-15	DOUBLER-LWR AFT -----	1	
-31	0452233-5	DOUBLER -----	1	
-32	S2319-30	RECEPTACLE -----	4	
	S2319-40	SHIM -----	2	
-33	0512006-2	BRACKET-ANGLE -----	2	
-34	S2319-2	STUD -----	8	
	S2319-20	GROMMET -----	8	
	CM2791-1	SNAP RING -----	8	
-35	0452233-6	DOUBLER -----	1	
-36	0452232-1	SCOOP-FWD -----	1	
-37	0452232-8	SCOOP ASSY-AFT -----	1	
-38	0452232-7	STRIP-BUMPER -----	1	
-39	0452235-13	NOSE CAP ASSY-LWR -----	1	
-40	212-12	RECEPTACLE CLC -----	6	
-41	S2319-30	RECEPTACLE -----	4	
-42	0455024-2	BAFFLE ASSY-FWD LH -----	1	
	0455024-6	SEAL -----	1	
	MS35489-6	GROMMET -----	1	
-43	0455024-26	BAFFLE ASSY-FWD CENTER -----	1	
	0455024-25	SEAL -----	1	
-44	0455024-16	BAFFLE ASSY-LWR RH -----	1	
	0455024-18	SEAL -----	1	
-45	0455024-3	BAFFLE ASSY-FWD RH -----	1	
	0455024-8	SEAL -----	1	
-46	0455024-24	BAFFLE ASSY-UPPER RH -----	1	
	0455024-11	SEAL -----	1	
-47	0455024-23	BAFFLE ASSY-UPPER LH -----	1	
	0455024-14	SEAL -----	1	
-48	0452234-1	DOUBLER -----	1	
A---152 SERIAL 15285834 & ON F152 SERIAL F15201944 & ON A152 SERIAL A1521026 & ON FA152 SERIAL FA1520388 & ON				

152 & A152 Parts Catalog

Winterization

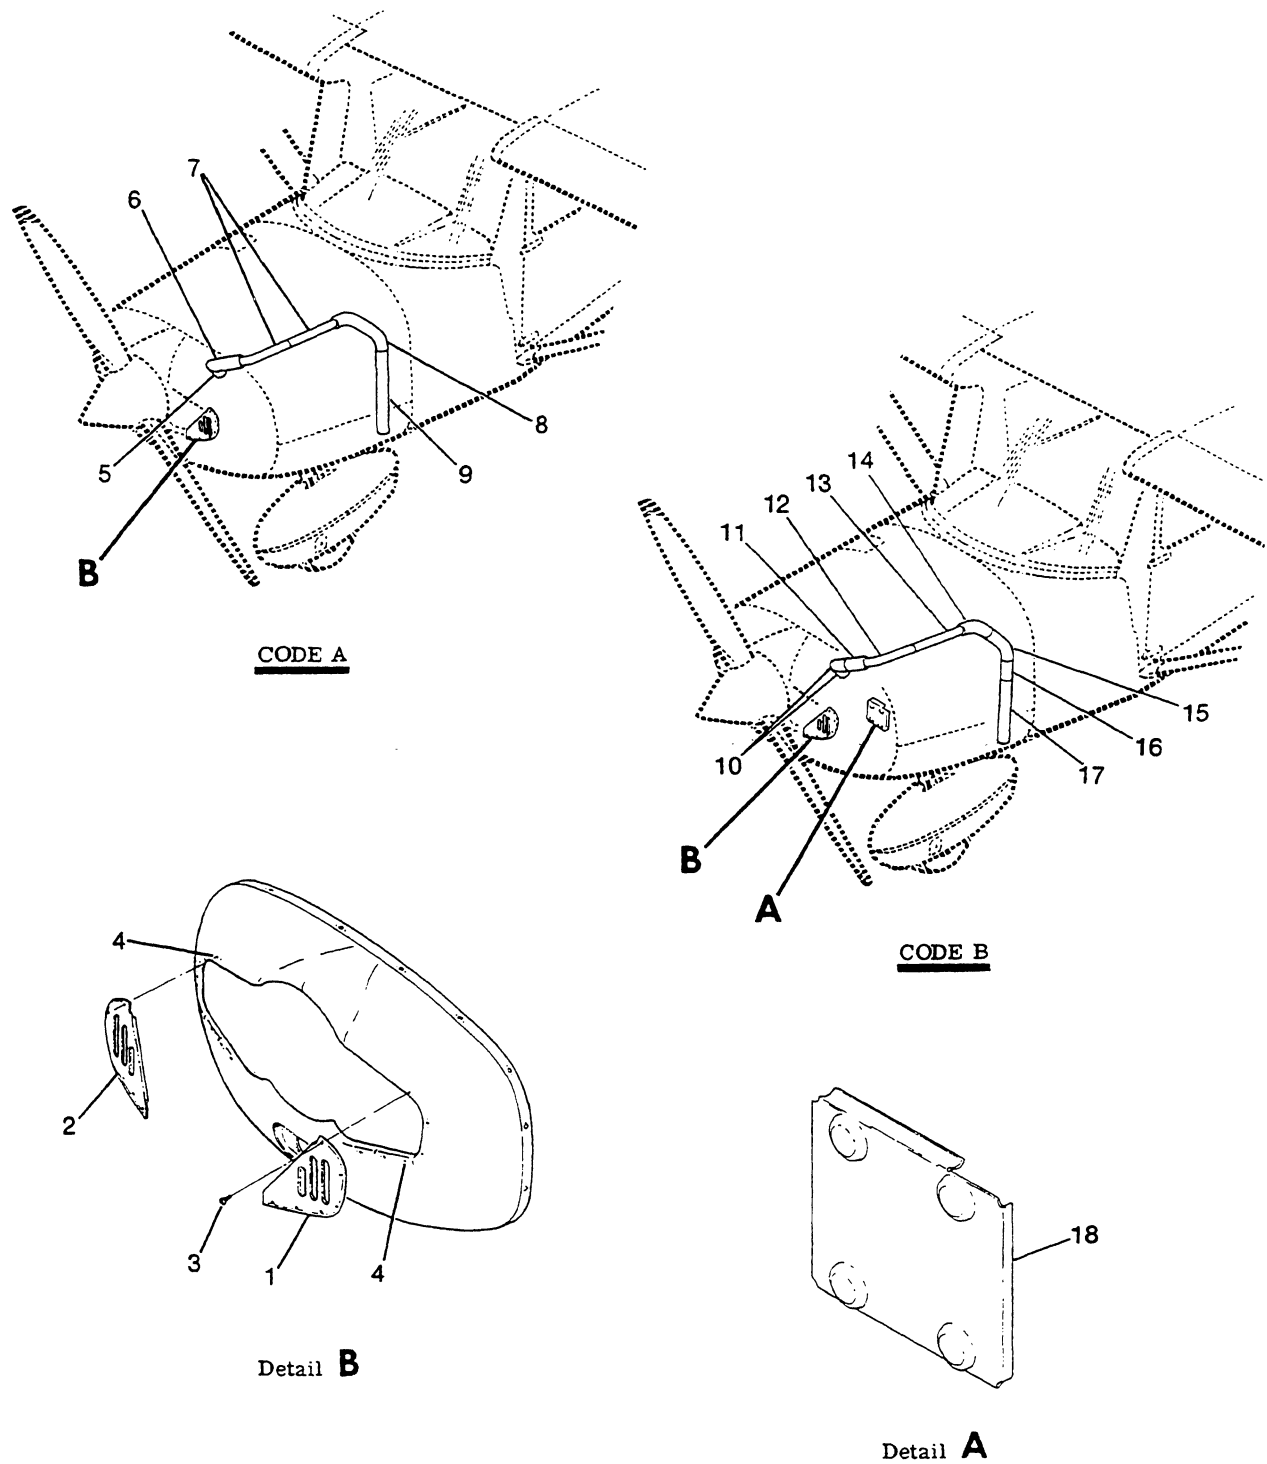


Figure 61D. Winterization Equipment Installation

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION							UNITS PER ASSY	USABLE ON CODE
		1	2	3	4	5	6	7		
61D-		WINTERIZATION EQUIPMENT INSTALLATION -----							NP	
- 1	0450080-1	COVER PLATE-NOSE CAP LH -----							1	
- 2	0450080-2	COVER PLATE-NOSE CAP RH -----							1	
- 3	AN525-10R8	ATTACHING PARTS -----							6	
		SCREW -----								
		*-----								
- 4	NAS680A3	NUTPLATE -----							12	
- 5	0401024-2	COVER-INSULATING -----							1	
- 6	0401024-3	COVER-INSULATING -----							1	
- 7	0401024-7	COVER-INSULATING -----							2	
- 8	0401024-5	COVER-INSULATING -----							1	
- 9	0401024-6	COVER-INSULATING -----							1	
-10	0401024-2	COVER-INSULATING -----							2	
-11	0401024-8	COVER-INSULATING -----							1	
-12	0401024-9	COVER-INSULATING -----							1	
-13	0401024-7	COVER-INSULATING -----							1	
-14	0401024-10	COVER-INSULATING -----							1	
-15	0401024-13	COVER-INSULATING -----							1	
-16	0401024-11	COVER-INSULATING -----							1	
-17	0401024-12	COVER-INSULATING -----							1	
-18	0450080-7	COVER PLATE-OIL COOLER -----							1	
		A---152 SERIAL 15279406 THRU 15285384								
		F152 SERIAL F15201429 THRU F15201894								
		A152 SERIAL A1520735 THRU A1520998								
		FA152 SERIAL FA1520337 THRU FA1520378								
		B---152 SERIAL 15285385 & ON								
		F152 SERIAL F15201895 & ON								
		A152 SERIAL A1520999 & ON								
		FA152 SERIAL FA1520379 & ON								
		C---152 SERIAL 15285595 & ON								
		F152 SERIAL F15201929 & ON								
		A152 SERIAL A1521015 & ON								
		FA152 SERIAL FA1520383 & ON								
		AND ALL AIRCRAFT MODIFIED PER								
		SK152-15 OR SK152-16.								

152 & A152 Parts Catalog

Engine

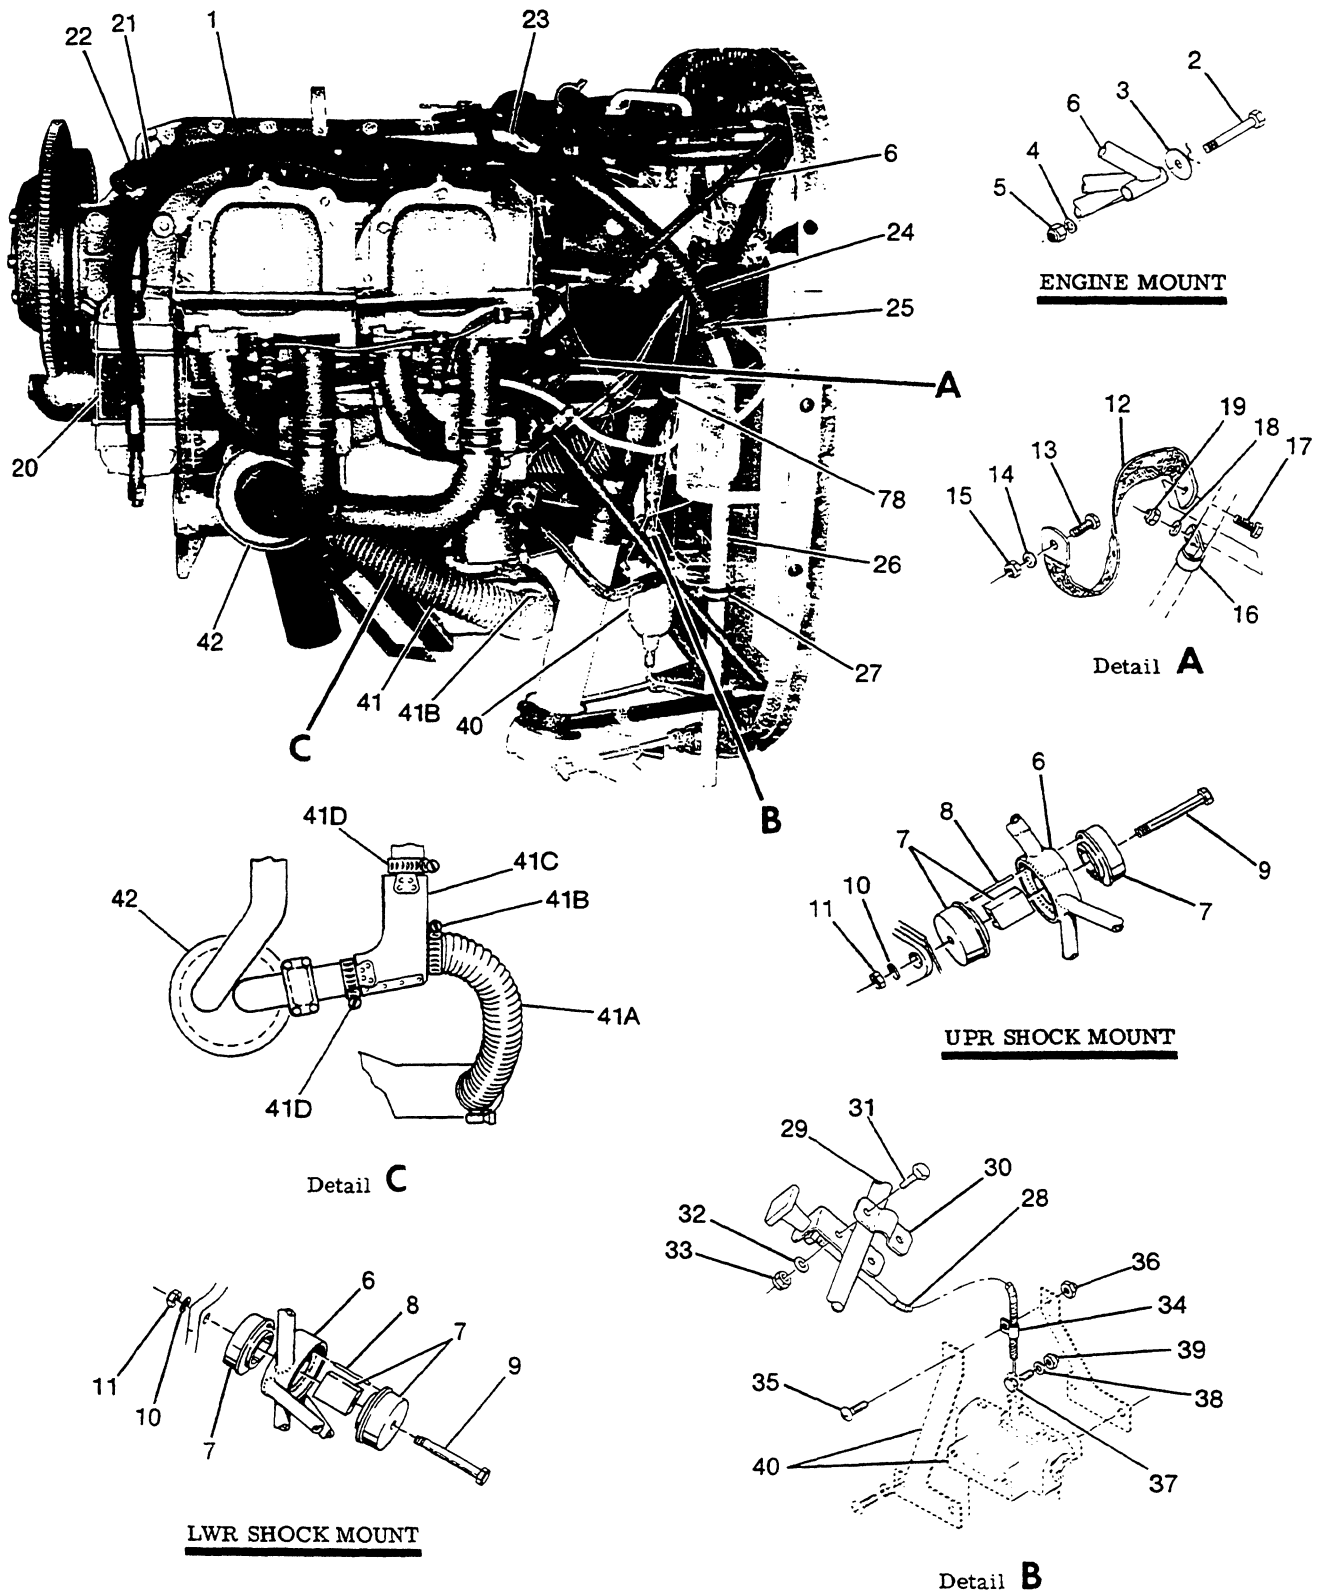


Figure 62. (Sheet 1 of 2) Engine Installation

152 & A152 Parts Catalog

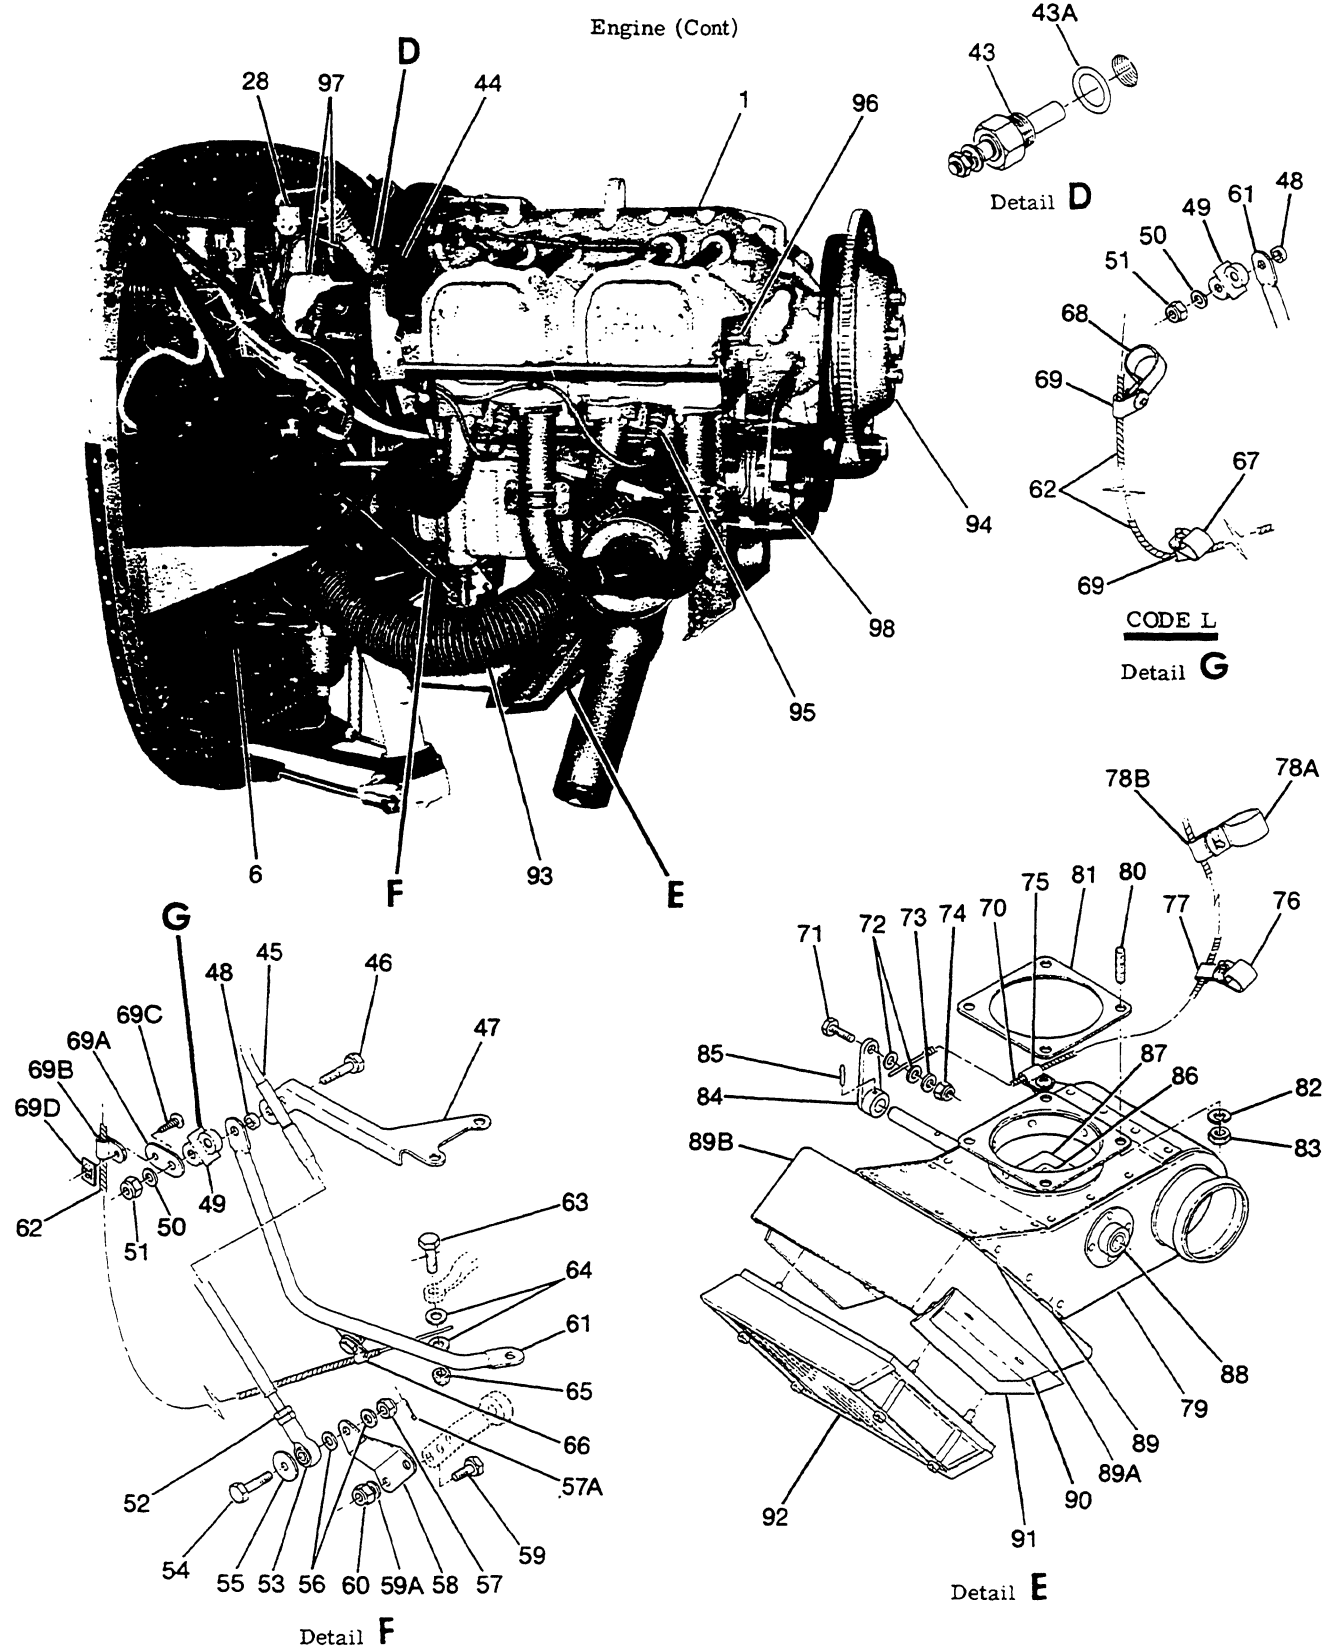


Figure 62. (Sheet 2 of 2) Engine Installation

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
62 -		ENGINE INSTALLATION -----	1	U V
- 1	0-235L2C	ENGINE ASSY LY -----	1	
	0-235N2C	ENGINE ASSY LY -----	1	
		ATTACHING PARTS -----		
- 2	AN6-25A	BOLT UPPER -----	2	
	AN6-23A	BOLT LOWER -----	2	
- 3	S1450-6-18-063	WASHER -----	4	
- 4	AN960-616	WASHER -----	4	
- 5	MS20365-624C	NUT -----	4	
- 6	0451003-36	MOUNT ASSY-ENGINE -----	1	
- 7	J7402-1	KIT-ENGINE MOUNT LY -----	4	
- 8	MS16562-39	PIN -----	4	
- 9	AN7-34A	BOLT -----	4	
-10	AN960-716	WASHER -----	4	
-11	MS20365-720C	NUT -----	4	
		---*---		
-12	0412007-8	STRAP-ENGINE GROUND -----	1	
		ATTACHING PARTS -----		
-13	AN4-6A	BOLT -----	1	
-14	AN960-416	WASHER -----	2	
-15	MS20365-428C	NUT -----	1	
-16	AN742D8	CLAMP -----	1	
-17	AN3-4A	BOLT -----	1	
-18	AN960-10	WASHER -----	2	
-19	MS20365-1032C	NUT -----	1	
		---*---		
-20	SEE FIG 63A	OIL COOLER INSTALLATION-ENGINE -----	1	
-21	S1495-12	HOSE-3.00 IN LG BKI -----	1	
		ATTACHING PARTS -----		
-22	S1494-16	CLAMP -----	2	
		---*---		
-23	0400343-12	OIL BREATHER LINE-UPPER -----	1	
-24	S1495-12	HOSE-11.50 IN LG BKI -----	1	
		ATTACHING PARTS -----		
-25	S1494-16	CLAMP -----	2	
		---*---		
-26	0400343-13	OIL BREATHER LINE-LOWER -----	1	
		ATTACHING PARTS -----		
-27	AN742D12	CLAMP -----	1	
	AN742D7	CLAMP -----	1	
	AN520-10R8	SCREW -----	1	
	AN960-10	WASHER -----	1	
	MS20365-1032C	NUT -----	1	
		---*---		
-28	S1517-14	CONTROL ASSY-FUEL STRAINER DRAIN -----	1	
		ATTACHING PARTS -----		
-29	0416002-1	BRACKET-FUEL STRAINER DRAIN CONTROL -----	1	
-30	0416002-2	CLAMP-FUEL STRAINER DRAIN CONTROL -----	1	
-31	AN3-6A	BOLT -----	2	
-32	AN960-10	WASHER -----	2	
-33	MS21045L3	NUT -----	2	
	MS9025-02	CLAMP ATTACH CONTROL TO FIREWALL -----	1	
	S102178-8	SCREW ATTACH CONTROL TO FIREWALL -----	1	
	NAS446-4-3	NUT ATTACH CONTROL TO FIREWALL -----	1	
-34	AN742D3	CLAMP -----	1	
-35	AN520-10R8	SCREW -----	1	
-36	MS20364-1032C	NUT -----	1	
-37	S2323-3	CLAMP -----	1	
-38	AN960-416	WASHER -----	1	
-39	MS20365-428C	NUT -----	1	
-40	SEE FIG 81	FUEL SYSTEM INSTL -----	1	
		CONTINUED ON NEXT PAGE		

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION							UNITS PER ASSY	USABLE ON CODE
		1	2	3	4	5	6	7		
62 -41	S1053K16T	HOSE-CARB HEAT	13.0	IN	LG	BKI	-----		1	F G
-41A	S1053K16T	HOSE-CARB HEAT	17.0	IN	LG	BKI	-----		1	
-41B	S1891-32	ATTACHING PARTS							2	N P T
-41C	0454013-1	SHROUD ASSY-CARB HEAT	WEU	0454022-1	-----				1	
	0454022-1	SHROUD ASSY-CARB HEAT	WEU	0454022-5	-----				1	
	0454022-5	SHROUD ASSY-CARB HEAT	-----						1	
-41D	AN737TW58	ATTACHING PARTS							2	G F O R
-42	SEE FIG 64 & 65	CLAMP	-----						1	
	SEE FIG 64A	EXHAUST SYSTEM ASSY	-----						1	C C D E
	SEE FIG 64B	EXHAUST SYSTEM ASSY	-----						1	
-43		EXHAUST SYSTEM ASSY	-----						1	
	S2335-1	SENDING UNIT-OIL TEMP	STEWART-WARNER	-----					NP	
-43A	AN900-10	SENDING UNIT-OIL TEMP	ROCHESTER	-----					1	
-44	MS35489-19	GASKET-OIL TEMP SENDING UNIT	-----						1	
-45	9863053-12	GROMMET	ONE ON UPR LH & ONE ON UPR RH BAFFLES	-----					2	
	9863053-20	CONTROL-THROTTLE	WEU	9863053-20	-----				1	
	9863055-1	CONTROL-THROTTLE	-----						1	
	9863056-1	CONTROL-THROTTLE	WEU	9863056-1	-----				1	
-46	AN3-7A	ATTACHING PARTS							2	
-47	0456010-1	BOLT	-----						1	
-48	NAS43HT3-9	BRACKET-THROTTLE CONTROL	-----						1	
-49	S351	SPACER	-----						1	
-50	AN960-10	CLAMP	-----						1	
-51	MS20365-1032C	WASHER	-----						2	
-52	AN315-3R	NUT	-----						2	
-53	S1104-3	NUT	-----						1	
-54	AN3-6	ROD END	-----						1	
-55	S1450-3-14-032	BOLT	-----						1	
-56	AN960-10	WASHER	-----						1	
-57	AN310-3	WASHER	-----						2	
-57A	MS24665-132	NUT	-----						1	
-58	0456009-1	COTTER PIN	-----						1	
-59	AN3-3A	ADAPTOR-THROTTLE	-----						1	
-59A	AN960-10L	ATTACHING PARTS							2	
-60	MS20364-1032C	BOLT	-----						2	
-61	0456008-5	WASHER	-----						2	
-62	9862010-3	NUT	-----						1	
-63	S2323-13	SUPPORT ASSY-MIXTURE CONTROL	-----						1	
-64	AN960-416	CONTROL-MIXTURE	-----						1	
-65	MS21042L4	ATTACHING PARTS							1	
-66	AN742D3	CLAMP	-----						2	
-67	AN3-4A	WASHER	-----						1	
-68	AN960-10	NUT	-----						1	L L L L M M M M
-69	MS20365-1032C	CLAMP	-----						1	
-69A	S1485D8U	WASHER	-----						1	
-69B	S1021Z8-12	NUT	-----						1	
-69C	S1485D12U	CLAMP	-----						1	
-69D	S1021Z10-12	SCREW	-----						1	
-69E	AN742D3	CLAMP	-----						2	
-69F	S2300-1	BOLT	-----						1	
-69G	AN742D3	CLAMP	-----						1	
-69H	S1021Z8-10	SCREW	-----						1	
-69I	NAS446-4-1	NUT	-----						1	
		-----*								

CONTINUED ON NEXT PAGE

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
62 -70	S1230-19 S1230-20	CONTROL-CARBURETOR HEAT ----- CONTROL-CARBURETOR HEAT -----	1 1	J K
		ATTACHING PARTS		
-71	S2323-5	CLAMP -----	1	
-72	AN960-10L	WASHER -----	2	
-73	AN960-10	WASHER -----	1	
-74	MS20365-1032C	NUT -----	1	
-75	AN742D3	CLAMP -----	1	
	AN3-3A	BOLT -----	1	
	AN960-10	WASHER -----	1	
	MS20365-1032C	NUT -----	1	
-76	S1485D8U	CLAMP -----	1	
-77	AN742D3	CLAMP -----	1	
	S1021Z8-12	SCREW -----	1	
-78	S1485DG12U	CLAMP -----	1	J
	AN742D3	CLAMP -----	1	J
	S1021Z10-12	SCREW -----	1	J
-78A	S1485D12U	CLAMP -----	1	K
-78B	AN742D3	CLAMP -----	1	K
	S1021Z10-12	SCREW -----	1	K
		-----*		
-79	0450052-1	AIRBOX ASSY-CARBURETOR WEU 0450052-2 -----	1	A
	0450052-2	AIRBOX ASSY-CARBURETOR WEU 0450052-3 -----	1	B
	0450052-3	AIRBOX ASSY-CARBURETOR -----	1	H
		ATTACHING PARTS		
-80	0550198-1	STUD -----	4	
-81	21323	GASKET-CARBURETOR AIRBOX CM -----	1	
-82	AN936A416	WASHER -----	4	
-83	AN315-4R	NUT -----	4	
		-----*		
-84	S2280-8-00	ARM ASSY -----	1	
		ATTACHING PARTS		
-85	MS16562-17	ROLL PIN -----	1	
		-----*		
-86	0450070-5	VALVE ASSY-BUTTERFLY -----	1	
-87	0450070-4	SEAL-BUTTERFLY -----	1	
-88	0750113-1	HOUSING ASSY -----	2	
-89	S1853-3	RECEPTACLE -----	2	
-89A	S1853-1	RECEPTACLE -----	2	
-89B	0450066-5	SEAL ASSY-AIRBOX -----	1	
-90	0450066-6	SEAL-AIR FILTER -----	2	
-91	0450066-7	STIFFENER-SEAL LH -----	1	
	0450066-8	STIFFENER-SEAL RH -----	1	
-92	C294510-0201	FILTER ASSY-CARBURETOR AIR -----	1	
-93	S1053K24	HOSE-CABIN HEAT 17.0 IN LG BKI -----	1	
		ATTACHING PARTS		
	S1891-48	CLAMP -----	2	
		-----*		
-94	SEE FIG 60	PROPELLER & SPINNER INSTL -----	1	
-95	SEE FIG 63	ENGINE COMPONENTS -----	AR	
-96	SEE FIG 66	ENGINE BAFFLES INSTL -----	1	
-97	SEE FIG 84	OIL SYSTEM INSTL -----	1	
-98	SEE FIG 86	ALTERNATOR INSTL -----	1	
NOTE. @ WHEN INITIALLY REPLACING THIS PART, ORDER SK152-23. NOTE. * THIS PART HAS BEEN INSTALLED AS AN ALTERNATE OR HAS BEEN INSTALLED ON AIRPLANES THAT HAVE INCORPORATED SK152-23. A---152 SERIAL 15279406 THRU 15280679 F152 SERIAL F15201429 THRU F15201498 A152 SERIAL A1520735 THRU A1520765 FA152 SERIAL FA1520337 THRU FA1520346 CONTINUED ON NEXT PAGE				

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION							UNITS PER ASSY	USABLE ON CODE
		1	2	3	4	5	6	7		
62 -		B---152 SERIAL 15280680 THRU 15283734 F152 SERIAL F15201499 THRU F15201683 A152 SERIAL A1520766 THRU A1520885 FA152 SERIAL FA1520347 THRU FA1520357 C---152 SERIAL 15279406 THRU 15282031 F152 SERIAL F15201429 THRU F15201528 A152 SERIAL A1520735 THRU A1520808 FA152 SERIAL FA1520337 THRU FA1520347 D---152 SERIAL 15282032 THRU 15283243 F152 SERIAL F15201529 THRU F15201633 A152 SERIAL A1520809 THRU A1520859 FA152 SERIAL FA1520348 THRU FA1520356 E---152 SERIAL 15283244 & ON F152 SERIAL F15201634 & ON A152 SERIAL A1520860 & ON FA152 SERIAL FA1520357 & ON F---152 SERIAL 15279406 THRU 15283591 F152 SERIAL F15201429 THRU F15201683 A152 SERIAL A1520735 THRU A1520878 FA152 SERIAL FA1520337 THRU FA1520357 G---152 SERIAL 15283592 & ON F152 SERIAL F15201674 & ON A152 SERIAL A1520879 & ON FA152 SERIAL FA1520358 & ON H---152 SERIAL 15283735 & ON F152 SERIAL F15201684 & ON A152 SERIAL A1520886 & ON FA152 SERIAL FA1520358 & ON J---152 SERIAL 15279406 THRU 15283833 F152 SERIAL F15201429 THRU F15201723 A152 SERIAL A1520735 THRU A1520898 FA152 SERIAL FA1520337 THRU FA1520372 K---152 SERIAL 15283834 & ON F152 SERIAL F15201724 & ON A152 SERIAL A1520899 & ON FA152 SERIAL FA1520373 & ON L---152 SERIAL 15279406 THRU 15283859 F152 SERIAL F15201429 THRU F15201828 A152 SERIAL A1520735 THRU A1520901 FA152 SERIAL FA1520337 THRU FA1520392 M---152 SERIAL 15283860 & ON F152 SERIAL F15201829 & ON A152 SERIAL A1520902 & ON FA152 SERIAL FA1520393 & ON N---152 SERIAL 15283592 THRU 15284898 F152 SERIAL F15201674 THRU F15201893 A152 SERIAL A1520879 THRU A1520970 FA152 SERIAL FA1520358 THRU FA1520377 P---152 SERIAL 15284899 THRU 15285405 F152 SERIAL F15201894 THRU F15201899 A152 SERIAL A1520971 THRU A1520998 FA152 SERIAL FA1520378 THRU FA1520379 Q---152 SERIAL 15283592 THRU 15285091 F152 SERIAL F15201674 THRU F15201893 A152 SERIAL A1520879 THRU A1520975 FA152 SERIAL FA1520358 THRU FA1520377 R---152 SERIAL 15285092 & ON F152 SERIAL F15201894 & ON A152 SERIAL A1520976 & ON FA152 SERIAL FA1520378 & ON S---152 SERIAL 15285075 & ON A152 SERIAL A1520976 & ON T---152 SERIAL 15285406 & ON F152 SERIAL F15201900 & ON A152 SERIAL A1520999 & ON FA152 SERIAL FA1520380 & ON U---152 SERIAL 15279406 THRU 15285594 F152 SERIAL F15201429 THRU F15201928 A152 SERIAL A1520735 THRU A1521014 FA152 SERIAL FA1520337 THRU FA1520382 V---152 SERIAL 15285595 & ON F152 SERIAL F15201929 & ON A152 SERIAL A1521015 & ON FA152 SERIAL FA1520383 & ON								

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION							UNITS PER ASSY	USABLE ON CODE	
		1	2	3	4	5	6	7			
63 -		*	ENGINE COMPONENTS & ASSOCIATED ACCESSORIES -----							NP	
- 1	21323		GASKET-CARBURETOR AIR INTAKE TO CARBURETOR CM -----							1	
- 2	C294510-0201		FILTER-CARBURETOR AIR -----							1	
- 3	LW-15496		CARBURETOR ASSY LY MARVEL-SCHEBLER 10-5199 -----							NP	
			FSO LW-16907 -----								
	LW-16073	**	CARBURETOR ASSY LY MARVEL-SCHEBLER 10-5220 -----							NP	
			FSO LW-16907 -----								
	LW-16677	**	CARBURETOR ASSY LY MARVEL-SCHEBLER 10-5257 -----							NP	
			FSO LW-16907 -----								
	LW-16907	**	CARBURETOR ASSY LY MARVEL-SCHEBLER 10-5267 -----							1	
- 4	60592		GASKET-CARBURETOR TO ENGINE LY -----							1	
- 5	LW-15483		STARTER 24V LY PRESTOLITE MHB-4015 -----							1	C
	LW-16207		STARTER 24V LY -----							1	D
- 6	C611503-0102		ALTERNATOR-60AMP 28V -----							1	
- 7	C611004-0101		VOLTAGE REGULATOR 24V -----							1	A
	C611002-0105		VOLTAGE REGULATOR 24V ALTERNATE -----							1	A
	C611005-0101		ALTERNATOR CONTROL UNIT -----							1	B
	C611005-0102		ALTERNATOR CONTROL UNIT ALTERNATE -----							1	B
- 8	LW-16364		MAGNETO-RH SLICK MODEL 4150 LY REPLACES MODEL 4050 ----							1	A
			WEU LW-15636 SEE NOTE % -----								
	LW-15636	%	MAGNETO-RH SLICK MODEL 4250 LY -----							1	A
			REPLACES MODELS 4050 & 4150 -----								
	LW-16370		MAGNETO-RH SLICK MODEL 4181 LY REPLACES MODEL 4081 ----							1	E
			WEU LW-16595 SEE NOTE % -----								
	LW-16595	%	MAGNETO-RH SLICK MODEL 4281 LY -----							1	G
			REPLACES MODELS 4081 & 4181 -----								
- 9	LW-16370		MAGNETO-LH SLICK MODEL 4181 LY REPLACES MODEL 4081 ----							1	F
			WEU LW-16595 SEE NOTE % -----								
	LW-16595	%	MAGNETO-LH SLICK MODEL 4281 LY -----							1	G
			REPLACES MODELS 4081 & 4181 -----								
-10	77743		HARNESS ASSY-IGNITION RH LY -----							1	
-11	77745		HARNESS ASSY-IGNITION LH LY -----							1	
-12	REM38E		SPARK PLUG-18M CHAMPION -----							AR	
	SR86		SPARK PLUG-18M AC -----							AR	
	REM40E		SPARK PLUG CHAMPION -----							AR	
	REM37BY		SPARK PLUG EXTENDED ELECTRODE CHAMPION -----							AR	
NOTE. *THIS FIGURE IS NOT ILLUSTRATED. THIS LISTING IS COMPILED TO PROVIDE PART NUMBERS OF COMMONLY USED ENGINE COMPONENTS AND ASSOCIATED ACCESSORIES. RELATIONSHIP OF THESE PARTS TO ENGINE OR AIRCRAFT ASSEMBLIES IS NOT INDICATED BY INDENTATION. INDEX NUMBERS ARE PROVIDED FOR LOCATION OF LINE ON WHICH THE PART NUMBER APPEARS. FOR ENGINE COMPONENTS NOT LISTED ON THIS FIGURE REFER TO LYCOMING PARTS CATALOG. NOTE. **THIS CARBURETOR HAS AN ACCELERATOR PUMP. NOTE. %WHEN INITIALLY ORDERING THESE MAGNETOS FOR AIRCRAFT SERIALS 15279406 THRU 15282031, F15201429 THRU F15201528, A1520735 THRU A1520808, FA1520337 THRU FA1520346, A SHORTING BAR MUST BE INSTALLED ON IGNITION SWITCH. REFER TO SERVICE LETTER SE80-20. CONTINUED ON NEXT PAGE											

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION							UNITS PER ASSY	USABLE ON CODE
		1	2	3	4	5	6	7		
63 -		A---152 SERIAL 15279406 THRU 15282031 F152 SERIAL F15201429 THRU F15201528 A152 SERIAL A1520735 THRU A1520808 FA152 SERIAL FA1520337 THRU FA1520347 B---152 SERIAL 15282032 & ON F152 SERIAL F15201529 & ON A152 SERIAL A1520809 & ON FA152 SERIAL FA1520348 & ON C---152 SERIAL 15279406 THRU 15283091 F152 SERIAL F15201429 & ON A152 SERIAL A1520735 THRU A1520852 FA152 SERIAL FA1520337 & ON D---152 SERIAL 15283092 & ON A152 SERIAL A1520853 & ON E---152 SERIAL 15282032 THRU 15284027 F152 SERIAL F15201529 THRU F15201749, F15201753, F15201754, F15201756 THRU F15201761, F15201777, F15201782, F15201787, F15201791, F15201795, F15201799 & F15201808 A152 SERIAL A1520809 THRU A1520914 FA152 SERIAL FA1520348 THRU FA1520365 F---152 SERIAL 15279406 THRU 15284027 F152 SERIAL F15201429 THRU F15201749, F15201753, F15201754, F15201756 THRU F15201761, F15201777, F15201782, F15201787, F15201791, F15201795, F15201799 & F15201808 A152 SERIAL A1520735 THRU A1520914 FA152 SERIAL FA1520337 THRU FA1520365 G---152 SERIAL 15284028 & ON F152 SERIAL F15201750 THRU F15201752, F15201755, F15201762 THRU F15201776, F15201778 THRU F15201781, F15201783 THRU F15201786, F15201788 THRU F15201790, F15201792 THRU F15201794, F15201796 THRU F15201798, F15201800 THRU F15201807, F15201809 & ON A152 SERIAL A1520915 & ON FA152 SERIAL FA1520366 & ON								

152 & A152 Parts Catalog

Engine (Cont)

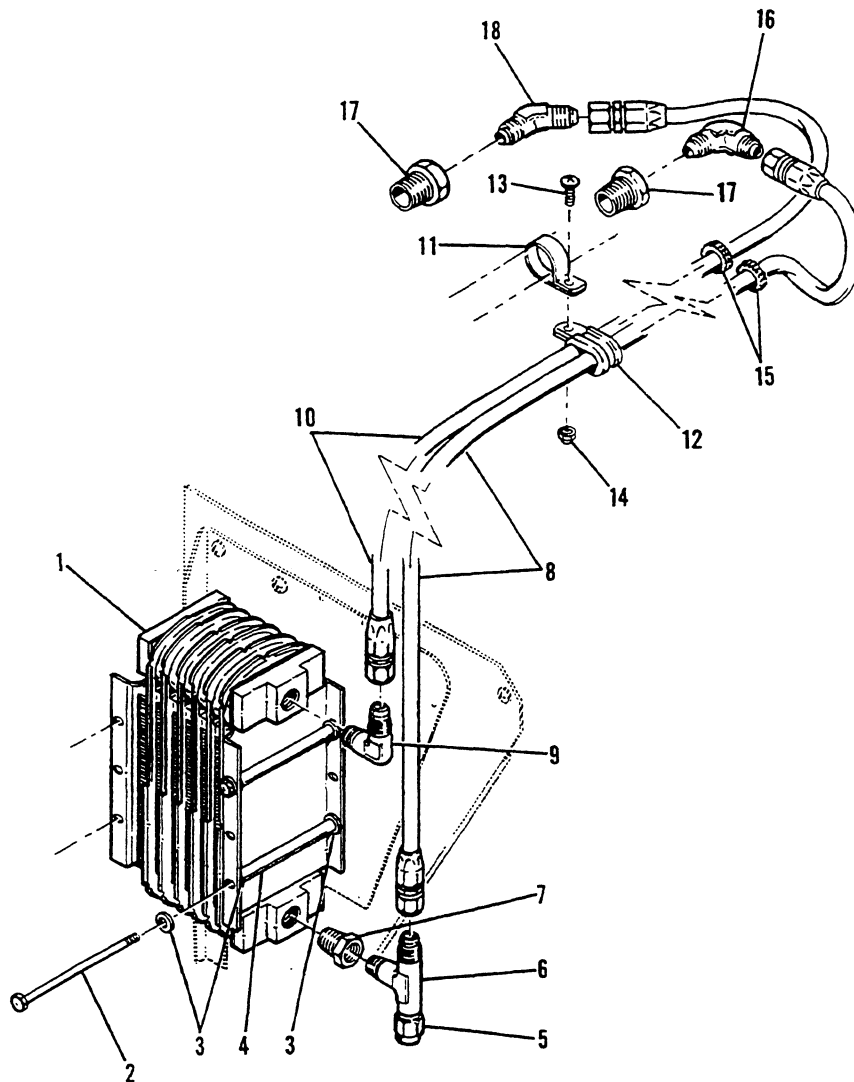



Figure 63A. Oil Cooler Installation

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
63A-		OIL COOLER INSTALLATION -----	NP	
- 1	8406J	OIL COOLER SW WEU 8406R -----	1	A
	8547332	OIL COOLER HR WEU 8406R -----	1	B
	8406R	OIL COOLER SW -----	1	C
		ATTACHING PARTS		
- 2	AN3-40A	BOLT -----	4	
- 3	AN960-10	WASHER -----	12	
- 4	NAS43HT3-216	SPACER -----	4	
		-----*		
- 5	0556018-1	CAP ASSY -----	1	
- 6	MS20825-6D	TEE -----	1	
- 7	AN912-2	BUSHING -----	1	
- 8	S1167-6-0370	HOSE ASSY -----	1	
- 9	MS20822-6-6	ELBOW -----	1	
-10	S1167-6-0370	HOSE ASSY -----	1	
-11	AN742D12	CLAMP -----	1	
-12	S2269-1	CLAMP -----	1	
		ATTACHING PARTS		
-13	AN520-10R8	SCREW -----	1	
-14	MS20365-1032C	NUT -----	1	
		-----*		
-15	S1050-1	GROMMET-2.50 IN LG BKI -----	2	
-16	MS20822-6D	ELBOW -----	1	
-17	AN912-2	BUSHING -----	2	
-18	MS20823-6D	ELBOW -----	1	
		A---152 SERIAL 15279406 THRU 15285516 F152 SERIAL F15201429 THRU F15201933 A152 SERIAL A1520735 THRU A1521012 FA152 SERIAL FA1520337 THRU FA1520387		
		B---152 SERIAL 15285517 THRU 15285805 F152 SERIAL F15201934 THRU F15201943 A152 SERIAL A1521013 THRU A1521024		
		C---152 SERIAL 15285806 & ON F152 SERIAL F15201944 & ON A152 SERIAL A1521025 & ON FA152 SERIAL FA1520388 & ON		

152 & A152 Parts Catalog

Engine (Cont)

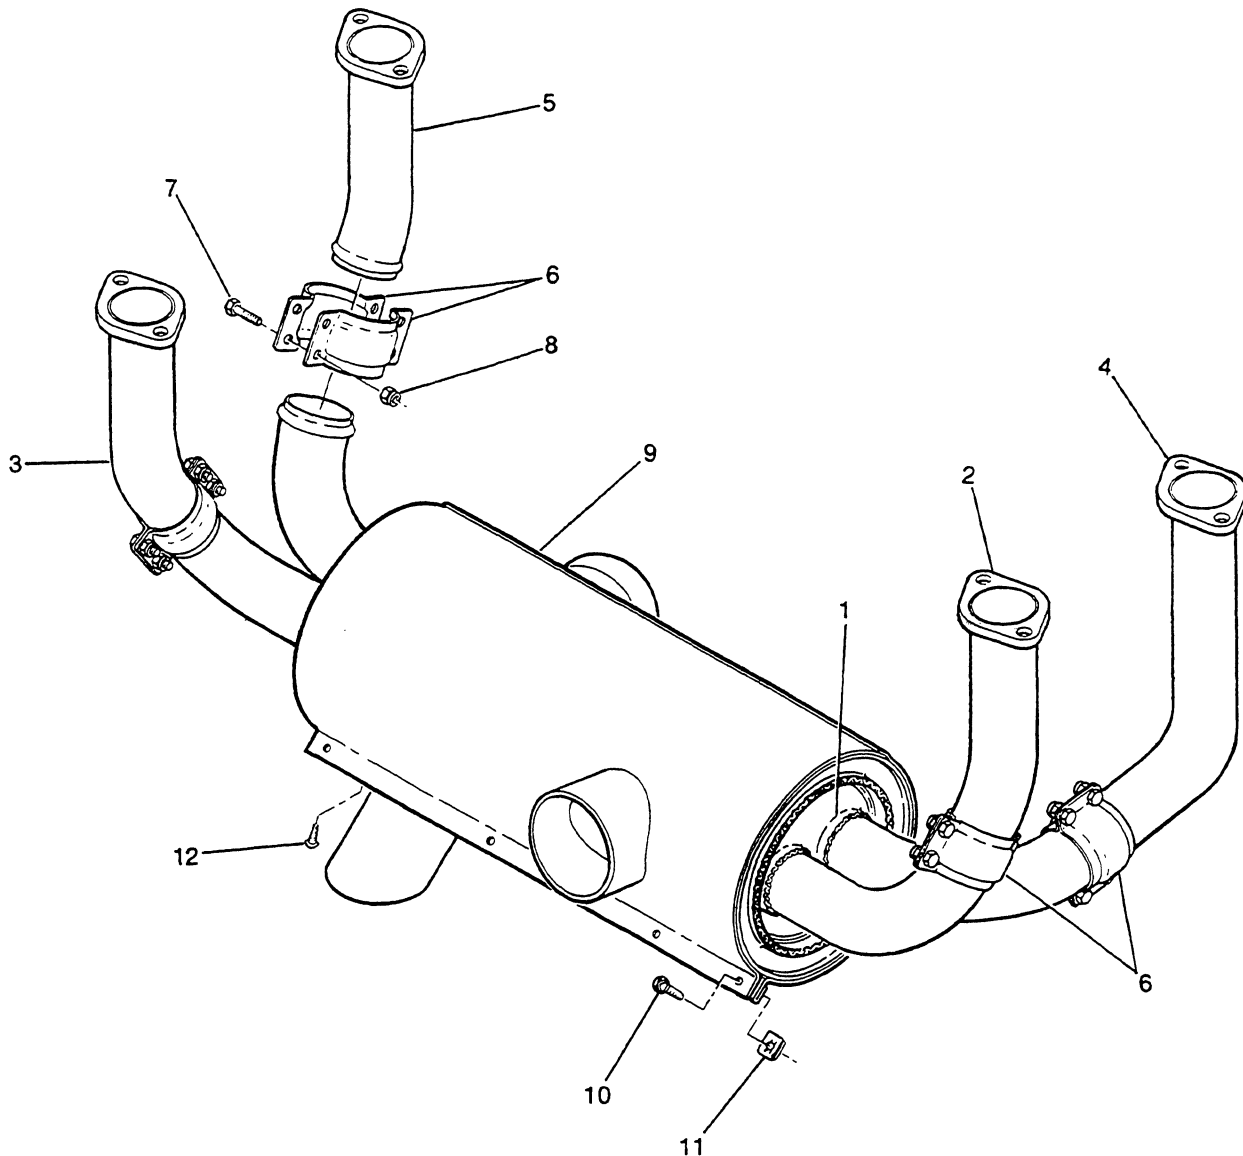

152 SERIAL 15279406 THRU 15283591
F152 SERIAL F15201429 THRU F15201673
A152 SERIAL A1520735 THRU A1520878
FA152 SERIAL FA1520337 THRU FA1520357


Figure 64. Exhaust System Assembly

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION							UNITS PER ASSY	USABLE ON CODE
		1	2	3	4	5	6	7		
64 -	0454011-1	EXHAUST SYSTEM ASSEMBLY -----							1	A
	0454011-200	MUFFLER & RISER ASSY -----							1	
- 1	0454009-5	%	MUFFLER WELD ASSY -----						1	
- 2	0454002-11	*	RISER ASSY-LH FWD -----						1	
- 3	0454002-4	*	RISER ASSY-RH FWD -----						1	
- 4	0454002-10	*	RISER ASSY-LH AFT -----						1	
- 5	0454002-2	*	RISER ASSY-RH AFT -----						1	
- 6	1555014-2		CLAMP HALF -----						8	
		ATTACHING PARTS								
- 7	AN3-4A	BOLT -----						4		
- 8	MS20365-1032C	NUT -----						4		
		-----*								
- 9	0454010-1	SHROUD ASSY-HEATER -----						1		
		ATTACHING PARTS								
-10	S1021Z8-8	SCREW -----						5		
-11	NAS395-12-3	NUT -----						5		
-12	S1021Z6-7	SCREW -----						2		
		-----*								
NOTE. %WHEN INITIALLY REPLACING THIS PART CHECK END PLATE OF MUFFLER, IF THERE IS NOT A "C" STAMPED ON END PLATE YOU MUST ORDER ONE 0454011-200 MUFFLER & RISER ASSY. NOTE. *WHEN INITIALLY REPLACING THESE PARTS CHECK EDGE OF RISER FLANGE, IF THERE IS NOT A "C" STAMPED ON RISER FLANGE YOU MUST ORDER ONE 0454011-200 MUFFLER & RISER ASSY. A---152 SERIAL 15279406 THRU 15283591 F152 SERIAL F15201429 THRU F15201673 A152 SERIAL A1520735 THRU A1520878 FA152 SERIAL FA1520337 THRU FA1520357										

152 & A152 Parts Catalog

Engine (Cont)

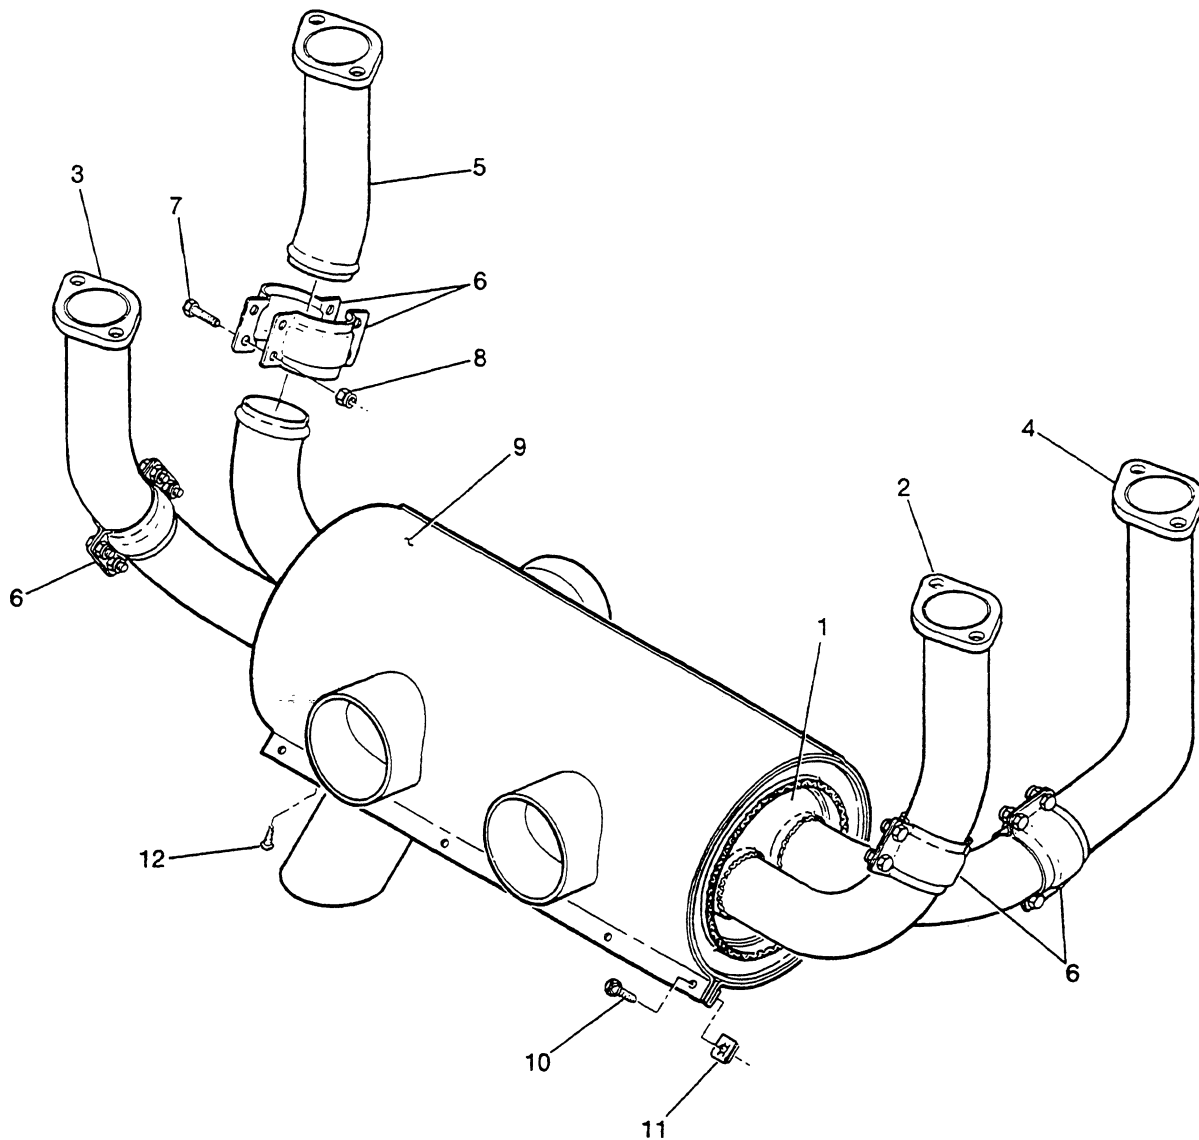

152 SERIAL 15283592 THRU 15285091
F152 SERIAL F15201674 THRU F15201893
A152 SERIAL A1520879 THRU A1520975
FA152 SERIAL FA1520358 THRU FA1520377


Figure 64A. Exhaust System Assembly

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION							UNITS PER ASSY	USABLE ON CODE
		1	2	3	4	5	6	7		
64A-	0454011-2	EXHAUST SYSTEM ASSY WEU 0454021-1 SEE FIG 64B -----							1	A
- 1	0454009-5	MUFFLER WELD ASSY -----							1	
- 2	0454002-11	RISER ASSY-LH FWD -----							1	
- 3	0454002-4	RISER ASSY-RH FWD -----							1	
- 4	0454002-10	RISER ASSY-LH AFT -----							1	
- 5	0454002-2	RISER ASSY-RH AFT -----							1	
- 6	1555014-2	CLAMP HALF -----							8	
		ATTACHING PART								
- 7	AN3-4A	BOLT -----							4	
- 8	MS20365-1032C	NUT -----							4	
		-----*								
- 9	0454010-9	SHROUD ASSY-HEATER -----							1	
		ATTACHING PARTS								
-10	S1021Z8-8	SCREW -----							5	
-11	NAS395-12-3	NUT -----							5	
-12	S1021Z6-7	SCREW -----							3	
		-----*								
		A---152 SERIAL 15283592 THRU 15285091 F152 SERIAL F15201674 THRU F15201893 A152 SERIAL A1520879 THRU A1520975 FA152 SERIAL FA1520358 THRU FA1520377								

152 & A152 Parts Catalog

Engine (Cont)

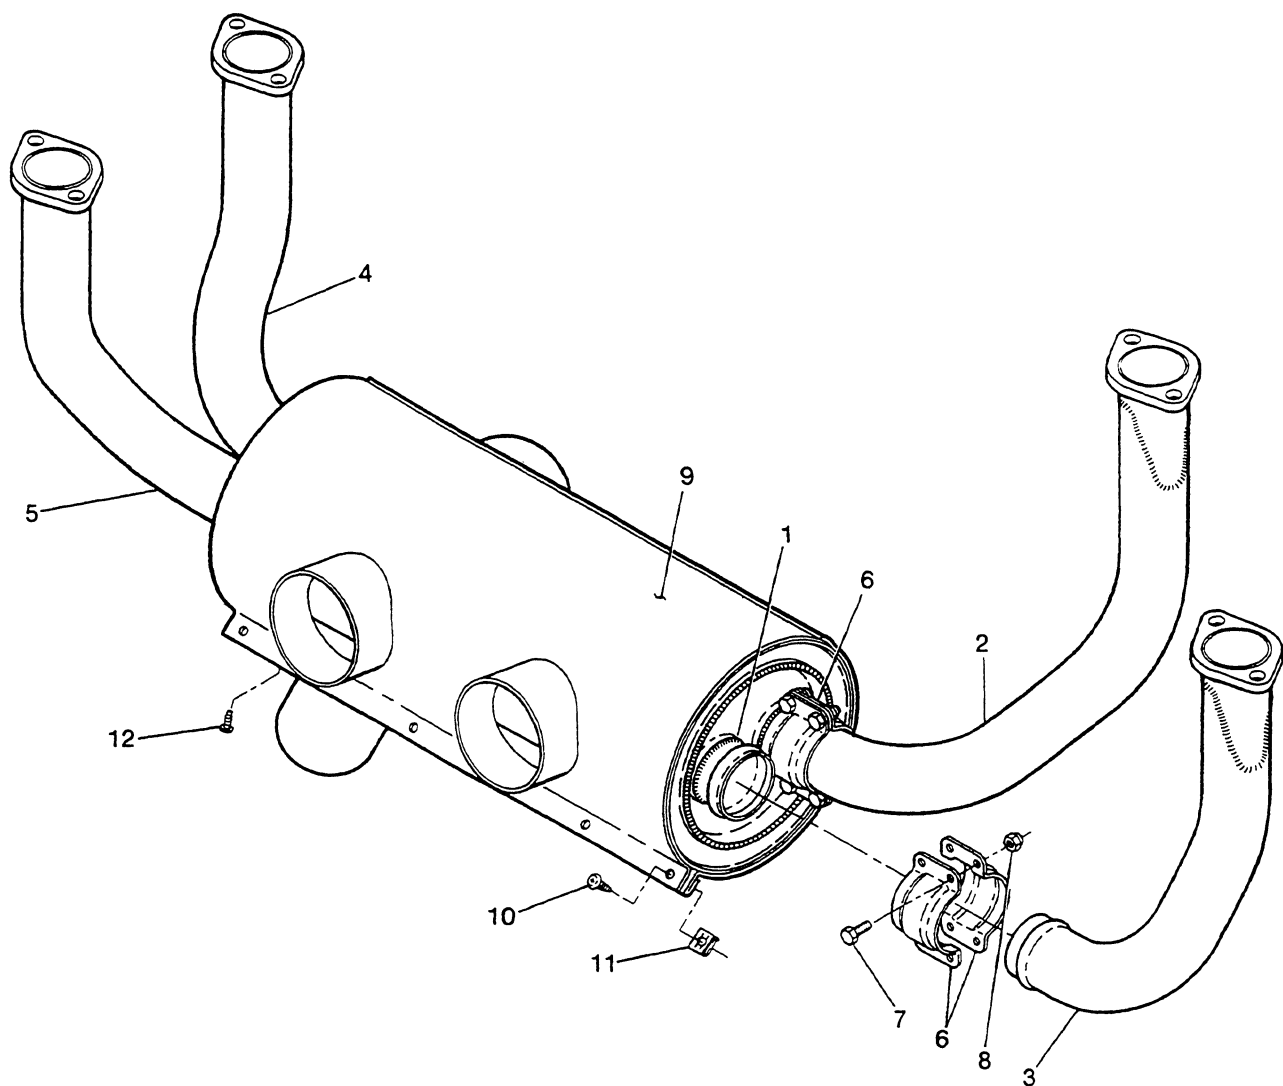

152 SERIAL 15285092 & ON
F152 SERIAL F15201894 & ON
A152 SERIAL A1520976 & ON
FA152 SERIAL FA1520378 & ON


Figure 64B. Exhaust System Assembly

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION							UNITS PER ASSY	USABLE ON CODE
		1	2	3	4	5	6	7		
64B-	0454021-1	EXHAUST SYSTEM ASSY -----							1	A
- 1	0454009-6	MUFFLER WELD ASSY -----							1	
- 2	0454023-1	RISER ASSY-LH AFT -----							1	
- 3	0454023-2	RISER ASSY-LH FWD -----							1	
- 4	0454023-3	RISER ASSY-RH AFT -----							1	
- 5	0454023-4	RISER ASSY-RH FWD -----							1	
- 6	1555014-2	CLAMP HALF -----							8	
		ATTACHING PARTS								
- 7	AN3-4A	BOLT -----							4	
- 8	MS20365-1032C	NUT -----							4	
		---*---								
- 9	0454010-9	SHROUD ASSY-HEATER -----							1	
		ATTACHING PARTS								
-10	S1021Z8-8	SCREW -----							5	
-11	NAS395-12-3	NUT -----							5	
-12	S1021Z6-7	SCREW -----							3	
		---*---								
		A---152 SERIAL 15285092 & ON F152 SERIAL F15201894 & ON A152 SERIAL A1520976 & ON FA152 SERIAL FA1520378 & ON								

152 & A152 Parts Catalog

Engine (Cont)

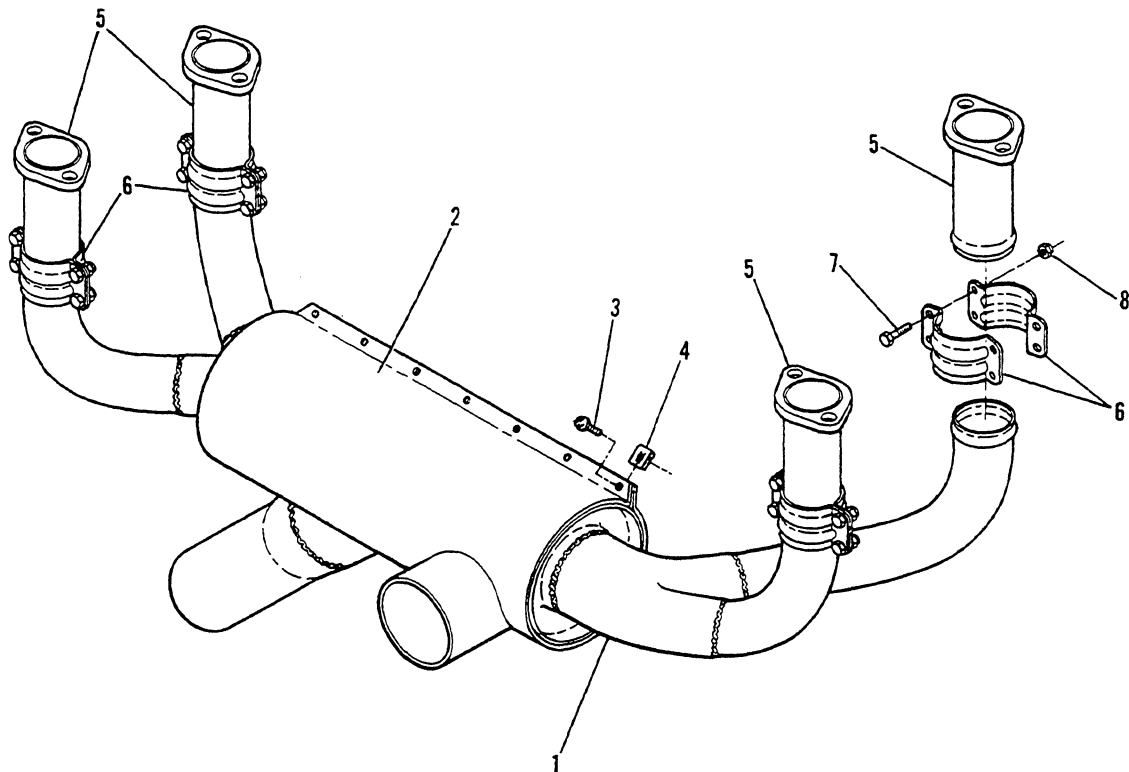

ALTERNATE

152 SERIAL 15279406 THRU 15283591
F152 SERIAL F15201429 THRU F15201673
A152 SERIAL A1520735 THRU A1520878
FA152 SERIAL FA1520337 THRU FA1520357

Figure 65. Exhaust System Assembly

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION							UNITS PER ASSY	USABLE ON CODE
		1	2	3	4	5	6	7		
65 -	EL099001-060	EXHAUST SYSTEM ASSEMBLY ALTERNATE ELNO -----							1	A
- 1	EL099001-716	MUFFLER ASSY ELNO -----							1	
- 2	EL099001-717	SHROUD ASSY-HEATER ELNO -----							1	
- 3	S102178-8	SCREW -----							7	
- 4	NAS395-14-3	NUT -----							7	
- 5	EL099001-271	RISER ASSY ELNO -----							4	
- 6	1555014-2	CLAMP HALF ELNO -----							8	
		ATTACHING PARTS								
- 7	AN3-4A	BOLT -----							4	
- 8	MS20365-1032C	NUT -----							4	
		---*---								
		A---152 SERIAL 15279406 THRU 15283591								
		F152 SERIAL F15201429 THRU F15201673								
		A152 SERIAL A1520735 THRU A1520878								
		FA152 SERIAL FA1520337 THRU FA1520357								

152 & A152 Parts Catalog

Engine (Cont)

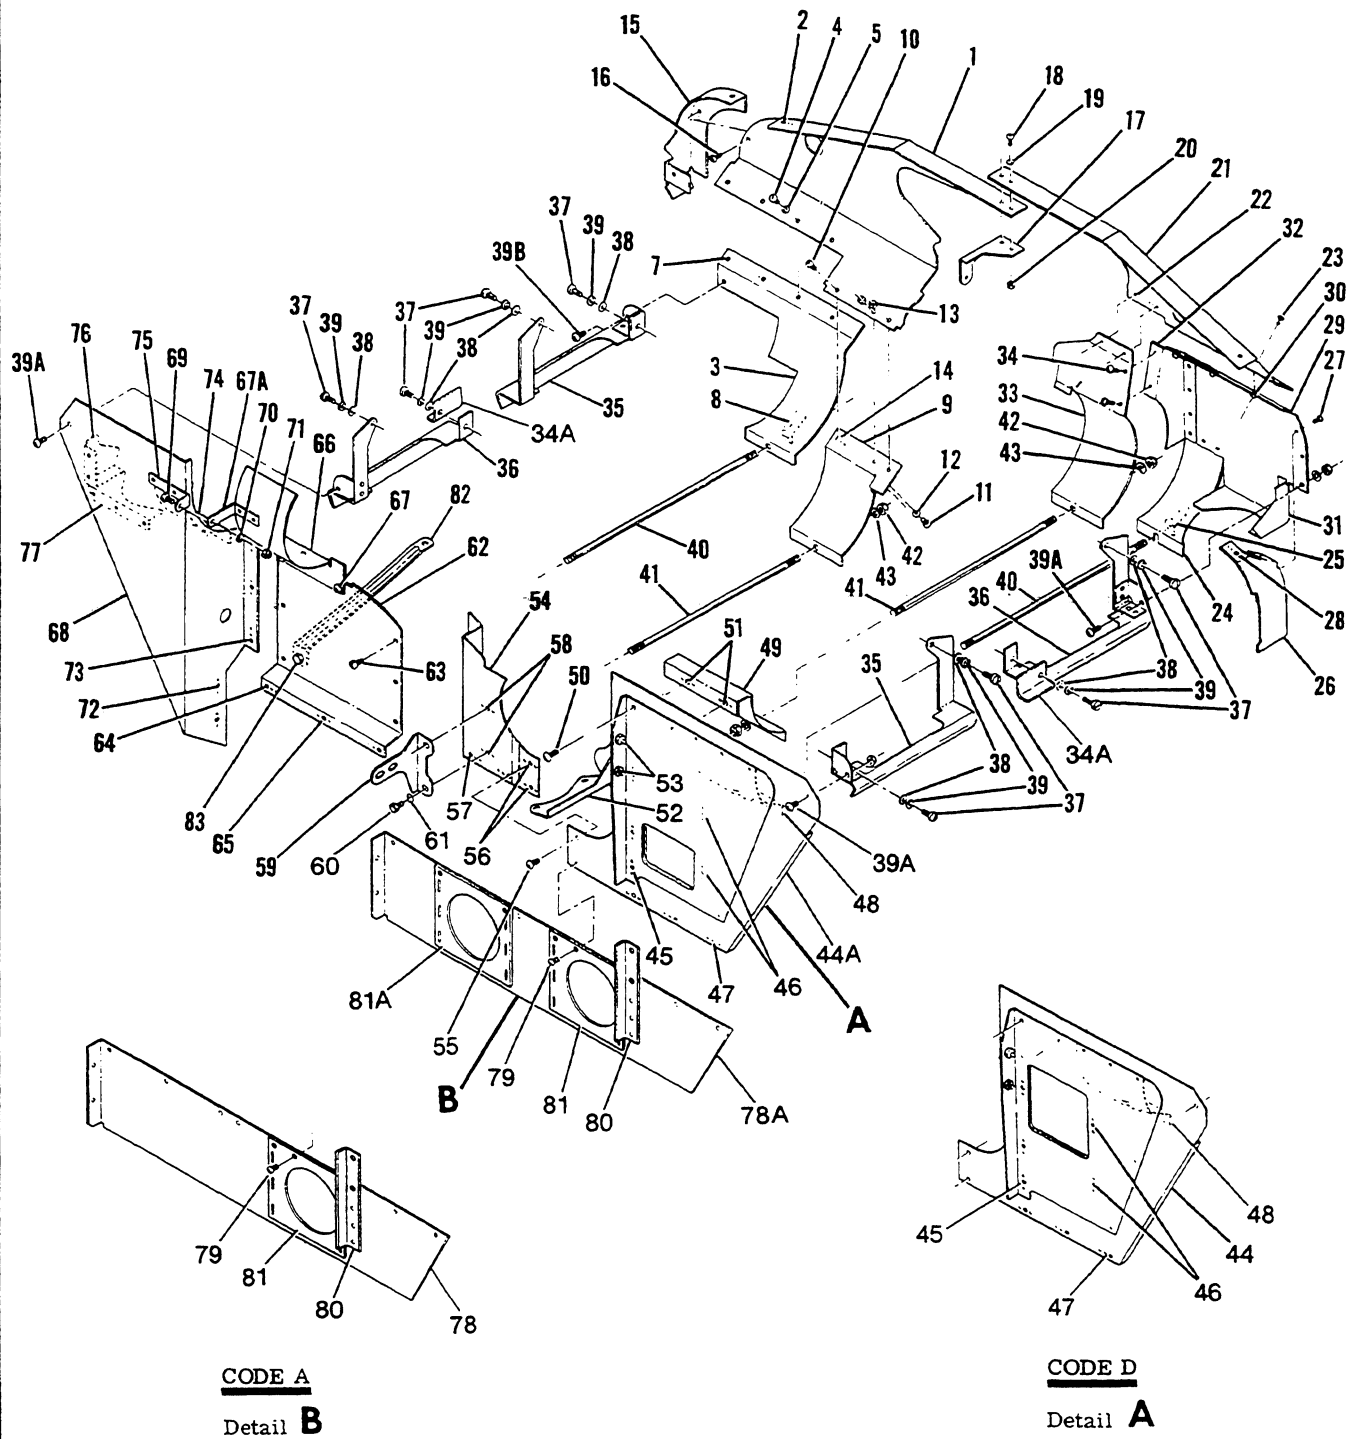


Figure 66. Engine Baffles Installation

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
66 -		ENGINE BAFFLES INSTALLATION -----	NP	
- 1	0455012-1	BAFFLE ASSY -----	1	
- 2	NAS687A08	NUTPLATE -----	1	
- 3	0455012-10	BAFFLE ASSY -----	1	
		ATTACHING PARTS		
- 4	AN525-832R6	SCREW -----	4	
- 5	AN960-8	WASHER -----	4	
		*-----		
- 6		DELETED -----		
- 7	NAS696A08	NUTPLATE -----	4	
- 8	0455027-2	BRACKET-BAFFLE SUPPORT -----	1	
- 9	0455012-11	BAFFLE ASSY -----	1	
		ATTACHING PARTS		
-10	AN525-832R6	SCREW -----	1	
-11	AN525-832R7	SCREW -----	2	
-12	AN960-8	WASHER -----	2	
-13	MS20364-832C	NUT -----	2	
		*-----		
-14	NAS696A08	NUTPLATE -----	1	
-15	0455012-7	BAFFLE ASSY -----	1	
		ATTACHING PARTS		
-16	AN525-832R6	SCREW -----	2	
		*-----		
	NAS687A08	NUTPLATE -----	1	
-17	0455008-1	BRACKET-AFT BAFFLE SUPPORT -----	1	
		ATTACHING PARTS		
-18	AN525-832R6	SCREW -----	2	
-19	AN960-8	WASHER -----	2	
-20	MS20364-832C	NUT -----	2	
		*-----		
-21	0455013-14	BAFFLE ASSY -----	1	
-22	NAS696A08	NUTPLATE -----	2	
	0455013-24	BAFFLE ASSY -----	1	
		ATTACHING PARTS		
-23	AN525-832R6	SCREW -----	5	
		*-----		
-24	0455013-21	BAFFLE ASSY -----	1	
-25	0455027-1	BRACKET-BAFFLE SUPPORT -----	1	
-26	0455013-19	BAFFLE ASSY -----	1	
		ATTACHING PARTS		
-27	AN525-832R6	SCREW -----	3	
		*-----		
-28	NAS696A08	NUTPLATE -----	4	
-29	0455013-17	BAFFLE ASSY -----	1	
-30	NAS696A08	NUTPLATE -----	3	
-31	0455013-7	BAFFLE -----	1	
-32	0455013-8	BAFFLE -----	1	
-33	0455013-23	BAFFLE -----	1	
		ATTACHING PARTS		
-34	AN525-832R6	SCREW -----	4	
	AN960-8	WASHER -----	2	
	MS20364-832C	NUT -----	2	
		*-----		
-34A	0455015-7	CLIP -----	2	E
-35	0455015-1	BAFFLE ASSY-SIDE -----	2	
-36	0455015-2	BAFFLE ASSY-SIDE -----	2	
		ATTACHING PARTS		
-37	AN500-416-10	SCREW -----	2	
-38	AN960-416	WASHER -----	2	
-39	AN936A416	LOCKWASHER -----	2	
-39A	AN525-832R6	SCREW -----	1	
	AN960-8	WASHER -----	1	
	MS20364-832C	NUT -----	1	
-39B	AN525-10R6	SCREW FASTEN TO RH AFT BAFFLE ONLY -----	1	
	AN960-10L	WASHER FASTEN TO RH AFT BAFFLE ONLY -----	1	
	MS20364-1032C	NUT FASTEN TO RH AFT BAFFLE ONLY -----	1	
		*-----		
-40	0455028-1	BAFFLE ROD -----	2	
-41	0455028-2	BAFFLE ROD -----	2	
		ATTACHING PARTS		
-42	MS21045L3	NUT -----	2	
-43	AN960-10	WASHER -----	2	
		*-----		
CONTINUED ON NEXT PAGE				

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
66 -	0455022-2	BAFFLE ASSY-FWD -----	1	A C E D E
	0455022-3	BAFFLE ASSY-FWD -----	1	
	0455022-4	BAFFLE ASSY-FWD -----	1	
-44	0455018-22	BAFFLE ASSY -----	1	
-44A	0455018-31	BAFFLE ASSY -----	1	
-45	NAS680A08	NUTPLATE -----	2	
-46	NAS680A3	NUTPLATE -----	4	
-47	NAS682A08	NUTPLATE -----	2	
-48	0455009-3	BAFFLE ASSY -----	1	
	0455027-2	BRACKET-BAFFLE SUPPORT -----	1	
-49	0455007-1	BAFFLE ASSY -----	1	
		ATTACHING PARTS		
-50	AN525-832R7	SCREW -----	2	
		*-----		
-51	NAS697A08	NUTPLATE -----	2	
-52	0455021-1	SUPPORT-BAFFLE -----	1	
		ATTACHING PARTS		
-53	AN525-10R6	SCREW -----	2	
	AN960-10L	WASHER -----	2	
	MS20364-1032C	NUT -----	2	
		*-----		
-54	0455018-19	BAFFLE ASSY -----	1	
		ATTACHING PARTS		
-55	AN525-832R7	SCREW -----	1	
		*-----		
-56	NAS1068A08	NUTPLATE -----	2	
-57	NAS682A08	NUTPLATE -----	4	
-58	NAS686A3	NUTPLATE -----	2	
	NAS680A08	NUTPLATE -----	1	
-59	0455018-13	SUPPORT -----	1	
		ATTACHING PARTS		
-60	AN3-3A	BOLT -----	2	
-61	AN960-10L	WASHER -----	2	
		*-----		
-62	0455018-17	BAFFLE ASSY -----	1	
		ATTACHING PARTS		
-63	AN525-832R7	SCREW -----	5	
		*-----		
-64	NAS682A08	NUTPLATE -----	3	
-65	NAS680A08	NUTPLATE -----	1	
-66	0455006-5	BAFFLE ASSY -----	1	
		ATTACHING PARTS		
-67	AN525-832R7	SCREW -----	2	
		*-----		
-67A	0455006-3	BRACKET -----	1	
-68	0455018-21	BAFFLE ASSY -----	1	
		ATTACHING PARTS		
-69	AN525-10R6	SCREW -----	1	
-70	AN960-10L	WASHER -----	1	
-71	MS20364-1032C	NUT -----	1	
		*-----		
-72	NAS680A08	NUTPLATE -----	3	
-73	NAS682A08	NUTPLATE -----	2	
-74	0455005-7	BAFFLE ASSY -----	1	
	0455027-1	BRACKET -----	1	
-75	0455005-3	BRACKET -----	1	
-76	0455018-10	BAFFLE -----	1	
-77	0455005-2	BAFFLE -----	1	
-78	0455018-25	BAFFLE ASSY -----	1	
-78A	0455018-27	BAFFLE ASSY -----	1	
		ATTACHING PARTS		
-79	AN525-832R7	SCREW -----	12	
		*-----		
-80	0455029-1	SUPPORT -----	1	
-81	0455018-20	SEAL-BAFFLE -----	1	
-81A	0455018-28	SEAL-BAFFLE -----	1	


CONTINUED ON NEXT PAGE

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION							UNITS PER ASSY	USABLE ON CODE
		1	2	3	4	5	6	7		
66 -82 -83	0455031-1	BRACE-BAFFLE -----							1	
		ATTACHING PARTS								
	AN3-3A	BOLT -----							1	
	AN960-10	WASHER -----							1	
	MS20365-1032C	NUT -----							1	
		-----*								
		NOTE. *WHEN INITIALLY ORDERING THESE PART FOR								
		AIRCRAFT PRIOR TO SERIALS 15280961, F15201491,								
		A1520772 & FA1520343 ALSO ORDER (2) MS21045L3								
		NUTS & (2) AN960-10 WASHERS PER BAFFLE ROD.								
		A---152 SERIAL 15279406 THRU 15283591								
		F152 SERIAL F15201429 THRU F15201673								
		A152 SERIAL A1520735 THRU A1520878								
		FA152 SERIAL FA1520337 THRU FA1520357								
		B---152 SERIAL 15283592 & ON								
		F152 SERIAL F15201674 & ON								
		A152 SERIAL A1520879 & ON								
		FA152 SERIAL FA1520358 & ON								
		C---152 SERIAL 15283592 THRU 15285594								
		F152 SERIAL F15201674 THRU F15201928								
		A152 SERIAL A1520879 THRU A1521014								
		FA152 SERIAL FA1520358 THRU FA1520382								
		D---152 SERIAL 15279406 THRU 15285594								
		F152 SERIAL F15201429 THRU F15201928								
		A152 SERIAL A1520735 THRU A1521014								
		FA152 SERIAL FA1520337 THRU FA1520382								
		E---152 SERIAL 15285595 & ON								
		F152 SERIAL F15201929 & ON								
		A152 SERIAL A1521015 & ON								
		FA152 SERIAL FA1520383 & ON								

152 & A152 Parts Catalog

Heating & Ventilation

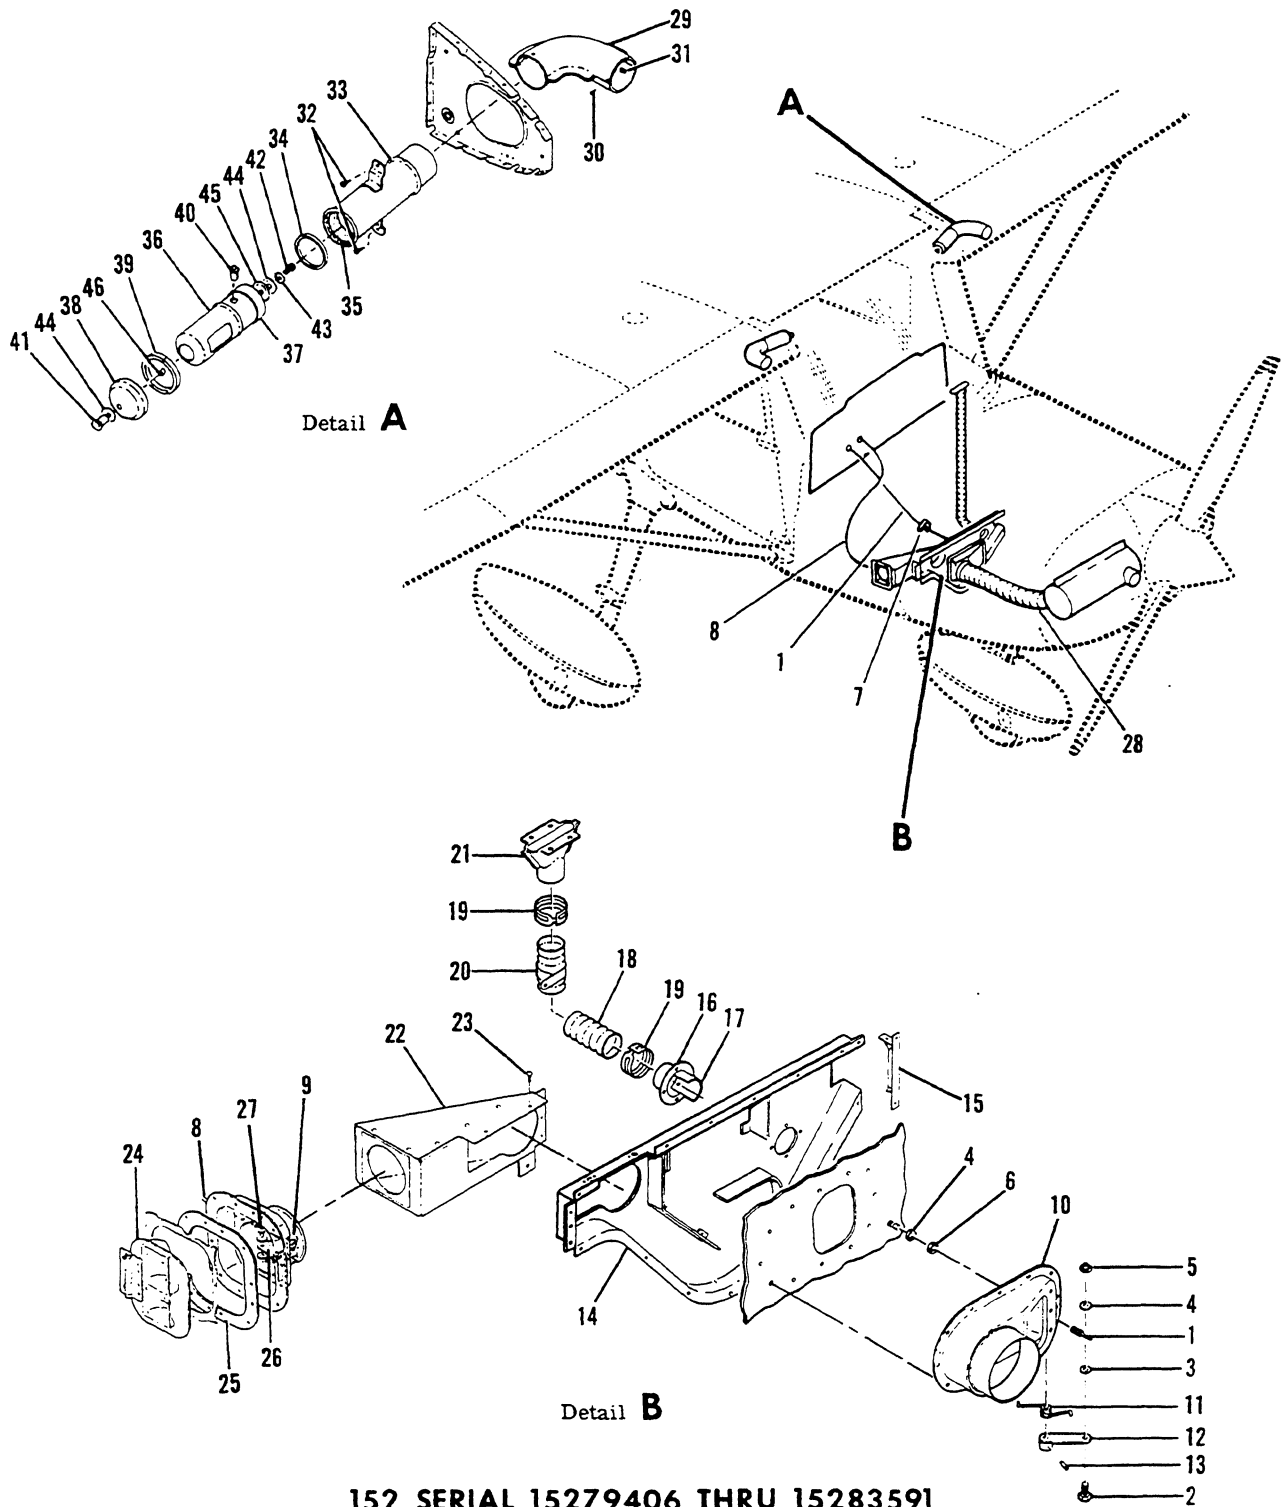

152 SERIAL 15279406 THRU 15283591
 F152 SERIAL F15201429 THRU F15201673
 A152 SERIAL A1520735 THRU A1520878
 FA152 SERIAL FA1520337 THRU FA1520357

Figure 67. Cabin Heating & Ventilating System Installation

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
67 -		CABIN HEATING & VENTILATING SYSTEM INSTALLATION -----	NP	A
- 1	S1239-46	CONTROL ASSY-CABIN HEAT -----	1	
		ATTACHING PARTS -----		
- 2	S2323-1	CLAMP -----	1	
- 3	AN960-10	WASHER -----	1	
- 4	AN960-10L	WASHER -----	2	
- 5	MS20365-1032C	NUT -----	1	
- 6	S1283-1	NUT -----	2	
- 7	S1485D3U	CLAMP -----	1	
	S1021Z8-10	SCREW -----	1	
		-----*		
- 8	S1239-46	CONTROL ASSY-CABIN AIR -----	1	
		ATTACHING PARTS -----		
- 9	S2323-5	CLAMP -----	1	
	AN960-10	WASHER -----	1	
	MS21044N3	NUT -----	1	
		-----*		
-10	0453006-4	VALVE ASSY-CABIN HEATER -----	1	
-11	1253041-1	SPRING -----	1	
-12	1253037-1	ARM ASSY -----	1	
-13	NAS561C2-8	ROLL PIN -----	1	
-14	0453002-33	DISTRIBUTOR ASSY-CABIN HEATER -----	1	
-15	0453002-4	DEFLECTOR-CABIN HEATER -----	1	
-16	0453002-16	SPOUT-DEFROSTER -----	1	
-17	0453010-1	INSERT-SPOUT -----	1	
-18	S1053E10T	HOSE-28.00 IN LG BKI -----	1	
		ATTACHING PARTS -----		
-19	NAS397-22	CLAMP -----	2	
-20	S1485D20U	CLAMP -----	1	
		-----*		
-21	0413452-1	NOZZLE ASSY-DEFROSTER -----	1	
-22	0413518-7	DUCT ASSY-AIR VALVE -----	1	
		ATTACHING PARTS -----		
-23	AN515-8R6	SCREW -----	4	
		-----*		
-24	1213475-2	INLET ASSY-COLD AIR -----	1	
-25	1213478-1	DOOR ASSY-COLD AIR INLET -----	1	
-26	1213483-1	SEAL -----	1	
-26	1213482-1	LEVER -----	1	
		ATTACHING PARTS -----		
-27	MS20392-1-7	PIN -----	2	
	AN960-6L	WASHER -----	1	
	AN960-4L	WASHER -----	AR	
	MS24665-132	PIN-COTTER -----	2	
		-----*		
-28	S1053K24T	HOSE-HEATER VALVE TO SHROUD 17.00 IN LG BKI -----	1	
		ATTACHING PARTS -----		
	S1891-48	CLAMP -----	2	
		-----*		
-29	0422014-4	ELBOW ASSY-CABIN AIR VENT -----	2	
		ATTACHING PARTS -----		
-30	S1021Z8-8	SCREW -----	1	
-31	NAS446-4-3	NUT -----	1	
		-----*		
	0413163-23	OUTLET ASSY-CABIN AIR LH -----	1	
	0413163-24	OUTLET ASSY-CABIN AIR RH -----	1	
		ATTACHING PARTS -----		
-32	S1021Z8-6	SCREW -----	2	
		-----*		
-33	0413163-8	TUBE ASSY-LH -----	1	
	0413163-9	TUBE ASSY-RH -----	1	
-34	0413163-7	SEAL-FELT -----	1	
-35	0413163-47	SEAL -----	1	
-36	0413163-18	OUTLET ASSY -----	1	
-37	0413163-43	SEAL -----	1	
	0413163-11	CAP ASSY-AIR OUTLET -----	1	
-38	0413257	CAP -----	1	
-39	S1441-2	SEAL-6.56 IN LG BKI -----	1	
-40	S2024-1	CATCH -----	2	
		CONTINUED ON NEXT PAGE		

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
67 -41 -42 -43 -44 -45 -46	0713303-2 AN515-8R8 AN936A8 0413228 0413347-1 NAS43DD3-5	KNOB-CAP ----- ATTACHING PARTS SCREW ----- WASHER ----- WASHER ----- WASHER ----- SPACER ----- ---*--- A---152 SERIAL 15279406 THRU 15283591 F152 SERIAL F15201429 THRU F15201673 A152 SERIAL A1520735 THRU A1520878 FA152 SERIAL FA1520337 THRU FA1520357	1 1 1 2 1 1	

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION							UNITS PER ASSY	USABLE ON CODE
		1	2	3	4	5	6	7		
67A-		CABIN HEATING & VENTILATING SYSTEM INSTALLATION -----							NP	A
- 1	S1239-47	CONTROL ASSY-CABIN HEAT -----							1	
		ATTACHING PARTS -----								
- 2	S2323-1	CLAMP -----							1	
- 3	AN960-10	WASHER -----							1	
- 4	AN960-10L	WASHER -----							1	
- 5	MS20365-1032C	NUT -----							1	
- 6	S1485D3U	CLAMP -----							1	
- 7	S1021Z8-10	SCREW -----							1	
		-----*								
- 8	S1239-46	CONTROL ASSY-CABIN AIR -----							1	
		ATTACHING PARTS -----								
- 9	S2323-5	CLAMP -----							1	
	AN960-10	WASHER -----							1	
	MS21044N3	NUT -----							1	
		-----*								
-10	0753011-1	VALVE ASSY-CABIN HEATER WEU 0453016-1 -----							1	B C B C B C B C B B
	0453016-1	VALVE ASSY-CABIN HEATER -----							1	
-11	0753010-1	SEAT-WARM AIR VALVE -----							1	
-11A	0453020-1	SEAT-WARM AIR VALVE -----							1	
-12	1253032-1	BODY ASSY-VALVE -----							1	
-12A	0453017-1	BODY-VALVE -----							1	
-12B	0453019-1	SEAL-VALVE BODY -----							1	
-13	1253034-1	PLATE ASSY-VALVE -----							1	
-13A	0453018-1	PLATE ASSY-VALVE -----							1	
-14	1253040-1	SHIM -----							1	
-15	1253033-2	REINFORCEMENT -----							1	
-16	1253037-1	ARM ASSY-CONTROL -----							1	
		ATTACHING PARTS -----								
-17	NAS561C2-8	ROLL PIN -----							1	
-18	1253041-1	SPRING-WARM AIR VALVE -----							1	
		-----*								
-19	0453015-1	HEATER ASSY -----							1	
-20	0453002-4	DEFLECTOR -----							1	
-21	1253031-3	ADAPTOR -----							1	
-22	0413590-1	ELBOW ASSY -----							1	
		ATTACHING PARTS -----								
-23	S1021Z6-8	SCREW -----							2	
		-----*								
CONTINUED ON NEXT PAGE										

152 & A152 Parts Catalog

Heating & Ventilation (Cont)

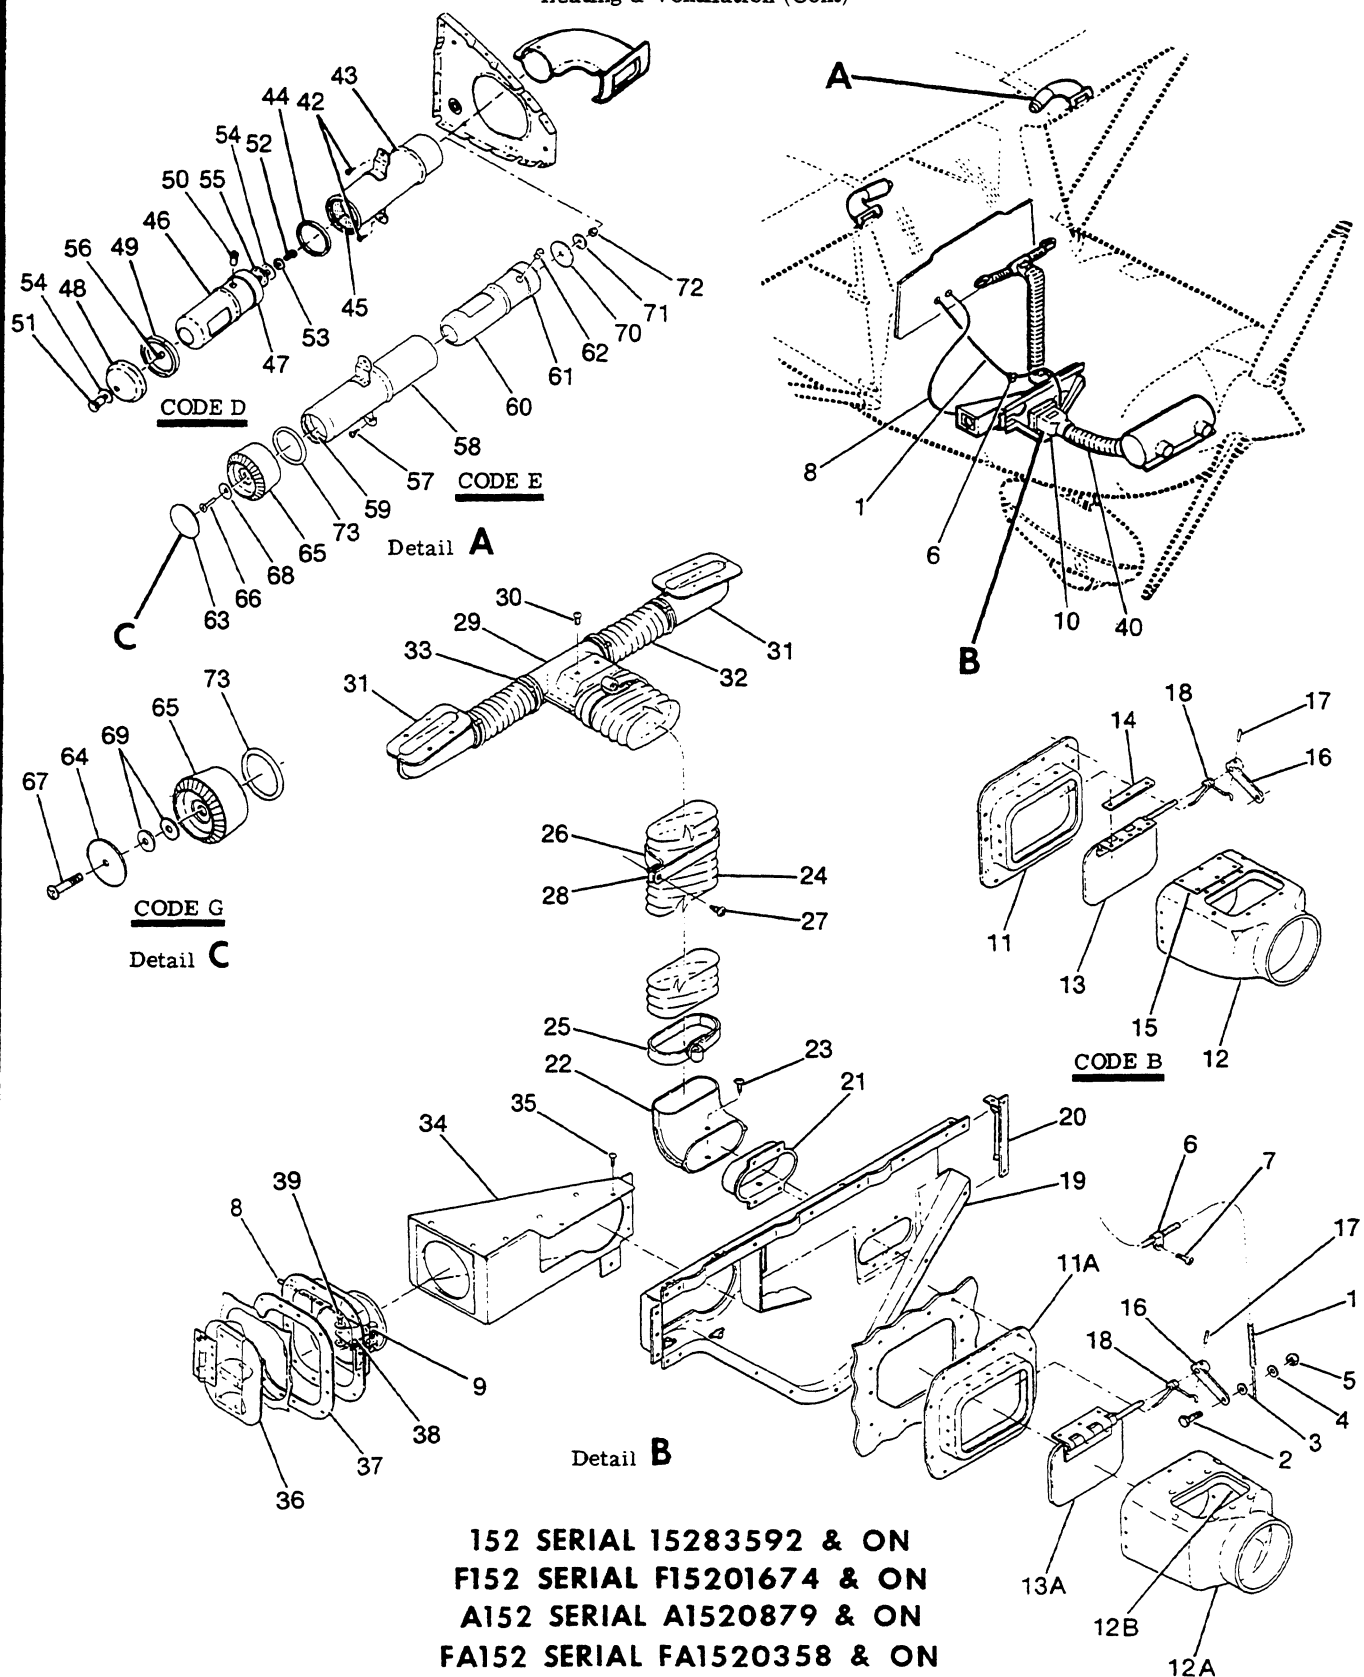


Figure 67A. Cabin Heating & Ventilating System Installation

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION							UNITS PER ASSY	USABLE ON CODE
		1	2	3	4	5	6	7		
67A-24	S1110ET	DUCT-21.00 IN LG	BKI	-----	-----	-----	-----	-----	1	
-25	S1026BG	ATTACHING PARTS	-----	-----	-----	-----	-----	-----	2	
-26	MS21919DG40	CLAMP-11.00 IN LG	BKI	-----	-----	-----	-----	-----	1	
-27	S1021Z8-12	CLAMP	-----	-----	-----	-----	-----	-----	1	
-28	NAS395-10-3	SCREW	-----	-----	-----	-----	-----	-----	1	
		NUT	-----	-----	-----	-----	-----	-----	1	
-29	0413588-1	*-----	-----	-----	-----	-----	-----	-----	1	
		TEE ASSY-DEFROSTER HOSE	-----	-----	-----	-----	-----	-----	1	
-30	AN515-6R8	ATTACHING PARTS	-----	-----	-----	-----	-----	-----	2	
	AN960-6	SCREW	-----	-----	-----	-----	-----	-----	2	
		WASHER	-----	-----	-----	-----	-----	-----	2	
		*-----	-----	-----	-----	-----	-----	-----	2	
-31	NAS680A06	NUTPLATE	-----	-----	-----	-----	-----	-----	2	
-32	0413587-7	NOZZLE ASSY-DEFROSTER	-----	-----	-----	-----	-----	-----	2	
	S1053E10T3.75	HOSE-3.75 IN LG	BKI	-----	-----	-----	-----	-----	2	
	S1053K10T3.75	HOSE-3.75 IN LG	BKI	ALTERNATE	-----	-----	-----	-----	2	
-33	S2209-2	ATTACHING PARTS	-----	-----	-----	-----	-----	-----	2	
-34	0413518-7	TIE	-----	-----	-----	-----	-----	-----	1	
-35	AN515-8R6	*-----	-----	-----	-----	-----	-----	-----	4	
		DUCT ASSY-AIR VALVE	-----	-----	-----	-----	-----	-----	1	
-36	1213475-2	ATTACHING PARTS	-----	-----	-----	-----	-----	-----	1	
-37	1213478-1	SCREW	-----	-----	-----	-----	-----	-----	1	
-38	1213483-1	*-----	-----	-----	-----	-----	-----	-----	1	
	1213482-1	INLET ASSY-COLD AIR	-----	-----	-----	-----	-----	-----	1	
-39	MS20392-1C7	DOOR ASSY-COLD AIR INLET	-----	-----	-----	-----	-----	-----	1	
	AN960-6L	SEAL	-----	-----	-----	-----	-----	-----	1	
	AN960-4L	LEVER	-----	-----	-----	-----	-----	-----	1	
	MS24665-132	ATTACHING PARTS	-----	-----	-----	-----	-----	-----	2	
-40	S1053K24T	PIN	-----	-----	-----	-----	-----	-----	1	
	S1891-48	WASHER	-----	-----	-----	-----	-----	-----	2	
-41	SEE FIG 8 & 9	WASHER	-----	-----	-----	-----	-----	-----	1	
	0413163-213	COTTER PIN	-----	-----	-----	-----	-----	-----	2	
	0413163-212	*-----	-----	-----	-----	-----	-----	-----	1	
-42	S1021Z8-6	NOSE-HEATER VALVE TO SHROUD	17.00 IN LG	BKI	-----	-----	-----	-----	1	
-43	0413163-8	ATTACHING PARTS	-----	-----	-----	-----	-----	-----	2	
-44	0413163-9	CLAMP	-----	-----	-----	-----	-----	-----	2	
-45	0413163-7	*-----	-----	-----	-----	-----	-----	-----	2	
-46	0413163-47	DUCT ASSY-AIR VENT	-----	-----	-----	-----	-----	-----	1	D
-47	0413163-57	OUTLET ASSY-CABIN AIR LH	-----	-----	-----	-----	-----	-----	1	D
-48	0413163-43	OUTLET ASSY-CABIN AIR RH	-----	-----	-----	-----	-----	-----	1	D
-49	0413163-11	ATTACHING PARTS	-----	-----	-----	-----	-----	-----	2	D
-50	0413257	SCREW	-----	-----	-----	-----	-----	-----	1	D
-51	S1441-2	*-----	-----	-----	-----	-----	-----	-----	1	D
-52	S2024-1	TUBE ASSY-LH	-----	-----	-----	-----	-----	-----	1	D
-53	S1760-1	TUBE ASSY-RH	-----	-----	-----	-----	-----	-----	1	D
-54	AN515-8R8	SEAL-FELT	-----	-----	-----	-----	-----	-----	1	D
-55	AN936A8	SEAL	-----	-----	-----	-----	-----	-----	1	D
-56	0413228	OUTLET ASSY	-----	-----	-----	-----	-----	-----	1	D
-57	0413347-1	SEAL	-----	-----	-----	-----	-----	-----	1	D
-58	NAS43DD3-5	SEAL	-----	-----	-----	-----	-----	-----	1	D
		CAP ASSY-AIR OUTLET	-----	-----	-----	-----	-----	-----	1	D
		CAP	-----	-----	-----	-----	-----	-----	1	D
		SEAL-6.56 IN LG	BKI	-----	-----	-----	-----	-----	1	D
		CATCH	-----	-----	-----	-----	-----	-----	2	D
		KNOB-CAP	-----	-----	-----	-----	-----	-----	1	D
		ATTACHING PARTS	-----	-----	-----	-----	-----	-----	1	D
		SCREW	-----	-----	-----	-----	-----	-----	1	D
		WASHER	-----	-----	-----	-----	-----	-----	1	D
		WASHER	-----	-----	-----	-----	-----	-----	2	D
		WASHER	-----	-----	-----	-----	-----	-----	1	D
		SPACER	-----	-----	-----	-----	-----	-----	1	D
		*-----	-----	-----	-----	-----	-----	-----	1	E
		OUTLET ASSY-CABIN AIR LH	-----	-----	-----	-----	-----	-----	1	E
		OUTLET ASSY-CABIN AIR RH	-----	-----	-----	-----	-----	-----	1	E
		ATTACHING PARTS	-----	-----	-----	-----	-----	-----	2	E
-59	S1021Z8-6	SCREW	-----	-----	-----	-----	-----	-----	1	E
-60	0413598-1	*-----	-----	-----	-----	-----	-----	-----	1	E
-61	0413598-2	TUBE ASSY-OUTER LH	-----	-----	-----	-----	-----	-----	1	E
-62	0413601-2	TUBE ASSY-OUTER RH	-----	-----	-----	-----	-----	-----	1	E
	0413602-1	RUB STRIP	-----	-----	-----	-----	-----	-----	1	E
	0413601-1	TUBE ASSY-INNER	-----	-----	-----	-----	-----	-----	1	E
	S2024-1	RUB STRIP	-----	-----	-----	-----	-----	-----	1	E
		CATCH	-----	-----	-----	-----	-----	-----	2	E

CONTINUED ON NEXT PAGE

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
67A-63	S1780-8	INSERT -----	2	E
-64	0713354-10	INSERT -----	2	G
-65	0413599-1	KNOB ASSY-CABIN AIR -----	2	F
		ATTACHING PARTS		
-66	AN507-1032R14	SCREW -----	1	F
-67	NAS221-13	SCREW -----	1	G
-68	S29001032	WASHER -----	1	F
-69	S1450-3-14-063	WASHER -----	2	G
-70	S1450-5A24-040	WASHER -----	1	F
-71	0413228	WASHER -----	1	F
-72	S1450-3-14-063	WASHER -----	1	G
	MS21044N3	NUT -----	1	F
-73	MS9068-136	-----*		
		O RING -----	2	E
		A---152 SERIAL 15283592 & ON F152 SERIAL F15201674 & ON A152 SERIAL A1520879 & ON FA152 SERIAL FA1520358 & ON		
		B---152 SERIAL 15283592 THRU 15285357 F152 SERIAL F15201674 THRU F15201931 A152 SERIAL A1520879 THRU A1520995 FA152 SERIAL FA1520358 THRU FA1520387		
		C---152 SERIAL 15285358 & ON F152 SERIAL F15201932 & ON A152 SERIAL A1520996 & ON FA152 SERIAL FA1520388 & ON		
		D---152 SERIAL 15283592 THRU 15284923 F152 SERIAL F15201674 THRU F15201893 A152 SERIAL A1520879 THRU A1520971 FA152 SERIAL FA1520358 THRU FA1520377		
		E---152 SERIAL 15284924 & ON F152 SERIAL F15201894 & ON A152 SERIAL A1520972 & ON FA152 SERIAL FA1520378 & ON		
		F---152 SERIAL 15284924 THRU 15285750 F152 SERIAL F15201894 THRU F15201943 A152 SERIAL A1520972 THRU A1521021 FA152 SERIAL FA1520378 THRU FA1520387		
		G---152 SERIAL 15285751 & ON F152 SERIAL F15201944 & ON A152 SERIAL A1521022 & ON FA152 SERIAL FA1520388 & ON		

152 & A152 Parts Catalog

Control Pedals

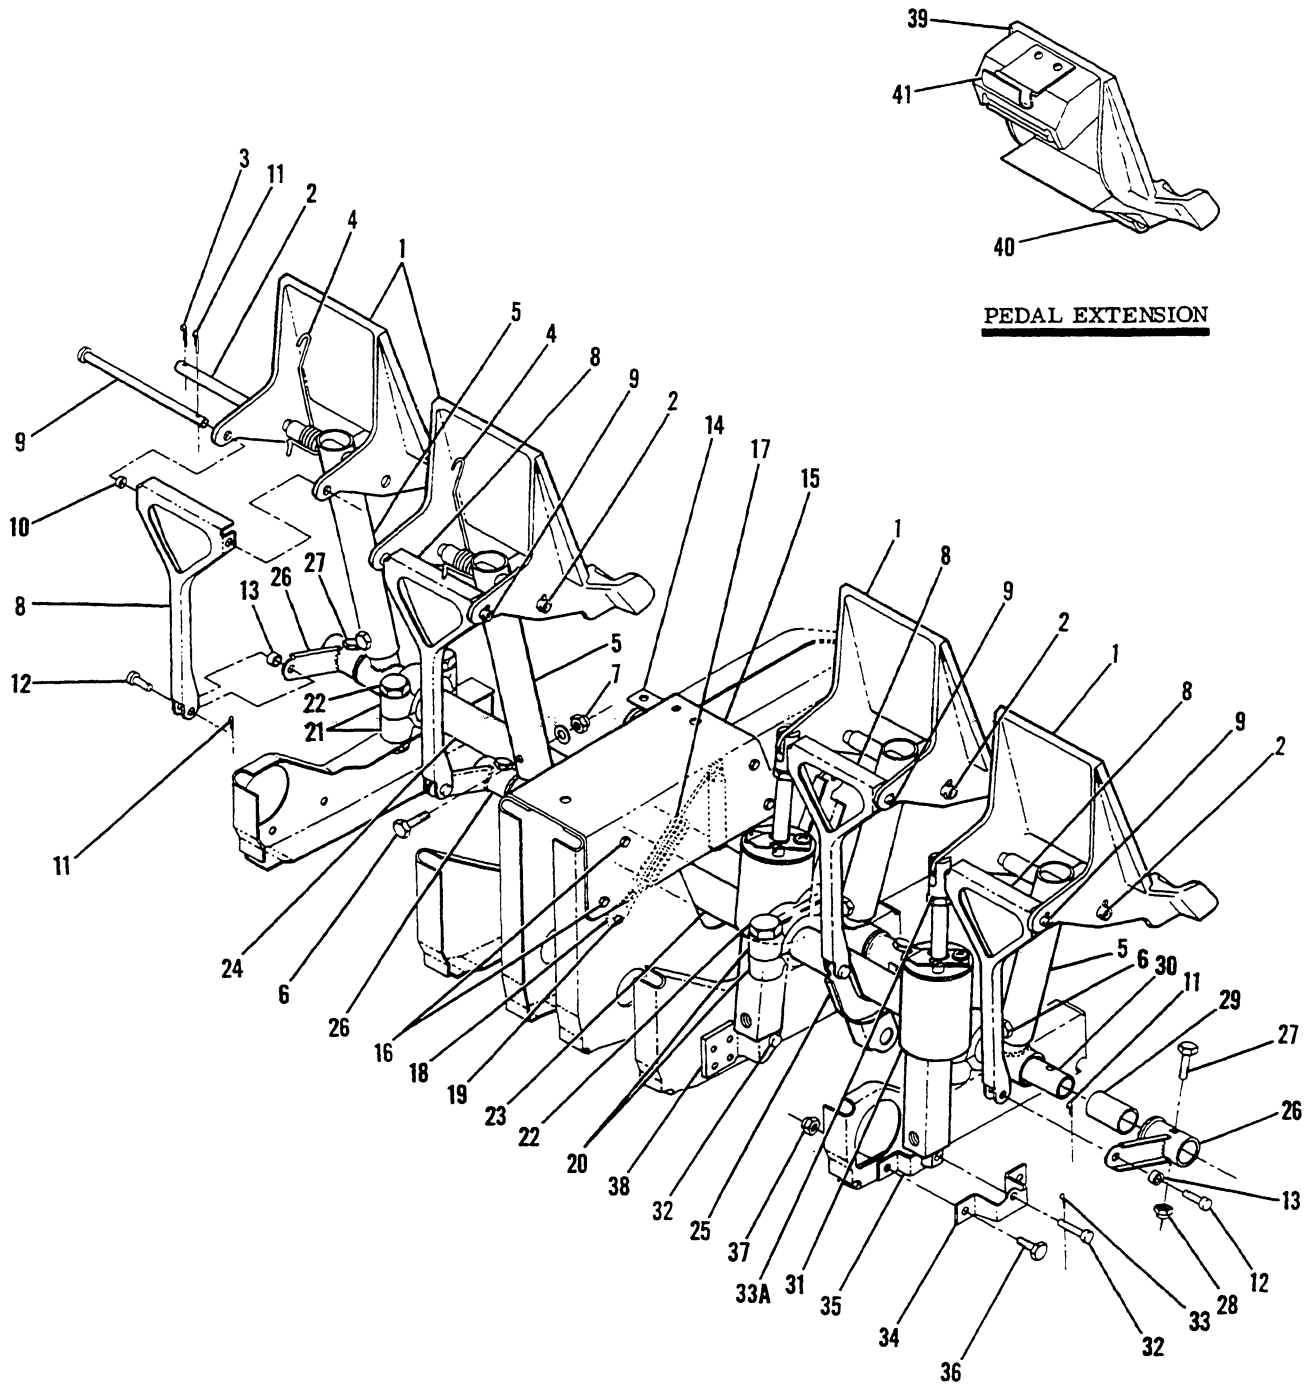


Figure 68. Rudder & Brake Pedal Installation

152 & A152 Parts Catalog


FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
68 -		PEDAL INSTALLATION-RUDDER & BRAKE -----	NP	
- 1	1460320-1	PEDAL-RUDDER & BRAKE -----	4	B
	0413578-1	PEDAL-RUDDER & BRAKE -----	4	D
		ATTACHING PARTS		
- 2	0567001-1	SHAFT -----	1	
- 3	MS24665-281	PIN-COTTER -----	1	
		-----*		
- 4	1460505-1	SPRING RH PEDALS ONLY -----	2	B
	0760682-1	SPRING RH PEDALS ONLY -----	2	D
- 5	0411307	ARM ASSY-RUDDER PEDAL -----	4	
		ATTACHING PARTS		
- 6	AN3-12A	BOLT -----	1	
	AN960-10	WASHER -----	1	
- 7	MS21044N3	NUT -----	1	
		-----*		
- 8	0411564	LINK-DUAL BRAKES -----	4	B
	0511336-1	LINK-DUAL BRAKES -----	4	D
		ATTACHING PARTS		
- 9	0411778-2	SHAFT -----	1	B
	0411778-5	SHAFT -----	1	D
-10	NAS42HT6-8	SPACER RH PEDALS ONLY -----	1	B
	NAS42HT8-8	SPACER RH PEDALS ONLY -----	1	D
-11	MS24665-132	PIN-COTTER -----	2	
-12	MS20392-2C13	PIN -----	1	
-13	NAS43HT3-12	SPACER -----	1	
		-----*		
-14	0400312-1	ANGLE -----	1	
	AN3-4A	ATTACHING PARTS		
		BOLT -----	1	
		-----*		
-15	0411286	STIFFENER-CONTROL Y BULKHEAD -----	1	
		ATTACHING PARTS		
-16	AN3-3A	BOLT -----	9	
		-----*		
-17	0310196-13	SPRING-BRAKE & RUDDER RETURN -----	2	
-18	0441132	CLIP -----	2	
		ATTACHING PARTS		
-19	AN520-10R7	SCREW -----	1	
	MS20365-1032C	NUT -----	1	
		-----*		
-20	S1675-1	BEARING HALF-INBOARD -----	4	
-21	S1674-1	BEARING HALF-OUTBOARD -----	4	
		ATTACHING PARTS		
-22	AN3-16A	BOLT -----	2	
	MS21044N3	NUT -----	2	
		-----*		
-23	0411526-1	WELD ASSY-RUDDER BAR -----	1	
-24	0411526-2	WELD ASSY-RUDDER BAR -----	1	
-25	0411573-2	BELLCRANK ASSY -----	1	
-26	0411563	BELLCRANK ASSY -----	3	
		ATTACHING PARTS		
-27	AN3-10A	BOLT -----	1	
-28	MS21044N3	NUT -----	1	
		-----*		
-29	S1003-43A	BEARING -----	4	
-30	0411565	TUBE-DUAL BRAKE TORQUE -----	2	
-31	SEE FIG 69 & 69A	CYLINDER ASSY-BRAKE -----	2	
		ATTACHING PARTS		
-32	MS20392-2C15	PIN -----	1	
-33	MS24665-132	PIN-COTTER -----	1	
-33A	0541140	CLEVIS -----	1	C
	0582001-1	CLEVIS -----	1	D
	AN316-4R	NUT-CHECK -----	1	A
		-----*		
-34	0411550	BRACKET-BRAKE CYLINDER OUTSIDE -----	1	
-35	0411549	BRACKET-BRAKE CYLINDER INSIDE -----	1	
		ATTACHING PARTS		
-36	AN3-3A	BOLT -----	2	
-37	MS20365-1032C	NUT -----	2	
		-----*		
-38	0713624-2	ANCHOR-INBOARD CYLINDER ATTACH -----	1	
CONTINUED ON NEXT PAGE				

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION							UNITS PER ASSY	USABLE ON CODE
		1	2	3	4	5	6	7		
68 -39 -40 -41	0501020-1	PEDAL EXTENSION ASSY -----							2	B D B D B D
	0501081-1	PEDAL EXTENSION ASSY -----							2	
	0501020-3	CLIP-LOWER -----							1	
	0501081-3	CLIP-LOWER -----							1	
	0501020-4	CLIP-UPPER -----							1	
	0501081-4	CLIP-UPPER -----							1	
	ATTACHING PARTS									
	SCREW -----							2		
	---*---									
	AN520-10R6	A---152 SERIAL 15282032 & ON F152 SERIAL F15201529 & ON A152 SERIAL A1520809 & ON FA152 SERIAL FA1520348 & ON B---152 SERIAL 15279406 THRU 15284524 F152 SERIAL F15201429 THRU F15201858 A152 SERIAL A1520735 THRU A1520944 FA152 SERIAL FA1520337 THRU FA1520377 C---152 SERIAL 15282032 THRU 15284524 F152 SERIAL F15201529 THRU F15201858 A152 SERIAL A1520809 THRU A1520944 FA152 SERIAL FA1520348 THRU FA1520377 D---152 SERIAL 15284525 & ON F152 SERIAL F15201859 & ON A152 SERIAL A1520945 & ON FA152 SERIAL FA1520378 & ON								

152 & A152 Parts Catalog

Brake Cylinder

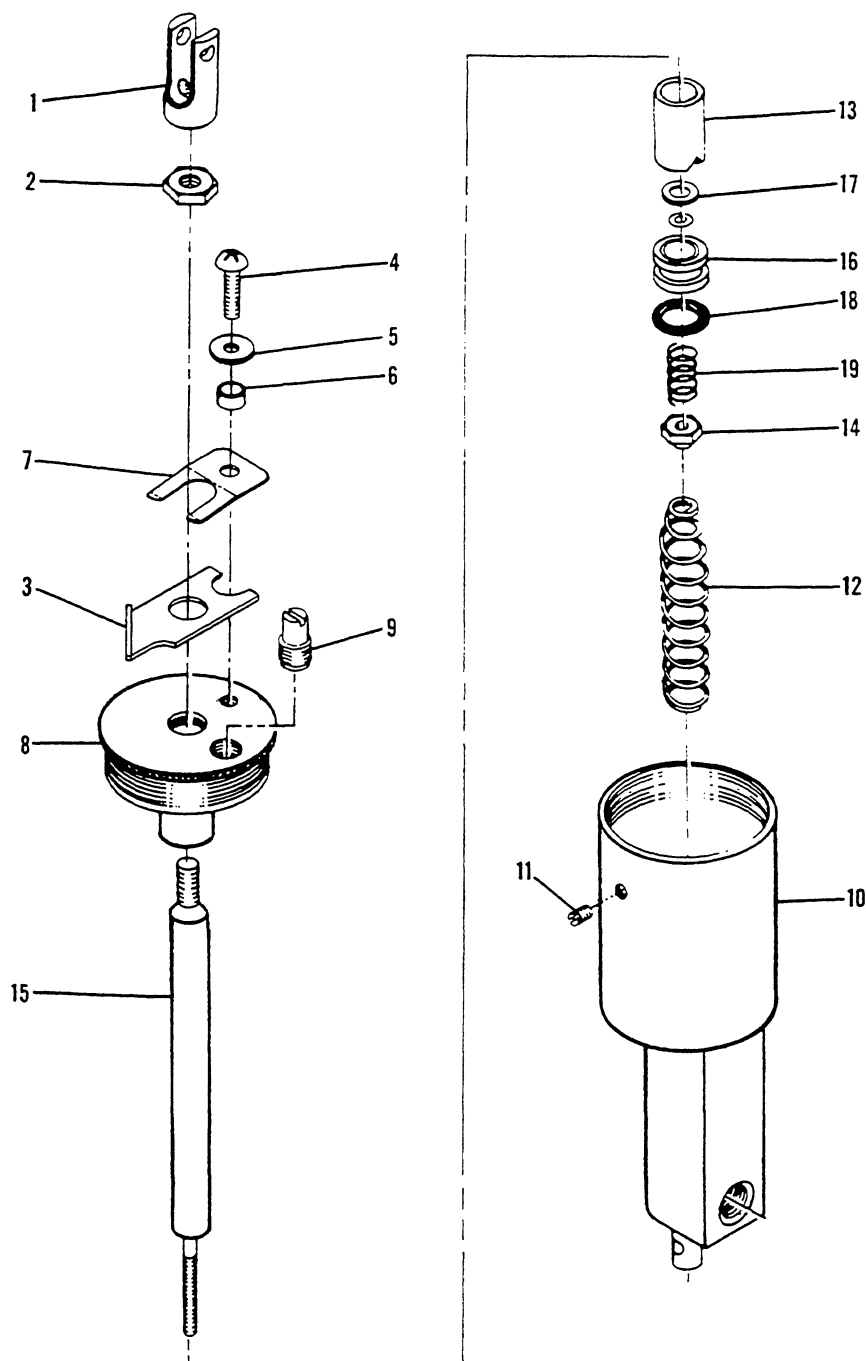

152 SERIAL 15279406 THRU 15282031
 F152 SERIAL F15201429 THRU F15201528
 A152 SERIAL A1520735 THRU A1520808
 FA152 SERIAL FA1520337 THRU FA1520347


Figure 69. Master Brake Cylinder Assembly

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION							UNITS PER ASSY	USABLE ON CODE
		1	2	3	4	5	6	7		
69 -	0541138-19	CYLINDER ASSEMBLY-MASTER BRAKE -----							2	A
- 1	0541140	CLEVIS-ROD END -----							1	
- 2	AN316-4R	NUT-CHECK -----							1	
- 3	0541165-1	PLATE-LOCK -----							1	
		ATTACHING PARTS								
- 4	AN515-10R8	SCREW-MACHINE -----							1	
- 5	AN960-10	WASHER -----							1	
- 6	0541146-1	SPACER -----							1	
		*-----								
- 7	0541167-1	SPRING-PARKING BRAKE -----							1	
- 8	0541151	COVER-MASTER CYLINDER -----							1	
- 9	0541139	PLUG-FILLER -----							1	
-10	0541184-1	BODY-MASTER CYLINDER -----							1	
-11	AN565D6H3	SCREW -----							1	
-12	0541148	SPRING-PISTON RETURN -----							1	
-13	0541149	SLEEVE-PISTON ROD -----							1	
	0541138-5	PISTON ASSY-MASTER CYLINDER -----							1	
-14	22FH632	NUT SPS -----							1	
-15	0541144	ROD -----							1	
-16	0541143	PISTON -----							1	
-17	800-001-6	LOCK-O-SEAL PKSC -----							1	
-18	MS28775-110	O RING -----							1	
-19	0541148-1	SPRING -----							1	
A---152 SERIAL 15279406 THRU 15282031										
F152 SERIAL F15201429 THRU F15201528										
A152 SERIAL A1520735 THRU A1520808										
FA152 SERIAL FA1520337 THRU FA1520347										

152 & A152 Parts Catalog

Brake Cylinder (Cont)

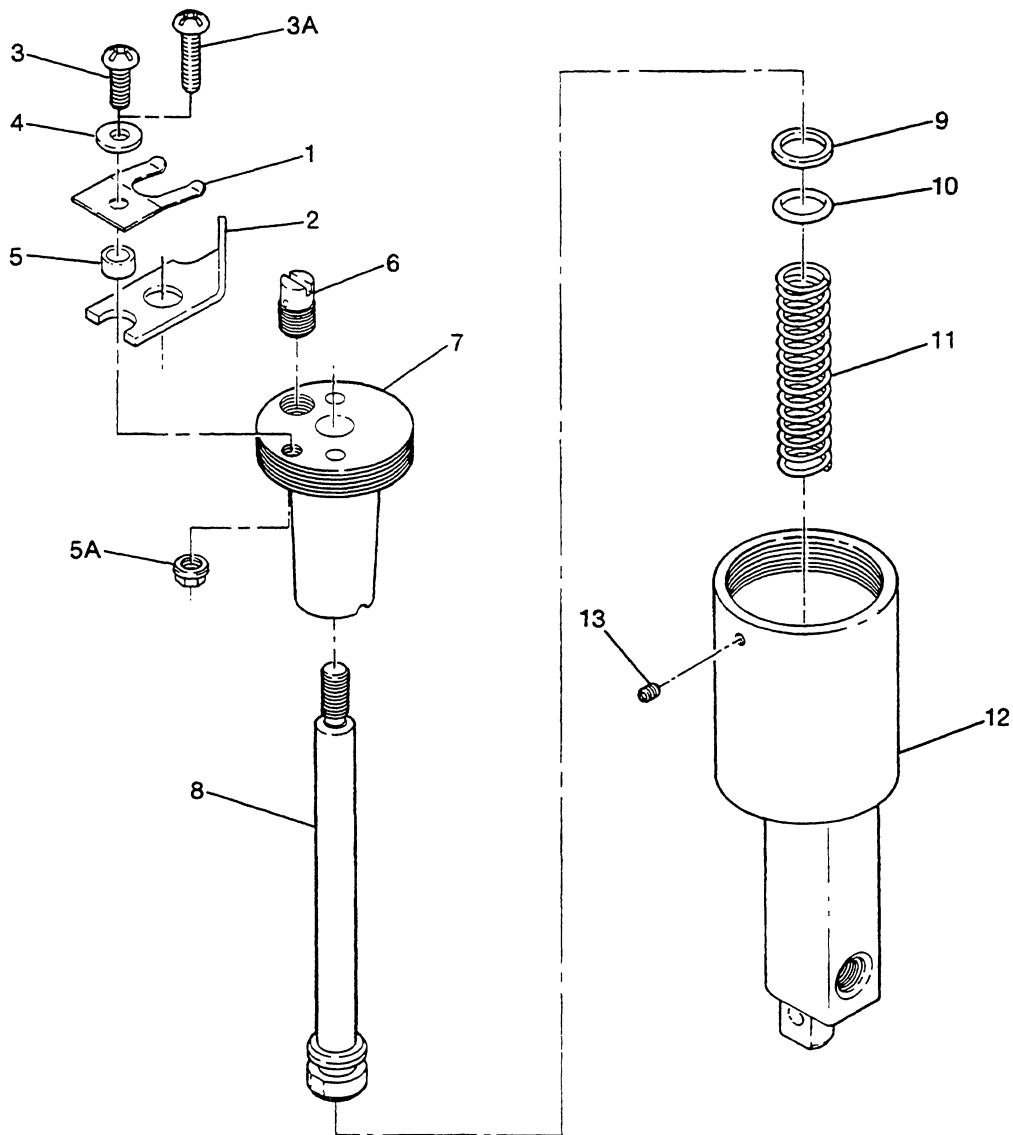

152 SERIAL 15282032 & ON
F152 SERIAL F15201529 & ON
A152 SERIAL A1520809 & ON
FA152 SERIAL FA1520348 & ON

Figure 69A. Master Brake Cylinder Assembly

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION							UNITS PER ASSY	USABLE ON CODE
		1	2	3	4	5	6	7		
69A-	9882010-2	CYLINDER ASSEMBLY-MASTER BRAKE -----							2	A D E
	9882010-5	CYLINDER ASSEMBLY-MASTER BRAKE WEU 9882010-6 -----							2	
	9882010-6	CYLINDER ASSEMBLY-MASTER BRAKE -----							2	
- 1	0541167-1	SPRING-PARKING BRAKE -----							1	E
- 2	0541165-1	PLATE-LOCK -----							1	
		ATTACHING PARTS								
- 3	AN515-10R8	SCREW USED WITH 9882013-2 CAP -----							1	C E
- 3A	AN520-10R12	SCREW USED WITH 9882013-3 CAP -----							1	
- 4	AN960-10	WASHER -----							1	
- 5	0541146-1	SPACER -----							1	E
- 5A	MS21042L3	NUT USED WITH 9882013-3 CAP -----							1	
		*-----								
- 6	0541139	PLUG -----							1	C E A B
- 7	9882013-2	CAP WEU 9882013-3 SEE NOTE * -----							1	
	9882013-3	CAP -----							1	
- 8	9882012-2	PISTON -----							1	B
	9882012-6	PISTON -----							1	
- 9	S1628-110	BACKUP -----							1	B
- 10	MS28775-110	O RING -----							1	
- 11	9881600-3	SPRING-PISTON RETURN -----							1	B
- 12	9882011-2	CYLINDER-MASTER BRAKE -----							1	
- 13	AN565D6H3	SET SCREW -----							1	
NOTE. *WHEN INITIALLY ORDERING THIS PART FOR SPARES PRIOR TO SERIALS 15285370, F15201914, A1520997 & FA1520383 ALSO ORDER ONE AN520-10R12 SCREW & ONE MS21042L3 NUT. A---152 SERIAL 15282032 THRU 15284524 F152 SERIAL F15201529 THRU F15201858 A152 SERIAL A1520809 THRU A1520944 FA152 SERIAL FA1520348 THRU FA1520377 B---152 SERIAL 15284525 & ON F152 SERIAL F15201859 & ON A152 SERIAL A1520945 & ON FA152 SERIAL FA1520378 & ON C---152 SERIAL 15282032 THRU 15285369 F152 SERIAL F15201529 THRU F15201913 A152 SERIAL A1520809 THRU A1520996 FA152 SERIAL FA1520348 THRU FA1520387 D---152 SERIAL 15284525 THRU 15285369 F152 SERIAL F15201859 THRU F15201913 A152 SERIAL A1520945 THRU A1520996 FA152 SERIAL FA1520378 THRU FA1520382 E---152 SERIAL 15285370 & ON F152 SERIAL F15201914 & ON A152 SERIAL A1520997 & ON FA152 SERIAL FA1520383 & ON										

152 & A152 Parts Catalog

Flight Controls

APPROACH PLATE HOLDER

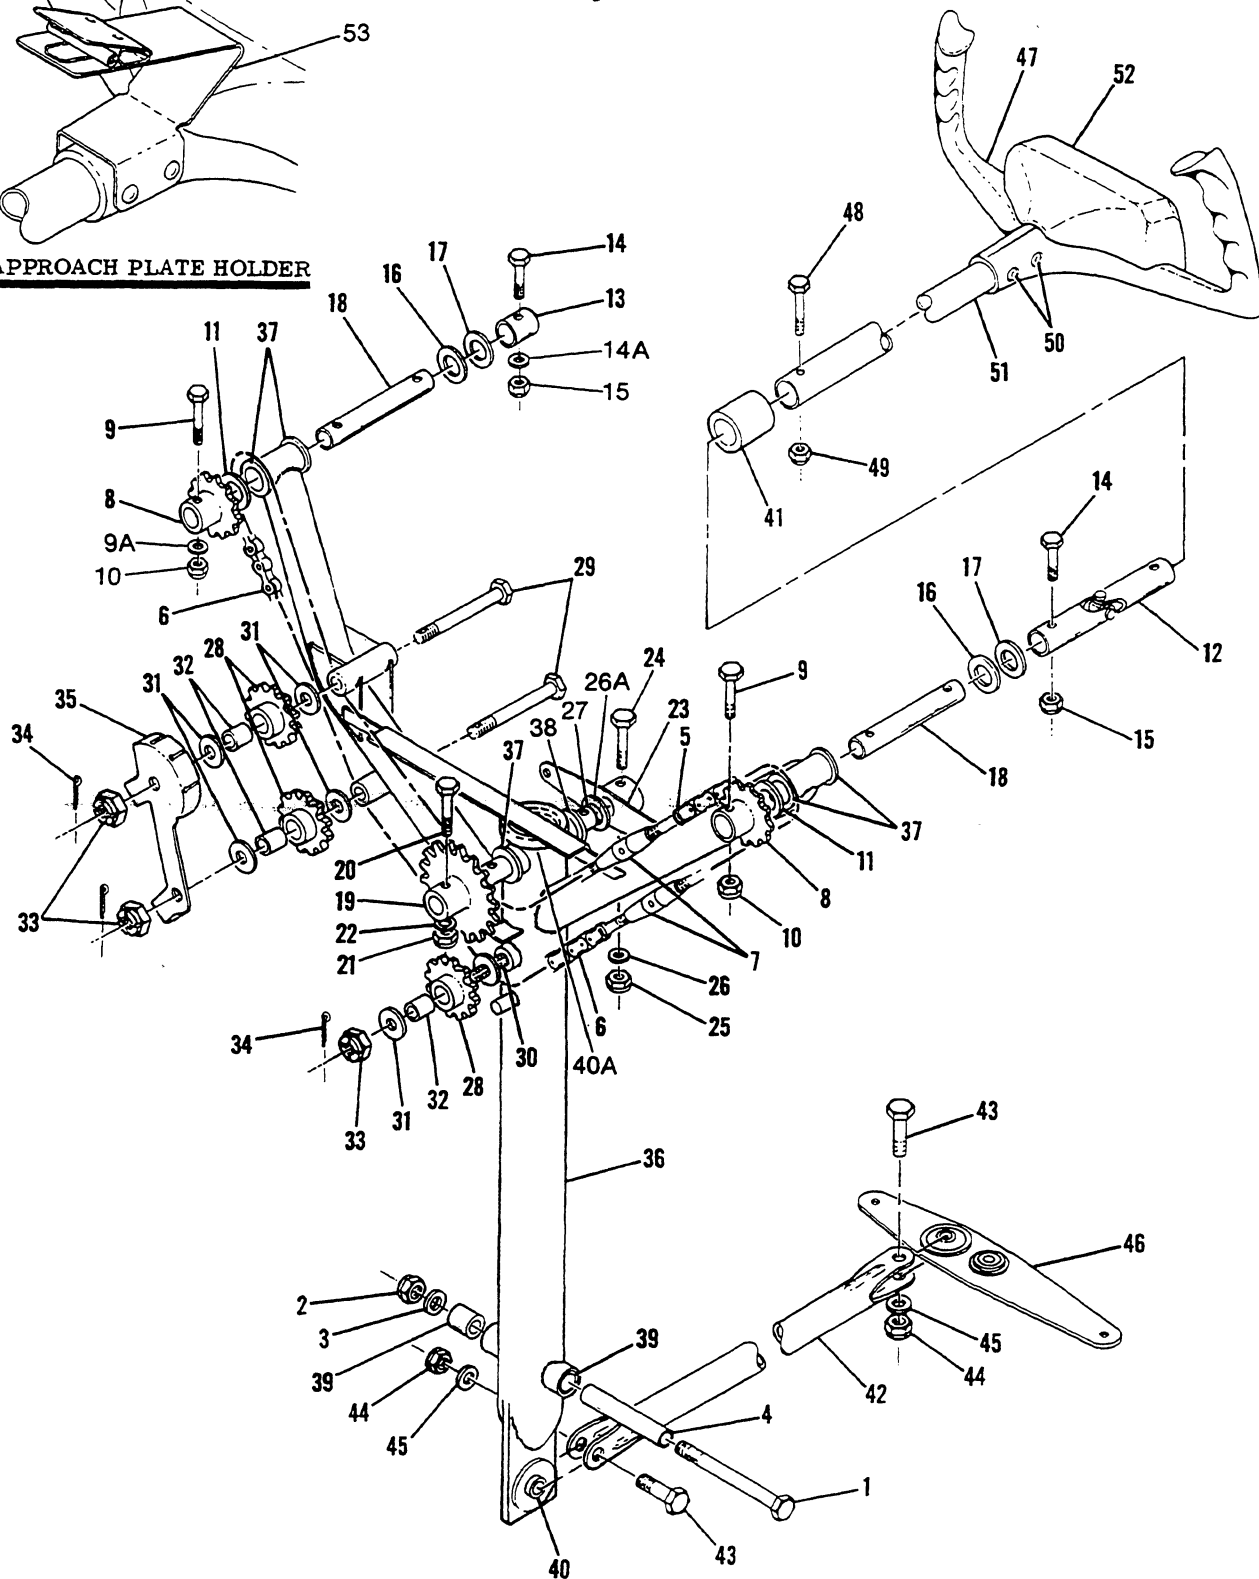


Figure 70. Control Yoke Installation

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
70 -		CONTROL YOKE INSTALLATION -----	NP	
	0460128-1	CONTROL YOKE ASSY WEU 0460128-12 -----	1	C
	0460128-12	CONTROL YOKE ASSY -----	1	D
		ATTACHING PARTS -----		
- 1	AN4-31A	BOLT -----	1	
- 2	MS21042L4	NUT -----	1	
- 3	AN960-416L	WASHER -----	1	
- 4	S18-30	BUSHING -----	1	
		-----*		
- 5	0413372-1	CHAIN ASSY-CONTROL Y -----	1	
- 6	0413372-8	CHAIN ASSY-CONTROL Y -----	1	
- 7	AN155-32S	BARREL -----	2	
- 8	0411047	SPROCKET -----	2	
		ATTACHING PARTS -----		
- 9	AN3-11A	BOLT -----	1	
- 9A	AN960-10	WASHER -----	1	
-10	MS21044N3	NUT -----	1	
-11	AN960-816	WASHER -----	2	
		-----*		
-12	0411257	UNIVERSAL JOINT LH ONLY -----	1	
-13	0460101	SPACER RH ONLY -----	1	
	0411257	UNIVERSAL JOINT RH DUAL CONTROLS -----	2	
		ATTACHING PARTS -----		
-14	AN3-10A	BOLT -----	1	
-14A	AN960-10	WASHER -----	1	
-15	MS21044N3	NUT -----	1	
-16	AN960-816	WASHER -----	1	
-17	S1450-18B14-005	WASHER -----	AR	
		-----*		
-18	0411255	SHAFT -----	2	
-19	0413374-1	SPROCKET -----	1	
		ATTACHING PARTS -----		
-20	NAS1103-12	BOLT -----	1	
-21	MS20364-1032C	NUT -----	1	
-22	AN960-10L	WASHER -----	1	
		-----*		
-23	0413370-1	ARM -----	1	
		ATTACHING PARTS -----		
-24	NAS1103-11	BOLT -----	1	
-25	MS20364-1032C	NUT -----	1	
-26	AN960-10L	WASHER -----	1	
-26A	S1450-18B14-005	WASHER 2 MAX -----	AR	
	AN960-816L	WASHER -----	AR	
		-----*		
-27	0413379-1	SHAFT -----	1	
-28	0413373-1	SPROCKET -----	3	
		ATTACHING PARTS -----		
-29	AN4-25	BOLT -----	1	
-30	AN4-30	BOLT -----	1	
-31	NAS70-261-750	WASHER -----	2	
-32	0413380-1	BUSHING -----	1	
-33	AN310-4	NUT -----	1	
-34	MS24665-132	COTTER PIN -----	1	
		-----*		
-35	0460129-1	GUARD -----	1	
-36	0460128-200	CONTROL Y ASSY -----	1	
-37	S1004-28A	BEARING -----	5	
-38	S1004-29A	BEARING -----	1	
-39	S1997-6-10	BEARING -----	2	
-40	MS27261KSP4	BEARING -----	1	
-40A	S2552-6	CAP -----	1	
-41	S1495-10	HOSE-1.12 IN LG BKI -----	2	
-42	0411269	LINK-ELEVATOR CONTROL -----	1	D
		ATTACHING PARTS -----		
-43	AN4-11A	BOLT -----	2	
-44	MS21042L4	NUT -----	2	
-45	AN960-416	WASHER -----	2	
		-----*		
-46	0411258-1	BELLCRANK-ELEVATOR CONTROL -----	1	

CONTINUED ON NEXT PAGE

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
70 -47	0513261-16	CONTROL WHEEL ASSY-PILOT & COPILOT NOT DRILLED -----	2	F
	0513261-15	FOR MIKE SWITCH CONTROL WHEEL ASSY-PILOT & COPILOT NOT DRILLED -----	2	G
	0513261-17	FOR MAP LIGHT & MIKE SWITCH CONTROL WHEEL ASSY-PILOT ONLY DRILLED FOR MIKE SWITCH ---	1	F
	0513261-21	CONTROL WHEEL ASSY-PILOT ONLY DRILLED FOR -----	1	G
	0513261-18	MAP LIGHT & MIKE SWITCH CONTROL WHEEL ASSY-COPILOT ONLY DRILLED FOR -----	1	E
		INTERCOM MIKE SWITCH ATTACHING PARTS		
-48	AN3-10A	BOLT -----	1	
-49	MS21044N3	NUT -----	1	
	0513260-4	-----*----- WHEEL-CONTROL PILOT & COPILOT NOT DRILLED -----	1	F
	0513260-3	FOR MIKE SWITCH WHEEL-CONTROL PILOT & COPILOT NOT DRILLED -----	1	G
	0513260-5	FOR MAP LIGHT & MIKE SWITCH WHEEL-CONTROL PILOT ONLY DRILLED FOR MIKE SWITCH --	1	F
	0513260-16	WHEEL-CONTROL PILOT ONLY DRILLED FOR -----	1	G
	0513260-15	MAP LIGHT & MIKE SWITCH WHEEL-CONTROL COPILOT ONLY DRILLED FOR -----	1	E
		INTERCOM MIKE SWITCH		
-50	0413216-6	RIVET -----	2	
-51	0413213-26	TUBE -----	1	
-52	0514097-1	PAD-CONTROL WHEEL -----	2	A
	0415030-1	PAD-CONTROL WHEEL -----	2	B
	0415030-2	PAD-CONTROL WHEEL -----	1	G
	SEE FIG 2	PLACARD-CONTROL WHEEL INSIGNIA -----	AR	
-53	0415044-1	APPROACH PLATE HOLDER ASSY -----	1	H
	0415044-2	APPROACH PLATE HOLDER ASSY -----	1	J
A---152 SERIAL 15279406 THRU 15282031 F152 SERIAL F15201429 THRU F15201528 A152 SERIAL A1520735 THRU A1520808 FA152 SERIAL FA1520337 THRU FA1520347 B---152 SERIAL 15282032 & ON F152 SERIAL F15201529 & ON A152 SERIAL A1520809 & ON FA152 SERIAL FA1520348 & ON C---152 SERIAL 15279406 THRU 15283717 F152 SERIAL F15201429 THRU F15201683 A152 SERIAL A1520735 THRU A1520885 FA152 SERIAL FA1520337 THRU FA1520357 D---152 SERIAL 15283718 & ON F152 SERIAL F15201684 & ON A152 SERIAL A1520886 & ON FA152 SERIAL FA1520358 & ON E---152 SERIAL 15284542 & ON F152 SERIAL F15201809 & ON A152 SERIAL A1520944 & ON FA152 SERIAL FA1520373 & ON F---152 SERIAL 15279406 THRU 15285634 F152 SERIAL F15201429 & ON A152 SERIAL A1520735 THRU A1521019 FA152 SERIAL FA1520337 & ON G---152 SERIAL 15285635 & ON A152 SERIAL A1521020 & ON H---152 SERIAL 15284542 THRU 15285594 F152 SERIAL F15201809 THRU F15201928 A152 SERIAL A1520944 THRU A1521014 FA152 SERIAL FA1520373 THRU FA1520382 J---152 SERIAL 15285595 & ON F152 SERIAL F15201929 & ON A152 SERIAL A1521015 & ON FA152 SERIAL FA1520383 & ON				

152 & A152 Parts Catalog

Flight Controls (Cont)

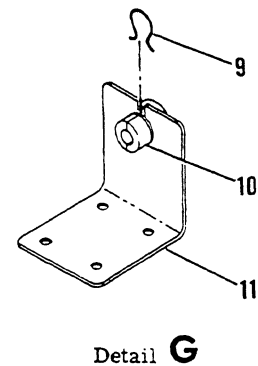
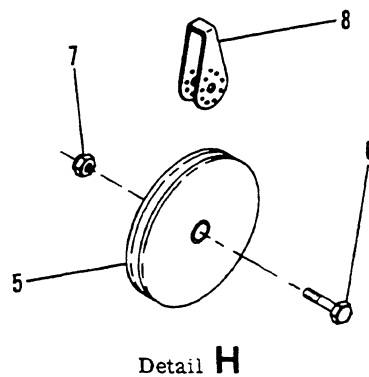
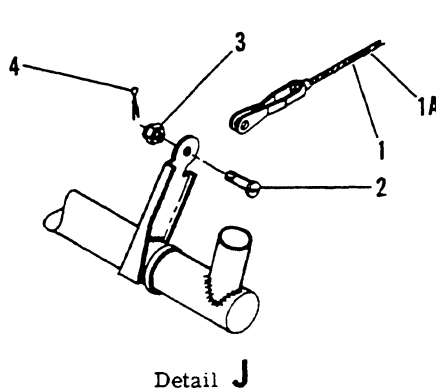
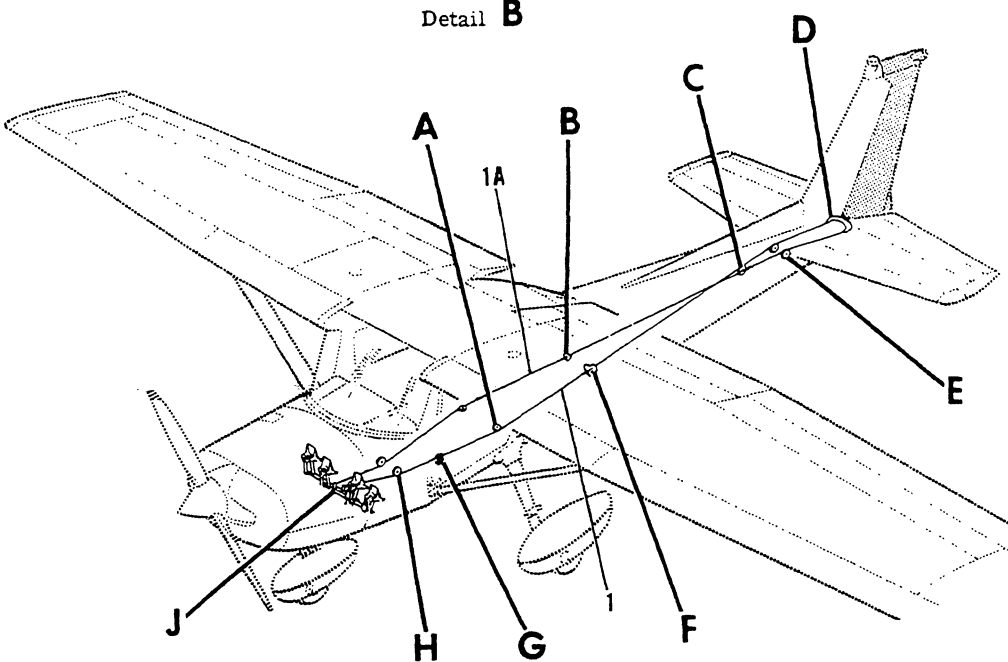
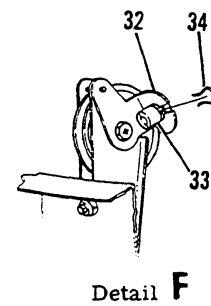
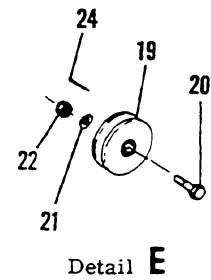
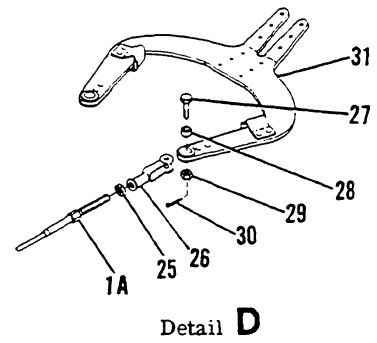
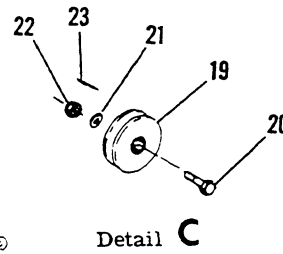
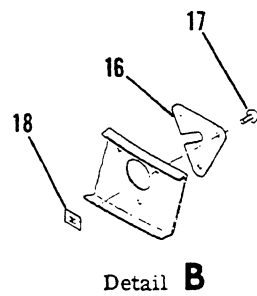
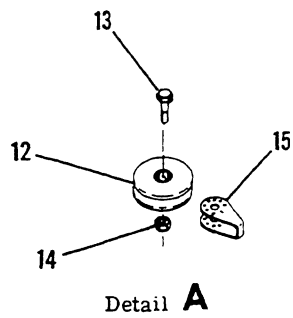



Figure 71. Rudder Control System

152 & A152 Parts Catalog


FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
71 -		RUDDER CONTROL SYSTEM -----	NP	
- 1	0400107-49	CABLE ASSEMBLY-RUDDER CONTROL LH -----	1	
	0400107-149	CABLE ASSEMBLY-RUDDER CONTROL LH STAINLESS STEEL -----	1	
- 1A	0400107-50	CABLE ASSEMBLY-RUDDER CONTROL RH -----	1	
	0400107-150	CABLE ASSEMBLY-RUDDER CONTROL RH STAINLESS STEEL -----	1	
		ATTACHING PARTS -----		
- 2	AN23-10	BOLT -----	1	
- 3	AN310-3	NUT -----	1	
- 4	MS24665-132	PIN-COTTER -----	1	
		-----*		
- 5	S378-4	PULLEY -----	2	
		ATTACHING PARTS -----		
- 6	AN4-10A	BOLT -----	1	
- 7	MS21042L4	NUT -----	1	
- 8	0411421-6	GUARD -----	1	
		-----*		
- 9	S339-1	CLIP -----	1	
-10	S338-1	FAIRLEAD-HALF -----	2	
-11	0460200-1	RETAINER-FAIRLEAD -----	1	
-12	S378-3	PULLEY -----	2	
		ATTACHING PARTS -----		
-13	AN4-10A	BOLT -----	1	
-14	MS21042L4	NUT -----	1	
-15	0411421-2	GUARD -----	1	
		-----*		
-16	0412168-1	FAIRLEAD -----	1	
		ATTACHING PARTS -----		
-17	S102178-6	SCREW -----	3	
-18	NAS446-4-3	NUT -----	3	
		-----*		
-19	S378-3	PULLEY -----	3	
		ATTACHING PARTS -----		
-20	AN4-10A	BOLT -----	1	
-21	AN960-416	WASHER -----	1	
-22	MS21042L4	NUT -----	1	
		-----*		
-23	MS24665-283	PIN-COTTER CABLE GUARD -----	1	
-24	MS24665-134	PIN-COTTER CABLE GUARD -----	2	
-25	AN315-4R	NUT -----	2	
-26	MS27975-3	CLEVIS -----	2	
		ATTACHING PARTS -----		
-27	AN3-6	BOLT -----	1	
-28	NAS74A3-004	BUSHING -----	1	
	NAS74A3-004P	BUSHING ALTERNATE -----	1	
-29	AN310-3	NUT -----	1	
-30	MS24665-134	PIN-COTTER -----	1	
		-----*		
-31	SEE FIG 23	HORN ASSY-RUDDER -----	1	
-32	0460151-1	SUPPORT-FAIRLEAD -----	1	
-33	S338-1	FAIRLEAD HALF -----	2	
-34	S339-1	CLIP -----	1	

152 & A152 Parts Catalog


Flight Controls (Cont)

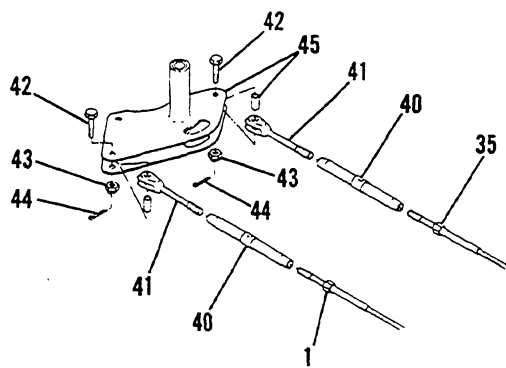


Detail A

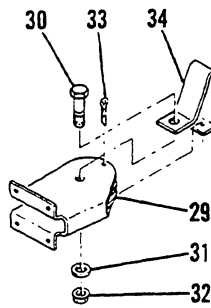


Detail B

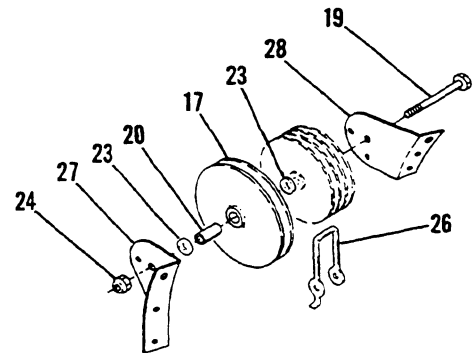


Detail C

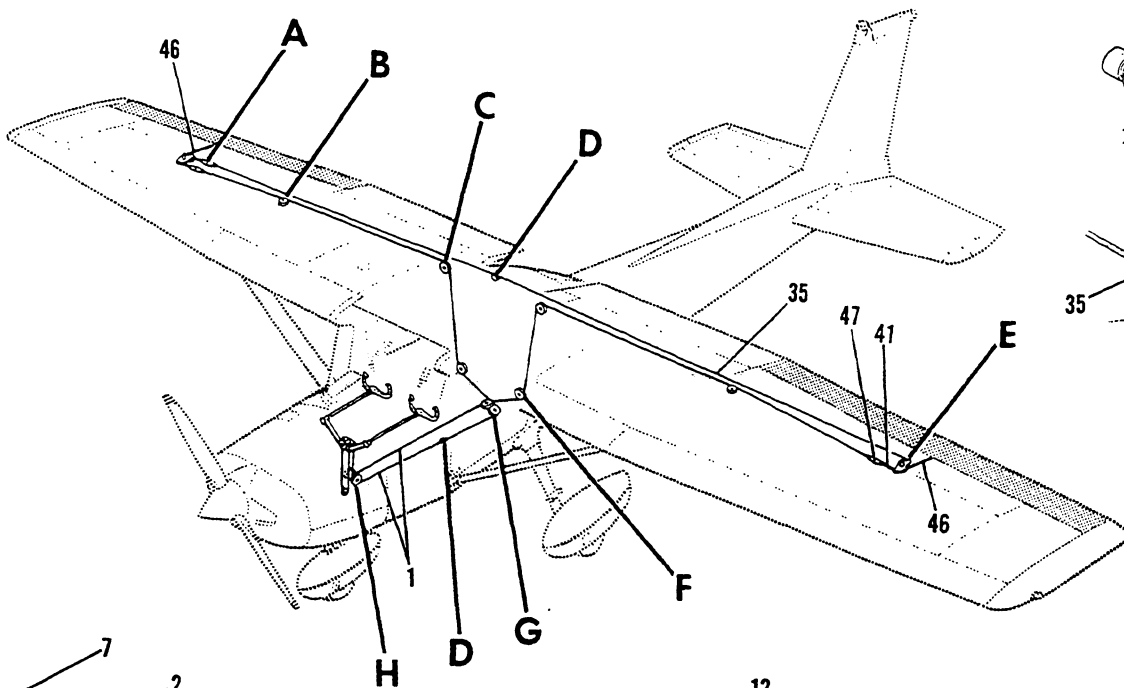


Detail D

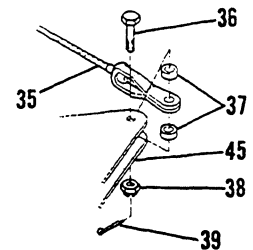


Detail E

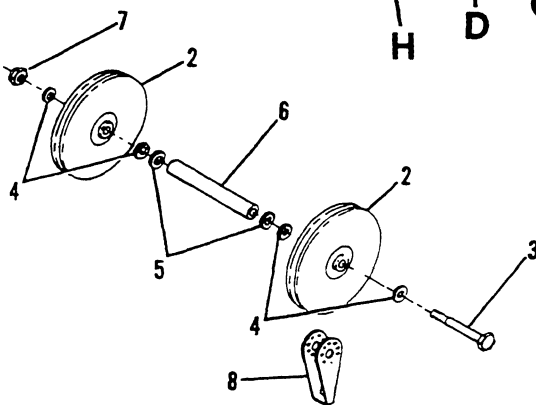

Detail H

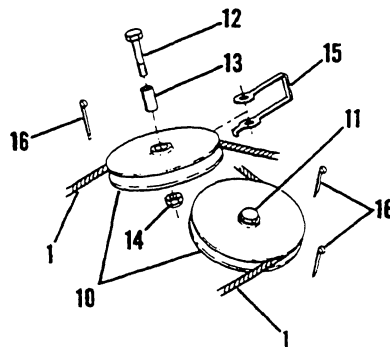

Detail G

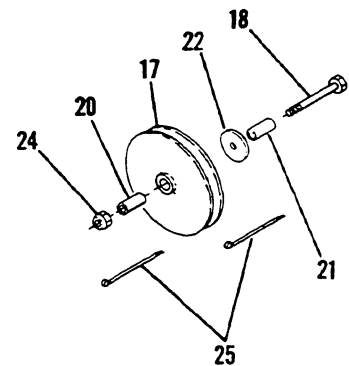

Detail F

152 SERIAL - SEE CODE A
 F152 SERIAL F15201429 THRU F15201538
 A152 SERIAL A1520735 THRU A1520785
 FA152 SERIAL FA1520337 THRU FA1520352

Figure 72. Aileron Control System

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
72 -		AILERON CONTROL SYSTEM -----	NP	A
- 1	0400107-41	CABLE ASSY-AILERON CONTROL -----	2	
	0400107-141	CABLE ASSY-AILERON CONTROL STAINLESS STEEL -----	2	
		ATTACHING PARTS -----		
	AN23-10	BOLT-CLEVIS ATTACH TO CONTROL Y -----	1	
	AN310-3	NUT ATTACH TO CONTROL Y -----	1	
	MS24665-132	PIN-COTTER ATTACH TO CONTROL Y -----	1	
		-----*		
- 2	S378-4	PULLEY -----	2	
		ATTACHING PARTS -----		
- 3	AN4-43A	BOLT -----	1	
- 4	AN960-416L	WASHER -----	4	
- 5	AN960-416	WASHER -----	2	
- 6	NAS43DD4-152	SPACER -----	1	
- 7	MS21042L4	NUT -----	1	
		-----*		
- 8	0411421-6	GUARD -----	2	
- 9	S338-1	FAIRLEAD HALF -----	4	
		ATTACHING PARTS -----		
	S339-1	CLIP -----	1	
		-----*		
-10	MS20220-2	PULLEY -----	2	
		ATTACHING PARTS -----		
-11	AN3-10A	BOLT -----	1	
-12	AN3-11A	BOLT -----	1	
-13	0460109-1	BUSHING -----	1	
-14	MS21044N3	NUT -----	1	
		-----*		
-15	0460108-1	GUARD -----	1	
-16	MS24665-136	PIN-COTTER -----	3	
-17	MS20220-2	PULLEY -----	4	
		ATTACHING PARTS -----		
-18	AN3-16A	BOLT -----	1	
-19	AN3-17A	BOLT -----	1	
-20	0460109-1	BUSHING -----	1	
-21	NAS43HT3-44	SPACER -----	1	
-22	AN970-3	WASHER -----	1	
-23	AN960-10	WASHER -----	2	
-24	MS21044N3	NUT -----	1	
		-----*		
-25	MS24665-143	PIN-COTTER -----	4	
-26	0460108-1	GUARD -----	4	
-27	0412044-2	BRACKET-PULLEY RH FWD -----	1	
	0412044-1	BRACKET-PULLEY LH FWD -----	1	
-28	0412044-4	BRACKET-PULLEY RH AFT -----	1	
	0412044-3	BRACKET-PULLEY LH AFT -----	1	
-29	S378-3	PULLEY -----	2	
		ATTACHING PARTS -----		
-30	AN4-10A	BOLT -----	1	
-31	AN960-10L	WASHER -----	1	
-32	MS21042L4	NUT -----	1	
		-----*		
-33	MS24665-132	PIN-COTTER -----	2	
-34	0423016-1	GUARD-PULLEY -----	1	
-35	0400107-21	CABLE-AILERON CONTROL -----	1	
	0400107-121	CABLE-AILERON CONTROL STAINLESS STEEL -----	1	
		ATTACHING PARTS -----		
-36	AN3-7	BOLT -----	1	
-37	NAS43HT4-9	SPACER -----	2	
-38	AN310-3	NUT -----	1	
-39	MS24665-134	PIN-COTTER -----	1	
		-----*		
-40	AN155-32L	BARREL-TURNBUCKLE -----	2	


CONTINUED ON NEXT PAGE

152 & A152 Parts Catalog


FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION							UNITS PER ASSY	USABLE ON CODE
		1	2	3	4	5	6	7		
72 -41	AN161-32LL	FORK -----							3	
-42	AN3-7	ATTACHING PARTS -----							1	
-43	AN310-3	BOLT -----							1	
-44	MS24665-134	NUT -----							1	
-45	SEE FIG 15	PIN-COTTER -----							1	
-46	SEE FIG 15	*-----								
-47	AN155-32S	BELL CRANK ASSY-AILERON -----							2	
		ROD ASSY-AILERON -----							2	
		BARREL-TURNBUCKLE -----							1	
		A---152 SERIAL 15279406 THRU 15281298, 15281300 THRU								
		15281314, 15281316 THRU 15281326, 15281328 THRU								
		15281340, 15281342 THRU 15281349, 15281351 THRU								
		15281359, 15281361 THRU 15281369, 15281371 THRU								
		15281380, 15281382 THRU 15281389, 15281391 THRU								
		15281400, 15281402 THRU 15281409, 15281411 THRU								
		15281420, 15281422 THRU 15281426								
		F152 SERIAL F15201429 THRU F15201538								
		A152 SERIAL A1520735 THRU A1520785								
		FA152 SERIAL FA1520337 THRU FA1520352								

152 & A152 Parts Catalog


Flight Controls (Cont)

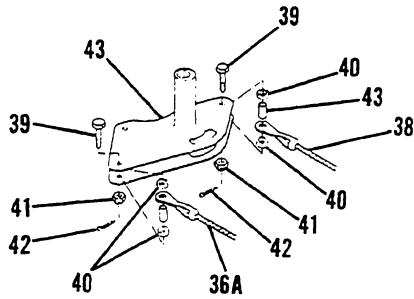

Detail A

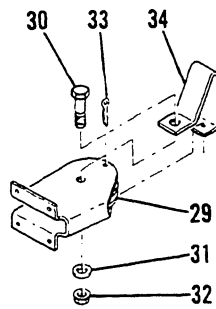


Detail B

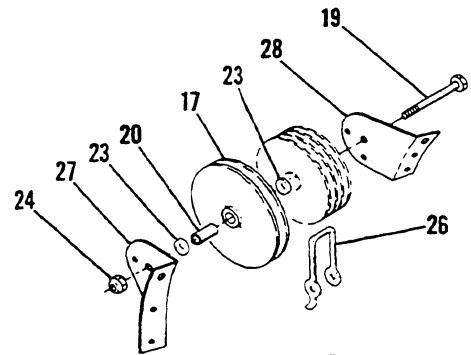



Detail C




Detail D

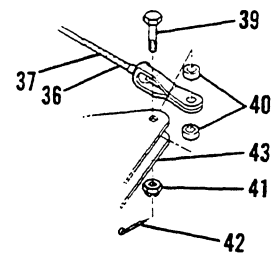


Detail E

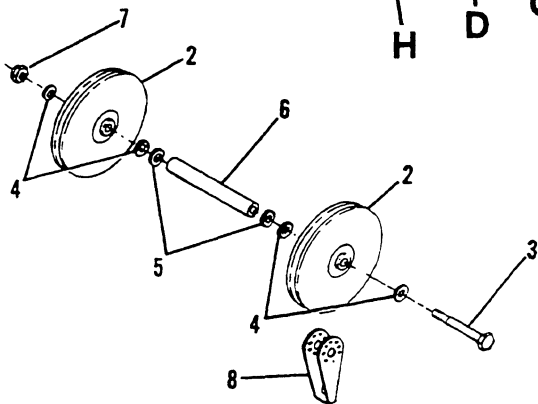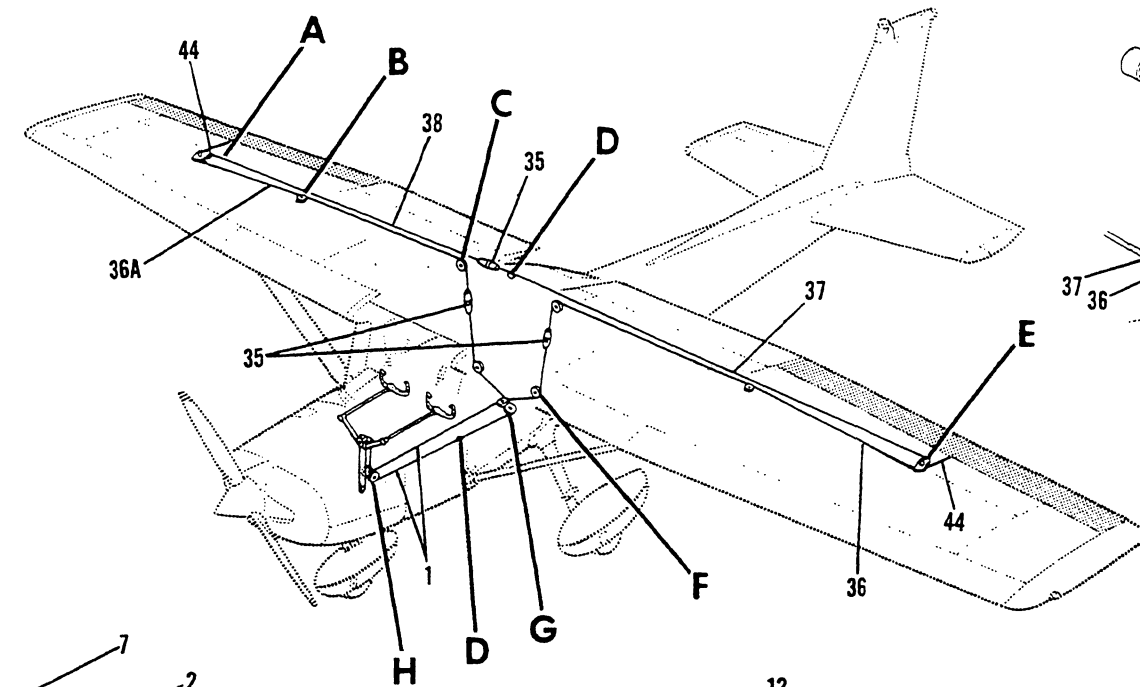

Detail H

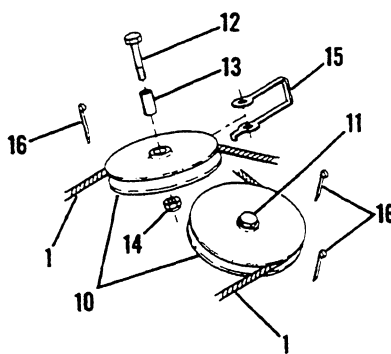

Detail G

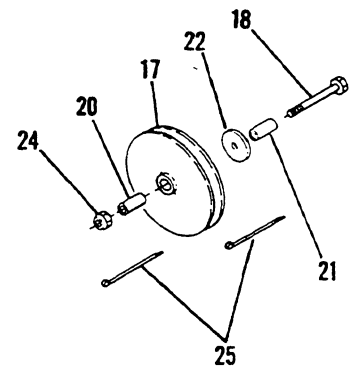

Detail F

152 SERIAL - SEE CODE A
F152 SERIAL F15201539 & ON
A152 SERIAL A1520786 & ON
FA152 SERIAL FA1520353 & ON

Figure 72A. Aileron Control System

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
72A-		AILERON CONTROL SYSTEM -----	NP	A
- 1	0400107-60	CABLE ASSY-AILERON CONTROL -----	2	
	0400107-160	CABLE ASSY-AILERON CONTROL STAINLESS STEEL -----	2	
		ATTACHING PARTS -----		
	AN23-10	BOLT-CLEVIS ATTACH TO CONTROL Y -----	1	
	AN310-3	NUT ATTACH TO CONTROL Y -----	1	
	MS24665-132	PIN-COTTER ATTACH TO CONTROL Y -----	1	
		-----*		
- 2	S378-4	PULLEY -----	2	
		ATTACHING PARTS -----		
- 3	AN4-43A	BOLT -----	1	
- 4	AN960-416L	WASHER -----	4	
- 5	AN960-416	WASHER -----	2	
- 6	NAS43DD4-152	SPACER -----	1	
- 7	MS21042L4	NUT -----	1	
		-----*		
- 8	0411421-6	GUARD -----	2	
- 9	S338-1	FAIRLEAD HALF -----	4	
		ATTACHING PARTS -----		
	S339-1	CLIP -----	1	
		-----*		
-10	MS20220-2	PULLEY -----	2	
		ATTACHING PARTS -----		
-11	AN3-10A	BOLT -----	1	
-12	AN3-11A	BOLT -----	1	
-13	0460109-1	BUSHING -----	1	
-14	MS21044N3	NUT -----	1	
		-----*		
-15	0460108-1	GUARD -----	1	
-16	MS24665-136	PIN-COTTER -----	3	
-17	MS20220-2	PULLEY -----	4	
		ATTACHING PARTS -----		
-18	AN3-16A	BOLT -----	1	
-19	AN3-17A	BOLT -----	1	
-20	0460109-1	BUSHING -----	1	
-21	NAS43HT3-44	SPACER -----	1	
-22	AN970-3	WASHER -----	1	
-23	AN960-10	WASHER -----	2	
-24	MS21044N3	NUT -----	1	
		-----*		
-25	MS24665-143	PIN-COTTER -----	4	
-26	0460108-1	GUARD -----	4	
-27	0412044-2	BRACKET-PULLEY RH FWD -----	1	
	0412044-1	BRACKET-PULLEY LH FWD -----	1	
-28	0412044-4	BRACKET-PULLEY RH AFT -----	1	
	0412044-3	BRACKET-PULLEY LH AFT -----	1	
-29	S378-3	PULLEY -----	2	
		ATTACHING PARTS -----		
-30	AN4-10A	BOLT -----	1	
-31	AN960-10L	WASHER -----	1	
-32	MS21042L4	NUT -----	1	
		-----*		
-33	MS24665-132	PIN-COTTER -----	2	
-34	0423016-1	GUARD-PULLEY -----	1	
-35	AN155-32S	BARREL-TURNBUCKLE -----	3	
-36	0400107-61	CABLE ASSY-AILERON DIRECT LH -----	1	
	0400107-161	CABLE ASSY-AILERON DIRECT LH STAINLESS STEEL -----	1	
-36A	0400107-65	CABLE ASSY-AILERON DIRECT RH -----	1	
	0400107-165	CABLE ASSY-AILERON DIRECT RH STAINLESS STEEL -----	1	
-37	0400107-59	CABLE ASSY-AILERON CROSSOVER LH -----	1	
	0400107-159	CABLE ASSY-AILERON CROSSOVER LH STAINLESS STEEL -----	1	
-38	0400107-58	CABLE ASSY-AILERON CROSSOVER RH -----	1	
	0400107-158	CABLE ASSY-AILERON CROSSOVER RH STAINLESS STEEL -----	1	
		ATTACHING PARTS -----		
-39	AN3-7	BOLT -----	1	
-40	NAS43HT4-9	SPACER -----	2	
-41	AN310-3	NUT -----	1	
-42	MS24665-134	PIN-COTTER -----	1	
		-----*		
-43	SEE FIG 15	BELLCRANK ASSY-AILERON INCLUDES BUSHINGS -----	2	
-44	SEE FIG 15	ROD ASSY-AILERON -----	2	
		A---152 SERIAL 15281299, 15281315, 15281327, 15281341, 15281350, 15281360, 15281370, 15281381, 15281390, 15281401, 15281410, 15281421, 15281427 & ON F152 SERIAL F15201539 & ON A152 SERIAL A1520786 & ON FA152 SERIAL FA1520353 & ON		

152 & A152 Parts Catalog

Flight Controls (Cont)

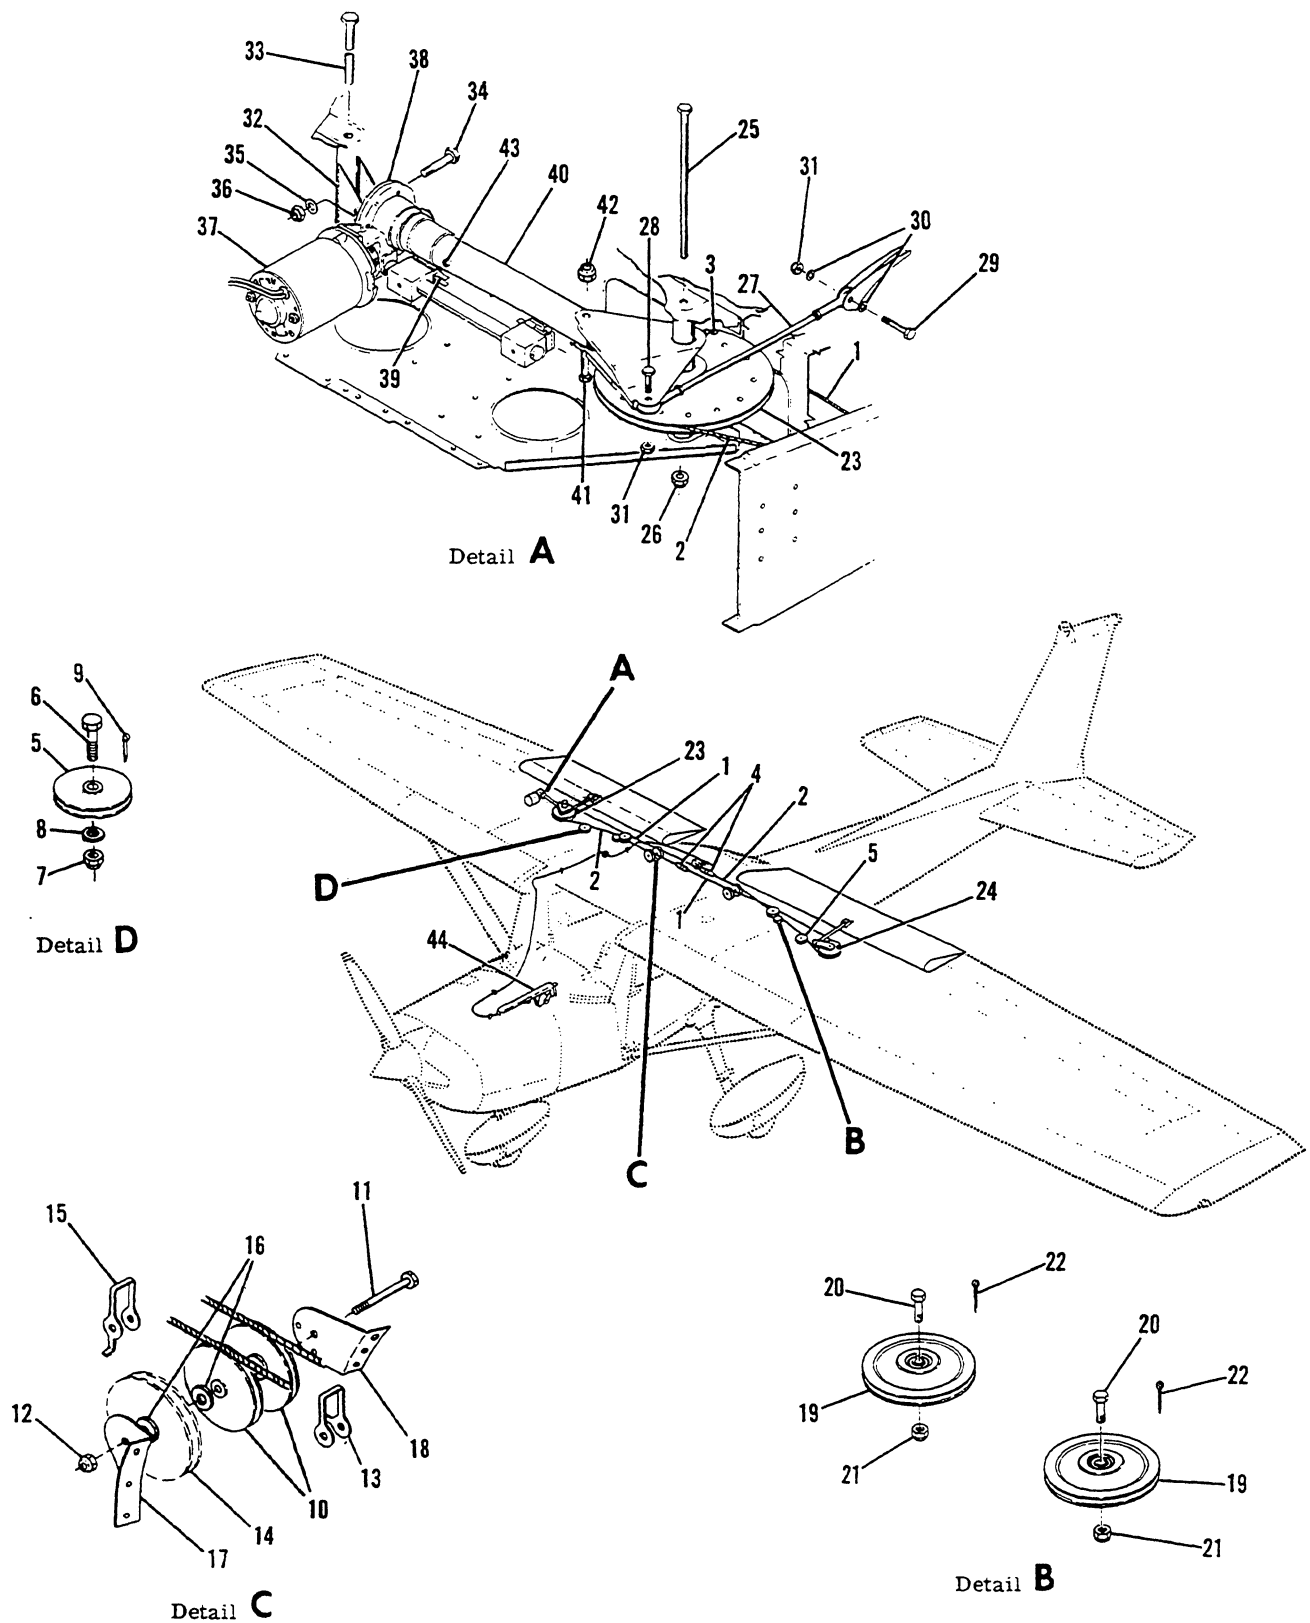


Figure 73. Electric Flap System

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
73 -		FLAP SYSTEM-ELECTRIC -----	NP	
- 1	0400107-45	CABLE-FLAP -----	2	
	0400107-145	CABLE-FLAP STAINLESS STEEL -----	2	
- 2	0400107-46	CABLE-FLAP -----	2	
	0400107-146	CABLE-FLAP STAINLESS STEEL -----	2	
		ATTACHING PARTS		
- 3	MS20392-1C9	PIN -----	2	
	MS24665-134	PIN-COTTER -----	2	
- 4	AN155-16S	BARREL -----	1	
		-----*		
- 5	S378-2	PULLEY -----	2	
		ATTACHING PARTS		
- 6	AN3-7A	BOLT -----	1	
- 7	MS21044N3	NUT -----	1	
- 8	AN960-10	WASHER -----	1	
		-----*		
- 9	MS24665-132	PIN-COTTER CABLE GUARD -----	2	
-10	S378-2	PULLEY -----	4	
		ATTACHING PARTS		
-11	AN3-17A	BOLT -----	1	
-12	MS21044N3	NUT -----	1	
-13	0760610-6	GUARD RH -----	1	
	0760610-5	GUARD LH -----	1	
-14	MS20220-2	PULLEY USED ON AILERON SYSTEM -----	1	
-15	0460108-1	GUARD USED ON AILERON PULLEY -----	2	
	0460109-1	BUSHING USED WITH AILERON PULLEY -----	1	
-16	AN960-10	WASHER -----	2	
		-----*		
-17	0412044-2	BRACKET-PULLEY RH FWD -----	1	
	0412044-1	BRACKET-PULLEY LH FWD -----	1	
-18	0412044-4	BRACKET-PULLEY RH AFT -----	1	
	0412044-3	BRACKET-PULLEY LH AFT -----	1	
-19	S378-2	PULLEY -----	4	
		ATTACHING PARTS		
-20	AN3-6A	BOLT -----	1	
-21	MS21044N3	NUT -----	1	
		-----*		
-22	MS24665-132	PIN-COTTER CABLE GUARD -----	4	
-23	0760612-1	DRIVE PULLEY ASSY-RH -----	1	A
	0762054-4	DRIVE PULLEY ASSY-RH -----	1	B
-24	0760612-7	DRIVE PULLEY ASSY-LH -----	1	A
	0762054-5	DRIVE PULLEY ASSY-LH -----	1	B
		ATTACHING PARTS		
-25	AN4-60A	BOLT -----	1	
	0523536	BUSHING -----	1	
	S1450-20B12-032	WASHER -----	2	
	AN960D416	WASHER -----	2	
-26	MS21042L4	NUT -----	1	
		-----*		
	S1997-6H10	BEARING -----	2	A
	S1997-6-10	BEARING -----	2	B
-27	0523537	ROD ASSY -----	2	
		ATTACHING PARTS		
-28	AN3-7A	BOLT ATTACH BELLCRANK END -----	1	
-29	AN3-11A	BOLT ATTACH TO FLAP END -----	1	
-30	AN960-10	WASHER ATTACH AT FLAP END -----	5	
-31	MS21044N3	NUT -----	2	
		-----*		
-32	0760619-1	HINGE ASSY-FLAP MOTOR -----	1	
		ATTACHING PARTS		
-33	AN4-56A	BOLT -----	1	
	0523536	BUSHING -----	1	
	MS21042L4	NUT -----	1	
		-----*		
	B610	BEARING TOR -----	1	
	C301002-0110	ACTUATOR & MOTOR ASSY -----	1	
		ATTACHING PARTS		
-34	AN6-15A	BOLT -----	1	
-35	AN960-616	WASHER -----	1	
-36	MS21042L6	NUT -----	1	
		-----*		
CONTINUED ON NEXT PAGE				

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION							UNITS PER ASSY	USABLE ON CODE	
		1	2	3	4	5	6	7			
73 -37 -38 -39 -40 -41 -42 -43 -44	C301002-0104	MOTOR-FLAP ACTUATOR -----							1		
	C301002-0113	ACTUATOR & SWITCH BAR ASSY -----							1		
	S1906-2	SWITCH-FLAP LIMIT -----							2		
	AN515-4-9	ATTACHING PARTS -----							2		
	AN936A4	SCREW -----							2		
		NUT -----							2		
		---*---									
	C301001-0211	COUPLING -----							1		
	0760620-9	TUBE ASSY-FLAP -----							1		
		ATTACHING PARTS -----									
	AN4-15A	BOLT -----							1		
	0760614-1	BUSHING -----							1		
	MS21042L5	NUT -----							1		
		---*---									
	S1003-66A	BEARING -----							1		
	AN565B428H4	SET SCREW -----							1		
	SEE FIG 74	FLAP POSITION INDICATOR INSTL -----							1		
	A---152 SERIAL 15279406 THRU 15281559										
	F152 SERIAL F15201429 THRU F15201538										
	A152 SERIAL A1520735 THRU A1520789										
FA152 SERIAL FA1520337 THRU FA1520351											
B---152 SERIAL 15281560 & ON											
F152 SERIAL F15201539 & ON											
A152 SERIAL A1520790 & ON											
FA152 SERIAL FA1520352 & ON											

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
74 -		FLAP POSITION INDICATOR INSTALLATION -----	NP	
- 1	0460207-1	LEVER ASSY-FLAP -----	1	
- 2	S1771-3	KNOB-FLAP LEVER -----	1	
- 3	0460210-7	INDICATOR ASSY-FLAP -----	1	
- 4	0460210-9	INDICATOR-FLAP -----	1	
	S2445-1	TIP -----	1	
- 5	S1906-1	SWITCH-FLAP LIMIT -----	2	
		ATTACHING PARTS -----		
- 6	AN515-4R12	SCREW -----	2	
- 7	AN936A4	WASHER -----	2	
- 7A	0470405-2	INSULATOR LOWER SWITCH ONLY -----	1	
- 7B	0470405-1	INSULATOR UPPER SWITCH ONLY -----	1	
	AN960-D4	WASHER BETWEEN INSULATOR & S1906-1 SWITCH -----	2	
- 8	AN340-4	NUT -----	2	
		*-----		
- 9	AN3-10A	BOLT -----	1	
-10	NAS75-3-018	BUSHING -----	1	
-11	S1438-9	WASHER -----	1	
-12	1512280-24	BUSHING -----	1	
-13	0460206-1	SPACER -----	1	
-14	S2202-4	WASHER -----	1	
-15	S2389-2	WASHER -----	1	
-16	AN960-10	WASHER -----	1	
-17	MS21044N3	NUT -----	1	
-18	0460216-2	SPRING-FLAP INDICATOR -----	1	
-19	0460208-1	BRACKET-FLAP INDICATOR -----	1	
-20	0460209-1	BRACKET ASSY-FLAP CONTROL -----	1	
-21	0460209-4	BRACKET-FLAP CONTROL -----	1	
-22	9864054-2	CABLE ASSY-FLAP CONTROL FSO 9864054-2 SEE NOTE % -----	NP	B
		CABLE ASSY-FLAP CONTROL -----	1	D
		ATTACHING PARTS -----		
-23	MS20392-2C7	PIN -----	1	
-24	MS24665-134	PIN-COTTER -----	1	
-25	S2323-7	CLAMP -----	1	
-26	NAS43HT3-6	SPACER -----	1	
-27	AN960-10L	WASHER -----	1	
-28	AN960-10	WASHER -----	1	
-29	MS21044N3	NUT -----	1	
		*-----		
-30	AN742D5	CLAMP -----	1	B
	AN742D4	CLAMP -----	1	D
		ATTACHING PARTS -----		
-31	AN3-4A	BOLT -----	1	
-32	AN960-10	WASHER -----	1	
-33	MS21044N3	NUT -----	1	
		*-----		
-33A	AN742D5	CLAMP -----	1	C
	AN742D4	CLAMP -----	1	D
		ATTACHING PARTS -----		
	AN515-8R8	SCREW -----	1	
	AN960-8	WASHER -----	1	
	MS21044N08	NUT -----	1	
		*-----		
-34	AN742D5	CLAMP -----	1	B
	AN742D4	CLAMP -----	1	D
		ATTACHING PARTS -----		
	AN515-8R8	SCREW -----	1	A
	AN960-8	WASHER -----	1	A
	MS21044N08	NUT -----	1	A
		*-----		
-34A	AN742D5	CLAMP -----	1	A
		ATTACHING PARTS -----		
	AN520-10R8	SCREW -----	1	A
	AN960-10	WASHER -----	1	A
	MS21044N3	NUT -----	1	A
		*-----		
-35	AN742D5	CLAMP -----	1	B
	AN742D4	CLAMP -----	1	D
		ATTACHING PARTS -----		
	AN520-10R8	SCREW -----	1	
	AN960-10	WASHER -----	1	
	MS21044N3	NUT -----	1	
		*-----		

CONTINUED ON NEXT PAGE

152 & A152 Parts Catalog

Flight Controls (Cont)

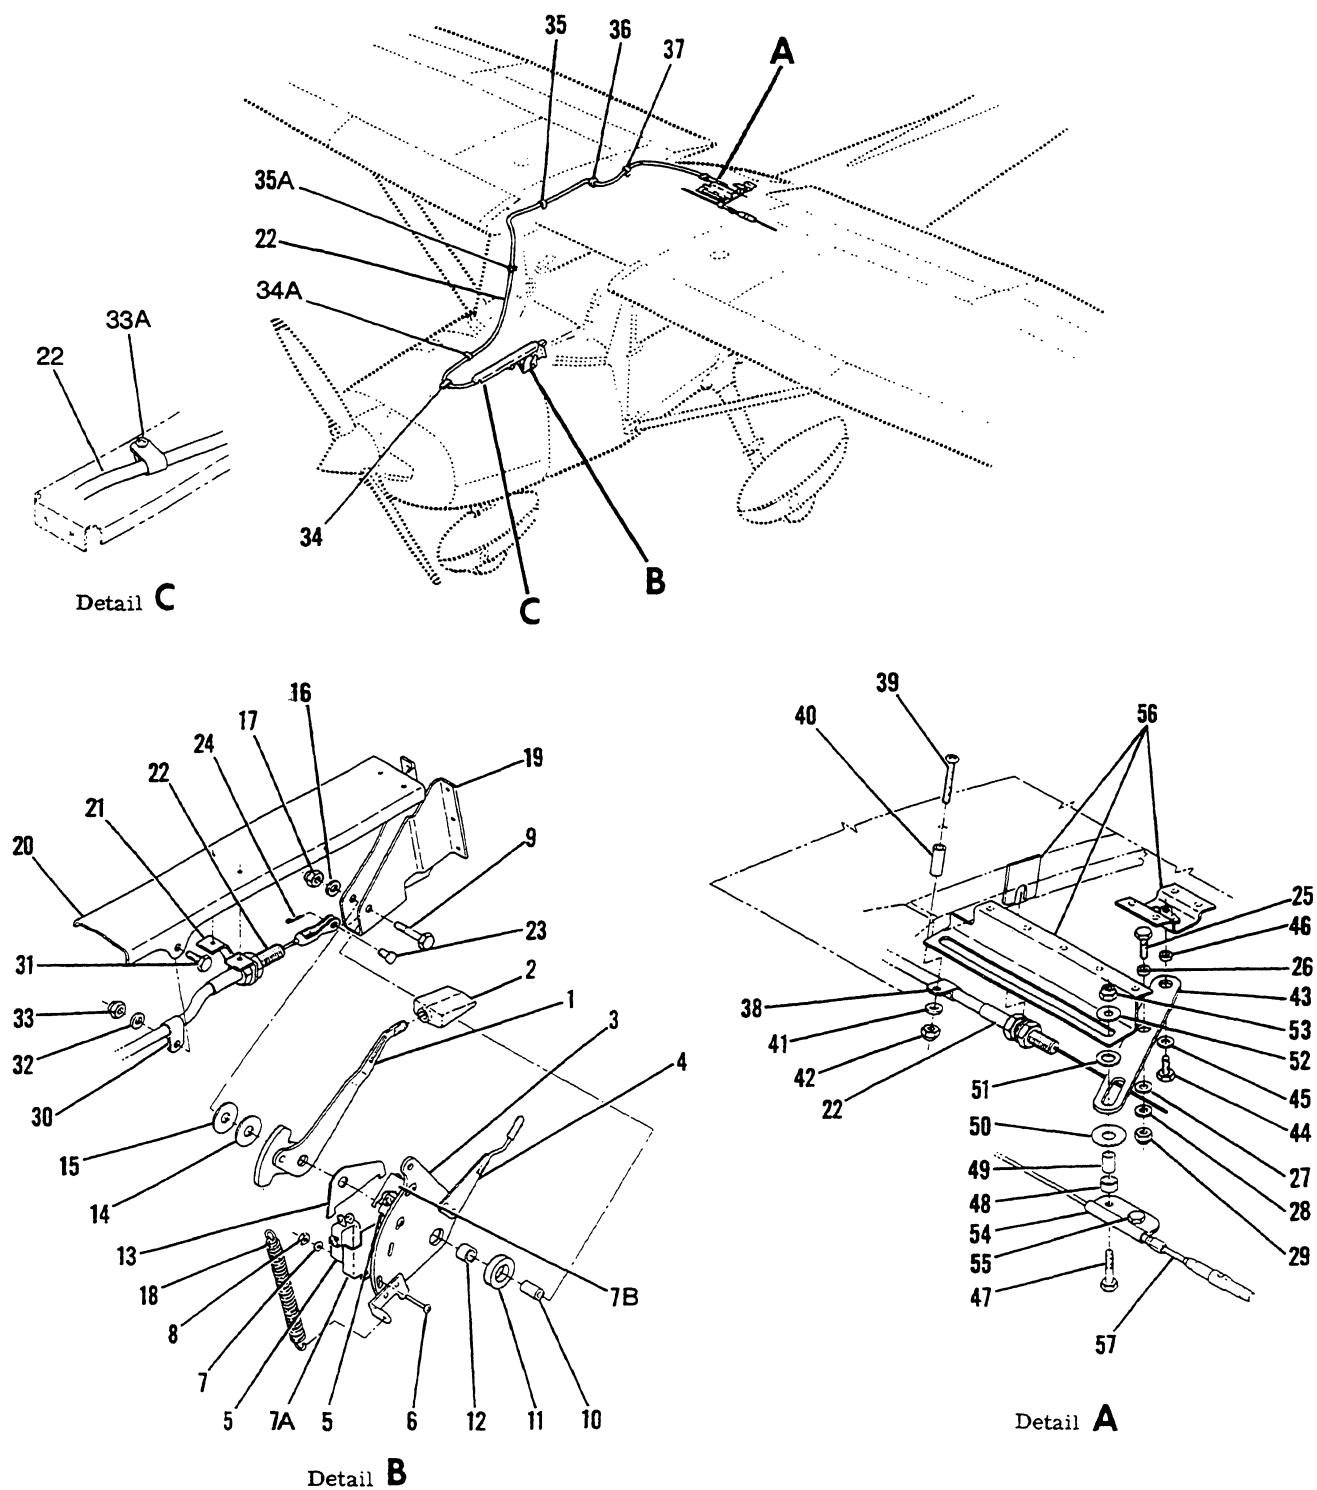



Figure 74. Flap Position Indicator Installation

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION							UNITS PER ASSY	USABLE ON CODE
		1	2	3	4	5	6	7		
74 -35A	AN742D5	CLAMP	-----	-----	-----	-----	-----	-----	1	B D
	AN742D4	CLAMP	-----	-----	-----	-----	-----	-----	1	
	AN520-10R8	ATTACHING PARTS	-----	-----	-----	-----	-----	-----	1	
		SCREW	-----	-----	-----	-----	-----	-----	1	
		-----*	-----	-----	-----	-----	-----	-----	1	
-36	MS35489-14	GROMMET	-----	-----	-----	-----	-----	-----	1	
-37	AN742D5	CLAMP	-----	-----	-----	-----	-----	-----	1	B D
	AN742D4	CLAMP	-----	-----	-----	-----	-----	-----	1	
		ATTACHING PARTS	-----	-----	-----	-----	-----	-----	1	
	AN520-8R8	SCREW	-----	-----	-----	-----	-----	-----	1	
	AN960-8	WASHER	-----	-----	-----	-----	-----	-----	1	
	MS21044N08	NUT	-----	-----	-----	-----	-----	-----	1	
		-----*	-----	-----	-----	-----	-----	-----	1	
-38	AN742D5	CLAMP	-----	-----	-----	-----	-----	-----	1	B D
	AN742D4	CLAMP	-----	-----	-----	-----	-----	-----	1	
		ATTACHING PARTS	-----	-----	-----	-----	-----	-----	1	
-39	AN520-10R20	SCREW	-----	-----	-----	-----	-----	-----	1	
-40	NAS43DD3-48	SPACER	-----	-----	-----	-----	-----	-----	1	
-41	AN960-10	WASHER	-----	-----	-----	-----	-----	-----	1	
-42	MS21044N3	NUT	-----	-----	-----	-----	-----	-----	1	
		-----*	-----	-----	-----	-----	-----	-----	1	
-43	0460217-1	BELLCRANK-FLAP INDICATOR	-----	-----	-----	-----	-----	-----	1	
		ATTACHING PARTS	-----	-----	-----	-----	-----	-----	1	
-44	AN3-3A	BOLT	-----	-----	-----	-----	-----	-----	1	
-45	AN960-10L	WASHER	-----	-----	-----	-----	-----	-----	1	
-46	NAS43HT3-6	SPACER	-----	-----	-----	-----	-----	-----	1	
		-----*	-----	-----	-----	-----	-----	-----	1	
-47	AN3-7A	BOLT	-----	-----	-----	-----	-----	-----	1	
-48	NAS43HT5-14	SPACER	-----	-----	-----	-----	-----	-----	1	
-49	NAS43HT3-29	SPACER	-----	-----	-----	-----	-----	-----	1	
-50	S2389-2	WASHER	-----	-----	-----	-----	-----	-----	1	
-51	S2202-1	WASHER	-----	-----	-----	-----	-----	-----	1	
-52	S1450-3-10-032	WASHER	-----	-----	-----	-----	-----	-----	1	
-53	MS21044N3	NUT	-----	-----	-----	-----	-----	-----	1	
-54	0560037-1	CLAMP	-----	-----	-----	-----	-----	-----	1	
		ATTACHING PARTS	-----	-----	-----	-----	-----	-----	1	
-55	NAS563-11	BOLT	-----	-----	-----	-----	-----	-----	1	
	AN960-10L	WASHER	-----	-----	-----	-----	-----	-----	1	
	MS20364-1032C	NUT	-----	-----	-----	-----	-----	-----	1	
		-----*	-----	-----	-----	-----	-----	-----	1	
-56	SEE FIG 30	BRACKETS-FLAP INDICATOR	-----	-----	-----	-----	-----	-----	AR	AR AR
-57	SEE FIG 73	CABLE-FLAP	-----	-----	-----	-----	-----	-----	AR	
NOTE. *WHEN INITIALLY ORDERING ANY OF THESE PARTS PRIOR TO SERIALS 15283355, F15201674, A1520868 & FA1520358, ALL PARTS MARKED WITH AN ASTERIX MUST BE ORDERED NOTE. *WHEN INITIALLY ORDERING THIS PART FOR AIRCRAFT PRIOR TO SERIALS 15284969, F15201894, A1520973 & FA1520378 YOU MUST ALSO REPLACE ALL AN742D5 CLAMPS WITH AN742D4 CLAMPS (7 PLACES). A---152 SERIAL 15279406 THRU 15284541 F152 SERIAL F15201429 THRU F15201808 A152 SERIAL A1520735 THRU A1520943 FA152 SERIAL FA1520337 THRU FA1520372 B---152 SERIAL 15279406 THRU 15284968 F152 SERIAL F15201429 THRU F15201893 A152 SERIAL A1520735 THRU A1520972 FA152 SERIAL F1520337 THRU FA1520377 C---152 SERIAL 15284542 THRU 15284968 F152 SERIAL F15201809 THRU F15201893 A152 SERIAL A1520944 THRU A1520972 FA152 SERIAL FA1520373 THRU FA1520377 D---152 SERIAL 15284969 & ON F152 SERIAL F15201894 & ON A152 SERIAL A1520973 & ON FA152 SERIAL FA1520378 & ON										

152 & A152 Parts Catalog

Flight Controls (Cont)

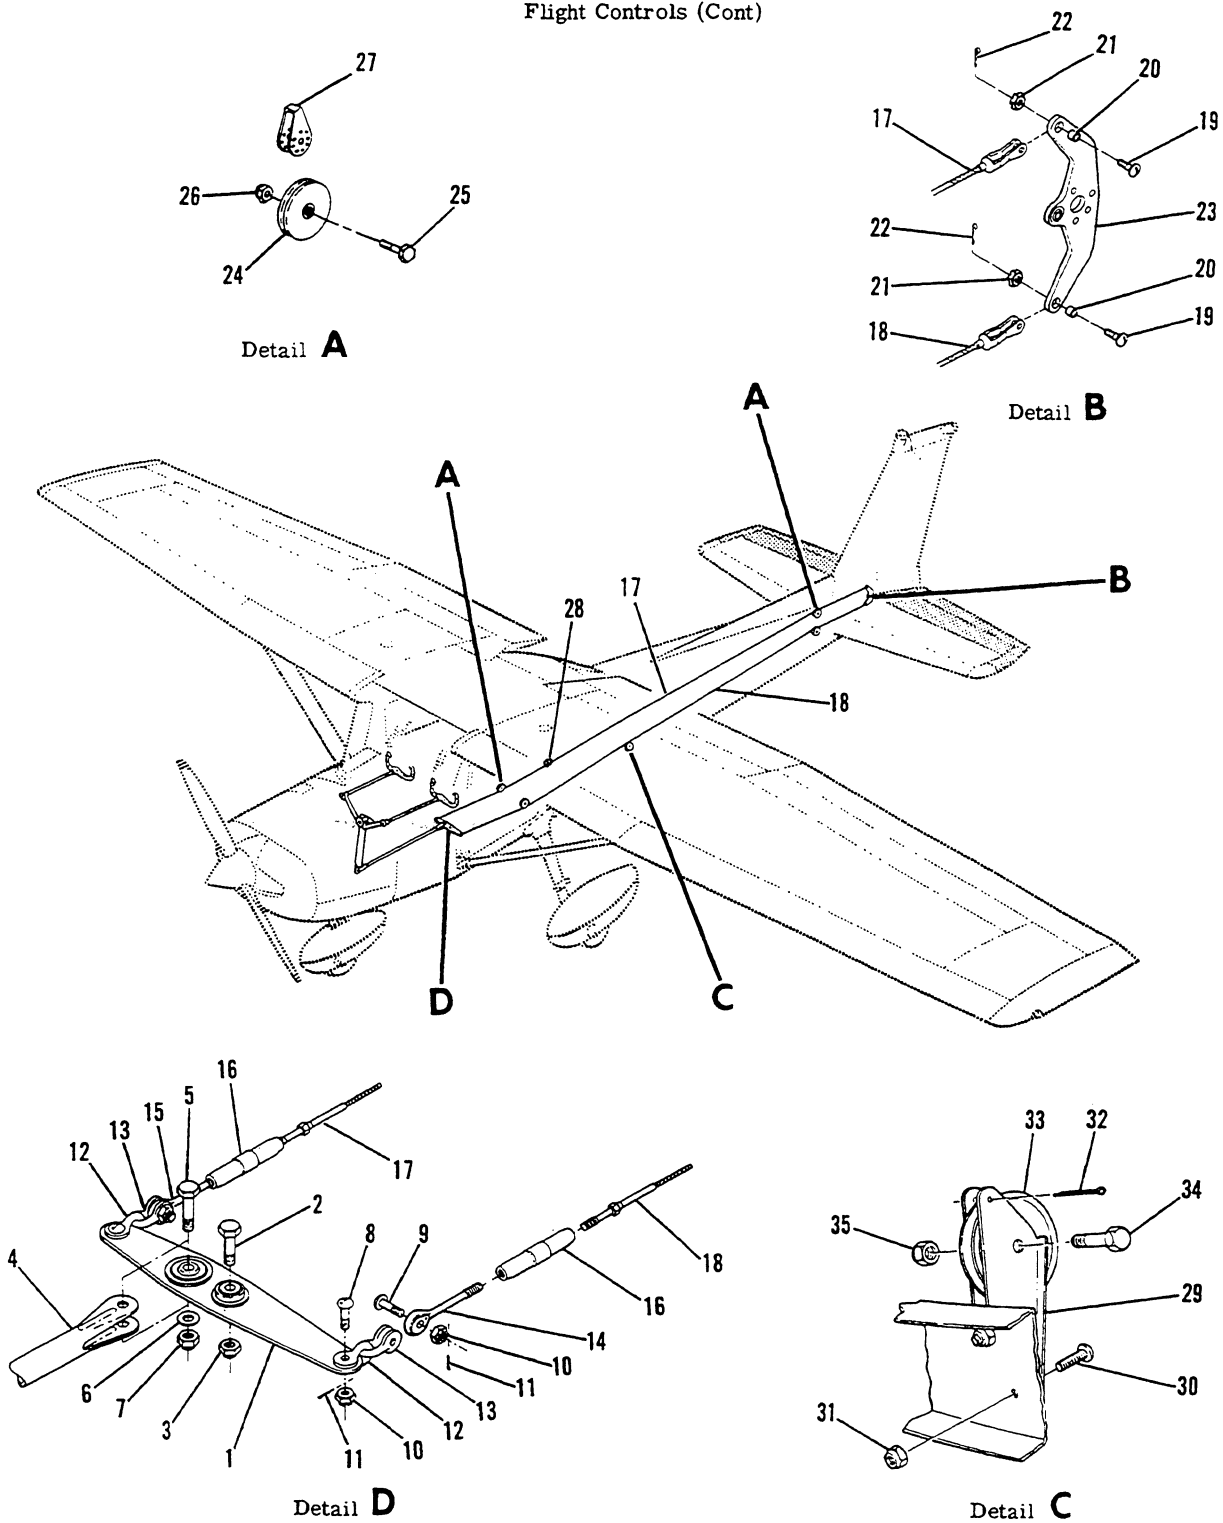

152 SERIAL - SEE CODE A
 F152 SERIAL F15201429 THRU F15201538
 A152 SERIAL A1520735 THRU A1520785
 FA152 SERIAL FA1520337 THRU FA1520352


Figure 75. Elevator Control System

152 & A152 Parts Catalog


FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
75 -		ELEVATOR CONTROL SYSTEM -----	NP	
- 1	0411258-1	BELLCRANK-ELEVATOR FORWARD -----	1	
		ATTACHING PARTS -----		
- 2	AN4-10A	BOLT -----	1	
- 3	MS21042L4	NUT -----	1	
		---*---		
- 4	SEE FIG 70	TUBE-BELLCRANK TO CONTROL Y -----	1	
		ATTACHING PARTS -----		
- 5	SEE FIG 70	BOLT -----	1	
- 6	SEE FIG 70	WASHER -----	1	
- 7	SEE FIG 70	NUT -----	1	
		---*---		
- 8	AN23-10	BOLT -----	2	
- 9	AN23-11	BOLT -----	2	
-10	AN310-3	NUT -----	4	
-11	MS24665-132	PIN-COTTER -----	4	
-12	AN115-21	SHACKLE -----	2	
-13	0533010-1	SHACKLE -----	2	
-14	AN165-22RL	EYE-TURNBUCKLE LH -----	1	
-15	AN165-22RS	EYE-TURNBUCKLE RH -----	1	
-16	AN155-32S	BARREL-TURNBUCKLE -----	2	
-17	0400107-5	CABLE-ELEVATOR CONTROL UP -----	1	
	0400107-105	CABLE-ELEVATOR CONTROL UP STAINLESS STEEL -----	1	
-18	0400107-9	CABLE-ELEVATOR CONTROL DOWN -----	1	
	0400107-109	CABLE-ELEVATOR CONTROL DOWN STAINLESS STEEL -----	1	
		ATTACHING PARTS -----		
-19	AN23-11	BOLT -----	1	
-20	NAS43HT3-13	SPACER -----	1	
-21	AN320-3	NUT -----	1	
-22	MS24665-134	PIN-COTTER -----	1	
		---*---		
-23	SEE FIG 21	BELLCRANK ASSY-ELEVATOR REAR -----	1	
-24	S378-3	PULLEY -----	4	
		ATTACHING PARTS -----		
-25	AN4-10A	BOLT -----	1	
-26	MS21042L4	NUT -----	1	
		---*---		
-27	0411421-2	GUARD -----	4	
-28	S338-1	FAIRLEAD-HALF -----	2	
		ATTACHING PARTS -----		
	S339-1	CLIP -----	1	
		---*---		
-29	0460150-1	BRACKET -----	1	
		ATTACHING PARTS -----		
-30	AN520-10R6	SCREW -----	2	
-31	MS21044N3	NUT -----	2	
		---*---		
-32	MS24665-134	PIN-COTTER -----	1	
-33	S378-3	PULLEY -----	1	
		ATTACHING PARTS -----		
-34	AN4-10A	BOLT -----	1	
-35	MS21042L4	NUT -----	1	
		---*---		
A---152 SERIAL 15279406 THRU 15281298, 15281300 THRU 15281314, 15281316 THRU 15281326, 15281328 THRU 15281340, 15281342 THRU 15281349, 15281351 THRU 15281359, 15281361 THRU 15281369, 15281371 THRU 15281380, 15281382 THRU 15281389, 15281391 THRU 15281400, 15281402 THRU 15281409, 15281411 THRU 15281420, 15281422 THRU 15281426 F152 SERIAL F15201429 THRU F15201538 A152 SERIAL A1520735 THRU A1520785 FA152 SERIAL FA1520337 THRU FA1520352				

152 & A152 Parts Catalog



Flight Controls (Cont)

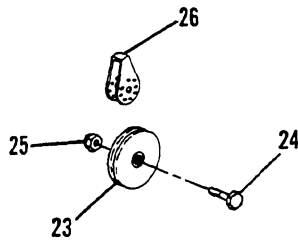


Detail A

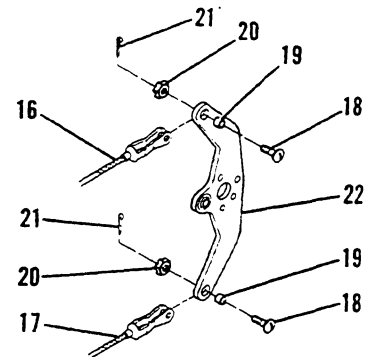


Detail B

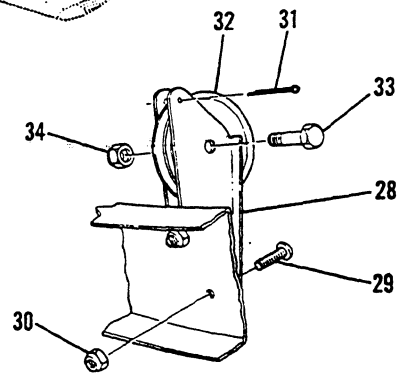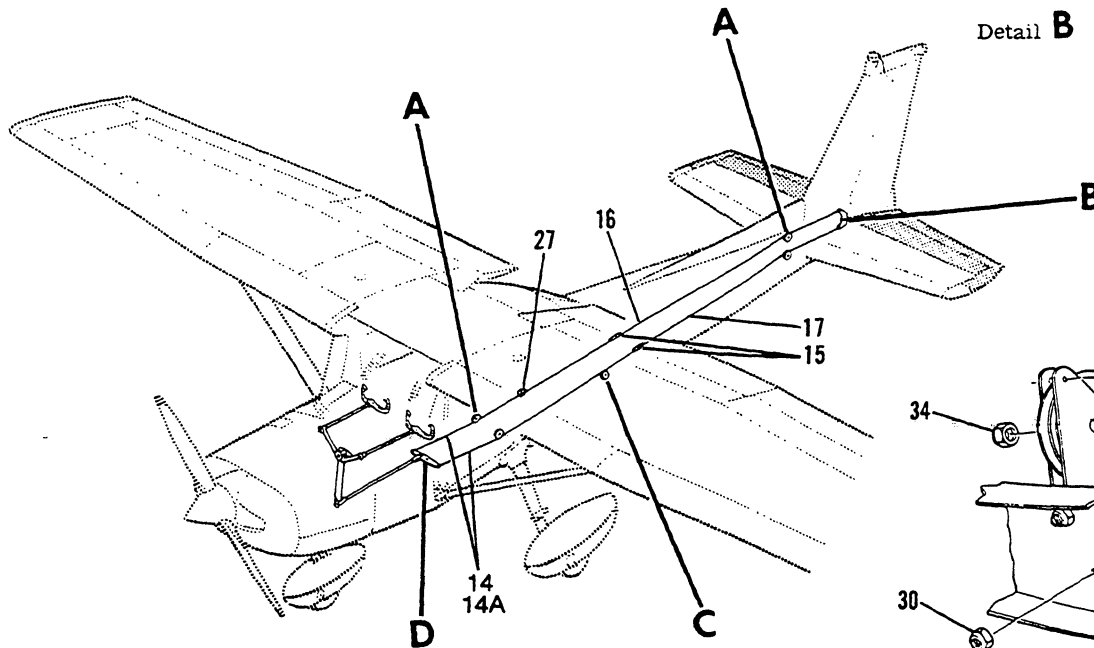

Detail C

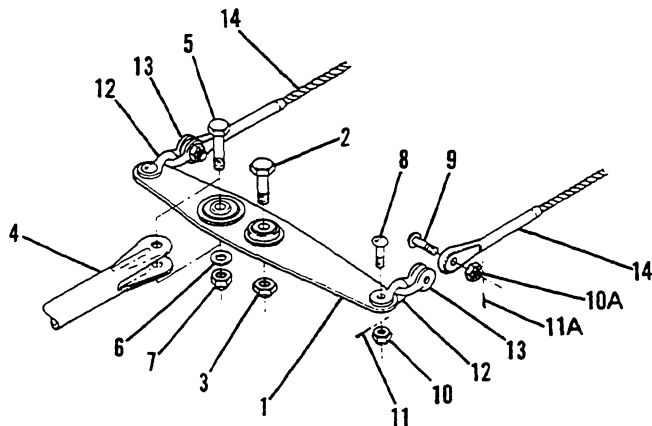

CODE B

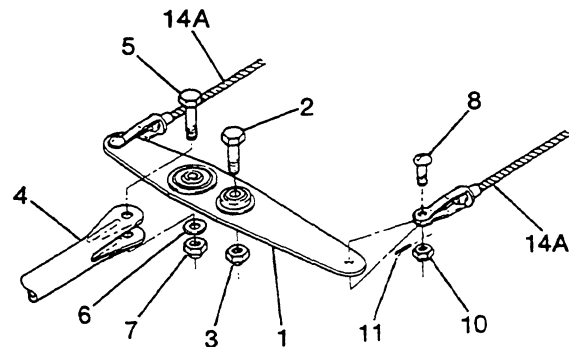

CODE C

Detail D

152 SERIAL - SEE CODE A
F152 SERIAL F15201539 & ON
A152 SERIAL A1520786 & ON
FA152 SERIAL FA1520353 & ON

Figure 75A. Elevator Control System

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
75A-		ELEVATOR CONTROL SYSTEM -----	NP	A
- 1	0411258-1	BELLCRANK-ELEVATOR FORWARD -----	1	
		ATTACHING PARTS -----		
- 2	AN4-10A	BOLT -----	1	
- 3	MS21042L4	NUT -----	1	
		*-----		
- 4	SEE FIG 70	TUBE-BELLCRANK TO CONTROL Y -----	1	
		ATTACHING PARTS -----		
- 5	SEE FIG 70	BOLT -----	1	
- 6	SEE FIG 70	WASHER -----	1	
- 7	SEE FIG 70	NUT -----	1	
		*-----		
- 8	AN23-10	BOLT -----	2	
- 9	AN23-11	BOLT -----	2	
-10	AN310-3	NUT -----	2	
-10A	AN310-3	NUT -----	2	B
-11	MS24665-132	PIN-COTTER -----	2	
-11A	MS24665-132	PIN-COTTER -----	2	B
-12	AN115-21	SHACKLE -----	2	B
-13	0533010-1	SHACKLE -----	2	B
-14	0400107-62	CABLE ASSY-ELEVATOR CONTROL FWD WEU 0400107-66 -----	2	B
	0400107-162	CABLE ASSY-ELEVATOR CONTROL FWD STAINLESS STEEL -----	2	B
		WEU 0400107-166 -----		
-14A	0400107-66	CABLE ASSY-ELEVATOR CONTROL FWD -----	1	C
	0400107-166	CABLE ASSY-ELEVATOR CONTROL FWD STAINLESS STEEL -----	1	
-15	AN155-32S	BARREL-TURNBUCKLE -----	2	
-16	0400107-63	CABLE ASSY-ELEVATOR CONTROL UP AFT -----	1	
	0400107-163	CABLE ASSY-ELEVATOR CONTROL UP AFT STAINLESS STEEL --	1	
-17	0400107-64	CABLE ASSY-ELEVATOR CONTROL DOWN AFT -----	1	
	0400107-164	CABLE ASSY-ELEVATOR CONTROL DOWN AFT STAINLESS STEEL	1	
		ATTACHING PARTS -----		
-18	AN23-11	BOLT -----	1	
-19	NAS43HT3-13	SPACER -----	1	
-20	AN320-3	NUT -----	1	
-21	MS24665-134	PIN-COTTER -----	1	
		*-----		
-22	SEE FIG 21 & 21A	BELLCRANK ASSY-ELEVATOR REAR -----	1	
-23	S378-3	PULLEY -----	4	
		ATTACHING PARTS -----		
-24	AN4-10A	BOLT -----	1	
-25	MS21042L4	NUT -----	1	
		*-----		
-26	0411421-2	GUARD -----	4	
-27	S338-1	FAIRLEAD HALF -----	2	
		ATTACHING PARTS -----		
	S339-1	CLIP -----	1	
		*-----		
-28	0460150-1	BRACKET -----	1	
		ATTACHING PARTS -----		
-29	AN520-10R6	SCREW -----	2	
-30	MS21044N3	NUT -----	2	
		*-----		
-31	MS24665-134	PIN-COTTER -----	1	
-32	S378-3	PULLEY -----	1	
		ATTACHING PARTS -----		
-33	AN4-10A	BOLT -----	1	
-34	MS21042L4	NUT -----	1	
		*-----		
		A---152 SERIAL 15281299, 15281315, 15281327, 15281341, 15281350, 15281360, 15281370, 15281381, 15281390, 15281401, 15281410, 15281421, 15281427 & ON F152 SERIAL F15201539 & ON A152 SERIAL A1520786 & ON FA152 SERIAL FA1520353 & ON B---152 SERIAL 15281299, 15281315, 15281327, 15281341, 15281350, 15281360, 15281370, 15281381, 15281390, 15281401, 15281410, 15281421, 15281427 THRU 15285396 F152 SERIAL F15201539 THRU F15201936 A152 SERIAL A1520786 THRU A1521000 FA152 SERIAL FA1520353 THRU FA1520387 C---152 SERIAL 15285397 & ON F152 SERIAL F15201937 & ON A152 SERIAL A1521001 & ON FA152 SERIAL FA1520388 & ON		

152 & A152 Parts Catalog

Flight Controls (Cont)

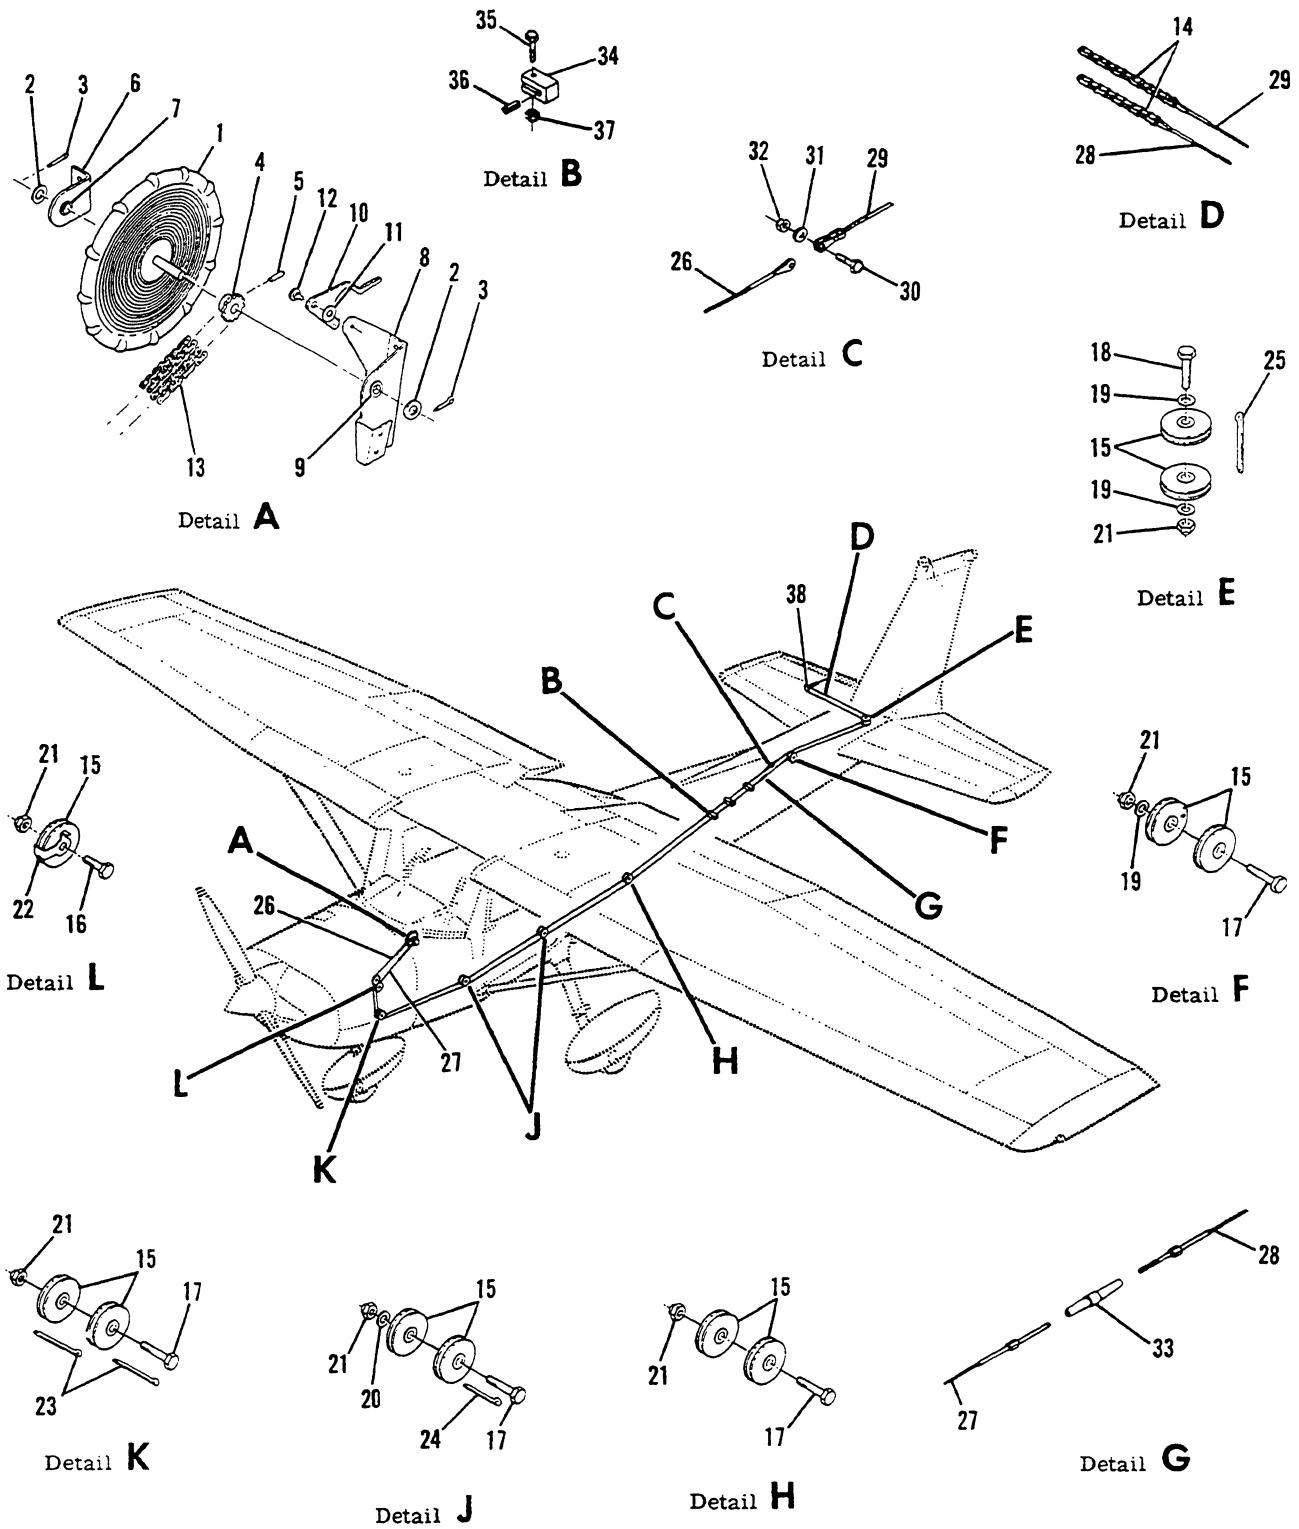


Figure 76. Elevator Trim Control System

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
76 -		ELEVATOR TRIM CONTROL SYSTEM -----	NP	
- 1	0460127-2	WHEEL ASSY-TAB CONTROL -----	1	
- 2	AN960-416L	ATTACHING PARTS -----	2	
- 3	MS24665-5	WASHER -----	2	
		PIN-COTTER -----		
		-----*		
- 4	0432134-1	SPROCKET -----	1	
		ATTACHING PARTS -----		
- 5	NAS561P3-8	ROLL PIN -----	1	
		-----*		
- 6	0460132-1	BRACKET ASSY -----	1	
- 7	S1896-4L1	BEARING -----	1	
- 8	0460152-1	BRACKET ASSY -----	1	
- 9	S1896-4L1	BEARING -----	1	
-10	0460153-1	INDICATOR ARM ASSY -----	1	
		ATTACHING PARTS -----		
-11	AN960D10L	WASHER -----	1	
-12	1460315-10	PIN -----	1	
		-----*		
-13	S2295P25-63	CHAIN-ELEVATOR TRIM -----	1	
	C4189	MASTER LINK-CHAIN -----	AR	
-14	S2295P25-69	CHAIN-ELEVATOR TRIM -----	1	
	C4189	MASTER LINK-CHAIN -----	AR	
-15	S378-1L	PULLEY -----	14	
		ATTACHING PARTS -----		
-16	AN3-5A	BOLT -----	1	
-17	AN3-10A	BOLT -----	1	
-18	AN3-11A	BOLT -----	1	
-19	AN960-10	WASHER -----	2	
-20	AN960-10L	WASHER -----	1	
-21	MS21044N3	NUT -----	1	
		-----*		
-22	0460124-1	GUARD-CABLE -----	2	
-23	MS24665-138	PIN-COTTER CABLE GUARD -----	2	
-24	MS24665-285	PIN-COTTER CABLE GUARD -----	2	
-25	MS24665-355	PIN-COTTER CABLE GUARD -----	1	
-26	0400107-56	CABLE-TAB WHEEL TO DISCONNECT -----	1	
	0400107-156	CABLE-TAB WHEEL TO DISCONNECT STAINLESS STEEL -----	1	
-27	0400107-55	CABLE-TAB WHEEL TO TURNBUCKLE -----	1	
	0400107-155	CABLE-TAB WHEEL TO TURNBUCKLE STAINLESS STEEL -----	1	
-28	0400107-30	CABLE-TAB ACTUATOR TO TURNBUCKLE -----	1	
	0400107-130	CABLE-TAB ACTUATOR TO TURNBUCKLE STAINLESS STEEL -----	1	
-29	0400107-57	CABLE-TAB ACTUATOR TO DISCONNECT -----	1	
	0400107-157	CABLE-TAB ACTUATOR TO DISCONNECT STAINLESS STEEL -----	1	
		ATTACHING PARTS -----		
-30	AN3-4A	BOLT -----	1	
-31	AN960-10	WASHER -----	1	
-32	MS21044N3	NUT -----	1	
		-----*		
-33	AN155-8L	BARREL-TURNBUCKLE -----	1	
-34	0411523	BLOCK-ELEVATOR TAB -----	3	
-35	AN3-6	BOLT -----	1	
-36	0411524	BUSHING -----	1	
-37	MS20365-1032C	NUT -----	1	
-38	SEE FIG 20	ACTUATOR ASSY-ELEVATOR TAB -----	1	

152 & A152 Parts Catalog

Pitot System

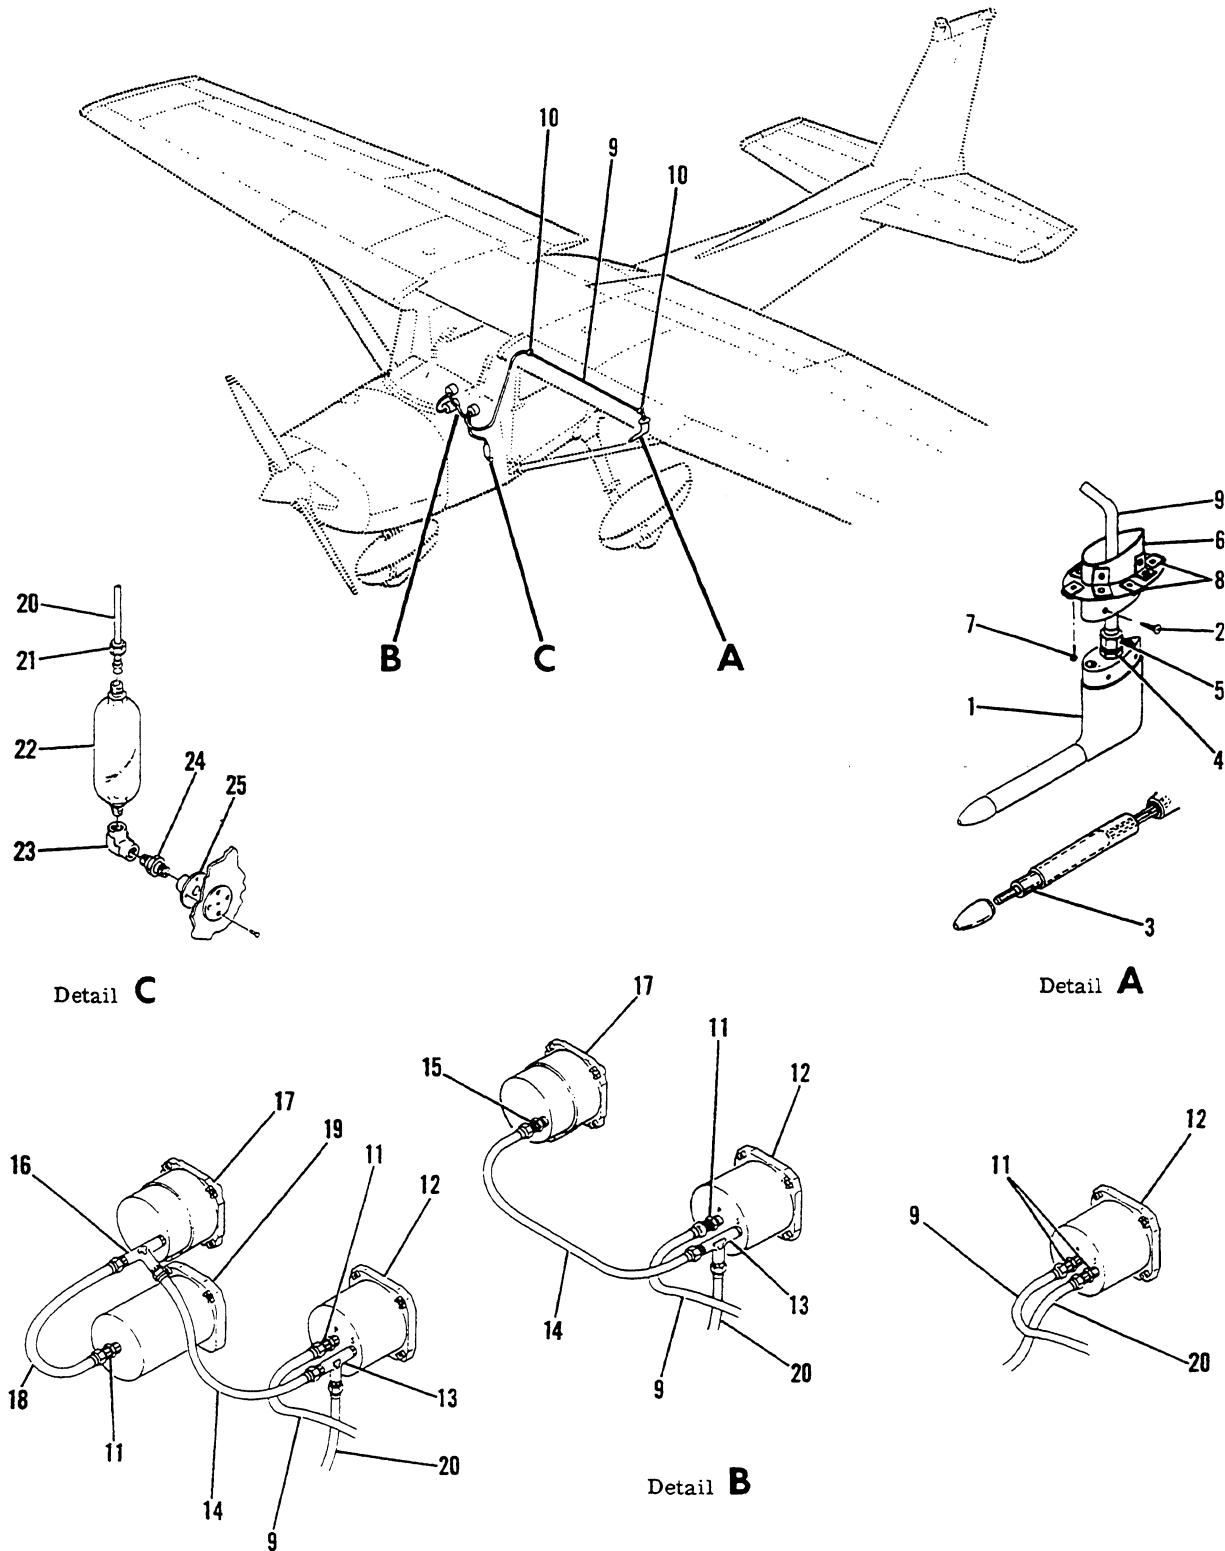



Figure 77. Pitot System

152 & A152 Parts Catalog


FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
77 -		PITOT SYSTEM -----	NP	
- 1	0721105-23	TUBE ASSY-PITOT -----	1	
	0721105-42	TUBE ASSY-HEATED PITOT 24 VOLT -----	1	
- 2	AN507-640R4	ATTACHING PARTS -----	4	
		SCREW -----		
		*-----		
- 3	0721105-9	HEATER ASSY-PITOT -----	1	
- 4	S1133-1	CONNECTOR -----	1	
- 5	S1130-1	NUT -----	1	
	S1131-1	INSERT -----	1	
- 6	0721101-8	CONNECTOR ASSY-PITOT TUBE -----	1	
		ATTACHING PARTS -----		
- 7	S102128-8	SCREW -----	4	
		*-----		
- 8	NAS395-14-3	NUT -----	4	
- 9	S1071-1	TUBE-PITOT TUBE TO AIRSPEED 80.0 IN LG BKI -----	1	
		ATTACHING PARTS -----		
-10	AN742D4	CLAMP -----	2	
	S102128-8	SCREW -----	2	
	NAS395-12-3	NUT -----	2	
		*-----		
-11	S1133-1	CONNECTOR -----	2	
	S1130-1	NUT -----	2	
	S1131-1	INSERT -----	2	
-12		INDICATOR-AIRSPEED SEE INSTRUMENT PANEL FIG -----	1	
-13	S1139-1	TEE -----	1	
	S1130-1	NUT -----	2	
	S1131-1	INSERT -----	2	
-14	S1071-1	TUBE-AIRSPEED TO ALTIMETER * IN LG BKI -----	1	
-15	S1133-1	CONNECTOR USED WHEN VERT SPEED IS NOT INSTALLED -----	1	
-16	S1139-1	TEE USED WHEN VERT SPEED IS INSTALLED -----	1	
	S1130-1	NUT -----	2	
	S1131-1	INSERT -----	2	
-17		ALTIMETER SEE INSTRUMENT PANEL FIG -----	1	
	SEE FIG 78	ENCODING & DUAL ALTIMETER INSTL -----	AR	
-18	S1071-1	TUBE-ALTIMETER TO VERTICAL SPEED * IN LG BKI -----	1	
-19		INDICATOR-VERTICAL SPEED SEE INSTRUMENT PANEL FIG -----	1	
-20	S1071-1	TUBE-AIRSPEED TO SUMP 18.0 IN LG BKI -----	1	
-21	S1130-1	NUT -----	1	
	S1131-1	INSERT -----	1	
-22	S1258-1	SUMP-STATIC SOURCE -----	1	
-23	AN916-1D	ELBOW -----	1	
-24	AN911-1D	NIPPLE -----	1	
-25	S1776-1	BUTTON-PITOT STATIC LINE -----	1	
NOTE. *LENGTH TO BE ADDED LATER				

152 & A152 Parts Catalog


Pitot System (Cont)

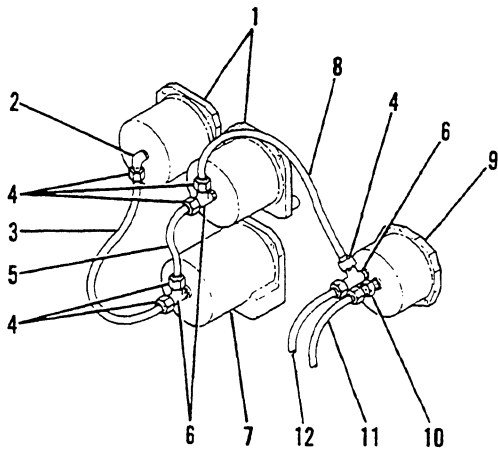

DUAL ALTIMETER INSTL

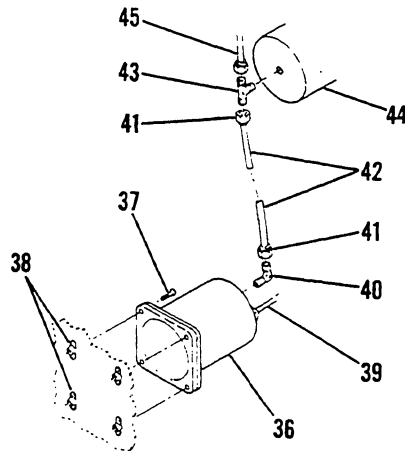


BLIND ENCODER INSTL

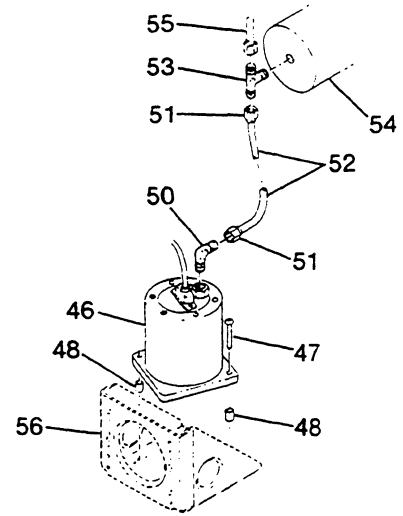

CODE J

BLIND ENCODER INSTL USED
WITH STANDBY VACUUM PUMP

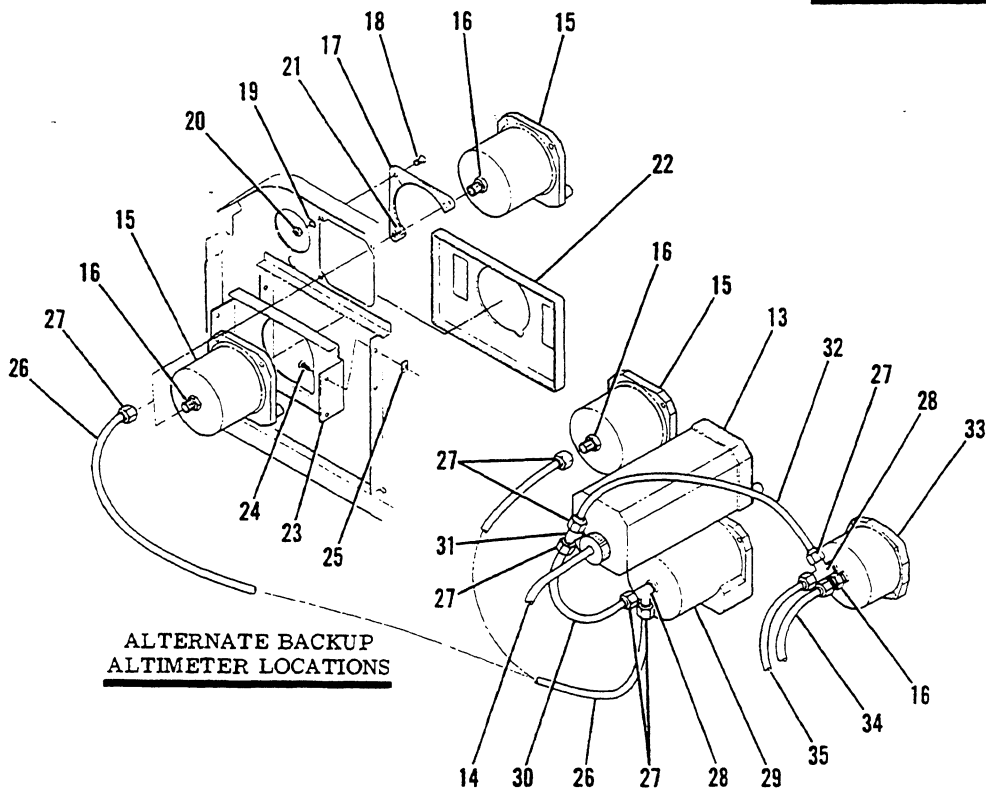

ALTERNATE BACKUP
ALTIMETER LOCATIONS

ENCODING ALTIMETER INSTL

Figure 78. Encoding & Dual Altimeter Installations

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
78 -		DUAL ALTIMETER INSTALLATION -----	NP	A
- 1	C661071-0102	ALTIMETER-50 FT INCREMENTS -----	2	
	C661025-0102	ALTIMETER-20 FT INCREMENTS -----	2	
	AN515B6R16	ATTACHING PARTS -----		
	AN936A6B	SCREW -----	3	
	AN340B6	WASHER -----	3	
		NUT -----	3	
		---*---		
- 2	S1135-1	ELBOW -----	1	
- 3	S1071-1	TUBE-ALTIMETER TO VERTICAL SPEED * IN LG BKI -----	1	
- 4	S1130-1	NUT -----	6	
	S1131-1	INSERT -----	6	
- 5	S1071-1	TUBE-ALTIMETER TO VERTICAL SPEED * IN LG BKI -----	1	
- 6	S1139-1	TEE -----	3	
- 7		INDICATOR-VERTICAL SPEED SEE INSTRUMENT PANEL FIG -----	1	
- 8	S1071-1	TUBE-ALTIMETER TO AIRSPEED * IN LG BKI -----	1	
- 9		INDICATOR-AIRSPEED SEE INSTRUMENT PANEL FIG -----	1	
-10	S1133-1	CONNECTOR -----	1	
-11	SEE FIG 77	TUBE ASSY-AIRSPEED TO PITOT TUBE -----	1	
-12	SEE FIG 77	TUBE ASSY-AIRSPEED TO SUMP -----	1	
-13	42540-3128	ENCODING ALTIMETER INSTALLATION -----	NP	B
	42540-3228	ALTIMETER-ENCODING FEET/INCHES ARC -----	1	
		ALTIMETER-ENCODING FEET/MILIBARS ARC -----	1	
	AN515B6R7	ATTACHING PARTS -----		
		SCREW -----	3	
		---*---		
-14		CABLE ASSY SEE CESSNA AVIONICS SERVICE/PARTS MANUAL -----	1	
-15		ALTIMETER-BACKUP SEE INSTRUMENT PANEL FIG -----	1	
-16	S1133-1	CONNECTOR -----	2	
-17	0401013-5	ADAPTOR -----	1	
		ATTACHING PARTS -----		
-18	AN515B6R6	SCREW -----	3	
-19	AN936A6	WASHER -----	3	
-20	AN340B6	NUT -----	3	
		---*---		
-21	NAS488-1-1	NUT -----	3	
-22	0413554-4	COVER ASSY -----	1	
	0413554-6	COVER ASSY -----	1	
	0413554-6-A59	COVER ASSY LT GREY -----	1	
	0413554-6-279	COVER ASSY BLACK -----	1	
	0413614-1-A59	COVER ASSY LT GREY -----	1	
	0413614-1-E83	COVER ASSY GREY -----	1	
	0413614-1-279	COVER ASSY BLACK -----	1	
	S2092-3	FASTENER-HOOK BKI -----	AR	
-23	0413555-1	BRACKET ASSY -----	1	
		ATTACHING PARTS -----		
-24	S1021Z6-6	SCREW -----	4	
-25	NAS446-2-3	NUT -----	4	
		---*---		
-26	S1071-1	TUBE-ALTIMETER TO VERTICAL SPEED * IN LG BKI -----	1	
-27	S1130-1	NUT -----	6	
	S1131-1	INSERT -----	6	
-28	S1139-1	TEE -----	2	
-29		INDICATOR-VERTICAL SPEED SEE INSTRUMENT PANEL FIG -----	1	
-30	S1071-1	TUBE-VERTICAL SPEED TO ENCODING ALTIMETER * IN LG -----	1	
-31	S1138-1	TEE -----	1	
-32	S1071-1	TUBE-ENCODING ALTIMETER TO AIRSPEED * IN LG BKI -----	1	
-33		INDICATOR-AIRSPEED SEE INSTRUMENT PANEL FIG -----	1	
-34	SEE FIG 77	TUBE ASSY-AIRSPEED TO PITOT TUBE -----	1	
-35	SEE FIG 77	TUBE ASSY-AIRSPEED TO SUMP -----	1	
-36	C744001-0101 e	BLIND ENCODER INSTALLATION -----	1	
		BLIND ENCODER -----	1	
		ATTACHING PARTS -----		
-37	AN515-8R12	SCREW -----	4	
-38	NAS680A08K	NUTPLATE -----	4	
		---*---		
-39		CABLE ASSY SEE CESSNA AVIONICS SERVICE/PARTS MANUAL -----	1	
-40	S1135-1	ELBOW -----	1	
-41	S1130-1	NUT -----	2	
	S1131-1	INSERT -----	2	
-42	S1071-1	TUBE-ENCODER TO TEE * IN LG BKI -----	1	
-43	S1138-1	TEE -----	1	
-44		ALTIMETER OR VERTICAL SPEED SEE INSTRUMENT PANEL FIG -----	1	
-45	SEE FIG 77	TUBE ASSY -----	1	
CONTINUED ON NEXT PAGE				

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
78 -		BLIND ENCODER INSTALLATION USED WITH STANDBY VACUUM PUMP --	1	J
-46	C744001-0101 @	BLIND ENCODER -----	1	
		ATTACHING PARTS -----		
-47	AN515-8R20	SCREW -----	3	
-48	NAS43DD3-24	SPACER -----	3	
		-----*		
-49		CABLE ASSY SEE CESSNA AVIONICS SERVICE/PARTS MANUAL -----	1	
-50	S1135-1	ELBOW -----	1	
-51	S1130-1	NUT -----	2	
	S1131-1	INSERT -----	2	
-52	S1071-1	TUBE-ENCODER TO TEE * IN LG BKI -----	1	
-53	S1138-1	TEE -----	1	
-54		ALTIMETER OR VERTICAL SPEED SEE INSTRUMENT PANEL FIG -----	1	
-55	SEE FIG 77	TUBE ASSY -----	1	
-56	SEE FIG 85B	BRACKET ASSY -----	1	
NOTE. * LENGTH TO BE DETERMINED LATER. NOTE. < THIS PART NUMBER MUST HAVE A SECOND DASH NUMBER ADDED TO DENOTE COLOR. REFER TO HOW TO ORDER INTERIOR PARTS-PAGE IX. NOTE. % THESE COVERS ARE NOT APPLICABLE TO AIRCRAFT EQUIPPED WITH INSTRUMENT POST LIGHTING-FOR POST LIGHTED COVERS SEE FIGURE 53A & 53B. NOTE. @ AN EXCHANGE PART IS ALSO AVAILABLE. REFER TO THE MASTER PRICE LIST. A---F152 SERIAL F15201429 & ON FA152 SERIAL FA1520337 & ON B---152 SERIAL 15279406 & ON A152 SERIAL A1520735 & ON C---152 SERIAL 15279406 THRU 15282031 F152 SERIAL F15201429 THRU F15201528 A152 SERIAL A1520735 THRU A1520808 FA152 SERIAL FA1520337 THRU FA1520347 D---152 SERIAL 15282032 THRU 15284541 F152 SERIAL F15201529 THRU F15201808 A152 SERIAL A1520809 THRU A1520943 FA152 SERIAL FA1520348 THRU FA1520372 E---152 SERIAL 15284542 THRU 15285594 F152 SERIAL F15201809 THRU F15201928 A152 SERIAL A1520944 THRU A1521014 FA152 SERIAL FA1520393 THRU FA1520382 F---152 SERIAL 15285595 & ON F152 SERIAL F15201929 & ON A152 SERIAL A1521015 & ON FA152 SERIAL FA1520383 & ON G---152 SERIAL 15285595 THRU 15285833 F152 SERIAL F15201929 THRU F15201943 A152 SERIAL A1521015 THRU A1521025 FA152 SERIAL FA1520383 THRU FA1520387 H---152 SERIAL 15285834 & ON F152 SERIAL F15201944 & ON A152 SERIAL A1521026 & ON FA152 SERIAL FA1520388 & ON J---152 SERIAL 15285940 & ON A152 SERIAL A1521028 & ON				

152 & A152 Parts Catalog

Stall Warning System

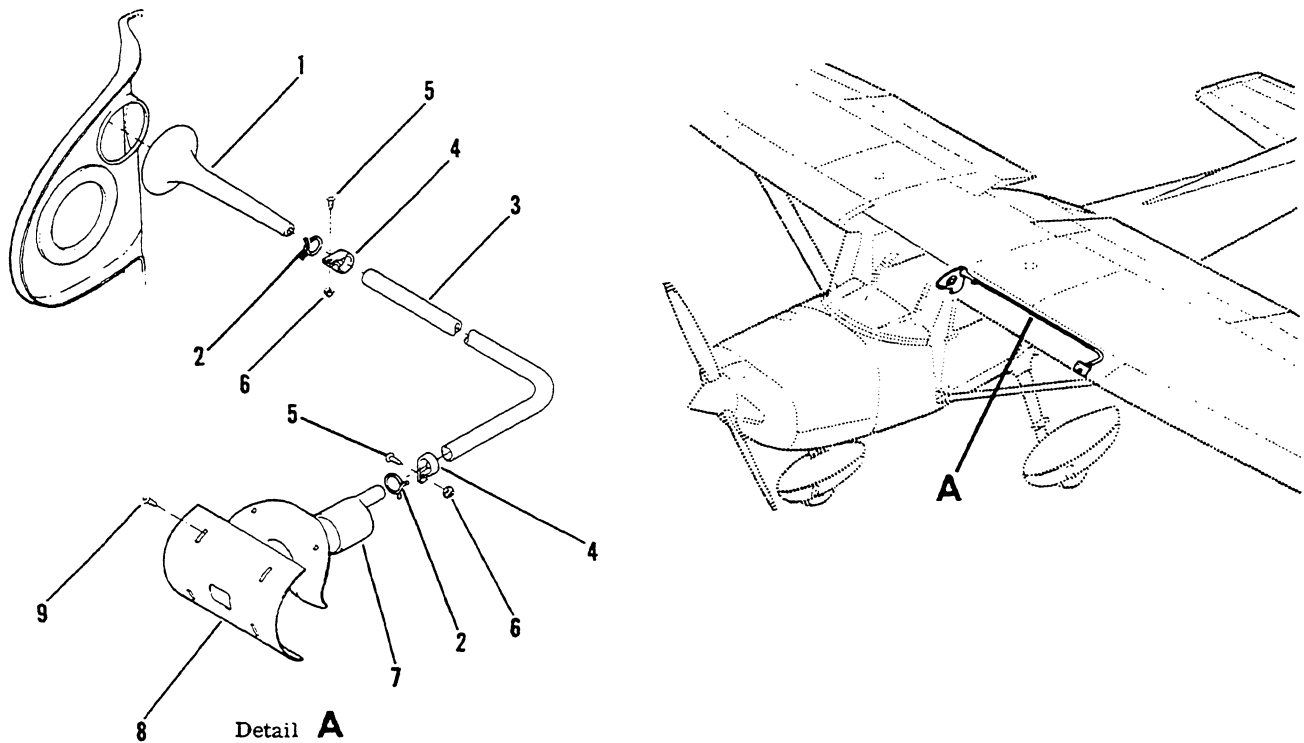


Figure 79. Stall Warning Horn Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
79 -		STALL WARNING HORN INSTALLATION -----	NP	
- 1	0713348-1	HORN ASSY -----	1	
- 2	S1494-8	CLAMP -----	2	
- 3	S1071-4	TUBE-53.75 IN LG BKT REF S1071-4-53.75 -----	1	
		ATTACHING PARTS -----		
- 4	AN742D8	CLAMP -----	5	
- 5	S1021Z6-6	SCREW -----	5	
- 6	NAS395-5-3	NUT -----	5	
		---*---		
- 7	0413485-1	SCOOP ASSY-STALL WARNING -----	1	
	0413485-2	SCREEN -----	1	
	0413028-5	SEAL-FELT -----	1	
- 8	0413028-8	PLATE-SCOOP -----	1	
		ATTACHING PARTS -----		
- 9	S1021Z8-8	SCREW -----	4	
	NAS395-18-1	NUT -----	4	
		---*---		

152 & A152 Parts Catalog

Brake System


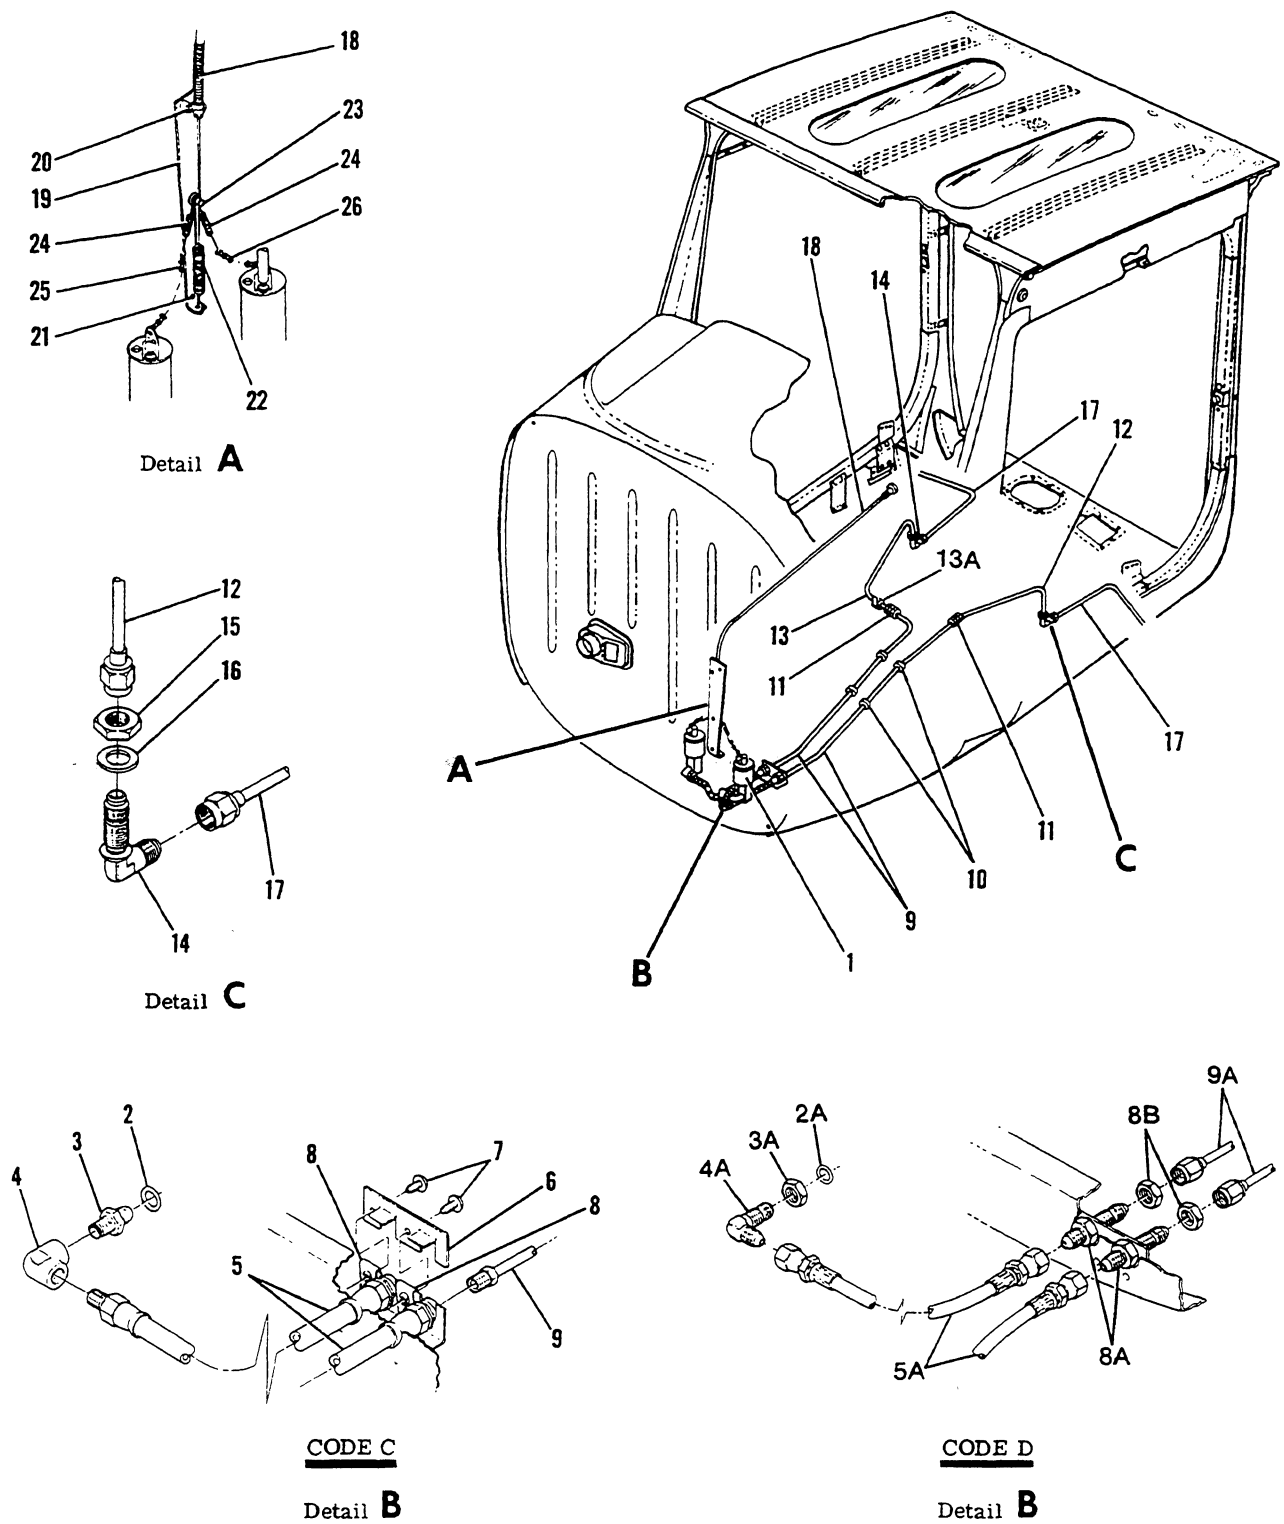


Figure 80. Brake System

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
80 -		BRAKE SYSTEM -----	NP	
- 1	SEE FIG 69 & 69A	CYLINDER ASSY-BRAKE -----	2	
- 2	MS28778-4	O RING -----	2	C
- 2A	MS28778-3	O RING -----	2	D
- 3	1782001-1	NIPPLE WEU 9880504-1 -----	2	A
	9880504-1	ADAPTOR -----	2	B
- 3A	AN924-3D	NUT -----	2	D
- 4	AN916-1D	ELBOW -----	2	C
- 4A	AN921-3D	ELBOW -----	2	C
- 5	S1810-1075	HOSE ASSY-BRAKE LH & RH -----	2	C
- 5A	S2889-3-0100	HOSE ASSY-BRAKE LH & RH -----	2	C
- 6	0413436-2	BRACKET -----	1	C
		ATTACHING PARTS		
- 7	S1021Z10-6	SCREW -----	2	C
- 8	NAS395-25-3	NUT -----	2	C
		-----*		
- 8A	MS20832-3D	UNION -----	2	D
- 8B	AN924-3D	NUT -----	2	D
- 9	0400311-98	LINE ASSY-BRAKE -----	2	C
- 9A	0400311-123	LINE ASSY-BRAKE -----	2	D
- 10	MS35489-7	GROMMET -----	4	
- 11	AN815-3D	UNION -----	2	
- 12	0400311-97	LINE ASSY-BRAKE LH -----	1	
- 13	0400311-96	LINE ASSY-BRAKE RH -----	1	
- 13A	MS21919DG3	CLAMP -----	1	
		ATTACHING PARTS		
	S1021Z8-8	SCREW -----	1	
	NAS446-4-3	NUT -----	1	
		-----*		
- 14	AN833-3D	ELBOW -----	2	
- 15	AN924-3D	NUT -----	2	
- 16	AN960-716L	WASHER -----	2	
- 17	SEE FIG 38	BRAKE LINE INSTL FUSELAGE TO BRAKE -----	1	
- 18	S1239-49	CONTROL-PARKING BRAKE -----	1	
- 19	0541174-1	PLATE-PARKING BRAKE -----	1	
		ATTACHING PARTS		
- 20	S1021Z8-14	SCREW -----	2	
	NAS446-4-3	NUT -----	2	
	NAS43DD3-23	SPACER -----	2	
	AN742D3	CLAMP -----	2	
- 21	S1021Z8-8	SCREW -----	2	
	NAS446-4-3	NUT -----	2	
		-----*		
- 22	0541172-1	SPRING-RETURN -----	1	
		ATTACHING PARTS		
- 23	0450258	CLAMP -----	1	
	AN500A8-5	SCREW -----	1	
		-----*		
- 24	0541173-1	SPRING -----	2	
- 25	S1099-1-5.00	CHAIN-PARKING BRAKE LH -----	1	
- 26	S1099-1-4.10	CHAIN-PARKING BRAKE RH -----	1	
	0541178-1	LINK ATTACH CHAIN TO BRAKE CYLINDER -----	2	
		A---152 SERIAL 15279406 THRU 15282031 F152 SERIAL F15201429 THRU F15201528 A152 SERIAL A1520735 THRU A1520808 FA152 SERIAL FA1520337 THRU FA1520347		
		B---152 SERIAL 15282032 THRU 15285997 F152 SERIAL F15201529 THRU 15201952 A152 SERIAL A1520809 THRU A1521031 FA152 SERIAL FA1520348 THRU FA1520387		
		C---152 SERIAL 15279406 THRU 15285997 F152 SERIAL F15201429 THRU A1521952 A152 SERIAL A1520735 THRU A1521031 FA152 SERIAL FA1520337 THRU FA1520387		
		D---152 SERIAL 15285998 & ON A152 SERIAL A1521032 & ON F152 SERIAL F15201953 & ON FA152 SERIAL FA1520388 & ON		

152 & A152 Parts Catalog

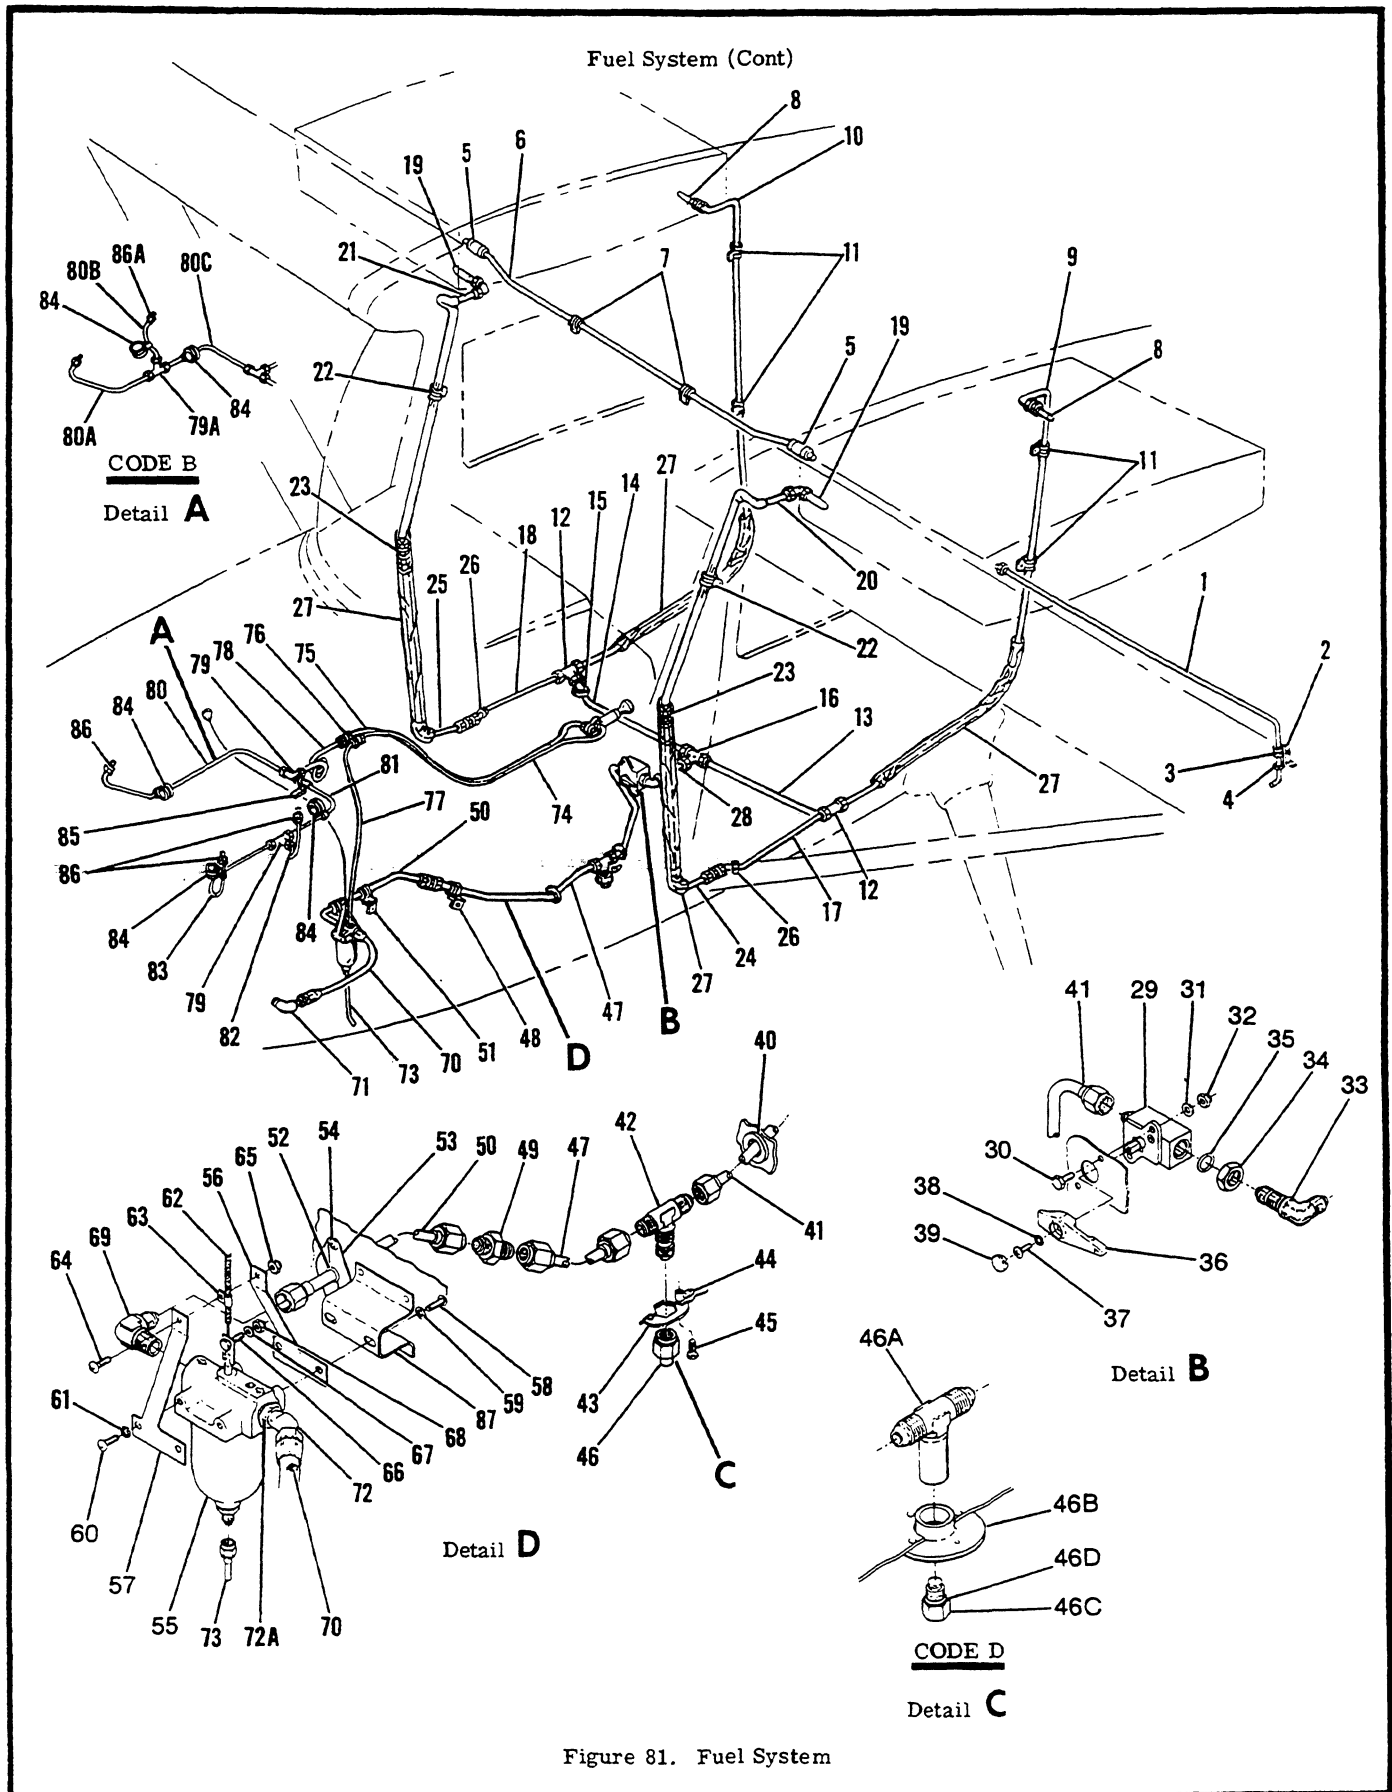

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
81 -		FUEL SYSTEM -----	NP	
- 1	0400311-119	LINE ASSY-VENT -----	1	
	0400311-120	LINE ASSY-VENT AEROBAT -----	1	
	0400311-121	LINE ASSY-VENT EXTENDED RANGE ONLY -----	1	
	0400311-122	LINE ASSY-VENT EXTENDED RANGE ONLY AEROBAT -----	1	
		ATTACHING PARTS -----		
- 2	0512006-1	ANGLE -----	1	
- 3	S1486DG6U	CLAMP -----	1	
	S1021Z8-8	SCREW -----	1	
		-----*		
- 4	MS35489-11	GROMMET -----	1	
- 5	S1495-6	HOSE 3.0 IN LG BULK ITEM REF S1495-6-3.00 -----	2	
		ATTACHING PARTS -----		
	S1891-6	CLAMP -----	2	
		-----*		
- 6	0400311-100	LINE-VENT -----	1	
		ATTACHING PARTS -----		
- 7	MS21919DG6	CLAMP -----	2	
	S1021Z8-8	SCREW -----	2	
		-----*		
- 8	0422130	STRAINER ASSY-FUEL TANK -----	2	
- 9	0400343-7	LINE ASSY-FUEL LH -----	1	
-10	0400343-8	LINE ASSY-FUEL RH -----	1	
		ATTACHING PARTS -----		
-11	S1846DG6U	CLAMP -----	2	
	S1021Z8-8	SCREW -----	2	
		-----*		
-12	AN824-6D	TEE -----	2	
-13	0400343-9	LINE ASSY-FUEL LH -----	1	
-14	0400343-10	LINE ASSY-FUEL RH -----	1	
-15	MS35489-20	GROMMET -----	2	
-16	AN824-6D	TEE -----	1	
-17	0400343-17	LINE ASSY-FUEL LH -----	1	
-18	0400343-16	LINE ASSY-FUEL RH -----	1	
-19	0416001-1	STRAINER ASSY-FUEL TANK -----	2	
	MS29512-06	PACKING -----	2	
	AN924-6	NUT -----	2	
-20	0400343-1	LINE ASSY-FUEL LH -----	1	
-21	0400343-2	LINE ASSY-FUEL RH -----	1	
		ATTACHING PARTS -----		
-22	MS21919DG6	CLAMP -----	2	
	AN520-10R8	SCREW -----	2	
	S292-12	SLEEVING-INSULATION * IN LG BKI -----	2	
		-----*		
-23	AN815-6D	UNION -----	2	
-24	0400343-3	LINE ASSY-FUEL LH -----	1	
-25	0400343-4	LINE ASSY-FUEL RH -----	1	
-26	AN837-6D	ELBOW -----	2	
	AN924-6D	NUT -----	2	
	AN960-10	WASHER -----	2	
-27	S292-18	SLEEVING-INSULATION * IN LG BKI -----	4	
-28	0400311-110	LINE ASSY-FUEL -----	1	
-29	SEE FIG 82	VALVE ASSY-FUEL SHUT OFF -----	1	
		ATTACHING PARTS -----		
-30	AN3-4A	BOLT -----	2	
-31	AN960-10L	WASHER -----	2	
-32	MS20364-1032C	NUT -----	2	
		-----*		
-33	AN833-6D	ELBOW -----	1	
-34	AN924-6D	NUT -----	1	
-35	NAS1596-6	PACKING -----	1	
-36	0716623-5	HANDLE -----	1	
		ATTACHING PARTS -----		
-37	AN525-832R6	SCREW -----	1	
-38	AN936A8	WASHER -----	1	
-39	0716624-1	CAP -----	1	
		-----*		
-40	MS35489-20	GROMMET -----	1	
-41	0400311-118	LINE ASSY-FUEL -----	1	
-42	AN834-6D	TEE -----	1	
-43	0413338	LOCK PLATE -----	1	C
		ATTACHING PARTS -----		C
-44	NAS696A3K	NUTPLATE -----	1	C
-45	AN520-10R8	SCREW -----	1	C
		-----*		
CONTINUED ON NEXT PAGE				

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
81 -46	AN929-6	CAP ASSY -----	1	C D D D D
-46A	S2547-1	TEE -----	1	
-46B	0416003-1	GUIDE-FUEL DRAIN -----	1	
-46C	S2485-1	VALVE ASSY-FUEL DRAIN -----	1	
-46D	MS29513-011	O RING -----	1	
-47	0400311-58	LINE ASSY-FUEL -----	1	
		ATTACHING PARTS -----		
-48	MS21919DG6	CLAMP -----	1	
	S1021Z8-8	SCREW -----	1	
	NAS446-4-3	NUT -----	1	
	0400312-1	ANGLE-FUEL LINE ATTACH -----	1	
	AN3-3A	BOLT -----	1	
		---*---		
-49	AN815-6D	UNION -----	1	
-50	0400311-79	LINE ASSY-FUEL -----	1	
		ATTACHING PARTS -----		
-51	MS21919DG6	CLAMP -----	2	
	S1021Z8-8	SCREW -----	2	
	NAS446-4-3	NUT -----	2	
	0400312-1	ANGLE-FUEL LINE ATTACH -----	2	
	AN3-3A	BOLT -----	2	
		---*---		
-52	NAS557-6A	GROMMET -----	1	
-53	S1095-3	SHIELD HALF -----	2	
		ATTACHING PARTS -----		
-54	S1021Z8-6	SCREW -----	2	
		---*---		
-55	SEE FIG 83	STRAINER ASSY-FUEL -----	1	
-56	0500315-1	BRACKET -----	1	
-57	0500315-2	BRACKET -----	1	
		ATTACHING PARTS -----		
-58	MS20074-03-04	BOLT -----	2	
-59	AN960-10	WASHER -----	2	
-60	MS20074-03-03	SCREW -----	2	
-61	AN960-10	WASHER -----	2	
		---*---		
-62	SEE FIG 62	CONTROL ASSY -----	1	
		ATTACHING PARTS -----		
-63	AN742D3	CLAMP -----	1	
-64	AN520-10R8	SCREW -----	1	
-65	MS20364-1032C	NUT -----	1	
-66	S2323-3	CLAMP -----	1	
-67	AN960-416	WASHER -----	1	
-68	MS20365-428C	NUT -----	1	
		---*---		
-69	MS20822-6-6D	ELBOW -----	1	
-70	S1236-6-0082	HOSE ASSY -----	1	
-71	MS20823-6D	ELBOW -----	1	
-72	MS20823-6D	ELBOW -----	1	
-72A	AN912-2D	BUSHING -----	1	
-73	0400311-95	LINE ASSY-VENT -----	1	
-74	0400311-117	LINE ASSY-PRIMER LH -----	1	
-75	0400311-116	LINE ASSY-PRIMER RH -----	1	
-76	AN832-2D	UNION-BULKHEAD -----	2	
	AN924-2D	NUT -----	2	
-77	0400106-83	LINE ASSY-PRIMER FIREWALL TO STRAINER -----	1	
-78	0400343-18	LINE ASSY-PRIMER FIREWALL TO TEE -----	1	
-79	AN824-2D	TEE -----	2	
-79A	AN824-2D	TEE -----	1	
-80	0400343-20	LINE ASSY-PRIMER RH TEE TO #1 CYLINDER -----	1	B A B B B
-80A	0400343-24	LINE ASSY-PRIMER RH TEE TO #1 CYLINDER -----	1	
-80B	0400343-25	LINE ASSY-PRIMER RH TEE TO #3 CYLINDER -----	1	
-80C	0400343-23	LINE ASSY-PRIMER RH TEE TO TEE -----	1	
-81	0400343-19	LINE ASSY-PRIMER LH TEE TO TEE -----	1	
-82	0400343-21	LINE ASSY-PRIMER LH TEE TO #4 CYLINDER -----	1	
-83	0400343-22	LINE ASSY-PRIMER LH TEE TO #2 CYLINDER -----	1	
		ATTACHING PARTS -----		
-84	S1485D2U	CLAMP -----	1	
	MS21919DG24	CLAMP -----	1	
	S1021Z8-12	SCREW -----	1	
-85	S1485D2U	CLAMP -----	1	
	S1021Z8-12	SCREW -----	1	
		---*---		

CONTINUED ON NEXT PAGE

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION							UNITS PER ASSY	USABLE ON CODE
		1	2	3	4	5	6	7		
81 -86 -86A -87	AN4022-1	NIPPLE -----							3	B
	AN4022-1	NIPPLE -----							1	
	0413511-1	BRACKET-FUEL STRAINER -----							1	
NOTE. *LENGTH TO BE DETERMINED LATER										
A---152 SERIAL 15279406 THRU 15282031										
F152 SERIAL F15201429 THRU F15201528										
A152 SERIAL A1520735 THRU A1520808										
FA152 SERIAL FA1520337 THRU FA1520347										
B---152 SERIAL 15282032 & ON										
F152 SERIAL F15201529 & ON										
A152 SERIAL A1520809 & ON										
FA152 SERIAL FA1520348 & ON										
C---152 SERIAL 15279406 THRU 15285161										
F152 SERIAL F15201429 THRU F15201893										
A152 SERIAL A1520735 THRU A1520983										
FA152 SERIAL FA1520337 THRU FA1520377										
D---152 SERIAL 15285162 & ON										
F152 SERIAL F15201894 & ON										
A152 SERIAL A1520984 & ON										
FA152 SERIAL FA1520378 & ON										

152 & A152 Parts Catalog

Fuel System (Cont)

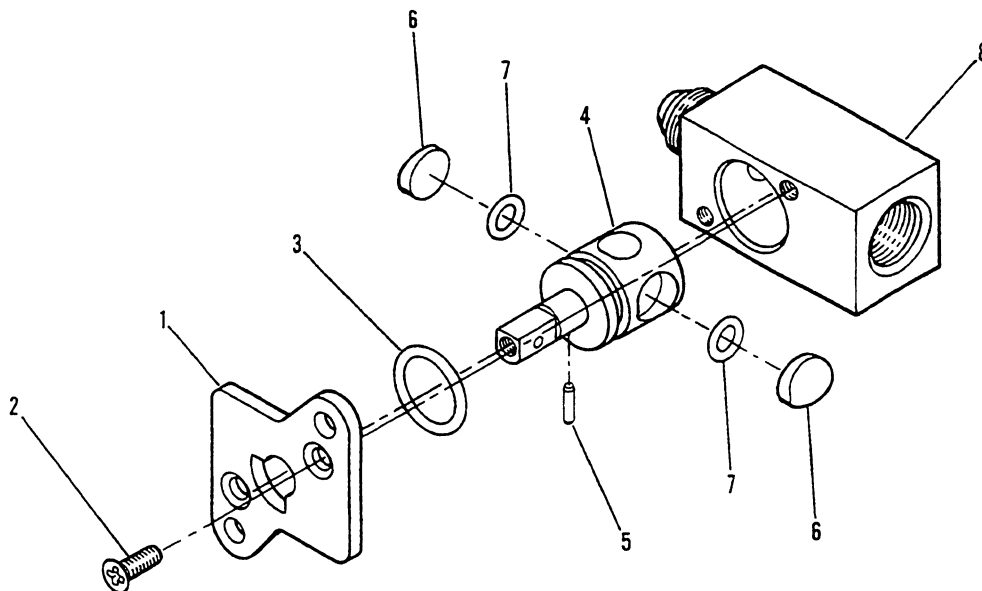


Figure 82. Fuel Shut Off Valve Assembly

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
82 -	9851070-2	FUEL SHUT OFF VALVE ASSEMBLY -----	1	A B
- 1	9851074-1	COVER-FUEL SHUT OFF VALVE -----	1	
- 2	AN507-832R7	ATTACHING PARTS -----	2	
- 3	NAS1593-016	SCREW -----	1	
- 4	9851072-2	*-----	1	
- 5	NAS561P3-5	O RING -----	1	
- 6	9851073-1	ROTOR-FUEL SHUT OFF VALVE -----	1	
	9851073-2	ROLL PIN -----	1	
	9880705-5	SEAL-FUEL SHUT OFF VALVE WEU 9851073-2 -----	2	
- 7	NAS1593-011	SEAL-FUEL SHUT OFF VALVE -----	1	
- 8	9851071-2	SHIM BETWEEN SEAL & O RING OR O RING & ROTOR -----	AR	
		O RING -----	2	
		BODY-FUEL SHUT OFF VALVE -----	1	
		A---152 SERIAL 15279406 THRU 15282570 F152 SERIAL F15201429 THRU F15201578 A152 SERIAL A1520735 THRU A1520830 FA152 SERIAL FA1520337 THRU FA1520356 B---152 SERIAL 15282571 & ON F152 SERIAL F15201579 & ON A152 SERIAL A1520831 & ON FA152 SERIAL FA1520357 & ON		

152 & A152 Parts Catalog

Fuel System (Cont)

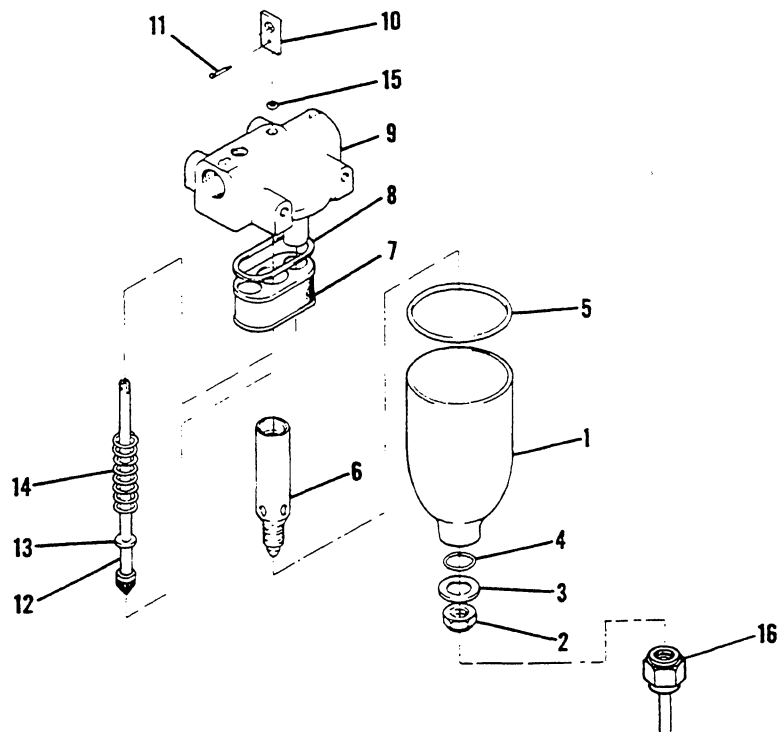


Figure 83. Fuel Strainer Assembly

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
83 -	0756005-8	STRAINER ASSEMBLY-FUEL -----	1	
- 1	0756008-1	BOWL-FUEL STRAINER -----	1	
		ATTACHING PARTS -----		
- 2	S1573-3	NUT -----	1	
- 3	0756015-1	WASHER -----	1	
- 4	MS29513-111	O RING -----	1	
- 5	MS29513-138	O RING -----	1	
		-----*		
- 6	0756011-1	STANDPIPE -----	1	
- 7	0756009-1	FILTER-FUEL STRAINER -----	1	
- 8	0756009-8	GASKET -----	1	
- 9	0756005-2	TOP ASSY-FUEL STRAINER -----	1	
-10	0756014-1	PLATE -----	1	
		ATTACHING PARTS -----		
-11	MS24665-132	COTTER PIN -----	1	
		-----*		
-12	0756010-6	PLUNGER ASSY-DRAIN -----	1	
-13	S1450-27A7-032	WASHER -----	2	
-14	0756012-1	SPRING -----	1	
-15	MS29513-10	O RING -----	1	
-16	0400311-95	LINE ASSY-STRAINER DRAIN -----	1	

152 & A152 Parts Catalog

Oil System

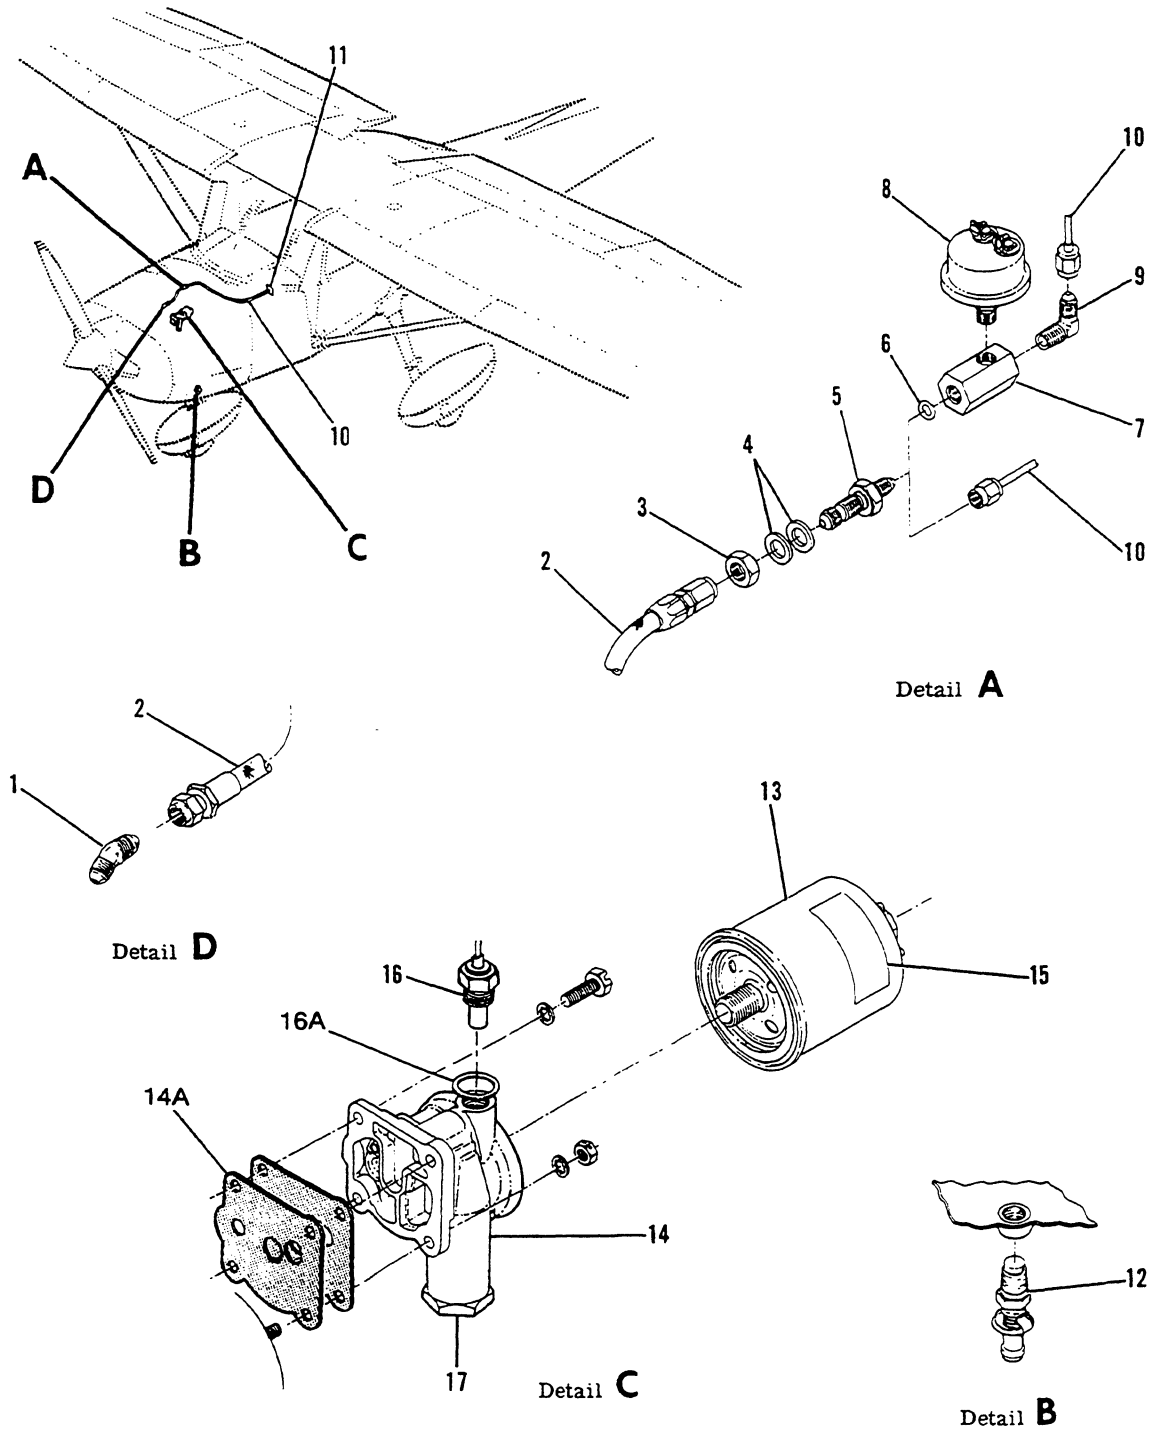



Figure 84. Oil System

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION							UNITS PER ASSY	USABLE ON CODE
		1	2	3	4	5	6	7		
84 -		OIL SYSTEM -----							NP	
- 1	0752037-3	ELBOW -----							1	
- 2	S1236-3-0125	HOSE ASSY-OIL PRESSURE -----							1	
- 3	AN924-3D	NUT -----							1	
- 4	AN960-616	WASHER -----							2	
- 5	S2289-4	UNION -----							1	
- 6	MS28778-2	O RING USED WITH HOURMETER -----							1	
- 7	1213158-3	ADAPTER USED WITH HOURMETER -----							1	
- 8	S1711-1	SWITCH-HOURMETER -----							1	
- 9	MS20822-2D	ELBOW USED WITH HOURMETER -----							1	
-10	0400311-114	LINE ASSY-OIL PRESSURE -----							1	
-11		GAGE-OIL PRESSURE SEE INSTRUMENT PANEL FIG. -----							1	
-12	S1951-5	VALVE ASSY-QUICK DRAIN OIL -----							1	
-13	C294505-0105	FILTER ASSY-OIL -----							1	
-14	6439036	ADAPTER ASSY-OIL FILTER ASC -----							1	
-14A	6437520	GASKET ASC -----							1	
-15	SEE FIG 2	PLACARD -----							1	
-16	SEE FIG 62	SENDING UNIT-OIL TEMP -----							1	
-16A	SEE FIG 62	GASKET-OIL TEMP SENDING UNIT -----							1	
-17	75944	VALVE ASSY LY -----							1	
NOTE. *THIS ASSEMBLY INCLUDES GASKETS AND ATTACHING PARTS.										

152 & A152 Parts Catalog

Vacuum System

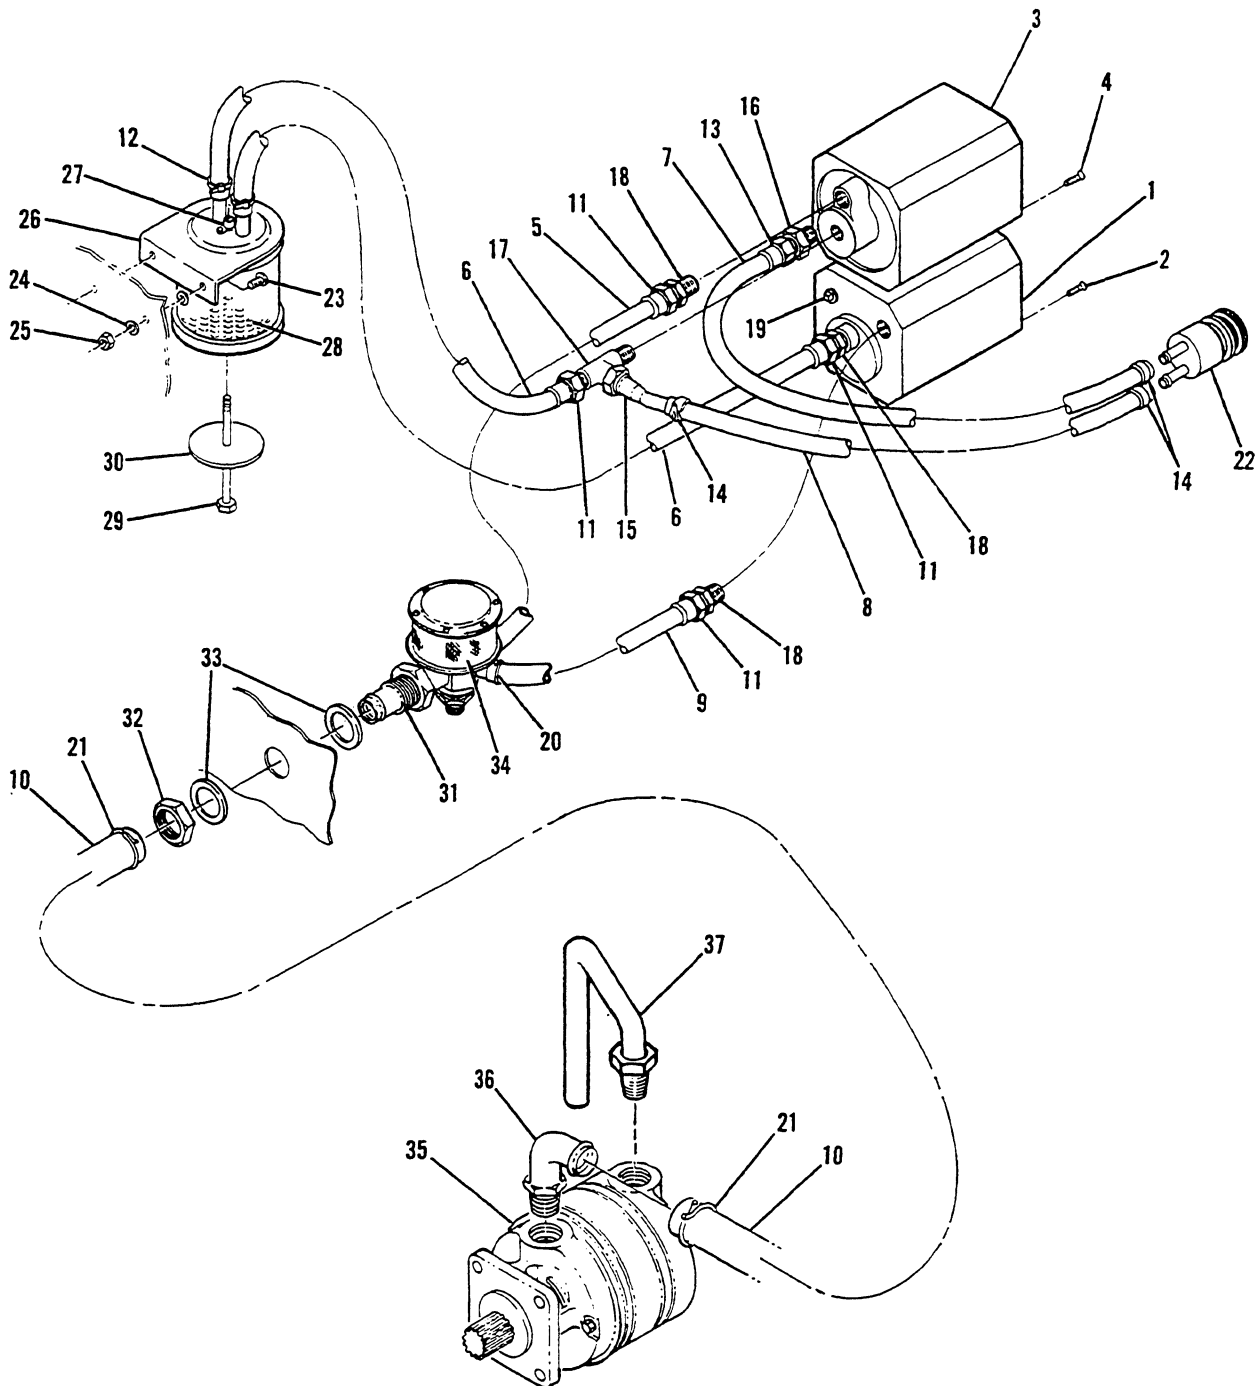

152 SERIAL 15279406 THRU 15284604
F152 SERIAL F15201429 THRU F15201808
A152 SERIAL A1520735 THRU A1520950
FA152 SERIAL FA1520337 THRU FA1520372


Figure 85. Vacuum System

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
85 -		VACUUM SYSTEM -----	NP	A
- 1	C661075-0103 *	GYRO-DIRECTIONAL -----	1	
	C661075-0104 *	GYRO-DIRECTIONAL -----	1	
	C661075-0101 *	GYRO-DIRECTIONAL -----	1	
	C661075-0106 *	GYRO-DIRECTIONAL -----	1	
	C661075-0108 *	GYRO-DIRECTIONAL -----	1	
		ATTACHING PARTS		
- 2	AN515B6R8	SCREW -----	4	
		-----*		
- 3	C661076-0102 @%	GYRO-HORIZON -----	1	
	C661076-0101 @%	GYRO-HORIZON -----	1	
	C661076-0103 @%	GYRO-HORIZON -----	1	
	C661076-0105 %	GYRO-HORIZON -----	1	
	C661076-0107 %	GYRO-HORIZON -----	1	
		ATTACHING PARTS		
- 4	AN515B6R6	SCREW -----	4	
		-----*		
- 5	S1495-6	HOSE-11.50 IN LG BKI REF S1499-6L-11.50 -----	1	
		HORIZON GYRO TO RELIEF VALVE		
- 6	S1495-6	HOSE-19.25 IN LG BKI REF S1499-6L-19.25 -----	2	
		GYROS TO AIR FILTER		
- 7	S1495-4	HOSE-36.00 IN LG BKI REF S1499-4J-36.00 -----	1	
		HORIZON GYRO TOP SIDE OF SUCTION GAGE		
- 8	S1495-4	HOSE-32.00 IN LG BKI REF S1691-2-32.00 -----	1	
		HORIZON GYRO TO V SIDE OF SUCTION GAGE		
- 9	S1495-6	HOSE-11.50 IN LG BKI REF S1499-6L-11.50 -----	1	
		DIRECTIONAL GYRO TO RELIEF VALVE		
-10	S1495-10	HOSE-17.00 IN LG BKI REF S1495-10-17.00 -----	1	
		RELIEF VALVE TO VACUUM PUMP		
-11	S1497-6	FITTING-SOCKETLESS -----	4	
-12	S2209-1	STA STRAP -----	2	
-13	S1497-4	FITTING-SOCKETLESS -----	1	
-14	NAS397-8	CLAMP -----	3	
-15	1713039-1	ELBOW-ASSEMBLY -----	1	
-16	AN816-4D	NIPPLE -----	1	
-17	MS20826-6D	TEE -----	1	
-18	AN8160-6D	NIPPLE -----	3	
-19	MS20913-1D	PLUG-PIPE -----	1	
-20	S1494-10	CLAMP -----	2	
-21	S1494-16	CLAMP -----	2	
-22	C668509-0101	GAGE-SUCTION -----	1	
	1201075-2	FILTER ASSY-VACUUM AIR -----	1	
		ATTACHING PARTS		
-23	AN520-10R10	SCREW -----	2	
-24	AN960PD10L	WASHER -----	2	
-25	MS21045L3	NUT -----	2	
		-----*		
-26	1201075-4	BRACKET ASSY-GYRO FILTER -----	1	
-27	NAS680A3	NUTPLATE -----	1	
-28	C294502-0201	FILTER ELEMENT-VACUUM AIR -----	1	
-29	AN3-34A	BOLT -----	1	
-30	S1450-3A32-050	WASHER -----	1	
-31	C482001-0401	VALVE-VACUUM RELIEF -----	1	
		ATTACHING PARTS		
-32	AN924-10	NUT -----	1	
-33	AN960-1416L	WASHER -----	2	
		-----*		
-34	C482001-0202	FILTER ELEMENT-RELIEF VALVE -----	1	
-35	C431003-0101	PUMP-VACUUM -----	1	
	C431003-0104	PUMP-VACUUM FSO C431003-0101 -----	NP	
	C431003-0302	PUMP-VACUUM ALTERNATE -----	1	
-36	S2363-2	ELBOW -----	1	
-37	S2363-3	TUBE ASSY -----	1	
		NOTE. *THESE GYROS ARE PHYSICALLY & FUNCTIONALLY INTERCHANGEABLE.		
		NOTE. %THESE GYROS ARE PHYSICALLY & FUNCTIONALLY INTERCHANGEABLE.		
		NOTE. @AN EXCHANGE PART IS ALSO AVAILABLE, REFER TO THE MASTER PRICE LIST.		
		A---152 SERIAL 15279406 THRU 15284604		
		F152 SERIAL F15201429 THRU F15201808		
		A152 SERIAL A1520735 THRU A1520950		
		FA152 SERIAL FA1520337 THRU FA1520372		

152 & A152 Parts Catalog

Vacuum System (Cont)

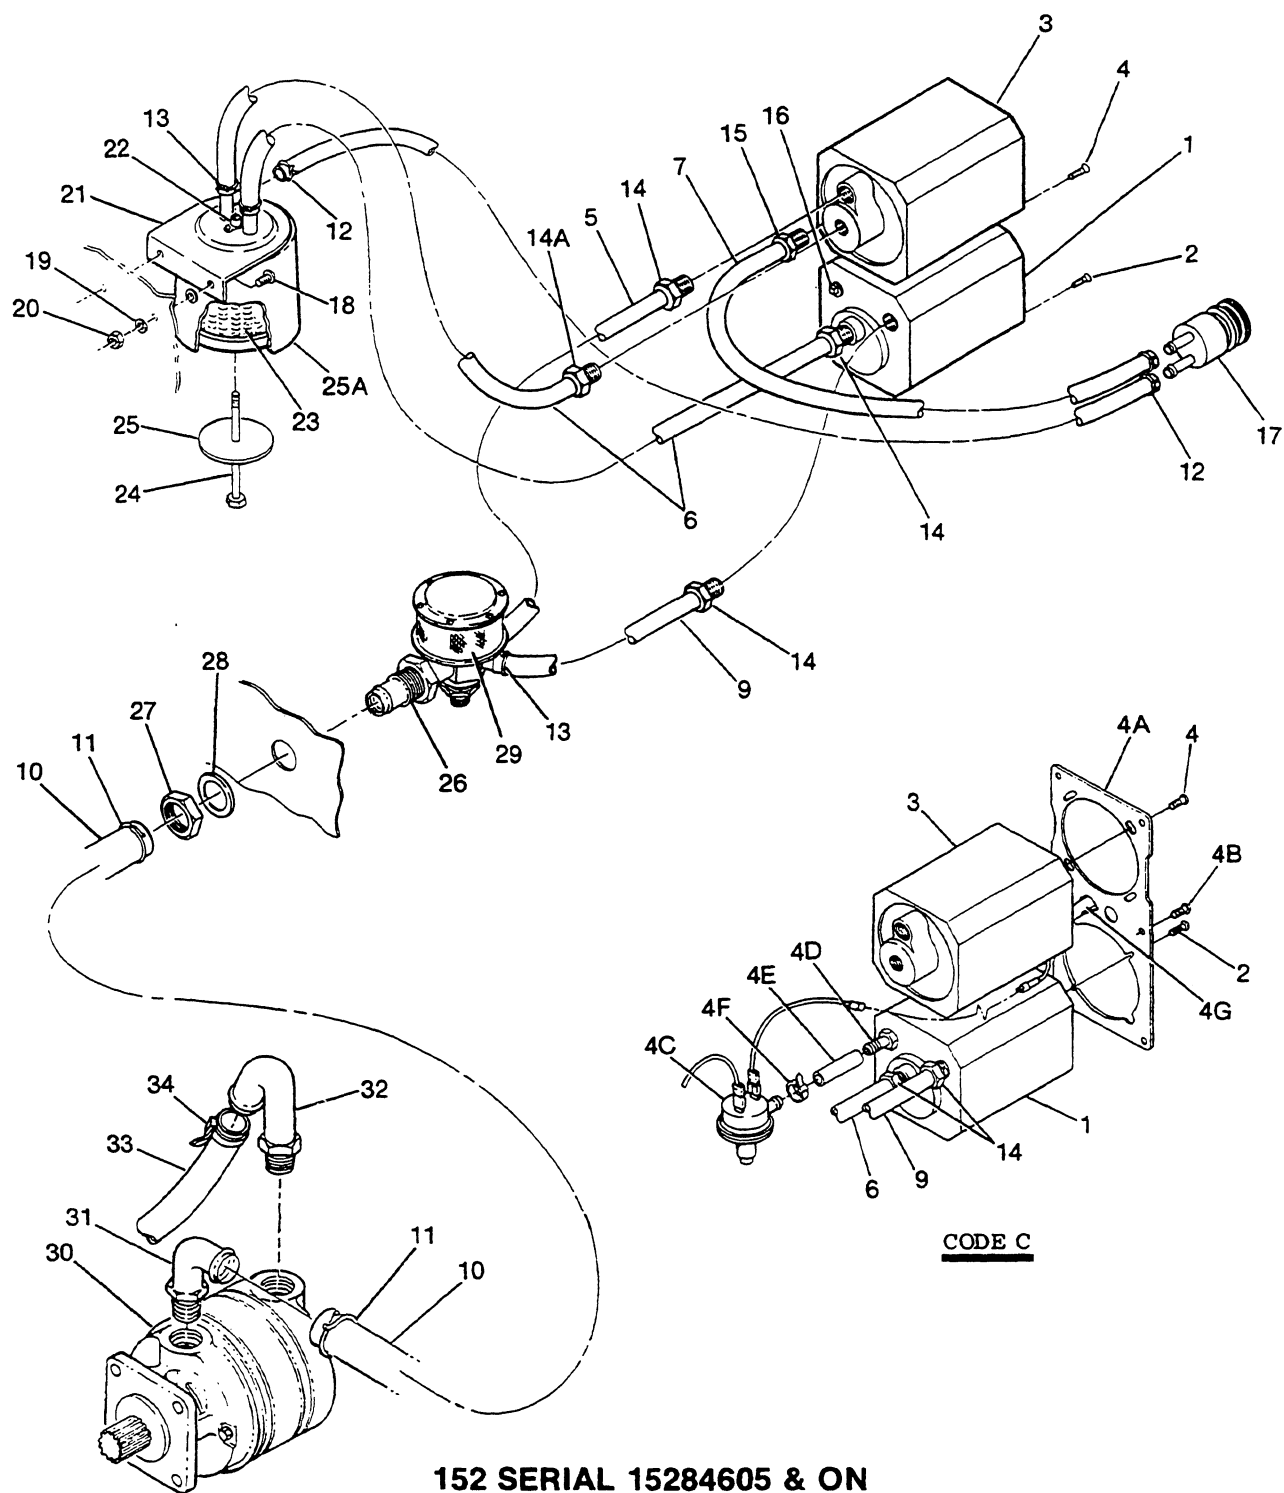

152 SERIAL 15284605 & ON
F152 SERIAL F15201809 & ON
A152 SERIAL A1520951 & ON
FA152 SERIAL FA1520373 & ON

Figure 85A. Vacuum System

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
85A-		VACUUM SYSTEM -----	NP	A
- 1	C661075-0101 *	GYRO-DIRECTIONAL -----	1	
	C661075-0103 *	GYRO-DIRECTIONAL -----	1	
	C661075-0106 *	GYRO-DIRECTIONAL -----	1	
	C661075-0108 *	GYRO-DIRECTIONAL -----	1	
	C661075-0104 *	GYRO-DIRECTIONAL -----	1	
		ATTACHING PARTS -----		
- 2	AN515B6R8	SCREW -----	4	
		-----*		
- 3	C661076-0102 @%	GYRO-HORIZON -----	1	
	C661076-0103 %%	GYRO-HORIZON -----	1	
	C661076-0105 %%	GYRO-HORIZON -----	1	
	C661076-0107 %%	GYRO-HORIZON -----	1	
	C661076-0108 %%	GYRO-HORIZON -----	1	
		ATTACHING PARTS -----		
- 4	AN515B6R6	SCREW -----	4	
		-----*		
- 4A	0413609-1	PANEL-GYRO -----	1	C
		ATTACHING PARTS -----		
- 4B	AN515-6R8	SCREW -----	6	C
		-----*		
- 4C	S2571-1	SWITCH-LOW VACUUM WARNING -----	1	C
- 4D	S2502-4	FITTING -----	1	C
- 4E	S2338-4	HOSE-1.40 IN LG BKI -----	1	C
		ATTACHING PARTS -----		
- 4F	S2209-1	STA STRAP -----	1	C
		-----*		
- 4G	SEE FIG 52B	LIGHT ASSY-LOW VACUUM WARNING -----	1	C
- 5	S2501-6	HOSE-11.50 IN LG BKI HORIZON GYRO TO RELIEF VALVE -----	1	
- 6	S2501-6	HOSE-21.00 IN LG BKI GYROS TO AIR FILTER -----	2	
- 7	S2501-4	HOSE-14.00 IN LG BKI HORIZON GYRO TO P SIDE OF -----	1	
		SUCTION GAGE -----		
	S1495-4	HOSE-14.00 IN LG BKI HORIZON GYRO TO P SIDE OF -----	1	
		SUCTION GAGE -----		
- 8	S2501-4	HOSE-25.00 IN LG BKI AIR FILTER TO V SIDE OF -----	1	
		SUCTION GAGE -----		
	S1495-4	HOSE-25.00 IN LG BKI AIR FILTER TO V SIDE OF -----	1	
		SUCTION GAGE -----		
- 9	S2501-6	HOSE-14.00 IN LG BKI DIRECTIONAL GYRO TO RELIEF VALVE -----	1	
- 10	S1495-10	HOSE-17.00 IN LG BKI RELIEF VALVE TO VACUUM PUMP -----	1	
- 11	S1494-16	CLAMP -----	2	
- 12	S1494-7	CLAMP -----	3	
- 13	S1494-10	CLAMP -----	4	
- 14	S2502-3	CONNECTOR -----	3	
- 14A	S2502-5	CONNECTOR HORIZON GYRO AIR INLET PORT -----	1	
- 15	S2502-1	CONNECTOR -----	1	
- 16	S2506-1	PLUG -----	1	B
- 17	C668509-0101	GAGE-SUCTION -----	1	
	1201075-1	FILTER ASSY-VACUUM AIR -----	1	
		ATTACHING PARTS -----		
- 18	AN520-10R10	SCREW -----	2	
- 19	AN960PD10L	WASHER -----	2	E
- 20	MS21045L3	NUT -----	2	E
		-----*		
- 21	1201075-3	BRACKET ASSY-GYRO FILTER -----	1	
- 22	NAS680A3	NUTPLATE -----	1	
- 23	C294502-0201	FILTER ELEMENT-VACUUM AIR -----	1	
- 24	AN3-34A	BOLT -----	1	
- 25	S1450-3A32-050	WASHER -----	1	
- 25A	0513439-1	COVER-VACUUM FILTER -----	1	D
- 26	C482001-0401	VALVE-VACUUM RELIEF -----	1	
		ATTACHING PARTS -----		
- 27	AN924-10D	NUT -----	1	
- 28	AN960PD1416L	WASHER -----	1	
		-----*		
- 29	C482001-0202	FILTER ELEMENT-RELIEF VALVE -----	1	
- 30	C431003-0101	PUMP-VACUUM -----	1	
	C431003-0104	PUMP-VACUUM FSO C431003-0101 -----	NP	
	C431003-0302	PUMP-VACUUM ALTERNATE -----	1	
	SEE FIG 85B	PUMP-VACUUM ELECTRIC DRIVEN -----	AR	F


CONTINUED ON NEXT PAGE

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION							UNITS PER ASSY	USABLE ON CODE
		1	2	3	4	5	6	7		
85A-31	S2363-2	ELBOW	-----	-----	-----	-----	-----	-----	1	
-32	S2363-3	TUBE ASSY	-----	-----	-----	-----	-----	-----	1	
-33	S2548-10	HOSE-6.00 IN LG	BKI	-----	-----	-----	-----	-----	1	C
		ATTACHING PARTS	-----	-----	-----	-----	-----	-----		
-34	S2209-2	STA STRAP	-----	-----	-----	-----	-----	-----	1	C
		---*---								
		NOTE. * THESE GYROS ARE PHYSICALLY & FUNCTIONALLY INTERCHANGEABLE.								
		NOTE. % THESE GYROS ARE PHYSICALLY & FUNCTIONALLY INTERCHANGEABLE.								
		NOTE. @ AN EXCHANGE PART IS ALSO AVAILABLE. REFER TO THE MASTER PRICE LIST.								
		A---152 SERIAL 15284605 & ON								
		F152 SERIAL F15201809 & ON								
		A152 SERIAL A1520951 & ON								
		FA152 SERIAL FA1520373 & ON								
		B---152 SERIAL 15284605 THRU 15285658								
		F152 SERIAL F15201809 THRU F15201928								
		A152 SERIAL A1520951 THRU A1521020								
		FA152 SERIAL FA1520373 THRU FA1520382								
		C---152 SERIAL 15285659 & ON								
		F152 SERIAL F15201929 & ON								
		A152 SERIAL A1521021 & ON								
		D---152 SERIAL 15285835 & ON								
		F152 SERIAL F15201952 & ON								
		A152 SERIAL A1521027 & ON								
		FA152 SERIAL FA1520388 & ON								
		E---152 SERIAL 15284605 THRU 15285837								
		F152 SERIAL F15201809 THRU F15201951								
		A152 SERIAL A1520951 THRU A1521026								
		FA152 SERIAL FA1520373 THRU FA1520387								
		F---152 SERIAL 15285940 & ON								
		A152 SERIAL A1521028 & ON								

152 & A152 Parts Catalog

Vacuum System (Cont)

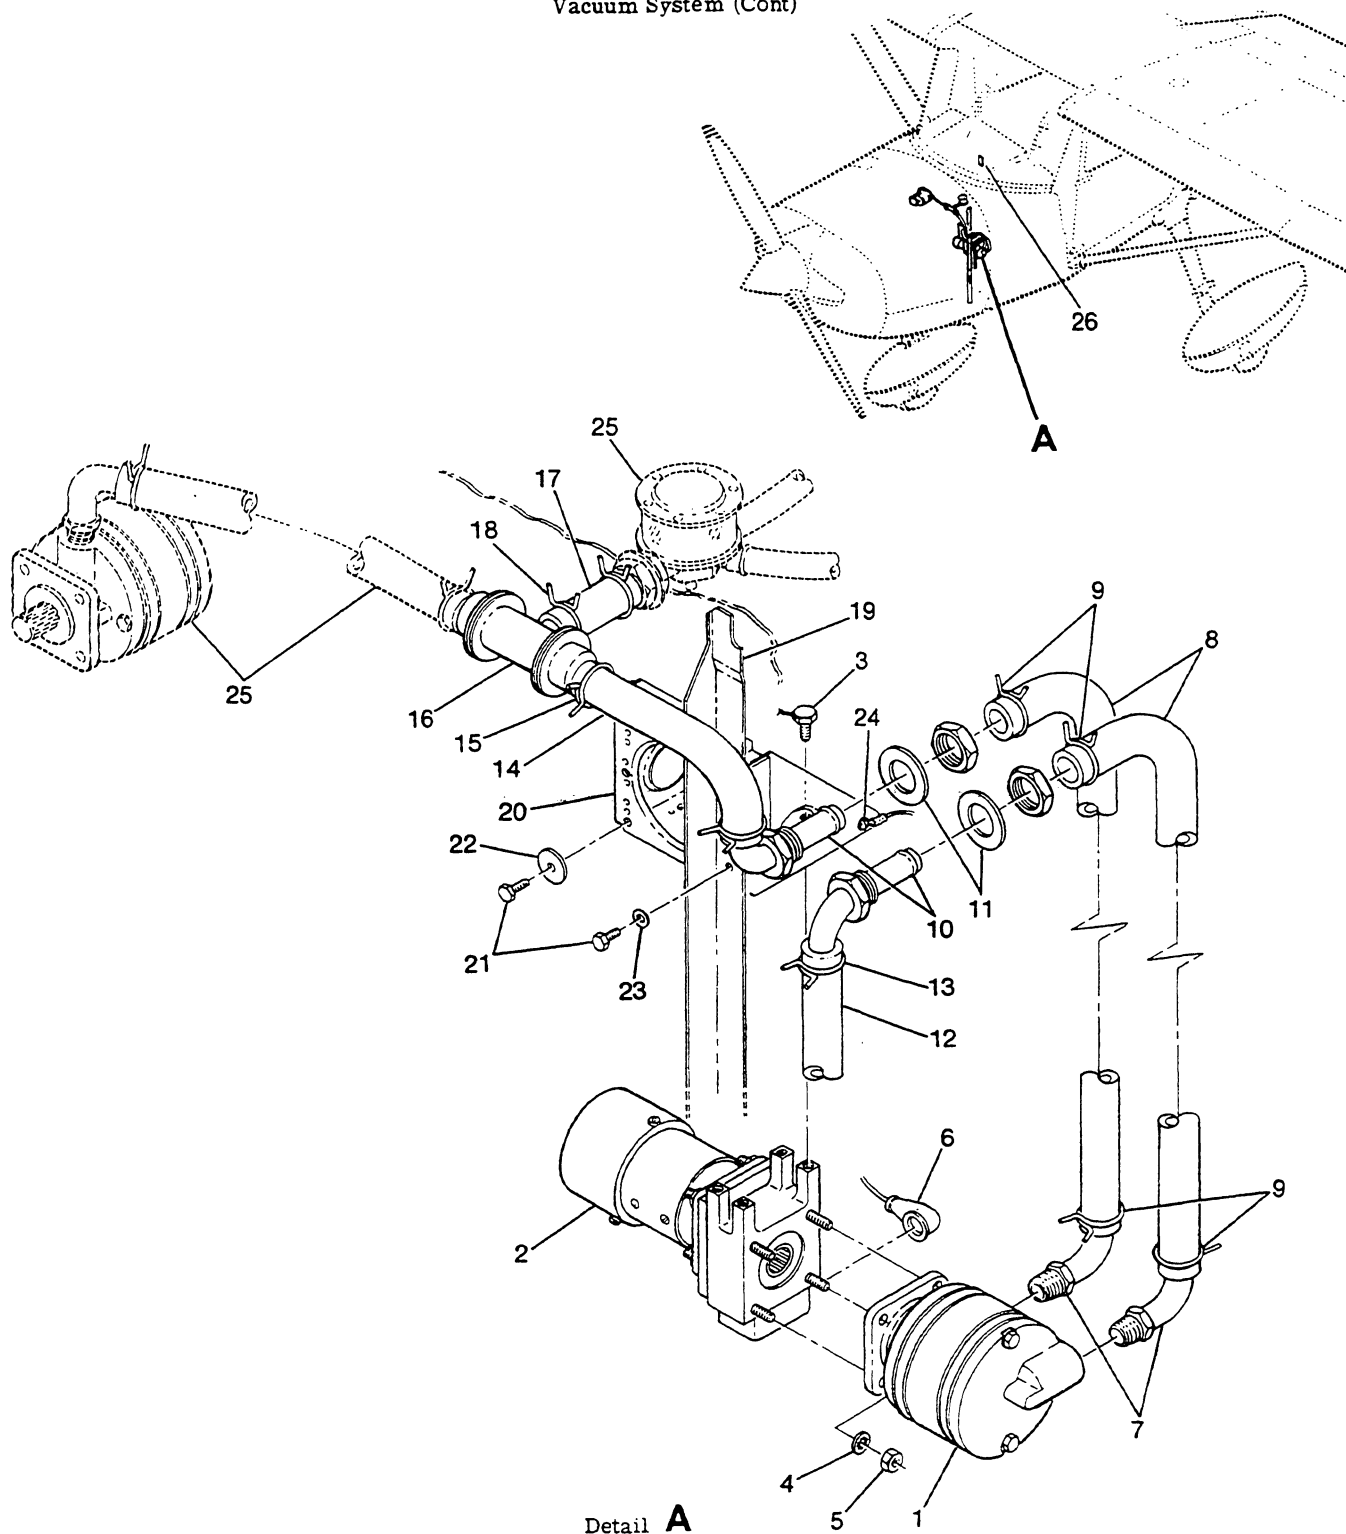

152 SERIAL 15285940 & ON
A152 SERIAL A1521028 & ON

Figure 85B. Vacuum Pump Installation - Electric Standby

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
85B-		VACUUM PUMP INSTALLATION-ELECTRIC STANDBY -----	NP	A
- 1	C431003-0102	PUMP-VACUUM -----	1	
	C431003-0301	PUMP-VACUUM ALTERNATE -----	1	
- 2	C165008-0101	MOTOR & GEARBOX ASSY-VACUUM PUMP -----	1	
		ATTACHING PARTS -----		
- 3	AN4H4	BOLT -----	4	
		-----*		
- 4	MS35333-40	WASHER -----	4	
- 5	AN345-416	NUT -----	4	
- 6	MS25171-1S	NIPPLE -----	1	
- 7	S2363-2	TUBE ASSY -----	2	
- 8	S2554-10	HOSE-8.25 IN LG BKI -----	2	
		ATTACHING PARTS -----		
- 9	S1494-16	CLAMP -----	2	
		-----*		
-10	1K43-10-10	ELBOW ASSY INCLUDES NUT 26433 -----	2	
-11	AN960PD416	WASHER -----	2	
-12	S2554-10	HOSE-7.24 IN LG BKI -----	1	
		ATTACHING PARTS -----		
-13	S1494-16	CLAMP -----	1	
		-----*		
-14	S2554-10	HOSE-7.25 IN LG BKI -----	1	
		ATTACHING PARTS -----		
-15	S1494-16	CLAMP -----	2	
	S2209-2	STA STRAP ATTACH TO MOTOR MOUNT -----	1	
		-----*		
-16	A/M1H5-23	MANIFOLD-CHECK VALVE -----	1	
-17	S2554-10	HOSE-2.50 IN LG BKI -----	1	
		ATTACHING PARTS -----		
-18	S1494-16	CLAMP -----	2	
		-----*		
-19	0453015-1	STIFFENER -----	1	
-20	0413594-4	BRACKET ASSY -----	1	
		ATTACHING PARTS -----		
-21	AN3-4A	BOLT -----	6	
-22	AN960-10	WASHER -----	3	
-23	AN970-3	WASHER -----	3	
		-----*		
	NAS680A3	NUTPLATE DOUBLE LUG -----	3	
	NAS682A3	NUTPLATE SINGLE LUG -----	3	
	NAS680A08	NUTPLATE ATTACH BLIND ENCODER -----	3	
-24	AN520-6R8	SCREW ATTACH GROUND WIRE -----	1	
	AN315-640R	NUT ATTACH GROUND WIRE -----	1	
-25	SEE FIG 85A	VACUUM SYSTEM -----	1	
-26	SEE FIG 53	SWITCH/CIRCUIT BREAKER -----	1	
	SEE FIG 2A	PLACARD -----	1	
A---152 SERIAL 15285940 & ON A152 SERIAL A1521028 & ON				

152 & A152 Parts Catalog

Electrical Equipment

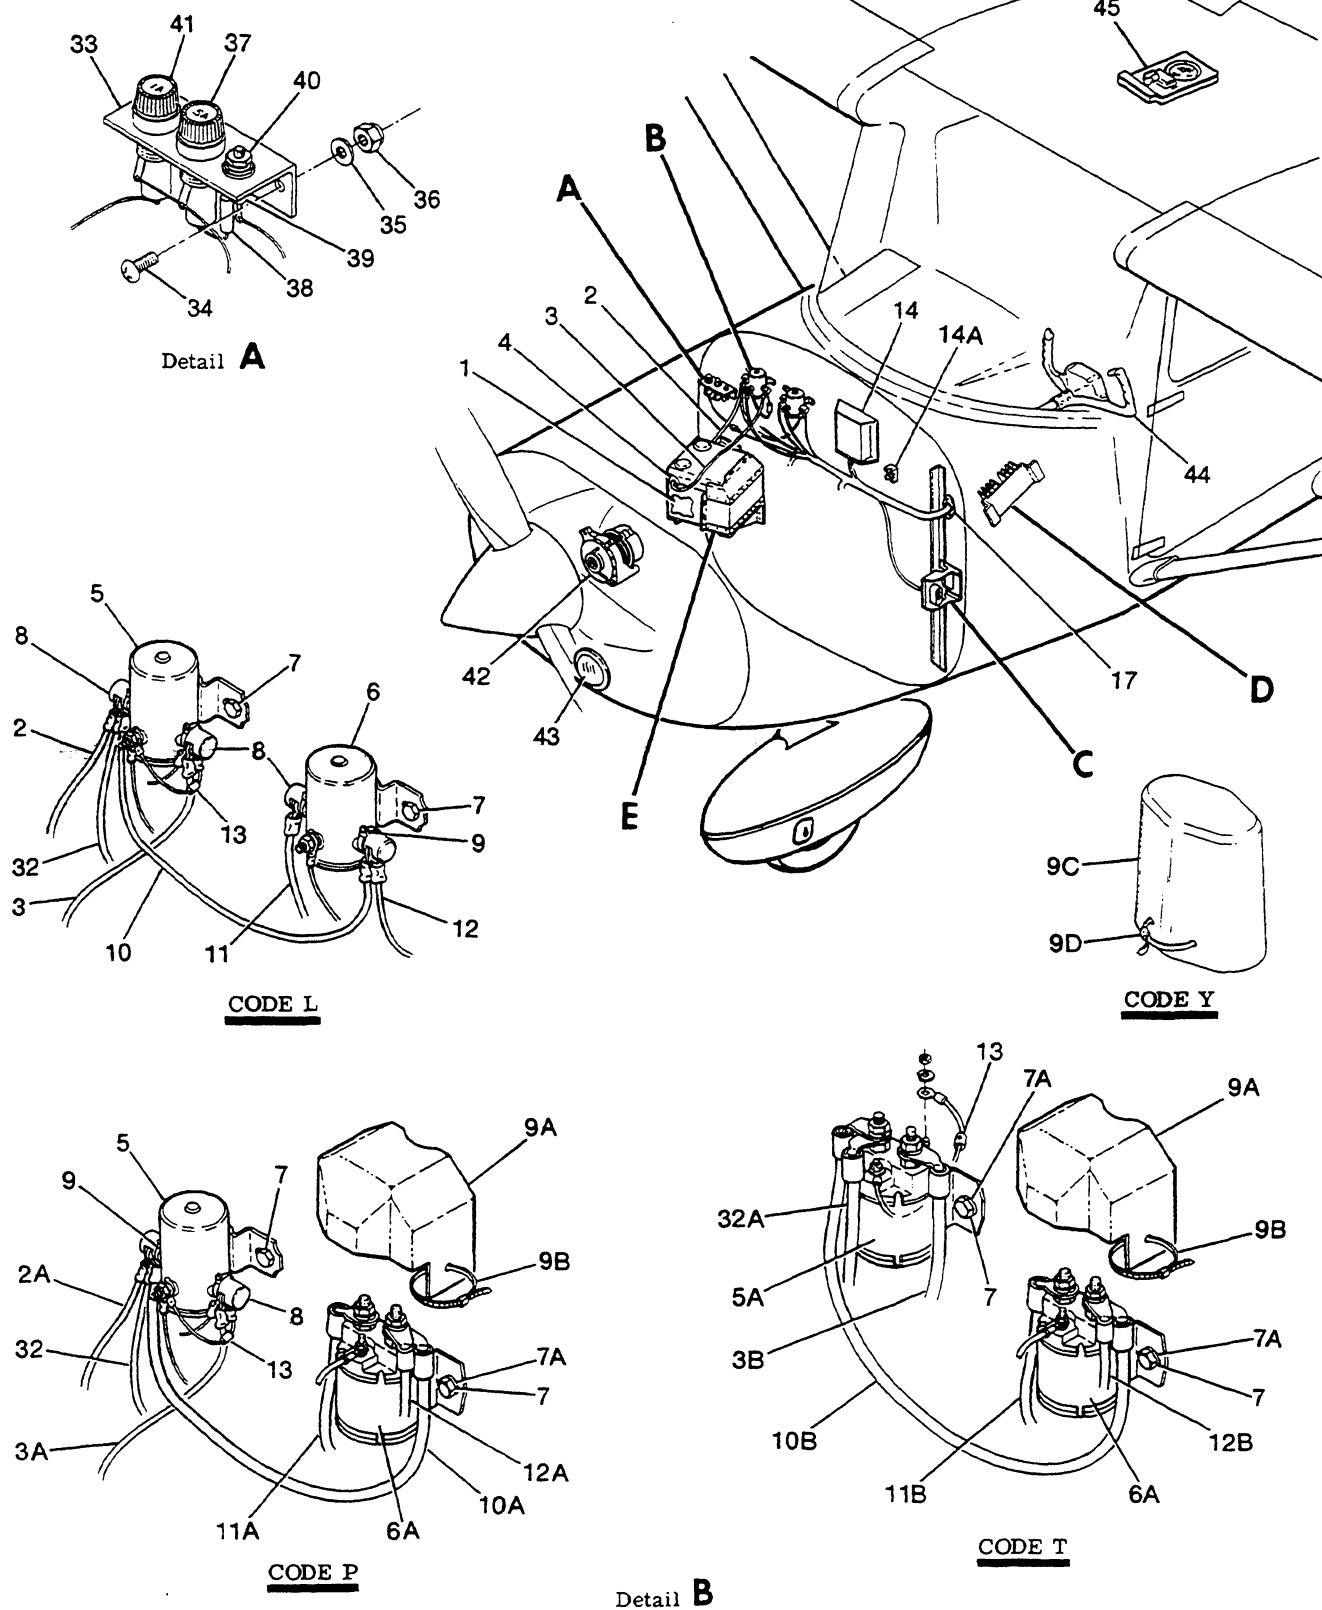


Figure 86. (Sheet 1 of 2) Electrical Equipment Installation

152 & A152 Parts Catalog

Electrical Equipment (Cont)

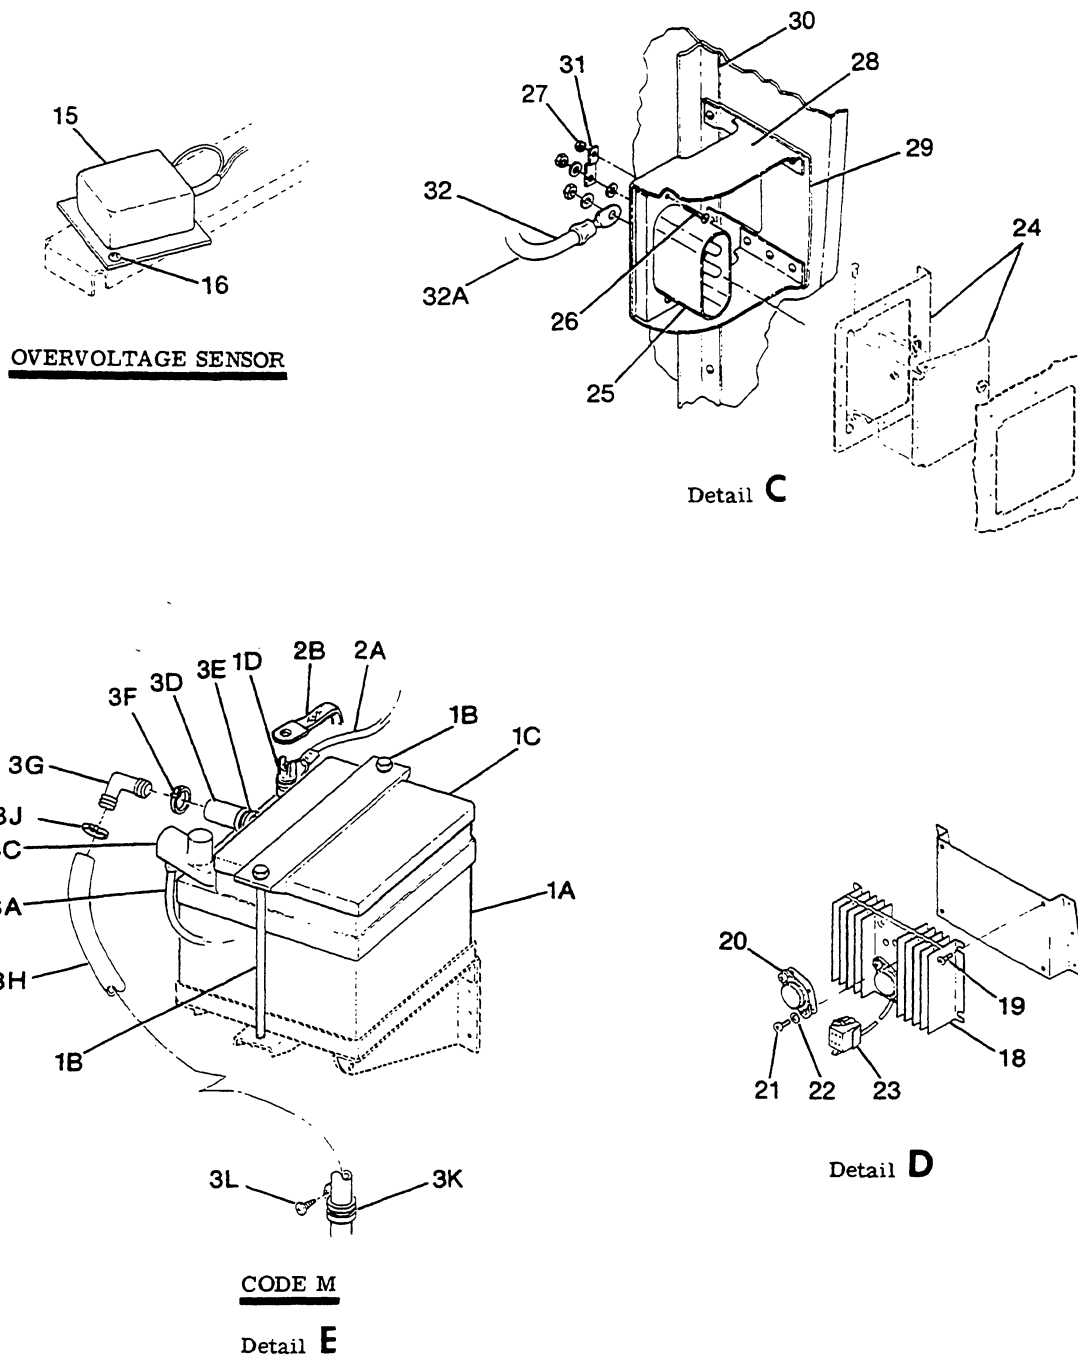


Figure 86. (Sheet 2 of 2) Electrical Equipment Installation

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
86 -		ELECTRICAL EQUIPMENT INSTALLATION -----	NP	
- 1	0870060-1	BATTERY ASSY 24 VOLT -----	1	A
	C614001-0105	BATTERY ASSY 24 VOLT -----	1	B
	C614001-0106	BATTERY ASSY-HEAVY DUTY 24 VOLT -----	AR	B
- 1A	C614002-0101	BATTERY ASSY-MANIFOLD 24 VOLT -----	1	M
	C614002-0102	BATTERY ASSY-MANIFOLD HEAVY DUTY 24 VOLT -----	1	M
		ATTACHING PARTS		
- 1B	S2480-1	BOLT -----	2	M
	AN960-416	WASHER -----	2	M
		-----*		
- 1C	0935	COVER ASSY-MANIFOLD BATTERY GLTC -----	1	M
- 1D	2542	WING NUT -----	2	M
	2009	LOCK WASHER -----	2	M
	2008	WASHER -----	2	M
- 2	0470406PA6	CABLE-BATTERY GROUND -----	1	L
- 2A	0470406PA9	CABLE-BATTERY GROUND -----	1	P
- 2B	0412007-14	STRAP-BATTERY GROUND -----	1	T
		ATTACHING PARTS		
	AN4-3A	BOLT -----	1	T
	AN960-416	WASHER -----	1	T
		-----*		
- 3	0470406PA4	CABLE-BATTERY TO BATTERY CONTACTOR -----	1	L
- 3A	0470406PA10	CABLE-BATTERY TO BATTERY CONTACTOR -----	1	P
- 3B	0470406PA13	CABLE-BATTERY TO BATTERY CONTACTOR -----	1	T
- 3C	0770741-2	COVER-TERMINAL -----	1	M
- 3D	S1775-3	TUBE-BATTERY DRAIN 2.00 IN LG BKI -----	1	M
		ATTACHING PARTS		
- 3E	NAS397-14	CLAMP -----	1	
- 3F	S2209-2	STA-STRAP -----	1	
		-----*		
- 3G	S2421-10	ELBOW -----	1	M
- 3H	S1775-3	TUBE-BATTERY DRAIN 28.00 IN LG BKI -----	1	M
		ATTACHING PARTS		
- 3J	S2209-2	STA-STRAP -----	1	
- 3K	MS21919DG12	CLAMP -----	1	
- 3L	S1021Z8-6	SCREW -----	1	
		-----*		
- 4	MS35489-19	GROMMET -----	2	L
- 5	S1580-1	CONTACTOR-BATTERY -----	1	N
- 5A	S2475-1	CONTACTOR-BATTERY S2475-2 -----	1	Z
	S2475-2	CONTACTOR-BATTERY -----	1	AB
- 6	S1577-1	CONTACTOR-STARTER -----	1	L
- 6A	S2443-1	CONTACTOR-STARTER S2443-2 -----	1	AA
	S2443-2	CONTACTOR-STARTER -----	1	AB
		ATTACHING PARTS		
- 7	AN3-3A	BOLT -----	2	
- 7A	AN960-10	WASHER -----	2	M
		-----*		
- 8	S1807-1	COVER -----	4	L
	S1807-1	COVER -----	2	M
- 9	S2209-1	STA-STRAP -----	4	L
	S2209-1	STA-STRAP -----	2	M
- 9A	0712765-3	COVER-STARTER CONTACTOR -----	1	W
	0712765-3	COVER-BATTERY CONTACTOR -----	1	X
- 9B	S2209-2	STA-STRAP -----	2	W
- 9C	0712079-4	COVER-STARTER & BATTERY CONTACTOR -----	2	Y
- 9D	S2209-1	STA-STRAP -----	2	Y
- 10	0470406PA5	CABLE-BATTERY CONTACTOR TO STARTER CONTACTOR -----	1	L
- 10A	0470406PA11	CABLE-BATTERY CONTACTOR TO STARTER CONTACTOR -----	1	P
- 10B	0470406PA12	CABLE-BATTERY CONTACTOR TO STARTER CONTACTOR -----	1	T
- 11	0470406KA2	CABLE-STARTER CONTACTOR TO STARTER -----	1	T
- 11A	0470406KA4	CABLE-STARTER CONTACTOR TO STARTER -----	1	P
- 11B	0470406KA6	CABLE-STARTER CONTACTOR TO STARTER -----	1	T
- 12	0470406DA1	CABLE-STARTER CONTACTOR TO AMMETER -----	1	E
	0470406DA3	CABLE-STARTER CONTACTOR TO AMMETER -----	1	F
- 12A	0470406DA4	CABLE-STARTER CONTACTOR TO AMMETER -----	1	P
- 12B	0470406DA5	CABLE-STARTER CONTACTOR TO AMMETER -----	1	T
- 13	0770728-1	DIODE ASSY-BATTERY CONTACTOR INCLUDES TERMINALS -----	1	

CONTINUED ON NEXT PAGE

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
86 -14	C611004-0101	VOLTAGE REGULATOR 24 VOLT -----	1	J
	C611002-0105	VOLTAGE REGULATOR 24 VOLT ALTERNATE -----	1	J
	C611004-0102	VOLTAGE REGULATOR 28.8 VOLT -----	1	K
	C611005-0101	ALTERNATOR CONTROL UNIT WEU C611005-0103 -----	1	AE
	C611005-0103	ALTERNATOR CONTROL UNIT -----	1	AG
		ATTACHING PARTS		
	AN520-416R12	SCREW -----	3	AF
	AN960-416	WASHER -----	3	V
	AN4-11A	BOLT USED WITH C611005-0103 -----	3	AG
	NAS43DD4-8	SPACER USED WITH C611005-0103 -----	3	AG
		-----*		
-14A	0570315-1	TERMINAL BOARD ASSY-ALTERNATOR CONTROL UNIT -----	1	H
		ATTACHING PARTS		
	AN515-8R10	SCREW -----	2	H
		-----*		
	0570316-1	COVER-TERMINAL BOARD -----	1	H
		ATTACHING PARTS		
	S2303P2-4	SCREW -----	2	H
		-----*		
	MS25175-3S	NIPPLE -----	1	H
-15	C593003-0101	OVERVOLTAGE SENSOR 24 VOLT -----	1	G
	C593003-0103	OVERVOLTAGE SENSOR 24 VOLT ALTERNATE -----	1	G
		ATTACHING PARTS		
-16	AN515-6R8	SCREW -----	2	G
	MS21044N06	NUT -----	2	G
		-----*		
-17	S1095-5	SHIELD HALF -----	2	
		ATTACHING PARTS		
	S1021Z8-6	SCREW -----	2	
	NAS446-4-3	NUT -----	2	
		-----*		
	NAS557-10A	GROMMET -----	1	
-18	1570166-1	DIMMING ASSY-TRANSISTORIZED LIGHT -----	1	
		ATTACHING PARTS		
-19	AN520-10R6	SCREW -----	4	
	AN960-10L	WASHER -----	4	
		-----*		
-20	2N3055	TRANSISTOR RCA -----	2	Q
	2N6576	TRANSISTOR HMEC -----	2	R
	2N6577	TRANSISTOR HMEC ALTERNATE -----	2	R
		ATTACHING PARTS		
-21	S1021Z6-8	SCREW -----	2	
-22	AN960-6L	WASHER -----	2	
	4004	SPACER SHHI -----	2	
	314-1431-006-500	SPACER JON ALTERNATE -----	2	
		-----*		
-23	S1641-6	HOUSING-SOCKET -----	1	
		GROUND SERVICE PLUG INSTALLATION -----	1	
-24	SEE FIG 61	DOOR ASSY-GROUND SERVICE RECEPTACLE ACCESS -----	1	
-25	MS3506-1	RECEPACLE-GROUND SERVICE PLUG -----	1	
		ATTACHING PARTS		
-26	AN509-10R14	SCREW -----	2	
-27	MS21045L3	NUT -----	2	
		-----*		
-28	0553005-1	BRACKET-GROUND SERVICE PLUG -----	1	
-29	0453004-2	DOUBLER -----	1	
-30	0453011-1	STIFFENER -----	1	C
	0453013-1	STIFFENER -----	1	D
-31	0312155-10	GROUND STRAP -----	1	
-32	0470406PC1	CABLE-GROUND SERVICE PLUG TO BATTERY CONTACTOR -----	1	N
-32A	0470406PC4	CABLE-GROUND SERVICE PLUG TO BATTERY CONTACTOR -----	1	T
	MS25171-3S	NIPPLE -----	1	S
-33	0712031-1	MOUNTING BRACKET-FUSE & DIODE-EXT POWER & CLOCK -----	1	
		ATTACHING PARTS		
-34	AN520-10R8	SCREW -----	2	
-35	AN960-10L	WASHER -----	2	U
-36	MS21045L3	NUT -----	2	U
		-----*		
-37	S1090-2	FUSE HOLDER-EXTERNAL POWER -----	1	
	S1090-11	CAP -----	1	
	S1091-5	FUSE-EXTERNAL POWER -----	1	
-38	X26263	RESISTOR-GROUND SERVICE PLUG .75 OHMS TRTA -----	1	

CONTINUED ON NEXT PAGE

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION							UNITS PER ASSY	USABLE ON CODE	
		1	2	3	4	5	6	7			
86 -39	20H3P	DIODE-EXTERNAL POWER	SATA	-----					1	AC AD T	
	6F20-D	DIODE-EXTERNAL POWER	ALTERNATE	AFF	-----				1		
	43-1761	INSULATING HARDWARE	SPD	ORDER WITH	6F20-D	-----			1		
	1N1344A	DIODE-EXTERNAL POWER	SPD	-----					1		
		ATTACHING PARTS									
-40	S2574-1	NUT	-----						1		
	S1438-2	WASHER	-----						1		
		-----*									
-41	S1090-22	FUSE HOLDER ASSY-CLOCK & HOURMETER	-----						1		
	S1090-23	CAP-FUSE HOLDER	-----						1		
	S1091-1	FUSE-CLOCK & HOURMETER	1 AMP	-----					1		
-42	SEE FIG 86A	ALTERNATOR INSTALLATION	60 AMP	-----					1		
-43	SEE FIG 88	LANDING & TAXI LIGHTS INSTALLATION-COWL	-----						1		
	SEE FIG 88A	LANDING & TAXI LIGHTS INSTALLATION-WING	-----						1		
-44	SEE FIG 90	CONTROL WHEEL MAP LIGHT & MIKE SWITCH INSTALLATION	-----						1		
	SEE FIG 90A	COPILOTS INTERCOM MIKE SWITCH INSTALLATION	-----						1		
-45	SEE FIG 87	INSTRUMENT PANEL LIGHTS INSTALLATION	-----						1		
	SEE FIG 52 & 53	INSTRUMENT PANEL ELECTRICAL COMPONENTS	-----						1		
	SEE FIG 3	STROBE LIGHT & POWER SUPPLY INSTALLATION	-----						1		
	SEE FIG 89	FLASHING BEACON LIGHT INSTALLATION	-----						1		
NOTE. WHEN INITIALLY ORDERING THIS PART FOR AIRCRAFT PRIOR TO SERIALS 15285838, F15201952, A1521027 & FA1520388 ALSO ORDER 3 AN4-11A BOLTS & 3 NAS43DD4-8 SPACERS. A---152 SERIAL 15279406 THRU 15280459 F152 SERIAL F15201429 THRU F15201538 A152 SERIAL A1520735 THRU A1520759 FA152 SERIAL FA1520337 THRU FA1520346 B---152 SERIAL 15280460 THRU 15283591 F152 SERIAL F15201539 THRU F15201673 A152 SERIAL A1520760 THRU A1520878 FA152 SERIAL FA1520347 THRU FA1520357 C---152 SERIAL 15279406 THRU 15281089 F152 SERIAL F15201429 & ON A152 SERIAL A1520735 THRU A1520775 FA152 SERIAL FA1520337 & ON D---152 SERIAL 15281090 & ON A152 SERIAL A1520776 & ON E---152 SERIAL 15279406 THRU 15281166 F152 SERIAL F15201429 THRU F15201528 A152 SERIAL A1520735 THRU A1520777 FA152 SERIAL FA1520337 THRU FA1520346 F---152 SERIAL 15281167 THRU 15283591 F152 SERIAL F15201529 THRU F15201673 A152 SERIAL A1520778 THRU A1520878 FA152 SERIAL FA1520347 THRU FA1520357 G---152 SERIAL 15279406 THRU 15282031 F152 SERIAL F15201429 THRU F15201528 A152 SERIAL A1520735 THRU A1520808 FA152 SERIAL FA1520337 THRU FA1520347 H---152 SERIAL 15282032 & ON F152 SERIAL F15201529 & ON A152 SERIAL A1520809 & ON FA152 SERIAL FA1520348 & ON J---152 SERIAL 15279406 THRU 15280459 F152 SERIAL F15201429 THRU F15201528 A152 SERIAL A1520735 THRU A1520759 FA152 SERIAL FA1520337 THRU FA1520347 K---152 SERIAL 15280460 THRU 15282031 A152 SERIAL A1520760 THRU A1520808 L---152 SERIAL 15279406 THRU 15283591 F152 SERIAL F15201429 THRU F15201673 A152 SERIAL A1520735 THRU A1520878 FA152 SERIAL FA1520337 THRU FA1520357 M---152 SERIAL 15283592 & ON F152 SERIAL F15201674 & ON A152 SERIAL A1520879 & ON FA152 SERIAL FA1520358 & ON											
CONTINUED ON NEXT PAGE											

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION							UNITS PER ASSY	USABLE ON CODE
		1	2	3	4	5	6	7		
86 -		N---	152	SERIAL	15279406	THRU	15284541			
			F152	SERIAL	F15201429	THRU	F15201808			
			A152	SERIAL	A1520735	THRU	A1520943			
			FA152	SERIAL	FA1520337	THRU	FA1520372			
		P---	152	SERIAL	15283592	THRU	15284541			
			F152	SERIAL	F15201674	THRU	F15201808			
			A152	SERIAL	A1520879	THRU	A1520943			
			FA152	SERIAL	FA1520358	THRU	FA1520372			
		Q---	152	SERIAL	15279406	THRU	15284353			
			F152	SERIAL	F15201429	THRU	F15201828			
			A152	SERIAL	A1520735	THRU	A1520938			
			FA152	SERIAL	FA1520337	THRU	FA1520372			
		R---	152	SERIAL	15284353	& ON				
			F152	SERIAL	F15201829	& ON				
			A152	SERIAL	A1520939	& ON				
			FA152	SERIAL	FA1520373	& ON				
		S---	152	SERIAL	15283828	& ON				
			F152	SERIAL	F15201755	& ON				
			A152	SERIAL	A1520897	& ON				
			FA152	SERIAL	FA1520373	& ON				
		T---	152	SERIAL	15284542	& ON				
			F152	SERIAL	F15201809	& ON				
			A152	SERIAL	A1520944	& ON				
			FA152	SERIAL	FA1520373	& ON				
		U---	152	SERIAL	15279406	THRU	15285474			
			F152	SERIAL	F15201429	& ON				
			A152	SERIAL	A1520735	THRU	A1521009			
			FA152	SERIAL	FA1520337	& ON				
		V---	152	SERIAL	15281167	THRU	15285837			
			F152	SERIAL	F15201529	THRU	F15201951			
			A152	SERIAL	A1520778	THRU	A1521026			
			FA152	SERIAL	FA1520347	THRU	FA1520387			
		W---	152	SERIAL	15283592	THRU	15285367			
			F152	SERIAL	F15201694	THRU	F15201928			
			A152	SERIAL	A1520879	THRU	A1520995			
			FA152	SERIAL	FA1520358	THRU	FA1520387			
		X---	152	SERIAL	15284542	THRU	15285367			
			F152	SERIAL	F15201809	THRU	F15201928			
			A152	SERIAL	A1520944	THRU	A1520995			
			FA152	SERIAL	FA1520373	THRU	FA1520387			
		Y---	152	SERIAL	15285368	& ON				
			F152	SERIAL	F15201929	& ON				
			A152	SERIAL	A1520996	& ON				
			FA152	SERIAL	FA1520388	& ON				
		Z---	152	SERIAL	15284542	THRU	15285594			
			F152	SERIAL	F15201809	THRU	F15201928			
			A152	SERIAL	A1520944	THRU	A1521014			
			FA152	SERIAL	FA1520373	THRU	FA1520382			
		AA---	152	SERIAL	15283592	THRU	15285594			
			F152	SERIAL	F15201674	THRU	F15201928			
			A152	SERIAL	A1520879	THRU	A1521014			
			FA152	SERIAL	FA1520358	THRU	FA1520382			
		AB---	152	SERIAL	15285595	& ON				
			F152	SERIAL	F15201929	& ON				
			A152	SERIAL	A1521015	& ON				
			FA152	SERIAL	FA1520383	& ON				
		AC---	152	SERIAL	15279406	THRU	15285833			
			F152	SERIAL	F15201429	THRU	F15201943			
			A152	SERIAL	A1520735	THRU	A1521025			
			FA152	SERIAL	FA1520337	THRU	FA1520387			
		AD---	152	SERIAL	15285834	& ON				
			F152	SERIAL	F15201944	& ON				
			A152	SERIAL	A1521026	& ON				
			FA152	SERIAL	FA1520388	& ON				
		AE---	152	SERIAL	15282023	THRU	15285852			
			F152	SERIAL	F15201529	THRU	F15201951			
			A152	SERIAL	A1520809	THRU	A1521026			
			FA152	SERIAL	FA1520348	THRU	FA1520387			
		AF---	152	SERIAL	15279406	THRU	15285852			
			F152	SERIAL	F15201429	THRU	F15201951			
			A152	SERIAL	A1520735	THRU	A1521026			
			FA152	SERIAL	FA1520337	THRU	FA1520387			
		AG---	152	SERIAL	15285853	& ON				
			F152	SERIAL	F15201952	& ON				
			A152	SERIAL	A1521027	& ON				
			FA152	SERIAL	FA1520388	& ON				

152 & A152 Parts Catalog

Electrical Equipment (Cont)

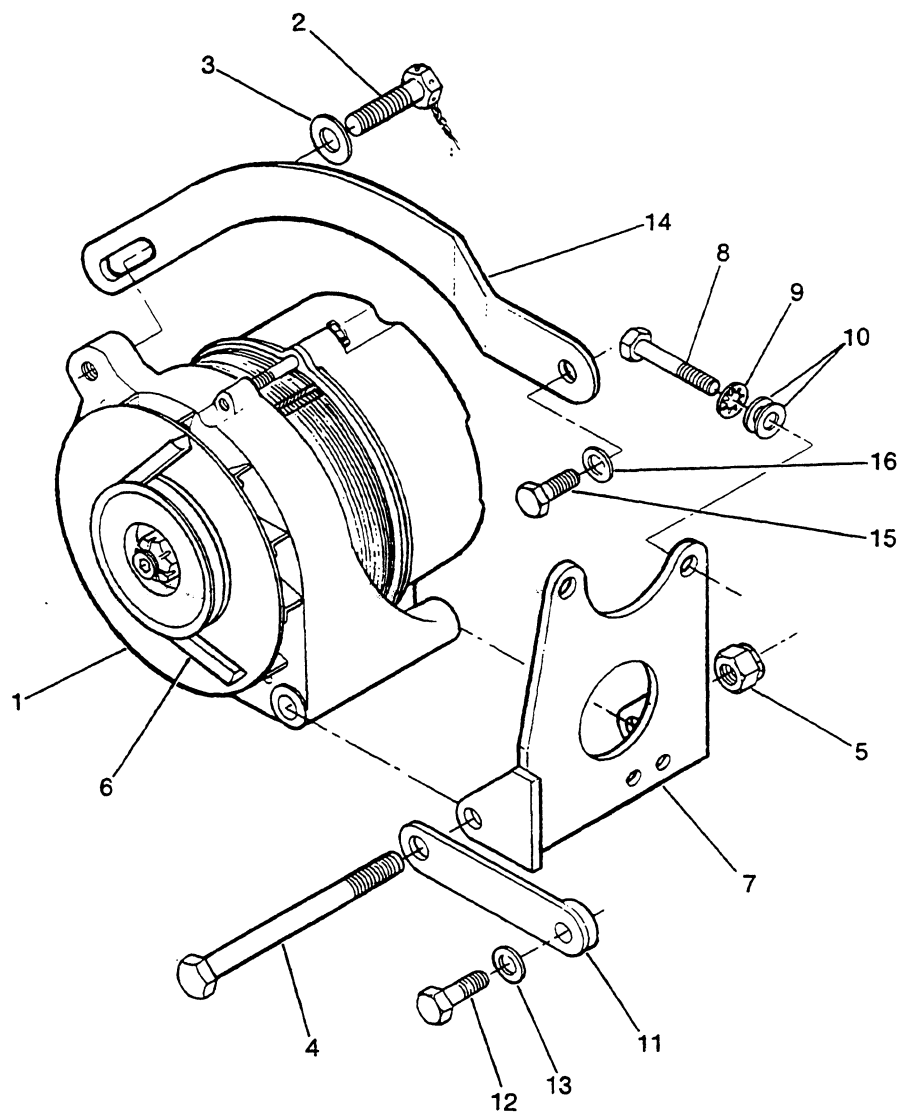


Figure 86A. Alternator Installation

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
86A-		ALTERNATOR INSTALLATION -----	NP	
- 1	C611503-0102	ALTERNATOR ASSY 60 AMP -----	1	
		ATTACHING PARTS -----		
- 2	0750220-1	BOLT -----	1	
- 3	S1450-6-14-080	WASHER -----	1	
- 4	AN7-42A	BOLT -----	1	
	S2332-1	SHIM-FRICTION BETWEEN 0450349-4 LINK & 0450061-1 BKT -----	AR	
- 5	MS20365-720C	NUT -----	1	
		-----*		
	MS21042L4	NUT ON BATTERY TERMINAL -----	1	
	S2114-1	NIPPLE ON BATTERY TERMINAL -----	1	
	S2093-2	COVER ON BATTERY TERMINAL -----	1	
	MS21042L3	NUT ON FIELD TERMINAL & GROUND TERMINAL -----	2	
	S2114-2	NIPPLE ON FIELD TERMINAL -----	1	
- 6	S1597-1-37.5	BELT-ALTERNATOR -----	1	
- 7	0450061-1	BRACKET ASSY-ALTERNATOR WEU 0450061-6 -----	1	A
	0450061-6	BRACKET ASSY-ALTERNATOR -----	1	B
		ATTACHING PARTS -----		
- 8	MS20074-04-13	BOLT -----	2	
- 9	AN936A416	WASHER -----	2	
-10	AN960-416	WASHER -----	4	
		-----*		
-11	0450349-4	LINK ASSY-ALTERNATOR -----	1	
		ATTACHING PARTS -----		
-12	MS20074-05-07	BOLT -----	1	
-13	AN960-516	WASHER -----	1	
		-----*		
-14	LW10729	LINK-ALTERNATOR BELT ADJUSTMENT LY -----	1	
		ATTACHING PARTS -----		
-15	MS20074-05-05	BOLT -----	1	
-16	AN960-516	WASHER -----	1	
		-----*		
		A---152 SERIAL 15279406 THRU 15282230 F152 SERIAL F15201429 THRU F15201578 A152 SERIAL A1520735 THRU A1520815 FA152 SERIAL FA1520337 THRU FA1520356		
		B---152 SERIAL 15282231 & ON F152 SERIAL F15201579 & ON A152 SERIAL A1520816 & ON FA152 SERIAL FA1520357 & ON		

152 & A152 Parts Catalog

Electrical Equipment (Cont)

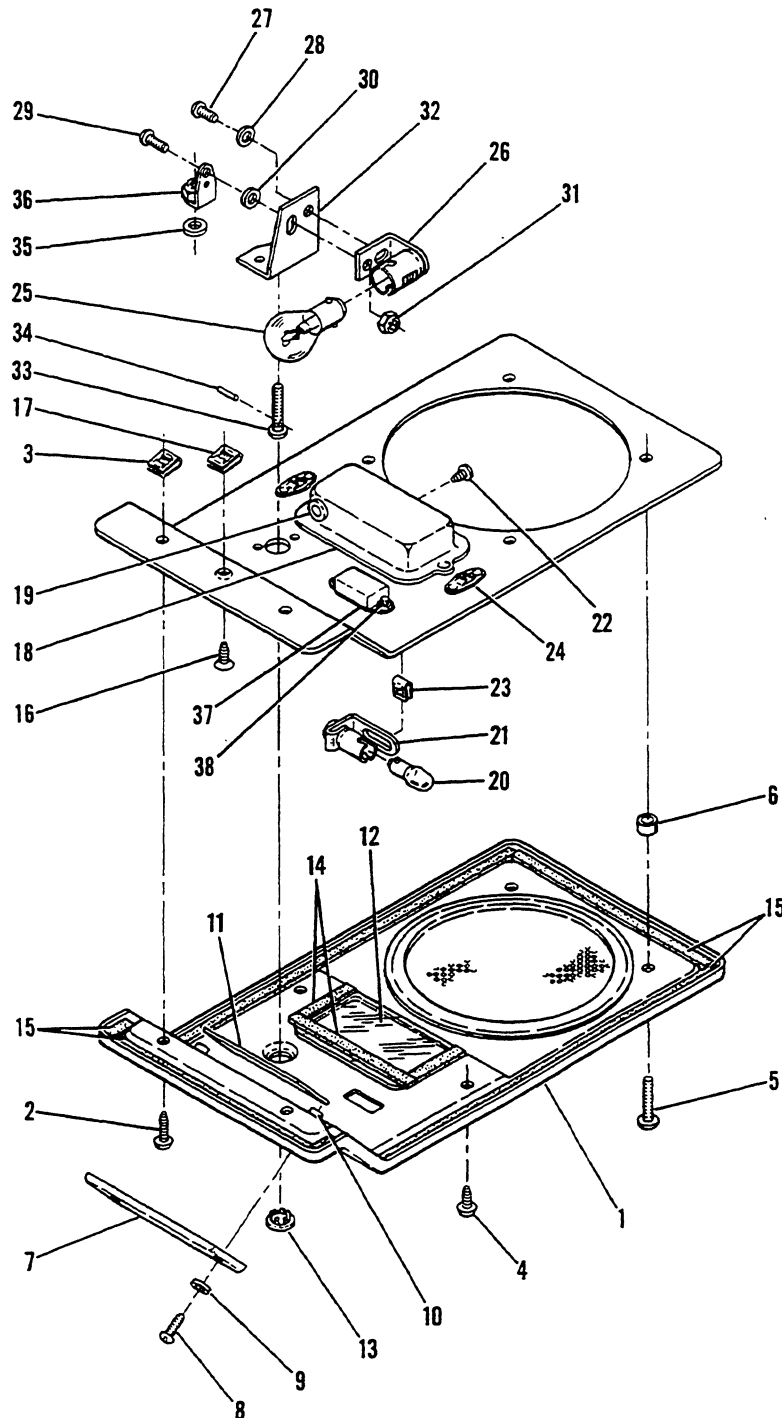



Figure 87. Instrument Panel Light Installation

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION							UNITS PER ASSY	USABLE ON CODE
		1	2	3	4	5	6	7		
87 -		INSTRUMENT PANEL LIGHT INSTALLATION -----							1	
- 1	0414068-1	COVER ASSY-OVERHEAD CONSOLE -----							1	A
	0414068-3	COVER ASSY-OVERHEAD CONSOLE -----							1	B
	0414068-5	COVER ASSY-OVERHEAD CONSOLE USED WITH POSTLIGHTS -----							1	D
		ATTACHING PARTS								
- 2	S1021Z6-10	SCREW -----							2	
- 3	NAS395-3-3	NUT -----							2	
- 4	S1021Z6-8	SCREW -----							2	
- 5	AN520-10R12	SCREW -----							2	A
	AN520-10R8	SCREW -----							2	B
- 6	NAS43HT3-16	SPACER -----							2	A
		-----*								
- 7	0414069-1	SHIELD-OVERHEAD CONSOLE -----							1	
		ATTACHING PARTS								
- 8	AN515-6R8	SCREW -----							2	
- 9	S1554-3	WASHER -----							2	
		-----*								
-10	NAS697A06L	NUTPLATE -----							2	
-11	0414013-4	LENS-INSTRUMENT LIGHT -----							1	
-12	0413141-1	LENS-OVERHEAD LIGHT -----							1	
-13	CM2692-12R3S	PLUG BUTTON -----							1	
-14	S2108-2	SEAL BKI -----							AR	
	S2108-6	SEAL BKI ALTERNATE -----							AR	
	S2108-5	SEAL BKI -----							AR	
-15	0414067-1	SUPPORT ASSY-OVERHEAD CONSOLE WEU 0414067-3 -----							1	C
	0414067-3	SUPPORT ASSY-OVERHEAD CONSOLE -----							1	D
		ATTACHING PARTS								
-16	S1022Z6-8	SCREW -----							1	
-17	NAS395-3-3	NUT -----							1	
		-----*								
-18	0470118-2	REFLECTOR-OVERHEAD CONSOLE LIGHT -----							1	
-19	MS35489-4	GROMMET -----							1	
-20	MS25231-313	BULB-OVERHEAD LIGHT -----							1	
-21	0413138	SOCKET-OVERHEAD LIGHT -----							1	
		ATTACHING PARTS								
-22	S1021Z6-4	SCREW -----							2	
-23	NAS395-1-3	NUT -----							2	
		-----*								
-24	S1863-2A	NUTPLATE -----							2	
-25	MS15584-16	BULB-INSTRUMENT LIGHT -----							1	
-26	0513208-1	SOCKET-INSTRUMENT LIGHT -----							1	
		ATTACHING PARTS								
-27	AN520-8R6	SCREW -----							1	
-28	NAS620-8	WASHER -----							1	
-29	AN520-8R7	SCREW -----							1	
-30	NAS620-10	WASHER -----							1	
-31	MS21044N08	NUT -----							2	
		-----*								
-32	0511324-2	BRACKET-ADJUSTABLE INSTRUMENT LIGHT -----							1	
-33	0511324-4	SCREW-ADJUSTABLE INSTRUMENT LIGHT -----							1	
-34	MS16562-193	ROLL PIN -----							1	
-35	AN960-10	WASHER -----							1	
-36	0511324-3	NUT-ADJUSTABLE INSTRUMENT LIGHT -----							1	
-37	S1501-1	SWITCH-POST LIGHT -----							1	D
		ATTACHING PARTS								
-38	AN505-4R4	SCREW -----							2	D
	AN960-4	WASHER -----							2	D
	MS21044N04	NUT -----							2	D
		-----*								
		A---152 SERIAL 15279406 THRU 15279799								
		F152 SERIAL F15201429 THRU F15201498								
		A152 SERIAL A1520735 THRU A1520745								
		FA152 SERIAL FA1520337 THRU FA1520346								
		B---152 SERIAL 15279800 & ON								
		F152 SERIAL F15201499 & ON								
		A152 SERIAL A1520746 & ON								
		FA152 SERIAL FA1520347 & ON								
		C---152 SERIAL 15279406 THRU 15282031								
		F152 SERIAL F15201429 THRU F15201528								
		A152 SERIAL A1520735 THRU A1520808								
		FA152 SERIAL FA1520337 THRU FA1520347								
		D---152 SERIAL 15282032 & ON								
		F152 SERIAL F15201529 & ON								
		A152 SERIAL A1520809 & ON								
		FA152 SERIAL FA1520348 & ON								

152 & A152 Parts Catalog

Electrical Equipment (Cont)

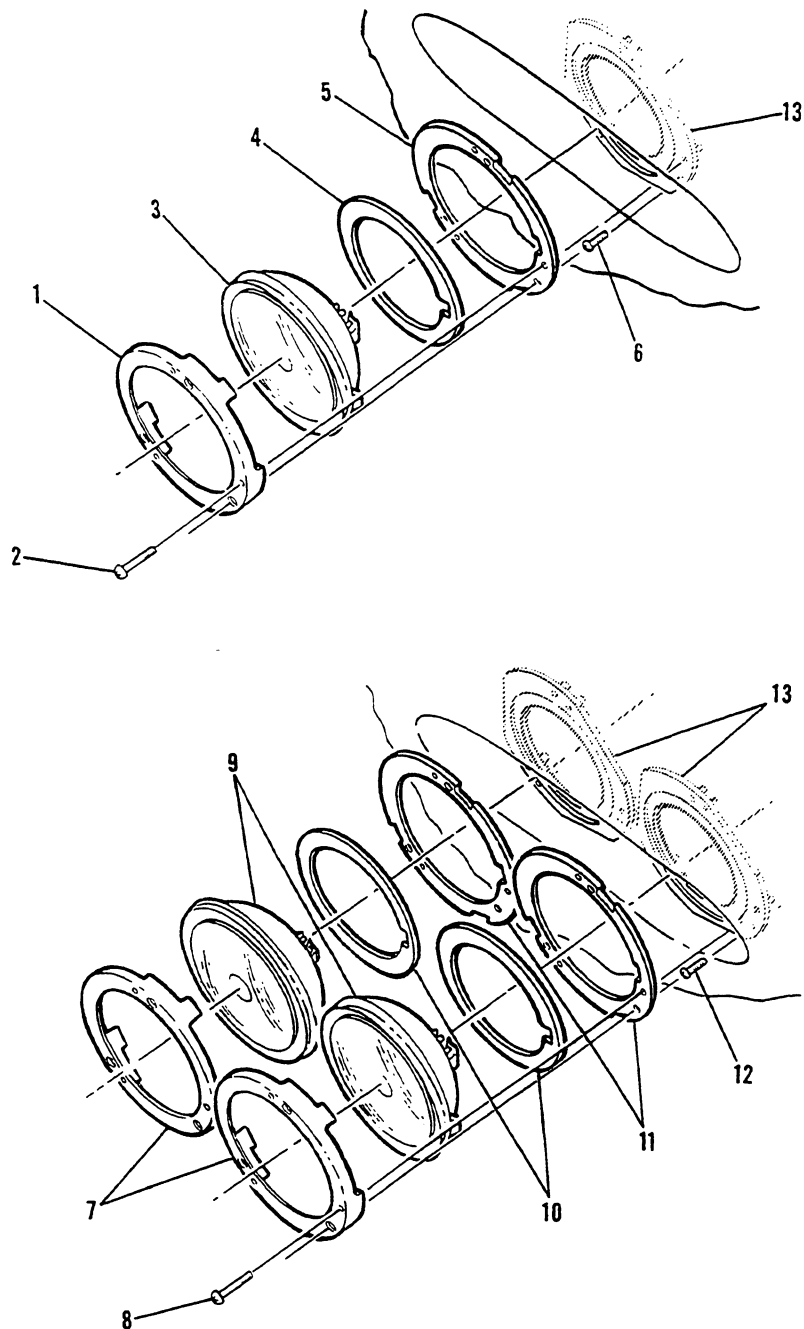

**152 SERIAL 15279406 THRU 15285833
F152 SERIAL F15201429 THRU F15201943
A152 SERIAL A1520735 THRU A1521025
FA152 SERIAL FA1520337 THRU FA1520387**


Figure 88. Landing & Taxi Light Installation

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION							UNITS PER ASSY	USABLE ON CODE
		1	2	3	4	5	6	7		
88 -		LANDING LIGHT INSTALLATION-SINGLE -----							NP	A
- 1	0452229-1	BRACKET-LANDING LIGHT -----							1	
		ATTACHING PARTS -----								
- 2	AN525-832R24	SCREW -----							3	
		-----*								
- 3	4596	BULB-LANDING LIGHT GE -----							1	
- 4	0752646-1	GASKET -----							1	
- 5	0452228-1	BRACKET -----							1	
- 6	AN515-8R14	SCREW-ADJUSTMENT -----							3	
		LANDING & TAXI LIGHT INSTALLATION-DUAL -----							NP	
- 7	0452229-1	BRACKET-LANDING LIGHT -----							2	
		ATTACHING PARTS -----								
- 8	AN525-832R24	SCREW -----							3	
		-----*								
- 9	4591	BULB-LANDING LIGHT GE -----							2	
-10	0752646-1	GASKET -----							2	
-11	0452228-1	BRACKET -----							2	
-12	AN515-8R14	SCREW-ADJUSTMENT -----							6	
-13	SEE FIG 61	BRACKET ASSY-LANDING LIGHT -----							AR	
A---152 SERIAL 15279406 THRU 15285833 F152 SERIAL F15201429 THRU F15201943 A152 SERIAL A1520735 THRU A15201025 FA152 SERIAL FA1520337 THRU FA1520387										

152 & A152 Parts Catalog

Electrical Equipment (Cont)

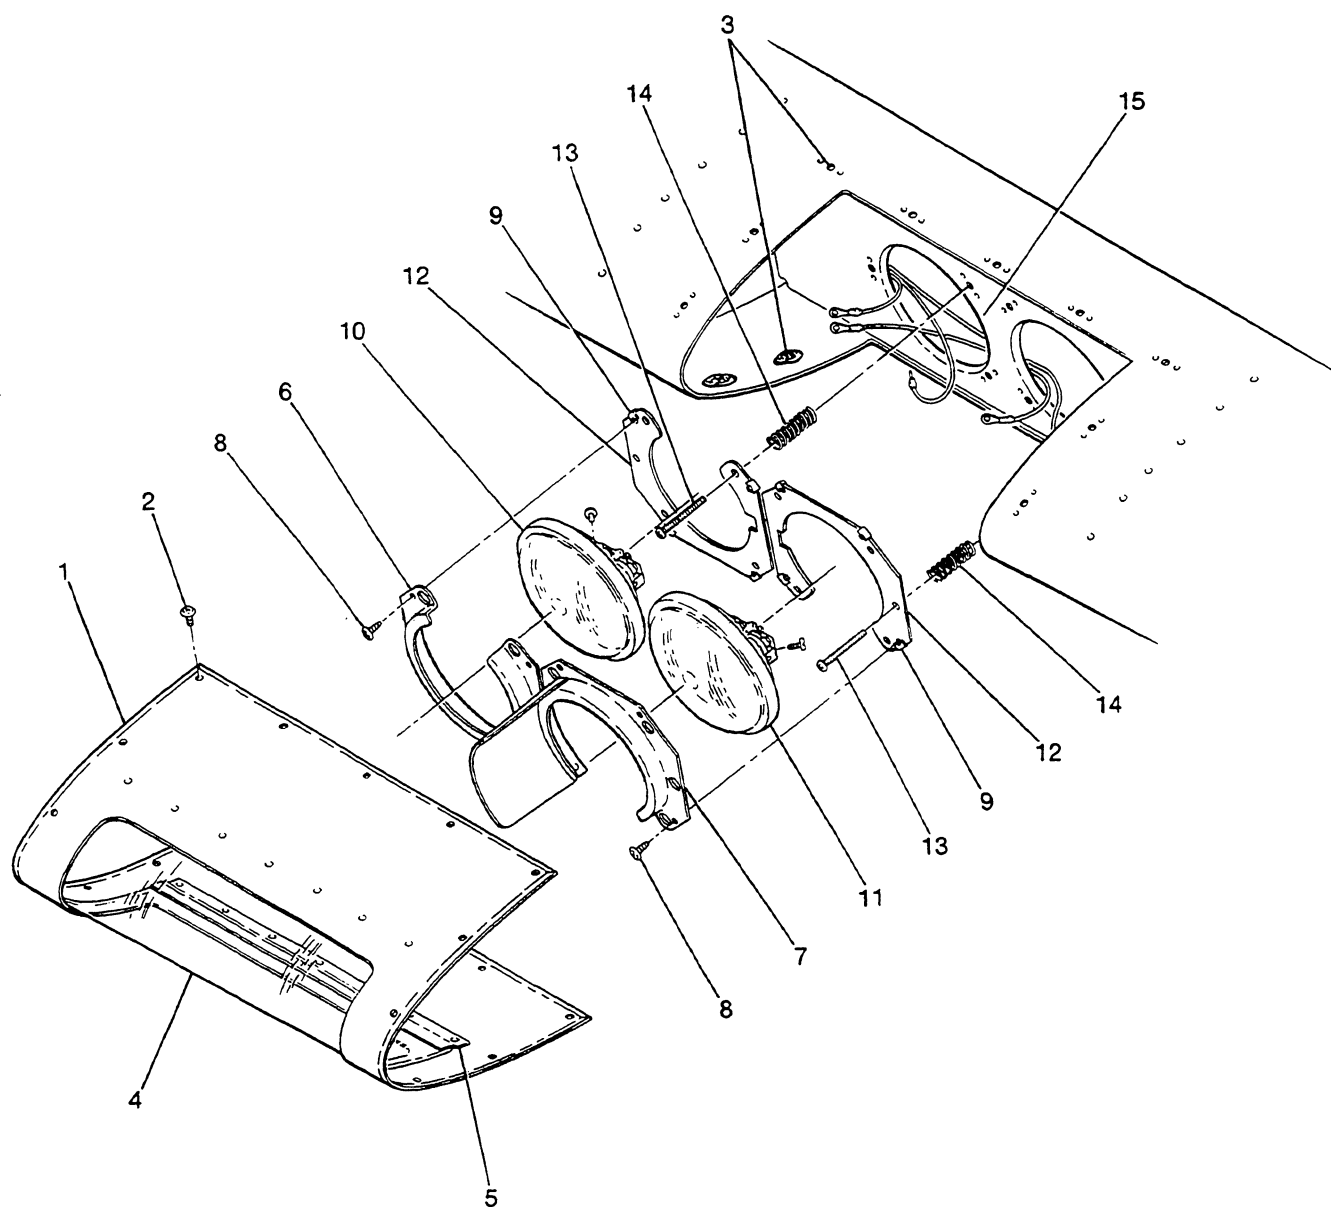

152 SERIAL 15285834 & ON
F152 SERIAL F15201944 & ON
A152 SERIAL A1521026 & ON
FA152 SERIAL FA1520388 & ON

Figure 88A. Landing & Taxi Light Installation

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION							UNITS PER ASSY	USABLE ON CODE
		1	2	3	4	5	6	7		
88A-		LANDING & TAXI LIGHT INSTALLATION -----							NP	A
- 1	0422436-1	LENS ASSY-LANDING LIGHT -----							1	
- 2	S1021Z8-6	ATTACHING PARTS -----							18	
- 3	S1863-3A	SCREW -----							18	
		NUTPLATE -----								
		-----*								
- 4	0422435-1	LENS-LANDING LIGHT -----							1	
	C7358-014	SPEED NUT -----							2	
- 5	0522114-1	RETAINER-LENS -----							2	
- 6	0423542-4	BRACKET-LIGHT -----							1	
- 7	0423542-8	BRACKET ASSY-LIGHT -----							1	
		ATTACHING PARTS -----								
- 8	S1021Z-6-8	SCREW -----							4	
- 9	NAS488-1-3	NUT -----							4	
		-----*								
-10	4596	LIGHT-LANDING GE -----							1	
-11	4587	LIGHT-TAXI GE -----							1	
-12	0423542-5	PLATE-LIGHT -----							2	
		ATTACHING PARTS -----								
-13	AN515-8R26	SCREW -----							3	
-14	0713124-1	SPRING -----							3	
		-----*								
-15	SEE FIG 8 & 9	BRACKET ASSY-LANDING & TAXI LIGHT -----							1	
		A---152 SERIAL 15285834 & ON								
		F152 SERIAL F15201944 & ON								
		A152 SERIAL A1521026 & ON								
		FA152 SERIAL FA1520388 & ON								

152 & A152 Parts Catalog

Electrical Equipment (Cont)

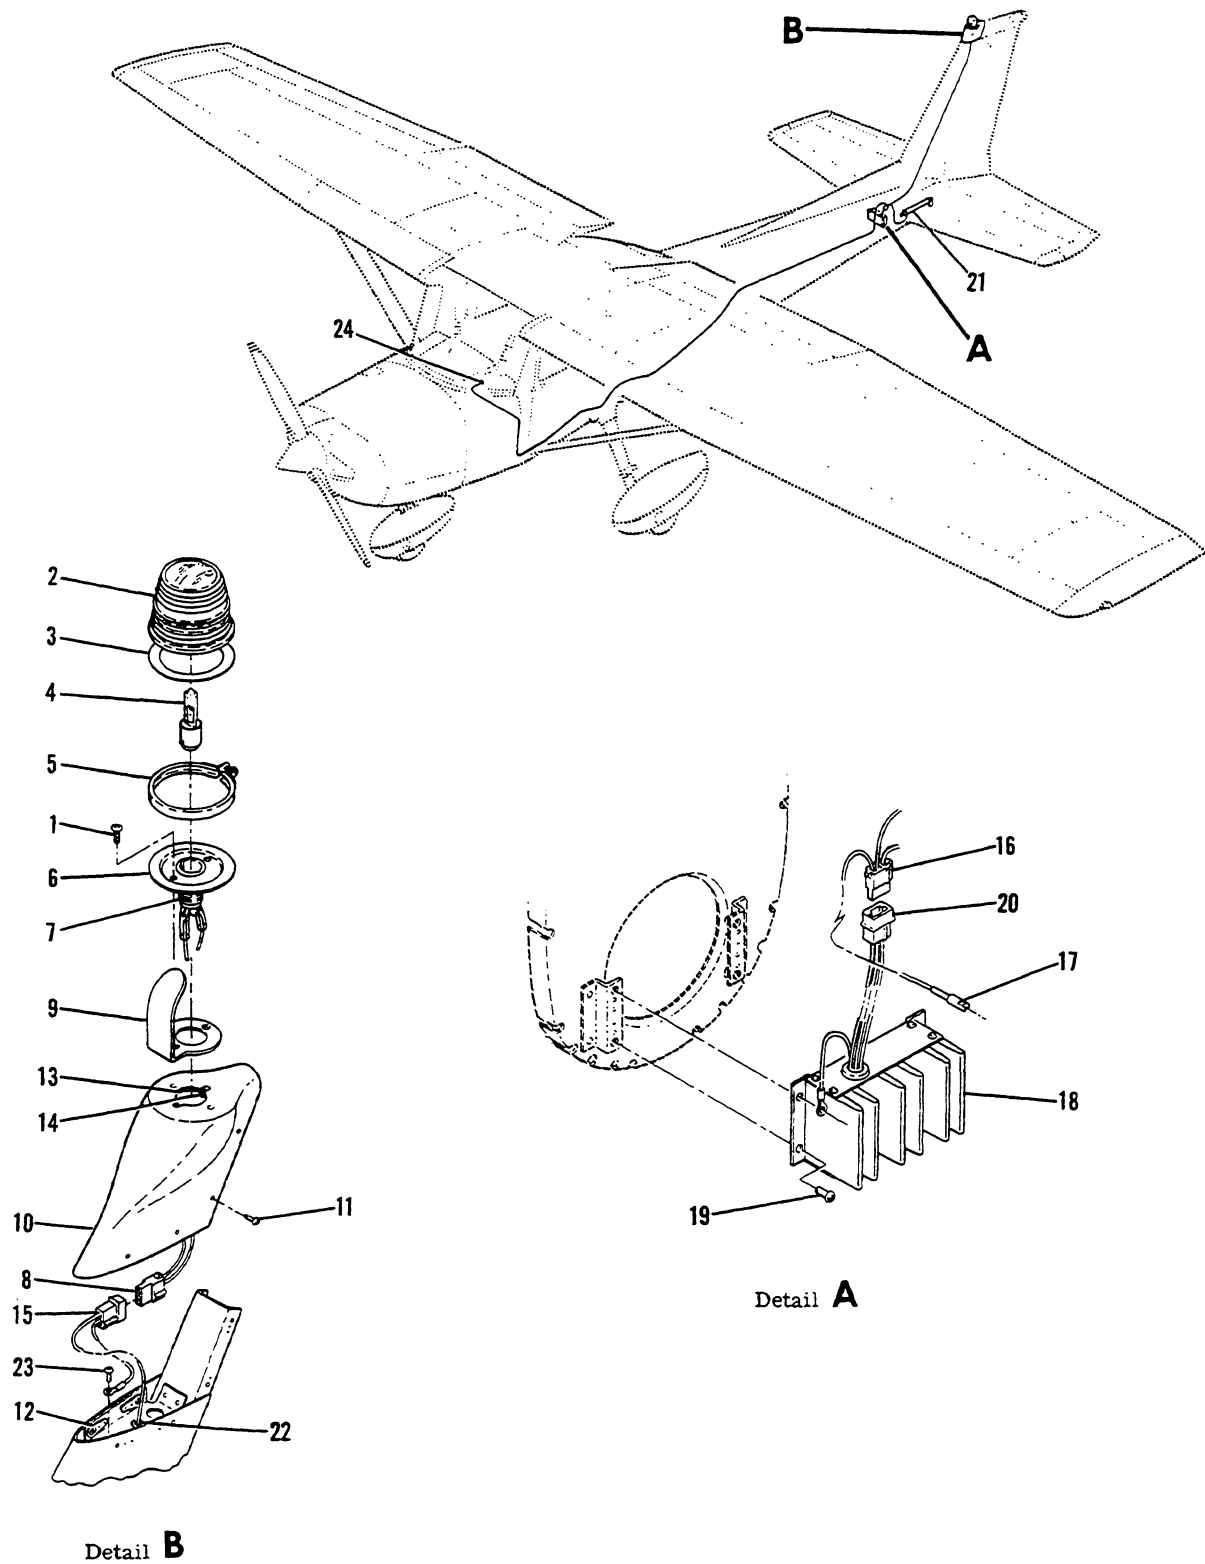


Figure 89. Flashing Beacon Light Installation

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
89 -	C621001-0102	FLASHING BEACON LIGHT INSTALLATION -----	NP	
- 1	AN515-8R8	LIGHT ASSY-FLASHING BEACON -----	1	
- 2	C17325	ATTACHING PARTS -----	2	
- 3	C17330	SCREW -----	1	
- 4	C17312-1	*-----	1	
- 5	C17326	DOMES AEFS -----	1	
- 6	C17331-1	GASKET AEFS -----	1	
- 7	C17313	BULB-FLASHING BEACON 150 WATT AEFS -----	1	
- 8	S1638-1	CLAMP ASSY AEFS -----	1	
- 9	0400215-1	PLATE-MOUNTING AEFS -----	1	
-10	0430011-3	SOCKET ASSY AEFS -----	1	
-11	S102176-4	HOUSING-PLUG -----	1	
-12	S1862-1	SHIELD -----	1	
-13	0431017-2	TIP ASSY-FLASHING BEACON -----	1	A
-14	NAS680A08	TIP ASSY-FLASHING BEACON -----	1	B
-15	MS21047-08	ATTACHING PARTS -----	6	
-16	S1638-2	SCREW -----	6	
-17	S1638-1	NUTPLATE -----	1	A
-18	S1637-1	*-----	1	B
-19	C594502-0102	PLATE ASSY-MOUNTING -----	2	A
-20	NAS220-6	PLATE ASSY-MOUNTING -----	2	B
-21	AN960-8	NUTPLATE -----	2	A
-22	MS35489-4	NUTPLATE -----	1	B
-23	AN515-8R9	HOUSING-CAP -----	1	
-24	MS21044N08	HOUSING-PLUG -----	1	
-25		HOUSING-CAP -----	1	
-26		FLASHER ASSY-BEACON LIGHT -----	1	
-27		ATTACHING PARTS -----	4	
-28		SCREW -----	7	
-29		WASHER -----	1	
-30		*-----	1	
-31		HOUSING-CAP -----	1	
-32		RESISTOR-FLASHING BEACON LTVE -----	1	
-33		ATTACHING PARTS -----	2	
-34		SCREW -----	2	
-35		NUT -----	1	
-36		*-----	1	
-37		GROMMET -----	1	
-38		SCREW -----	1	
-39		SWITCH & CIRCUIT BREAKER -----	1	
A---152 SERIAL 15279406 THRU 15282316 F152 SERIAL F15201429 THRU F15201540 A152 SERIAL A1520735 THRU A1520820 FA152 SERIAL FA1520337 THRU FA1520350 B---152 SERIAL 15282317 & ON F152 SERIAL F15201541 & ON A152 SERIAL A1520821 & ON FA152 SERIAL FA1520351 & ON				

152 & A152 Parts Catalog

Electrical Equipment (Cont)

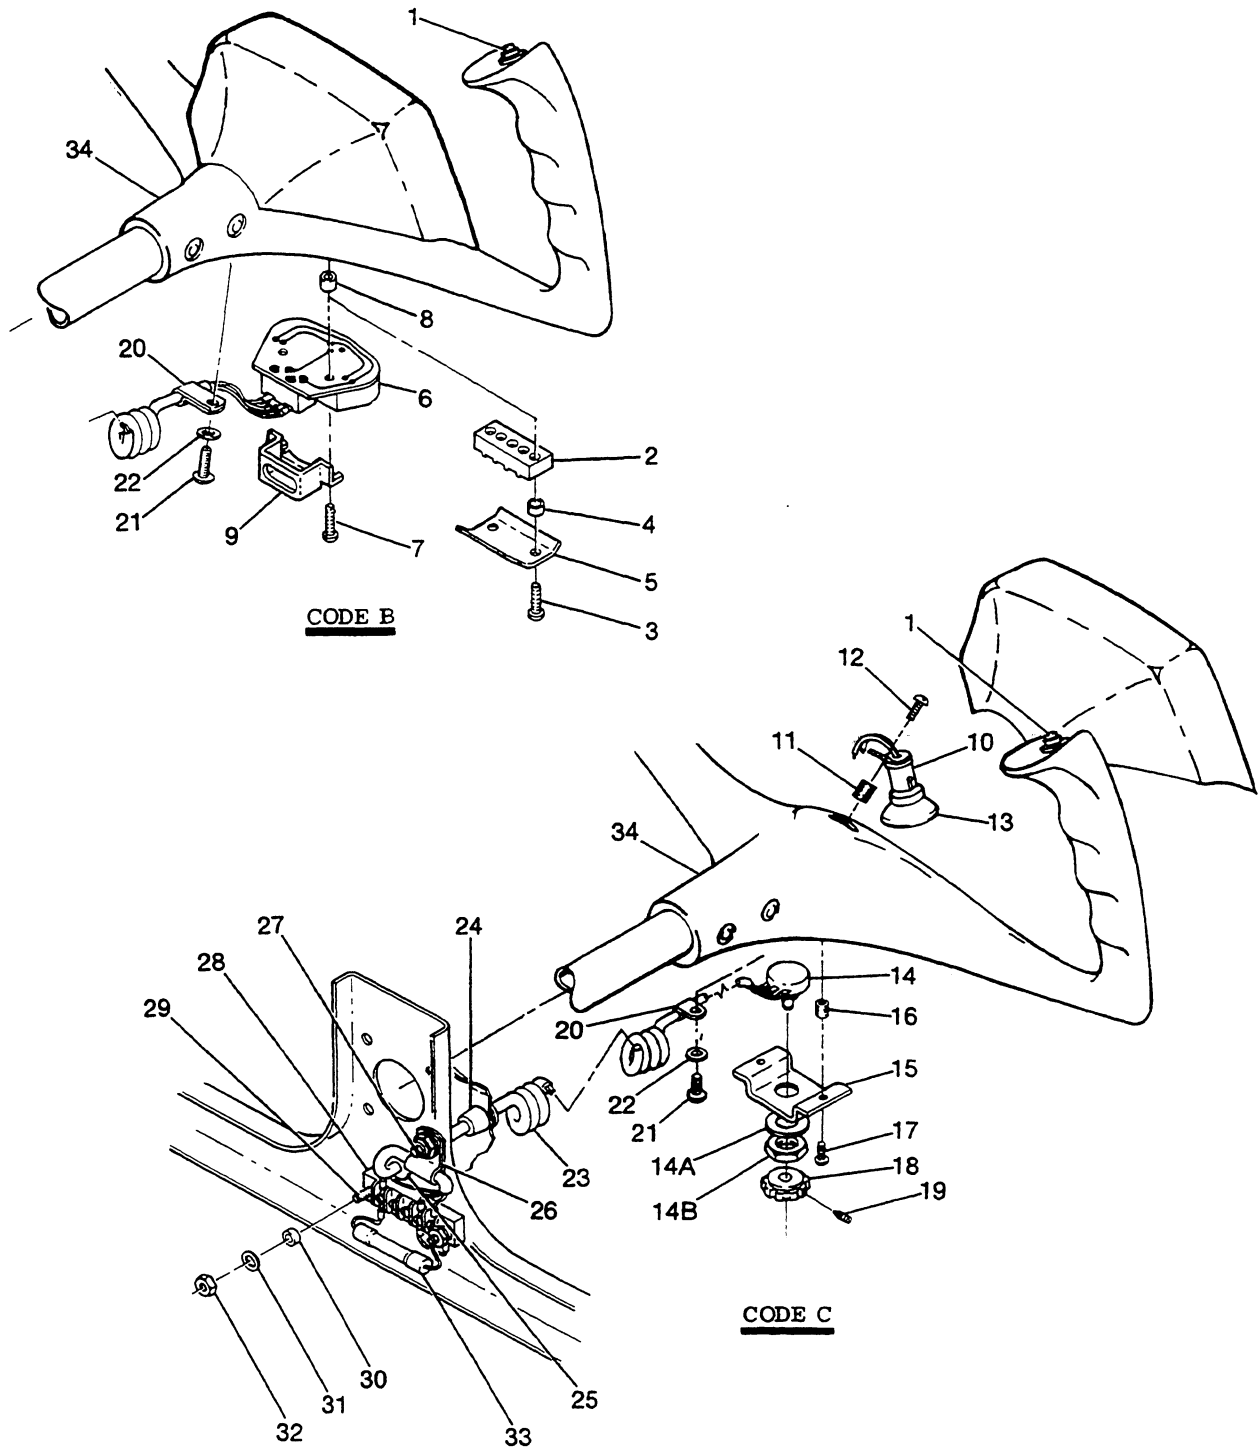


Figure 90. Control Wheel Map Light & Mike Switch Installation

152 & A152 Parts Catalog


FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION							UNITS PER ASSY	USABLE ON CODE
		1	2	3	4	5	6	7		
90 -		CONTROL WHEEL MAP LIGHT & MIKE SWITCH INSTALLATION -----							NP	
- 1	S1985-1	SWITCH-MIKE -----							1	
- 2	351-11-03-001	TERMINAL BLOCK-MIKE SWITCH CIN USED WHEN -----							1	A
		MAPLIGHT IS NOT INSTALLED -----								
		ATTACHING PARTS -----								
- 3	AN515-2R10	SCREW -----							2	A
	S1959-1	INSERT -----							2	A
- 4	NAS43DDO-9	SPACER -----							2	A
- 5	0570096-1	COVER-TERMINAL BLOCK -----							1	A
		*-----								
- 6	0570088-5	MAP LIGHT ASSY -----							1	B
		ATTACHING PARTS -----								
- 7	AN515-2R12	SCREW -----							AR	B
	AN515-2R14	SCREW -----							AR	B
	AN515-2R16	SCREW -----							AR	B
- 8	NAS43DDO-14	SPACER -----							AR	B
	NAS43DDO-15	SPACER -----							AR	B
	NAS43DDO-17	SPACER -----							AR	B
	NAS43DDO-18	SPACER -----							AR	B
	NAS43DDO-19	SPACER -----							AR	B
	S1959-1	INSERT -----							2	B
- 9	0570095-1	COVER-TERMINAL BLOCK -----							1	B
		*-----								
	7387	BULB-MAP LIGHT 24 VOLT IEEI -----							1	B
	110-500	POTENTIOMETER 24 VOLT LIGHT IRC -----							1	B
	0770414-1	KNOB-MAP LIGHT CONTROL BONDED TO POT -----							1	B
-10	0570454-1	LAMP HOLDER -----							1	C
		ATTACHING PARTS -----								
-11	S1959-2	INSERT -----							1	C
-12	AN515-6R6	SCREW -----							1	C
		*-----								
-13	24RB	BULB-MAP LIGHT SEPI -----							1	C
-14	S2619-1	%	POTENTIOMETER-MAP LIGHT -----						1	C
			ATTACHING PARTS -----						1	
-14A	A936A616	%	WASHER -----						1	C
-14B	MS25082-20	%	NUT -----						1	C
			*-----							
-15	0513553-2	%	BRACKET-RHEOSTAT -----						1	C
			ATTACHING PARTS -----							
-16	S1959-1		INSERT -----						2	C
-17	AN515-2R4		SCREW -----						2	C
			*-----							
-18	1270483-2		KNOB ASSY-RHEOSTAT -----						1	C
			ATTACHING PARTS -----							
-19	AN565D2H3		SET SCREW -----						1	C
			*-----							
-20	S1155-3		CLAMP -----						1	
			ATTACHING PARTS -----							
-21	AN515-6R5		SCREW -----						1	
-22	AN960-6L		WASHER -----						1	
	S1959-2		INSERT -----						1	
			*-----							
-23	8409		CABLE-RETRACTILE BDN -----						1	
-24	K375-125		BUSHING-SNUB HEMA -----						1	
-25	MS35489-33		GROMMET -----						1	
-26	S1155-3		CLAMP -----						1	
			ATTACHING PARTS -----							
-27	AN515-6R10		SCREW -----						1	
	AN960-6L		WASHER -----						1	
	MS21044N06		NUT -----						1	
			*-----							
CONTINUED ON NEXT PAGE										

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
90 -28	351-11-05-001	TERMINAL BLOCK CIN -----	1	
-29	AN515-4R7	ATTACHING PARTS -----		
-30	NAS43DDO-6	SCREW -----	2	
-31	AN936A4	SPACER -----	2	
-32	AN340-4	WASHER -----	2	
		NUT -----	2	
		-----*		
-33	1570141-1	FUSE ASSY-MAP LIGHT -----	1	
-34	SEE FIG 70	CONTROL WHEEL ASSY -----	1	
		NOTE. %WHEN INITIALLY ORDERING THIS PART FOR AIRCRAFT PRIOR TO SERIALS 15285840, F15201952, A1521027 & FA1520388 ALSO ORDER ALL OTHER PARTS MARKED %.		
		A---152 SERIAL 15279406 THRU 15282031 F152 SERIAL F15201429 THRU F15201528 A152 SERIAL A1520735 THRU A1520808 FA152 SERIAL FA1520337 THRU FA1520347		
		B---152 SERIAL 15279406 THRU 15285634 F152 SERIAL F15201429 THRU F15201943 A152 SERIAL A1520735 THRU A1521019 FA152 SERIAL FA1520337 THRU FA1520387		
		C---152 SERIAL 15285635 & ON F152 SERIAL F15201944 & ON A152 SERIAL A1521020 & ON FA152 SERIAL FA1520388 & ON		

152 & A152 Parts Catalog

Electrical Equipment (Cont)

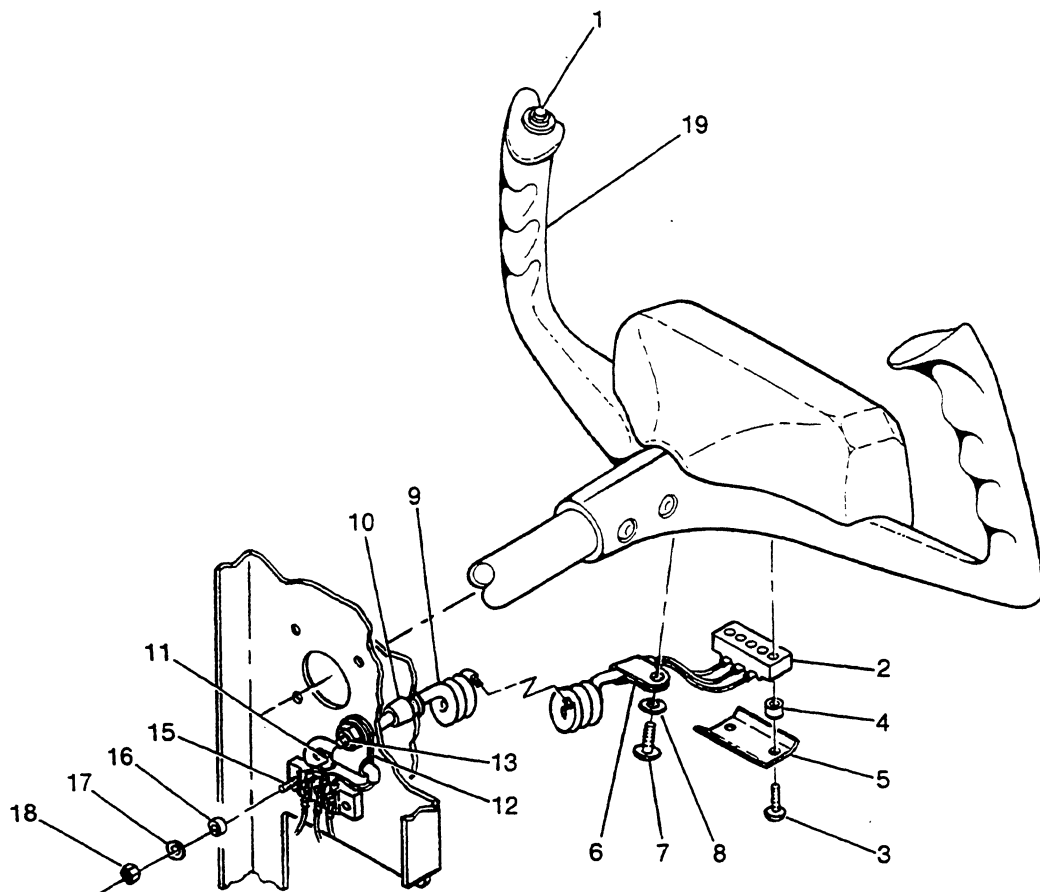

152 SERIAL 15284542 & ON
F152 SERIAL F15201809 & ON
A152 SERIAL A1520944 & ON
FA152 SERIAL FA1520373 & ON


Figure 90A. Copilots Intercom Mike Switch Installation

152 & A152 Parts Catalog

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
90A-		COPILOTS INTERCOM MIKE SWITCH INSTALLATION -----	NP	A
- 1	S1985-1	SWITCH-MIKE -----	1	
- 2	351-11-03-001	TERMINAL BLOCK CIN -----	1	
		ATTACHING PARTS -----		
- 3	AN515-2R10	SCREW -----	2	
	S1959-1	INSERT -----	2	
- 4	NAS43DDO-9	SPACER -----	2	
- 5	0570096-1	COVER-TERMINAL BLOCK -----	1	
		*-----		
- 6	S1155-3	CLAMP -----	1	
		ATTACHING PARTS -----		
- 7	AN515-8R5	SCREW -----	1	
- 8	AN960-8L	WASHER -----	1	
	S1959-2	INSERT -----	1	
		*-----		
- 9	8409	CABLE-RETRACTILE BDN -----	1	
-10	K375-125	BUSHING-SNUB HEMA -----	1	
-11	MS35489-33	GROMMET -----	1	
-12	S1155-3	CLAMP -----	1	
		ATTACHING PARTS -----		
-13	AN515-6R10	SCREW -----	1	
	AN960-6L	WASHER -----	1	
	MS21044N06	NUT -----	1	
		*-----		
-14	351-11-03-001	TERMINAL BLOCK CIN -----	1	
		ATTACHING PARTS -----		
-15	AN515-4R7	SCREW -----	2	
-16	NAS43DDO-6	SPACER -----	2	
-17	AN936A4	WASHER -----	2	
-18	AN340-4	NUT -----	2	
		*-----		
-19	SEE FIG 70	CONTROL WHEEL ASSY -----	1	
		A---152 SERIAL 15284542 & ON F152 SERIAL F15201809 & ON A152 SERIAL A1520944 & ON FA152 SERIAL FA1520373 & ON		

152 & A152 Parts Catalog

Electrical Equipment (Cont)

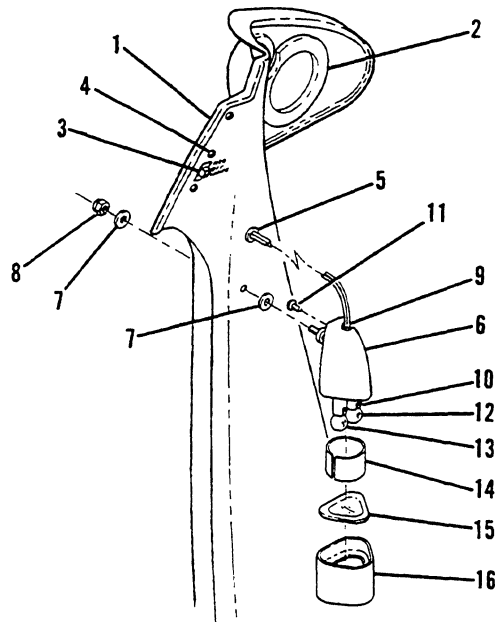

152 SERIAL 15282032 & ON
 F152 SERIAL F15201529 & ON
 A152 SERIAL A1520809 & ON
 FA152 SERIAL FA1520348 & ON

Figure 91. Map Light Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
91 -		MAP LIGHT INSTALLATION -----	NP	A
- 1	0413484-28	SHIELD ASSY-LH FWD DOOR POST -----	1	
- 2	0415023-3	ESCUTCHEON ASSY -----	1	
- 3	S1501-1	SWITCH -----	1	
	0511080-1	INSULATOR-SWITCH -----	1	
		ATTACHING PARTS -----		
- 4	AN515-3R6	SCREW -----	2	
	AN340-3	NUT -----	2	
		-----*		
- 5	MS35489-1	GROMMET -----	1	
- 6	1470089-15	MAP LIGHT ASSY -----	1	
		ATTACHING PARTS -----		
- 7	AN970-3	WASHER -----	2	
- 8	MS21044N3	NUT -----	1	
		-----*		
- 9	MS35489-1	GROMMET -----	1	
-10	ID1757	SOCKET ASSY ISES -----	1	
		ATTACHING PARTS -----		
-11	AN515-6R8	SCREW -----	1	
		-----*		
-12	S2243-1	BULB-MAP LIGHT CLEAR 24 VOLT -----	1	
-13	S2243-2	BULB-MAP LIGHT RED 24 VOLT -----	1	
-14	1470089-17	TUBE-EXPANDER -----	1	
-15	1770089-18	LENS-MAP LIGHT -----	1	
-16	0700148-1	HOOD ASSY -----	1	
		A---152 SERIAL 15282032 & ON F152 SERIAL F15201529 & ON A152 SERIAL A1520809 & ON FA152 SERIAL FA1520348 & ON		

152 & A152 Parts Catalog

Numerical Index

152 & A152 Parts Catalog

PART NUMBER	FICHE AND FRAME	FIGURE AND INDEX NO.	PART NUMBER	FICHE AND FRAME	FIGURE AND INDEX NO.	PART NUMBER	FICHE AND FRAME	FIGURE AND INDEX NO.
A/M1H5-23		85B-16	AN3-16A		72 -18	AN310-3		75 -10
AN115-21		75 -12	AN3-16A		72A-18	AN310-3		75A-10
AN115-21		75A-12	AN3-17A		72 -19	AN310-3		75A-10A
AN155-16S		73 - 4	AN3-17A		72A-19	AN310-4		34 -39
AN155-32L		72 -40	AN3-17A		73 -11	AN310-4		34 -51
AN155-32S		70 - 7	AN3-20A		30 - 1	AN310-4		70 -33
AN155-32S		72 -47	AN3-21A		28 - 2	AN312-A		50A-70
AN155-32S		72A-35	AN3-21A		29 - 3	AN315-3R		18 -13
AN155-32S		75 -16	AN3-22A		29 - 2	AN315-3R		18 -50
AN155-32S		75A-15	AN3-3A		16 -29	AN315-3R		18A-47
AN155-8L		76 -33	AN3-3A		18 -28	AN315-3R		19 -13
AN161-32LL		72 -41	AN3-3A		18A-25	AN315-3R		19 -53
AN165-22RL		75 -14	AN3-3A		19 -31	AN315-3R		19A-47
AN165-22RS		75 -15	AN3-3A		19A-25	AN315-3R		62 -52
AN173-11A		21 - 3	AN3-3A		34 -45	AN315-4R		47 -16
AN173-11A		21A- 5	AN3-3A		58 - 8	AN315-4R		48 -18
AN227-6		51 - 1	AN3-3A		62 -59	AN315-4R		48A-18
AN227-7		51 - 1	AN3-3A		62 -75	AN315-4R		49 -16
AN227-8		51 - 7	AN3-3A		66 -60	AN315-4R		50 -19
AN227-9		51 - 7	AN3-3A		66 -83	AN315-4R		50A-19
AN23-10		71 - 2	AN3-3A		68 -16	AN315-4R		62 -83
AN23-10		72 - 1	AN3-3A		68 -36	AN315-4R		71 -25
AN23-10		72A- 1	AN3-3A		74 -44	AN315-640R		85B-24
AN23-10		75 - 8	AN3-3A		81 -48	AN315-8R14		51 - 9
AN23-10		75A- 8	AN3-3A		81 -51	AN316-4R		15 -16
AN23-11		34 -60	AN3-3A		86 - 7	AN316-4R		16 -14
AN23-11		75 - 9	AN3-34A		85 -29	AN316-4R		68 -33A
AN23-11		75 -19	AN3-34A		85A-24	AN316-4R		69 - 2
AN23-11		75A- 9	AN3-4A		51 -12	AN316-6R		33 -10
AN23-11		75A-18	AN3-4A		62 -17	AN316-6R		33 -14
AN23-17		34 -62	AN3-4A		62 -66	AN320-3		21 -41
AN24-27A		48 -28	AN3-4A		64 - 7	AN320-3		21A-47
AN24-27A		50 -29	AN3-4A		64A- 7	AN320-3		34 -64
AN24-29A		48A-28	AN3-4A		64B- 7	AN320-3		75 -21
AN24-29A		50A-29	AN3-4A		65 - 7	AN320-3		75A-20
AN24-30A		48 -56	AN3-4A		68 -14	AN320-7		33 -20
AN24-30A		50 -57	AN3-4A		74 -31	AN320-7		33 -26
AN24-32A		48 -13	AN3-4A		76 -30	AN340-3		91 - 4
AN24-32A		50 -14	AN3-4A		81 -30	AN340-4		74 - 8
AN24-34A		48A-13	AN3-4A		85B-21	AN340-4		90 -32
AN24-34A		50A-14	AN3-40A		63A- 2	AN340-4		90A-18
AN24-44A		48 -26	AN3-5		21 -39	AN340A8		52B-22
AN24-44A		48A-26	AN3-5		21A-45	AN340B6		52 -16
AN24-44A		50 -27	AN3-5A		21 - 2	AN340B6		52 -53
AN24-44A		50A-27	AN3-5A		21A- 2	AN340B6		52 -58
AN24-48A		48 -11	AN3-5A		58 - 2	AN340B6		52 -64
AN24-48A		50 -12	AN3-5A		76 -16	AN340B6		52A-17
AN24-50A		48A-11	AN3-6		21 -43	AN340B6		52A-29D
AN24-50A		50A-12	AN3-6		21A-49	AN340B6		52A-29E
AN3-10A		16 -19A	AN3-6		62 -54	AN340B6		52A-40B
AN3-10A		33 - 6	AN3-6		71 -27	AN340B6		52A-53
AN3-10A		68 -27	AN3-6		76 -35	AN340B6		52A-59
AN3-10A		70 -14	AN3-6A		21 - 3	AN340B6		52A-66
AN3-10A		70 -48	AN3-6A		62 -31	AN340B6		52B-18
AN3-10A		72 -11	AN3-6A		73 -20	AN340B6		52B-37
AN3-10A		72A-11	AN3-7		72 -36	AN340B6		52B-38
AN3-10A		74 - 9	AN3-7		72 -42	AN340B6		52B-64
AN3-10A		76 -17	AN3-7		72A-39	AN340B6		52B-70
AN3-11A		16 -10	AN3-7A		15 -11	AN340B6		52B-75
AN3-11A		16 -19	AN3-7A		16 - 8	AN340B6		78 - 1
AN3-11A		70 - 9	AN3-7A		62 -46	AN340B6		78 -20
AN3-11A		72 -12	AN3-7A		73 - 6	AN340B8		52 -34
AN3-11A		72A-12	AN3-7A		73 -28	AN340B8		52 -35
AN3-11A		73 -29	AN3-7A		74 -47	AN340B8		52 -52
AN3-11A		76 -18	AN3-7A		21 - 7	AN340B8		52A-34
AN3-12A		47 -35	AN310-3		34 -55	AN340B8		52A-35
AN3-12A		48 -64	AN310-3		62 -57	AN340B8		52A-52
AN3-12A		48A-69	AN310-3		71 - 3	AN340B8		52B-40
AN3-12A		49 -35	AN310-3		71 -29	AN340B8		52B-43
AN3-12A		50 -65	AN310-3		72 - 1	AN340B8		52B-63
AN3-12A		68 - 6	AN310-3		72 -38	AN345-416		85B- 5
AN3-13A		47 -36	AN310-3		72 -43	AN365-428		40 -14
AN3-13A		49 -36	AN310-3		72A- 1	AN365-428		40 -25
AN3-16A		68 -22	AN310-3		72A-41	AN4-10A		22 - 3A

152 & A152 Parts Catalog

PART NUMBER	FICHE AND FRAME	FIGURE AND INDEX NO.	PART NUMBER	FICHE AND FRAME	FIGURE AND INDEX NO.	PART NUMBER	FICHE AND FRAME	FIGURE AND INDEX NO.
AN4-10A		23 - 1	AN5-7A		56 - 8	AN515-8R14		52B-26
AN4-10A		25 - 59	AN500-416-10		66 - 37	AN515-8R14		88 - 6
AN4-10A		56 - 22	AN500A6-8		34 - 17	AN515-8R14		88 - 12
AN4-10A		71 - 6	AN500A8-5		80 - 23	AN515-8R16		52B-25
AN4-10A		71 - 13	AN500B8-6		57 - 10	AN515-8R20		78 - 47
AN4-10A		71 - 20	AN505-4R4		87 - 38	AN515-8R24		55 - 16
AN4-10A		72 - 30	AN507-10R7		59A- 3	AN515-8R26		88A-13
AN4-10A		72A-30	AN507-1032R10		38 - 12	AN515-8R4		33 - 37
AN4-10A		75 - 2	AN507-1032R10		41 - 2	AN515-8R4		38 - 27
AN4-10A		75 - 25	AN507-1032R14		67A-66	AN515-8R5		90A- 7
AN4-10A		75 - 34	AN507-632R14		3 - 41	AN515-8R6		3 - 30
AN4-10A		75A- 2	AN507-632R24		52 - 14	AN515-8R6		23 - 16
AN4-10A		75A-24	AN507-632R24		52A-15	AN515-8R6		38 - 36
AN4-10A		75A-33	AN507-632R24		52B-16	AN515-8R6		59 - 3
AN4-11A		70 - 43	AN507-632R8		3 - 35	AN515-8R6		59 - 8
AN4-11A		86 - 14	AN507-632R8		3 - 42	AN515-8R6		67 - 23
AN4-14A		47 - 2	AN507-640R4		77 - 2	AN515-8R6		67A-35
AN4-14A		47 - 12	AN507-832R5		41 - 12	AN515-8R6		89 - 23
AN4-14A		48 - 2	AN507-832R6		41 - 12	AN515-8R8		17 - 15
AN4-14A		48A- 2	AN507-832R7		82 - 2	AN515-8R8		20 - 10
AN4-14A		49 - 3	AN507-832R8		41 - 32	AN515-8R8		25 - 67
AN4-14A		49 - 12	AN507B632R12		52 - 51	AN515-8R8		27 - 70
AN4-14A		50 - 3	AN507B632R12		52A-51	AN515-8R8		27A-74
AN4-14A		50A- 3	AN507B632R12		52B-62	AN515-8R8		30 - 19
AN4-15A		47 - 11	AN507B832R14		57 - 2	AN515-8R8		51 - 17
AN4-15A		49 - 11	AN509-10R14		86 - 26	AN515-8R8		55 - 12
AN4-15A		73 - 41	AN509-10R15		41 - 7	AN515-8R8		67 - 42
AN4-22A		36 - 11	AN509-416R12		18 - 7	AN515-8R8		67A-52
AN4-25		70 - 29	AN509-416R12		19 - 7	AN515-8R8		74 - 33A
AN4-3A		86 - 2B	AN509-416R13		26 - 12	AN515-8R8		74 - 34
AN4-30		70 - 30	AN510B4R8		57 - 4	AN515-8R8		89 - 1
AN4-31		34 - 35	AN515-10R8		24 - 35	AN515-8R9		89 - 21
AN4-31		34 - 47	AN515-10R8		69 - 4	AN515-832R6		42 - 9
AN4-31A		70 - 1	AN515-10R8		69A- 3	AN515B6R10		52 - 44
AN4-36A		40 - 12	AN515-2R10		90 - 3	AN515B6R10		52A-29D
AN4-4A		30 - 32	AN515-2R10		90A- 3	AN515B6R10		52A-44
AN4-4A		30 - 94	AN515-2R12		90 - 7	AN515B6R10		52B-37
AN4-42A		15 - 3	AN515-2R14		90 - 7	AN515B6R10		52B-55
AN4-42A		15 - 8	AN515-2R16		90 - 7	AN515B6R12		52 - 40
AN4-43A		72 - 3	AN515-2R4		90 - 17	AN515B6R12		52 - 53
AN4-43A		72A- 3	AN515-3R6		91 - 4	AN515B6R12		52A-40
AN4-5A		18 - 1	AN515-4-9		73 - 39	AN515B6R12		52A-53
AN4-5A		18A- 1	AN515-4R12		74 - 6	AN515B6R12		52B-50
AN4-5A		19 - 1	AN515-4R5		52 - 69	AN515B6R12		52B-64
AN4-5A		19A- 1	AN515-4R5		52A-62	AN515B6R16		52 - 46
AN4-56A		73 - 33	AN515-4R6		23 - 16	AN515B6R16		52 - 50
AN4-6A		22 - 1	AN515-4R7		90 - 29	AN515B6R16		52A-46
AN4-6A		22 - 3	AN515-4R7		90A-15	AN515B6R16		52A-50
AN4-6A		56 - 36	AN515-6R10		52 - 37	AN515B6R16		52B-57
AN4-6A		62 - 13	AN515-6R10		52A-37	AN515B6R16		52B-61
AN4-60A		16 - 2	AN515-6R10		52B-47	AN515B6R16		78 - 1
AN4-60A		73 - 25	AN515-6R10		53 - 12	AN515B6R6		52 - 41
AN4-7A		18 - 2	AN515-6R10		53 - 13	AN515B6R6		52A-29E
AN4-7A		19 - 2	AN515-6R10		90 - 27	AN515B6R6		52A-41
AN4-7A		21A- 9	AN515-6R10		90A-13	AN515B6R6		52B-38
AN4H16A		18 - 2A	AN515-6R4		38 - 38	AN515B6R6		52B-51
AN4H16A		18A- 3	AN515-6R5		90 - 21	AN515B6R6		78 - 18
AN4H16A		19 - 2A	AN515-6R6		4 - 65	AN515B6R6		85 - 4
AN4H16A		19A- 3	AN515-6R6		5 - 74	AN515B6R6		85A- 4
AN4H21A		39 - 25	AN515-6R6		6 - 72	AN515B6R7		78 - 13
AN4H4		85B- 3	AN515-6R6		7 - 78	AN515B6R8		52 - 42
AN4022-1		81 - 86	AN515-6R6		38 - 34	AN515B6R8		52A-42
AN4022-1		81 - 86A	AN515-6R6		41 - 31	AN515B6R8		52B-52
AN5-12A		38 - 20	AN515-6R6		41 - 52	AN515B6R8		85 - 2
AN5-21A		56 - 19	AN515-6R6		90 - 12	AN515B6R8		85A- 2
AN5-22A		35 - 9	AN515-6R8		41 - 59	AN515B8R10		52 - 34
AN5-23A		55 - 20	AN515-6R8		67A-30	AN515B8R10		52 - 35
AN5-24A		33 - 3	AN515-6R8		85A- 48	AN515B8R10		52 - 52
AN5-33A		34 - 4	AN515-6R8		86 - 16	AN515B8R10		52A-34
AN5-37A		33 - 28	AN515-6R8		87 - 8	AN515B8R10		52A-35
AN5-37A		39 - 14	AN515-6R8		91 - 11	AN515B8R10		52A-52
AN5-43A		34 - 7	AN515-8R10		86 - 14A	AN515B8R10		52B-40
AN5-7A		10 - 7	AN515-8R12		38 - 39	AN515B8R10		52B-43
AN5-7A		11 - 6	AN515-8R12		78 - 37	AN515B8R10		52B-63

152 & A152 Parts Catalog

PART NUMBER	FICHE AND FRAME	FIGURE AND INDEX NO.	PART NUMBER	FICHE AND FRAME	FIGURE AND INDEX NO.	PART NUMBER	FICHE AND FRAME	FIGURE AND INDEX NO.
AN515B8R6		52 -33	AN525-10R6		6 -55B	AN742D3		62 -34
AN515B8R6		52A-33	AN525-10R6		7 -62B	AN742D3		62 -66
AN515B8R6		52B-42	AN525-10R6		59 - 5	AN742D3		62 -69
AN5156R10		52 -38	AN525-10R6		66 -39B	AN742D3		62 -69B
AN520-10R10		12 -17	AN525-10R6		66 -53	AN742D3		62 -75
AN520-10R10		13 -17	AN525-10R6		66 -69	AN742D3		62 -77
AN520-10R10		29 -31	AN525-10R8		25 -33	AN742D3		62 -78
AN520-10R10		44 -39	AN525-10R8		25 -34	AN742D3		62 -78B
AN520-10R10		85 -23	AN525-10R8		30 - 9	AN742D3		80 -20
AN520-10R10		85A-18	AN525-10R8		30 -10	AN742D3		81 -63
AN520-10R12		18 -28	AN525-10R8		61D- 3	AN742D4		8 -19
AN520-10R12		19 -31	AN525-416R9		61 -23A	AN742D4		9 -19
AN520-10R12		26 -20	AN525-8R8		21 -25	AN742D4		74 -30
AN520-10R12		33 -34	AN525-832-8		29 -39	AN742D4		74 -33A
AN520-10R12		38 -57	AN525-832R24		88 - 2	AN742D4		74 -34
AN520-10R12		69A- 3A	AN525-832R24		88 - 8	AN742D4		74 -35
AN520-10R12		87 - 5	AN525-832R6		41 -44	AN742D4		74 -35A
AN520-10R20		74 -39	AN525-832R6		66 - 4	AN742D4		74 -37
AN520-10R36		12 - 2	AN525-832R6		66 -10	AN742D4		74 -38
AN520-10R5		51 - 6	AN525-832R6		66 -16	AN742D4		77 -10
AN520-10R6		13 - 2	AN525-832R6		66 -18	AN742D5		74 -30
AN520-10R6		27 -32	AN525-832R6		66 -23	AN742D5		74 -33A
AN520-10R6		27A-36	AN525-832R6		66 -27	AN742D5		74 -34
AN520-10R6		68 -41	AN525-832R6		66 -34	AN742D5		74 -34A
AN520-10R6		75 -30	AN525-832R6		66 -39A	AN742D5		74 -35
AN520-10R6		75A-29	AN525-832R6		81 -37	AN742D5		74 -35A
AN520-10R6		86 -19	AN525-832R7		42 -15	AN742D5		74 -37
AN520-10R7		3 -50	AN525-832R7		60 - 5	AN742D5		74 -38
AN520-10R7		21 -17	AN525-832R7		66 -11	AN742D7		62 -27
AN520-10R7		21A-18	AN525-832R7		66 -50	AN742D8		62 -16
AN520-10R7		26 -19	AN525-832R7		66 -55	AN742D8		79 - 4
AN520-10R7		26 -21	AN525-832R7		66 -63	AN8-17A		17 - 2
AN520-10R7		26 -22	AN525-832R7		66 -67	AN8-23A		3 - 1
AN520-10R7		31 - 4	AN525-832R7		66 -79	AN8-25A		17 - 3
AN520-10R7		31 -12	AN525-832R8		21A-28	AN815-3D		80 -11
AN520-10R7		68 -19	AN525-832R8		23 -23	AN815-6D		81 -23
AN520-10R8		3 -21	AN525-832R8		32 - 9	AN815-6D		81 -49
AN520-10R8		12 -28	AN525-832R8		61 -23B	AN816-4D		85 -16
AN520-10R8		13 -29	AN525-832R8		61A-24	AN8160-6D		85 -18
AN520-10R8		27 -65B	AN535-2-3		24 -10	AN824-2D		81 -79
AN520-10R8		27A-67	AN565B2H3		53 - 3	AN824-2D		81 -79A
AN520-10R8		28 -29	AN565B428H4		73 -43	AN824-6D		81 -12
AN520-10R8		48A-48	AN565D2H3		90 -19	AN824-6D		81 -16
AN520-10R8		50A-49	AN565D6H3		69 -11	AN832-2		27 -62
AN520-10R8		62 -27	AN565D6H3		69A-13	AN832-2		27A-61
AN520-10R8		62 -35	AN6-13A		38 -20	AN832-2D		81 -76
AN520-10R8		63A-13	AN6-15A		73 -34	AN833-3D		38 - 7
AN520-10R8		74 -34A	AN6-23A		62 - 2	AN833-3D		80 -14
AN520-10R8		74 -35	AN6-25A		62 - 2	AN833-6D		81 -33
AN520-10R8		74 -35A	AN6-6A		38 -51	AN834-6D		81 -42
AN520-10R8		81 -22	AN6227B26		34 -15	AN837-6D		81 -26
AN520-10R8		81 -45	AN6227B32		34 -24	AN900-10		62 -43A
AN520-10R8		81 -64	AN6227B5		20 -12	AN901-5A		34 -18
AN520-10R8		86 -34	AN6227B5		34 -13	AN911-1D		77 -24
AN520-10R8		87 - 5	AN6227B6		37 - 3	AN912-2		63A- 7
AN520-416R12		86 -14	AN6230B2		39 -22	AN912-2		63A-17
AN520-6R8		85B-24	AN6230B2		40 -21	AN912-2D		81 -72A
AN520-8R6		87 -27	AN6230B3		34 -19	AN916-1D		77 -23
AN520-8R7		87 -29	AN6230B6		34 -22	AN916-1D		80 - 4
AN520-8R8		74 -37	AN7-25A		3 - 4	AN921-3D		38 -18A
AN525-10R10		30 -80	AN7-34A		62 - 9	AN921-3D		80 - 4A
AN525-10R10		38 -43	AN7-42A		86A- 4	AN924-10		85 -32
AN525-10R10		38 -49	AN7-74		33 -18	AN924-10D		85A-27
AN525-10R10		41 - 2	AN735D18		38 -30	AN924-2		27 -62
AN525-10R11		4 -49A	AN735D24		38 - 9	AN924-2		27A-61
AN525-10R11		5 -58A	AN737TW58		62 -41D	AN924-2D		81 -76
AN525-10R11		6 -55A	AN742D12		62 -27	AN924-3		27 -63
AN525-10R11		7 -62A	AN742D12		63A-11	AN924-3		27A-62
AN525-10R12		30 -80	AN742D13		18 -27	AN924-3D		38 -18B
AN525-10R14		57 -17	AN742D13		18 -27A	AN924-3D		80 - 3A
AN525-10R14		57 -22	AN742D13		18A-24	AN924-3D		80 - 8B
AN525-10R16		44 -20	AN742D13		19 -30	AN924-3D		80 -15
AN525-10R6		4 -49B	AN742D13		19 -30A	AN924-3D		84 - 3
AN525-10R6		5 -58B	AN742D13		19A-24	AN924-6		81 -19

152 & A152 Parts Catalog

PART NUMBER	FICHE AND FRAME	FIGURE AND INDEX NO.	PART NUMBER	FICHE AND FRAME	FIGURE AND INDEX NO.	PART NUMBER	FICHE AND FRAME	FIGURE AND INDEX NO.
AN924-6D		12 - 9	AN960-10		45A-30	AN960-10L		76 -20
AN924-6D		13 - 9	AN960-10		45A-32	AN960-10L		81 -31
AN924-6D		81 -26	AN960-10		47 -37	AN960-10L		86 -19
AN924-6D		81 -34	AN960-10		48A-54	AN960-10L		86 -35
AN929-6		81 -46	AN960-10		49 -37	AN960-10L		74 -55
AN936A4		73 -39	AN960-10		50A-55	AN960-1416L		85 -33
AN936A4		74 - 7	AN960-10		62 -18	AN960-4		41 -42
AN936A4		90 -31	AN960-10		62 -27	AN960-4		87 -38
AN936A4		90A-17	AN960-10		62 -32	AN960-4L		41 -13
AN936A416		57 -12	AN960-10		62 -50	AN960-4L		47 - 3
AN936A416		62 -82	AN960-10		62 -56	AN960-4L		48 -35
AN936A416		66 -39	AN960-10		62 -66	AN960-4L		48 -41
AN936A416		86A- 9	AN960-10		62 -73	AN960-4L		48 -51
AN936A6		52 -15	AN960-10		62 -75	AN960-4L		48A-35
AN936A6		52 -53	AN960-10		63A- 3	AN960-4L		48A-41
AN936A6		52 -57	AN960-10		66 -43	AN960-4L		49 - 5
AN936A6		52 -63	AN960-10		66 -83	AN960-4L		50 - 5
AN936A6		52A-16	AN960-10		67 - 3	AN960-4L		50 -36
AN936A6		52A-53	AN960-10		67 - 9	AN960-4L		50 -42
AN936A6		52A-58	AN960-10		67A- 3	AN960-4L		50 -52
AN936A6		52A-65	AN960-10		67A- 9	AN960-4L		50A- 5
AN936A6		52B-17	AN960-10		68 - 6	AN960-4L		50A-36
AN936A6		52B-64	AN960-10		69 - 5	AN960-4L		50A-42
AN936A6		52B-69	AN960-10		69A- 4	AN960-4L		67 -27
AN936A6		52B-74	AN960-10		70 - 9A	AN960-4L		67A-39
AN936A6		78 -19	AN960-10		70 -14A	AN960-416		21A-10
AN936A6B		52 -50	AN960-10		72 -23	AN960-416		22 - 1
AN936A6B		52A-29D	AN960-10		72A-23	AN960-416		22 - 3A
AN936A6B		52A-29E	AN960-10		73 - 8	AN960-416		30 -33
AN936A6B		52A-40B	AN960-10		73 -16	AN960-416		30 -95
AN936A6B		52A-50	AN960-10		73 -30	AN960-416		36 -12
AN936A6B		52B-37	AN960-10		74 -16	AN960-416		40 -13
AN936A6B		52B-38	AN960-10		74 -28	AN960-416		40 -23
AN936A6B		52B-61	AN960-10		74 -32	AN960-416		45 -26
AN936A6B		78 - 1	AN960-10		74 -34A	AN960-416		45A-30
AN936A8		33 -37	AN960-10		74 -35	AN960-416		47 - 2
AN936A8		38 -28	AN960-10		74 -41	AN960-416		48 - 2
AN936A8		52 -21	AN960-10		76 -19	AN960-416		48 -15
AN936A8		52 -34	AN960-10		76 -31	AN960-416		48 -30
AN936A8		52 -35	AN960-10		81 -26	AN960-416		48 -58
AN936A8		52 -52	AN960-10		81 -59	AN960-416		48A- 2
AN936A8		52 -69	AN960-10		81 -61	AN960-416		48A-15
AN936A8		52A-22	AN960-10		85B-22	AN960-416		48A-30
AN936A8		52A-22	AN960-10		86 - 7A	AN960-416		49 - 3
AN936A8		52A-34	AN960-10		87 -35	AN960-416		50 - 3
AN936A8		52A-35	AN960-10L		26 - 7	AN960-416		50 -16
AN936A8		52A-52	AN960-10L		28 - 2	AN960-416		50 -31
AN936A8		52A-62	AN960-10L		29 - 3	AN960-416		50 -59
AN936A8		52B-23	AN960-10L		30 - 1	AN960-416		50A- 3
AN936A8		52B-40	AN960-10L		30 -80	AN960-416		50A-16
AN936A8		52B-43	AN960-10L		34 -54	AN960-416		50A-31
AN936A8		52B-63	AN960-10L		34 -61	AN960-416		52 -31
AN936A8		67 -43	AN960-10L		41 -37	AN960-416		62 -14
AN936A8		67A-53	AN960-10L		48 -47	AN960-416		62 -38
AN936A8		81 -38	AN960-10L		48A-49	AN960-416		62 -64
AN93688		42 - 9	AN960-10L		48A-62	AN960-416		66 -38
AN944-101A		34 -33	AN960-10L		50 -48	AN960-416		70 -45
AN944-101A		34 -42	AN960-10L		50A-50	AN960-416		71 -21
AN960-D4		74 - 7B	AN960-10L		50A-63	AN960-416		72 - 5
AN960-10		15 -12	AN960-10L		57 -18	AN960-416		72A- 5
AN960-10		16 -11	AN960-10L		62 -59A	AN960-416		81 -67
AN960-10		18 -29A	AN960-10L		62 -72	AN960-416		86 - 1B
AN960-10		18A-26	AN960-10L		66 -39B	AN960-416		86 - 2B
AN960-10		19 -32A	AN960-10L		66 -53	AN960-416		86 -14
AN960-10		19A-26	AN960-10L		66 -61	AN960-416		86A-10
AN960-10		21 - 4	AN960-10L		66 -70	AN960-416		56 -12
AN960-10		21 - 4A	AN960-10L		67 - 4	AN960-416L		18 - 3
AN960-10		21 - 8	AN960-10L		67A- 4	AN960-416L		18A- 4
AN960-10		21A- 3	AN960-10L		70 -22	AN960-416L		19 - 3
AN960-10		22 -24	AN960-10L		70 -26	AN960-416L		19A- 4
AN960-10		33 -34	AN960-10L		72 -31	AN960-416L		23 - 3
AN960-10		38 -57	AN960-10L		72A-31	AN960-416L		34 -38
AN960-10		45 -26	AN960-10L		74 -27	AN960-416L		34 -50
AN960-10		45 -28	AN960-10L		74 -45	AN960-416L		39 -19

152 & A152 Parts Catalog

PART NUMBER	FICHE AND FRAME	FIGURE AND INDEX NO.	PART NUMBER	FICHE AND FRAME	FIGURE AND INDEX NO.	PART NUMBER	FICHE AND FRAME	FIGURE AND INDEX NO.
AN960-416L		39 -26	AN960-8L		90A- 8	CM2692-12R3S		87 -13
AN960-416L		40 -23	AN960-816		3 - 2	CM2692-20-1S		16 -39
AN960-416L		40 -26	AN960-816		17 - 5	CM2692-28-1B		5 -72
AN960-416L		47 -13	AN960-816		70 -11	CM2692-28-1B		7 -76
AN960-416L		48 -62	AN960-816		70 -16	CM2692-28-1S		4 -62
AN960-416L		49 -13	AN960-816L		3 - 1A	CM2692-28-1S		6 -70
AN960-416L		50 -63	AN960-816L		70 -26A	CM2692-32-1S		30 -82
AN960-416L		56 -23	AN960C4		41 -15	CM2791-1		61A-30
AN960-416L		56 -27	AN960C716		33 -19	CM2791-1		61B-34
AN960-416L		58 -11	AN960C8		41 - 9	CM2791-1		61C-34
AN960-416L		70 - 3	AN960D10		57 - 8	CM2919-2		1 -59
AN960-416L		72 - 4	AN960D10L		12 -17	CM2919-3		1 -59
AN960-416L		72A- 4	AN960D10L		13 -17	CM2919-4		1 -59
AN960-416L		76 - 2	AN960D10L		58 - 3	CM3589-15		53 -15
AN960-516		10 - 9	AN960D10L		58 - 9	CR163-4-8		15 -27
AN960-516		11 - 8	AN960D10L		76 -11	CR763-4		23 -13
AN960-516		17 -11	AN960D416		16 - 5	C0757660A		2 -47
AN960-516		33 - 4	AN960D416		73 -25	C1C2		1 - 1
AN960-516		35 -10	AN960PD10L		85 -24	C109		33 -11
AN960-516		39 -15	AN960PD10L		85A-19	C156001-0104		3 -26
AN960-516		48 -22A	AN960PD1416L		85A-28	C156001-0104		12 -27
AN960-516		48A-23	AN960PD2		23 -14	C156001-0104		13 -28
AN960-516		50 -23A	AN960PD4		8 -13A	C156003-0101		12 -25
AN960-516		50A-24	AN960PD4		9 -14A	C156003-0101		13 -26
AN960-516		86A-13	AN960PD416		85B-11	C156004-0101		12 -23
AN960-516		86A-16	AN970-3		58 - 3A	C156004-0101		13 -24
AN960-516L		31 -18B	AN970-3		72 -22	C161001-0501		60 - 1
AN960-516L		33 -29	AN970-3		72A-22	C163001-0104		40 -
AN960-516L		38 - 2	AN970-3		85B-23	C163005-0101		39 - 2
AN960-516L		38 -16	AN970-3		91 - 7	C163005-0201		35 - 2
AN960-516L		38 -21	AN970-4		45 -25	C163006-0101		39 - 2
AN960-516L		39 -15	AN970-4		45A-29	C163030-0113		40 -14
AN960-516L		56 - 9	AN970-4		56 -14	C163032-0110		39 -16
AN960-6		67A-30	AN970-7		33 -25	C163033-0101		39 -16
AN960-6L		52 -37	A1257A		3 -36	C165008-0101		85B- 2
AN960-6L		52A-37	A1280-2		3 -38	C17312-1		89 - 4
AN960-6L		52B-47	A1280-3		3 -38	C17313		89 - 7
AN960-6L		67 -27	A1633-47		39 -29A	C17325		89 - 2
AN960-6L		67A-39	A1636-23		35 - 3	C17326		89 - 5
AN960-6L		86 -22	A1636-24		39 -10	C17330		89 - 3
AN960-6L		90 -22	A1663-022-1		41 -23	C17331-1		89 - 6
AN960-6L		90 -27	A1793-623		27 -18	C253001-0101		41 -49
AN960-6L		90A-13	A1793-623		27A-19	C262003-0101		39 - 1
AN960-616		27 -63	A2109-3		23 -19	C262003-0101		40 -30
AN960-616		27A-62	A2513-78		60 - 2	C262003-0102		35 - 1
AN960-616		38 -53	A30010		39 - 8	C262003-0102		36 - 1
AN960-616		56 - 4	A30011		39 -12	C262003-0103		39 - 1
AN960-616		60 - 3	A30013		39 -11	C262006-0102		39 - 1
AN960-616		62 - 4	A30014		39 - 9	C262006-0102		40 -30
AN960-616		73 -35	A30015		39 - 7	C262023-0101		35 - 2
AN960-616		84 - 4	A30023		39 -18	C262023-0101		36 - 2
AN960-616L		38 -21	A30030		39 -30	C262023-0102		39 - 2
AN960-616L		38 -52	A30040		39 -32	C262023-0102		40 -31
AN960-716		3 - 6	A30047		35 - 5	C262026-0101		39 - 2
AN960-716		62 -10	A30048		35 - 4	C262026-0101		40 -31
AN960-716L		33 -24	A30078-1		35 - 8	C291502-0106		52 -74
AN960-716L		80 -16	A30078-2		35 - 6	C291502-0106		52A-73
AN960-8		25 -36	A30079-1		39 - 5	C291502-0106		52B-83
AN960-8		25 -41	A30079-2		39 - 6	C292501-0104		53 - 2
AN960-8		25 -67	A30085		39 -31	C294502-0201		85 -28
AN960-8		30 -20	A30087		39 -24	C294502-0201		85A-23
AN960-8		51 -18	A30087		39 -28	C294505-0105		84 -13
AN960-8		66 - 5	A30169		39 -30	C294510-0201		62 -92
AN960-8		66 -12	A4513-1		23 -18	C294510-0201		63 - 2
AN960-8		66 -19	A936A616		90 -14A	C30019		39 -17
AN960-8		66 -34	B30022		39 -21	C301001-0211		73 -39
AN960-8		66 -39A	B30024		39 -27	C301002-0104		73 -37
AN960-8		74 -33A	B30026		39 -24	C301002-0110		73 -33
AN960-8		74 -34	B30026		39 -28	C301002-0113		73 -38
AN960-8		74 -37	B30027		39 -23	C30598		35 - 7
AN960-8		89 -19	B30649		39 -29	C30605		39 - 4
AN960-8L		29 -39	B4416D		34 -33	C30612		39 - 3
AN960-8L		32 - 9	B610		73 -33	C30615-1		39 -13
AN960-8L		53 -12	CA5		53 -12	C30762		39 -17

152 & A152 Parts Catalog

PART NUMBER	FICHE AND FRAME	FIGURE AND INDEX NO.	PART NUMBER	FICHE AND FRAME	FIGURE AND INDEX NO.	PART NUMBER	FICHE AND FRAME	FIGURE AND INDEX NO.
C4189		76 -13	C661071-0101		52 -38	C668020-0120		52A-52
C4189		76 -14	C661071-0101		52A-38	C668020-0120		52B-63
C421001-0101		59A- 1	C661071-0101		52B-48	C668020-0220		52A-52
C421001-0102		59A- 2	C661071-0102		52 -38	C668501-0204		52A-29D
C431003-0101		85 -35	C661071-0102		52A-38	C668501-0204		52B-37
C431003-0101		85A-30	C661071-0102		52B-48	C668501-0206		52A-29D
C431003-0102		85B- 1	C661071-0102		78 - 1	C668501-0206		52B-37
C431003-0104		85 -35	C661075-0101		85 - 1	C668501-0213		52A-29D
C431003-0104		85A-30	C661075-0101		85A- 1	C668501-0213		52B-37
C431003-0301		85B- 1	C661075-0101		52 -42	C668507-0101		55 - 2
C431003-0302		85 -35	C661075-0101		52A-42	C668509-0101		52 -43
C431003-0302		85A-30	C661075-0101		52B-52	C668509-0101		52A-43
C482001-0202		85 -34	C661075-0103		85 - 1	C668509-0101		52B-53
C482001-0202		85A-29	C661075-0103		85A- 1	C668509-0101		85 -22
C482001-0401		85 -31	C661075-0103		52 -42	C668509-0101		85A-17
C482001-0401		85A-26	C661075-0103		52A-42	C669511-0101		52 -55
C592001-0201		59 - 1	C661075-0103		52B-52	C669511-0101		52A-56
C593003-0101		86 -15	C661075-0104		85 - 1	C669512-0102		52 -61
C593003-0103		86 -15	C661075-0104		85A- 1	C669512-0102		52A-63
C594502-0102		89 -18	C661075-0104		52 -42	C669535-0101		52B-72
C611002-0105		63 - 7	C661075-0104		52A-42	C669535-0101	e	52A-63A
C611002-0105		86 -14	C661075-0104		52B-52	C669537-0104		52A-56A
C611004-0101		63 - 7	C661075-0106		85 - 1	C669537-0104		52B-67
C611004-0101		86 -14	C661075-0106		85A- 1	C669537-0105		52A-56A
C611004-0102		86 -14	C661075-0106		52 -42	C669537-0105		52B-67
C611005-0101		63 - 7	C661075-0106		52A-42	C669564-0101	e	52A-63A
C611005-0101		86 -14	C661075-0106		52B-52	C7358-014		88A- 4
C611005-0102		63 - 7	C661075-0108		85 - 1	C744001-0101	e	78 -36
C611005-0103		86 -14	C661075-0108		85A- 1	C744001-0101	e	78 -46
C611503-0102		63 - 6	C661075-0108		52 -42	DEV041839-1		61 -33
C611503-0102		86A- 1	C661075-0108		52A-42	DEV041839-2		61 -33
C614001-0105		86 - 1	C661075-0108		52B-52	DEV041839-3		61 -33
C614001-0106		86 - 1	C661076-0101	e	52 -41	DEV041843-1		12 -16
C614002-0101		86 - 1A	C661076-0101	e	85 - 3	DEV041843-2		13 -16
C614002-0102		86 - 1A	C661076-0101	e	52A-41	DEV041878-1		48A-78
C621001-0102		89 -	C661076-0102	e	52 -41	DEV041878-1		49 -45
C622001-0102		23 -15	C661076-0102	e	52B-51	DEV041878-1		50A-79
C622001-0104		23 -17	C661076-0102	e	85 - 3	DEV042878-1		47 -45
C622001-0201		3 -34	C661076-0102	e	85A- 3	D30657		39 - 4
C622001-0202		3 -32	C661076-0102	e	52A-41	D30662		39 - 3
C622003-0105		2 -31	C661076-0103		52 -41	D366		57 - 6
C622006-0103		3 -43	C661076-0103		52A-41	D4023X.375		57 - 7
C622006-0105		3 -44	C661076-0103		52B-51	D6009		2 -38
C622006-0108		3 -45	C661076-0103		85A- 3	D6010		2 -38
C622008-0102		3 -50	C661076-0103	e	85 - 3	D6026		2 -38
C660501-0102		57 - 1	C661076-0105		52 -41	D6027		2 -38
C661003-0504		52 -50	C661076-0105		52A-41	D6042		2 -38
C661003-0504		52A-50	C661076-0105		52B-51	D6043		2 -38
C661003-0505		52 -50	C661076-0105		85 - 3	D6063		2 -38
C661003-0505		52A-50	C661076-0105		85A- 3	D6064		2 -38
C661003-0506	e	52 -50	C661076-0107		52 -41	D6081		2 -38
C661003-0506	e	52B-61	C661076-0107		52A-41	D6082		2 -38
C661003-0506	e	52A-50	C661076-0107		85 - 3	D6103		2A-20
C661003-0507		52A-50	C661076-0107		85A- 3	D6104		2A-20
C661003-0507		52B-61	C661076-0107	e	52B-51	D6123		2A-20
C661015-0102		52B-40	C661076-0108		52A-41	D6124		2A-20
C661015-0102	e	52 -34	C661076-0108		52B-51	D6141		2A-20
C661015-0102	e	52A-34	C661076-0108		85A- 3	D6142		2A-20
C661025-0102		52 -38	C661080-0101		52 -51	EC1239AB		1 -10
C661025-0102		52A-38	C661080-0101		52A-51	EC1300L		1 - 2
C661025-0102		52B-48	C661080-0101		52B-62	EC1675A-B		1 -14A
C661025-0102		78 - 1	C664502-0101		52 -53	EC22168/A		1 -14D
C661064-0107		52 -44	C664503-0101		52 -53	EC776		1 -12
C661064-0107		52A-44	C664503-0101		52A-53	EL099001-060		65 -
C661064-0107		52B-55	C664503-0101		52B-64	EL099001-271		65 - 5
C661064-0216	e	52 -44	C664508-0101		52 -40	EL099001-716		65 - 1
C661064-0216	e	52B-55	C664508-0101		52A-40	EL099001-717		65 - 2
C661064-0216	e	52A-44	C664508-0102		52A-40	HHH-A		52 -69
C661065-0105	e	52 -45	C664508-0102		52B-50	HHH-A		52A-62
C661065-0105	e	52B-56	C664511-0102		52A-40A	HN5P-54-1-1		45A- 9
C661065-0105	e	52A-45	C664511-0102		52B-50	H323-3-1-1		45 - 7
C661065-0216		52 -45	C668002-0301		12 -16	H559-3-1		45 - 7
C661065-0216		52A-45	C668002-0302		13 -16	H559-4-1		45A- 9
C661065-0216		52B-56	C668020-0119		52 -52	ID1757		91 -10

152 & A152 Parts Catalog

PART NUMBER	FICHE AND FRAME	FIGURE AND INDEX NO.	PART NUMBER	FICHE AND FRAME	FIGURE AND INDEX NO.	PART NUMBER	FICHE AND FRAME	FIGURE AND INDEX NO.
J7402-1		62 - 7	MS20364-1032C		74 -55	MS20392-3C33		50 -63
KM610-064		61 -14	MS20364-428A		39 -20	MS20392-3C39		48 -61
KM610-064		61A-14	MS20364-624C		33 - 7	MS20392-3C39		50 -62
KM610-064		61B-14	MS20364-832C		66 -13	MS20435M4-14		33 - 8
KM610-064		61C-14	MS20364-832C		66 -20	MS20470AD10-31		17 - 9
KM610-64		33 -32	MS20364-832C		66 -34	MS20822-20		84 - 9
KM610-64		38 -59	MS20364-832C		66 -39A	MS20822-30		38 -18
K375-125		90 -24	MS20365-1032C		27 -32	MS20822-30		38 -18
K375-125		90A-10	MS20365-1032C		27A-36	MS20822-6-6		63A- 9
LOCTITE 5381		1 -14C	MS20365-1032C		31 -12	MS20822-6-60		81 -69
LOCTITE 8721		1 -14E	MS20365-1032C		62 -19	MS20822-60		63A-16
LW-15483		63 - 5	MS20365-1032C		62 -27	MS20823-60		63A-18
LW-15496		63 - 3	MS20365-1032C		62 -51	MS20823-60		81 -71
LW-15636		63 - 8	MS20365-1032C		62 -66	MS20823-60		81 -72
LW-16073		63 - 3	MS20365-1032C		62 -74	MS20825-60		63A- 6
LW-16207		63 - 5	MS20365-1032C		62 -75	MS20826-60		85 -17
LW-16364		63 - 8	MS20365-1032C		63A-14	MS20832-30		80 - 8A
LW-16370		63 - 8	MS20365-1032C		64 - 8	MS20913-10		85 -19
LW-16370		63 - 9	MS20365-1032C		64A- 8	MS21042L3		69A- 5A
LW-16595		63 - 8	MS20365-1032C		64B- 8	MS21042L3		86A- 5
LW-16595		63 - 9	MS20365-1032C		65 - 8	MS21042L4		15 - 5
LW-16677		63 - 3	MS20365-1032C		66 -83	MS21042L4		15 -10
LW-16907		63 - 3	MS20365-1032C		67 - 5	MS21042L4		16 - 6
LW10729		86A-14	MS20365-1032C		67A- 5	MS21042L4		18 - 4
MS15002-3		34 -58	MS20365-1032C		68 -19	MS21042L4		19 - 4
MS15584-16		87 -25	MS20365-1032C		68 -37	MS21042L4		21A-11
MS16562-17		62 -85	MS20365-1032C		76 -37	MS21042L4		22 - 2
MS16562-193		87 -34	MS20365-428C		36 -13	MS21042L4		22 - 3A
MS16562-39		62 - 8	MS20365-428C		62 -15	MS21042L4		23 - 4
MS16624-1081		20 - 5	MS20365-428C		62 -39	MS21042L4		25 -60
MS16624-1206		38 - 6	MS20365-428C		81 -68	MS21042L4		26 -13
MS16624-1275		34 -32	MS20365-524A		35 -11	MS21042L4		30 -34
MS16625-1118		37 - 2	MS20365-524A		39 -16	MS21042L4		30 -96
MS20074-03-03		81 -60	MS20365-624C		62 - 5	MS21042L4		34 -14
MS20074-03-04		81 -58	MS20365-720C		3 - 7	MS21042L4		45 -27
MS20074-04-13		86A- 8	MS20365-720C		62 -11	MS21042L4		45A-31
MS20074-05-05		86A-15	MS20365-720C		86A- 5	MS21042L4		47 - 2
MS20074-05-07		86A-12	MS20365-820C		3 - 3	MS21042L4		47 -14
MS20220-2		72 -10	MS20365-820C		17 - 6	MS21042L4		48 - 2
MS20220-2		72 -17	MS20392-1-7		67 -27	MS21042L4		48A- 2
MS20220-2		72A-10	MS20392-1C11		47 -23	MS21042L4		49 - 3
MS20220-2		72A-17	MS20392-1C11		48 -37	MS21042L4		49 -14
MS20220-2		73 -14	MS20392-1C11		48 -49	MS21042L4		50 - 3
MS20230-A2		8 - 5	MS20392-1C11		48A-37	MS21042L4		50A- 3
MS20230-A2		8 - 6	MS20392-1C11		49 -23	MS21042L4		52 -31
MS20230-A2		8 - 6B	MS20392-1C11		50 -38	MS21042L4		56 -38
MS20230-A2		8 - 8	MS20392-1C11		50 -50	MS21042L4		58 -11
MS20230-A2		8 -10	MS20392-1C11		50A-38	MS21042L4		62 -65
MS20230-A2		8 -27	MS20392-1C13		41 -42	MS21042L4		70 - 2
MS20230-A2		8 -28	MS20392-1C15		48 -47	MS21042L4		70 -44
MS20230-A2		8 -29	MS20392-1C15		50 -48	MS21042L4		71 - 7
MS20230-A2		8 -30	MS20392-1C23		41 -15	MS21042L4		71 -14
MS20230-A2		8 -31	MS20392-1C23		41 -40	MS21042L4		71 -22
MS20230-A2		8 -36	MS20392-1C35		47 -20	MS21042L4		72 - 7
MS20230-A2		8 -37	MS20392-1C35		49 -20	MS21042L4		72 -32
MS20230A2		9 - 5	MS20392-1C47		48 -34	MS21042L4		72A- 7
MS20230A2		9 - 6A	MS20392-1C47		48A-34	MS21042L4		72A-32
MS20230A2		9 - 8	MS20392-1C47		50 -35	MS21042L4		73 -26
MS20230A2		9 -10	MS20392-1C47		50A-35	MS21042L4		73 -33
MS20230A2		9 -10A	MS20392-1C67		42 -19	MS21042L4		75 - 3
MS20230A2		9 -27	MS20392-1C7		41 -13	MS21042L4		75 -26
MS20230A2		9 -33	MS20392-1C7		48 -50	MS21042L4		75 -35
MS20230A2		9 -40	MS20392-1C7		50 -51	MS21042L4		75A- 3
MS20253P2-44.13		21 -28	MS20392-1C7		67A-39	MS21042L4		75A-25
MS20253P2-44.13		21A-37	MS20392-1C9		73 - 3	MS21042L4		75A-34
MS20364-1032C		62 -36	MS20392-2C13		68 -12	MS21042L4		86A- 5
MS20364-1032C		62 -60	MS20392-2C15		68 -32	MS21042L4		56 -13
MS20364-1032C		66 -39B	MS20392-2C17		48A-61	MS21042L5		10 - 8
MS20364-1032C		66 -53	MS20392-2C17		50A-62	MS21042L5		11 - 7
MS20364-1032C		66 -71	MS20392-2C29		50A-54	MS21042L5		17 -12
MS20364-1032C		70 -21	MS20392-2C39		48A-53	MS21042L5		21 - 5A
MS20364-1032C		70 -25	MS20392-2C51		41 -36	MS21042L5		33 - 4
MS20364-1032C		81 -32	MS20392-2C7		74 -23	MS21042L5		33 -30
MS20364-1032C		81 -65	MS20392-3C33		48 -62	MS21042L5		34 - 5

152 & A152 Parts Catalog

PART NUMBER	FICHE AND FRAME	FIGURE AND INDEX NO.	PART NUMBER	FICHE AND FRAME	FIGURE AND INDEX NO.	PART NUMBER	FICHE AND FRAME	FIGURE AND INDEX NO.
MS21042L5		34 - 9	MS21044N3		47 -38	MS21919DG6		81 -51
MS21042L5		38 - 3	MS21044N3		47 -42	MS21919DG8		24 -29
MS21042L5		38 -17	MS21044N3		48 -66	MS21919DG8		24 -34
MS21042L5		38 -22	MS21044N3		48 -70	MS24585-1020		41 -10
MS21042L5		56 -20	MS21044N3		48A-71	MS24665-132		21 -42
MS21042L5		73 -42	MS21044N3		48A-75	MS24665-132		21A-48
MS21042L5		56 -10	MS21044N3		49 -38	MS24665-132		34 -56
MS21042L6		38 -22	MS21044N3		49 -42	MS24665-132		34 -65
MS21042L6		73 -36	MS21044N3		50 -32	MS24665-132		41 -13
MS21043-3		22 -24	MS21044N3		50 -67	MS24665-132		41 -15
MS21043-3		24 -30	MS21044N3		50 -71	MS24665-132		41 -38
MS21044N04		52 -69	MS21044N3		50A-32	MS24665-132		41 -41
MS21044N04		52A-62	MS21044N3		50A-72	MS24665-132		41 -42
MS21044N04		87 -38	MS21044N3		50A-76	MS24665-132		42 -20
MS21044N06		52 -37	MS21044N3		51 -14	MS24665-132		47 -21
MS21044N06		52A-37	MS21044N3		58 - 4	MS24665-132		47 -24
MS21044N06		52B-47	MS21044N3		58 -10	MS24665-132		48 -47
MS21044N06		86 -16	MS21044N3		59 - 6	MS24665-132		48A-55
MS21044N06		90 -27	MS21044N3		67 - 9	MS24665-132		48A-63
MS21044N06		90A-13	MS21044N3		67A- 9	MS24665-132		49 -21
MS21044N08		20 -11	MS21044N3		67A-72	MS24665-132		49 -24
MS21044N08		25 -36	MS21044N3		68 - 7	MS24665-132		50 -48
MS21044N08		25 -41	MS21044N3		68 -22	MS24665-132		50A-56
MS21044N08		25 -67	MS21044N3		68 -28	MS24665-132		50A-64
MS21044N08		29 -33	MS21044N3		70 -10	MS24665-132		62 -57A
MS21044N08		29 -39	MS21044N3		70 -15	MS24665-132		67 -27
MS21044N08		30 -21	MS21044N3		70 -49	MS24665-132		67A-39
MS21044N08		32 - 9	MS21044N3		72 -14	MS24665-132		68 -11
MS21044N08		41 -12	MS21044N3		72 -24	MS24665-132		68 -33
MS21044N08		51 -10	MS21044N3		72A-14	MS24665-132		70 -34
MS21044N08		51 -19	MS21044N3		72A-24	MS24665-132		71 - 4
MS21044N08		52 -33	MS21044N3		73 - 7	MS24665-132		72 - 1
MS21044N08		52A-33	MS21044N3		73 -12	MS24665-132		72 -33
MS21044N08		52B-42	MS21044N3		73 -21	MS24665-132		72A- 1
MS21044N08		59 - 4	MS21044N3		73 -31	MS24665-132		72A-33
MS21044N08		59 - 9	MS21044N3		74 -17	MS24665-132		73 - 9
MS21044N08		74 -33A	MS21044N3		74 -29	MS24665-132		73 -22
MS21044N08		74 -34	MS21044N3		74 -33	MS24665-132		75 -11
MS21044N08		74 -37	MS21044N3		74 -34A	MS24665-132		75A-11
MS21044N08		87 -31	MS21044N3		74 -35	MS24665-132		75A-11A
MS21044N08		89 -21	MS21044N3		74 -42	MS24665-132		83 -11
MS21044N3		12 - 3	MS21044N3		74 -53	MS24665-134		34 -40
MS21044N3		13 - 3	MS21044N3		75 -31	MS24665-134		34 -52
MS21044N3		15 -13	MS21044N3		75A-30	MS24665-134		48 -62
MS21044N3		15 -19	MS21044N3		76 -21	MS24665-134		50 -63
MS21044N3		16 - 9	MS21044N3		76 -32	MS24665-134		71 -24
MS21044N3		16 -20	MS21044N3		91 - 8	MS24665-134		71 -30
MS21044N3		21 - 5	MS21044N3		21 - 9	MS24665-134		72 -39
MS21044N3		21 - 5A	MS21044N4		48 -16	MS24665-134		72 -44
MS21044N3		21A- 4	MS21044N4		48 -31	MS24665-134		72A-42
MS21044N3		21A- 7	MS21044N4		48 -59	MS24665-134		73 - 3
MS21044N3		24 -36	MS21044N4		48A-16	MS24665-134		74 -24
MS21044N3		26 - 8	MS21044N4		48A-31	MS24665-134		75 -22
MS21044N3		26 -18	MS21044N4		50 -17	MS24665-134		75 -32
MS21044N3		26 -19	MS21044N4		50 -60	MS24665-134		75A-21
MS21044N3		26 -20	MS21044N4		50A-17	MS24665-134		75A-31
MS21044N3		26 -21	MS21044N5		31 -18C	MS24665-136		72 -16
MS21044N3		26 -22	MS21045L3		62 -33	MS24665-136		72A-16
MS21044N3		28 - 2	MS21045L3		66 -42	MS24665-138		76 -23
MS21044N3		28 -29	MS21045L3		85 -25	MS24665-143		72 -25
MS21044N3		29 - 3	MS21045L3		85A-20	MS24665-143		72A-25
MS21044N3		29 - 8	MS21045L3		86 -27	MS24665-170		48 -52
MS21044N3		29 -31	MS21045L3		86 -36	MS24665-170		50 -53
MS21044N3		30 - 1	MS21047-08		89 -14	MS24665-172		48 -36
MS21044N3		30 -80	MS21073L3		28 -16	MS24665-172		48 -42
MS21044N3		31 - 4	MS21073L3		29 -19	MS24665-172		48A-36
MS21044N3		33 - 6	MS21209F1-10		31 -15A	MS24665-172		48A-42
MS21044N3		33 -34	MS21919DG12		86 - 3K	MS24665-172		50 -37
MS21044N3		38 -10	MS21919DG24		81 -84	MS24665-172		50 -43
MS21044N3		38 -14	MS21919DG3		80 -13A	MS24665-172		50A-37
MS21044N3		38 -32	MS21919DG40		67A-26	MS24665-172		50A-43
MS21044N3		38 -57	MS21919DG6		81 - 7	MS24665-281		68 - 3
MS21044N3		45 -27	MS21919DG6		81 -22	MS24665-283		71 -23
MS21044N3		45A-31	MS21919DG6		81 -48	MS24665-285		33 -21

152 & A152 Parts Catalog

PART NUMBER	FICHE AND FRAME	FIGURE AND INDEX NO.	PART NUMBER	FICHE AND FRAME	FIGURE AND INDEX NO.	PART NUMBER	FICHE AND FRAME	FIGURE AND INDEX NO.
MS24665-285		33 -27	MS35489-9		7 - 3A	NAS221-8		48 -69
MS24665-285		76 -24	MS35489-9		56 -19A	NAS221-8		48A-74
MS24665-351		38 -25	MS9025-02		62 -33	NAS221-8		49 -41
MS24665-355		76 -25	MS9068-136		55 - 4	NAS221-8		50 -70
MS24665-362		38 -61	MS9068-136		67A-73	NAS221-8		50A-75
MS24665-5		76 - 3	NAS-395-12-3		8 -19	NAS221-9		29 - 7
MS25082-20		90 -14B	NAS1067A08		23 -29	NAS221-9		38 -13
MS25082B2		52 -20	NAS1068A08		66 -56	NAS221-9		47 -41A
MS25082B2		52A-21	NAS1068A4		18 -11	NAS221-9		48A-74A
MS25082B2		52A-21	NAS1068A4		19 -11	NAS221-9		49 -41A
MS25171-1S		85B- 6	NAS1080C06		26 - 5	NAS221-9		50A-75A
MS25171-35		86 -32A	NAS1080C08		26 -11	NAS395-1-3		87 -23
MS25175-3S		86 -14A	NAS1080C08		26 -11	NAS395-10-3		67A-28
MS25231-1819		52A-40A	NAS1080C08		26 -11	NAS395-12-13		9 -19
MS25231-1819		52B-50	NAS1103-11		70 -24	NAS395-12-3		27 -19
MS25231-313		87 -20	NAS1103-12		70 -20	NAS395-12-3		27 -20A
MS25237-327		53A- 3	NAS1303-5		26 -17	NAS395-12-3		27A-20
MS25237-327		53A- 6	NAS1304-5		56 -16	NAS395-12-3		27A-24
MS25237-327		53A- 8	NAS1304-7		56 -16	NAS395-12-3		64 -11
MS25237-327		53A-10	NAS1305-13		21 - 3	NAS395-12-3		64A-11
MS25237-327		53B- 3	NAS1305-13D		21 - 3	NAS395-12-3		64B-11
MS25237-327		53B- 5	NAS1329A06K120		4 -68	NAS395-12-3		77 -10
MS25237-327		53B- 7	NAS1329A06K120		5 -76	NAS395-14-3		3 -25
MS25237-327		53B- 9	NAS1329A06K120		6 -75	NAS395-14-3		4 -20
MS25237-327		57 - 2	NAS1329A06K120		7 -81	NAS395-14-3		4 -59
MS25309-7512		3 -37	NAS1329A08-75		17 -16	NAS395-14-3		4 -61
MS27261KSP4		25 -62	NAS1426-6		26 - 5	NAS395-14-3		5 -29
MS27261KSP4		70 -40	NAS1428-6		26 -11	NAS395-14-3		5 -69
MS27975-3		71 -26	NAS1428-6		26 -11	NAS395-14-3		5 -71
MS28775-011		37 - 8	NAS1446-6		26 -11	NAS395-14-3		6 -27
MS28775-110		69 -18	NAS1448-6		26 -11	NAS395-14-3		6 -65
MS28775-110		69A-10	NAS1593-011		82 - 7	NAS395-14-3		6 -67
MS28775-213		37 - 7	NAS1593-012		52 -74	NAS395-14-3		6 -68
MS28778-2		84 - 6	NAS1593-012		52A-73	NAS395-14-3		7 -33
MS28778-3		38 -18C	NAS1593-012		52B-83	NAS395-14-3		7 -73
MS28778-3		80 - 2A	NAS1593-016		82 - 3	NAS395-14-3		7 -75
MS28778-4		80 - 2	NAS1596-6		81 -35	NAS395-14-3		25 -45
MS29512-06		81 -19	NAS178-6-6		26 - 5	NAS395-14-3		25 -50
MS29513-011		81 -46D	NAS178-8-5		26 -11	NAS395-14-3		27 -23
MS29513-10		83 -15	NAS178-8-5		26 -11	NAS395-14-3		27A-27
MS29513-111		83 - 4	NAS178-8-5		26 -11	NAS395-14-3		31 -20
MS29513-12		14 - 2	NAS178-8-5		26 -11	NAS395-14-3		65 - 4
MS29513-138		83 - 5	NAS179-6		26 - 5	NAS395-14-3		77 - 8
MS3506-1		86 -25	NAS179-8		26 -11	NAS395-17-3		25 -47
MS35206-228		52A-40A	NAS179-8		26 -11	NAS395-17-3		27 -72
MS35206-228		52A-40B	NAS179-8		26 -11	NAS395-17-3		27A-76
MS35206-228		52B-50	NAS220-10		25 -67	NAS395-18-1		79 - 9
MS35333-40		85B- 4	NAS220-11		25 -41	NAS395-25-3		80 - 8
MS35478-307		23 -20	NAS220-12		3 -19	NAS395-3-3		87 - 3
MS35489-1		91 - 5	NAS220-6		3 -16	NAS395-3-3		87 -17
MS35489-1		91 - 9	NAS220-6		3 -16	NAS395-4-3		8 -12
MS35489-11		81 - 4	NAS220-6		25 -36	NAS395-4-3		9 -12
MS35489-14		28 -27	NAS220-6		89 -19	NAS395-5-3		41 -47
MS35489-14		30 -29	NAS220-8		3 -17	NAS395-5-3		79 - 6
MS35489-14		74 -36	NAS220-8		3 -20	NAS397-14		86 - 3E
MS35489-19		62 -44	NAS220-8		3 -20	NAS397-16		33 -12
MS35489-19		86 - 4	NAS220-9		3 -18	NAS397-22		67 -19
MS35489-20		25 -53	NAS220-9		25 -40	NAS397-8		85 -14
MS35489-20		81 -15	NAS221-10		45 -28	NAS42DD4-5		25 -26
MS35489-20		81 -40	NAS221-13		67A-67	NAS42HT6-8		68 -10
MS35489-33		90 -25	NAS221-14		45A-32	NAS42HT8-8		68 -10
MS35489-33		90A-11	NAS221-17		47 -47	NAS428-4-6		47 -15
MS35489-4		87 -19	NAS221-17		48 -74	NAS428-4-6		48 -17
MS35489-4		89 -22	NAS221-17		48A-80	NAS428-4-6		48A-17
MS35489-6		61 -39	NAS221-17		49 -47	NAS428-4-6		49 -15
MS35489-6		61A-46	NAS221-17		50 -75	NAS428-4-6		50 -18
MS35489-6		61B-44	NAS221-17		50A-81	NAS428-4-6		50A-18
MS35489-6		61C-42	NAS221-5		24 -31	NAS428H3-7		18 -12
MS35489-65		29 -27	NAS221-6		38 -10	NAS428H3-7		18 -49
MS35489-7		25 -53	NAS221-6		38 -31	NAS428H3-7		18A-46
MS35489-7		28 -25	NAS221-6		51 - 4	NAS428H3-7		19 -12
MS35489-7		80 -10	NAS221-7		25 -39	NAS428H3-7		19 -52
MS35489-72		29 -29	NAS221-8		15 -18	NAS428H3-7		19A-46
MS35489-9		5 - 3A	NAS221-8		47 -41	NAS428H3-7		31 -17

152 & A152 Parts Catalog

PART NUMBER	FICHE AND FRAME	FIGURE AND INDEX NO.	PART NUMBER	FICHE AND FRAME	FIGURE AND INDEX NO.	PART NUMBER	FICHE AND FRAME	FIGURE AND INDEX NO.
NAS43DD0-14		90 - 8	NAS446-1-1		52 -32	NAS563-11		74 -55
NAS43DD0-15		90 - 8	NAS446-1-1		52A-32	NAS620-10		87 -30
NAS43DD0-17		90 - 8	NAS446-1-1		52B-41	NAS620-8		87 -28
NAS43DD0-18		90 - 8	NAS446-2		52B-49	NAS620A416L		57 -12
NAS43DD0-19		90 - 8	NAS446-2-3		54 - 2	NAS680A06		5 -74
NAS43DD0-6		90 -30	NAS446-2-3		54A- 2	NAS680A06		6 -72
NAS43DD0-6		90A-16	NAS446-2-3		78 -25	NAS680A06		7 -78
NAS43DD0-9		90 - 4	NAS446-4-1		62 -69D	NAS680A06		28 -17
NAS43DD0-9		90A- 4	NAS446-4-3		3 -33	NAS680A06		29 -20
NAS43DD1-26		52 -53	NAS446-4-3		8 -16	NAS680A06		38 -41
NAS43DD1-26		52A-53	NAS446-4-3		9 -17	NAS680A06		52 - 9A
NAS43DD1-26		52B-64	NAS446-4-3		27 -73	NAS680A06		52A- 9
NAS43DD1-48		52A-64	NAS446-4-3		27A-77	NAS680A06		52B- 9
NAS43DD1-56		52 -56	NAS446-4-3		44 - 9	NAS680A06		67A-30
NAS43DD1-56		52 -62	NAS446-4-3		62 -33	NAS680A06K		41 -31
NAS43DD1-56		52A-57	NAS446-4-3		67 -31	NAS680A08		4 -10
NAS43DD1-56		52A-64	NAS446-4-3		71 -18	NAS680A08		4 -45
NAS43DD1-64		52A-57	NAS446-4-3		80 -13A	NAS680A08		5 -17
NAS43DD1-64		52A-64	NAS446-4-3		80 -20	NAS680A08		5 -54
NAS43DD1-64		52B-68	NAS446-4-3		80 -21	NAS680A08		6 - 4
NAS43DD1-64		52B-73	NAS446-4-3		81 -48	NAS680A08		6 -13
NAS43DD3-22		52 -52	NAS446-4-3		81 -51	NAS680A08		6 -14
NAS43DD3-22		52A-52	NAS446-4-3		86 -17	NAS680A08		6 -16
NAS43DD3-22		52B-24	NAS446-5-3		44 - 4	NAS680A08		6 -25
NAS43DD3-22		52B-63	NAS463WDD416		25 -36	NAS680A08		6 -51
NAS43DD3-23		80 -20	NAS464-3-22		34 -53	NAS680A08		7 -18
NAS43DD3-24		78 -48	NAS464P3-7		26 - 6	NAS680A08		7 -19
NAS43DD3-48		74 -40	NAS464P3A5		26 -17	NAS680A08		7 -22
NAS43DD3-5		67 -46	NAS464P3A7		22 -24	NAS680A08		7 -58
NAS43DD3-5		67A-56	NAS464P4A12		56 - 2	NAS680A08		8 -33
NAS43DD3-64		55 -17	NAS464P4A6		56 -26	NAS680A08		9 -35
NAS43DD3-9		25 -34	NAS464P4A8		56 - 2	NAS680A08		10 - 3
NAS43DD3-9		30 -10	NAS488-1-1		78 -21	NAS680A08		10 - 3
NAS43DD4-152		72 - 6	NAS488-1-3		88A- 9	NAS680A08		10 -23
NAS43DD4-152		72A- 6	NAS557-10A		25 -18	NAS680A08		11 -13
NAS43DD4-8		86 -14	NAS557-10A		27 -73	NAS680A08		11 -15
NAS43HT1-27		48 -40	NAS557-10A		27A-77	NAS680A08		11 -15
NAS43HT1-27		48A-40	NAS557-10A		86 -17	NAS680A08		11 -27
NAS43HT1-27		50 -41	NAS557-6A		27 -74	NAS680A08		27 -61
NAS43HT1-27		50A-41	NAS557-6A		27A-78	NAS680A08		27A-60
NAS43HT3-12		68 -13	NAS557-6A		81 -52	NAS680A08		31 - 8A
NAS43HT3-13		75 -20	NAS561-3-14		42 -13	NAS680A08		38 -36
NAS43HT3-13		75A-19	NAS561-3-8		42 -11	NAS680A08		55 -14
NAS43HT3-16		87 - 6	NAS561-3-8		48 -45	NAS680A08		55 -18
NAS43HT3-20		57 -19	NAS561-3-8		50 -46	NAS680A08		60 - 8
NAS43HT3-216		63A- 4	NAS561CF2-6		47 -25	NAS680A08		61 -30
NAS43HT3-29		74 -49	NAS561CF2-6		49 -25	NAS680A08		61 -35
NAS43HT3-39		41 - 7	NAS561C2-8		67 -13	NAS680A08		61 -35
NAS43HT3-44		72 -21	NAS561C2-8		67A-17	NAS680A08		61 -38
NAS43HT3-44		72A-21	NAS561C3-10		48 -20	NAS680A08		61 -47
NAS43HT3-6		51 -13	NAS561C3-10		50 -21	NAS680A08		61A-32
NAS43HT3-6		74 -26	NAS561C3-12		48A-20	NAS680A08		61A-41
NAS43HT3-6		74 -46	NAS561C3-12		50A-21	NAS680A08		61A-43
NAS43HT3-9		62 -48	NAS561C3-14		47 -31	NAS680A08		61A-54
NAS43HT4-112		48A-14	NAS561C3-14		48 -22	NAS680A08		61B-40
NAS43HT4-112		50A-15	NAS561C3-14		49 -31	NAS680A08		61B-40
NAS43HT4-12		56 -17	NAS561C3-16		50 -23	NAS680A08		66 -45
NAS43HT4-157		48A-27	NAS561C3-16		48A-22	NAS680A08		66 -58
NAS43HT4-157		50A-28	NAS561C3-16		50A-23	NAS680A08		66 -65
NAS43HT4-177		48A-12	NAS561P12-48		33 - 2	NAS680A08		66 -72
NAS43HT4-177		50A-13	NAS561P3-5		82 - 5	NAS680A08		85B-23
NAS43HT4-20		56 -37	NAS561P3-8		76 - 5	NAS680A08		89 -14
NAS43HT4-22		56 - 3	NAS561P4-10		34 -66	NAS680A08		4 -64
NAS43HT4-9		72 -37	NAS561P4-10		48A-56	NAS680A08K		5 - 4
NAS43HT4-9		72A-40	NAS561P4-10		50A-57	NAS680A08K		5 -67
NAS43HT4-96		48A-29	NAS561P4-12		48A-44	NAS680A08K		6 -69
NAS43HT4-96		50A-30	NAS561P4-12		50A-45	NAS680A08K		7 - 4
NAS43HT5-14		47 -28	NAS561P4-14		37 - 9	NAS680A08K		7 -71
NAS43HT5-14		49 -28	NAS561P4-14		48A-46	NAS680A08K		78 -38
NAS43HT5-14		74 -48	NAS561P4-14		48A-65	NAS680A08K		10 - 3A
NAS43HT5-24		47 -29	NAS561P4-14		50A-47	NAS680A3		10 -18A
NAS43HT5-24		49 -29	NAS561P4-14		50A-66	NAS680A3		11 -18
NAS43HT6-29		33 - 7	NAS561P6-14		48A-59	NAS680A3		11 -21A
NAS446-1-1		45A- 7	NAS561P6-14		50A-60			

152 & A152 Parts Catalog

PART NUMBER	FICHE AND FRAME	FIGURE AND INDEX NO.	PART NUMBER	FICHE AND FRAME	FIGURE AND INDEX NO.	PART NUMBER	FICHE AND FRAME	FIGURE AND INDEX NO.
NAS680A3		12 - 4	NAS684A08		61A-53	S1003-43A		68 -29
NAS680A3		13 - 4	NAS686A3		38 -46	S1003-65A		18 -35
NAS680A3		16 -30	NAS686A3		38 -59	S1003-65A		19 -38
NAS680A3		27 -35	NAS686A3		66 -58	S1003-66A		73 -42
NAS680A3		27 -35	NAS686A4		18 -19	S1004-15B		21 -36
NAS680A3		27A-39	NAS686A4		18A-14	S1004-15B		21A-40
NAS680A3		27A-39	NAS686A4		19 -24	S1004-15B		23 -35
NAS680A3		28 - 5	NAS686A4		19A-17	S1004-28A		70 -37
NAS680A3		28 - 5B	NAS687A08		66 - 2	S1004-29A		70 -38
NAS680A3		28 -15	NAS687A08		66 -16	S1021A10-10		10 - 5
NAS680A3		28 -15A	NAS687A4		24 -39	S1021A10-10		10 -21
NAS680A3		29 - 6	NAS696A06L		38 -36	S1021A10-10		11 - 4
NAS680A3		29 - 6B	NAS696A08		28 -34	S1021A10-10		11 -25
NAS680A3		29 -18	NAS696A08		29 -36	S1021A4-6		44 -40
NAS680A3		29 -18A	NAS696A08		38 -36	S1021A4-6		47 - 3
NAS680A3		30 -68	NAS696A08		61 -36	S1021A4-6		47 - 5
NAS680A3		52A-11A	NAS696A08		61 -36	S1021A4-6		48 - 5
NAS680A3		52B-12	NAS696A08		61A-42	S1021A4-6		48A- 5
NAS680A3		59A- 4	NAS696A08		61A-42	S1021A4-6		49 - 5
NAS680A3		61D- 4	NAS696A08		61B-41	S1021A4-6		50 - 5
NAS680A3		66 -46	NAS696A08		61B-41	S1021A4-6		50A- 5
NAS680A3		85 -27	NAS696A08		66 - 7	S1021A4-6B		52 -26A
NAS680A3		85A-22	NAS696A08		66 -14	S1021A4-6B		52A-28
NAS680A3		85B-23	NAS696A08		66 -22	S1021A4-6B		52B-30
NAS680A3K		18 -24	NAS696A08		66 -28	S1021A6-6		41 -45
NAS680A3K		18A-20	NAS696A08		66 -30	S1021A6-6C		44 - 5
NAS680A3K		19 -27	NAS696A08K		41 -12	S1021A6-6C		44 - 8
NAS680A3K		19A-20	NAS696A3		24 -14	S1021A6-8		45 -10
NAS680A3K		21 -19	NAS696A3		25 -14	S1021A6-8		45A-11
NAS680A3K		21A-18	NAS696A3		25 -14	S1021Z-6-8		88A- 8
NAS680A3K		27 -65B	NAS696A3		25 -54	S1021Z10-10		44 - 3
NAS680A3K		27 -67	NAS696A3K		81 -44	S1021Z10-12		62 -68
NAS680A3K		27A-65A	NAS696A4		26 -24	S1021Z10-12		62 -78
NAS680A3K		27A-67	NAS696A4		56 -24	S1021Z10-12		62 -78B
NAS680A3K		27A-69	NAS696A4		56 -34	S1021Z10-6		80 - 7
NAS680A3K		27A-70	NAS697A06L		22 -28	S1021Z10-8C		44 -27
NAS680A3K		30 -28	NAS697A06L		28 - 5A	S1021Z4-4		44 -34
NAS680A3K		30 -39	NAS697A06L		29 - 6A	S1021Z4-4		44 -36
NAS680A3K		31 -17A	NAS697A06L		87 -10	S1021Z4-6		44 -36
NAS680A3K		38 -45	NAS697A08		28 -31	S1021Z4-6		52A-32
NAS680A3K		59A- 5	NAS697A08		28 -33	S1021Z4-6		52B-41
NAS680A4		18 - 9B	NAS697A08		29 -35	S1021Z4-6		56 -31
NAS680A4		18A- 8	NAS697A08		66 -51	S1021Z4-8		8 -17B
NAS680A4		19 -15B	NAS697A08K		27 -66	S1021Z4-8		9 -17B
NAS680A4		19A- 8	NAS697A3		26 -25	S1021Z4-8		45 -17
NAS680A4		25 -36	NAS697A3		30 -28	S1021Z4-8		45A- 7
NAS680A4		27 -47	NAS697A3		30 -89	S1021Z4-8		45A-18
NAS680A4		27 -51	NAS697A3K		31 -17	S1021Z6-10		87 - 2
NAS680A4		30 - 3	NAS697A4K		27 -65	S1021Z6-4		22 -30
NAS680A4		56 -18	NAS697A4K		27A-65	S1021Z6-4		87 -22
NAS680A4K		27 -65A	NAS698A08		42 - 2	S1021Z6-4		89 -11
NAS680A4K		27A-66	NAS698A08		42 -16	S1021Z6-6		18 -47
NAS680A5		31 -15	NAS70-261-750		70 -31	S1021Z6-6		18A-44
NAS681A08K		41 -34	NAS74A3-004		21 -40	S1021Z6-6		19 -50
NAS682A06		28 -14	NAS74A3-004		21A-46	S1021Z6-6		19A-44
NAS682A06		29 -17	NAS74A3-004		71 -28	S1021Z6-6		22 -32
NAS682A06K		41 -31	NAS74A3-004P		71 -28	S1021Z6-6		38 -43
NAS682A06K		41 -59	NAS75-3-009		34 -63	S1021Z6-6		41 -46
NAS682A08		66 -47	NAS75-3-018		74 -10	S1021Z6-6		52 -81
NAS682A08		66 -57	NAS76A5-008		21 - 6	S1021Z6-6		52 -82
NAS682A08		66 -64	NAS77-3-23		34 -43	S1021Z6-6		52A-80
NAS682A08		66 -73	NAS77-6-88		34 -41	S1021Z6-6		52A-81
NAS682A08K		31 - 8	NAS77-6-88		34 -57	S1021Z6-6		52B-90
NAS682A3		27 - 9	PN3A		20 -14	S1021Z6-6		52B-91
NAS682A3		27A-10	PR0890		1 -14B	S1021Z6-6		54 - 1
NAS682A3		85B-23	REM37BY		63 -12	S1021Z6-6		54 - 7
NAS682A3K		51 - 4	REM38E		63 -12	S1021Z6-6		54A- 1
NAS682A4		27 -46	REM40E		63 -12	S1021Z6-6		54A- 8
NAS682A4		27 -50	R561		39 -32	S1021Z6-6		78 -24
NAS683A3K		18 -24A	SFE 7.5		52 -69	S1021Z6-6		79 - 5
NAS683A3K		18A-21	SFE7.5		52A-62	S1021Z6-7		64 -12
NAS683A3K		19 -27A	SR86		63 -12	S1021Z6-7		64A-12
NAS683A3K		19A-21	S1003-28A		18A-32	S1021Z6-7		64B-12
NAS684A08		61 -46	S1003-28A		19A-32	S1021Z6-8		52 -26

152 & A152 Parts Catalog

PART NUMBER	FICHE AND FRAME	FIGURE AND INDEX NO.	PART NUMBER	FICHE AND FRAME	FIGURE AND INDEX NO.	PART NUMBER	FICHE AND FRAME	FIGURE AND INDEX NO.
S102176-8		52A-27A	S102178-8		77 -10	S1071-3		38 - 9
S102176-8		52B-29	S102178-8		79 - 9	S1071-4		1 -22
S102176-8		67A-23	S102178-8		80 -13A	S1071-4		24 -16
S102176-8		86 -21	S102178-8		80 -21	S1071-4		79 - 3
S102176-8		87 - 4	S102178-8		81 - 3	S1071-5		1 -22
S102178-10		62 -69C	S102178-8		81 - 7	S1078-1		1 - 7
S102178-10		67 - 7	S102178-8		81 -11	S1078-1		3 -48
S102178-10		67A- 7	S102178-8		81 -48	S1078-2		1 - 8
S102178-12		62 -67	S102178-8		81 -51	S1078-3		1 - 9
S102178-12		62 -77	S102124-6		52 -32	S1084-1		1 -23
S102178-12		67A-27	S1022A4-6		43 - 8	S1090-11		86 -37
S102178-12		81 -84	S102276-8		52B-49	S1090-2		86 -37
S102178-12		81 -85	S102276-8		87 -16	S1090-22		86 -41
S102178-14		80 -20	S102278-8		3 -46	S1090-23		86 -41
S102178-6		3 -31	S1023A6-168		52 -30	S1091-1		86 -41
S102178-6		3 -33	S1023A6-168		52A-31	S1091-5		86 -37
S102178-6		8 -17C	S1023A6-168		52B-45	S1093-1		16 -40
S102178-6		9 -17C	S1023A6-6		47 - 5	S1095-3		27 -74
S102178-6		18 -44	S1023A6-6		48 - 5	S1095-3		27A-78
S102178-6		18A-40	S1023A6-6		48A- 5	S1095-3		81 -53
S102178-6		19 -47	S10268G		1 -18	S1095-5		27 -73
S102178-6		19A-40	S10268G		67A-25	S1095-5		27A-77
S102178-6		21 -45	S1029-1		1 -52	S1095-5		86 -17
S102178-6		21A-43	S1047-1		1 -20	S1099-1-4.10		80 -26
S102178-6		27 -73	S1047-2		1 -20	S1099-1-5.00		80 -25
S102178-6		27A-77	S1050-1		1 -48	S1104-3		62 -53
S102178-6		45 -12	S1050-1		25 -18	S1110ET		1 -24
S102178-6		45 -14	S1050-1		63A-15	S1110ET		67A-24
S102178-6		45A-13	S1050-2		1 -48	S1115-1		61 -22
S102178-6		45A-15	S1050-3		1 -48	S1115-1		61A-22
S102178-6		67 -32	S1053E10T		1 -19	S1115-1		61B-22
S102178-6		67A-42	S1053E10T		67 -18	S1115-1		61C-22
S102178-6		67A-57	S1053E10T3.75		67A-32	S1115-19		24 -22
S102178-6		71 -17	S1053E12T		1 -19	S1115-19		24 -24
S102178-6		81 -54	S1053E20T		1 -19	S1115-19		24 -28
S102178-6		86 - 3L	S1053E24T		1 -19	S1115-19		61 -20
S102178-6		86 -17	S1053E28T		1 -19	S1115-19		61A-20
S102178-6		88A- 2	S1053E32T		1 -19	S1115-19		61B-20
S102178-8		3 -24	S1053E7T		1 -19	S1115-19		61C-20
S102178-8		3 -29	S1053E8T		1 -19	S1115-30		24 -20
S102178-8		3 -46	S1053K10T		1 -19	S1115-30		24 -27
S102178-8		3 -47	S1053K10T3.75		67A-32	S1115-9		24 -20
S102178-8		4 -67	S1053K12T		1 -19	S1115-9		24 -27
S102178-8		5 -76	S1053K16T		62 -41	S1115-9		61 -22
S102178-8		6 -74	S1053K16T		62 -41A	S1115-9		61A-22
S102178-8		7 -81	S1053K20T		1 -19	S1115-9		61B-22
S102178-8		8 -15	S1053K24		62 -93	S1115-9		61C-22
S102178-8		8 -19	S1053K24T		1 -19	S1116		1 -43
S102178-8		8 -22	S1053K24T		67 -28	S1117-24		38 -24
S102178-8		9 -16	S1053K24T		67A-40	S1130-1		8 -20
S102178-8		9 -19	S1053K24W		1 -19	S1130-1		9 -20
S102178-8		9 -22	S1053K28W		1 -19	S1130-1		77 - 5
S102178-8		16 -36	S1053K32T		1 -19	S1130-1		77 -11
S102178-8		18 -42	S1055-1		1 -21	S1130-1		77 -13
S102178-8		18A-41	S1055-1		25 - 6	S1130-1		77 -16
S102178-8		19 -45	S106681		52 -51	S1130-1		77 -21
S102178-8		19A-41	S106681		52A-51	S1130-1		78 - 4
S102178-8		24 - 4	S106681		52B-62	S1130-1		78 -27
S102178-8		24 - 5	S1071-1		1 -22	S1130-1		78 -41
S102178-8		24 - 7	S1071-1		8 -18	S1130-1		78 -51
S102178-8		24 - 8	S1071-1		9 -18	S1131-1		8 -20
S102178-8		24 - 9	S1071-1		77 - 9	S1131-1		9 -20
S102178-8		27 -71	S1071-1		77 -14	S1131-1		77 - 5
S102178-8		27 -74	S1071-1		77 -18	S1131-1		77 -11
S102178-8		27A-75	S1071-1		77 -20	S1131-1		77 -13
S102178-8		27A-78	S1071-1		78 - 3	S1131-1		77 -16
S102178-8		44 - 9	S1071-1		78 - 5	S1131-1		77 -21
S102178-8		62 -33	S1071-1		78 - 8	S1131-1		78 - 4
S102178-8		64 -10	S1071-1		78 -26	S1131-1		78 -27
S102178-8		64A-10	S1071-1		78 -30	S1131-1		78 -41
S102178-8		64B-10	S1071-1		78 -32	S1131-1		78 -51
S102178-8		65 - 3	S1071-1		78 -42	S1133-1		8 -21
S102178-8		67 -30	S1071-1		78 -52	S1133-1		9 -21
S102178-8		77 - 7	S1071-3		1 -22	S1133-1		77 - 4

152 & A152 Parts Catalog

PART NUMBER	FICHE AND FRAME	FIGURE AND INDEX NO.	PART NUMBER	FICHE AND FRAME	FIGURE AND INDEX NO.	PART NUMBER	FICHE AND FRAME	FIGURE AND INDEX NO.
S1133-1		77 -11	S1389-1		30 -80	S1494-16		62 -22
S1133-1		77 -15	S1389-2		1 -28	S1494-16		62 -25
S1133-1		78 -10	S1389-2		30 -78	S1494-16		85 -21
S1133-1		78 -16	S1389-3		1 -28	S1494-16		85A-11
S1135-1		78 -2	S1389-4		1 -28	S1494-16		85B-9
S1135-1		78 -40	S1389-5		1 -28	S1494-16		85B-13
S1135-1		78 -50	S1389-5		30 -77	S1494-16		85B-15
S1138-1		78 -31	S1389-5		32 -2	S1494-16		85B-18
S1138-1		78 -43	S1389-5		32 -3	S1494-7		85A-12
S1138-1		78 -53	S1389-5		32 -4	S1494-8		24 -17
S1139-1		77 -13	S1389-6		1 -28	S1494-8		79 -2
S1139-1		77 -16	S1389-7		1 -28	S1495-10		1 -33
S1139-1		78 -6	S1397-13		2 -34	S1495-10		70 -41
S1139-1		78 -28	S1397-13		2A-22	S1495-10		85 -10
S1155-3		90 -20	S1398-1		1 -29	S1495-10		85A-10
S1155-3		90 -26	S1398-2		1 -30	S1495-12		62 -21
S1155-3		90A-6	S1415-1		1 -31	S1495-12		62 -24
S1155-3		90A-12	S1438-12		25 -34	S1495-4		1 -33
S1167-6-0370		63A-8	S1438-12		30 -10	S1495-4		85 -7
S1167-6-0370		63A-10	S1438-2		86 -40	S1495-4		85 -8
S1209-1		4 -64	S1438-9		74 -11	S1495-4		85A-7
S1209-1		5 -67	S1441-1		1 -32	S1495-4		85A-8
S1209-1		6 -69	S1441-2		1 -32	S1495-6		1 -33
S1209-1		7 -71	S1441-2		67 -39	S1495-6		81 -5
S1216-3		57 -12	S1441-2		67A-49	S1495-6		85 -5
S1230-19		52 -73	S1441-3		1 -32	S1495-6		85 -6
S1230-19		52A-72	S1450-18B14-005		70 -17	S1495-6		85 -9
S1230-19		62 -70	S1450-18B14-005		70 -26A	S1495-8		1 -33
S1230-20		52A-72	S1450-19A18-040		52 -72	S1497-4		85 -13
S1230-20		52B-82	S1450-19A18-040		52A-71	S1497-6		85 -11
S1230-20		62 -70	S1450-19A18-040		52B-81	S1501-1		87 -37
S1232-5		53 -11A	S1450-2-10-032		55 -13	S1501-1		91 -3
S1232-60		53 -8	S1450-20B12-032		15 -4	S1511-1		1 -58
S1236-3-0125		84 -2	S1450-20B12-032		16 -4	S1517-14		62 -28
S1236-6-0082		81 -70	S1450-20B12-032		73 -25	S1554-3		87 -9
S1239-46		52 -70	S1450-21-20-063		12 -8	S1573-3		83 -2
S1239-46		52A-69	S1450-21-20-063		13 -8	S1577-1		86 -6
S1239-46		52A-69A	S1450-24A10-025		45A-18C	S1580-1		86 -5
S1239-46		52B-78	S1450-27A7-032		83 -13	S1588-1		12 -18
S1239-46		67 -1	S1450-3-10-032		74 -52	S1588-1		13 -18
S1239-46		67 -8	S1450-3-14-032		62 -55	S1597-1-37.5		86A-6
S1239-46		67A-8	S1450-3-14-063		67A-69	S1605-12		52 -52
S1239-47		52A-69A	S1450-3-14-063		67A-71	S1605-12		52A-52
S1239-47		52B-79	S1450-3A32-050		85 -30	S1605-12		52B-63
S1239-47		67A-1	S1450-3A32-050		85A-25	S1611-1		1 -34
S1239-49		52 -75	S1450-309-032		38 -50	S1611-1		22 -33
S1239-49		52A-74	S1450-4A10-071		18 -1A	S1613-08-75		38 -40
S1239-49		52B-84	S1450-4A10-071		18A-2	S1614		1 -45
S1239-49		80 -18	S1450-4A10-071		19 -1A	S1628-110		69A-9
S1258-1		77 -22	S1450-4A10-071		19A-2	S1628-329		34 -23
S1283-1		67 -6	S1450-4H12-050		56 -16A	S1630-1		62 -43
S1291-3		43 -2	S1450-4H12-050		58 -11	S1630-5		62 -43
S1303-2		52 -50	S1450-5-14-063		55 -21	S1635-1		1 -35
S1303-2		52A-50	S1450-5A24-040		55 -5	S1635-2		1 -35
S1303-2		52B-61	S1450-5A24-040		67A-70	S1635-3		1 -35
S1320-5		52 -54	S1450-5N12-050		16 -18	S1636-1		1 -36
S1320-5		52A-54	S1450-6-14-080		86A-3	S1636-2		1 -36
S1320-5		52B-65	S1450-6-18-063		62 -3	S1636-3		1 -36
S1346-1		1 -25	S1450-6B14-010		34 -37	S1637-1		1 -37
S1356-1		1 -44	S1450-6B14-010		34 -49	S1637-1		89 -17
S1356-1		41 -5	S1453-1		1 -60	S1637-2		1 -38
S1360-10L		53 -10B	S1485D612U		62 -78	S1638-1		1 -39
S1360-15L		53 -10	S1485D12U		62 -68	S1638-1		89 -8
S1360-15L		53 -10A	S1485D12U		62 -78A	S1638-1		89 -16
S1360-15L		53 -10B	S1485D2U		81 -84	S1638-2		1 -40
S1360-20L		53 -10A	S1485D2U		81 -85	S1638-2		89 -15
S1360-5L		53 -9	S1485D20U		67 -20	S1638-2		89 -20
S1360-5L		53 -11	S1485D3U		67 -7	S1640-12		1 -41
S1366-1		1 -26	S1485D3U		67A-6	S1640-15		1 -41
S1366-2		1 -26	S1485D8U		62 -67	S1640-6		1 -41
S1366-3		1 -26	S1485D8U		62 -76	S1640-9		1 -41
S1378-1		1 -27	S1486D66U		81 -3	S1641-12		1 -42
S1378-2		1 -27	S1494-10		85 -20	S1641-15		1 -42
S1389-1		1 -28	S1494-10		85A-13	S1641-6		1 -42

152 & A152 Parts Catalog

PART NUMBER	FICHE AND FRAME	FIGURE AND INDEX NO.	PART NUMBER	FICHE AND FRAME	FIGURE AND INDEX NO.	PART NUMBER	FICHE AND FRAME	FIGURE AND INDEX NO.
S1641-6		86 -23	S1863-2		52A-11	S1948-2-2		1 -51
S1641-9		1 -42	S1863-2		52B-11	S1948-2-20		1 -51
S1674-1		68 -21	S1863-2A		18 -47	S1948-2-3		1 -51
S1675-1		68 -20	S1863-2A		18A-44	S1948-2-4		1 -51
S1685-3		41 -58	S1863-2A		22 -11	S1948-2-5		1 -51
S1707-60		53 - 8	S1863-2A		31 -10	S1948-2-6		1 -51
S1711-1		84 - 8	S1863-2A		52 -13	S1948-2-7		1 -51
S1741-1		27 - 4A	S1863-2A		52A-14	S1948-2-8		1 -51
S1741-1		27A- 5	S1863-2A		52B-15	S1948-2-9		1 -51
S1746B2		56 -35	S1863-2A		87 -24	S1950-2E		44 -29
S1746CC2		56 -35	S1863-3		25 - 9	S1950-2E		44 -29
S1746CC2		56 -35	S1863-3		27 -19A	S1951-5		84 -12
S1746JJ2		56 -35	S1863-3		27 -20	S1957-2		41 -57
S1746KK2		56 -35	S1863-3		27A-21	S1958-1		43 - 3
S1746LL2		56 -35	S1863-3		27A-23	S1959-1		90 - 3
S1746MM2		56 -35	S1863-3		30 -13	S1959-1		90 - 8
S1746NN2		56 -35	S1863-3		30 -69	S1959-1		90 -16
S1746PP2		56 -35	S1863-3A		4 -19	S1959-1		90A- 3
S1746WD2		56 -35	S1863-3A		5 -27	S1959-2		90 -11
S1746WG2		56 -35	S1863-3A		7 -31	S1959-2		90 -22
S1746WJ2		56 -35	S1863-3A		8 - 4	S1959-2		90A- 8
S1746Z2		56 -35	S1863-3A		8 -13	S1974-1		52 -74
S1760-1		67A-51	S1863-3A		8 -34	S1974-1		52A-73
S1771-3		74 - 2	S1863-3A		9 - 4	S1974-1		52B-83
S1775-1		1 -62	S1863-3A		9 -36	S1982-1		52 -69
S1775-2		1 -62	S1863-3A		18 -32	S1982-1		52A-62
S1775-3		1 -62	S1863-3A		18A-29	S1985-1		90 - 1
S1775-3		86 - 3D	S1863-3A		19 -35	S1985-1		90A- 1
S1775-3		86 - 3H	S1863-3A		19A-29	S1992-1		28 -18
S1775-4		1 -62	S1863-3A		21 -22	S1992-1		29 -21
S1776-1		27 -15	S1863-3A		21 -26	S1994-1-1		53 - 1
S1776-1		27A-15	S1863-3A		21A-23	S1995-4		53 - 3
S1776-1		77 -25	S1863-3A		21A-25	S1996-7		56 - 6
S1780-8		67A-63	S1863-3A		21A-29	S1997-6-10		15 - 7
S18-30		70 - 4	S1863-3A		27 -64	S1997-6-10		16 - 7
S1807-1		86 - 8	S1863-3A		27 -64	S1997-6-10		70 -39
S1807-1		86 - 8	S1863-3A		27 -66A	S1997-6-10		73 -26
S1810-1075		80 - 5	S1863-3A		27A-64	S1997-6H10		16 - 7
S1819-3		15 -15	S1863-3A		27A-68	S1997-6H10		73 -26
S1819-3		16 -13	S1863-3A		28 - 4	S2000B271J		53 - 3
S1823-3		33 -13	S1863-3A		29 - 5	S2000C201J		53 - 3
S1827-1		34 -18	S1863-3A		88A- 3	S2013-2		48A-50
S1843-1		53 - 1	S1863PA2		41 -47	S2013-2		50A-51
S1846DG6U		81 -11	S1866-3		21 - 6	S2014-2		48A-50
S1853-1		62 -89A	S1878-1		24 -11	S2014-2		50A-51
S1853-3		62 -89	S1891-32		62 -41B	S2015-3		21A- 8
S1860-2A		4 - 3	S1891-48		62 -93	S2016-3		45A-18C
S1860-2A		5 - 5	S1891-48		67 -28	S202RB		1 -16
S1860-2A		5 - 9	S1891-48		67A-40	S202RB		31 -13
S1860-2A		6 - 5	S1891-6		81 - 5	S202VM		1 -16
S1860-2A		7 - 5	S1893-2A		19 -50	S202VM		3 -49
S1860-2A		7 - 9	S1893-2A		19A-44	S202VM		30 -91
S1860-2A		27 -63A	S1894-2		53A-11	S202VM		30 -92
S1860-2A		27A-63	S1894-2		53B-10	S2024-1		67 -40
S1862-1		31 -21	S1896-4L1		76 - 7	S2024-1		67A-50
S1862-1		89 -12	S1896-4L1		76 - 9	S2024-1		67A-62
S1862-1A		22 -27	S1898-2		41 -54	S2041-50-1.6		52 -69
S1862-1A		22 -28	S1898-2		44 -23	S2041-50-1.6		52A-62
S1862-1A		52 -12	S1906-1		74 - 5	S2091-7		53 - 3
S1862-1A		52A-13	S1906-2		73 -39	S2092-2		45A- 6
S1862-1A		52B-14	S1908-7		24 -18	S2092-2		45A-10
S1862-2		25 -10	S1931-8		41 - 9	S2092-2		45A-10
S1862-2A		18 -33	S1948-2		44 -33	S2092-2		45A-24
S1862-2A		18A-30	S1948-2-1		1 -51	S2092-3		1 -49
S1862-2A		19 -36	S1948-2-10		1 -51	S2092-3		45 - 8
S1862-2A		19A-30	S1948-2-11		1 -51	S2092-3		45A-10
S1862-2A		21A-22	S1948-2-12		1 -51	S2092-3		52 - 3
S1863-1		8 - 4A	S1948-2-13		1 -51	S2092-3		52 -27
S1863-1		9 - 4A	S1948-2-14		1 -51	S2092-3		52A-29
S1863-1		27 -72	S1948-2-15		1 -51	S2092-3		52B-33
S1863-2		8 -26	S1948-2-16		1 -51	S2092-3		78 -22
S1863-2		9 -26	S1948-2-17		1 -51	S2092-4		1 -50
S1863-2		31 -24	S1948-2-18		1 -51	S2092-6		45A-25
S1863-2		52 -10A	S1948-2-19		1 -51	S2093-2		86A- 5

152 & A152 Parts Catalog

PART NUMBER	FICHE AND FRAME	FIGURE AND INDEX NO.	PART NUMBER	FICHE AND FRAME	FIGURE AND INDEX NO.	PART NUMBER	FICHE AND FRAME	FIGURE AND INDEX NO.
S2093-3		52A- 2	S2255-1		47 - 5	S2319-4		61 -17
S2093-3		52B- 2	S2255-1		48 - 5	S2319-4		61A-17
S2106-2		14 - 1	S2255-1		48A- 5	S2319-4		61B-17
S2107-1		14 - 3	S2255-1		52 -30	S2319-4		61C-17
S2108-1		1 -53	S2255-1		52A-31	S2319-40		61B-18
S2108-1		41 -27	S2255-1		52B-45	S2319-40		61B-32
S2108-2		1 -53	S2269-1		63A-12	S2319-40		61C-32
S2108-2		87 -14	S2272-1		1 -53	S2323-1		67 - 2
S2108-3		1 -53	S2272-2		1 -53	S2323-1		67A- 2
S2108-4		1 -53	S2275B104		56 -15	S2323-13		62 -63
S2108-5		1 -53	S2275B202		56 - 1	S2323-3		62 -37
S2108-5		87 -15	S2275CC104		56 -15	S2323-3		81 -66
S2108-6		87 -14	S2275CC104		56 -15	S2323-5		62 -71
S2114-1		86A- 5	S2275CC202		56 - 1	S2323-5		67 - 9
S2114-2		86A- 5	S2275CC202		56 - 1	S2323-5		67A- 9
S2122-1		53 -11	S2275JJ104		56 -15	S2323-7		74 -25
S2122-1		53 -15	S2275JJ202		56 - 1	S2332-1		86A- 4
S2127-21.69		4 - 6	S2275KK104		56 -15	S2335-1		62 -43
S2127-21.69		5 -12	S2275KK202		56 - 1	S2338-4		85A- 4E
S2127-21.69		6 -12	S2275LL104		56 -15	S2359-1		12 -10
S2127-21.69		7 -14	S2275LL202		56 - 1	S2359-1		13 -10
S2127-35.56		6 -11	S2275MM104		56 -15	S2363-2		85 -36
S2127-35.56		7 -15	S2275MM202		56 - 1	S2363-2		85A-31
S2135-2		52 -67	S2275NN104		56 -15	S2363-2		85B- 7
S2135-2		52A-55	S2275NN202		56 - 1	S2363-3		85 -37
S2135-2		52B-66	S2275PP104		56 -15	S2363-3		85A-32
S2145-1		1 -55	S2275PP202		56 - 1	S237-2		4 -58
S2160-1		53 - 4	S2275WD104		56 -15	S237-2		5 -68
S2160-4		53 - 5	S2275WD202		56 - 1	S237-2		6 -66
S2160-5		53 - 5	S2275WG104		56 -15	S237-2		6 -68
S2161-1		53 - 4	S2275WG202		56 - 1	S237-2		7 -72
S2161-2		53 - 5	S2275WJ104		56 -15	S237-2		8 -11
S2191-8-4		33 -37	S2275WJ202		56 - 1	S237-2		9 -11
S2191-8-4		38 -27	S2275Z104		56 -15	S237-2		18 -39
S2195-1		1 -54	S2275Z202		56 - 1	S237-2		18A-36
S2195-2		1 -54	S2280-8-00		62 -84	S237-2		19 -42
S2195-4		41 -26	S2287-1		1 -61	S237-2		19A-36
S2199-5		56 -25	S2287-1		41 -25	S237-2		27 -23
S2199-6		56 -25	S2289-4		27 -63	S237-2		27A-27
S2202-1		74 -51	S2289-4		27A-62	S237-2		31 -20
S2202-4		74 -14	S2289-4		84 - 5	S237-2P		25 -50
S2209-1		85 -12	S2295P25-63		76 -13	S237-4		16 -34
S2209-1		85A- 4F	S2295P25-69		76 -14	S2385-5		21 - 4A
S2209-1		86 - 9	S2300-1		62 -69A	S2389-2		74 -15
S2209-1		86 - 9	S2303P2-4		86 -14A	S2389-2		74 -50
S2209-1		86 - 9D	S2319-2		61 -18	S2397-1		16 -17
S2209-2		52A-62	S2319-2		61A-18	S2398-1		16 -15
S2209-2		67A-33	S2319-2		61A-30	S2413-1		52A-40A
S2209-2		85A-34	S2319-2		61B-18	S2413-1		52B-50
S2209-2		85B-15	S2319-2		61B-34	S2418-1		34 -26
S2209-2		86 - 3F	S2319-2		61C-18	S2421-10		86 - 36
S2209-2		86 - 3J	S2319-2		61C-34	S2443-1		86 - 6A
S2209-2		86 - 9B	S2319-20		61 -18	S2443-2		86 - 6A
S2230-1		59 - 1	S2319-20		61A-18	S2445-1		74 - 4
S2234-1		52 -48	S2319-20		61A-30	S2446-32		33 -32A
S2234-1		52A-48	S2319-20		61B-34	S2446-32		38 -60
S2234-1		52B-59	S2319-20		61C-18	S2475-1		86 - 5A
S2234-2		52 -48	S2319-20		61C-34	S2475-2		86 - 5A
S2234-2		52A-48	S2319-3		61 -16	S2480-1		86 - 1B
S2234-2		52B-59	S2319-3		61A-16	S2485-1		81 -46C
S2243-1		91 -12	S2319-3		61B-16	S2501-4		85A- 7
S2243-2		91 -13	S2319-3		61C-16	S2501-4		85A- 8
S2249-1		1 -57	S2319-30		61 -37	S2501-6		85A- 5
S225-1		3 -27	S2319-30		61 -37A	S2501-6		85A- 6
S225-1		3 -28	S2319-30		61 -50	S2501-6		85A- 9
S225-1		18 -42	S2319-30		61A-28	S2502-1		85A-15
S225-1		18A-41	S2319-30		61A-36	S2502-3		85A-14
S225-1		19 -45	S2319-30		61A-45	S2502-4		85A- 4D
S225-1		19A-41	S2319-30		61B-24	S2502-5		85A-14A
S225-1		24 - 4	S2319-30		61B-32	S2506-1		85A-16
S225-1		24 -11	S2319-30		61B-43	S2519-2		52 -67
S225-2		3 -29	S2319-30		61C-24	S2519-2		52A-55
S225-3		16 -35	S2319-30		61C-32	S2519-2		52B-54
S225-7		3 -30	S2319-30		61C-41	S2519-2		52B-66

152 & A152 Parts Catalog

PART NUMBER	FICHE AND FRAME	FIGURE AND INDEX NO.	PART NUMBER	FICHE AND FRAME	FIGURE AND INDEX NO.	PART NUMBER	FICHE AND FRAME	FIGURE AND INDEX NO.
S2533-1		45A-15A	S51-32		1 -15	0400123-1		44 - 2
S2547-1		81 -46A	S51-4		1 -15	0400131-1		51 - 5
S2548-10		85A-33	S51-6		1 -15	0400134-5	<	51 -11
S2550-12		52A-52	S51-8		1 -15	0400134-5-533		51 -11
S2552-6		70 -40A	TT-P-1757		1 -14	0400136-9	#	51 - 8
S2554-10		85B- 8	TVA-1315		52 -68	0400138-1	<	51 - 2
S2554-10		85B-12	X26263		86 -38	0400138-1-533		51 - 2
S2554-10		85B-14	Y8562		1 -56	0400138-2	<	51 - 3
S2554-10		85B-17	0-235L2C		62 - 1	0400138-2-533		51 - 3
S2571-1		85A- 4C	0-235N2C		62 - 1	0400141-1		44 - 9
S2574-1		86 -40	OR95-6		89 -21	0400207-1		44 - 6
S2608-1		2A-22A	0310196-13		68 -17	0400207-2		44 - 5
S2619-1		90 -14	0310295		20 - 2	0400209-2		30 -88
S272-5		41 -10	0310297-1		20 - 3	0400213-6		2 -16
S272-9		42 - 6A	0310298-1		20 - 4	0400213-6		2A- 3
S2889-3-0100		80 - 5A	0310332		20 - 7	0400215-1		89 - 9
S29001032		67A-68	0310362-5		20 -13	0400311-100		81 - 6
S2900832		3 -46	0310422-1		20 - 9	0400311-108		38 - 8
S292-1		1 -17	0311310		47 -33	0400311-109		38 - 8
S292-11		1 -17	0311310		48 -63	0400311-110		81 -28
S292-12		1 -17	0311310		48A-68	0400311-114		84 -10
S292-12		81 -22	0311310		49 -33	0400311-116		81 -75
S292-14		1 -17	0311310		50 -64	0400311-117		81 -74
S292-15		13 -21	0311310		50A-69	0400311-118		81 -41
S292-16		1 -17	0311586		47 -34	0400311-119		81 - 1
S292-18		1 -17	0311586		48 -65	0400311-120		81 - 1
S292-18		81 -27	0311586		48A-70	0400311-121		81 - 1
S292-2		1 -17	0311586		49 -34	0400311-122		81 - 1
S292-28		1 -17	0311586		50 -66	0400311-123		80 - 9A
S292-3		1 -17	0311586		50A-71	0400311-58		81 -47
S292-4		1 -17	0312155-10		86 -31	0400311-79		81 -50
S292-5		1 -17	0400106-83		81 -77	0400311-95		81 -73
S292-6		1 -17	0400107-105		75 -17	0400311-95		83 -16
S292-8		1 -17	0400107-109		75 -18	0400311-96		80 -13
S329		3 -31	0400107-121		72 -35	0400311-97		80 -12
S330-2		4 -60	0400107-130		76 -28	0400311-98		80 - 9
S330-2		5 -70	0400107-141		72 - 1	0400312-1		68 -14
S330-2		6 -64	0400107-145		73 - 1	0400312-1		81 -48
S330-2		7 -74	0400107-146		73 - 2	0400312-1		81 -51
S338-1		71 -10	0400107-149		71 - 1	0400329-1		44 - 7
S338-1		71 -33	0400107-150		71 - 1A	0400339-1		52 -31
S338-1		72 - 9	0400107-155		76 -27	0400343-1		81 -20
S338-1		72A- 9	0400107-156		76 -26	0400343-10		81 -14
S338-1		75 -28	0400107-157		76 -29	0400343-12		62 -23
S338-1		75A-27	0400107-158		72A-38	0400343-13		62 -26
S339-1		71 - 9	0400107-159		72A-37	0400343-16		81 -18
S339-1		71 -34	0400107-160		72A- 1	0400343-17		81 -17
S339-1		72 - 9	0400107-161		72A-36	0400343-18		81 -78
S339-1		72A- 9	0400107-162		75A-14	0400343-19		81 -81
S339-1		75 -28	0400107-163		75A-16	0400343-2		81 -21
S339-1		75A-27	0400107-164		75A-17	0400343-20		81 -80
S350		12 -17	0400107-165		72A-36A	0400343-21		81 -82
S350		13 -17	0400107-166		75A-14A	0400343-22		81 -83
S351		62 -49	0400107-21		72 -35	0400343-23		81 -80C
S355		18 -29	0400107-30		76 -28	0400343-24		81 -80A
S355		19 -32	0400107-41		72 - 1	0400343-25		81 -80B
S378-1L		76 -15	0400107-45		73 - 1	0400343-3		81 -24
S378-2		73 - 5	0400107-46		73 - 2	0400343-4		81 -25
S378-2		73 -10	0400107-49		71 - 1	0400343-7		81 - 9
S378-2		73 -19	0400107-5		75 -17	0400343-8		81 -10
S378-3		71 -12	0400107-50		71 - 1A	0400343-9		81 -13
S378-3		71 -19	0400107-55		76 -27	0401013-5		78 -17
S378-3		72 -29	0400107-56		76 -26	0401024-10		61D-14
S378-3		72A-29	0400107-57		76 -29	0401024-11		61D-16
S378-3		75 -24	0400107-58		72A-38	0401024-12		61D-17
S378-3		75 -33	0400107-59		72A-37	0401024-13		61D-15
S378-3		75A-23	0400107-60		72A- 1	0401024-2		61D- 5
S378-3		75A-32	0400107-61		72A-36	0401024-2		61D-10
S378-4		71 - 5	0400107-62		75A-14	0401024-3		61D- 6
S378-4		72 - 2	0400107-63		75A-16	0401024-5		61D- 8
S378-4		72A- 2	0400107-64		75A-17	0401024-6		61D- 9
S51-10		1 -15	0400107-65		72A-36A	0401024-7		61D- 7
S51-12		1 -15	0400107-66		75A-14A	0401024-7		61D-13
S51-16		1 -15	0400107-9		75 -18	0401024-8		61D-11

152 & A152 Parts Catalog

PART NUMBER	FICHE AND FRAME	FIGURE AND INDEX NO.	PART NUMBER	FICHE AND FRAME	FIGURE AND INDEX NO.	PART NUMBER	FICHE AND FRAME	FIGURE AND INDEX NO.
0401024-9		61D-12	0405068-11		2 -26	0405082-2		2A-39
0405003-2		2 -18	0405068-11		2A-25	0405082-3		2A-40
0405003-2		2A-1	0405068-12		2 -26	0405082-4		2A-40
0405007-2		2 -20	0405068-12		2A-25	0405082-5		2A-41
0405026-4		2 -17	0405068-13		2 -26	0405082-6		2A-41
0405031-1		2 -12	0405068-13		2A-25	0405084-3		2A-42
0405031-2		2 -13	0405068-14		2 -26	0405100-1		2A-30
0405031-9		2 -14	0405068-14		2A-25	0405100-2		2A-28
0405033-1		2 -19	0405068-15		2 -26	0405100-3		2A-29
0405033-1		2A-13	0405068-15		2A-25	0405100-4		2A-31
0405044-1		2 -40	0405068-16		2A-25	0405101-1		2A-27
0405044-3-E84		2A-6	0405068-17		2A-25	0405101-2		2A-27
0405044-3-E85		2 -40	0405068-18		2A-25	0410120-2		25 -20
0405044-3-E85		2A-6	0405068-2		2 -24	0410126-1		25 -20
0405046-2		2 -7D	0405068-2		2A-24	0410127-1		25 -35
0405048-1		2 -3	0405068-3		2 -24	0410127-2		25 -35
0405050-1		2 -36	0405068-3		2A-24	0410131-1		25 -27
0405050-1		2A-17	0405068-4		2 -26	0410132-3		25 -21
0405050-2		2 -36	0405068-4		2A-25	0410132-4		25 -22
0405050-2		2A-17	0405068-5		2 -26	0410133-2		25 -26
0405054-1		2 -10	0405068-5		2A-25	0410135-3		25 -24
0405054-2		2 -11	0405068-6		2 -26	0410135-4		25 -25
0405056-10		2 -7	0405068-6		2A-25	0410137-1		25 -29
0405056-11		2 -5	0405068-7		2 -24	0410137-2		25 -30
0405056-12		2 -7	0405068-7		2A-24	0410204-1		25 -19
0405056-5		2 -6	0405068-8		2 -24	0410205-1		25 -27
0405056-6		2 -6	0405068-8		2A-24	0410229-1		24 -8
0405056-7		2 -4	0405068-9		2 -24	0410229-2		25 -44
0405056-8		2 -4	0405068-9		2A-24	0410232-1		47 -45
0405056-9		2 -5	0405069-1		2 -42	0410232-1		47 -46
0405058-1		2 -24	0405069-2		2 -43	0410232-1		48 -73
0405058-10		2 -25	0405069-3-E84		2A-7	0410232-1		48A-79
0405058-11		2 -25	0405069-3-E85		2 -42	0410232-1		49 -45
0405058-12		2 -25	0405069-3-E85		2A-7	0410232-1		49 -46
0405058-13		2 -27	0405069-4-E84		2A-8	0410232-1		50 -74
0405058-14		2 -27	0405069-4-E85		2 -43	0410232-1		50A-80
0405058-15		2 -27	0405069-4-E85		2A-8	0410233-1		25 -55
0405058-16		2 -27	0405070-1		2 -35	0410234-1		25 -46
0405058-17		2 -27	0405070-1		2A-21	0410235-1		47 -40
0405058-18		2 -27	0405071-1		2 -38	0410235-1		48 -68
0405058-2		2 -24	0405072-1		2 -1B	0410235-1		48A-73
0405058-3		2 -24	0405072-1		2A-35	0410235-1		49 -40
0405058-4		2 -26	0405072-2		2 -1B	0410235-1		50 -69
0405058-5		2 -26	0405072-2		2A-35	0410235-1		50A-74
0405058-6		2 -26	0405072-3		2 -1B	0410235-2		47 -40
0405058-7		2 -25	0405072-3		2A-36	0410235-2		48 -68
0405058-8		2 -25	0405073-1		2 -6B	0410235-2		48A-73
0405058-9		2 -25	0405073-2		2 -7C	0410235-2		49 -40
0405059-1		2 -21	0405073-3		2 -7B	0410235-2		50 -69
0405059-2-E84		2A-5	0405074-1		2 -2B	0410235-2		50A-74
0405059-2-E85		2 -21	0405074-3		2 -2B	0410235-6		47 -39
0405059-2-E85		2A-5	0405074-3		2A-34	0410235-6		48 -67
0405060-1		2 -37	0405075-1		2 -4B	0410235-6		48A-72
0405060-1		2A-19	0405075-2		2 -4B	0410235-6		49 -39
0405061-1		2 -41	0405075-3		2 -5B	0410235-6		50 -68
0405061-1		2A-9	0405075-4		2 -5B	0410235-6		50A-73
0405062-1		2 -7E	0405076-1		2 -8	0410236-1		47 -44
0405063-1		2 -4A	0405076-1		2A-36	0410236-1		48 -72
0405063-2		2 -5A	0405076-2		2 -9	0410236-1		48A-77
0405063-3		2 -6A	0405076-2		2A-37	0410236-1		49 -44
0405063-4		2 -7A	0405077-1		2 -7G	0410236-1		50 -73
0405064-1		2 -1A	0405077-2		2 -7G	0410236-1		50A-78
0405064-2		2 -2A	0405078-1		2 -7F	0410236-2		47 -43
0405064-3		2 -1A	0405078-2		2 -7F	0410236-2		48 -71
0405064-4		2 -2A	0405078-2		2A-33	0410236-2		48A-76
0405065-1		2 -3A	0405079-1		2 -9A	0410236-2		49 -43
0405066-1		2 -14A	0405079-1		2A-37	0410236-2		50 -72
0405066-2		2 -13A	0405080-1		2 -44	0410236-2		50A-77
0405066-3		2 -12A	0405080-1		2A-15	0410237-1		25 -52
0405066-4		2 -12B	0405080-2		2 -45	0410238-1		25 -38
0405068-1		2 -24	0405080-2		2A-16	0410239-1		25 -23
0405068-1		2A-24	0405081-1		2 -46	0410239-2		25 -23
0405068-10		2 -26	0405081-2		2 -46	0410246-1		25 -37
0405068-10		2A-25	0405082-1		2A-39	0410246-2		25 -37

152 & A152 Parts Catalog

PART NUMBER	FICHE AND FRAME	FIGURE AND INDEX NO.	PART NUMBER	FICHE AND FRAME	FIGURE AND INDEX NO.	PART NUMBER	FICHE AND FRAME	FIGURE AND INDEX NO.
0410247-1		25 -36	0411421-2		75A-26	0412020-211		31 -
0410247-2		25 -36	0411421-6		71 - 8	0412020-212		31 -
0411047		70 - 8	0411421-6		72 - 8	0412020-213		30 -
0411126-5		25 -67	0411421-6		72A- 8	0412020-214		30 -
0411127-4		25 -69	0411447		31 - 4	0412020-215		30 -
0411127-5		25 -69	0411447		31 -12	0412020-216		30 -
0411129		28 - 1	0411449		26 -19	0412020-217		30 -
0411129		29 - 1	0411451		26 -22	0412020-218		30 -
0411131-10		28 - 3	0411452		26 -16	0412020-219		30 -
0411131-11		29 - 4	0411458		31 - 2	0412020-220		30 -
0411131-6		28 - 3	0411458-1		31 - 3	0412020-26		30 -84
0411131-8		29 - 4	0411479-50		32 - 7	0412020-28		30 -86
0411132		28 - 8	0411481	<	32 - 8	0412020-36		30 -85
0411132		29 -11	0411481-0-531		32 - 8	0412020-37		30 -85
0411132-1		28 - 9	0411523		76 -34	0412020-40		30 -
0411132-1		29 -12	0411524		76 -36	0412020-42		30 -58
0411141		28 -21	0411525-1		30 - 4	0412020-43		30 -59
0411141		29 -24	0411525-2		30 - 5	0412020-44		30 -
0411144-1		25 - 4	0411526-1		68 -23	0412020-45		30 -54
0411174		25 - 5	0411526-2		68 -24	0412020-46		30 -55
0411175		25 - 7	0411549		68 -35	0412020-47		30 -
0411175-8		25 - 8	0411550		68 -34	0412020-48		30 -
0411185-7		41 - 6	0411563		68 -26	0412020-5		30 -70
0411209		30 -29	0411564		68 - 8	0412020-6		30 -71
0411210-3		30 -40	0411565		68 -30	0412020-7		30 -83
0411255		70 -18	0411573-2		68 -25	0412023-1		30 -49
0411257		70 -12	0411599-5	<	45 -11	0412024-4		30 -26
0411257		70 -13	0411599-5	<	45A-12	0412025-11		30 -43
0411258-1		25 -58	0411599-5-156		45A-12	0412025-13		30 -42
0411258-1		70 -46	0411671		26 -21	0412026-3		30 -52
0411258-1		75 - 1	0411778-2		68 - 9	0412026-5		30 -52
0411258-1		75A- 1	0411778-5		68 - 9	0412027-7		30 -27
0411265-2		47 -19	0411836-3		45 -12	0412027-8		30 -28
0411265-2		48 -38	0411836-3		45A-13	0412028-3		30 -38
0411265-2		48A-38	0411836-6		45 -12	0412028-4		30 -39
0411265-2		49 -19	0411836-6		45A-13	0412030-5		30 -11
0411265-2		50 -39	0411868-4		28 -13	0412032-1		3 -47
0411265-2		50A-39	0411868-5		28 -12	0412032-2		3 -47
0411266-1		47 -27	0411868-6		29 -16	0412033-1		30 -41
0411266-1		48 -24	0411868-7		29 -15	0412033-10		30 -51
0411266-1		48A-25	0411870	<	32 - 6	0412033-3		30 -36
0411266-1		49 -27	0411870-0-531		32 - 6	0412033-4		30 -37
0411266-1		50 -25	0411907		28 -28	0412033-5		30 -35
0411266-1		50A-26	0411907		29 -30	0412033-6		30 -35
0411267-1		47 -30	0411907-1		28 -29	0412033-9		30 -50
0411267-1		48 -21	0411907-1		29 -31	0412033-9		30 -51
0411267-1		48A-21	0411951-10		26 - 1	0412037-1		30 -75
0411267-1		49 -30	0411951-8		26 - 2	0412039-1		30 -72
0411267-1		50 -22	0411953-3		25 -64	0412039-2		30 -65
0411267-1		50A-22	0411953-4		25 -64	0412039-3		30 -56
0411268-3		47 -22	0411953-5		25 -66	0412039-4		30 -57
0411268-3		49 -22	0411953-6		25 -65	0412039-5		30 -66
0411269		70 -42	0411958-6		25 -54	0412039-6		30 -73
0411276		28 -19	0411959-5		25 -68	0412040-2		30 -74
0411276		29 -22	0411959-6		25 -68	0412042-1		30 -80
0411276-1		28 -20	0411971-1	<	45 -12	0412043-3		30 -26
0411276-1		29 -23	0411971-1	<	45A-13	0412043-4		30 -26
0411281-10		27 -25	0411971-1-156		45A-13	0412044-1		30 -60
0411281-10		27A-29	0412007-14		86 - 28	0412044-1		72 -27
0411281-11		27 - 8	0412007-8		62 -12	0412044-1		72A-27
0411281-11		27A- 9	0412008-1		31 -14	0412044-1		73 -17
0411281-12		27 - 8	0412010-1		31 -16	0412044-2		30 -61
0411281-12		27A- 9	0412010-2		31 -16A	0412044-2		72 -27
0411281-9		27 -27	0412017-1		56 -33	0412044-2		72A-27
0411281-9		27A-31	0412017-2		56 -33	0412044-2		73 -17
0411286		68 -15	0412018-1		56 -32	0412044-3		30 -62
0411288		25 -55	0412018-2		56 -32	0412044-3		72 -28
0411289-1		25 -56	0412020-10		30 -79	0412044-3		72A-28
0411290		25 -57	0412020-17		31 -22	0412044-3		73 -18
0411307		68 - 5	0412020-207		31 -	0412044-4		30 -63
0411370		25 -48	0412020-208		31 -	0412044-4		72 -28
0411371		24 - 9	0412020-209		31 -	0412044-4		72A-28
0411421-2		71 -15	0412020-21		30 -79	0412044-4		73 -18
0411421-2		75 -27	0412020-210		31 -	0412047-3		30 -18

152 & A152 Parts Catalog

PART NUMBER	FICHE AND FRAME	FIGURE AND INDEX NO.	PART NUMBER	FICHE AND FRAME	FIGURE AND INDEX NO.	PART NUMBER	FICHE AND FRAME	FIGURE AND INDEX NO.
0412048-1		26 -20	0412545-2		31 -23	0413325-9		29 -13
0412049-1		30 -23	0412547-1		31 -11A	0413327-30		25 -17
0412050-2		30 -25	0412548-6		31 -14A	0413327-31		25 -16
0412050-3		30 -24	0412648		30 -52	0413327-32		25 -17
0412052-1		30 -64	0413004-32		27 -	0413327-33		25 -16
0412052-2		30 -64	0413004-33		27 -	0413338		81 -43
0412054-1		30 -17	0413004-34		27 - 4	0413346-2		27 - 3
0412055-1		30 -18	0413004-35		27 -10	0413346-2		27A- 3
0412057-1		30 -47	0413004-35		27A-11	0413347-1		67 -45
0412058-1		30 -46	0413004-36		27 -11	0413347-1		67A-55
0412060-1		30 -12	0413004-36		27A-11	0413351-5		58 - 5
0412061-1		24 - 5	0413004-37		27 -	0413351-6		58 - 6
0412064-1		30 -53	0413004-38		27 -	0413370-1		70 -23
0412065-3		30 -50	0413004-39		27 -	0413372-1		70 - 5
0412066-1		25 -31	0413004-40		27 -	0413372-8		70 - 6
0412066-1		30 - 8	0413004-41		27 - 4	0413373-1		70 -28
0412066-2		25 -32	0413004-41		27A- 4	0413374-1		70 -19
0412066-2		30 - 9	0413004-42		27 -	0413379-1		70 -27
0412067-2		30 -14	0413004-42		27A-	0413380-1		70 -32
0412067-3		30 -15	0413004-43		27 -	0413386-1		28 -22
0412067-4		30 -15	0413004-43		27A-	0413386-3		29 -25
0412073-1		30 -81	0413004-44		27A-	0413387-3		42 -
0412074-3		26 -	0413004-45		27A-	0413387-6		42 -
0412078-2		30 -44	0413028-5		79 - 7	0413387-7		42 -
0412097-1		30 -75	0413028-8		79 - 8	0413388-1		42 - 1
0412121-3		30 -87	0413105-1		25 -14	0413388-5		41 -30
0412132		31 - 5	0413138		87 -21	0413388-6		41 -30
0412168-1		71 -16	0413141-1		87 -12	0413390-23		41 -13
0412171-1		30 -16	0413157		8 -17	0413390-32		41 -28
0412171-1		30 -22	0413157		9 -14	0413390-34		41 -29
0412173-4		31 - 1	0413163-11		67 -37	0413391-1		27 -21
0412173-5		31 - 1	0413163-11		67A-47	0413391-1		27A-25
0412173-6		31 - 1	0413163-18		67 -36	0413391-2		27 -22
0412174-2		31 -11	0413163-212		67A-41	0413391-2		27A-26
0412176-2		31 -19	0413163-213		67A-41	0413394-3		27 -33
0412176-3		31 -19	0413163-23		67 -31	0413394-3		27A-37
0412177-2		31 - 9	0413163-24		67 -31	0413394-4		27 -34
0412184-1		31 -15	0413163-43		67 -37	0413394-4		27A-38
0412467		28 -26	0413163-43		67A-47	0413395-4		27 -30
0412467		29 -28	0413163-47		67 -35	0413395-4		27A-34
0412467		30 -29	0413163-47		67A-45	0413395-6		27 -30
0412467		31 - 6	0413163-57		67A-46	0413395-6		27A-34
0412509-1		44 -37	0413163-7		67 -34	0413396-3		27 -29
0412509-2		44 -38	0413163-7		67A-44	0413396-3		27A-33
0412515-1		31 -23	0413163-8		67 -33	0413396-4		27 -29
0412515-2		31 -23	0413163-8		67A-43	0413396-4		27A-33
0412526-1		30 -48	0413163-9		67 -33	0413397-2		27 -28
0412526-2		30 -48	0413163-9		67A-43	0413397-2		27A-32
0412527-1		21 -35	0413213-26		70 -51	0413397-3		27 -28
0412527-1		21A-39	0413216-6		70 -50	0413397-3		27A-32
0412527-2		21 -37	0413228		67 -44	0413397-5		27A-32
0412527-2		21A-41	0413228		67A-54	0413399-1		58 - 1
0412529-1		31 - 8	0413228		67A-71	0413399-2		58 - 1
0412530-1		30 -31	0413247		12 -19	0413404-1		27 -35A
0412530-1		30 -93	0413247		13 -19	0413404-1		27A-39A
0412531-1		30 -30	0413247		52 -22	0413404-2		27 -35A
0412531-2		30 -30	0413247		52A-23	0413404-2		27A-39A
0412532-1		30 -45	0413257		67 -38	0413406-8		41 -39
0412532-2		30 -45	0413257		67A-48	0413410-5		25 -49
0412533-1		30 -	0413304-1		27 -36	0413410-7		25 -49
0412533-2		30 -	0413304-1		27A-40	0413411-1		28 -32
0412533-3		30 - 6	0413304-2		27 -37	0413411-3		28 -30
0412533-4		30 - 7	0413304-2		27A-41	0413411-5		29 -32
0412534-1		30 - 2	0413305-5		27 -12	0413411-6		29 -34
0412534-3		30 - 2	0413305-5		27A-12	0413412-1		28 -23
0412535-1		30 -76	0413305-6		27 -12	0413412-2		28 -24
0412536-1		30 -51A	0413305-6		27A-12	0413419-201		32 - 1
0412537-1		18 - 2	0413305-7		27 -13	0413419-202		32 - 1
0412537-1		19 - 2	0413305-7		27A-13	0413423-10		27 - 7
0412544-1		31 -19	0413305-8		27 -13	0413423-10		27A- 8
0412544-2		31 -19	0413305-8		27A-13	0413423-9		27 - 6
0412544-3		31 -19	0413325-10		28 -11	0413423-9		27A- 7
0412544-4		31 -19	0413325-11		28 -10	0413424-202		28 - 7
0412545-1		31 -23	0413325-8		29 -14	0413424-203		28 - 6

152 & A152 Parts Catalog

PART NUMBER	FICHE AND FRAME	FIGURE AND INDEX NO.	PART NUMBER	FICHE AND FRAME	FIGURE AND INDEX NO.	PART NUMBER	FICHE AND FRAME	FIGURE AND INDEX NO.
0413424-204		29 -10	0413492-18		25 - 3	0413553-2		52A-30
0413424-205		29 - 9	0413492-19		25 - 3	0413553-20		52A-30
0413424-4		29 -	0413492-20		25 - 3	0413553-22		52A-30
0413424-5		28 -	0413492-201		25 - 2	0413553-22		52B-44
0413425-5		27 -14	0413496-2		56 -17	0413553-24		52A-30
0413425-5		27A-14	0413497-1		25 -51	0413553-24		52B-44
0413425-6		27 -14	0413497-2		25 -51	0413553-26		52A-30
0413425-6		27A-14	0413498-1		29 -26	0413553-26		52B-44
0413426-10		41 -20	0413499-1		25 -70	0413553-28		52A-30
0413426-15		41 -20	0413499-2		25 -70	0413553-28		52B-44
0413426-16		41 -20	0413504-1		44 -20	0413553-3		52 -28
0413426-17		41 -17	0413504-1		57 -16	0413553-3		52A-30
0413426-18		41 -17	0413506-1		44 -28	0413553-30		52A-30
0413426-21		41 -16	0413507-1		44 -25	0413553-30		52B-44
0413426-22		41 -16	0413508-1		29 -37	0413553-32		52A-30
0413426-23		41 -17	0413508-2		29 -38	0413553-32		52B-44
0413426-24		41 -17	0413509-1		52 -35	0413553-34		52A-30
0413426-29		41 -19	0413509-1		52A-35	0413553-34		52B-44
0413426-3		41 -16	0413509-1		52B-43	0413553-36		52A-30
0413426-30		41 -19	0413510-1		59A- 4	0413553-36		52B-44
0413426-31		41 -20	0413511-1		81 -87	0413553-38		52A-30
0413426-32		41 -20	0413516-3		44 -11	0413553-38		52B-44
0413426-33		41 -20	0413516-4		44 -15	0413553-40		52A-30
0413426-34		41 -20	0413516-5		44 -12	0413553-40		52B-44
0413426-4		41 -16	0413516-6		44 -16	0413553-7		52 -28
0413426-5		41 -19	0413517-15		57 - 3	0413553-7		52A-30
0413426-6		41 -19	0413517-3		57 - 9	0413553-8		52 -28
0413426-9		41 -20	0413517-5		57 - 5	0413553-8		52A-30
0413427-3		52 -54	0413518-7		67 -22	0413553-9		52 -28
0413427-3		52A-54	0413518-7		67A-34	0413553-9		52A-30
0413427-3		52B-65	0413523-4		52 -23	0413554-1	<	52 -27
0413428-1		41 -51	0413523-4		52A-24	0413554-1	<	52A-29
0413428-2		41 -51	0413523-4		52A-24	0413554-1-A59		52A-29
0413429-1		27 -68	0413530-1		32 -10	0413554-1-A59		52B-33
0413429-1		27A-72	0413534-1		52 - 2	0413554-1-E83		52B-33
0413429-2		27 -69	0413538-1		52 - 6	0413554-1-279		52A-29
0413429-2		27A-73	0413538-1		52A- 5	0413554-1-279		52B-33
0413429-3		27 -68	0413538-1		52B- 5	0413554-4	<	78 -22
0413429-4		27 -69	0413539-1		24 -25A	0413554-6	<	78 -22
0413430-1		27 -16	0413540-14		52A- 1	0413554-6-A59		78 -22
0413430-5		27 -17	0413540-15		52A- 1	0413554-6-279		78 -22
0413430-5		27A-17	0413540-15		52B- 1	0413554-7	<	52A-29A
0413430-6		27 -17A	0413540-16		52B- 1	0413554-7-A59		52A-29A
0413430-6		27A-18	0413540-7		52 - 1	0413554-7-279		52A-29A
0413430-8		27 -19B	0413540-8		52 - 1	0413555-1		78 -23
0413430-8		27A-22	0413542-1		52 - 4	0413557-1		52 - 5
0413436-2		80 - 6	0413542-1		52A- 3	0413557-1		52A- 4
0413437-1		32 - 5	0413542-1		52B- 3	0413557-1		52B- 4
0413437-1		57 -20	0413543-2		52 - 8	0413558-3		52 -11
0413441-1		57 -11	0413543-2		52A- 7	0413558-5		52A-12
0413450-1-294		41 -48	0413543-2		52B- 7	0413558-9		52A-12
0413452-1		27 - 5	0413544-11	<	52 -24	0413558-9		52B-13
0413452-1		67 -21	0413544-9	<	52 -17	0413559-2	<	52 -26
0413459-10		52 -19	0413546-10		54 - 8	0413559-3	<	52A-27
0413463-3	<	45 -13	0413546-13	<	54 -	0413559-6		52A-27A
0413463-3	<	45A-14	0413546-13-C12		54 -	0413559-7-C12		52A-27A
0413463-3-279	<	45A-14	0413546-13-279		54 -	0413559-7-279		52A-27A
0413463-5	<	45 -13	0413546-14	<	54 - 5	0413559-8-C12		52A-27A
0413463-5-279	<	45A-14	0413546-14-C12		54 - 5	0413559-8-C12		52B-29
0413463-7-279	<	45A-14A	0413546-14-279		54 - 5	0413559-8-279		52A-27A
0413470-1	<	52 -32	0413546-9		54 - 4	0413559-8-279		52B-29
0413470-1	<	52A-32	0413548-1		54A- 4	0413559-9-C12		52B-29
0413470-1-279		52B-41	0413548-1		27 -16	0413559-9-279		52B-29
0413470-1-279		44 -10	0413550-1		27A-16	0413561-1		24 -13
0413484-27		44 -10	0413550-1		52 -10	0413561-2		24 -14
0413484-28		91 - 1	0413550-1		52A-10	0413561-3		24 -15
0413484-28		79 - 7	0413553-1		52B-10	0413564-12		24 -25
0413485-1		79 - 7	0413553-1		52 -28	0413564-14		24 -18
0413485-2		25 - 2	0413553-14		52A-30	0413564-29		24 -19
0413488-1		52 -33	0413553-14		52 -28	0413564-31		24 -21
0413491-1		52A-33	0413553-16		52A-30	0413564-33		24 -26
0413491-1		52B-42	0413553-18		52A-30	0413564-35		24 -23
0413492-17		25 - 3	0413553-2		52 -28	0413564-38		24 -20
						0413564-39		24 -18

152 & A152 Parts Catalog

PART NUMBER	FICHE AND FRAME	FIGURE AND INDEX NO.	PART NUMBER	FICHE AND FRAME	FIGURE AND INDEX NO.	PART NUMBER	FICHE AND FRAME	FIGURE AND INDEX NO.
0413566-1		52 - 9	0413611-4-E83		52B-19	0414040-11		49 -17
0413566-1		52A- 8	0413611-4-279		52B-19	0414040-15		47 -26
0413568-1		52A-20	0413612-4-A59		53B- 1	0414040-15		49 -26
0413569-1		52A-29C	0413612-4-E83		53B- 1	0414041-4		48 - 7
0413569-1		52B-36	0413612-4-279		53B- 1	0414041-4		48A- 7
0413572-1		52A-29E	0413612-5-A59		53B- 4	0414041-4		49 - 8
0413572-1		52A-40B	0413612-5-E83		53B- 4	0414041-4		50 - 8
0413572-1		52B-38	0413612-5-279		53B- 4	0414041-4		50A- 8
0413573-1		27 -24	0413612-6-A59		53B- 6	0414045-1		56 -21
0413573-1		27A-28	0413612-6-E83		53B- 6	0414046-1		26 -23
0413573-2		27 -26	0413612-6-279		53B- 6	0414049-1	#	49 -
0413573-2		27A-30	0413612-7-A59		53B- 8	0414049-2	#	49 -
0413574-1	<	52A-18	0413612-7-E83		53B- 8	0414049-3	#	49 - 6
0413574-1-A59		52A-18	0413612-7-279		53B- 8	0414049-3	#	50 - 6
0413574-1-279		52A-18	0413613-1-A59		52B-20	0414049-3	#	50A- 6
0413574-2	<	52A-25	0413613-1-A59		52B-28	0414049-4	#	49 - 1
0413574-2-A59		52A-25	0413613-1-E83		52B-35	0414049-4	#	50 - 1
0413574-2-279		52A-25	0413613-1-E83		52B-20	0414049-4	#	50A- 1
0413577-11	<	53A- 9	0413613-1-E83		52B-28	0414049-5	#	49 - 6
0413577-11-A59		53A- 9	0413613-1-E83		52B-35	0414049-6	#	49 - 6
0413577-11-279		53A- 9	0413613-1-279		52B-20	0414049-9	#	49 - 2
0413577-3	<	53A- 1	0413613-1-279		52B-28	0414049-9	#	50 - 2
0413577-3-A59		53A- 1	0413613-1-279		52B-35	0414049-9	#	50A- 2
0413577-3-279		53A- 1	0413614-1-A59		78 -22	0414053-1		48 - 8
0413577-4	<	53A- 4	0413614-1-E83		78 -22	0414053-1		48A- 8
0413577-4-A59		53A- 4	0413614-1-279		78 -22	0414053-1		50 - 9
0413577-4-279		53A- 4	0413615-1-A59		52B-34	0414053-1		50A- 9
0413577-6	<	53A- 7	0413615-1-E83		52B-34	0414053-2		48 - 8
0413577-6-A59		53A- 7	0413615-1-279		52B-34	0414053-2		48A- 8
0413577-6-279		53A- 7	0413616-1-C12		52B-31	0414053-2		50 - 9
0413578-1		68 - 1	0413616-1-279		52B-31	0414053-2		50A- 9
0413581-2		24 -36	0413617-1		52B- 8A	0414053-3		48 -32
0413581-3		24 -37	0413618-1		52B-32	0414053-3		50 -33
0413581-4		24 -38	0414010-20		44 -21A	0414053-4		48 -32
0413581-6		24 -32	0414010-7		44 -21	0414053-4		50 -33
0413581-7		24 -33	0414010-9		44 -21	0414054-10		48 -53
0413582-1		27 -67A	0414013-4		87 -11	0414054-10		50 -54
0413584-1		24 -28	0414014-2		25 -12	0414054-11		48 -46
0413587-7		27 - 5A	0414014-2		25 -13	0414054-11		50 -47
0413587-7		27A- 6	0414014-2		44 -31	0414054-18		48 -29
0413587-7		67A-31	0414014-2		44 -32	0414054-18		50 -30
0413588-1		67A-29	0414015-1		44 -30	0414054-19		48 -57
0413589-1		8 -13A	0414016-2		44 -26	0414054-19		50 -58
0413589-1		9 -14A	0414016-3		44 -26A	0414054-20		48 -14
0413589-2		8 -13A	0414017-1		44 -29	0414054-20		50 -15
0413589-2		9 -14A	0414018-2	<	44 -24	0414054-21		48 -27
0413590-1		67A-22	0414018-2-531	<	44 -24	0414054-21		50 -28
0413591-1		27 -67B	0414018-4		44 -22	0414054-22		48 -12
0413591-1		27A-71	0414018-5	<	44 -22	0414054-22		50 -13
0413593-1		52A- 8	0414018-5-531		44 -22	0414054-24		48 -23
0413593-1		52B- 8	0414019-1		44 -18	0414054-24		48A-24
0413594-4		85B-20	0414019-2		44 -19	0414054-24		50 -24
0413597-200		67A-56	0414022-1		45 -29	0414054-24		50A-25
0413597-201		67A-56	0414022-1		45A-33	0414054-31		48 -60
0413598-1		67A-58	0414024-4		56 - 7	0414054-31		50 -61
0413598-2		67A-58	0414030-2		44 -34	0414054-35		48 -23
0413599-1		55 - 3	0414033-8		49 - 5	0414054-35		48A-24
0413599-1		67A-65	0414033-8		50 - 5	0414054-35		50 -24
0413601-1		67A-61	0414033-8		50A- 5	0414054-35		50A-25
0413601-2		67A-59	0414035-6		47 -18	0414054-37		48 -39
0413602-1		67A-60	0414035-6		49 -18	0414054-37		50 -40
0413607-1		59A- 5	0414039-1		47 - 9	0414054-38		48 -39
0413608-1-C12		54A-	0414039-1		49 - 9	0414054-38		50 -40
0413608-1-279		54A-	0414039-2		47 -10	0414054-40		48 -33
0413608-200-C12		54A- 6	0414039-2		49 -10	0414054-40		48A-33
0413608-200-279		54A- 6	0414039-5		48 - 9	0414054-40		50 -34
0413608-5		54A- 5	0414039-5		48A- 9	0414054-40		50A-34
0413609-1		85A- 4A	0414039-5		50 -10	0414054-41		48 -33
0413610-1		52B-21	0414039-5		50A-10	0414054-41		48A-33
0413611-1-A59		52B-19	0414039-6		48 -10	0414054-41		50 -34
0413611-1-279		52B-19	0414039-6		48A-10	0414054-41		50A-34
0413611-2-A59		52B-27	0414039-6		50 -11	0414054-5		48 -48
0413611-2-E83		52B-27	0414039-6		50A-11	0414054-5		50 -49
0413611-2-279		52B-27	0414040-11		47 -17	0414054-7		48 -55

152 & A152 Parts Catalog

PART NUMBER	FICHE AND FRAME	FIGURE AND INDEX NO.	PART NUMBER	FICHE AND FRAME	FIGURE AND INDEX NO.	PART NUMBER	FICHE AND FRAME	FIGURE AND INDEX NO.
0414054-7		50 -56	0414084-2	#	47 -	0415017-4		45 - 4
0414054-8		48 -54	0414084-3	#	47 - 6	0415018-2		41 -35
0414054-8		50 -55	0414084-4	#	47 - 6	0415021-13		45 -10
0414057-1		48 -44	0414084-5	#	47 - 1	0415021-13		45A-11
0414057-1		50 -45	0414084-5	#	48A- 1	0415021-16		44 -35
0414058-1	#	50 -	0414084-6	#	47 - 3	0415021-17	#	44 - 1
0414058-2	#	50 -	0414084-6	#	48A- 3	0415021-2	#	45 -18
0414058-3	#	50 - 6	0414084-7	#	47 - 7	0415021-22	#	45 -20
0414058-4	#	50 - 6	0414084-7	#	48A- 6	0415021-22	#	45A-21
0414058-5	#	50A-	0414085-1	#	48A-	0415021-23	#	45 -19
0414058-6	#	50A-	0414085-2	#	48A-	0415021-23	#	45A-20
0414058-7	#	50A- 6	0414085-3	#	48A- 5	0415021-26	#	45A-18B
0414058-8	#	50A- 6	0414085-4	#	48A- 5	0415021-27	#	45A-18A
0414061-1		48 -25	0414086-1	#	49 -	0415021-28	#	45 -15
0414061-1		50 -26	0414086-2	#	49 -	0415021-28	#	45A-17
0414063-1	#	47 - 5	0414086-3	#	49 - 6	0415021-29	#	45 -16
0414063-1	#	48 - 5	0414086-4	#	49 - 6	0415021-29	#	45A-16
0414063-1	#	48A- 5	0414086-5	#	49 - 6	0415021-3	#	45 -21
0414065-1		48 - 7	0414086-5	#	50A- 6	0415021-33	#	45 - 1
0414065-1		50 - 8	0414086-6	#	49 - 1	0415021-33	#	45A- 1
0414066-1		47 -32	0414086-6	#	50A- 1	0415021-34	#	45 - 2
0414066-1		49 -32	0414086-7	#	49 - 2	0415021-34	#	45A- 2
0414067-1		87 -15	0414086-7	#	50A- 2	0415021-37	#	45A-22
0414067-3		87 -15	0414087-1	#	50A-	0415021-38	#	45A-19
0414068-1		87 - 1	0414087-2	#	50A-	0415021-42	#	45 -10
0414068-3		87 - 1	0414087-3	#	50A- 6	0415021-42	#	45A-11
0414068-5		87 - 1	0414087-4	#	50A- 6	0415021-43	#	45A- 1
0414069-1		87 - 7	0414088-1	#	50A- 8	0415021-44	#	45A- 2
0414070-1	#	47 -	0414089-1	#	48A-	0415022-1	#	41 -56
0414070-10		47 - 4	0414089-2	#	48A-	0415022-2	#	41 -56
0414070-10		48 - 4	0414089-3	#	48A- 5	0415022-3	#	41 -56
0414070-11		47 - 8	0414089-4	#	48A- 5	0415022-3	#	41 -56
0414070-11		48 - 7	0414090-1	#	47 -	0415022-4	#	41 -56
0414070-2	#	47 -	0414090-10		47 - 4	0415022-4	#	41 -56
0414070-3	#	47 - 6	0414090-10		48A- 4	0415022-5	#	41 -56
0414070-4	#	47 - 6	0414090-11		48A- 7	0415022-6	#	41 -56
0414070-5	#	47 - 1	0414090-11	#	47 - 8	0415023-1	#	44 -17
0414070-5	#	48 - 1	0414090-2	#	47 -	0415023-3	#	44 -13
0414070-6	#	47 - 3	0414090-3	#	47 - 6	0415023-3	#	91 - 2
0414070-6	#	48 - 3	0414090-4	#	47 - 6	0415024-1	#	45 - 9
0414070-7	#	47 - 7	0414090-5	#	47 - 1	0415024-2	#	45 - 5
0414070-7	#	48 - 6	0414090-5	#	48A- 1	0415024-3	#	41 -55
0414071-1	#	48 -	0414090-6	#	47 - 3	0415024-4	#	41 -55
0414071-2	#	48 -	0414090-6	#	48A- 3	0415024-5	#	41 -55
0414071-3	#	48 - 5	0414090-7	#	47 - 7	0415025-1	<	52 -29
0414071-4	#	48 - 5	0414090-7	#	48A- 6	0415025-2	<	52 -29
0414072-3		44 -26B	0415003-8		52 -30	0415025-3		52 -29
0414074-4		48A-64	0415003-9		52 -30	0415025-4		52 -29
0414074-4		50A-65	0415008-23	#	49 - 4	0415026-1		45 -17
0414074-5		48A-57	0415008-23	#	50 - 4	0415026-1		45A-18
0414074-5		50A-58	0415008-23	#	50A- 4	0415026-3		45A-18C
0414074-6		48A-58	0415008-24	#	49 - 7	0415029-1		52A-31
0414074-6		50A-59	0415008-24	#	50 - 7	0415029-1		52B-45
0414074-9		48A-58	0415008-24	#	50A- 7	0415030-1		70 -52
0414074-9		50A-59	0415010-1		56 - 5	0415030-2		70 -52
0414078-1		48A-32	0415013-7		44 -14	0415031-1		41 -53
0414078-1		50A-33	0415014-1		56 -29	0415031-14		45A- 8
0414079-1		48A-60	0415014-2		56 -30	0415031-16		45A- 8
0414079-1		50A-61	0415015-1		56 -28	0415031-18		45A- 6
0414080-1		48A-66	0415016-2		46 - 1	0415031-19		45A- 5
0414080-1		50A-67	0415016-3		46 - 2	0415031-2		41 -53
0414080-2		48A-67	0415016-4		46 - 3	0415031-23		41 -53
0414080-2		50A-68	0415016-5		46 - 4	0415031-24		41 -53
0414082-1		48A-39	0415016-6		46 - 6	0415031-3		45A- 3
0414082-1		50A-40	0415016-7		46 - 5	0415031-4		45A- 4
0414082-4		48A-39	0415016-8		46 - 7	0415032-1	#	41 -54A
0414082-4		50A-40	0415017-12		45 - 6	0415032-2	#	41 -54A
0414083-1		48A-47	0415017-13		41 -53	0415033-1	<	45A-23
0414083-1		50A-48	0415017-14		41 -53	0415033-1-279		45A-23
0414084-1	#	47 -	0415017-19		45 - 3B	0415033-1-532		45A-23
0414084-10		47 - 4	0415017-20		45 - 4B	0415034-1		45A- 7
0414084-10		48A- 4	0415017-21		45 - 3A	0415034-2		45A- 7
0414084-11		48A- 7	0415017-22		45 - 4A	0415035-1		2 -15
0414084-11	#	47 - 8	0415017-3		45 - 3	0415035-1		2A-23

152 & A152 Parts Catalog

PART NUMBER	FICHE AND FRAME	FIGURE AND INDEX NO.	PART NUMBER	FICHE AND FRAME	FIGURE AND INDEX NO.	PART NUMBER	FICHE AND FRAME	FIGURE AND INDEX NO.
0415044-1		70 -53	0422292		9 - 6A	0422405-23		11 -
0415044-2		70 -53	0422292		9 - 8	0422405-24		11 -
0416001-1		81 -19	0422400-14		11 -25	0422405-3		11 -
0416002-1		62 -29	0422401-10		5 -62	0422405-4		11 -
0416002-2		62 -30	0422401-11		5 -63	0422405-5		11 - 2
0416003-1		81 -46B	0422401-11		7 -67	0422405-6		11 - 2
0417005-3		43 - 7	0422401-12		5 -64	0422405-7		11 - 2
0417006-1		42 - 4	0422401-12		7 -68	0422405-8		11 - 2
0417006-2		42 - 5	0422401-13		5 -65	0422405-9		11 - 1
0417006-3		42 - 3	0422401-14		5 -66	0422406-1		11 -20
0417006-4		42 - 6	0422401-14		7 -70	0422406-2		11 -20
0417006-5		42 - 4A	0422401-16		7 -66	0422406-3		11 -17
0417006-6		42 - 6B	0422401-17		7 -64	0422406-4		11 -17
0417007-1		41 -24	0422401-18		7 -69	0422407-13		11 -14
0417008-13		41 - 3	0422401-20		5 -58	0422407-14		11 -14
0417008-14		41 - 3	0422401-209		9 -36	0422407-15		11 -14
0417008-15		41 - 4	0422401-21		7 -62	0422407-16		11 -14
0417008-16		41 - 4	0422401-211		9 -23	0422407-5		11 -14
0417008-17		41 - 4	0422401-213		9 -	0422407-6		11 -14
0417008-18		41 - 4	0422401-219		9 -	0422407-7		11 -14
0417008-200		41 - 3	0422401-221		9 -23	0422407-8		11 -14
0417008-201		41 - 3	0422401-24		9 -24	0422408-1		5 -49
0417008-210		41 - 1	0422401-25		9 - 1	0422408-2		7 -53
0417008-211		41 - 1	0422401-31		5 -	0422409-1		9 -13
0417008-212		41 - 1	0422401-33		7 -	0422409-2		9 -13
0417008-213		41 - 1	0422401-35		5 -	0422409-3		9 -28
0417008-33		41 - 1	0422401-36		5 -58	0422409-4		9 -28
0417008-34		41 - 1	0422401-37		7 -	0422410-1		5 -21
0417008-35		41 - 1	0422401-39		5 -61	0422410-1		7 -25
0417008-36		41 - 1	0422401-39		7 -65	0422410-2		5 -21
0417010-4		42 -17	0422401-40		7 -62	0422410-2		7 -25
0417011-2		41 -33	0422401-41		5 -	0422411-1		11 -19
0417012-1		43 - 8	0422401-42		9 - 1	0422411-2		11 -19
0417015-1		41 -48A	0422401-43		7 -	0422412-1		11 -16
0417016-1		42 -18	0422401-49		5 -	0422412-2		11 -16
0417016-2		42 -18	0422401-51		7 -	0422413-1		5 -52
041840-1		61 - 1	0422401-6		9 -37	0422413-10		7 -56
0420015-1		4 -34	0422401-7		5 -59	0422413-11		7 -57
0420015-1		5 -45	0422401-7		7 -63	0422413-12		7 -57
0420015-1		6 -43	0422401-8		5 -60	0422413-15		7 -60
0420015-1		7 -49	0422401-9		5 -61	0422413-16		7 -60
0420015-2		4 -35	0422401-9		7 -65	0422413-2		5 -52
0420015-2		5 -46	0422402-1		5 -62	0422413-25		5 -55
0420015-2		6 -44	0422402-10		7 -69	0422413-26		5 -55
0420015-2		7 -50	0422402-11		5 -58	0422413-27		7 -59
0420030-5		3 -14	0422402-12		7 -62	0422413-28		7 -59
0420030-6		3 -14	0422402-204		9 -	0422413-3		5 -53
0420030-7		3 -15	0422402-206		9 -23	0422413-4		5 -53
0420030-8		3 -15	0422402-208		9 -36	0422413-7		5 -56
0420034-1		3 -50	0422402-210		9 -	0422413-8		5 -56
0421000-1		17 - 1	0422402-22		5 -	0422413-9		7 -56
0421000-2		17 - 1	0422402-24		7 -	0422414-1		11 -18
0421000-7		17 - 1	0422402-25		9 -24A	0422414-10		11 -18
0421000-8		17 - 1	0422402-26		5 -	0422414-2		11 -18
0421001-1		17 - 8	0422402-27		5 -58	0422414-9		11 -18
0421001-2		17 - 8	0422402-28		7 -	0422415-1		11 -10
0421001-3		17 - 8	0422402-29		7 -62	0422415-2		11 -10
0421002-1		17 -14	0422402-3		9 - 1	0422415-3		11 -10
0421002-2		17 -14	0422402-30		5 -	0422415-4		11 -10
0421002-3		17 -14	0422402-31		9 - 1	0422415-5		11 -10
0421002-4		17 -14	0422402-32		7 -	0422415-6		11 -10
0422014-4		8 -14	0422402-34		5 -63	0422415-7		11 -10
0422014-4		9 -15	0422402-34		7 -67	0422415-8		11 -10
0422014-4		67 -29	0422402-5		9 -24A	0422416-1		5 -14
0422130		81 - 8	0422402-6		9 -37	0422416-1		7 -17
0422229-11		10 -20	0422402-7		5 -65	0422417-1		5 - 7
0422229-11		11 -24	0422402-9		7 -66	0422417-1		7 - 7
0422280		15 - 6	0422405-1		11 -	0422417-2		5 - 8
0422291		8 - 3	0422405-10		11 - 1	0422417-2		7 - 8
0422291		8 -10	0422405-19		11 - 1	0422418-1		5 -13
0422291		9 - 3	0422405-2		11 -	0422418-1		7 -16
0422291		9 -10	0422405-20		11 - 1	0422419-1		5 -38
0422292		8 - 6B	0422405-21		11 -	0422419-1		7 -42
0422292		8 - 8	0422405-22		11 -	0422419-2		5 -38

152 & A152 Parts Catalog

PART NUMBER	FICHE AND FRAME	FIGURE AND INDEX NO.	PART NUMBER	FICHE AND FRAME	FIGURE AND INDEX NO.	PART NUMBER	FICHE AND FRAME	FIGURE AND INDEX NO.
0422419-2		7 -42	0426005-218		8 -34	0426506		5 -11
0422419-3		5 -39	0426005-219		8 -34	0426506		6 -10
0422419-3		7 -43	0426005-221		8 -	0426506		7 -12
0422419-4		5 -39	0426005-226		8 -	0426506-1		6 -9
0422419-4		7 -43	0426005-227		8 -	0426506-1		7 -13
0422419-5		5 -40	0426005-228		8 -23	0426506-2		5 -11
0422419-5		7 -44	0426005-229		8 -23	0426506-2		7 -12
0422419-6		5 -40	0426005-231		8 -23	0426506-3		7 -13
0422419-6		7 -44	0426005-26		4 -49	0426507-12		4 -3
0422430-1		15 -1	0426005-27		4 -53	0426507-12		6 -3
0422430-2		15 -1	0426005-31		6 -55	0426507-13		4 -3
0422435-1		88A- 4	0426005-32		6 -59	0426507-13		6 -3
0422436-1		88A- 1	0426005-61		8 -	0426507-14		5 -3
0423007-1		3 -39	0426005-93		8 -1	0426507-14		7 -3
0423008-3		4 -66	0426011-4		3 -26	0426507-15		5 -3
0423008-3		5 -75	0426011-4		12 -30	0426507-15		7 -3
0423008-3		6 -73	0426011-4		13 -31	0426507-20		4 -3
0423008-3		7 -79	0426013-1		12 -31	0426507-20		6 -3
0423008-4		4 -67	0426013-1		13 -32	0426507-21		4 -3
0423008-4		5 -76	0426013-2		3 -26	0426507-21		6 -3
0423008-4		6 -74	0426013-2		12 -29	0426507-22		5 -3
0423008-4		7 -81	0426013-2		13 -30	0426507-22		7 -3
0423008-5		4 -67	0426015-1		12 -21	0426507-23		5 -3
0423008-5		5 -76	0426015-1		13 -22	0426507-23		7 -3
0423008-5		6 -74	0426015-5		12 -22	0426511-18		3 -14
0423008-5		7 -81	0426015-5		13 -23	0426511-19		3 -14
0423016-1		72- 34	0426019-23		12 -1	0426512-6		6 -7
0423016-1		72A- 34	0426019-24		12 -1	0426512-6		7 -10
0423230-8		7 -38	0426021-25		13 -1	0426512-6		13 -12
0423541-10		4 -47	0426021-26		13 -1	0426512-8		13 -13
0423541-13		4 -43	0426209-4		4 -65	0426515-2		4 -32
0423541-14		4 -43	0426209-4		5 -74	0426515-2		5 -47
0423541-15		4 -44	0426209-4		6 -72	0426515-3		4 -32
0423541-16		4 -44	0426209-4		7 -78	0426515-3		5 -47
0423541-19		6 -49	0426300		10 -	0426515-4		4 -33
0423541-20		6 -49	0426300-1		10 -	0426515-4		5 -48
0423541-21		6 -50	0426300-10		10 -	0426515-5		4 -33
0423541-22		6 -50	0426300-11		10 -	0426515-5		5 -48
0423541-31		6 -52	0426300-12		10 -	0426516-15		3 -15
0423541-32		6 -52	0426300-2		10 -2	0426516-16		3 -15
0423541-33		6 -53	0426300-3		10 -2	0426522-1		5 -9
0423541-34		6 -53	0426300-6		10 -	0426522-1		7 -9
0423541-7		4 -46	0426300-7		10 -	0426522-2		5 -9
0423541-8		4 -46	0426300-9		10 -	0426522-2		7 -9
0423541-9		4 -47	0426306		10 -14	0426901-10		16 -32
0423542-4		88A- 6	0426306-1		10 -14	0426901-11		16 -32
0423542-5		88A-12	0426307		10 -11	0426901-12		16 -31
0423542-8		88A- 7	0426307-1		10 -11	0426901-13		16 -31
0425142-1		16 -37	0426400-12		10 -22	0426901-15		16 -14
0425142-2		16 -37	0426400-12		11 -26	0426901-16		16 -14
0426003-18		3 -46	0426400-13		10 -22	0426901-17		16 -38
0426003-19		3 -46	0426400-13		11 -26	0426901-6		16 -33
0426003-23		3 -46	0426400-14		10 -21	0426901-7		16 -33
0426003-24		3 -46	0426400-31		10 -19	0426908		16 -21
0426003-29		3 -46	0426400-32		10 -19	0426908-1		16 -21
0426003-30		3 -46	0426400-33		11 -22	0430004-10		21 -44
0426005-101		4 -	0426400-34		11 -22	0430004-10		21A-42
0426005-102		4 -	0426400-35		10 -17	0430004-11		18 -43
0426005-103		6 -	0426400-36		10 -17	0430004-11		18A-39
0426005-104		6 -	0426400-37		10 -17	0430004-11		19 -46
0426005-105		4 -	0426400-38		10 -17	0430004-11		19A-39
0426005-106		4 -	0426400-39		11 -20	0430011-1		22 -29
0426005-107		6 -	0426400-40		11 -20	0430011-2		23 -13
0426005-108		6 -	0426400-41		11 -20	0430011-3		89 -10
0426005-109		8 -1	0426400-42		11 -20	0430011-6		89 -10
0426005-110		8 -1	0426400-43		10 -17	0431001-30		21 -23
0426005-113		4 -	0426400-44		10 -17	0431001-30		21A-26
0426005-114		4 -	0426400-45		10 -17	0431001-31		21 -21
0426005-115		6 -	0426400-46		10 -17	0431004-10		22 -6
0426005-116		6 -	0426400-47		11 -20	0431004-11		22 -12
0426005-125		4 -	0426400-48		11 -20	0431004-12		22 -15
0426005-127		6 -	0426400-49		11 -20	0431004-13		22 -16
0426005-14		4 -53	0426400-50		11 -20	0431004-14		22 -17
0426005-14		6 -59	0426506		4 -5	0431004-18		22 -14

152 & A152 Parts Catalog

PART NUMBER	FICHE AND FRAME	FIGURE AND INDEX NO.	PART NUMBER	FICHE AND FRAME	FIGURE AND INDEX NO.	PART NUMBER	FICHE AND FRAME	FIGURE AND INDEX NO.
0431004-21		23 -38	0432001-26		21A-34	0432001-75		18 -22
0431004-22		23 -36	0432001-27		21 -33	0432001-75		18A-18
0431004-23		23 -37	0432001-27		21A-35	0432001-77		18 -
0431004-24		23 -34	0432001-28		21 -28	0432001-79		19 -
0431004-25		23 -33	0432001-28		21A-36	0432001-8		18 -14
0431004-26		23 -31	0432001-30		21 -34	0432001-8		18A- 9
0431004-37		23 -32	0432001-30		21A-38	0432001-80		19 -15A
0431004-48		22 -18	0432001-33		21 -27	0432001-80		19A- 7
0431005-1		23 -39	0432001-33		21A-30	0432001-81		18 - 9A
0431007-4		23 -35	0432001-34		21 -20	0432001-81		18A- 7
0431009-3		22 -23	0432001-34		21A- 8	0432001-82		18 -38
0431010-1		22 -22	0432001-34		21A-21	0432001-82		18A-35
0431010-7		22 -21	0432001-35		21 -30	0432001-83		18 -37
0431015-7		18 -45	0432001-35		21A-32	0432001-83		18A-34
0431015-7		18A-42	0432001-36		21 -31	0432001-85		21 -12
0431015-7		19 -48	0432001-36		21A-33	0432001-9		18 -15
0431015-7		19A-42	0432001-37		18 -20	0432001-9		18A-10
0431015-8		18 -46	0432001-37		18A-15	0432003-1		18 -36
0431015-8		18A-43	0432001-41		18 -21	0432003-1		19 -39
0431015-8		19 -49	0432001-41		18A-17	0432003-2		21 - 6A
0431015-8		19A-43	0432001-41		19 -19	0432004-9		18 -10
0431017-2		89 -13	0432001-41		19A-12	0432004-9		19 -10
0431022-2		22 -13	0432001-42		21 -19	0432005-1		18 - 5
0431023-1		22 -31	0432001-42		21A-20	0432005-1		19 - 5
0431023-7		22 -31	0432001-43		18 -25	0432005-2		18 - 6
0431024-1		22 -34	0432001-43		18A-22	0432005-2		19 - 6
0431028-1		23 -12	0432001-43		19 -28	0432006-1		19 -21
0431028-2		23 -11	0432001-43		19A-22	0432006-1		19A-14
0431028-3		23 -10	0432001-44		18 -40	0432007-1		19 -14
0431028-4		23 - 9	0432001-44		18A-37	0432007-2		19 -15
0431028-5		23 - 8	0432001-46		18 -18	0432007-3		18 -20A
0431028-6		23 - 7	0432001-46		18A-13	0432007-3		18A-16
0431032-1		22 -	0432001-46		19 -23	0432007-3		19 -20
0431032-10		22 -28	0432001-46		19A-16	0432007-3		19A-13
0431032-13		22 - 7	0432001-5		21 -29	0432011-1		21 -38
0431032-15		22 - 8	0432001-51		21 - 6A	0432011-1		21A-44
0431032-16		22 - 8	0432001-52		21 - 6A	0432012-4		21A- 1
0431032-17		22 -19	0432001-53		18 -31	0432012-4		21 - 1
0431032-19		22 -19A	0432001-53		19 -34	0432013-1		21A- 6
0431032-2		22 -	0432001-54		18 -38	0432020-3		18A-
0431032-23		22 -	0432001-55		18 -37	0432020-4		19A-
0431032-24		22 -	0432001-56		18 - 8	0432020-6		21A- 8
0431032-26		22 - 5	0432001-56		18A- 5	0432020-7		21A-31
0431032-3		22 - 4	0432001-56		19 - 8	0432134-1		76 - 4
0431032-4		22 - 4	0432001-56		19A- 5	0432163-3		21 -38
0431032-5		22 - 5	0432001-57		21 -26	0432165-1		18 -34
0431032-6		22 -27	0432001-57		21A-29	0432165-1		19 -37
0431032-8		22 -26	0432001-59		18 -	0432166-5		21 - 1
0431032-9		22 -25	0432001-6		18 -17	0432169-1		31 -10
0431033-1		22 -20	0432001-6		18A-12	0432171-1		21A-13
0431034-1		22 - 9	0432001-6		19 -22	0432172-1		21A-12
0431034-2		22 -10	0432001-6		19A-15	0432173-1		18A-31
0432001-12		18 -30	0432001-61		19 -	0432173-1		19A-31
0432001-12		18A-27	0432001-62		19 -44	0432173-3		18A-33
0432001-15		18 - 9	0432001-62		19A-38	0432173-3		19A-33
0432001-15		18A- 6	0432001-63		19 -43	0432174-1		21A-24
0432001-15		19 - 9	0432001-63		19A-37	0432175-1		18A-28
0432001-15		19A- 6	0432001-64		19 -41	0432175-1		19A-28
0432001-16		18 -41	0432001-64		19A-35	0433007		23 -14
0432001-16		18A-38	0432001-65		19 -40	0433010-1		23 -
0432001-19		18 -16	0432001-65		19A-34	0433010-10		23 -26
0432001-19		18A-11	0432001-66		19 -16	0433010-12		23 -29
0432001-19		19 -18	0432001-66		19A- 9	0433010-15		23 -
0432001-19		19A-11	0432001-67		19 -17	0433010-2		23 -25
0432001-20		18 -16	0432001-67		19A-10	0433010-3		23 -28
0432001-20		18A-11	0432001-70		19 -33	0433010-4		23 -24
0432001-20		19 -18	0432001-70		19A-27	0433010-5		23 -21
0432001-20		19A-11	0432001-71		21 -11	0433010-6		23 - 5
0432001-21		21 -12	0432001-72		19 -26	0433010-7		23 -30
0432001-22		21 -19	0432001-72		19A-19	0433010-8		23 -40
0432001-22		21A-20	0432001-73		19 -25	0433010-9		23 -27
0432001-23		21 -18	0432001-73		19A-18	0433133-1		31 - 7
0432001-23		21A-19	0432001-74		18 -23	0433134-3		21 -24
0432001-26		21 -32	0432001-74		18A-19	0433134-3		21A-27

152 & A152 Parts Catalog

PART NUMBER	FICHE AND FRAME	FIGURE AND INDEX NO.	PART NUMBER	FICHE AND FRAME	FIGURE AND INDEX NO.	PART NUMBER	FICHE AND FRAME	FIGURE AND INDEX NO.
0433134-6		21 -25	0450080-7		61D-18	0452233-4		61C-29
0433134-6		21A-28	0450258		80 -23	0452233-5		61B-31
0433137-1		23 -41	0450349-4		86A-11	0452233-5		61C-31
0433137-2		23 -42	0451003-36		62 - 6	0452233-6		61B-35
0433139-1		23 -22	0452203-14		61 -33	0452233-6		61C-35
0433140-1		23 -35	0452203-23		61 -33	0452234-1		61B-50
0433141-1		31 - 7	0452203-24		61 -33	0452234-1		61C-48
0434155-1		21 -15	0452203-35		61 -33	0452235-1		61B-39
0434155-1		21A-16	0452203-36		61 -33	0452235-13		61C-39
0434155-2		21 -16	0452203-37		61 -33	0452235-3		61B-38
0434155-2		21A-17	0452217-11		61 -24	0452235-4		61B-39
0441132		68 -18	0452217-11		61A-25	0453001-7		27 -51
0441203-1		38 -15	0452217-31		61 - 1	0453001-8		27 -51
0441204-11		26 - 9	0452217-31		61A- 1	0453002-16		67 -16
0441204-12		26 -10	0452217-31		61B- 1	0453002-33		67 -14
0441204-15		26 - 9	0452217-31		61C- 1	0453002-4		67 -15
0441204-16		26 -10	0452217-32		61 -23	0453002-4		67A-20
0441204-19		26 - 9	0452217-37		61 -25	0453004-2		86 -29
0441204-20		26 -10	0452217-37		61A-26	0453006-4		67 -10
0441204-7		26 -14	0452217-39		61 - 1	0453009-13		27 -44
0441204-8		26 -15	0452217-39		61A- 1	0453009-13		27A-48
0441209-1		26 - 3	0452217-39		61B- 1	0453009-14		27 -48
0441209-2		26 - 4	0452217-39		61C- 1	0453009-14		27A-50
0441212-5		38 - 1	0452217-41		61 -29	0453009-7		27 -44
0441212-6		38 - 1	0452217-41		61A-31	0453009-8		27 -48
0441214-7		38 - 4	0452217-43		61A-23	0453009-9		27 -42
0441214-8		38 - 4	0452218-1		61 -31	0453009-9		27A-46
0441217-18		38 -37	0452218-1		61A-33	0453010-1		67 -17
0441217-19		38 -37	0452220-1		61 - 6	0453011-1		86 -30
0441217-214		38 -37	0452220-1		61A- 6	0453012-1		27 -60
0441217-215		38 -37	0452220-1		61B- 6	0453013-1		86 -30
0441218-1		38 -33	0452220-1		61C- 6	0453015-1		67A-19
0441218-2		38 -33	0452220-2		61 - 7	0453015-1		85B-19
0441221-1		38 - 2	0452220-2		61A- 7	0453016-1		67A-10
0441221-1		38 -16	0452220-2		61B- 7	0453017-1		67A-12A
0441224-1		38 - 5	0452220-2		61C- 7	0453018-1		67A-13A
0441225-1		38 -44	0452220-5		61 - 8	0453019-1		67A-12B
0441225-2		38 -44	0452220-5		61A- 8	0453020-1		67A-11A
0441226-1		38 -47	0452220-5		61B- 8	0453107-4		27 -55
0441226-2		38 -47	0452220-5		61C- 8	0453107-4		27A-55
0441227-1		38 -42	0452226-3		61 -45	0453107-5		27 -54
0441227-2		38 -42	0452226-3		61A-52	0453107-5		27A-54
0441228-1		38 -35	0452228-1		88 - 5	0453110		27 -56
0441228-2		38 -35	0452228-1		88 -11	0453110		27A-56
0442017-1		34 -12	0452229-1		88 - 1	0453114-6		27 -52
0442142-1		33 -16	0452229-1		88 - 7	0453114-7		27 -52A
0442143-2		33 -17	0452230-1		61A-40	0453115-2		27 -53
0442145-1		2 -30	0452230-1		61 -34	0453115-2		27A-53
0442145-1		2A- 4	0452230-2		61A-35	0453116-11		27 -57
0442145-1		34 -31	0452230-2		61B-23	0453116-11		27A-57
0442503-7		34 - 3	0452230-2		61C-23	0453116-12		27 -58
0442504-13		34 -	0452230-2		61 -49	0453116-12		27A-58
0442504-201		34 - 2	0452230-200		61 -34	0453116-13		27 -59
0442506-1		34 -34	0452230-201		61 -34	0453116-13		27A-59
0442506-2		34 -46	0452230-202		61 -34	0453116-14		27 -59
0442506-8		34 -44	0452230-3		61A-39	0453116-14		27A-59
0442506-9		34 -45	0452230-3		61 -34	0453119-1		27 -52B
0442512-1		37 -	0452230-4		61A-40	0453119-1		27A-52
0450052-1		62 -79	0452230-4		61 -34	0453120-1		27 -51
0450052-2		62 -79	0452232-1		61B-36	0453120-1		27A-51
0450052-3		62 -79	0452232-1		61C-36	0454002-10		64A- 4
0450061-1		86A- 7	0452232-7		61B-37A	0454002-10		64 - 4
0450061-6		86A- 7	0452232-7		61C-38	0454002-11		64A- 2
0450066-5		62 -89B	0452232-8		61B-37	0454002-11		64 - 2
0450066-6		62 -90	0452232-8		61C-37	0454002-2		64A- 5
0450066-7		62 -91	0452233-11		61C-27	0454002-2		64 - 5
0450066-8		62 -91	0452233-12		61B-27	0454002-4		64A- 3
0450070-4		62 -87	0452233-13		61B-27	0454002-4		64 - 3
0450070-5		62 -86	0452233-14		61B-27	0454009-5		64A- 1
0450072-1		60 - 7	0452233-15		61B-30	0454009-5		64 - 1
0450073-1		60 - 4	0452233-15		61C-30	0454009-6		64B- 1
0450076-1		60 - 6	0452233-3		61B-28	0454010-1		64 - 9
0450080-1		61D- 1	0452233-3		61C-28	0454010-9		64A- 9
0450080-2		61D- 2	0452233-4		61B-29	0454010-9		64B- 9

152 & A152 Parts Catalog

PART NUMBER	FICHE AND FRAME	FIGURE AND INDEX NO.	PART NUMBER	FICHE AND FRAME	FIGURE AND INDEX NO.	PART NUMBER	FICHE AND FRAME	FIGURE AND INDEX NO.
0454011-1		64 -	0455024-23		61 -44	0460129-1		70 -35
0454011-2		64A-	0455024-23		61A-51	0460132-1		76 - 6
0454011-200		64 -	0455024-23		61B-49	0460150-1		75 -29
0454013-1		62 -41C	0455024-23		61C-47	0460150-1		75A-28
0454021-1		64B-	0455024-24		61 -43	0460151-1		71 -32
0454022-1		62 -41C	0455024-24		61A-50	0460152-1		76 - 8
0454022-5		62 -41C	0455024-24		61B-48	0460153-1		76 -10
0454023-1		64B- 2	0455024-24		61C-46	0460155-1		55 - 1
0454023-2		64B- 3	0455024-25		61B-45	0460155-3		55 - 1
0454023-3		64B- 4	0455024-25		61C-43	0460200-1		71 -11
0454023-4		64B- 5	0455024-26		61B-45	0460204-1		4 -36
0455005-2		66 -77	0455024-26		61C-43	0460204-1		5 -41
0455005-3		66 -75	0455024-3		61 -42	0460204-1		6 -36
0455005-7		66 -74	0455024-3		61A-49	0460204-1		7 -45
0455006-3		66 -67A	0455024-3		61B-47	0460204-2		4 -37
0455006-5		66 -66	0455024-3		61C-45	0460204-2		5 -41
0455007-1		66 -49	0455024-5		61 -40	0460204-2		6 -37
0455008-1		66 -17	0455024-5		61A-47	0460204-2		7 -45
0455009-3		66 -48	0455024-5		61B-45	0460205-1		4 -38
0455012-1		66 - 1	0455024-6		61 -39	0460205-1		5 -41A
0455012-10		66 - 3	0455024-6		61A-46	0460205-1		6 -38
0455012-11		66 - 9	0455024-6		61B-44	0460205-1		7 -45A
0455012-7		66 -15	0455024-6		61C-42	0460205-2		4 -39
0455013-14		66 -21	0455024-8		61 -42	0460205-2		5 -41A
0455013-17		66 -29	0455024-8		61A-49	0460205-2		6 -39
0455013-19		66 -26	0455024-8		61B-47	0460205-2		7 -45A
0455013-21		66 -24	0455024-8		61C-45	0460206-1		74 -13
0455013-23		66 -33	0455026-1		61 - 2	0460207-1		74 - 1
0455013-24		66 -22	0455026-1		61A- 2	0460208-1		52 - 7
0455013-7		66 -31	0455026-1		61B- 2	0460208-1		52A- 6
0455013-8		66 -32	0455026-1		61C- 2	0460208-1		52B- 6
0455015-1		66 -35	0455026-3		61 - 3	0460208-1		74 -19
0455015-2		66 -36	0455026-3		61A- 3	0460209-1		74 -20
0455015-7		66 -34A	0455026-3		61B- 3	0460209-4		74 -21
0455018-10		66 -76	0455026-3		61C- 3	0460210-7		74 - 3
0455018-13		66 -59	0455026-4		61 - 4	0460210-9		74 - 4
0455018-17		66 -62	0455026-4		61A- 4	0460214-4		30 -68
0455018-19		66 -54	0455026-4		61B- 4	0460215-1		30 -67
0455018-20		66 -81	0455026-4		61C- 4	0460216-2		74 -18
0455018-21		66 -68	0455026-5		61 - 5	0460217-1		74 -43
0455018-22		66 -44	0455026-5		61A- 5	0460219-1		52 -26A
0455018-25		66 -78	0455026-5		61B- 5	0460219-1		52A-28
0455018-27		66 -78A	0455027-1		61C- 5	0460219-1		52B-30
0455018-28		66 -81A	0455027-1		66 -25	0470118-2		87 -18
0455018-31		66 -44A	0455027-1		66 -74	0470405-1		74 - 7B
0455021-1		66 -52	0455027-2		66 - 8	0470405-2		74 - 7A
0455022-2		66 -43	0455027-2		66 -48	0470406DA1		86 -12
0455022-3		66 -43	0455028-1		66 -40	0470406DA3		86 -12
0455022-4		66 -43	0455028-2		66 -41	0470406DA4		86 -12A
0455024-1		61 -40	0455029-1		66 -80	0470406DA5		86 -12B
0455024-1		61A-47	0455031-1		66 -82	0470406KA2		86 -11
0455024-1		61B-45	0456008-5		62 -61	0470406KA4		86 -11A
0455024-10		61 -43	0456009-1		62 -58	0470406KA6		86 -11B
0455024-11		61 -43	0456010-1		62 -47	0470406PA10		86 - 3A
0455024-11		61A-50	0460101		70 -13	0470406PA11		86 -10A
0455024-11		61B-48	0460108-1		72 -15	0470406PA12		86 -10B
0455024-11		61C-46	0460108-1		72 -26	0470406PA13		86 - 3B
0455024-14		61 -44	0460108-1		72A-15	0470406PA4		86 - 3
0455024-14		61A-51	0460108-1		72A-26	0470406PA5		86 -10
0455024-14		61B-49	0460108-1		73 -15	0470406PA6		86 - 2
0455024-14		61C-47	0460109-1		72 -13	0470406PA9		86 - 2A
0455024-16		61 -41	0460109-1		72 -20	0470406PC1		86 -32
0455024-16		61A-48	0460109-1		72A-13	0470406PC4		86 -32A
0455024-16		61B-46	0460109-1		72A-20	0470421-1		52 -50
0455024-16		61C-44	0460109-1		73 -15	0470421-1		52A-50
0455024-18		61 -41	0460124-1		76 -22	0470423-2		53 - 7A
0455024-18		61A-48	0460126-1		27 -38	0470423-4		53 - 6A
0455024-18		61B-46	0460126-1		27A-42	0470423-6		53 - 6B
0455024-18		61C-44	0460126-4		27 -32	0500228-2		55 -19
0455024-19		61 -44	0460126-4		27A-36	0500228-2		55 -23
0455024-2		61 -39	0460127-2		76 - 1	0500228-5		55 -22
0455024-2		61A-46	0460128-1		70 -	0500276-1		58 - 7
0455024-2		61B-44	0460128-12		70 -	0500276-2		58 - 7
0455024-2		61C-42	0460128-200		70 -36	0500276-5		58 - 7

152 & A152 Parts Catalog

PART NUMBER	FICHE AND FRAME	FIGURE AND INDEX NO.	PART NUMBER	FICHE AND FRAME	FIGURE AND INDEX NO.	PART NUMBER	FICHE AND FRAME	FIGURE AND INDEX NO.
0500276-6		58 - 7	0513292-2		52A-81	0523107-6		9 - 2
0500315-1		81 -56	0513292-2		52B-91	0523108		8 - 6
0500315-2		81 -57	0513292-3		54 - 6	0523108		8 - 6A
0501019-1		55 - 7	0513292-3		54A- 7	0523108		8 - 6A
0501019-1		55 -10	0513426-4		25 -14	0523108		8 - 7
0501020-1		68 -39	0513439-1		85A-25A	0523108		8 - 9
0501020-3		68 -40	0513470-1		24 -24A	0523108-3		8 - 6A
0501020-4		68 -41	0513553-2		90 -15	0523108-3		8 - 7
0501081-1		68 -39	0514027-32		48A-51	0523108-4		8 - 9
0501081-3		68 -40	0514027-32		50A-52	0523109		8 -25
0501081-4		68 -41	0514061-8		44 -25A	0523109-1		8 -25
0505007-1		2 -33	0514097-1		70 -52	0523110-10		9 -25
0505007-1		2A-12	0514121-1		48A-43	0523110-11		9 -25
0505007-4		2 -33	0514121-1		50A-44	0523111-5		9 - 6
0505007-4		2A-12	0514130-1		30 -69A	0523111-5		9 - 7
0505009-2-E84		2A-10	0514163-1		57 -21	0523111-5		9 - 9
0505009-2-E85		2 -23	0514178-1		57 -23	0523111-5		9 -10A
0505009-2-E85		2A-10	0515010-10		44 -40	0523111-6		9 - 6
0505009-3		2 -23	0515061-1		55 -11	0523111-6		9 - 7
0505103-1		2A-32	0516006-1		4 - 4	0523111-7		9 - 9
0511080-1		91 - 3	0516006-1		5 - 6	0523113-3		8 -17A
0511165		45 -24	0516006-1		6 - 6	0523113-3		9 -17A
0511165		45A-28	0516006-1		12 -20	0523113-4		8 -17A
0511165		56 -11	0516006-1		13 -20	0523113-4		9 -17A
0511258-2		42 - 8	0522114-1		88A- 5	0523215		10 -30
0511260-1		42 -10	0522150-3		17 -13	0523215		11 -33
0511260-2		42 -10	0522150-4		17 -13	0523215-1		10 -30
0511261-3		42 -12	0522150-6		17 -13	0523215-1		11 -33
0511263-1		41 -50	0522150-7		17 -13	0523216		10 -29
0511264-1		42 - 7	0523003-10		8 -24A	0523216		11 -32
0511266-1		42 -14	0523003-10		9 -24A	0523218		15 -10
0511324-2		87 -32	0523003-11		8 -24A	0523218-2		15 -14
0511324-3		87 -36	0523003-40		4 -48	0523219-2		4 -41
0511324-4		87 -33	0523003-40		5 -57	0523219-2		5 -50
0511336-1		68 - 8	0523003-40		6 -54	0523219-2		6 -47
0511484-2		25 -11	0523003-40		7 -61	0523219-2		7 -54
0511771-7		41 -21	0523003-48		5 -15	0523219-3		4 -41
0511771-7		43 - 4	0523003-48		7 -20	0523219-3		5 -50
0511771-7		43 - 5	0523003-56		8 -35	0523219-3		6 -47
0511771-8		41 -21	0523003-57		8 -35	0523219-3		7 -54
0511771-8		43 - 4	0523003-62		4 -55	0523219-4		4 -42
0511771-8		43 - 5	0523003-62		6 -63	0523219-4		5 -51
0512006-1		81 - 2	0523003-63		8 -24	0523219-4		6 -48
0512006-2		61 -28	0523003-63		9 -24	0523219-4		7 -55
0512006-2		61A-29	0523003-74		4 -56	0523219-5		4 -42
0512006-2		61B-33	0523003-74		6 -60	0523219-5		5 -51
0512006-2		61C-33	0523003-80		4 -51	0523219-5		6 -48
0512122		30 - 1	0523003-80		6 -58	0523219-5		7 -55
0512123		3 - 5	0523003-81		4 -52	0523221		15 - 2
0512242-1		55 -15	0523003-81		6 -56	0523222		15 - 9
0512243-1		55 -18	0523003-83		4 -57	0523223		15 - 1
0513039-1		52 -69	0523003-83		6 -61	0523223-1		15 - 1
0513039-1		52A-62	0523005-50		10 -24	0523230		4 -26
0513039-7		52 -69	0523005-50		11 -27	0523230		6 -32
0513039-7		52A-62	0523005-51		10 -24	0523230-1		4 -26
0513085-3		54 - 3	0523005-51		11 -27	0523230-1		6 -32
0513085-3		54A- 3	0523007-11		8 - 1	0523230-4		4 -26
0513208-1		87 -26	0523007-14		4 -49	0523230-4		5 -34
0513245-2		43 - 6	0523007-16		4 -50	0523230-4		6 -32
0513246-4		43 - 1	0523007-16		6 -57	0523230-4		7 -38
0513260-15		70 -49	0523007-19		4 -54	0523230-5		4 -26
0513260-16		70 -49	0523007-19		6 -62	0523230-5		5 -34
0513260-3		70 -49	0523007-20		4 -54	0523230-5		6 -32
0513260-4		70 -49	0523007-20		6 -62	0523230-5		7 -38
0513260-5		70 -49	0523007-24		6 -55	0523230-8		5 -34
0513261-15		70 -47	0523106		8 -32	0523230-9		5 -34
0513261-16		70 -47	0523106		9 -34	0523230-9		7 -38
0513261-17		70 -47	0523107		8 - 2	0523231-23		4 -22
0513261-18		70 -47	0523107-11		8 - 2	0523231-23		5 -30
0513261-21		70 -47	0523107-11		9 - 2	0523231-23		6 -28
0513292-1		52 -81	0523107-12		8 - 2	0523231-23		7 -34
0513292-1		52A-80	0523107-12		9 - 2	0523231-5		4 -22
0513292-1		52B-90	0523107-2		8 - 2	0523231-5		5 -30
0513292-2		52 -82	0523107-5		9 - 2	0523231-5		6 -28

152 & A152 Parts Catalog

PART NUMBER	FICHE AND FRAME	FIGURE AND INDEX NO.	PART NUMBER	FICHE AND FRAME	FIGURE AND INDEX NO.	PART NUMBER	FICHE AND FRAME	FIGURE AND INDEX NO.
0523231-5		7 -34	0523509-13		5 -19	0523536		16 - 3
0523232-2		4 -21	0523509-13		7 -23	0523536		73 -25
0523232-2		6 -26	0523509-18		5 -18	0523536		73 -33
0523232-6		5 -28	0523509-20		4 -11	0523537		16 - 7
0523232-6		7 -32	0523509-4		4 -11	0523537		73 -27
0523233-13		5 -32	0523510-19		5 -20	0523537-2		16 -12
0523233-13		7 -36	0523510-19		7 -24	0523539-10		6 -46
0523233-24		4 -23	0523510-20		5 -20	0523539-10		7 -52
0523233-24		5 -31	0523510-20		7 -24	0523539-7		6 -45
0523233-24		6 -29	0523510-6		4 -13	0523539-7		7 -51
0523233-24		7 -35	0523510-6		6 -19	0523539-8		6 -45
0523233-3		4 -25	0523510-7		4 -13	0523539-8		7 -51
0523233-4		4 -24	0523510-7		6 -19	0523539-9		6 -46
0523233-4		6 -30	0523511-14		5 -22	0523539-9		7 -52
0523233-5		5 -33	0523511-14		7 -26	0523542-4		9 -29
0523233-5		6 -31	0523511-15		5 -35	0523552-2		12 - 5
0523233-5		7 -37	0523511-15		7 -39	0523552-2		13 - 5
0523233-8		4 -23	0523511-3		4 -14	0523554-1		12 - 6
0523233-8		5 -31	0523511-3		6 -20	0523554-1		13 - 6
0523233-8		6 -29	0523511-4		4 -27	0523554-2		12 - 7
0523233-8		7 -35	0523511-4		6 -33	0523554-2		13 - 7
0523306		10 - 6	0523511-5		8 -28	0523558-1		3 -23
0523306		11 - 5	0523512-19		5 -23	0523561-1		7 -22
0523307		17 - 4	0523512-19		7 -27	0523564-2		5 -18
0523307-1		17 - 4	0523512-21		9 -30	0523565-21		4 -68
0523309		10 -13	0523512-22		5 -36	0523565-21		5 -76
0523309-1		10 -13	0523512-22		7 -40	0523565-21		6 -75
0523309-4		11 -12	0523512-3		4 -15	0523565-21		7 -81
0523309-5		11 -12	0523512-3		6 -21	0523565-22		4 -68
0523311		10 -12	0523512-4		4 -28	0523565-22		5 -76
0523311-1		11 -11	0523512-4		6 -34	0523565-22		6 -75
0523316		10 -17	0523512-5		8 -29	0523565-22		7 -81
0523316-1		10 -17	0523513-10		4 -16	0523565-29		4 -67
0523317		10 - 1	0523513-10		6 -22	0523565-29		5 -76
0523317-1		10 - 1	0523513-12		9 -31	0523565-29		6 -74
0523318		10 -16	0523513-13		5 -24	0523565-29		7 -80
0523318-1		10 -16	0523513-13		7 -28	0523565-30		4 -67
0523319-1		10 -15	0523513-14		5 -24	0523565-30		5 -76
0523406-2		10 -18	0523513-14		7 -28	0523565-30		6 -74
0523406-3		10 -18	0523513-4		8 -30	0523565-30		7 -80
0523406-4		11 -21	0523513-9		4 -16	0523566-1		3 -40
0523406-5		11 -21	0523513-9		6 -22	0523566-2		3 -40
0523406-6		10 -18	0523514-3		4 -17	0523566-5		3 -40
0523406-7		10 -18	0523514-3		6 -23	0523566-6		3 -40
0523406-8		11 -21	0523514-4		8 -31	0523613-1		17 -10
0523406-9		11 -21	0523514-6		9 -32	0523613-1		31 -18
0523407		4 -30	0523514-7		5 -25	0523613-4		31 -18A
0523407		5 -43	0523514-7		7 -29	0523614-1		17 - 7
0523407		6 -41	0523515-3		4 -18	0523619-1		3 -22
0523407		7 -47	0523515-3		6 -24	0523800		15 -17
0523407-1		4 -31	0523515-4		8 -36	0523800-1		15 -17
0523407-1		5 -44	0523515-6		9 -38	0523800-10		15 -32
0523407-1		6 -42	0523515-7		5 -26	0523800-11		15 -32
0523407-1		7 -48	0523515-7		7 -30	0523800-12		15 -33
0523408		4 -29	0523517-4		5 -18	0523800-13		15 -33
0523408		5 -42	0523517-4		6 -17	0523800-6		15 -30
0523408		6 -40	0523522-1		4 - 8	0523800-7		15 -30
0523408		7 -46	0523522-1		5 -10A	0523800-8		15 -31
0523409		10 -24	0523522-1		6 - 8	0523800-9		15 -31
0523409		11 -23	0523522-1		7 -11	0523806		15 -21
0523505-1		6 -14	0523522-1		12 -14	0523806-1		15 -21
0523505-2		6 -14	0523522-1		13 -14	0523807		15 -20
0523505-5		7 -19	0523522-11		4 - 7	0523808		15 -22
0523505-6		7 -19	0523522-11		5 -10	0523808-2		15 -22
0523508-25		6 -15	0523522-11		12 -12	0523809		15 -23
0523508-26		6 -15	0523522-13		12 -13	0523809-1		15 -23
0523508-28		7 -21	0523522-7		12 -15	0523810		15 -24
0523508-29		7 -21	0523522-7		13 -15	0523811		15 -25
0523508-34		4 - 9	0523524		10 - 4	0523811-1		15 -25
0523508-36		5 -16	0523524		10 - 4	0523813-1		15 -34
0523508-43		4 - 9	0523524		10 -21	0523813-2		10 -26
0523508-45		5 -16	0523524		11 - 3	0523813-2		11 -29
0523509-1		4 -11	0523524		11 - 3	0523813-3		10 -25
0523509-12		5 -18	0523524		11 -25	0523813-3		11 -28

152 & A152 Parts Catalog

PART NUMBER	FICHE AND FRAME	FIGURE AND INDEX NO.	PART NUMBER	FICHE AND FRAME	FIGURE AND INDEX NO.	PART NUMBER	FICHE AND FRAME	FIGURE AND INDEX NO.
0523813-4		10 -27	0543023		33 - 9	0713047		24 -10
0523813-4		11 -30	0543029		34 -29	0713124-1		88A-14
0523813-5		10 -28	0543036-1		34 -18	0713173-1		25 -42
0523813-5		11 -31	0543047-1		34 -36	0713173-2		25 -43
0523813-6		15 -36	0543047-1		34 -48	0713173-5		24 - 6
0523813-7		15 -37	0543079-1		33 -22	0713173-6		24 - 7
0523813-8		15 -35	0543079-10		33 -22	0713221-1		53 - 2
0523814-3		15 -29	0543084-1		33 -31	0713303-19		47 -25
0523816-1		15 -20	0543084-1		38 -58	0713303-19		49 -25
0523901-13		16 -26	0550198-1		62 -80	0713303-2		67 -41
0523901-14		16 -27	0552110-3		2 -22	0713348-1		79 - 1
0523912		16 -22	0552110-3		2A-11	0713354-10		67A-64
0523912-1		16 -23	0552161-2		61 -19	0713624-2		27 -31
0523914		16 -25	0552161-2		61A-19	0713624-2		27A-35
0523918		16 -28	0552161-2		61B-19	0713624-2		68 -38
0523919		16 -17	0552161-2		61C-19	0713821-4		53 - 68
0523920		16 -16	0552161-4		61 -21	0713821-4		53 - 7A
0523921		16 -15	0552161-4		61A-21	0715038-1		44 -39
0523923		16 -24	0552161-4		61B-21	0716623-5		81 -36
0532104		23 - 2	0552161-4		61C-21	0716624-1		81 -39
0533010-1		75 -13	0552173-29		61 - 9	0720005-2		4 -40
0533010-1		75A-13	0552173-29		61A- 9	0720005-2		5 -37
0534126-1		21 -13	0552173-29		61B- 9	0720005-2		6 -35
0534126-1		21A-14	0552173-29		61C- 9	0720005-2		7 -41
0534126-4		21 -14	0553005-1		86 -28	0720608-26		8 -37
0534126-4		21A-15	0556018-1		63A- 5	0720608-26		9 -39
0534126-6		23 - 6	0560037-1		74 -54	0720608-7		4 -19
0541138-19		69 -	0567001-1		68 - 2	0720608-7		5 -27
0541138-5		69 -13	0570088-5		90 - 6	0720608-7		6 -25
0541139		69 - 9	0570095-1		90 - 9	0720608-7		7 -31
0541139		69A- 6	0570096-1		90 - 5	0721101-8		77 - 6
0541140		68 -33A	0570096-1		90A- 5	0721105-23		77 - 1
0541140		69 - 1	0570315-1		86 -14A	0721105-42		77 - 1
0541143		69 -16	0570316-1		86 -14A	0721105-9		77 - 3
0541144		69 -15	0570454-1		90 -10	0721107-1		4 -63
0541146-1		69 - 6	0582001-1		68 -33A	0721107-1		5 -73
0541146-1		69A- 5	061-03700		40 -15	0721107-1		6 -71
0541148		69 -12	066-03000		40 -17	0721107-1		7 -77
0541148-1		69 -19	066-03000		40 -19	0721107-2		4 -63
0541149		69 -13	069-00400		40 -24	0721107-2		5 -73
0541151		69 - 8	0700148-1		91 -16	0721107-2		6 -71
0541165-1		69 - 3	0700162-1		52 -47	0721107-2		7 -77
0541165-1		69A- 2	0700162-1		52A-47	0721111-37		6 -13
0541167-1		69 - 7	0700162-1		52B-58	0721111-37		7 -18
0541167-1		69A- 1	0700162-3		52 -49	0721111-38		6 -13
0541172-1		80 -22	0700162-3		52A-49	0721111-38		7 -18
0541173-1		80 -24	0700162-3		52B-60	0722201-2		4 -12
0541174-1		80 -19	0700162-4		52 -49	0722201-2		6 -18
0541178-1		80 -26	0700162-4		52A-49	0722707-1		10 -10
0541184-1		69 -10	0700162-4		52B-60	0722707-1		11 - 9
0541207-4		33 -34A	0700162-6		52 -49	0724115-2		15 -28
0541211-1		38 -11	0700162-6		52A-49	073-01100		40 -18
0541219-1		38 -55	0700162-6		52B-60	074-01000		40 -16
0541219-2		38 -55	0700162-7		52 -49	0741047-2		38 -61
0541221-1		38 -56	0700162-7		52A-49	0741048-8		38 -26
0541221-2		33 -33	0700162-7		52B-60	0742410-28		33 -23
0541222-1		38 -54	0710312-3		48 -19	0743009-1		34 - 8
0541222-3		33 -34B	0710312-3		48A-19	0743011-6		34 -33
0541223-13		33 -31	0710312-3		50 -20	0743612-1		34 -11
0541223-13		38 -58	0710312-3		50A-20	0743625-17		33 -35
0541223-16		38 -48	0710638-1		41 -22	0743627-5		33 -36
0541223-17		38 -48	0711021-9		41 -14	0743627-6		33 -36
0541223-39		38 -48	0711038-1		41 -18	075-03700		40 -28
0541223-40		38 -48	0711080-1		51 - 1	0750113-1		62 -88
0542100-6		37 - 1	0711083-1		45 -28	0750220-1		86A- 2
0542101-1		37 - 5	0711083-1		45A-32	0752037-3		84 - 1
0542102-3		37 - 6	0711098-7		51 -15	0752646-1		88 - 4
0542118-5		37 - 4	0711098-8		51 -16	0752646-1		88 -10
0543000-27		34 -16	0712031-1		86 -33	0753010-1		67A-11
0543006-5		34 -10	0712079-4		86 - 9C	0753011-1		67A-10
0543007-2		34 - 6	0712765-3		86 - 9A	0756005-2		83 - 9
0543008-6		34 - 1	0712765-3		86 - 9A	0756005-8		83 -
0543022-3		33 - 5	0713047		2 -29	0756008-1		83 - 1
0543022-4		33 - 5	0713047		2A- 2	0756009-1		83 - 7

152 & A152 Parts Catalog

PART NUMBER	FICHE AND FRAME	FIGURE AND INDEX NO.	PART NUMBER	FICHE AND FRAME	FIGURE AND INDEX NO.	PART NUMBER	FICHE AND FRAME	FIGURE AND INDEX NO.
0756009-8		83 - 8	1211203-1		45 -24	1513190-26-A59		52B-62
0756010-6		83 -12	1211203-1		45A-27	1513190-26-E83		52B-51
0756011-1		83 - 6	1211203-1		45A-28	1513190-26-E83		52B-61
0756012-1		83 -14	1213004-1		52B-49	1513190-26-E83		52B-62
0756014-1		83 -10	1213158-3		84 - 7	1513190-26-279		52B-51
0756015-1		83 - 3	1213475-2		67 -23	1513190-26-279		52B-61
0756035-1		14 - 3	1213475-2		67A-35	1513190-26-279		52B-62
0756035-5		14 - 3	1213478-1		67 -24	1513190-61-A59		52B-39
0760011-2		15 -26	1213478-1		67A-36	1513190-61-E83		52B-39
0760131-5		52 -37	1213482-1		67 -26	1513190-61-279		52B-39
0760131-5		52A-37	1213482-1		67A-38	1513190-62-A59		52B-64
0760131-5		52B-47	1213483-1		67 -25	1513190-62-E83		52B-64
0760131-6		52 -36	1213483-1		67A-37	1513190-62-279		52B-64
0760131-6		52A-36	1213675-1		27 - 9	1513190-63-A59		52B-53
0760131-6		52B-46	1213675-1		27A-10	1513190-63-E83		52B-53
0760610-5		73 -13	1217063-1		41 - 8	1513190-63-279		52B-53
0760610-6		73 -13	1217063-2		41 - 8	1513190-66-A59		52B-39
0760612-1		16 - 1	1217063-3		41 -11	1513190-66-A59		52B-52
0760612-1		73 -23	1217065-3		41 -12	1513190-66-A59		52B-89
0760612-7		16 - 1	1217065-4		41 -12	1513190-66-E83		52B-39
0760612-7		73 -24	1217066-1		41 - 6	1513190-66-E83		52B-52
0760614-1		73 -41	1217066-2		41 - 6	1513190-66-E83		52B-89
0760619-1		73 -32	1220114-1		16 -188B	1513190-66-279		52B-39
0760620-9		73 -40	1220114-2		16 -18A	1513190-66-279		52B-52
0760682-1		68 - 4	1231067-1		89 -13	1513190-66-279		52B-89
0762054-4		16 - 1	1232040-3		18A-45	1513190-68-A59		52B-50
0762054-4		73 -23	1232040-3		19A-45	1513190-68-E83		52B-50
0762054-5		16 - 1	1232040-3		18 -48	1513190-68-279		52B-50
0762054-5		73 -24	1232040-3		19 -51	1514119-5		48A-52
0770414-1		90 - 9	1241156-12		36 - 2	1514119-5		50A-53
0770728-1		86 -13	1243021-1		34 -21	1516006-1		7 - 6
0770741-2		86 -3C	1243030-5		34 -30	153-00300		40 -10
079-00300		40 -27	1243030-6		34 -30	153-00400		40 - 7
081-00100		40 -27	1243030-7		34 -30	153-00800		36 - 4
0841200-15		34 -27	1243626-1		34 -25	153-01500		40 - 5
0841200-19		34 -20	1253031-3		67A-21	154-00300		40 - 8
0841200-25		34 -28	1253032-1		67A-12	154-00600		36 - 5
0842400-3		37 -10	1253033-2		67A-15	154-01300		40 - 6
0870060-1		86 - 1	1253034-1		67A-13	155-00100		40 - 4
0890018-2		2 -48	1253037-1		67 -12	155-00200		36 - 3
0890018-2		2A-43	1253037-1		67A-16	1552004-17		61 -12
0890018-3		2 -49	1253040-1		67A-14	1552004-17		61A-12
0890018-3		2A-44	1253041-1		67 -11	1552004-17		61B-12
091-04400		40 -14	1253041-1		67A-18	1552004-17		61C-12
092-01700		40 -20	1260049-1		20 - 6	1552004-22		61 -13
0935		86 -1C	1260074-1		20 - 1	1552004-22		61A-13
1K43-10-10		85B-10	1260474-5		30 -89	1552004-22		61B-13
1N1344A		86 -39	1260474-7		30 -89	1552004-22		61C-13
1007		1 - 4	1270479-16		53A-11	1552004-23		61 -11
1024A-8		1 - 3	1270479-16		53B-10	1552004-23		61A-11
103-11700		40 -22	1270483-2		90 -18	1552004-23		61B-11
105-00200		40 -17	1270623-5		30 -89	1552004-23		61C-11
105-00200		40 -19	1270704-1		53 - 7	1552004-24		61 -10
1089		30 -37	1270704-5		53 - 6	1552004-24		61A-10
110-500		90 - 9	1414087-13	#	57 -14	1552004-24		61B-10
110691		1 -47	1414087-15		57 -15	1552004-24		61C-10
1200127-1		45 -25	1414116-3		48 -43	1552004-25		61 -15
1200127-1		45A-29	1414116-3		50 -44	1552004-25		61A-15
1200138-2		48A-45	145-01000		40 -29	1552004-25		61B-15
1200138-2		50A-46	1460315-10		76 -12	1552004-25		61C-15
1201075-1		85A-17	1460320-1		68 - 1	1552004-66		61 -15
1201075-2		85 -22	1460505-1		68 - 4	1552004-66		61A-15
1201075-3		85A-21	1470089-15		91 - 6	1552004-66		61B-15
1201075-4		85 -26	1470089-17		91 -14	1552004-66		61C-15
1205004-1		2 -15	1512280-24		74 -12	1552010-1		61 -12
1205024-2		2 -32	1513174-3		52 -18	1552010-1		61A-12
1205024-2		2A-18	1513174-3		52 -25	1552010-1		61B-12
1205085-2		2 -39	1513174-3		52A-19	1552010-1		61C-12
1205085-2		2A-26	1513174-3		52A-26	1555014-2		64 - 6
1205237-1		2 - 1	1513174-5		52A-19	1555014-2		64A- 6
1205237-2		2 - 1	1513174-5		52A-26	1555014-2		64B- 6
1210032-5		25 -15	1513178-3		52A-29B	1555014-2		65 - 6
1210032-6		25 -15	1513190-26-A59		52B-51	1570102-14		59 - 7
1211203-1		45 -23	1513190-26-A59		52B-61	1570102-18		59 -10

152 & A152 Parts Catalog

PART NUMBER	FICHE AND FRAME	FIGURE AND INDEX NO.	PART NUMBER	FICHE AND FRAME	FIGURE AND INDEX NO.	PART NUMBER	FICHE AND FRAME	FIGURE AND INDEX NO.
1570102-19		59 - 2	214-00400		36 - 6	487-3		12 -24A
1570102-20		59 - 7	214-16		27 -43	487-3		12 -25A
1570102-24		59 -10	214-16		27 -45	487-3		13 -25A
1570102-26		59 -11	214-16		27 -46	487-3		13 -27A
1570141-1		90 -33	214-16		27 -47	487-4		12 -24
1570166-1		86 -18	214-16		27 -49	487-4		12 -26
161-03100		36 - 7	214-16		27 -50	487-4		13 -25
161-04900		40 - 1	214-16		27 -51	487-4		13 -27
1613224-2		58 -11	214-16		27A-47	4969		12 -24
162-02800		36 - 8	214-16		27A-49	4969		12 -26
162-04700		40 - 2	214-16		27A-51	4969		13 -25
164-04000		40 -11	214-16		61 -27	4969		13 -27
164-30615-1		39 -13	217-00100		36 -10	4970		12 -24A
1705041-1		2 - 1	22FH632		69 -14	4970		12 -25A
1705041-2		2 - 1	24RB		90 -13	4970		13 -25A
1705042-1		2 - 2	2425001-1		4 -22	4970		13 -27A
1705042-2		2 - 2	2425001-1		5 -30	5423		27 -51
1713039-1		85 -15	2425001-1		6 -28	5423		27A-51
1770089-18		91 -15	2425001-1		7 -34	55-0088		53 - 8
1782001-1		80 - 3	2542		86 - 1D	55-0088		53 -11A
183-00100		40 -27	2600-SW2		61 -51	550		1 -13
2N3055		86 -20	2600-SW2		61 -52	576.1		1 - 5
2N6576		86 -20	2600-SW2		61A-37	579.6		1 - 6
2N6577		86 -20	2600-SW2		61A-38	6F20-D		86 -39
20 OHM 5W		12 -17	2600-SW2		61B-25	60232-1		52 -69
20 OHM 5W		13 -21	2600-SW2		61B-26	60232-1		52A-62
20H3P		86 -39	2600-SW2		61C-25	60592		63 - 4
2008		86 - 1D	2600-SW2		61C-26	6241B		33 -38
2009		86 - 1D	2600SW2		61 -32	6241M		38 -29
2013131-1		56 - 4A	2600SW2		61A-34	6246-00370		52A-68B
2015009-2		45 -22	2646-00053		52A-68A	6437520		84 -14A
2015009-2		45A-26	27S3-4		61 -32	6439036		84 -14
2070033-3		53 - 8	27S3-4		61 -52	700		1 -11
2070033-3		53 -11A	27S3-4		61A-34	7387		90 - 9
2106002-14-A58		53A- 2	27S3-4		61A-38	75944		84 -17
2106002-14-A58		53A- 5	27S3-4		61B-26	77743		63 -10
2106002-14-A58		53A- 8	27S3-4		61C-26	77745		63 -11
2106002-14-A58		53A-10	27S3-8		61A-37	800-001-6		69 -17
2106002-14-A58		53B- 2	27S3-8		61B-25	829525-6		52 -60
2106002-14-A58		53B- 7	27S3-8		61C-25	829525-6		52 -66
2106002-14-E80		53B- 2	27S38		61 -51	829525-6		52A-61A
2106002-14-E80		53B- 7	2965164		52A-61A	829525-6		52A-68B
2106002-14-156		53A- 2	2965164		52A-68B	8406J		63A- 1
2106002-14-156		53A- 5	3/32X.375TYPE3		20 - 8	8406R		63A- 1
2106002-14-156		53A- 8	3/32X.625TYPE3		20 -15	8409		90 -23
2106002-14-156		53A-10	314-1431-006-500		86 -22	8409		90A- 9
2106002-14-156		53B- 2	34003-817		53 -13	8547332		63A- 1
2106002-14-156		53B- 7	351-11-03-001		90 - 2	878016		52A-61A
2106002-6-A58		53A- 3	351-11-03-001		90A- 2	878016		52B-71
2106002-6-A58		53A- 6	351-11-03-001		90A-14	878017		52A-61A
2106002-6-A58		53B- 3	351-11-05-001		90 -28	878017		52B-71
2106002-6-A58		53B- 5	3680C		38 -29	880036		52A-68B
2106002-6-A58		53B- 9	3690-1/2		1 -46	880036		52B-77
2106002-6-E80		53B- 3	3690-1/4		1 -46	883016		52A-68A
2106002-6-E80		53B- 5	3690-1/8		1 -46	883016		52B-76
2106002-6-E80		53B- 9	4NCC910P		25 -61	9851070-2		82 -
2106002-6-156		53A- 3	40R8-16-1A		61 -27	9851071-2		82 - 8
2106002-6-156		53A- 6	40R8-16-1A		61A-28	9851072-2		82 - 4
2106002-6-156		53B- 3	4004		86 -22	9851073-1		82 - 6
2106002-6-156		53B- 5	42540-3128		78 -13	9851073-2		82 - 6
2106002-6-279		53B- 9	42540-3228		78 -13	9851074-1		82 - 1
212-12		61 -26	43-1761		86 -39	9862010-3		52 -71
212-12		61 -37B	441412		52 -60	9862010-3		52A-70
212-12		61 -48	441412		52A-61	9862010-3		52B-80
212-12		61A-27	441413		52 -59	9862010-3		62 -62
212-12		61A-44	441413		52A-60	9863053-12		52 -72
212-12		61A-55	442917		52 -66	9863053-12		62 -45
212-12		61B-42	442917		52A-68	9863053-20		62 -45
212-12		61C-40	444698		52 -65	9863055-1		52A-71
21323		62 -81	444698		52A-67	9863055-1		62 -45
21323		63 - 1	4587		88A-11	9863056-1		52A-71
214-00100		40 - 3	4591		88 - 9	9863056-1		52B-81
214-00200		40 - 9	4596		88 - 3	9863056-1		62 -45
214-00300		36 - 9	4596		88A-10	9864054-2		74 -22

152 & A152 Parts Catalog

PART NUMBER	FICHE AND FRAME	FIGURE AND INDEX NO.	PART NUMBER	FICHE AND FRAME	FIGURE AND INDEX NO.	PART NUMBER	FICHE AND FRAME	FIGURE AND INDEX NO.
9880504-1		80 - 3						
9880705-5		82 - 6						
9881600-3		69A-11						
9882010-2		69A-						
9882010-5		69A-						
9882010-6		69A-						
9882011-2		69A-12						
9882012-2		69A- 8						
9882012-6		69A- 8						
9882013-2		69A- 7						
9882013-3		69A- 7						